



## Preface

---

This section discusses the objectives, audience, conventions, and organization of the *Cisco RF Gateway 10 Remote Provisioning Utility User Guide* and provides general information about Cisco IOS software documentation.

Cisco documentation and additional literature are available in a CD-ROM package, which ships with your product. The Documentation CD-ROM, a member of the Cisco Connection Family, is updated monthly. Therefore, it might be more up to date than printed documentation. To order additional copies of the Documentation CD-ROM, contact your local sales representative or call customer service. The CD-ROM package is available as a single package or as an annual subscription.

## Revision History

| Document Version | Date          | Change Summary                              |
|------------------|---------------|---|
| OL-30052-01      | July 04, 2013 | This is the first version of this document. |

## Objectives

This user guide provides the necessary information to install, operate, and maintain the Cisco RF Gateway 10 Remote Provisioning Utility (RPU-10) application.

## Audience

This document is intended primarily for users who have experience working with Cisco RF Gateway-10 or similar equipment. The user should have appropriate background and knowledge to complete the procedures described in this document.

## Organization

This guide includes the following chapters.

**Table 1            Organization**

| Chapter   | Title  | Description  |
|-----------|--|--|
| Chapter 1 | <a href="#">Overview</a>                           | Overview of the Cisco RPU-10 application.                  |
| Chapter 2 | <a href="#">Installation and General Operation</a> | Steps to install and operate the Cisco RPU-10 application. |

## Conventions

This document uses the following conventions:

| Convention                | Indication  |
|---------------------------|---|
| <b>bold font</b>          | Commands and keywords and user-entered text appear in <b>bold font</b> .  |
| <i>italic font</i>        | Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .             |
| [ ]                       | Elements in square brackets are optional.   |
| { x   y   z }             | Required alternative keywords are grouped in braces and separated by vertical bars.   |
| [ x   y   z ]             | Optional alternative keywords are grouped in brackets and separated by vertical bars.                                       |
| string                    | A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks. |
| <code>courier font</code> | Terminal sessions and information the system displays appear in <code>courier font</code> .                                 |
| < >                       | Nonprinting characters such as passwords are in angle brackets.   |
| [ ]                       | Default responses to system prompts are in square brackets.   |
| !, #                      | An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.                   |



### Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



### Tip

Means *the following information will help you solve a problem*. The tips information might not be troubleshooting or even an action, but could be useful information, similar to a Timesaver.



### Caution

Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.



### Timesaver

Means *the described action saves time*. You can save time by performing the action described in the paragraph.



Warning

#### IMPORTANT SAFETY INSTRUCTIONS

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device.

#### SAVE THESE INSTRUCTIONS



Warning

Statements using this symbol are provided for additional information and to comply with regulatory and customer requirements.

## Related Documentation

| Related Topic          | Document Title   |
|------------------------|--|
| Command Reference      | <a href="#">Cisco RF Gateway 10 Command Reference</a>                            |
| Hardware Installation  | <a href="#">Cisco RF Gateway 10 Hardware Installation Guide</a>                  |
|                        | <a href="#">Cisco RF Gateway 10 DS-384 Line Card Hardware Installation Guide</a> |
|                        | <a href="#">Cisco RF Gateway 10 DS-48 Line Card Hardware Installation Guide</a>  |
| Software Configuration | <a href="#">Cisco RF Gateway 10 Software Feature and Configuration Guide</a>     |
|                        | <a href="#">Configuring the Cisco RFGW-10 DS-384 Line Card</a>                   |
|                        | <a href="#">Configuring the Cisco RFGW-10 DS-48 Line Cards</a>                   |

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation* at:  
<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.

