



INDEX

A

activating the PMC buttons [1-8, 4-13](#)
advanced PMC permissions [3-17](#)
alert tones
 caveats [4-27](#)
 names [3-14](#)
 playing out [4-26](#)
 privileges [3-16](#)
 upgrades [2-26](#)
All Talk button
 focus changes [4-26](#)
 functionallity [4-12](#)
 latching [4-17](#)
 using with alert tone playout [4-27](#)
 using with multiselect [4-25](#)
application recovery [6-9](#)
audio quality [2-7](#)
audio settings configuration [2-7](#)
automatic updates [2-21](#)

B

browser support [1-12](#)

C

caution, described [xvi](#)
caveats
 alert tones [4-27](#)
 application troubleshooting [8-29](#)
 application usage [1-13](#)
 CLI commands [8-12](#)
 direct dial channels [4-31](#)
 direct two-way channels [4-29](#)
 DTMF tone generation [4-24](#)
 end-user interface configuration [5-1](#)
 installation [2-3](#)
 keyboard mapping [4-22](#)
 login [4-4](#)
 logs [7-6](#)
 multiselect [4-25](#)
 offline mode [4-7](#)
 password [4-5](#)
 skins [5-4](#)
 system recovery [6-4](#)
 touch screen skin [4-18](#)
 troubleshooting [8-29](#)
 voice replay [4-33](#)
 VPN client [8-16](#)

- channel appearances **4-16**
- channel interactions
 - activated **4-19**
 - activating **4-19**
 - disabled **4-19**
 - listen-only **4-20**
 - not activated **4-19**
 - secure **4-20**
 - unassigned **4-19**
- channel mapping **4-21**
- channels
 - connectivity failure indicator **8-25**
 - customized color indicators **3-15**
 - direct dial **3-12**
 - direct two-way **3-12**
 - disable audio **3-16**
 - dispatcher policy channel **3-11**
 - indicators **3-14**
 - interactions **4-15**
 - labels **3-14**
 - latch **4-17**
 - latch permission **3-15**
 - listen-only mode **3-15**
 - locations **3-18**
 - maximum channel support **4-15**
 - names **3-14**
 - policies **3-10**
 - secure indicators **3-15**
 - terminology **3-12**
- traffic activity indicators **4-35**
- transmission settings **3-16**
- truncating names **3-14**
- types **3-14**
- using direct dial connections **4-30**
- using direct two-way connections **4-28**
- visual indicators
 - connectivity failure **8-25**
 - types **3-14**
- voice activity detection **3-16**
- VTGs **1-7**
- channel states **4-18**
- channel traffic activity
 - administratively stopping transmission **4-37**
 - implicit floor control **4-37**
 - indicators **4-35**
 - interaction **4-37**
 - receive and transmit indicators **4-35**
- checking the microphone **2-11**
- Cisco CallManager
 - documentation **xiv**
- Cisco CallManager Express
 - documentation **xv**
- Cisco IOS
 - documentation **xvi**
- Cisco IPICS
 - benefits **1-2**
 - browser support **1-12**
 - components **1-3**

- deployment **1-15**
 overview **1-2**
 server **1-3**
 server interactions **1-19**
 user interactions **1-20**
- Cisco IPICS user roles **1-5**
- Cisco IP Phones
 documentation **xv**
- Cisco IP Phone support **1-5**
- Cisco Land Mobile Radio (LMR)
 documentation **xv**
- Cisco Security Agent
 documentation **xv**
- codec support **3-22**
- communications
 multicast **3-17**
 unicast **3-17**
- communications interruptions **6-5**
- components
 Cisco IPICS server **1-3**
 Cisco IP Phone **1-5**
 gateways **1-4**
 PMC **1-4**
 router media service **1-5**
- configuring audio settings **2-7**
- configuring key mapping **5-12**
- configuring the PMC application **5-1**
- connection support **3-17**
- connectivity indicators
 server connection status **4-6, 6-2**
 SIP-based remote connections **3-19, 6-2, 8-25**
 conventions, document **xvi**
 customized skin downloads **2-21**
-
- D**
- direct dial
 caveats **4-31**
 channels **4-30**
- direct two-way
 caveats **4-29**
 channels **4-28**
- disable audio **3-16, 3-17**
- disconnected mode **4-9**
- dispatcher role **1-6**
- documentation
 Cisco CallManager **xiv**
 Cisco CallManager Express **xv**
 Cisco IOS **xvi**
 Cisco IP Phones **xv**
 Cisco Land Mobile Radio (LMR) **xv**
 Cisco Security Agent **xv**
 conventions **xvi**
 MCS servers **xv**
- double-byte language support **8-26**
- downloading the PMC update **2-23**
- DTMF tone generation
 caveats **4-24**

focus changes **4-24**
supported keys **4-23**
using **4-24**
dynamic configuration **4-14**

E

echo **3-5**
encrypted file system **8-5**
end-user channel interactions **4-16**
end-user features **4-20**
error messages **8-29**

F

feature support
channels **3-11**
end-user features **4-20**
implementing policies **3-10**
interoperability **3-1**
locations **3-18**
PMC skin **1-8**
focus changes
alert tone playout **4-26**
All Talk channel **4-23**
DTMF tone generation **4-24**
mapped key **4-22**
multiselect **4-26**
PTT channel **4-23**

USB devices **4-21**
while transmitting **4-22**
footswitch
key mapping **4-21**
troubleshooting **8-7**
forced upgrades **2-23**

G

gateways
LMR **1-4**
router media service **1-5**

H

headset
audible hum **2-13**
checking audio settings **2-13**
connecting to PMC client machine **2-12**
resolving headset issues **8-11**
using a high-quality headset **2-12**
using a USB DSP headset **2-9**
using the microphone **2-10**
voice quality tips **2-12**
high latency, low bandwidth connections **5-13**
HTTPS **2-4**
Hypertext Transfer Protocol over Secure
Sockets Layer
See HTTPS

I

IE publisher error [8-15](#)
 implementing policies [3-10](#)
 incident management scenario [3-6](#)
 installation log file [8-3](#)
 installing the PMC application [2-2](#)
 interactions
 channels [4-15](#)
 channel states [4-18](#)
 Cisco Security Agent [2-6](#)
 client-server [2-1](#)
 end-user features and interactions [4-20](#)
 PMC user [3-7](#)
 scenarios [3-3](#)
 server [1-19](#)
 server-PMC interaction [3-8](#)
 server-PMC login sequence [4-6](#)
 system [1-19](#)
 user [1-20](#)

J

joining a VTG [4-14](#)

K

key assignments [4-21](#)
 keyboard mapping

caveats [4-22](#)
 configuring [4-21](#)
 focus changes [4-22](#)
 footswitch [4-21](#)

L

Land Mobile Radio
See LMR
 latch functionality
 latching a channel [3-5](#)
 latching the PTT button [1-14](#)
 using the PMC latch [4-17](#)
 license requirements [4-6](#)
 listen-only channels [3-15](#)
 LMR
 channel representation [3-12](#)
 gateway [1-4](#)
 location [3-18](#)
 log files [7-1](#)
 logging in to the PMC
 information [4-1](#)
 local login [4-9](#)
 login caveats [4-4](#)
 logging out of the PMC [4-39](#)
 loss of focus [4-22](#)

M

managing alert tone upgrades [2-26](#)

managing PMC upgrades [2-22](#)

managing version numbers [2-18](#)

MCS servers

 documentation [xv](#)

microphone setup [2-11](#)

multicast

 communications [3-17](#)

 connection type [3-19](#)

 maximum allowable voice streams [3-19](#)

PMC behavior when exceeding the maximum
 allowable voice streams [3-19](#)

multiselect

 caveats [4-25](#)

 focus changes [4-26](#)

 functionality [4-25](#)

N

note, described [xvi](#)

O

one-way audio issues [8-11](#)

operator role [1-6](#)

ops view administrator role [1-6](#)

optimizing audio for low bandwidth use [5-13](#)

optimizing for high latency, low bandwidth
 connections [5-13](#)

optimizing your audio on the PMC [2-7](#)

optional settings submenus [5-15](#)

optional upgrades [2-23](#)

overview

 Cisco IPICS [1-2](#)

 PMC [1-7](#)

P

passwords

 caveats [4-5](#)

 expiration [4-5](#)

 invalid login attempts [4-5, 4-10](#)

PMC

 alert tones [4-26](#)

 All Talk button [4-25](#)

 application recovery [6-9](#)

 automatic updates [2-21](#)

 buttons [1-8, 4-13](#)

 caveats

 alert tones [4-27](#)

 application troubleshooting [8-29](#)

 application usage [1-13](#)

 CLI commands [8-12](#)

 direct dial channels [4-31](#)

 direct two-way channels [4-29](#)

 DTMF tone generation [4-24](#)

high latency, low bandwidth connections **5-13**

installation **2-3**

keyboard mapping **4-22**

login **4-4**

logs **7-6**

multiselect **4-25**

offline mode **4-7**

password **4-5**

skins **5-4**

system recovery **6-4**

touch screen skin **4-18**

voice replay **4-33**

VPN client **8-16**

channels

- appearance on PMC **4-16**
- customized color indicators **3-15**
- direct dial **3-12**
- direct two-way **3-12**
- focus **4-22**
- interactions **4-15**
- latch **4-17**
- latch permission **3-15**
- listen-only mode **3-15**
- reordering **4-28**
- secure indicator **3-15**
- states **4-18**
- support **3-11**
- terminology **3-12**
- traffic activity indicators **4-35**

truncating names **3-14**

using direct dial connections **4-30**

using direct two-way connections **4-28**

visual indicators **3-14**

voice activity detection **3-16**

checking for updates **2-22**

client application **1-4**

communications interruptions **6-5**

configuration customization **1-12**

configuring the application **5-1**

disconnected mode **4-9**

downloading the update **2-23**

DTMF tone generation **4-24**

end-user features **4-20**

GUI **1-11**

illustration **1-8**

installation

- caveats **2-3**
- installing the application **2-2**

interactions

- Cisco Security Agent **2-6**
- client-server **2-1**

interface **1-7**

interoperability features **3-1**

joining a VTG **4-14**

key assignments **4-21**

key mapping **5-12**

license requirements **4-6**

locations

- support **3-18**
- truncating names **3-18**
- logging in
 - caveats **4-4**
 - local login **4-9**
- logging out **4-39**
- login information **4-1**
- logs
 - accessing the logs **7-3**
 - accessing the submenu **7-2**
 - caveats **7-6**
 - describing the logs **7-7**
 - examples **7-8**
 - files **7-1**
 - identifying the logs **7-1**
 - using the logs **7-5**
- maintaining the application
 - process **2-16**
- maintaining version compatibility **2-17**
- managing alert tone upgrades **2-26**
- managing skin downloads **2-21**
- managing upgrades **2-22**
- managing version numbers **2-18**
- multiselect channels **4-25**
- offline mode **4-7**
- optimize audio for low bandwidth use **5-13**
- passwords
 - caveats **4-5**
 - expiration **4-5**
- invalid login attempts **4-5**
- quality of service **2-13**
- recovering the system **6-1**
- recovery caveats **6-4**
- recovery scenarios **6-4**
 - communications are down **6-8**
 - network is down **6-8**
 - server and RMS down **6-6**
 - server down **6-5**
 - server resumes operation **6-7**
- reverting to a previous version **2-27**
- scenarios
 - incident management **3-6**
 - interactions **3-2**
 - PMC user interaction **3-7**
- selecting channels **4-25**
- server status connection indicator **4-6**
- skin
 - caveats **5-4**
 - mismatch **5-5**
 - touch screen caveats **4-18**
- system requirements **1-17**
- troubleshooting
 - application **8-1**
 - audio and headset issues **8-11**
 - audio settings **8-7**
 - caveats **8-29**
 - channel activation issues **8-24**
 - Cisco Security Agent **8-9**

- codec misconfiguration [8-25](#)
 - coexistence [8-10](#)
 - configuration file changes [8-6](#)
 - connectivity issues [8-15](#)
 - DNS issues [8-24](#)
 - error messages [8-29](#)
 - execution [8-2](#)
 - footswitch device [8-7](#)
 - generating a PMC installation log file [8-3](#)
 - headset [8-8](#)
 - headset issues [8-12](#)
 - high latency, low bandwidth links [8-23](#)
 - microphone [8-9](#)
 - multicast connections [8-20](#)
 - offline mode [8-21](#)
 - one-way audio [8-11](#)
 - one-way audio issues [8-12](#)
 - optional settings menu [8-6](#)
 - publisher error [8-15](#)
 - resolving IP address changes [8-13](#)
 - right-to-left and double-byte language support [8-26](#)
 - RMS connectivity [8-22](#)
 - satellite connectivity [8-23](#)
 - using an encrypted file system [8-5](#)
 - voice quality [8-14](#)
 - VPN issues [8-16](#)
 - Windows XP firewall [8-18](#)
 - winsock corruption [8-21](#)
 - uninstalling the application [2-28](#)
 - upgrading the application
 - forced upgrades [2-23](#)
 - messages [2-24](#)
 - optional upgrades [2-23](#)
 - process [2-16](#)
 - types of upgrades [2-22](#)
 - usage guidelines [4-2](#)
 - USB devices
 - focus [4-21](#)
 - footswitch [4-21](#)
 - user privileges [3-16](#)
 - using the logs [7-1](#)
 - using the optional settings [5-15](#)
 - version number management [2-18](#)
 - voice quality tips [2-12](#)
 - voice replay [4-32](#)
 - PMC ID [1-19](#)
 - PMC installation caveats [2-3](#)
 - PTT latch [1-14](#)
 - Push-to-Talk Management Center
 - See* PMC
-
- Q**
- quality of service [2-13](#)
-
- R**
- recovery scenarios [6-4](#)

remote connection **3-19**
reordering channels **4-28**
reverting to a previous version of the PMC **2-27**
right-to-left language support **8-26**
RMS
 channel interaction **4-11**
 connectivity **4-38**
 description **1-5**
 entries **4-8**
 IP address **4-39**
 PMC connectivity to the RMS **8-11**
 SIP-based connectivity **8-24**
 troubleshooting connectivity issues **8-22**
router media service
 See RMS

S

satellite connectivity **5-13**
scenarios **3-2**
secure channel indicator **3-15**
selecting channels **4-25**
server
 commands **3-9**
 connection status indicator **4-6**
 dynamic configuration **4-14**
 location support **3-18**
 role **3-8**
server commands

channel list **3-9**
disable channel **3-10**
disable user **3-10**
mute user **3-10**
retrieve logs **3-10**
set logging level **3-10**
server connection status indicator **4-6**
server-PMC login sequence **4-6**
SIP-based connection
 connection failure **8-25**
 maximum allowable voice streams **3-19**
 remote connection **3-19**
 visual indicator for connection failures **3-19**
skin caveats **5-4**
skin mismatch **5-5**
sorting channels **4-28**
supported codecs **3-22**
supported features **3-11**
supported user roles **1-5**
system administrator role **1-6**
system interactions **1-19**
system recovery **6-1**
system recovery caveats **6-4**

T

TAC Case Collection Tool **8-14**
tips
 login caveats **4-4**

- optimizing your audio on the PMC [2-7](#)
- password caveats [4-5](#)
- PMC connectivity [4-3](#)
- using the PMC [4-2](#)
- using the PMC in offline mode [4-7](#)
- voice quality [2-12](#)
- touch screen skin caveats [4-18](#)
- traffic activity indicators [4-35](#)
- transmitting DTMF tones [4-24](#)
- troubleshooting the PMC application [8-1](#)
- truncating
 - channel names [3-14](#)
 - location names [3-18](#)
- user names [4-9](#)
- user permissions
 - advanced PMC permissions [3-17](#)
 - allow latch [3-17](#)
 - disable audio [3-17](#)
 - listen-only [3-17](#)
- user privileges [3-16](#)
- user role [1-7](#)
- using PMC end-user features [4-20](#)
- using the headset [2-9](#)
- using the latch functionality [4-17](#)
- using the microphone [2-10](#)
- using the PMC buttons [1-8, 4-13](#)
- using USB devices with keyboard mapping [4-21](#)

U

- unicast
 - communications [3-17](#)
 - connection [3-19](#)
- uninstalling the PMC application [2-28](#)
- updating the PMC application [2-22](#)
- upgrading the PMC
 - optional upgrade [2-23](#)
 - required upgrade [2-25](#)
 - types of upgrades [2-22](#)
 - upgrade management [2-22](#)
- usage guidelines [4-2](#)
- USB devices [4-21](#)
- user channel activity interaction [4-37](#)

V

- VAD [5-11](#)
- version compatibility [2-17](#)
- version number management [2-18](#)
- Virtual Talk Groups
 - See* VTGs
- visual indicators
 - connectivity status for SIP-based remote connections [3-19](#)
 - server connectivity status [4-6](#)
- voice activity detection
 - See* VAD
- voice quality

issues **8-14**

tips **2-12**

voice replay

caveats **4-33**

using **4-32**

VTGs

channel **1-7**

server-PMC interaction **4-14**

states **1-21**

user interaction states **4-18**