



## INDEX

---

### A

accessing online help in Administration Console [2-4](#)

Administration Console

described [1-7](#)

identifying items [1-7](#)

alert tones management [3-20](#)

audio clients [1-6](#)

---

### B

backing up the database [4-9](#)

---

### C

choosing the backup destination [4-10](#)

Cisco IPICS

Administration Console [1-7](#)

components [1-5, 1-6](#)

components, PMC [1-6](#)

database management [4-8](#)

dispatcher tasks [2-18](#)

important concepts [2-4](#)

introducing [1-1](#)

operator tasks [2-17](#)

ops view administrator tasks [2-17](#)

RMS components [1-6](#)

roles and associated tasks [2-13](#)

serviceability [4-1](#)

system administrator tasks [2-14](#)

user tasks [2-19](#)

using with IP phones [3-21](#)

Cisco IPICS server

logging in [2-3](#)

logging out [2-3](#)

managing licenses [2-1](#)

timeout, described [1-9](#)

usage guidelines [1-9](#)

viewing version information [1-10](#)

Cisco Unified Communications Manager functionality [1-6](#)

---

### D

database

backing up [4-9](#)

backup destinations [4-10](#)

choosing backup destination [4-10](#)

choosing backup location [4-9](#)

managing **4-8**  
restoring **4-12**

descriptors  
managing **3-5**  
radio **3-5**  
radio and tone **3-5**  
tone **3-6**

dial engine  
considerations **3-8**  
system scripts **3-10**

dial-in floor **3-16**

downloading  
diagnostic information **4-2**  
system logs **4-6**

---

## F

floor, for dial-in **3-16**

---

important concepts

associations **2-12**  
locations **2-4**  
ops views **2-7**  
understanding association attributes **2-12**  
VTGs **2-6**

IP phones, using with Cisco IPICS **3-21**

---

## L

language of TUI prompts **3-14**  
license management **2-1**  
LMR gateways **1-6**  
logging in to Cisco IPICS **2-3**  
logging out of Cisco IPICS **2-3**

---

## M

managing  
database **4-8**  
passwords **3-24**  
PMC **3-18**  
PMC alert tones and skins **3-20**  
PMC installer **3-18**  
PMC regions **3-21**  
PMC versions **3-19**  
policy engine **3-8**  
radio and tone descriptors **3-5**  
radios **3-3**  
managing RMS components **3-1**

---

## N

networking **1-6**

---

**O**

online help, accessing **2-4**

ops views

- attributes **2-9**

- caveats **2-11**

- considerations **2-11**

- port allocation **2-7**

---

**P**

password

- maintaining **3-24**

- security **3-24**

PMC

- controlling tone sequences for radios **3-3**

- managing **3-18**

- managing alert tones and skins **3-20**

- managing PMC installer **3-18**

- managing PMC regions **3-21**

- managing skins **3-20**

- managing versions **3-19**

- regions **3-21**

PMC regions management **3-21**

policy

- considerations **3-12**

- types **3-12**

policy engine

- dial engine **3-8**

---

managing and using **3-8**

---

**R**

radio

- defining **3-3**

- defining channels **3-3**

- descriptor, described **3-5**

- managing **3-3**

- tone control **3-3**

restoring the database **4-12**

RMS, managing **3-1**

RMS management **3-1**

roles

- Cisco IPICS **2-13**

- dispatcher **2-18**

- operator **2-17**

- ops view administrator **2-17**

- system administrator **2-14**

- user **2-19**

---

**S**

security for passwords **3-24**

server

- accessing online help **1-10**

- Cisco IPICS **1-5**

- usage guidelines **1-9**

- viewing version information **1-10**

- serviceability  
  downloading diagnostic information **4-5**  
  downloading system logs **4-8**  
  monitoring system status **4-1**  
  viewing diagnostic information **4-2**  
  viewing real-time status **4-2**  
  viewing system logs **4-6**  
skins management **3-20**
- 

**T**

- tone  
  alerting **3-20**  
  descriptor, described **3-6**  
tone control of radios **3-3**  
tone sequences  
  momentary control **3-4**  
  stateful control **3-4**  
TUI (telephony user interface)  
  dial-in floor **3-16**  
  general guidelines **3-14**  
  menu guidelines **3-16**  
  speaking **3-17**
- 

**U**

- using  
  Cisco Unified IP Phones with Cisco  
  IPICS **3-21**

- policy engine **3-8**  
TUI **3-14**  
using Cisco Unified IP Phones with Cisco  
IPICS **3-21**
- 

**V**

- viewing  
  diagnostic information **4-2**  
  real-time system status **4-2**  
  system logs **4-6**