

For More Information

For detailed information about the Cisco IP Interoperability and Collaboration System (Cisco IPICS), and for additional information about radio and tone descriptor files, refer to the [Cisco IPICS Server Administration Guide, Release 2.1\(1\)](#).

Refer to the following URL for the complete Cisco IPICS documentation set:
http://www.cisco.com/en/US/products/ps7026/tsd_products_support_series_home.html



Cisco, Cisco Systems, the Cisco logo, and the Cisco Systems logo are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries. All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0705R)

© 2007 Cisco Systems, Inc. All rights reserved.

Printed in the USA

78-18325-01
DOC-7818325=



QUICK START



Cisco IPICS Radio and Tone Descriptor File Examples

Overview

Guidelines for Configuring Descriptor Files

Valid .xml Entries

Invalid .xml Entries

For More Information

Overview

A radio descriptor is an .xml file that is used to control functions on a radio. It contains channel selectors (to change radio frequencies) and control tone sequences (to provide radio controls such as monitoring and scanning).

A tone descriptor is an .xml file that contains signals. Signals are associated with channels whether or not a radio is configured on the channels. Tone descriptors describe momentary signals that can be sent over-the-air on a selected frequency/channel or other devices.

Cisco IPICS allows you to create and/or modify existing radio and tone descriptor files in Cisco IPICS. This functionality can be useful, for example, if you want to add controls or signals, or change the duration of a tone.

Guidelines for Configuring Descriptor Files

The following guidelines apply to configuring radio and tone descriptor .xml file entries:

- For channel selectors and radio control functions (both stateful and simple) Cisco IPICS supports only RFC 2833 tone entries.
- You cannot enter more than six consecutive RFC 2833 tones in a tone control sequence.
- For signals, Cisco IPICS supports both RFC 2833 tone and RFC 2833 event (DTMF) commands.
- For tone signaling, you can enter more than six consecutive RFC 2833 tones only if the sixth tone event is separated by a pause entry (such as one ms) or a DTMF digit entry. Pauses are defined by a tone with a frequency of zero, as shown in the following example:
`<Rfc2833Tone db="0" frequency="0" duration="40" />`
- There is no limit to the number of DTMF entries that are allowed in a signaling tone sequence.

Note: When you enter DTMF digits, be sure to configure a delay between the digits, as required by the local specifications. Most U.S. specifications require an interdigit delay of at least 40 ms.

- If you have a common tone control sequence that is used by multiple radio descriptors, you can add it to a tone descriptor and reference it from multiple radio descriptors. This tone control sequence does not display as a signal that is available to channels.
- You can add a signal in a radio descriptor, but the signal displays as a control in the Cisco IPICS; however, Cisco does not recommend this practice. A signal that is defined in the radio descriptor is available to the radio independently of the channel to which it is currently tuned.

```

        <Rfc2833Tone db="0"
duration="40" frequency="100" />
        <Rfc2833Tone db="0"
duration="40" frequency="200" />
        .
        .
        .
        <Rfc2833Tone db="0"
duration="1" frequency="0" />
        <Rfc2833Tone db="0"
duration="40" frequency="700" />
        <Rfc2833Tone db="0"
duration="40" frequency="800" />
    </Command>
</Action>
</Signal>

```

Valid .xml Entries

Example 1 shows valid radio signaling .xml entries. Even though this example shows more than six consecutive RFC 2833 tone sequences, it is still valid because the tones are separated by a pause entry of at least 1 ms (*frequency = 0 tone*)

Example 1

```

<Signal shortName="TV"
longName="Start TV"
description="Start the Television">
  <Action type="pressed">
    <Command>

```

Example 2

```

<Signal shortName="TV"
longName="Start TV"
description="Start the Television">
  <Action type="pressed">
    <Command>
      <Rfc2833Tone db="0"
duration="40" frequency="100" />
      <Rfc2833Tone db="0"
duration="40" frequency="200" />
      <Rfc2833Tone db="0"
duration="40" frequency="300" />
      <Rfc2833Tone db="0"
duration="40" frequency="400" />
      <Rfc2833Tone db="0"
duration="40" frequency="500" />
      <Rfc2833Tone db="0"
duration="40" frequency="600" />
      <Rfc2833Tone db="0"
duration="40" frequency="700" />
    </Command>
  </Action>
</Signal>

```

Example 3

```

<ChannelSelector label="F2">
  <Action type="tune">
    <CommandRef href="hlgt" />
    <Command>
      <Rfc2833Tone db="-10"
duration="40" frequency="1850" />
      <Rfc2833Event db="-30"
duration="200" event="5" />

```

```

    </Command>
  </Action>
</ChannelSelector>

```

Example 4

```

<State shortName="On">
  <Action type="pressed">
    <Command>
      <Rfc2833Tone db="-10"
duration="200" frequency="1105" />
      .
      .
      .
      <Rfc2833Tone db="-10"
duration="200" frequency="1605" />
      <Rfc2833Tone db="-10"
duration="200" frequency="1705" />
    </Command>
  </Action>
</State>

```

Invalid .xml Entries

The following .xml entry examples include invalid entries:

- **Example 2**—Shows more than six RFC 2833 tone entries as part of a radio signaling tone sequence and does not include any pause entries.
- **Example 3**—Shows DTMF events as part of a radio control tone sequence.
- **Example 4**—Shows more than six consecutive RFC 2833 radio control tone sequences.