



Preface

Overview

This document provides information about understanding, installing, and operating the Cisco IPICS Dispatch Console, and provides information about related activities. The Cisco IPICS Dispatch Console is a component of the Cisco IP Interoperability and Collaboration System (IPICS). It enables management of Cisco IPICS resources and control of Cisco IPICS incidents through an on-screen interface that runs on a client PC.

Organization

This manual is organized as follows:

| | |
|-----------------------|--|
| Chapter 1, “Overview” | Introduces the Cisco IPICS Dispatch Console, its operation, and components, explains how to start and exit the Cisco IPICS Dispatch Console, describes upgrades, and provides guidelines for use |
|-----------------------|--|

| | |
|--|---|
| Chapter 2, “Cisco IPICS Dispatch Console Installation, Configuration, and Maintenance” | Provides instructions that explain how to install and uninstall the Cisco IPICS Dispatch Console, and provides information about optimizing its operation |
| Chapter 3, “Cisco IPICS Dispatch Console Reference” | Provides detailed information about the Cisco IPICS Dispatch Console windows, menus, features, and options |

Obtaining Documentation and Support

For information about obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What’s New in Cisco Product Documentation*. This document also lists all new and revised Cisco technical documentation. It is available at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What’s New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.