



INDEX

Symbols

* (asterisk), in Cisco IPICS Administration Console windows [1-9](#), [1-12](#)

A

About, in Administration Console [1-14](#)

accessing

Activity Log Management window [2-72](#)

Activity Log Options window [2-76](#)

Administration Console [1-11](#)

Channels window [2-3](#)

Descriptors window [9-35](#)

Dial Engine drawer [8-1](#)

Download IDC window [4-2](#)

IDC Installer window [2-94](#)

IDC Regions window [2-96](#)

IDC Versions window [2-87](#)

Incidents window [2-59](#)

License Management window [2-64](#)

Locations window [2-31](#)

Multicast Pool window [2-34](#)

My Profile window [4-1](#)

online help [1-14](#)

Ops View window [7-2](#)

Options window [2-77](#)

Policy Management drawer [6-1](#)

Radios window [9-7](#)

RMS window [2-39](#)

UMS window [2-50](#)

User Groups window [3-29](#)

Users window [3-2](#)

Virtual Talk Groups window [5-1](#)

action

activate VTG [6-5](#)

definition [6-1](#)

deleting [6-12](#)

dial-out [6-6](#), [6-11](#)

in multi-purpose type policy [6-8](#)

invite to VTG [6-5](#), [6-8](#)

managing [6-5](#)

notification [6-5](#)

overview [6-5](#)

reactivating [6-19](#)

VTG add participants [6-6](#), [6-10](#)

activating

policy [6-16](#)

- RMS [2-44](#)
- VTG [5-12, 6-8](#)
- active
 - channel state in Channel window, described [2-7](#)
 - incident [2-58](#)
 - multicast address [2-35, 2-38](#)
 - VTG, managing [5-2, 5-11](#)
- active users
 - fields, described [2-69](#)
 - viewing information for [2-69](#)
- activity log
 - described [2-72](#)
 - downloading [2-73](#)
 - downloading, archived [2-74](#)
 - managing [2-71](#)
 - managing activity types per ops view [2-75](#)
 - options per ops view [2-75](#)
 - types [2-75](#)
 - understanding the Activity Log Management window [2-72](#)
 - viewing [2-73](#)
- activity log retention period, setting described [2-78](#)
- adding
 - alert tone set [2-91](#)
 - channel [2-5](#)
 - channel group [2-22](#)
 - locations [2-32](#)
 - multicast address to multicast pool [2-36](#)
 - radio [9-8](#)
 - radio and tone descriptors [9-36](#)
 - regions [2-96](#)
 - RMS [2-45](#)
 - sequence of multicast addresses to multicast pool [2-36](#)
 - UMS [2-56](#)
 - user [3-4](#)
 - user group [3-31](#)
 - VTG [5-6](#)
- address
 - e-mail, of user [3-8](#)
 - information for user [3-7](#)
 - multicast address [2-35](#)
 - of user, in user profile [4-4](#)
 - street, of user in Users window [3-8](#)
- Address Information tab [3-7](#)
- Administration Console
 - accessing [1-11](#)
 - Authentication window [1-11](#)
 - client system requirements [1-11](#)
 - displaying current data [1-10](#)
 - exiting [1-12](#)
 - logging in [1-11](#)
 - logging out [1-12](#)
 - obtaining information about [1-14](#)
 - online help [1-14](#)
 - overview [1-8](#)
 - refreshing [1-10](#)
 - timeout [1-14](#)

- advanced IDC permissions [3-12](#)
- advanced IDC permissions, field described [4-6](#)
- alerting tones
 - See* alert tones
- alert notification [6-7](#)
- alert tones
 - adding [2-91](#)
 - associating ops views [2-92](#)
 - creating alert tone sets [2-90](#)
 - deleting [2-93](#)
 - managing [2-89](#)
 - viewing or editing alert tone sets [2-92](#)
- allow complex key setting
 - end devices for users [3-12](#)
 - IPICS options [2-86](#)
 - user profile [4-6](#)
- allow latch
 - channel [2-12](#)
 - field in user profile [4-6](#)
 - in IDC tab [3-12](#)
 - radio [9-13](#)
- allow secure channel patch
 - end device for users [3-12](#)
 - IPICS options [2-86](#)
 - user profile [4-6](#)
- all role, described [1-7, 3-8](#)
- archived incident
 - archive file name [2-79](#)
 - configuring [2-78](#)

- maximum file size [2-78](#)
- retention period [2-78](#)
- run archive at [2-79](#)

- associating
 - alert tones to ops views [2-92](#)
 - channel with user [3-18](#)
 - ops views with user group [3-33](#)
 - ops view with user [3-25](#)
 - phone with user [3-19](#)
 - policy with user [3-20, 6-15](#)
 - radio with user [3-22](#)
 - user with policy [3-20, 6-15](#)

- Associations tab [3-12](#)

- audio, disable [3-12](#)

- audio client [1-6](#)

- Authentication window [1-11](#)

B

- backup and restore operations

- overview [11-1](#)

- performing [11-1](#)

- browser

- guidelines for using [1-10](#)

- memory issues [1-11](#)

- pop-up windows, disabling blocking [1-10](#)

- refreshing windows [1-10](#)

C

- calculating DSPs [A-12](#)
- CAP XML file, for external notification [B-4](#)
- caveats [9-6](#)
- changing status of VTG [5-12](#)
- channel
 - active state [2-14](#)
 - active status [2-7](#)
 - adding
 - new [2-5](#)
 - to VTG template [5-5](#)
 - allow association to users, field described [2-6](#)
 - allow latch, described [2-12](#)
 - allow use in VTGs field, described [2-7](#)
 - associated [3-23](#)
 - associated ops view, field described [2-11](#)
 - associating
 - radio signals with user [2-18](#)
 - to ops views [2-16](#)
 - user with [3-18](#)
 - with user [2-17](#)
 - available [3-23](#), [3-33](#)
 - changing status [2-14](#)
 - channel color, field described [2-12](#)
 - channel region, field described [2-12](#)
 - channel selector, field described [2-10](#)
 - deleting
 - from a channel group [2-25](#)
 - from system [2-20](#)
 - described [2-2](#)
 - descriptor, field described [2-10](#)
 - disabled status [2-7](#)
 - disabling [2-14](#)
 - editing information [2-5](#)
 - enabled status [2-7](#)
 - enable latch, field described [2-12](#), [9-13](#)
 - enable VAD, field described [2-12](#)
 - enabling [2-14](#)
 - IDC region field described [2-12](#)
 - in inactive VTG [5-5](#)
 - listen only, field described [2-12](#)
 - location [2-9](#)
 - location, field described [2-9](#)
 - mixing secure and non-secure in VTG [5-5](#)
 - multicast address, field described [2-9](#)
 - multicast address port, field described [2-9](#)
 - name, field described [2-6](#)
 - radio, field described [2-10](#)
 - removing
 - from channel group [2-25](#)
 - from system [2-20](#)
 - RX mute during PTT, field described [2-11](#)
 - search for in VTG window [5-24](#)
 - secure, field described [2-6](#)
 - status [2-7](#)
 - type, field described [2-8](#)
 - unavailable for VTG [5-22](#)

- viewing
 - associations [2-19](#)
 - information [2-5](#)
- Channel dashboard
 - elements [12-3](#)
 - overview [12-3](#)
- channel group
 - adding
 - new [2-22](#)
 - to VTG template [5-5](#)
 - associated ops view, field described [2-23](#)
 - associated VTG [2-25](#)
 - associated VTG status [2-25](#)
 - associating ops views to [2-26](#)
 - channels in [2-2](#)
 - deleting [2-27](#)
 - deleting a channel from [2-25](#)
 - described [2-2](#)
 - editing information [2-23](#)
 - name [2-23](#)
 - removing
 - channel from [2-25](#)
 - from system [2-27](#)
 - viewing
 - associations [2-25](#)
 - information [2-23](#)
- Channel Selector Permissions [3-23](#)
- channel selectors
 - associated channel field, described [9-5](#)
 - enabled status check box [9-5](#)
 - label [9-5](#)
- Cisco [10-3](#)
- Cisco IOS documentation [1-xxii](#)
- Cisco IPICS
 - Administration Console [1-8](#)
 - database
 - backing up [11-3](#)
 - logs [11-14](#)
 - restoring [11-9](#)
 - deployment options [1-3](#)
 - getting started [1-1](#)
 - hardware components [1-3](#)
 - initial configuration [1-1](#)
 - IP multicast address guidelines for [2-36](#)
 - logging in to [4-1](#)
 - Login window [4-1](#)
 - overview [1-1, 1-3](#)
 - Restrict Operator Role assignments [2-79](#)
 - role [1-7](#)
 - server [1-4](#)
 - session timeout period setting [2-78](#)
 - setting up [1-1](#)
 - software components [1-3](#)
- Cisco IPICS policy engine
 - See* policy engine
- Cisco IPICS server
 - Administration Console [1-8](#)
 - described [1-4](#)

- SSL certificate on [E-1](#)
- usage guidelines [1-9](#)
- Cisco IPICS service
 - about [D-1](#)
 - configuring
 - for Cisco Unified Communications Manager [D-1](#)
 - for Cisco Unified Communications Manager Express [D-3](#)
 - disabling log in [D-2](#)
 - subscribing to [D-3](#)
 - using [D-4](#)
- Cisco IPICS session timeout [2-78, 2-79](#)
- Cisco IPICS session timeout period, setting described [2-78](#)
- Cisco IP Interoperability and Collaboration System
 - See* Cisco IPICS
- Cisco router
 - function in a Cisco IPICS deployment [1-6](#)
- Cisco Security Agent documentation [1-xxii](#)
- Cisco Unified Communications Manager
 - configuring as SIP provider [8-32](#)
 - configuring Cisco IPICS service for [D-1](#)
 - documentation [1-xxi](#)
 - function in a Cisco IPICS deployment [1-6](#)
- Cisco Unified Communications Manager Express
 - configuring as SIP provider [8-35](#)
 - configuring Cisco IPICS service for [D-3](#)
 - documentation [1-xxi](#)
- Cisco Unified IP Phone
 - accessing Cisco IPICS service from [D-4](#)
 - allow latch [3-12](#)
 - audio [3-12](#)
 - dial login for [3-9](#)
 - digit ID [3-10, 4-4](#)
 - digit password [3-10](#)
 - disable [3-10](#)
 - documentation [1-xxi](#)
 - high availability, affect on [10-8](#)
 - latching [3-12](#)
 - listen only [3-12](#)
 - managing for user [3-10](#)
 - mute [3-10](#)
 - subscribing to Cisco IPICS service [D-3](#)
 - timeout period setting [2-78](#)
 - unmute [3-10](#)
 - user in VTG [5-14](#)
 - using as a PTT device [D-1](#)
- client
 - log out, setting described [2-84](#)
 - maximum video size, setting described [2-84](#)
 - update poll, setting described [2-83](#)
- cluster view daemon, trace file [8-3](#)
- codec
 - field described [2-10](#)
 - for policy engine [8-29](#)
 - radio [9-9](#)

- communications preferences
 - configuring [3-14](#)
 - described [3-13](#)
 - managing [3-13](#)
 - complex key setting
 - end devices for users [3-12](#)
 - IPICS options [2-86](#)
 - connection type, multicast address [2-35, 2-38](#)
 - control function permissions [3-23](#)
 - control functions [3-24](#)
 - controllers
 - configuring T1/E1 controllers [A-4](#)
 - on RMS [2-43](#)
 - copying a user [3-4](#)
 - customized script prompts
 - codec [8-12](#)
 - deleting [8-14](#)
 - described [8-11](#)
 - downloading [8-13](#)
 - renaming [8-14](#)
 - uploading [8-12](#)
 - viewing list of [8-12](#)
 - Customized Script Prompts window [8-12](#)
-
- ## D
- Dashboard window, overview [12-1](#)
 - database
 - backing up [11-3](#)
 - choosing a backup destination [11-8](#)
 - manually starting database server [11-19](#)
 - options
 - changing [11-6](#)
 - default [11-6](#)
 - restoring [11-10](#)
 - restoring [11-9](#)
 - troubleshooting
 - backup procedure [11-15](#)
 - restore procedure [11-15](#)
 - database log [10-14](#)
 - Database Management window
 - overview [11-2](#)
 - tabs inside of [11-2](#)
 - database replication block state [10-14](#)
 - database updates [10-14](#)
 - DDRBLOCK [10-14](#)
 - deactivated
 - RMS [2-44](#)
 - RMS status [2-43](#)
 - VTG [5-13](#)
 - deactive, incident [2-58](#)
 - DEBUG-level error messages [12-10, 12-13](#)
 - debug trace level [8-3](#)
 - dedicated-dial-engines.xml file [B-2](#)
 - default language folder [8-8](#)
 - default tone sequences, configuring [9-6](#)
 - deleting
 - action from policy [6-12](#)

- alert tones [2-93](#)
- channel
 - from channel group [2-25](#)
 - from system [2-20](#)
- channel group [2-27](#)
- descriptors [9-38](#)
- IDC
 - regions [2-97](#)
 - versions [2-89](#)
- incident [2-63](#)
- languages [8-9](#)
- locations [2-33](#)
- multicast address [2-38](#)
- policy [6-16](#)
- radio [9-18](#)
- radio and tone descriptors [9-38](#)
- RMS [2-48](#)
- spoken names prompts [8-20](#)
- trigger from policy [6-14](#)
- UMS [2-57](#)
- user [3-28](#)
- user group [3-35](#)
- VTG [5-11](#)
- deployment, of Cisco IPICS [1-3](#)
- descriptors
 - deleting [9-38](#)
 - managing radio and tone [9-21](#)
 - updating [9-37](#)
- diagnostic information
 - downloading [12-8](#)
 - viewing [12-6](#)
- Diagnostics window
 - diagnostic summary pane, described [12-8](#)
 - elements [12-6](#)
 - overview [12-1, 12-6](#)
- dial engine
 - codec [8-29](#)
 - configuring [B-2](#)
 - described [8-1](#)
 - for external notification [B-2](#)
 - parameters [8-28](#)
 - services
 - obtaining information about [8-2](#)
 - status [8-2](#)
 - trace file [8-3](#)
- Dial Engine drawer, accessing [8-1](#)
- dial engine script
 - See* scripts [8-21](#)
- Dial Engine Script notification [6-7](#)
- dial-in
 - assigning to ops view [7-13](#)
 - configuring SIP provider for [8-32](#)
 - SIP trunk [8-34](#)
- dial-in floor [6-22](#)
- dialing out to participants in an active VTG [5-19](#)
- dial-in phone
 - disable [3-10](#)

- high availability, affect on [10-8](#)
- listen only [3-12](#)
- managing for user [3-10](#)
- mute [3-10](#)
- unmute [3-10](#)
- dial login
 - configuring [3-9](#)
 - described [3-9](#)
- Dial Login tab [3-9](#)
- Dial notification [6-7](#)
- dial-out
 - action [6-6, 6-11](#)
 - configuring SIP provider for [8-32](#)
 - SIP trunk [8-34](#)
- dial preferences
 - configuring [3-14](#)
 - described [3-14, 4-7](#)
 - order of [3-17](#)
- dial prefix [8-30](#)
- digit ID [3-10, 4-4](#)
- digit password (PIN) [3-10, 4-5](#)
- direct dial
 - adding numbers [8-31](#)
 - deleting numbers [8-32](#)
 - described [8-29](#)
 - dial prefix [8-30](#)
 - updating numbers [8-31](#)
 - viewing information about numbers [8-31](#)
- Direct Dial Management window [8-30](#)
- direct dial numbers
 - managing [8-29](#)
 - viewing list [8-30](#)
- disable
 - Cisco Unified IP Phone [3-10](#)
 - IDC attributes in an active VTG [5-19](#)
 - latch in User Details window [5-17](#)
 - UMS [2-55](#)
 - user [3-27](#)
- disable audio, in user profile [4-6](#)
- disabled channel [2-7](#)
- disabled user [3-27](#)
- disable IDC activity log upload, setting described [2-84](#)
- disable RMS comparator, setting described [2-77](#)
- disabling
 - audio [3-12](#)
 - dial-in phone [3-10](#)
 - end device [3-10](#)
 - IDC [3-10](#)
 - listen only [3-12](#)
 - radio [9-17](#)
 - voice activation detection (VAD) [3-12](#)
- dispatcher role
 - described [1-7, 3-8](#)
 - responsibilities [5-1](#)
- documentation
 - Cisco IOS [1-xxii](#)
 - Cisco Security Agent [1-xxii](#)

Cisco Unified Communications
Manager [1-xxi](#)

Cisco Unified Communications Manager
Express [1-xxi](#)

Cisco Unified IP Phones [1-xxi](#)

session initiation protocol (SIP) [1-xxii](#)

downloading

activity logs [2-73](#)

archived activity logs [2-74](#)

IDC [4-2](#)

DS0

destination [2-47](#)

disabling [2-47](#)

enabling [2-47](#)

in loopback [2-46](#)

source [2-47](#)

status [2-47](#)

ds0 groups, configuring [A-4](#)

dspfarm

calculating DSPs [A-12](#)

checking configuration [A-12](#)

DSP resource pool [A-12](#)

enabling [A-12](#)

DSPs [A-12](#)

dump

memory trace [8-6](#)

threads trace [8-6](#)

E

E1 timeslots [A-5](#)

e-mail

address of user [3-8](#)

notification

action [6-6](#)

preference [3-14, 4-7](#)

system event [C-1](#)

enable

IDC attributes in an active VTG [5-19](#)

latch in User Details window [5-17](#)

radio [9-17](#)

UMS [2-55](#)

user [3-27](#)

enabled

channel [2-7](#)

user [3-27](#)

enable voice activity detection (VAD), field
described [2-12](#)

enabling

Cisco Unified IP Phone [3-10](#)

dial-in phone [3-10](#)

end device [3-10](#)

IDC [3-10](#)

listen only [3-12](#)

UMS [2-55](#)

voice activation detection (VAD) [3-12](#)

end device

audio [3-12](#)

described [3-10](#)

disable [3-10](#)

listen only [3-12](#)

managing for user [3-10](#)

mute [3-10](#)

unmute [3-10](#)

ERROR-level error messages [12-10, 12-13](#)

event, also called active VTG [5-2](#)

executed policy, information about [6-17](#)

executing policy, information about [6-17](#)

expiration date, of password [3-7](#)

bulk notification

See external notification

external notification

configuring dial engine [B-1](#)

deploying [B-1](#)

description [B-1](#)

dial engine [B-1, B-2](#)

failover, affect on [10-8](#)

invoking

CAP XML file [B-4](#)

HTTP request [B-3](#)

options [B-3](#)

message file [B-3](#)

overview [B-1](#)

recipient list [B-2](#)

requirements [B-1](#)

results of [B-8](#)

notification

See external notification

F

failover

affect on Cisco Unified IP Phone [10-8](#)

affect on dial-in user [10-8](#)

affect on external notification [10-8](#)

affect on IDC [10-6](#)

affect on IDC and connected devices [10-2](#)

affect on mobile client [10-8](#)

affect on policy [10-8](#)

local critical process failure [10-2](#)

lost heartbeat message failure [10-2](#)

manual [10-3, 10-9](#)

file size, of archived incident [2-78](#)

floor, for dial-in [6-22](#)

G

G.711 [2-10](#)

G.729 [2-10](#)

gateway [1-5](#)

General Information tab [3-7, 3-9](#)

guidelines

for using IP multicast addresses with Cisco
IPICS [2-36](#)

managing active VTGs [5-11](#)

managing inactive VTGs [5-5](#)
 multicast address [2-36](#)
 server usage [1-9](#)

H

HA

See high availability (HA)

hangover time [9-10](#)

hardware components, of Cisco IPICS [1-3](#)

help, in Administration Console [1-14](#)

high availability (HA)

active server [10-1](#)

affect of failover on IDC and connected devices [10-2](#)

Cisco Unified IP Phone, affect on [10-8](#)

configuring [10-3](#)

description [10-1](#)

dial-in user, affect on [10-8](#)

failover

local critical process failure [10-2](#)

lost heartbeat message failure [10-2](#)

manual [10-3](#)

IDC connections, affect on [10-6](#)

license [2-64](#)

manual failover [10-9](#)

mobile client, affect on [10-8](#)

overview [10-1](#)

redundant server location [10-2](#)

split brain scenario

definition [10-3](#)

resolving [10-10](#)

standby server [10-1](#)

synchronizing server time [10-8](#)

UMS [2-53](#)

unconfiguring [10-6](#)

High Availability Window [10-4](#)

host name, of RMS [2-43](#)

HTTP request, for external notification [B-3](#)

I

icons, in users window [3-32](#)

icons in Users window [3-3](#)

ID, of user [3-5](#)

IDC

activity log update, setting frequency [2-86](#)

adding alert tone sets [2-91](#)

advanced permissions [3-12](#)

alert tones, *See* alert tones

allow latch [3-12](#)

audio [3-12](#)

changing the state of versions for updates [2-89](#)

client log out, setting described [2-84](#)

creating alert tone sets [2-90](#)

deleting versions [2-89](#)

described [1-3, 1-4](#)

dialer preference [3-14, 4-7](#)

- Dialer Preferences [3-15](#)
- disable [3-10](#)
- downloading current version [4-16](#)
- failover, affect on [10-2](#)
- high availability affect on [10-6](#)
- installer, generating [2-94](#)
- latching [3-12](#)
- listen only [3-12](#)
- log files [3-10, 3-11](#)
- log in after failover [10-7](#)
- logout, forced [2-69](#)
- log upload frequency, setting described [2-85](#)
- managing for user [3-10](#)
- managing the configuration [2-93](#)
- mandatory update [2-88](#)
- maximum video size, setting described [2-84](#)
- mute [3-10](#)
- operation caveats when configuring tone sequences [9-34](#)
- recommended update [2-88](#)
- regions [2-96](#)
 - adding [2-96](#)
 - managing [2-95](#)
 - maximum [2-95](#)
 - See also* regions
- send logs on rollover, setting described [2-85](#)
- tab [3-12](#)
- unmute [3-10](#)
- update poll, setting described [2-83](#)
- user in VTG [5-14](#)
- versions
 - changing state [2-88](#)
 - uploading [2-88](#)
 - versions, managing [2-86](#)
 - voice activation detection (VAD) [3-12](#)
- IDC alert tones
 - See* alert tones
- IDC Installer window [2-94](#)
- idcsetup.exe [2-94](#)
- idle status, for multicast address [2-35, 2-38](#)
- IN_SERVICE [8-2](#)
- inactive
 - VTGs [5-4](#)
 - VTGs, guidelines [5-5](#)
- incident
 - Activated, field described [2-61](#)
 - activating [2-62](#)
 - active [2-58](#)
 - Address, field described [2-61](#)
 - changing status [2-62](#)
 - configuring archive [2-78](#)
 - current participants, fields described [2-61](#)
 - Deactivated, field described [2-61](#)
 - deactivating [2-62](#)
 - deactive [2-58](#)
 - definition [2-58](#)
 - deleting [2-63](#)

- description, field described [2-61](#)
- editing information [2-60](#)
- ID, field described [2-61](#)
- Incident VTG, field described [2-61](#)
- management [2-58](#)
- name, field described [2-61](#)
- Ops View, field described [2-61](#)
- overview [2-58](#)
- removing [2-63](#)
- state, field described [2-61](#)
- VTG [2-58](#)
- Incident dashboard
 - elements [12-4](#)
 - overview [12-3](#)
- Incidents window
 - accessing [2-58, 2-59](#)
 - understanding [2-59](#)
- INFO-level error messages [12-10, 12-13](#)
- Informix database, manually starting [11-19](#)
- invitation policy type
 - adding [6-11](#)
 - described [6-4](#)
 - updating [6-11](#)
- invitation type policy, actions in [6-5](#)
- invite to VTG action [6-5](#)
- IP address, of RMS [2-43](#)
- IP address selection guidelines [A-6](#)
- ipics.log
 - downloading [12-12](#)

- error types [12-10, 12-13](#)
- ipics.log file [B-8](#)
- IPICS Connect [9-20](#)
- IPICS Dispatch Console
 - See* IDC
- IP multicast address, guidelines for using with Cisco IPICS [2-36](#)
- IP Phone Text notification [6-6](#)

L

- languages
 - adding [8-9](#)
 - default language folder [8-8](#)
 - deleting [8-9](#)
 - for prompts [8-8](#)
 - for scripts [8-8](#)
 - naming requirement [8-8](#)
 - of TUI prompts [6-21](#)
 - renaming [8-9](#)
 - viewing list of [8-8](#)
- Languages window [8-8](#)
- latch
 - allow [3-12](#)
 - disable [3-12](#)
 - enable [3-12](#)
- LDAP
 - configuring [2-98](#)
 - general settings [2-98](#)

license

- described [2-63](#)
- for policy engine [6-1](#)
- installed files [2-67](#)
- managing a Cisco IPICS [2-63](#)
- summary [2-64](#)
- time-bound, described [2-68](#)
- usage per ops view [2-66](#)

License dashboard

- elements [12-5](#)
- overview [12-5](#)

license file, uploading [2-68](#)

Linux user roles [1-8](#)

listen only

- in channel [2-12](#)
- in IDC tab [3-12](#)
- in radio [9-14](#)
- in user profile [4-6](#)

LMR gateway [1-5](#)

location

- adding [2-32](#)
- associations [2-28](#)
- deleting [2-33](#)
- described [2-27](#)
- multicast address [2-35, 2-38](#)
- of RMS [2-42, 2-53](#)
- predefined [2-27](#)
- radio [9-9](#)
- RMS [2-45](#)

summary of access types and connections [2-31](#)

UMS [2-56](#)

user [4-5](#)

viewing or editing [2-32](#)

locking, user account [3-27](#)

log files

downloading [12-12, 12-15](#)

IDC [3-10](#)

in RCS Logs window [12-13](#)

in System Logs window [12-9](#)

managing activity [2-71](#)

obtaining [3-11](#)

log in, disabling for Cisco IPICS service [D-2](#)

log out

forced

from IDC [2-69](#)

from mobile client [2-69](#)

from Administration Console [1-12](#)

offline client expiration [2-84](#)

logs, managing activity [2-71](#)

loopback

configuring [2-46](#)

creating [2-46](#)

disabling DS0 in [2-47](#)

DS0

destination [2-47](#)

source [2-47](#)

status [2-47](#)

dynamically allocated [6-2](#)

- enabling DS0 in [2-47](#)
- number [2-46](#)
- on RMS [2-43](#)
- removing [2-48](#)
- state [2-46](#)
- viewing information about [2-46](#)

M

managing

- activity log options per ops view [2-75](#)
- inactive VTGs [5-4](#)
- radio and tone descriptors [9-21](#)

mandatory update, for IDC [2-88](#)

maximum activity logs, setting described [2-78](#)

member, adding to user group [3-32](#)

merging RMS configuration [2-49](#)

message file, for external notification [B-3](#)

mobile client

- high availability, affect on [10-8](#)
- logout, forced [2-69](#)

multicast address

- adding address to multicast pool [2-36](#)
- adding a sequence of addresses to multicast pool [2-36](#)
- address [2-37](#)
- address and port [2-35](#)
- assignment [2-36](#)
- channel [2-9](#)
- connection type [2-35, 2-38](#)

- conventions [2-9, 2-36, 2-37](#)

- deleting [2-38](#)

- editing information [2-37](#)

- guidelines [2-36](#)

- in multicast pool [2-33](#)

- location [2-35, 2-38](#)

- port [2-38](#)

- recommended range [2-36](#)

- status [2-35, 2-38](#)

- used by [2-35, 2-38](#)

- viewing information [2-37](#)

multicast communications guidelines [2-36](#)

multicast domain [2-27](#)

multicast pool

- adding multicast address to [2-36](#)

- deleting multicast address from [2-38](#)

- described [2-33](#)

multi-purpose type policy

- actions in [6-5, 6-8](#)

- activating [6-16](#)

- adding [6-8](#)

- described [6-4](#)

- trigger [6-12](#)

- updating [6-8](#)

mute

- Cisco Unified IP Phone [3-10](#)

- dial-in phone [3-10](#)

- end device [3-10](#)

- IDC [3-10](#)

client [3-10](#)

user in VTG [5-15](#)

My Profile window, described [1-11](#)

N

name

of user [3-5, 3-7](#)

of user group [3-34](#)

New Users window [3-4](#)

notification

action [6-5](#)

alert [6-7](#)

configuring [6-9](#)

Dial [6-7](#)

Dial Engine Script [6-7](#)

e-mail

action [6-6](#)

system event [C-1](#)

external, *See* external notification

IP Phone Text [6-6](#)

overview [6-6](#)

system event [C-1](#)

Talk Group [6-7](#)

notification preferences

configuring [3-14](#)

described [3-14, 4-7](#)

notifying participants in an active VTG [5-19](#)

O

old digit password, changing [4-4](#)

online help, accessing [1-14](#)

operational, RMS status [2-43](#)

Operational Views

See ops views

operator role

described [1-7, 3-8](#)

responsibilities [3-1](#)

restricting assignments [2-79](#)

ops view administrator role, described [1-7, 3-8](#)

ops views

accessible to [7-5](#)

affecting VTGs [7-10](#)

allocating dial ports, described [7-18](#)

assigning a dial number (DN) [7-13](#)

assigning to user [7-20](#)

associated [3-25](#)

associating

channel groups with [2-26, 7-20](#)

channels with [7-20](#)

to channels [2-16](#)

user group with [3-33](#)

user with [3-25](#)

available [3-25](#)

belongs to [7-4](#)

benefits [7-4](#)

caveats [7-7](#)

- channels [7-20](#)
- creating [7-3](#)
- determining dial port allocation [7-19](#)
- dial-in numbers [7-13](#)
- dial port pools [7-18](#)
- overview [7-1](#)
- resources [7-4](#)
- system [7-1](#)
- to which user belongs [3-24](#)
- to which user group belongs [3-33](#)
- understanding VTGs [7-8](#)
- user roles [7-6](#)
- viewing
 - details [7-16](#)
 - resources [7-15](#)

Ops View to User Association window [3-25](#)

Options window [2-77](#)

order, of dial preferences [3-17](#)

OUT_OF_SERVICE [8-2](#)

P

pager, notification preference [3-14](#), [4-7](#)

PARTIAL_SERVICE [8-2](#)

participant

- adding to VTG [5-13](#)
- in VTG [5-13](#)
- removing from VTG [5-13](#)

password

Apply User Account Lockout setting [2-82](#)

Apply User Password Expiration
setting [2-81](#)

changing [4-3](#)

expiration date [3-7](#)

Failed Password Attempt Expiration Hours
setting [2-83](#)

Maximum Invalid Login Attempts Allowed
setting [2-83](#)

Minimum Digit Password Length
setting [2-80](#)

Minimum Lower Case Letter Count
setting [2-80](#)

Minimum Numeric Character Count
setting [2-80](#)

Minimum Password Length setting [2-79](#)

Minimum Special Character Count
setting [2-81](#)

Minimum Upper Case Letter Count
setting [2-80](#)

Password Expiration Notification
setting [2-82](#)

Password Expiration setting [2-81](#)

Password History Count setting [2-81](#)

RMS [2-45](#)

user [3-5](#), [3-7](#)

patch secure channels

end device for users [3-12](#)

IPICS options [2-86](#)

user profile [4-6](#)

- phone
 - associated [3-20](#)
 - associating user with [3-19](#)
 - available [3-20](#)
- Phone Associations window [3-20](#)
- phone service [D-1](#)
- PIN, digit password
 - defined [3-10](#)
 - in user profile [4-5](#)
- Policies window
 - described [6-3](#)
 - displaying [6-3](#)
- policy
 - action, *See* action
 - activating [6-16](#)
 - adding [6-4](#)
 - associated [3-21](#)
 - associating user with [3-20, 6-15](#)
 - available [3-21](#)
 - definition [6-1](#)
 - deleting [6-16](#)
 - deleting action from [6-12](#)
 - deleting trigger from [6-14](#)
 - executed [6-17](#)
 - executing [6-17](#)
 - failover, affect on [10-8](#)
 - invitation type
 - actions in [6-5](#)
 - adding [6-11](#)
 - described [6-4](#)
 - updating [6-11](#)
 - multi-purpose type
 - actions in [6-5](#)
 - adding [6-8](#)
 - described [6-4](#)
 - updating [6-8](#)
 - ops view guidelines [6-4](#)
 - reactivating [6-19](#)
 - scheduled [6-18](#)
 - system resources for [6-4](#)
 - trigger [6-12](#)
 - type [6-5](#)
 - viewing information about [6-17, 6-18](#)
- Policy Associations window [3-21](#)
- policy engine
 - license requirement [6-1](#)
 - Policies window [6-3](#)
 - policy, *See* policy [6-1](#)
 - roles that can access [8-1](#)
 - SIP provider [8-32](#)
 - tracing [8-3](#)
- Policy Management drawer, accessing [6-1](#)
- pop-up windows [1-10](#)
- port
 - channel [2-9](#)
 - conventions [2-9, 2-37, 2-38](#)
 - multicast address [2-38](#)
- preferences, system, setting in Options window [2-77](#)

primary server

description [10-1](#)*See also* high availability (HA)

prompts

customized script, *See* customized script promptsdescribed [8-1](#)

languages

See also languagelanguages, about [8-8](#)managing [8-7](#)repository [8-8](#)spoken name, *See* spoken name promptsstandard script, *See* standard script prompts

PTT channel

See channel

PTT channel group

See channel group

R

radio

adding

to system [9-8](#)to VTG template [5-5](#)Allow association to users, check box described [9-10](#)allow latch, described [9-13](#)Allow use in VTGs, check box described [9-11](#)

associating

signals with channels [2-18](#)user with [3-22](#)with user from Radios window [9-15](#)channel [9-2](#)codec field described [9-9](#)control functions [3-24](#)default tone sequences [9-6](#)deleting [9-18](#)description, field described [9-9](#)descriptor file, described [9-22](#)designating permissions for [3-23](#)editing information [9-14](#)enabling or disabling [9-17](#)frequency channels, described [9-4](#)hangover time, field described [9-10](#)IDC caveats when configuring tone sequences [9-34](#)listen only, field described [9-14](#)location, field described [9-9](#)

managing

descriptors [9-21](#)overview [9-2](#)multicast address, field described [9-9](#)multicast port, field described [9-9](#)name, field described [9-8](#)overview [9-1](#)Pooled Resource, field described [9-9](#)radio color, field described [9-14](#)region, field described [9-14](#)

- removing [9-18](#)
- RX mute during PTT, field described [9-13](#)
- search for in VTG window [5-24](#)
- secure radio, field described [9-9](#)
- tone and signaling sequences, described [9-22](#)
- tone descriptors, described [9-21](#)
- type, field described [9-8](#)
- viewing information [9-14](#)
- voice delay, field described [9-10](#)
- radio channel
 - managing [9-2](#)
 - See also* radio
- radio color, field described [9-14](#)
- radio control service
 - See* RCS
- radio descriptors [9-22](#)
 - deleting [9-38](#)
 - described [9-22](#)
 - format example [9-23](#)
 - IDC operation caveats [9-34](#)
 - managing [9-21](#)
 - updating [9-37](#)
- radio preferences [3-14, 4-7](#)
- rcs.log
 - file [12-15](#)
- rcs.log, downloading [12-15](#)
- RCS logs
 - downloading [12-15](#)
 - entry types [12-13](#)
 - overview [12-13](#)
 - viewing [12-13](#)
- RCS Logs window
 - described [12-13](#)
 - log entry types [12-13](#)
- reactivate
 - action [6-19](#)
 - policy [6-19](#)
 - VTG [5-22](#)
- recipient list
 - for external notification [B-2](#)
 - format [B-2](#)
- recommended update, for IDC [2-88](#)
- recording, spoken names prompts [8-18](#)
- recovering, system administrator [3-28](#)
- recurrence, of trigger [6-14](#)
- redundant server [10-2](#)
- refreshing, Administration Console [1-10](#)
- regions
 - adding [2-96](#)
 - deleting [2-97](#)
 - viewing or editing [2-97](#)
- removing
 - channel [2-20](#)
 - channel from channel group [2-25](#)
 - channel group [2-27](#)
 - incident [2-63](#)
 - radio [9-18](#)
 - RMS [2-48](#)

- UMS [2-57](#)
- user [3-28](#)
- user group [3-35](#)
- VTG [5-11](#)
- repository [8-8, 8-21](#)
- required information, in Cisco IPICS
- windows [1-9, 1-12](#)
- rerecording, spoken names prompts [8-18](#)
- restoring a backed-up database [11-9](#)
- Restrict Operator Role assignments, setting described [2-79](#)
- retention period [2-78](#)
- RMS
 - activating [2-41, 2-44](#)
 - adding [2-45](#)
 - calculating DSPs [A-12](#)
 - configuration, merging [2-49](#)
 - configuring
 - managing [2-49](#)
 - security features [A-1](#)
 - T1/E1 controllers, interfaces, and voice parameters [A-7](#)
 - connectivity guidelines [A-4](#)
 - controllers [2-43](#)
 - deactivated status [2-43, 2-44](#)
 - deactivating [2-41, 2-44](#)
 - deleting [2-48](#)
 - described [1-5](#)
 - ds0 groups [A-4](#)
 - dspfarm configuration [A-12](#)
 - E1 timeslots [A-5](#)
 - editing information [2-41](#)
 - host name [2-43](#)
 - IP address [2-43](#)
 - IP address selection
 - Ethernet interface [A-6](#)
 - guidelines [A-6](#)
 - Loopback0 interface [A-6](#)
 - Vif1 interface [A-6](#)
 - location [2-42](#)
 - loopback [2-43](#)
 - managing
 - configuration [2-49](#)
 - overview [2-39](#)
 - merging configuration [2-49](#)
 - name [2-42](#)
 - operational status [2-43](#)
 - removing [2-48](#)
 - security features [A-1](#)
 - status [2-43](#)
 - status of routers in RMS window [2-40](#)
 - stopping
 - state [2-44](#)
 - status [2-43](#)
 - T1 timeslots [A-4](#)
 - unconfigured status [2-43](#)
 - unreachable status [2-43](#)
 - updating
 - configuration [2-49](#)

- information in Cisco IPICS [2-49](#)
 - viewing information [2-42](#)
- RMS/UMS dashboard
 - overview [12-6](#)
- RMS dashboard
 - elements [12-6](#)
- RMS polling frequency, setting interval [2-77](#)
- role
 - all [1-7, 3-8](#)
 - assigning [3-8](#)
 - changing [3-8](#)
 - Cisco IPICS [1-7](#)
 - described [3-8](#)
 - dispatcher [1-7, 3-8, 5-1](#)
 - Linux user [1-8](#)
 - operator [1-7, 3-1, 3-8](#)
 - ops view administrator [1-7, 3-8](#)
 - system administrator [1-7, 2-1, 3-8](#)
 - user [1-7, 4-1](#)
- roles, field described [4-3](#)
- router
 - See* RMS
- router media service
 - See* RMS
- RX mute during PTT
 - on channel [2-11](#)
 - on radio [9-13](#)

S

- scheduled policy, information about [6-18](#)
- scripts
 - adding [8-22](#)
 - BulkNotifyDialer [8-21](#)
 - changing information about [8-22](#)
 - deleting [8-23](#)
 - described [8-1](#)
 - dial engine [8-21](#)
 - IppeDialin [8-21](#)
 - IppeDialout [8-21](#)
 - IppeRecording [8-21](#)
 - languages [8-8](#)
 - managing [8-21](#)
 - repository [8-21](#)
 - system [8-21](#)
 - viewing information about [8-22](#)
 - viewing list of [8-21](#)
- searching in Virtual Talk Groups window [5-23](#)
- secondary server
 - description [10-1](#)
 - high availability license on [2-64](#)
 - See also* high availability (HA)
- secure channel patch
 - end device for users [3-12](#)
 - IPICS options [2-86](#)
 - user profile [4-6](#)
- secure radio [9-9](#)

- Serial Radio Control Interface (SRCI)
 - accessing [9-18](#)
 - channel selectors [9-20](#)
 - IPICS Connect [9-20](#)
 - overview [9-3](#)
 - radio display and controls [9-19](#)
 - radio information [9-18](#)
- server, Cisco IPICS [1-4](#)
- server logs, viewing [12-9, 12-13](#)
- server time, synchronizing for high availability [10-8](#)
- server usage guidelines [1-9](#)
- Serviceability drawer, overview [12-1](#)
- services, obtaining information about [8-2](#)
- session initiation protocol (SIP), documentation [1-xxii](#)
- setting up Cisco IPICS [1-1](#)
- short message service (SMS), notification preference [3-14, 4-7](#)
- short name for channel, field described [2-6](#)
- SHUTDOWN [8-2](#)
- SIP, configuring for Policy Engine [8-24](#)
- SIP provider
 - Cisco IOS [8-35](#)
 - Cisco Unified Communications Manager [8-32](#)
 - Cisco Unified Communications Manager Express [8-35](#)
 - configuring for Cisco IPICS [8-32](#)
 - described [8-32](#)
- software components, of Cisco IPICS [1-3](#)
- specifying order [3-18, 4-10, 4-12](#)
- split brain scenario
 - definition [10-3](#)
 - resolving [10-10](#)
- spoken names prompts
 - changing information about [8-20](#)
 - deleting [8-20](#)
 - described [8-14](#)
 - downloading [8-17](#)
 - for user [3-25](#)
 - recording [8-18](#)
 - replacing .wav file [8-18](#)
 - rerecording [8-18](#)
 - uploading [8-16](#)
 - viewing list of [8-15](#)
- Spoken Names window [8-15](#)
- SSL certificate, creating on Cisco IPICS server [E-1](#)
- standard script prompts
 - described [8-10](#)
 - uploading [8-11](#)
 - viewing list of [8-10](#)
- Standard Script Prompts window [8-10](#)
- standby server
 - description [10-1](#)
 - See also* high availability (HA)
- status
 - channel [2-7](#)
 - DS0 [2-47](#)
 - multicast address [2-35, 2-38](#)

Status Details window [8-2](#)

stopping, RMS status in RMS window [2-43](#)

sub-VTG [5-5](#)

system administrator role

- described [1-7, 2-1, 3-8](#)
- responsibilities [2-1](#)

System dashboard, overview [12-2](#)

system event e-mail notifications [C-1](#)

system logs

- downloading [12-12, 12-15](#)
- entry types [12-10](#)
- overview [12-10](#)
- viewing [12-9](#)

System Logs window

- described [12-1, 12-9](#)
- log entry types [12-10](#)

system preferences, setting in Options window [2-77](#)

system status

- monitoring [12-9, 12-13](#)

T

T1/E1 controller configuration [A-4](#)

T1 timeslots [A-4](#)

tab

- Address Information [3-7](#)
- Associations [3-12](#)
- Dial Login [3-9](#)
- General Information [3-7, 3-9](#)

IDC [3-12](#)

Talk Group notification [6-7](#)

telephony user interface

- See* TUI

text to speech

- See* TTS [8-28](#)

time out, period for Administration Console [1-14](#)

tone broadcast wave files

- See* alert tones

tone descriptor files, for radios [9-21](#)

tone descriptors

- adding [9-36](#)
- deleting [9-38](#)
- described [9-21](#)
- IDC operation caveats [9-34](#)
- updating [9-37](#)

tone sequences

- description field, described [9-5](#)
- enabled state check box [9-5](#)
- label [9-5](#)
- momentary control [9-5](#)
- stateful control [9-5](#)

tone sequences, described [9-21](#)

trace

- advanced activities [8-6](#)
- cluster view daemon [8-3](#)
- configuring, trace files

 - number [8-4](#)
 - size [8-4](#)

- debug [8-3](#)
- default levels [8-5, 8-6](#)
- described [8-3](#)
- dial engine [8-3](#)
- dump
 - memory trace [8-6](#)
 - threads trace [8-6](#)
- facilities [8-3, 8-5](#)
- files [8-3](#)
- interpreting trace files [8-7](#)
- levels [8-3, 8-4](#)
- maximum size of all trace files on systems [8-4](#)
- obtaining trace files [8-7](#)
- recommendations for [8-3](#)
- XDebug (extended debug) [8-3](#)
- TRACE-level error messages [12-10, 12-13](#)
- transaction log [10-14](#)
- trigger
 - adding [6-13](#)
 - definition [6-1](#)
 - deleting [6-14](#)
 - overview [6-12](#)
 - recurrence [6-14](#)
 - updating [6-13](#)
 - viewing [6-13](#)
- TTS
 - configuring [8-28](#)
 - overview [8-28](#)

- TUI (telephony user interface)
 - accessing [6-21](#)
 - activities [6-20](#)
 - described [6-20](#)
 - dial-in floor [6-22](#)
 - dial login for [3-9](#)
 - digit ID [3-10](#)
 - guidelines
 - general [6-21](#)
 - menu [6-22](#)
 - logging in [6-21](#)
 - PIN [3-10](#)
 - speaking [6-22](#)
- type, channel connection [2-8](#)

U

- UMS
 - adding [2-56](#)
 - deleting [2-57](#)
 - described [1-5](#)
 - disabled status [2-55](#)
 - disabling [2-55](#)
 - editing information [2-52](#)
 - Enabled status [2-55](#)
 - enabling [2-55](#)
 - high availability [2-53](#)
 - IP Address [2-52](#)
 - location [2-53](#)

- managing
 - overview [2-50](#)
 - name [2-52](#)
 - removing [2-57](#)
 - status of [2-50](#)
 - viewing information [2-52](#)
- unconfigured, RMS status [2-43](#)
- understanding [7-18](#)
 - Activity Log Management window [2-72](#)
 - Channels window [2-3](#)
 - Descriptors window [9-35](#)
 - IDC Regions window [2-95](#)
 - Incidents window [2-59](#)
 - Ops View window [7-2](#)
 - Radios window [9-7](#)
 - RMS window [2-39](#)
 - UMS window [2-50](#)
 - Virtual Talk Groups window [5-2](#)
- unified media service
 - See* UMS
- unlocking a user account [3-27](#)
- unmute
 - Cisco Unified IP Phone [3-10](#)
 - dial-in phone [3-10](#)
 - end device [3-10](#)
 - IDC [3-10](#)
- unmuting IDC user in a VTG [5-15](#)
- unreachable, RMS status [2-43](#)
- updating
 - descriptors [9-37](#)
 - radio and tone descriptors [9-37](#)
 - RMS configuration [2-49](#)
- uploading
 - IDC versions [2-88](#)
 - license file [2-68](#)
 - standard script prompts [8-11](#)
- used by field, for multicast address [2-35](#)
- user
 - adding
 - dial preferences in user profile [4-11](#)
 - IDC preference in user profile [4-10](#)
 - notification preferences in user profile [4-8](#)
 - radio preferences in user profile [4-9](#)
 - to system [3-4](#)
 - to VTG template [5-5](#)
 - address
 - information [3-7](#)
 - street [3-8](#)
 - associating
 - ops views with [3-25](#)
 - phone with [3-19](#)
 - policy with [3-20, 6-15](#)
 - PTT channels with [3-18](#)
 - radios with [3-22](#)
 - to PTT channels [2-17](#)
 - associating radios with, from Radios window [9-15](#)

- changing information in user profile [4-2](#)
- channel association [4-13](#)
- copying [3-4](#)
- default location [3-10](#)
- deleting
 - dial preferences in user profile [4-11](#)
 - from system [3-28](#)
 - notification preferences in user profile [4-8](#)
 - radio preferences in user profile [4-9](#)
- described [3-1](#)
- dial preferences [4-12](#)
- digit ID [3-10](#)
- digit password (PIN) field [3-10](#), [4-5](#)
- disabled [3-27](#)
- downloading IDC [4-16](#)
- editing
 - dial preferences in user profile [4-11](#)
 - IDC dial preference in user profile [4-10](#)
 - notification preferences in user profile [4-8](#)
 - radio preferences in user profile [4-9](#)
- enabled [3-27](#)
- general information [3-6](#)
- in inactive VTG [5-5](#)
- list of VTGs in which is a participant [3-26](#)
- locking account [3-27](#)
- managing
 - associations [4-12](#)
 - communications preferences [4-7](#)
 - profile [4-2](#)
 - name [3-5](#), [3-7](#)
 - ops view for [3-24](#)
 - order
 - of dial preferences [4-12](#)
 - of radio preferences [3-18](#), [4-10](#)
 - password [3-7](#)
 - PIN [3-10](#)
 - radio preferences [3-18](#), [4-10](#)
 - recovering deleted system administrator [3-28](#)
 - removing [3-28](#)
 - search for in VTG window [5-24](#)
 - status [3-27](#)
 - unlocking account [3-27](#)
 - updating IDC dialer preferences in user profile [4-10](#)
 - viewing
 - associations [4-15](#)
 - dial preferences [4-11](#)
 - IDC dialer preferences [4-10](#)
 - notification preferences [4-8](#)
 - radio preferences [4-9](#)
- user associations
 - Channels tab, described [4-13](#)
 - Incidents tab, described [4-14](#)
 - Phones tab, described [4-14](#)
 - Policies tab, described [4-15](#)
 - Radios tab, described [4-13](#)

- Virtual Talk Groups tab, described [4-14](#)
- User dashboard
 - elements [12-4](#)
 - overview [12-4](#)
- User Details window
 - activities [1-12](#)
 - enabling or disabling latch for IDC user [5-17](#)
- user group
 - adding
 - members to [3-32](#)
 - new [3-31](#)
 - to VTG template [5-5](#)
 - associating ops views with [3-33](#)
 - changing name of [3-34](#)
 - deleting [3-35](#)
 - described [3-1, 3-29](#)
 - list of VTGs in which is a participant [3-34](#)
 - naming recommendation [3-31](#)
 - ops view for [3-33](#)
 - removing [3-35](#)
- User Groups window
 - accessing [3-29](#)
 - described [3-29](#)
- User Management drawer, accessing [3-1](#)
- user name of RMS field, described [2-43](#)
- user profile
 - account status field, described [4-3](#)
 - address field, described [4-4](#)
 - belongs to field, described [4-3](#)
 - confirm password field, described [4-3](#)
 - default location [4-5](#)
 - described [4-2](#)
 - dial preferences field, described [4-7](#)
 - digit ID field, described [4-4](#)
 - first name field, described [4-2](#)
 - IDC info field, described [4-6](#)
 - IPICS status field, described [4-3](#)
 - last name field, described [4-2](#)
 - new password field, described [4-3](#)
 - notification preferences field, described [4-6](#)
 - old digit password field, described [4-4](#)
 - old password field, described [4-3](#)
 - password expiration date field, described [4-3](#)
 - roles field, described [4-3](#)
 - user name field, described [4-2](#)
- User Radio Permissions window [3-23, 3-24](#)
- user role
 - described [1-7](#)
 - responsibilities [4-1](#)
- users
 - phone associations [4-14](#)
 - policy associations [4-15](#)
 - radio associations [4-13](#)
 - VTG associations [4-14](#)
- Users window
 - accessing [3-2](#)
 - described [3-2](#)

V

video size, maximum [2-84](#)

viewing

activity logs [2-73](#)

and downloading archived activity logs [2-74](#)

and editing user associations, My Associations window [4-2](#)

channel associations [2-19](#)

IDC

alert tone sets [2-92](#)

regions [2-97](#)

ops view resources [7-15](#)

or editing locations [2-32](#)

user associations [4-15](#)

virtual talk group

See VTG

Virtual Talk Group dashboard

elements [12-4](#)

overview [12-4](#)

voice activity detection

enable field [2-12](#)

enabling on IDC [5-7, 5-9](#)

voice delay [9-10](#)

VTG

activating [5-12](#)

active [5-2, 5-11](#)

adding

channel [5-5](#)

channel group [5-5](#)

new [5-6](#)

participants [5-13](#)

radio [5-5](#)

to VTG template [5-5](#)

user [5-5](#)

user group [5-5](#)

VTG [5-5](#)

best practices [5-25](#)

changing the status of [5-12](#)

channel in inactive [5-5](#)

Cisco Unified IP Phone user in [5-14](#)

deactivating [5-13](#)

deleting [5-11](#)

dialing out to participants in active [5-19](#)

disabling

IDC attributes in active [5-19](#)

latch in User Details window [5-17](#)

empty [5-5](#)

enabling

IDC attributes in active [5-19](#)

latch in User Details window [5-17](#)

guidelines for managing

active [5-11](#)

inactive [5-5](#)

IDC user in [5-14](#)

inactive [5-2](#)

incident [2-58](#)

in which user group is participating [3-34](#)

list in which user is participating [3-26](#)

managing [5-2](#)

 active [5-11](#)

 inactive [5-4](#)

modifying [5-9](#)

multicast address used by [2-33](#)

muting an IDC user [5-15](#)

non-secure channel in [5-5](#)

notifying participants in active [5-19](#)

participant in itself [5-5](#)

participants [5-13](#)

reactivating [5-22](#)

removing

 from system [5-11](#)

 participants [5-13](#)

search for in VTG window [5-24](#)

secure channel in [5-5](#)

seeing as user on Cisco Unified IP
Phone [D-6](#)

sub-VTG [5-5](#)

unavailable channel [5-22](#)

unmuting an IDC user [5-15](#)

user in inactive [5-5](#)

VTG add participants action [6-6, 6-10](#)

VTG search utility, using [5-23](#)

X

X, in Activate VTG Details area [5-22](#)

Xdebug (extended debug) trace level [8-3](#)

W

WARN-level error messages [12-10, 12-13](#)

