

A

account lockout 2-10 Activate Incident VTG button 3-86 Activate VTG button 3-80 activating incident VTG 3-86 policy 3-139 VTG 3-80 Add a Channel pop-up window 3-105 Add a Radio pop-up window 3-111 Add a User pop-up window 3-107 Add a VTG pop-up window 3-109 Add Camera pop-up window 3-117 Add Contact window 3-150 Add Image pop-up window 3-113 adding camera to Cisco IPICS 3-120 camera to incident 3-117 channel to incident 3-105 channel to VTG 3-105 image to incident 3-113 incident 3-137 incident resource 3-89

ΙΝΟΕΧ

radio to incident 3-111 radio to VTG 3-111 resource to incident 3-105 resource to VTG 3-105 user to incident 3-107 user to VTG 3-107 video to incident 3-115 VTG 3-135 VTG resource 3-83 VTG to incident 3-109 VTG to VTG 3-109 Address Book window 3-147 accessing 3-6 Add Video pop-up window 3-115 Add VSOM Camera window 3-120 Admin Console 3-6 alert configured tones for 3-171 from IPICS Connect 3-45, 3-72 message 3-186 alert icon 3-8 Alert pop-up window 3-186 alert tone downloading 2-2

select channel for 3-14 select direct dial channel for 3-22 select incident for 3-33 select P25 channel for 3-19 select radio for 3-26 select resource for 3-170, 3-176 select VTG for 3-30 All Mute button 3-169 All role, IPICS Dispatch Console features available to 1-8 All Talk and Patch Controls area location 3-170 audio device for output 3-95 input devices 3-97 master controls 3-169 time received 3-178 volume 3-34, 3-129, 3-170 audio connections options 3-95 audio replay beep tone 3-33 channel 3-13 controls 3-33 description 3-33 direct dial channel 3-21 hiding controls 3-13, 3-18, 3-21, 3-25, 3-29, 3-32, 3-34 incident 3-32 P25 channel 3-18 radio 3-25

save audio 3-34 showing controls 3-13, 3-18, 3-21, 3-25, 3-29, 3-32 VTG 3-29 audio select channel 3-13, 3-22 incident 3-32 P25 channel 3-18 radio 3-25 resource 3-178 VTG 3-29

В

beep tone, in audio replay 3-33

С

call ending 3-154 placing 3-154 call alert, supplementary service 3-156 Call button 3-144 camera adding to Cisco IPICS 3-120 adding to incident 3-117 channel adding to incident 3-105

to VTG 3-105 audio replay 3-13 audio select 3-13, 3-22 icon 3-11 incidents participating in 3-13 latch **3-12** move 3-14 mute **3-13** name **3-11** patch 3-14, 3-179 powered on 3-11 PTT 3-12 receive indicator 3-14 secure 3-11 traffic 3-14 transmit indicator 3-14 Channel Details for P25 Channels tab description 3-73 displaying 3-19, 3-73 Cisco IPICS adding camera to 3-120 Cisco IPICS role, IPICS Dispatch Console features available to 1-8 **Cisco IPICS Server** accessing from IDC 3-6 Cisco IPICS server downloading installation program from 2-3 IP address of 3-105

Cisco Security Agent (CSA) 1-2 Cisco Video Surveillance Operations Manager (VSOM) 3-120 client PC audio devices on 3-97 description 1-2 guidelines 1-2 network interface card (NIC) 3-98 time on 3-155 connectivity, guidelines 2-9 contacts favorite 3-147, 3-149 global 3-147, 3-150 private 3-147, 3-150

D

dark theme 3-95 Deactivate Incident VTG button 3-86 Deactivate VTG button 3-80 deactivating incident VTG 3-86 VTG 3-80 Dial button, in VTG 3-80 dialer-channel audio 3-102 Dialer Patch Manager pop-up window 3-152 dial-out action, in VTG 3-80 Dial Pad and Channel Patch area access to 1-9 displaying 3-139

Cisco IPICS Dispatch Console User Guide

hiding 3-146 showing 3-146 direct connect number, for IPICS Connect 3-43, 3-70

direct dial channel

audio replay 3-21 icon 3-20 latch 3-21 move **3-22** mute **3-22** name 3-20 patch 3-22 powered on 3-20 PTT 3-21 receive indicator 3-22 traffic 3-22 transmit indicator 3-22 Dispatcher role, IPICS Dispatch Console features available to 1-8 downloading alert tone 2-2 **IPICS Dispatch Console** 2-3 DTMF button 3-171

Е

Edit Contact window 3-151 EF Johnson radio, radio details tab 3-47 emergency mode description 3-181 indications 3-182 IPICS Dispatch Console 3-181 P25 Fixed Station 3-59, 3-60 responding to from Cisco IPICS Dispatch Console 3-184 from SRCI 3-184 serial control radio 3-50, 3-76 encryption, for radio 3-38 EndtoEnd P25 3-14 Event Log window description 3-179 displaying 3-179

F

favorite contacts 3-147, 3-149 features, available to user 1-8 filtering incident resource 3-89 VTG resource 3-83

G

Gateway P25 **3-14** global contacts **3-147**, **3-150** group alias, for IPICS Connect **3-43**, **3-70**

Н

headset audible hum 2-14 audio settings for 2-14 connecting to client PC 2-14 type 2-13 USB DSP 2-12 hiding Dial Pad and Channel Patch area 3-146 Items Tabs area 3-132 Master Audio Controls area 3-169 P25 Supplementary Services area 3-155 PTT and Patch Controls area 3-170 System Information area 3-154 high availability (HA) description 1-10 operation 1-10 Hld button 3-144 hot keys, assigning 3-99

icon

channel 3-11 direct dial channel 3-20 incident 3-31 P25 channel 3-16 radio 3-23

VTG 3-27 IDC See IPICS Dispatch Console IDC.exe process 1-2 image adding to incident 3-113 in incident 3-87 uploading to Cisco IPICS server 3-122 viewing 3-87 incident active 1-9 adding camera to 3-117 image to 3-113 radio to 3-111 user to 3-107 video to 3-115 adding channel to 3-105 adding VTG to 3-109 audio replay 3-32 audio select 3-32 creating 3-137 description 1-9, 3-90 icon 3-31 inactive 1-9 journal 3-89 latch 3-31 move **3-32** mute 3-32

name 3-31 overview 1-9 patch **3-32** powered on 3-30 PTT 3-31 receive indicator 3-33 resource adding 3-89 filtering 3-89 removing 3-89 status 3-88 types **3-87** title 3-90 traffic 3-33 transmit indicator 3-33 Incident Details tab displaying 3-32, 3-84, 3-137 Incidents tab access to 1-6 items on 3-135 incident VTG activating 3-86 deactivating 3-86 description 1-9, 3-84 latch 3-86 listen only 3-87 RX mute 3-86 state 3-90 VAD 3-87

installation directories, required privileges 2-2 installation program, downloading 2-3 installing, IPICS Dispatch Console 2-4 **IPICS** Connect alert 3-45, 3-72 direct connect number 3-43, 3-70 group alias 3-43, 3-70 page 3-45, 3-72 **IPICS** Dispatch Console color theme **3-95** emergency mode 3-181 exiting 1-6 features available by user type 1-8 high availability (HA) 1-10 installation directories 2-2 guidelines 2-2 procedure 2-4 installation program 2-3 installation program, downloading 2-3 keep on top 3-104 license types **1-6** log files 2-8 logging in to 1-3 logging out of 1-6 Main window 3-2 menu bar 3-5 off-line mode 1-7, 3-7 on-line mode 1-7, 3-7

operating mode 1-7, 3-7 overview 1-1 Platinum user license 1-6 Region tab 3-8 Silver user license 1-6 starting 1-3 themes 3-94 uninstalling 2-6 version 3-7 Items Tabs area description 3-132 hiding 3-132 showing 3-132

J

journal adding to incident **3-85, 3-89** definition **3-89** entry **3-89** in incident **3-90**

K

Keep on Top check box **3-104** key assignments **3-99**

L

language, setting 2-6 last call transmit 3-178 latch channel 3-12 direct dial channel 3-21 incident 3-31 incident VTG 3-86 P25 channel 3-18 P25 Fixed Station 3-58 radio 3-24, 3-37, 3-40, 3-49, 3-75 resource 3-178 TETRA radio 3-66 VTG 3-28, 3-80 Latch button channel 3-12 direct dial channel 3-21 incident 3-31 P25 channel 3-18 P25 Fixed Station 3-58 radio 3-24, 3-37, 3-40, 3-49, 3-75 resource 3-178 TETRA radio 3-66 VTG 3-28 license Platinum 1-6 Silver 1-6 light theme 3-95

listen only incident VTG **3-87** VTG **3-80** log in, to IPICS Dispatch Console **1-3** log out, of IPICS Dispatch Console **1-6**

Μ

Main window 3-2 Master Audio Controls area hiding **3-169** location 3-169 showing 3-169 Master Volume slider 3-170 menu bar 3-5 microphone type **2-13** minimal mode description 3-6 exiting 3-6 monitor, P25 Fixed Station 3-61 monitor, radio 3-52 monitoring, radio 3-166 move incident 3-32 resource 3-9, 3-10, 3-174, 3-175 mute all 3-169 channel 3-13

direct dial channel 3-22 incident 3-32 P25 channel 3-19 radio 3-25 resource 3-178 VTG 3-29 Mute button channel 3-13 direct dial channel 3-22 global 3-169 incident 3-32 P25 channel 3-19 radio 3-25 resource 3-178 VTG 3-29

Ν

name incident 3-31 VTG 3-27 network interface card (NIC), selecting 3-98 network settings 3-98 network time protocol (NTP) server 1-2 Nextel radio, radio details tab 3-38 notification action, in VTG 3-79 Notify button 3-79

0

off-line mode **1-7, 3-7** on-line mode **1-7, 3-7**

Ρ

P25

call alert 3-156 radio check 3-158 radio detach 3-159 radio inhibit 3-161 radio uninhibit 3-167 radio unit monitor 3-166 short message 3-162 status query 3-164 P25 channel audio replay 3-18 audio select 3-18 channel details tab 3-73 EndtoEnd P25 3-14 Gateway P25 3-14 icon 3-16 incidents participating in 3-19 latch 3-18 move **3-19** mute 3-19 name **3-16** patch 3-19

powered on 3-14 PTT 3-17, 3-77 receive indicator 3-19 secure 3-16 status 3-78 talk group 3-14 transmit indicator 3-19 transmit mode 3-77 unit call 3-15 P25 Fixed Station emergency mode 3-59, 3-60 latch 3-58 monitor 3-61 PTT 3-61 receive indicator 3-58 releasing 3-58 repeater or talkaround (RTA) 3-60 reserving 3-58 scan 3-61 status 3-62 traffic **3-58** transmit indicator 3-58 transmit mode 3-59, 3-67 P25 Fixed Station, radio details tab 3-56 P25 Supplementary Services area hiding **3-155** location 3-155 showing 3-155 page, from IPICS Connect 3-45, 3-72

password expiration 2-10 patch incident 3-32 in Dial Pad and Channel Patch area 3-154 P25 channel 3-19 radio **3-26** resources 3-171 select channel for 3-14 select direct dial channel for 3-22 select incident for 3-33 select P25 channel for 3-19 select radio for 3-26 select resource for 3-170, 3-176 select VTG for 3-30 VTG 3-29 Patch button 3-171 Platinum user license 1-6 Policies tab 3-138 policy activating 3-139 alert message 3-186 Policy Execution Status tab description 3-90 displaying 3-90 powered-off resource 3-9 powered-on channel 3-11 direct dial channel 3-20 incident 3-30

P25 channel 3-14 radio **3-22** resource 3-9 VTG 3-26 powering off, resource 3-174 powering on, resource 3-174 power level, radio 3-37, 3-50 primary Cisco IPICS server 1-10 private contacts 3-147, 3-150 PTT button 3-171 channel 3-12 direct dial channel 3-21 incident 3-31 P25 channel 3-17, 3-77 radio 3-24, 3-38, 3-41, 3-53, 3-68 resource 3-177 rP25 Fixed Station 3-61 select channel for 3-14 select direct dial channel for 3-22 select incident for 3-33 select P25 channel for 3-19 select radio for 3-26 select resource for 3-170, 3-176 select VTG for 3-30 VTG 3-28 PTT and Patch Controls area hiding **3-170** showing 3-170

PTT button **3-171** push-to-talk *See* PTT

R

radio adding to incident 3-111 to VTG 3-111 audio replay 3-25 audio select 3-25 icon 3-23 incidents participating in 3-25 latch 3-24, 3-37, 3-40, 3-49, 3-66, 3-75 monitoring 3-166 move 3-26 mute **3-25** name 3-23 P25 channel 3-19 patch 3-26 powered on 3-22 PTT 3-24 receive indicator 3-26 secure 3-23 serial control emergency mode 3-50, 3-76 monitor 3-52 power level 3-50

PTT 3-41, 3-53, 3-68 receive indicator 3-40, 3-49 releasing 3-40, 3-49 repeater or talkaround (RTA) 3-52 reserving 3-40, 3-49 scan 3-53 status 3-42, 3-54, 3-68 traffic 3-40, 3-49, 3-75 transmit indicator 3-40, 3-49 transmit mode **3-51** TETRA receive indicator **3-66** releasing 3-66 reserving 3-66 traffic 3-66 transmit indicator **3-66** tone control encryption 3-38 power level 3-37 PTT 3-38 receive indicator 3-36 traffic 3-36 transmit indicator 3-36 traffic 3-26 transmit indicator 3-26 radio check, supplementary service 3-158 radio detach, supplementary service 3-159 Radio Details for EF Johnson Radios tab description 3-47

displaying 3-47 Radio Details for Nextel Radios tab description 3-38 displaying 3-38 Radio Details for P25 Fixed Stations tab description 3-56 displaying 3-56 Radio Details for TETRA Radios tab description 3-64 displaying 3-64 Radio Details for Tone Control Radios tab description 3-35 displaying 3-35 Radio Details tab displaying 3-26 radio inhibit, supplementary service 3-161 radio uninhibit, supplementary service 3-167 radio unit monitor, supplementary service 3-166 receive indicator channel 3-14 direct dial channel 3-22 incident 3-33 P25 channel **3-19, 3-75** P25 Fixed Station 3-58 radio 3-26, 3-36, 3-40, 3-49 resource 3-175 TETRA radio 3-66 VTG 3-30 Records per Page field 3-104

region 3-9 **Regions** list collapsed region view 3-174 displaying 3-172 expanded region view 3-174 hiding 3-172, 3-174 moving resources 3-174, 3-175 showing 3-172, 3-174 Region tab 3-8 Release button 3-40, 3-49, 3-58, 3-66 releasing, fixed station radio 3-58 releasing, serial control radio 3-40, 3-49 releasing, TETRA radio 3-66 removing incident resource 3-89 VTG resource 3-83 repeater or talkaround (RTA), P25 Fixed Station 3-60 repeater or talkaround (RTA), radio 3-52 replay audio See audio replay Res button 3-144 Reserve button 3-40, 3-49, 3-58, 3-66 reserving, P25 Fixed Station 3-58 reserving, serial control radio 3-40, 3-49 reserving, TATRA radio 3-66 reserving, TETRA radio 3-66 resource adding to incident 3-105

to VTG 3-105 adding to incident 3-89 adding to VTG **3-83** audio select 3-178 channel 3-11 direct dial channel 3-20 icons 3-10 incident 3-30 in incident 3-87 in VTG 3-82 latch 3-178 move 3-10, 3-174, 3-175 mute 3-178 P25 channel 3-14 patching 3-171 power off 3-9 on 3-9 powering off 3-174 powering on 3-174 power on 3-9 PTT 3-177 radio 3-22 receive indicator 3-175 removing from incident 3-89 removing from VTG 3-83 transmit indicator 3-179 VTG 3-26 role

All **1-8** Dispatcher **1-8** RX mute incident VTG **3-86** VTG **3-80**

S

scan 3-53, 3-61 secondary Cisco IPICS server 1-10 secure channel 3-11 P25 channel 3-16 radio 3-23 select channel, for PTT, patch, alert tone 3-14 direct dial channel, for PTT, patch, alert tone 3-22 incident, for PTT, patch, alert tone 3-33 P25 channel, for PTT, patch, alert tone 3-19 radio, for PTT, patch, alert tone 3-26 resource, for PTT, patch, alert tone 3-170, 3-176 VTG, for PTT, patch, alert tone 3-30 Select check box channel 3-14 direct dial channel 3-22 incident 3-33 radio 3-19, 3-26

resource 3-176 VTG 3-30 Serial Radio Control Interface (SRCI) accessing 3-38, 3-47, 3-64 emergency mode 3-184 Server Address field 3-105 Settings tab audio connections options 3-95 description 3-92 dialer-channel audio options 3-102 displaying 3-92 key assignments options 3-99 miscellaneous options 3-104 network settings options 3-98 themes options 3-94 short message, supplementary service 3-162 showing Dial Pad and Channel Patch area 3-146 Items Tabs area 3-132 Master Audio Controls area 3-169 P25 Supplementary Services area 3-155 PTT and Patch Controls area 3-170 Regions list 3-172, 3-174 System Information area 3-154 Show Rx Times check box 3-104 Silver user license 1-6 starting, IPICS Dispatch Console 1-3 state, of IPICS Dispatch Console 1-7, 3-7 status

of incident resource 3-88 of VTG resource 3-82 P25 channel 3-78 P25 Fixed Station 3-62 serial control radio 3-42, 3-54, 3-68 status query, supplementary service 3-164 supplementary services call alert 3-156 P25 3-155 radio check 3-158 radio detach 3-159 radio inhibit 3-161 radio uninhibit 3-167 radio unit monitor 3-166 short message 3-162 status query 3-164 System Information area hiding 3-154 location 3-154 showing 3-154 system message 3-185 System Message pop-up window 3-185

Т

talk group P25 channel **3-14** TETRA radio, radio details tab **3-64** themes

dark 3-95 light 3-95 options 3-94 time, on client PC 3-155 time stamp, for audio received 3-178 tone control radio DTMF tones 3-171 Radio Details tab 3-35 traffic channel 3-14 direct dial channel 3-22 incident 3-33 P25 channel 3-19 radio 3-26, 3-36, 3-40, 3-49, 3-58, 3-66, 3-75 VTG 3-30 Transfer button 3-144 transmit indicator channel 3-14 direct dial channel 3-22 incident 3-33 P25 channel 3-19, 3-75 P25 Fixed Station 3-58 radio 3-26, 3-36, 3-40, 3-49 resource 3-179 TETRA radio 3-66 VTG 3-30 transmit mode P25 channel 3-77 P25 Fixed Station 3-59. 3-67

radio 3-51

U

uninstalling, IPICS Dispatch Console 2-6 unit call 3-15 Unmute button channel 3-13 direct dial channel 3-22 global 3-169 incident 3-32 P25 channel 3-19 radio **3-25** resource 3-178 VTG 3-29 Unpatch button 3-171 Upload Image pop-up window 3-122 uploading image to Cisco IPICS server 3-122 video to Cisco IPICS server 3-124 Upload Video pop-up window 3-124 USB DSP headset, using with IPICS Dispatch Console 2-12 user adding to incident 3-107 adding to VTG 3-107 user, features available to 1-8

V

VAD in incident VTG 3-87 in VTG 3-81 video adding to incident 3-115 in incident 3-87 type **3-115** uploading to Cisco IPICS server 3-124 viewing 3-87 YouTube 3-126, 3-129 VLC media player 1-2 Voice Activity Detection See VAD voice quality, guidelines 2-13 volume, audio 3-34, 3-129, 3-170 VTG 3-135 activating 3-80 adding channel to 3-105 radio to 3-111 to incident 3-109 to VTG 3-109 user to **3-107** VTG to 3-109 audio replay 3-29 audio select 3-29 creating 3-135

deactivating 3-80 description 3-83 dial-out 3-80 icon 3-27 latch 3-28, 3-80 listen only 3-80 move 3-30 mute 3-29 name 3-27 notification 3-79 patch 3-29 powered on 3-26 PTT 3-28 receive indicator 3-30 resource adding 3-83 filtering 3-83 removing 3-83 status 3-82 types 3-82 RX mute 3-80 state 3-83 title 3-83 traffic 3-30 transmit indicator 3-30 VAD 3-81 VTG Details tab displaying 3-29, 3-78, 3-135 features 3-78

VTGs tab

access to 1-6 items on 3-133

W

WaveEngine.exe process 1-2 WAVE Engine process description 2-7 status, determining 2-7 trusting 1-2 Wave Engine process status 3-155 Windows time service 1-2

Y

YouTube video source URL for 3-126 viewing 3-129



I

Index