



call application voice through call denial

- [call application voice, page 3](#)
- [call application voice access-method, page 8](#)
- [call application voice account-id-method, page 11](#)
- [call application voice authentication enable, page 14](#)
- [call application voice accounting-list, page 16](#)
- [call application voice accounting-template, page 18](#)
- [call application voice authen-list, page 21](#)
- [call application voice authen-method, page 23](#)
- [call application voice accounting enable, page 26](#)
- [call application voice default disc-prog-ind-at-connect, page 28](#)
- [call application voice dsn-script, page 30](#)
- [call application voice event-log, page 32](#)
- [call application voice fax-dtmf, page 34](#)
- [call application voice global-password, page 37](#)
- [call application voice language, page 39](#)
- [call application voice load, page 44](#)
- [call application voice mail-script, page 46](#)
- [call application voice mode, page 48](#)
- [call application voice pin-len, page 51](#)
- [call application voice prompt, page 55](#)
- [call application voice redirect-number, page 57](#)
- [call application voice retry-count, page 61](#)
- [call application voice security trusted, page 65](#)
- [call application voice set-location, page 68](#)

- [call application voice transfer mode, page 73](#)
- [call application voice transfer reroute-mode, page 76](#)
- [call application voice uid-length, page 79](#)
- [call application voice voice-dtmf, page 83](#)
- [call application voice warning-time, page 86](#)
- [call-block \(dial peer\), page 90](#)
- [call-denial, page 93](#)

call application voice

**Note**

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoice** command is replaced by the commands shown in the table below. See these commands for more information.

To define the name of a voice application and specify the location of the Tool Command Language (Tcl) or VoiceXML document to load for this application, use the **callapplicationvoice** command in global configuration mode. To remove the defined application and all configured parameters associated with it, use the **no** form of this command.

call application voice *application-name* [*location*] *av-pair*

no call application voice *application-name*

Syntax Description

<i>application-name</i>	Character string that defines the name of the voice application.
<i>location</i>	Location of the Tcl script or VoiceXML document in URL format. Valid storage locations are TFTP, FTP, HTTP, and flash memory.
<i>av-pair</i>	Text string that defines attribute-value (AV) pairs specified by the Tcl script and understood by the RADIUS server. Multiple AV pairs can be enclosed in quotes; up to 512 entries are supported.

Command Default

None

Command Modes

Global configuration (config)

Command History

Release	Modification
12.0(4)XH	This command was introduced.
12.0(7)T	This command was integrated into Cisco IOS Release 12.0(7)T. The <i>location</i> argument was added.
12.1(3)T	The <i>av-pair</i> argument was added for AV pairs.
12.1(5)T	This command was implemented on the Cisco AS5800.
12.1(5)XM2	This command was implemented on the Cisco AS5350 and Cisco AS5400.

Release	Modification
12.2(2)XB	This command was modified to support VoiceXML applications and HTTP server locations on the Cisco AS5300, Cisco AS5350, and Cisco AS5400.
12.2(2)XB1	This command was implemented on the Cisco AS5850.
12.2(4)T	This command was integrated into Cisco IOS Release 12.2(4)T and implemented on the Cisco 1750.
12.2(4)XM	This command was implemented on the Cisco 1751. Support for other Cisco platforms is not included in this release.
12.2(8)T	This command was integrated into Cisco IOS Release 12.2(8)T and implemented on the Cisco 2600 series, Cisco 3600 series, Cisco 3725, Cisco 3745, and Cisco 7200 series.
12.2(11)T	This command was implemented for VoiceXML applications. This command is supported on the Cisco AS5300, Cisco AS5350, Cisco AS5400, Cisco AS5800, and Cisco AS5850 in this release.
12.2(15)T	MCID AV-pairs were added for the <i>av-pair</i> argument; they are mcid-dtmf, mcid-release-timer, and mcid-retry-limit.
12.3(8)T	Support was added to allow up to 512 multiple AV pairs (enclosed in quotes) to be used in a single command.
12.3(14)T	This command was replaced. The callapplicationvoice command was replaced by the commands shown in the table below.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

The **callapplicationvoice** command was replaced by the commands shown in the table below.

Table 1: call application voice Command Replacements

Command	Command Mode	Purpose
application	Global configuration	Enters application configuration mode to configure voice applications and services.
service	Application configuration	Enters service configuration mode to configure a standalone application, such as a debit card script.

Command	Command Mode	Purpose
package	Application configuration	Use to load and configure a package. A package is a linkable set of C or Tcl functions that provide functionality invoked by applications or other packages.
param	Application parameter configuration	Use to configure parameters for services or packages.

Use this command when configuring interactive voice response (IVR) or one of the IVR-related features (such as Debit Card) to define the name of an application and to identify the location of the Tcl script or VoiceXML document associated with the application.

A voice application must be configured by using this command before the application can be configured with the **application** command in a dial peer.

Tcl scripts and VoiceXML documents can be stored in any of the following locations: on TFTP, FTP, or HTTP servers, in the flash memory of the gateway, or on the removable disks of the Cisco 3600 series. The audio files that they use can be stored in any of these locations, and on Real-Time Streaming Protocol (RTSP) servers.

HTTP is the recommended protocol for loading applications and audio prompts because of its efficient design for loading information over the web. For example, it has methods for determining how long a file can be cached and whether a cached file is still valid.

Include the file type extension in the filename (.vxml or .tcl) when specifying the document used by the application. Tcl files require the extension .tcl, and VoiceXML documents require .vxml.

**Note**

The **nocallapplicationvoice** command causes all related call application commands--for instance, **callapplicationvoicelanguage** and **callapplicationvoiceset-location**--to be deleted. The **nocallapplicationvoiceapplication-name** command removes the entire application and all parameters, if configured.

Examples

Effective with Cisco IOS Release 12.3(14)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice
Warning: This command has been deprecated. Please use the following:
      application
      service
      package
      param
```

The following example defines the fax-relay application and the TFTP server location of the associated Tcl script:

```
call application voice fax-relay tftp://keyer/faxrelay.tcl
```

The following example defines the application "prepaid" and the TFTP server location of the associated Tcl script:

```
call application voice prepaid tftp://keyer/debitcard.tcl
```

The following is an example of AV pair configuration:

```
set avsend(h323-ivr-out,)) "payphone:true"
set avsend(323-ivr-out,1) "creditTime:3400"
```

The AV pair (after the array is defined, as in the prior example) must be sent to the server using the authentication, authorization, and accounting (AAA) authenticate or AAA authorize verbs as follows:

```
aaa authenticate $account $password $avsend
```

The script would use this AV pair whenever it is needed to convey information to the RADIUS server that cannot be represented by the standard vendor-specific attributes (VSAs).

The following example shows how to define the VoiceXML application "vapptest1" and the flash memory location of the associated VoiceXML document "demo0.vxml":

```
call application voice vapptest1 flash:demo0.vxml
```

The following example specifies the MCID application name, the TFTP server location of the associated Tcl script, and the AV-pairs associated with the MCID application:

```
call application voice mcid tftp://keyer/app_mcid.2.0.0.40.tcl
call application voice mcid mcid-dtmf #99
call application voice mcid-retry-limit 3
call application voice mcid mcid-release-timer 90
```

Related Commands

Command	Description
application (dial peer)	Defines the call application in the dial peer.
application (global configuration)	Enters application configuration mode to configure applications.
call application voice language	Defines the language of the audio file for the designated application and passes that information to the application.
call application voice load	Reloads the designated Tcl script or VoiceXML document.
call application voice pin-len	Defines the number of characters in the PIN for the application and passes that information to the application.
call application voice redirect-number	Defines the telephone number to which a call is redirected for the designated application.
call application voice retry-count	Defines the number of times a caller is permitted to reenter the PIN for a designated application and passes that information to the application.

Command	Description
call application voice security trusted	Sets the security level of a VoiceXML application to trusted so that ANI is not blocked.
call application voice set-location	Defines the location, language, and category of the audio files for the designated application and passes that information to the application.
call application voice uid-len	Defines the number of characters in the UID for the designated application and passes that information to the application.
call application voice warning-time	Defines, in seconds, how long in advance a user is warned before the allowed calling time expires for the designated application.
package	Enters application parameter configuration mode to load and configure a package.
param	Loads and configures parameters in a package or a service (application) on the gateway.
service	Loads and configures a specific, standalone application on a dial peer.
show call application voice	Displays information about voice applications.

call application voice access-method



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceaccess-method** command was replaced by the **paramaccess-method** command in application parameter configuration mode. See the **paramaccess-method** command for more information.

To specify the access method for two-stage dialing for the designated application, use the **callapplicationvoiceaccess-method** command in global configuration mode. To restore default values for this command, use the **no** form of this command.

call application voice *application-name* **access-method** {**prompt-user**|**redialer**}

no call application voice *application-name* **access-method**

Syntax Description

<i>application-name</i>	Name of the application.
prompt-user	Specifies that no DID is set in the incoming POTS dial peer and that a Tcl script in the incoming POTS dial peer is used for two-stage dialing.
redialer	Specifies that no DID is set in the incoming POTS dial peer and that the redialer device are used for two-stage dialing.

Command Default

Prompt-user (when DID is not set in the dial peer)

Command Modes

Global configuration (config)

Command History

Release	Modification
12.1(3)XI	This command was introduced on the Cisco AS5300.
12.1(5)T	This command was integrated into the Cisco IOS Release 12.1(5)T.
12.2(4)T	This command was introduced on the Cisco 1750.
12.3(14)T	This command was replaced by the paramaccess-method command in application parameter configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

Use the **call application voice access-method** command to specify the access method for two-stage dialing when DID is disabled in the POTS dial peer.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice access-method
Warning: This command has been deprecated. Please use the following:
param access-method
```

The following example specifies prompt-user as the access method for two-stage dialing for the app_libretto_onramp9 IVR application:

```
call application voice app_libretto_onramp9 access-method prompt-user
```

Related Commands

Command	Description
call application voice	Loads a specified application onto the router from the TFTP server and gives it an application name by which it is known on the router.
call application voice language	Defines the language of the audio file for the designated application and passes that information to the application.
call application voice load	Reloads the designated Tcl script.
call application voice pin len	Defines the number of characters in the PIN for the application and passes that information to the application.
call application voice redirect number	Defines the telephone number to which a call is redirected--for example, the operator telephone number of the service provider--for the designated application.
call application voice retry count	Defines the number of times a caller is permitted to reenter the PIN for a designated application and passes that information to the application.
call application voice set location	Defines the location, language, and category of the audio files for the designated application and passes that information to the application.
call application voice uid len	Defines the number of characters in the UID for the designated application and passes that information to the application.

Command	Description
call application voice warning time	Defines, in seconds, how long in advance a user is warned before the allowed calling time expires for the designated application.
param access-method	Specifies the access method for two-stage dialing for the designated application.

call application voice account-id-method



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceaccount-id-method** command is replaced by the **paramaccount-id-method** command in application parameter configuration mode. See the **paramaccount-id-method** command for more information.

To configure the fax detection IVR application to use a particular method to assign the account identifier, use the **callapplicationvoiceaccountidmethod** command in global configuration mode. To remove configuration of this account identifier, use the **no** form of this command.

call application voice *application-name* **account-id-method** { **none** | **ani** | **dnis** | **gateway** }

no call application voice *application-name* **account-id-method**

Syntax Description

<i>application-name</i>	Name of the defined fax detection IVR application.
none	Account identifier is blank. This is the default.
ani	Account identifier is the calling party telephone number (automatic number identification, or ANI).
dnis	Account identifier is the dialed party telephone number (dialed number identification service, or DNIS).
gateway	Account identifier is a router-specific name derived from the hostname and domain name, displayed in the following format: router-name.domain-name.

Command Default

No default behavior or values.

Command Modes

Global configuration (config)

Command History

Release	Modification
12.1(5)XM	This command was introduced for the Cisco AS5300.
12.2(2)XB	This command was implemented on the Cisco AS5400 and Cisco AS5350.
12.2(8)T	This command was integrated into Cisco IOS Release 12.2(8)T and implemented on the Cisco 1751, Cisco 2600 series, Cisco 3600 series, Cisco 3725, and Cisco 3745.

Release	Modification
12.2(11)T	This command was implemented on the Cisco AS5300, the Cisco AS5350, and Cisco AS5400.
12.3(14)T	This command was replaced by the paramaccount-id-method command in application parameter configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

When an on-ramp application converts a fax into an e-mail, the e-mail contains a field called x-account-id, which can be used for accounting or authentication. The x-account-id field can contain information supplied as a result of this command, such as the calling party's telephone number (**ani**), the called party's telephone number (**dnis**), or the name of the gateway (**gateway**).

This command is not supported by Cisco IOS help; that is, if you type **the call application voice fax_detect account-id-method command and a question mark (?)**, the Cisco IOS help does not supply a list of entries that are valid in place of the question mark.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application fax_detect account-id-method gateway
Warning: This command has been deprecated. Please use the following:
param account-id-method
```

The following example sets the fax detection IVR application account identifier to the router-specific name derived from the hostname and domain name:

```
call application voice fax_detect account-id-method gateway
```

Related Commands

Command	Description
call application voice	Loads a specified IVR application onto the router from the TFTP server and gives it an application name by which it is known on the router.
call application voice fax dtmf	Configures the fax detection IVR application to recognize a specified digit that indicates a fax call in default-voice and default-fax modes.
call application voice mode	Configures the fax detection IVR application to operate in one of its four modes.
call application voice prompt	Configures the fax detection IVR application to use the specified audio file as a user prompt in listen-first mode, default-voice mode, or default-fax mode.

Command	Description
call application voice voice dtmf	Configures the fax detection IVR application to recognize a specified digit that indicate a voice call in default-voice and default-fax modes.
param account-id-method	Configures an application to use a particular method to assign the account identifier.

call application voice authentication enable



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceauthenticationenable** command is replaced by the **paramauthenticationenable** command in application configuration mode. See the **paramauthenticationenable** command for more information.

To enable authentication, authorization, and accounting (AAA) services for a Tool Command Language (TCL) application, use the **callapplicationvoiceauthenticationenable** command in global configuration mode. To disable authentication for a TCL application, use the **no** form of this command.

call application voice *application-name* **authentication enable**

no call application voice *application-name* **authentication enable**

Syntax Description

<i>application-name</i>	Name of the application.
-------------------------	--------------------------

Command Default

No default behavior or values

Command Modes

Global configuration (config)

Command History

Release	Modification
12.1(3)XI	This command was introduced on the Cisco AS5300.
12.1(5)T	This command was integrated into Cisco IOS Release 12.1(5)T.
12.2(4)T	This command was implemented on the Cisco 1750.
12.2(8)T	This command was implemented on the Cisco 1751, Cisco 2600 series, Cisco 3600 series, Cisco 3725, and Cisco 3745.
12.3(14)T	This command was replaced by the paramauthenticationenable command in application configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command enables AAA authentication services for a TCL application if a AAA authentication method list has been defined using both the **aaaauthentication** command and the **callapplicationvoiceauthen-list** command.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice authentication enable
Warning: This command has been deprecated. Please use the following:
param authentication enable
```

The following example enables a AAA authentication method list (called "sample") to be used with outbound store-and-forward fax.

```
call application voice app_eaample_onramp9 authen-list sample
call application voice app_example_onramp9 authentication enable
```

Related Commands

Command	Description
aaa authentication	Enables AAA accounting of requested services when you use RADIUS or TACACS+.
call application voice authen-list	Specifies the name of an authentication method list for a TCL application.
call application voice authen-method	Specifies the authentication method for a TCL application.

call application voice accounting-list



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceaccounting-list** command is replaced by the **paramaccounting-list** in application configuration mode. See the **paramaccounting-list** command for more information.

To define the name of the accounting method list to be used for authentication, authorization, and accounting (AAA) with store-and-forward fax on a voice feature card (VFC), use the **callapplicationvoiceaccountinglist** command in global configuration mode. To undefine the accounting method list, use the **no** form of this command.

call application voice *application-name* **accounting-list** *method-list-name*

no call application voice *application-name* **accounting-list** *method-list-name*

Syntax Description

<i>application-name</i>	Name of the application.
<i>method-list-name</i>	Character string used to name a list of accounting methods to be used with store-and-forward fax.

Command Default

No AAA accounting method list is defined

Command Modes

Global configuration (config)

Command History

Release	Modification
12.1(3)XI	This command was introduced on the Cisco AS5300.
12.1(5)T	This command was integrated into Cisco IOS Release 12.1(5)T.
12.2(4)T	This command was implemented on the Cisco 1750.
12.2(8)T	This command was implemented on the following platforms: Cisco 1751, Cisco 2600 series, Cisco 3600 series, Cisco 3725, and Cisco 3745.
12.3(14)T	This command was replaced by the paramaccounting-list in application configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command defines the name of the AAA accounting method list to be used with store-and-forward fax. The method list itself, which defines the type of accounting services provided for store-and-forward fax, is defined using the **aaaaccounting** command. Unlike standard AAA (in which each defined method list can be applied to specific interfaces and lines), the AAA accounting method lists that are used in store-and-forward fax are applied globally.

After the accounting method lists have been defined, they are enabled by using the **mmpipaaareceive-accountingenable** command.

This command applies to both on-ramp and off-ramp store-and-forward fax functions on VFCs. The command is not used on modem cards.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice accounting-list
Warning: This command has been deprecated. Please use the following:
      param accounting-list
```

The following example defines a AAA accounting method list "example" to be used with store-and-forward fax:

```
aaa new-model
call application voice app_libretto_onramp9 accounting-list example
```

Related Commands

Command	Description
aaa accounting	Enables AAA accounting of requested services when you use RADIUS or TACACS+.
call application voice accounting enable	Enables AAA accounting for a TCL application.
mmpip aaa receive-accounting enable	Enables on-ramp AAA accounting services.

call application voice accounting-template



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceaccounting-template** command is obsolete. Use the **callaccounting-template** command in application configuration mode to configure a voice accounting template.

To configure T.37 fax accounting with VoIP authentication, authorization, and accounting (AAA) nonblocking Application Programming Interface (API), use the **callapplicationvoiceaccountingtemplate** command in global configuration mode. To remove the defined application and all configured parameters associated with it, use the **no** form of this command.

call application voice *application-name* **accounting-template** *template-name*

no call application voice *application-name* **accounting-template** *template-name*

Syntax Description

<i>application-name</i>	<p>Defines the name of the T.37 voice application.</p> <ul style="list-style-type: none"> Use the callapplicationvoice command to define the name of a voice application and specify the location of the Tool Command Language (Tcl) or VoiceXML document to load for this application.
<i>template -name</i>	<p>Defines the name of the template.</p> <ul style="list-style-type: none"> Use the callaccounting-templatevoice command to define the template name.

Command Default

Disabled

Command Modes

Global configuration (config)

Command History

Release	Modification
12.3(1)	This command was introduced.
12.3(14)T	This command is obsolete. Use the callaccounting-template command in application configuration mode to configure a voice accounting template.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command enables T.37 fax to be consistent with VoIP AAA accounting services, which uses the Cisco IOS software nonblocking APIs. This command creates accounting templates for faxes by associating the template name with the T.37 onramp or offramp application.

You can define an accounting template to specify information that is included in an accounting packet.



Note

This command applies only to T.37 fax.

Use the **showcallactivefax** and the **showcallhistoryfax** commands to check the configuration.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice accounting-template
Warning: This command has been deprecated. Please use the following:
call accounting-template
```

The following is an example configuration using the T.37 accounting template:

```
Router(config)# call application voice t37_onramp accounting-template sample-name
Router(config)# call application voice t37_offramp accounting-template sample-name
```

Related Commands

Command	Description
application	Defines the call application in the dial peer.
call accounting-template	Selects an accounting template at a specific location.
call accounting-template voice	Selects an accounting template at a specific location.
call application voice	Defines the name of a voice application and specifies the location of the Tcl or VoiceXML document to load for this application.
call application voice language	Defines the language of the audio file for the designated application and passes that information to the application.
call application voice load	Reloads the designated Tcl script or VoiceXML document.
call application voice pin-len	Defines the number of characters in the PIN for the application and passes that information to the application.
call application voice redirect-number	Defines the telephone number to which a call is redirected for the designated application.

Command	Description
call application voice retry-count	Defines the number of times a caller is permitted to reenter the PIN for a designated application and passes that information to the application.
call application voice security trusted	Sets the security level of a VoiceXML application to trusted so that ANI is not blocked.
call application voice set-location	Defines the location, language, and category of the audio files for the designated application and passes that information to the application.
call application voice uid-len	Defines the number of characters in the UID for the designated application and passes that information to the application.
call application voice warning-time	Defines, in seconds, how long in advance a user is warned before the allowed calling time expires for the designated application.
show call active fax	Displays call information for fax transmissions in progress.
show call application voice	Displays information about voice applications.
show call history fax	Displays the call history table for fax transmissions.

call application voice authen-list

**Note**

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceauthen-list** command was replaced by the **paramauthen-list** command in application configuration mode. See the **paramauthen-list** command for more information.

To specify the name of an authentication method list for a Tool Command Language (Tcl) application, use the **callapplicationvoiceauthenlist** command in global configuration mode. To disable the authentication method list for a Tcl application, use the **no** form of this command.

call application voice *application-name* **authen-list** *method-list-name*

no call application voice *application-name* **authen-list** *method-list-name*

Syntax Description

<i>application-name</i>	Name of the application.
<i>method-list-name</i>	Character string used to name a list of authentication methods to be used with T.38 fax relay and T.37 store-and-forward fax.

Command Default

No default behavior or values.

Command Modes

Global configuration (config)

Command History

Release	Modification
12.1(3)XI	This command was introduced on the Cisco AS5300.
12.1(5)T	This command was integrated into Cisco IOS Release 12.1(5)T.
12.2(4)T	This command was implemented on the Cisco 1750.
12.2(8)T	This command was implemented on the Cisco 1751, Cisco 2600 series and Cisco 3600 series, Cisco 3725, and Cisco 3745.
12.3(14)T	This command was replaced by the paramauthen-list command in application configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command defines the name of the authentication, authorization, and accounting (AAA) method list to be used with fax applications on voice feature cards. The method list itself, which defines the type of authentication services provided for store-and-forward fax, is defined using the **aaaauthentication** command. Unlike standard AAA (in which each defined method list can be applied to specific interfaces and lines), AAA method lists that are used with fax applications are applied globally.

After the authentication method lists have been defined, they are enabled by using the **callapplicationvoiceauthenticationenable** command.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice authen-list
Warning: This command has been deprecated. Please use the following:
param authen-list
```

The following example defines a AAA authentication method list (called "fax") to be used with T.38 fax relay and T.37 store-and-forward fax:

```
call application voice app_libretto_onramp9 authen-list fax
```

Related Commands

Command	Description
aaa authentication	Enable AAA accounting of requested services for billing or security purposes.
call application voice authen-method	Specifies the authentication method for a Tcl application.
call application voice authentication enable	Enables AAA authentication services for a Tcl application.

call application voice authen-method



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceauthen-method** command is replaced by the **paramauthen-method** command in application configuration mode. See the **paramauthen-method** command for more information.

To specify an authentication, authorization, and accounting (AAA) authentication method for a Tool Command Language (Tcl) application, use the **callapplicationvoiceauthen-method** command in global configuration mode. To disable the authentication method for a Tcl application, use the **no** form of this command.

call application voice *application-name* **authen-method** {**prompt-user**| **ani**| **dnis**| **gateway**| **redialer-id**| **redialer-dnis**}

no call application voice *application-name* **authen-method** {**prompt-user**| **ani**| **dnis**| **gateway**| **redialer-id**| **redialer-dnis**}

Syntax Description

<i>application-name</i>	Name of the application.
prompt user	User is prompted for the Tcl application account identifier.
ani	Calling party telephone number (automatic number identification or ANI) is used as the Tcl application account identifier.
dnis	Called party telephone number (dialed number identification service or DNIS) is used as the Tcl application account identifier.
gateway	Router-specific name derived from the host name and domain name is used as the Tcl application account identifier, displayed in the following format: <i>router-name.domain-name</i> .
redialer id	Account string returned by the external redialer device is used as the Tcl application account identifier. In this case, the redialer ID is either the redialer serial number or the redialer account number.
redialer dnis	Called party telephone number (dialed number identification service or DNIS) is used as the Tcl application account identifier captured by the redialer if a redialer device is present.

Command Default No default behavior or values

Command Modes Global configuration (config)

Command History	Release	Modification
	12.1(3)XI	This command was introduced on the Cisco AS5300.
	12.1(5)T	This command was integrated into Cisco IOS Release 12.1(5)T.
	12.2(4)T	This command was implemented on the Cisco 1750.
	12.2(8)T	This command was implemented on the Cisco 1751, Cisco 2600 series, Cisco 3600 series, Cisco 3725, and Cisco 3745.
	12.3(14)T	This command was replaced by the paramauthen-method command in application configuration mode.
	12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines Normally, when AAA is used for simple user authentication, AAA uses the username information defined in the user profile for authentication. With T.37 store-and-forward fax and T.38 real-time fax, you can specify that the ANI, DNIS, gateway ID, redialer ID, or redialer DNIS be used to identify the user for authentication or that the user be prompted for the Tcl application.

Examples Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice authen-method
Warning: This command has been deprecated. Please use the following:
param authen-method
```

The following example configures the router-specific name derived from the hostname and domain name as the Tcl application account identifier for the app_sample_onramp9 Tcl application:

```
call application voice app_sample_onramp9 authen-method gateway
```

Related Commands

Command	Description
call application voice authentication enable	Enables AAA authentication services for a Tcl application.

Command	Description
call application voice authen list	Specifies the name of an authentication method list for a Tel application.

call application voice accounting enable



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceaccountingenable** command is replaced by the **paramaccountingenable** command in application configuration mode. See the **paramaccountingenable** command for more information.

To enable authentication, authorization, and accounting (AAA) accounting for a Tool Command Language (Tcl) application, use the **callapplicationvoiceaccountingenable** command in global configuration mode. To disable accounting for a Tcl application, use the **no** form of this command.

call application voice *application-name* **accounting enable**

no call application voice *application-name* **accounting enable**

Syntax Description

<i>application-name</i>	Name of the application.
-------------------------	--------------------------

Command Default

Disabled

Command Modes

Global configuration (config)

Command History

Release	Modification
12.1(3)XI	This command was introduced on the Cisco AS5300.
12.1(5)T	This command was integrated into Cisco IOS Release 12.1(5)T.
12.2(4)T	This command was implemented on the Cisco 1750.
12.2(8)T	This command was implemented on the Cisco 1751, Cisco 2600 series and Cisco 3600 series, Cisco 3725, and Cisco 3745.
12.3(14)T	This command was replaced by the paramaccountingenable command in application configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command enables AAA accounting services if a AAA accounting method list has been defined using both the **aaaaccounting** command and the **mmoipaaamethodfaxaccounting** command.

This command applies to off-ramp store-and-forward fax functions.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice accounting enable  
Warning: This command has been deprecated. Please use the following:  
param accounting enable
```

The following example enables AAA accounting to be used with outbound store-and-forward fax:

```
call application voice app_libretto_onramp9 accounting enable
```

Related Commands

Command	Description
aaa accounting	Enables AAA accounting of requested services when you use RADIUS or TACACS+.
mmoip aaa method fax accounting	Defines the name of the method list to be used for AAA accounting with store-and-forward fax.

call application voice default disc-prog-ind-at-connect

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicedefaultdisc-prog-ind-at-connect** command is replaced. Use one of the following commands:

- **param convert-discpi-after-connect** (application parameter configuration mode)
- **paramspace session_xwork convert-discpi-after-connect** (service configuration mode)

To convert a DISCONNECT message with Progress Indicator set to PROG_INBAND (PI=8) to a regular DISCONNECT message when the call is in the active state, use the **callapplicationvoicedefaultdisc-prog-ind-at-connect** command in global configuration mode. To revert to a DISCONNECT message with Progress Indicator set to PROG_INBAND (PI=8) when the call is in the active state, use the **no** form of this command.

call application voice default disc-prog-ind-at-connect [1| 0]

no call application voice default disc-prog-ind-at-connect [1| 0]

Syntax Description

1	(Optional) Convert a DISCONNECT message with Progress Indicator set to PROG_INBAND (PI=8) to a regular DISCONNECT message when the call is in the active state.
0	(Optional) Revert to a DISCONNECT message with Progress Indicator set to PROG_INBAND (PI=8) when the call is in the active state.

Command Default

The DISCONNECT message has Progress Indicator set to PROG_INBAND (PI=8) when the call is in the active state.

Command Modes

Global configuration (config)

Command History

Release	Modification
12.2(15)ZJ	This command was introduced.
12.3(4)T	This command was integrated into Cisco IOS Release 12.3(4)T.

Release	Modification
12.3(14)T	<p>The call application voice default disc-prog-ind-at-connect command was replaced. Use one of the following commands:</p> <ul style="list-style-type: none"> • param convert-discpi-after-connect (application parameter configuration mode) • paramspace session_xwork convert-discpi-after-connect (service configuration mode)
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command has no effect if the call is not in the active state.

This command is available for the default voice application. It may not be available when using some Tcl IVR applications.

The Cisco IOS command-line interface command completion and help features do not work with this command.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# voice default disc-prog-ind-at-connect
```

```
Warning: This command has been deprecated. Please use the following:
param convert-discpi-after-connect
paramspace session_xwork convert-discpi-after-connect
```

In the following example, a DISCONNECT message with Progress Indicator set to PROG_INBAND (PI=8) is converted to a regular DISCONNECT message when the call is in the active state:

```
call application voice default disc-prog-ind-at-connect 1
```

Related Commands

Command	Description
param convert-discpi-after-connect	Enables or disables conversion of a DISCONNECT message with Progress Indicator set to PROG_INBAND (PI=8) to a regular DISCONNECT message when the call is in the active state.
paramspace session_xwork convert-discpi-after-connect	Enables or disables conversion of a DISCONNECT message with Progress Indicator set to PROG_INBAND (PI=8) to a regular DISCONNECT message when the call is in the active state.

call application voice dsn-script



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicedsn-script** command is replaced by the **paramdsn-script** command in application parameter configuration mode.

To specify the VoiceXML application to which the off-ramp mail application hands off calls for off-ramp delivery status notification (DSN) and message disposition notification (MDN) e-mail messages, use the **callapplicationvoicedsnscript** command in global configuration mode. To remove the application, use the **no** form of this command.

call application voice *mail-application-name* **dsn-script** *application-name*

no call application voice *mail-application-name* **dsn-script** *application-name*

Syntax Description

<i>mail-application-name</i>	Name of the off-ramp mail application that launches the app_voicemail_offramp.tcl script when the gateway receives an e-mail trigger.
<i>application-name</i>	Name of the VoiceXML application to which the off-ramp mail application hands off the call when the destination answers.

Command Default

No default behavior or values

Command Modes

Global configuration (config)

Command History

Release	Modification
12.2(11)T	This command was introduced on the Cisco 3640, Cisco 3660, Cisco AS5300, Cisco AS5350, and Cisco AS5400.
12.3(14)T	This command was replaced by the paramdsn-script command in application parameter configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

When the off-ramp gateway receives a DSN or MDN e-mail message, it handles it in the same way as a voice e-mail trigger message. The dial peer is selected on the basis of dialed number identification service (DNIS), and the mail application hands off the call to the VoiceXML application that is configured with this command.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice dsn-script
Warning: This command has been deprecated. Please use the following:
      param dsn-script
```

The following example shows how to define the DSN application and how to apply it to a dial peer:

```
call application voice offramp-mapp tftp://sample/tftp-users/tcl/app_voicemail_offramp.tcl
call application voice dsn-mapp-test tftp://sample/tftp-users/vxml/dsn-mapp-test.vxml
call application voice offramp-mapp dsn-script dsn-mapp-test
!
dial-peer voice 1000 mmoip
  application offramp-mapp
  incoming called-number 555....
  information-type voice
```

Related Commands

Command	Description
application	Defines a specific voice application in the dial peer.
call application voice	Defines the name of a voice application and specifies the location of the document (Tcl or VoiceXML) to load for the application.
param dsn-script	Specifies the VoiceXML application to which the off-ramp mail application hands off calls for off-ramp DSN and MDN e-mail messages.
show call application voice	Displays information about the configured voice applications.

call application voice event-log

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceevent-log** is obsolete. To enable event logging for a specific voice application, use one of the following commands:

- **param event-log** (application parameter configuration mode)
- **paramspace appcommon event-log** (service configuration mode)

To enable event logging for a specific voice application, use the **callapplicationvoiceevent-log** command in global configuration mode. To reset to the default, use the **no** form of this command.

call application voice *application-name* **event-log** [**disable**]

no call application voice *application-name* **event-log**

Syntax Description

<i>application-name</i>	Name of the voice application.
disable	(Optional) Disables event logging for the named application.

Command Default

No default behavior or values

Command Modes

Global configuration (config)

Command History

Release	Modification
12.3(8)T	This command was introduced.
12.3(14)T	The callapplicationvoiceevent-log is obsolete. To enable event logging for a specific voice application, use one of the following commands: <ul style="list-style-type: none"> • param event-log (application parameter configuration mode) • paramspace appcommon event-log (service configuration mode)
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command is application-specific; it takes precedence over the global configuration command, **callapplicationevent-log**, which enables event logging for all voice applications.

Before you can use this command, you must configure the named application on the gateway by using the **callapplicationvoice** command.


Note

To prevent event logging from adversely impacting system resources for production traffic, the gateway uses a throttling mechanism. When free processor memory drops below 20 percent, the gateway automatically disables all event logging. It resumes event logging when free memory rises above 30 percent. While throttling is occurring, the gateway does not capture any new event logs even if event logging is enabled. You should monitor free memory and enable event logging only when necessary for isolating faults.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call call application voice event-log
Warning: This command has been deprecated. Please use the following:
  param event-log
  paramspace appcommon event-log
```

The following example enables event logging for all instances of the application named sample_app:

```
call application voice sample_app event-log
```

The following example enables event logging for all applications except the application sample_app:

```
call application event-log
call application voice sample_app event-log disable
```

Related Commands

Command	Description
call application event-log	Enables event logging for voice application instances.
call application event-log max-buffer-size	Sets the maximum size of the event log buffer for each application instance.
call application voice	Defines the name of a voice application and specifies the location of the script to load for the application.
monitor call application event-log	Displays the event log for an active application instance in real-time.
param event-log	Enables or disables logging for linkable Tel functions (packages).
paramspace appcommon event-log	Enable or disables logging for a service (application).
show call application session-level	Displays event logs and statistics for voice application instances.

call application voice fax-dtmf



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicefax-dtmf** command is replaced by the **paramfax-dtmf** command in application parameter configuration mode. See the **paramfax-dtmf** command for more information.

To direct the fax detection interactive voice response (IVR) application to recognize a specified digit to indicate a fax call in default-voice and default-fax modes, use the **callapplicationvoicefax-dtmf** command in global configuration mode. To remove configuration of this digit, use the **no** form of this command.

call application voice*application-name***fax-dtmf**{0|1|2|3|4|5|6|7|8|9|*|#}

no call application voice*application-name***fax-dtmf**{0|1|2|3|4|5|6|7|8|9|*|#}

Syntax Description

<i>application-name</i>	The name of the fax detection IVR application that you defined when you loaded the application on the router.
0 1 2 3 4 5 6 7 8 9 * #	The telephone keypad digit processed by the calling party to indicate a fax call, in response to the audio prompt that plays during the default-voice or default-fax mode of the fax detection IVR application.

Command Default

2

Command Modes

Global configuration (config)

Command History

Release	Modification
12.1(5)XM	This command was introduced for the Cisco AS5300.
12.2(2)T	This command was integrated into Cisco IOS Release 12.2(2)T.
12.2(2)XB	This command was implemented on the Cisco AS5400 and Cisco AS5350.
12.2(8)T	This command was implemented on the Cisco 1751, Cisco 2600 series, Cisco 3600 series, Cisco 3725, and Cisco 3745.
12.2(11)T	This command was implemented on the Cisco AS5300, Cisco AS5350, and Cisco AS5400.

Release	Modification
12.3(14)T	This command was replaced by the paramfax-dtmf command in application parameter configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command is useful only when the fax detection IVR application is being configured in default-voice mode or default-fax mode as defined by the **callapplicationvoicemode** command.

Only one digit can be specified in this command, and that digit must be different from the digit specified in the **callapplicationvoicevoice-dtmf** command. You are not notified immediately if you make the error of configuring them both to the same digit. To find this error, you must start the debugging with the **debugvoipivrscript** command and then observe some failing calls.

This command is not supported by Cisco IOS help; that is, if you type **callapplicationvoicefax_detectfax-dtmfandaquestionmark(?)**, Cisco IOS help does not supply a list of entries that are valid in place of the question mark.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice fax-dtmf
Warning: This command has been deprecated. Please use the following:
param fax-dtmf
```

The following example selects DTMF digit 1 to indicate a fax call:

```
call application voice fax_detect script_url
call application voice fax_detect fax-dtmf 1
dial-peer voice 302 pots
application fax_detect
```

Related Commands

Command	Description
call application voice	Loads an IVR application onto a router and gives it an application name.
call application voice account-id-method	Configures the fax detection IVR application to use a particular method to assign the account identifier.
call application voice mode	Configures the fax detection IVR application to operate in one of its four modes.
call application voice prompt	Configures the fax detection IVR application to use the specified audio file as a user prompt.
call application voice voice-dtmf	Configures the fax detection IVR application to recognize the specified digit to indicate a voice call.

Command	Description
debug voip ivr script	Displays debug information from the fax detection IVR script.
param fax-dtmf	Directs the fax detection IVR application to recognize a specified digit to indicate a fax call in default-voice and default-fax modes.

call application voice global-password



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceglobal-password** command is replaced by the **paramglobal-password** command in application parameter configuration mode. See the **paramglobal-password** command for more information.

To define a password to be used with CiscoSecure for Windows NT when using store-and-forward fax on a voice feature card, use the **callapplicationvoiceglobalpassword** command in global configuration mode. To restore the default value, use the **no** form of this command.

call application voice *application-name* **global-password** *password*

no call application voice *application-name* **global-password** *password*

Syntax Description

<i>application-name</i>	The name of the application.
<i>password</i>	Character string used to define the CiscoSecure for Windows NT password to be used with store-and-forward fax. The maximum length is 64 alphanumeric characters.

Command Default

No password is defined

Command Modes

Global configuration (config)

Command History

Release	Modification
12.1(3)XI	This command was introduced on the Cisco AS5300.
12.1(5)T	This command was integrated into Cisco IOS Release 12.1(5)T.
12.3(14)T	This command is replaced by the paramglobal-password command in application parameter configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

CiscoSecure for Windows NT might require a separate password to complete authentication, no matter what security protocol you use. This command defines the password to be used with CiscoSecure for Windows NT. All records on the Windows NT server use this defined password.

This command applies to on-ramp store-and-forward fax functions on Cisco AS5300 universal access server voice feature cards. It is not used on modem cards.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice global-password
Warning: This command has been deprecated. Please use the following:
param global-password
```

The following example shows a password (abercrombie) being used by AAA for the app_sample_onramp9 Tcl application:

```
call application voice app_sample_onramp9 global-password abercrombie
```

Related Commands

Command	Description
param global-password	Defines a password to be used with CiscoSecure for Windows NT when using store-and-forward fax on a voice feature card.

call application voice language

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicelanguage** is replaced by the following commands:

- **param language** (application parameter configuration mode)
- **paramspace language** (service configuration mode)

See these commands for more information.

To specify the language for dynamic prompts used by an interactive voice response (IVR) application (Tool Command Language (Tcl) or VoiceXML), use the **callapplicationvoicelanguage** command in global configuration mode. To remove this language specification from the application, use the **no** form of this command.

call application voice *application-name* **language** *digit* *language*

no call application voice *application-name* **language** *digit* *language*

Syntax Description

<i>application-name</i>	Name of the application to which the language parameters are being passed.
<i>digit</i>	Number that identifies the language used by the audio files. Any number can represent any language. Enter 1 to indicate the primary language and 2 to indicate the secondary language. Range is from 0 to 9.
<i>language</i>	Two-character code that identifies the language of the associated audio files. Valid entries are as follows: <ul style="list-style-type: none">• en --English• sp --Spanish• ch --Mandarin• aa --all

Command Default

If this command is not configured, the default language is English.

Command Modes

Global configuration (config)

Command History

Release	Modification
12.0(7)T	This command was introduced.

Release	Modification
12.1(5)T	This command was implemented on the Cisco AS5800.
12.1(5)XM2	This command was implemented on the Cisco AS5350 and Cisco AS5400.
12.2(2)XB	This command was modified to support VoiceXML applications on the Cisco AS5300, Cisco AS5350, and Cisco AS5400.
12.2(2)XB1	This command was implemented on the Cisco AS5850.
12.2(4)T	This command was implemented on the Cisco 1750.
12.2(4)XM	This command was implemented on the Cisco 1751.
12.2(8)T	This command was integrated into Cisco IOS Release 12.2(8)T and implemented on the Cisco 7200 series. Support for the Cisco AS5300, Cisco AS5350, Cisco AS5400, Cisco AS5800 and Cisco AS5850 is not included in this release.
12.2(11)T	This command was integrated into Cisco IOS Release 12.2(11)T for VoiceXML applications. This command is supported on the Cisco AS5300, Cisco AS5350, Cisco AS5400, Cisco 5800, and Cisco AS5850 in this release.
12.3(14)T	The callapplicationvoicelanguage was replaced by the following commands: param language (application parameter configuration mode) paramspace language (service configuration mode)
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command identifies the number that users enter for a language; for example, "Enter 1 for English. Enter 2 for French."

This number is used only with the Tcl IVR Debit Card feature. Although it is not used by VoiceXML, you still must enter a number from 0 to 9.

Instead of using this command, you can configure the language and location of the prerecorded audio files within a Tcl script or VoiceXML document. For more information, see the [Tcl IVR API Version 2.0 Programmer's Guide](#) or Cisco VoiceXML Programmer's Guide, respectively.

To identify the location of the language audio files that are used for the dynamic prompts, use the **callapplicationvoiceset-location** command.

Tcl scripts and VoiceXML documents can be stored in any of the following locations: On the TFTP, FTP, or HTTP servers, in the flash memory of the gateway, or on the removable disks of the Cisco 3600 series. The audio files that they use can be stored in any of these locations, and on RTSP servers.

With the Pre-Paid Debitcard Multi-Language feature, you can create Tcl scripts and a two-character code for any language. See the [Cisco Pre-Paid Debitcard Multi-Language Programmer's Reference](#).

With the multilanguage support for Cisco IOS IVR, you can create a Tcl language module for any language and any set of TTS notations for use with Tcl and VoiceXML applications. See the Enhanced Multi-Language Support for Cisco IOS Interactive Voice Response document.

The table below lists Tcl script names and the corresponding commands that are required for each Tcl script.

Table 2: Tcl Scripts and Commands

Tcl Script Name	Description	Commands to Configure
app_libretto_onramp9.tcl	Authenticates the account and personal identification number (PIN) using the following: prompt-user, using automatic number identification (ANI), dialed number identification service (DNIS), gateway ID, redialer ID, and redialer DNIS.	None
app_libretto_offramp5.tcl	Authenticates the account and PIN using the following: envelope-from, envelope-to, gateway ID, and x-account ID.	None
clid_4digits_npw_3_cli.tcl	This script authenticates the account number and PIN, respectively, using ANI and NULL. The number of digits allowed for the account number and password, respectively, are configurable through the command-line interface (CLI). If the authentication fails, the script allows the caller to retry. The retry number is also configured through the CLI.	call application voice uid-length Range is 1 to 20. The default is 10. call application voice pin-length Range is 0 to 10. The default is 4. call application voice retry-count Range is 1 to 5. The default is 3.
clid_authen_col_npw_cli.tcl	This script authenticates the account number and PIN, respectively, using ANI and NULL. If the authentication fails, it allows the caller to retry. The retry number is configured through CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_authen_collect_cli.tcl	This script authenticates the account number and PIN using ANI and DNIS. If the authentication fails, the script allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_3_cli.tcl	This script authenticates using ANI and NULL for account numbers and PINs, respectively. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI.	call application voice retry-count Range is 1 to 5. The default is 3.

Tcl Script Name	Description	Commands to Configure
clid_col_npw_npw_cli.tcl	This script authenticates using ANI and NULL for account and PIN, respectively. If authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected together.	call application voice retry-count Range is 1 to 5. The default is 3.
fax_rollover_on_busy.tcl	Used for on-ramp T.38 fax rollover to T.37 fax when the destination fax line is busy.	voice hunt user-busy

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)#
call application voice language
Warning: This command has been deprecated. Please use the following:
param language
param space language
```

The following example shows how to define the application "prepaid" and then selects English and Spanish as the languages of the audio files that are associated with the application:

```
call application voice prepaid tftp://keyer/debitcard.tcl
call application voice prepaid language 1 en
call application voice prepaid language 2 sp
```

Related Commands

Command	Description
call application voice	Specifies the name to be used for an application and indicates the location of the appropriate IVR script to be used with this application.
call application voice load	Reloads the designated Tcl script.
call application voice pin-len	Defines the number of characters in the PIN for the application and passes that information to the application.
call application voice redirect-number	Specifies the telephone number to which a call is redirected for the designated application.
call application voice retry-count	Defines the number of times a caller is permitted to reenter the PIN for a designated application and passes that information to the application.
call application voice set-location	Defines the location, language, and category of the audio files for the designated application and passes that information to the application.

Command	Description
call application voice uid-len	Defines the number of characters in the UID for the designated application and passes that information to the application.
call application voice warning-time	Defines, in seconds, how long in advance a user is warned before the allowed calling time expires for the designated application.
param language	Configures the language parameter in a service or package on the gateway.
paramspace language	Defines the category and location of audio files that are used for dynamic prompts by an IVR application (Tcl or VoiceXML).
show call application voice	Displays information about voice applications.

call application voice load

To reload the selected voice application script after it has been modified, use the **call application voice load** command in privileged EXEC mode. This command does not have a **no** form.

call application voice load *application-name*

Syntax Description

<i>application-name</i>	Name of the Tcl or VoiceXML application to reload.
-------------------------	--

Command Default

No default behavior or values

Command Modes

Privileged EXEC (#)

Command History

Release	Modification
12.0(7)T	This command was introduced on the Cisco 2600 series and Cisco 3600 series (except for the Cisco 3660), and on the Cisco AS5300.
12.1(3)T	Support for dynamic script loading of Media Gateway Control Protocol (MGCP) was added.
12.1(5)XM2	This command was implemented on the Cisco AS5350 and Cisco AS5400.
12.2(2)XB	This command was modified to support VoiceXML applications.
12.2(2)XB1	This command was implemented on the Cisco AS5850.
12.2(4)XM	This command was implemented on the Cisco 1751.
12.2(4)T	This command was integrated into Cisco IOS Release 12.2(4)T and implemented on the Cisco 1750.
12.2(8)T	This command and implemented on the Cisco 7200 series.
12.2(11)T	This command was integrated into Cisco IOS Release 12.2(11)T for VoiceXML applications. This command is supported on the Cisco AS5300, Cisco AS5350, Cisco AS5400, Cisco AS5800, and the Cisco AS5850 in this release.

Usage Guidelines

Use this command to reload an application Tcl script or VoiceXML document onto the gateway after it has been modified.

The location of the Tcl script or VoiceXML document for the specified application must have already been configured using the **callapplicationvoice** command.

Do not include the file type extension in the filename (.vxml or .tcl) when specifying the document used by the application.

Tcl scripts and VoiceXML documents can be stored in any of the following locations: on TFTP, FTP, or HTTP servers, in the flash memory of the gateway, or on the removable disks of the Cisco 3600 series. The audio files that they use can be stored on any of these locations, and on RTSP servers.

Before Cisco IOS Release 12.1(3)T, the software checked the signature in a Tcl script to ensure that it was supported by Cisco. A signature on Tcl scripts is no longer required. A signature has never been required for VoiceXML documents.

A Tcl script or VoiceXML document cannot be reloaded if it has active calls. Use the **showcallapplicationvoice** command to verify that no active calls are using this application.



Tip

If the **callapplicationvoiceload** command fails to load the Tcl script or VoiceXML document that is associated with the application, enable the **debugvoipivr** command and retry. This debugging command can provide information on why loading fails.



Note

MGCP scripting is not supported on the Cisco 1750 router or on Cisco 7200 series routers.

Examples

The following example shows the loading of a Tcl script called "clid_4digits_npw_3.tcl":

```
call application voice load clid_4digits_npw_3.tcl
```

The following example shows how to reload the VoiceXML application called "vapptest":

```
call application voice load vapptest
```

Related Commands

Command	Description
call application cache reload time	Configures the interval for reloading MGCP scripts.
call application voice	Creates and calls the application that interacts with the IVR feature.
debug http client	Displays information about the load an application that was loaded with HTTP.
show call application voice	Displays a list of the voice applications that are configured.

call application voice mail-script



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicemail-script** command is replaced by the **parammail-script** command in application parameter configuration mode. See the **parammail-script** command for more information.

To specify the VoiceXML application to which the off-ramp mail application hands off a call when the destination telephone answers, use the **callapplicationvoicemail-script** command in global configuration mode. To remove the application, use the **no** form of this command.

call application voice *mail-application-name* **mail-script** *application-name*

no call application voice *mail-application-name* **mail-script** *application-name*

Syntax Description

<i>mail-application-name</i>	Name of the off-ramp mail application that launches the app_voicemail_offramp.tcl script when the gateway receives an e-mail trigger.
<i>application-name</i>	Name of the VoiceXML application to which the off-ramp mail application hands off the call when the destination answers.

Command Default

No default behavior or values

Command Modes

Global configuration (config)

Command History

Release	Modification
12.2(11)T	This command was introduced on the Cisco 3640, Cisco 3660, Cisco AS5300, Cisco AS5350, and Cisco AS5400.
12.3(14)T	This command was replaced by the parammail-script command in application parameter configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

To load the mail application onto the gateway, use the **callapplicationvoice** command.

The off-ramp mail application must be configured in the Multimedia Mail over Internet Protocol (MMoIP) dial peer that matches the telephone number contained in the header of the incoming e-mail message.

The off-ramp mail application must use the Tool Command Language (Tcl) script named "app_voicemail_offramp.tcl" that is provided by Cisco. This Tcl script can be downloaded from the Cisco website by following this path: Cisco > Technical Support Help - TAC > Select & Download Software > Software Center > Access Software > TclWare.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice mail-script
Warning: This command has been deprecated. Please use the following:
param mail-script
```

The following example shows that the off-ramp mail application named "offramp-mapp" hands calls to the application named "mapp-test" if the telephone number in the e-mail header is seven digits beginning with 555 :

```
call application voice offramp-mapp tftp://sample/tftp-users/tcl/app_voicemail_offramp.tcl
call application voice mapp-test tftp://sample/tftp-users/vxml/user-test.vxml
call application voice offramp-mapp mail-script mapp-test
!
dial-peer voice 1001 mmoup
application offramp-mapp
incoming called-number 555....
information-type voice
```

Related Commands

Command	Description
application	Defines a specific voice application in the dial peer.
call application voice	Defines the name of a voice application and specifies the location of the document (Tcl or VoiceXML) to load for the application.
param mail-script	Specifies the VoiceXML application to which the off-ramp mail application hands off a call when the destination telephone answers.
show call application voice	Displays information about the configured voice applications.

call application voice mode



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicemode** command is replaced by the **parammode** command in application parameter configuration mode. See the **parammode** command for more information.

To direct the fax detection interactive voice response (IVR) application to operate in one of its four connection modes, use the **callapplicationvoicemode** command in global configuration mode. To return to the default connection mode, use the **no** form of this command.

call application voice *application-name* **mode** {**connect-first**| **listen-first**| **default-voice**| **default-fax**}

no call application voice *application-name* **mode** {**connect-first**| **listen-first**| **default-voice**| **default-fax**}

Syntax Description

<i>application-name</i>	Fax detection IVR application that was defined when the application was loaded on the router.
connect first	Incoming calls are connected to the Real-Time Streaming Protocol (RTSP) server. This is the default.
listen-first	The gateway listens to the call first and then connects to the RTSP server. Any Dual tone multifrequency (DTMF) tones take the call to the voice server, but subsequent DTMF is forwarded as configured.
default voice	Incoming calls are connected as voice calls to the RTSP server.
default fax	Incoming calls are connected to the fax relay or store-and-forward fax application that is configured on the gateway.

Command Default

connect first

Command Modes

Global configuration (config)

Command History

Release	Modification
12.1(5)XM	This command was introduced on the Cisco AS5300.
12.2(2)XB	This command was implemented on the Cisco AS5350 and Cisco AS5400.

Release	Modification
12.2(8)T	This command was integrated into Cisco IOS Release 12.2(8)T and implemented on the Cisco 1751, Cisco 2600 series, Cisco 3600 series, Cisco 3725, and Cisco 3745.
12.2(11)T	This command is supported on the Cisco AS5300, Cisco AS5350, and Cisco AS5400 in this release.
12.3(14)T	This command was replaced by the parammode command in application parameter configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

The call application voice mode commands control the way that the gateway handles fax detection IVR applications calls.

When the **connect-first** keyword is selected and CNG (calling) tones from the originating fax machine are detected, the voice application is disconnected and the call is passed to the configured fax application. If the **listen-first** keyword is selected, the gateway listens for CNG and, if it is detected, passes the call to the fax relay or store-and-forward fax application, whichever is configured on the gateway. When the **default-voice** and **default-fax** keywords are selected, the gateway defaults to voice after listening for CNG or passes the call to the fax relay or store-and-forward fax application, whichever was configured on the gateway. If the gateway hears the Dual tone multifrequency (DTMF) tones that are specified in the **callapplicationvoicevoice-dtmf** or **callapplicationvoicefax-dtmf** commands, the call is forwarded as appropriate.

Note that in all four connection modes, the router continues to listen for CNG throughout the call, even if the call has been connected to the voice server; if CNG is detected, the call is connected to fax relay or store-and-forward fax, whichever has been configured.

This command is not supported by Cisco IOS help. If you type the **callapplicationvoicefax_detectmode** command and a question mark (?), Cisco IOS help does not supply a list of valid entries in place of the question mark.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice mode
Warning: This command has been deprecated. Please use the following:
param mode
```

The following example shows a selection of default-voice mode for the fax detection application:

```
call application voice fax_detect script_url
call application voice fax_detect mode default-voice
dial-peer voice 302 pots
application fax_detect
```

Related Commands

Command	Description
call application voice	Loads a specified IVR application onto the router from the TFTP server and gives it an application name by which it is known on the router.
call application voice account-id-method	Configures the fax detection IVR application to use a particular method to assign the account identifier.
call application voice fax-dtmf	Configures the fax detection IVR application to recognize a specified digit to indicate a fax call .
call application voice prompt	Configures the fax detection IVR application to use the specified audio file as a user prompt in listen-first mode, default-voice mode, or default-fax mode.
call application voice voice-dtmf	Configures the fax detection IVR application to recognize a specified digit to indicate a voice call.
param mode	Configures the call transfer mode for a package.

call application voice pin-len



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicepin-len** command is replaced with the **parampin-len** command in application parameter configuration mode. See the **parampin-len** command for more information.

To define the number of characters in the personal identification number (PIN) for the designated application, use the **callapplicationvoicepinlen** command in global configuration mode. To disable the PIN for the designated application, use the no form of this command.

call application voice *application-name* **pin-len** *number*

no call application voice *application-name* **pin-len** *number*

Syntax Description

<i>application-name</i>	Application name to which the PIN length parameter is being passed.
<i>number</i>	Number of allowable characters in PINs associated with the specified application. Range is from 0 to 10. The default is 4.

Command Default

No default behavior or values

Command Modes

Global configuration (config)

Command History

Release	Modification
12.0(7)T	This command was introduced.
12.1(5)T	This command was implemented on the Cisco AS5800.
12.1(5)XM2	This command was implemented on the Cisco AS5350 and Cisco AS5400.
12.2(2)XB1	This command was implemented on the Cisco AS5850.
12.2(4)T	This command was integrated into Cisco IOS Release 12.2(4)T and implemented on the Cisco 1750.
12.2(4)XM	This command was implemented on the Cisco 1751.
12.2(8)T	This command was integrated into Cisco IOS Release 12.2(8)T and implemented on the Cisco 7200 series.

Release	Modification
12.2(11)T	This command is supported on the Cisco AS5350, Cisco AS5400 Cisco AS5800, and the Cisco AS5850 in this release.
12.3(14)T	The callapplicationvoicepin-len command was replaced with the parampin-len command in application parameter configuration mode.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

Use this command when configuring interactive voice response (IVR)--depending on the Tool Command Language (Tcl) script being used--or one of the IVR-related features (such as Debit Card) to define the number of allowable characters in a PIN for the specified application and to pass that information to the specified application.

The table below lists Tcl script names and the corresponding commands that are required for each Tcl script.

Table 3: Tcl Scripts and Commands

Tcl Script Name	Description	Commands to Configure
app_libretto_onramp9.tcl	Authenticates the account and personal identification number (PIN) using the following: prompt-user, using automatic number identification (ANI), dialed number identification service (DNIS), gateway ID, redialer ID, and redialer DNIS.	None
app_libretto_offramp5.tcl	Authenticates the account and PIN using the following: envelope-from, envelope-to, gateway ID, and x-account ID.	None
clid_4digits_npw_3_cli.tcl	This script authenticates the account number and PIN, respectively, using ANI and NULL. The number of digits allowed for the account number and password, respectively, are configurable through the command-line interface (CLI). If the authentication fails, the script allows the caller to retry. The retry number is also configured through the CLI.	call application voice uid-length Range is 1 to 20. The default is 10. call application voice pin-length Range is 0 to 10. The default is 4 call application voice retry-count Range is 1 to 5. The default is 3.
clid_authen_col_npw_cli.tcl	This script authenticates the account number and PIN, respectively, using ANI and NULL. If the authentication fails, it allows the caller to retry. The retry number is configured through CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.

Tcl Script Name	Description	Commands to Configure
clid_authen_collect_cli.tcl	This script authenticates the account number and PIN using ANI and DNIS. If the authentication fails, the script allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_3_cli.tcl	This script authenticates using ANI and NULL for account numbers and PINs, respectively. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_npw_cli.tcl	This script authenticates using ANI and NULL for account and PIN, respectively. If authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected together.	call application voice retry-count Range is 1 to 5. The default is 3.
fax_rollover_on_busy.tcl	Used for on-ramp T.38 fax rollover to T.37 fax when the destination fax line is busy.	voice hunt user-busy

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice pin-len
Warning: This command has been deprecated. Please use the following:
param pin-len
```

The following example shows how to define a PIN length of 4 characters for the application named "prepaid":

```
call application voice prepaid pin-len 4
```

Related Commands

Command	Description
call application voice	Specifies the name to be used for an application and indicates the location of the appropriate IVR script to be used with the application.
call application voice language	Specifies the language of the audio file for the designated application and passes that information to the application.
call application voice load	Reloads the designated Tcl script.

Command	Description
call application voice redirect-number	Specifies the telephone number to which a call is redirected for the designated application.
call application voice retry-count	Defines the number of times a caller is permitted to reenter the PIN for a designated application and passes that information to the application.
call application voice set-location	Defines the location, language, and category of the audio files for the designated application and passes that information to the application.
call application voice uid-len	Defines the number of characters in the UID for the designated application and passes that information to the application.
call application voice warning-time	Defines, in seconds, how long in advance a user is warned before the allowed calling time expires for the designated application.
param pin-len	Defines the number of characters in the PIN for an application.

call application voice prompt



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceprompt** command is replaced by the **paramprompt** command. See the **paramprompt** command for more information.

To direct the fax detection interactive voice response (IVR) application to use the specified audio file as a user prompt, use the **callapplicationvoiceprompt** command in global configuration mode. To disable use of this audio file, use the **no** form of this command.

call application voice *application-name* **prompt** *prompt-url*

no call application voice *application-name* **prompt** *prompt-url*

Syntax Description

<i>application-name</i>	Name of the fax detection IVR application that you defined when you loaded the application on the router.
<i>prompt-url</i>	URL or Cisco IOS file system location on the TFTP server for the audio file containing the prompt for the application.

Command Default

The prompt space is empty and no prompt is played.

Command Modes

Global configuration (config)

Command History

Release	Modification
12.1(5)XM	This command was introduced for the Cisco AS5300.
12.2(2)XB	This command was implemented on the Cisco AS5400 and Cisco AS5350.
12.2(8)T	This command was integrated into Cisco IOS Release 12.2(8)T and implemented on the Cisco 1751, Cisco 2600 series, Cisco 3600 series, Cisco 3725, and Cisco 3745.
12.2(11)T	This command was implemented on the Cisco AS5300, Cisco AS5350, and Cisco AS5400.
12.3(14)T	This command was replaced by the paramprompt command.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command is useful only in the listen-first, default-voice, and default-fax modes of the fax detection application.

Audio files should be a minimum of 9 seconds long so that callers do not hear silence during the initial CNG detection period. Any .au file can be used; formats are described in the Cisco IOS Voice, Video, and Fax Configuration Guide, Release 12.4.

This command is not supported by Cisco IOS help. If you type the **call application voice fax_detect prompt** command with a question (?), the Cisco IOS help does not supply a list of entries that are valid in place of the question mark.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice prompt
Warning: This command has been deprecated. Please use the following:
param prompt
```

The following example associates the audio file "promptfile.au" with the application file "fax_detect", and the application with the inbound POTS dial peer:

```
call application voice fax_detect script_url
call application voice fax_detect mode default-voice
call application voice fax_detect prompt promptfile.au
dial-peer voice 302 pots
application fax_detect
```

Related Commands

Command	Description
call application voice	Loads a specified IVR application onto the router from the TFTP server and gives it an application name by which it is known on the router.
call application voice account-id-method	Configures the fax detection IVR application to use a particular method to assign the account identifier.
call application voice fax-dtmf	Configures the fax detection IVR application to recognize a specified digit to indicate a fax call.
call application voice mode	Configures the fax detection IVR application to operate in one of its four modes.
call application voice voice-dtmf	Configures the fax detection IVR application to recognize a specified digit to indicate a voice call.
param prompt	Directs the fax detection IVR application to use the specified audio file as a user prompt.

call application voice redirect-number



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceredirect-number** command is replaced with the **paramredirect-number** command in application parameter configuration mode. See the **paramredirect-number** command for more information.

To define the telephone number to which a call is redirected--for example, the operator telephone number of the service provider--for the designated application, use the **callapplicationvoiceredirectnumber** command in global configuration mode. To cancel the redirect telephone number, use the **no** form of this command.

call application voice *application-name* **redirect-number** *number*

no call application voice *application-name* **redirect-number** *number*

Syntax Description

<i>application name</i>	Name of the application to which the redirect telephone number parameter is being passed.
<i>number</i>	Designated operator telephone number of the service provider (or any other number designated by the customer). This is the number where calls are terminated when, for example, allowed debit time has run out or the debit amount is exceeded.

Command Default

No default behavior or values

Command Modes

Global configuration (config)

Command History

Release	Modification
12.0(7)T	This command was introduced on the Cisco 2600 series, the Cisco 3600 series, and the Cisco AS5300.
12.1(5)T	This command was implemented on the Cisco AS5800.
12.1(5)XM2	This command was implemented on the Cisco AS5350 and Cisco AS5400.
12.2(2)XB1	This command was implemented on the Cisco AS5850.
12.2(4)XM	This command was implemented on the Cisco 1751.
12.2(4)T	This command was implemented on the Cisco 1750.

Release	Modification
12.2(8)T	This command was integrated into Cisco IOS Release 12.2(8)T and implemented on the Cisco 7200 series. Support for the Cisco AS5300, Cisco AS5350, Cisco AS5400, and Cisco AS5850 is not included in this release.
12.2(11)T	This command was integrated into Cisco IOS Release 12.2(11)T. This command is supported on the Cisco AS5300, Cisco AS5350, Cisco AS5400, Cisco AS5800, and Cisco AS5850 in this release.
12.3(14)T	This command was replaced by the paramredirect-number .
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

Use this command when configuring interactive voice response (IVR)--depending on the Tool Command Language (Tcl) script being used--or one of the IVR-related features (such as Debit Card) to define the telephone number to which a call is redirected.

The table below lists Tcl script names and the corresponding commands that are required for each Tcl script.

Table 4: Tcl Scripts and Commands

Tcl Script Name	Description	Commands to Configure
app_libretto_onramp9.tcl	Authenticates the account and personal identification number (PIN) using the following: prompt-user, using automatic number identification (ANI), dialed number identification service (DNIS), gateway ID, redialer ID, and redialer DNIS.	None
app_libretto_offramp5.tcl	Authenticates the account and PIN using the following: envelope-from, envelope-to, gateway ID, and x-account ID.	None
clid_4digits_npw_3_cli.tcl	This script authenticates the account number and PIN, respectively, using ANI and NULL. The number of digits allowed for the account number and password, respectively, are configurable through the command-line interface (CLI). If the authentication fails, the script allows the caller to retry. The retry number is also configured through the CLI.	<p>call application voice uid-length Range is 1 to 20. The default is 10.</p> <p>call application voice pin-length Range is 0 to 10. The default is 4.</p> <p>call application voice retry-count Range is 1 to 5. The default is 3.</p>

Tcl Script Name	Description	Commands to Configure
clid_authen_col_npw_cli.tcl	This script authenticates the account number and PIN, respectively, using ANI and NULL. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_authen_collect_cli.tcl	This script authenticates the account number and PIN using ANI and DNIS. If the authentication fails, the script allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_3_cli.tcl	This script authenticates using ANI and NULL for account numbers and PINs, respectively. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_npw_cli.tcl	This script authenticates using ANI and NULL for account and PIN, respectively. If authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected together.	call application voice retry-count Range is 1 to 5. The default is 3.
fax_rollover_on_busy.tcl	Used for on-ramp T.38 fax rollover to T.37 fax when the destination fax line is busy.	voice hunt user-busy

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice redirect-number
Warning: This command has been deprecated. Please use the following:
param redirect-number
```

The following example shows how to define a redirect number for the application named "prepaid":

```
call application voice prepaid redirect-number 5550111
```

Related Commands

Command	Description
call application voice	Specifies the name to be used for an application and indicates the location of the appropriate IVR script to be used with this application.

Command	Description
call application voice language	Specifies the language of the audio file for the designated application and passes that information to the application.
call application voice load	Reloads the designated Tcl script.
call application voice pin-len	Defines the number of characters in the PIN for the application and passes that information to the application.
call application voice retry-count	Defines the number of times a caller is permitted to reenter the PIN for a designated application and passes that information to the application.
call application voice set-location	Defines the location, language, and category of the audio files for the designated application and passes that information to the application.
call application voice uid-len	Defines the number of characters in the UID for the designated application and passes that information to the application.
call application voice warning-time	Defines, in seconds, how long in advance a user is warned before the allowed calling time expires for the designated application.
param redirect-number	Defines the telephone number to which a call is redirected--for example, the operator telephone number of the service provider--for an application.

call application voice retry-count



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicere retry-count** command is replaced by the **paramretry-count** command in application parameter configuration mode. See the **paramretry-count** command for more information.

To define the number of times that a caller is permitted to reenter the personal identification number (PIN) for the designated application, use the **callapplicationvoicere retrycount** command in global configuration mode. To cancel the retry count, use the **no** form of this command.

call application voice *application-name* **retry-count** *number*

no call application voice *application-name* **retry-count** *number*

Syntax Description

<i>application name</i>	Name of the application to which the number of possible retries is being passed.
<i>number</i>	Number of times the caller is permitted to reenter PIN digits. Range is 1 to 5. The default is 3.

Command Default

No default behavior or values

Command Modes

Global configuration (config)

Command History

Release	Modification
12.0(7)T	This command was introduced.
12.1(5)T	This command was implemented on the Cisco AS5800.
12.1(5)XM2	This command was implemented on the Cisco AS5350 and Cisco AS5400.
12.2(2)XB1	This command was implemented on the Cisco AS5850.
12.2(4)XM	This command was implemented on the Cisco 1751.
12.2(4)T	This command was introduced on the Cisco 1750.
12.2(8)T	This command was integrated into Cisco IOS Release 12.2(8)T and implemented on the Cisco 7200 series. Support for the Cisco AS5350, Cisco AS5400, and Cisco AS5850 is not included in this release.

Release	Modification
12.2(11)T	This command was integrated into Cisco IOS Release 12.2(11)T. This command is supported on the Cisco AS5350, Cisco AS5400, Cisco AS5800, and Cisco AS5850 in this release.
12.3(14)T	This command was replaced by the paramretry-count command.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

Use this command when configuring interactive voice response (IVR)--depending on the Tool Command Language (Tcl) script being used--or one of the IVR-related features (such as Debit Card) to define how many times a user can reenter a PIN.

The table below lists Tcl script names and the corresponding commands that are required for each Tcl script.

Table 5: Tcl Scripts and Commands

Tcl Script Name	Description	Commands to Configure
app_libretto_onramp9.tcl	Authenticates the account and personal identification number (PIN) using the following: prompt-user, using automatic number identification (ANI), dialed number identification service (DNIS), gateway ID, redialer ID, and redialer DNIS.	None
app_libretto_offramp5.tcl	Authenticates the account and PIN using the following: envelope-from, envelope-to, gateway ID, and x-account ID.	None
clid_4digits_npw_3_cli.tcl	This script authenticates the account number and PIN, respectively, using ANI and NULL. The number of digits allowed for the account number and password, respectively, are configurable through the command-line interface (CLI). If the authentication fails, the script allows the caller to retry. The retry number is also configured through the CLI.	call application voice uid-length Range is 1 to 20. The default is 10. call application voice pin-length Range is 0 to 10. The default is 4. call application voice retry-count Range is 1 to 5. The default is 3.
clid_authen_col_npw_cli.tcl	This script authenticates the account number and PIN, respectively, using ANI and NULL. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.

Tcl Script Name	Description	Commands to Configure
clid_authen_collect_cli.tcl	This script authenticates the account number and PIN using ANI and DNIS. If the authentication fails, the script allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_3_cli.tcl	This script authenticates using ANI and NULL for account numbers and PINs, respectively. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_npw_cli.tcl	This script authenticates using ANI and NULL for account and PIN, respectively. If authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected together.	call application voice retry-count Range is 1 to 5. The default is 3.
fax_rollover_on_busy.tcl	Used for on-ramp T.38 fax rollover to T.37 fax when the destination fax line is busy.	voice hunt user-busy

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application retry-count
Warning: This command has been deprecated. Please use the following:
param retry-count
```

The following example shows how to define that for the application named "prepaid" that a user can reenter a PIN three times before being disconnected:

```
call application voice prepaid retry-count 3
```

Related Commands

Command	Description
call application voice	Specifies the name to be used for an application and indicates the location of the appropriate IVR script to be used with this application.
call application voice language	Specifies the language of the audio file for the designated application and passes that information to the application.
call application voice load	Reloads the designated Tcl script.

Command	Description
call application voice pin-len	Defines the number of characters in the PIN for the application and passes that information to the application.
call application voice redirect-number	Specifies the telephone number to which a call is redirected for the designated application.
call application voice set-location	Defines the location, language, and category of the audio files for the designated application and passes that information to the application.
call application voice uid-len	Defines the number of characters in the UID for the designated application and passes that information to the application.
call application voice warning-time	Defines, in seconds, how long in advance a user is warned before the allowed calling time expires for the designated application.
param retry-count	Defines the number of times that a caller is permitted to reenter the PIN for a package.

call application voice security trusted

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicsecuritytrusted** command is replaced by the the following commands:

- **param security trusted** (application parameter configuration mode)
- **paramspace appcommon security trusted** (service configuration mode)

See these commands for more information.

To set the security level of a VoiceXML application to "trusted" so that automatic number identification (ANI) is not blocked, use the **callapplicationvoicsecuritytrusted** command in global configuration mode. To restore the default condition, use the **no** form of this command.

call application voice *application-name* **security trusted**

no call application voice *application-name* **security trusted**

Syntax Description

<i>application name</i>	Name of the application being configured as trusted.
-------------------------	--

Command Default

The security level of the application is not set to trusted, and ANI is blocked.

Command Modes

Global configuration (config)

Command History

Release	Modification
12.2(2)XB	This command was introduced on the Cisco AS5300, Cisco AS5350, and Cisco AS5400.
12.2(11)T	This command was integrated into Cisco IOS Release 12.2(11)T and implemented on the Cisco 3640 and Cisco 3660.
12.3(14)T	The callapplicationvoicsecuritytrusted command was replaced by the following commands: <ul style="list-style-type: none">• param security trusted (application parameter configuration mode)• paramspace appcommon security trusted (service configuration mode)
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command is applicable only for VoiceXML applications.

**Note**

Tool Command Language (Tcl) applications provide the security parameter to the application but do not use it.

If an application is configured as a trusted application, it is trusted not to provide the calling number to the destination party, so ANI is always provided if available.

Normally, the voice gateway does not provide the calling number (ANI) to a VoiceXML application if the caller ID is blocked. Caller ID is blocked if a call that comes into the voice gateway has the presentation indication field set to "presentation restricted". The session.telephone.ani variable is set to "blocked". When the **call application voice security trusted** command is configured, the gateway does not block caller ID; it provides the calling number to the VoiceXML application.

If the keyword of this command is set to anything other than **trusted**, the value is accepted and the application is treated as not trusted. For example, in the following configuration, the application "sample" is treated as not trusted, and caller ID is blocked:

```
call application voice sample security not_trusted
```

To enable Generic Transparency Descriptor (GTD) parameters in call signaling messages to map to VoiceXML and Tcl session variables, configure the **call application voice security trusted** command. If this command is not configured, the VoiceXML variables that correspond to GTD parameters are marked as not available. For a detailed description of the VoiceXML and Tcl session variables, see the Cisco VoiceXML Programmer's Guide and the [Tcl IVR API Version 2.0 Programmer's Guide](#), respectively.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice security trusted
Warning: This command has been deprecated. Please use the following:
  param security trusted (application parameter configuration mode)
  paramspace appcommon security trusted
```

The following example configures the application "sample" as a trusted application. Caller ID is available to this VoiceXML application if it is supported by the service provider.

```
call application voice sample flash:sample.vxml
call application voice sample security trusted
```

The following example configures the application "example" as not trusted. Caller ID can be blocked.

```
call application voice coldcall tftp://joeserver/sellcars.vxml
no call application voice example security trusted
```

Related Commands

Command	Description
call application voice	Defines the name of a voice application and specifies the location of the document (Tcl or VoiceXML) to load for the application.

Command	Description
call application voice language	Defines the language of the audio files used for dynamic prompts by the designated application.
call application voice load	Reloads a Tcl or VoiceXML document.
call application voice pin-len	Defines the number of characters in the PIN for the Tcl application.
call application voice redirect-number	Defines the telephone number to which a call is redirected for the designated application.
call application voice retry-count	Defines the number of times that a caller is permitted to reenter the PIN for a designated application.
call application voice uid-len	Defines the number of characters in the UID for the designated application.
call application voice warning-time	Defines the number of seconds for which a warning prompt is played before a user's account time runs out.
param security	Configures security for linkable Tcl functions (packages).
paramspace appcommon security	Configures security for a service (application).
show call application voice	Displays the following information associated with a voice application: the audio files, the prompts, the caller interaction, and the abort key operation.

call application voice set-location



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceset-location** command is replaced by the **paramspacelanguage** command. See the **paramspacelanguage** command for more information.

To define the category and location of audio files that are used for dynamic prompts by the specified IVR application (Tcl or VoiceXML), use the **callapplicationvoicesetlocation** command in global configuration mode. To remove these definitions, use the **no** form of this command.

call application voice *application-name* **set-location** *language category location*

no call application voice *application-name* **set-location** *language category location*

Syntax Description

<i>application name</i>	Name of the application to which the setlocation parameters are being passed.
<i>language</i>	Two-character code that identifies the language associated with the audio files. Valid entries are as follows: <ul style="list-style-type: none"> • en --English • sp --Spanish • ch --Mandarin • aa --All <p>This is the same language code that was entered when configuring the callapplicationvoicelanguage command .</p>
<i>category</i>	Category group of the audio files (from 0 to 4). For example, audio files representing the days and months can be category 1, audio files representing units of currency can be category 2, and audio files representing units of time--seconds, minutes, and hours--can be category 3. Range is from 0 to 4; 0 means all categories.
<i>location</i>	URL of the audio files. Valid URLs refer to TFTP, FTP, HTTP, or RTSP servers, flash memory, or the removable disks on the Cisco 3600 series.

Command Default

No location or category is set.

Command Modes

Global configuration (config)

Command History

Release	Modification
12.0(7)T	This command was introduced on the Cisco 2600 series, Cisco 3600 series, and the Cisco AS5300.
12.1(5)T	This command was implemented on the Cisco AS5800.
12.1(5)XM2	This command was implemented on the Cisco AS5350 and Cisco AS5400.
12.2(2)XB	This command was modified to support VoiceXML applications on the Cisco AS5300, Cisco AS5350, and Cisco AS5400.
12.2(2)XB1	This command was implemented on the Cisco AS5850.
12.2(4)XM	This command was implemented on the Cisco 1751.
12.2(4)T	This command was integrated into Cisco IOS Release 12.2(4)T and implemented on the Cisco 1750.
12.2(8)T	This command was implemented on the Cisco 2600 series, Cisco 3600 series, Cisco 3725, and Cisco 3745.
12.2(11)T	This command was integrated into Cisco IOS Release 12.2(11)T for VoiceXML applications. This command is supported on the Cisco AS5300, Cisco AS5350, Cisco AS5400, Cisco AS5800, and Cisco AS5850 in this release.
12.3(14)T	This command was replaced by the paramspacelanguage command.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

Instead of using this command, you can configure the language and location of prerecorded audio files within a Tcl script or VoiceXML document. For more information, see the [Tcl IVR API Version 2.0 Programmer's Guide](#) or Cisco VoiceXML Programmer's Guide, respectively.

To identify the language of the audio files, use the **callapplicationvoicelanguage** command.

Tcl scripts and VoiceXML documents can be stored in any of the following locations: On TFTP, FTP, or HTTP servers, in the flash memory on the gateway, or on the removable disks of the Cisco 3600 series. The audio files that they use can be stored in any of these locations, and on RTSP servers.

You can configure multiple set-location lines for a single application.

With the Pre-Paid Debitcard Multi-Language feature, you can create Tcl scripts and a two-character code for any language. See the [Cisco Pre-Paid Debitcard Multi-Language Programmer's Reference](#).

With the multilanguage support for Cisco IOS IVR, you can create a Tcl language module for any language and any set of Text-to-Speech (TTS) notations for use with Tcl and VoiceXML applications. See the Enhanced Multi-Language Support for Cisco IOS Interactive Voice Response document.

The table below lists Tcl script names and the corresponding commands that are required for each Tcl script.

Table 6: Tcl Scripts and Commands

Tcl Script Name	Description	Commands to Configure
app_libretto_onramp9.tcl	Authenticates the account and personal identification number (PIN) using the following: prompt-user, using automatic number identification (ANI), dialed number identification service (DNIS), gateway ID, redialer ID, and redialer DNIS.	None
app_libretto_offramp5.tcl	Authenticates the account and PIN using the following: envelope-from, envelope-to, gateway ID, and x-account ID.	None
clid_4digits_npw_3_cli.tcl	Authenticates the account number and PIN, respectively, using ANI and NULL. The number of digits allowed for the account number and password, respectively, are configurable through the command-line interface (CLI). If the authentication fails, the script allows the caller to retry. The retry number is also configured through the CLI.	call application voice uid-length Range is 1 to 20. The default is 10. call application voice pin-length Range is 0 to 10. The default is 4. call application voice retry-count Range is 1 to 5. The default is 3.
clid_authen_col_npw_cli.tcl	Authenticates the account number and PIN, respectively, using ANI and NULL. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_authen_collect_cli.tcl	Authenticates the account number and PIN using ANI and DNIS. If the authentication fails, the script allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_3_cli.tcl	Authenticates using ANI and NULL for account numbers and PINs, respectively. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI.	call application voice retry-count Range is 1 to 5. The default is 3.

Tcl Script Name	Description	Commands to Configure
clid_col_npw_npw_cli.tcl	Authenticates using ANI and NULL for account and PIN, respectively. If authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected together.	call application voice retry-count Range is 1 to 5. The default is 3.
fax_rollover_on_busy.tcl	Used for on-ramp T.38 fax rollover to T.37 fax when the destination fax line is busy.	voice hunt user-busy

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice set-location
Warning: This command has been deprecated. Please use the following:
paramspace language
```

The following example shows how to configure the **callapplicationvoiceset-location** command for the application named "prepaid." In this example, the language specified is English, the category into which the audio files are grouped is category 0 (meaning all), and the location is the keyer directory on the TFTP server.

```
call application voice prepaid set-location en 0 tftp://keyer/
```

The following example shows how to configure the **callapplicationvoiceset-location** command for a fictitious VoiceXML application named "sample." In this example, as in the preceding example, the language defined is English, the category into which the audio files are grouped is category 0 (meaning "all") and the location is the example directory on an HTTP server.

```
call application voice sample set-location en 0 http://example/
```

The following example shows how to configure the **callapplicationvoiceset-location** command for multiple set locations:

```
call application voice sample set-location en 0 http://example/en_msg/
call application voice sample set-location sp 0 http://example/sp_msg/
call application voice sample set-location ch 0 http://example/ch_msg/
```

Related Commands

Command	Description
call application voice	Specifies the application name and indicates the location of the IVR script to be used with this application.
call application voice language	Specifies the audio file language for the designated application.
call application voice load	Reloads the designated Tcl script.
call application voice pin-len	Specifies the number of characters in the PIN.

Command	Description
call application voice redirect-number	Specifies the telephone number to which a call is redirected.
call application voice retry-count	Defines the number of times a caller is permitted to reenter the PIN.
call application voice uid-len	Defines the number of characters in the UID for the designated application.
call application voice warning-time	Defines, in seconds, how long in advance a user is warned before the allowed calling time expires for the designated application.
paramspace language	Defines the category and location of audio files that are used for dynamic prompts by an IVR application (Tcl or VoiceXML).
show call application voice	Displays information about voice applications.

call application voice transfer mode

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicetransfermode** command is replaced by the following commands:

- **param mode** (application parameter configuration mode)
- **paramspace callsetup mode** (service configuration mode)

See these commands for more information.

To specify the call-transfer method for Tool Command Language (Tcl) or VoiceXML applications, use the **callapplicationvoicetransfermode** command in global configuration mode. To reset to the default, use the **no** form of this command.

call application voice *application-name* **transfer mode** {**redirect**| **redirect-at-alert**| **redirect-at-connect**| **redirect-rotary**| **rotary**}

no call application voice *application-name* **transfer mode**

Syntax Description

<i>application-name</i>	Name of the voice application for which the transfer method is set.
redirect	Gateway redirects the call leg to the redirected destination number.
redirect-at-alert	Gateway places a new call to the redirected destination number and initiates a call transfer when the outgoing call leg is in the alert state. If the call transfer is successful, the two call legs are disconnected on the gateway. If the transfer fails, the gateway bridges the two call legs. Provides support for Two B-Channel Transfer (TBCT).
redirect-at-connect	Gateway places a new call to the redirected destination number and initiates a call transfer when the outgoing call leg is in the connect state. If the call transfer is successful, the two call legs are disconnected on the gateway. If the transfer fails, the gateway bridges the two call legs. Provides support for TBCT.
redirect-rotary	Gateway redirects the call leg to the redirected destination number. If redirection fails, the gateway places a rotary call to the redirected destination number and hairpins the two call legs. For TBCT, this mode is the same as for the redirect-at-connect keyword.

rotary	Gateway places a rotary call for the outgoing call leg and hairpins the two call legs. Call redirection is not invoked. This is the default.
---------------	--

Command Default Rotary method; call redirection is not invoked.

Command Modes Global configuration (config)

Command History	Release	Modification
	12.3(1)	This command was introduced.
	12.3(14)T	This command was replaced by the following commands: <ul style="list-style-type: none"> • param mode (application parameter configuration mode) • paramspace callsetup mode (service configuration mode)
	12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines This command determines whether a voice application can invoke TBCT or RTPvt. Before you can use this command, you must configure the named application on the gateway by using the **callapplicationvoice** command.

Redirect-rotary is the preferred transfer method because it ensures that a call-redirect method is always selected if the call leg is capable of it.

Tcl scripts can read the value of this command by using the info tag `get cfg_avpair transfer-mode` statement. For detailed information, see the [Tcl IVR API Version 2.0 Programmer's Guide](#).

For VoiceXML applications, the value of this command becomes the default behavior if the `com.cisco.transfer.mode` property is not specified in the VoiceXML document. For detailed information, see the Cisco VoiceXML Programmer's Guide. The VoiceXML document property takes precedence over the gateway configuration.

Examples Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice transfer mode
Warning: This command has been deprecated. Please use the following:
  param mode
  paramspace callsetup mode
```

The following example sets the transfer method to redirect for the application callme:

```
Router(config)# call application voice callme transfer mode redirect
```

Related Commands

Command	Description
application	Enables a voice application on a dial peer.
call application voice	Defines the name of a voice application and specifies the location of the Tcl or VoiceXML document to load for this application.
call application voice transfer reroute-mode	Specifies the call-forwarding behavior of a Tcl application.
debug voip ivr callsetup redirect	Displays debugging information about H.450 calls that are redirected during setup.
debug voip ivr redirect	Displays debugging information about redirected H.450 calls.
isdn supp-service tbct	Enables ISDN TBCT on PRI trunks.
param mode	Configures the call transfer mode for a package.
paramspace callsetup mode	Configures the call transfer mode for an application.
show call active voice redirect	Displays information about active calls that are being redirected using RTPvt or TBCT.
show call application voice	Displays information about voice applications.
show call history voice redirect	Displays history information about calls that were redirected using RTPvt or TBCT.

call application voice transfer reroute-mode

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicetransferreroute-mode** command is replaced by the following commands:

- **param reroutemode** (application parameter configuration mode)
- **paramspace callsetup reroutemode** (service configuration mode)

See these commands for more information.

To specify the call-forwarding behavior of a Tool Command Language (Tcl) application, use the **callapplicationvoicetransferreroute-mode** command in global configuration mode. To reset to the default, use the **no** form of this command.

call application voice *application-name* **transfer reroute-mode** {**none**|**redirect**|**redirect-rotary**|**rotary**}
no call application voice *application-name* **transfer reroute-mode**

Syntax Description

<i>application-name</i>	Name of the voice application for which the transfer reroute method is set.
none	Call forwarding is not performed by the voice application.
redirect	Two call legs are directly connected. Provides support for RTPvt.
redirect-rotary	Two call legs are directly connected (redirect). If that fails, the two call legs are hairpinned on the gateway (rotary).
rotary	Gateway places a rotary call for the outgoing call leg and hairpins the two calls together. RTPvt is not invoked. This is the default.

Command Default

Rotary method; RTPvt is not invoked.

Command Modes

Global configuration (config)

Command History

Release	Modification
12.3(1)	This command was introduced.

Release	Modification
12.3(14)T	This command was replaced by the following commands: <ul style="list-style-type: none"> • param reroutemode (application parameter configuration mode) • paramspace callsetup reroutemode (service configuration mode)
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

Before you can use this command, you must configure the named application on the gateway by using the **callapplicationvoice** command. This command is not supported for VoiceXML applications or for TBCT.

Redirect-rotary is the preferred transfer method because it ensures that a call-redirect method is always selected, provided that the call leg is capable of it.

Tcl scripts can read the value of this command by using the info tag `get cfg_avpair reroute-mode` statement. For detailed information, see the [Tcl IVR API Version 2.0 Programmer's Guide](#).

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice transfer reroute-mode
Warning: This command has been deprecated. Please use the following:
  param reroutemode (application parameter configuration mode)
  paramspace callsetup reroutemode
```

The following example sets the call forwarding method to redirect for the application callme:

```
Router(config)# call application voice callme transfer reroute-mode redirect
```

Related Commands

Command	Description
application	Enables a voice application on a dial peer.
call application voice	Defines the name of a voice application and specifies the location of the Tcl or VoiceXML document to load for this application.
call application voice transfer mode	Specifies the call-transfer behavior of a Tcl or VoiceXML application.
isdn supp-service tbct	Enables ISDN TBCT on PRI trunks.
param reroutemode	Configures the call transfer reroutemode (call forwarding) for a package.
paramspace callsetup reroutemode	Configures the call reroute mode (call forwarding) for an application.

Command	Description
show call active voice redirect	Displays information about active calls that are being redirected using RTPvt or TBCT.
show call application voice	Displays information about voice applications.
show call history voice redirect	Displays history information about calls that were redirected using RTPvt or TBCT.

call application voice uid-length



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoiceuid-length** command is replaced by the **paramuid-len** command. See the **paramuid-len** command for more information.

To define the number of characters in the user identification (UID) number for the designated application and to pass that information to the specified application, use the **callapplicationvoiceuid-length** command in global configuration mode. To restore the default setting for this command, use the **no** form of this command.

call application voice *application-name* **uid-length** *number*

no call application voice *application-name* **uid-length** *number*

Syntax Description

<i>application-name</i>	Name of the application to which the UID length parameter is passed.
<i>number</i>	Number of allowable characters in UIDs that are associated with the specified application. Range is from 1 to 20. The default is 10.

Command Default

number

Command Modes

Global configuration

Command History

Release	Modification
12.0(7)T	This command was introduced on the Cisco 2600 series, Cisco 3600 series, and the Cisco AS5300.
12.1(5)T	This command was implemented on the Cisco AS5800.
12.1(5)XM2	This command was implemented on the Cisco AS5350 and Cisco AS5400.
12.2(2)XB1	This command was implemented on the Cisco AS5850.
12.2(4)XM	This command was implemented on the Cisco 1751. This release does not support any other Cisco platforms.
12.2(4)T	Support was added for the Cisco 1750.
12.2(8)T	This command was implemented on the Cisco 7200 series.

Release	Modification
12.2(11)T	This command was integrated into Cisco IOS Release 12.2(11)T. This command is supported on the Cisco AS5300, Cisco AS5350, Cisco AS5400, Cisco AS5800, and Cisco AS5850 in this release.
12.3(14)T	This command was replaced by the paramuid-len command.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

Use this command when configuring interactive voice response (IVR)--depending on the Tool Command Language (Tcl) script being used--or one of the IVR-related features (such as Debit Card) to define the number of allowable characters in a UID for the specified application and to pass that information to the specified application.

The table below lists Tcl script names and the corresponding commands that are required for each Tcl script.

Table 7: Tcl Scripts and Commands

Tcl Script Name	Description	Commands to Configure
app_libretto_onramp9.tcl	Authenticates the account and personal identification number (PIN) using the following: prompt-user, using automatic number identification (ANI), dialed number identification service (DNIS), gateway ID, redialer ID, and redialer DNIS.	None
app_libretto_offramp5.tcl	Authenticates the account and PIN using the following: envelope-from, envelope-to, gateway ID, and x-account ID.	None
clid_4digits_npw_3_cli.tcl	Authenticates the account number and PIN, respectively, using ANI and NULL. The number of digits allowed for the account number and password, respectively, are configurable through the command-line interface (CLI). If the authentication fails, the script allows the caller to retry. The retry number is also configured through the CLI.	call application voice uid-length Range is 1 to 20. The default is 10. call application voice pin-length Range is 0 to 10. The default is 4. call application voice retry-count Range is 1 to 5. The default is 3.
clid_authen_col_npw_cli.tcl	Authenticates the account number and PIN, respectively, using ANI and NULL. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.

Tcl Script Name	Description	Commands to Configure
clid_authen_collect_cli.tcl	Authenticates the account number and PIN using ANI and DNIS. If the authentication fails, the script allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_3_cli.tcl	Authenticates using ANI and NULL for account numbers and PINs, respectively. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_npw_cli.tcl	Authenticates using ANI and NULL for account and PIN, respectively. If authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected together.	call application voice retry-count Range is 1 to 5. The default is 3.
fax_rollover_on_busy.tcl	Used for on-ramp T.38 fax rollover to T.37 fax when the destination fax line is busy.	voice hunt user-busy

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice uid-length
Warning: This command has been deprecated. Please use the following:
      param uid-len
```

The following example shows how to configure four allowable characters in the UID for the application named "sample":

```
Router(config)# all application voice sample uid-length 4
```

Related Commands

Command	Description
call application voice	Specifies the name to be used for an application and indicates the location of the appropriate IVR script to be used with this application.
call application voice language	Specifies the language of the audio file for the designated application and passes that information to the application.
call application voice load	Reloads the designated Tcl script.

Command	Description
call application voice pin-len	Defines the number of characters in the PIN for the application and passes that information to the application.
call application voice redirect-number	Specifies the telephone number to which a call is redirected for the designated application.
call application voice retry-count	Defines the number of times a caller is permitted to reenter the PIN for a designated application and passes that information to the application.
call application voice set-location	Defines the location, language, and category of the audio files for the designated application and passes that information to the application.
call application voice warning-time	Defines, in seconds, how long in advance a user is warned before the allowed calling time expires for the designated application.
param uid-length	Defines the number of characters in the UID for a package.

call application voice voice-dtmf



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicevoice-dtmf** command is replaced by the **paramvoice-dtmf** command. See the **paramvoice-dtmf** command for more information.

To direct the fax detection interactive voice response (IVR) application to recognize a specified digit to indicate a voice call, use the **callapplicationvoicevoice-dtmf** command in global configuration mode. To remove configuration of this digit, use the **no** form of this command.

call application voice *application-name* **voice-dtmf** *keypad-character*

no call application voice *application-name* **voice-dtmf** *keypad-character*

Syntax Description

<i>application-name</i>	The name of the fax detection application that you defined when you loaded the application on the router.
<i>keypad-character</i>	Single character that can be dialed on a telephone keypad pressed by the calling party to indicate a voice call, in response to the audio prompt configured in default-voice and default-fax mode of the fax detection IVR application. Default is 1.

Command Default

1

Command Modes

Global configuration (config)

Command History

Release	Modification
12.1(5)XM	This command was introduced for the Cisco AS5300.
12.2(2)XB	This command was implemented on the Cisco AS5400 and Cisco AS5350.
12.2(8)T	This command was integrated into Cisco IOS Release 12.2(8)T and implemented on the Cisco 1751, Cisco 2600 series, Cisco 3600 series, Cisco 3725, and Cisco 3745. Support for the Cisco AS5300, Cisco AS5350, and Cisco AS5400 is not included in this release.
12.2(11)T	This command was supported on the Cisco AS5300, Cisco AS5350, and Cisco AS5400 in this release.
12.3(14)T	This command was replaced by the paramvoice-dtmf command.

Release	Modification
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

This command is useful only when the fax detection IVR application is being configured in default-voice mode or default-fax mode, as defined by the **callapplicationvoicemode** command. Only one digit can be specified in this command, and that digit must be different from the digit specified in the **callapplicationvoicefax-dtmfcommand**. You are not notified immediately if you make the error of configuring them both to the same digit. To find this error, you must start debugging with the **debugvoipvrscript** command and then observe some failing calls.

This command is not supported by Cisco IOS help. If you type the **callapplicationvoicefax_detectvoice-dtmf** command and a question mark (?), the Cisco IOS help does not supply a list of entries that are valid in place of the question mark.

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice voice-dtmf
Warning: This command has been deprecated. Please use the following:
param voice-dtmf
```

The following example selects digit 2 dual tone multifrequency (DTMF) to indicate a voice call:

```
call application voice fax_detect script_url
call application voice fax_detect voice-dtmf 2
dial-peer voice 302 pots
application fax_detect
```

Related Commands

Command	Description
call application voice	Loads a specified IVR application onto the router from the TFTP server and gives it an application name by which it is known on the router.
call application voice account-id-method	Configures the fax detection IVR application to use a particular method to assign the account identifier.
call application voice fax-dtmf	Configures the fax detection IVR application to recognize a specified digit to indicate a fax call.
call application voice mode	Configures the fax detection IVR application to operate in one of its four modes.
call application voice prompt	Configures the fax detection IVR application to use the specified audio file as a user prompt.

Command	Description
param voice-dtmf	Directs the fax detection IVR application to recognize a specified digit to indicate a voice call.

call application voice warning-time



Note

Effective with Cisco IOS Release 12.3(14)T, the **callapplicationvoicewarning-time** command is replaced by the **paramwarning-time** command. See the **paramwarning-time** command for more information.

To define the number of seconds of warning that a user receives before the allowed calling time expires use the **callapplicationvoicewarning-time** command in global configuration mode. To remove the configured warning period, use the **no** form of this command.

call application voice *application-name* **warning-time** *seconds*

no call application voice *application-name* **warning-time** *seconds*

Syntax Description

<i>application-name</i>	Name of the application to which the warning time parameter is being passed.
<i>seconds</i>	Length of the warning period, in seconds, before the allowed calling time expires. Range is from 10 to 600. This argument has no default value.

Command Default

No default behavior or values

Command Modes

Global configuration (config)

Command History

Release	Modification
12.0(7)T	This command was introduced on the Cisco 2600 series, Cisco 3600 series, and Cisco AS5300.
12.1(5)T	This command was implemented on the Cisco AS5800.
12.1(5)XM2	This command was implemented on the Cisco AS5350 and Cisco AS5400.
12.2(2)XB1	This command was implemented on the Cisco AS5850.
12.2(4)XM	This command was implemented on the Cisco 1751. Support for other Cisco platforms is not included in this release.
12.2(4)T	This command was integrated into Cisco IOS Release 12.2(4)T and implemented on the Cisco 1750.
12.2(8)T	This command was implemented on the Cisco 7200 series.

Release	Modification
12.2(11)T	This command was implemented on the Cisco AS5300, Cisco AS5350, Cisco AS5400, Cisco AS5800, and Cisco AS5850 in this release.
12.3(14)T	This command was replaced by the paramwarning-time command.
12.4(24)T	This command was modified. The automatic conversion to the new CLI is replaced with an explicit error message.

Usage Guidelines

Use this command when configuring interactive voice response (IVR)—depending on the Tool Command Language (Tcl) script being used—or one of the IVR-related features (such as Debit Card) to define the number of seconds in the warning period before the allowed calling time expires for the specified application and to pass that information to the specified application.

The table below lists Tcl script names and the corresponding commands that are required for each Tcl script.

Table 8: Tcl Scripts and Commands

Tcl Script Name	Description	Commands to Configure
app_libretto_onramp9.tcl	Authenticates the account and personal identification number (PIN) using the following: prompt-user, using automatic number identification (ANI), dialed number identification service (DNIS), gateway ID, redialer ID, and redialer DNIS.	None
app_libretto_offramp5.tcl	Authenticates the account and PIN using the following: envelope-from, envelope-to, gateway ID, and x-account ID.	None
clid_4digits_npw_3_cli.tcl	This script authenticates the account number and PIN, respectively, using ANI and NULL. The number of digits allowed for the account number and password, respectively, are configurable through the command-line interface (CLI). If the authentication fails, the script allows the caller to retry. The retry number is also configured through the CLI.	call application voice uid-length Range is 1 to 20. The default is 10. call application voice pin-length Range is 0 to 10. The default is 4. call application voice retry-count Range is 1 to 5. The default is 3.
clid_authen_col_npw_cli.tcl	This script authenticates the account number and PIN, respectively, using ANI and NULL. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.

Tcl Script Name	Description	Commands to Configure
clid_authen_collect_cli.tcl	This script authenticates the account number and PIN using ANI and DNIS. If the authentication fails, the script allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected separately.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_3_cli.tcl	This script authenticates using ANI and NULL for account numbers and PINs, respectively. If the authentication fails, it allows the caller to retry. The retry number is configured through the CLI.	call application voice retry-count Range is 1 to 5. The default is 3.
clid_col_npw_npw_cli.tcl	This script authenticates using ANI and NULL for account and PIN, respectively. If authentication fails, it allows the caller to retry. The retry number is configured through the CLI. The account number and PIN are collected together.	call application voice retry-count Range is 1 to 5. The default is 3.
fax_rollover_on_busy.tcl	Used for on-ramp T.38 fax rollover to T.37 fax when the destination fax line is busy.	voice hunt user-busy

Examples

Effective with Cisco IOS Release 12.4(24)T, the following warning message is displayed to direct users to the replacement command options:

```
Router(config)# call application voice param warning-time
```

Warning: This command has been deprecated. Please use the following:
param warning-time

The following example shows how to configure a 30-second warning time for the application named "sample":

```
Router(config)# call application voice sample warning-time 30
```

Related Commands

Command	Description
call application voice language	Specifies the language of the audio file for the designated application and passes that information to the application.
call application voice load	Reloads the designated Tcl script.
call application voice location	Specifies the name to be used for an application and indicates the location of the appropriate IVR script to be used with this application.

Command	Description
call application voice pin-len	Defines the number of characters in the PIN for the application and passes that information to the application.
call application voice redirect-number	Specifies the telephone number to which a call is redirected for the designated application.
call application voice retry-count	Defines the number of times a caller is permitted to reenter the PIN for a designated application and passes that information to the application.
call application voice set-location	Defines the location, language, and category of the audio files for the designated application and passes that information to the application.
call application voice uid-length	Defines the number of characters in the UID for the designated application and passes that information to the application.
param warning-time	Defines the number of seconds of warning that a user receives before the allowed calling time expires.

call-block (dial peer)

To enable blocking of incoming calls, use the **call-block** command in dial peer configuration mode. To return to the default value, use the **no** form of this command.

call-block {disconnect-cause incoming {call-reject| invalid-number| unassigned-number| user-busy}| translation-profile incoming *name*}

no call-block {disconnect-cause incoming {call-reject| invalid-number| unassigned-number| user-busy}| translation-profile incoming *name*}

Syntax Description

disconnect-cause incoming	Associates a disconnect cause of incoming calls.
call-reject	Specifies call rejection as the cause for blocking a call during incoming call-number translation.
invalid-number	Specifies invalid number as the cause for blocking a call during incoming call-number translation.
unassigned-number	Specifies unassigned number as the cause for blocking a call during incoming call-number translation.
user-busy	Specifies busy as the cause for blocking a call during incoming call-number translation.
translation-profile incoming	Associates the translation profile for incoming calls.
<i>name</i>	Name of the translation profile.

Command Default

Disconnect cause: No Service (once the call-blocking translation profile is defined) Translation profile: No default behavior or values

Command Modes

Dial peer configuration (config-dial-peer)

Command History

Release	Modification
12.2(11)T	This command was introduced.

Usage Guidelines

An incoming call can be blocked from the gateway if one of the call numbers (calling, called, or redirect) is matched with the reject translation rule of the incoming call-blocking translation profile.

The cause value is returned to the source of the call when a call is blocked during the incoming call-number translation.

This command is supported in POTS, VoIP, VoFR, and VoATM dial-peer configuration. For VoATM, only ATM Adaptation Layer 5 (AAL5) calls are supported.

The only option for call blocking is in the incoming direction. From the perspective of the voice gateway, the incoming direction can be either of the following:

- Incoming from a telephony device directly attached to a voice port on the gateway toward the gateway itself
- Incoming by way of an inbound Voice over X (VoX) call from a peer gateway

To configure incoming call blocking, define a translation rule with a **reject** keyword. For example:

```
voice translation-rule 1
  rule 1 reject /408252*/
```

Apply the rule to a translation profile for called, calling, or redirect-called numbers, such as:

```
voice translation profile call_block_profile
  translate calling 1
```

Include the translation profile within a dial peer definition. For example:

```
dial-peer voice 111 pots
  call-block translation-profile incoming call_block_profile
  call-block disconnect-cause incoming invalid-number
```

In this example, the gateway blocks any incoming time-division multiplexing (TDM) call that successfully matches inbound dial-peer 111 and has a calling number that starts with 408252. The gateway also returns the disconnect cause "invalid number" to the source of the call. (Other disconnect causes can be assigned: unassigned-number, user-busy, or call-rejected.)

Examples

The following example assigns the translation profile "example" to be used for incoming calls and returns the message "invalid number" as a cause for blocked calls:

```
Router(config)# dial-peer voice 5 pots
Router(config-dial-peer)# call-block translation-profile incoming example
Router(config-dial-peer)# call-block disconnect-cause incoming invalid-number
```

Following are two possible call-blocking scenarios:

Examples

We place the rejection profile on a POTS dial peer that is associated with the voice port on which we expect the inbound call. When the inbound call attempt is made, we see in the CCAPI debugs that POTS dial-peer 9 is matched for the telephony call leg. The call-block rule is checked and we send back user-busy to the switch.

```
voice translation-rule 1
  rule 1 reject /9193927582/ <<<<----- filter out calls from this CallerID
voice translation-profile reject_ANI
  translate calling 1
dial-peer voice 9 pots
  destination-pattern 9T
  direct-inward-dial
  port 1/0:23
  call-block translation-profile incoming reject_ANI
  call-block disconnect-cause incoming user-busy
```

Examples

We place the rejection profile on a VoIP/VoATM/VoFR dial peer that matches an inbound VoX call attempt. When the inbound call attempt is made, we see in the CCAPI debugs that VoIP dial-peer 7 is matched for the IP call leg. The call-block rule is checked and we send back user-busy to the switch.

```
voice translation-rule 1
 rule 1 reject /9193927582/ <<<<----- filter out calls from this CallerID
voice translation-profile reject_ANI
 translate calling 1
dial-peer voice 7 voip
 destination-pattern 7T
 session target ipv4:A.B.C.D
 incoming called-number . <<<<----- force inbound IP call-leg match
 call-block translation-profile incoming reject_ANI
 call-block disconnect-cause incoming user-busy
```

Related Commands

Command	Description
dial-peer voice	Initiates the dial-peer voice configuration mode.
voice translation-profile	Defines a translation profile for voice calls.
voice translation-rule	Defines a translation rule for voice calls.

call-denial

The call - denial command is replaced by the **callthresholdglobal** command. See the **callthresholdglobal** command for more information.

