



## Using Cisco IOS Software

---

This chapter provides helpful tips for understanding and configuring Cisco IOS software using the command-line interface (CLI). It contains the following sections:

- Understanding Command Modes
- Getting Help
- Using the no and default Forms of Commands
- Saving Configuration Changes
- Filtering Output from the show and more Commands
- Identifying Supported Platforms

For an overview of Cisco IOS software configuration, refer to the *Cisco IOS Configuration Fundamentals Configuration Guide*.

For information on the conventions used in the Cisco IOS software documentation set, see the chapter “About Cisco IOS Software Documentation” located at the beginning of this book.

## Understanding Command Modes

You use the CLI to access Cisco IOS software. Because the CLI is divided into many different modes, the commands available to you at any given time depend on the mode you are currently in. Entering a question mark (?) at the CLI prompt allows you to obtain a list of commands available for each command mode.

When you log in to the CLI, you are in user EXEC mode. User EXEC mode contains only a limited subset of commands. To have access to all commands, you must enter privileged EXEC mode, normally by using a password. From privileged EXEC mode you can issue any EXEC command—user or privileged mode—or you can enter global configuration mode. Most EXEC commands are one-time commands. For example, **show** commands show important status information, and **clear** commands clear counters or interfaces. The EXEC commands are not saved when the software reboots.

Configuration modes allow you to make changes to the running configuration. If you later save the running configuration to the startup configuration, these changed commands are stored when the software is rebooted. To enter specific configuration modes, you must start at global configuration mode. From global configuration mode, you can enter interface configuration mode and a variety of other modes, such as protocol-specific modes.

ROM monitor mode is a separate mode used when the Cisco IOS software cannot load properly. If a valid software image is not found when the software boots or if the configuration file is corrupted at startup, the software might enter ROM monitor mode.

Table 1 describes how to access and exit various common command modes of the Cisco IOS software. It also shows examples of the prompts displayed for each mode.

**Table 1 Accessing and Exiting Command Modes**

| Command Mode            | Access Method                                                                                                                                      | Prompt             | Exit Method                                                                                                                                                     |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| User EXEC               | Log in.                                                                                                                                            | Router>            | Use the <b>logout</b> command.                                                                                                                                  |
| Privileged EXEC         | From user EXEC mode, use the <b>enable</b> EXEC command.                                                                                           | Router#            | To return to user EXEC mode, use the <b>disable</b> command.                                                                                                    |
| Global configuration    | From privileged EXEC mode, use the <b>configure terminal</b> privileged EXEC command.                                                              | Router(config)#    | To return to privileged EXEC mode from global configuration mode, use the <b>exit</b> or <b>end</b> command, or press <b>Ctrl-Z</b> .                           |
| Interface configuration | From global configuration mode, specify an interface using an <b>interface</b> command.                                                            | Router(config-if)# | To return to global configuration mode, use the <b>exit</b> command.<br>To return to privileged EXEC mode, use the <b>end</b> command, or press <b>Ctrl-Z</b> . |
| ROM monitor             | From privileged EXEC mode, use the <b>reload</b> EXEC command. Press the <b>Break</b> key during the first 60 seconds while the system is booting. | >                  | To exit ROM monitor mode, use the <b>continue</b> command.                                                                                                      |

For more information on command modes, refer to the “Using the Command-Line Interface” chapter in the *Cisco IOS Configuration Fundamentals Configuration Guide*.

## Getting Help

Entering a question mark (?) at the CLI prompt displays a list of commands available for each command mode. You can also get a list of keywords and arguments associated with any command by using the context-sensitive help feature.

To get help specific to a command mode, a command, a keyword, or an argument, use one of the following commands:

| Command                                | Purpose                                                                                                                  |
|----------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>help</b>                            | Provides a brief description of the help system in any command mode.                                                     |
| <i>abbreviated-command-entry?</i>      | Provides a list of commands that begin with a particular character string. (No space between command and question mark.) |
| <i>abbreviated-command-entry</i> <Tab> | Completes a partial command name.                                                                                        |
| <b>?</b>                               | Lists all commands available for a particular command mode.                                                              |
| <i>command ?</i>                       | Lists the keywords or arguments that you must enter next on the command line. (Space between command and question mark.) |

## Example: How to Find Command Options

This section provides an example of how to display syntax for a command. The syntax can consist of optional or required keywords and arguments. To display keywords and arguments for a command, enter a question mark (?) at the configuration prompt or after entering part of a command followed by a space. The Cisco IOS software displays a list and brief description of available keywords and arguments. For example, if you were in global configuration mode and wanted to see all the keywords or arguments for the **arap** command, you would type **arap ?**.

The <cr> symbol in command help output stands for “carriage return.” On older keyboards, the carriage return key is the Return key. On most modern keyboards, the carriage return key is the Enter key. The <cr> symbol at the end of command help output indicates that you have the option to press **Enter** to complete the command and that the arguments and keywords in the list preceding the <cr> symbol are optional. The <cr> symbol by itself indicates that no more arguments or keywords are available and that you must press **Enter** to complete the command.

Table 2 shows examples of how you can use the question mark (?) to assist you in entering commands. The table steps you through configuring an IP address on a serial interface on a Cisco 7206 router that is running Cisco IOS Release 12.0(3).

**Table 2**     *How to Find Command Options*

| Command                                                                                                                                                                                                                                                                                            | Comment                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Router> <b>enable</b><br>Password: <password><br>Router#                                                                                                                                                                                                                                           | Enter the <b>enable</b> command and password to access privileged EXEC commands. You are in privileged EXEC mode when the prompt changes to Router#.                                                                                                                                                                                                                                                                                                   |
| Router# <b>configure terminal</b><br>Enter configuration commands, one per line. End with CNTL/Z.<br>Router(config)#                                                                                                                                                                               | Enter the <b>configure terminal</b> privileged EXEC command to enter global configuration mode. You are in global configuration mode when the prompt changes to Router(config)#.                                                                                                                                                                                                                                                                       |
| Router(config)# <b>interface serial ?</b><br><0-6>        Serial interface number<br>Router(config)# <b>interface serial 4 ?</b><br>/<br>Router(config)# <b>interface serial 4/ ?</b><br><0-3>        Serial interface number<br>Router(config)# <b>interface serial 4/0</b><br>Router(config-if)# | Enter interface configuration mode by specifying the serial interface that you want to configure using the <b>interface serial</b> global configuration command.<br><br>Enter ? to display what you must enter next on the command line. In this example, you must enter the serial interface slot number and port number, separated by a forward slash.<br><br>You are in interface configuration mode when the prompt changes to Router(config-if)#. |

**Table 2**    *How to Find Command Options (continued)*

| Command                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Comment                                                                                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Router(config-if)# ?<br>Interface configuration commands:<br>.<br>.<br>.<br>ip                    Interface Internet Protocol config commands<br>keepalive            Enable keepalive<br>lan-name            LAN Name command<br>llc2                LLC2 Interface Subcommands<br>load-interval        Specify interval for load calculation for an interface<br>locaddr-priority    Assign a priority group<br>logging             Configure logging for interface<br>loopback            Configure internal loopback on an interface<br>mac-address        Manually set interface MAC address<br>mls                mls router sub/interface commands<br>mpoa                MPOA interface configuration commands<br>mtu                Set the interface Maximum Transmission Unit (MTU)<br>netbios            Use a defined NETBIOS access list or enable name-caching<br>no                Negate a command or set its defaults<br>nrzi-encoding       Enable use of NRZI encoding<br>ntp                Configure NTP<br>.<br>.<br>.<br>Router(config-if)# | Enter ? to display a list of all the interface configuration commands available for the serial interface. This example shows only some of the available interface configuration commands.                                                                           |
| Router(config-if)# <b>ip</b> ?<br>Interface IP configuration subcommands:<br>access-group        Specify access control for packets<br>accounting          Enable IP accounting on this interface<br>address            Set the IP address of an interface<br>authentication      authentication subcommands<br>bandwidth-percent   Set EIGRP bandwidth limit<br>broadcast-address   Set the broadcast address of an interface<br>cgmpp              Enable/disable CGMP<br>directed-broadcast Enable forwarding of directed broadcasts<br>dvmrp              DVMRP interface commands<br>hello-interval      Configures IP-EIGRP hello interval<br>helper-address      Specify a destination address for UDP broadcasts<br>hold-time           Configures IP-EIGRP hold time<br>.<br>.<br>.<br>Router(config-if)# <b>ip</b>                                                                                                                                                                                                                                        | Enter the command that you want to configure for the interface. This example uses the <b>ip</b> command.<br><br>Enter ? to display what you must enter next on the command line. This example shows only some of the available interface IP configuration commands. |

**Table 2**     *How to Find Command Options (continued)*

| Command                                                                                                                                                                                                             | Comment                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Router(config-if)# <b>ip address ?</b><br>A.B.C.D                      IP address<br>negotiated                      IP Address negotiated over PPP<br>Router(config-if)# <b>ip address</b>                         | <p>Enter the command that you want to configure for the interface. This example uses the <b>ip address</b> command.</p> <p>Enter <b>?</b> to display what you must enter next on the command line. In this example, you must enter an IP address or the <b>negotiated</b> keyword.</p> <p>A carriage return (&lt;cr&gt;) is not displayed; therefore, you must enter additional keywords or arguments to complete the command.</p> |
| Router(config-if)# <b>ip address 172.16.0.1 ?</b><br>A.B.C.D                      IP subnet mask<br>Router(config-if)# <b>ip address 172.16.0.1</b>                                                                 | <p>Enter the keyword or argument you want to use. This example uses the 172.16.0.1 IP address.</p> <p>Enter <b>?</b> to display what you must enter next on the command line. In this example, you must enter an IP subnet mask.</p> <p>A &lt;cr&gt; is not displayed; therefore, you must enter additional keywords or arguments to complete the command.</p>                                                                     |
| Router(config-if)# <b>ip address 172.16.0.1 255.255.255.0 ?</b><br>secondary                      Make this IP address a secondary address<br><cr><br>Router(config-if)# <b>ip address 172.16.0.1 255.255.255.0</b> | <p>Enter the IP subnet mask. This example uses the 255.255.255.0 IP subnet mask.</p> <p>Enter <b>?</b> to display what you must enter next on the command line. In this example, you can enter the <b>secondary</b> keyword, or you can press <b>Enter</b>.</p> <p>A &lt;cr&gt; is displayed; you can press <b>Enter</b> to complete the command, or you can enter another keyword.</p>                                            |
| Router(config-if)# <b>ip address 172.16.0.1 255.255.255.0</b><br>Router(config-if)#                                                                                                                                 | <p>In this example, Enter is pressed to complete the command.</p>                                                                                                                                                                                                                                                                                                                                                                  |

## Using the no and default Forms of Commands

Almost every configuration command has a **no** form. In general, use the **no** form to disable a function. Use the command without the **no** keyword to reenable a disabled function or to enable a function that is disabled by default. For example, IP routing is enabled by default. To disable IP routing, use the **no ip routing** command; to reenable IP routing, use the **ip routing** command. The Cisco IOS software command reference publications provide the complete syntax for the configuration commands and describe what the **no** form of a command does.

Configuration commands also can have a **default** form, which returns the command settings to the default values. Most commands are disabled by default, so in such cases using the **default** form has the same result as using the **no** form of the command. However, some commands are enabled by default and

have variables set to certain default values. In these cases, the **default** form of the command enables the command and sets the variables to their default values. The Cisco IOS software command reference publications describe the effect of the **default** form of a command if the command functions differently than the **no** form.

## Saving Configuration Changes

Use the **copy system:running-config nvram:startup-config** command to save your configuration changes to the startup configuration so that the changes will not be lost if the software reloads or a power outage occurs. For example:

```
Router# copy system:running-config nvram:startup-config
Building configuration...
```

It might take a minute or two to save the configuration. After the configuration has been saved, the following output appears:

```
[OK]
Router#
```

On most platforms, this task saves the configuration to NVRAM. On the Class A Flash file system platforms, this task saves the configuration to the location specified by the CONFIG\_FILE environment variable. The CONFIG\_FILE variable defaults to NVRAM.

## Filtering Output from the show and more Commands

In Cisco IOS Release 12.0(1)T and later releases, you can search and filter the output of **show** and **more** commands. This functionality is useful if you need to sort through large amounts of output or if you want to exclude output that you need not see.

To use this functionality, enter a **show** or **more** command followed by the “pipe” character (**|**); one of the keywords **begin**, **include**, or **exclude**; and a regular expression on which you want to search or filter (the expression is case-sensitive):

```
command | {begin | include | exclude} regular-expression
```

The output matches certain lines of information in the configuration file. The following example illustrates how to use output modifiers with the **show interface** command when you want the output to include only lines in which the expression “protocol” appears:

```
Router# show interface | include protocol

FastEthernet0/0 is up, line protocol is up
Serial4/0 is up, line protocol is up
Serial4/1 is up, line protocol is up
Serial4/2 is administratively down, line protocol is down
Serial4/3 is administratively down, line protocol is down
```

For more information on the search and filter functionality, refer to the “Using the Command-Line Interface” chapter in the *Cisco IOS Configuration Fundamentals Configuration Guide*.

# Identifying Supported Platforms

Cisco IOS software is packaged in feature sets consisting of software images that support specific platforms. The feature sets available for a specific platform depend on which Cisco IOS software images are included in a release. To identify the set of software images available in a specific release or to find out if a feature is available in a given Cisco IOS software image, see the following sections:

- Using Feature Navigator
- Using Software Release Notes

## Using Feature Navigator

Feature Navigator is a web-based tool that enables you to quickly determine which Cisco IOS software images support a particular set of features and which features are supported in a particular Cisco IOS image.

Feature Navigator is available 24 hours a day, 7 days a week. To access Feature Navigator, you must have an account on Cisco.com. If you have forgotten or lost your account information, e-mail the Contact Database Administration group at [cdbadmin@cisco.com](mailto:cdbadmin@cisco.com). If you do not have an account on Cisco.com, go to <http://www.cisco.com/register> and follow the directions to establish an account.

To use Feature Navigator, you must have a JavaScript-enabled web browser such as Netscape 3.0 or later, or Internet Explorer 4.0 or later. Internet Explorer 4.0 always has JavaScript enabled. To enable JavaScript for Netscape 3.x or Netscape 4.x, follow the instructions provided with the web browser. For JavaScript support and enabling instructions for other browsers, check with the browser vendor.

Feature Navigator is updated when major Cisco IOS software releases and technology releases occur. You can access Feature Navigator at the following URL:

<http://www.cisco.com/go/fn>

## Using Software Release Notes

Cisco IOS software releases include release notes that provide the following information:

- Platform support information
- Memory recommendations
- Microcode support information
- Feature set tables
- Feature descriptions
- Open and resolved severity 1 and 2 caveats for all platforms

Release notes are intended to be release-specific for the most current release, and the information provided in these documents may not be cumulative in providing information about features that first appeared in previous releases.

