


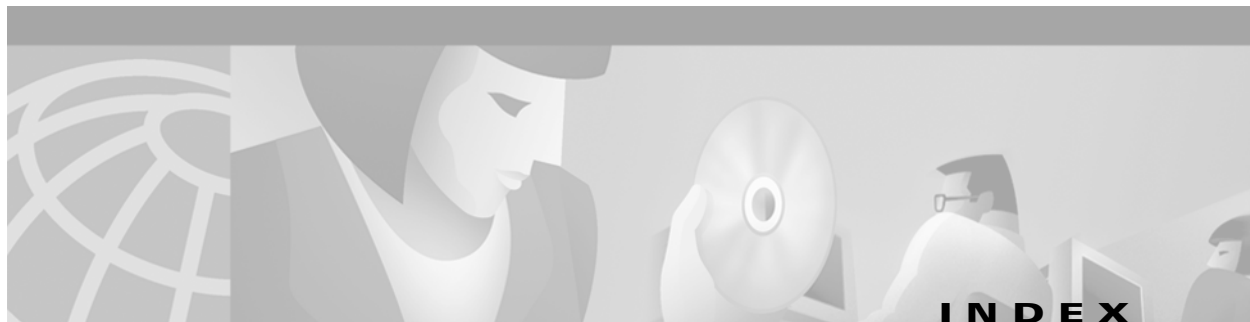

Symbols

<cr> [xv](#)

? command [xiv](#)

A

AAA account identification

off-ramp fax location, specifying [VR-472, VR-474](#)

AAA accounting services

off-ramp fax service, enabling [VR-470 to VR-471](#)

on-ramp fax service, enabling [VR-464](#)

AAA authentication services

enabling on-ramp [VR-465](#)

aaa nas port voip command [VR-2](#)

ABCD signaling

OOS bit patterns, defining [VR-876](#)

accounting

overloaded Acct-Session-Id field [VR-353](#)

syslog messages [VR-356](#)

vendor-specific RADIUS attributes [VR-355](#)

acc-qos command [VR-3](#)

alarm-trigger command [VR-5](#)

aliases

SMTP off-ramp fax host name, specifying [VR-483](#)

alias static command [VR-7](#)

alt-dial command [VR-9](#)

answer-address command [VR-10](#)

application command [VR-12](#)

arq reject-unknown-prefix command [VR-14](#)

as command [VR-16](#)

asp command [VR-19](#)

ASR (application-specific routing)

proxy bandwidth maximum, specifying [VR-360](#)

ATM interface NSAP addresses, displaying [VR-649](#)

atm scramble-enable command [VR-22](#)

atm video aesa command [VR-23](#)

audio-prompt load command [VR-25](#)

auto-cut-through command [VR-26](#)

B

backhaul-session-manager command [VR-27](#)

bandwidth command [VR-29](#)

bandwidth remote command [VR-31](#)

battery-reversal command [VR-32](#)

block-caller command [VR-34](#)

Blue Alarm

See DS1 links, shutting down

busyout forced command [VR-36](#)

busyout monitor command [VR-38](#)

busyout monitor probe command [VR-41](#)

busyout seize command [VR-43](#)

C

cac master command [VR-46](#)

cadence-list command [VR-47](#)

cadence-max-off-time command [VR-49](#)

cadence-min-on-time command [VR-50](#)

cadence-variation command [VR-51](#)

call application cache reload time command [VR-52](#)

call application voice access-method command [VR-55](#)

call application voice accounting enable command [VR-57](#)

call application voice accounting-list command [VR-58](#)

call application voice authen-list command [VR-59](#)

- call application voice authen-method command [VR-61](#)
- call application voice authentication enable command [VR-63](#)
- call application voice command [VR-53](#)
- call application voice global-password command [VR-64](#)
- call application voice language command [VR-65](#)
- call application voice load command [VR-68](#)
- call application voice pin-len command [VR-69](#)
- call application voice redirect-number command [VR-72](#)
- call application voice retry-count command [VR-75](#)
- call application voice set-location command [VR-78](#)
- call application voice uid-len command [VR-81](#)
- call application voice uid-length command [VR-81](#)
- call application voice warning-time command [VR-84](#)
- call completion without M-lead response, enabling [VR-26](#)
- called-number dial-peer configuration command [VR-114](#)
- caller-id alerting dsp-pre-alloc command [VR-118](#)
- caller-id alerting line-reversal command [VR-120](#)
- caller-id alerting pre-ring command [VR-122](#)
- caller-id alerting ring command [VR-124](#)
- caller-id attenuation command [VR-126](#)
- caller-id block command [VR-127](#)
- Caller ID Call Blocking, configuring [VR-34](#)
- caller-id command [VR-116](#)
- caller-id enable command [VR-129](#)
- call fallback
 - configuration, displaying [VR-668](#)
 - statistics, displaying [VR-669](#)
- call fallback active command [VR-87](#)
- call fallback cache-size command [VR-89](#)
- call fallback instantaneous-value-weight command [VR-92](#)
- call fallback jitter-probe num-packets command [VR-94](#)
- call fallback jitter-probe precedence command [VR-96](#)
- call fallback jitter-probe priority-queue command [VR-97](#)
- call fallback key-chain command [VR-99](#)
- call fallback map target address-list command [VR-100](#)
- call fallback map target subnet command [VR-102](#)
- call fallback monitor command [VR-104](#)
- call fallback probe-timeout command [VR-105](#)
- call fallback threshold delay loss command [VR-106](#)
- call fallback threshold icpif command [VR-108](#)
- calling-number outbound command [VR-131](#)
- call rsvp-sync command [VR-110](#)
- call rsvp-sync resv-timer command [VR-111](#)
- calls
 - authorization, forcing [VR-618](#)
 - blocking new [VR-438](#)
 - called party number translation rules, applying [VR-588](#)
 - call history table attributes, specifying [VR-247](#)
 - calling party number translation rules, applying [VR-588](#)
 - Cisco 800 series router CSM status, displaying [VR-753](#)
 - country-specific defaults, configuring [VR-529](#)
 - digits to forward for voice, specifying [VR-324](#)
 - disconnecting [VR-941](#)
 - disconnect notification, configuring [VR-533](#)
 - H.323 connect procedures, forcing [VR-361](#)
 - H.323 proxy calls, displaying [VR-758, VR-759](#)
 - idle state timing parameter, configuring [VR-882](#)
 - POTS dial peer call leg digits, stripping [VR-258](#)
 - session protocol on packet network, selecting [VR-601](#)
 - VoFR session protocol on packet network, selecting [VR-603](#)
 - voice and fax active call information, displaying [VR-655](#)
- calls, video
 - configuring [VR-252](#)
 - history, displaying [VR-679](#)
 - statistics, displaying [VR-678](#)
 - status summary, displaying [VR-821](#)
- call start command [VR-112](#)
- call-waiting command [VR-113](#)
- cap-list vfc command [VR-133](#)
- card type command [VR-134](#)
- carriage return (<cr>) [xv](#)
- CAs (certificate authorities)
 - root, specifying [VR-999](#)
- CAS (channel-associated signalling)
 - state, displaying [VR-695](#)

- cautions, usage in text [x](#)
- ccm-manager application redundant-link port command [VR-135](#)
- ccm-manager mgcp command [VR-136](#)
- ccm-manager redundant-host command [VR-137](#)
- ccm-manager switchback command [VR-138](#)
- ccs connect (controller) command [VR-139](#), [VR-141](#)
- ccs encap frf11 command [VR-143](#)
- CDAPI (Call Distributor Application Programming Interface)
 - registered applications, displaying [VR-688](#)
- CES (circuit emulation service)
 - ATM encapsulation, enabling [VR-294](#)
 - ATM PVC, mapping to [VR-148](#)
 - cell-loss integration period, setting [VR-144](#)
 - clock, setting [VR-146](#)
 - clocking signals, specifying [VR-187](#)
 - receive buffer, configuring [VR-150](#)
 - structured type, configuring [VR-154](#)
 - synchronous clock mode, setting [VR-147](#)
 - transmit buffer, configuring [VR-152](#)
- ces cell-loss-integration-period command [VR-144](#)
- ces-clock command [VR-146](#)
- ces clockmode synchronous command [VR-147](#)
- ces connect command [VR-148](#)
- ces initial-delay command [VR-150](#)
- ces max-buf-size command [VR-152](#)
- ces service command [VR-154](#)
- Cisco 800 series routers
 - telephone port characteristics, displaying [VR-754](#)
- Cisco IOS configuration changes, saving [xviii](#)
- Cisco MC3810 universal concentrator
 - ATM scrambling on E1, enabling [VR-22](#)
 - PCM signal companding standard, selecting [VR-206](#)
- CiscoSecure for Windows NT
 - password, defining [VR-459](#)
- clear backhaul-session-manager group command [VR-156](#)
- clear call fallback cache command [VR-157](#)
- clear call fallback stats command [VR-158](#)
- clear controllers call-counters command [VR-159](#)
- clear csm-statistics command [VR-174](#), [VR-175](#)
- clear h323 gatekeeper call command [VR-176](#)
- clear ip sctp statistics [VR-178](#)
- clear mgcp statistics command [VR-179](#)
- clear rlm group command [VR-180](#)
- clear rudpv0 statistics command [VR-182](#)
- clear rudpv1 statistics command [VR-183](#)
- clear sgcp statistics command [VR-184](#)
- clear ss7 sm stats command [VR-185](#)
- clear voice port command [VR-186](#)
- clock-select command [VR-187](#)
- codec (dial-peer) command [VR-188](#)
- codec (dsp) command [VR-195](#)
- codec (voice-port) command [VR-197](#)
 - See* codec (dial-peer) command
- codec aal2-profile command [VR-198](#)
- codec complexity command [VR-200](#)
- codec preference command [VR-202](#)
- codecs
 - configuring [VR-440](#)
 - digits on compressed, forwarding [VR-443](#)
 - list of preferred [VR-202](#)
 - local video serial interface location, specifying [VR-526](#)
 - pass-through analog data, enabling [VR-447](#)
 - selection preference list, assigning [VR-1034](#), [VR-1039](#)
 - video ATM dial peer, defining [VR-252](#)
 - voice coder rate of speech, specifying [VR-188](#)
- comfort-noise command [VR-205](#)
- command modes, understanding [xiii to xiv](#)
- commands
 - context-sensitive help for abbreviating [xiv](#)
 - default form, using [xvii](#)
 - no form, using [xvii](#)
- command syntax
 - conventions [ix](#)
 - displaying (example) [xv](#)
- compand-type command [VR-206](#)
- condition command [VR-207](#)

configurations, saving [xviii](#)
 connect (atm) command [VR-209](#)
 connect (drop-and-insert) command [VR-211](#)
 connect (global) command [VR-213](#)
 connect command [VR-211](#)
 connection command [VR-215](#)
 connections
 ATM T1 and E1, defining [VR-209](#)
 drop-and-insert statistics, displaying [VR-691](#)
 T1 and E1 TDM cross-connect
 configuring slots [VR-935](#)
 defining [VR-211](#)
 timeout, configuring [VR-219](#)
 voice port, specifying [VR-215](#)
 connection-timeout command [VR-219](#)
 connect voice command [VR-214](#)
 copy flash vfc command [VR-221](#)
 copy tftp vfc command [VR-222](#)
 cptone command [VR-223](#)
 cross-connect command [VR-228](#)
 CSI (called subscriber identifier)
 fax, defining [VR-308](#)
 CSM (call switching module)
 statistics
 clearing [VR-174 to VR-175](#)
 displaying [VR-701](#)
 customer-id command [VR-230](#)

D

default [VR-234](#)
 default command [VR-234](#)
 default-file vfc command [VR-235](#)
 define command [VR-236](#)
 delete vfc command [VR-238](#)
 description (dspfarm) command [VR-240](#)
 description command [VR-239](#)
 destination-pattern (interface) command [VR-244](#)
 destination-pattern (ISDN) command [VR-244](#)
 destination-pattern command [VR-241](#)
 detect v54 channel-group command [VR-245](#)
 device-id command [VR-246](#)
 dial-control-mib command [VR-247](#)
 dialing
 delayed, wink pulse duration [VR-977](#)
 dial-peer hunt command [VR-248](#)
 dial peers
 alternate dial-out string [VR-9](#)
 application, enabling [VR-12](#)
 association with telephone number, displaying [VR-716](#)
 ATM video NSAP address, specifying [VR-505](#)
 call leg numbering type, selecting [VR-508](#)
 configuration, displaying [VR-708](#)
 fax relay VoIP ECM, disabling [VR-309](#)
 fax transmission rate, establishing [VR-306](#)
 FRF.11 Annex A frames, generating [VR-283](#)
 hunting, disabling when call fails [VR-377](#)
 hunting after user-busy disconnect, configuring [VR-1049](#)
 hunt selection order, specifying [VR-248](#)
 information digits, specifying [VR-390](#)
 information type, selecting [VR-391](#)
 maximum connections, specifying [VR-431](#)
 maximum redirect servers, setting [VR-435](#)
 Modem Passthrough over VoIP, configuring [VR-479](#)
 network-specific address, specifying [VR-607, VR-610](#)
 packet priority (IP Precedence), setting [VR-396](#)
 roaming capability, enabling [VR-584](#)
 shutting down [VR-864](#)
 signal type, selecting [VR-896](#)
 technology prefix, specifying [VR-937](#)
 video configuration, displaying [VR-708](#)
 voice configuration, displaying [VR-709](#)
 VoIP fax protocol, specifying [VR-302, VR-304](#)
 VoIP H.225 TCP timeout value, setting [VR-359](#)
 VoIP network-specific address, specifying [VR-613](#)
 VoIP poor voice quality notifications,
 generating [VR-901](#)
 dial-peer terminator command [VR-250](#)

- dial-peer video command [VR-252](#)
- dial-peer voice command [VR-253](#)
- dial-type command [VR-256](#)
- DID (direct inward dial) call treatment, enabling [VR-261](#)
- digit-strip command [VR-258](#)
- direct-inward-dial command [VR-261](#)
- disc_pi_off command [VR-262](#)
- disconnect-ack command [VR-263](#)
- documentation
 - conventions [ix](#)
 - feedback, providing [xi](#)
 - modules [v to vii](#)
 - online, accessing [x](#)
 - ordering [xi](#)
- Documentation CD-ROM [x](#)
- documents and resources, supporting [viii](#)
- ds0 busyout command [VR-264](#)
- ds0-group command [VR-266, VR-555](#)
- DS0 groups
 - cross connecting [VR-228](#)
 - DTMF inter-digit timer, configuring [VR-285](#)
- DS0 high water marks, clearing [VR-159](#)
- DS0 timeslot
 - busyout state, forcing [VR-264](#)
 - logical voice ports, specifying [VR-266](#)
- DS1 links, shutting down [VR-865](#)
- DSN (delivery status notice)
 - delivery options, configuring [VR-277](#)
- dsn command [VR-277](#)
- DSP (digital signal processor)
 - busy out test [VR-957](#)
 - enabling [VR-280](#)
 - interface, description [VR-239, VR-240](#)
 - playout buffers, tuning [VR-513, VR-517](#)
 - playout delay mode, selecting [VR-519, VR-521](#)
 - reset test [VR-959](#)
 - resetting [VR-566](#)
 - restore activity test [VR-960, VR-962](#)
 - shutting down [VR-863](#)

- statistics, displaying [VR-737](#)
- VFC summary, displaying [VR-852, VR-855](#)
- VoFR frame sequence numbers, generating [VR-592](#)
- voice channel status, displaying [VR-824, VR-828](#)
- dspint dspfarm command [VR-280](#)
- dtmf-relay (Voice over Frame Relay) command [VR-283](#)
- dtmf-relay (Voice over IP) command [VR-281](#)
- dtmf timer inter-digit command [VR-285](#)

E

- E&M interface type, specifying [VR-1009](#)
- E&M MELCAS (Mercury Exchange Limited Channel Associated Signaling) voice signaling
 - receive bits, ignoring [VR-381](#)
 - transmit and receive bits, defining [VR-236](#)
- E.164 addresses
 - gateway, registering to [VR-562](#)
- E.164 telephone numbers
 - destination pattern [VR-241](#)
 - incoming call, identifying to dial peer [VR-10](#)
- E1
 - CCS cross-connect, configuring [VR-478](#)
 - CCS frame-forwarding, configuring [VR-478](#)
 - contiguous bearer channel handling, configuring [VR-399](#)
 - controller interface mode, configuring [VR-476](#)
 - microcode images, reloading [VR-458](#)
 - out-of-service alarm, configuring [VR-5](#)
 - signal levels, attenuating [VR-287, VR-288](#)
- echo-cancel comfort-noise command [VR-286](#)
- echo-cancel compensation command [VR-287](#)
- echo-cancel coverage command [VR-288](#)
- echo-cancel enable (controller) command [VR-292](#)
- echo-cancel enable command [VR-290](#)
- echo cancellation processor
 - loopback mode, configuring [VR-293](#)
- echo-cancel loopback command [VR-293](#)
- echo suppression, nonlinear processing [VR-504](#)

encapsulation atm-ces command [VR-294](#)
 encapsulation ftc-trunk command [VR-296](#)
 encapsulations
 voice types, specifying [VR-1058](#)
 encryption algorithm, setting [VR-297](#)
 encryption command [VR-297](#)
 erase vfc command [VR-299](#)
 EXEC commands
 show dialplan incall number [VR-712](#)
 expect-factor command [VR-300](#)
 external applications, triggering [VR-597](#)

F

fax cover sheet
 e-mail, generating from [VR-315](#), [VR-316](#)
 header data, specifying [VR-317](#), [VR-320](#)
 personalizing [VR-312](#)
 standard, generating [VR-313](#)
 fax header information, configuring [VR-310](#)
 fax image resolution, specifying [VR-385](#)
 fax images, encoding method [VR-383](#)
 fax protocol (dial-peer) command [VR-302](#)
 fax protocol (voice-service) command [VR-304](#)
 fax rate command [VR-306](#)
 fax receive called-subscriber [VR-308](#)
 fax receive called-subscriber command [VR-308](#)
 fax-relay ecm disable command [VR-309](#)
 fax send center-header [VR-310](#)
 fax send center-header command [VR-310](#)
 fax send coverage comment [VR-312](#)
 fax send coverage comment command [VR-312](#)
 fax send coverage e-mail-controllable [VR-313](#)
 fax send coverage e-mail-controllable command [VR-313](#)
 fax send coverage enable [VR-315](#)
 fax send coverage enable command [VR-315](#)
 fax send coverage show-detail [VR-316](#)
 fax send coverage show-detail command [VR-316](#)
 fax send left-header [VR-317](#)
 fax send left-header command [VR-317](#)
 fax send max-speed [VR-319](#)
 fax send max-speed command [VR-319](#)
 fax send right-header [VR-320](#)
 fax send right-header command [VR-320](#)
 fax send transmitting-subscriber command [VR-322](#)
 fax transmission rate, establishing [VR-319](#)
 Feature Navigator
 See platforms, supported
 filtering output, show and more commands [xviii](#)
 firmware, unbundling VFC [VR-1013](#)
 forward-alarms command [VR-323](#)
 forward-digits command [VR-324](#)
 frag-pre-queuing command [VR-328](#)
 frame-relay voice bandwidth command [VR-326](#)
 freq-max-power command [VR-331](#)
 freq-min-power command [VR-332](#)
 freq-pair command [VR-333](#)
 freq-power-twist command [VR-335](#)
 FRF.11 subchannel information, displaying [VR-719](#)
 FRF.11 trunk
 voice class, creating [VR-1040](#), [VR-1042](#), [VR-1044](#)
 ftc-trunk frame-relay-dlci command [VR-336](#)
 ftc-trunk management-dlci command [VR-337](#)
 ftc-trunk management-protocol command [VR-338](#)
 FXO (foreign exchange office)
 analog-to-digital gain offset, specifying [VR-422](#)
 battery polarity reversal, configuring [VR-32](#)
 guard-out durations, specifying [VR-985](#)
 FXO supervisory disconnect
 enabling [VR-930](#)
 tone, assigning [VR-933](#)
 tone detection parameters voice class, creating [VR-1036](#)
 voice port tone detection, configuring [VR-931](#)
 FXS (foreign exchange station)
 analog-to-digital gain offset, specifying [VR-422](#)
 battery polarity reversal, configuring [VR-32](#)
 disconnect signal acknowledgment,
 configuring [VR-263](#)

hook flash duration, specifying [VR-986](#)
 idle port voltage, specifying [VR-379](#)
 voice port ring
 cadence, specifying [VR-578](#)
 frequency, specifying [VR-580](#)
 specifying number of [VR-582](#)

G

gatekeeper command [VR-340](#)
 gatekeepers
 active calls, displaying [VR-722](#)
 ARQ requests, rejecting [VR-14](#)
 call disconnect, forcing [VR-176](#)
 disabling [VR-866](#)
 full status, displaying [VR-731](#)
 H.323, specifying [VR-363](#)
 listener port, configuring [VR-596](#)
 local zone, configuring [VR-1065](#)
 LRQs
 delay, configuring [VR-429](#)
 forwarding [VR-424](#)
 rejecting [VR-427](#)
 sending multiple [VR-429](#)
 sending sequential [VR-430](#)
 registered endpoint status, displaying [VR-724](#)
 registered server triggers, displaying [VR-729](#)
 remote zone, configuring [VR-1070](#)
 security, enabling [VR-590](#)
 static entry, creating [VR-7](#)
 technology prefix, configuring [VR-357](#)
 zone accessibility, configuring [VR-1062](#)
 zone bandwidth, configuring [VR-1064](#)
 zone prefix, configuring [VR-1067](#)
 zone prefix table, displaying [VR-732](#)
 zone status, displaying [VR-733](#)
 zone subnetworks, configuring [VR-1072](#)
 gateway command [VR-341](#)
 gateways

 alert message on terminating, enabling [VR-1028](#)
 H.323 resource availability, reporting [VR-567](#)
 Modem Passthrough over VoIP, configuring [VR-481](#)
 SMTP server response MDN, processing [VR-485](#)
 status, displaying [VR-735](#)
 technology prefix table, displaying [VR-726](#)
 global configuration mode, summary of [xiv](#)
 group auto-reset command [VR-343](#)
 group command [VR-342](#)
 group cumulative-ack command [VR-344](#)
 group out-of-sequence command [VR-345](#)
 group receive command [VR-346](#)
 group retransmit command [VR-347](#)
 group timer cumulative ack command [VR-348](#)
 group timer keepalive command [VR-349](#)
 group timer retransmit command [VR-350](#)
 group timer transfer command [VR-351](#)
 gw-accounting command [VR-352](#)
 gw-accounting h323 command [VR-352](#), [VR-354](#)
 gw-accounting h323 syslog command [VR-356](#)
 gw-type-prefix command [VR-357](#)

H

H.323 accounting, enabling [VR-352](#)
 H.323 gateway
 call disconnect, enabling [VR-262](#)
 DTMF tones, relaying [VR-281](#)
 gatekeeper ID name, defining [VR-366](#)
 gatekeeper location, defining [VR-367](#)
 interface, configuring [VR-369](#)
 resource statistics, displaying [VR-681](#)
 technology index, defining [VR-370](#)
 threshold settings, displaying [VR-683](#)
 H.323 proxy
 alias, registering [VR-372](#)
 calls, displaying [VR-758](#), [VR-759](#)
 local and remote zone communication,
 configuring [VR-1016](#)

- status, displaying [VR-765](#)
 - H.323 traffic
 - bandwidth maximum, specifying [VR-29](#)
 - bandwidth total, specifying [VR-31](#)
 - H.323 voice class, creating [VR-1038](#)
 - h225 timeout tcp establish command [VR-359](#)
 - h323 asr bandwidth command [VR-360](#)
 - h323 asr command [VR-360](#)
 - h323 call start command [VR-361](#)
 - h323 gatekeeper command [VR-363](#)
 - h323-gateway voip bind srcaddr command [VR-365](#)
 - h323-gateway voip h323-id command [VR-366](#)
 - h323-gateway voip id command [VR-367](#)
 - h323-gateway voip interface command [VR-369](#)
 - h323-gateway voip tech-prefix command [VR-370](#)
 - h323 h323-id command [VR-372](#)
 - h323 interface command [VR-373](#)
 - h323 qos command [VR-375](#)
 - h323 t120 command [VR-376](#)
 - hardware platforms
 - See* platforms, supported
 - HDLC interface
 - VoHDLC segmentation size, defining [VR-1048](#)
 - help command [xiv](#)
 - huntstop command [VR-377](#)
-
- I**
- ICPIF (Impairment/Calculated Planning Impairment Factor)
 - estimates
 - clearing [VR-157](#)
 - displaying [VR-666](#)
 - RTR values, displaying [VR-939](#)
 - VoIP dial peers, specifying [VR-378](#)
 - icpif command [VR-378](#)
 - idle-voltage command [VR-379](#)
 - ignore command [VR-381](#)
 - image encoding command [VR-383](#)
 - image resolution command [VR-385](#)
 - imaging encoding command [VR-383](#)
 - impedance command [VR-387](#)
 - incoming called-number command [VR-388](#)
 - indexes, master [viii](#)
 - info-digits command [VR-390](#)
 - information-type command [VR-391](#)
 - input gain command [VR-392](#)
 - interface (RLM server) command [VR-394](#)
 - interface configuration mode, summary of [xiv](#)
 - IP
 - addresses
 - configuring [VR-394](#)
 - ip circuit command [VR-396](#)
 - ip precedence (dial-peer) command [VR-396](#)
 - ip udp checksum command [VR-397](#)
 - ISDN
 - subscriber line [VR-402](#)
 - telephone number destination pattern [VR-244](#)
 - isdn bind-l3 command [VR-398](#)
 - ISDN BRI
 - line power supply, configuring [VR-413](#)
 - state, displaying [VR-695](#)
 - isdn contiguous-bchan command [VR-399](#)
 - isdn global-disconnect command [VR-400](#)
 - isdn i-number command [VR-402](#)
 - isdn network-failure-cause command [VR-403](#)
 - ISP (Internet service provider) address,
 - configuring [VR-1014](#)
 - IVR (interactive voice response)
 - dynamic audio files [VR-411](#)
 - file autoloading [VR-406](#), [VR-408](#), [VR-409](#)
 - script, displaying [VR-662](#)
 - ivr autoloading command [VR-406](#)
 - ivr autoloading mode command [VR-409](#)
 - ivr autoloading retry command [VR-408](#)
 - ivr prompt memory command [VR-411](#)

K

keepalives

signaling packet interval, configuring [VR-874](#)

L

line-power command [VR-413](#)

link (RLM) command [VR-415](#)

loopback (T1 controller) command [VR-419](#)

loop-detect command [VR-421](#)

loss-plan command [VR-422](#)

lrq forward-queries command [VR-424](#)

lrq reject-unknown-prefix command [VR-427](#)

lrq timeout blast window command [VR-429](#)

lrq timeout seq delay command [VR-430](#)

M

max-conn command [VR-431](#)

max-connection command [VR-432](#)

max-forwards command [VR-434](#)

max-redirects command [VR-435](#)

MDN (message disposition notice)

address for, specifying [VR-495](#)

off-ramp gateway process, specifying [VR-485](#)

requesting [VR-436](#)

mdn command [VR-436](#)

media gateway

package capability, configuring [VR-441](#), [VR-448](#)

messages

raw telephone equipment, displaying [VR-766](#)

MGCP (Media Gateway Control Protocol) statistical
counters, resetting [VR-179](#)

mgcp block-newcalls command [VR-438](#)

mgcp call-agent command [VR-439](#)

mgcp codec command [VR-440](#)

mgcp command [VR-437](#)

mgcp default-package command [VR-441](#)

mgcp dtmf-relay command [VR-443](#)

mgcp ip-tos command [VR-444](#)

mgcp max-waiting-delay command [VR-446](#)

mgcp modem passthru command [VR-447](#)

mgcp package-capability command [VR-448](#)

mgcp playout command [VR-450](#)

mgcp quality-threshold command [VR-451](#)

mgcp request retries command [VR-453](#)

mgcp request timeout command [VR-454](#)

mgcp restart-delay command [VR-455](#)

mgcp sdp simple command [VR-456](#)

mgcp vad command [VR-457](#)

MIB, descriptions online [viii](#)

microcode reload controller command [VR-458](#)

mmoip aaa global-password command [VR-459](#)

mmoip aaa method fax accounting command [VR-460](#)

mmoip aaa method fax authentication command [VR-462](#)

mmoip aaa receive-accounting enable command [VR-464](#)

mmoip aaa receive-authentication enable
command [VR-465](#)

mmoip aaa receive-id primary command [VR-466](#)

mmoip aaa receive-id secondary command [VR-468](#)

mmoip aaa send-accounting enable command [VR-470](#)

mmoip aaa send-authentication enable command [VR-471](#)

mmoip aaa send-id primary command [VR-472](#)

mmoip aaa send-id secondary command [VR-474](#)

mode (Voice over ATM) command [VR-476](#)

mode ccs command [VR-478](#)

modem passthrough (dial-peer) command [VR-479](#)

modem passthrough (voice-service) command [VR-481](#)

modes

See command modes

mta receive aliases command [VR-483](#)

mta receive generate-mdn command [VR-485](#)

mta receive maximum-recipients command [VR-487](#)

mta send mail-from command [VR-489](#)

mta send origin-prefix command [VR-491](#)

mta send postmaster command [VR-493](#)

mta send return-receipt-to command [VR-495](#)

mta send server command [VR-497](#)
 mta send subject command [VR-499](#)
 music-threshold command [VR-500](#)

N

Nariwake service registered caller ring cadence,
 configuring [VR-564](#)
 network-clock base-rate command [VR-502](#)
 network clocks
 base rate, configuring [VR-502](#)
 setings, displaying [VR-690](#)
 switch delay time, setting [VR-503](#)
 network-clock-switch command [VR-503](#)
 non-linear command [VR-504](#)
 notes, usage in text [x](#)
 nsap command [VR-505](#)
 numbering-type command [VR-508](#)
 num-exp command [VR-506](#)

O

OOS (out-of-service) signal
 connection restart timeout, specifying [VR-886](#)
 lost signal delay time, specifying [VR-894](#)
 pattern, specifying [VR-880](#), [VR-890](#), [VR-892](#)
 standby state, configuring [VR-888](#)
 timing parameters, specifying [VR-884](#)
 operation command [VR-510](#)
 output attenuation command [VR-511](#)

P

platforms, supported
 Feature Navigator, identify using [xix](#)
 release notes, identify using [xix](#)
 playout-delay (dial peer) command [VR-513](#)
 playout-delay (voice-port) command [VR-517](#)
 playout-delay command [VR-513](#), [VR-517](#)

playout-delay mode (dial-peer) command [VR-519](#)
 playout-delay mode (voice-port) command [VR-521](#)
 port (dial peer) command [VR-523](#)
 port (voice) command [VR-523](#)
 port media command [VR-526](#)
 port signal command [VR-527](#)
 pots call-waiting command [VR-528](#)
 pots country command [VR-529](#)
 pots dialing-method command [VR-531](#)
 pots disconnect-supervision command [VR-533](#)
 pots disconnect-time command [VR-535](#)
 pots distinctive-ring-guard-time command [VR-537](#)
 pots encoding command [VR-539](#)
 pots line-type command [VR-541](#)
 pots ringing-freq command [VR-543](#)
 pots silence-time [VR-545](#)
 pots silence-time command [VR-545](#)
 pots tone-source [VR-547](#)
 pots tone-source command [VR-547](#)
 pre-dial delay command [VR-549](#)
 preference command [VR-550](#)
 prefix command [VR-553](#)
 pri-group command [VR-555](#)
 pri-group nec-fusion command [VR-557](#)
 privileged EXEC mode, summary of [xiv](#)
 progress_ind command [VR-558](#)
 prompts, system [xiv](#)
 protocol rlm port command [VR-417](#)
 proxy h323 command [VR-560](#)

Q

QoS (quality of service)
 dial peer, specifying [VR-565](#)
 H.323 gateway, enabling on [VR-375](#)
 RSVP attempted call statistics, displaying [VR-686](#)
 RSVP synchronization, displaying [VR-684](#)
 VoIP dial peer, defining for [VR-3](#)
 question mark (?) command [xiv](#)

R

RADIUS accounting attributes

overloaded Acct-Session-Id field [VR-353](#)

vendor specific [VR-355](#)

register e164 command [VR-562](#)

registered-caller ring command [VR-564](#)

release notes

See platforms, supported

req-qos command [VR-565](#)

reset command [VR-566](#)

resource threshold command [VR-567](#)

response-timeout [VR-569](#)

response-timeout command [VR-569](#)

retry (SIP user-agent) command [VR-575](#)

retry-delay command [VR-571](#)

retry-limit command [VR-573](#)

RFC

full text, obtaining [viii](#)

RFC 821, envelope-from address or Return-Path address [VR-489](#)

ringback tone, enabling [VR-1001](#)

ring cadence command [VR-578](#)

ring command [VR-576](#)

ring frequency command [VR-580](#)

ringing

distinctive, configuring [VR-576](#)

timeout value, configuring [VR-967](#)

ring number command [VR-582](#)

RLM (Redundant Link Manager)

enabling [VR-415](#)

group

latency display [VR-767](#)

status [VR-770](#)

timer values [VR-772](#)

roaming

matching pattern, configuring [VR-622](#)

roaming (settlement) command [VR-585](#)

roaming command [VR-584](#)

ROM monitor mode, summary of [xiv](#)

RS-366 video interface

statistics, displaying [VR-693](#)

RTSP (Real Time Streaming Protocol)

session history, keeping [VR-586, VR-587](#)

session records, displaying [VR-774](#)

rtsp client session history duration command [VR-586](#)

rtsp client session history records command [VR-587](#)

rule [VR-588](#)

rule command [VR-588](#)

S

security command [VR-590](#)

sequence-numbers command [VR-592](#)

server (RLM) command [VR-594](#)

server registration-port command [VR-596](#)

server trigger command [VR-597](#)

session group command [VR-600](#)

session protocol (VoFR) command [VR-603](#)

session protocol aal2 command [VR-605](#)

session protocol command [VR-601](#)

session protocol multicast command [VR-606](#)

sessions

SIP transport layer protocol [VR-616](#)

session target (VoATM) command [VR-607](#)

session target (VoFR) command [VR-610](#)

session target (VoIP) command [VR-613](#)

session transport command [VR-616](#)

set command [VR-617](#)

settle-call command [VR-618](#)

settlement command [VR-620](#)

settlement providers

attributes

displaying [VR-785](#)

specifying [VR-620](#)

connection attempt maximum, setting [VR-573](#)

delay between connection attempts, setting [VR-571](#)

gateway associated with [VR-246](#)

- roaming capability, enabling [VR-585](#)
- type, selecting [VR-1011](#)
- settlement roam-pattern command [VR-622](#)
- SGCP (Simple Gateway Control Protocol)
 - active connections, listing [VR-787](#)
 - call agent, defining [VR-625](#)
 - calls, terminating [VR-627](#)
 - daemon, starting [VR-623](#)
 - fax and modem passthrough, enabling [VR-631](#)
 - management-eligible endpoints, displaying [VR-789](#)
 - notify and delete message retries, specifying [VR-635](#)
 - quarantine buffer, disabling [VR-633](#)
 - request response timeout, specifying [VR-637](#)
 - retransmission timer algorithm, configuring [VR-641](#)
 - RSIP message, triggering [VR-639](#)
 - RTP transmission interval, configuring [VR-643](#)
 - statistics, clearing [VR-184](#)
 - statistics, displaying [VR-791](#)
 - TSE payload type, enabling [VR-645](#)
 - waiting delay, setting [VR-629](#)
- sgcp call-agent command [VR-625](#)
- sgcp command [VR-623](#)
- sgcp graceful-shutdown [VR-627](#)
- sgcp max-waiting-delay command [VR-629](#)
- sgcp modem passthru command [VR-631](#)
- sgcp quarantine-buffer disable command [VR-633](#)
- sgcp request retries command [VR-635](#)
- sgcp request timeout command [VR-637](#)
- sgcp restart command [VR-639](#)
- sgcp retransmit timer command [VR-641](#)
- sgcp timer command [VR-643](#)
- sgcp tse payload command [VR-645](#)
- show aal2 profile command [VR-647](#)
- show atm video-voice address command [VR-649](#)
- show backhaul-session-manager group command [VR-650](#)
- show backhaul-session-manager session command [VR-652](#)
- show backhaul-session-manager set command [VR-654](#)
- show call active command [VR-655](#)
- show call application voice command [VR-662](#)
- show call fallback cache command [VR-666](#)
- show call fallback config command [VR-668](#)
- show call fallback stats command [VR-669](#)
- show call history [VR-670](#)
- show call history command [VR-670](#)
- show call history video record command [VR-678](#)
- show call history voice record command [VR-679](#)
- show call resource voice stats command [VR-681](#)
- show call resource voice threshold command [VR-683](#)
- show call rsvp-sync conf command [VR-684](#)
- show call rsvp-sync stats command [VR-686](#)
- show cdapi command [VR-688](#)
- show ces clock-select command [VR-690](#)
- show connect command [VR-691](#)
- show controllers rs366 command [VR-693](#)
- show controllers timeslots command [VR-695](#)
- show controllers voice command [VR-697](#)
- show csm command [VR-701](#)
- show dhcp command [VR-708](#)
- show dial-peer video command [VR-708](#)
- show dial-peer voice command [VR-709](#)
- show dialplan incall number command [VR-712](#)
- show frame-relay vofr command [VR-719](#)
- show gatekeeper calls command [VR-722](#)
- show gatekeeper endpoints command [VR-724](#)
- show gatekeeper gw-type-prefix command [VR-726](#)
- show gatekeeper servers command [VR-729](#)
- show gatekeeper status command [VR-731](#)
- show gatekeeper zone prefix [VR-732](#)
- show gatekeeper zone prefix command [VR-732](#)
- show gatekeeper zone status command [VR-733](#)
- show gateway command [VR-735](#)
- show interface dspfarm dsp command [VR-737](#)
- show mgcp command [VR-742](#)
- show mgcp connection command [VR-745](#)
- show mgcp endpoint command [VR-747](#)
- show mgcp statistics command [VR-748](#)
- show num-exp command [VR-751](#)

- show pots csm command [VR-753](#)
- show pots status command [VR-754](#)
- show proxy h323 calls command [VR-758](#)
- show proxy h323 detail-call command [VR-759](#)
- show proxy h323 status command [VR-765](#)
- show rawmsg command [VR-766](#)
- show rlm group statistics command [VR-767](#)
- show rlm group status command [VR-770](#)
- show rlm group timer command [VR-772](#)
- show rtsp client session command [VR-774](#)
- show rudpv1 command [VR-781](#)
- show settlement command [VR-785](#)
- show sgcp connection command [VR-787](#)
- show sgcp endpoint command [VR-789](#)
- show sgcp statistics command [VR-791](#)
- show sip-ua command [VR-793](#)
- show translation-rule command [VR-812](#)
- show vfc cap-list command [VR-816](#)
- show vfc command [VR-815](#)
- show vfc default-file command [VR-817](#)
- show vfc directory command [VR-818](#)
- show vfc version command [VR-820](#)
- show video call summary command [VR-821](#)
- show voice busyout command [VR-822](#)
- show voice call command [VR-824](#)
- show voice dsp command [VR-828](#)
- show voice permanent-call command [VR-830](#)
- show voice port command [VR-834](#)
- show voice trunk-conditioning signaling command [VR-845](#)
- show voice trunk-conditioning supervisory command [VR-849](#)
- show vrm active_calls command [VR-852](#)
- show vrm vdevices command [VR-855](#)
- shut command [VR-863](#)
- shutdown (DS 1 link) commands [VR-865](#)
- shutdown (gatekeeper) command [VR-866](#)
- shutdown (RLM) command [VR-867](#)
- shutdown (settlement) command [VR-868](#)
- shutdown (voice-port) command [VR-870](#)
- shutdown command
 - dial-peer configuration [VR-864](#)
- signal command [VR-872](#)
- signal keepalive command [VR-874](#)
- signal pattern command [VR-876](#)
- signal sequence oos command [VR-880](#)
- signal timing idle suppress-voice command [VR-882](#)
- signal timing oos command [VR-884](#)
- signal timing oos restart command [VR-886](#)
- signal timing oos slave-standby command [VR-888](#)
- signal timing oos suppress-all command [VR-890](#)
- signal timing oos suppress-voice command [VR-892](#)
- signal timing oos timeout command [VR-894](#)
- signal-type command [VR-896](#)
- SIP (Session Initiation Protocol)
 - enabling [VR-899](#)
 - UA, configuring [VR-1008](#)
 - UA settings, displaying [VR-793](#)
- sip-server command [VR-898](#)
- sip-ua command [VR-899](#)
- snmp enable peer-trap poor-qov command [VR-901](#)
- station-id command [VR-927](#)
- Store and Forward Fax
 - AAA accounting method, defining [VR-460](#)
 - AAA authentication method, defining [VR-462](#)
 - email prefix header, adding [VR-491](#)
 - SMTP maximum recipients, specifying [VR-487](#)
- subcell multiplexing, enabling [VR-929](#)
- subcell-mux command [VR-929](#)
- supervisory disconnect anyone command [VR-931](#)
- supervisory disconnect command [VR-930](#)
- supervisory disconnect dualtone voice-class command [VR-933](#)

T

- T.120 data channels
 - H.323 gateway, enabling capabilities on [VR-376](#)

T1

- CCS cross-connect, configuring [VR-478](#)
- CCS frame-forwarding, configuring [VR-478](#)
- controller interface mode, configuring [VR-476](#)
- loopback test mode, setting [VR-419](#)
- loop detection, enabling [VR-421](#)
- microcode images, reloading [VR-458](#)
- out-of-service alarm [VR-5](#)
- signal levels, attenuating [VR-287](#), [VR-288](#)
- Tab key, command completion [xiv](#)
- tdm-group command [VR-935](#)
- tech-prefix command [VR-937](#)
- telephone numbers
 - destination pattern, expanding [VR-506](#)
 - expansions, displaying [VR-751](#)
 - incoming called, specifying [VR-388](#)
 - variable length terminator, changing [VR-250](#)
 - workstation dial application, using [VR-940](#)
- test call fallback probe command [VR-939](#)
- test pots dial command [VR-940](#)
- test pots disconnect command [VR-941](#)
- test translation-rule command [VR-942](#)
- test voice port detector command [VR-944](#)
- test voice port inject-tone command [VR-947](#)
- test voice port loopback command [VR-950](#)
- test voice port relay command [VR-952](#)
- test voice port switch command [VR-955](#)
- test vrm busyout command [VR-957](#)
- test vrm reset command [VR-959](#)
- test vrm unbusyout command [VR-960](#), [VR-962](#)
- threshold noise command [VR-962](#)
- timeouts call-disconnect command [VR-963](#)
- timeouts initial command [VR-964](#)
- timeouts interdigit command [VR-965](#)
- timeouts ringing [VR-967](#)
- timeouts ringing command [VR-967](#)
- timeouts wait-release command [VR-968](#)
- timers command [VR-970](#)
- timing clear-wait command [VR-971](#)
- timing delay-duration command [VR-973](#)
- timing delay-start command [VR-975](#)
- timing delay-with-integrity command [VR-977](#)
- timing dialout-delay command [VR-981](#)
- timing dial-pulse min-delay command [VR-979](#)
- timing digit command [VR-983](#)
- timing guard-out command [VR-985](#)
- timing hookflash-input command [VR-986](#)
- timing hookflash-out [VR-987](#)
- timing interdigit command [VR-988](#)
- timing percentbreak command [VR-990](#)
- timing pulse command [VR-991](#)
- timing pulse-interdigit command [VR-993](#)
- timing wink-duration command [VR-995](#)
- timing wink-wait command [VR-997](#)
- token-root-name command [VR-999](#)
- tone ringback command [VR-1001](#)
- tones
 - analog voice, specifying [VR-223](#)
 - frequency component, specifying [VR-333](#)
- ToS (type of service)
 - MGCP-controlled connections, enabling [VR-444](#)
- translate command [VR-1002](#)
- translate-outgoing command [VR-1004](#)
- translation-rule command [VR-1006](#)
- translations
 - rules
 - applying [VR-1002](#), [VR-1004](#)
 - testing [VR-942](#)
 - rule tag name, creating [VR-1006](#)
 - VoIP rules
 - displaying [VR-812](#)
 - setting [VR-1060](#)
- transport command [VR-1008](#)
- TSI (transmitting subscriber identifier)
 - fax, displaying [VR-322](#)
- type (voice) command [VR-1009](#)
- type command [VR-1011](#)

U

unbundle vfc [VR-1013](#)
 unbundle vfc command [VR-1013](#)
 unbundle vfc EXEC command [VR-1013](#)
 url command [VR-1014](#)
 use-proxy command [VR-1016](#)
 user EXEC mode, summary of [xiv](#)

V

V.54 loopback detection, enabling [VR-245](#)
 vad (dial peer) command [VR-1018](#)
 VAD (voice activity detection) gaps
 changing [VR-1059](#)
 comfort noise, generating [VR-205, VR-286](#)
 enabling [VR-1018, VR-1020](#)
 vad command [VR-1020](#)
 VBR (variable bit rate)
 VoATM, configuring [VR-1021](#)
 vbr-rt command [VR-1021](#)
 VFC (voice feature card)
 cache entries, displaying [VR-815](#)
 default files, listing [VR-817](#)
 file directory, listing [VR-818](#)
 Flash memory
 adding file to list [VR-235](#)
 copying VCWare to [VR-221 to VR-222](#)
 deleting file from [VR-238](#)
 erasing [VR-299](#)
 list capacity, displaying [VR-816](#)
 version, displaying [VR-820](#)
 ViCM (Video Call Manager)
 status, displaying [VR-821](#)
 VoFR (Voice over Frame Relay)
 on DLCI, configuring [VR-1023](#)
 vofr command [VR-1023](#)
 voice call convert-discipi-to-prog [VR-1027](#)
 voice call send-alert command [VR-1028](#)
 voice-card command [VR-1029](#)
 voice class busyout command [VR-1030](#)
 voice class codec command [VR-1032](#)
 voice-class codec command [VR-1034, VR-1039](#)
 voice class dualtone command [VR-1036](#)
 voice class h323 command [VR-1038](#)
 voice class permanent [VR-1040](#)
 voice-class permanent (dial-peer) [VR-1042](#)
 voice-class permanent (dial-peer) command [VR-1042](#)
 voice-class permanent (voice-port) [VR-1044](#)
 voice class permanent command [VR-1040](#)
 voice-class permanent command [VR-1044](#)
 voice conferencing
 multicast session protocol, setting [VR-606](#)
 voice confirmation-tone [VR-1046](#)
 voice confirmation-tone command [VR-1046](#)
 voice-encap [VR-1047](#)
 voice gateway
 IP address, designating source [VR-365](#)
 voice-group [VR-1048](#)
 voice hardware
 status, displaying [VR-697](#)
 voice hunt [VR-1049](#)
 voice hunt user-busy command [VR-1049](#)
 voice local-bypass [VR-1051](#)
 voice local-bypass command [VR-1051](#)
 voice network
 failure cause codes, specifying [VR-403](#)
 release messages over, enabling [VR-400](#)
 voice packets
 UDP checksum, calculating [VR-397](#)
 voice path
 two-way, establishing [VR-1057](#)
 voice-port [VR-1052](#)
 voice-port busyout command [VR-1055](#)
 voice-port command [VR-1052](#)
 voice ports
 busyout function voice class, creating [VR-1030](#)
 busyout state

configuring monitor [VR-38](#)
 displaying [VR-822](#)
 forcing [VR-36](#)
 placing in [VR-1055](#)
 prompted by remote RTR probe signal [VR-41](#)
 calls in progress, clearing [VR-186](#)
 codec voice class ID tag, assigning [VR-1032](#)
 configuration and status, displaying [VR-834, VR-845, VR-849](#)
 delay dial wink pulse duration, specifying [VR-977](#)
 delay signal duration, specifying [VR-973](#)
 detector-related functions, testing [VR-944](#)
 dialing type, specifying [VR-256](#)
 dial-out delay, specifying [VR-981](#)
 dial peer, associating [VR-523](#)
 disabling [VR-870](#)
 disabling settlement [VR-868](#)
 disconnect timeout value, configuring [VR-963](#)
 DTMF digit signal duration, specifying [VR-983](#)
 fax mode, forcing [VR-955](#)
 inactive seizure signal minimum wait, specifying [VR-971](#)
 initial digit timeout value, configuring [VR-964](#)
 interdigit timeout value, configuring [VR-965](#)
 loopback test [VR-950](#)
 maximum wink-signal duration, specifying [VR-995](#)
 maximum wink-wait duration, specifying [VR-997](#)
 on-hold music threshold, specifying [VR-500](#)
 outgoing seizure signal minimum delay, specifying [VR-975](#)
 output attenuation, configuring [VR-511](#)
 permanent calls on, displaying [VR-830](#)
 pulse interdigit timing, configuring [VR-993](#)
 relay-related functions, testing [VR-952](#)
 release process delay timeout, configuring [VR-968](#)
 signal gain values, specifying [VR-392](#)
 signal type, specifying [VR-872](#)
 terminating impedance, specifying [VR-387](#)
 test tone, injecting [VR-947](#)
 wink-like pulses, configuring [VR-979](#)

voice quality
 echo cancel, configuring [VR-288, VR-290, VR-292](#)
 quality drop alarm, generating [VR-300](#)
 voice rtp send-recv command [VR-1057](#)
 voice service [VR-1058](#)
 voice service command [VR-1058](#)
 voice traffic bandwidth allocation, specifying [VR-326](#)
 voice vad-time [VR-1059](#)
 voice vad-time command [VR-1059](#)
 voip-incoming translation-rule [VR-1060](#)
 voip-incoming translation-rule command [VR-1060](#)

Z

zone access command [VR-1062](#)
 zone bw [VR-1064](#)
 zone bw command [VR-1064](#)
 zone local [VR-1065](#)
 zone local command [VR-1065](#)
 zone prefix [VR-1067](#)
 zone prefix command [VR-1067](#)
 zone remote [VR-1070](#)
 zone remote command [VR-1070](#)
 zone subnet [VR-1072](#)
 zone subnet command [VR-1072](#)