

Configuring MPLS Multi-VRF (VRF-lite)

MPLS Multi-VRF provides the ability to configure and maintain more than one instance of a routing and forwarding table within the same CE router.

Release	Modification
Release12.1(11)EA1	The Multi-VRF feature was introduced.
Release12.1(20)EW	The feature was integrated into the 12.1(20)EW release.
Release12.2(4)T	The feature was integrated into the T train.
Release12.2(8)YN	The feature was integrated into the Y train.
Release12.2(18)SXD	The feature was integrated into the S train.
Release 12.2(25)EWA	The feature was integrated into the 12.2(25)EWA release.
Release 12.2(28)SB	MPLS support was added.

History of the MPLS Multi-VRF feature

Finding Support Information for Platforms and Cisco IOS Software Images

Use Cisco Feature Navigator to find information about platform support and Cisco IOS software image support. Access Cisco Feature Navigator at http://www.cisco.com/go/fn. You must have an account on Cisco.com. If you do not have an account or have forgotten your username or password, click **Cancel** at the login dialog box and follow the instructions that appear.

Contents

- Prerequisites for MPLS Multi-VRF, page 2
- Restrictions with MPLS Multi-VRF, page 2
- Understanding MPLS Multi-VRF, page 2
- How to Configure MPLS Multi-VRF, page 4
- Displaying MPLS Multi-VRF Status, page 13
- Configuration Example of MPLS Multi-VRF, page 14



Corporate Headquarters: Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

© 2006 Cisco Systems, Inc. All rights reserved.

I

Prerequisites for MPLS Multi-VRF

The network's core and provider edge routers must be properly configured for MPLS VPN operation.

Restrictions with MPLS Multi-VRF

MPLS Multi-VRF can be configured only on Layer 3 interfaces.

MPLS Multi-VRF is not supported by IGRP nor ISIS.

Label distribution for a given VRF on a given router can be handled by either BGP or LDP, but not by both protocols.

Multicast cannot operate on a Layer 3 interface already configured with MPLS Multi-VRF.

Understanding MPLS Multi-VRF

Multi-VRF is a feature that enables a service provider to support two or more VPNs, where IP addresses can be overlapped among the VPNs. Multi-VRF uses input interfaces to distinguish routes for different VPNs, and forms virtual packet-forwarding tables by associating one or more Layer 3 interfaces with each VRF. Interfaces in a VRF can be either physical, such as Ethernet ports, or logical, such as VLAN SVIs (Switched Virtual Interfaces), but a Layer 3 interface cannot belong to more than one VRF at any one time. The Multi-VRF feature thus allows an operator to support two or more routing domains on a CE router, with each routing domain having its own set of interfaces and its own set of routing and forwarding tables. MPLS Multi-VRF makes it possible to extend the Label Switched Paths (LSPs) to the CE and into each routing domain that the CE supports.

MPLS Multi-VRF occurs through the activity of routers fulfilling the following roles:

- Each customer edge (CE) router advertises its site's local routes to a provider edge (PE) router, and learns the remote VPN routes from that PE router.
- PE routers exchange routing information with CE routers by using static routing or a routing protocol such as BGP, RIPv1, or RIPv2.
- PE routers exchange MPLS label information with CE routers through LDP or BGP.
- The PE needs to maintain VPN routes only for those VPNs to which it is directly attached, eliminating the requirement that the PE maintain all of the service provider's VPN routes. Each PE router maintains a VRF for each of its directly-connected sites. Two or more interfaces on a PE router can be associated with a single VRF if all the sites participate in the same VPN. Each VPN is mapped to a specified VRF. After learning local VPN routes from CEs, the PE router exchanges VPN routing information with other PE routers through internal BGP (IBPG).

With Multi-VRF, two or more customers can share one CE, and only one physical link is used between the CE and the PE. The shared CE maintains separate VRF tables for each customer, and routes packets for each customer based on that customer's own routing table. Multi-VRF thereby extends limited PE functionality to a CE device, giving it the ability, through the maintenance of separate VRF tables, to extend the privacy and security of a VPN to the branch office.

Figure 1 shows a configuration where each CE acts virtually as if it were two CEs. Because MPLS Multi-VRF is a Layer 3 feature, each interface associated with a VRF must be a Layer 3 interface.



Figure 1 Each CE router acting as several virtual CEs

Following is the packet-forwarding process in an MPLS Multi-VRF CE-enabled network, as illustrated in Figure 1:

- When the CE receives a packet from a VPN, it looks up the routing table based on the input interface. When a route is found, the CE imposes the MPLS label it received from the PE for that route and forwards the packet to the PE.
- When the ingress PE receives a packet from the CE, it swaps the incoming label with the corresponding label stack and sends it to the MPLS network.
- When an egress PE receives a packet from the network, it swaps the VPN label with the label it earlier had received for the route from the CE, and forwards it to the CE.
- When a CE receives a packet from an egress PE, it uses the incoming label on the packet to forward the packet to the correct VPN.

Overview of MPLS Multi-VRF Configuration

To configure Multi-VRF, you create a VRF table and then specify the Layer 3 interface associated with that VRF. Next, you configure the routing protocols within the VPN, and between the CE and the PE. BGP is the preferred routing protocol for distributing VPN routing information across the provider's backbone, for reasons that will be detailed in the section, How to Configure MPLS Multi-VRF, page 4.

The Multi-VRF network has three major components:

- **VPN route target communities**: These are lists of all other members of a VPN community. You need to configure VPN route targets for each VPN community member.
- Multiprotocol BGP peering of VPN community PE routers: This propagates VRF reachability information to all members of a VPN community. You need to configure BGP peering in all PE routers within a VPN community.
- VPN forwarding: This transports all traffic between VPN community members across a VPN service-provider network.

How to Configure MPLS Multi-VRF

Consider these points when configuring MPLS Multi-VRF in your network:

- A router with Multi-VRF is shared by several customers, and each customer has their own routing table(s).
- Because each customer uses a different VRF table, the same IP addresses can be reused. Overlapped IP addresses are allowed in different VPNs.
- MPLS Multi-VRF lets several customers share the same physical link between the PE and the CE. Trunk ports with several VLANs separate packets among the customers. Each customer has their own VLAN.
- For the PE router, there is no difference between using MPLS Multi-VRF or using several CEs. In Figure 2 on page 14 for example, four virtual Layer 3 interfaces are connected to the MPLS Multi-VRF CE.
- MPLS Multi-VRF does not affect the packet switching rate.
- Most routing protocols can be used between the CE and the PE: BGP, OSPF, EIGRP, RIP, and static routing. However, we recommend using external BGP (eBGP) because:
 - BGP does not require more than one algorithm to communicate with a multitude of CEs.
 - BGP is designed to pass routing information between systems run by different administrations.
 - BGP makes it easy to pass attributes of the routes to the CE.
- Furthermore, when BGP is used as the routing protocol, it can also be used to handle the MPLS label exchange between the PE and CE. By contrast, if OSPF, EIGRP, RIP or static routing is used, LDP must be used to signal labels.
- If you choose to use OSPF as the routing protocol between the PE and the CE, you should employ the **capability vrf-lite** subcommand under **router ospf**. How to do so is explained further in *OSPF Support for Multi-VRF in CE Routers*, Release 12.2(14)S.

The following sections present the sequence of commands required to configure Multi-VRF:

- First, set up each customer's VRFs on the CE and on the PE, as explained in the "Configuring VRFs" section on page 5.
- Then configure the routing protocol within the VPNs on the CE: Configuring a VPN Routing Session, page 7.
- Next, configure the routing protocol between the CE and PE. BGP is recommended, so its case is given in the "Configuring BGP PE-to-CE Routing Sessions" section on page 9. But other protocols, such as OSPF, RIP or EIGRP, and static routing could be used.
- Finally, establish the correct MPLS label exchange, (which differs according to the routing protocol you used in the previous sections); either:
 - Configuring PE-to-CE MPLS Forwarding and Signalling (when BGP is the routing protocol), page 11

or

Configuring PE-to-CE MPLS Forwarding and Signalling (when BGP is not the routing protocol), page 8

Configuring VRFs

VRFs must be configured on both the PE and the CE routers.

Table 1

Default VRF Configuration

If no commands have yet been entered to specify a VRF, the system's default configuration is as detailed in Table 1.

Table 1Default VRF Configuration		
Feature	Default Setting	
VRF	Disabled. No VRFs are defined.	
Maps	No import maps, export maps, or route maps are defined.	
VRF maximum routes	None.	
Forwarding table	The default for an interface is the global routing table.	

Restrictions

Multicast cannot be configured at the same time on the same Layer 3 interface as MPLS Multi-VRF.

SUMMARY STEPS

ſ

- 1. enable
- 2. configure terminal
- 3. ip routing
- 4. ip vrf vrf-name
- 5. rd route-distinguisher
- route-target {export | import | both} route-target-ext-community 6.
- 7. import map route-map
- 8. exit
- 9. interface interface-id
- **10.** ip vrf forwarding vrf-name

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Opens global configuration mode.
	Example: Router# configure terminal	
Step 3	ip routing	Enables IP routing
		Envores in routing.
	Example:	
	Router(config)# ip routing	
Step 4	<pre>ip vrf vrf-name</pre>	Names the VRF, and opens VRF configuration mode.
	Example:	
	Router(config)# ip vrf v1	
Step 5	rd route-distinguisher	Creates a VRF table by specifying a route distinguisher.
		or an IP address and an arbitrary number (A.B.C.D:v).
	Example: Router(config-yrf)# rd 100.1	
Sten 6	route-target { export import both }	Creates a list of import export or import and export route
	route-target-ext-community	target communities for the specified VRF.
		Enter either an AS system number and an arbitrary number
	Example:	(xxx:y), or an IP address and an arbitrary number
	Router(config-vrf)# route-target export 100:1	(A.B.C.D:y).
	Kouter(config=vil)# foute-target import for.i	Note: This command is effective only if BGP is running.
Step 7	<pre>import map route-map</pre>	(Optional) Associates a route map with the VRF.
	Example: Router(config_vrf)# import map blue import map	
Sten 8	exit	Returns to global configuration mode
		Returns to groom comiguration mode.
	Example:	
	Router(config-vrf)# exit	
Step 9	interface interface-id	Specifies the Layer 3 interface to be associated with the
		VRF and opens interface configuration mode. The interface
	Example:	can be a routed port or an SVI.
	Router(config)# interface fastethernet3/0.10	
Step 10	ip vrf forwarding vrf-name	Associates the VRF with the Layer 3 interface.
	Example: Router(config-if)# ip vrf forwarding v1	

What to Do Next

To confirm that the VRF has been configured correctly, use the EXEC mode **show ip vrf** [**brief** | **detail** | **interfaces**] [*vrf-name*] command.

If the output display of that **show** command reveals everything to be alright, you can then choose to save the configuration by entering the **copy running-config startup-config** command.

Configuring a VPN Routing Session

Routing within the VPN can be configured on the CE router with any supported routing protocol (RIP, OSPF, or BGP), or with static routing. The configuration shown here is for OSPF, but the process is the same with other protocols.

Prerequisites

The VRF referred to in Step 3 of this section must have been configured correctly, as shown in the previous section, Configuring VRFs, page 5.

Restrictions

MPLS Multi-VRF is not supported by IGRP nor ISIS.

Multicast cannot be configured on the same Layer 3 interface as MPLS Multi-VRF.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. router ospf process-id [vrf vrf-name]
- 4. log-adjacency-changes
- 5. redistribute bgp autonomous-system-number subnets
- 6. network network-number area area-id

DETAILED STEPS

I

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	

I

	Command or Action	Purpose
Step 3	<pre>router ospf process-id [vrf vpn-name]</pre>	Enables OSPF routing, specifies a VRF table, and enters router configuration mode.
	Example: Router(config)# router ospf 100 vrf v1	[Sometimes you may see the final term in this command spelled as <i>vpn-name</i> . It takes the same value as <i>vrf-name</i>].
Step 4	log-adjacency-changes	(Optional) Logs changes in the adjacency state. This is the default state.
	Example: Router(config-router)# log-adjacency-changes	
Step 5	<pre>redistribute bgp autonomous-system-number subnets</pre>	Sets the router to redistribute information from the BGP network to the OSPF network.
	Example:	
	Router(config-router)# redistribute bgp 800 subnets	
Step 6	network network-number area area-id	Indicates the network address and mask on which OSPF runs, and the area ID of that network address.
	Example: Router(config-router)# network 208.0.0.0 255.255.255.0 area 0	

What to Do Next

To confirm that the VPN routing has been configured correctly, use the EXEC mode **show ip ospf** *process-id* command.

If the output display of that **show** command reveals everything to be alright, you can then choose to save the configuration by entering the **copy running-config startup-config** command.

If you need to disassociate the VPN forwarding table from the OSPF routing process, use the **no router ospf** *process-id* **vrf** *vpn-name* global configuration command.

To complete your configuration of MPLS Multi-VRF in situations where you are not using BGP, continue on to the next section, Configuring PE-to-CE MPLS Forwarding and Signalling (when BGP is not the routing protocol), page 8. If, however, you will be using BGP, skip to the section called Configuring BGP PE-to-CE Routing Sessions, page 9.

Configuring PE-to-CE MPLS Forwarding and Signalling (when BGP is not the routing protocol)

If any protocol other than BGP is used for routing between the PE and the CE, LDP should be used to signal the labels on the PE and CE VRF interfaces, as shown here next.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. interface interface-id

4. mpls ip

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Opens global configuration mode.
	Example: Router# configure terminal	
Step 3	<pre>interface interface-id</pre>	Opens interface configuration mode for the interface associated with the VRF. The interface can be a routed port
	Example:	or an SVI.
	Router(config)# interface fastethernet3/0.10	
Step 4	mpls ip	Enables MPLS forwarding of IPv4 packets along normally routed paths for this interface.
	Example:	
	Router(config-if)# mpls ip	

What to Do Next

If you are not using BGP, you have completed your MPLS Multi-VRF configuration. To see all the steps in context, go to the "Configuration Example of MPLS Multi-VRF" section on page 14.

Configuring BGP PE-to-CE Routing Sessions

To configure a BGP PE-to-CE routing session, perform the task presented next on the CE and on the PE.

PSUMMARY STEPS

I

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. network network-number mask network-mask
- 5. redistribute ospf process-id match internal
- 6. network network-number area area-id
- 7. address-family ipv4 vrf vrf-name
- 8. neighbor {ip-address | peer-group-name} remote-as as-number
- 9. neighbor address activate

DETAILED STEPS

	Command	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process with the AS number passed to other BGP routers, and opens router configuration mode
	Example: Router(config)# router bgp 100	configuration mode.
Step 4	network network-number mask network-mask	Specifies a network and mask to announce using BGP.
	Example: Router(config-router)# network 208.0.0.0 mask 255.255.255.0	
Step 5	redistribute ospf process-id match internal	Sets the router to redistribute OSPF internal routes.
	Example: Router(config-router)# redistribute ospf 2 match internal	
Step 6	network network-number area area-id	Identifies the network address and mask on which OSPF is running, and the area ID of that network
	Example: Router(config-router)# network 208.0.0.0 255.255.255.0 area 0	address.
Step 7	address-family ipv4 vrf vrf-name	Identifies the name of the VRF instance that will be associated with the next two commands, and opens
	Example: Router(config-router)# address-family ipv4 vrf v12	VRF address-family mode.
Step 8	<pre>neighbor {ip-address peer-group-name} remote-as as-number</pre>	Informs this router's BGP neighbor table of the neighbor's address (or peer group name) and the neighbor's autonomous system number.
	Example: Router(config-router-af)# neighbor 83.0.0.3 remote-as 100	
Step 9	neighbor address activate	Activates the advertisement of the IPv4 address-family neighbors.
	Example: Router(config-router-af)# neighbor 83.0.0.3 activate	

Cisco IOS Release 12.2(28)SB

What to Do Next

To confirm that BGP has been correctly configured, use the EXEC mode **show ip bgp vpnv4** *vrf-name* **neighbors** command.

If the output display of that **show** command reveals everything to be alright, you can then choose to save the configuration by entering the **copy running-config startup-config** command.

Because you are using BGP, continue on with the next section's procedure. (Had you used another routing protocol, you would not need to implement the next section— nor of course the current section either.)

Configuring PE-to-CE MPLS Forwarding and Signalling (when BGP is the routing protocol)

If BGP is used for routing anywhere between the PE and the CE, BGP should also be used to signal the labels on the VRF interfaces of both the CE and the PE routers. Doing so consists of two operations:

- At the router-configuration level: enabling MPLS label signalling via BGP (which is accomplished with the **neighbor** *address* **send-label** command);
- At the interface level: enabling MPLS forwarding on the interface used for the PE-CE eBGP session (which is done with the **mpls bgp forwarding** command).

Prerequisites

The PE-CE BGP neighbor must be correctly configured for IP.

The PE-CE interface must be correctly configured for IP forwarding.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 vrf vrf-name
- 5. neighbor address send-label
- 6. end
- 7. configure terminal
- 8. interface interface-id
- 9. mpls bgp forwarding

DETAILED STEPS

Command	Purpose
enable	Enables privileged EXEC mode.
Example: Router> enable	• Enter your password if prompted.
configure terminal	Enters global configuration mode.
Example: Router# configure terminal	
<pre>router bgp autonomous-system-number Example: Router(config)# router bgp 100</pre>	Configures the BGP routing process with the AS number passed to other BGP routers, and opens router configuration mode.
<pre>address-family ipv4 vrf vrf-name Example: Router(config-router)# address-family ipv4 vrf v12</pre>	Identifies the name of the VRF instance that will be associated with the next two commands, and opens VRF address-family mode.
neighbor address send-label	Enables the router to use BGP to distribute MPLS labels along with the IPv4 routes to the peer router(s).
Example: Router(config-router-af)# neighbor 83.0.0.3 remote-as 100	[If a BGP session is running when you issue this command, the command does not take effect until the BGP session is restarted.]
neighbor address activate	Activates the advertisement of the IPv4 address-family neighbors.
Example: Router(config-router-af)# neighbor 83.0.0.3 activate	
end	Returns to privileged EXEC mode.
Example: Router(config-router-af)# end	
configure terminal	Enters global configuration mode.
Example: Router# configure terminal	

	Command	Purpose
Step 9	interface interface-id	Opens interface configuration mode for the interface to be used for the BGP session. The interface can be a routed
	Example:	port or an SVI.
	Router(config)# interface fastethernet3/0.10	
Step 10	mpls bgp forwarding	Enables MPLS forwarding on the interface.
	Example:	
	Router(config-if)# mpls bgp forwarding	

What to Do Next

You can save the configuration by entering the copy running-config startup-config command.

If you need to delete the BGP routing process, use the **no router bgp** *autonomous-system-number* global configuration command. However, if you want to delete only particular routing characteristics, enter the **router bgp** global configuration command, followed by the **no** form of the particular router configuration command which governs that characteristic.

Displaying MPLS Multi-VRF Status

To display information about MPLS Multi-VRF configuration and status, use any of the following commands:

- show ip bgp vpnv4 vrf labels, to display the BGP labels for the specified VRF.
- show ip protocols vrf, to display routing protocol information associated with the specified VRF.
- **show ip route vrf**, to display the IP routing table information associated with the specified VRF.
- **show ip vrf**, to display the set of VRFs and their associated interfaces.
- **show mpls forwarding-table vrf**, to display the MPLS forwarding entries associated with the specified VRF.
- show mpls ldp bindings vrf, to display LDP's label information base for the specified VRF.

Detailed information about each of these commands is given in the *Cisco IOS MultiProtocol Label Switching Command Reference*.

Configuration Example of MPLS Multi-VRF

The following example details the configuration on the CE, and on the PE-to-CE connections only, not on the PE-to-core connections because these latter are no different in Multi-VRF cases than in other cases.



On the PE Router

VRF Configuration

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# ip vrf v1
Router(config-vrf)# rd 100:1
Router(config-vrf)# route-target export 100:1
Router(config-vrf)# route-target import 100:1
Router(config)# ip vrf v2
Router(config-vrf)# rd 100:2
Router(config-vrf)# route-target export 100:2
Router(config-vrf)# route-target import 100:2
Router(config-vrf)# route-target import 100:2
Router(config-vrf)# route-target import 100:2
```

Configuring PE-CE connections using BGP for both routing and label exchange

```
Router(config)# router bgp 100
Router(config-router)# address-family ipv4 vrf v2
Router(config-router-af)# neighbor 83.0.0.8 remote-as 800
Router(config-router-af)# neighbor 83.0.0.8 send-label
Router(config-router-af)# exit
Router(config-router)# address-family ipv4 vrf v1
Router(config-router-af)# neighbor 38.0.0.8 remote-as 800
Router(config-router-af)# neighbor 38.0.0.8 remote-as 800
Router(config-router-af)# neighbor 38.0.0.8 remote-as 800
```

```
Router(config-router-af)# neighbor 38.0.0.8 send-label
Router(config-router-af)# end
Router# configuration commands, one per line. End with CNTL/Z.
Router(config)# interface fastethernet3/0.10
Router(config-if)# ip vrf forwarding v1
Router(config-if)# ip address 38.0.0.3 255.255.255.0
Router(config-if)# mpls bgp forwarding
Router(config-if)# exit
Router(config)# interface fastethernet3/0.20
Router(config)# interface fastethernet3/0.20
Router(config-if)# ip vrf forwarding v2
Router(config-if)# ip address 83.0.0.3 255.255.255.0
Router(config-if)# ip address 83.0.0.3 255.255.255.0
Router(config-if)# ip address 83.0.0.3 255.255.255.0
```

Configuring PE-CE connections using OSPF for routing, and LDP for label exchange

```
Router(config) # router ospf 100 vrf v1
   Router(config-router)# network 38.0.0.0 255.255.255.0 area 0
   Router(config-router) # exit
Router(config) # router ospf 101 vrf v2
   Router(config-router) # network 83.0.0.0 255.255.255.0 area 0
   Router(config-router) # exit
Router(config) # interface fastethernet3/0.10
   Router(config-if) # ip vrf forwarding v1
   Router(config-if) # ip address 38.0.0.3 255.255.255.0
   Router(config-if) # mpls ip
   Router(config-if) # exit
Router(config) # interface fastethernet3/0.20
   Router(config-if) # ip vrf forwarding v2
   Router(config-if) # ip address 83.0.0.3 255.255.255.0
   Router(config-if) # mpls ip
   Router(config-if) # exit
```

On the CE Router

VRF Configuration

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# ip vrf v11
Router(config-vrf)# rd 800:1
Router(config-vrf)# route-target export 800:1
Router(config-vrf)# route-target import 800:1
Router(config-vrf)# exit
Router(config)# ip vrf v12
Router(config-vrf)# rd 800:2
Router(config-vrf)# route-target export 800:2
Router(config-vrf)# route-target import 800:2
Router(config-vrf)# route-target import 800:2
Router(config-vrf)# route-target import 800:2
Router(config-vrf)# route-target import 800:2
```

Configuring CE VPN connections

```
Router(config) # interface fastethernet3/8
    Router(config-if) # ip vrf forwarding v11
    Router(config-if)# ip address 208.0.0.8 255.255.255.0
   Router(config-if)# exit
Router(config) # interface fastethernet3/7
    Router(config-if) # ip vrf forwarding v11
    Router(config-if) # ip address 108.0.0.8 255.255.255.0
    Router(config-if) # exit
Router(config) # interface fastethernet3/11
    Router(config-if) # ip vrf forwarding v12
    Router(config-if) # ip address 118.0.0.8 255.255.255.0
    Router(config-if) # exit
Router(config) # interface fastethernet3/3
    Router(config-if) # ip vrf forwarding v12
    Router(config-if) # ip address 168.0.0.8 255.255.255.0
    Router(config-if) # exit
Router(config) # router ospf 1 vrf v11
    Router(config-router)# network 208.0.0.0 255.255.255.0 area 0
    Router(config-router)# network 108.0.0.0 255.255.255.0 area 0
   Router(config-router) # exit
Router(config) # router ospf 2 vrf v12
    Router(config-router)# network 118.0.0.0 255.255.255.0 area 0
```

Router(config-router)# network 116.0.0.0 255.255.255.0 area 0 Router(config-router)# network 1688.0.0.0 255.255.255.0 area 0 Router(config-router)# exit

Note: If BGP is being used for routing between the PE and CE, the BGP-learned routes from the PE can be redistributed into OSPF using the following commands:

```
Router(config)# router ospf 1 vrf v11
Router(config-router)# redistribute bgp 800 subnets
Router(config-router)# exit
Router(config)# router ospf 2 vrf v12
Router(config-router)# redistribute bgp 800 subnets
Router(config-router)# exit
```

Configuring PE-CE connections using BGP for both routing and label exchange

```
Router(config) # router bgp 800
   Router(config-router)# address-family ipv4 vrf v12
       Router(config-router-af) # neighbor 83.0.0.3 remote-as 100
       Router(config-router-af) # neighbor 83.0.0.3 activate
       Router(config-router-af) # neighbor 83.0.0.3 send-label
       Router(config-router-af)# redistribute ospf 2 match internal
       Router(config-router-af)# exit
   Router(config-router)# address-family ipv4 vrf vl1
       Router(config-router-af) # neighbor 38.0.0.3 remote-as 100
       Router(config-router-af) # neighbor 38.0.0.3 activate
       Router(config-router-af)# neighbor 38.0.0.3 send-label
       Router(config-router-af)# redistribute ospf 1 match internal
       Router(config-router-af) # end
   Router(config) # interface fastethernet3/0.10
       Router(config-if) # ip vrf forwarding v11
       Router(config-if) # ip address 38.0.0.8 255.255.255.0
       Router(config-if) # mpls bgp forwarding
       Router(config-if) # exit
   Router(config) # interface fastethernet3/0.20
```

```
Router(config-if)# ip vrf forwarding v12
Router(config-if)# ip address 83.0.0.8 255.255.255.0
Router(config-if)# mpls bgp forwarding
Router(config-if)# exit
```

Configuring PE-CE connections using OSPF for routing, and LDP for label exchange

```
Router(config) # router ospf 1 vrf v11
   Router(config-router) # network 38.0.0.0 255.255.255.0 area 0
   Router(config-router) # exit
Router(config) # router ospf 2 vrf v12
Router(config-router)# network 83.0.0.0 255.255.255.0 area 0
Router(config-router)# exit
Router(config)# interface fastethernet3/0.10
   Router(config-if) # ip vrf forwarding v11
    Router(config-if)# ip address 38.0.0.3 255.255.255.0
   Router(config-if) # mpls ip
    Router(config-if) # exit
Router(config) # interface fastethernet3/0.20
   Router(config-if) # ip vrf forwarding v12
   Router(config-if) # ip address 83.0.0.3 255.255.255.0
    Router(config-if) # mpls ip
    Router(config-if) # exit
```

Additional References

The following sections provide references related to MPLS Multi-VRF.

Related Documents

I

Related Topic	Document Title
OSPF with Multi-VRF	OSPF Support for Unlimited Software VRFs per Provider Edge Router, Release 12.3(4)T
MPLS	Cisco IOS Multiprotocol Label Switching Command Reference
	Cisco IOS Switching Services Command Reference, Release 12.3
BGP	Cisco IOS IP Command Reference, Volume 2: Routing Protocols, Release 12.3T
	Cisco IOS IP Command Reference, Volume 2: Routing Protocols, Release 12.2

Technical Assistance

Description	Link
The Cisco Technical Support website contains	http://www.cisco.com/techsupport
thousands of pages of searchable technical content,	
including links to products, technologies, solutions,	
technical tips, and tools. Registered Cisco.com users	
can log in from this page to access even more content.	

Command Reference

This feature uses no new or modified commands.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0711R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental

© 2006 Cisco Systems, Inc. All rights reserved.

CCVP, the Cisco logo, and Welcome to the Human Network are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn is a service mark of Cisco Systems, Inc.; and Access Registrar, Aironet, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, LightStream, Linksys, MeetingPlace, MGX, Networkers, Networking Academy, Network Registrar, PIX, ProConnect, ScriptShare, SMARTnet, StackWise, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.