



# MPLS Label Distribution Protocol (LDP)

Multiprotocol Label Switching (MPLS) Label Distribution Protocol (LDP) enables peer label switch routers (LSRs) in an MPLS network to exchange label binding information for supporting hop-by-hop forwarding in an MPLS network. This module explains the concepts related to MPLS LDP and describes how to configure MPLS LDP in a network.

## History for the MPLS LDP Feature

| Release    | Modification                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 12.0(10)ST | This feature was introduced in Cisco IOS Release 12.0(10)ST, incorporating a new set of Multiprotocol Label Switching (MPLS) CLI commands implemented for use with Cisco routers and switches. The CLI commands in this release reflected MPLS command syntax and terminology, thus facilitating the orderly transition from a network using the Tag Distribution Protocol (TDP) to one using the Label Distribution Protocol (LDP). |
| 12.0(14)ST | This feature was integrated into Cisco IOS Release 12.0(14)ST. This release introduced several new MPLS CLI commands, provided support for MPLS VPNs by means of a new <b>vrf vpn-name</b> parameter in certain existing commands, and modified other commands to ensure consistent interpretation of associated <i>prefix-access-list</i> arguments by Cisco IOS software.                                                          |
| 12.1(2)T   | This feature was integrated into Cisco IOS 12.1(2)T. Also, the <b>debug mpls atm-ldp api</b> , <b>debug mpls atm-ldp routes</b> , and <b>debug mpls atm-ldp states</b> commands were modified.                                                                                                                                                                                                                                       |
| 12.1(8a)E  | This feature was integrated into Cisco IOS Release 12.1(8a)E.                                                                                                                                                                                                                                                                                                                                                                        |
| 12.2(2)T   | This feature was integrated into Cisco IOS Release 12.2(2)T.                                                                                                                                                                                                                                                                                                                                                                         |
| 12.2(4)T   | This feature was integrated into Cisco IOS Release 12.2(4)T. Also, support was added for Cisco MGX 8850 and MGX 8950 switches equipped with a Cisco MGX RPM-PR card, and the VPI range in the <b>show mpls atm-ldp bindings</b> and <b>show mpls ip binding</b> commands was changed to 4095.                                                                                                                                        |
| 12.2(8)T   | This feature was integrated into Cisco IOS Release 12.2(8)T. This release introduced the <b>debug mpls atm-ldp failure</b> command.                                                                                                                                                                                                                                                                                                  |
| 12.0(21)ST | This feature was integrated into Cisco IOS Release 12.0(21)ST. This release introduced the <b>mpls ldp neighbor implicit-withdraw</b> command.                                                                                                                                                                                                                                                                                       |

|           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 12.0(22)S | This feature was integrated into Cisco IOS Release 12.0(22)S. The <b>mpls ldp neighbor targeted-session</b> command and the <b>interface</b> keyword for the <b>mpls ldp advertise-labels</b> command were added.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 12.0(23)S | This feature was integrated into Cisco IOS Release 12.0(23)S. Default values for the <b>mpls ldp discovery</b> command <b>holdtime</b> and <b>interval</b> keywords were changed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 12.2(13)T | This feature was integrated into Cisco IOS Release 12.2(13)T.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 12.4(3)   | <p>The default MPLS label distribution protocol changed from TDP to LDP. If no protocol is explicitly configured by the <b>mpls label protocol</b> command, LDP is the default label distribution protocol. See the <b>mpls label protocol</b> (global configuration) command for more information.</p> <p><b>Note</b> Use caution when upgrading the image on a router that uses TDP. Ensure that the TDP sessions are established when the new image is loaded. You can accomplish this by issuing the global configuration command <b>mpls label protocol tdp</b>. Issue this command and save it to the startup configuration before loading the new image. Alternatively, you can enter the command and save the running configuration immediately after loading the new image.</p> <p>LDP configuration commands are saved by using the MPLS form of the command rather than the tag-switching form. Previously, commands were saved by using the tag-switching form of the command, for backward compatibility. See the “<a href="#">Saving Configurations: MPLS/Tag Switching Commands</a>” section on page 13 for more information.</p> |
| 12.4(5)   | The <b>vrf vrf-name</b> keyword/argument pair was added for the <b>mpls ldp router-id</b> command to allow you to associate the LDP router ID with a nondefault VRF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

### Finding Support Information for Platforms and Cisco IOS Software Images

Use Cisco Feature Navigator to find information about platform support and Cisco IOS software image support. Access Cisco Feature Navigator at <http://www.cisco.com/go/fn>. You must have an account on Cisco.com. If you do not have an account or have forgotten your username or password, click **Cancel** at the login dialog box and follow the instructions that appear.

## Contents

- [Prerequisites for MPLS LDP, page 3](#)
- [Restrictions for MPLS LDP, page 3](#)
- [Information About MPLS LDP, page 3](#)
- [How to Configure MPLS LDP, page 6](#)
- [MPLS LDP Configuration Examples, page 22](#)
- [Command Reference, page 27](#)

## Prerequisites for MPLS LDP

Label switching on a router requires that Cisco Express Forwarding (CEF) be enabled on that router. Refer to the chapters on CEF in the following documents for configuration information:

- *Cisco IOS IP Switching Configuration Guide*, Release 12.4
- *Cisco IOS IP Switching Command Reference*, Release 12.4

## Restrictions for MPLS LDP

Not all MPLS LDP features and platforms are supported in every release. For information about platform and feature support, see Cisco Feature Navigator at <http://www.cisco.com/go/fn>.

## Information About MPLS LDP

To configure MPLS LDP, you should understand the following concepts:

- [Introduction to MPLS LDP, page 3](#)
- [MPLS LDP Functional Overview, page 3](#)
- [Introduction to LDP Sessions, page 4](#)
- [Introduction to LDP Label Bindings, Label Spaces, and LDP Identifiers, page 5](#)

## Introduction to MPLS LDP

MPLS LDP provides the means for LSRs to request, distribute, and release label prefix binding information to peer routers in a network. LDP enables LSRs to discover potential peers and to establish LDP sessions with those peers for the purpose of exchanging label binding information.

MPLS LDP enables one LSR to inform another LSR of the label bindings it has made. Once a pair of routers communicate the LDP parameters, they establish a label-switched path (LSP). MPLS LDP enables LSRs to distribute labels along normally routed paths to support MPLS forwarding. This method of label distribution is also called hop-by-hop forwarding. With IP forwarding, when a packet arrives at a router the router looks at the destination address in the IP header, performs a route lookup, and forwards the packet to the next hop. With MPLS forwarding, when a packet arrives at a router the router looks at the incoming label, looks up the label in a table, and then forwards the packet to the next hop. MPLS LDP is useful for applications that require hop-by-hop forwarding, such as MPLS VPNs.

## MPLS LDP Functional Overview

Cisco MPLS LDP provides the building blocks for MPLS-enabled applications, such as MPS Virtual Private Networks (VPNs).

LDP provides a standard methodology for hop-by-hop, or dynamic label, distribution in an MPLS network by assigning labels to routes that have been chosen by the underlying Interior Gateway Protocol (IGP) routing protocols. The resulting labeled paths, called label switch paths (LSPs), forward label traffic across an MPLS backbone to particular destinations. These capabilities enable service providers to implement MPLS-based IP VPNs and IP+ATM services across multivendor MPLS networks.

From an historical and functional standpoint, LDP is a superset of the Cisco prestandard Tag Distribution Protocol (TDP), which also supports MPLS forwarding along normally routed paths. For those features that LDP and TDP share in common, the pattern of protocol exchanges between network routing platforms is identical. The differences between LDP and TDP for those features supported by both protocols are largely embedded in their respective implementation details, such as the encoding of protocol messages.

This release of LDP, which supports both the LDP and TDP protocols, provides the means for transitioning an existing network from a TDP environment to an LDP environment. Thus, you can run LDP and TDP simultaneously on any router platform. The label distribution protocol that you select can be configured on a per-interface basis for directly connected neighbors and on a per-session basis for nondirectly connected (targeted) neighbors. In addition, an LSP across an MPLS network can be supported by LDP on some hops and by TDP on other hops.

## Introduction to LDP Sessions

When you enable MPLS LDP, the LSRs send out messages to try to find other LSRs with which they can create LDP sessions. The following sections explain the differences between directly connected LDP sessions and nondirectly connected LDP sessions.

### Directly Connected MPLS LDP Sessions

If an LSR is one hop from its neighbor, it is directly connected to its neighbor. The LSR sends out LDP link Hello messages as User Datagram Protocol (UDP) packets to all the routers on the subnet (multicast). A neighboring LSR may respond to the link Hello message, allowing the two routers to establish an LDP session. This is called basic discovery.

To initiate an LDP session between routers, the routers determine which router will take the active role and which router will take the passive role. The router that takes the active role establishes the LDP TCP connection session and initiates the negotiation of the LDP session parameters. To determine the roles, the two routers compare their transport addresses. The router with the higher IP address takes the active role and establishes the session.

After the LDP TCP connection session is established, the LSRs negotiate the session parameters, including the method of label distribution to be used. Two methods are available:

- Downstream Unsolicited: An LSR advertises label mappings to peers without being asked to.
- Downstream on Demand: An LSR advertises label mappings to a peer only when the peer asks for them.

For information about creating LDP sessions, see the [“Enabling Directly Connected LDP Sessions” section on page 7](#).

### Nondirectly Connected MPLS LDP Sessions

If the LSR is more than one hop from its neighbor, it is nondirectly connected to its neighbor. For these nondirectly connected neighbors, the LSR sends out a targeted Hello message as a UDP packet, but as a unicast message specifically addressed to that LSR. The nondirectly connected LSR responds to the Hello message and the two routers begin to establish an LDP session. This is called extended discovery.

An MPLS LDP targeted session is a label distribution session between routers that are not directly connected. When you create an MPLS traffic engineering tunnel interface, you need to establish a label distribution session between the tunnel headend and the tailend routers. You establish nondirectly connected MPLS LDP sessions by enabling the transmission of targeted Hello messages.

You can use the **mpls ldp neighbor targeted** command to set up a targeted session when other means of establishing targeted sessions do not apply, such as configuring **mpls ip** on a traffic engineering (TE) tunnel or configuring Any Transport over MPLS (AToM) virtual circuits (VCs). For example, you can use this command to create a targeted session between directly connected MPLS label switch routers (LSRs) when MPLS label forwarding convergence time is an issue.

The **mpls ldp neighbor targeted** command can improve label convergence time for directly connected neighbor LSRs when the link(s) directly connecting them are down. When the links between the neighbor LSRs are up, both the link and targeted Hellos maintain the LDP session. If the links between the neighbor LSRs go down, the targeted Hellos maintain the session, allowing the LSRs to retain labels learned from each other. When a link directly connecting the LSRs comes back up, the LSRs can immediately reinstall labels for forwarding use without having to reestablish their LDP session and exchange labels.

The exchange of targeted Hello messages between two nondirectly connected neighbors can occur in several ways, including the following:

- Router 1 sends targeted Hello messages carrying a response request to Router 2. Router 2 sends targeted Hello messages in response if its configuration permits. In this situation, Router 1 is considered to be *active* and Router 2 is considered to be *passive*.
- Router 1 and Router 2 both send targeted Hello messages to each other. Both routers are considered to be *active*. Both, one, or neither router can also be *passive*, if they have been configured to respond to requests for targeted Hello messages from each other.

The default behavior of an LSR is to ignore requests from other LSRs that send targeted Hello messages. You can configure an LSR to respond to requests for targeted Hello messages by issuing the **mpls ldp discovery targeted-hello accept** command.

The active LSR mandates the protocol that is used for a targeted session. The passive LSR uses the protocol of the received targeted Hello messages.

For information about creating MPLS LDP targeted sessions, see the [“Establishing Nondirectly Connected MPLS LDP Sessions” section on page 10](#).

## Introduction to LDP Label Bindings, Label Spaces, and LDP Identifiers

An LDP label binding is an association between a destination prefix and a label. The label used in a label binding is allocated from a set of possible labels called a label space.

LDP supports two types of label spaces:

- Interface-specific—An interface-specific label space uses interface resources for labels. For example, label-controlled ATM (LC-ATM) interfaces use virtual path identifiers/virtual circuit identifiers (VPIs/VCIs) for labels. Depending on its configuration, an LDP platform may support zero, one, or more interface-specific label spaces.
- Platform-wide—An LDP platform supports a single platform-wide label space for use by interfaces that can share the same labels. For Cisco platforms, all interface types, except LC-ATM, use the platform-wide label space.

LDP uses a 6-byte quantity called an LDP Identifier (or LDP ID) to name label spaces. The LDP ID is made up of the following components:

- The first four bytes, called the LDP router ID, identify the LSR that owns the label space.
- The last two bytes, called the local label space ID, identify the label space within the LSR. For the platform-wide label space, the last two bytes of the LDP ID are always both 0.

The LDP ID takes the following form:

<LDP router ID> : <local label space ID>

The following are examples of LDP IDs:

- 172.16.0.0:0
- 192.168.0.0:3

The router determines the LDP router ID as follows, if the **mpls ldp router-id** command is not executed,

1. The router examines the IP addresses of all operational interfaces.
2. If these IP addresses include loopback interface addresses, the router selects the largest loopback address as the LDP router ID.
3. Otherwise, the router selects the largest IP address pertaining to an operational interface as the LDP router ID.

The normal (default) method for determining the LDP router ID may result in a router ID that is not usable in certain situations. For example, the router might select an IP address as the LDP router ID that the routing protocol cannot advertise to a neighboring router. The **mpls ldp router-id** command allows you to specify the IP address of an interface as the LDP router ID. Make sure the specified interface is operational so that its IP address can be used as the LDP router ID.

When you issue the **mpls ldp router-id** command without the **force** keyword, the router selects the IP address of the specified interface (provided that the interface is operational) the next time it is necessary to select an LDP router ID, which is typically the next time the interface is shut down or the address is configured.

When you issue the **mpls ldp router-id** command with the **force** keyword, the effect of the **mpls ldp router-id** command depends on the current state of the specified interface:

- If the interface is up (operational) and if its IP address is not currently the LDP router ID, the LDP router ID changes to the IP address of the interface. This forced change in the LDP router ID tears down any existing LDP sessions, releases label bindings learned via the LDP sessions, and interrupts MPLS forwarding activity associated with the bindings.
- If the interface is down (not operational) when the **mpls ldp router-id force** command is issued, when the interface transitions to up, the LDP router ID changes to the IP address of the interface. This forced change in the LDP router ID tears down any existing LDP sessions, releases label bindings learned via the LDP sessions, and interrupts MPLS forwarding activity associated with the bindings.

## How to Configure MPLS LDP

This section contains the following procedures:

- [Enabling Directly Connected LDP Sessions, page 7](#) (required)
- [Establishing Nondirectly Connected MPLS LDP Sessions, page 10](#) (optional)
- [Saving Configurations: MPLS/Tag Switching Commands, page 13](#) (optional)
- [Specifying the LDP Router ID, page 13](#) (optional)
- [Preserving QoS Settings with MPLS LDP Explicit Null, page 15](#) (optional)
- [Protecting Data Between LDP Peers with MD5 Authentication, page 19](#) (optional)

## Enabling Directly Connected LDP Sessions

This procedure explains how to configure MPLS LDP sessions between two directly connected routers.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **mpls ip**
4. **mpls label protocol {ldp | tdp | both}**
5. **interface** *type number*
6. **mpls ip**
7. **exit**
8. **exit**
9. **show mpls interfaces** [*interface*] [**detail**]
10. **show mpls ldp discovery** [**all** | **vrf** *vpn-name*] [**detail**]
11. **show mpls ldp neighbor** [[**vrf** *vpn-name*] [*address* | *interface*] [**detail**] | [**all**]]

### DETAILED STEPS

|        | Command or Action                                                                                               | Purpose                                                                                                                                                                                                                                                                                                                                                                  |
|--------|-----------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>enable</b><br><br><b>Example:</b><br>Router> enable                                                          | Enables privileged EXEC mode.<br><ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>                                                                                                                                                                                                                                                    |
| Step 2 | <b>configure terminal</b><br><br><b>Example:</b><br>Router# configure terminal                                  | Enters global configuration mode.                                                                                                                                                                                                                                                                                                                                        |
| Step 3 | <b>mpls ip</b><br><br><b>Example:</b><br>Router(config)# mpls ip                                                | Configures MPLS hop-by-hop forwarding globally.<br><ul style="list-style-type: none"> <li>• The <b>mpls ip</b> command is enabled by default; you do not have to specify this command.</li> <li>• Globally enabling MPLS forwarding does not enable it on the router interfaces. You must enable MPLS forwarding on the interfaces as well as for the router.</li> </ul> |
| Step 4 | <b>mpls label protocol {ldp   tdp   both}</b><br><br><b>Example:</b><br>Router(config)# mpls label protocol ldp | Configures the use of LDP on all interfaces. LDP is the default.<br><ul style="list-style-type: none"> <li>• If you set all interfaces globally to LDP, you can override specific interfaces with either the <b>tdp</b> or <b>both</b> keyword by specifying the command in interface configuration mode.</li> </ul>                                                     |

|                | Command or Action                                                                                                                                                                         | Purpose                                                                                                                                                                                |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 5</b>  | Router(config)# <b>interface</b> <i>type number</i><br><br><b>Example:</b><br>Router(config)# interface ethernet3/0                                                                       | Specifies the interface to be configured and enters interface configuration mode.                                                                                                      |
| <b>Step 6</b>  | <b>mpls ip</b><br><br><b>Example:</b><br>Router(config-if)# mpls ip                                                                                                                       | Configures MPLS hop-by-hop forwarding on the interface. <ul style="list-style-type: none"> <li>You must enable MPLS forwarding on the interfaces as well as for the router.</li> </ul> |
| <b>Step 7</b>  | <b>exit</b><br><br><b>Example:</b><br>Router(config-if)# exit                                                                                                                             | Exits interface configuration mode and enters global configuration mode.                                                                                                               |
| <b>Step 8</b>  | <b>exit</b><br><br><b>Example:</b><br>Router(config)# exit                                                                                                                                | Exits global configuration mode and enters privileged EXEC mode.                                                                                                                       |
| <b>Step 9</b>  | <b>show mpls interfaces</b> [ <i>interface</i> ] [ <i>detail</i> ]<br><br><b>Example:</b><br>Router# show mpls interfaces                                                                 | Verifies that the interfaces have been configured to use LDP, TDP, or both.                                                                                                            |
| <b>Step 10</b> | <b>show mpls ldp discovery</b> [ <i>all</i>   <i>vrf vpn-name</i> ] [ <i>detail</i> ]<br><br><b>Example:</b><br>Router# show mpls ldp discovery                                           | Verifies that the interface is up and is sending Discovery Hello messages.                                                                                                             |
| <b>Step 11</b> | <b>show mpls ldp neighbor</b> [[ <i>vrf vpn-name</i> ] [ <i>address</i>   <i>interface</i> ] [ <i>detail</i> ]   [ <i>all</i> ]]<br><br><b>Example:</b><br>Router# show mpls ldp neighbor | Displays the status of LDP sessions.                                                                                                                                                   |

## Examples

The following **show mpls interfaces** command verifies that interfaces Ethernet 1/0 and 1/1 have been configured to use LDP:

```
Router# show mpls interfaces
```

| Interface   | IP        | Tunnel | BGP | Static | Operational |
|-------------|-----------|--------|-----|--------|-------------|
| Ethernet3/0 | Yes (ldp) | No     | No  | No     | Yes         |
| Ethernet3/1 | Yes       | No     | No  | No     | Yes         |

The following **show mpls ldp discovery** command verifies that the interface is up and is sending LDP Discovery Hello messages (as opposed to TDP Hello messages):

```
Router# show mpls ldp discovery
```

```
Local LDP Identifier:
 172.16.12.1:0
Discovery Sources:
Interfaces:
  Ethernet3/0 (ldp): xmit
```

The following example shows that the LDP session between routers was successfully established:

```
Router# show mpls ldp neighbor
```

```
Peer LDP Ident: 10.1.1.2:0; Local LDP Ident 10.1.1.1:0
TCP connection: 10.1.1.2.18 - 10.1.1.1.66
State: Oper; Msgs sent/rcvd: 12/11; Downstream
Up time: 00:00:10
LDP discovery sources:
FastEthernet1/0, Src IP addr: 10.20.10.2
Addresses bound to peer LDP Ident:
10.1.1.2    10.20.20.1    10.20.10.2
```

For examples on configuring directly connected LDP sessions, see the [“Configuring Directly Connected MPLS LDP Sessions: Example”](#) section on page 22.

## Establishing Nondirectly Connected MPLS LDP Sessions

This section explains how to configure nondirectly connected MPLS LDP sessions, which enable you to establish an LDP session between routers that are not directly connected.

### Prerequisites

- MPLS requires CEF.
- You must configure the routers at both ends of the tunnel to be active or enable one router to be passive with the **mpls ldp discovery targeted-hello accept** command.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **mpls ip**
4. **mpls label protocol {ldp | tdp | both}**
5. **interface tunnelnumber**
6. **tunnel destination ip-address**
7. **mpls ip**
8. **exit**
9. **exit**
10. **show mpls ldp discovery [all | vrf vpn-name] [detail]**

### DETAILED STEPS

|        | Command or Action                             | Purpose                                                                                                                                                                                                                                                                                                               |
|--------|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>enable</b>                                 | Enables privileged EXEC mode.                                                                                                                                                                                                                                                                                         |
|        | <b>Example:</b><br>Router> enable             | <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>                                                                                                                                                                                                                                  |
| Step 2 | <b>configure terminal</b>                     | Enters global configuration mode.                                                                                                                                                                                                                                                                                     |
|        | <b>Example:</b><br>Router# configure terminal |                                                                                                                                                                                                                                                                                                                       |
| Step 3 | <b>mpls ip</b>                                | Configures MPLS hop-by-hop forwarding globally.                                                                                                                                                                                                                                                                       |
|        | <b>Example:</b><br>Router(config)# mpls ip    | <ul style="list-style-type: none"> <li>• The <b>mpls ip</b> command is enabled by default; you do not have to specify this command.</li> <li>• Globally enabling MPLS forwarding does not enable it on the router interfaces. You must enable MPLS forwarding on the interfaces as well as for the router.</li> </ul> |

|                | Command or Action                                                                                                           | Purpose                                                                                                                                                                                                                                                                                                                |
|----------------|-----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 4</b>  | <pre>mpls label protocol {ldp   tdp   both}</pre> <p><b>Example:</b><br/>Router(config)# mpls label protocol ldp</p>        | <p>Configures the use of LDP on all interfaces. LDP is the default.</p> <ul style="list-style-type: none"> <li>If you set all interfaces globally to LDP, you can override specific interfaces with either the <b>tdp</b> or <b>both</b> keyword by specifying the command in interface configuration mode.</li> </ul> |
| <b>Step 5</b>  | <pre>interface tunnelnumber</pre> <p><b>Example:</b><br/>Router(config)# interface tunnel1</p>                              | Configures a tunnel interface and enters interface configuration mode.                                                                                                                                                                                                                                                 |
| <b>Step 6</b>  | <pre>tunnel destination ip-address</pre> <p><b>Example:</b><br/>Router(config-if)# tunnel destination 172.16.1.1</p>        | Assigns an IP address to the tunnel interface.                                                                                                                                                                                                                                                                         |
| <b>Step 7</b>  | <pre>mpls ip</pre> <p><b>Example:</b><br/>Router(config-if)# mpls ip</p>                                                    | <p>Configures MPLS hop-by-hop forwarding on the interface.</p> <ul style="list-style-type: none"> <li>You must enable MPLS forwarding on the interfaces as well as for the router.</li> </ul>                                                                                                                          |
| <b>Step 8</b>  | <pre>exit</pre> <p><b>Example:</b><br/>Router(config-if)# exit</p>                                                          | Exits interface configuration mode and enters global configuration mode.                                                                                                                                                                                                                                               |
| <b>Step 9</b>  | <pre>exit</pre> <p><b>Example:</b><br/>Router(config)# exit</p>                                                             | Exits global configuration mode and enters privileged EXEC mode.                                                                                                                                                                                                                                                       |
| <b>Step 10</b> | <pre>show mpls ldp discovery [all   vrf vpn-name] [detail]</pre> <p><b>Example:</b><br/>Router# show mpls ldp discovery</p> | Verifies that the interface is up and is sending Discovery Hello messages.                                                                                                                                                                                                                                             |

## Example

The following example shows the output of the **show mpls ldp discovery** command for a nondirectly connected LDP session.

```
Router# show mpls ldp discovery

Local LDP Identifier:
    172.16.0.0:0
Discovery Sources:
Interfaces:
    POS2/0 (ldp): xmit/recv
        LDP Id: 172.31.255.255:0
    Tunnel1 (ldp): Targeted -> 192.168.255.255
Targeted Hellos:
    172.16.0.0 -> 192.168.255.255 (ldp): active, xmit/recv
        LDP Id: 192.168.255.255:0
    172.16.0.0 -> 192.168.0.0 (tdp): passive, xmit/recv
        TDP Id: 192.168.0.0:0
```

This command output indicates that:

- The local LSR (172.16.0.0) sent LDP link Hello messages on interface POS2/0 and discovered neighbor 172.31.255.255.
- The local LSR sent LDP targeted Hello messages associated with interface Tunnel1 to target 192.168.255.255. The LSR was configured to use LDP.
- The local LSR is active for targeted discovery activity with 192.168.255.255; this means that the targeted Hello messages it sends to 192.168.255.255 carry a response request. The local LSR was configured to have an LDP session with the nondirectly connected LSR 192.168.255.255.
- The local LSR is not passive from the discovery activity with 192.168.255.255 for one of the following reasons:
  - The targeted Hello messages it receives from 192.168.255.255 do not carry a response request.
  - The local LSR has not been configured to respond to such requests.
- The local LSR sent TDP directed Hello messages to the target LSR 192.168.0.0. This LSR uses TDP because the Hello messages received from the target LSR 192.168.0.0 were TDP directed Hello messages.
- The local LSR is passive in discovery activity with LSR 192.168.0.0. This means that the directed Hello messages it receives from LSR 192.168.0.0 carry a response request and that the local LSR has been configured with the **mpls ldp discovery targeted-hello accept** command to respond to such requests from LSR 192.168.0.0.
- The local LSR is not active in discovery activity with LSR 192.168.0.0, because no application that requires an LDP session with LSR 192.168.0.0 has been configured on the local LSR.

For examples of configuring LDP targeted sessions, see the [“Establishing Nondirectly Connected MPLS LDP Sessions: Example”](#) section on page 24.

## Saving Configurations: MPLS/Tag Switching Commands

In releases of Cisco IOS software prior to 12.4(2)T, some MPLS commands had both a tag-switching version and an MPLS version. For example, the two commands **tag-switching ip** and **mpls ip** were the same. To support backward compatibility, the tag-switching form of the command was written to the saved configuration.

Starting in Cisco IOS Release 12.4(2)T, the MPLS form of the command is written to the saved configuration.

For example, if an LC-ATM interface is configured using the following commands, which have both a tag-switching form and an MPLS form:

```
Router(config)# interface ATM3/0.1 tag-switching
Router(config-if)# ip unnumbered Loopback0
router(config-if)# tag-switching ip
Router(config-if)# mpls label protocol ldp
```

After you enter these commands and save this configuration or display the running configuration with the **show running** command, the commands saved or displayed appear as follows:

```
interface ATM3/0.1 mpls
ip unnumbered Loopback0
mpls ip
mpls label protocol ldp
```

## Specifying the LDP Router ID

The **mpls ldp router-id** command allows you to establish the IP address of an interface as the LDP router ID.

The following steps describe the normal process for determining the LDP router ID:

1. The router considers all the IP addresses of all operational interfaces.
2. If these addresses include loopback interface addresses, the router selects the largest loopback address. Configuring a loopback address helps ensure a stable LDP ID for the router, because the state of loopback addresses does not change. However, configuring a loopback interface and IP address on each router is not required.

The loopback IP address does not become the router ID of the local LDP ID under the following circumstances:

- If the loopback interface has been explicitly shut down.
- If the **mpls ldp router-id** command specifies that a different interface should be used as the LDP router ID.

If you use a loopback interface, make sure that the IP address for the loopback interface is configured with a /32 network mask. In addition, make sure that the routing protocol in use is configured to advertise the corresponding /32 network.

3. Otherwise, the router selects the largest interface address.

The router might select a router ID that is not usable in certain situations. For example, the router might select an IP address that the routing protocol cannot advertise to a neighboring router.

The router implements the router ID the next time it is necessary to select an LDP router ID. The effect of the command is delayed until the next time it is necessary to select an LDP router ID, which is typically the next time the interface is shut down or the address is deconfigured.

If you use the **force** keyword with the **mpls ldp router-id** command, the router ID takes effect more quickly. However, implementing the router ID depends on the current state of the specified interface:

- If the interface is up (operational) and its IP address is not currently the LDP router ID, the LDP router ID is forcibly changed to the IP address of the interface. This forced change in the LDP router ID tears down any existing LDP sessions, releases label bindings learned via the LDP sessions, and interrupts MPLS forwarding activity associated with the bindings.
- If the interface is down, the LDP router ID is forcibly changed to the IP address of the interface when the interface transitions to up. This forced change in the LDP router ID tears down any existing LDP sessions, releases label bindings learned via the LDP sessions, and interrupts MPLS forwarding activity associated with the bindings.

## Prerequisites

Make sure the specified interface is operational before assigning it as the LDP router ID.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **mpls ip**
4. **mpls label protocol {ldp | tdp | both}**
5. **mpls ldp router-id interface [force]**
6. **exit**
7. **show mpls ldp discovery [all | detail |vrf vpn-name]**

## DETAILED STEPS

|        | Command or Action                                                              | Purpose                                                                                                                                                                                                                                                                                                                                                               |
|--------|--------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>enable</b><br><br><b>Example:</b><br>Router> enable                         | Enables privileged EXEC mode.<br><ul style="list-style-type: none"><li>• Enter your password if prompted.</li></ul>                                                                                                                                                                                                                                                   |
| Step 2 | <b>configure terminal</b><br><br><b>Example:</b><br>Router# configure terminal | Enters global configuration mode.                                                                                                                                                                                                                                                                                                                                     |
| Step 3 | <b>mpls ip</b><br><br><b>Example:</b><br>Router(config)# mpls ip               | Configures MPLS hop-by-hop forwarding globally.<br><ul style="list-style-type: none"><li>• The <b>mpls ip</b> command is enabled by default; you do not have to specify this command.</li><li>• Globally enabling MPLS forwarding does not enable it on the router interfaces. You must enable MPLS forwarding on the interfaces as well as for the router.</li></ul> |

|        | Command or Action                                                                                                      | Purpose                                                                                                                                                                                                                                                                                                         |
|--------|------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 4 | <b>mpls label protocol {ldp   tdp   both}</b><br><br><b>Example:</b><br>Router(config)# mpls label protocol ldp        | Configures the use of LDP on all interfaces. LDP is the default. <ul style="list-style-type: none"> <li>If you set all interfaces globally to LDP, you can override specific interfaces with either the <b>tdp</b> or <b>both</b> keyword by specifying the command in interface configuration mode.</li> </ul> |
| Step 5 | <b>mpls ldp router-id interface [force]</b><br><br><b>Example:</b><br>Router(config)# mpls ldp router-id pos2/0/0      | Specifies the preferred interface for determining the LDP router ID.                                                                                                                                                                                                                                            |
| Step 6 | <b>exit</b><br><br><b>Example:</b><br>Router(config)# exit                                                             | Exits global configuration mode and enters privileged EXEC mode.                                                                                                                                                                                                                                                |
| Step 7 | <b>show mpls ldp discovery [all   detail   vrf vpn-name]</b><br><br><b>Example:</b><br>Router# show mpls ldp discovery | Displays the LDP identifier for the local router.                                                                                                                                                                                                                                                               |

## Example

The following example assigns interface pos2/0/0 as the LDP router ID:

```
Router> enable
Router# configure terminal
Router(config)# mpls ip
Router(config)# mpls label protocol ldp
Router(config)# mpls ldp router-id pos2/0/0 force
```

The following example displays the LDP router ID (10.15.15.15):

```
Router# show mpls ldp discovery

Local LDP Identifier:
 10.15.15.15:0
Discovery Sources:
  Interfaces:
    Ethernet4 (ldp): xmit/recv
      LDP Id: 10.14.14.14:0
```

## Preserving QoS Settings with MPLS LDP Explicit Null

Normally, LDP advertises an Implicit Null label for directly connected routes. The Implicit Null label causes the second last (penultimate) label switched router (LSR) to remove the MPLS header from the packet. In this case, the penultimate LSR and the last LSR do not have access to the quality of service (QoS) values that the packet carried before the MPLS header was removed. To preserve the QoS values, you can configure the LSR to advertise an explicit NULL label (a label value of zero). The LSR at the penultimate hop forwards MPLS packets with a NULL label instead of forwarding IP packets.



Note

An explicit NULL label is not needed when the penultimate hop receives MPLS packets with a label stack that contains at least two labels and penultimate hop popping is performed. In that case, the inner label can still carry the QoS value needed by the penultimate and edge LSR to implement their QoS policy.

When you issue the **mpls ldp explicit-null** command, Explicit Null is advertised in place of Implicit Null for directly connected prefixes.

SUMMARY STEPS

- 1. **enable**
- 2. **configure terminal**
- 3. **mpls ip**
- 4. **mpls label protocol {ldp | tdp | both}**
- 5. **interface** *type number*
- 6. **mpls ip**
- 7. **exit**
- 8. **mpls ldp explicit-null** [**for** *prefix-acl* | **to** *peer-acl* | **for** *prefix-acl to peer-acl*]
- 9. **exit**
- 10. **show mpls forwarding-table** [*network {mask | length}* | **labels** *label* [- *label*] | **interface** *interface* | *next-hop address* | **lsp-tunnel** [*tunnel-id*]] [**vrf** *vpn-name*] [**detail**]

DETAILED STEPS

|        | Command or Action                                                              | Purpose                                                                                                                                                                                                                                                                                                                                                            |
|--------|--------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>enable</b><br><br><b>Example:</b><br>Router> enable                         | Enables privileged EXEC mode. <ul style="list-style-type: none"><li>• Enter your password if prompted.</li></ul>                                                                                                                                                                                                                                                   |
| Step 2 | <b>configure terminal</b><br><br><b>Example:</b><br>Router# configure terminal | Enters global configuration mode.                                                                                                                                                                                                                                                                                                                                  |
| Step 3 | <b>mpls ip</b><br><br><b>Example:</b><br>Router(config)# mpls ip               | Configures MPLS hop-by-hop forwarding globally. <ul style="list-style-type: none"><li>• The <b>mpls ip</b> command is enabled by default; you do not have to specify this command.</li><li>• Globally enabling MPLS forwarding does not enable it on the router interfaces. You must enable MPLS forwarding on the interfaces as well as for the router.</li></ul> |

|         | Command or Action                                                                                                                                                                                                                           | Purpose                                                                                                                                                                                                                                                                                                         |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 4  | <b>mpls label protocol</b> {ldp   tdp   both}<br><br><b>Example:</b><br>Router(config)# mpls label protocol ldp                                                                                                                             | Configures the use of LDP on all interfaces. LDP is the default. <ul style="list-style-type: none"> <li>If you set all interfaces globally to LDP, you can override specific interfaces with either the <b>tdp</b> or <b>both</b> keyword by specifying the command in interface configuration mode.</li> </ul> |
| Step 5  | <b>interface</b> type number<br><br><b>Example:</b><br>Router(config)# interface atm2/0                                                                                                                                                     | Specifies the interface to be configured and enters interface configuration mode.                                                                                                                                                                                                                               |
| Step 6  | <b>mpls ip</b><br><br><b>Example:</b><br>Router(config-if)# mpls ip                                                                                                                                                                         | Configures MPLS hop-by-hop forwarding on the interface. <ul style="list-style-type: none"> <li>You must enable MPLS forwarding on the interfaces as well as for the router.</li> </ul>                                                                                                                          |
| Step 7  | <b>exit</b><br><br><b>Example:</b><br>Router(config-if)# exit                                                                                                                                                                               | Exits interface configuration mode and enters global configuration mode.                                                                                                                                                                                                                                        |
| Step 8  | <b>mpls ldp explicit-null</b> [for prefix-acl   to peer-acl   for prefix-acl to peer-acl]<br><br><b>Example:</b><br>Router(config)# mpls ldp explicit-null                                                                                  | Advertises an Explicit Null label in situations where it would normally advertise an Implicit Null label.                                                                                                                                                                                                       |
| Step 9  | <b>exit</b><br><br><b>Example:</b><br>Router(config)# exit                                                                                                                                                                                  | Exits global configuration mode and enter privileged EXEC mode.                                                                                                                                                                                                                                                 |
| Step 10 | <b>show mpls forwarding-table</b> [network {mask   length}   labels label [- label]   interface interface   next-hop address   lsp-tunnel [tunnel-id]] [vrf vpn-name] [detail]<br><br><b>Example:</b><br>Router# show mpls forwarding-table | Verifies that MPLS packets are forwarded with an explicit-null label (value of 0).                                                                                                                                                                                                                              |

## Examples

Enabling explicit-null on an egress LSR causes that LSR to advertise the explicit-null label to all adjacent MPLS routers.

```
Router# configure terminal
Router(config)# mpls ldp explicit-null
```

If you issue the **show mpls forwarding-table** command on an adjacent router, the output shows that MPLS packets are forwarded with an explicit-null label (value of 0). In the following example, the second column shows that entries have outgoing labels of 0, where once they were marked “Pop label”.

```
Router# show mpls forwarding-table
```

```
Local  Outgoing  Prefix          Bytes label  Outgoing     Next Hop
-----
```

| label | label or VC | or Tunnel Id    | switched | interface |              |
|-------|-------------|-----------------|----------|-----------|--------------|
| 19    | Pop tag     | 10.12.12.12/32  | 0        | Fa2/1/0   | 172.16.0.1   |
| 22    | 0           | 10.14.14.14/32  | 0        | Fa2/0/0   | 192.168.0.2  |
| 23    | 0           | 172.24.24.24/32 | 0        | Fa2/0/0   | 192.168.0.2  |
| 24    | 0           | 192.168.0.0/8   | 0        | Fa2/0/0   | 192.168.0.2  |
| 25    | 0           | 10.15.15.15/32  | 0        | Fa2/0/0   | 192.168.0.2  |
| 26    | 0           | 172.16.0.0/8    | 0        | Fa2/0/0   | 192.168.0.2  |
| 27    | 25          | 10.16.16.16/32  | 0        | Fa2/0/0   | 192.168.0.22 |
| 28    | 0           | 10.34.34.34/32  | 0        | Fa2/0/0   | 192.168.0.2  |

Enabling explicit-null and specifying the **for** keyword with a standard access control list (ACL) changes all adjacent MPLS routers' tables to swap an explicit-null label for only those entries specified in the access-list. In the following example, an access-list is created that contains the 10.24.24.24/32 entry. Explicit null is configured and the access list is specified.

```
Router# configure terminal
Router(config)# mpls label protocol ldp
Router(config)# access-list 24 permit host 10.24.24.24
Router(config)# mpls ldp explicit-null for 24
```

If you issue the **show mpls forwarding-table** command on an adjacent router, the output shows that the only the outgoing labels for the addresses specified (172.24.24.24/32) change from Pop label to 0. All other Pop label outgoing labels remain the same.

```
Router# show mpls forwarding-table
```

| Local label | Outgoing label or VC | Prefix or Tunnel Id | Bytes | label switched | Outgoing interface | Next Hop     |
|-------------|----------------------|---------------------|-------|----------------|--------------------|--------------|
| 19          | Pop tag              | 10.12.12.12/32      | 0     |                | Fa2/1/0            | 172.16.0.1   |
| 22          | 0                    | 10.14.14.14/32      | 0     |                | Fa2/0/0            | 192.168.0.2  |
| 23          | 0                    | 172.24.24.24/32     | 0     |                | Fa2/0/0            | 192.168.0.2  |
| 24          | 0                    | 192.168.0.0/8       | 0     |                | Fa2/0/0            | 192.168.0.2  |
| 25          | 0                    | 10.15.15.15/32      | 0     |                | Fa2/0/0            | 192.168.0.2  |
| 26          | 0                    | 172.16.0.0/8        | 0     |                | Fa2/0/0            | 192.168.0.2  |
| 27          | 25                   | 10.16.16.16/32      | 0     |                | Fa2/0/0            | 192.168.0.22 |
| 28          | 0                    | 10.34.34.34/32      | 0     |                | Fa2/0/0            | 192.168.0.2  |

Enabling explicit null and adding the **to** keyword and an access list enables you to advertise explicit-null labels to only those adjacent routers specified in the access-list. To advertise explicit-null to a particular router, you must specify the router's LDP ID in the access-list.

In the following example, an access-list contains the 10.15.15.15/32 entry, which is the LDP ID of an adjacent MPLS router. The router that is configured with explicit null advertises explicit-null labels only to that adjacent router.

```
Router# show mpls ldp discovery
```

```
Local LDP Identifier:
  10.15.15.15:0
Discovery Sources:
  Interfaces:
    Ethernet4 (ldp): xmit/recvd
      TDP Id: 10.14.14.14:0
```

```
Router# configure terminal
Router(config)# mpls label protocol ldp
Router(config)# access-list 15 permit host 10.15.15.15
Router(config)# mpls ldp explicit-null to 15
```

If you issue the **show mpls forwarding-table** command, the output shows that explicit null labels are going only to the router specified in the access list.

```
Router# show mpls forwarding-table
```

| Local label | Outgoing label or VC | Prefix or Tunnel Id | Bytes label switched | Outgoing interface | Next Hop     |
|-------------|----------------------|---------------------|----------------------|--------------------|--------------|
| 19          | Pop tag              | 10.12.12.12/32      | 0                    | Fa2/1/0            | 172.16.0.1   |
| 22          | 0                    | 10.14.14.14/32      | 0                    | Fa2/0/0            | 192.168.0.2  |
| 23          | 0                    | 172.24.24.24/32     | 0                    | Fa2/0/0            | 192.168.0.2  |
| 24          | 0                    | 192.168.0.0/8       | 0                    | Fa2/0/0            | 192.168.0.2  |
| 25          | 0                    | 10.15.15.15/32      | 0                    | Fa2/0/0            | 192.168.0.2  |
| 26          | 0                    | 172.16.0.0/8        | 0                    | Fa2/0/0            | 192.168.0.2  |
| 27          | 25                   | 10.16.16.16/32      | 0                    | Fa2/0/0            | 192.168.0.22 |
| 28          | 0                    | 10.34.34.34/32      | 0                    | Fa2/0/0            | 192.168.0.2  |

Enabling explicit-null with both the **for** and **to** keywords enables you to specify which routes to advertise with explicit-null labels and to which adjacent routers to advertise these explicit-null labels.

```
Router# show access 15
```

```
Standard IP access list 15
  permit 10.15.15.15 (7 matches)
```

```
Router# show access 24
```

```
Standard IP access list 24
  permit 10.24.24.24 (11 matches)
```

```
Router# configure terminal
```

```
Router(config)# mpls label protocol ldp
```

```
Router(config)# mpls ldp explicit-null for 24 to 15
```

If you issue the **show mpls forwarding-table** command on the router called 47K-60-4, the output shows that it receives explicit null labels for 10.24.24.24/32.

```
Router# show mpls forwarding-table
```

| Local label | Outgoing label or VC | Prefix or Tunnel Id | Bytes label switched | Outgoing interface | Next Hop   |
|-------------|----------------------|---------------------|----------------------|--------------------|------------|
| 17          | 0 <---               | 10.24.24.24/32      | 0                    | Et4                | 172.16.0.1 |
| 20          | Pop tag              | 172.16.0.0/8        | 0                    | Et4                | 172.16.0.1 |
| 21          | 20                   | 10.12.12.12/32      | 0                    | Et4                | 172.16.0.1 |
| 22          | 16                   | 10.0.0.0/8          | 0                    | Et4                | 172.16.0.1 |
| 23          | 21                   | 10.13.13.13/32      | 0                    | Et4                | 172.16.0.1 |
| 25          | Pop tag              | 10.14.14.14/32      | 0                    | Et4                | 172.16.0.1 |
| 27          | Pop tag              | 192.168.0.0/8       | 0                    | Et4                | 172.16.0.1 |
| 28          | 25                   | 10.16.16.16/32      | 0                    | Et4                | 172.16.0.1 |
| 29          | Pop tag              | 192.168.34.34/32    | 0                    | Et4                | 172.16.0.1 |

## Protecting Data Between LDP Peers with MD5 Authentication

You can enable authentication between two LDP peers, which verifies each segment sent on the TCP connection between the peers. You must configure authentication on both LDP peers using the same password; otherwise, the peer session is not established.

Authentication uses the Message Digest 5 (MD5) algorithm to verify the integrity of the communication and authenticate the origin of the message.

To enable authentication, issue the **mpls ldp neighbor** command with the **password** keyword. This causes the router to generate an MD5 digest for every segment sent on the TCP connection and check the MD5 digest for every segment received from the TCP connection.

When you configure a password for an LDP neighbor, the router tears down existing LDP sessions and establishes new sessions with the neighbor.

If a router has a password configured for a neighbor, but the neighboring router does not have a password configured, a message such as the following appears on the console who has a password configured while the two routers attempt to establish an LDP session. The LDP session is not established.

```
%TCP-6-BADAUTH: No MD5 digest from [peer's IP address] (11003) to [local router's IP address] (646)
```

Similarly, if the two routers have different passwords configured, a message such as the following appears on the console. The LDP session is not established.

```
%TCP-6-BADAUTH: Invalid MD5 digest from [peer's IP address] (11004) to [local router's IP address] (646)
```

SUMMARY STEPS

- 1. **enable**
- 2. **configure terminal**
- 3. **mpls ip**
- 4. **mpls label protocol {ldp | tdp | both}**
- 5. **mpls ldp neighbor [vrf vpn-name] ip-address [password [0-7] password-string]**
- 6. **show mpls ldp neighbor [[vrf vpn-name] [address | interface] [detail] | [all]]**

DETAILED STEPS

|        | Command or Action                                                              | Purpose                                                                                                                                                                                                                                                                                                                                                            |
|--------|--------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>enable</b><br><br><b>Example:</b><br>Router> enable                         | Enables privileged EXEC mode. <ul style="list-style-type: none"><li>• Enter your password if prompted.</li></ul>                                                                                                                                                                                                                                                   |
| Step 2 | <b>configure terminal</b><br><br><b>Example:</b><br>Router# configure terminal | Enters global configuration mode.                                                                                                                                                                                                                                                                                                                                  |
| Step 3 | <b>mpls ip</b><br><br><b>Example:</b><br>Router(config)# mpls ip               | Configures MPLS hop-by-hop forwarding globally. <ul style="list-style-type: none"><li>• The <b>mpls ip</b> command is enabled by default; you do not have to specify this command.</li><li>• Globally enabling MPLS forwarding does not enable it on the router interfaces. You must enable MPLS forwarding on the interfaces as well as for the router.</li></ul> |

|        | Command or Action                                                                                                                                                                            | Purpose                                                                                                                                                                                                                                                                                                         |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 4 | <code>mpls label protocol {ldp   tdp   both}</code><br><br><b>Example:</b><br>Router(config)# mpls label protocol ldp                                                                        | Configures the use of LDP on all interfaces. LDP is the default. <ul style="list-style-type: none"> <li>If you set all interfaces globally to LDP, you can override specific interfaces with either the <b>tdp</b> or <b>both</b> keyword by specifying the command in interface configuration mode.</li> </ul> |
| Step 5 | <code>mpls ldp neighbor [vrf vpn-name] ip-address<br/>[password [0-7] password-string]</code><br><br><b>Example:</b><br>Router(config)# mpls ldp neighbor 172.27.0.15<br>password onethirty9 | Specifies authentication between two LDP peers.                                                                                                                                                                                                                                                                 |
| Step 6 | <code>exit</code><br><br><b>Example:</b><br>Router(config)# exit                                                                                                                             | Exits global configuration mode and enters privileged EXEC mode.                                                                                                                                                                                                                                                |
| Step 7 | <code>show mpls ldp neighbor [[vrf vpn-name] [address<br/>  interface] [detail]   [all]]</code><br><br><b>Example:</b><br>Router# show mpls ldp neighbor detail                              | Displays the status of LDP sessions.<br><br>If the passwords have been set on both LDP peers and the passwords match, the <b>show mpls ldp neighbor</b> command displays that the LDP session was successfully established.                                                                                     |

## Examples

The following example configures a router with the password cisco:

```
Router> enable
Router# configure terminal
Router(config)# mpls ip
Router(config)# mpls label protocol ldp
Router(config)# mpls ldp neighbor 10.1.1.1 password cisco
Router(config)# exit
```

The following example shows that the LDP session between routers was successfully established:

```
Router# show mpls ldp neighbor

Peer LDP Ident: 10.1.1.2:0; Local LDP Ident 10.1.1.1:0
TCP connection: 10.1.1.2.11118 - 10.1.1.1.646
State: Oper; Msgs sent/rcvd: 12/11; Downstream
Up time: 00:00:10
LDP discovery sources:
FastEthernet1/0, Src IP addr: 10.20.10.2
Addresses bound to peer LDP Ident:
10.1.1.2    10.20.20.1    10.20.10.2
```

The following **show mpls ldp neighbor detail** command shows that MD5 (shown in bold) is used for the LDP session.

```
Router# show mpls ldp neighbor 10.0.0.21 detail

Peer LDP Ident: 10.0.0.21:0; Local LDP Ident 10.0.0.22:0
TCP connection: 10.0.0.21.646 - 10.0.0.22.14709; MD5 on
State: Oper; Msgs sent/rcvd: 1020/1019; Downstream; Last TIB rev sent 2034
Up time: 00:00:39; UID: 3; Peer Id 1;
```

```

LDP discovery sources:
  FastEthernet1/1; Src IP addr: 172.16.1.1
    holdtime: 15000 ms, hello interval: 5000 ms
Addresses bound to peer LDP Ident:
  10.0.0.21      10.0.38.28      10.88.88.2      172.16.0.1
  172.16.1.1
Peer holdtime: 180000 ms; KA interval: 60000 ms; Peer state: estab

```

## MPLS LDP Configuration Examples

This section includes the following configuration examples:

- [Configuring Directly Connected MPLS LDP Sessions: Example, page 22](#)
- [Establishing Nondirectly Connected MPLS LDP Sessions: Example, page 24](#)


### Configuring Directly Connected MPLS LDP Sessions: Example

Figure 1 shows a sample network for configuring directly connected LDP sessions.

This example configures the following:

- MPLS hop-by-hop forwarding for the POS links between Router 1 and Router 2 and between Router 1 and Router 3.
- LDP for label distribution between Router 1 and Router 2.
- TDP for label distribution between Router 1 and Router 3.
- A loopback interface and IP address for each LSR that can be used as the LDP router ID.

**Figure 1** Configuration of MPLS LDP

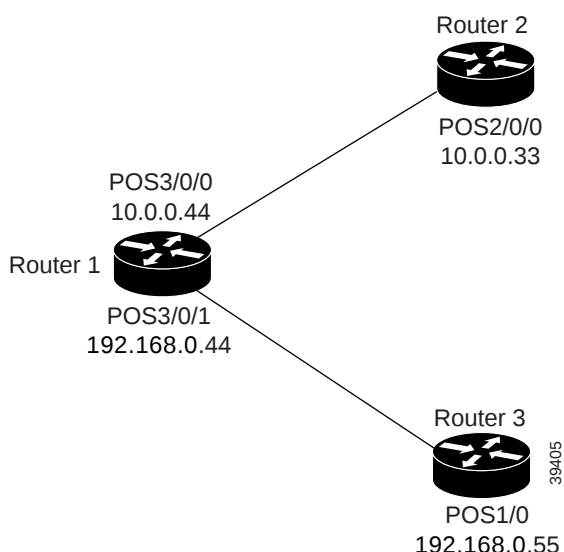

#### Note

The configuration examples below show only the commands related to configuring LDP for Router 1, Router 2, and Router 3 in the sample network shown in Figure 1.

**Router 1 Configuration**

```

ip cef distributed
interface Loopback0
ip address 172.16.0.11 255.255.255.255
!
interface POS3/0/0
ip address 10.0.0.44 255.0.0.0
mpls ip
mpls label protocol ldp
!
interface POS3/0/1
ip address 192.168.0.44 255.0.0.0
mpls ip
mpls label protocol tdp

```

!Assumes R1 supports distributed CEF  
!Loopback interface for LDP ID.

!Enable hop-by-hop MPLS forwarding  
!Use LDP for this interface

!Enable hop-by-hop MPLS forwarding  
!Use TDP for this interface

**Router 2 Configuration**

```

ip cef distributed
!
interface Loopback0
ip address 172.16.0.22 255.255.255.255
!
interface POS2/0/0
ip address 10.0.0.33 255.0.0.0
mpls ip
mpls label protocol ldp

```

!Assumes R2 supports distributed CEF  
!Loopback interface for LDP ID.

!Enable hop-by-hop MPLS forwarding  
!Use LDP for this interface

**Router 3 Configuration**

```

ip cef
!
interface Loopback0
ip address 172.16.0.33 255.255.255.255
!
interface POS1/0
ip address 192.168.0.55 255.0.0.0
mpls ip
mpls label protocol tdp

```

!Assumes R3 does not support dCEF  
!Loopback interface for LDP ID.

!Enable hop-by-hop MPLS forwarding  
!Use tDP for this interface

The LDP configuration for Router 1 uses the **mpls label protocol ldp** command in interface configuration mode, because some of its interfaces use LDP and some use TDP. Another way to configure Router 1 is to use the **mpls label protocol ldp** command in global configuration mode to configure LDP as the default protocol for interfaces and use the **mpls label protocol tdp** command in interface configuration mode to configure TDP for the POS3/0/1 link to Router 3. This alternative way to configure Router 1 is shown below:

**Router 1 Configuration**

```

ip cef distributed
mpls label protocol ldp
!
interface Loopback0
ip address 172.16.0.11 255.255.255.255
interface POS3/0/0
ip address 10.0.0.44 255.0.0.0
mpls ip
!
interface POS3/0/1
ip address 192.168.0.44 255.0.0.0
mpls ip
mpls label protocol tdp

```

!Assumes R1 supports dCEF  
!Use LDP for the default protocol  
!Loopback interface for LDP ID.

!Enable hop-by-hop MPLS forwarding  
!Use LDP (configured i/f default)

!Enable hop-by-hop MPLS forwarding  
!Use TDP for this interface


The configuration of Router 2 also uses the **mpls label protocol ldp** command in interface configuration mode. To specify LDP for all interfaces, use the **mpls label protocol ldp** command in global configuration mode without any interface **mpls label protocol** commands.

Configuring the **mpls ip** command on an interface triggers the transmission of discovery Hello messages for the interface.

## Establishing Nondirectly Connected MPLS LDP Sessions: Example

The following examples illustrate the configuration of platforms for MPLS LDP nondirectly connected sessions using the sample network shown in [Figure 2](#). Note that Routers 1, 4, 5, and 6 in this sample network are not directly connected to each other.

**Figure 2** Sample Network for Configuring LDP for Targeted Sessions

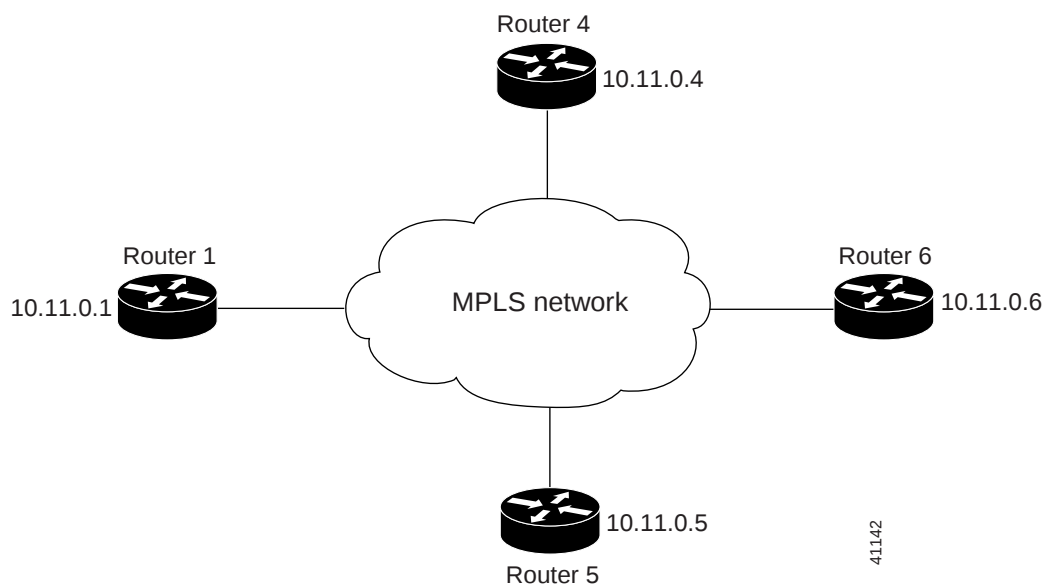

The configuration example shows the following:

- Targeted sessions between Routers 1 and 4 use LDP. Routers 1 and 4 are both active.
- Targeted sessions between Routers 1 and 6 use LDP. Router 1 is active and Router 6 is passive.
- Targeted sessions between Routers 1 and 5 use TDP. Router 5 is active.

These examples assume that the active ends of the nondirectly connected sessions are associated with tunnel interfaces, such as MPLS traffic engineering tunnels. They show only the commands related to configuring LDP targeted sessions. The examples do not show configuration of the applications that initiate the targeted sessions.

### Router 1 Configuration

Tunnel interfaces Tunnel14 and Tunnel16 specify LDP for targeted sessions associated with these interfaces. The targeted session for Router 5 requires TDP. The **mpls label protocol ldp** command in global configuration mode makes it unnecessary to explicitly specify LDP as part of the configuration from the Tunnel14 and Tunnel16.

```
ip cef distributed           !Router1 supports distributed CEF

mpls label protocol ldp     !Use LDP as default for all interfaces

interface Loopback0         !Loopback interface for LDP ID.
ip address 10.25.0.11 255.255.255.255

interface Tunnel14          !Tunnel to Router 4 requiring label distribution
tunnel destination 10.11.0.4 !Tunnel endpoint is Router 4
mpls ip                    !Enable hop-by-hop forwarding on the interface

interface Tunnel15          !Tunnel to Router 5 requiring label distribution
tunnel destination 10.11.0.5 !Tunnel endpoint is Router 5
mpls label protocol tdp     !Use TDP for session with Router 5
mpls ip                    !Enable hop-by-hop forwarding on the interface

interface Tunnel16          !Tunnel to Router 6 requiring label distribution
tunnel destination 10.11.0.6 !Tunnel endpoint is Router 6
mpls ip                    !Enable hop-by-hop forwarding on the interface
```

### Router 4 Configuration

The **mpls label protocol ldp** command in global configuration mode makes it unnecessary to explicitly specify LDP as part of the configuration for the Tunnel41 targeted session with Router 1.

```
ip cef distributed           !Router 4 supports distributed CEF

mpls label protocol ldp     !Use LDP as default for all interfaces

interface Loopback0         !Loopback interface for LDP ID.
ip address 10.25.0.44 255.255.255.255

interface Tunnel41          !Tunnel to Router 1 requiring label distribution
tunnel destination 10.11.0.1 !Tunnel endpoint is Router 1
mpls ip                    !Enable hop-by-hop forwarding on the interface
```

### Router 5 Configuration

Router 5 must use TDP for all targeted sessions. Therefore, its configuration includes the **mpls label protocol tdp** command.

```
ip cef                      !Router 5 supports CEF

mpls label protocol tdp     !Use TDP as default for all interfaces

interface Loopback0         !Loopback interface for LDP ID.
ip address 10.25.0.55 255.255.255.255

interface Tunnel51          !Tunnel to Router 1 requiring label distribution
tunnel destination 10.11.0.1 !Tunnel endpoint is Router 1
mpls ip                    !Enable hop-by-hop forwarding on the interface
```

**Router 6 Configuration**

By default, a router cannot be a passive neighbor in targeted sessions. Therefore, Router 1, Router 4, and Router 5 are active neighbors in any targeted sessions. The **mpls ldp discovery targeted-hello accept** command permits Router 6 to be a passive target in targeted sessions with Router 1. Router 6 can also be an active neighbor in targeted sessions, although the example does not include such a configuration.

```
ip cef distributed                !Router 6 supports distributed CEF

interface Loopback0             !Loopback interface for LDP ID.
ip address 10.25.0.66 255.255.255.255

mpls ldp discovery targeted-hellos accept from LDP_SOURCES
                                !Respond to requests for targeted hellos
                                !from sources permitted by acl LDP_SOURCES

ip access-list standard LDP_SOURCES    !Define acl for targeted hello sources.
permit 10.11.0.1                      !Accept targeted hello request from Router 1.
deny any                              !Deny requests from other sources.
```

## Additional References

The following sections provide references related to MPLS LDP.

## Related Documents

| Related Topic                                                                                                                              | Document Title                                                |
|--------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|
| Configures LDP on every interface associated with a specified IGP instance.                                                                | <i>MPLS LDP Autoconfiguration</i>                             |
| Assists a neighboring router that has MPLS LDP SSO/NSF Support and Graceful Restart to recover gracefully from an interruption in service. | <i>MPLS LDP Graceful Restart</i>                              |
| Ensures that LDP is fully established before the IGP path is used for switching.                                                           | <i>MPLS LDP-IGP Synchronization</i>                           |
| Allows ACLs to control the label bindings that an LSR accepts from its peer LSRs.                                                          | <i>MPLS LDP Inbound Label Binding Filtering</i>               |
| Provides faster LDP convergence when a link recovers following an outage.                                                                  | <i>MPLS LDP Session Protection</i>                            |
| Enables standard, SNMP-based network management of the label switching features in Cisco IOS.                                              | <i>MPLS Label Distribution Protocol MIB Version 8 Upgrade</i> |

## Standards

| Standard | Title |
|----------|-------|
| None     | —     |

## MIBs

| MIB                                                                                                                                                                                                        | MIBs Link                                                                                                                                                                                                              |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"><li>MPLS Label Distribution Protocol MIB (draft-ietf-mpls-ldp-mib-08.txt)</li><li>SNMP-VACM-MIB<br/>The View-based Access Control Model (ACM)<br/>MIB for SNMP</li></ul> | To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL:<br><a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a> |

## RFCs

| RFC      | Title                    |
|----------|--------------------------|
| RFC 3036 | <i>LDP Specification</i> |

## Technical Assistance

| Description                                                                                                                                                                                                                                                         | Link                                                                            |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| The Cisco Technical Support website contains thousands of pages of searchable technical content, including links to products, technologies, solutions, technical tips, and tools. Registered Cisco.com users can log in from this page to access even more content. | <a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a> |

## Command Reference

This section describes the following modified commands for Cisco IOS Releases 12.4(3) and 12.4(5):

- [mpls label protocol \(global configuration\)](#)
- [mpls ldp router-id](#)

For information about other MPLS LDP commands, see the following document:

[Cisco IOS Multiprotocol Label Switching Command Reference](#), Release 12.4T.

# mpls label protocol (global configuration)

To specify the label distribution protocol for a platform, use the **mpls label protocol** command in global configuration mode. To restore the default label distribution protocol (LDP), use the **no** form of this command.

**mpls label protocol { ldp | tdp }**

**no mpls label protocol**

Syntax Description

|            |                                                                                            |
|------------|--------------------------------------------------------------------------------------------|
| <b>ldp</b> | Specifies that LDP is the default label distribution protocol.                             |
| <b>tdp</b> | Specifies that Tag Distribution Protocol (TDP) is the default label distribution protocol. |

Defaults

LDP is the default label distribution protocol.

Command Modes

Global configuration

Command History

| Release    | Modification                                                   |
|------------|----------------------------------------------------------------|
| 12.0(10)ST | This command was introduced.                                   |
| 12.0(14)ST | This command was integrated into Cisco IOS Release 12.0(14)ST. |
| 12.1(2)T   | This command was integrated into Cisco IOS Release 12.1(2)T.   |
| 12.1(8a)E  | This command was integrated into Cisco IOS Release 12.1(8a)E.  |
| 12.2(2)T   | This command was integrated into Cisco IOS Release 12.2(2)T.   |
| 12.2(4)T   | This command was integrated into Cisco IOS Release 12.2(4)T.   |
| 12.2(8)T   | This command was integrated into Cisco IOS Release 12.2(8)T.   |
| 12.0(21)ST | This command was integrated into Cisco IOS Release 12.0(21)ST. |
| 12.0(22)S  | This command was integrated into Cisco IOS Release 12.0(22)S.  |
| 12.0(23)S  | This command was integrated into Cisco IOS Release 12.0(23)S.  |
| 12.2(13)T  | This command was integrated into Cisco IOS Release 12.2(13)T.  |
| 12.4(3)    | The command default changed from TDP to LDP.                   |

Usage Guidelines

If neither the global **mpls label protocol ldp** command nor the interface **mpls label protocol ldp** command is used, all label distribution sessions use LDP.



Note

Use caution when upgrading the image on a router that uses TDP. Ensure that the TDP sessions are established when the new image is loaded. You can accomplish this by issuing the global configuration command **mpls label protocol tdp**. Issue this command and save it to the startup configuration before loading the new image. Alternatively, you can enter the command and save the running configuration immediately after loading the new image.

---

**Examples**

The following command establishes LDP as the label distribution protocol for the platform:

```
Router(config)# mpls label protocol ldp
```

---

**Related Commands**

| Command                     | Description                                                                                       |
|-----------------------------|---------------------------------------------------------------------------------------------------|
| <b>show mpls interfaces</b> | Displays information about one or more or all interfaces that are configured for label switching. |

---

# mpls ldp router-id

To specify a preferred interface for determining the Label Distribution Protocol (LDP) router ID, use the **mpls ldp router-id** command in global configuration mode. To disable this feature, use the **no** form of this command.

```
mpls ldp router-id [vrf vrf-name] interface [force]

no mpls ldp router-id [vrf vrf-name] [interface [force]]
```

Syntax Description

|              |                                                                                                                                                                                                          |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| vrf vrf-name | (Optional) Selects the interface as the LDP router ID for the named Virtual Private Network (VPN) routing/forwarding table instance (VRF). The selected interface must be associated with the named VRF. |
| interface    | Causes the IP address of the specified interface to be used as the LDP router ID, provided that the interface is operational.                                                                            |
| force        | (Optional) Alters the behavior of the <b>mpls ldp router-id</b> command, as described in the “Usage Guidelines” section.                                                                                 |

Defaults

- If the **mpls ldp router-id** command is not executed, the router determines the LDP router ID as follows:
- a. The router examines the IP addresses of all operational interfaces.
  - b. If these IP addresses include loopback interface addresses, the router selects the largest loopback address as the LDP router ID.
  - c. Otherwise, the router selects the largest IP address pertaining to an operational interface as the LDP router ID.

Command Modes

Global configuration

Command History

| Release    | Modification                                                  |
|------------|---------------------------------------------------------------|
| 12.0(10)ST | This command was introduced.                                  |
| 12.0(14)ST | The <b>force</b> keyword was added.                           |
| 12.1(2)T   | This command was integrated into Cisco IOS Release 12.1(2)T.  |
| 12.1(8a)E  | This command was integrated into Cisco IOS Release 12.1(8a)E. |
| 12.2(2)T   | This command was integrated into Cisco IOS Release 12.2(2)T.  |
| 12.0(22)S  | This command was integrated into Cisco IOS Release 12.0(22)S. |
| 12.4(5)    | The <b>vrf vrf-name</b> keyword/argument pair was added.      |

Usage Guidelines

- The **mpls ldp router-id** command allows you to establish the IP address of an interface as the LDP router ID.
- The following steps describe the normal process for determining the LDP router ID:
1. The router considers all the IP addresses of all operational interfaces.

2. If these addresses include loopback interface addresses, the router selects the largest loopback address. Configuring a loopback address helps ensure a stable LDP ID for the router, because the state of loopback addresses does not change. However, configuring a loopback interface and IP address on each router is not required.

The loopback IP address does not become the router ID of the local LDP ID under the following circumstances:

- If the loopback interface has been explicitly shut down.
- If the **mpls ldp router-id** command specifies that a different interface should be used as the LDP router ID.

If you use a loopback interface, make sure that the IP address for the loopback interface is configured with a /32 network mask. In addition, make sure that the routing protocol in use is configured to advertise the corresponding /32 network.

3. Otherwise, the router selects the largest interface address.

The router might select a router ID that is not usable in certain situations. For example, the router might select an IP address that the routing protocol cannot advertise to a neighboring router.

The router implements the router ID the next time it is necessary to select an LDP router ID. The effect of the command is delayed until the next time it is necessary to select an LDP router ID, which is typically the next time the interface is shut down or the address is deconfigured.

If you use the **force** keyword with the **mpls ldp router-id** command, the router ID takes effect more quickly. However, implementing the router ID depends on the current state of the specified interface:

- If the interface is up (operational) and its IP address is not currently the LDP router ID, the LDP router ID is forcibly changed to the IP address of the interface. This forced change in the LDP router ID tears down any existing LDP sessions, releases label bindings learned via the LDP sessions, and interrupts MPLS forwarding activity associated with the bindings.
- If the interface is down, the LDP router ID is forcibly changed to the IP address of the interface when the interface transitions to up. This forced change in the LDP router ID tears down any existing LDP sessions, releases label bindings learned via the LDP sessions, and interrupts MPLS forwarding activity associated with the bindings.

The following behaviors apply to the default VRF as well as to VRFs that you explicitly configure with the **vrf vrf-name** keyword/argument pair:

- The interface you select as the router ID of the VRF must be associated with the VRF.
- If the interface is no longer associated with the VRF, the **mpls ldp router-id** command that uses the interface is removed.
- If the selected interface is deleted, the **mpls ldp router-id** command that uses the interface is removed.
- If you delete a VRF that you configured, the **mpls ldp router-id** command for the deleted VRF is removed. The default VRF cannot be deleted.

Examples

The following example shows that the POS2/0/0 interface has been specified as the preferred interface for the LDP router ID. The IP address of that interface is used as the LDP router ID.

```
Router(config)# mpls ldp router-id pos2/0/0
```

The following example shows that the Ethernet 1/0 interface, which is associated with the VRF vpn-1, is the preferred interface. The IP address of the interface is used as the LDP router ID.

```
Router(config)# mpls ldp router-id vrf vpn-1 eth1/0
```

Related Commands

| Command                 | Description                                       |
|-------------------------|---------------------------------------------------|
| show mpls ldp discovery | Displays the status of the LDP discovery process. |

CCVP, the Cisco logo, and Welcome to the Human Network are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn is a service mark of Cisco Systems, Inc.; and Access Registrar, Aironet, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, LightStream, Linksys, MeetingPlace, MGX, Networkers, Networking Academy, Network Registrar, PIX, ProConnect, ScriptShare, SMARTnet, StackWise, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0711R)

© 2005 Cisco Systems, Inc. All rights reserved.