



Introduction

This document describes the commands used to configure LAN switching and multilayer switching features in Cisco IOS software.

The commands for configuring LAN Emulation (LANE) features are presented in the *Cisco IOS Asynchronous Transfer Mode Command Reference*.



Note

Prior to Cisco IOS Release 12.4, the commands for configuring LANE, LAN switching, and multilayer switching features were presented in the *Cisco IOS IP Switching Command Reference*.

For Guidelines About Configuring this Cisco IOS Feature	Refer to the Following Cisco IOS Configuration Guide
LAN switching-related features	<i>Cisco IOS LAN Switching Configuration Guide</i>

