

secure-server

To enable the secure HTTP (HTTPS) server for a web user interface transport map, use the **secure-server** command in transport map configuration mode. To disable the HTTPS secure server for a web user interface transport map, use the **no** form of this command.

secure-server

no secure-server

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	No server is enabled in a web user interface transport map by default.
------------------------	--

Command Modes	Transport map configuration (config-tmap)
----------------------	---

Command History	Release	Modification
	Cisco IOS XE Release 2.1	This command was introduced on the Cisco ASR 1000 Series Routers.

Usage Guidelines	<p>This command is used to enable the secure HTTPS web server for web user interface traffic. The other choice is the server option, which configures HTTP as the web server. Both web servers can be configured at the same time.</p>
-------------------------	---

When this command is entered, the router decides which port to use for HTTPS traffic based on the **ip http secure-server** or **ip http secure-port** configuration. Therefore, **ip http secure-server**, which configures the router to use the default port of 443 for HTTPS traffic, or **ip http secure-port**, which specifies a user-defined port for HTTPS traffic, must be configured when the **secure-server** command is used.

Examples	In the following example, the web user interface using the default HTTPS port is enabled:
-----------------	---

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# ip http secure-server
Router(config)# transport-map type persistent webui https-webui
Router(config-tmap)# secure-server
Router(config-tmap)# exit
Router(config)# transport type persistent webui input https-webui
*Apr 22 02:38:43.597: %UICFGEXP-6-SERVER_NOTIFIED_START: R0/0: psd: Server wui has been notified to start
```

Related Commands

Command	Description
ip http secure-server	Enables the HTTPS server on a router using the default HTTPS port.
ip http secure-port	Enables the HTTPS server on a router using a user-specified port.
server (transport map)	Enables the HTTP server for a persistent web user interface transport map.
transport type persistent	Applies an already-configured persistent transport map to an interface.
transport-map type persistent	Creates and names a transport map and enters transport map configuration mode.

server (transport map)

To enable the HTTP server for a web user interface transport map, use the **server** command in transport map configuration mode. To disable the HTTP server for a web user interface transport map, use the **no** form of this command.

server

no server

Syntax Description This command has no arguments or keywords.

Command Default No server is enabled in a web user interface transport map by default.

Command Modes Transport map configuration (config-tmap)

Command History	Release	Modification
	Cisco IOS XE Release 2.1	This command was introduced on the Cisco ASR 1000 Series Routers.

Usage Guidelines This command is used to enable the HTTP web server for web user interface traffic. The other choice is the **secure-server** option, which configures HTTPS as the web server. Both web servers can be configured at the same time.

When this command is entered, the router decides which port to use for HTTP traffic based on the **ip http server** or **ip http port** configuration. Therefore, **ip http server**, which configures the router to use the default port of 80 for HTTP traffic, or **ip http port**, which specifies a user-defined port for HTTP traffic, must be configured when the **server** command is used.

Examples In the following example, the web user interface using the default HTTP port is enabled:

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# ip http server
Router(config)# transport-map type persistent webui http-webui
Router(config-tmap)# server
Router(config-tmap)# exit
Router(config)# transport type persistent webui input http-webui
*Apr 22 02:43:55.798: %UICFGEXP-6-SERVER_NOTIFIED_START: R0/0: psd: Server wui has been notified to start
```

Related Commands

Command	Description
ip http server	Enables the HTTP server on a router using the default HTTP port.
ip http port	Enables the HTTP server on a router using a user-specified port.
secure-server	Enables the secure HTTP (HTTPS) server for a persistent web user interface transport map.
transport type persistent	Applies an already-configured persistent transport map to an interface.
transport-map type persistent	Creates and names a transport map and enters transport map configuration mode.

service exec-callback

To enable call back to clients who request a callback from the EXEC level, use the **service exec-callback** command in global configuration mode.

service exec-callback

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	Callback is not enabled.
-----------------	--------------------------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	11.1	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines	This command enables the Cisco IOS software to return a call to a device that dials in, connects to the EXEC, and requests callback.
-------------------------	--

Examples	The following example enables EXEC level callback: service exec-callback
-----------------	---

Related Commands	Command	Description
	arap callback	Enables an ARA client to request a callback from an ARA client.
	debug callback	Displays callback events when the router is using a modem and a chat script to call back on a terminal line.
	debug confmodem	Displays information associated with the discovery and configuration of the modem attached to the router.
	ppp callback (PPP client)	Enables a dialer interface that is not a DTR interface to function either as a callback client that requests callback or as a callback server that accepts callback requests.
	script arap-callback	Specifies that a chat script start on a line when an ARA client requests a callback.
	username	Establishes a username-based authentication system, such as PPP CHAP and PAP.

service old-slip-prompts

To provide backward compatibility for client software scripts expecting Serial Line Internet Protocol (SLIP) and PPP dialogs to be formatted with Cisco IOS software Release 9.1 or earlier releases, use the **service old-slip-prompts** command in global configuration mode. To disable this function, use the **no** form of this command.

service old-slip-prompts

no service old-slip-prompts

Syntax Description This command has no arguments or keywords.

Defaults The prompts and information sent by SLIP and PPP are formatted with the current release of Cisco IOS software.

Command Modes Global configuration

Command History	Release	Modification
	11.1	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines This command provides backward compatibility for client software scripts expecting SLIP and PPP dialogs to be formatted with Cisco IOS software Release 9.1 or earlier releases.

Examples The following example shows the output of a SLIP command after the **service old-slip-prompts** command is enabled:

```
Router# configure terminal
Router(config)# service old-slip-prompts
Router(config)# exit
Router# slip
IP address or hostname: 10.2.2.2
Entering SLIP mode.
Your IP address is 10.2.2.2. MTU is 1500 bytes
```

service pt-vty-logging

To log the X.121 calling address, Call User Data (CUD), and IP address assigned to a vty asynchronous connection, use the **service pt-vty-logging** command in global configuration mode. To disable this function, use the **no** form of this command.

service pt-vty-logging

no service pt-vty-logging

Syntax Description This command has no arguments or keywords.

Defaults This feature is disabled.

Command Modes Global configuration

Command History	Release	Modification
	11.2	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines This command permits you to log the X.121 calling address, CUD, and IP address assigned to a vty asynchronous connection and direct this information to the console, an internal buffer, or a UNIX syslog server, depending on the logging configuration command you use. This authentication information can be used to associate an incoming packet assembler/disassembler (PAD) vty-asynchronous connection with an IP address.



Note By default, the Cisco IOS software displays all messages to the console terminal.

Examples The following example enables you to log the X.121 calling address, CUD, and IP address assigned to a vty asynchronous connection and save this information to a syslog server:

```
service pt-vty-logging
```

The following is sample output from the **service pt-vty-logging** command:

```
01:24:31: PAD18: call from 00011890 on LCI 10 PID 1 0 0 0 CUD "xyz"
```

[Table 12](#) describes the fields shown in the output.

Table 12 *service pt-vty-logging Field Descriptions*

Field	Description
01:24:31:	Time stamp.
PAD18:	Active vty line number using the PAD connection.
00011890	The source or calling address.
on LCI 10	Incoming call is initiated on Logical Channel 10.
PID 1 0 0 0	The PAD Protocol Identifier is "01000000."
CUD "xyz"	CUD "xyz." If no CUD is available, this field will appear as follows: CUD " "

Related Commands

Command	Description
logging	Logs messages to a syslog server host.
logging buffered	Logs messages to an internal buffer.

session-limit

To set the maximum number of terminal sessions per line, use the **session-limit** command in line configuration mode. To remove any specified session limit, use the **no** form of this command.

session-limit *session-number*

no session-limit

Syntax Description

<i>session-number</i>	Specifies the maximum number of sessions.
-----------------------	---

Defaults

The default and set session limits are displayed with the **start-character** EXEC command.

Command Modes

Line configuration

Command History

Release	Modification
10.0	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Examples

The following example limits the number of sessions to eight on a ten-line range:

```
line 2 12
 session-limit 8
```

Related Commands

Command	Description
line vty	Specifies a virtual terminal for remote console access.
start-character	Sets the flow control start character.

session-timeout

To set the interval for closing the connection when there is no input or output traffic, use the **session-timeout** command in line configuration mode. To remove the timeout definition, use the **no** form of this command.

session-timeout *minutes* [**output**]

no session-timeout

Syntax Description

<i>minutes</i>	Specifies the timeout interval in minutes.
output	(Optional) Specifies that when traffic is sent to an asynchronous line from the router (within the specified interval), the connection is retained.

Defaults

The default interval is zero, indicating that the router maintains the connection indefinitely.

Command Modes

Line configuration

Command History

Release	Modification
10.0	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

This command sets the interval that the Cisco IOS software waits for traffic before closing the connection to a remote computer and returning the terminal to an idle state.

If only the **session timeout** command is specified, the session timeout interval is based solely on detected input from the user.

If the **session timeout** command is specified with the **output** keyword, the interval is based on both input and output traffic. You can specify a session timeout on each port.

The **session-timeout** command behaves slightly differently on virtual (vty) terminals than on physical console, auxiliary (aux), and terminal (tty) lines. When a timeout occurs on a vty, the user session returns to the EXEC prompt. When a timeout occurs on physical lines, the user session is logged out and the line returned to the idle state.

You can use a combination of the **exec-timeout** and **session-timeout** line configuration commands, set to approximately the same values, to get the same behavior from virtual lines that the **session-timeout** command causes on physical lines.

Examples

The following example sets an interval of 20 minutes and specifies that the timeout is subject to traffic detected from the user (input only):

```
line 5
```

```
session-timeout 20
```

The following example sets an interval of 10 minutes, subject to traffic on the line in either direction:

```
line 5
 session-timeout 10 output
```

Related Commands

Command	Description
absolute-timeout	Sets the interval for closing the connection on a virtual terminal line.
exec-timeout	Sets the interval that the EXEC command interpreter waits until user input is detected.

set (ruleset)

To unconditionally set one or more connection parameters to a fixed value for a translation ruleset, use the **set** command in translate ruleset configuration mode. To remove the ruleset, use one of the **no** forms of this command.

set [*#line-number*] {**pad** | **telnet**} *variable-parameter* [{**pad** | **telnet**} *variable-parameter* [...]]

no set {**pad** | **telnet**} *variable-parameter* [{**pad** | **telnet**} *variable-parameter* [...]]

no set *#line-number* [...]

Syntax Description	<i>#line-number</i>	(Optional) The line in the ruleset template the command should occupy. The # character must be entered.
	{ pad telnet }	Specifies the incoming or outgoing protocol, which controls the parameters that are available in the next element of this command.
	<i>variable-parameter</i>	A parameter that varies depending upon the protocol selected, either pad or telnet , and its role, either incoming or outgoing. Protocol parameter values are available to modify the incoming or outgoing connection behavior during protocol translation session setup. Up to six parameters can be entered on one command line. Table 13 indicates the supported Telnet and PAD incoming and outgoing connection parameter keywords with an X.
	[...]	(Optional) Specifies that multiple entries can be made as follows: <ul style="list-style-type: none"> Up to six set specifications can be entered on one command line. Multiple line numbers can be specified using the second no form of this command.

Defaults No default behavior or values

Command Modes Translate ruleset configuration

Command History	Release	Modification
	12.3(8)T	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines Up to six **set** specifications can be entered on one command line. The ellipses in the format shown above means multiple set statements can be specified.

When you use the first **no** form of this command, specify the full set of parameters and expressions in the command to be removed. The second **no** form must specify the correct **set** command and line number within the ruleset template.

Once an incoming connection has been matched for processing, the ruleset generates the protocol translation parameters using a template that unconditionally sets a value defined by a set statement. It is also possible that the incoming connection could conditionally set a value based on a test of parameter values using regular expressions. This is a **test** and **set** operation. The ruleset template could then substitute one parameter into another from a regular expression pattern match. These command combinations provide the network administrator with much flexibility in determining the protocol parameter values to use when establishing a protocol translation session.

As an example of **set**, **test**, and **substitute** command usage, an incoming TCP connection to an outgoing PAD connection might unconditionally set the PAD's profile identifier as follows:

```
set pad profile Bldg-1-5ess
```

The incoming connection might conditionally set the profile identifier from a test of the destination information, as follows:

```
test telnet dest-addr \.11$ telnet dest-port ^10000$ set pad profile ess
```

Finally, the command might substitute a portion of the TCP destination port into the profile identifier, as follows:

```
substitute telnet dest-port ^1000(.)$ pad profile Bldg-1-5ess-\1
```

To combine the **test** and **set** commands, use the backslash character (\) to concatenate the command lines. The following statements test conditional parameters and then set appropriate parameters:

```
test telnet dest-addr ^172\18\0\.* telnet dest-port ^10.00 \  
set pad pvc 1 telnet binary T
```

The protocol parameters for the incoming connection attempt are available for match expressions in the test, set and substitute statements. The values of the incoming connection attempt cannot be modified, though. For example, an incoming PAD connection has source and destination addresses that can be tested and used to modify other parameters, but the incoming connection addresses themselves cannot be modified.

Configuration errors are not detected when translation ruleset commands are entered. They are tested when the connection is attempted and the **test (ruleset)** command is used. In the following example, the translation ruleset **set** command unconditionally sets the PAD's profile name to a profile that does not exist in the configuration:

```
set pad profile Bldg-1-5ess
```

This command would be accepted at the command-line interpreter, and validated only upon a connection attempt or with the **test translate EXEC** command. When the error is detected, the following messages display:

```
">%PT-3-PARAMRESULTERR: PT ruleset test protocol pad parameter profile parse error:  
Bldg-1-5ess.
```

```
-Process= "PAD InCall", ipl= 3, pid= 94
```

```
*PAD: ruleset translation not generated Cause: 9 Diag: 0
```

[Table 13](#) lists the PAD and Telnet parameters that can be set, as indicated by an X. PAD outgoing service routing information (interface, CMNS MAC address, X.25 over TCP or XOT parameters, for example) are available for both switched virtual circuit (SVC) and permanent virtual circuit (PVC) service, and will take precedence over the X.25 routing table. If no routing information is specified, the X.25 routing

table will be used. Entering an incomplete specification of routing information or the Connection-Mode Network Service (CMNS) MAC address, or omitting an interface specification for an Annex G data-link connection identifier (DLCI), will result in an error.

Table 13 **Set Connection Parameter Keywords**

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
authorize-method <i>ASCII-string</i>	Connection authorization method to use that must match one of a fixed set of values.	X	—	—	X
authorize-tag <i>ASCII-string</i>	Connection authorization identity to supply, entered as an ASCII string.	X	—	—	X
binary flag	Flag that specifies whether 8-bit binary data is required, entered as one of the following characters to specify binary mode: Y, y, 1–9, T, t .	—	X	—	X
cud <i>ASCII-string</i>	Call user data (CUD) that occurs after the protocol identification (PID). For X.29 service, this is the optional, user-specified text included in the command to place a call.	—	—	X	—
dest-addr <i>address</i>	Destination IP (Telnet) or X.121 (PAD) address.	—	X	X	—
dest-addr-ext <i>address</i>	Network service access point (NSAP) destination address extension.	—	—	X	—
dest-port <i>port</i>	Destination port entered as a decimal number from one to five digits long.	—	X	—	
dldi <i>number</i>	Frame Relay data-link connection identifier (DLCI) of an Annex G service entered as a number from one to seven digits in length, although a size of two to four digits is more likely, or the NULL string if not received on an Annex G service.	—	—	X	—
eor <i>specification</i>	A character set defining the End-of-Record (EOR) string for the protocol translation session, entered as an ASCII or hexadecimal specification from one to four bytes in length, aaa or 0x19, as examples.	—	X	—	X

Table 13 **Set Connection Parameter Keywords (continued)**

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
eor-insert <i>flag</i>	Flag specifying that the EOR character set should be inserted for PAD data being forwarded to a Telnet session, and is entered as a single character. Use one of the following characters to specify EOR insertion: Y, y, 1–9, T, t .	—	X	—	X
hostname <i>address</i>	Destination host name for Domain Name System (DNS) resolution entered as an ASCII string.	—	X	—	—
idle <i>seconds</i>	Number of seconds the PAD connection can be idle before being cleared.	X	—	X	—
interface <i>type number</i>	Interface to be used for the circuit, entered using standard Cisco IOS interface designations; Serial1/0:1, for example.	—	—	X	—
keepalive-period <i>seconds</i>	Indicates the number of seconds between TCP keepalives for the X.25 over TCP (XOT) connection. TCP keepalive information applies only when a ruleset is configured to match an XOT destination address. Example: match dest-addr ^5555.\$ xot-dest-addr 5.5.5.2	X	—	X	—
keepalive-tries <i>number</i>	Indicates the number of TCP keepalives to send before the XOT connection is declared dead. TCP keepalive information applies only when a ruleset is configured to match an XOT destination address. Example: match dest-addr ^5555.\$ xot-dest-addr 5.5.5.2	X	—	X	—
local <i>flag</i>	Flag specifying that Telnet control sequences should be forwarded, not processed, and is entered as a single character. Use one of the following characters to specify local mode: Y, y, 1–9, T, t .	—	X	—	X

Table 13 **Set Connection Parameter Keywords (continued)**

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
mac address	Connection-Mode Network Service (CMNS) service remote host MAC address entered as three hexadecimal numbers of four digits separated by a period, (0000.fc08.12ab, for example) or the NULL string if not received on a CMNS service.	—	—	X	—
no-reset	Suppress a PVC Reset packet at session startup.	X	—	X	—
packetsize size	X.25 maximum data packet sizes to request, entered as two numbers from the following choices: 16, 32, 64, 128, 256, 512, 1024, 2048, 4096.	—	—	X	—
pid byte-string	PID string specified in ASCII or hexadecimal. A hexadecimal PID must be prefixed by "0x." For example, 0x01000000 is the standard PAD PID. Although it is available for specifying a nonstandard Call PID, this parameter is not restricted to the common PID length and can be used to specify the entire user data field.	—	—	X	—
printer flag	Printer access mode. Flag specifying that the outgoing connection should be brought up before the incoming connection is confirmed. Use one of the following characters to specify printer mode: Y , y , 1–9 , T , t . An unsuccessful outgoing connection attempt results in the incoming connection to the ruleset being refused, rather than being accepted and then closed, which is the default behavior. Note that using this keyword will force the ruleset quiet keyword to be applied to the translation.	X	—	—	X
profile name	Named PAD profile to use.	X	—	X	—

Table 13 Set Connection Parameter Keywords (continued)

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
pvc <i>circuit-number</i>	Permanent virtual circuit (PVC) entered as a number from 1 to 4095, or the null string if not a PVC.	—	—	X	—
reverse	Request reverse charging.	—	—	X	—
reversed <i>flag</i>	Flag to indicate whether a reverse charged Call is permitted. This flag applies to a switched virtual circuit (SVC) and is entered as a single character, Y or N , for yes or no.	—	—	—	—
rotor	Modifies the behavior of the host-name keyword by allowing one of the IP addresses defined by the ip host configuration command to be chosen randomly. If one address fails, another will be tried until a connection is made or all address choices are exhausted.	—	X	—	—
source-addr <i>address</i>	Source X.121 address.	—	—	X	—
source-addr-ext <i>address</i>	NSAP source address extension.	—	—	X	—
source-ifc <i>type number</i>	Interface from which to take the source IP address, entered using standard Cisco IOS interface designations, Loopback0, for example.	—	X	X	—
stream <i>flag</i>	Flag that specifies whether Telnet negotiation should be sent or accepted, entered as one of the following characters to specify stream mode: Y , y , 1–9 , T , t .	—	X	—	X

Table 13 Set Connection Parameter Keywords (continued)

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
swap flag	X.29 role reversal. Flag that indicates the PAD connection should not initiate X.29 commands when first connected. Use one of the following characters to swap behavior: Y , y , 1–9 , T , t . This parameter enables incoming and outgoing PAD connections to be swapped so that a protocol translation is treated like a PAD when it accepts a call. By default, the protocol translation functions like a PAD for calls that it initiates, and like an X.25 host for calls it accepts.	X	—	X	—
use-map map	Use the map defined for PAD service.	—	—	X	—
window size size	X.25 window sizes to request, entered as two numbers in a range from 1 to 127.	—	—	X	—
xot-dest-addr address	Destination IP address of an X.25 over TCP (XOT) service entered in standard IP address dotted decimal notation (10.0.0.127, for example) or the NULL string if not received on an XOT service.	—	—	X	—
xot-source-addr address	Source IP address of an XOT service entered in standard IP address dotted decimal notation (10.0.0.127, for example) or the NULL string if not received on an XOT service.	—	—	—	—

Examples

The following example shows how to build a ruleset by writing a match statement, specifying protocol translation options, setting parameters for incoming Telnet connections, then testing and setting appropriate parameters for incoming PAD connections. Note use of the backslash character to combine the test and set statements.

```
translate ruleset customer-case-1 from telnet to pad
! Match an incoming Telnet attempt destined for IP addresses starting
! with 172.18., and a 5-digit port starting with 120 through 127
match dest-addr ^172\.18\..* dest-port ^12[0-7]..$
! Once the correct network is matched, specify that this ruleset is limited
! to ten concurrent users and requires a login exchange
options max-users 10 login
! Set Telnet options
set telnet printer Y telnet binary Y
```

```
! Set PAD options
set pad profile cust-profile-one
! Test conditional parameters and make appropriate settings
test telnet dest-addr ^172\.18\.0\..* telnet dest-port ^10.00 \
set pad pvc 1 telnet binary T
```

Related Commands

Command	Description
description (ruleset)	Adds a description about a translation ruleset.
match (ruleset)	Identifies a connection for processing by the translation ruleset.
options (ruleset)	Specifies protocol translation options in a translation ruleset.
show translate ruleset	Displays a summary of a specific or of all configured translation rulesets, behavioral parameters, and usage statistic.
skip (ruleset)	Identifies a connection for omission by the translation ruleset.
substitute (ruleset)	Matches an available protocol and substitutes another in a translation ruleset.
test (ruleset)	Tests parameter values in a translation ruleset using regular expressions.
test translate	Displays a trace of protocol translation behavior for a connection attempt.
translate ruleset	Defines a unique name for a translation ruleset, specifies translated protocols, and enters translate ruleset configuration mode.
x25 pvc translate ruleset	Configures PVCs that are valid for protocol translation ruleset handling.

show arap

To display information about a running AppleTalk Remote Access Protocol (ARAP) connection, use the **show arap** command in privileged EXEC mode.

show arap [*line-number* | **aux** [*line-number*] | **console** [*line-number*] | **vtty** [*line-number*]]

Syntax Description

<i>line-number</i>	(Optional) Number of the line on which an ARAP connection is established and active.
aux <i>line-number</i>	(Optional) Displays the ARAP auxiliary information for the specified line.
console <i>line-number</i>	(Optional) Displays the ARAP console information for the specified line.
vtty <i>line-number</i>	(Optional) Displays the ARAP virtual terminal line information.

Command Modes

Privileged EXEC (#)

Command History

Release	Modification
10.0	This command was introduced.
12.2(33)SRE	This command was introduced in a release earlier than Cisco IOS Release 12.2(33)SRE.
12.2(33)SXI	This command was introduced in a release earlier than Cisco IOS Release 12.2(33)SXI.
12.4(24)T	This command was introduced in a release earlier than Cisco IOS Release 12.4(24)T.
Cisco IOS XE 2.1	This command was integrated into Cisco IOS XE Release 2.1.

Usage Guidelines

Use the **show arap** command with no arguments to display a summary of the ARAP traffic since the router was last booted.

Examples

The following is sample output from the **show arap** command:

```
Router# show arap
```

```
Statistics are cumulative since last reboot
Total ARAP connections: 2
Total Appletalk packets output: 157824
Total Appletalk packets input: 12465
```

These fields refer to the sum of all the ARA connections since the device was last reloaded.

The following sample output displays information about ARA activity on a specific line (line 3):

```
Router# show arap 3
```

```
Active for 23 minutes
"Unlimited time left" or "22 minutes left"
"Doing smartbuffering" or "Smartbuffering disabled"
```

```

Appletalk packets output: 157824
Appletalk packets input: 12465
Appletalk packets overflowed: 1642
Appletalk packets dropped: 586
V42bis compression efficiency (incoming/outgoing): {percentage/percentage}
MNP4 packets received: 864
MNP4 packets sent: 1068
MNP4 garbled packets received: 4
MNP4 out of order packets received: 0
MNP4 packets resent: 0
MNP4 nobuffers: 0

```

Table 14 describes the significant fields shown in the display.

Table 14 *show arap Field Descriptions*

Field	Description
Active for <i>integer</i> minutes	Number of minutes since ARAP started on the line.
Unlimited time left or <i>integer</i> minutes left	Remaining time limit on the line, if applicable on the line.
Doing smartbuffering or Smartbuffering disabled	Obsolete. Always says “Doing smartbuffering.”
Appletalk packets output	Number of AppleTalk packets that have been received from the Apple Macintosh and out to the network during this connection.
Appletalk packets input	Number of AppleTalk packets that have been received from the network and sent to the Apple Macintosh during this connection.
Appletalk packets overflowed	Number of packets from the network that have been dropped because the link to the Apple Macintosh was congested.
Appletalk packets dropped	Number of packets from the network that have been dropped because it was unnecessary to pass them (frequently RTMP).
V42bis compression efficiency (incoming/outgoing)	Performance of the v42bis protocol underneath ARA, expressed as a percentage of incoming/percentage outgoing. If the efficiency is low, a network user is probably copying already compressed files across the link. Generally, low efficiency means slow performance.
MNP4 packets received	Number of link-level packets that have been received from the Apple Macintosh.
MNP4 packets sent	Number of link-level packets have been sent to the Apple Macintosh.
MNP4 garbled packets received	Number of garbled packets that have been received from the Apple Macintosh.
MNP4 out of order packets received	Number of out-of-order packets that have been received from the Apple Macintosh.

Table 14 *show arap Field Descriptions (continued)*

Field	Description
MNP4 packets resent	Number of times packets have been re-sent. ¹
MNP4 nobuffers	Number of times MNP4 has run out of buffers. This field should be zero.

1. Each of these fields indicates line noise. The higher the value, the higher the noise.

show entry

To display the list of queued host-initiated connections to a router, use the **show entry** command in EXEC mode.

show entry

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	11.1	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines You can also use this command to determine which local-area transport (LAT) hosts have queue entries for printers on routers.

Examples The following is sample output from the **show entry** command. The display shows that two LAT connections are waiting for access to port 5. The list is ordered so that the lower-numbered entry has been waiting longer, and will use the line next.

```
Router# show entry
```

```
1 waiting 0:02:22 for port 5 from LAT node BLUE
2 waiting 0:00:32 for port 5 from LAT node STELLA
```

[Table 15](#) describes the fields in the first line of output shown in the display.

Table 15 *show entry Field Descriptions*

Field	Description
1	Number assigned to the queued connection attempt.
waiting 0:02:22	Interval (hours:minutes:seconds) during which the connection attempt has been waiting.
for port 5	Port for which the connection attempt is waiting.
from LAT node BLUE	Name of the user (BLUE) attempting to make the connection.

show keymap

To test for the availability of a keymap after a connection on a router takes place, use the **show keymap** command in EXEC mode.

show keymap [*keymap-name* | **all**]

Syntax Description	<i>keymap-name</i>	(Optional) Name of the keymap.
	all	(Optional) Lists the names of all defined keymaps. The name of the default keymap is not listed.

Command Modes	EXEC
---------------	------

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

The Cisco IOS software searches for the specified keymap in its active configuration image and lists the complete entry if found. If the keymap is not found, an appropriate “not found” message appears.

If you do not use any arguments with the **show keymap** command, then the keymap currently used for the terminal is displayed.

Examples

The following is sample output from the **show keymap** command:

```
Router# show keymap

ciscosdefault { clear = '^z'; flinp = '^x'; enter = '^m';\
  delete = '^d' | '^?';\
  synch = '^r'; reshow = '^v'; eof = '^e'; tab = '^i';\
  btab = '^b'; nl = '^n'; left = '^h'; right = '^l';\
  up = '^k'; down = '^j'; einp = '^w'; reset = '^t';\
  xoff = '^s'; xon = '^q'; escape = '^c'; ferase = '^u';\
  insrt = '^E';\
  pa1 = '^p1'; pa2 = '^p2'; pa3 = '^p3';\
  pfk1 = '^E1'; pfk2 = '^E2'; pfk3 = '^E3'; pfk4 = '^E4';\
  pfk5 = '^E5'; pfk6 = '^E6'; pfk7 = '^E7'; pfk8 = '^E8';\
  pfk9 = '^E9'; pfk10 = '^E0'; pfk11 = '^E-'; pfk12 = '^E=';\
  pfk13 = '^E!'; pfk14 = '^E@'; pfk15 = '^E#'; pfk16 = '^E$';\
  pfk17 = '^E%'; pfk18 = '^E^'; pfk19 = '^E&'; pfk20 = '^E*';\
  pfk21 = '^E('; pfk22 = '^E)'; pfk23 = '^E_'; pfk24 = '^E+';\
}
```

Refer to the **keymap** command for more information about keyboard mappings and keymap entry structures.

Related Commands	Command	Description
	keymap	Defines specific characteristics of keyboard mappings.

show lat advertised

To display the local-area transport (LAT) services a router offers to other systems running LAT on the network, use the **show lat advertised** command in EXEC mode.

show lat advertised

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines Advertised services are created with the **lat service** commands. The display includes the service rating, rotary group if present, and whether the service is enabled for incoming connections.

Examples The following is sample output from the **show lat advertised** command:

```
Router# show lat advertised

service Name      Rating      Rotary  Flags
service1          4 (Dynamic)  None   Enabled
  Autocommand: telnet service1
Service2          0 (Dynamic)   12   Enabled
  Ident: service2 modem services
service3          4 (Dynamic)  None   Enabled
  Ident: service3...
```

The display shows output from a router named router1 that has three services defined: service1, service2, and service3.

[Table 16](#) describes the fields shown in the display.

Table 16 *show lat advertised Field Descriptions*

Field	Description
Service Name	Lists the LAT service name.
Rating	Lists the static service rating set, if any.
Rotary	Lists the associated rotary service.
Flags	Lists whether a service is enabled.

Table 16 *show lat advertised Field Descriptions*

Field	Description
Autocommand	Defines the autocommand associated with the service.
Ident	Lists the advertised identification for the service.

show lat groups

To display the groups that were defined in the Cisco IOS software with the **lat group-list** command, use the **show lat groups** command in EXEC mode.

show lat groups

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Examples The following is sample output from the **show lat groups** command:

Router# **show lat groups**

```

Group Name      Len   Groups
cafeteria       3     13  15  23
engineering     7     55
manufacturing   10    70  71  72

```

[Table 17](#) describes the fields shown in the display.

Table 17 *show lat groups Field Descriptions*

Field	Description
Group Name	Assigned group name.
Len	Size of internal data structure used to contain the group code map.
Groups	Group codes associated with the learned group.

Related Commands	Command	Description
	lat group-list	Allows a name to be assigned to the group list, which is any combination of group names, numbers, or ranges.

show lat nodes

To display information about all known local-area transport (LAT) nodes, use the **show lat nodes** command in EXEC mode.

show lat nodes

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Modes	EXEC
----------------------	------

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Examples	The following is sample output from the show lat nodes command:
-----------------	--

```
Router# show lat nodes
```

```
Node "service1", usage -1, Interface Ethernet0, Address 0000.0c01.0509
  Timer 89, sequence 188, changes 131, flags 0x0, protocol 5.1
  Facility 0, Product code 0, Product version 0
  Recv 0/0/0, Xmit 0/0/0, 0 Dups, 0 ReXmit
  Bad messages: 0, Bad slots: 0, Solicits accepted: 0
  Solicits rejected: 0, Multiple nodes: 0
  Groups: 0
  Service classes: 1
Node "service2", usage -1, Local
  Timer 99, sequence 4, changes 151, flags 0x0, protocol 5.2
  Facility 0, Product code 0, Product version 0
  Recv 0/0/0, Xmit 0/0/0, 0 Dups, 0 ReXmit
  Bad messages: 0, Bad slots: 0, Solicits accepted: 0
  Solicits rejected: 0, Multiple nodes: 0
  Groups: 0
  Service classes: 1
Node "service3", usage -1, Interface Ethernet0, Address 0000.0cff.c9ed
  Timer 99, sequence 9, changes 159, flags 0x0, protocol 5.1
  Facility 0, Product code 0, Product version 0
  Recv 0/0/0, Xmit 0/0/0, 0 Dups, 0 ReXmit
  Bad messages: 0, Bad slots: 0, Solicits accepted: 0
  Solicits rejected: 0, Multiple nodes: 0
  Groups: 0
  Service classes: 1
Node "service4", usage -1, Interface Ethernet0, Address 0000.0c02.c7c1
  Timer -10351, sequence 1, changes 131, flags 0x40, protocol 5.2
  Facility 0, Product code 0, Product version 0
  Recv 0/0/0, Xmit 0/0/0, 0 Dups, 0 ReXmit
  Bad messages: 0, Bad slots: 0, Solicits accepted: 0
  Solicits rejected: 0, Multiple nodes: 0
  Groups: 0
```

```
Service classes: 1
```

Table 18 describes the significant fields shown in the display.

Table 18 *show lat nodes Field Descriptions*

Field	Description
Node	The node name as reported by the host computer.
usage	The number of virtual circuits currently active to this node.
Interface	Node interface type and number.
Address	The MAC address of the Ethernet interface for the node.
Timer	The number of seconds remaining until the service advertisement message for this node will time out; this value is set to three times the nodes multicast timer value whenever a new service advertisement message is received.
sequence	The sequence number received in the last service advertisement message received. Nodes increment their sequence number when the contents of the service advertisement change.
changes	The internal representation of what changed in the multicast message the last time the sequence number changed.
flags	The internal representation of various state information about the node.
protocol	The LAT protocol version used by the node.
Facility	The remote facility number.
Product code	The remote product code.
Product version	The remote product version.
Recv and Xmit	The number of messages, slots, and bytes received or sent to the node. The number of messages is the number of LAT virtual circuit messages. Each virtual circuit message contains some number of slots, which contain actual terminal data or control information. Bytes is the number of data bytes (input or output characters) exchanged.
Dups	The number of duplicate virtual circuit messages received.
ReXmit	The number of virtual circuit messages resent.
Bad messages	The number of bad messages received.
Bad slots	The number of bad slots received.
Solicits accepted	The number of solicit-information requests accepted.
Solicits rejected	The number of solicit-information requests rejected.
Multiple nodes	The total of multiple nodes seen.
Groups	The list of group codes advertised by the service-advertisement message of the node.
Service classes	The number of service classes.

show lat services

To display information about learned local-area transport (LAT) services in the Cisco IOS software, use the **show lat services** command in EXEC mode.

show lat services [*service-name*]

Syntax Description

service-name (Optional) Name of a specific LAT service.

Command Modes

EXEC

Command History

Release	Modification
11.2	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Examples

The following is sample output from the **show lat services** command:

Router# **show lat services**

```
Service Name      Rating  Interface  Node (Address)
ABCDEFGHIJ         5      Ethernet0  SERVICE1 (0000.0c00.391f)
GLAD              84      Ethernet0  SERVICE2 (aa00.0400.9205)
  Ident: Welcome to Gateway
WHEEL            83      Ethernet0  SERVICE3 (aa00.0400.9005)
ZZYW             5      Ethernet0  SERVICE4 (0000.0c00.391f)
```

[Table 19](#) describes the significant fields shown in the display.

Table 19 *show lat services Field Descriptions*

Field	Description
Service Name	LAT service name.
Rating	Rating of the service. If a single service is provided by more than one host, the Cisco IOS software connects to the one with the highest rating.
Interface	Interface type.
Node	Connection address.
(Address)	Advertised identification for the service.

Related Commands

Command	Description
show lat sessions	Displays active LAT sessions.
show resource-pool call	Displays specific LAT learned services.

show lat sessions

To display active local-area transport (LAT) sessions, use the **show lat sessions** command in EXEC mode.

show lat sessions [*line-number*]

Syntax Description	<i>line-number</i> (Optional) Displays an active LAT session on a specific line.
--------------------	--

Command Modes	EXEC
---------------	------

Command History	Release	Modification
	11.2	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Examples The following is sample output from the **show lat sessions** command. In this example, information about all active LAT sessions is displayed. The output is divided into three sections for each session (in this case two sessions): TTY data, session data, and remote node data.

```
Router> show lat sessions

tty0, connection 1 to service TERM1
TTY data:
  Name "0", Local usage 1/0, Remote usage disabled
  Flags: Local Connects, Enabled
  Type flags: none
  Config flags: -FlowOut, -FlowIn, Parameter Info
  Flow control ^S/^Q in ^S/^Q out, Mode Normal, Parity None, databits 8
  Groups: 0
Session data:
  Name TERM1, Remote Id 1, Local Id 1
  Remote credits 2, Local credits 0, Advertised Credits 2
  Flags: none
  Max Data Slot 255, Max Attn Slot 255, Stop Reason 0
Remote Node data:
Node "TERM1", Address 0000.0C00.291F, usage 1
  Timer 59, sequence 5, changes 159, flags 0x0, protocol 5.1
  Recv 56/22/83, Xmit 41/23/14, 0 Dups, 0 ReXmit
  Groups: 0
tty10, connection 1 to service ENG2
TTY data:
  Name "10", Local usage 1/0, Remote usage disabled
  Flags: Local Connects, Enabled
  Type flags: none
  Config flags: -FlowOut, +FlowIn, Set Parameters, 0x40000000
  Flow control ^S/^Q in ^S/^Q out, Mode Normal, Parity None, databits 8
  Groups: 0
Session data:
  Name ENG2, Remote Id 1, Local Id 1
```



```

Remote credits 1, Local credits 0, Advertised Credits 2
Flags: none
Max Data Slot 255, Max Attn Slot 255, Stop Reason 0
Remote Node data:
Node "ENG2", Address AA00.0400.34DC, usage 1
Timer 179, sequence 60, changes 255, flags 0x0, protocol 5.1
Recv 58/29/186, Xmit 50/36/21, 0 Dups, 0 ReXmit
Groups: 0

```

The following sample output displays information about active LAT sessions on one line (line 10). The output is divided into three sections: TTY data, session data, and remote node data.

```
Router> show lat sessions 10
```

```

tty10, connection 1 to service ENG2
TTY data:
Name "10", Local usage 1/0, Remote usage disabled
Flags: Local Connects, Enabled
Type flags: none
Config flags: -FlowOut, +FlowIn, Set Parameters, 0x40000000
Flow control ^S/^Q in ^S/^Q out, Mode Normal, Parity None, databits 8
Groups: 0
Session data:
Name ENG2, Remote Id 1, Local Id 1
Remote credits 1, Local credits 0, Advertised Credits 2
Flags: none
Max Data Slot 255, Max Attn Slot 255, Stop Reason 0
Remote Node data:
Node "ENG2", Address AA00.0400.34DC, usage 1
Timer 189, sequence 61, changes 247, flags 0x0, protocol 5.1
Recv 60/29/186, Xmit 52/36/21, 0 Dups, 0 ReXmit
Groups: 0

```

Table 20 describes the fields shown in the displays.

Table 20 *show lat sessions Field Descriptions*

Field	Description
TTY data	Summary of the LAT-oriented terminal-line-specific data.
Name	Name used for this port as a port identification string. The name is reported to remote systems, which can display it in some operating-system dependent manner. This value is also used for targets of host-initiated connections. Currently, this value is hard-wired to be the line number of the associated terminal line.
Local/Remote usage	Current status of the terminal. The number is reported as current/maximum, where current is the current number of sessions of a given type, and maximum is the maximum number of sessions allowed (or zero if there is no maximum). If a terminal is being used for outgoing sessions, the local usage is equal to the number of current LAT sessions. If the terminal is being used for incoming sessions, local usage is disabled, and the remote count and maximum is one.
Flags	Current state of the line, and whether there are any queued host-initiated connections.
Type flags	Report flags not used in the current software release.
Config flags	Current port state as reflected by the most recent configuration message exchange.

Table 20 *show lat sessions Field Descriptions (continued)*

Field	Description
Flow control	Lists set flow control characters.
Groups	Group code list currently in use for the line.
Session data	Reports various parameters about the connection.
Name	For the outbound connection, the name of the remote service to which it is connected. For inbound connections, this field is currently unused.
Remote/Local Id	Slot IDs being used to uniquely identify the session multiplexed over the underlying LAT virtual circuit.
Remote/Local/ Advertised Credits	Number of flow control credits that the Cisco IOS software will be sending to the host as soon as possible. The advertised credits are the number of credits that have already been sent.
Flags	Transient conditions in the LAT-state machine dealing with the current connection status.
Max Data Slot	Maximum number of characters that can be sent in a single data slot.
Max Attn Slot	Maximum amount of data that can be sent in an attention message. Current LAT implementations only send 1-byte attention messages (attention messages are used to flush buffered output). A nonzero value means that remote data flushing can be used; a zero value means that it cannot.
Stop Reason	Reason the session was stopped, if it was stopped but not deleted. This value is usually zero, indicating that the session has not yet been stopped. If a session persists for a long time with a nonzero stop reason, there is probably a problem in the local LAT software.
Remote Node data	Reports information about the remote node. The data includes the same fields as those from the show lat nodes output.
Node	Node name as reported by the host computer.
Address	MAC address of the Ethernet interface for the node.
usage	Number of virtual circuits currently active to the node.
Timer	Number of seconds remaining until the service advertisement message for the node will time out; this value is set to three times greater than the node multicast timer value whenever a new service-advertisement message is received.
sequence	Sequence number received in the last service-advertisement message. Nodes increment their sequence number when the contents of the service-advertisement change.
changes	Internal representation of what changed in the multicast message the last time the sequence number changed.
flags	Internal representation of various state information about the node.
protocol	LAT protocol version used by the node.
Recv and Xmit	Number of messages, slots, and bytes received or sent to the node. The number of messages is the number of LAT virtual circuit messages. Each virtual circuit message contains some number of slots, which contain actual terminal data or control information.
Dups	Number of duplicate virtual circuit messages received.

Table 20 *show lat sessions Field Descriptions (continued)*

Field	Description
ReXmit	Number of virtual circuit messages resent.
Groups	Group codes advertised by the service-advertisement message of the node.

Related Commands

Command	Description
show lat services	Displays information about learned LAT services in the Cisco IOS software.
show resource-pool call	Displays specific LAT learned services.

show lat traffic

To display information about traffic and resource utilization statistics on all active lines, use the **show lat traffic** command in EXEC mode.

show lat traffic

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Examples The following is sample output from the **show lat traffic** command:

Router# **show lat traffic**

```
Local host statistics:
  0/100 circuits, 0/500 sessions, 1/500 services
  100 sessions/circuit, circuit timer 80, keep-alive timer 5
Recv:  335535 messages (2478 duplicates),  161722 slots,  1950146 bytes
      0 bad circuit messages,  3458 service messages (52 used)
Xmit:  182376 messages (2761 retransmit),  146490 slots,  36085 bytes
      1 circuit timeouts
Total:  23 circuits created,  38 sessions
```

[Table 21](#) describes the significant fields shown in the display.

Table 21 *show lat traffic Field Descriptions*

Field	Description
Local host statistics	Information about the router.
circuits	Current number and maximum support number of virtual circuits.
sessions	Current and maximum number of sessions.
services	Current number of known remote services, and the maximum supported.
sessions/circuit	Number of sessions per virtual circuit supported by the software.
circuit timer	Value of the virtual circuit timer parameter defined by the lat vc-timer global configuration command.
keep-alive timer	Value defined by the lat ka-timer global configuration command.
Recv	Statistics about local node receive totals.
messages	Total count of virtual circuit messages received.

Table 21 *show lat traffic Field Descriptions (continued)*

Field	Description
duplicates	Number of duplicate virtual circuit messages received.
slots	Number of slots received.
bytes	Number of data bytes received.
bad circuit messages	Count of invalid messages received.
service messages	Number of service advertisement multicast messages received.
used	Number of multicast messages that caused the local node information to be updated.
Xmit	Various transmission totals.
messages	Total number of virtual circuit messages sent.
retransmit	Number of virtual circuit messages resent due to the lack of an acknowledgment.
slots	Number of data and control slots sent.
bytes	Count of user data bytes sent.
circuit timeouts	Count of times that a virtual circuit timed out because the remote node stopped responding (due to a node failure or communications failure).
Total	Count of virtual circuits and sessions that have existed since the router booted or rebooted.

show line

To display parameters of a terminal line, use the **show line** command in user EXEC or privileged EXEC mode.

```
show line [line-number [upper-line-number] | [{aux | console | vty} line-number
[upper-line-number]] [summary]
```

Syntax Description

<i>line-number</i>	(Optional) Absolute line number of the line for which you want to list parameters.
<i>upper-line-number</i>	(Optional) Specifies the upper limit of a range.
aux	(Optional) Auxiliary line.
console	(Optional) Primary terminal line.
vty	(Optional) Virtual terminal line.
summary	(Optional) Line status summary.

Command Modes

User EXEC
Privileged EXEC

Command History

Release	Modification
10.0	This command was introduced.
11.3(1)T	The summary keyword was added.
12.0	The vty keyword was added.
12.1	Output from this command was modified to show the transport method configured.
12.2(13)T	This command was modified to indicate when support for closed user group (CUG) security is enabled on the line.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

If Closed User Group (CUG) security is configured on a line, the **show line** command used with the *line-number* argument causes “CUG Security Enabled” to be displayed in the Capabilities field of the output.

The **show line** command used with the **summary** keyword provides line status summary details such as whether there were modem calls or character mode calls.

Examples

The following sample output from the **show line vty4** command shows that virtual terminal line 4 has a send and receive rate of 9600 bits per second (bps). Also shown are the terminal screen width and length, modem state, preferred transport method, and other characteristics.

Router# **show line vty4**

```

      Tty Typ      Tx/Rx      A Modem  Roty AccO AccI      Uses      Noise      Overruns
      22 VTY              -    -      -    -    -        0         0         0/0 -

Line 22, Location: "", Type: ""
Length: 24 lines, Width: 80 columns
Baud rate (TX/RX) is 9600/9600
Status: No Exit Banner
Capabilities: CUG Security Enabled
Modem state: Idle
Special Chars: Escape  Hold  Stop  Start  Disconnect  Activation
                ^x     none  -      -      none
Timeouts:      Idle EXEC  Idle Session  Modem Answer  Session
Dispatch
                never      never      none      not set
                Idle Session Disconnect Warning
                never
                Login-sequence User Response
                00:00:30
                Autoselect Initial Wait
                not set

Modem type is unknown.
Session limit is not set.
Time since activation: never
Editing is enabled.
History is enabled, history size is 10.
DNS resolution in show commands is enabled
Full user help is disabled
Allowed input transports are none.
Allowed output transports are pad v120 telnet rlogin udptn.
Preferred transport is telnet.
No output characters are padded
No special data dispatching characters

```

Table 22 describes the significant fields shown in the report displayed by the **show line** command (and may not match the previous example).

Table 22 *show line Field Descriptions*

Field	Description
Tty	Line number.
Typ	Type of line. In this case, a virtual terminal line, which is active, in asynchronous mode denoted by the preceding "A." All possible values follow: <ul style="list-style-type: none"> • VTY—virtual terminal line • CTY—console • AUX—auxiliary port • TTY—asynchronous terminal port • lpt—parallel printer
Tx/Rx	Transmit rate/receive rate of the line.
A	Indicates whether autobaud has been configured for the line. A value of F indicates that autobaud has been configured; a hyphen indicates that it has not been configured.

Table 22 *show line Field Descriptions (continued)*

Field	Description
Modem	Types of modem signals that have been configured for the line. Possible values follow: <ul style="list-style-type: none"> • callin • callout • cts-req • DTR-Act • inout • RIisCD
Roty	Rotary group configured for the line, if set.
AccO, AccI	Output or input access list number configured for the line.
Uses	Number of connections established to or from the line since the system was restarted.
Noise	Number of times noise has been detected on the line since the system restarted.
Overruns	Hardware Universal Asynchronous Receiver/Transmitter (UART) overruns or software buffer overflows, both defined as the number of overruns or overflows that have occurred on the specified line since the system was restarted. Hardware overruns are buffer overruns; the UART chip has received bits from the software faster than it can process them. A software overflow occurs when the software has received bits from the hardware faster than it can process them.
A (or I or *)	An A at the upper left of the display indicates that the user is running an asynchronous interface; an I indicates that the line has an asynchronous interface available; an asterisk (*) indicates that the line is otherwise active (in character mode).
Line	Definition of the specified protocol and address of the line.
Location	Location of the current line.
Type	Type of line, as specified by the line global configuration command.
Length	Length of the terminal or screen display, in rows.
Width	Width of the terminal or screen display, in columns.
Baud rate (TX/RX)	Transmit rate/receive rate of the line, in bps.
Status	State of the line: ready or not, connected or disconnected, active or inactive, exit banner or no exit banner, asynchronous interface active or inactive.
Capabilities	Current terminal capabilities.
Modem state	Modem control state. Although the sample output shows the modem state Idle, this field should always say READY.

Table 22 *show line Field Descriptions (continued)*

Field	Description
Special Chars	<p>Current settings of special characters that were input by the user (or taken by default) from the following global configuration commands:</p> <ul style="list-style-type: none"> • escape-character • hold-character • stop-character • start-character • disconnect-character • activation-character
Timeouts	<p>Current settings that were input by the user (or taken by default) from the following global configuration commands:</p> <ul style="list-style-type: none"> • exec-timeout • session-timeout • dispatch-timeout • modem answer-timeout • session-disconnect-warning • timeout login response • autoselect timeout
Session limit	Maximum number of sessions.
Time since activation	Last time start_process was run.
Editing	Whether command-line editing is enabled.
History	Current history list size, set by the user (or taken by default) from the history configuration command.
DNS resolution in show commands is	Whether Open Shortest Path First (OSPF) is configured to look up Domain Name System (DNS) names for use in show EXEC command displays.
Full user help	Whether full user help has been set by the user with the terminal full-help EXEC command or by the administrator with the full-help line configuration command.
Allowed input transports are	Current set transport method, set by the user (or taken by default) from the transport input line configuration command.
Allowed output transports are	Current set transport method, set by the user (or taken by default) from the transport output line configuration command.
Preferred transport is	Current set transport method, set by the user (or taken by default) from the transport preferred line configuration command.
...characters are padded	Current set padding, set by the user (or taken by default) from the padding line configuration command.
...data dispatching characters	Current dispatch character set by the user (or taken by default) from the dispatch-character line configuration command.

Table 22 *show line Field Descriptions (continued)*

Field	Description
Modem type is unknown	No modemcap has been applied to this line, that means either modem autoconfigure has not been configured for the line, or modem autoconfigure discovery is configured. Autoconfigure is unable to discover the modem type.
Dispatch	Displays the current configured dispatch-timeout value.

The following sample output from the **show line summary** command shows line summary status for lines 1/3/36 through 1/3/102. Each row of output represents 36 lines, and the line status characters in groups of four for readability. For example, the first row represents information on rows 1/3/36 through 1/3/71, and the first line status character “U” corresponds to line 1/3/36.

Router# **show line summary**

```
1/3/36: U??? ---- ---- ---- --u- ---- ????. . . .
1/3/72: ---- ????. ---- ????. ????. MMMM MMMM MMMM MMMM
```

```
2  character mode users.          (U)
19 lines never used.             (?)
31 lines used, but currently idle. (-)
4  lines do not exist.           (.)
16 lines in use by modem management (M)
```

```
18 total lines in use, 1 not authenticated (lowercase)
```

[Table 23](#) describes the possible line status characters that can be shown in output from the **show line summary** command.

Table 23 *Line Status Character Descriptions*

Line Status Character	Description
?	Line has never been used.
-	Lines has been used but is currently idle.
.	Line does not exist.
A	Line in use by a packet mode user such as asynchronous PPP, Serial Line Internet Protocol (SLIP), Appletalk Remote Access Protocol (ARAP), or Serial Tunneling (STUN).
D	Line in use by a digit mode user such as V.110 or V.120.
F	Line in use by a TCP fast-stream user.
M	Line in use by modem management.
U	Line in use by character mode user, such as an EXEC user making an outbound packet connection using Telnet, rlogin, local-area transport (LAT), packet assembler/disassembler (PAD), or normal (nonfast-stream) TCP clear.
V	Line in use by a voice mode user.

Related Commands

Command	Description
modem enable	Enables backup dial capability through the console port (changes the console port into an auxiliary port).

show line autodetect

To detect the type of device connected on the console line, use the **show line autodetect** command in user EXEC or privileged EXEC mode.

show line autodetect

Syntax Description This command has no arguments or keywords.

Command Modes User EXEC
Privileged EXEC

Command History	Release	Modification
	12.2(13)ZG	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines Use this command to detect the type of device connected on the console line.

Examples The following example shows the command used to configure console autodetect mode:

```
Router(config-line)# modem enable autodetect
```

Use the **show line autodetect** command to determine when a modem or a console has been detected:

```
Router# show line autodetect  
Detection State: Feature not enabled
```

```
Router# show line autodetect  
Detection State: Nothing Attached
```

```
Router# show line autodetect  
Detection State: Init State
```

```
Router# show line autodetect  
Detection State: Console Attached
```

```
Router# show line autodetect  
Detection State: Modem Attached
```

[Table 24](#) describes the significant fields shown in the display.

Table 24 *show line autodetect Field Descriptions*

Field	Description
Detection State: Feature not enabled	No device connection is detected.
Detection State: Nothing Attached	No cable is attached to the EIA/TIA-232 port on the router.
Detection State: Init State	Autodetection has been enabled, but no changes have been detected.
Detection State: Console Attached	A DTE console or terminal device is attached.
Detection State: Modem Attached	A DCE asynchronous modem device is attached.

Related Commands

Command	Description
modem enable	Enables backup dial capability through the console port (changes the console port into an auxiliary port).

show node

To display information about local-area transport (LAT) nodes, use the **show node** command in EXEC mode.

show node [**all** | *node-name*] [**counters** | **status** | **summary**]

Syntax Description

all	(Optional) Specifies all nodes.
<i>node-name</i>	(Optional) Indicates the name of the node for which status is required.
counters	(Optional) Specifies the various node counters.
status	(Optional) Specifies detailed node status. This is the default if a node name is specified.
summary	(Optional) Specifies a status summary for the node. This is the default if no node name is specified.

Command Modes

EXEC

Command History

Release	Modification
10.0	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

Entering the **show node** command with no arguments is the same as entering the **show node all summary** command and shows a one-line summary of all known nodes.

You can enter the **show node** command with either a specific node name or the **all** keyword, but not both.

The **show node** command displays three different sets of information about a node: the node counters, the node status, or a one-line summary of the node status.

You can enter the **show node** command with only one of the **counters**, **status**, or **summary** keywords. If you enter **show node** and two of these keywords without specifying a node name, the first keyword is treated as a node name, causing an error. If you enter the **show node node-name** command and two of these keywords, the second keyword will be treated as ambiguous.

The **show node** command with a *node-name* argument but no **counters**, **status**, or **summary** keyword defaults to **show node node-name status**.

Examples

The following is sample output from the **show node** command with no further keywords (the same as the **show node all summary** command):

```
Router> show node
```

Node Name	Status	Identification
CHAOS	Reachable	
MUDDY-RIVER	Reachable	

```
TARMAC          Reachable
WHEEL           Reachable    Welcome to VAX/VMS V5.4-2
```

Table 25 describes the significant fields shown in the display.

Table 25 *show node Field Descriptions*

Field	Description
Node Name	Lists the names of the nodes.
Status	Indicates whether the node is reachable or not.
Identification	Identification string for the node.

The following is sample output from the **show node** output that defaults to **show node chaos status**. It results in a display of the detailed status of node chaos.

```
Router> show node chaos

Node: CHAOS      Address: 00-00-0C-01-05-09
LAT Protocol: V5.1  Data Link Frame Size: 1500
Identification:
Node Groups: 0
Service Name  Status    Rating  Identification
CHAOS        Available  80
```

Table 26 describes the significant fields shown in the display.

Table 26 *show node status Field Descriptions*

Field	Description
Node	Lists the node name as reported by the host computer.
Address	Identifies the MAC address of the node Ethernet interface.
LAT protocol	Lists the version of the LAT protocol used by the node.
Data Link Frame Size	Lists the size of the largest packet that can be sent to the LAT host.
Identification	Lists the identification string for the node.
Node Groups	Lists the group code list that is advertised by the remote node, which comes from the service advertisement of the remote node.
Service Name	Lists the LAT service name.
Status	Indicates whether the node is currently available on the network.
Rating	Indicates the rating of the service: an integer from 0 to 255, with the highest number being the preferred service. Used for load balancing.

The following sample output displays the counter information for a specific node:

```
Router> show node tarmac counters

Node: tarmac
Seconds Since Zeroed: 100 Multiple Node Addresses: 0
Messages Received: 0 Duplicates Received: 0
Messages Transmitted: 0 Messages Re-transmitted: 0
Slots Received: 0 Illegal Messages Received: 0
Slots Transmitted: 0 Illegal Slots Received: 0
Bytes Received: 0 Solicitations Accepted: 0
```

Bytes Transmitted: 0 Solicitations Rejected: 0

In the following sample command and output displays, the **status** keyword is treated as the node name:

```
Router> show node status counters
```

```
Local -710- Node STATUS not known
```

In the following example, the second keyword **counters** is treated as ambiguous:

```
Router> show node lager status counters
```

```
Local -702- Keyword "COUNTERS" not known or ambiguous
```

show platform software configuration access policy

To view the access policies and banners for users entering the router using Telnet, Secure Shell (SSH), or the console port, enter the **show platform software configuration access policy** command in privileged EXEC and diagnostic mode.

show platform software configuration access policy

Syntax Description This command has no arguments or keywords.

Command Default No default behavior or values.

Command Modes Privileged EXEC (#)
Diagnostic (diag)

Command History	Release	Modification
	Cisco IOS XE Release 2.1	This command was introduced on the Cisco ASR 1000 Series Routers.

Usage Guidelines Access policies for the console port, Telnet, and SSH are set through the use of transport maps. If no transport maps are applied for a particular access method, the router uses the default settings.

Transport maps are configured by entering the **transport-map type** command, then setting the configuration of the transport map in transport map configuration mode. Transport maps are then enabled using the **transport type** global configuration command.

Examples In the following example, the connection policy and banners are set for a persistent Telnet transport map, and the transport map is enabled.

The **show platform software configuration access policy** output is given both before the new transport map is enabled and after the transport map is enabled so the changes to the Telnet configuration are illustrated in the output.

```
Router# show platform software configuration access policy
The current access-policies
```

```
Method      : telnet
Rule        : wait
Shell banner:
Wait banner :
```

```
Method      : ssh
Rule        : wait
Shell banner:
Wait banner :
```

```
Method      : console
```



```
Rule          : wait with interrupt
Shell banner:
Wait banner :

Router# configure terminal
Enter configuration commands, one per line.  End with CNTL/Z.

Router(config)# transport-map type persistent telnet telnethandler
Router(config-tmap)# connection wait allow interruptable
Router(config-tmap)# banner diagnostic X
Enter TEXT message.  End with the character 'X'.
Welcome to Diagnostic Mode
X
Router(config-tmap)# banner wait X
Enter TEXT message.  End with the character 'X'.
Waiting for IOS process
X
Router(config-tmap)# transport interface gigabitethernet 0
Router(config-tmap)# exit

Router(config)# transport type persistent telnet input telnethandler

Router# show platform software configuration access policy
The current access-policies

Method        : telnet
Rule          : wait with interrupt
Shell banner:
Welcome to Diagnostic Mode

Wait banner :
Waiting for IOS process

Method        : ssh
Rule          : wait
Shell banner:
Wait banner :

Method        : console
Rule          : wait with interrupt
Shell banner:
Wait banner :
```

In the following example, the connection policy and banners are set for a persistent SSH transport map, and the transport map is enabled.

The **show platform software configuration access policy** output is given both before the new transport map is enabled and after the transport map is enabled so the changes to the SSH configuration are illustrated in the output.

```
Router# show platform software configuration access policy
The current access-policies

Method        : telnet
Rule          : wait with interrupt
Shell banner:
Welcome to Diagnostic Mode

Wait banner :
Waiting for IOS process
```

show platform software configuration access policy

```

Method      : ssh
Rule        : wait
Shell banner:
Wait banner :

```

```

Method      : console
Rule        : wait with interrupt
Shell banner:
Wait banner :

```

```

Router# configure terminal
Enter configuration commands, one per line.  End with CNTL/Z.

```

```

Router(config)# transport-map type persistent ssh sshhandler
Router(config-tmap)# connection wait allow interruptable
Router(config-tmap)# banner diagnostic X
Enter TEXT message.  End with the character 'X'.

```

Welcome to Diag Mode

X

```

Router(config-tmap)# banner wait X
Enter TEXT message.  End with the character 'X'.

```

Waiting for IOS

X

```

Router(config-tmap)# rsa keypair-name sshkeys
Router(config-tmap)# transport interface gigabitethernet 0
Router(config-tmap)# exit

```

```

Router(config)# transport type persistent ssh input sshhandler
Router(config)# exit

```

```

Router# show platform software configuration access policy
The current access-policies

```

```

Method      : telnet
Rule        : wait with interrupt
Shell banner:
Welcome to Diagnostic Mode

```

```

Wait banner :
Waiting for IOS process

```

```

Method      : ssh
Rule        : wait with interrupt
Shell banner:
Welcome to Diag Mode

```

```

Wait banner :
Waiting for IOS

```

```

Method      : console
Rule        : wait with interrupt
Shell banner:
Wait banner :

```

Related Commands

Command	Description
banner (transport-map)	Creates a banner message that will be seen by users entering diagnostic mode or waiting for the IOS process as a result of the transport map configuration.
connection wait	Specifies how an incoming connection will be handled.
transport interface	Applies the transport map settings to the interface.
transport type persistent	Applies an already-configured persistent transport map to an interface.
transport-map type persistent	Creates and names a persistent transport map and enters transport map configuration mode.

show service

To display specific local-area transport (LAT) learned services, use the **show service** command in EXEC mode.

show service [*service-name*]

Syntax Description

service-name (Optional) The name of a specific LAT service.

Command Modes

EXEC

Command History

Release	Modification
10.0	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

The **show service** command without a service name displays a list of known LAT learned services. When entered with the *service-name* argument, it displays a more-detailed status of the named service. If no LAT learned service by the specified name is known, then a lookup is done for an IP host of that name.

Examples

The following is sample output from the **show service** command:

```
Router> show service
```

```
Service Name  Status      Identification
BLUE          Available   Welcome to VAX/VMS V5.4
CHAOS         Available
MRL12         Available
MUDDY-RIVER   Available
STELLA-BLUE   Available   Welcome to VAX/VMS V5.4
```

The following is sample output of the **show service** command for a specific service:

```
Router> show service blue
```

```
Service BLUE - Available
Node Name  Status  Rating  Identification
BLUE       reachable 84      Welcome to VAX/VMS V5.4
```

[Table 27](#) describes the significant fields shown in the two previous displays.

Table 27 *show service Field Descriptions*

Field	Description
Service	Name of the service.
Node Name	Name of the nodes advertising the service.

Table 27 *show service Field Descriptions (continued)*

Field	Description
Status	Status of the service: Available or Unknown when a command is entered without a service name. Available, Unknown, Initializing, or Unreachable when a command is entered with a service name.
Rating	Rating of the service: An integer from 0 to 255, with the highest number being the preferred service. Used for load balancing.
Identification	Identification string.

show terminal

To obtain information about the terminal configuration parameter settings for the current terminal line, use the **show terminal** command in EXEC mode.

show terminal

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Examples The following is sample output from the **show terminal** command:

```
Router# show terminal
```

```
Line 2, Location: "", Type: ""
Length: 24 lines, Width: 80 columns
Baud rate (TX/RX) is 9600/9600
Status: Ready, Active, No Exit Banner
Capabilities: Enabled
Modem state: Ready
Special Chars: Escape  Hold  Stop  Start  Disconnect  Activation
                ^x      none  -    -          none
Timeouts:      Idle EXEC  Idle Session  Modem Answer  Session  Dispatch
                never    never          0:00:15      not imp  not set
Session limit is not set.
Allowed transports are telnet rlogin. Preferred is telnet
No output characters are padded
```

[Table 28](#) describes the fields in the first three lines of the **show terminal** output.

Table 28 *show terminal Field Descriptions—First Three Lines of Output*

Field	Description
Line 2	Current terminal line.
Location: ""	Location of the current terminal line, as specified using the location line configuration command.
Type: ""	Type of the current terminal line, as specified using the line global configuration command.
Length: 24 lines	Length of the terminal display.

Table 28 *show terminal Field Descriptions—First Three Lines of Output*

Field	Description
Width: 80 columns	Width of the terminal display, in character columns.
Baud rate (TX/RX) is 9600/9600	Transmit rate/receive rate of the line.

The following line of output indicates the status of the line:

Status: Ready, Active, No Exit Banner

Table 29 describes possible values for the Status field.

Table 29 *show terminal Field Descriptions—Status Field Values*

Field	Description
Active	A process is actively using the line.
Autobauding	The line is running the autobaud process.
Carrier Dropped	Some sense of “carrier” has been dropped, so the line process should be killed.
Connected	The line has at least one active connection.
Dialing Out	A dial-on-demand routing (DDR) asynchronous interface is dialing a remote site on this line.
Echo Off	The line is not echoing what the user types in (for example, because a password must be entered).
Escape Started	The first character of the escape sequence has been typed.
Escape Typed	Both characters of the escape sequence have been typed.
Hanging Up	The line state is “hanging up.”
Hardware XON/XOFF	The line uses a Universal Asynchronous Receiver/Transmitter (UART) that supports XON/XOFF flow control in hardware. (This does not mean that the line is currently using software flow control.)
Hold Typed	The user typed the “hold character” (and the line is paused).
Idle	The line modem state is “idle” (see modem state diagrams).
Idle Timeout	An idle timeout has occurred.
Input Stopped	The input has been turned off because of hardware flow control or overflow.
No Exit Banner	The normal exit banner will not be displayed on this line.
PSI Enabled	The line is paying attention to typed escape characters.
Rcvd BREAK	A BREAK sequence has been received on the line.
Rcvd Command	The line has received a special command sequence (for example, ^^B for send break).
Rcvd CR	The last character received was a carriage return.
Ready	The line state is “ready.”
Ring Transition	A transition has occurred on the RING signal of the line.
Send Break Soon	Send a BREAK on the line soon.
Send XOFF Soon	Buffers are full and an XOFF should be sent soon.

Table 29 *show terminal Field Descriptions—Status Field Values*

Field	Description
Sending Break	A BREAK sequence is being sent on the line.
Sent XOFF	Buffers were full, so an XOFF was sent.
SLIP Mode	The line is running SLIP or PPP.

The following line of output indicates the status of the capabilities of the line. These capabilities correspond closely to configurable parameters that can be set using configuration commands.

Capabilities: Enabled

Table 30 describes possible values for the Capabilities field.

Table 30 *show terminal Field Descriptions—Capabilities Field Values*

Field	Description
Autobaud Full Range	Corresponds to the autobaud command.
Character Padding	At least one pad c x configuration command has been used.
Enabled	The user has “enabled” successfully.
EXEC Suppressed	Corresponds to the no exec command.
Hangup on Last Close	Corresponds to the autohangup command.
Hardware Flowcontrol In	Corresponds to the flowcontrol hardware in command.
Hardware Flowcontrol Out	Corresponds to the flowcontrol hardware out command.
Insecure	Corresponds to the insecure command.
Lockable	Corresponds to the lockable command.
Modem Callin	Corresponds to the modem callin command.
Modem Callout	Corresponds to the modem callout command.
Modem CTS-Required	Corresponds to the modem cts-required command.
Modem DTR-Active	Corresponds to the modem dtr-active command.
Modem RI is CD	Corresponds to the modem ri-is-cd command.
No Login Banner	Corresponds to the no exec-banner command.
Notification Set	Corresponds to the notify command.
Output Non-Idle	Corresponds to the session-timeout command.
Permanent SLIP	Corresponds to the slip-dedicated command.
Private Line	Corresponds to the private command.
Refuse Suppress-GA	Corresponds to the telnet refuse command.
Receives Logging Output	Corresponds to the monitor command.
Refuse Telnet Echo	Corresponds to the telnet refuse command.
Send BREAK on IP	Corresponds to the telnet break-on-ip command.
SLIP allowed	Corresponds to the slip address command.
Software Flowcontrol In	Corresponds to the flowcontrol software in command.

Table 30 *show terminal Field Descriptions—Capabilities Field Values*

Field	Description
Software Flowcontrol Out	Corresponds to the flowcontrol software out command.
Telnet Transparent Mode	Corresponds to the telnet transparent command.

The following line of output indicates the modem state. Values include Autobauding, Carrier Dropped, Hanging Up, Idle, and Ready.

```
Modem state: Ready
```

The following lines of output indicate the special characters that can be entered to activate various terminal operations. The none or hyphen (-) values imply that no special characters are set.

```
Special Chars: Escape  Hold  Stop  Start  Disconnect  Activation
                ^^x    none  -    -          none
```

The following lines of output indicate the timeout values that have been configured for the line:

```
Timeouts:      Idle EXEC      Idle Session      Modem Answer      Session      Dispatch
                never          never              0:00:15           not imp      not set
```

[Table 31](#) describes the fields in the preceding lines of output.

Table 31 *show terminal Field Descriptions—Timeouts*

Field	Description
Idle EXEC	Interval that the EXEC command interpreter waits for user input before resuming the current connection; or if no connections exist, returning the terminal to the idle state and disconnecting the incoming session. This interval is set using the exec-timeout command.
Idle Session	Interval that the Cisco IOS software waits for traffic before closing the connection to a remote computer and returning the terminal to an idle state. This interval is set using the session-timeout command.
Modem Answer	Interval during which the software raises DTR in response to RING and the modem response to CTS. This interval is set using the modem answer-timeout command.
Session	Not implemented in this release.
Dispatch	Number of milliseconds the software waits after putting the first character into a packet buffer before sending the packet. This interval is set using the dispatch-timeout command.

The following lines of output indicate how various options have been configured:

```
Session limit is not set.
Allowed transports are telnet rlogin. Preferred is telnet
No output characters are padded
```

show tn3270 ascii-hexval

To determine ASCII-hexadecimal character mappings, use the **show tn3270 ascii-hexval** command in EXEC mode.

show tn3270 ascii-hexval

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.3	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines Use the **show tn3270 ascii-hexval** command to display the hexadecimal value of a character on your keyboard. After you enter the **show tn3270 ascii-hexval** command, you will be prompted to press a key. The hexadecimal value of the ASCII character is displayed. This command is useful for users who do not know the ASCII codes associated with various keys or do not have manuals for their terminals.

Examples The following is sample output from the **show tn3270 ascii-hexval** command:

```
Router> show tn3270 ascii-hexval

Press key> 7 - hexadecimal value is 0x37.

Router> show tn3270 ascii-hexval
Press key> f - hexadecimal value is 0x66.

Router> show tn3270 ascii-hexval
Press key> not printable - hexadecimal value is 0xD.
```

Related Commands	Command	Description
	show tn3270 character-map	Displays character mappings between ASCII and EBCDIC.
	tn3270 character-map	Converts incoming EBCDIC characters into ASCII characters for TN3270 connections.

show tn3270 character-map

To display character mappings between ASCII and EBCDIC, use the **show tn3270 character-map** command in EXEC mode.

show tn3270 character-map {all | *ebcdic-in-hex*}

Syntax Description	all	Displays all nonstandard character mappings.
	<i>ebcdic-in-hex</i>	Displays the ASCII mapping for a specific EBCDIC character.

Command Modes	EXEC
---------------	------

Command History	Release	Modification
	11.1	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Examples

The following is sample output from the **show tn3270 character-map** command:

```
Router# show tn3270 character-map all
```

```
EBCDIC 0x81 <=> 0x78 ASCII  
EBCDIC 0x82 <=> 0x79 ASCII  
EBCDIC 0x83 <=> 0x7A ASCII
```

Refer to the **tn3270 character-map** command for more information about EBCDIC and ASCII character mappings.

Related Commands	Command	Description
	show tn3270 ascii-hexval	Displays ASCII-hexadecimal character mappings.
	tn3270 character-map	Converts incoming EBCDIC characters into ASCII characters for TN3270 connections.

show translate

To display translation sessions that have been configured, use the **show translate** command in privileged EXEC mode.

show translate

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History	Release	Modification
	10.3	This command was introduced.
	12.3(2)T	Output fields were added to display information about translation sessions configured to use an End-of-Record (EOR) marker.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines The display from this command shows each translation session set up on the router. It shows the incoming device and virtual terminal protocol, and the outgoing device and protocol.

Examples The following **show translate** sample output is based on the following **translate** command configuration:

```
translate x25 3131415912345 ppp ip-pool scope-name router1 keepalive 0
```

If the previous **translate** command is enabled, the following output is created by the **show translate** command:

```
Router# show translate
```

```
Translate From: x25 3131415912345
              To:  PPP ip-pool scope-name router1 keepalive 0
                  1/1 users active, 1 peak, 1 total, 0 failures
```

[Table 32](#) describes the significant fields shown in the display.

Table 32 *show translate Field Descriptions—X.25 to IP Translation*

Field	Description
Translate From: x25 3131415912345	Protocol (X.25) and address (3131415912345) of the incoming device.
To: PPP	The virtual terminal protocol (PPP).
ip-pool	Obtain an IP address from a DHCP proxy client or a local pool.

Table 32 *show translate Field Descriptions—X.25 to IP Translation (continued)*

Field	Description
scope-name router1	Specific local scope name (router1) from which to obtain an IP address.
keepalive 0	Indicates that keepalive updates have been disabled for the current translation session.
1/1 users active	Number of users active over the total number of users.
1 peak	Maximum number of translate sessions up at any given time.
1 total	Total number of translation sessions.
0 failures	Number of failed translation attempts resulting from this configuration.

The following **show translate** sample output is based on the following **translate** command configuration:

```
translate x25 31301234 PPP 192.168.14.23 ipx-client Loopback0
```

If the previous **translate** command is enabled, the following output is created by the **show translate** command:

```
Router# show translate
```

```
Translate From: x25 31301234
              To:  PPP 192.168.14.23 ipx-client Loopback0
              1/1 users active, 1 peak, 1 total, 0 failures
```

[Table 33](#) describes the significant fields shown in the display.

Table 33 *show translate Field Descriptions—X.25 to IPX Translation*

Field	Description
Translate From: x25 31301234	Protocol (X.25) and address (31301234) of the incoming device.
To: PPP 192.168.14.23	The virtual terminal protocol (PPP) and IP address of the outgoing device.
ipx-client Loopback0	Indicates that loopback interface 0 has been configured in client mode.
1/1 users active	Number of users active over the total number of users.
1 peak	Maximum number of translate sessions up at any given time.
1 total	Total number of translation sessions.
0 failures	Number of failed translation attempts resulting from this configuration.

The following **show translate** sample output is based on the following **translate** command configuration:

```
translate tcp 10.60.155.63 x25 12345678 pvc 3 dynamic eor 0x19 insert
```

If the previous **translate** command is enabled, the following output is created by the **show translate** command:

```
Router# show translate
```

```
Translate From: TCP 10.60.155.63 Port 23
              To:  X25 12345678 Pvc 3 dynamic
```

```
EOR 0x19 Insert
1/1 users active, 1 peak, 1 total, 0 failures
```

Table 34 describes the significant fields shown in the display.

Table 34 *show translate Field Descriptions—TCP to X.25 Translation*

Field	Description
Translate From: TCP 10.60.155.63 Port 23	Protocol (TCP) and address (10.60.155.63) of the incoming device.
To: X25 12345678	The virtual terminal protocol (X.25) and X.121 destination address of the outgoing device.
Pvc 3	The outgoing connection is using permanent virtual circuit (PVC) 3.
dynamic	Terminate the TCP-to-X.25 PVC session when the interface goes down.
EOR 0x19 Insert	Indicates that EOR functionality is configured and that the EOR marker (0x19) will be inserted into the TCP stream after each received X.25 packet that does not contain the More-bit set.
1/1 users active	Number of users active over the total number of users.
1 peak	Maximum number of translate sessions up at any given time.
1 total	Total number of translation sessions.
0 failures	Number of failed translation attempts resulting from this configuration.

show translate ruleset

To display a summary of a specific or of all configured translate rulesets, behavioral parameters, and usage statistics, use the **show translate ruleset** command in user or privileged EXEC mode.

show translate ruleset [*name*]

Syntax Description

<i>name</i>	(Optional) Ruleset name.
-------------	--------------------------

Defaults

Displays all one-line **translate** command and ruleset configuration and connection information.

Command Modes

User EXEC
Privileged EXEC

Command History

Release	Modification
12.3(8)T	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

This command is useful for maintaining and updating ruleset statements. The output of this command identifies **match**, **skip**, **set**, **test**, and **substitute** statement lines and numbers them. The line number can be used to reconfigure or remove any of these statements.

When the optional *name* argument is used, the display includes only the configured ruleset and does not include information about the standard one-line translate commands.

Examples

Specific Ruleset Information

The following example shows specific information about the ruleset named A:

```
Router# show translate ruleset A
```

```
PT ruleset A, from pad to telnet.
administrative locks: 2 (2 readers, 0 writers).
translations: 0 created, 0 active, 0 failed, 0 created for test.
match/skip lines: 2.
#1 match on 1 pad test: dest-addr ^5555(.)$.
#2 skip on 1 pad test: dest-addr ^5555[89]$.
options: limited to 10 active sessions.
set/test/substitute lines: 3.
#1 set 1 parameter: telnet/dest-addr 10.2.2.1.
#2 substitute from: pad/dest-addr ^5555(.)$ into telnet/dest-port 200\1.
#3 test 1 parameter: telnet/dest-port 2004; to set 1: telnet/dest-port 2010.
```

Information About All Rulesets

The following example shows information about all protocol translation rulesets configured on the device:

```
Router# show translate ruleset
```

```
Protocol translation rulesets: 27 created, 25 deleted, 25 freed, 0 failed.
2 active rulesets.
in/out: telnet 1/1, pad 1/1, ppp -/0, autocommand -/0, virtual-template -/0.
PT ruleset A, from telnet to pad.
administrative locks: 2 (2 readers, 0 writers).
translations: 2 created, 0 active, 0 failed, 4 created for test.
match/skip lines: 1.
#1 match on 1 telnet test: dest-addr 10.2.2.3.
options: none configured.
set/test/substitute lines: 4.
#1 test 1 parameter: telnet/dest-addr 10.2.2.3; to set 1: pad/dest-addr 4444.
#2 test 1 parameter: pad/dest-addr 4444; to set 1: pad/source-addr-ext 11.2222.2.
#3 substitute from: pad/source-addr-ext 11.2222.2 into pad/source-addr-ext 11.2222.3.
#4 test 1 parameter: pad/source-addr-ext ^11.2222.3$; to set 1: telnet/binary 1.
PT ruleset B, from pad to telnet.
administrative locks: 2 (2 readers, 0 writers).
translations: 0 created, 0 active, 0 failed, 0 created for test.
match/skip lines: 2.
#1 match on 1 pad test: dest-addr ^5555(.)$.
#2 skip on 1 pad test: dest-addr ^55551$
set/test/substitute lines: 3.
#1 set 1 parameter: telnet/dest-addr 10.2.2.1.
#2 substitute from: pad/dest-addr ^5555(.) into telnet/dest-port 2000.
#3 test 1 parameter: pad/dest-addr ^5555[6-9]
```

Table 35 describes *all* significant fields seen that may be reported by this command.

Table 35 *show translate ruleset Field Descriptions*

Field	Description
Protocol translation rulesets:	Describes ruleset memory management statistics. In the sample output seen in the “Information About All Rulesets” section, there were 27 total translate rulesets created, 25 rulesets deleted from the configuration, 25 rulesets freed, and 0 ruleset creation failure.
active ruleset:	Total number of current configured ruleset (rulesets created - rulesets deleted).
in/out:	Ruleset translation protocol counts, by incoming and outgoing protocol.
PT ruleset	Shows the defined name of the ruleset. In the sample output seen in the “Information About All Rulesets” section, the ruleset named A is configured to translate from a Telnet connection to PAD a connection.
administrative locks:	Describes the total ruleset administrative locks.
readers:	Total count of administrative locks.
writers:	Total count of configuration editors (rulesets being edited).
	Note Editing a ruleset changes the behavior of the set as a whole; an incoming connection will not be processed against a ruleset with an editor lock.

Table 35 *show translate ruleset Field Descriptions (continued)*

Field	Description
translations:	Describes ruleset memory management statistics for the dynamic one-line translate command, generated for and used by the protocol translation operation.
created:	Total number of translation sessions created by this ruleset.
test function translations:	Total number of translations created by the test (ruleset) command.
active:	Total number of active connections through this translation.
failed:	Total number of attempted translation connections that failed. Example of failures: number of maximum users limit has reached, a destination host not responding, an access failure, login failure, no resources, and so on.
(0 max-user):	Total number of connections refused due to reaching maximum users limit; (zero, in this example).
match/skip lines:	Total number of match and skip lines configured for the ruleset.
#1 match #2 skip	The line number within the block of match and skip commands.
options:	Options configured for ruleset processing.
set/test/substitute lines:	Total number of set, test, and substitute lines configured for the ruleset.
#1 set #2 substitute #3 test	Reports the line number within the block of set , substitute , and test commands and describes the commands configured for the ruleset.
#line number substitute from:	Reports the line number within the block of set , test , and substitute commands and describes the substitute command configured for the ruleset.
#line number [set/test] parameter:	Reports the line number within the block of set and test commands and describes the set and test parameters configured for the ruleset.

Related Commands

Command	Description
description (ruleset)	Adds a description about a translation ruleset.
match (ruleset)	Identifies a connection for processing by the translation ruleset.
options (ruleset)	Specifies protocol translation options in a translation ruleset.
set (ruleset)	Unconditionally sets one or more connection parameters to a fixed value for a translation ruleset.
skip (ruleset)	Identifies a connection for omission by the translation ruleset.
substitute (ruleset)	Matches an available protocol and substitutes another in a translation ruleset.
test (ruleset)	Tests parameter values in a translation ruleset using regular expressions.
test translate	Displays a trace of protocol translation behavior for a connection attempt.

 show translate ruleset

Command	Description
translate ruleset	Defines a unique name for a translation ruleset, specifies translated protocols, and enters translate ruleset configuration mode.
x25 pvc translate ruleset	Configures PVCs that are valid for protocol translation ruleset handling.

show transport-map

To view the transport map configuration details on your router, enter the **show transport-map** EXEC or privileged EXEC command.

```
show transport map [all | name transport-map-name | type [console | persistent [ssh | telnet | webui]]]
```

Syntax Description	all	Specifies information on all transport maps.
	name <i>transport-map-name</i>	Specifies information on a specific transport map, where <i>transport-map-name</i> is the name of the specific transport map.
	type [console persistent [ssh telnet webui]]	Specifies information on all transport maps of a specific type on the router. Options include:
		<ul style="list-style-type: none">• console—specifies information on all console port transport maps.• persistent ssh—specifies information on all persistent ssh transport maps.• persistent telnet—specifies information on all persistent telnet transport maps.• persistent webui—specifies information on all web user interface transport maps.

Command Modes	EXEC (>)
	Privileged EXEC (#)

Command Default	No default behavior or values.
-----------------	--------------------------------

Command History	Release	Modification
	Cisco IOS XE Release 2.1	This command was introduced on the Cisco ASR 1000 Series Routers.

Usage Guidelines	This command is used to view information about transport map configurations.
	If you are unable to access the IOS CLI in diagnostic mode and want transport map configuration information, the show platform software configuration access policy command is available in diagnostic mode and provides some of the information displayed in this command output for console port, Telnet, and SSH connections.

Examples	In the following example, the router has a console port transport map named consolehandler, a persistent SSH transport map named sshhandler, and a persistent Telnet transport map named telnethandler. The show transport-map all , show transport-map type , and show transport-map name command are all used throughout the example to gather information on the transport maps.
----------	--

show transport-map

```
Router#show transport-map all
Transport Map:
  Name: consolehandler
  Type: Console Transport

Connection:
  Wait option: Wait Allow Interruptable
  Wait banner:

Waiting for the IOS CLI

  Bshell banner:

Welcome to Diagnostic Mode

Transport Map:
  Name: sshhandler
  Type: Persistent SSH Transport

Interface:
  GigabitEthernet0

Connection:
  Wait option: Wait Allow Interruptable
  Wait banner:

Waiting for IOS prompt

  Bshell banner:

Welcome to Diagnostic Mode

SSH:
  Timeout: 120
  Authentication retries: 5
  RSA keypair: sshkeys

Transport Map:
  Name: telnethandler
  Type: Persistent Telnet Transport

Interface:
  GigabitEthernet0

Connection:
  Wait option: Wait Allow Interruptable
  Wait banner:

Waiting for IOS process

  Bshell banner:

Welcome to Diagnostic Mode

Transport Map:
  Name: telnethandling1
  Type: Persistent Telnet Transport

Connection:
  Wait option: Wait Allow
```

```
Router#show transport-map type console
```

```
Transport Map:
```

```
  Name: consolehandler
```

```
  Type: Console Transport
```

```
Connection:
```

```
  Wait option: Wait Allow Interruptable
```

```
  Wait banner:
```

```
Waiting for the IOS CLI
```

```
  Bshell banner:
```

```
Welcome to Diagnostic Mode
```

```
Router#show transport-map type persistent ssh
```

```
Transport Map:
```

```
  Name: sshhandler
```

```
  Type: Persistent SSH Transport
```

```
Interface:
```

```
  GigabitEthernet0
```

```
Connection:
```

```
  Wait option: Wait Allow Interruptable
```

```
  Wait banner:
```

```
Waiting for IOS prompt
```

```
  Bshell banner:
```

```
Welcome to Diagnostic Mode
```

```
SSH:
```

```
  Timeout: 120
```

```
  Authentication retries: 5
```

```
  RSA keypair: sshkeys
```

```
Router#show transport-map type persistent telnet
```

```
Transport Map:
```

```
  Name: telnethandler
```

```
  Type: Persistent Telnet Transport
```

```
Interface:
```

```
  GigabitEthernet0
```

```
Connection:
```

```
  Wait option: Wait Allow Interruptable
```

```
  Wait banner:
```

```
Waiting for IOS process
```

```
  Bshell banner:
```

```
Welcome to Diagnostic Mode
```

```
Transport Map:
```

```
  Name: telnethandling1
```

```
  Type: Persistent Telnet Transport
```

show transport-map

```
Connection:
  Wait option: Wait Allow
```

```
Router#show transport-map name telnethandler
Transport Map:
  Name: telnethandler
  Type: Persistent Telnet Transport
```

```
Interface:
  GigabitEthernet0
```

```
Connection:
  Wait option: Wait Allow Interruptable
  Wait banner:
```

```
Waiting for IOS process
```

```
  Bshell banner:
```

```
Welcome to Diagnostic Mode
```

```
Router#show transport-map name telnethandler1
% No transport map telnethandler1
Router#show transport-map name consolehandler
Transport Map:
  Name: consolehandler
  Type: Console Transport
```

```
Connection:
  Wait option: Wait Allow Interruptable
  Wait banner:
```

```
Waiting for the IOS CLI
```

```
  Bshell banner:
```

```
Welcome to Diagnostic Mode
```

```
Router#show transport-map name sshhandler
Transport Map:
  Name: sshhandler
  Type: Persistent SSH Transport
```

```
Interface:
  GigabitEthernet0
```

```
Connection:
  Wait option: Wait Allow Interruptable
  Wait banner:
```

```
Waiting for IOS prompt
```

```
  Bshell banner:
```

```
Welcome to Diagnostic Mode
```

```
SSH:
  Timeout: 120
  Authentication retries: 5
  RSA keypair: sshkeys
```

Router#

In the following example, a transport map that has enabled both the HTTP server and the secure HTTP server is viewed using this command.

```
Router# show transport-map type persistent webui
Transport Map:
  Name: webui_http_https
  Type: Persistent Webui Transport

Webui:
  Server:          enabled
  Secure Server:  enabled
```

Table 36 *show transport-map Field Descriptions*

Field	Description
Name:	Specifies the name of the transport map. A transport-map is named when the transport-map type command is entered in global configuration mode to create a transport map.
Type:	Specifies the type of transport map. The possibilities include Console Transport for console port transport maps, Persistent SSH for Persistent SSH transport maps, and Persistent Telnet for persistent Telnet transport maps, Persistent WebUI Transport for web user interface transport maps.
Wait option:	Displayed the connection policy. The connection policy is defined using the connection wait transport map configuration command, and can include allow (wait for an IOS vty line, or exit router if send break signal is sent), allow interruptable (wait for an IOS vty line, and enter diagnostic mode if a send break signal is sent), none (immediately enter diagnostic mode if no IOS vty line is available, or none disconnect (immediately leave router if no IOS vty line is available).
Wait banner:	Specifies the banner seen when a user is waiting for an IOS vty line. The wait banner is defined using the banner wait transport map configuration mode command. If no text is seen, there is no wait banner.
Bshell banner:	Specifies the banner seen when a user is waiting for an diagnostic mode. The wait banner is defined using the banner diagnostic transport map configuration mode command. If no text is seen, there is no wait banner.
Interface:	Specifies the interface where the transport map will be applied if it is enabled or once it is enabled. The interface is defined using the transport interface transport map configuration mode command.
Timeout:	The login SSH timeout value, in seconds. The login timeout value can be set for SSH transport maps using the time-out transport map configuration command and has a default of 120 seconds.
Authentication-retries:	The number of authentication retries before dropping the connection for a persistent SSH connection attempt. This value can be set using the authentication-retries transport map configuration command.

Table 36 *show transport-map Field Descriptions (continued)*

Field	Description
RSA keypair:	The RSA keypair name, which is set using the rsa keypair-name transport map configuration command.
Server	The HTTP server. This value tells users if the HTTP server is enabled or disabled when a particular web user interface transport map is used.
Secure Server	The secure HTTP (HTTPS) server. This value tells users if the secure HTTP server is enabled or disabled when a particular web user interface transport map is used.

Related Commands

Command	Description
authentication-retries	Specifies the number of SSH authentication retries before dropping the connection when a persistent SSH transport map is applied to the receiving interface.
banner (transport map)	Creates a banner message that will be seen by users entering diagnostic mode or waiting for the IOS process as a result of the transport map configuration.
connection wait	Specifies how an incoming connection will be handled.
rsa keypair-name	Names the RSA keypair to be used for persistent SSH connections.
secure-server	Enables the secure HTTP (HTTPS) server for a persistent web user interface transport map.
server	Enables the HTTP server for a persistent web user interface transport map.
show platform software configuration access policy	Displays the access policy and banner settings for console, Telnet, and SSH connections.
time-out	Specifies the SSH timeout interval in seconds.
transport interface	Applies the transport map settings to the interface.
transport type persistent	Applies an already-configured persistent transport map to an interface.
transport-map type persistent	Creates and names a persistent transport map and enters transport map configuration mode.

show ttycap

To test for the availability of a ttycap after a connection on a router takes place, use the **show ttycap** command in EXEC mode.

show ttycap [*ttycap-name* | **all**]

Syntax Description	<i>ttycap-name</i>	(Optional) Name of a ttycap.
	all	(Optional) Lists the names of all defined ttycaps. The name of the default ttycap is not listed.

Command Modes	EXEC
----------------------	------

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

The Cisco IOS software searches for the specified ttycap in its active configuration image, and lists the complete entry if found. If it is not found, an appropriate “not found” message appears.

If you do not include any arguments with the **show ttycap** command, then the current keymap used for the terminal is displayed.

Examples

The following is sample output from the **show ttycap** command:

```
Router# show ttycap


d0|vt100|vt100-am|vt100am|dec vt100:do=^J:co#80:li#24:\
cl=50^[[;H^[[2J:bs:am:cm=5^[[%i%d;%dH:nd=2^[[C:up=2^[[A:\
ce=3^[[K:so=2^[[7m:se=2^[[m:us=2^[[4m:ue=2^[[m:md=2^[[1m:\
me=2^[[m:ho=^[[H:xn:sc=^[7:rc=^[8:cs=^[[%i%d;%dr:

Router# show ttycap all

ttycap3      d0|vt100|vt100-am|vt100am|dec vt100
ttycap2      d1|vt200|vt220|vt200-js|vt220-js|dec vt200 series with jump scroll
ttycap1      ku|h19-u|h19u|heathkit with underscore cursor

Router# show ttycap ttycap1

ttycap1      ku|h19-u|h19u|heathkit with underscore cursor:\:vs@:ve@:tc=h19-b:\
:al=1*\EL:am:le=^H:bs:cd=\EJ:ce=\EK:cl=\EE:cm=\EY%+ %+\
:co#80:dc=\EN:\:dl=1*\EM:do=\EB:ei=\EO:ho=\EH\
:im=\E@:li#24:mi:nd=\EC:as=\EF:ae=\EG:\
:ms:pt:sr=\EI:se=\Eq:so=\Ep:up=\EA:vs=\Ex4:ve=\Ey4:\
:kb=^h:ku=\EA:kd=\EB:kl=\ED:kr=\EC:kh=\EH:kn#8:ke=\E>:ks=\E=: \
:k1=\ES:k2=\ET:k3=\EU:k4=\EV:k5=\EW:\
```

 show ttycap

```
:l6=blue:l7=red:l8=white:k6=\EP:k7=\EQ:k8=\ER:\
:es:hs:ts=\Ej\Ex5\Ex1\EY8%+ \Eo:fs=\Ek\Ey5:ds=\Ey1:
```

Refer to the **ttycap** command for more information about keyboard mappings and keymap entry structures.

Related Commands

Command	Description
keymap	Defines characteristics of a terminal emulation file.

show users

To display information about the active lines on the router, use the **show users** command in privileged EXEC mode.

show users [**all**] [**lawful-intercept**]

Syntax Description	all	(Optional) Specifies that all lines be displayed, regardless of whether anyone is using them.
	lawful-intercept	(Optional) Displays lawful-intercept users.

Command Modes Privileged EXEC

Command History	Release	Modification
	10.0	This command was introduced.
	12.3(7)T	The lawful-intercept keyword was introduced.
	12.2(33)SRB	The lawful-intercept keyword was integrated into Cisco IOS Release 12.2(33)SRB.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines This command displays the line number, connection name, idle time, hosts (including virtual access interfaces), and terminal location. An asterisk (*) indicates the current terminal session.

If the **lawful-intercept** keyword is issued, the names of all users who have access to a configured lawful intercept view will be displayed. To access the **show users lawful-intercept** command, you must be an authorized lawful-intercept-view user.

Examples The following is sample output from the **show users** command:

```
Router# show users
      Line      User      Host(s)      Idle Location
      0 con 0
*    2 vty 0    user1      idle         0    SERVICE1.CISCO.COM
```

The following is sample output identifying an active virtual access interface:

```
Router# show users

Line      User      Host(s)      Idle   Location
*  0 con 0      idle        01:58
  10 vty 0      Virtual-Access2  0      1212321
```

The following is sample output from the **show users all** command:

```
Router# show users all
      Line      User      Host(s)      Idle   Location
```

```
* 0 vty 0 user1 idle 0 SERVICE1.CISCO.COM
1 vty 1
2 con 0
3 aux 0
4 vty 2
```

Table 37 describes the significant fields shown in the displays.

Table 37 *show users Field Descriptions*

Field	Description
Line	<p>Contains three subfields:</p> <ul style="list-style-type: none"> The first subfield (0 in the sample output) is the absolute line number. The second subfield (vty in the sample output) indicates the type of line. Possible values follow: <ul style="list-style-type: none"> con—console aux—auxiliary port tty—asynchronous terminal port vty—virtual terminal The third subfield (0 in the * sample output) indicates the relative line number within the type.
User	User using the line. If no user is listed in this field, no one is using the line.
Host(s)	Host to which the user is connected (outgoing connection). A value of idle means that there is no outgoing connection to a host.
Idle	Interval (in minutes) since the user has entered something.
Location	Either the hard-wired location for the line or, if there is an incoming connection, the host from which incoming connection came.

The following sample output from the **show users lawful intercept** command, shows three LI-View users on the system—li_admin, li-user1, and li-user2”:

```
Router# show users lawful-intercept
li_admin
li-user1
li-user2
Router#
```

Related Commands

Command	Description
line	Identifies a specific line for configuration and starts the line configuration command collection mode.
li-view	Creates a lawful intercept view.
show line	Displays the parameters of a terminal line.
username	Establishes a username-based authentication system.

show x25 pad

To display information about current open connections, including packet transmissions, X.3 parameter settings, and the current status of virtual circuits, use the **show x25 pad** command in EXEC mode.

show x25 pad

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	11.2	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Examples The following is sample output from the **show x25 pad** command:

```
Router# show x25 pad

tty2, Incoming PAD connection
Total input: 61, control 6, bytes 129. Queued: 0 of 7 (0 bytes).
Total output: 65, control 6, bytes 696.
Flags: 1, State: 3, Last error: 1
ParamsIn: 1:1, 2:0, 3:2, 4:1, 5:1, 6:0, 7:21,
          8:0, 9:0, 10:0, 11:14, 12:0, 13:0, 14:0, 15:1,
          16:127, 17:21, 18:18, 19:0, 20:0, 21:0, 22:0,
ParamsOut: 1:1, 2:1, 3:2, 4:1, 5:0, 6:0, 7:4,
           8:0, 9:0, 10:0, 11:14, 12:0, 13:0, 14:0, 15:0,
           16:127, 17:21, 18:18, 19:0, 20:0, 21:0, 22:0,
LCI: 1, State: D1, Interface: Serial0
Started 0:11:10, last input 0:00:16, output 0:00:16
Connected to 313700540651
Window size input: 7, output: 7
Packet size input: 512, output: 512
PS: 1 PR: 5 ACK: 5 Remote PR: 1 RCNT: 0 RNR: FALSE
Retransmits: 0 Timer (secs): 0 Reassembly (bytes): 0
Held Fragments/Packets: 0/0
Bytes 696/129 Packets 65/61 Resets 0/0 RNRs 0/0 REJs 0/0 INTs 0/0
```

[Table 38](#) describes the fields shown in the display.

Table 38 *show x25 pad Field Descriptions*

Field	Description
Total input/output	Number of packets received or sent for the connection.
control	Number of packets with Qbit set (X.29 control packets).
bytes	Number of bytes in each direction.

Table 38 *show x25 pad Field Descriptions (continued)*

Field	Description
Queued	Number of unread packets waiting for the connection.
Waiting to send	Local data packet bit not sent (part of a line).
Flags, State, Last error	Displays data for detecting errors and tracing initialization status. Only useful to your Cisco-certified technical support personnel.
ParamsIn	Parameters read from the PAD at the start of the connection.
ParamsOut	Active X.3 parameters.
LCI, State, Interface	Status of the X.25 virtual circuit associated with the PAD connection. This is the same display that the show x25 vc command shows.

skip (ruleset)

To identify a connection to ignore by the translation ruleset, use the **skip** command in translate ruleset configuration mode. To remove the test operation, use one of the two **no** forms of this command.

skip [*#line-number*] *incoming-connection-parameter regular-expression* [*#line-number incoming-connection-parameter regular-expression* [...]]

no skip *incoming-connection-parameter regular-expression* [*incoming-connection-parameter regular-expression* [...]]

no skip *#line-number* [...]

Syntax Description	<i>#line-number</i>	(Optional) The line in the translation ruleset to test for a skip operation. The # character must be entered.
	<i>incoming-connection-parameter</i>	Incoming protocol parameter to test for; up to six skip tests can be written on one command line. Parameters are available for packet assembler/disassembler (PAD) and Telnet connections, and are listed in Table 39 and Table 40 .
	<i>regular-expression</i>	Pattern with regular expression to test for ignoring.
	[...]	(Optional) Specifies that multiple entries can be made as follows: <ul style="list-style-type: none"> Up to six skip tests can be written on one command line. Multiple line numbers can be specified using the second no form of this command.

Defaults No default behavior or values

Command Modes Translate ruleset configuration

Command History	Release	Modification
	12.3(8)T	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines Up to six skip tests can be written on one command line. The ellipses in the format shown above means multiple skip tests can be written in a translation ruleset statement.

For incoming connection attempts, a template is configured, and within the template a connection can be identified by tests written using Cisco regular expressions and a pattern that is ignored (skipped).

The translation ruleset templates have line numbers that can be displayed using the **show translate ruleset EXEC** command.

Cisco regular expressions are described in Appendix A, “Regular Expressions,” in the *Cisco IOS Terminal Services Configuration Guide*.

Table 39 and Table 40 list the protocol parameter keywords and arguments that can be specified in the skip statements for incoming PAD and Telnet connections.

Table 39 Skip Keywords for Incoming PAD Connections

Keyword	Description
cud <i>ASCII-string</i>	Call user data (CUD) that occurs after the protocol identification (PID). For outgoing PAD connections, this is the optional, user-specified text included in the outgoing call request packet after the protocol identification bytes. The CUD is entered as an ASCII string.
dest-addr <i>address</i>	Destination X.121 address entered as a number from 0 to 15 digits long.
dest-addr-ext <i>address</i>	Network service access point (NSAP) destination address extension.
dldci <i>number</i>	Frame Relay data-link connection identifier (DLCI) of an Annex G service entered as a number from one to seven digits, although a size of two to four digits is more likely, or the NULL string if not received on an Annex G service.
interface <i>type number</i>	Interface to be used for the circuit, entered using standard Cisco IOS interface designations: Serial1/0:1, for example.
mac <i>address</i>	Connection-Mode Network Service (CMNS) service remote host MAC address entered as three hexadecimal numbers of four digits separated by a period, 0000.fc08.12ab, for example, or the NULL string if not received on a CMNS service.
packet-size <i>size</i>	X.25 maximum data packet sizes to request, entered as two numbers from the following choices: 16, 32, 64, 128, 256, 512, 1024, 2048, 4096.
pid <i>byte-string</i>	PID string specified in ASCII or hexadecimal. A hexadecimal PID must be prefixed by “0x.” For example, 0x01000000 is the standard PAD PID. Although it is available for specifying a nonstandard Call PID, this parameter is not restricted to the common PID length and can be used to specify the entire user data field.
reversed <i>flag</i>	Flag to indicate whether a reverse charged Call is permitted. This flag applies to a switched virtual circuit (SVC) and is entered as a single character, Y or N , for yes or no.
source-addr <i>address</i>	Source X.121 address.
source-addr-ext <i>address</i>	NSAP source address extension.
window-size <i>size</i>	X.25 window sizes to request, entered as two numbers in a range from 1 to 127.
xot-dest-addr <i>address</i>	Destination IP address of an X.25 over TCP (XOT) service entered in standard IP address dotted decimal notation (10.0.0.127, for example) or the NULL string if not received on an XOT service.
xot-source-addr <i>address</i>	Source IP address of an XOT service entered in standard IP address dotted decimal notation (10.0.0.127, for example) or the NULL string if not received on an XOT service.

Table 40 **Skip Keywords for Incoming Telnet Connections**

Keyword	Description
dest-addr <i>address</i>	Destination IP address entered in standard IP address dotted decimal notation: 10.0.0.127, for example.
dest-port <i>port</i>	Destination port entered as a decimal number from one to five digits long.
source-addr <i>address</i>	Source IP address entered in standard IP address dotted decimal notation: 10.0.0.127, for example.

Examples

The following example shows how to write match and skip tests to skip connection attempts from any subnetwork address starting with 10 or 11 and match only those with a specific IP address and destination port number:

```
translate ruleset customer-case-1 from telnet to pad
! Ignore an incoming Telnet attempt from any subnetwork address starting with 10
skip source-addr ^10\.*
! Match an incoming Telnet attempt destined for an IP addresses starting
! with 172.18., and a 5-digit port starting with 10 or 11
match dest-addr ^172\.18\.* dest-port ^1[0-1]..$.
! Or match an incoming Telnet attempt destined an IP addresses starting
! with 172.18., and a 5-digit port starting with 120 through 127
match dest-addr ^172\.18\.* dest-port ^12[0-7]..$
```

The following example shows how to write match and skip tests to skip connection attempts from destination 55554 and to match only those with destination addresses from 55550 to 55553 and from 55556 to 55559:

```
translate ruleset A from pad to telnet
skip dest-addr ^55554$
match dest-addr ^5555.$
```

Related Commands

Command	Description
description (ruleset)	Adds a description about a translation ruleset.
match (ruleset)	Identifies a connection for processing by the translation ruleset.
options (ruleset)	Specifies protocol translation options in a translation ruleset.
set (ruleset)	Unconditionally sets one or more connection parameters to a fixed value for a translation ruleset.
show translate ruleset	Displays a summary of a specific or of all configured translation rulesets, behavioral parameters, and usage statistic.
substitute (ruleset)	Matches an available protocol and substitutes another in a translation ruleset.
test (ruleset)	Tests parameter values in a translation ruleset using regular expressions.
test translate	Displays a trace of protocol translation behavior for a connection attempt.
translate ruleset	Defines a unique name for a translation ruleset, specifies translated protocols, and enters translate ruleset configuration mode.
x25 pvc translate ruleset	Configures PVCs that are valid for protocol translation ruleset handling.

slip

To start a serial connection to a remote host by using Serial Line Internet Protocol (SLIP), use the **slip** command in EXEC mode.

slip [/default] {remote-ip-address | remote-name} [@tacacs-server] [/routing] [/compressed]

Syntax Description

/default	(Optional) Makes a SLIP connection when a default address has been configured.
<i>remote-ip-address</i>	IP address of the client workstation or PC.
<i>remote-name</i>	Name of the client workstation or PC.
<i>@tacacs-server</i>	(Optional) IP address or IP host name of the TACACS server to which your TACACS authentication request is sent.
/routing	(Optional) Indicates that the remote system is a router. Line must be configured for asynchronous routing using SLIP encapsulation.
/compressed	(Optional) Indicates that IP header compression should be negotiated.

Command Modes

EXEC

Command History

Release	Modification
10.0	This command was introduced in a release prior to Cisco IOS Release 10.0.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

When you connect from a remote node computer to the EXEC facility on a router and want to connect from the router to a device on the network, issue the **slip** command.

If you specify an address for the TACACS server by using **/default** or *tacacs-server* arguments, the address must be the first parameter in the command after you enter **slip**. If you do not specify an address or enter **/default**, you are prompted for an IP address or host name. You can enter the **/default** keyword at this point.

If you do not use the *tacacs-server* argument to specify a TACACS server for SLIP address authentication, the TACACS server specified at login (if any) is used for the SLIP address query.

To optimize bandwidth on a line, SLIP enables compression of the SLIP packets using Van Jacobson TCP header compression as defined in RFC 1144.

Your system administrator must configure the system with the **ip tcp header-compression passive** command for the **/compressed** command option to be valid in EXEC mode. The **ip tcp header-compression** command forces header compression on or off. The default is to not compress the packets. The configuration file must have header compression on and the **slip /compressed** EXEC command must be entered for header compression to occur.

To terminate a session initiated with the **slip** command, disconnect from the device on the network using the command specific to that device. Then, exit from EXEC mode by using the **exit** command.

Examples

The following example makes a connection when a default IP address is assigned. Once a correct password is entered, you are placed in SLIP mode, and the IP address is displayed.

```
Router> slip
Password:
Entering SLIP mode.
Your IP address is 192.168.7.28, MTU is 1524 bytes
```

The following example illustrates the prompts displayed and the response required when you use dynamic addressing to assign the SLIP address:

```
Router> slip
IP address or hostname? 192.168.6.15
Password:
Entering SLIP mode
Your IP address is 192.168.6.15, MTU is 1524 bytes
```

In the preceding example, the address 172.31.6.15 has been assigned as the default. Password verification is still required before SLIP mode can be enabled.

```
Router> slip /default
Password:
Entering SLIP mode
Your IP address is 192.168.6.15, MTU is 1524 bytes
```

The following example illustrates the implementation of header compression on the interface with the IP address 172.24.2.1:

```
Router> slip 172.24.2.1 /compressed
Password:
Entering SLIP mode.
Interface IP address is 172.24.2.1, MTU is 1500 bytes.
Header compression will match your system.
```

In the preceding example, the interface is configured for the **ip tcp header-compression passive** command, which permits the user to enter the **/compressed** keyword at the EXEC mode prompt. The message “Header compression will match your system” indicates that the user specified compression. If the line was configured for the **ip tcp header-compression on** command, this line would read “Header compression is On.”

The following example specifies a TACACS server named server1 for address authentication:

```
Router> slip 10.0.0.1@server1
Password:
Entering SLIP mode.
Interface IP address is 10.0.0.1, MTU is 1500 bytes
Header compression will match your system.
```

Related Commands

Command	Description
ip tcp header-compression	Enables TCP header compression.

substitute (ruleset)

To match an available protocol and substitute another in a translation ruleset, use the **substitute** command in translate ruleset configuration mode. To change or remove the substitution statement, use one of the **no** forms of this command.

```
substitute [#line-number] {pad | telnet} variable-parameter reg-exp-match [#line-number {pad | telnet} variable-parameter reg-exp-match [...]] into {pad | telnet} variable-parameter [reg-exp-write]
```

```
no substitute {pad | telnet} variable-parameter reg-exp-match into {pad | telnet} variable-parameter [reg-exp-write]
```

```
no substitute #line-number [...]
```

Syntax Description		
#line-number	(Optional) The line in the translation ruleset to test for substitution. The # character must be entered.	
{pad telnet}	Identifies the incoming or outgoing protocol and controls which parameters are available in the next element of this command.	
variable-parameter	A parameter that varies depending upon the protocol selected, either pad or telnet , and its role, either incoming or outgoing. Protocol parameters that modify the incoming or outgoing connection behavior during protocol translation session setup are indicated in Table 41 with an X.	
reg-exp-match	A standard Cisco regular expression match specification.	
into	Makes the substitution into an available protocol parameter.	
reg-exp-write	(Optional) A standard Cisco regular expression write specification that uses information from a match specification.	
[...]	(Optional) Specifies that multiple entries can be made as follows: <ul style="list-style-type: none"> Up to six substitute statements can be written on one command line. Multiple line numbers can be specified using the second no form of this command. 	

Defaults No default behavior or values

Command Modes Translate ruleset configuration

Command History	Release	Modification
	12.3(8)T	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

Up to six substitute specifications can be entered on one command line. The ellipses in the format shown above means multiple **substitute** statements can be specified in a translation ruleset statement.

When you use the first **no** form of this command, specify the full set of parameters and expressions in the command to be removed. The second **no** form must specify the correct **substitute** command and line number within the translation ruleset template.

This command is used to substitute between protocol parameters using regular expressions to match elements with a test string, and to substitute parameters into another string that can take elements from the matched string.

Cisco regular expressions are described in Appendix A, “Regular Expressions,” in the *Cisco IOS Terminal Services Configuration Guide*.

A substitute ... into statement will perform a regular expression match on any available protocol parameter and, if matched, substitute into any available protocol parameter. The regular expression write specification is optional. If the specification is omitted, the current value of the parameter will be taken as the regular expression write specification. This latter provision is a way of using multiple parameter values to set another parameter value. As an example, two successive substitute statements from a Telnet destination address and destination port into a packet assembler/disassembler (PAD) destination address could be specified using the following statements:

```
substitute telnet dest-addr ^10\.0\.0\.(.)$ into pad dest-addr 111100\1\1
```

```
substitute telnet dest-addr ^10\.0\.0\.(.)$ into pad dest-addr 111100\1\1
```

```
substitute telnet dest-port ^10(...)$ into pad dest-addr
```

If these successive substitutions were performed using an incoming Telnet connection from IP address 10.0.0.9/10234, the PAD destination address after the first substitution would be 111009\1, and after the second substitution would be 1111009234.

The following statements construct a switched virtual circuit (SVC) source address from the Telnet source information, starting with the source IP address in the form 172.18.###, which allows for a subsequent substitution of one field (notice the use of the backslash to concatenate the substitute and into statements):

```
substitute telnet source-addr ^172\.18\.(.)\.(.)\
```

```
into pad source-addr 98\1\2\1
```

You can add in elements extracted from the Telnet destination port, where the rewrite pattern is taken from the current value of PAD source address, as follows:

```
substitute telnet dest-port ^.(...) into pad source-addr
```

[Table 41](#) lists the PAD and Telnet parameters that can be set, as indicated by an X.

Table 41 **Substitute Connection Parameter Keywords**

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
authorize-method <i>ASCII-string</i>	Connection authorization method to use that must match one of a fixed set of values.	X	—	—	X
authorize-tag <i>ASCII-string</i>	Connection authorization identity to supply, entered as an ASCII string.	X	—	—	X

Table 41 **Substitute Connection Parameter Keywords (continued)**

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
binary <i>flag</i>	Flag that specifies whether 8-bit binary data is required, entered as one of the following characters to specify binary mode: Y , y , 1–9 , T , t .	—	X	—	X
cud <i>ASCII-string</i>	Call user data (CUD) that occurs after the protocol identification (PID). For X.29 service, this is the optional, user-specified text included in the command to place a call.	X	—	X	—
dest-addr <i>address</i>	Destination IP (Telnet) or X.121 (PAD) address.	X	X	X	X
dest-addr-ext <i>address</i>	Network service access point (NSAP) destination address extension.	X	—	X	—
dest-port <i>port</i>	Destination port entered as a decimal number from one to five digits long.	—	X	—	X
dldci <i>number</i>	Frame Relay data-link connection identifier (DLCI) of an Annex G service entered as a number from one to seven digits in length, although a size of two to four digits is more likely, or the NULL string if not received on an Annex G service.	X	—	X	—
eor <i>specification</i>	A character set defining the End-of-Record (EOR) string for the protocol translation session, entered as an ASCII or hexadecimal specification from one to four bytes in length, aaa or 0x19, as examples.	—	X	—	X
eor-insert <i>flag</i>	Flag specifying that the EOR character set should be inserted for PAD data being forwarded to a Telnet session, and entered as a single character. Use one of the following characters to specify EOR insertion: Y , y , 1–9 , T , t .	—	X	—	X
hostname <i>address</i>	Destination host name for Domain Name System (DNS) resolution entered as an ASCII string.	—	X	—	—

Table 41 **Substitute Connection Parameter Keywords (continued)**

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
idle <i>seconds</i>	Number of seconds the PAD connection can be idle before being cleared.	X	—	X	—
interface <i>type number</i>	Interface to be used for the circuit, entered using standard Cisco IOS interface designations; Serial1/0:1, for example.	X	—	X	—
keepalive-period <i>seconds</i>	A number that indicates the number of seconds between TCP keepalives for the X.25 over TCP (XOT) connection. TCP keepalive information applies only when a ruleset is configured to match an XOT destination address. Example: match dest-addr ^5555.\$ xot-dest-addr 5.5.5.2	X	—	X	—
keepalive-tries <i>number</i>	A number that indicates the number of TCP keepalives to send before the XOT connection is declared dead. TCP keepalive information applies only when a ruleset is configured to match an XOT destination address. Example: match dest-addr ^5555.\$ xot-dest-addr 5.5.5.2	X	—	X	—
local <i>flag</i>	Flag specifying that Telnet control sequences should be forwarded, not processed, and entered as a single character. Use one of the following characters to specify local mode: Y , y , 1–9 , T , t .	—	X	—	X
mac <i>address</i>	Connection-Mode Network Service (CMNS) service remote host MAC address entered as three hexadecimal numbers of four digits separated by a period, (0000.fc08.12ab, for example) or the NULL string if not received on a CMNS service.	X	—	X	—
no-reset	Suppress a PVC Reset packet at session startup.	X	—	X	—

Table 41 **Substitute Connection Parameter Keywords (continued)**

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
packetsize <i>size</i>	X.25 maximum data packet sizes to request, entered as two numbers from the following choices: 16, 32, 64, 128, 256, 512, 1024, 2048, 4096.	X	—	X	—
pid <i>byte-string</i>	PID string specified in ASCII or hexadecimal. A hexadecimal PID must be prefixed by "0x." For example, 0x01000000 is the standard PAD PID. Although it is available for specifying a nonstandard Call PID, this parameter is not restricted to the common PID length and can be used to specify the entire user data field.	X	—	X	—
printer <i>flag</i>	Printer access mode. Flag specifying that the outgoing connection should be brought up before the incoming connection is confirmed. Use one of the following characters to specify printer mode: Y , y , 1–9 , T , t . An unsuccessful outgoing connection attempt results in the incoming connection to the ruleset being refused, rather than being accepted and then closed, which is the default behavior. Note that using this keyword will force the ruleset quiet keyword to be applied to the translation.	X	—	—	X
profile <i>name</i>	Named PAD profile to use.	X	—	X	—
pvc <i>circuit-number</i>	Permanent virtual circuit (PVC) entered as a number from 1 to 4095, or the null string if not a PVC.	—	—	X	—
reverse	Request reverse charging.	—	—	X	—
reversed <i>flag</i>	Flag to indicate whether a reverse charged Call is permitted. This flag applies to a switched virtual circuit (SVC) and is entered as a single character, Y or N , for yes or no.	X	—	—	—

Table 41 **Substitute Connection Parameter Keywords (continued)**

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
rotor	Modifies the behavior of the host-name keyword by allowing one of the IP addresses defined by the ip host configuration command to be chosen randomly. If one address fails, another will be tried until a connection is made or all address choices are exhausted.	—	X	—	—
source-addr address	Source X.121 address.	X	—	X	X
source-addr-ext address	NSAP source address extension.	X	—	X	—
source-ifc type number	Interface from which to take the source IP address, entered using standard Cisco IOS interface designations: Loopback0, for example.	—	X	X	—
stream flag	Flag that specifies whether Telnet negotiation should be sent or accepted, entered as one of the following characters to specify stream mode: Y, y, 1–9, T, t .	—	X	—	X
swap flag	X.29 role reversal. Flag that indicates the PAD connection should not initiate X.29 commands when first connected. Use one of the following characters to swap behavior: Y, y, 1–9, T, t . This parameter enables incoming and outgoing PAD connections to be swapped so that a protocol translation is treated like a PAD when it accepts a call. By default, the protocol translation functions like a PAD for calls that it initiates, and like an X.25 host for calls it accepts.	X	—	X	—
use-map map	Use the map defined for PAD service.	—	—	X	—
window size size	X.25 window sizes to request, entered as two numbers in a range from 1 to 127.	X	—	X	—

Table 41 **Substitute Connection Parameter Keywords (continued)**

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
xot-dest-addr <i>address</i>	Destination IP address of an X.25 over TCP (XOT) service entered in standard IP address dotted decimal notation (10.0.0.127, for example) or the NULL string if not received on an XOT service.	X	—	X	—
xot-source-addr <i>address</i>	Source IP address of an XOT service entered in standard IP address dotted decimal notation (10.0.0.127, for example) or the NULL string if not received on an XOT service.	X	—	—	—

Examples

The following example shows how to build a translation ruleset template by starting with a match connection test, specifying protocol translation options, and setting specific parameters for incoming Telnet connections. The translation ruleset goes on to test and set appropriate parameters for incoming PAD connections, and to construct an SVC source address from Telnet information starting with the source IP address expressed using regular expression characters that allow for subsequent substitution in its last two fields. The translation ruleset is completed by adding in elements extracted from the Telnet destination port; the rewrite pattern is taken from the current value of PAD source address. Note use of the backslash character to construct the test ... set and substitute ... into statements.

```
translate ruleset customer-case-1 from telnet to pad
! Match an incoming Telnet attempt destined for IP addresses starting
! with 172.18., and a 5-digit port starting with the numbers 120 through 127.
match dest-addr ^172\.18\.* dest-port ^12[0-7]..$
! Once the correct network is matched, specify that this ruleset is limited
! to ten concurrent users and requires a login exchange.
options max-users 10 login
! Set Telnet options:
set telnet printer Y telnet binary Y
! Set PAD options:
set pad profile cust-profile-one
! Test conditional parameters and make appropriate settings:
test telnet dest-addr ^172\.18\.0\.* telnet dest-port ^10.00 \
  set pad pvc 1 telnet binary T
! Construct an SVC source address from the Telnet source information;
! start with the source IP address in the form 172.18.###, allowing
! for substitutions in the last two fields:
substitute telnet source-addr ^172\.18\.(.)\.(.)\
  into pad source-addr 98\1\2\1
! Now add in an extract from the Telnet destination port,
! where the rewrite pattern is taken from the current value of the PAD
! source address:
substitute telnet dest-port ^.(...) into pad source-addr
```

Related Commands

Command	Description
description (ruleset)	Adds a description about a translation ruleset.
match (ruleset)	Identifies a connection for processing by the translation ruleset.

Command	Description
options (ruleset)	Specifies protocol translation options in a translation ruleset.
set (ruleset)	Unconditionally sets one or more connection parameters to a fixed value for a translation ruleset.
show translate ruleset	Displays a summary of a specific or of all configured translation rulesets, behavioral parameters, and usage statistic.
skip (ruleset)	Identifies a connection for omission by the translation ruleset.
test (ruleset)	Tests parameter values in a translation ruleset using regular expressions.
test translate	Displays a trace of protocol translation behavior for a connection attempt.
translate ruleset	Defines a unique name for a translation ruleset, specifies translated protocols, and enters translate ruleset configuration mode.
x25 pvc translate ruleset	Configures PVCs that are valid for protocol translation ruleset handling.

telnet

To log in to a host that supports Telnet, use the **telnet** command in user EXEC or privileged EXEC mode.

telnet *host* [*port*] [*keyword*]

Syntax Description

<i>host</i>	A hostname or an IP address.
<i>port</i>	(Optional) A decimal TCP port number, or port name; the default is the Telnet router port (decimal 23) on the host.
<i>keyword</i>	(Optional) One of the keywords listed in Table 42 .

Command Modes

User EXEC
Privileged EXEC

Command History

Release	Modification
10.0	This command was introduced.
12.0(21)ST	The /ipv4 and /ipv6 keywords were added.
12.1	The /quiet keyword was added.
12.2(2)T	The /ipv4 and /ipv6 keywords were added.
12.0(22)S	This command was integrated into Cisco IOS Release 12.0(22)S.
12.2(14)S	This command was integrated into Cisco IOS Release 12.2(14)S.
12.2(28)SB	This command was integrated into Cisco IOS Release 12.2(28)SB.
12.2(25)SG	This command was integrated into Cisco IOS Release 12.2(25)SG.
12.2(33)SRA	This command was integrated into Cisco IOS Release 12.2(33)SRA.
12.2(33)SXH	This command was integrated into Cisco IOS Release 12.2(33)SXH.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

[Table 42](#) lists the optional **telnet** command keywords.

Table 42 *telnet Keyword Options*

Option	Description
/debug	Enables Telnet debugging mode.
/encrypt kerberos	Enables an encrypted Telnet session. This keyword is available only if you have the Kerberized Telnet subsystem. If you authenticate using Kerberos Credentials, the use of this keyword initiates an encryption negotiation with the remote server. If the encryption negotiation fails, the Telnet connection will be reset. If the encryption negotiation is successful, the Telnet connection will be established, and the Telnet session will continue in encrypted mode (all Telnet traffic for the session will be encrypted).
/ipv4	Specifies version 4 of the IP protocol. If a version of the IP protocol is not specified in a network that supports both the IPv4 and IPv6 protocol stacks, IPv6 is attempted first and is followed by IPv4.
/ipv6	Specifies version 6 of the IP protocol. If a version of the IP protocol is not specified in a network that supports both the IPv4 and IPv6 protocol stacks, IPv6 is attempted first and is followed by IPv4.
/line	Enables Telnet line mode. In this mode, the Cisco IOS software sends no data to the host until you press the Enter key. You can edit the line using the standard Cisco IOS software command-editing characters. The /line keyword is a local switch; the remote router is not notified of the mode change.
/noecho	Disables local echo.
/quiet	Prevents onscreen display of all messages from the Cisco IOS software.
/route: path	Specifies loose source routing. The <i>path</i> argument is a list of hostnames or IP addresses that specify network nodes and ends with the final destination.
/source-interface	Specifies the source interface.
/stream	Turns on <i>stream</i> processing, which enables a raw TCP stream with no Telnet control sequences. A stream connection does not process Telnet options and can be appropriate for connections to ports running UNIX-to-UNIX Copy Program (UUCP) and other non-Telnet protocols.
<i>port-number</i>	Port number.
bgp	Border Gateway Protocol.
chargen	Character generator.
cmd rcmd	Remote commands.
daytime	Daytime.
discard	Discard.
domain	Domain Name Service.
echo	Echo.
exec	EXEC.
finger	Finger.
ftp	File Transfer Protocol.
ftp-data	FTP data connections (used infrequently).
gopher	Gopher.

Table 42 *telnet Keyword Options (continued)*

Option	Description
hostname	Hostname server.
ident	Ident Protocol.
irc	Internet Relay Chat.
klogin	Kerberos login.
kshell	Kerberos shell.
login	Login (rlogin).
lpd	Printer service.
nntp	Network News Transport Protocol.
pim-auto-rp	Protocol Independent Multicast (PIM) auto-rendezvous point (RP).
node	Connect to a specific Local-Area Transport (LAT) node.
pop2	Post Office Protocol v2.
pop3	Post Office Protocol v3.
port	Destination local-area transport (LAT) port name.
smtp	Simple Mail Transfer Protocol.
sunrpc	Sun Remote Procedure Call.
syslog	Syslog.
tacacs	Specifies TACACS security.
talk	Talk (517).
telnet	Telnet (23).
time	Time (37).
uucp	UNIX-to-UNIX Copy Program (540).
whois	Nickname (43).
www	World Wide Web (HTTP, 80).

With the Cisco IOS implementation of TCP/IP, you are not required to enter the **connect** or **telnet** command to establish a terminal connection. You can enter only the learned hostname—as long as the following conditions are met:

- The hostname is different from a command word for the router.
- The preferred transport protocol is set to **telnet**.

To display a list of the available hosts, use the **show hosts** command. To display the status of all TCP connections, use the **show tcp** command.

The Cisco IOS software assigns a logical name to each connection, and several commands use these names to identify connections. The logical name is the same as the hostname, unless that name is already in use, or you change the connection name with the **name-connection EXEC** command. If the name is already in use, the Cisco IOS software assigns a null name to the connection.

The Telnet software supports special Telnet commands in the form of Telnet sequences that map generic terminal control functions to operating system-specific functions. To issue a special Telnet command, enter the escape sequence and then a command character. The default escape sequence is Ctrl-^ (press

and hold the Ctrl and Shift keys and the 6 key). You can enter the command character as you hold down Ctrl or with Ctrl released; you can use either uppercase or lowercase letters. Table 43 lists the special Telnet escape sequences.

Table 43 *Special Telnet Escape Sequences*

Escape Sequence ¹	Purpose
Ctrl-^ b	Break
Ctrl-^ c	Interrupt Process (IP and IPv6)
Ctrl-^ h	Erase Character (EC)
Ctrl-^ o	Abort Output (AO)
Ctrl-^ t	Are You There? (AYT)
Ctrl-^ u	Erase Line (EL)

1. The caret (^) symbol refers to Shift-6 on your keyboard.

At any time during an active Telnet session, you can list the Telnet commands by pressing the escape sequence keys followed by a question mark at the system prompt:

Ctrl-^ ?

A sample of this list follows. In this sample output, the first caret (^) symbol represents the Ctrl key, and the second caret represents Shift-6 on your keyboard:

```
router> ^^?  
[Special telnet escape help]  
^^B  sends telnet BREAK  
^^C  sends telnet IP  
^^H  sends telnet EC  
^^O  sends telnet AO  
^^T  sends telnet AYT  
^^U  sends telnet EL
```

You can have several concurrent Telnet sessions open and switch among them. To open a subsequent session, first suspend the current connection by pressing the escape sequence (Ctrl-Shift-6 then x [Ctrl^x] by default) to return to the system command prompt. Then open a new connection with the **telnet** command.

To terminate an active Telnet session, enter any of the following commands at the prompt of the device to which you are connecting:

- **close**
- **disconnect**
- **exit**
- **logout**
- **quit**

Examples

The following example establishes an encrypted Telnet session from a router to a remote host named host1:

```
router> telnet host1 /encrypt kerberos
```

The following example routes packets from the source system *host1* to *example.com*, then to *10.1.0.11*, and finally back to *host1*:

```
router> telnet host1 /route:example.com 10.1.0.11 host1
```

The following example connects to a host with the logical name *host1*:

```
router> host1
```

The following example suppresses all onscreen messages from the Cisco IOS software during login and logout:

```
router> telnet host2 /quiet
```

The following example shows the limited messages displayed when connection is made using the optional **/quiet** keyword:

```
login:User2
Password:
      Welcome to OpenVMS VAX version V6.1 on node CRAW
      Last interactive login on Tuesday, 15-DEC-1998 11:01
      Last non-interactive login on Sunday,  3-JAN-1999 22:32

Server3)logout
      User2          logged out at  16-FEB-2000 09:38:27.85
```

Related Commands

Command	Description
connect	Logs in to a host that supports Telnet, rlogin, or LAT.
kerberos clients mandatory	Causes the rsh , rcp , rlogin , and telnet commands to fail if they cannot negotiate the Kerberos Protocol with the remote server.
name connection	Assigns a logical name to a connection.
rlogin	Logs in to a UNIX host using rlogin.
show hosts	Displays the default domain name, the style of name lookup service, a list of name server hosts, and the cached list of hostnames and addresses.
show tcp	Displays the status of TCP connections.

telnet break-on-ip

To cause the system to generate a hardware BREAK signal on the EIA/TIA-232 line that is associated with a reverse Telnet connection when a Telnet Interrupt-Process command is received on that connection, use the **telnet break-on-ip** command in line configuration mode.

telnet break-on-ip

Syntax Description This command has no arguments or keywords.

Defaults No hardware BREAK signal is generated when an Interrupt-Process command is received.

Command Modes Line configuration

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines This command causes the system to generate a hardware BREAK signal on the EIA/TIA-232 line that is associated with a reverse Telnet connection. It is useful when a Telnet Interrupt-Process command is received on that connection because it can control the translation of Telnet Interrupt-Process commands into X.25 BREAK indications. It is also a useful workaround in the following situations:

- Several user Telnet programs send an Interrupt-Process command, but cannot send a Telnet BREAK signal.
- Some Telnet programs implement a BREAK signal that sends an Interrupt-Process command.
- Some EIA/TIA-232 hardware devices use a hardware BREAK signal for various purposes.

A hardware BREAK signal is generated when a Telnet BREAK command is received.

Examples In the following example, line 5 is configured with the **telnet break-on-ip** command. The location text notes that this line is the location of the high-speed modem. The **telnet transparent** command sets end-of-line handling.

```
line 5
location high-speed modem
telnet transparent
telnet break-on-ip
```

Related Commands	Command	Description
	connect	Logs in to a host that supports Telnet, rlogin, or LAT.
	telnet	Logs in to a host that supports Telnet.
	telnet transparent	Configures the Cisco IOS software to send a CARRIAGE RETURN (CR) as a CR followed by a NULL instead of a CR followed by a LINE FEED (LF).
	terminal telnet break-on-ip	Causes the access server to generate a hardware Break signal on the EIA/TIA-232 line, which is associated with a reverse Telnet connection, for the current line and sessions.

telnet refuse-negotiations

To set a line using Telnet to refuse to negotiate full-duplex, remote echo requests on incoming connections, use the **telnet refuse-negotiations** command in line configuration mode. To disable this function, use the **no** form of this command.

telnet refuse-negotiations

no telnet refuse-negotiations

Syntax Description This command has no arguments or keywords.

Defaults No default behavior or values.

Command Modes Line configuration

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines Use this command on reverse Telnet connections to allow the Cisco IOS software to refuse full-duplex, remote echo option connection requests from the other end. This command suppresses negotiation of the Telnet Remote Echo and Suppress Go Ahead options.

This command does not apply to protocol translation configurations. It is intended for applications in which the router is functioning as a terminal server to allow terminal connections to remote devices through the asynchronous terminal ports of the router. Terminal server connections are those where the user types a command similar to the following to access network resources:

```
telnet access-server 2005
```

where access-server is the host name of the Cisco router functioning as a terminal server, and 2005 is the port number on the router to which the remote terminal is connected.

Examples The following example shows how to set line 5 to refuse full-duplex, remote echo requests:

```
line 5
telnet refuse-negotiations
```

Related Commands	Command	Description
	connect	Logs in to a host that supports Telnet, rlogin, or LAT.

Command	Description
telnet	Logs in to a host that supports Telnet.
terminal telnet refuse-negotiations	Sets the current line to refuse to negotiate full-duplex, remote echo options on incoming connections for current sessions.

telnet speed

To allow negotiation of the transmission speed of the line to a connected device, use the **telnet speed** command in line configuration mode. To disable this function, use the **no** form of this command.

telnet speed *default-speed maximum-speed*

no telnet speed

Syntax Description	<i>default-speed</i>	Line speed, in bits per second, that the Cisco IOS software will use if the device on the other end of the connection has not specified a speed.
	<i>maximum-speed</i>	Maximum speed, in bits per second, that the device on the port will use.

Defaults	No default behavior or values.
----------	--------------------------------

Command Modes	Line configuration
---------------	--------------------

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines	Negotiates speeds on reverse Telnet lines. You can match line speeds on remote systems in reverse Telnet, on host machines hooked up to a router used to access the network, or on a group of console lines hooked up to the router, when disparate line speeds are in use at the local and remote ends of the connection. Line speed negotiation adheres to the Remote Flow Control option defined in RFC 1080.
------------------	--

Examples	The following example allows a router to negotiate a bit rate on the line using the Telnet option. If no speed is negotiated, the line will run at 2400 bits per second (bps). If the remote host requests a speed of greater than 9600 bps, then 9600 will be used.
----------	--

```
line 5
 telnet speed 2400 9600
```

Related Commands	Command	Description
	connect	Logs in to a host that supports Telnet, rlogin, or LAT.
	telnet	Logs in to a host that supports Telnet.
	terminal telnet speed	Allows the access server to negotiate transmission speed for the current line and session.

telnet sync-on-break

To configure the Cisco IOS software to cause an incoming connection to send a Telnet Synchronize signal when it receives a Telnet BREAK signal, use the **telnet sync-on-break** command in line configuration mode. To disable this function, use the **no** form of this command.

telnet sync-on-break

no telnet sync-on-break

Syntax Description This command has no arguments or keywords.

Defaults No default behavior or values.

Command Modes Line configuration

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines This command causes a reverse Telnet line to send a Telnet Synchronize signal when it receives a Telnet BREAK signal. This option is used very rarely to ensure the ordering of BREAK reception with respect to data characters sent after the BREAK.

Examples The following example configures the AUX line with the **telnet sync-on-break** command:

```
line aux 0
telnet sync-on-break
```

Related Commands	Command	Description
	connect	Logs in to a host that supports Telnet, rlogin, or LAT.
	telnet	Logs in to a host that supports Telnet.
	terminal telnet sync-on-break	Causes the access server to send a Telnet Synchronize signal when it receives a Telnet Break signal on the current line and session.

telnet transparent

To configure the Cisco IOS software to send a CARRIAGE RETURN (CR) as a CR followed by a NULL instead of a CR followed by a LINE FEED (LF), use the **telnet transparent** command in line configuration mode. To return to the default setting, use the **no** form of this command.

telnet transparent

no telnet transparent

Syntax Description This command has no arguments or keywords.

Defaults CARRIAGE RETURN followed by a LINE FEED.

Command Modes Line configuration

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines This command is useful for coping with different interpretations of end-of-line handling in the Telnet protocol specification.

Examples The following example causes the Cisco IOS software, when sending a CR, to send a CR followed by a NULL character:

```
line 7
 telnet transparent
```

Related Commands	Command	Description
	connect	Logs in to a host that supports Telnet, rlogin, or LAT.
	telnet	Logs in to a host that supports Telnet.
	terminal telnet transparent	Causes the current terminal line to send a Return character (CR) as a CR followed by a NULL instead of a CR followed by a LINE FEED (LF) for the current session.

terminal lat out-group

To temporarily define the list of services to which you or another user can connect, use the **terminal lat out-group** command in user EXEC mode.

terminal lat out-group *group-number* [*start-end*] {**disabled** | **enabled**}

Syntax Description

<i>group-number</i>	Number of the group that has access to the system through the specified line. This number is identified by the system administrator. You also can specify a range of group numbers. Separate the beginning and end of the range with a hyphen.
[<i>start-end</i>]	(Optional) You can specify a range of group numbers for the <i>group-number</i> argument. Separate the beginning and end of the range with a hyphen.
disabled	Incrementally removes specified groups from a list.
enabled	Incrementally adds specified groups to a list.

Command Modes

User EXEC

Command History

Release	Modification
11.2	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

To temporarily define the list of services to which you or another user can connect, you define the group code lists used for connections from specific lines. You limit the connection choices for an individual line by defining the group code lists for an outgoing connection. When a user initiates a connection with a local-area transport (LAT) host, the line must share a common group number with the remote LAT host before a connection can be made.

The group code range entered in this command must fall within the group code range already configured for the line.

Examples

The following example defines a group code list for the outgoing group 4:

```
Router> terminal lat out-group 4, 6-189
```

Related Commands

Command	Description
connect	Logs in to a host that supports Telnet, rlogin, or LAT.
l2f ignore-mid-sequence	Specifies a connection to a particular LAT node that offers LAT services.

terminal lat remote-modification

To set a line running local-area transport (LAT) to be remotely modifiable, use the **terminal lat remote-modification** command in privileged EXEC mode.

terminal lat remote-modification

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History	Release	Modification
	11.2	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Examples The following example sets line 6 to be remotely modifiable:

```
Router# terminal lat remote-modification 6
```

Related Commands	Command	Description
	connect	Logs in to a host that supports Telnet, rlogin, or LAT.
	l2f ignore-mid-sequence	Specifies a connection to a particular LAT node that offers LAT services.

terminal transport preferred

To specify the preferred protocol to use for the current session when a command does not specify one, use the **terminal transport preferred** command in EXEC mode.

terminal transport preferred {all | lat | mop | nasi | none | pad | rlogin | telnet | v120}

Syntax Description

all	Specifies all recognized protocols.
lat	Specifies the local-area transport (LAT) protocol.
mop	Specifies the Maintenance Operation Protocol (MOP).
nasi	Specifies the NetWare Asynchronous Services Interface (NASI) protocol.
none	Prevents any protocol selection on the line. The router default is that any unrecognized command is a host name. If the preferred protocol is set to none, the router will not attempt any connections if the command is not recognized.
pad	Specifies X.3 packet assembler/disassembler (PAD), which is used most often to connect a server product to X.25 hosts.
rlogin	Specifies UNIX rlogin.
telnet	Specifies the TCP/IP Telnet protocol.
v120	Selects the V.120 protocol for incoming asynchronous connections over ISDN .

Defaults

lat (if LAT is not supported, **telnet**)

Command Modes

EXEC

Command History

Release	Modification
10.0	This command first appeared in a release prior to Cisco IOS Release 10.0.
11.2	The following keywords were added: <ul style="list-style-type: none"> • all • lat • mop • nasi • pad • preferred • rlogin • v120
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Examples

The following example configures the console so that it does not connect when an unrecognized command is entered:

```
Router# terminal transport preferred none
```

Related Commands

Command	Description
transport preferred	Specifies the transport protocol that the Cisco IOS software uses if the user does not specify one when initiating a connection.

test (ruleset)

To test parameter values in a translation ruleset using regular expressions, use the **test** command in translate ruleset configuration mode. To change or remove the specification, use one of the two **no** forms of this command.

```
test [#line-number] {pad | telnet} variable-parameter reg-exp-match [{pad | telnet}  
variable-parameter reg-exp-match [...]] set {pad | telnet} variable-parameter
```

```
no test {pad | telnet} variable-parameter reg-exp-match [{pad | telnet} variable-parameter  
reg-exp-match [...]] set {pad | telnet} variable-parameter
```

```
no test #line-number [...]
```

Syntax Description		
#line-number	(Optional) The line in the translation ruleset to test for substitution. The # character must be entered.	
{pad telnet}	Identifies the incoming or outgoing protocol and controls which parameters are available in the next element of this command.	
variable-parameter	A parameter that varies depending upon the protocol selected, either pad or telnet , and its role, either incoming or outgoing. Protocol parameters are available to modify the incoming or outgoing connection behavior during protocol translation session setup. Up to six parameters can be entered on one command line. Table 44 indicates supported incoming and outgoing PAD and Telnet connection parameter keywords for the test command with an X.	
reg-exp-match	A standard Cisco regular expression match specification.	
set	Conditionally sets the specified protocol parameters to a fixed value.	
[...]	(Optional) Specifies that multiple entries can be made as follows: <ul style="list-style-type: none"> Up to six test statements can be written on one command line. Multiple line numbers can be specified using the second no form of this command. 	

Defaults	No default behavior or values
-----------------	-------------------------------

Command Modes	Translate ruleset configuration
----------------------	---------------------------------

Command History	Release	Modification
	12.3(8)T	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

Up to six test statements can be entered on one command line. The ellipses in the format shown above means multiple test statements can be specified in a translation ruleset template.

The **test** command is useful for working with conditional parameters.

A test ... set ... statement conditionally sets one or more connection parameters to a given value, but only after a successful comparison of one or more connection parameters against a regular expression.

Cisco regular expressions are described in Appendix A, “Regular Expressions,” in the *Cisco IOS Terminal Services Configuration Guide*.

When you use the first **no** form of this command, specify the full set of parameters and expressions in the command to be removed. The second **no** form must specify the correct **test** command and line number within the translation ruleset template.

Table 44 Test Connection Parameter Keywords

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
authorize-method <i>ASCII-string</i>	Connection authorization method to use that must match one of a fixed set of values.	X	—	—	X
authorize-tag <i>ASCII-string</i>	Connection authorization identity to supply, entered as an ASCII string.	X	—	—	X
binary flag	Flag that specifies whether 8-bit binary data is required, entered as one of the following characters to specify binary mode: Y, y, 1–9, T, t .	—	X	—	X
cud <i>ASCII-string</i>	Call user data (CUD) that occurs after the protocol identification (PID). For X.29 service, this is the optional, user-specified text included in the command to place a call.	X	—	X	—
dest-addr <i>address</i>	Destination IP (Telnet) or X.121 (PAD) address.	X	X	X	X
dest-addr-ext <i>address</i>	Network service access point (NSAP) destination address extension.	X	—	X	—
dest-port <i>port</i>	Destination port entered as a decimal number from one to five digits long.	—	—	—	X
dldci <i>number</i>	Frame Relay data-link connection identifier (DLCI) of an Annex G service entered as a number from one to seven digits in length, although a size of two to four digits is more likely, or the NULL string if not received on an Annex G service.	X	—	X	—

Table 44 Test Connection Parameter Keywords (continued)

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
eor <i>specification</i>	A character set defining the End-of-Record (EOR) string for the protocol translation session, entered as an ASCII or hexadecimal specification from one to four bytes in length, aaa or 0x19, as examples.	—	X	—	X
eor-insert <i>flag</i>	Flag specifying that the EOR character set should be inserted for PAD data being forwarded to a Telnet session, and entered as a single character. Use one of the following characters to specify EOR insertion: Y , y , 1–9 , T , t .	—	X	—	X
hostname <i>address</i>	Destination host name for Domain Name System (DNS) resolution entered as an ASCII string.	—	X	—	—
idle <i>seconds</i>	Number of seconds the PAD connection can be idle before being cleared.	X	—	X	—
interface <i>type number</i>	Interface to be used for the circuit, entered using standard Cisco IOS interface designations; Serial1/0:1, for example.	X	—	X	—
keepalive-period <i>seconds</i>	A number that indicates the number of seconds between TCP keepalives for the X.25 over TCP (XOT) connection. TCP keepalive information applies only when a ruleset is configured to match an XOT destination address. Example: match dest-addr ^5555.\$ xot-dest-addr 5.5.5.2	X	—	X	—
keepalive-tries <i>number</i>	A number that indicates the number of TCP keepalives to send before the XOT connection is declared dead. TCP keepalive information applies only when a ruleset is configured to match an XOT destination address. Example: match dest-addr ^5555.\$ xot-dest-addr 5.5.5.2	X	—	X	—

Table 44 **Test Connection Parameter Keywords (continued)**

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
local flag	Flag specifying that Telnet control sequences should be forwarded, not processed, and entered as a single character. Use one of the following characters to specify local mode: Y , y , 1–9 , T , t .	—	X	—	X
mac address	Connection-Mode Network Service (CMNS) service remote host MAC address entered as three hexadecimal numbers of four digits separated by a period, (0000.fc08.12ab, for example) or the NULL string if not received on a CMNS service.	X	—	X	—
no-reset	Suppress a PVC Reset packet at session startup.	X	—	X	—
packetsize size	X.25 maximum data packet sizes to request, entered as two numbers from the following choices: 16, 32, 64, 128, 256, 512, 1024, 2048, 4096.	X	—	X	—
pid byte-string	PID string specified in ASCII or hexadecimal. A hexadecimal PID must be prefixed by "0x." For example, 0x01000000 is the standard PAD PID. Although it is available for specifying a nonstandard Call PID, this parameter is not restricted to the common PID length and can be used to specify the entire user data field.	X	—	X	—

Table 44 Test Connection Parameter Keywords (continued)

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
printer flag	Printer access mode. Flag specifying that the outgoing connection should be brought up before the incoming connection is confirmed. Use one of the following characters to specify printer mode: Y , y , 1–9 , T , t . An unsuccessful outgoing connection attempt results in the incoming connection to the ruleset being refused, rather than being accepted and then closed, which is the default behavior. Note that using this keyword will force the ruleset quiet keyword to be applied to the translation.	X	—	—	X
profile name	Named PAD profile to use.	X	—	X	—
pvc circuit-number	Permanent virtual circuit (PVC) entered as a number from 1 to 4095, or the null string if not a PVC.	—	—	X	—
reverse	Request reverse charging.	—	—	X	—
reversed flag	Flag to indicate whether a reverse charged Call is permitted. This flag applies to a switched virtual circuit (SVC) and is entered as a single character, Y or N , for yes or no.	X	—	—	—
rotor	Modifies the behavior of the host-name keyword by allowing one of the IP addresses defined by the ip host configuration command to be chosen randomly. If one address fails, another will be tried until a connection is made or all address choices are exhausted.	—	X	—	—
source-addr address	Source X.121 address.	X	—	X	X
source-addr-ext address	NSAP source address extension.	X	—	X	—
source-ifc type number	Interface from which to take the source IP address, entered using standard Cisco IOS interface designations: Loopback0, for example.	—	X	X	—

Table 44 **Test Connection Parameter Keywords (continued)**

Parameter	Description	Incoming PAD	Outgoing Telnet	Outgoing PAD	Incoming Telnet
stream <i>flag</i>	Flag that specifies whether Telnet negotiation should be sent or accepted, entered as one of the following characters to specify stream mode: Y , y , 1–9 , T , t .	—	X	—	X
swap <i>flag</i>	X.29 role reversal. Flag that indicates the PAD connection should not initiate X.29 commands when first connected. Use one of the following characters to swap behavior: Y , y , 1–9 , T , t . This parameter enables incoming and outgoing PAD connections to be swapped so that a protocol translation is treated like a PAD when it accepts a call. By default, the protocol translation functions like a PAD for calls that it initiates, and like an X.25 host for calls it accepts.	X	—	X	—
use-map <i>map</i>	Use the map defined for PAD service.	—	—	X	—
window size <i>size</i>	X.25 window sizes to request, entered as two numbers in a range from 1 to 127.	X	—	X	—
xot-dest-addr <i>address</i>	Destination IP address of an X.25 over TCP (XOT) service entered in standard IP address dotted decimal notation (10.0.0.127, for example) or the NULL string if not received on an XOT service.	X	—	X	—
xot-source-addr <i>address</i>	Source IP address of an XOT service entered in standard IP address dotted decimal notation (10.0.0.127, for example) or the NULL string if not received on an XOT service.	X	—	—	—

Examples

The following example shows how to integrate a test into a translation ruleset template. The translation ruleset begins with the required match connection test, specifies protocol translation options, and sets specific parameters for incoming Telnet connections. The translation ruleset goes on to test and set appropriate parameters for incoming PAD connections, and to construct an SVC source address from Telnet information, starting with the source IP address. The translation ruleset is completed by adding

in elements extracted from the Telnet destination port; the rewrite pattern is taken from the current value of PAD source address. The backslash character is used to construct the test ... set and substitute ... into statements.

```
translate ruleset customer-case-1 from telnet to pad
! Match an incoming Telnet attempt destined for IP addresses starting
! with 172.18., and a 5-digit port starting with the numbers 120 through 127.
match dest-addr ^172\18\.* dest-port ^12[0-7]..$
! Once the correct network is matched, specify that this ruleset is limited
! to ten concurrent users and requires a login exchange.
options max-users 10 login
! Set Telnet options:
set telnet printer Y telnet binary Y
! Set PAD options:
set pad profile cust-profile-one
! Test conditional parameters and make appropriate settings:
test telnet dest-addr ^172\18\0\.* telnet dest-port ^10.00 \
  set pad pvc 1 telnet binary T
! Construct an SVC source address from the Telnet source information;
! start with the source IP address in the form 172.18.#.##, allowing
! for a following substitute of one field:
substitute telnet source-addr ^172\18\(\.\)\(\.\)\
  into pad source-addr 98\1\2\1
! Now add in an extract from the Telnet destination port,
! where the rewrite pattern is taken from the current value of the PAD
! source address:
substitute telnet dest-port ^(\.\.\.). into pad source-addr
```

Related Commands

Command	Description
description (ruleset)	Adds a description about a translation ruleset.
match (ruleset)	Identifies a connection for processing by the translation ruleset.
options (ruleset)	Specifies protocol translation options in a translation ruleset.
set (ruleset)	Unconditionally sets one or more connection parameters to a fixed value for a translation ruleset.
show translate ruleset	Displays a summary of a specific or of all configured translation rulesets, behavioral parameters, and usage statistic.
skip (ruleset)	Identifies a connection for omission by the translation ruleset.
substitute (ruleset)	Matches an available protocol and substitutes another in a translation ruleset.
test translate	Displays a trace of protocol translation behavior for a connection attempt.
translate ruleset	Defines a unique name for a translation ruleset, specifies translated protocols, and enters translate ruleset configuration mode.
x25 pvc translate ruleset	Configures PVCs that are valid for protocol translation ruleset handling.

test translate

To display a trace of protocol translation behavior for a connection attempt, use the **test translate** command in user or privileged EXEC mode.

test translate {**pad** | **telnet** | **parameter** *parameter*} [**detail**]

Syntax Description	
pad	Tests a trace of a packet assembler/disassembler (PAD) connection attempt.
telnet	Tests a trace of a Telnet connection attempt.
parameter <i>parameter</i>	Tests one of the following translation ruleset parameters in interactive mode: <ul style="list-style-type: none"> • boolean—Boolean expression parameter. True if at least one character is present and the first character is one of Y, y, 1–9, T, or t; otherwise, false. • hexstring—Hex string parameter. A standard hexadecimal string representation starting with 0x, such as 0x14000F0000. • integer—Integer parameter. A standard decimal number from 0 to 65535. • interface—Two-integer parameter. A character string, possibly with embedded white space, identifying an existing interface, such as Serial 1, on the router. • ip—IP address parameter. A standard four-byte dotted decimal IP address such as 10.0.0.127. • mac—MAC address parameter. A standard set of three 4-digit hexadecimal words in dotted MAC address form such as 0001.00a8.1f2c. • nsap—Network service access point (NSAP) address parameter. • string—String parameter. A null-terminated ASCII string. • two-integer—Two-integer parameter. • x121—X.121 address parameter. A standard X.121 address from 1 to 15 decimal digits long.
detail	(Optional) Provides a more detailed test report.

Defaults No default behavior or values

Command Modes User EXEC
Privileged EXEC

Command History

Release	Modification
12.3(8)T	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

This command will traverse the set of protocol translation configurations in the order they are listed in the translation ruleset, and report all events that take place. The **detail** keyword shows each line being evaluated and detailed translation test information.

The translation ruleset operations to test, set, and substitute protocol parameter values use strings, and the ruleset generates the set of protocol parameter values as a set of strings. When entered with the optional **parameter** keyword and parameter type, the **test translate** command becomes interactive and queries for incoming connection parameter values. For a given protocol parameter there may be additional validation tests that apply. If the application of a translation ruleset results in an invalid value for a parameter (whether a violation of the basic type rule or the more specific validation tests for the parameter), the protocol translation operation will fail with an informative message.

Configuration errors are not detected when translation ruleset commands are entered. They are tested when the connection is attempted or when you use the **test (ruleset)** command. In the following example, the **set** translation ruleset command unconditionally sets the PAD's profile name to a profile that does not exist in the configuration:

```
set pad profile Bldg-1-5ess
```

This command would be accepted at the command-line interpreter, but not tested until a connection attempt or with the **test translate EXEC** command. When the error is detected, the following messages display:

```
*%PT-3-PARAMRESULTERR: PT ruleset test protocol pad parameter profile parse error:
Bldg-1-5ess.
-Process= "PAD InCall", ipl= 3, pid= 94
*PAD: ruleset translation not generated Cause: 9 Diag: 0
```

Examples

The following example shows a sample of the self-explanatory report from the **test translate** command:

```
Router# test translate pad

dest-addr (X.121 address): 55555
Ruleset A match/skip line 1 compared: match
Ruleset A; pad parameter read:
  pad/dest-addr: 55555
Parameters set:
  telnet/dest-addr: 10.2.2.1

Translate From: PAD 55555
  To:   Telnet 10.2.2.1 Port 23
  Ruleset A
  0/1 users active
```

The following is a sample of a detailed report:

```
Router# test translate pad detail

PAD translate command 1 PVC match not required
```

```

dest-addr (X.121 address): 55555
Normalized PAD dest-addr: 55555
PAD translate command 1 skipped, destination address 55555 doesn't match 12345
PAD translate command 2 PVC match not required
PAD translate command 2 skipped, destination address 55555 doesn't match 55551
No PAD translate command matched
(Testing translate command A ...)
Ruleset A match/skip line 1 compared: match
  (processing set/test/substitute line 1)
  (set/test/subst line 1, item 1, parameter dest-addr set to 10.2.2.1)
  (parsed telnet parameter dest-addr: 10.2.2.1)
Ruleset A; pad parameter read:
pad/dest-addr: 55555
Parameters set:
telnet/dest-addr: 10.2.2.1
(translation requires 0 bytes variable-sized memory)

Translate From: PAD 55555
To: Telnet 10.2.2.1 Port 23
Ruleset A
0/1 users active

```

The following example tests the **boolean** translate ruleset parameter in interactive mode:

```

Router# test translate parameter boolean

Enter parameter value (boolean): Y

Enter encode buffer size (integer): 10
Encoded into Y
Router#

```

Related Commands

Command	Description
description (ruleset)	Adds a description about a translation ruleset.
match (ruleset)	Identifies a connection for processing by the translation ruleset.
options (ruleset)	Specifies protocol translation options in a translation ruleset.
set (ruleset)	Unconditionally sets one or more connection parameters to a fixed value for a translation ruleset.
show translate ruleset	Displays a summary of a specific or of all configured translation rulesets, behavioral parameters, and usage statistic.
skip (ruleset)	Identifies a connection for omission by the translation ruleset.
substitute (ruleset)	Matches an available protocol and substitutes another in a translation ruleset.
test (ruleset)	Tests parameter values in a translation ruleset using regular expressions.
translate ruleset	Defines a unique name for a translation ruleset, specifies translated protocols, and enters translate ruleset configuration mode.
x25 pvc translate ruleset	Configures PVCs that are valid for protocol translation ruleset handling.

time-out

To specify the Secure Shell (SSH) login timeout interval in seconds for a persistent SSH connection, use the **time-out** command in transport map configuration mode command. To restore the default setting of 120 seconds, use the **no** form of the command.

time-out *timeout-interval*

no time-out

Syntax Description	<i>timeout-interval</i>	Specifies the SSH login timeout interval in seconds.
---------------------------	-------------------------	--

Command Default	The default <i>timeout-interval</i> is 120 seconds.
------------------------	---

Command Modes	Transport map configuration (config-tmap)
----------------------	---

Command History	Release	Modification
	Cisco IOS XE Release 2.1	This command was introduced on the Cisco ASR 1000 Series Routers.

Usage Guidelines	This command is used to specify the SSH timeout interval.
-------------------------	---

Examples	In the following example, a transport map is configured that applies the following settings to any users attempting to access the Management Ethernet port via SSH:
	<ul style="list-style-type: none"> • Users using SSH waits for the IOS process to become active, but enters diagnostic mode if the attempt to access IOS is interrupted. • The RSA keypair name is “sshkeys”. • The connection allows one authentication retry. • The banner “--Welcome to Diagnostic Mode--” appears if diagnostic mode is entered as a result of SSH handling through this transport map. • The banner “--Waiting for IOS Process--” appears if the connection is waiting for the IOS process to be come active.

The transport map is then applied to the interface when the **transport type persistent ssh input** command is entered to enable persistent SSH.

```
Router(config)# transport-map type persistent ssh sshhandler
Router(config-tmap)# connection wait allow interruptable
Router(config-tmap)# rsa keypair-name sshkeys
Router(config-tmap)# authentication-retries 1
Router(config-tmap)# banner diagnostic X
Enter TEXT message. End with the character 'X'.
--Welcome to Diagnostic Mode--
X
```

```
Router(config-tmap)# banner wait X
Enter TEXT message. End with the character 'X'.
--Waiting for IOS Process--
X
Router(config-tmap)# time-out 30
Router(config-tmap)# transport interface gigabitethernet 0
Router(config-tmap)# exit

Router(config)# transport type persistent ssh input sshhandler
```

Related Commands

Command	Description
authentication-retries	Specifies the number of SSH authentication retries before dropping the connection when a persistent SSH transport map is applied to the receiving interface.
banner (transport map)	Creates a banner message that will be seen by users entering diagnostic mode or waiting for the IOS process as a result of the transport map configuration.
connection wait	Specifies how an incoming connection will be handled.
rsa keypair-name	Names the RSA keypair to be used for persistent SSH connections.
transport interface	Applies the transport map settings to the interface.
transport type persistent	Applies an already-configured persistent transport map to an interface.
transport-map type persistent	Creates and names a persistent transport map and enters transport map configuration mode.

tn3270

To begin a TN3270 session, use the **tn3270** command in EXEC mode.

tn3270 *host*

Syntax Description

<i>host</i>	Name or IP address of a specific host on a network that can be reached by the router. The default terminal emulation mode allows access using a VT100 emulation.
-------------	--

Command Modes

EXEC

Command History

Release	Modification
11.1	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

Unlike Telnet and local-area transport (LAT) connections, you *must* enter the **tn3270** command to make a connection to an IBM TN3278 host.

To terminate an active TN3270 session, enter the escape sequence (**Ctrl-Shift-6** then **x** [**Ctrl^x**] by default) and enter the **disconnect** command at the EXEC prompt. Or log off the remote system by issuing the command specific to that system (such as **exit**, **logout**, **quit**, **close**, or **disconnect**).

Examples

The following example establishes a terminal session with an IBM TN3270 host named finance:

```
tn3270 finance
```


tn3270 8bit display

To configure the Cisco IOS software to use the mask set by the **data-character-bits {7 | 8}** command in line configuration mode or the **terminal data-character bits {7 | 8}** EXEC command, use the **tn3270 8bit display** command in line configuration mode. To restore the default 7-bit mask used for TN3270 connections, use the **no** form of this command.

tn3270 8bit display

no tn3270 8bit display

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Line configuration

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines Use the **tn3270-character-map** command to map between extended EBCDIC or extended ASCII characters.

Examples The following example configures the Cisco IOS software to use the mask set by the **data-character-bits** line configuration and EXEC commands on line 5:

```
line 5
tn3270 8bit display
```

Related Commands	Command	Description
	data-character-bits	Sets the number of data bits per character that are interpreted and generated by the Cisco IOS software.
	terminal data-character-bits	Sets the number of data bits per character that are interpreted and generated by the Cisco IOS software for the current line and session.

tn3270 8bit transparent-mode

To configure the Cisco IOS software to use the mask set by the **data-character-bits {7 | 8}** command in line configuration mode or the **terminal data-character bits {7 | 8}** EXEC command, use the **tn3270 8bit transparent-mode** command in line configuration mode. To restore the default 7-bit mask used for TN3270 connections, use the **no** form of this command.

tn3270 8bit transparent-mode

no tn3270 8bit transparent-mode

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Line configuration

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines This command is needed if you are using a file transfer protocol such as Kermit in 8-bit mode or you are using 8-bit graphics, both of which rely on transparent mode.

Examples The following example configures the software to use the mask set by the **data-character-bits** line configuration and EXEC commands on line 5:

```
line 5
tn3270 8bit transparent-mode
```

Related Commands	Command	Description
	data-character-bits	Sets the number of data bits per character that are interpreted and generated by the Cisco IOS software.
	terminal data-character-bits	Sets the number of data bits per character that are interpreted and generated by the Cisco IOS software for the current line and session.

tn3270 character-map

To convert incoming EBCDIC characters into ASCII characters, use the **tn3270 character-map** command in global configuration mode. To restore default character mappings, use the **no** form of this command.

tn3270 character-map *ebcdic-in-hex* *ascii-in-hex*

no tn3270 character-map {**all** | *ebcdic-in-hex*} [*ascii-in-hex*]

Syntax Description	<i>ebcdic-in-hex</i>	Hexadecimal value of an EBCDIC character.
	<i>ascii-in-hex</i>	Hexadecimal value of an ASCII character.
	all	Indicates all character mappings.

Defaults Disabled

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines Use this command to print international characters that are EBCDIC characters not normally printed, including umlauts (¨) and tildes (~). The command first restores default mapping for both EBCDIC and ASCII characters. In the **no** form of the command, the **all** keyword resets all character mappings to Cisco defaults.

[Table 45](#) shows the default character mappings between ASCII and EBCDIC in decimal and hexadecimal format.

To convert outgoing ASCII characters into EBCDIC characters, use the **keymap** command to modify the keymap structure with the tag *ebcdic_xx=string*, where *xx* is a hexadecimal value and *string* is the sequence of characters that send the EBCDIC character.

Table 45 Default ASCII, EBCDIC Character Mappings

Character	ASCII Decimal	ASCII Hexadecimal	EBCDIC Decimal	EBCDIC Hexadecimal
!	33	0x21	90	0x5a
"	34	0x22	127	0x7f
#	35	0x23	123	0x7b
\$	36	0x24	91	0x5b

Table 45 *Default ASCII, EBCDIC Character Mappings (continued)*

Character	ASCII Decimal	ASCII Hexadecimal	EBCDIC Decimal	EBCDIC Hexadecimal
%	37	0x25	108	0x6c
&	38	0x26	80	0x50
,	39	0x27	125	0x7d
(40	0x28	77	0x4d
)	41	0x29	93	0x5d
*	42	0x2a	92	0x5c
+	43	0x2b	78	0x4e
,	44	0x2c	107	0x6b
-	45	0x2d	96	0x60
.	46	0x2e	75	0x4b
/	47	0x2f	97	0x61
0	48	0x30	240	0xf0
1	49	0x31	241	0xf1
2	50	0x32	242	0xf2
3	51	0x33	243	0xf3
4	52	0x34	244	0xf4
5	53	0x35	245	0xf5
6	54	0x36	246	0xf6
7	55	0x37	247	0xf7
8	56	0x38	248	0xf8
9	57	0x39	249	0xf9
:	58	0x3a	122	0x7a
;	59	0x3b	94	0x5e
<	60	0x3c	76	0x4c
=	61	0x3d	126	0x7e
>	62	0x3e	110	0x6e
?	63	0x3f	111	0x6f
@	64	0x40	124	0x7c
A	65	0x41	193	0xc1
B	66	0x42	194	0xc2
C	67	0x43	195	0xc3
D	68	0x44	196	0xc4
E	69	0x45	197	0xc5
F	70	0x46	198	0xc6
G	71	0x47	199	0xc7
H	72	0x48	200	0xc8

Table 45 *Default ASCII, EBCDIC Character Mappings (continued)*

Character	ASCII Decimal	ASCII Hexadecimal	EBCDIC Decimal	EBCDIC Hexadecimal
I	73	0x49	201	0xc9
J	74	0x4a	209	0xd1
K	75	0x4b	210	0xd2
L	76	0x4c	211	0xd3
M	77	0x4d	212	0xd4
N	78	0x4e	213	0xd5
O	79	0x4f	214	0xd6
P	80	0x50	215	0xd7
Q	81	0x51	216	0xd8
R	82	0x52	217	0xd9
S	83	0x53	226	0xe2
T	84	0x54	227	0xe3
U	85	0x55	228	0xe4
V	86	0x56	229	0xe5
W	87	0x57	230	0xe6
X	88	0x58	231	0xe7
Y	89	0x59	232	0xe8
Z	90	0x5a	233	0xe9
[91	0x5b	173	0xad
\	92	0x5c	224	0xe0
]	93	0x5d	189	0xbd
^	94	0x5e	95	0x5f
_	95	0x5f	109	0x6d
`	96	0x60	121	0x79
a	97	0x61	129	0x81
b	98	0x62	130	0x82
c	99	0x63	131	0x83
d	100	0x64	132	0x84
e	101	0x65	133	0x85
f	102	0x66	134	0x86
g	103	0x67	135	0x87
h	104	0x68	136	0x88
i	105	0x69	137	0x89
j	106	0x6a	145	0x91
k	107	0x6b	146	0x92
l	108	0x6c	147	0x93

Table 45 *Default ASCII, EBCDIC Character Mappings (continued)*

Character	ASCII Decimal	ASCII Hexadecimal	EBCDIC Decimal	EBCDIC Hexadecimal
m	109	0x6d	148	0x94
n	110	0x6e	149	0x95
o	111	0x6f	150	0x96
p	112	0x70	151	0x97
q	113	0x71	152	0x98
r	114	0x72	153	0x99
s	115	0x73	162	0xa2
t	116	0x74	163	0xa3
u	117	0x75	164	0xa4
v	118	0x76	165	0xa5
w	119	0x77	166	0xa6
x	120	0x78	167	0xa7
y	121	0x79	168	0xa8
z	122	0x7a	169	0xa9
{	123	0x7b	192	0xc0
	124	0x7c	79	0x4f
}	125	0x7d	208	0xd0
~	126	0x7e	161	0xa1

Examples

The following example creates a two-way binding between an EBCDIC character and an ASCII character:

```
tn3270 character-map 0x81 0x78
```

Related Commands

Command	Description
show tn3270 ascii-hexval	Displays ASCII-hexadecimal character mappings.
show tn3270 character-map	Displays character mappings between ASCII and EBCDIC.

tn3270 datastream

To enable the TN3270 extended datastream, use the **tn3270 datastream** command in global configuration mode. To return to the normal TN3270 datastream, use the **no** form of this command.

tn3270 datastream { extended | normal }

no tn3270 datastream

Syntax Description

extended	Extended datastream.
normal	Normal datastream.

Defaults

Normal datastream

Command Modes

Global configuration

Command History

Release	Modification
10.3	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

This command causes an “-E” to be appended to the terminal type string sent to the IBM host, which allows you to use the extended TN3270 features.

Examples

The following example shows the supported TN3270 datastream options:

```
tn3270 datastream ?  
  extended  Use extended TN3270 datastream  
  normal    Use normal TN3270 datastream
```

tn3270 null-processing

To specify how NULL signals are handled, use the **tn3270 null-processing** command in global configuration mode. To return to 7171 NULL processing, use the **no** form of this command.

tn3270 null-processing [3270 | 7171]

no tn3270 null-processing [3270 | 7171]

Syntax Description	3270	(Optional) NULLs are compressed out of the string, as on a 3278-x terminal.
	7171	(Optional) NULLs are converted to spaces, as on a 7171 controller.

Defaults 7171 NULL processing

Command Modes Global configuration

Command History	Release	Modification
	10.3	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines If a user enters data, uses an arrow key to move the cursor to the right on the screen, and then enters more data, the intervening spaces are filled with NULLs. To specify how NULLs are handled, enter the **tn3270 null-processing** command either with the **3270** argument, where NULLs are compressed out of the string (as on a real 3278-x terminal) or the **7171** argument, where NULLs are converted to spaces as on a 7171 controller. Enter this command in global configuration.

Examples The following example shows the two available null processing methods:

```
tn3270 null-processing ?
 3270 Use 3270-style null processing
 7171 Use 7171-style null processing
```


tn3270 optimize-cursor-move

To increase performance between a remote user and a TN3270 host by limiting cursor movement information that is sent to user terminals, use the **tn3270 optimize-cursor-move** command in global configuration mode. To ensure that all cursor movement information is sent between the terminal and the TN3270 host, use the **no** form of this command.

tn3270 optimize-cursor-move

no tn3270 optimize-cursor-move

Syntax Description This command has no arguments or keywords.

Defaults Cursor movement escape strings are sent to the terminal.

Command Modes Global configuration

Command History	Release	Modification
	11.2	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

Issuing this command increases the speed of information transfer between users and TN3270 hosts through an access server.

If you do not issue this command, virtually every byte of information between the terminal and the TN3270 host is prepended and trailed by cursor-movement strings.

Examples

The following example disables status messages to users connected to 3278 terminals:

```
tn3270 optimize-cursor-move
```

Related Commands	Command	Description
	tn3270 status-message	Reenables the display of status messages after they have been disabled.

tn3270 reset-required

To lock a terminal after input error until the user resets the terminal, use the **tn3270 reset-required** command in global configuration mode. To return to the default of no reset required, use the **no** form of this command.

tn3270 reset-required

no tn3270 reset-required

Syntax Description This command has no arguments or keywords.

Defaults No reset is required.

Command Modes Global configuration

Command History	Release	Modification
	10.3	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines On a 3278-x terminal, the keyboard is locked and further input is not permitted after input error (due to field overflow, invalid entry, and so on) until the user presses the RESET key. Most TN3270 implementations leave the keyboard unlocked and remove any error message on the next key input after the error. Use this command to lock the keyboard until the user performs a reset.

Examples The following example enables keyboard locking after an input error:

```
tn3270 reset-required
```

tn3270 status-message

To reenable the display of status messages after they have been disabled, use the **tn3270 status-message** command in global configuration mode. To save bandwidth on asynchronous lines by not displaying status messages, use the **no** form of this command.

tn3270 status-message

no tn3270 status-message

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	Status messages appear.
-----------------	-------------------------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	11.2	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines	<p>Status messages appear on the console by default. These messages include “System Locked,” “Field error,” and “System UnLocked” messages. These messages are sent back to the terminal via the TTY line on the access server.</p> <p>Disabling status messages saves bandwidth on asynchronous lines, which have very low bandwidth.</p>
-------------------------	--

Examples	<p>The following example disables status messages to users connected to 3270 terminals:</p> <pre>no tn3270 status-message</pre>
-----------------	---

Related Commands	Command	Description
	tn3270 optimize-cursor-move	Increases performance between a remote user and a TN3270 host by limiting cursor movement information that is sent to user terminals.

tn3270 typeahead

To buffer keyboard data when a 3278 server is in locked mode, use the **tn3270 typeahead** command in global configuration mode. To disable the typeahead function, use the **no** form of this command.

tn3270 typeahead

no tn3270 typeahead

Syntax Description This command has no arguments or keywords.

Defaults Typeahead is disabled.

Command Modes Global configuration

Command History	Release	Modification
	11.2	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines When typeahead is enabled, the TN3270 client implementation in the Cisco IOS software permits you to continue typing while the system is trying to obtain a response from the TN3270 server. Information you type while a “System Locked” message appears on the terminal is stored in a buffer. After the “System Locked” message disappears, the information is then used as though it were just typed.

Examples The following example saves user information when “System Locked” messages appear on the screen:

```
tn3270 typeahead
```

Related Commands	Command	Description
	tn3270 reset-required	Locks a terminal after input error until the user resets the terminal.

translate lat

To translate a connection request to another protocol connection type when receiving a local-area transport (LAT) request, use the **translate lat** command in global configuration mode. To remove or change the translation request, use the **no** form of this command.

translate lat *incoming-service-name* [*incoming-options*] *protocol* *outgoing-address*
[*outgoing-options*] [*global-options*]

no translate lat *incoming-service-name* [*incoming-options*] *protocol* *outgoing-address*
[*outgoing-options*] [*global-options*]

Syntax Description

<i>incoming-service-name</i>	A LAT service name. When used on the incoming portion of the command, <i>incoming-service-name</i> is the name of the service that users specify when trying to make a translated connection. This name can match the name of the final destination resource, but is not required to. This argument is useful when making remote translated connections.
<i>incoming-options</i>	(Optional) An incoming connection request option. For LAT, the only option currently supported is: <ul style="list-style-type: none"> unadvertised—Prevents service advertisements from being broadcast to the network. This keyword can be useful, for example, when you define translations for many printers, and you do not want these services advertised to other LAT terminal servers. (VMS systems will be able to connect to the service even though it is not advertised.)
<i>protocol</i> <i>outgoing-address</i>	A protocol name followed by an address or host name. Protocol translation choices are: ppp , slip , tcp , and x25 . <p>Note The host name is resolved to an address during configuration, unless you are translating to TCP and use the host-name keyword, which allows the host name to be resolved at connection time instead of configuration time. See Table 48 for more information about the host-name keyword.</p> <p>Additional keywords that can be entered with the protocol are as follows:</p> <ul style="list-style-type: none"> autocommand—Specifies an EXEC command for an outgoing connection. The command executes upon connection to a host. You can issue any EXEC command and any switch or host name as an argument to the autocommand command. If the string following autocommand has one or more spaces as part of the string, you must place quotation marks (“ ”) around the string. <p>If you want to enable AppleTalk Remote Access (ARA) on an outgoing connection, specify the autocommand arap keywords. These keywords are necessary for ARA because ARA does not use addressing, and this option permits you to invoke the ARA string.</p> <ul style="list-style-type: none"> virtual-template—Associates a virtual template with a virtual access interface. See the translate lat (virtual access interfaces) command description for more information.

<i>outgoing-options</i>	(Optional) Outgoing connection request options. Choices depend upon the protocol or command entered. See Table 46 , Table 47 , Table 48 , and Table 49 for more information.
<i>global-options</i>	<p>(Optional) One or more of the following translation options can be used by any connection type:</p> <ul style="list-style-type: none"> • access-class <i>number</i>—Allows the incoming call to be used by source hosts that match the access list parameters. The argument <i>number</i> is an integer previously assigned to an access list. Standard access list numbers are in the range from 1 to 99; expanded standard access lists numbers are in the range 1300 to 1999. • local—Allows Telnet protocol negotiations to <i>not</i> be translated. • login—Requires that the user log in before the outgoing connection is made. This type of login is specified on the virtual terminal lines with the login command. • max-users <i>number</i>—Limits the number of simultaneous users of the translation to <i>number</i> (an integer you specify). • quiet—Suppresses printing of user-information messages.

Defaults

No default translation parameters

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.
12.1	The no-reset permanent virtual circuits (PVC) subkeyword was added to support outgoing PVCs.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

You define protocol translation connections by supplying a protocol keyword and the address, host name, or service name. A LAT protocol translation command can be as simple as the following example:

```
Router(config)# translate lat LAT-1 X.25 1236672
```

However, the Cisco IOS software provides a broad range of options that support protocol translations in many networking environments. [Table 46](#), [Table 47](#), [Table 48](#), and [Table 49](#) list the **translate lat** translation options by protocol.

You can also use the Cisco IOS command-line interface to help you understand how these keywords are entered. In global configuration mode, begin entering the **translate** command and add a question mark at each portion of the command to display the options available. Some examples follow:

```
Router(config)# translate lat ?
```

```
WORD LAT service name
```

```
Router(config)# translate lat LSVC ?
```

```
autocommand      Associate a command with a translation on this connections
lat              DEC LAT protocol
ppp              Virtual async PPP
slip              Virtual async SLIP
tcp              TCP/IP Telnet
unadvertised      Prevent service advertisements from being broadcast to the
                  network
virtual-template  Associate a virtual template with virtual access interface
x25              X.25
```

```
Router(config)# translate lat LSVC tcp ?
```

```
Hostname or A.B.C.D  IP address
```

```
Router(config)# translate lat LSVC tcp 10.1.1.1 ?
```

```
access-class      Allow access list parameters to be used by source hosts
binary            Negotiate Telnet binary mode on the connection
host-name          Store the host name rather than its IP address
local             Allow Telnet protocol negotiations not to be translated
login             Require that the user log in before the outgoing connection
                  is made
max-users          Limit the number of simultaneous users of the translation
multibyte-IAC      Always treat multiple IACs as telnet command
port              Port Number
quiet             Suppress printing of user-information messages
source-interface   Specify source interface
stream            Treat telnet escape characters as data
```

**Note**

If you plan to translate to X.25 on a permanent virtual circuit (PVC), see the description for the [translate x25](#) command for important configuration notes.

Table 46 LAT-to-PPP Outgoing Translation Options

Outgoing PPP Translation

ppp {*ip-address* | **ip-pool** [**scope-name** *name*]}

Translates from LAT to virtual asynchronous PPP. Supply an IP address as a standard, four-part dotted decimal IP address.

The **ip-pool** keyword obtains an IP address from a Dynamic Host Configuration Protocol (DHCP) proxy client or a local pool. If the optional **scope-name** keyword is not specified, the address is obtained from a DHCP proxy client. If the **scope-name** keyword is specified, the IP address is obtained from the specified local pool. The **scope-name** keyword can specify a range of IP addresses.

Outgoing PPP Connection Request Options

Add any of the following keywords to configure PPP connection requests:

- **authentication {pap | chap}**—Sets Challenge Handshake Authentication Protocol (CHAP) or Password Authentication Protocol (PAP) authentication for PPP on virtual asynchronous interfaces. If you specify both keywords, order is significant; the system will try to use the first authentication type, then the second.
 - **header-compression**—Implements header compression on IP packets only.
-

Table 46 **LAT-to-PPP Outgoing Translation Options (continued)**

-
- **ipx loopback** *number*—Specifies the loopback interface to be created and permits clients running IPX-PPP to connect through virtual terminal lines on the router. A loopback interface must have been created and configured with a Novell IPX network number before IPX-PPP can work on the virtual terminal line. The virtual terminal line is assigned to the loopback interface.
 - **keepalive** *number-of-seconds*—Specifies the interval at which keepalive packets are sent on Serial Line Internet Protocol (SLIP) and PPP virtual asynchronous interfaces. By default, keepalive packets are enabled and sent every 10 seconds. To shut off keepalive packets, use a value of 0. The active keepalive interval is 1 through 32,767 seconds. When you do not change from the default of 10, the keepalive interval does not appear in **more system:running-config** or **show translate** command output.
 - **mtu** *bytes*—Sets the interface maximum transmission unit (MTU) of packets that the virtual asynchronous interface supports. The default MTU is 1500 bytes on a virtual asynchronous interface. The acceptable range is from 64 to 1,000,000 bytes.
 - **routing**—Permits routing updates between connections. This keyword is required if the destination device is not on a subnet connected to one of the interfaces on the router.
 - **use-tacacs**—Uses TACACS to verify PPP authentications for CHAP or PAP on virtual asynchronous interfaces.
-

Table 47 **LAT-to-SLIP Outgoing Translation Options**

Outgoing SLIP Translation

slip { *ip-address* | **ip-pool** [**scope-name** *name*] }

Translates from LAT to virtual asynchronous SLIP. Supply an IP address as a standard, four-part dotted decimal IP address.

The **ip-pool** keyword obtains an IP address from a DHCP proxy client or a local pool. If the optional **scope-name** keyword is not specified, the address is obtained from a DHCP proxy client. If the **scope-name** keyword is specified, the IP address is obtained from the specified local pool. The **scope-name** keyword can specify a range of IP addresses.

Note The **slip** argument applies only to outgoing connections; SLIP is not supported on incoming protocol translation connections.

Table 47 LAT-to-SLIP Outgoing Translation Options (continued)**Outgoing SLIP Connection Request Options**

Add any of the following keywords to configure SLIP connection requests:

- **header-compression** [**passive**]—Implements header compression on IP packets only. The **passive** keyword permits compression on outgoing packets only if incoming TCP packets on the same virtual asynchronous interface are compressed. The default (without the **passive** keyword) permits compression on all traffic.
- **ipx loopback number**—Specifies the loopback interface to be created and permits clients running IPX-PPP to connect through virtual terminal lines on the router. A loopback interface must have been created and configured with a Novell IPX network number before IPX-PPP can work on the virtual terminal line. The virtual terminal line is assigned to the loopback interface.
- **keepalive number-of-seconds**—Specifies the interval at which keepalive packets are sent on SLIP and PPP virtual asynchronous interfaces. By default, keepalive packets are enabled and sent every 10 seconds. To shut off keepalive packets, use a value of 0. The active keepalive interval is 1 through 32,767 seconds. When you do not change from the default of 10, the keepalive interval does not appear in **more system:running-config** or **show translate** command output.
- **mtu bytes**—Sets the interface MTU of packets that the virtual asynchronous interface supports. The default MTU is 1500 bytes on a virtual asynchronous interface. The acceptable range is from 64 to 1,000,000 bytes.
- **routing**—Permits routing updates between connections. This keyword is required if the destination device is not on a subnet connected to one of the interfaces on the router.

Table 48 LAT-to-TCP Outgoing Options**Outgoing TCP Translation****tcp ip-address**

Translates LAT to TCP/IP Telnet. Supply an IP address as a standard, four-part dotted decimal IP address, the name of an IP host that can be resolved by the Domain Name System (DNS), or explicit specification in an **ip host** command (refer to the description for the **host-name** keyword in the “Outgoing TCP Connection Request Options” section).

Outgoing TCP Connection Request Options

Any of the following optional keywords can be used to configure TCP connection requests:

- **binary**—Negotiates Telnet binary mode on the connection.
- **host-name**—Stores the host name rather than its IP address, thereby allowing the host name to be resolved at connection time instead of configuration time. There is also a **rotor** keyword suboption that you can use to modify the behavior of the **host-name** keyword by allowing one of the IP addresses defined by the **ip host** configuration command to be chosen randomly. If one address fails, another one will be tried, and so on until all address choices are exhausted. You can use the **rotor** keyword, therefore, to provide basic load sharing of the IP destinations.
- **multibyte-IAC**—Always treat multiple Interpret as Command (IAC) escape character codes as a Telnet command.
- **port number**—For outgoing connections, enter the number of the port to match. The default is port 23 (Telnet).

Table 48 **LAT-to-TCP Outgoing Options (continued)**

-
- **source-interface**—Specifies the source address used for Telnet connections initiated by the router.
 - **stream**—Performs stream processing, which enables a raw TCP stream with no Telnet control sequences. A stream connection does not process or generate any Telnet options, and also prevents Telnet processing of the data stream. This keyword might be useful for connections to ports running the UNIX-to-UNIX Copy Program (UUCP) or other non-Telnet protocols, or to ports connected to printers. For ports connected to printers using Telnet, the **stream** keyword prevents some of the problems associated with using Telnet for printers, such as unusual events happening to carriage returns or line feeds and echoing of data back to VMS systems.
-

Table 49 **LAT-to-X.25 Outgoing Translation Options**

Outgoing X.25 Translation

x25 *x.121-address*

Translates LAT to the X.25 protocol. Supply an X.121 address that conforms to the specifications provided in the *CCITT 1984 Red Book*, or the name of an X.25 host that can be resolved by the DNS, or explicit specification in an **x25 host** command.

The address number generally consists of a portion that is administered by the public data network (PDN) and a portion that is locally assigned. You must be sure that the numbers that you assign agree with the addresses assigned to you by the X.25 service provider. The X.121 addresses generally will be subaddresses of the X.121 address for the X.25 network interface.

Outgoing X.25 Connection Request Options

Any of the following optional keywords can be used to configure X.25 connection requests:

- **cud** *c-u-data*—Sends the specified X.25 Call User Data (CUD) text as part of an outgoing call request after the protocol identification bytes.
 - **no-reverse**—Specifies that outgoing calls not request the X.25 reverse charge facility, when the interface default is that all outgoing calls are reverse charged.
 - **profile** *profile*—Sets the X.3 packet assembler/disassembler (PAD) parameters as defined in the profile created by the **x29 profile** command.
 - **pvc** *number* [**interface** *serial number* | **packetsize** *in-size out-size* | **window***size* *in-size out-size* | **no-reset**]—Specifies that the outgoing connection is actually a PVC. The *number* argument specifies the virtual circuit channel number of the connection, which must be less than the virtual circuits assigned to the switched virtual circuit (SVC). Only one session is allowed per PVC. Use the following optional keywords to further define the connection:
 - **interface** *serial number*—Specifies a PVC interface on which to set up the PVC connection.
 - **packetsize** *in-size out-size*—Specifies the input packet size (*in-size*) and output packet size (*out-size*) for the PVC. Valid packet size values are: 16, 32, 64, 128, 256, 512, 1024, 2048, and 4096.
 - **window***size* *in-size out-size*—Specifies the packet count for input windows (*in-size*) and output windows (*out-size*) for the outgoing translation. Values of *in-size* and *out-size* range from 1 to 127 and must not be greater than the value set for the **x25 modulo** command. You must specify the same value for *in-size* and *out-size*.
 - **no-reset**—Causes the Cisco router to send a no Reset packet request at startup of a TCP or LAT to permanent virtual circuit (PVC) translation session.
-

Table 49 **LAT-to-X.25 Outgoing Translation Options (continued)**

- **reverse**—Provides reverse charging for X.25 on a per-call rather than a per-interface basis. Requests reverse charges on a specified X.121 address, even if the serial interface is not configured to request reverse charge calls.
- **use-map**—Applies **x25 map pad** command entry options (such as CUD and idle) and facilities (such as packet in, packet out, win in, and win out) to the outgoing protocol translation call. When the **use-map** keyword is specified on the **translate** command, the Destination address and optional PAD Protocol Identification (PID), CUD, and facilities are checked against a configured list of **x25 map pad** entries. If a match is found, the map entry PID, CUD, and facilities are applied to the outgoing protocol translation call. The X.25 map facilities applied to the outgoing translation can be displayed with the **show translation** command throughout the duration of the translation session.

Examples

The following example illustrates incoming LAT to outgoing TCP translations. The **unadvertised** keyword prevents broadcast of service advertisements to other servers in the network. Outgoing translated packets are sent to IP host Host1, TCP port 4005.

```
translate lat pt-printer1 unadvertised tcp Host1 port 4005
```

The following example translates LAT on an incoming line to SLIP on an outgoing line. It uses header compression only if incoming TCP packets on the same interface are compressed.

```
translate lat Service1 slip 10.0.0.4 header-compression
```

The following example first shows how to disable keepalive packets on a PPP line using the **translate lat** command, then shows translated session output from the **show translate EXEC** command indicating keepalive packets have been turned off.

```
translate lat Service2 ppp 172.21.2.2 keepalive 0
.
.
.
Router# show translate

Translate From: LAT Service2
           To:   PPP 172.21.2.2 keepalive 0
           0/0 users active, 0 peak, 0 total, 0 failures
```

Related Commands

Command	Description
show translate	Displays configured translation sessions.
translate tcp	Translates a TCP connection request automatically to another outgoing protocol connection.
translate x25	Translates an X.25 connection request automatically to another outgoing protocol connection.
x29 access-list	Limits access to the access server from certain X.25 hosts.
x29 profile	Creates a PAD profile script for use by the translate command.

translate ruleset

To define a unique name for a translation ruleset, specify the translated protocols, and enable translate ruleset configuration mode, use the **translate ruleset** command in global configuration mode. To remove the ruleset, use the **no** form of this command.

translate ruleset *name* **from** *incoming-protocol* **to** *outgoing-protocol*

no translate ruleset *name* **from** *incoming-protocol* **to** *outgoing-protocol*

Syntax Description

<i>name</i>	Unique name for the protocol translation ruleset.
from <i>incoming-protocol</i>	Specifies the incoming protocol that will be translated, and can be one of the following: <ul style="list-style-type: none"> • pad—X.25 PAD • telnet—TCP/IP Telnet
to <i>outgoing-protocol</i>	Specifies the outgoing protocol or option to translate the incoming protocol to, and can be one of the following: <ul style="list-style-type: none"> • pad—X.25 PAD • telnet—TCP/IP Telnet

Defaults

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
12.3(8)T	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

This command places the shell into the translate ruleset configuration mode to create the ruleset template of protocol translation criteria.

The translation ruleset compares an incoming connection attempt to the set of criteria to determine whether it is eligible for protocol translation processing, then uses additional information to complete the transaction.

Existing one-line translate command protocol translation configurations (using the **translate tcp** and **translate x25** commands, for example) take precedence over a protocol translation ruleset. This rule is reinforced when the configuration is generated by placing all one-line **translate** command protocol translation configurations *before* protocol translation ruleset configurations.

Some protocol translation options available with the one-line protocol translation commands are not available with this command.

An incoming PAD call with a standard protocol identification (PID) value that cannot be identified as PAD (for example, its first four bytes indicate IP encapsulation) will not be eligible for protocol translation.

Incoming TCP connections must be made on standard Telnet port 23; otherwise, the connection is not eligible for protocol translation.

If a ruleset is deleted, it will not affect an established protocol translation session, but a new, incoming connection attempt may terminate, depending upon how far along it is in the connection process.

Examples

The following example shows how to start the translate ruleset configuration mode:

```
Router(config)# translate ruleset Pad-Telnet from pad to telnet
```

```
Router(cfg-pt-ruleset)# ?
```

Protocol Translation ruleset configuration commands:

description	User-specified description of the ruleset
exit	Exit from PT ruleset configuration mode
match	Define a pattern of input parameters for a connection to process
no	Negate or set default values of a command
options	Define the ruleset options
set	Define parameter values
skip	Define a pattern of input parameters for a connection to skip
substitute	Define a parameter pattern match and substitute into another
test	Define parameter pattern(s) to test for conditionally setting parameters

Related Commands

Command	Description
description (ruleset)	Adds a description about a translation ruleset.
match (ruleset)	Identifies a connection for processing by the translation ruleset.
options (ruleset)	Specifies protocol translation options in a translation ruleset.
set (ruleset)	Unconditionally sets one or more connection parameters to a fixed value for a translation ruleset.
show translate ruleset	Displays a summary of a specific or of all configured translation rulesets, behavioral parameters, and usage statistic.
skip (ruleset)	Identifies a connection for omission by the translation ruleset.
substitute (ruleset)	Matches an available protocol and substitutes another in a translation ruleset.
test (ruleset)	Tests parameter values in a translation ruleset using regular expressions.
test translate	Displays a trace of protocol translation behavior for a connection attempt.
x25 pvc translate ruleset	Configures PVCs that are valid for protocol translation ruleset handling.

translate lat (virtual access interfaces)

When receiving a local-area transport (LAT) connection request to a service name, to set up the Cisco router to automatically translate the request to another outgoing protocol connection type, use the **translate lat** command in global configuration mode. To remove or change the translation request, use the **no** form of this command.

translate lat *incoming-service-name* [*incoming-options*] **virtual-template** *number*
[*global-options*]

no translate lat *incoming-service-name* [*incoming-options*] **virtual-template** *number*
[*global-options*]

Syntax Description	<p><i>incoming-service-name</i> A LAT service name. When used on the incoming portion of the translate lat command, <i>service-name</i> is the name of the service that users specify when trying to make a translated connection. This name can match the name of the final destination resource, but this match is not required. Such matches can be useful when making remote translated connections.</p>
<i>incoming-options</i>	<p>(Optional) An incoming connection request option. For LAT, the only keyword currently supported is:</p> <ul style="list-style-type: none"> • unadvertised—Prevents service advertisements from being broadcast to the network. This keyword can be useful, for example, when you define translations for many printers, and you do not want these services advertised to other LAT terminal servers. (VMS systems will be able to connect to the service even though it is not advertised.)
virtual-template <i>number</i>	<p>Applies the virtual interface template specified by the <i>number</i> argument in place of outgoing options.</p>
<i>global-options</i>	<p>(Optional) Translation options that can be used by any connection type and can be one or more of the following:</p> <ul style="list-style-type: none"> • access-class <i>number</i>—Allows the incoming call to be used by source hosts that match the access list parameters. The argument <i>number</i> is an integer previously assigned to an access list. Standard access list numbers are in the range from 1 to 99; expanded standard access lists numbers are in the range 1300 to 1999. • max-users <i>number</i>—Limits the number of simultaneous users of the translation to <i>number</i> (an integer you specify). • local—Allows Telnet protocol negotiations to <i>not</i> be translated. • login—Requires that the user log in before the outgoing connection is made. This type of login is specified on the virtual terminal lines with the login command. • quiet—Suppresses printing of user-information messages.

Defaults

No default translation parameters

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

The command syntax documented here shows how to apply a virtual interface template in place of outgoing **translate** options. If you are using virtual templates for protocol translation, all outgoing options are defined in the virtual interface template. [Table 50](#) lists all outgoing options and their corresponding interface configuration commands.

You define the protocol translation connections by choosing a protocol keyword and supplying the appropriate address, host name, or service name. The protocol connection information is followed by optional features for that connection, as appropriate. For example, the **binary** keyword is only appropriate with TCP/IP connections. The global options, in general, apply to all the connection types, but there are exceptions.

Rather than specifying outgoing translation options in the **translate** command, configure these options as interface configuration commands under the virtual interface template, then apply the virtual interface template to the **translate** command. [Table 50](#) maps outgoing **translate** command options to interface commands you can configure in the virtual interface template.

Table 50 Mapping Outgoing translate lat Options to Interface Commands

translate lat Command Options	Corresponding Interface Configuration Command
ip-pool	peer default ip address {ip-address dhcp pool [poolname]}
header-compression	ip tcp header compression [on off passive]
routing	ip routing or ipx routing
mtu	mtu
keepalive	keepalive
authentication {chap pap}	ppp authentication {chap pap}
ppp use-tacacs	ppp use-tacacs
ipx loopback	ipx ppp-client loopback number

Examples

The following example configures PPP tunneling from a PC across a LAT network. The remote PC is given the IP address 10.12.118.12 when it dials in. The **unadvertised** keyword prevents broadcast of service advertisements to other servers.

```
interface Virtual-Template1
 ip unnumbered Ethernet0
 peer default ip address 10.12.118.12
 ppp authentication chap
!
translate lat pt-printer1 unadvertised virtual-template 1
```

Related Commands	Command	Description
	show translate	Displays configured translation sessions.
	translate tcp	Translates a TCP connection request automatically to another outgoing protocol connection.
	translate x25	Translates an X.25 connection request automatically to another outgoing protocol connection.
	x29 access-list	Limits access to the access server from certain X.25 hosts.
	x29 profile	Creates a PAD profile script for use by the translate command.

translate tcp

To translate a connection request to another protocol connection type when receiving a TCP connection request to a particular destination address or host name, use the **translate tcp** command in global configuration mode. To remove or change the translation request, use the **no** form of this command.

translate tcp *incoming-address* [*incoming-options*] *protocol* *outgoing-address* [*outgoing-options*] [*global-options*]

no translate tcp *incoming-address* [*incoming-options*] *protocol* *outgoing-address* [*outgoing-options*] [*global-options*]

Syntax Description

<i>incoming-address</i>	Standard IP address in standard, four-part dotted decimal notation. The IP address cannot be in use by other routers, and it should be on a connected subnet.
<i>incoming-options</i>	<p>(Optional) An incoming connection request option. Choices are as follows:</p> <ul style="list-style-type: none"> • binary—Negotiates Telnet binary mode on the Telnet connection. (This was the default in previous versions of the protocol translation software and is set automatically when you enter a translate command in the previous format.) • port number—The number of the port to match for incoming connections. The default is port 23 (Telnet). For outgoing connections, enter the number of the port to use. The default is port 23. • printer—Supports local-area transport (LAT) and X.25 printing over a TCP network among multiple sites. This keyword causes the protocol translation software to delay the completion of an incoming Telnet connection until after the outgoing protocol connection (to LAT or X.25) has been established. An unsuccessful outgoing connection attempt results in the TCP connection to the router being refused, rather than being accepted and then closed, which is the default behavior. Note that using this keyword will force the global quiet keyword to be applied to the translation. • stream—Performs stream processing, which enables a raw TCP stream with no Telnet control sequences. A stream connection does not process or generate any Telnet options, and also prevents Telnet processing of the data stream. This keyword might be useful for connections to ports running the UNIX-to-UNIX Copy Program (UUCP) or other non-Telnet protocols, or to ports connected to printers. For ports connected to printers using Telnet, the stream keyword prevents some of the problems associated with using Telnet for printers, such as unusual events happening to carriage returns or line feeds and echoing of data back to VPN/Security Management Solution (VMS) systems.

<i>protocol</i>	A protocol name followed by an address or host name. Protocol translation choices are: lat , ppp , slip , and x25 .
<i>outgoing-address</i>	<p>Additional keywords that can be entered instead of a protocol name are as follows:</p> <ul style="list-style-type: none"> • autocommand—Specifies an EXEC command for an outgoing connection. The command executes upon connection to a host. You can issue any EXEC command and any switch or host name as an argument to the autocommand keyword. If the string following autocommand has one or more spaces as part of the string, you must place quotation marks (“ ”) around the string. If you want to enable AppleTalk Remote Access (ARA) on an outgoing connection, specify the autocommand arap keywords. These keywords are necessary for ARA because ARA does not use addressing, and this option permits you to invoke the ARA string. • virtual-template—Associates a virtual template with a virtual access interface. See the translate tcp (virtual access interfaces) command description for more information.
<i>outgoing-options</i>	(Optional) Outgoing connection request options. Choices depend upon the protocol or command entered. See Table 51 , Table 52 , Table 53 , and Table 54 for more information.

<i>global-options</i>	<p>(Optional) One or more of the following translation options can be used by any connection type:</p> <ul style="list-style-type: none"> • access-class <i>number</i>—Allows the incoming call to be used by source hosts that match the access list parameters. The <i>number</i> argument is an integer previously assigned to an access list. Standard access list numbers are in the range from 1 to 99; expanded standard access lists numbers are in the range from 1300 to 1999. • authorize <i>method-list tag</i>—Enables authorization for protocol translation sessions. The <i>method-list</i> argument is the list of authorization methods defined by the aaa authorization command with the translate keyword. The <i>method-list</i> argument may have the value of the <i>list-name</i> argument or the default keyword. The <i>tag</i> argument is an alphanumeric string of up to 64 characters. The <i>tag</i> argument need not be unique; more than one instance of the translate command can specify identical values for the <i>tag</i> argument. The authorize option is available only if the outgoing protocol keyword is x25 or autocommand. • eor marker [insert]—Defines the End-of-Record (EOR) marker for the translation session. The <i>marker</i> argument may be any set of characters from 1 to 4 in length. Nonprintable characters must be entered in hexadecimal format. Printable characters may be typed in. The insert keyword allows the EOR marker to be inserted into the TCP stream after each X.25 packet without a More-bit (M-bit) set is received. • local—Allows Telnet protocol negotiations to <i>not</i> be translated. • login—Requires that the user log in before the outgoing connection is made. This type of login is specified on the virtual terminal lines with the login command. • max-users <i>number</i>—Limits the number of simultaneous users of the translation to <i>number</i> (an integer you specify). • quiet—Suppresses printing of user-information messages. • swap—Valid for TCP-to-X.25 translations only, and allows X.3 parameters to be set on the router by the host originating the X.25 call, or by an X.29 profile. This configuration enables incoming and outgoing X.25 connections to be swapped so that the device is treated like a packet assembler/disassembler (PAD) when it accepts a call. By default, the router functions like a PAD for calls that it initiates, and like an X.25 host for calls it accepts. The swap keyword allows connections from an X.25 host that wants to connect to the router, and then treats it like a PAD.
-----------------------	--

Defaults

No default translation parameters

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.
12.1	The no-reset permanent virtual circuits (PVCs) subkeyword was added to support outgoing PVCs.
12.2(13)T	The dynamic keyword was added to support a backup interface.
12.3(2)T	The authorize <i>method-list tag</i> keyword and arguments were added to support authorization of protocol translation sessions. The eor marker [insert] keywords and argument were added to support the EOR function for DCNs.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

You define protocol translation connections by supplying a protocol keyword and the address, host name, or service name. A TCP protocol translation command can be as simple as the following example:

```
Router(config)# translate tcp 10.1.1.1 x25 1236672
```

However, the Cisco IOS software provides a broad range of options that support protocol translations in many networking environments. [Table 51](#), [Table 52](#), [Table 53](#), and [Table 54](#) list the **translate tcp** translation options by protocol.

You can also use the Cisco IOS command-line interface (CLI) to help you understand how these keywords are entered. In global configuration mode, begin entering the **translate** command and add a question mark at each portion of the command to display the options available. Some examples follow:

```
Router(config)# translate tcp ?
```

```
Hostname or A.B.C.D IP address
```

```
Router(config)# translate tcp 10.1.1.1 ?
```

```
autocommand      Associate a command with a translation on this connections
binary           Negotiate Telnet binary mode on the connection
lat              DEC LAT protocol
port             Port Number
ppp              Virtual async PPP
printer          Enable non-interactive (implies global quiet)
slip             Virtual async SLIP
stream           Enable stream processing
tcp              TCP/IP Telnet
virtual-template Associate a virtual template with virtual access interface
x25              X.25
```

```
Router(config)# translate tcp 10.1.1.1 lat LAT-1 ?
```

```
access-class      Allow access list parameters to be used by source hosts
local            Allow Telnet protocol negotiations not to be translated
login            Require that the user log in before the outgoing connection is
                 made
max-users         Limit the number of simultaneous users of the translation
node             LAT node name
port             LAT port name
quiet            Suppress printing of user-information messages
unadvertised      Prevent service advertisements from being broadcast to the
```

network

**Note**

If you plan to translate to X.25 on a PVC, see the description for the [translate x25](#) command for important configuration notes.

Table 51 *TCP-to-LAT Outgoing Options*

Outgoing LAT Translation

lat *service-name*

Translates TCP to the LAT protocol. The software must learn the service name through LAT service advertisements before it can use the service.

Outgoing LAT Connection Request Options

Any of the following optional keywords can be used to configure LAT connection requests:

- **node** *name*—Connects to the specified node that offers a LAT service. By default, the connection is made to the highest-rated node that offers the service.
 - **port** *name*—Destination LAT port name in the format of the remote system. This parameter is usually ignored in most time-sharing systems, but is used by terminal servers that offer reverse-LAT services.
 - **unadvertised**—Prevents LAT service advertisements from being broadcast to the network.
-

Table 52 *TCP-to-PPP Outgoing Options*

Outgoing PPP Translation

ppp [*ip-address* | **ip-pool** [**scope-name** *name*]]

Translates from TCP to virtual asynchronous PPP. Supply an IP address as a standard, four-part dotted decimal IP address.

The **ip-pool** keyword obtains an IP address from a Dynamic Host Configuration Protocol (DHCP) proxy client or a local pool. If the **scope-name** keyword is not specified, the address is obtained from a DHCP proxy client. If the **scope-name** keyword is specified, the IP address is obtained from the specified local pool. The **scope-name** keyword can specify a range of IP addresses.

Outgoing PPP Connection Request Options

Any of the following optional keywords can be used to configure PPP connection requests:

- **authentication** [**pap** | **chap**]—Sets Challenge Handshake Authentication Protocol (CHAP) or Password Authentication Protocol (PAP) authentication for PPP on virtual asynchronous interfaces. If you specify both keywords, order is significant; the system will try to use the first authentication type, then the second.
 - **header-compression** [**passive**]—Implements header compression on IP packets only. The **passive** keyword permits compression on outgoing packets only if incoming TCP packets on the same virtual asynchronous interface are compressed. The default (without the **passive** keyword) permits compression on all traffic.
 - **ipx loopback** *number*—Specifies the loopback interface to be created and permits clients running IPX-PPP to connect through vtys on the router. A loopback interface must have been created and configured with a Novell IPX network number before IPX-PPP can work on the vty. The vty is assigned to the loopback interface.
-

Table 52 **TCP-to-PPP Outgoing Options (continued)**

-
- **keepalive** *number-of-seconds*—Specifies the interval at which keepalive packets are sent on Serial Line Internet Protocol (SLIP) and PPP virtual asynchronous interfaces. By default, keepalive packets are enabled and sent every 10 seconds. To shut off keepalive packets, use a value of 0. The active keepalive interval is 1 through 32,767 seconds. When you do not change from the default of 10, the keepalive interval does not appear in **more system:running-config** or **show translate** command output.
 - **mtu** *bytes*—Sets the interface maximum transmission unit (MTU) of packets that the virtual asynchronous interface supports. The default MTU is 1500 bytes on a virtual asynchronous interface. The acceptable range is from 64 to 1,000,000 bytes.
 - **routing**—Permits routing updates between connections. This keyword is required if the destination device is not on a subnet connected to one of the interfaces on the router.
 - **use-tacacs**—Uses TACACS to verify PPP authentications for CHAP or PAP on virtual asynchronous interfaces.
-

Table 53 **TCP-to-SLIP Outgoing Options****Outgoing SLIP Translation**

slip {*ip-address* | **ip-pool** [**scope-name** *name*]}

Translates from TCP to virtual asynchronous SLIP. Supply an IP address as a standard, four-part dotted decimal IP address.

The **ip-pool** keyword obtains an IP address from a DHCP proxy client or a local pool. If the optional **scope-name** keyword is not specified, the address is obtained from a DHCP proxy client. If the **scope-name** keyword is specified, the IP address is obtained from the specified local pool. The **scope-name** keyword can specify a range of IP addresses.

Note The **slip** keyword applies only to outgoing connections; SLIP is not supported on incoming protocol translation connections.

Outgoing SLIP Connection Request Options

Any of the following optional keywords can be used to configure SLIP connection requests:

- **header-compression** [**passive**]—Implements header compression on IP packets only. The **passive** keyword permits compression on outgoing packets only if incoming TCP packets on the same virtual asynchronous interface are compressed. The default (without the **passive** keyword) permits compression on all traffic.
 - **ipx loopback** *number*—Specifies the loopback interface to be created and permits clients running IPX-PPP over X.25 to connect through vtys on the router. A loopback interface must have been created and configured with a Novell IPX network number before IPX-PPP can work on the vty. The vty is assigned to the loopback interface.
 - **keepalive** *number-of-seconds*—Specifies the interval at which keepalive packets are sent on SLIP and PPP virtual asynchronous interfaces. By default, keepalive packets are enabled and sent every 10 seconds. To shut off keepalive packets, use a value of 0. The active keepalive interval is 1 through 32,767 seconds. When you do not change from the default of 10, the keepalive interval does not appear in **more system:running-config** or **show translate** command output.
-

Table 53 *TCP-to-SLIP Outgoing Options (continued)*

- **mtu bytes**—Sets the interface MTU of packets that the virtual asynchronous interface supports. The default MTU is 1500 bytes on a virtual asynchronous interface. The acceptable range is from 64 to 1,000,000 bytes.
- **routing**—Permits routing updates between connections. This keyword is required if the destination device is not on a subnet connected to one of the interfaces on the router.

Table 54 *TCP-to-X.25 Outgoing Options***Outgoing X.25 Translation****x25** *x.121-address*

Translates TCP to the X.25 protocol. Supply an X.121 address that conforms to the specifications provided in the *CCITT 1984 Red Book*, or the name of an X.25 host that can be resolved by the DNS, or explicit specification in an **x25 host** command.

The address number generally consists of a portion that is administered by the public data network (PDN) and a portion that is locally assigned. You must be sure that the numbers that you assign agree with the addresses assigned to you by the X.25 service provider. The X.121 addresses generally will be subaddresses of the X.121 address for the X.25 network interface.

Outgoing X.25 Connection Request Options

Any of the following optional keywords can be used to configure X.25 connection requests:

- **cud c-u-data**—Sends the specified X.25 Call User Data (CUD) text as part of an outgoing call request after the protocol identification bytes.
- **no-reverse**—Specifies that outgoing calls not request the X.25 reverse charge facility, when the interface default is that all outgoing calls are reverse charged.
- **profile profile**—Sets the X.3 PAD parameters as defined in the profile created by the **x29 profile** command.
- **pvc number [interface serial number | packet-size in-size out-size | window-size in-size out-size | no-reset | dynamic]**—Specifies that the outgoing connection is actually a PVC. The *number* argument specifies the virtual circuit channel number of the incoming connection, which must be less than the virtual circuits assigned to the switched virtual circuit (SVC). Only one session is allowed per PVC. Use the following optional keywords to further define the connection:
 - **interface serial number**—Specifies a PVC interface on which to set up the PVC connection.
 - **packet-size in-size out-size**—Specifies the input packet size (*in-size*) and output packet size (*out-size*) for the PVC. Valid packet size values are: 16, 32, 64, 128, 256, 512, 1024, 2048, and 4096.
 - **window-size in-size out-size**—Specifies the packet count for input windows (*in-size*) and output windows (*out-size*) for the outgoing translation. Values of *in-size* and *out-size* range from 1 to 127 and must not be greater than the value set for the **x25 modulo** command. You must specify the same value for the *in-size* and *out-size* arguments.
 - **no-reset**—Causes the Cisco router to send a no reset packet request at startup of a TCP or LAT-to-PVC translation session.
 - **dynamic**—Causes the TCP-to-X25 PVC session to terminate when the interface goes down. The default behavior is to keep the PVC in existence as long as it is configured.

Table 54 *TCP-to-X.25 Outgoing Options (continued)*

-
- **reverse**—Provides reverse charging for X.25 on a per-call rather than a per-interface basis. Requests reverse charges on a specified X.121 address, even if the serial interface is not configured to request reverse charge calls.
 - **use-map**—Applies **x25 map pad** command entry options (such as CUD and idle) and facilities (such as packet in, packet out, win in, and win out) to the outgoing protocol translation call. When the **use-map** keyword is specified on the **translate** command, the Destination address and optional PAD Protocol Identification (PID), CUD, and facilities are checked against a configured list of **x25 map pad** command entries. If a match is found, the map entry PID, CUD, and facilities are applied to the outgoing protocol translation call. The X.25 map facilities applied to the outgoing translation can be displayed with the **show translation** command throughout the duration of the translation session.
-

Examples

Dynamic PVCs to Support Primary and Secondary Interfaces Example

The following partial example shows how to configure the PVC dynamic option. The **dynamic** keyword allows an X.25 PVC to be created on a backup interface when the primary interface goes down. The example configures a primary serial interface (serial 0/0) for X.25 encapsulation and assigns a secondary serial interface (serial 1/1) as backup for the primary. Comments explain the configuration.

```
interface serial 0/0
  encapsulation x25
  backup active interface Serial1/1
!
interface serial 1/1
  encapsulation x25
!
! Configure an X.25 route specifying the primary interface on which the router
! should create the dynamic PVCs.
x25 route ^10 interface serial 0/0
!
! Configure a second X.25 route specifying the secondary backup interface on which
! the router can recreate the PVCs should the primary go down.
x25 route ^10 interface serial 1/1
!
! Configure the translate commands with the PVC dynamic option.
translate tcp 10.60.150.128 port 1031 x25 10 pvc 1 dynamic
.
.
.
translate tcp 10.60.150.128 port 1036 x25 10 pvc 6 dynamic
!
```

When the primary interface serial 0/0 is the active link and it is operational (up), the PVCs will be created on that interface.

If the primary interface goes down, the following will occur:

- The TCP sessions associated with the X.25 PVCs on serial interface 0/0 will be terminated.
- The X25 PVCs created on serial interface 0/0 will be deleted.
- The primary link on serial interface 0/0 will go into the TESTING state.
- The backup link on serial interface 1/1 will change from the X.25 TESTING state to the UP state.
- This change of the interface state (from TESTING to UP) will cause the secondary link on serial interface 1/1 to become active.

- The X.25 PVCs will be recreated on the secondary link on serial interface 1/1 based on the configuration of the second **x25 route** command.
- Incoming TCP connections will be reestablished with the X.25 PVCs on serial interface 1/1.

TCP-to-X.25 PVC connections will remain on the backup secondary interface (serial 1/1) even when the primary interface (serial 0/0) becomes operational. Only when the backup interface (serial 1/1) fails does the process described repeat and move the TCP-to-X.25 PVC connections back to the primary interface (serial 0/0).

Incoming TCP Connection to a Printer Example

The following example illustrates the use of the TCP incoming protocol **printer** keyword for an incoming TCP connection:

```
translate tcp 172.19.32.250 printer x25 5678
```

IPX-PPP Client Connects to a Server Running PPP Example

The following example permits clients running IPX-PPP to connect through the device virtual terminal lines to a server running PPP:

```
interface loopback0
  no ip address
  ipx network 544
  ipx sap-interval 2000
!
translate tcp 172.21.14.67 port 1234 ppp 10.0.0.2 ipx loopback0
```

Configuring the EOR Marker for a TCP-to-X.25 Protocol Translation Session Example

The following example configures a TCP-to-X.25 protocol translation session to insert an EOR marker in a TCP packet after each received X.25 packet that does not contain the M-bit set. The EOR marker in this example consists of nonprintable characters and is entered in hexadecimal format.

```
translate tcp 10.60.155.63 x25 12345678 pvc 3 dynamic eor 0x19 insert
```

Configuring Translation Authorization for a TCP-to-X.25 Protocol Translation Session Example

The following example uses an authorization method list named mygroup. Serial interfaces 2/0 and 2/1 connect to X.25 hosts, each of which provides multiple services at different X.25 subaddresses. Some of the translate statements specify unique authorization tags so the services can be individually controlled; others specify generic tags (perhaps because they are less critical, such as a monitoring service rather than one which permits configuration changes).

```
aaa authorization network mygroup group tacacs+
x25 routing
!
interface Ethernet0/0
  ip address 10.60.155.30 255.255.255.0
!
interface Serial2/0
  encapsulation x25 dce
  x25 ltc 30
!
interface Serial2/1
  encapsulation x25 dce
  x25 ltc 30
!
x25 route ^13033 interface Serial2/0
x25 route ^13133 interface Serial2/1
!
translate tcp 10.60.155.36 port 2001 x25 1303301 login authorize mygroup a-port01
translate tcp 10.60.155.36 port 2002 x25 1303302 login authorize mygroup a-port02
```

■ **translate tcp**

```

translate tcp 10.60.155.36 port 2003 x25 1303303 login authorize mygroup monitor
translate tcp 10.60.155.36 port 2004 x25 1303304 login authorize mygroup monitor
translate tcp 10.60.155.36 port 2005 x25 13033 pvc 1 login authorize mygroup a-admin01
!
translate tcp 10.60.155.36 port 2101 x25 1313301 login authorize mygroup b-port01
translate tcp 10.60.155.36 port 2102 x25 1313302 login authorize mygroup b-port02
translate tcp 10.60.155.36 port 2103 x25 1313303 login authorize mygroup monitor
translate tcp 10.60.155.36 port 2104 x25 1313304 login authorize mygroup monitor

```

With this configuration, the router accepts Telnet requests to 10.60.155.36 at any of the TCP ports listed. The user is required to log in, then the router sends an authorization request specifying “translate” as the value of the “service” AV pair, and the authorization tag from the corresponding **translate** command as the value of the “azn-tag” AV pair. The user id and remote address of the Telnet session are also included in the authorization request. If the authorization server approves the request, the connection to the specified X.25 address is attempted; if the request is denied, the Telnet connection is closed.

The authorization server would not be able to distinguish between connections to 10.60.155.36 port 2003 and 10.60.155.36 port 2104, because they specify the same authorization tag.

Related Commands

Command	Description
aaa	Sets parameters that restrict user access to a network.
authorization	
show translate	Displays configured translation sessions.
translate lat	Translates a LAT connection request automatically to another outgoing protocol connection.
translate x25	Translates an X.25 connection request automatically to another outgoing protocol connection.
x29 access-list	Limits access to the access server from certain X.25 hosts.
x29 profile	Creates a PAD profile script for use by the translate command.

translate tcp (virtual access interfaces)

When receiving a TCP connection request to a particular destination address or host name, to set up the Cisco router to automatically translate the request to another outgoing protocol connection type, use the **translate tcp** command in global configuration mode. To remove or change the translation request, use the **no** form of this command.

translate tcp *incoming-address* [*incoming-options*] **virtual-template** *number* [*global-options*]

no translate tcp *incoming-address* [*incoming-options*] **virtual-template** *number* [*global-options*]

Syntax Description

<i>incoming-address</i>	TCP/IP Telnet and a standard IP address or host name. The <i>ip-address</i> argument is a standard, four-part dotted decimal IP address or the name of an IP host that can be resolved by the Domain Name System (DNS) or explicit specification in an ip host command.
<i>incoming-options</i>	(Optional) Incoming connection request options. These arguments can have the following values: <ul style="list-style-type: none"> • binary—Negotiates Telnet binary mode on the Telnet connection. (This was the default in previous versions of the Cisco IOS software and is set automatically when you enter a translate command in the old format.) • port number—For incoming connections, enter the number of the port to match. The default is port 23 (Telnet). For outgoing connections, enter the number of the port to use. The default is port 23. • printer—Supports LAT and X.25 printing over a TCP network among multiple sites. This keyword causes the protocol translation software to delay the completion of an incoming Telnet connection until after the outgoing protocol connection (to LAT or X.25) has been successfully established. An unsuccessful outgoing connection attempt results in the TCP connection to the router being refused, rather than being accepted and then closed, which is the default behavior. Note that using this keyword will force the global quiet keyword to be applied to the translation. • stream—Performs stream processing, which enables a raw TCP stream with no Telnet control sequences. A stream connection does not process or generate any Telnet options, and also prevents Telnet processing of the data stream. This keyword might be useful for connections to ports running the UNIX-to-UNIX Copy Program (UUCP) or other non-Telnet protocols, or to ports connected to printers. For ports connected to printers using Telnet, the stream keyword prevents some of the problems associated with using Telnet for printers, such as unusual events happening to carriage returns or line feeds and echoing of data back to VMS systems.
virtual-template <i>number</i>	Applies the virtual interface template specified by the <i>number</i> argument in place of outgoing options.

<i>global-options</i>	<p>(Optional) One or more of the following translation options can be used by any connection type:</p> <ul style="list-style-type: none"> • access-class <i>number</i>—Allows the incoming call to be used by source hosts that match the access list parameters. The argument <i>number</i> is an integer previously assigned to an access list. Standard access list numbers are in the range from 1 to 99; expanded standard access lists numbers are in the range 1300 to 1999. • local—Allows Telnet protocol negotiations to <i>not</i> be translated. • login—Requires that the user log in before the outgoing connection is made. This type of login is specified on the virtual terminal lines with the login command. • max-users <i>number</i>—Maximum number of simultaneous users of the translation. • quiet—Suppresses printing of user-information messages. • swap—Valid for TCP-to-X.25 translations only, and allows X.3 parameters to be set on the router by the host originating the X.25 call, or by an X.29 profile. This configuration enables incoming and outgoing X.25 connections to be swapped so that the device is treated like a PAD when it accepts a call. By default, the router functions like a PAD for calls that it initiates, and like an X.25 host for calls it accepts. The swap keyword allows connections from an X.25 host that wants to connect to the router, and then treats it like a PAD.
-----------------------	---

Defaults

No default translation parameters

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines

The command syntax documented here shows how to apply a virtual interface template in place of outgoing **translate** options. If you are using virtual templates for protocol translation, all outgoing options are defined in the virtual interface template.

You define the protocol translation connections by choosing a protocol keyword and supplying the appropriate address, host name, or service name. The protocol connection information is followed by optional features for that connection, as appropriate. For example, the **binary** keyword is only appropriate with TCP/IP connections. The global options, in general, apply to all the connection types, but there are exceptions.

Examples

The following example illustrates the use of the TCP incoming **printer** keyword for an incoming TCP connection:

```
interface virtual-template1
 ip unnumbered Ethernet0
 peer default ip address 10.12.108.1
 ppp authentication chap

translate tcp 172.19.32.250 printer virtual-template1
```

Related Commands

Command	Description
show translate	Displays configured translation sessions.
translate tcp	Translates a TCP connection request automatically to another outgoing protocol connection.
translate x25	Translates an X.25 connection request automatically to another outgoing protocol connection.
x29 access-list	Limits access to the access server from certain X.25 hosts.
x29 profile	Creates a PAD profile script for use by the translate command.

translate use telnet

To specify the required IP address in a Telnet-to-PAD protocol translation ruleset, use the **translate use telnet** command in global configuration mode. To disable the address, use the **no** form of this command.

translate use telnet *ip-address*

no translate use telnet *ip-address*

Syntax Description	<i>ip-address</i>	Incoming Telnet IP address used by translation rulesets.
---------------------------	-------------------	--

Defaults	No default behavior or values
-----------------	-------------------------------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	12.3(8)T	This command was introduced.
	12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.

Usage Guidelines	An IP address must be specified for the protocol translator to respond to Address Resolution Protocol (ARP) attempts for that address. The IP address that the protocol translation software listens for must be on a connected subnet; it cannot be used by another interface unless you also specify a TCP port number, and there cannot be another host that responds to ARPs for that address.
-------------------------	--

Examples	The following example sets the IP address for a translation ruleset:
-----------------	--

```
translate use telnet 10.10.1.5
!
translate ruleset T_to_P from telnet to pad
description Site1 10.10.1.5 Area Code 555 exchg 900
match dest-addr ^10.10.1.5$ dest-port ^[1-5]...$
substitute telnet dest-port ^1(...) into pad dest-addr 555900\1
.
.
.
```

Related Commands	Command	Description
	description (ruleset)	Adds a description about a translation rule set.
	match (ruleset)	Identifies a connection for processing by the translation rule set.
	options (ruleset)	Specifies protocol translation options in a translation rule set.

Command	Description
set (ruleset)	Unconditionally sets one or more connection parameters to a fixed value for a translation rule set.
show translate ruleset	Displays a summary of a specific or of all configured translation rule sets, behavioral parameters, and usage statistic.
skip (ruleset)	Identifies a connection for omission by the translation rule set.
substitute (ruleset)	Matches an available protocol and substitutes another in a translation rule set.
test (ruleset)	Tests parameter values in a translation rule set using regular expressions.
test translate	Displays a trace of protocol translation behavior for a connection attempt.
translate ruleset	Defines a unique name for a translation rule set, specifies translated protocols, and enters translate ruleset configuration mode.
x25 pvc translate ruleset	Configures PVCs that are valid for protocol translation rule set handling.

translate x25

To translate a connection request to another protocol connection type when receiving an X.25 connection request to a particular destination address or hostname, use the **translate x25** command in global configuration mode. To remove or change the translation request, use the **no** form of this command.

translate x25 *incoming-address* [*incoming-options* [**pvc** *number* [*pvc-options*]]] *protocol*
outgoing-address [*outgoing-options*] [*global-options*]

no translate x25 *incoming-address* [*incoming-options* [**pvc** *number* [*pvc-options*]]] *protocol*
outgoing-address [*outgoing-options*] [*global-options*]

Syntax Description

<i>incoming-address</i>	<p>An X.25 and X.121 address that conforms to specifications provided in the <i>CCITT 1984 Red Book</i>.</p> <p>This address generally consists of a portion that is administered by the public data network (PDN) and a portion that is locally assigned. You must be sure that the numbers you assign agree with the addresses assigned to you by the X.25 service provider. X.121 addresses are generally subaddresses of X.121 addresses for X.25 network interfaces. Typically, the interface address will be a 12-digit number. Any additional digits are interpreted as a subaddress. The PDN still routes these calls to the interface, and Cisco IOS software is responsible for interpreting the extra digits.</p> <p>Do not use the same address on the interface and for translation.</p>
<i>incoming-options</i>	<p>(Optional) An incoming connection request option with the following choices:</p> <ul style="list-style-type: none"> • accept-reverse—Accepts reverse charged calls on an X.121 address even if the serial interface is not configured to accept reverse charged calls. • cud c-u-data—Specifies the Call User Data (CUD) field to match the X.25 Incoming Call packet. If the cud keyword is not configured, the CUD in the Incoming Call packet must be blank. • hexcud—Indicates that the CUD will be interpreted in hexadecimal format. • idle minutes—Specifies the number of minutes the virtual circuit is idle. This keyword enables the protocol translation function to clear a switched virtual circuit (SVC) after a set period of inactivity, where <i>minutes</i> is the number of minutes in the period. Calls either originated or terminated are cleared. The maximum value of the <i>minutes</i> argument is 255. The default value of the <i>minutes</i> argument is zero.

- **printer**—Supports local-area transport (LAT) and TCP printing over an X.25 network among multiple sites. Provides an “interlock mechanism” between the acceptance of an incoming X.25 connection and the opening of an outgoing LAT or TCP connection. This keyword causes the Cisco IOS software to delay the call confirmation of an incoming X.25 call request until after the outgoing protocol connection (to TCP or LAT) has been established. An unsuccessful outgoing connection attempt to the router results in the incoming X.25 connection being refused, rather than being accepted and then closed, which is the default behavior. Note that using this keyword will force the global **quiet** keyword to be applied to the translation.
- **profile** *profile*—Sets X.3 packet assembler/disassembler (PAD) parameters as defined in the profile created by the **x29 profile** command.

pvc *number*
[*pvc-options*]

(Optional) Specifies that the outgoing connection is actually a permanent virtual circuit (PVC). Only one session is allowed per PVC. Use the following options to further define the connection:

- **interface serial** *number*—Specifies a PVC interface on which to set up the PVC connection. The *number* argument specifies the virtual circuit channel number of the connection, which must be less than the virtual circuits assigned to the SVC.
- **packetsize** *in-size out-size*—Specifies the input packet size (*in-size*) and output packet size (*out-size*) for the PVC. Valid packet size values are 16, 32, 64, 128, 256, 512, 1024, 2048, and 4096.
- **window size** *in-size out-size*—Specifies the packet count for input windows (*in-size*) and output windows (*out-size*) for the outgoing translation. The size range is from 1 to 127 and must not be greater than the value set for the **x25 modulo** command. You must specify the same value for *in-size* and *out-size* arguments.

Note When the incoming connection is a PVC, the **login** and **authorize** global options and the **autocommand** option for the outbound protocol are not available.

<i>protocol</i>	A protocol name followed by an address or hostname. Protocol translation choices are lat , ppp , slip , and tcp .
<i>outgoing-address</i>	<p>Note The hostname is translated to an address during configuration, unless you are translating to TCP and using the host-name keyword, which allows the hostname to be resolved at connection time instead of configuration time. See Table 58 for more information about the host-name keyword.</p> <p>The following additional keywords can be entered instead of a protocol name:</p> <ul style="list-style-type: none"> • autocommand—Specifies an EXEC command for an outgoing connection. The command executes upon connection to a host. You can issue any EXEC command and any switch or hostname as an argument to the autocommand option. If the string following autocommand has one or more spaces as part of the string, you must place quotation marks (“ ”) around the string. If you want to enable AppleTalk Remote Access (ARA) on an outgoing connection, specify the autocommand and arap keywords. These keywords are necessary for ARA because ARA does not use addressing, and this option permits you to invoke the ARA string. • Note The autocommand option is not available when the incoming connection is a PVC. • virtual-template—Associates a virtual template with a virtual access interface. See the translate x25 (virtual access interfaces) command description for more information.
<i>outgoing-options</i>	(Optional) Outgoing connection request option. Choices depend on the protocol or command entered. See Table 55 , Table 56 , Table 57 , and Table 58 for a list of outgoing protocol translation options.

global-options

(Optional) One or more of the following translation options can be used by any connection type:

- **access-class** *number*—Allows the incoming call to be used by source hosts that match the access list parameters. The *number* argument is an integer previously assigned to an access list. Standard access list numbers range from 1 to 99; expanded standard access list numbers range from 1300 to 1999.
- **authorize** *method-list tag*—Enables authorization for protocol translation sessions. The *method-list* argument is the list of authorization methods defined by the **aaa authorization** command with the **translate** keyword. The *method-list* argument may have the value of the *list-name* argument or the **default** keyword. The *tag* argument is an alphanumeric string of up to 64 characters. The *tag* argument need not be unique; more than one instance of the **translate** keyword can specify identical values for the *tag* argument.

Note The **authorize** option is not available when the incoming connection is a PVC.

- **eor marker** [**insert**]—Defines the End-of-Record (EOR) marker for the translation session. The *marker* argument may be any set of characters from 1 to 4 in length. Nonprintable characters must be entered in hexadecimal format. The **insert** keyword inserts the EOR marker into the TCP stream after each X.25 packet without a More-bit (M-bit) set is received.
- **local**—Specifies that the Telnet protocol negotiations *not* be translated.
- **login**—Requires that the user log in before establishing the outgoing connection. This type of login is specified on the virtual terminal lines with the **login** option.

Note The **login** option is not available when the incoming connection is a PVC.

- **max-users** *number*—Limits the number of simultaneous users of the translation to *number* (an integer you specify).
- **quiet**—Suppresses printing of user-information messages.
- **swap**—(Valid for only X.25-to-TCP translations.) Allows the host to set X.3 parameters on the router by initiating the X.25 call, or through an X.29 profile. This configuration swaps the incoming and outgoing X.25 connections and the device is treated like a PAD when it accepts a call. By default, the router functions like a PAD for the calls it initiates, and like an X.25 host for the calls it accepts. The **swap** keyword allows connections from an X.25 host that wants to connect to the router, and then treats the router like a PAD.

Command Default

No default translation parameters are set.

Command Modes

Global configuration (config)

Command History

Release	Modification
10.0	This command was introduced.
12.3(2)T	The authorize method-list tag keyword and arguments were added to support authorization of protocol translation sessions. The eor marker [insert] keywords and argument were added to support the EOR function for Data Communication Networks (DCNs).
12.2SX	This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.
15.1(2)T	This command was modified. The hexcud incoming-option keyword was added. This keyword allows you to enter and interpret the CUD in hexadecimal format.

Usage Guidelines

You can define protocol translation connections by supplying a protocol keyword and the address, hostname, or service name. An X.25 protocol translation command can be as simple as the following example:

```
Router(config)# translate x.25 1236672 tcp 10.1.1.1
```

Cisco IOS software provides a broad range of options that support protocol translations in many networking environments. [Table 55](#), [Table 56](#), [Table 57](#), and [Table 58](#) lists the **translate x25** translation options by protocol.

You can also use the Cisco IOS command-line interface to help you understand how these keywords are entered. In global configuration mode, enter the **translate** command and add a question mark at the end of the command to display the available options. Here are some examples:

```
Router(config)# translate x25 ?
```

```
WORD  X.121 Address pattern
```

```
Router(config)# translate x25 66666 ?
```

```
accept-reverse  Accept reverse charge on a per-call basis
autocommand     Associate a command with a translation on this connections
cud             Specify the Call User Data (CUD)
idle            Specify VC idle timer
lat             DEC LAT protocol
ppp            Virtual async PPP
printer         Enable non-interactive (implies global quiet)
profile         Use a defined X.3 profile
pvc            An incoming connection is actually a PVC
slip           Virtual async SLIP
tcp            TCP/IP Telnet
virtual-template Associate a virtual template with virtual access interface
x25            X.25
```

```
Router(config)# translate x25 66666 tcp 10.1.1.1 ?
```

```
access-class    Allow access list parameters to be used by source hosts
binary         Negotiate Telnet binary mode on the connection
host-name       Store the host name rather than its IP address
local          Allow Telnet protocol negotiations not to be translated
login          Require that the user log in before the outgoing connection
               is made
max-users       Limit the number of simultaneous users of the translation
multibyte-IAC   Always treat multiple IACs as telnet command
```

port	Port Number
quiet	Suppress printing of user-information messages
source-interface	Specify source interface
stream	Treat telnet escape characters as data
swap	Allow X.3 parameters to be set on the protocol translator by the host originating the X.25 call

Table 55 **X.25-to-LAT Outgoing Options**

Outgoing LAT Translation

lat *service-name*

Translates X.25 to the LAT protocol. The software must learn the service name through LAT service advertisements before it can use the service.

Outgoing LAT Connection Request Options

Use the following options to configure LAT connection requests:

- **node** *name*—Connects to the specified node that offers a LAT service. By default, the connection is made to the highest-rated node that offers the service.
 - **port** *name*—Specifies the destination LAT port name in the format of the remote system. This parameter is usually ignored in most time-sharing systems, but is used by terminal servers that offer reverse-LAT services.
 - **unadvertised**—Prevents LAT service advertisements from being broadcast to the network.
-

Table 56 **X.25-to-PPP Outgoing Options****Outgoing PPP Translation**

ppp {*ip-address* | **ip-pool** [**scope-name** *name*]}

Translates from X.25 to virtual asynchronous PPPs. Supply an IP address as a standard, four-part dotted-decimal IP address.

The **ip-pool** keyword obtains an IP address from a DHCP proxy client or a local pool. If the **scope-name** keyword is not specified, the address is obtained from a DHCP proxy client. If the **scope-name** keyword is specified, the IP address is obtained from the specified local pool. The **scope-name** keyword can specify a range of IP addresses.

Outgoing PPP Connection Request Options

Use the following options to configure PPP connection requests:

- **authentication** {**pap** | **chap**}—Sets Challenge Handshake Authentication Protocol (CHAP) or Password Authentication Protocol (PAP) authentication for PPP on virtual asynchronous interfaces. If you specify both options, the order is significant; the system will try to use the first authentication type, and then the second.
- **header-compression**—Configures header compression on IP packets only.
- **ipx loopback** *number*—Specifies the loopback interface to be created and permits clients running IPX-PPP over X.25 to connect through vtys on the router. A loopback interface must be created and configured with a Novell IPX network number before IPX-PPP can work on the vty. The vty is assigned to the loopback interface.
- **keepalive** *number-of-seconds*—Specifies the interval at which keepalive packets are sent on Serial Line Internet Protocol (SLIP) and PPP virtual asynchronous interfaces. By default, keepalive packets are enabled and sent every 10 seconds. To disable keepalive packets, use the value 0. The active keepalive interval is 1 through 32,767 seconds. When you do not change from the default of 10, the keepalive interval does not appear in the **more system:running-config** or **show translate** command output.
- **mtu** *bytes*—Sets the interface MTU of packets that the virtual asynchronous interface supports. The default MTU is 1500 bytes on a virtual asynchronous interface. The range is from 64 to 1,000,000 bytes.
- **routing**—Permits routing updates between connections. This option is required if the destination device is not on a subnet connected to one of the interfaces on the router.
- **use-tacacs**—Uses TACACS to verify PPP authentications for CHAP or PAP on virtual asynchronous interfaces.

Table 57 **X.25-to-SLIP Outgoing Options****Outgoing SLIP Translation****slip** {*ip-address* | **ip-pool** [**scope-name** *name*]}

Translates from X.25 to virtual asynchronous SLIP. Supply an IP address as a standard, four-part dotted-decimal IP address.

The **ip-pool** keyword obtains an IP address from a DHCP proxy client or a local pool. If the **scope-name** keyword is not specified, the address is obtained from a DHCP proxy client. If the **scope-name** keyword is specified, the IP address is obtained from the specified local pool. The **scope-name** keyword can specify a range of IP addresses.

Note The **slip** command applies only to outgoing connections; SLIP is not supported on incoming protocol translation connections.

Outgoing SLIP Connection Request Options

Use the following options to configure SLIP connection requests:

- **header-compression** [**passive**]—Implements header compression on IP packets only. The **passive** keyword permits compression on outgoing packets only if incoming TCP packets on the same virtual asynchronous interface are compressed. The default (without the **passive** keyword) permits compression on all traffic.
- **ipx loopback** *number*—Specifies the loopback interface to be created and permits clients running IPX-PPP over X.25 to connect through vty's on the router. A loopback interface must have been created and configured with a Novell IPX network number before IPX-PPP can work on the vty. The vty is assigned to the loopback interface.
- **keepalive** *number-of-seconds*—Specifies the interval at which keepalive packets are sent on SLIP and PPP virtual asynchronous interfaces. By default, keepalive packets are enabled and sent every 10 seconds. To shut off keepalive packets, use the value 0. The active keepalive interval is 1 through 32,767 seconds. When you do not change from the default of 10, the keepalive interval does not appear in the **more system:running-config** or **show translate** command output.
- **mtu** *bytes*—Sets the interface MTU of packets that the virtual asynchronous interface supports. The default MTU is 1500 bytes on a virtual asynchronous interface. The acceptable range is from 64 to 1,000,000 bytes.
- **routing**—Permits routing updates between connections. This keyword is required if the destination device is not on a subnet connected to one of the interfaces on the router.

Table 58 **X.25-to-TCP Outgoing Options****Outgoing TCP Translation****tcp** *ip-address*

Translates X.25 to TCP/IP Telnet. Supply an IP address as a standard, four-part dotted-decimal IP address, or the name of an IP host that can be resolved by the DNS, or an explicit specification in an **ip host** command (see the description for the **host-name** keyword in the “Outgoing TCP Connection Request Options” section).

Table 58 **X.25-to-TCP Outgoing Options (continued)****Outgoing TCP Connection Request Options**

Use the following options to configure TCP connection requests:

- **binary**—Negotiates Telnet binary mode on the connection.
- **host-name**—Stores the hostname rather than its IP address, thereby allowing the hostname to be resolved at connection time instead of configuration time. There is also a **rotor** keyword suboption that you can use to modify the behavior of the **host-name** keyword by randomly choosing one of the IP addresses defined by the **ip host** configuration command. If one address fails, another one will be tried until all addresses are exhausted. You can use the **rotor** keyword to provide basic load sharing of IP destinations.
- **multibyte-IAC**—Always treat multiple Interpret as Command (IAC) escape character codes as Telnet commands.
- **port number**—For incoming connections, enter the corresponding port number. The default is port for Telnet is 23.
- **source-interface**—Specifies the source address used for Telnet connections initiated by the router.
- **stream**—Performs stream processing, which enables a raw TCP stream with no Telnet control sequences. A stream connection does not process or generate any Telnet options, and also prevents Telnet's processing of data stream. This option might be useful for connections to ports running UNIX-to-UNIX Copy Program (UUCP) or other non-Telnet protocols, or to ports connected to printers. For ports connected to printers using Telnet, the **stream** keyword prevents most problems associated with using Telnet for printers, such as unusual events happening to carriage returns or line feeds and echoing of data back to VPN/Security Management Solution (VMS) systems.

Protocol Translation and X.25 PVCs Functional Description

This section describes how the protocol translator works with X.25 PVCs. It will help you understand the overall behavior of incoming and outgoing X.25 PVCs associated with a **translate** command, enabling you to correctly configure protocol translator PVCs for your application.

Configuring X.25 PVCs

When the **translate x25** command is configured with a PVC, an attempt is made to create the PVC. The following conditions can cause this attempt to fail:

- The PVC number in the **translate x25** command is not within the range of logical channels defined for use by PVCs in the interface configuration.
- The PVC number in the **translate x25** command is already in use.
- An X.25 destination in a **translate x25** command is routed to X.25 over TCP/IP (XOT), Connection Mode Network Service (CMNS), or Annex G, which do not support translated PVCs.

PVC numbers must be unique across an X.25 connection; however, PVC 1 on serial interface 1/0 is different (and therefore unique) from PVC 1 on serial interface 2/1.

Once the **translate x25** command is accepted, the X.25 interface on which the PVC is created goes down, the PVC enters an inactive state, the TCP or LAT connection is terminated, but the existing PAD context remains inactive.

An incoming TCP or LAT connection associated with an outgoing PVC (displaying a "P/Inactive message") will be rejected by the protocol translator.

If any X.25 traffic is received while the corresponding TCP or LAT connection is terminated, and if a data packet is received in state D1, a reset with a diagnostic message will be displayed, similar to the following:

```
20:17:11.809: Serial2: X.25 O D1 Reset (5) 8 lci 4
20:17:11.809: Cause 29, Diag 113 (Network out of order (PVC)/Remote network problem)
```

The number of outgoing and incoming protocol translation PVCs is limited only by the number of vtys supported on the Cisco router. Remember that each protocol translation session uses a vty, which lowers the number of vtys available for Telnet sessions.

By default, the Cisco router sends a reset packet with the cause “PVC Network Operational” and diagnostic “Maintenance action” messages at the start of a TCP- or LAT-to-PVC translation session to announce that the connection is established and that the PVC is able to handle data traffic. To suppress the PVC reset packet at TCP or LAT session startup, configure the **no-reset** keyword as shown in the following example:

```
translate tcp 192.168.22.102 port 5 x25 333 pvc 5 no-reset profile tcl
```

Changing or Removing a translate Command PVC Configuration

Removing a **translate** command with an outgoing PVC specified is allowed only when no active connection is associated with the outgoing PVC. An attempt to remove an active translation results in the following message:

```
Translate: Can't delete/add entry - Connection(s) are currently active
```

For example, if PVC 5 is assigned to a **translate** command as shown in the following example:

```
translate tcp 10.0.155.61 port 5 x25 5 pvc 5 interface Serial2/0
```

And you want PVC 5 to be assigned under an X.25 interface instead of the **translate** command, as shown in the following example:

```
interface serial2/0
  x25 pvc 5 int s4/0 pvc 25
```

Perform the following steps to configure this reassignment:

-
- Step 1** Check whether a PVC is associated with a serial connection using the **show x25 EXEC** command, as follows:
- ```
Router# show x25 vc 5

PVC 5, State:D1, Interface:Serial2/0
 Started ...

Line:230 vty 4 Location:Host:nmos3m1
connected to PAD <--> X25
```
- Step 2** If the PVC is associated with a TCP connection, terminate the connection by disconnecting the TCP session or by using the **clear line EXEC** command, as shown in the following example:
- ```
Router# clear line vty 4
```
- Step 3** Enter configuration mode, delete the **translate** command, and reassign PVC 5 to an interface:
- ```
Router(config)# no translate tcp 10.0.155.61 port 5 x25 5 pvc 5 interface Serial2/0
Router(config)# interface serial2/0
Router(config-if)# x25 pvc 5 int s4/0 pvc 25
```

If you want to modify the **translate** command and change the PVC number from 5 to 12, follow Steps 1 and 2, and modify the **translate** command with PVC 12, as follows:

```
Router(config)# translate tcp 10.0.155.61 port 12 x25 12 pvc 12 interface Serial2/0
```

### Understanding the X.25 Address and the PVC Interface Option on a translate Command

The protocol translator locates the X.121 destination address in the X.25 route table to determine the interface on which to establish the PVC. A more up-to-date, simpler approach uses the **translate** command with the **interface** keyword, which ignores the status of the interface by avoiding references to the X.25 route table.

For example, instead of configuring an **x25 route** command for each translated PVC, and entering a long X.121 address on the **translate** command, as shown in the following example:

```
x25 route ^32785223344502 interface Serial1/5
translate tcp 10.0.155.61 port 2502 x25 32785223344502 pvc 1
```

You can enter one **translate** command that links the IP port number with the X.121 address and specifies the interface on which to establish the PVC, as follows:

```
translate tcp 10.0.155.61 port 2502 x25 2502 pvc 1 interface Serial 1/5
```

This is the recommended approach and should be adopted in place of **translate** commands that cause the destination address to be looked up in the route table.

## Examples

The following example shows how to use the **translate** global configuration command to translate from an X.25 PAD to a LAT device on Network A. It is applied to Router-A. The configuration example includes an access list that limits remote LAT access through Router-A to connections from PAD-C. This example typifies the use of access lists in the Cisco IOS software. The first two lines define the scope of access list 1. The first line specifies that access list 1 will permit all calls from the X.121 address 44444. The caret symbol (^) specifies that the first number 4 is the beginning of the address number. The second line of the definition explicitly denies calls from any other number. (Refer to the appendix “Regular Expressions” in the *Cisco IOS Terminal Services Configuration Guide* for information about the use of special characters in defining X.121 addresses.)

```
! Define X25 access list to only allow pad-c.
x29 access-list 1 permit ^44444
x29 access-list 1 deny .*
!
! Set up translation.
translate x25 1111101 lat LAT-A access-class 1
```

The following example shows a simple X.25-to-TCP **translate x25** command. Packets coming in X.25 address 652365123 arrive via PVC 1 and are translated to TCP packets and sent out through the IP address 172.16.1.1.

```
translate x25 652365123 pvc 1 tcp 172.16.1.1
```

The following example shows a more complex configuration that calls an X.29 profile and swaps the default PAD operation of the router with that of an X.25 host. The name of the profile is fullpackets.

```
x29 profile fullpackets 2:0 3:0 4:100 7:21
translate x25 217536124 profile fullpackets tcp Host1 port 4006 swap
```

The following example shows the use of the X.25 incoming protocol **printer** keyword for an incoming X.25 connection:

```
translate x25 55555 printer tcp 172.16.1.1
```

The following example shows how to cause the protocol translator to try and connect to the IP address 172.16.1.1, and if that fails, to try all IP addresses listed in the **ip host** command:

```
ip host my-hosts 172.16.1.1 172.16.2.1 172.16.3.1
translate x25 55555 tcp my-hosts host-name
```

The following example shows how to use the **rotor** keyword to enable the protocol translator to randomly choose one of the IP addresses listed in the **ip host** command, and if it fails to connect, to try another IP address, until all IP addresses are exhausted:

```
ip host my-hosts 172.16.1.1 172.16.2.1 172.16.3.1
translate x25 55555 tcp my-hosts host1 rotor
```

The following example shows how to translate X.25 packets to PPP and enable routing updates between the two connections:

```
translate x25 12345678 ppp 10.0.0.2 routing
```

The following example shows how to permit clients running AppleTalk Remote Access (ARA) to connect through the virtual terminal lines of the device to an AppleTalk network:

```
appletalk routing
translate x25 12345678 autocommand arap
 arap enable
 arap dedicated
 arap timelimit 45
 arap warningtime 5
 arap noguest
 arap require-manual-password
 arap net-access-list 614
```

The following example shows how to specify a pool of IP addresses from a DHCP server named D-Server1. The example also shows how the incoming TCP traffic is translated to SLIP. The DHCP server will dynamically assign IP addresses to outgoing sessions.

```
ip address-pool dhcp-proxy-client
ip dhcp-server D-Server1
translate x25 5467835 ppp ip-pool scope-name D-Server1
```

The following example shows how to specify a local IP pool named Pool2 with IP addresses ranging from 172.18.10.10 to 172.18.10.110. The example also shows how incoming X.25 traffic can be translated to PPP. The local IP pool Pool2 will be used to dynamically assign IP addresses to outgoing sessions.

```
ip-pool Pool2 172.18.10.10 172.18.10.110
translate x25 1234567 ppp ip-pool scope-name Pool2
```

The following example shows how to set the idle timer. X.25 calls are cleared if they are idle for the configured time.

```
translate x25 1234 idle 2 lat Service3
```

The following example shows how to configure an X.25-to-TCP protocol translation session to insert an EOR marker in a TCP packet that does not contain the M-bit set. The EOR marker in this example consists of printable characters.

```
translate x25 12345678 pvc 3 tcp 10.60.155.63 eor AAA insert
```

The following example shows how to use the default authorization method list. Incoming PAD calls to the router on serial interface 1/1 are translated to Telnet calls for various destinations based on the X.25 subaddress. Use of the first two translate statements is restricted to users that are approved by the authorization server for access to group1; the third translate statement will complete the connection only if the authorization server grants access to group2.

```
aaa authorization network default group tacacs+
!
interface Serial1/1
 encapsulation x25
 x25 address 5551088
!
translate x25 555108801 tcp 10.60.155.1 login authorize default group1
translate x25 555108802 tcp 10.60.155.2 login authorize default group1
translate x25 555108803 tcp 10.60.155.3 login authorize default group2
```

#### Related Commands

| Command                                          | Description                                                                                |
|--------------------------------------------------|--------------------------------------------------------------------------------------------|
| <b>aaa authorization</b>                         | Sets parameters that restrict user access to a network.                                    |
| <b>show translate</b>                            | Displays configured translation sessions.                                                  |
| <b>translate lat</b>                             | Translates a LAT connection request automatically to another outgoing protocol connection. |
| <b>translate tcp</b>                             | Translates a TCP connection request automatically to another outgoing protocol connection. |
| <b>translate x25 (virtual access interfaces)</b> | Translates a connection request to an outgoing protocol connection type.                   |
| <b>x29 access-list</b>                           | Limits access to the access server from certain X.25 hosts.                                |
| <b>x29 profile</b>                               | Creates a PAD profile script for use by the <b>translate</b> command.                      |

## translate x25 (virtual access interfaces)

When receiving an X.25 connection request to a particular destination address, to set up the Cisco router to automatically translate the request to another outgoing protocol connection type, use the **translate x25** command in global configuration mode. To remove or change the translation request, use the **no** form of this command.

**translate x25** *incoming-address* [*incoming-options* [**pvc number** [*pvc-options*]]] **virtual-template number** [*global-options*]

**no translate x25** *incoming-address* [*incoming-options* [**pvc number** [*pvc-options*]]] **virtual-template number** [*global-options*]

### Syntax Description

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>incoming-address</i> | <p>An X.25 and X.121 address that conform to specifications provided in the <i>CCITT 1984 Red Book</i>.</p> <p>This address generally consists of a portion that is administered by the public data network (PDN) and a portion that is locally assigned. You must be sure that the numbers that you assign agree with the addresses assigned to you by the X.25 service provider. The X.121 addresses generally will be subaddresses of the X.121 address for the X.25 network interface. Typically, the interface address will be a 12-digit number. Any additional digits are interpreted as a subaddress. The PDN still routes these calls to the interface, and the Cisco IOS software is responsible for interpreting the extra digits.</p> <p>Do not use the same address on the interface and for translation.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <i>incoming-options</i> | <p>(Optional) Incoming connection request keywords and arguments, as follows:</p> <ul style="list-style-type: none"> <li>• <b>accept-reverse</b>—Accepts reverse charged calls on an X.121 address even if the serial interface is not configured to accept reverse charged calls. This is an incoming option only.</li> <li>• <b>cud c-u-data</b>—Specifies the Call User Data (CUD) field to match in the X.25 Incoming Call packet. If not configured, the CUD in the Incoming Call packet must be blank.</li> <li>• <b>printer</b>—Supports LAT and TCP printing over an X.25 network among multiple sites. Provides an “interlock mechanism” between the acceptance of an incoming X.25 connection and the opening of an outgoing LAT or TCP connection. The <b>printer</b> keyword causes the protocol translation software to delay the call confirmation of an incoming X.25 call request until the outgoing protocol connection (to TCP or LAT) has been successfully established. An unsuccessful outgoing connection attempt to the router results in the incoming X.25 connection being refused, rather than being confirmed and then cleared, which is the default behavior. Note that using this keyword will force the global <b>quiet</b> keyword to be applied to the translation.</li> <li>• <b>profile profile</b>—Sets the X.3 PAD parameters as defined in the profile created by the <b>x29 profile</b> command.</li> </ul> |

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>pvc number</b><br>[pvc-options] | <ul style="list-style-type: none"> <li>• <b>pvc number</b> [<b>interface serial number</b>   <b>packetsize in-size out-size</b>   <b>window-size in-size out-size</b>]—Specifies that the outgoing connection is actually a PVC. The <i>number</i> argument specifies the virtual circuit channel number of the connection, which must be less than the virtual circuits assigned to the switched virtual circuit (SVC). Only one session is allowed per PVC. Use the following optional keywords and arguments to further define the connection: <ul style="list-style-type: none"> <li>– <b>interface serial number</b>—Specifies a PVC interface on which to set up the PVC connection.</li> <li>– <b>packetsize in-size out-size</b>—Specifies the input packet size (<i>in-size</i>) and output packet size (<i>out-size</i>) for the PVC. Valid packet size values are as follows: 16, 32, 64, 128, 256, 512, 1024, 2048, and 4096.</li> <li>– <b>window-size in-size out-size</b>—Specifies the packet count for input windows (<i>in-size</i>) and output windows (<i>out-size</i>) for the outgoing translation. Values of <i>in-size</i> and <i>out-size</i> range from 1 to 127 and must not be greater than the value set for the <b>x25 modulo</b> command. You must specify the same value for <i>in-size</i> and <i>out-size</i>.</li> </ul> </li> </ul>                                                                                                                                                                                                                                   |
| <b>virtual-template number</b>     | Applies the virtual interface template specified by the <i>number</i> argument in place of outgoing options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <i>global-options</i>              | <p>(Optional) Translation options that can be used by any connection type and can be one or more of the following:</p> <ul style="list-style-type: none"> <li>• <b>access-class number</b>—Allows the incoming call to be used by source hosts that match the access list parameters. The argument <i>number</i> is an integer previously assigned to an access list. Standard access list numbers are in the range from 1 to 99; expanded standard access lists numbers are in the range 1300 to 1999.</li> <li>• <b>local</b>—Allows Telnet protocol negotiations to <i>not</i> be translated.</li> <li>• <b>login</b>—Requires that the user log in before the outgoing connection is made. This type of login is specified on the virtual terminal lines with the <b>login</b> command.</li> <li>• <b>max-users number</b>—Limits the number of simultaneous users of the translation to <i>number</i> (an integer you specify).</li> <li>• <b>quiet</b>—Suppresses printing of user-information messages.</li> <li>• <b>swap</b>—Valid for X.25-to-TCP translations only, and allows X.3 parameters to be set on the router by the host originating the X.25 call, or by an X.29 profile. This keyword allows incoming and outgoing X.25 connections to be swapped so that the device is treated like a PAD when it accepts a call. By default, the router functions like a PAD for calls that it initiates, and like an X.25 host for calls it accepts. The <b>swap</b> keyword allows connections from an X.25 host that wants to connect to the router, and then treats it like a PAD.</li> </ul> |

**Defaults**

No default translation parameters.

**Command Modes** Global configuration

| Command History | Release | Modification                                                                                                                                                                      |
|-----------------|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                 | 10.0    | This command was introduced.                                                                                                                                                      |
|                 | 12.2SX  | This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware. |

### Usage Guidelines

The command syntax documented here shows how to apply a virtual interface template in place of outgoing **translate x25** options. If you are using virtual templates for protocol translation, all outgoing options are defined in the virtual interface template. [Table 59](#) lists all outgoing options and their corresponding interface configuration commands.

You define the protocol translation connections by choosing a protocol keyword and supplying the appropriate address or service name. The protocol connection information is followed by optional features for that connection, as appropriate. The global options, in general, apply to all the connection types, but there are exceptions. The **swap** keyword, for example, is for X.25- to-TCP translations only. See the example for more explanations on how to enter this command.

Rather than specifying outgoing translation options in the **translate** command, configure these options as interface configuration commands under the virtual interface template, then apply the virtual interface template to the **translate** command. [Table 59](#) maps outgoing **translate** command options to interface commands you can configure in the virtual interface template.

**Table 59 Mapping Outgoing translate x25 Options to Interface Commands**

| translate x25 Command Options      | Corresponding Interface Configuration Command                        |
|------------------------------------|----------------------------------------------------------------------|
| <b>ip-pool</b>                     | <b>peer default ip address</b> {ip-address   dhcp   pool [poolname]} |
| <b>header-compression</b>          | <b>ip tcp header compression</b> [on   off   passive]                |
| <b>routing</b>                     | <b>ip routing</b> or <b>ipx routing</b>                              |
| <b>mtu</b>                         | <b>mtu</b>                                                           |
| <b>keepalive</b>                   | <b>keepalive</b>                                                     |
| <b>authentication</b> {chap   pap} | <b>ppp authentication</b> {chap   pap}                               |
| <b>ppp use-tacacs</b>              | <b>ppp use-tacacs</b>                                                |
| <b>ipx loopback</b>                | <b>ipx ppp-client loopback</b> number                                |

**Examples**

The following example shows a virtual template with PPP encapsulation specified by default (not explicit). It also specifies CHAP authentication and an X.29 access list.

```
x29 access-list 1 permit ^5555
!
interface Virtual-Template1
 ip unnumbered Ethernet0
 peer default ip address 172.16.2.129
 ppp authentication chap
!
translate x25 5555667 virtual-template 1 access-class 1
```

**Related Commands**

| Command                           | Description                                                                                                                |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>interface virtual-template</b> | Creates a virtual template interface that can be configured and applied dynamically in creating virtual access interfaces. |
| <b>show translate</b>             | Displays configured translation sessions.                                                                                  |
| <b>translate lat</b>              | Translates a LAT connection request automatically to another outgoing protocol connection type.                            |
| <b>translate tcp</b>              | Translates a TCP connection request automatically to another outgoing protocol connection type.                            |
| <b>x29 access-list</b>            | Limits access to the access server from certain X.25 hosts.                                                                |
| <b>x29 profile</b>                | Creates a PAD profile script for use by the <b>translate</b> command.                                                      |



# transport-map type console

To create and name a transport map for console port access and enter transport map configuration mode, use the **transport-map type console** command in global configuration mode. To delete a transport map for console port access that was previously created, use the **no** form of this command.

**transport-map type console** *transport-map-name*

**no transport-map type console** *transport-map-name*

## Syntax Description

|                           |                                          |
|---------------------------|------------------------------------------|
| <i>transport-map-name</i> | Specifies the name of the transport map. |
|---------------------------|------------------------------------------|

## Command Default

No transport maps are configured by default.

## Command Modes

Global configuration (config)

## Command History

| Release                  | Modification                                                      |
|--------------------------|-------------------------------------------------------------------|
| Cisco IOS XE Release 2.1 | This command was introduced on the Cisco ASR 1000 Series Routers. |

## Usage Guidelines

The characteristics of the transport map are defined in transport map configuration mode.

The following options can be configured in transport map configuration mode:

- **connection wait**—Specifies how a persistent Telnet or persistent SSH connection will be handled using this transport map.
- **banner [diagnostic | wait]**—Creates a banner message that will be seen by users entering diagnostic mode or waiting for the IOS process as a result of the persistent Telnet or persistent SSH configuration.

See the command references for the individual options for additional information on a specific option.

The transport map is not actively managing incoming console port connections until it is enabled using the **transport type console** *console-line-number* **input** *transport-map-name* global configuration command.

The connection and banner settings of the transport map applied to the console port can be seen by entering the **show platform software configuration access policy** command.

## Examples

In the following example, a transport map to set console port access policies is created and attached to console port 0.

```
Router(config)# transport-map type console consolehandler
Router(config-tmap)# connection wait allow interruptable
Router(config-tmap)# banner diagnostic X
Enter TEXT message. End with the character 'X'.
Welcome to diagnostic mode
```

## ■ transport-map type console

```

X
Router(config-tmap)# banner wait X
Enter TEXT message. End with the character 'X'.
Waiting for IOS prompt
X
Router(config-tmap)# exit

Router(config)# transport type console 0 input consolehandler

```

### Related Commands

| Command                                                   | Description                                                                                                                                                 |
|-----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>banner (transport map)</b>                             | Creates a banner message that will be seen by users entering diagnostic mode or waiting for the IOS process as a result of the transport map configuration. |
| <b>connection wait</b>                                    | Specifies how an incoming connection will be handled.                                                                                                       |
| <b>show platform software configuration access policy</b> | Displays the access policy and banner settings for console, Telnet, and SSH connections.                                                                    |
| <b>transport type console</b>                             | Applies an already-configured console port transport map to a console interface.                                                                            |

# transport-map type persistent

To create and name a transport map for persistent Telnet, SSH, or web user interface connections and enter transport map configuration mode, use the **transport-map type persistent** command in global configuration mode. To delete a previously created transport map for persistent Telnet, SSH, or web user interface connections, use the **no** form of this command.

**transport-map type persistent** [**ssh** | **telnet** | **webui**] *transport-map-name*

**no transport-map type persistent** [**ssh** | **telnet** | **webui**] *transport-map-name*

## Syntax Description

|                           |                                                          |
|---------------------------|----------------------------------------------------------|
| <b>ssh</b>                | Specifies a persistent SSH transport map.                |
| <b>telnet</b>             | Specifies a persistent Telnet transport map.             |
| <b>webui</b>              | Specifies a persistent web user interface transport map. |
| <i>transport-map-name</i> | Specifies the name of the transport map.                 |

## Command Default

No transport maps are configured by default.

## Command Modes

Global configuration (config)

## Command History

| Release                  | Modification                                                      |
|--------------------------|-------------------------------------------------------------------|
| Cisco IOS XE Release 2.1 | This command was introduced on the Cisco ASR 1000 Series Routers. |

## Usage Guidelines

The characteristics of the transport map are defined in transport map configuration mode.

The following commands can be configured in persistent Telnet and SSH transport map configuration mode:

- **connection wait**—Specifies how a persistent Telnet or persistent SSH connection will be handled using this transport map.
- **rsa keypair-name**—Names the RSA keypair to be used for persistent SSH connections.
- **banner [diagnostic | wait]**—Creates a banner message that will be seen by users entering diagnostic mode or waiting for the IOS process as a result of the persistent Telnet or persistent SSH configuration.
- **time-out**—Specifies the SSH timeout interval in seconds.
- **transport interface**—Applies the transport map settings to the interface. For the Cisco ASR 1000 Series Routers, transport maps for persistent Telnet or persistent SSH handling can only be attached to the Management Ethernet interface, so the only possible value for this option is **transport interface gigabitethernet 0**. This is a required step for persistent SSH and persistent Telnet transport maps.
- **authentication-retries**—Specifies the number of authentication retries before dropping the connection.

The following commands can be configured in persistent web user interface transport map configuration mode:

- **server**—Enables the HTTP server for the transport map.
- **secure-server**—Enables the secure HTTP (HTTPS) server for the transport map.

The transport map is not actively managing incoming Telnet or SSH connections until it is applied to an interface and enabled. This command is used to apply a transport map to an interface, and the **transport type persistent telnet input** global configuration command is used to enable the transport map.

This command is currently only available for Cisco ASR 1000 Series Routers, and transport maps can be applied only to the Management Ethernet interface (interface gigabitethernet 0) on Cisco ASR 1000 Series Routers.

## Examples

In the following example, a transport map that will make all Telnet connections wait for the IOS process to become active before connecting to the router, while also allowing the user to interrupt the process and enter diagnostic mode, is configured and applied to the Management Ethernet interface (interface gigabitethernet 0).

A diagnostic and a wait banner are also configured.

The transport map is then applied to the interface when the **transport type persistent telnet input** command is entered to enable persistent Telnet.

```
Router(config)# transport-map type persistent telnet telnethandler
Router(config-tmap)# connection wait allow interruptable
Router(config-tmap)# banner diagnostic X
Enter TEXT message. End with the character 'X'.
--Welcome to Diagnostic Mode--
X
Router(config-tmap)# banner wait X
Enter TEXT message. End with the character 'X'.
--Waiting for IOS Process--
X

Router(config-tmap)# transport interface gigabitethernet 0
Router(config-tmap)# exit
Router(config)# transport type persistent telnet input telnethandler
```

In the following example, a transport map is configured that applies the following settings to any users attempting to access the Management Ethernet port via SSH:

- Users using SSH wait for the IOS process to become active, but enter diagnostic mode if the attempt to access IOS is interrupted.
- The RSA keypair name is “sshkeys.”
- The connection allows one authentication retry.
- The banner “--Welcome to Diagnostic Mode--” appears if diagnostic mode is entered as a result of SSH handling through this transport map.
- The banner “--Waiting for IOS Process--” appears if the connection is waiting for the IOS process to become active.

The transport map is then applied to the interface when the **transport type persistent ssh input** command is entered to enable persistent SSH.

```
Router(config)# transport-map type persistent ssh sshhandler
Router(config-tmap)# connection wait allow interruptable
Router(config-tmap)# rsa keypair-name sshkeys
```

```

Router(config-tmap)# authentication-retries 1
Router(config-tmap)# banner diagnostic X
Enter TEXT message. End with the character 'X'.
--Welcome to Diagnostic Mode--
X
Router(config-tmap)# banner wait X
Enter TEXT message. End with the character 'X'.
--Waiting for IOS Process--
X
Router(config-tmap)# time-out 30
Router(config-tmap)# transport interface gigabitethernet 0
Router(config-tmap)# exit

Router(config)# transport type persistent ssh input sshhandler

```

In the following example, this command is used to create a web user interface transport map using the default HTTP port.

```

Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# ip http server
Router(config)# transport-map type persistent webui http-webui
Router(config-tmap)# server
Router(config-tmap)# exit
Router(config)# transport type persistent webui input http-webui
*Apr 22 02:43:55.798: %UICFGEXP-6-SERVER_NOTIFIED_START: R0/0: psd: Server wui has been
notified to start

```

#### Related Commands

| Command                                                   | Description                                                                                                                                                  |
|-----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>authentication-retries</b>                             | Specifies the number of SSH authentication retries before dropping the connection when a persistent SSH transport map is applied to the receiving interface. |
| <b>banner (transport map)</b>                             | Creates a banner message that will be seen by users entering diagnostic mode or waiting for the IOS process as a result of the transport map configuration.  |
| <b>connection wait</b>                                    | Specifies how an incoming connection will be handled.                                                                                                        |
| <b>rsa keypair-name</b>                                   | Names the RSA keypair to be used for persistent SSH connections.                                                                                             |
| <b>server (transport map)</b>                             | Enables the HTTP server for a persistent web user interface transport map.                                                                                   |
| <b>secure-server</b>                                      | Enables the HTTPS server for a persistent web user interface transport map.                                                                                  |
| <b>show platform software configuration access policy</b> | Displays the access policy and banner settings for console, Telnet, and SSH connections.                                                                     |
| <b>time-out</b>                                           | Specifies the SSH timeout interval in seconds.                                                                                                               |
| <b>transport interface</b>                                | Applies the transport map settings to the interface.                                                                                                         |
| <b>transport type persistent</b>                          | Applies an already-configured persistent transport map to an interface.                                                                                      |

# transport input

To define which protocols to use to connect to a specific line of the router, use the **transport input** command in line configuration mode. To change or remove the protocol, use the **no** form of this command.

**transport input** {all | none [acercon] [lat] [mop] [nasi] [pad] [rlogin] [ssh] [telnet] [udptn] [v120]}

**no transport input** {all | none [acercon] [lat] [mop] [nasi] [pad] [rlogin] [ssh] [telnet] [udptn] [v120]}

## Syntax Description

|                |                                                                                                                                                                                                                                                                                                                                                     |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>all</b>     | Selects all protocols.                                                                                                                                                                                                                                                                                                                              |
| <b>none</b>    | Prevents any protocol selection on the line. This makes the port unusable by incoming connections.                                                                                                                                                                                                                                                  |
| <b>acercon</b> | (Optional) Selects the remote console for application control engine (ACE)-based blade.                                                                                                                                                                                                                                                             |
| <b>lat</b>     | (Optional) Selects the digital local-area transport (LAT) protocol and specifies both incoming reverse LAT and host-initiated connections.                                                                                                                                                                                                          |
| <b>mop</b>     | (Optional) Selects Maintenance Operation Protocol (MOP).                                                                                                                                                                                                                                                                                            |
| <b>nasi</b>    | (Optional) Selects NetWare Access Servers Interface (NASI) as the input transport protocol.                                                                                                                                                                                                                                                         |
| <b>pad</b>     | (Optional) Selects X.3 packet assembler/disassembler (PAD) incoming connections.                                                                                                                                                                                                                                                                    |
| <b>rlogin</b>  | (Optional) Selects the UNIX rlogin protocol.                                                                                                                                                                                                                                                                                                        |
| <b>ssh</b>     | (Optional) Selects the Secure Shell (SSH) protocol.                                                                                                                                                                                                                                                                                                 |
| <b>telnet</b>  | (Optional) Specifies all types of incoming TCP/IP connections.                                                                                                                                                                                                                                                                                      |
| <b>udptn</b>   | (Optional) Specifies the asynchronous data that is sent through User Datagram Protocol Telnet (UDPTN). <ul style="list-style-type: none"> <li>Asynchronous data is encapsulated into UDP packets, and then this data is unreliably sent without establishing a connection with a receiving device. This process is referred to as UDPTN.</li> </ul> |
| <b>v120</b>    | (Optional) Selects the V.120 protocol for incoming asynchronous connections over Integrated Services Digital Network (ISDN).                                                                                                                                                                                                                        |

## Defaults

No protocols are allowed on the console, tty, and AUX lines. Default is **transport input none**. All protocols are allowed on virtual terminal lines (vty). Default is **transport input all**.

## Command Modes

Line configuration (config-line)

**Command History**

| Release                  | Modification                                                                                                     |
|--------------------------|------------------------------------------------------------------------------------------------------------------|
| 10.0                     | This command was introduced.                                                                                     |
| 11.1                     | This command was modified. The <b>none</b> keyword was added and replaced the <b>all</b> keyword as the default. |
| 12.3(4)T                 | This command was modified. The <b>ssh</b> keyword was added.                                                     |
| Cisco IOS XE Release 2.1 | This command was integrated into Cisco IOS XE Release 2.1. The <b>acercon</b> keyword was added.                 |

**Usage Guidelines**

Cisco routers do not accept incoming network connections to asynchronous ports (TTY lines) by default. You must specify an incoming transport protocol or specify the **transport input all** command before the line will accept incoming connections. For example, if you are using your router as a terminal server to make console-port connections to routers or other devices, you will not be able to use Telnet to connect to these devices. You will receive the message “Connection Refused.” This behavior is new as of Cisco IOS Release 11.1. Previous to Cisco IOS Release 11.1, the default was the **transport input all** command, and the **all** keyword restored pre-Cisco IOS Release 11.0 defaults. If you are upgrading to Cisco IOS Release 11.1(1) or later releases from earlier Cisco IOS software releases, you must configure the **transport input {protocol | all}** command, or you will be locked out of your router.

You can specify one protocol, multiple protocols, all protocols, or no protocols. To specify multiple protocols, enter the keyword for each protocol, separated by a space.

The **transport input** command can be useful in distributing resources among different types of users, or in making certain that only specific hosts can access a particular port. While doing the two-step protocol translation, you can use the **transport input** command to control the protocols that can be translated to other protocols.

Access lists for each individual protocol can be defined in addition to the allowances created by the **transport input** command. Any settings made with the **transport input** command override the settings made with the **transport preferred** command.

The **rsh** command allows you to run commands on remote machines, log in to other machines, and copy files between machines. Prior to Cisco IOS Release 12.4(24)T, to do an **rsh** to a router, you had to configure the **transport input telnet** command. However, in Cisco IOS Release 12.4(24)T and later releases, to do an **rsh** to the router, you need not configure the **transport input telnet** command.

**Examples**

The following example sets the incoming protocol to Telnet for virtual terminal lines 0 to 32:

```
line vty 0 32
 transport input telnet
```

**Related Commands**

| Command                    | Description                                                                                                                      |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| <b>transport output</b>    | Determines the protocols that can be used for outgoing connections from a line.                                                  |
| <b>transport preferred</b> | Specifies the transport protocol that the Cisco IOS software uses if the user does not specify one when initiating a connection. |

# transport interface

To specify the interface where a transport map should be applied, use the **transport interface** command in transport map configuration mode command. To restore the default setting where no interface is associated with the transport map, use the **no** form of this command.

**transport interface** *interface-type interface-number*

**no transport interface** *interface-type interface-number*

## Syntax Description

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>interface-type</i>   | Specifies the type of interface where the transport map will be applied.<br><br>For persistent Telnet and persistent SSH on the Cisco ASR 1000 Series Routers, transport maps can only be attached to the Management Ethernet interface (gigabitethernet 0). Therefore, <b>gigabitethernet</b> is the only available <i>interface-type</i> for persistent SSH and persistent Telnet on the Cisco ASR 1000 Series Routers. |
| <i>interface-number</i> | Specifies the interface number.<br><br>For persistent Telnet and persistent SSH on the Cisco ASR 1000 Series Routers, transport maps can only be attached to the Management Ethernet interface (gigabitethernet 0). Therefore, <b>0</b> is the only available <i>interface-number</i> for persistent SSH and persistent Telnet on the Cisco ASR 1000 series routers.                                                      |

## Command Default

No transport maps are associated with any interfaces by default.

## Command Modes

Transport map configuration (config-tmap)

## Command History

| Release                  | Modification                                                      |
|--------------------------|-------------------------------------------------------------------|
| Cisco IOS XE Release 2.1 | This command was introduced on the Cisco ASR 1000 Series Routers. |

## Usage Guidelines

For persistent SSH and persistent Telnet on the Cisco ASR 1000 Series Router, the only interface that can accept a persistent SSH or persistent Telnet transport map is **gigabitethernet 0**.

For a transport map to be associated with an interface, this command must specify the interface for the transport map, and the **transport type persistent** global configuration must be entered to enable the transport map. If this command is not used in a transport map, the transport map is not applied to any interface and therefore has no effect on the handling of any incoming persistent Telnet or persistent SSH traffic.



## Examples

In the following example, a transport map that will make all Telnet connections wait for the IOS process to become active before connecting to the router, while also allowing the user to interrupt the process and enter diagnostic mode, is configured and applied to the Management Ethernet interface (interface gigabitethernet 0).

A diagnostic and a wait banner are also configured.

The transport map is then applied to the interface when the **transport type persistent telnet input** command is entered to enable persistent Telnet.

```
Router(config)# transport-map type persistent telnet telnethandler
Router(config-tmap)# connection wait allow interruptable
Router(config-tmap)# banner diagnostic X
Enter TEXT message. End with the character 'X'.
--Welcome to Diagnostic Mode--
X
Router(config-tmap)# banner wait X
Enter TEXT message. End with the character 'X'.
--Waiting for IOS Process--
X

Router(config-tmap)# transport interface gigabitethernet 0
Router(config-tmap)# exit
Router(config)# transport type persistent telnet input telnethandler
```

In the following example, a transport map is configured that applies the following settings to any users attempting to access the Management Ethernet port via SSH:

- Users using SSH wait for the IOS process to become active, but enter diagnostic mode if the attempt to access IOS is interrupted.
- The RSA keypair name is “sshkeys”.
- The connection allows one authentication retry.
- The banner “--Welcome to Diagnostic Mode--” appears if diagnostic mode is entered as a result of SSH handling through this transport map.
- The banner “--Waiting for IOS Process--” appears if the connection is waiting for the IOS process to become active.

The transport map is then applied to the interface when the **transport type persistent ssh input** command is entered to enable persistent SSH.

```
Router(config)# transport-map type persistent ssh sshhandler
Router(config-tmap)# connection wait allow interruptable
Router(config-tmap)# rsa keypair-name sshkeys
Router(config-tmap)# authentication-retries 1
Router(config-tmap)# banner diagnostic X
Enter TEXT message. End with the character 'X'.
--Welcome to Diagnostic Mode--
X
Router(config-tmap)# banner wait X
Enter TEXT message. End with the character 'X'.
--Waiting for IOS Process--
X
Router(config-tmap)# time-out 30
Router(config-tmap)# transport interface gigabitethernet 0
Router(config-tmap)# exit

Router(config)# transport type persistent ssh input sshhandler
```

**Related Commands**

| Command                                                   | Description                                                                                                                                                  |
|-----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>authentication-retries</b>                             | Specifies the number of SSH authentication retries before dropping the connection when a persistent SSH transport map is applied to the receiving interface. |
| <b>banner (transport map)</b>                             | Creates a banner message that will be seen by users entering diagnostic mode or waiting for the IOS process as a result of the transport map configuration.  |
| <b>connection wait</b>                                    | Specifies how an incoming connection will be handled.                                                                                                        |
| <b>rsa keypair-name</b>                                   | Names the RSA keypair to be used for persistent SSH connections.                                                                                             |
| <b>show platform software configuration access policy</b> | Displays the access policy and banner settings for console, Telnet, and SSH connections.                                                                     |
| <b>time-out</b>                                           | Specifies the SSH timeout interval in seconds.                                                                                                               |
| <b>transport type persistent</b>                          | Applies an already-configured persistent transport map to an interface.                                                                                      |
| <b>transport-map type persistent</b>                      | Creates and names a persistent transport map and enters transport map configuration mode.                                                                    |

# transport output

To determine the protocols that can be used for outgoing connections from a line, use the **transport output** command in line configuration mode. To change or remove the protocol, use the **no** form of this command.

**transport output** {all | lat | mop | nasi | none | pad | rlogin | telnet | v120}

**no transport output** {all | lat | mop | nasi | none | pad | rlogin | telnet | v120}

| Syntax Description |  |                                                                                                                                                                                                                                                                              |
|--------------------|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>all</b>         |  | Selects all protocols.                                                                                                                                                                                                                                                       |
| <b>lat</b>         |  | Selects the Digital LAT protocol, which is the protocol used most often to connect routers to Digital hosts.                                                                                                                                                                 |
| <b>mop</b>         |  | Selects Maintenance Operation Protocol (MOP).                                                                                                                                                                                                                                |
| <b>nasi</b>        |  | Selects NetWare Access Server Interface (NASI) as the output transport protocol.                                                                                                                                                                                             |
| <b>none</b>        |  | Prevents any protocol selection on the line. The system normally assumes that any unrecognized command is a host name. If the protocol is set to <b>none</b> , the system no longer makes that assumption. No connection will be attempted if the command is not recognized. |
| <b>pad</b>         |  | Selects X.3 packet assembler/disassembler (PAD), used most often to connect routers to X.25 hosts.                                                                                                                                                                           |
| <b>rlogin</b>      |  | Selects the UNIX rlogin protocol for TCP connections. The rlogin setting is a special case of Telnet. If an rlogin attempt to a particular host has failed, the failure will be tracked, and subsequent connection attempts will use Telnet instead.                         |
| <b>telnet</b>      |  | Selects the TCP/IP Telnet protocol. It allows a user at one site to establish a TCP connection to a login server at another site.                                                                                                                                            |
| <b>v120</b>        |  | Selects the V.120 protocol for outgoing asynchronous connections over ISDN.                                                                                                                                                                                                  |

| Defaults | Telnet |
|----------|--------|
|----------|--------|

| Command Modes | Line configuration |
|---------------|--------------------|
|---------------|--------------------|

| Command History | Release | Modification                 |
|-----------------|---------|------------------------------|
|                 | 10.0    | This command was introduced. |

| Release | Modification                                                                                                                                                                                  |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11.1    | The following keywords were added: <ul style="list-style-type: none"> <li>• <b>all</b></li> <li>• <b>lat</b></li> <li>• <b>pad</b></li> <li>• <b>rlogin</b></li> <li>• <b>v120</b></li> </ul> |
| 12.2SX  | This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware.             |

### Usage Guidelines

You can specify one protocol, multiple protocols, all protocols, or no protocols. To specify multiple protocols, enter the keyword for each protocol, separated by a space.

Any settings made with the **transport output** command override settings made with the **transport preferred** command.

### Examples

The following example prevents any protocol selection:

```
transport output none
```

### Related Commands

| Command                    | Description                                                                                                                      |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| <b>transport input</b>     | Defines which protocols to use to connect to a specific line of the router.                                                      |
| <b>transport preferred</b> | Specifies the transport protocol that the Cisco IOS software uses if the user does not specify one when initiating a connection. |

# transport preferred

To specify the transport protocol that the Cisco IOS software uses if the user does not specify one when initiating a connection, use the **transport preferred** command in line configuration mode. To change or remove the protocol, use the **no** form of this command.

**transport preferred** {**lat** | **mop** | **nasi** | **none** | **pad** | **rlogin** | **telnet** | **v120**}

**no transport preferred** {**lat** | **mop** | **nasi** | **none** | **pad** | **rlogin** | **telnet** | **v120**}

## Syntax Description

|               |                                                                                                                                                                                                                                                                         |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>lat</b>    | Selects the Digital LAT protocol, which is the protocol used most often to connect routers to Digital hosts.                                                                                                                                                            |
| <b>mop</b>    | Selects Maintenance Operation Protocol (MOP).                                                                                                                                                                                                                           |
| <b>nasi</b>   | Selects NetWare Access Server Interface (NASI) protocol.                                                                                                                                                                                                                |
| <b>none</b>   | Prevents any protocol selection on the line. The system normally assumes that any unrecognized command is a host name. If the protocol is set to <b>none</b> , the system no longer makes that assumption. No connection is attempted if the command is not recognized. |
| <b>pad</b>    | Selects X.3 packet assembler/disassembler (PAD), used most often to connect routers to X.25 hosts.                                                                                                                                                                      |
| <b>rlogin</b> | Selects the UNIX rlogin protocol for TCP connections. The rlogin setting is a special case of Telnet. If an rlogin attempt to a particular host has failed, the failure will be tracked, and subsequent connection attempts will use Telnet instead.                    |
| <b>telnet</b> | Selects the TCP/IP Telnet protocol. It allows a user at one site to establish a TCP connection to a login server at another site.                                                                                                                                       |
| <b>v120</b>   | Selects the asynchronous protocols over ISDN.                                                                                                                                                                                                                           |

## Defaults

Telnet

## Command Modes

Line configuration

## Command History

| Release | Modification                                                                                                                                                                      |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 10.0    | This command was introduced.                                                                                                                                                      |
| 11.1    | The following keywords were added: <ul style="list-style-type: none"> <li><b>lat</b></li> <li><b>pad</b></li> <li><b>rlogin</b></li> </ul>                                        |
| 12.4    | The <b>all</b> keyword is no longer supported.                                                                                                                                    |
| 12.2SX  | This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware. |

---

**Usage Guidelines**

Specify the **transport preferred none** command to prevent errant connection attempts.

Any settings made with the **transport input** or **transport output** commands override settings made with the **transport preferred** command.

---

**Examples**

The following example sets the preferred protocol to Telnet on physical terminal line 1:

```
line tty 1
 transport preferred telnet
```

---

**Related Commands**

| Command                             | Description                                                                                          |
|-------------------------------------|------------------------------------------------------------------------------------------------------|
| <b>terminal transport preferred</b> | Specifies the preferred protocol to use for the current session when a command does not specify one. |
| <b>transport input</b>              | Defines which protocols to use to connect to a specific line of the router.                          |
| <b>transport output</b>             | Determines the protocols that can be used for outgoing connections from a line.                      |

# transport type console

To enable an already configured console port transport map, use the **transport type console** command in global configuration mode. To disable a previously enabled console port transport map, use the **no** form of this command.

**transport type console** *console-line-number* **input** *transport-map-name*

**no transport type console** *console-line-number* **input**

## Syntax Description

|                            |                                                                                                                                                                               |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>console-line-number</i> | The console port or line number.                                                                                                                                              |
| <b>input</b>               | Specifies that the transport map settings are applied to traffic entering the interface.<br>Transport maps for console port handling are only applied in the input direction. |
| <i>transport-map-name</i>  | Specifies the name of the transport map to attach to the interface.                                                                                                           |

## Command Default

No transport maps are configured or applied to interfaces by default.

## Command Modes

Global configuration (config)

## Command History

| Release                  | Modification                                                      |
|--------------------------|-------------------------------------------------------------------|
| Cisco IOS XE Release 2.1 | This command was introduced on the Cisco ASR 1000 Series Routers. |

## Usage Guidelines

A transport map is not actively managing incoming console port connections until it is enabled. This command enables the transport map.

Transport maps for console ports are created using the **transport-map type console** command. The *transport-map-name* in the **transport -map type console** command and this command must match in order to properly apply the transport map to the console interface.

## Examples

In the following example, a transport map to set console port access policies is created and attached to console port 0.

```
Router(config)# transport-map type console consolehandler
Router(config-tmap)# connection wait allow interruptable
Router(config-tmap)# banner diagnostic X
Enter TEXT message. End with the character 'X'.
Welcome to diagnostic mode
X
Router(config-tmap)# banner wait X
Enter TEXT message. End with the character 'X'.
Waiting for IOS prompt
X
```

**transport type console**

```
Router(config-tmap)# exit
```

```
Router(config)# transport type console 0 input consolehandler
```

**Related Commands**

| Command                                                   | Description                                                                                                                                                 |
|-----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>banner (transport map)</b>                             | Creates a banner message that will be seen by users entering diagnostic mode or waiting for the IOS process as a result of the transport map configuration. |
| <b>connection wait</b>                                    | Specifies how an incoming connection will be handled.                                                                                                       |
| <b>show platform software configuration access policy</b> | Displays the access policy and banner settings for console, Telnet, and SSH connections.                                                                    |
| <b>transport-map type console</b>                         | Creates and names a transport map for the console port and enters transport map configuration mode.                                                         |



# transport type persistent

To enable an already configured persistent Telnet, SSH, or web user interface transport map, use the **transport type persistent** command in global configuration mode. To disable a previously enabled persistent Telnet, SSH, or web user interface transport map, use the **no** form of this command.

**transport type persistent** [ssh | telnet | webui] **input** *transport-map-name*

**no transport type persistent** [ssh | telnet | webui] **input**

| Syntax Description        |  |                                                                                                                                                                                                           |
|---------------------------|--|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ssh</b>                |  | Specifies a persistent SSH transport map.                                                                                                                                                                 |
| <b>telnet</b>             |  | Specifies a persistent Telnet transport map.                                                                                                                                                              |
| <b>webui</b>              |  | Specifies a persistent web user interface transport map.                                                                                                                                                  |
| <b>input</b>              |  | Specifies that the transport map settings are only applied to traffic entering the interface.<br>Transport maps for persistent SSH or persistent Telnet handling are only applied in the input direction. |
| <i>transport-map-name</i> |  | Specifies the name of the transport map to attach to the interface.                                                                                                                                       |

**Command Default** No transport maps are configured or applied to interfaces by default.

**Command Modes** Global configuration (config)

| Command History | Release                  | Modification                                                      |
|-----------------|--------------------------|-------------------------------------------------------------------|
|                 | Cisco IOS XE Release 2.1 | This command was introduced on the Cisco ASR 1000 Series Routers. |

**Usage Guidelines**

A transport map is not actively managing incoming Telnet, SSH, or web user interface traffic until it is enabled. This command enables the transport map.

Transport maps for persistent SSH, Telnet, or the web user interface are created using the **transport-map type persistent** command. The *transport-map-name* in the **transport-map type persistent** command and this command must match in order to properly apply the transport map to the interface.

For a persistent Telnet or SSH transport map to be active, the **transport interface** transport map configuration command must define the interface for the transport map, and this command must be entered to enable the transport map. The **transport interface** step is not part of the process for persistent web user interface transport maps.

This command is currently only available for Cisco ASR 1000 Series Routers, and transport maps can be applied only to the Management Ethernet interface (**interface gigabitethernet 0**) on Cisco ASR 1000 Series Routers.

## Examples

In the following example, a transport map that will make all Telnet connections wait for the IOS process to become active before connecting to the router, while also allowing the user to interrupt the process and enter diagnostic mode, is configured and applied to the Management Ethernet interface (interface gigabitethernet 0).

A diagnostic and a wait banner are also configured.

The transport map is then applied to the interface when the **transport type persistent telnet input** command is entered to enable persistent Telnet.

```
Router(config)# transport-map type persistent telnet telnethandler
Router(config-tmap)# connection wait allow interruptable
Router(config-tmap)# banner diagnostic X
Enter TEXT message. End with the character 'X'.
--Welcome to Diagnostic Mode--
X
Router(config-tmap)# banner wait X
Enter TEXT message. End with the character 'X'.
--Waiting for IOS Process--
X

Router(config-tmap)# transport interface gigabitethernet 0
Router(config-tmap)# exit
Router(config)# transport type persistent telnet input telnethandler
```

In the following example, a transport map is configured that applies the following settings to any users attempting to access the Management Ethernet port via SSH:

- Users using SSH wait for the IOS process to become active, but enter diagnostic mode if the attempt to access IOS is interrupted.
- The RSA keypair name is “sshkeys.”
- The connection allows one authentication retry.
- The banner “--Welcome to Diagnostic Mode--” appears if diagnostic mode is entered as a result of SSH handling through this transport map.
- The banner “--Waiting for IOS Process--” appears if the connection is waiting for the IOS process to become active.

The transport map is then applied to the interface when the **transport type persistent ssh input** command is entered to enable persistent SSH.

```
Router(config)# transport-map type persistent ssh sshhandler
Router(config-tmap)# connection wait allow interruptable
Router(config-tmap)# rsa keypair-name sshkeys
Router(config-tmap)# authentication-retries 1
Router(config-tmap)# banner diagnostic X
Enter TEXT message. End with the character 'X'.
--Welcome to Diagnostic Mode--
X
Router(config-tmap)# banner wait X
Enter TEXT message. End with the character 'X'.
--Waiting for IOS Process--
X
Router(config-tmap)# time-out 30
Router(config-tmap)# transport interface gigabitethernet 0
Router(config-tmap)# exit

Router(config)# transport type persistent ssh input sshhandler
```

In the following example, this command is used to enable a persistent web user interface transport map using the default HTTP port:

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# ip http server
Router(config)# transport-map type persistent webui http-webui
Router(config-tmap)# server
Router(config-tmap)# exit
Router(config)# transport type persistent webui input http-webui
*Apr 22 02:43:55.798: %UICFGEXP-6-SERVER_NOTIFIED_START: R0/0: psd: Server wui has been
notified to start
```

#### Related Commands

| Command                                                   | Description                                                                                                                                                  |
|-----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>authentication-retries</b>                             | Specifies the number of SSH authentication retries before dropping the connection when a persistent SSH transport map is applied to the receiving interface. |
| <b>banner (transport map)</b>                             | Creates a banner message that will be seen by users entering diagnostic mode or waiting for the IOS process as a result of the transport map configuration.  |
| <b>connection wait</b>                                    | Specifies how an incoming connection will be handled.                                                                                                        |
| <b>rsa keypair-name</b>                                   | Names the RSA keypair to be used for persistent SSH connections.                                                                                             |
| <b>secure-server</b>                                      | Enables the secure HTTP (HTTPS) server for a persistent web user interface transport map.                                                                    |
| <b>server (transport map)</b>                             | Enables the HTTP server for a persistent web user interface transport map.                                                                                   |
| <b>show platform software configuration access policy</b> | Displays the access policy and banner settings for console, Telnet, and SSH connections.                                                                     |
| <b>time-out</b>                                           | Specifies the SSH timeout interval in seconds.                                                                                                               |
| <b>transport interface</b>                                | Applies the transport map settings to the interface.                                                                                                         |
| <b>transport-map type persistent</b>                      | Creates and names a persistent transport map and enters transport map configuration mode.                                                                    |

# ttycap

To define characteristics of a terminal emulation file, use the **ttycap** command in global configuration mode. To delete any named ttycap entry from the configuration file, the **no** form of this command.

**ttycap** *ttycap-name termcap-entry*

**no ttycap** *ttycap-name*

## Syntax Description

|                      |                                                                                                           |
|----------------------|-----------------------------------------------------------------------------------------------------------|
| <i>ttycap-name</i>   | Name of a file. It can be up to 32 characters long and must be unique.                                    |
| <i>termcap-entry</i> | Commands that define the ttycap. Consists of two parts. (See the “Usage Guidelines” section for details.) |

## Defaults

VT100 terminal emulation

## Command Modes

Global configuration

## Command History

| Release | Modification                                                                                                                                                                      |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 10.3    | This command was introduced.                                                                                                                                                      |
| 12.2SX  | This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware. |

## Usage Guidelines

Use the **show ttycap EXEC** command to test for the availability of a ttycap.



### Note

Do not type a ttycap entry filename “default” or the Cisco IOS software will adopt the newly defined entry as the default.

The *termcap-entry* argument consists of two parts: a name portion and a capabilities portion.

The name portion is a series of names that can be used to refer to a specific terminal type. Generally, these names should represent commonly recognized terminal names (such as VT100 and VT200). Multiple names can be used. Each name is separated by a vertical bar symbol (|). The series is terminated by a colon symbol (:).

The following example illustrates a name specification for a VT100 termcap:

```
d0|vt100|vt100-am|vt100am|dec vt100:
```

The capabilities portion of the termcap entry consists of a sequence of termcap capabilities. These capabilities can include Boolean flags, string sequences, or numeric sequences. Each individual capability is terminated using a colon symbol (:). A Boolean flag can be set to true by including the two-character capability name in the termcap entry. The absence of any supported flag results in the flag being set to false.

The following is an example of a backspace Boolean flag:

bs:

A string sequence is a two-character capability name followed by an equal sign (=) and the character sequence.

The following example illustrates the capability for homing the cursor:

ho=\E[H:

The sequence \E represents the ESC character.

Control characters can be represented in string sequences by entering a two-character sequence starting with a caret symbol (^), followed by the character to be used as a control character.

The following example illustrates the definition of a control character.

bc=^h:

In this example, the backspace is entered into the termcap entry as the string sequence as the characters “^h.”

A numeric sequence is a two-character capability name followed by a number symbol (#) and the number.

The following example represents the number of columns on a screen.

co#80:

Use the backslash symbol ( \ ) to extend the definition to multiple lines. The end of the ttycap termcap entry is specified by a colon terminating a line followed by an end-of-line character and no backslash.

For the definitions of supported Boolean-flag ttycap capabilities, see [Table 60](#). For the definitions of supported string-sequence ttycap capabilities, see [Table 61](#). For the definitions of supported number-sequence ttycap capabilities, see [Table 62](#). For the definitions of supported color-sequence ttycap capabilities, see [Table 63](#).

**Table 60** *Definitions of ttycap Capabilities: Boolean Flags*

| Boolean Flag | Description                                          |
|--------------|------------------------------------------------------|
| am           | Automatic margin                                     |
| bs           | Terminal can backspace with bs                       |
| ms           | Safe to move in standout modes                       |
| nc           | No currently working carriage return                 |
| xn           | NEWLINE ignored after 80 columns (Concept)           |
| xs           | Standout not erased by overwriting (Hewlett-Packard) |

**Table 61** *Definitions of ttycap Capabilities: String Sequences*

| String Sequence | Description                         |
|-----------------|-------------------------------------|
| AL              | Add line below with cursor sequence |
| bc              | Backspace if not ^h                 |
| bt              | Backtab sequence                    |
| ce              | Clear to end of line                |

**Table 61**      **Definitions of ttycap Capabilities: String Sequences (continued)**

| <b>String Sequence</b> | <b>Description</b>                                        |
|------------------------|-----------------------------------------------------------|
| cl                     | Clear screen, cursor to upper left                        |
| cm                     | Move cursor to row number and column number               |
| cr                     | Carriage return sequence                                  |
| cs                     | Change scrolling region                                   |
| DL                     | Delete the line the cursor is on                          |
| ei                     | End insert mode                                           |
| ho                     | Home, move cursor to upper left                           |
| ic                     | Character insert                                          |
| im                     | Begin insert mode                                         |
| is                     | Initialization string (typically tab stop initialization) |
| ll                     | Move cursor to lower left corner                          |
| md                     | Turn on bold (extra bright) character attribute           |
| me                     | Turn off all character attributes                         |
| nd                     | Nondestructive space                                      |
| nl                     | Newline sequence                                          |
| pc                     | Pad character if not NULL                                 |
| rc                     | Restore cursor position                                   |
| rs                     | Resets terminal to known starting state                   |
| sc                     | Save cursor position                                      |
| se                     | End standout mode (highlight)                             |
| so                     | Start standout mode (highlight)                           |
| ta                     | Tab                                                       |
| te                     | End programs that use cursor motion                       |
| ti                     | Initialization for programs that use cursor motion        |
| uc                     | Underline character at cursor                             |
| ue                     | End underline mode                                        |
| up                     | Move cursor up                                            |
| us                     | Begin underline mode                                      |
| vb                     | Visual bell                                               |
| vs                     | Visual cursor                                             |
| ve                     | Normal cursor                                             |

**Table 62**      **Definitions of ttycap Capabilities: Number Sequences**

| Number Sequence | Description                                                                              |
|-----------------|------------------------------------------------------------------------------------------|
| li              | Lines on the screen                                                                      |
| co              | Columns on the screen                                                                    |
| sg              | Standout glitch, number of spaces printed when entering or leaving standout display mode |
| ug              | Underline glitch, number of spaces printed when entering or leaving underline mode       |

**Table 63**      **Definitions of ttycap Capabilities: Color Sequences**

| Color Sequence | Description                       |
|----------------|-----------------------------------|
| x0             | Black                             |
| x1             | Blue                              |
| x2             | Red or orange                     |
| x3             | Pink or purple                    |
| x4             | Green, which is the default color |
| x5             | Turquoise                         |
| x6             | Yellow                            |
| x7             | Gray or white                     |

The ttycap database uses these color sequences to translate IBM directives into screen drawing commands. These color sequences control only foreground terminal colors. They do not control background color, which is configured to black by default.

### Examples

The following is an example of a ttycap file. Refer to the “Configuring Dial-In Terminal Services” chapter in the *Cisco IOS Terminal Services Configuration Guide* and the *tn3270.examples* file in the *Cisco ftp@cisco.com* directory for more examples.

```
ttycap ttycap1\
d0|vt100|vt100-am|vt100am|dec vt100:do=^J:co#80:li#24:\
cl=50^[[;H^[[2J:bs:am:cm=5^[[%i%d;%dH:nd=2^[[C:up=2^[[A:\
ce=3^[[K:so=2^[[7m:se=2^[[m:us=2^[[4m:ue=2^[[m:md=2^[[1m:\
me=2^[[m:ho=^[[H:xn:sc=^[7:rc=^[8:cs=^[[%i%d;%dr:
```

### Related Commands

| Command              | Description                                                      |
|----------------------|------------------------------------------------------------------|
| <b>keymap-type</b>   | Specifies the keyboard map for a terminal connected to the line. |
| <b>terminal-type</b> | Specifies the type of terminal connected to a line.              |

# txspeed

To set the terminal transmit speed (how fast the terminal sends information to the modem), use the **txspeed** command in line configuration mode. To return to the default setting, use the **no** form of this command.

**txspeed** *bps*

**no txspeed**

|                           |            |                                                                     |
|---------------------------|------------|---------------------------------------------------------------------|
| <b>Syntax Description</b> | <i>bps</i> | Baud rate, in bits per second (bps). The default value is 9600 bps. |
|---------------------------|------------|---------------------------------------------------------------------|

|                 |          |
|-----------------|----------|
| <b>Defaults</b> | 9600 bps |
|-----------------|----------|

|                      |                    |
|----------------------|--------------------|
| <b>Command Modes</b> | Line configuration |
|----------------------|--------------------|

|                        |                |                                                                                                                                                                                   |
|------------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>                                                                                                                                                               |
|                        | 10.0           | This command was introduced.                                                                                                                                                      |
|                        | 12.2SX         | This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware. |

|                         |                                                                                                                                                                                                                                                                         |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Usage Guidelines</b> | Set the speed to match the baud rate of whatever device you have connected to the port. Some baud rates available on devices connected to the port might not be supported on the router. The Cisco IOS software will indicate if the speed you select is not supported. |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|



## Note

If the line was previously configured for automatic baud rate detection (autobaud), disable autobaud by entering the **no autobaud** command before entering the **txspeed** command to fix the speed of the port.

|                 |                                                                       |
|-----------------|-----------------------------------------------------------------------|
| <b>Examples</b> | The following example sets the transmit speed for line 5 to 2400 bps: |
|-----------------|-----------------------------------------------------------------------|

```
line 5
txspeed 2400
```

|                         |                         |                                                                                                                |
|-------------------------|-------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>          | <b>Description</b>                                                                                             |
|                         | <b>rotary-group</b>     | Sets the terminal receive speed (how fast the terminal receives information from the modem).                   |
|                         | <b>source template</b>  | Sets the flow control start character.                                                                         |
|                         | <b>terminal txspeed</b> | Sets the terminal transmit speed (how fast the terminal can send information) on the current line and session. |



# where

To list the open sessions, use the **where** command in EXEC mode.

**where**

**Syntax Description** This command has no arguments or keywords.

**Command Modes** EXEC

| Command History | Release     | Modification                                                                                                                                                                      |
|-----------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                 | 10.0        | This command was introduced in a release prior to Cisco IOS Release 10.0.                                                                                                         |
|                 | 12.2(33)SRA | This command was integrated into Cisco IOS Release 12.2(33)SRA.                                                                                                                   |
|                 | 12.2SX      | This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware. |

**Usage Guidelines** The **where** command displays all open sessions associated with the current terminal line. The break (Ctrl-Shift-6, x), **where**, and **resume** commands are available with all supported connection protocols.

**Examples** The following is sample output from the **where** command:

```
Router# where
Conn Host Address Byte Idle Conn Name
 1 MATHOM 192.31.7.21 0 0 MATHOM
* 2 CHAFF 131.108.12.19 0 0 CHAFF
```

The asterisk (\*) indicates the current terminal session.

[Table 64](#) describes the fields shown in the display.

**Table 64** *where Field Descriptions*

| Field     | Description                                                            |
|-----------|------------------------------------------------------------------------|
| Conn      | Name or address of the remote host to which the connection is made.    |
| Host      | Remote host to which the router is connected through a Telnet session. |
| Address   | IP address of the remote host.                                         |
| Byte      | Number of unread bytes for the user to see on the connection.          |
| Idle      | Interval (in minutes) since data was last sent on the line.            |
| Conn Name | Assigned name of the connection.                                       |

■ where

**Related Commands**

| Command              | Description                                                               |
|----------------------|---------------------------------------------------------------------------|
| <b>show line</b>     | Displays information about all lines on the system or the specified line. |
| <b>show sessions</b> | Displays information about open LAT, Telnet, or rlogin connections.       |

# x25 pvc translate ruleset

To configure the permanent virtual circuits (PVCs) that are valid for protocol translation ruleset handling, use the **x25 pvc translate ruleset** command in interface configuration mode. To remove or change the configuration, use the **no** form of this command.

**x25 pvc number translate ruleset** [*name* | *x121-address* | **packetsize** *in-size out-size* | **window***size* *in-size out-size*]

**no x25 pvc number translate ruleset** [*name* | *x121-address* | **packetsize** *in-size out-size* | **window***size* *in-size out-size*]

| Syntax Description                                |             |                                                                                                                                                                                                                                                                                                              |
|---------------------------------------------------|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>number</i>                                     |             | PVC number to reserve for protocol translation ruleset handling.                                                                                                                                                                                                                                             |
| <i>name</i>                                       |             | (Optional) Ruleset name specified by the <b>translate ruleset</b> command that governs the PVC.                                                                                                                                                                                                              |
| <i>x121-address</i>                               |             | (Optional) Destination host address.                                                                                                                                                                                                                                                                         |
| <b>packetsize</b> <i>in-size out-size</i>         |             | (Optional) Specifies the input packet size ( <i>in-size</i> ) and output packet size ( <i>out-size</i> ) for the PVC. Valid packet size values are: 16, 32, 64, 128, 256, 512, 1024, 2048, and 4096.                                                                                                         |
| <b>window</b> <i>size</i> <i>in-size out-size</i> |             | (Optional) Specifies the packet count for input windows ( <i>in-size</i> ) and output windows ( <i>out-size</i> ) for the outgoing translation. Values of the <i>in-size</i> and <i>out-size</i> arguments range from 1 to 127 and must not be greater than the value set for the <b>x25 modulo</b> command. |
|                                                   | <b>Note</b> | You must specify the same value for the <i>in-size</i> and <i>out-size</i> arguments.                                                                                                                                                                                                                        |

**Defaults** No default behavior or values

**Command Modes** Interface configuration

| Command History | Release  | Modification                                                                                                                                                                      |
|-----------------|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                 | 12.3(8)T | This command was introduced.                                                                                                                                                      |
|                 | 12.2SX   | This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware. |

**Usage Guidelines** If the optional name or X.121 address is given, PVC usage is restricted to the translation ruleset of that name.

**Examples** The following example shows how to reserve a PVC for protocol translation ruleset handling, and select the outbound X.25 serial interface and PVC number based on the IP port number:

## x25 pvc translate ruleset

```

interface serial 2/0
x25 pvc 4 translate ruleset port_to_pvc
!
translate use telnet 10.10.1.6
!
translate ruleset port_to_pvc from telnet to pad
match dest-addr ^10.10.1.6$ dest-port ^[12]00[0-7][1-3]$
substitute telnet dest-port ^..0([0-7]) into pad interface serial 0/\1
substitute telnet dest-port ^....(.) into pad pvc \1
test telnet dest-port ^.0... set pad profile TEMS
test telnet dest-port ^.1... set pad profile SQAS
test telnet dest-port ^.2... set pad profile NMA
substitute telnet dest-port (.)$ into pad dest-addr 876543\1

x.29 profile TEMS 2:0 3:128 4:0
x.29 profile SQAS 2:0 3:128 4:0
x.29 profile NMA 2:0 3:128 4:0

```

## Related Commands

| Command                       | Description                                                                                                                       |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| <b>description (ruleset)</b>  | Adds a description about a translation ruleset.                                                                                   |
| <b>match (ruleset)</b>        | Identifies a connection for processing by the translation ruleset.                                                                |
| <b>options (ruleset)</b>      | Specifies protocol translation options in a translation ruleset.                                                                  |
| <b>set (ruleset)</b>          | Unconditionally sets one or more connection parameters to a fixed value for a translation ruleset.                                |
| <b>show translate ruleset</b> | Displays a summary of a specific or of all configured translation rulesets, behavioral parameters, and usage statistic.           |
| <b>skip (ruleset)</b>         | Identifies a connection for omission by the translation ruleset.                                                                  |
| <b>substitute (ruleset)</b>   | Matches an available protocol and substitutes another in a translation ruleset.                                                   |
| <b>test (ruleset)</b>         | Tests parameter values in a translation ruleset using regular expressions.                                                        |
| <b>test translate</b>         | Displays a trace of protocol translation behavior for a connection attempt.                                                       |
| <b>translate ruleset</b>      | Defines a unique name for a translation ruleset, specifies translated protocols, and enters translate ruleset configuration mode. |

# x25 subaddress

To append either a physical port number or a value specified for a line as a subaddress to the X.121 calling address, use the **x25 subaddress** command in line configuration mode. To disable subaddressing, use the **no** form of this command.

**x25 subaddress** {*line* | *number*} [**no-zero-pad**]

**no x25 subaddress** {*line* | *number*}

|                           |                    |                                                                                                                      |
|---------------------------|--------------------|----------------------------------------------------------------------------------------------------------------------|
| <b>Syntax Description</b> | <b>line</b>        | Physical port number for the indicated line to be appended to the X.121 address as the subaddress.                   |
|                           | <i>number</i>      | Numeric variable assigned to a specific line.                                                                        |
|                           | <b>no-zero-pad</b> | (Optional) Specifies that a leading zero should not be appended to subaddresses with a value of nine or lower (0–9). |
|                           |                    |                                                                                                                      |

**Defaults** No default behavior or values

**Command Modes** Line configuration

|                        |                |                                                                                                                                                                                   |
|------------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>                                                                                                                                                               |
|                        | 11.2 F         | This command was introduced.                                                                                                                                                      |
|                        | 12.3(2)T       | The <b>no-zero-pad</b> keyword was added.                                                                                                                                         |
|                        | 12.2SX         | This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware. |
|                        | 12.2SX         | This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware. |

**Usage Guidelines**

Use the **x25 subaddress line** command to create a unique X.121 calling address by adding either a physical port number or a numeric value for a line as a subaddress to the X.121 calling address.

Use the **no-zero-pad** option to eliminate the inclusion of a leading zero for subaddresses with a value of nine or lower (0–9).

**Examples**

The following example shows how to configure subaddressing on virtual terminal lines 10 through 20 by appending the line number as a subaddress to the X.121 calling address:

```
line vty 10 20
x25 subaddress line
```

The following example shows how to configure subaddressing on the first five tty lines by appending the value 09 as a subaddress to the X.121 calling address of an X.28 connection originating on these lines:

```
line 1 5
x25 subaddress 9
autocommand x28
```

The following example configures a subaddress of 6 for a set of vty lines, and specifies that a leading zero should not be appended to the subaddress value:

```
line vty 0 9
x25 subaddress 6 no-zero-pad
```

---

**Related Commands**

| Command     | Description                                                                                             |
|-------------|---------------------------------------------------------------------------------------------------------|
| <b>line</b> | Identifies a specific line for configuration and starts the line configuration command collection mode. |

---

# x28

To enter X.28 mode and access an X.25 network or set X.3 packet assembler/disassembler (PAD) parameters, use the **x28** command in EXEC mode. To exit X.28 mode, use the **no** form of this command.

**x28** [*escape character-string*] [**noescape**] [**nuicud**] [**profile** *file-name*] [**reverse**] [**verbose**]

**no x28** [*escape character-string*] [**noescape**] [**nuicud**] [**profile** *file-name*] [**reverse**] [**verbose**]

| Syntax Description                    |                                                                                                                                                                                                                                 |
|---------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>escape</b> <i>character-string</i> | (Optional) Specifies a character string to use to exit X.28 mode and return to EXEC mode. The character string can be any string of alphanumeric characters. The Ctrl key can be used in conjunction with the character string. |
| <b>noescape</b>                       | (Optional) Specifies that no escape character string is defined (user cannot return to EXEC mode). On the console line, the <b>noescape</b> option is ignored, and the default escape sequence is used ( <b>exit</b> command).  |
| <b>nuicud</b>                         | (Optional) Specifies the network user identification (NUI) data to not be placed in the NUI facility of the call request. Instead the data is placed in the Call User Data (CUD) area of the call request packet.               |
| <b>profile</b> <i>file-name</i>       | (Optional) Specifies using a user-configured profile of X.3 parameters. A profile is created with the <b>x29 profile</b> EXEC command.                                                                                          |
| <b>reverse</b>                        | (Optional) Specifies reverse charges for outgoing calls made from the local router to the destination device.                                                                                                                   |
| <b>verbose</b>                        | (Optional) Displays optional service signals such as the called DTE address, facility block, and CUD.                                                                                                                           |

**Defaults** Disabled. X.28 mode uses standard X.28 command syntax.

**Command Modes** EXEC

| Command History | Release | Modification                 |
|-----------------|---------|------------------------------|
|                 | 11.2 F  | This command was introduced. |

**Usage Guidelines** If both the **escape** and **noescape** options are not set, the default escape sequence is used (**exit** command). X.28 mode is identified with an asterisk (\*) router prompt. After you enter this mode, the standard X.28 user interface (with the exception of the escape sequence) is available. From this interface, you can configure a PAD device using X.3 parameters, or you can access an X.25 network.

In X.28 mode, you can set PAD command signals using standard or extended command syntax. For example, you can enter the **clr** command or **clear** command to clear a virtual call. A command specified with standard command syntax is merely an abbreviated version of the extended syntax version.

[Table 65](#) lists the commands available in both standard and extended command syntax.

**Table 65** Available PAD Command Signals

| Standard Syntax                   | Extended Syntax                 | Description                                                                                                                                                   |
|-----------------------------------|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>break</b>                      |                                 | Simulate an asynchronous break.                                                                                                                               |
| <b>call</b>                       |                                 | Place a virtual call to a remote device.                                                                                                                      |
| <b>clr</b>                        | <b>clear</b>                    | Clear a virtual call.                                                                                                                                         |
| <i>command-signal<sup>1</sup></i> |                                 | Specifies a call request without using a standard X.28 command, which is entered with the following syntax:<br><i>facilities-x121-addressDcall-user-data.</i> |
| <b>help</b>                       |                                 | Display help information. (See <a href="#">Table 67</a> .)                                                                                                    |
| <b>iclr</b>                       | <b>iclear</b>                   | Request the remote device to clear the call.                                                                                                                  |
| <b>int</b>                        | <b>interrupt</b>                | Send an Interrupt Packet.                                                                                                                                     |
| <b>par?</b><br><b>par</b>         | <b>parameter</b><br><b>read</b> | Display the current values of local parameters. (See <a href="#">Table 66</a> .)                                                                              |
| <b>prof</b>                       | <b>profile</b> <i>file-name</i> | Load a standard or a named profile.                                                                                                                           |
| <b>reset</b>                      |                                 | Reset the call.                                                                                                                                               |
| <b>rpar?</b>                      | <b>rread</b>                    | Display the current values of remote parameters.                                                                                                              |
| <b>rset?</b>                      | <b>rsetread</b>                 | Set and then read the values of remote parameters.                                                                                                            |
| <b>set</b>                        |                                 | Change the values of local parameters. (See <a href="#">Table 66</a> .)                                                                                       |
| <b>set?</b>                       | <b>setread</b>                  | Change and then read the values of parameters.                                                                                                                |
| <b>stat</b>                       | <b>status</b>                   | Request the status of a connection.                                                                                                                           |
| <b>selection pad</b>              |                                 | Set up a virtual call.                                                                                                                                        |

1. This is an example of issuing a call request command: the **R,G23,P2-234234Duser1** command.

[Table 66](#) lists the different types of parameters you can set using the **set** *parameter-number:new-value* PAD command signal from X.28 mode. Refer to the “X.3 PAD Parameters” appendix in the *Cisco IOS Terminal Services Configuration Guide* for more complete information about these parameters. See [Table 34](#) in this publication for a list of ASCII characters.

**Table 66** Supported X.3 PAD Parameters

| Parameter Number | ITU-T Parameter Name                   | ITU-T X.3 and Cisco Values                                                                                                              |
|------------------|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| 1                | PAD recall using a character           | Minimum value: 0; maximum value: 126; X.28 PAD user emulation mode default: 1.<br><b>Note</b> Not supported by PAD EXEC user interface. |
| 2                | Echo                                   | Minimum value: 0; maximum value: 1; PAD EXEC mode and X.28 PAD user emulation mode default: 1.                                          |
| 3                | Selection of data forwarding character | Minimum value: 0; maximum value: 255; PAD EXEC mode default: 2 (CR); X.28 PAD user emulation mode default: 126 (~).                     |
| 4                | Selection of idle timer delay          | Minimum value: 0; maximum value: 255; PAD EXEC mode default: 1; X.28 PAD user emulation mode default: 0.                                |



**Table 66**      **Supported X.3 PAD Parameters (continued)**

| Parameter Number | ITU-T Parameter Name                            | ITU-T X.3 and Cisco Values                                                                                                                                        |
|------------------|-------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5                | Ancillary device control                        | Minimum value: 0; maximum value: 2; PAD EXEC mode default: 0; X.28 PAD user emulation mode default: 1.                                                            |
| 6                | Control of PAD service signals                  | Minimum value: 0; maximum value: 255; PAD EXEC mode default: 0; X.28 PAD user emulation mode default: 2.<br><b>Note</b> Not supported by PAD EXEC user interface. |
| 7                | Action upon receipt of a BREAK signal           | Minimum value: 0; maximum value: 31; PAD EXEC mode default: 4; X.28 PAD user emulation mode default: 2.                                                           |
| 8                | Discard output                                  | Minimum value: 0; maximum value: 1; PAD EXEC mode and X.28 PAD user emulation mode default: 0.                                                                    |
| 9                | Padding after Return                            | Minimum value: 0; maximum value: 255; PAD EXEC mode and X.28 PAD user emulation mode default: 0.                                                                  |
| 10               | Line folding                                    | Not supported.                                                                                                                                                    |
| 11               | DTE speed (binary speed of start-stop mode DTE) | Minimum value: 0; maximum value: 18; PAD EXEC mode and X.28 PAD user emulation mode default: 14.                                                                  |
| 12               | Flow control of the PAD by the start-stop DTE   | Minimum value: 0; maximum value: 1; PAD EXEC mode default: 0; X.28 PAD user emulation mode default: 1.                                                            |
| 13               | Line feed insertion (after a Return)            | Minimum value: 0; maximum value: 7; PAD EXEC mode and X.28 PAD user emulation mode default: 0.                                                                    |
| 14               | Line feed padding                               | Minimum value: 0; maximum value: 255; PAD EXEC mode and X.28 PAD user emulation mode default: 0.                                                                  |
| 15               | Editing                                         | Minimum value: 0; maximum value: 1; PAD EXEC mode and X.28 PAD user emulation mode default: 0.                                                                    |
| 16               | Character delete                                | Minimum value: 0; maximum value: 127; PAD EXEC mode and X.28 PAD user emulation mode default: 127 (DEL).                                                          |
| 17               | Line delete                                     | Minimum value: 0; maximum value: 127; PAD EXEC mode default: 21 (NAK or Ctrl-U); X.28 PAD user emulation mode default: 24 (CAN or Ctrl-X).                        |
| 18               | Line display                                    | Minimum value: 0; maximum value: 127; PAD EXEC mode and X.28 PAD user emulation mode default: 18 (DC2 or Ctrl-R).                                                 |
| 19               | Editing PAD service signals                     | Minimum value: 0; maximum value: 126; PAD EXEC mode default: 0; X.28 PAD user emulation mode default: 2.<br><b>Note</b> Not supported by PAD EXEC user interface. |

**Table 66** Supported X.3 PAD Parameters (continued)

| Parameter Number | ITU-T Parameter Name | ITU-T X.3 and Cisco Values                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 20               | Echo mask            | Minimum value: 0; maximum value: 255; PAD EXEC mode and X.28 PAD user emulation mode default: 0.<br><b>Note</b> Not supported by PAD EXEC user interface.                                                                                                                                                                                                                                                                                                |
| 21               | Parity treatment     | Minimum value: 0; maximum value: 4; PAD EXEC mode and X.28 PAD user emulation mode default: 0.<br><b>Note</b> For additional values that can be selected for parameter 21, including parity treatment to conform to the French Transpac public switched data network and its technical specification and utilization of networks standards (STUR), see Appendix A, “X.3 PAD Parameters,” in the <i>Cisco IOS Terminal Services Configuration Guide</i> . |

**Note**

Abbreviated X.121 addresses are not supported. Such addresses start with a period, are alphanumeric, and are mapped to a full X.121 address by the PAD.

Table 67 lists the options for the X.28 **help** command.

**Table 67** X.28 help Options

| Command                             | Description                                                     |
|-------------------------------------|-----------------------------------------------------------------|
| <b>help</b>                         | Describes the <b>help</b> PAD command.                          |
| <b>help command</b>                 | Displays the list of available PAD command signals.             |
| <b>help parameter</b>               | Displays the list of available X.3 PAD parameters.              |
| <b>help parameter</b> <i>number</i> | Displays the specified X.3 PAD parameter and its current value. |
| <b>help list</b>                    | Lists the available help subjects.                              |
| <b>help profiles</b>                | Lists available profiles.                                       |
| <b>help profile</b> <i>name</i>     | Displays the specified parameter name and current value.        |
| <b>help</b> <i>any-PAD-command</i>  | Describes the specified PAD command signal.                     |

You can issue call requests from X.28 mode without using standard X.28 commands by using the following command syntax:

*facilities*-*x121-address***D***call-user-data*

where:

*facilities* Applies X.25 facilities to the outgoing call. The hyphen is mandatory.

*x121-address* Specifies the address of the remote X.25 device.

**D** Facility request code that specifies CUD for the outgoing call.

*call-user-data* Specifies the data that accompanies the call request packet sent to the remote X.25 device.

The following rules apply to all call requests parsed in X.28 mode:

- When an X.121 address specified using standard command syntax is followed by an optional CUD field, the call is placed to the X.121 address.
- When standard command syntax is used, one or more facility request codes can be entered, followed by the code value. Additional facility request codes and values also can be entered. Separate each entry with a comma, followed by a dash. An X.121 address and optional CUD can follow this entry.
- If an X.28 command is not entered, a call request is assumed.
- Ensure that the call request begins with a facility code letter, and that it contains a hyphen (-) followed by a string of digits (the X.121 address). The call request can be terminated by an asterisk (\*), a "P," or a "D," followed by some data.
- When using extended command syntax is used, the **call** command uses the facility codes and X.121 address as its operand.
- If facility codes are entered without an X.121 address, remember the codes for the next call. When a call is completed, forget the facility codes until they are once again set.

Table 68 shows examples of parsed call requests.

**Table 68** Example X.28 Call Requests

| Command                   | Description                                                  |
|---------------------------|--------------------------------------------------------------|
| <b>123456789</b>          | Calls this X.121 address.                                    |
| <b>123456789*userdata</b> | Calls this X.121 address, with specified data.               |
| <b>123456789Puserdata</b> | Calls this X.121 address, with specified data.               |
| <b>123456789Duserdata</b> | Calls this X.121 address, with specified data.               |
| <b>Nabcd-123456789</b>    | Calls this X.121 address, with NUI set to abcd.              |
| <b>Nabcd,R-123456789</b>  | Calls 123456789 with NUI of abcd, and with reverse charging. |

## Examples

The following example uses the ? command to display the optional X.28 keywords:

Router# **x28 ?**

```

debug Turn on Debug Messages for X28 Mode
escape Set the string to escape from X28 PAD mode
noescape Never exit x28 mode (use with caution)
nuicud All calls with NUI, are normal charge with the NUI placed in Call
 User Data
profile Use a defined X.3 Profile
reverse All calls default to reverse charge
verbose Turn on Verbose Messages for X28 Mode
<cr>
```

After you are in X.28 mode, use the **call** PAD signal command to place a virtual call:

```
Router# x28
```

```
* call 123456
```

The following example enters X.28 mode with the **x28** EXEC command and configures a PAD with the **set** X.3 parameter command. The **set** command sets the idle time delay to 40 seconds.

```
Router# x28
```

```
* set 4:40
```

#### Related Commands

| Command    | Description       |
|------------|-------------------|
| <b>pad</b> | Logs in to a PAD. |

# x28 no-outgoing

To configure X.28 user emulation mode to prevent a network element from dialing out, use the **x28 no-outgoing** command in user EXEC, privileged EXEC, or line configuration mode. To disable the X.28 user emulation mode that is configured to prevent a network element from dialing out, use the **no** form of this command.

**x28 no-outgoing**

**no x28 no-outgoing**

**Syntax Description** This command has no arguments or keywords.

**Command Default** Network elements can dial out.

**Command Modes**

- User EXEC
- Privileged EXEC
- Line configuration

| Command History | Release    | Modification                                                                                                                                                                      |
|-----------------|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                 | 12.3(11)YN | This command was introduced.                                                                                                                                                      |
|                 | 12.4(4)T   | This command was integrated into Cisco IOS Release 12.4(4)T.                                                                                                                      |
|                 | 12.2SX     | This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware. |

**Usage Guidelines**

To configure X.28 user emulation mode on all lines connected to the router, use the **x28 no-outgoing** command in the user EXEC mode or the privileged EXEC mode.

The **x28 no-outgoing** command is used with the **autocommand** command in line configuration mode to configure the x28 user emulation mode on a per-line basis. See the "Examples" section.

Use of the **x28 no-outgoing** command on the console will lock the console. Unlock the console by logging in from a different tty or vty. If no line is available, reload the router.

**Examples**

The following example configures X.28 user emulation mode on all the lines connected to the router to prevent network elements from dialing out:

```
Router# x28 no-outgoing
```

The following example configures X.28 user emulation mode only on line 33, when used with the **autocommand** command, to prevent network elements from dialing out through that line:

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# line 33
Router(config-line)# autocommand x28 no-outgoing
Router(config-line)# exit
```

---

**Related Commands**

| Command            | Description                                                                 |
|--------------------|-----------------------------------------------------------------------------|
| <b>autocommand</b> | Executes a command automatically when a user connects to a particular line. |
| <b>pad</b>         | Logs in to a PAD.                                                           |

# x3

To set X.3 packet assembler/disassembler (PAD) parameters, use the **x3** command in EXEC mode.

**x3** *parameter:value*

## Syntax Description

*parameter:value* Sets the PAD parameters. (See [Table 66](#) in the **x28** command description.)

## Defaults

For outgoing connections, the X.3 parameters default to the following:

2:1, 3:2, 4:1, 7:4, 16:127, 17:21, 18:19

All other parameters default to zero, but can be changed using the **/set** switch keyword with either the **resume** command or the **x3** command.

For incoming PAD connections, the software sends an X.29 SET PARAMETER packet to set only the following parameters:

2:0, 4:1, 7:21, 15:0

For a complete description of the X.3 PAD parameters, see the appendix titled “X.3 PAD Parameters” in the *Cisco IOS Terminal Services Configuration Guide*.

## Command Modes

EXEC

## Command History

| Release | Modification                                                                                                                                                                      |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11.2    | This command was introduced.                                                                                                                                                      |
| 12.2SX  | This command is supported in the Cisco IOS Release 12.2SX train. Support in a specific 12.2SX release of this train depends on your feature set, platform, and platform hardware. |

## Usage Guidelines

You can have several PAD connections open at the same time and switch between them. You can also exit a connection and return to the user EXEC prompt at any point.

To open a new connection, first suspend the current connection by pressing the escape sequence (**Ctrl-Shift-6** then **x** [**Ctrl^x**] by default) to return to the system command prompt, then open the new connection with the **pad** command.

You can have several concurrent sessions open and switch between them. The number of PAD sessions that can be open is defined by the **session-limit** command.

To switch between sessions you must escape one session and resume a previously opened session. Use the **Ctrl^x** sequence to escape out of a connection, use the **where** EXEC command to check the connection number, and then use the **resume** command with the connection number to resume the suspended connection. These commands are available with all supported connection protocols.

You can issue any of the following commands to terminate a terminal session:

- **exit**

- **quit**
- **logout**

To display information about packet transmission and X.3 PAD parameter settings, use the **show x25 pad** command.

### Examples

The following example shows how to change a local X.3 PAD parameter from a remote X.25 host using X.29 messages, which is a secure way to enable a remote host to gain control of local PAD. The local device is named Router-A. The remote host is named Router-B. The parameters listed in the ParamsIn field are incoming parameters, which are sent by the remote PAD. The parameters listed in the ParamsOut field are parameters sent by the local PAD.

```
Router-A# pad 123456
Trying 123456...Open

Router-B> x3 2:0
Router-B>
Router-A# show x25 pad

tty0, connection 1 to host 123456

Total input: 12, control 3, bytes 35. Queued: 0 of 7 (0 bytes).
Total output: 10, control 3, bytes 64.
Flags: 1, State: 3, Last error: 1
ParamsIn: 1:0, 2:0, 3:0, 4:0, 5:0, 6:0, 7:0,
 8:0, 9:0, 10:0, 11:0, 12:0, 13:0, 14:0, 15:0,
 16:0, 17:0, 18:0, 19:0, 20:0, 21:0, 22:0,
ParamsOut: 1:1, 2:0, 3:2, 4:1, 5:1, 6:0, 7:21,
 8:0, 9:1, 10:0, 11:14, 12:1, 13:0, 14:0, 15:0,
 16:127, 17:21, 18:18, 19:0, 20:0, 21:0, 22:0,
Router-A#
```

### Related Commands

| Command                 | Description                              |
|-------------------------|------------------------------------------|
| <b>resume (X.3 PAD)</b> | Sets X.3 parameters for PAD connections. |