



Symbols

#define [3-49](#)
#else [3-49](#)
#elseif [3-49](#)
#endif [3-49](#)
#if [3-49](#)
#include [3-49](#)

A

adding a device [3-12](#)
administrator, levels of access [3-1](#)
administrator-level operations [3-6](#)
Apache
 license [C-2](#)
audience for this document [xi](#)

B

backup
 scheduling [4-7](#)
backup and restore [3-54](#)
 not working properly [A-5](#)
backups
 scheduling [3-34](#)
banner [3-15, 3-22](#)
bootstrap password
 how to change [3-53, 4-10](#)
bulk upload [1-9, 5-1](#)

C

cautions
 significance of [xi](#)
changing or resetting operator password [3-4](#)
chkconfig [2-27](#)
cisco.cns.config.id-changed [1-13](#)
cisco.cns.event.id-changed [1-13](#)
CNS 2100 Series
 overview [1-1](#)
CNS Configuration Service [1-3](#)
CNS Event Service [1-3](#)
commands
 chkconfig [2-27](#)
 cisco.cns.config.id-changed [1-13](#)
 cisco.cns.event.id-changed [1-13](#)
 cns config init [1-10](#)
 cns config partial [1-10](#)
 cns-listen [A-8](#)
 cns-send [A-8](#)
 date [A-5](#)
 exit [2-18](#)
 ifconfig [2-17](#)
 nslookup [2-17](#)
 ping [2-17](#)
 reinitialize [2-23](#)
 relocate [2-23](#)
 setup [2-2](#)
 show interfaces [A-2](#)
 showversion [A-6](#)
 shutdown [2-25](#)
ConfigID [1-12, 1-13](#)
 change synchronization [1-13](#)

- configurable parameter attributes, editing [3-51](#)
- configuration agent [1-3](#)
- Configuration Engine
 - External Directory mode
 - administration [4-1](#)
 - devices [4-3](#)
 - logging in [4-1](#)
 - logging out [4-2](#)
 - re-synchronize [4-4](#)
 - scheduling backup [4-7](#)
 - tools [4-4](#)
 - view device configuration [4-3](#)
 - view logs [4-8](#)
 - view templates [4-9](#)
 - Internal Directory mode
 - add a device [3-12](#)
 - adding a template [3-50](#)
 - administration [3-1](#)
 - administrator-level operations [3-6](#)
 - changing password [3-9](#)
 - deleting a device [3-16](#)
 - deleting a template [3-52](#)
 - directory manager [3-38](#)
 - edit a device [3-13](#)
 - edit device contact information [3-16, 3-23, 3-32](#)
 - edit device information [3-14](#)
 - edit device parameters [3-15](#)
 - edit device templates [3-14](#)
 - edit order entry [3-26](#)
 - edit schema [3-40](#)
 - edit template [3-50](#)
 - edit template content [3-51](#)
 - how to change privilege level [3-10](#)
 - how to delete user accounts [3-9](#)
 - how to edit user accounts [3-7](#)
 - how to log in and out of [3-1](#)
 - how to manage devices [3-10](#)
 - importing schema [3-40](#)
 - import template [3-52](#)
 - levels of access [3-1](#)
 - logging out [3-3](#)
 - management tools [3-32](#)
 - manage templates [3-50](#)
 - managing data [3-34](#)
 - operator-level operations [3-3](#)
 - operator password, changing [3-4](#)
 - order entry [3-24](#)
 - order entry, operator-level [3-4](#)
 - parameters [3-51](#)
 - reloading the schema [3-42](#)
 - reload schema [3-42](#)
 - scheduling backups [3-34](#)
 - undo schema edit [3-40](#)
 - update device configuration [3-16](#)
 - user accounts [3-6](#)
 - view device configuration [3-11](#)
 - viewing DIT [3-39](#)
 - viewing log files [3-36](#)
- modes of operation [1-2](#)
- overview
 - CNS Configuration Service [1-3](#)
 - CNS Event Service [1-3](#)
- Configuration Registrar
 - External Directory mode
 - update a device [4-4](#)
 - Internal Directory mode
 - template manager [3-50](#)
- configuration server [1-3](#)
- configuration templates [1-3](#)
- configuring the CNS 2100 Series system [2-1](#)
- contact information, how to update [3-28](#)
- conventions, typographical [xi](#)
- Coordinated Universal Time [2-26](#)
- Country Codes [B-1](#)
- creating a template [3-42](#)
- cron daemon
 - how to restart [A-5](#)
- cron daemon, how to restart [2-26](#)

D

DAT 3-33, 4-5, 5-1

creating sample data for bulk upload 5-38

IMGW 5-40

NSM 5-38

directory setup 5-29

how to

add a device 5-5

add a device container 5-4

add applications 5-21

add applications to a group 5-17

add device group references 5-8

add device references 5-15

add events to an application 5-24

add groups 5-13

add groups to an application 5-27

delete applications from a group 5-18

delete device group references 5-9

delete devices 5-10

delete devices from a group 5-16

delete events in a application 5-27

delete groups 5-19

delete groups from an application 5-28

manage applications 5-20

manage bulk data 5-35

manage devices 5-3

manage groups 5-11

modify application details 5-22

update devices details 5-7

update events in an application 5-25

update groups 5-14

upload bulk data 5-37

upload bulk data, by command line 5-37

view and update application setup 5-32

view and update device setup 5-30

view and update event setup 5-33

view and update group setup 5-31

view and update user preferences 5-34

view applications 5-20

view devices 5-3

view groups 5-12

logging in 5-1

logging out 5-2

modifying applications 5-22

date A-5

default mode 1-4

deleting

devices 3-16

user account 3-9

device authentication 1-9

device configuration

how to update 3-16

viewing 3-11

device configuration order entry 3-24

how to edit an order 3-26

how to enter a new order 3-24

device management 3-10

devices

adding 3-12

editing 3-13, 3-14

editing a device configuration order 3-26

how to delete 3-16

how to edit contact information 3-16, 3-23, 3-32

how to edit parameters 3-15

how to edit templates 3-14

managing 3-10

order entry 3-24

directories, managing data in 1-9, 5-1

Directory Administration Tool 3-33, 4-5, 5-1

directory manager 3-38

reloading the schema 3-42

directory setup 5-29

disk space

how to manage 3-38, 4-11

DIT 3-39

documentation

audience for this xi

conventions used in [xi](#)
 related [xii](#)
 dynamic templates [3-48](#)

E

editing

contact information [3-28](#)
 device contact information [3-16, 3-23, 3-32](#)
 devices [3-13](#)
 existing orders [3-26](#)
 schema [3-40](#)
 templates [3-50](#)
 user accounts [3-7](#)

edit parameters [3-51](#)

encryption [1-9](#)

event bus [1-12](#)

Event Gateway [1-5](#)

EventID [1-12, 1-13](#)

Event Log, how to view [3-5](#)

event mapping [1-4](#)

exit [2-18](#)

eXtensible Markup Language [1-3](#)

External Directory mode [1-3, 4-1](#)

Configuration Engine administration [4-1](#)
 devices [4-3](#)
 how to update a device configuration [4-4](#)
 how to view logs [4-8](#)
 how to view templates [4-9](#)
 management tools [4-4](#)
 re-synchronize device [4-4](#)
 setup prompts [2-10](#)
 viewing device configuration [4-3](#)

H

help

technical support

(see also troubleshooting)

hop tables [5-43](#)

hostname [1-10](#)

how the Configuration Engine works [1-10](#)

how to add [3-6](#)

how to change operator password [3-4](#)

how to log in [3-2, 4-1, 5-1](#)

how to log out [3-3](#)

how to manage data [3-34](#)

how to reimage your system [2-26](#)

how to restart the cron daemon [2-26, A-5](#)

how to restore the CNS directory [3-55](#)

how to schedule backups [3-34, 4-7](#)

I

IBM Director

how to re-activate agent after Setup [A-10](#)

ifconfig [2-17](#)

IMGW

adding devices [5-43](#)

currently supported device types [5-44](#)

hopInfo examples [5-46](#)

hop tables [5-43](#)

how to delete devices [5-49](#)

how to view devices [5-43](#)

re-configuring settings [2-9](#)

restrictions [1-6](#)

updating configurations for [5-42](#)

import a template [3-52](#)

importing groups and devices

from Release 1.2 to 1.3 [2-22](#)

initial configuration [1-11](#)

initializing Tivoli Management Agent [2-27](#)

installing and configuring the CNS 2100 Series system

installing a replacement device [2-25](#)

installing a new system [2-25](#)

removing the old system [2-25](#)

verifying installation of Configuration Engine [2-18](#)

verifying the configuration of CNS 2100 Series system [2-17](#)

Intelligent Modular Gateway [1-5](#)

See also IMGW

Internal Directory mode [1-2, 3-1](#)

Configuration Engine administration [3-1](#)

logging in [3-2](#)

Setup prompts [2-2](#)

L

LDAP [1-3](#)

levels of access

administrator [3-1](#)

operator [3-1](#)

lightweight directory access protocol [1-3](#)

log files

viewing [3-36](#)

logging out [3-3](#)

M

management tools [3-32](#)

managing data [3-34](#)

managing devices [3-10](#)

managing directory content [3-38](#)

migrating DCL data

from release 1.2 to release 1.3 [2-19](#)

modes of operation [1-2](#)

modifying groups [5-14](#)

modular router [1-7](#)

events [3-47](#)

sample templates [3-46](#)

templates [3-44](#)

multi-line tag delimiters [3-15, 3-22](#)

N

namespace [1-4](#)

NameSpace Mapper [1-4](#)

none mode [1-5](#)

non-interactive Setup [2-15](#)

encryption settings [2-16](#)

event services settings [2-16](#)

External Directory Settings [2-16](#)

general guidelines [2-15](#)

sample scripts [2-15](#)

notes, significance of [xi](#)

nslookup [2-17](#)

NSM [1-4](#)

NSM modes [1-4, 2-22](#)

default [1-4](#)

http [1-4](#)

none [1-5](#)

provider [1-4](#)

O

OpenSSL

license [C-1](#)

operator, levels of access [3-1](#)

operator-level operations [3-3](#)

order entry

new order [3-24](#)

P

parameters

descriptions [2-4](#)

partial configuration [1-12](#)

password

changing [3-9](#)

ping [2-17](#)

populating a group attribute [5-14](#)

populating an application attribute [5-23](#)

privilege level

changing [3-10](#)

product overview [1-1](#)

provider mode [1-4](#)

R

recover and redine your root password, how to [2-24](#)

reinitialize [2-23](#)

reloading the schema [3-42](#)

relocate [2-23](#)

S

sample schema [2-13](#)

schema

editing [3-40](#)

importing [3-40](#)

reloading [3-42](#)

undo edit [3-40](#)

secure socket layer [1-9](#)

security manager [3-53, 4-10](#)

setup [2-2](#)

Setup prompts

External Directory mode [2-10](#)

Internal Directory mode [2-2](#)

show interfaces [A-2](#)

shutdown [2-25](#)

software licenses and acknowledgements [C-1](#)

SSL

configure [2-17](#)

ssldump

license [C-3](#)

subject-based addressing [1-4](#)

editing [3-51](#)

template file, basic format of [3-42](#)

template filename [3-12, 3-19, 3-25, 3-30](#)

template manager [3-50](#)

editing [3-50](#)

editing content [3-51](#)

how to add a template [3-50](#)

how to delete [3-52](#)

how to edit attributes [3-51](#)

how to import [3-52](#)

templates [1-3, 3-50](#)

control structures [3-49](#)

Tivoli Management Agent [2-27](#)

register with start - stop service [2-27](#)

Tomcat

license [C-2](#)

troubleshooting

cannot connect to system with Telnet or Telnet
interaction is slow [A-4](#)

cannot connect to the system using a web browser [A-3](#)

cannot log in to the system [A-1](#)

system cannot boot from disk [A-4](#)

system cannot connect to the network [A-2](#)

U

undo schema edit [3-40](#)

user accounts [3-6](#)

changing password [3-9](#)

deleting [3-9](#)

editing [3-7](#)

setting privilege level [3-10](#)

UTC [2-26](#)

V

viewing device configuration [3-11](#)

T

template

variable substitutions [3-42](#)

template content

X

XML [1-3](#)

XML bulk upload [5-35](#)

XML transformation script [2-21](#)