



INDEX

A

access
 node **4**
accessing
 MWTM web browser **39**
accounting
 FAQs **14**
address
 information **13**
address tables **1**
 editor
 launching **2**
 startup options **2**
files
 basic information **19**
 creating **6**
 deploying **18**
 loading, from file **8**
 loading, from ITP **10**
 reverting **25**
 saving **23**
 semantics **17**
 working **14**
listing **20**
menu **3**
properties
 editing **16**
administrative page
 displaying **9**
alarms
 displaying **30, 46, 27**
 right-click menu **32, 49**
supplemental **11**
application server
 reports **11**
 tabs **6**
application server process
 custom reports **66**
 tabs **6**
application server process association
 configuration
 general information **16**
 tabs **7**
application server process associations
 status definitions **3**
 table **17**
application server processes
 export files, daily **20**
 reports
 custom **66**
 daily **16, 17**
 hourly **15**
 peaks **18, 19**
 status definitions **3**
 table **15**
application servers
 configuration
 associations **14**
 custom reports **65**
 export files, hourly **21**
 reports
 custom **65**
 daily **12, 13**
 hourly **14**
 peaks **12**

statistics details window **76**
status definitions **3**
table **13**
asterisks
 FAQs **14**
attaching
 notes **34**
audience
 document **xxxii**

B

backup
 MWTM files **32**
 secondary server **9**
basic object functions
 understanding **1**
browser
 FAQs **6**

C

capacity planning
 FAQs **19**
card
 naming
 information **21**
 table **23**
 tabs **9**
changing
 client preference, settings **1**
 poller settings **2**
 web preference, settings **1**
charts
 settings
 changing **13**
CiscoView
 launching **40**

CiscoWorks
 device center, launching **40**
 integrating with MWTM **39**
 SNMP **2**
client, MWTM
 access, limiting **31**
 downloading (see MWTM web interface)
 exiting **44**
 launching from Windows Start menu **43**
 starting
 on Solaris/Linux **3**
 on Windows **4**
 prerequisites **3**
client/server architecture, overview **8**
client A configuration
 MWTM **14**
client B configuration
 MWTM **15**
client preference, settings
 changing **1**
clients, MWTM
 connection timer **10**
color
 severity
 customizing **17**
command
 reference **1**
command line interface, using **45**
commands
 general **1**
 ITP **73**
configuration
 sample firewall **10**
configuring
 firewalls **8**
 port numbers and parameters **6**
connection settings **7**
connection timer **10**
content area

MWTM client **26**
 conventions
 document **xxxiii**
 conversion entry
 table **14**
 counters
 resetting **20**
 CPU
 utilization, viewing **53**
 credentials, login
 setting up **19**
 customizing view **10**
 custom reports **49**
 application server processes **66**
 application servers **65**
 linkset **53, 68**
 linksets **53**
 MLR
 aborts **58**
 processed **60**
 result invokes **61**
 MTP3, accounting **64**
 nodes **53**

D

data
 accessing, from web **1**
 exporting **38**
 MWTM
 exporting current, for node names **39**
 exporting current, for SNMP community
 names **39**
 node, viewing **52**
 data, removing from server **33**
 default
 server name, changing **43**
 view
 loading **15**

deleting
 objects **36**
 deploying
 GTT **40**
 deployment
 FAQs **14**
 details
 viewing **12**
 device configuration
 buttons **21**
 commands **22**
 menu **14**
 device configuration dialog **14**
 diagram, network **1**
 discovering ITP networks
 dialog menu **6**
 discovered nodes **17**
 running discovery **13**
 settings **15**
 verifying discovery **21**
 discovery
 FAQs **13**
 display, customizing **10**
 displaying **28**
 administrative page **9**
 alarms **30, 46, 27**
 error statistics **34**
 events **28**
 objects within a view **29**
 performance statistics **30**
 RAN data export files **38**
 reports **29**
 software versions **28**
 DISPLAY variable, setting **3**
 document
 audience **xxxii**
 conventions **xxxiii**
 objectives **xxxii**
 organization **xxxii**

documentation
 obtaining [xxxv](#)
 related [xxxiv](#)
 DOS prompt, launching [44](#)
 dual-interface machine
 MWTM, configuring [13](#)

E

editing
 MWTM
 ITP route table file [1](#)
 properties [29](#)
 enabling
 ITP reports [2](#)
 error data
 viewing [130](#)
 error statistics
 displaying [34](#)
 event
 adding sound files [45](#)
 attaching notes [21](#)
 categories [33](#)
 filter
 loading [16](#)
 setting [8](#)
 forwarding as traps [40](#)
 limits [30](#)
 managing [1](#)
 playing or muting sounds [46](#)
 properties
 viewing [18](#)
 settings
 categories [11](#)
 changing [9](#)
 colors [10](#)
 date [10](#)
 time [10](#)
 severities and colors [35](#)

SNMP servers and traps [32](#)
 sound filters
 creating new [43](#)
 deleting [46](#)
 listing [41](#)
 sounds, setting [41](#)
 traps [36](#)
 event editor [27](#)
 categories [33](#)
 launching [44](#)
 limits [30](#)
 severities and colors [35](#)
 SNMP servers and traps [32](#)
 traps [36](#)
 event files
 archived
 viewing [22](#)
 event filter
 dialog
 buttons [9](#)
 properties [9](#)
 selected objects [12](#)
 example [15](#)
 loading [16](#)
 saving [17](#)
 setting [8](#)
 events
 basic information
 viewing [2](#)
 displaying [28](#)
 settings
 other [12](#)
 severities [12](#)
 sound filters
 changing [45](#)
 window [2](#)
 event table [5](#)
 menus, right-click [4](#)
 toolbar buttons [3](#)

events and alarms
 FAQs **7**
 excluding
 objects
 archived reports **51**
 ITP reports **6**

exit
 settings **4**

export files
 application server processes
 daily **20**
 application servers
 hourly **21**
 custom
 network **54**

formats
 application server processes **2**
 application servers **4**
 capacity planning data **18, 19**
 custom network **17**
 GTT **5**
 links **6, 7**
 linksets **8**
 MLR **10, 12**
 MTP3 **14, 15**
 point codes **15**
 Q.752 link statistics **15**
 rolling network **18**
 GTT, daily **42**
 MLR, daily **39**
 MTP3, daily **45**

network
 daily **70**
 hourly **70**
 rolling **71**
 point code, inventory **47**

exporting
 data **38**

exporting current MWTM data
 for network objects **38**
 node names **39**
 SNMP community names **39**

F

FAQs **1**
 accounting **14**
 applications, other **9**
 asterisks **14**
 browser **6**
 capacity planning **19**
 deployment **14**
 discovery **13**
 events and alarms **7**
 HSRP **20**
 in-band management **17**
 installation **2**
 ITP reports **16**
 Java RMI **10**
 limited functionality **17**
 linkset totals **14**
 link totals **14**
 locked up display **5**
 MIBs **9**
 moving servers **3**
 out-of-band management **17**
 percentages **14**
 polling **8**
 rebooting **5**
 requirements **3**
 server communication **18**
 server messages **4, 10**
 sounds **7**
 SSL, installing **5**
 status **10**
 superuser **10**
 syncing **20**
 syslog **10**

text entry fields **5**
 timing service **8**
 topology maps **7**
 traps **13**
 uninstallation **2**
 user password **10**
 Windows **9**
 workstations **3**
 yellow nodes **22**

features
 customization **4**
 GUI **2**
 integration **5**
 monitoring **3**
 navigational **24**
 performance **3**
 provisioning, ITP only **3**
 security **4**
 server and network **2**
 topology **4**
 troubleshooting **4**
 web **2**

file
node
 MWTM panel **29**
 panel **30**

file menu **33**

files
 ITP
 deploying **35**
 managing **25**
 loading **41**
 saving MWTM **41**

filtering view **10**

firewalls **5**
 configuring **8**

G

general commands **1**
 mwitm **5**
 mwitm ? **5**
 mwitm addcreds **6**
 mwitm adduser **6**
 mwitm authtype **7**
 mwitm backup **8**
 mwitm backupdir **8**
 mwitm badloginalarm **9**
 mwitm badlogindisable **9**
 mwitm browserpath **10**
 mwitm certgui **10**
 mwitm certtool **10**
 mwitm changes **11**
 mwitm checksystem **11**
 mwitm clean **12**
 mwitm cleanall **12**
 mwitm cleandb **13**
 mwitm cleandiscover **14**
 mwitm cliconntimer **14**
 mwitm client **15**
 mwitm clientlogs **15**
 mwitm clitimeout **15**
 mwitm cmdlog **16**
 mwitm console **16**
 mwitm countnodes **16**
 mwitm countobjects **17**
 mwitm cwsetup **17**
 mwitm dbtool **17**
 mwitm delete **18**
 mwitm deletecreds **18**
 mwitm deluser **19**
 mwitm disablepass **19**
 mwitm disableuser **20**
 mwitm discover **20**
 mwitm enableuser **21**
 mwitm eventautolog **21**

mwitm eventconfig **21**
 mwitm eventeditor **22**
 mwitm eventtool **22**
 mwitm evilstop **24**
 mwitm export **24**
 mwitm export cw **25**
 mwitm help **25**
 mwitm inactiveuserdays **26**
 mwitm installog **26**
 mwitm inventorytool **27**
 mwitm ipaccess **28**
 mwitm jsport **29**
 mwitm keytool **29**
 mwitm killclients **30**
 mwitm listusers **30**
 mwitm logger **31**
 mwitm logtimemode **31**
 mwitm manage **31**
 mwitm maxascirows **32**
 mwitm maxevhist **32**
 mwitm maxhtmlrows **33**
 mwitm mldebug **33**
 mwitm motd **34**
 mwitm msglog **35**
 mwitm msglogage **35**
 mwitm msglogdir **35**
 mwitm msglogsize **36**
 mwitm netlog **37**
 mwitm netlogger **37**
 mwitm newlevel **37**
 mwitm osinfo **38**
 mwitm passwordage **38**
 mwitm patchlog **39**
 mwitm poll **39**
 mwitm polltimeout **39**
 mwitm print **40**
 mwitm props **40**
 mwitm provisiontool **40**
 mwitm purgedb **41**
 mwitm readme **42**
 mwitm reboot **42**
 mwitm rep15minage **43**
 mwitm repdailyage **43**
 mwitm rephelp **43**
 mwitm rephourlyage **44**
 mwitm repmonthlyage **44**
 mwitm restart **45**
 mwitm restore **45**
 mwitm restoreprops **46**
 mwitm rootvars **46**
 mwitm sechelp **46**
 mwitm seclogmwitm seclog **47**
 mwitm secondaryserver **47**
 mwitm servername **48**
 mwitm setpath **49**
 mwitm showcreds **50**
 mwitm snmpcomm **50**
 mwitm snmpconf **51**
 mwitm snmpget **51**
 mwitm snmphelp **53**
 mwitm snmpnext **54**
 mwitm snmpwalk **56**
 mwitm sounddir **58**
 mwitm ssl **59**
 mwitm sslstatus **60**
 mwitm start **60**
 mwitm start client **60**
 mwitm start jsp **61**
 mwitm start pm **61**
 mwitm start web **61**
 mwitm status **61**
 mwitm stop **61**
 mwitm stopclients **62**
 mwitm stop jsp **62**
 mwitm stop pm **62**
 mwitm stop web **62**
 mwitm superuser **62**
 mwitm syncusers **63**

mwitm tac **63**
 mwitm tnproxy **64**
 mwitm trapaccess **64**
 mwitm trapsetup **65**
 mwitm trapstatus **65**
 mwitm tshootlog **66**
 mwitm uninstall **66**
 mwitm unknownage **66**
 mwitm updateuser **67**
 mwitm useraccess **67**
 mwitm userpass **68**
 mwitm version **68**
 mwitm viewlog **68**
 mwitm wall **69**
 mwitm webaccesslog **69**
 mwitm weberrorlog **70**
 mwitm weblogupdate **70**
 mwitm webnames **71**
 mwitm webport **71**
 mwitm webutil **72**
 mwitm who **72**
 mwitm xtermpath **72**
 getting started **1**
 Global Title Translation (see GTT)
 go menu **37**
 GTT
 address conversion **14**
 selector table **15**
 tab **13**
 table **14**
 address conversion table
 adding **28**
 entries, adding **30**
 app group tab **10**
 application groups
 adding **23**
 basic information **1, 41**
 CPC
 lists, adding **27**
 tab **12**
 tab, concerned pt code name list **13**
 custom reports **56**
 deploying **40**
 editor
 launching **2**
 menu **4**
 files
 creating **32**
 cross-instance **42**
 editing **16**
 export **42**
 loading **33, 35**
 loading from archive **37**
 reverting **48**
 saving **46**
 GTA
 entries, adding **18**
 searching **21**
 MAP
 adding entries **25**
 tab **11**
 MAP status
 viewing **105**
 network name configuration **43**
 menu **44**
 table **45**
 progress dialog **38**
 reports, daily **41**
 rows, deleting **31**
 selectors
 adding **17**
 selectors and GTA tab **6**
 CPC **10**
 selectors and GTA table
 app group **8**
 GTA **8**
 MAP **9**
 selector **7**

semantics **39**
 statistics
 viewing **107**

GTT accounting
 reports **41**

H

help menu **39**
 home page
 MWTM web interface **6**
 hourly
 formats
 application servers **5**
 HSRP
 FAQs **20**

I

ignoring and unignoring
 objects **39**
 in-band management
 FAQs **17**
 including objects
 archived reports **51**
 ITP reports **6**
 information
 address **13**
 bandwidth
 RAN-O backhauls **14**
 ITP
 application servers **16**
 linksets **17**
 links **19**
 naming
 card **21**
 interfaces **22**
 ITP, application server process associations **23**

ITP, application server processes **23**
 ITP, application servers **22**
 ITP, linkset **24**
 ITP, signaling-gateway mated pairs **24**
 ITP, signaling points **24**
 ITP links **23**
 nodes **20**
 polling
 node **25**
 protection
 ONS nodes **26**
 QoS
 ITP signaling points **27**
 RAN **27**
 remote IP address **27**
 status
 interface and card **30**
 ITP, application server process **35**
 ITP application server process associations **36**
 ITP application servers **34**
 ITP links **38**
 ITP linksets **39**
 ITP signaling gateway mated pairs **40**
 ITP signaling points **41**
 node **29**
 threshold (RAN-O only) **42**
 uptime
 node **28**
 information, in a window
 finding **22**
 installation
 FAQs **2**
 integration
 with CiscoWorks **39**
 interface
 tabs **8**
 UMTS and GSM tabs (RAN-O only) **8**
 interface and card
 status

information **30**

interface content

- MWTM web interface **4**

interfaces

- naming
 - information **22**
- packet size **16**
- status definitions **7**
- table **21**

introduction to SGM **1**

inventory

- items **9**
- point code **45**

IOS

- commands, troubleshooting **4**
- server load balancing **17**

IP Transfer Point (see ITP)

items

- inventory **9**

ITP

- application server process
 - status, information **35**
- application server processes
 - naming, information **23**
- application servers
 - information **16**
 - naming, information **22**
 - status, information **34**
- commands **73**
- files
 - deploying **35**
 - managing **25**
- linkset
 - naming, information **24**
- linksets
 - information **17**
- non-stop operation
 - viewing **60**
- overview **6**

provisioning

- prerequisites **49**

signaling gateway-mated pairs

- naming, information **24**

signaling points

- naming, information **24**

ITP application server process associations

- naming
 - information **23**
- status
 - information **36**

ITP commands

- `mwtm 15minage` **104**
- `mwtm accstats` **75**
- `mwtm archivedir` **76**
- `mwtm atblclient` **77, 103**
- `mwtm atbldir` **78**
- `mwtm autosyncconfig` **79**
- `mwtm checkgtt` **79**
- `mwtm checkmlr` **79**
- `mwtm checkroute` **80**
- `mwtm countas` **80**
- `mwtm countasp` **80**
- `mwtm countaspa` **80**
- `mwtm countlinks` **80**
- `mwtm countlinksets` **81**
- `mwtm countsgmp` **81**
- `mwtm countsps` **81**
- `mwtm deletearchive` **81**
- `mwtm deploarchive` **82**
- `mwtm deplocomments` **82**
- `mwtm evreps clean` **83**
- `mwtm evreps cleancustom` **83**
- `mwtm evreps diskcheck` **83**
- `mwtm evreps enable` **84**
- `mwtm evreps hourlyage` **84**
- `mwtm evreps mtp` **85**
- `mwtm evreps status` **85**
- `mwtm evrepstimer` **85**

mwitm gttclient **86, 104**
 mwitm gttdir **86**
 mwitm gttstats **88**
 mwitm linkstats **89**
 mwitm listarchive **91**
 mwitm listgtt **91**
 mwitm listhistory **92**
 mwitm listmlr **92**
 mwitm listroute **92**
 mwitm maxcsvrows **111**
 mwitm mlrstats **93**
 mwitm mtpevents **95**
 mwitm pcformat **96**
 mwitm plist **96**
 mwitm pushgtt **97**
 mwitm pushmlr **97**
 mwitm pushroute **98**
 mwitm q752stats **99**
 mwitm repcustage **100**
 mwitm repdir **100**
 mwitm replog **101**
 mwitm routedir **102**
 mwitm routetabledefs **103**
 mwitm stareps cleancustom **106**
 mwitm stareps diskcheck **107**
 mwitm stareps gtt **109**
 mwitm statreps acct **105**
 mwitm statreps clean **105**
 mwitm statreps custage **106**
 mwitm statreps dailyage **107**
 mwitm statreps enable **108**
 mwitm statreps hourlyage **109**
 mwitm statreps link **110**
 mwitm statreps mlr **111**
 mwitm statreps monthlyage **112**
 mwitm statreps msu **112**
 mwitm statreps nullcaps **113**
 mwitm statreps q752 **113**
 mwitm statreps servratio **114**
 mwitm statreps status **114**
 mwitm statreps timemode **115**
 mwitm statreps timer **115**
 mwitm statreps utilratio **116**
 mwitm statreps xua **116**
 mwitm xuastats **117**
 statreps export **108**
 statreps iplinks **110**
 ITP links
 naming
 information **23**
 status
 information **38**
 ITP linkset
 access lists
 viewing **101**
 ITP linksets
 status
 information **39**
 ITP MIBS
 specific **3**
 ITP MSU
 errors, viewing **59**
 ITP MTP3
 errors, viewing **58**
 ITP networks
 discovery
 dialog menu **6**
 dialog tabs **7**
 nodes **17**
 running **13**
 settings **15**
 verifying **21**
 ITP provisioning
 using **49**
 ITP reports
 enabling **2**
 excluding objects **6**
 FAQs **16**

including objects **6**

locating **9**

managing **1**

preferences **7**

viewing **3**

ITP signaling gateway mated pairs

status

information **40**

ITP signaling point

description **15**

specific data, viewing **103**

ITP signaling points

managing **38**

QoS

information **27**

status

information **41**

unmanaging **38**

ITP traps **8**

J

JAVA RMI

FAQs **10**

L

launching

CiscoView **40**

discovery dialog **6**

limited functionality

FAQs **17**

link

configuration

interfaces **17**

reports

daily **23**

hourly **22**

tabs **5**

links

configuration

IP addresses **19**

information **19**

reports **21**

custom **67**

five day **26**

status definitions **5**

table **11**

linkset

archived reports

daily **32**

hourly **32**

custom reports **53, 68**

description **15**

reports

custom **68**

daily **29**

daily peaks **31**

hourly **28**

statistics

formats, hourly **9**

table **8**

tabs **5**

linksets

custom reports **53**

status definitions **6**

linkset totals

FAQs **14**

link statistics

formats

multi day **8**

link totals

FAQs **14**

Linux MWTM client, starting **3**

locating

ITP reports **9**

locked up display

- FAQs **5**
- login credentials, setting up **19**
-
- M**
- management interface folder
- tabs **10**
- managing
- event **1**
 - ITP reports **1**
 - ITP signaling points **38**
 - nodes **38**
- mapping files, network name **20**
- menu
- address tables **3**
- menus
- file **33**
 - go **37**
 - help **39**
 - tools **37**
- messages
- display, changing **4**
 - log file
 - age **4**
 - dates **4**
 - location **4**
 - log files
 - size **4**
 - of the day **13**
- MIBs
- FAQs **9**
 - general **1**
- MIBs, SGM **1**
- MLR
- custom reports
 - aborts **58**
 - processed **60**
 - result invokes **61**
 - rule matches **62**
- subtriggers **62**
- triggers **63**
- details
- viewing **112**
- export files, daily **39**
- reports **33**
- aborts **33**
 - continues **34**
 - custom **58**
 - daily **33**
 - processed **35**
 - result invokes **36**
 - rule matches **37**
 - subtriggers **37**
 - triggers **38**
- statistics
- reports, detail **57**
- Mobile Wireless Transport Manager (see MWTM)
- moving servers
- FAQs **3**
- MSU
- load
 - reports **40**
 - peaks
 - reports **40**
 - rates
 - reports **39**
- MTP3
- custom reports, accounting **64**
 - event
 - reports **47**
 - event log
 - viewing **110**
 - export files, daily **45**
 - peaks daily
 - formats,application servers **4**
 - reports
 - custom **64**
 - daily **43**

- MTP3 daily formats application servers **4**
- MTP3 event reports custom **48** detail **56** hourly **48**
- multiple-instance ITPs, connecting **6**
- MWTM about **xxxi** backup **32** client and server communication dynamic NAT **16** firewalls **5** NAT **4** port-forwarding **11** SSL **16** TCP **16** VPN **3**
- integration **39**
- ITP route table file editing **1**
- main menu, using **33**
- main window **22**
- MIB reference **1**
- networking options (see MWTM, client and server communication) **1**
- overview **1**
- restoring **32**
- sessions, running simultaneous **41**
- traps, supported **1**
- troubleshooting (see troubleshooting)
- uninstalling **44**
- web browser, accessing **39**
- MWTM process events changing **27**
- MWTM server (see server, MWTM)
- MWTM web interface additional information **8** archived messages viewing **16** home page **6** interface content **4** logs command **20** console **19** event automation **21** security **21** web access **22** web server error **22** messages **12** action **13** error **13** info **12**
- MWTM client, downloading **7**
- navigation tree **3**
- software updates **8**
- system clients **18** information **11** status **18** user accounts **18** versions **18**
- technical documentation **9**
- MWTM windows printing **24**
-
- N**
- navigating table columns **23**
- navigational features **24**
- navigation tree MWTM client **25**
- MWTM web interface **3**

network
 topology **1**
 views
 topology **1**

network name mapping files, creating **20**

network objects
 status **28**
 viewing a summary **26**

node
 access **4**
 archive
 management **32**

file
 management **25**
 menu, management **26**
 MWTM panel **29**

files
 ITP panel **30**

ITP
 tabs **2**

MWR
 tabs **2**

naming
 information **20**

ONS
 tabs **3**

polling
 information **25**

RAN service module
 tabs **3**

status
 information **29**

uptime
 information **28**

node and ONS card details window
 configuration data
 descriptive information **15**

node details window
 configuration data

IP addresses for SNMP **18**

node name
 settings **5**

nodes
 custom reports **52, 53**
 deleting
 from MWTM discovery database **37**
 excluding from view **39**
 managing **38**
 polling **70**
 SNMP IP addresses
 editing **68**
 status definitions **1**
 trap
 processing **73**
 unmanaging **38**
 window **2**
 menus, right-click **3**
 node table **4**
 nodes and files, seed
 loading **7**

notes
 attaching **34**
 event **21**
 viewing **35**

O

object details window
 configuration data
 naming **20**

object functions
 detailed
 understanding **1**

objectives
 document **xxxii**

object map
 reference **1**

objects

- deleting **36**
 - from MWTM database **36**
 - from network **36**
- ignoring and unignoring **39**
- objects within a view
 - displaying **29**
- obtaining
 - documentation **xxxv**
 - security **xxxv**
 - support **xxxv**
- online help
 - viewing **21**
- ONS nodes
 - protection
 - information **26**
- operations
 - basic server
 - performing **41**
- organization
 - document **xxxii**
- out-of-band management
 - FAQs **17**
- overview
 - discovery **4**

- P**
- pane
 - troubleshooting **6**
- passwords (see security)
- peak
 - reports
 - daily **25**
- percentages
 - FAQs **14**
- performance and error data
 - RAN-O
 - viewing **123**
- performance statistics
 - displaying **30**
 - performing
 - basic server operations **41**
 - physical folder
 - tabs **10**
 - point code
 - export files, inventory **47**
 - inventory **45**
 - reports **45**
 - setting format **5**
 - poller
 - settings **6**
 - settings, changing **2**
 - poller settings window **125**
 - polling
 - FAQs **8**
 - nodes **70**
 - port numbers and parameters
 - configuring **6**
 - ports
 - MWTM **1**
 - preferences
 - ITP reports **7**
 - menu
 - displaying **3**
 - settings
 - deploy **15**
 - troubleshooting **6**
 - preference settings
 - default, restoring **19**
 - web
 - changing **19**
 - printing
 - MWTM windows **24**
 - products menu **37**
 - properties
 - editing **29**
 - provisioning
 - wizard

R

Radio Access Network Optimization (see RAN-O)

RAN

information **27**

RAN backhaul

table **25**

tabs **9**

virtual

creating **136**

RAN data export files

displaying **38**

RAN-O

backhaul

properties, editing **33**

MIBS

specific **5**

overview **7**

traps **11**

RAN-O only

threshold

information **42**

RAN shorthauls

viewing **136**

README file **44**

real-time data

ITP objects

viewing **76**

nodes

viewing **74**

objects

viewing **73**

real-time poller

settings

changing **20**

rebooting

FAQs **5**

recent events

viewing **44**

reference

command **1**

object map **1**

remote IP address

information **27**

report

event metrics

viewing **23**

formats

MSU rates **13**

reports

application server **11**

application server processes

daily **16**

hourly **15**

application servers

hourly **11**

peaks **12**

backhaul

average capacity **20**

maximum capacity **21**

minimum capacity **20**

custom (see custom reports)

directory **10**

displaying **29**

GTT, daily **41**

GTT accounting **41**

link **21**

five day **26**

linkset **28**

log **71**

MLR **33**

aborts **33**

continues **34**

processed **35**

result invokes **36**

rule matches **37**

- subtriggers **37**
 - triggers **38**
 - MP3 event **47**
 - MSU load **40**
 - MSU peaks **40**
 - MSU rates **39**
 - MTP3, daily **43**
 - MTP3 accounting **43**
 - point code **45**
 - point code, inventory **45**
 - system
 - parameters **72**
 - timers **72**
 - system log **22**
 - reports properties
 - viewing **26**
 - requirements
 - FAQs **3**
 - restoring
 - MWTM files **32**
 - RMI
 - how does it work **2**
 - root user, becoming **2**
 - route detail
 - viewing **103**
 - route table files **1**
 - deploying **13**
 - editing **6**
 - loading **12**
 - non-MWTM **16**
 - opening
 - from archive **4**
 - from file **2**
 - from ITP **3**
 - reverting to last saved **15**
 - route table dialog
 - menu **7**
 - menus, right-click **8**
 - table **8**
 - saving **14**
-
- S**
- sample firewall configuration **10**
 - saving
 - address table files **23**
 - event filter **17**
 - GTT files **46**
 - MWTM files **41**
 - route table files **14**
 - seed files **9**
 - topology **18**
 - view **7**
 - security **1**
 - client access, limiting **31**
 - data, restoring **17**
 - logs, system **16**
 - message of the day **13**
 - obtaining **xxxv**
 - overview **1**
 - passwords
 - changing **12**
 - creating **5**
 - disabling, automatically **8**
 - disabling, manually **11**
 - re-enabling **12**
 - synchronizing **15**
 - SSL **20**
 - enabling **20**
 - support, disabling **30**
 - support, managing **30**
 - SSL certificates
 - details **28**
 - downloading **24**
 - exporting **27**
 - importing **26**
 - tool **24**

superuser **18**
 user-based access
 disabling **18**
 implementing **2**
 user levels **5**
 (level 1) basic user **6**
 (level 2) power user **7**
 (level 3) network operator **7**
 (level 4) network administrator **8**
 (level 5) system administrator **8**
 users
 changing **12**
 disabling, automatically **8**
 disabling, manually **11**
 listing current **16**
 re-enabling **12**
 seed files
 changing **12**
 creating **11**
 loading **8**
 saving **9**
 using a text editor **13**
 seed nodes, loading **8**
 semantics
 address table files **17**
 GTT files **39**
 server
 setting up **1**
 server, MWTM
 changing default name **43**
 connecting new **42**
 IOS server load balancing **17**
 removing data **33**
 server communication
 FAQs **18**
 server configuration
 MWTM **14**
 server messages
 FAQs **4, 10**
 server properties
 viewing **24**
 server status information
 viewing **43**
 sessions, MWTM, running simultaneous **41**
 setting
 deploy
 changing **15**
 event filter **8**
 settings
 charts
 changing **13**
 connection **7**
 event
 changing **9**
 exit **4**
 general
 display **4**
 GUI
 changing **4**
 node name **5**
 poller **6**
 repaint **7**
 startup **4**
 status
 changing **14**
 topology
 changing **8**
 SGM
 commands **1**
 FAQs (see FAQs)
 status definitions (see status, definitions)
 shorthaul
 table **27**
 signaling gateway-mated pair
 tabs **7**
 signaling gateway mated pairs
 status definitions **7**
 table **19**

- signaling point
 - tabs **4**
- signaling point details window
 - configuration data
 - capability point code **14**
 - point code **25**
- signaling points
 - status definitions **7**
 - window
 - signaling point information **6**
- single-instance ITPs, connecting **6**
- SNMP
 - settings
 - buttons **17**
 - commands **18**
 - configuring **15**
 - table **15, 16**
 - trap, enabling **7**
- software versions
 - displaying **28**
 - table **29**
- Solaris MWTM client, starting **3**
- sound files, adding **45**
- sound filters, event
 - creating new **43**
 - deleting **46**
 - listing for **41**
 - setting **41**
- sound filters, events
 - changing **45**
- sounds
 - FAQs **7**
- specific object
 - event
 - viewing **8**
- SSL (see also security)
- SSL, downloading module
 - from web server **22**
- SSL certificate tool, launching **44**
- starting MWTM
 - client **2**
 - server **1**
- startup
 - settings **4**
- statistics
 - archived reports
 - daily **27**
 - hourly **27**
 - window, summary **26**
- status
 - FAQs **10**
 - settings, changing **14**
- status color
 - definitions
 - application server process associations **3**
 - application server processes **3**
 - application servers **3**
 - interfaces **7**
 - links **5**
 - linksets **6**
 - nodes **1**
 - signaling gateway mated pairs **7**
 - signaling points **7**
 - views **2**
- status contributors
 - viewing **8**
- summary lists **29, 28**
 - displaying **28**
- superuser **18**
 - FAQs **10**
- supplemental
 - alarms **11**
- support
 - obtaining **xxxv**
- syncing
 - FAQs **20**
- syslog
 - FAQs **10**

- viewing **52**
- system properties
viewing **23**
-
- T**
- table
application server process **15**
application server process associations **17**
application servers **13**
card **23**
interfaces **21**
linkset **8**
RAN backhaul **25**
RAN shorthaul **27**
signaling gateway mated pairs **19**
software versions **29**
- table columns
navigating **23**
- table file
address
loading **12**
- tabs
application server **6**
application server process **6**
application server process association **7**
card **9**
interface **8**
 UMTS and GSM (RAN-O only) **8**
ITP node **2**
link **5**
linkset **5**
management interface folder **10**
MWR node **2**
ONS node **3**
physical folder **10**
RAN backhaul **9**
RAN service module node **3**
signaling gateway-mated pair **7**
- signaling point **4**
technical documentation (see MWTM web interface)
telnet
 enabling proxy **11**
- text entry fields
FAQs **5**
- TFTP
 server (ITP only), setting up **11**
- timing service
FAQs **8**
- topology maps
FAQs **7**
- topology
 centering **18**
 color **24**
 directories **19**
 hiding **28**
 icons, locking **27**
 layouts, creating custom **16**
 magnetic grid **21, 22**
 map **11**
 map menu **15**
 menu **3**
 network **1**
 objects
 aligning **25**
 details **18**
 excluded **11**
 finding **17**
 hiding **26**
 new **10**
 redrawing **28**
 printing **18**
 RAN-O **6**
 redrawing **28**
 restoring **28**
 saving **18, 28**
 settings
 changing **8**

- toolbar buttons **4**
viewing **1**
views menu **16**
- trap
 event, forwarding **40**
 IP address, limiting by **8**
 nodes, processing **73**
 server, forwarding **40**
 settings
 viewing **55**
 SNMP, enabling **7**
- trap forwarding properties
 viewing **27**
- traps
 FAQs **13**
 supported, SGM **1**
- troubleshooting **42**
 data **1**
 diagnosing ITP problems **5**
 diagnosing RAN-O problems **8**
 error messages **2**
 data model mediator service **2**
 demand poller manager service **2**
 events **5**
 IOS commands **4**
 locked up display **1**
 logs **3**
 pane **6**
 server processes **3**
 web pages **4**
-
- U**
- uninstallation
 FAQs **2**
uninstalling MWTM **44**
unmanaging
 ITP signaling points **38**
 nodes **38**
- user-based access (see security)
user password
 FAQs **10**
- users (see security)
- using
 ITP provisioning **49**
 MWTM main menu **33**
 Windows Start menu **43**
-
- V**
- view
 basic information **2**
 client-specific **15**
 creating **9**
 creating (see view editor window)
 custom **2**
 data panel **14**
 default **2**
 loading **15**
 detailed information
 viewing **5**
 directory listing panel **15**
 displaying new objects **13**
 editing **6**
 excluding objects from **13**
 ignoring **17**
 including objects in **13**
 listing
 defined **14**
 subfolders **15**
 subviews **14**
 list panel **14**
 managing **1**
 right-click menu **3**
 saving **7**
 table **3**
 view editor window **9**
 closing **15**

left pane **11**
 menu **10**
 objects, right-click menu **12**
 views, right-click menu **12**

viewing **42**
 details **12**
 error data **130**
 ITP reports **3**
 MLR
 details **112**
 MTP3
 event log **110**
 notes **35**
 online help **21**
 RAN shorthauls **136**
 recent events **44**
 route detail **103**
 server properties **24**
 server status information **43**
 status contributors **8**
 syslog **52**
 system properties **23**
 topology **1**
 trap forward properties **27**
 troubleshooting **42**
 web configuration properties **24**

viewing reports properties **26**
 views
 status definitions **2**

W

web configuration properties
 viewing **24**
 web pages
 metrics
 dates **27**
 day **26**
 files **27**

severity **24**
 status **24**
 traps **25**
 types **23**

SNMP trap
 messages/day table **26**
 status change
 messages/day table **26**
 troubleshooting **4**

web preference, settings
 changing **1**

web server
 downloading SSL module **22**

Windows
 FAQs **9**
 Windows Start menu
 changing default
 MWTM server name **43**

launching
 DOS prompt **44**
 MWTM client **43**
 MWTM event editor **44**
 MWTM README file **44**
 SSL Certificate Tool **44**
 uninstalling MWTM **44**
 using **43**

Y

yellow nodes

FAQs **22**

