



About This Guide

This preface describes the objectives, audience, organization, and conventions of the *User Guide for the Cisco Mobile Wireless Transport Manager 6.0*. It refers you to related publications and describes online sources of technical information.

The Cisco Mobile Wireless Transport Manager (MWTM) is a network management software product that enables network administrators to discover, manage, and troubleshoot networks that include Cisco IP Transfer Point (ITP) or Radio Access Network Optimization (RAN-O) networks. For a more detailed description of the MWTM, see [Chapter 1, “Overview.”](#)

For the latest MWTM information and software updates, go to <http://www.cisco.com/go/mwtm>.

This preface includes:

- [Document Objectives, page xxxi](#)
- [Document Audience, page xxxii](#)
- [Document Organization, page xxxii](#)
- [Document Conventions, page xxxiii](#)
- [Related Documentation, page xxxiv](#)
- [Obtaining Documentation, Obtaining Support, and Security Guidelines, page xxxv](#)

Document Objectives

This guide describes the architecture, supporting hardware and software, and management procedures for the MWTM. Using the information provided in this guide, you can complete the tasks that are necessary to use the MWTM in your ITP or RAN-O system environment.

Document Audience

This guide is for network administrators or operators who use the MWTM software to manage ITP or RAN-O installations. Network administrators or operators should have:

- Basic network management skills
- Basic Solaris system administrator skills
- Basic IP, SS7, and ITP knowledge and/or basic RAN-O knowledge

Document Organization

This guide is divided into the following chapters:

- [“Overview”](#) provides brief descriptions of ITP and RAN-O, the MWTM, the MWTM’s client-server architecture, and an overview of how to use the MWTM to manage your ITP or RAN-O installation.
- [“Configuring Security”](#) provides information about configuring MWTM security and limiting access to the MWTM.
- [“Setting Up Your Server”](#) provides procedures to setup your MWTM server, which includes enabling traps, configuring a backup server, setting up TFTP, configuring SNMP settings and credentials, and creating new troubleshooting commands.
- [“Getting Started”](#) provides basic information and procedures for using the MWTM.
- [“Basic Operations”](#) provides information about basic operations you can perform using the MWTM, including navigating windows, exporting data, and performing basic server operations.
- [“Understanding Basic Object Functions”](#) provides information about basic object functions found within the Summary Lists section of the navigation tree.
- [“Managing Views”](#) provides information about using the MWTM to create, change, and load views and subviews, and view basic and detailed information for views and subviews.
- [“Understanding Detailed Object Functions”](#) provides information about more detailed object functions you can perform on specific types of objects.
- [“Managing Events”](#) provides information about using the MWTM to view basic and detailed information for events, and change the way the MWTM processes events.
- [“Viewing Network Topology”](#) provides procedures for viewing the topology of your network, changing the way the MWTM shows the topology, and saving customized topology displays.
- [“Accessing Data from the Web Interface”](#) describes how to access MWTM data from the MWTM Web interface.
- [“Managing ITP Reports”](#) provides procedures for creating and viewing MWTM accounting and statistics reports for your ITP network.
- [“Editing an ITP Route Table File”](#) provides procedures for viewing and editing ITP route table files.
- [“Editing an ITP Global Title Translation Table”](#) provides procedures for viewing and editing ITP GTT files.
- [“Editing ITP MLR Address Table Files”](#) provides procedures for viewing and editing ITP MLR address table files.
- [“Object Map Reference”](#) provides an overview of the tabs available for each MWTM object within a view.

- “[Command Reference](#)” describes the commands used to set up and operate the MWTM.
- “[FAQs](#)” provides a list of frequently asked questions and troubleshooting tips for the MWTM.
- “[Troubleshooting the MWTM and the Network](#)” provides information for troubleshooting basic MWTM and network problems, including how to verify network discovery, clearing a locked-up MWTM display, and using the MWTM to diagnose typical network problems.
- “[Status Definitions](#)” defines the default status settings for all MWTM network objects.
- “[MIB Reference](#)” lists and describes the MIB variables that are polled by the MWTM.
- “[Trap Reference](#)” lists and describes the traps that the MWTM supports.
- “[Configuring MWTM to Run with Various Networking Options](#)” describes communication between the MWTM client and the MWTM server in different networking environments, including Virtual Private Network (VPN), Network Address Translation (NAT), firewall, port-forwarding, and Secure Sockets Layer (SSL).
- “[Archived Reports File Formats](#)” lists the formats for MWTM statistics export files.
- “[MWTM Ports](#)” lists MWTM and CDM services ports, port type and descriptions.

Document Conventions

This guide uses basic conventions to represent text and table information.

Command descriptions use the following conventions:

- Commands and keywords are in **boldface** font.
- Arguments for which you supply values are in *italic* font.
- Elements in square brackets ([]) are optional.
- Alternate but required keywords are grouped in braces ({ }) and separated by a vertical bar (|).

Examples use the following conventions:

- Terminal sessions and information that the system displays are printed in `screen` font.
- Information that you enter is in **boldface screen** font. Variables for which you enter actual data are printed in *italic screen* font.
- Nonprinting characters, such as passwords, are shown in angle brackets (< >).
- Information that the system displays is in `screen` font, with default responses in square brackets ([]).

This publication also uses the following conventions:

- Menu items and button names are in **boldface** font.
- Directories and filenames are in *italic* font.
- If items such as buttons or menu options are dimmed on application windows, it means that the items are not available either because you do not have the correct permissions or because the item is not applicable at this time.



Note

Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in the manual.

**Caution**

Means *reader be careful*. You are capable of doing something that might result in equipment damage or loss of data.

**Tip**

Means *the following are useful tips*.

Related Documentation

Additional information can be found in the following publications of the MWTM documentation set:

- *Installation Guide for the Cisco Mobile Wireless Transport Manager 6.0*
- *Release Note for the Cisco Mobile Wireless Transport Manager 6.0*
- *Online Help System for Cisco Mobile Wireless Transport Manager 6.0*
- *OSS Integration Guide for the Cisco Mobile Wireless Transport Manager 6.0*

Information about Cisco IOS software-related functions can be found in the following publication:

- *Cisco Management Information Base (MIB) User Quick Reference*

Information about Cisco IP Transfer Point (ITP) software, including procedures for configuring ITP objects, can be found in the following publication:

- *Cisco IP Transfer Point (ITP) in IOS Software Release 12.2(25)SW8*

Information about the Cisco ITPs can be found in the documentation that shipped with the ITP.

Information about Cisco RAN-O nodes, including procedures for configuring RAN-O objects, can be found in the following publications:

- *Cisco MWR 1941-DC-A Mobile Wireless Edge Router Software Configuration Guide*
- *Cisco ONS 15454 RAN Service Module Software Configuration Guide*

Information about the CiscoWorks LAN Management Solution (LMS) 2.6 products, which can be integrated with the MWTM, can be found in the following publication:

- *Cisco Quick Start Guide for LAN Management Solution 2.6*

You can find answers to frequently asked questions about the MWTM in the MWTM online help or in the *User Guide for the Cisco Mobile Wireless Transport Manager 6.0*.

The MWTM includes a browser-based online help system that provides overviews, related information, procedures, and glossary terms for the MWTM. You can select underlined text to access additional help topics that provide related information.

When you access online help for the MWTM the first time there might be a slight pause while your client browser loads the online help.

Obtaining Documentation, Obtaining Support, and Security Guidelines

For information on obtaining documentation, obtaining support, providing documentation feedback, security guidelines, and also recommended aliases and general Cisco documents, see the monthly *What's New* in Cisco Product Documentation, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

