



INDEX

A

access, node **4-4**

accessing

 MWTM web browser **4-24**

accounting FAQs **C-16**

address

 information **8-11**

address tables **16-1**

 editor

 launching **16-2**

 startup options **16-2**

 files

 basic information **16-14**

 creating **16-5**

 deploying **16-14**

 loading, from file **16-6**

 loading, from ITP **16-8**

 reverting **16-18**

 saving **16-17**

 semantics **16-13**

 working **16-10**

 listing **16-14**

 menu **16-3**

 properties

 editing **16-12**

administrative page

 displaying **12-1**

alarm filter

 dialog buttons **9-11**

 loading **9-17**

 saving **9-17**

 setting **9-10**

alarms

 displaying **9-3, 11-10**

 right-click menu **9-9**

 viewing **8-42**

application server

 reports **13-6**

 tabs **A-10**

application server process

 tabs **A-11**

application server process association

 configuration

 general information **8-13**

 tabs **A-11**

application server process associations

 status definitions **E-4**

 table **6-17**

application server processes

 export files, daily **13-67**

 reports

 daily **13-9, 13-10**

 hourly **13-8**

 peaks **13-11, 13-12**

 status definitions **E-4**

 table **6-16**

application servers

 configuration

 associations **8-11**

 export files, hourly **13-67**

 reports

 daily **13-6, 13-66**

 hourly **13-66**

 peaks **13-7**

 statistics details window **8-64**

- status definitions [E-4](#)
 table [6-14](#)
- AS
 accounting reports [13-52](#)
 export files, daily [13-76](#)
- ASP accounting reports [13-52](#)
- asterisks
 FAQs [C-15](#)
- attaching notes [6-38](#)
- audience
 document [iii-xxxiv](#)
-
- B**
- backup
 MWTM files [2-28](#)
 secondary server [3-10](#)
- basic object functions
 understanding [6-1](#)
- browser
 FAQs [C-6](#)
- BWG
 traps [G-17](#)
-
- C**
- capacity planning
 FAQs [C-22](#)
- card
 naming information [8-19](#)
 table [6-23](#)
 tabs [A-13](#)
- changing
 client preference, settings [5-1](#)
 poller settings [3-2](#)
 web preference, settings [5-1](#)
- charts
 settings, changing [5-10](#)
- CiscoWorks
 integrating with MWTM [5-35](#)
 SNMP [3-2](#)
- client
 disconnect sound [11-16](#)
 preferences, changing [5-1](#)
- client, MWTM
 access, limiting [2-27](#)
 connection timer [3-11](#)
 downloading (see MWTM web interface)
 exiting [4-29](#)
 launching from Windows Start menu [4-26](#)
 starting
 on Solaris/Linux [4-3](#)
 on Windows [4-4](#)
 prerequisites [4-3](#)
- client/server architecture, overview [1-10](#)
- client A configuration
 MWTM [H-13](#)
- client B configuration
 MWTM [H-14](#)
- color
 severity, customizing [5-16](#)
- command line interface, using [5-42](#)
- command reference [B-1](#)
- commands
 general [B-1](#)
 ITP [B-94](#)
- configuring
 firewalls [H-7](#)
 port numbers and parameters [H-5](#)
 sample firewall [H-9](#)
- connection settings [5-6](#)
- connection timer [3-11](#)
- content area
 MWTM client [4-17](#)
- conventions
 document [iii-xxxv](#)
- conversion entry

- table **15-14**
- counters, resetting **5-19**
- CPU
- performance, viewing **8-53**
 - credentials, login
 - setting up **3-20**
- CSG
- MIBS **F-4, F-5**
 - CSG1, traps **G-13**
 - CSG2, traps **G-14**
 - customizing view **7-8**
 - custom reports
 - generating **13-83**
-
- D**
- data
- accessing, from web **11-1**
 - exporting **5-34**
 - MWTM
 - exporting current, for node names **5-35**
 - exporting current, for SNMP community names **5-35**
 - removing from server **2-31**
 - default
 - server name, changing **4-26**
 - view, loading **7-13**
 - deleting
 - data from server **2-31**
 - objects **6-40**
 - deploying
 - GTT **15-35**
 - deployment
 - FAQs **C-15**
 - details, viewing **8-9**
 - device configuration
 - buttons **3-22**
 - commands **3-22**
 - dialog box **3-14**
-
- E**
- editing
- ITP route table file **14-1**
 - properties **6-33**
 - error data, viewing **8-105**
 - error statistics, displaying **11-25**
 - event

- adding sound files [9-41](#)
 - attaching notes [9-20](#)
 - categories [9-32](#)
 - filter
 - loading [9-17](#)
 - setting [9-10](#)
 - forwarding as traps [9-37](#)
 - limits [9-27](#)
 - managing [9-1](#)
 - playing or muting sounds [9-42](#)
 - properties
 - viewing [9-18](#)
 - settings
 - categories [5-8](#)
 - changing [5-7](#)
 - colors [5-7](#)
 - date [5-8](#)
 - time [5-8](#)
 - SNMP servers and traps [9-31](#)
 - sound filters
 - creating new [9-39](#)
 - deleting [9-42](#)
 - listing [9-38](#)
 - sounds, setting [9-38](#)
 - traps [9-32](#)
 - event editor [9-25](#)
 - categories [9-32](#)
 - launching [4-27](#)
 - limits [9-27](#)
 - SNMP servers and traps [9-31](#)
 - traps [9-32](#)
 - event files
 - archived [9-21](#)
 - event filter
 - dialog
 - buttons [9-11](#)
 - properties [9-12](#)
 - selected objects [9-14](#)
 - example [9-16](#)
 - loading [9-17](#)
 - saving [9-17](#)
 - setting [9-10](#)
 - events
 - displaying [9-3, 11-10](#)
 - settings
 - other [5-9](#)
 - severities [5-9](#)
 - sound filters
 - changing [9-42](#)
 - window
 - toolbar buttons [9-7](#)
 - events and alarms
 - FAQs [C-7](#)
 - Event Sounds [11-16](#)
 - excluding
 - objects
 - ITP reports [13-85](#)
 - exit settings [5-3](#)
 - export files
 - application server process archived reports [13-67](#)
 - AS, daily [13-76](#)
 - GTT, daily [13-69](#)
 - MLR, daily [13-74](#)
 - MTP3, daily [13-76](#)
 - point code, inventory [13-77](#)
 - exporting current MWTM data
 - for network objects [5-34](#)
 - node names [5-35](#)
 - SNMP community names [5-35](#)
 - exporting data [5-34](#)
-
- F**
- FAQs [C-1](#)
 - accounting [C-16](#)
 - applications, other [C-10](#)
 - asterisks [C-15](#)
 - browser [C-6](#)

- capacity planning **C-22**
 - deployment **C-15**
 - discovery **C-15**
 - events and alarms **C-7**
 - HSRP **C-22**
 - in-band management **C-20**
 - installation **C-2**
 - ITP reports **C-17**
 - Java RMI **C-11**
 - limited functionality **C-19**
 - linkset totals **C-16**
 - link totals **C-16**
 - locked up display **C-5**
 - MIBs **C-10**
 - moving servers **C-3**
 - out-of-band management **C-20**
 - percentages **C-15**
 - polling **C-9**
 - rebooting **C-5**
 - requirements **C-3**
 - server communication **C-21**
 - server messages **C-4**
 - sounds **C-8**
 - SSL, installing **C-5**
 - status **C-11**
 - superuser **C-11**
 - syncing **C-23**
 - syslog **C-11**
 - text entry fields **C-5**
 - timing service **C-8**
 - topology maps **C-7**
 - traps **C-14**
 - uninstallation **C-2**
 - user password **C-11**
 - Windows **C-11**
 - workstations **C-3**
 - yellow nodes **C-25**
 - features
 - customization **1-5**
 - GUI **1-2**
 - integration **1-5**
 - monitoring **1-3**
 - navigational **4-15**
 - performance **1-3**
 - provisioning **1-3**
 - security **1-4**
 - server and network **1-2**
 - topology **1-4**
 - troubleshooting **1-4**
 - web **1-2**
 - file
 - node
 - MWTM panel **5-27**
 - panel **5-28**
 - file menu **4-19**
 - files
 - ITP
 - deploying **5-32**
 - managing **5-23**
 - loading **4-25**
 - saving MWTM **4-25**
 - filtering view **7-8**
 - firewalls **H-5**
 - configuring **H-7**
-
- G**
 - General commands
 - mwitm datadir **B-22**
 - general commands **B-1**
 - mwitm **B-6**
 - mwitm addcreds **B-6**
 - mwitm adduser **B-7**
 - mwitm authtype **B-8**
 - mwitm backup **B-9**
 - mwitm backupdir **B-11**
 - mwitm badloginalarm **B-11**
 - mwitm badlogindisable **B-12**

- mwtm browserpath **B-12**
 mwtm certgui **B-12**
 mwtm certtool **B-13**
 mwtm changes **B-14**
 mwtm checksystem **B-14**
 mwtm clean **B-15**
 mwtm cleanall **B-15**
 mwtm cleandb **B-16**
 mwtm cleandiscover **B-16**
 mwtm ciconntimer **B-17**
 mwtm client **B-18**
 mwtm clientlogs **B-18**
 mwtm clitimeout **B-19**
 mwtm cmdlog **B-19**
 mwtm console **B-21**
 mwtm countnodes **B-21**
 mwtm countobjects **B-21**
 mwtm cwsetup **B-21**
 mwtm dbtool **B-23**
 mwtm delete **B-24**
 mwtm deletecreds **B-24**
 mwtm deluser **B-25**
 mwtm disablepass **B-26**
 mwtm disableuser **B-26**
 mwtm discover **B-27**
 mwtm diskmonitor **B-27**
 mwtm enableuser **B-28**
 mwtm eventautolog **B-28**
 mwtm eventconfig **B-28**
 mwtm eventeditor **B-29**
 mwtm eventtool **B-29**
 mwtm evilstop **B-31**
 mwtm export **B-31**
 mwtm export cw **B-32**
 mwtm groups **B-32**
 mwtm help **B-33**
 mwtm inactiveuserdays **B-34**
 mwtm installog **B-35**
 mwtm inventorytool **B-35**
 mwtm iosreport **B-37**
 mwtm ipaccess **B-38**
 mwtm jspport **B-38**
 mwtm keytool **B-39**
 mwtm killclients **B-39**
 mwtm listusers **B-40**
 mwtm logger **B-40**
 mwtm logtimemode **B-42**
 mwtm manage **B-43**
 mwtm maxascirows **B-43**
 mwtm maxevhist **B-44**
 mwtm maxhtmlrows **B-44**
 mwtm mldebug **B-45**
 mwtm motd **B-46**
 mwtm msglog **B-46**
 mwtm msglogage **B-47**
 mwtm msglogdir **B-47**
 mwtm msglogsize **B-41**
 mwtm netlog **B-48**
 mwtm netlogger **B-48**
 mwtm newlevel **B-48**
 mwtm osinfo **B-49**
 mwtm passwordage **B-49**
 mwtm patchlog **B-50**
 mwtm poll **B-50**
 mwtm polltimeout **B-50**
 mwtm print **B-51**
 mwtm props **B-51**
 mwtm provisiontool **B-51**
 mwtm purgedb **B-52**
 mwtm readme **B-53**
 mwtm reboot **B-53**
 mwtm rep15minage **B-53**
 mwtm repdailyage **B-54**
 mwtm rephelp **B-55**
 mwtm rephourlyage **B-55**
 mwtm repmonthlyage **B-56**
 mwtm restart **B-56**
 mwtm restore **B-57**

mwitm restoreprops **B-58**
 mwitm rootvars **B-58**
 mwitm sechelp **B-58**
 mwitm seclogmwitm seclog **B-58**
 mwitm secondaryserver **B-59**
 mwitm servername **B-60**
 mwitm setpath **B-60**
 mwitm showcreds **B-62**
 mwitm snmpcomm **B-63**
 mwitm snmpconf **B-63**
 mwitm snmpget **B-64**
 mwitm snmphelp **B-66**
 mwitm snmpnext **B-67**
 mwitm snmpwalk **B-70**
 mwitm sounddir **B-72**
 mwitm ssl **B-73**
 mwitm sslstatus **B-74**
 mwitm start **B-74**
 mwitm start client **B-74**
 mwitm start jsp **B-75**
 mwitm start pm **B-75**
 mwitm start web **B-75**
 mwitm statreps **B-75**
 mwitm status **B-81**
 mwitm stop **B-81**
 mwitm stopclients **B-81**
 mwitm stop jsp **B-82**
 mwitm stop pm **B-82**
 mwitm stop web **B-82**
 mwitm superuser **B-82**
 mwitm syncusers **B-83**
 mwitm tac **B-83**
 mwitm termproxy **B-84**
 mwitm trapaccess **B-84**
 mwitm traprate limit abate **B-85**
 mwitm trapratelimit count **B-85**
 mwitm trapratelimit interval **B-86**
 mwitm trapratelimit minor **B-86**
 mwitm trapsetup **B-86**
 mwitm trapstatus **B-87**
 mwitm tshootlog **B-87**
 mwitm uninstall **B-88**
 mwitm unknownage **B-88**
 mwitm updateuser **B-88**
 mwitm useraccess **B-89**
 mwitm userpass **B-89**
 mwitm version **B-90**
 mwitm viewlog **B-90**
 mwitm wall **B-90**
 mwitm webaccesslog **B-91**
 mwitm weberrorlog **B-91**
 mwitm weblogupdate **B-92**
 mwitm webnames **B-92**
 mwitm webport **B-92**
 mwitm webutil **B-93**
 mwitm who **B-93**
 mwitm xtermpath **B-93**
 generating
 custom reports **13-83**
 reports **13-2**
 getting started **4-1**
 GGSN
 MIBS **F-5**
 traps **G-15**
 Global Title Translation (see GTT)
 go menu **4-21**
 GTT
 address conversion **15-14**
 selector table **15-15**
 tab **15-13**
 table **15-14**
 address conversion table
 adding **15-26**
 entries, adding **15-26**
 app group tab **15-10**
 application groups
 adding **15-22**
 basic information **15-1, 15-35**

- CPC
- lists, adding **15-25**
 - tab **15-12**
 - tab, concerned pt code name list **15-13**
- deploying **15-35**
- editor
- launching **15-2**
 - menu **15-4**
- files
- creating **15-29**
 - cross-instance **15-37**
 - editing **15-16**
 - export **13-69**
 - loading **15-30, 15-32**
 - loading from archive **15-33**
 - reverting **15-41**
 - saving **15-39**
- GTA
- entries, adding **15-18**
 - searching **15-21**
- MAP
- adding entries **15-24**
 - tab **15-11**
- MAP status
- viewing **8-115**
- network name configuration **15-37**
- menu **15-38**
 - table **15-39**
- progress dialog **15-33**
- reports, daily **13-53**
- rows, deleting **15-28**
- selectors, adding **15-17**
- selectors and GTA tab **15-6**
- CPC **15-10**
- selectors and GTA table
- app group **15-8**
 - GTA **15-8**
 - MAP **15-9**
 - selector **15-7**
- semantics **15-34**
- statistics, viewing **8-116**
- GTT accounting reports **13-53**
-
- H**
- HA traps **G-17**
- help menu **4-23**
- home page
- MWMT web interface **11-7**
- HSRP
- FAQs **C-22**
-
- I**
- ignoring and unignoring objects **6-44**
- in-band management
- FAQs **C-20**
- including objects
- ITP reports **13-85**
- information
- address **8-11**
 - bandwidth
 - RAN-O backhauls **8-12**
- ITP
- application server process associations **8-20**
 - application servers **8-13, 8-20**
 - linksets **8-15**
 - links **8-16**
 - naming
 - card **8-19**
 - interfaces **8-19**
 - ITP application servers **8-20**
 - ITP links **8-20**
 - ITP linkset **8-21**
 - ITP signaling-gateway mated pairs **8-21**
 - ITP signaling points **8-21**
 - nodes **8-18**

- polling nodes **8-23**
- protection
 - ONS nodes **8-24**
- QoS, ITP signaling points **8-24**
- RAN **8-24**
- remote IP address **8-25**
- status
 - interface and card **8-27**
 - ITP application server process **8-31**
 - ITP application server process associations **8-32**
 - ITP application servers **8-30**
 - ITP links **8-34**
 - ITP linksets **8-35**
 - ITP signaling gateway mated pairs **8-36**
 - ITP signaling points **8-37**
 - node **8-26**
- threshold (RAN-O only) **8-38**
- uptime
 - node **8-26**
- information, in a window
 - finding **5-21**
- installation
 - FAQs **C-2**
- integration
 - with CiscoWorks **5-35**
- interface
 - tabs **A-12**
 - UMTS and GSM tabs (RAN-O only) **A-13**
- interface and card, status information **8-27**
- interface content
 - MWTM web interface **11-4**
- interfaces
 - naming **8-19**
 - packet size **8-13**
 - status definitions **E-8**
 - table **6-21**
- introduction to SGM **1-1**
- inventory
 - point code **6-32**
- IOS
 - commands, troubleshooting **D-4**
 - server load balancing **H-16**
- IP addresses accounting
 - reports **6-33**
- IP Transfer Point (see ITP)
- ITP
 - application server processes **8-20**
 - application server process
 - status, information **8-31**
 - application server process associations **8-20**
 - application servers **8-13**
 - naming, information **8-20**
 - status, information **8-30**
 - commands **B-94**
 - files
 - deploying **5-32**
 - managing **5-23**
 - linkset
 - naming, information **8-21**
 - linksets
 - information **8-15**
 - non-stop operation
 - viewing **8-90**
 - overview **1-6**
 - signaling gateway-mated pairs
 - naming, information **8-21**
 - signaling points
 - naming, information **8-21**
 - ITP application server process associations
 - status **8-32**
 - ITP commands
 - mwtm 15minage **B-80**
 - mwtm accstats **B-95**
 - mwtm archivedir **B-97**
 - mwtm atblclient **B-97, B-122**
 - mwtm atbldir **B-98**
 - mwtm autosyncconfig **B-99**
 - mwtm chartwindow **B-14**

- mwitm checkgtt **B-99**
 mwitm checkmlr **B-100**
 mwitm checkroute **B-100**
 mwitm countas **B-100**
 mwitm countasp **B-100**
 mwitm countaspa **B-101**
 mwitm countlinks **B-101**
 mwitm countlinksets **B-101**
 mwitm countsgmp **B-101**
 mwitm countsps **B-101**
 mwitm deletearchive **B-102**
 mwitm deploarchive **B-102**
 mwitm deplocomments **B-103**
 mwitm evreps clean **B-103**
 mwitm evreps cleancustom **B-103**
 mwitm evreps diskcheck **B-103**
 mwitm evreps enable **B-104**
 mwitm evreps hourlyage **B-104**
 mwitm evreps mtp **B-105**
 mwitm evreps status **B-105**
 mwitm evrepstimer **B-105**
 mwitm gttclient **B-107, B-123**
 mwitm gttdir **B-107**
 mwitm gttstats **B-109**
 mwitm linkstats **B-110**
 mwitm listarchive **B-111**
 mwitm listgtt **B-112**
 mwitm listhistory **B-113**
 mwitm listmlr **B-113**
 mwitm listroute **B-113**
 mwitm mlrstats **B-114**
 mwitm mtpevents **B-115**
 mwitm pcformat **B-116**
 mwitm pclist **B-117**
 mwitm pushgtt **B-117**
 mwitm pushmlr **B-118**
 mwitm pushroute **B-119**
 mwitm q752stats **B-119**
 mwitm repcustage **B-120**
 mwitm repdir **B-54**
 mwitm replog **B-56**
 mwitm routedir **B-121**
 mwitm routetabledefs **B-122**
 mwitm statreps monthlyage **B-81**
 mwitm xuastats **B-123**
- ITP links
 naming
 information **8-20**
 status
 information **8-34**
- ITP linkset
 access lists, viewing **8-112**
 status **8-35**
- ITP MIBS **F-7**
- ITP MSU
 errors, viewing **8-89**
- ITP MTP3
 errors, viewing **8-88**
- ITP networks
 discovery
 dialog menu **4-6**
 dialog tabs **4-7**
 nodes **4-14**
 running **4-11**
 settings **4-12**
 verifying **4-14**
- ITP reports
 excluding objects **13-85**
 FAQs **C-17**
 including objects **13-85**
 locating **13-82**
- ITP signaling gateway mated pairs
 status **8-36**
- ITP signaling point
 description **8-13**
 specific data, viewing **8-113**
- ITP signaling points
 managing **6-42**

QoS **8-24**
 status **8-37**
 unmanaging **6-42**
 ITP traps **G-7**

J

JAVA RMI

FAQs **C-11**

L

launching
 discovery dialog **4-6**
 limited functionality
 FAQs **C-19**

link

 configuration
 interfaces **8-15**
 reports
 daily **13-24**
 hourly **13-23**
 tabs **A-10**

links

 configuration
 IP addresses **8-17**
 information **8-16**
 reports **13-22**
 status definitions **E-6**
 table **6-13**

linkset

 archived reports
 daily **13-73**
 hourly **13-73**
 description **8-13**
 reports
 daily **13-31**
 daily peaks **13-32**

 hourly **13-29**
 table **6-10**
 tabs **A-9**
 linksets
 status definitions **E-7**
 linkset totals
 FAQs **C-16**
 link totals
 FAQs **C-16**
 Linux MWTM client, starting **4-3**
 locating
 ITP reports **13-82**
 locked up display
 FAQs **C-5**
 login credentials, setting up **3-20**

M

management interface folder
 tabs **A-16**
 managing
 event **9-1**
 ITP signaling points **6-42**
 nodes **6-42**
 reports **13-1**
 mapping files, network name **16-15**
 MaxAlarmAge **9-30**
 menu
 address tables **16-3**
 menus
 file **4-19**
 go **4-21**
 help **4-23**
 tools **4-22**
 messages
 display, changing **3-4**
 log file
 age **3-5**
 dates **3-5**

- location **3-4**
- size **3-4**
- of the day **2-13**
- MIBs
 - common **F-2**
 - FAQs **C-10**
- MLR
 - details **8-119**
 - export files, daily **13-74**
 - reports **13-34**
 - aborts **13-34**
 - continues **13-35**
 - daily **13-34**
 - processed **13-36**
 - result invokes **13-36**
 - rule matches **13-37**
 - subtriggers **13-37**
 - triggers **13-38**
- mobile Services Exchange Framework (see mSEF)
- Mobile Wireless Transport Manager (see MWTM)
- moving servers
 - FAQs **C-3**
- mSEF
 - overview **1-9**
 - traps **G-12**
- MSU
 - archived reports
 - daily **13-75**
 - hourly **13-75**
 - load
 - reports **13-39**
 - peaks
 - reports **13-39**
 - rates
 - reports **13-38**
- MTP3
 - event log
 - viewing **8-118**
 - export files, daily **13-76**
- reports
 - daily **13-54**
- MTP3 event
 - reports
 - detail **13-77**
- MTP3 event reports **13-76**
- multiple-instance ITPs, connecting **3-6**
- MWTM
 - about **iii-xxxiii**
 - backup **2-28**
 - client and server communication
 - dynamic NAT **H-15**
 - firewalls **H-5**
 - NAT **H-4**
 - port-forwarding **H-10**
 - SSL **H-15**
 - TCP **H-15**
 - VPN **H-3**
 - integration **5-35**
 - ITP route table file
 - editing **14-1**
 - main menu, using **4-18**
 - main window **4-14**
 - MIB reference **F-1**
 - networking options (see MWTM, client and server communication) **H-1**
 - overview **1-1**
 - restoring **2-28**
 - sessions, running simultaneous **5-38**
 - traps, supported **G-1**
 - troubleshooting (see troubleshooting)
 - uninstalling **4-27**
 - web browser, accessing **4-24**
- MWTM process
 - events, changing **9-25**
- MWTM server (see server, MWTM)
- MWTM web interface
 - additional information **11-10**
 - archived messages **12-8**

- home page **11-7**
 - interface content **11-4**
 - logs
 - command **12-12**
 - console **12-12**
 - event automation **12-12**
 - security **12-13**
 - web access **12-14**
 - web server error **12-14**
 - messages **12-5**
 - action **12-6**
 - error **12-6**
 - info **12-5**
 - MWTM client, downloading **11-8**
 - navigation tree **11-3**
 - software updates **11-10**
 - system
 - clients **12-10**
 - information **12-3**
 - status **12-10**
 - user accounts **12-10**
 - versions **12-10**
 - technical documentation **11-10**
 - MWTM windows
 - printing **5-23**
-
- N**
 - navigating
 - table columns **5-22**
 - navigational features **4-15**
 - navigation tree
 - MWTM client **4-16**
 - MWTM web interface **11-3**
 - network
 - topology **10-1**
 - views
 - topology **10-1**
 - network name mapping files, creating **16-15**
 - network objects
 - viewing a summary **4-17**
 - node
 - access **4-4**
 - archive
 - management **5-30**
 - BWG tabs **A-2**
 - CSG tabs **A-2**
 - CSR tabs **A-3**
 - file
 - management **5-23**
 - menu, management **5-24**
 - MWTM panel **5-27**
 - files
 - ITP panel **5-28**
 - GGSN tabs **A-4**
 - HA tabs **A-4**
 - ITP tabs **A-5**
 - naming information **8-18**
 - ONS tabs **A-7**
 - polling information **8-23**
 - RAN service module tabs **A-7**
 - status information **8-26**
 - uptime information **8-26**
 - node and ONS card details window
 - configuration data
 - descriptive information **8-13**
 - node details window
 - configuration data
 - IP addresses for SNMP **8-16**
 - node name settings **5-4**
 - nodes
 - deleting
 - from MWTM discovery database **6-42**
 - excluding from view **6-44**
 - managing **6-42**
 - polling **8-48**
 - SNMP IP addresses
 - editing **8-39**

status definitions [E-1](#)

trap

 processing [8-51](#)

unmanaging [6-42](#)

window [6-2](#)

 menus, right-click [6-3](#)

 node table [6-5](#)

nodes and files, seed

 loading [4-7](#)

notes

 attaching [6-38](#)

 event [9-20](#)

 viewing [6-39](#)

O

object details window

 configuration data

 naming [8-17](#)

object functions

 detailed

 understanding [8-1](#)

objectives

 document [iii-xxiii](#)

object map

 reference [A-1](#)

objects

 deleting [6-40](#)

 from MWTM database [6-40](#)

 from network [6-40](#)

 ignoring and unignoring [6-44](#)

online help, viewing [5-20](#)

ONS nodes

 protection information [8-24](#)

operations

 basic server performance [5-38](#)

organization

 document [iii-xxiv](#)

out-of-band management

FAQs [C-20](#)

overview

 discovery [4-4](#)

P

passwords (see security)

peak

 reports [13-26](#)

percentages

 FAQs [C-15](#)

physical folder

 tabs [A-16](#)

point code

 export files, inventory [13-77](#)

 inventory [6-32](#)

 reports [6-32](#)

 setting format [3-5](#)

poller

 settings [5-5](#)

 settings, changing [3-2](#)

poller settings window [8-101](#)

polling

 FAQs [C-9](#)

polling nodes [8-48](#)

port numbers and parameters

 configuring [H-5](#)

ports

 MWTM [I-1](#)

preferences

 menu [5-2](#)

 settings

 CiscoWorks server [5-12](#)

 deploy [5-14](#)

 troubleshooting [5-5](#)

 preference settings

 default, restoring [5-18](#)

 web, changing [5-18](#)

printing

- MWTM windows **5-23**
- products menu **4-22**
- properties, editing **6-33**
- provisioning
- prerequisites **8-46**
 - using **8-43**
 - wizard
 - using **8-47**
-
- R**
- Radio Access Network Optimization (see RAN-O)
- RAN
- information **8-24**
- RAN backhaul
- table **6-25**
 - tabs **A-14**
 - virtual
 - creating **8-129**
- RAN data export files
- displaying **11-27**
- RAN-O
- backhaul
 - properties, editing **6-37**
 - MIBS
 - specific **F-9**
 - overview **1-8**
 - traps **G-11**
- RAN-O only
- threshold
 - information **8-38**
- RAN shorthauls
- viewing **8-129**
- README file **4-27**
- real-time data
- ITP objects
 - viewing **8-64**
 - objects
 - viewing **8-52**
- real-time poller
- settings
 - changing **5-19**
- rebooting
- FAQs **C-5**
- recent events
- viewing **8-42**
- reference
- command **B-1**
 - object map **A-1**
- remote IP address
- information **8-25**
- report
- event metrics
 - viewing **9-21**
- reports
- application server **13-6**
 - application server processes
 - daily **13-9**
 - hourly **13-8** - application servers
 - hourly **13-6**
 - peaks **13-7** - archived
 - custom **13-61**
 - daily **13-64**
 - hourly **13-64**
 - rolling **13-64** - AS accounting **13-52**
 - ASP accounting **13-52**
 - custom (see custom reports)
 - directory **13-83**
 - file archive **13-60**
 - generating **13-2**
 - GTT, daily **13-53**
 - GTT accounting **13-53**
 - IP addresses accounting **6-33**
 - link **13-22**
 - five day **13-28**

- linkset **13-29**
 - log **13-80**
 - managing **13-1**
 - MLR **13-34**
 - aborts **13-34**
 - continues **13-35**
 - processed **13-36**
 - result invokes **13-36**
 - rule matches **13-37**
 - subtriggers **13-37**
 - triggers **13-38**
 - MSU load **13-39**
 - MSU peaks **13-39**
 - MSU rates **13-38**
 - MTP3, daily **13-54**
 - MTP3 accounting **13-54**
 - MTP3 event **13-76**
 - MTP3 events
 - hourly **13-76**
 - point code **6-32**
 - point code, inventory **6-32, 13-52**
 - system
 - parameters **13-80**
 - timers **13-80**
 - system log **12-14**
 - viewing **13-3**
 - reports, accounting
 - viewing **13-52**
 - reports, statistics
 - viewing **13-5**
 - reports properties
 - viewing **12-19**
 - requirements
 - FAQs **C-3**
 - restoring
 - MWTM files **2-28**
 - RMI
 - how does it work **H-2**
 - root user, becoming **4-2**
 - route detail
 - viewing **8-113**
 - route table files **14-1**
 - deploying **14-12**
 - editing **14-5**
 - loading **14-11**
 - non-MWTM **14-14**
 - opening
 - from archive **14-4**
 - from file **14-2**
 - from ITP **14-3**
 - reverting to last saved **14-14**
 - route table dialog
 - menu **14-6**
 - menus, right-click **14-7**
 - table **14-7**
 - saving **14-12**
-
- S**
- sample firewall
 - configuration **H-9**
 - saving
 - address table files **16-17**
 - alarm filter **9-17**
 - event filter **9-17**
 - GTT files **15-39**
 - MWTM files **4-25**
 - route table files **14-12**
 - seed files **4-8**
 - topology **10-17**
 - view **7-5**
 - security **2-1**
 - client access, limiting **2-27**
 - data, restoring **2-17**
 - logs, system **2-16**
 - message of the day **2-13**
 - overview **2-1**
 - passwords

changing **2-12**
 creating **2-6**
 disabling, automatically **2-9**
 disabling, manually **2-11**
 re-enabling **2-12**
 synchronizing **2-15**

SSL **2-19**
 enabling **2-20**
 support, disabling **2-27**
 support, managing **2-26**

SSL certificates
 details **2-25**
 downloading **2-22**
 exporting **2-24**
 importing **2-23**
 tool **2-23**

superuser **2-17**

user-based access
 disabling **2-17**
 implementing **2-2**

user levels **2-6**
 (level 1) basic user **2-7**
 (level 2) power user **2-7**
 (level 3) network operator **2-8**
 (level 4) network administrator **2-8**
 (level 5) system administrator **2-8**

users
 changing **2-12**
 disabling, automatically **2-9**
 disabling, manually **2-11**
 listing current **2-15**
 re-enabling **2-12**

seed files
 changing **4-10**
 creating **4-10**
 loading **4-7**
 saving **4-8**
 using a text editor **4-11**

seed nodes, loading **4-7**

semantics
 address table files **16-13**
 GTT files **15-34**

server
 setting up **3-1**

server, MWTM
 changing default name **4-26**
 connecting new **5-39**
 IOS server load balancing **H-16**
 removing data **2-31**

server communication
 FAQs **C-21**

server configuration, MWTM **H-13**

server messages
 FAQs **C-4**

server properties
 viewing **12-17**

server status information
 viewing **5-39**

sessions, MWTM, running simultaneous **5-38**

setting
 alarm filter **9-10**
 CiscoWorks server
 changing **5-12**
 deploy
 changing **5-14**
 event filter **9-10**

settings
 charts
 changing **5-10**
 connection **5-6**
 event
 changing **5-7**
 exit **5-3**
 general, displaying **5-4**
 GUI, changing **5-3**
 node name **5-4**
 poller **5-5**
 repaint **5-6**

- startup **5-3**
- status, changing **5-11**
- topology
 - changing **5-13**
- severity alarm **4-18**
- SGM
 - commands **B-1**
 - FAQs (see FAQs)
 - status definitions (see status, definitions)
- shorthaul table **6-26**
- signaling gateway-mated pair
 - tabs **A-12**
- signaling gateway mated pairs
 - status definitions **E-7**
 - table **6-19**
- signaling point
 - tabs **A-9**
- signaling point details window
 - configuration data
 - capability point code **8-12**
 - point code **8-22**
- signaling points
 - status definitions **E-7**
 - window
 - signaling point information **6-9**
- single-instance ITPs, connecting **3-6**
- SNMP
 - settings
 - buttons **3-18**
 - commands **3-18**
 - configuring **3-15**
 - table **3-16**
 - trap, enabling **3-7**
- software versions
 - displaying **11-11**
 - table **6-32**
- Solaris MWTM client, starting **4-3**
- sound files, adding **9-41**
- sound filters, event
 - creating new **9-39**
 - deleting **9-42**
 - listing for **9-38**
 - setting **9-38**
- sound filters, events
 - changing **9-42**
- sounds
 - FAQs **C-8**
- SSL (see also security)
- SSL, downloading module
 - from web server **2-21**
- SSL certificate tool, launching **4-27**
- starting MWTM
 - client **4-2**
 - server **4-1**
- startup settings **5-3**
- statistics
 - archived reports
 - daily **13-73**
 - hourly **13-72**
- status
 - FAQs **C-11**
 - settings, changing **5-11**
- status color
 - definitions
 - application server process associations **E-4**
 - application server processes **E-4**
 - application servers **E-4**
 - interfaces **E-8**
 - links **E-6**
 - linksets **E-7**
 - nodes **E-1**
 - signaling gateway mated pairs **E-7**
 - signaling points **E-7**
 - views **E-2**
- status contributors, viewing **8-7**
- Summary lists **4-17**
- summary lists **4-18, 11-11**
 - displaying **11-11**

- superuser **2-17**
 FAQs **C-11**
- syncing
 FAQs **C-23**
- syslog
 FAQs **C-11**
 viewing **8-53**
- system properties
 viewing **12-15**
-
- T**
- table
 application server process **6-16**
 application server process associations **6-17**
 application servers **6-14**
 card **6-23**
 interfaces **6-21**
 linkset **6-10**
 RAN backhaul **6-25**
 RAN shorthaul **6-26**
 signaling gateway mated pairs **6-19**
 software versions **6-32**
- table columns
 navigating **5-22**
- table file
 address
 loading **16-9**
- tabs
 application server **A-10**
 application server process **A-11**
 application server process association **A-11**
 BWG node **A-2**
 card **A-13**
 CSG node **A-2**
 CSR node **A-3**
 GGSN node **A-4**
 HA node **A-4**
 interface **A-12**
- UMTS and GSM (RAN-O only) **A-13**
- ITP node **A-5**
- link **A-10**
- linkset **A-9**
- management interface folder **A-16**
- ONS node **A-7**
- physical folder **A-16**
- RAN backhaul **A-14**
- RAN service module node **A-7**
- signaling gateway-mated pair **A-12**
- signaling point **A-9**
- technical documentation (see MWTM web interface)
- terminal
 enabling proxy **3-11**
- text entry fields
 FAQs **C-5**
- TFTP
 server (ITP only), setting up **3-12**
- timing service
 FAQs **C-8**
- topology maps
 FAQs **C-7**
- topology
 centering **10-16**
 color **10-21**
 directories **10-18**
 hiding **10-25**
 icons, locking **10-24**
 layouts, creating custom **10-15**
 magnetic grid **10-19, 10-20**
 map **10-9**
 map menu **10-14**
 menu **10-2**
 network **10-1**
 objects
 aligning **10-23**
 details **10-17**
 excluded **10-9**
 finding **10-15**

- hiding **10-24**
 new **10-8**
 redrawing **10-25**
 printing **10-17**
RAN-O **10-5**
 redrawing **10-25**
 restoring **10-26**
 saving **10-17, 10-25**
 settings
 changing **5-13**
 toolbar buttons **10-3**
 viewing **10-1**
 views menu **10-14**
- trap
 event, forwarding **9-37**
 IP address, limiting by **3-9**
 nodes, processing **8-51**
 server, forwarding **5-37**
 settings
 viewing **8-59**
 SNMP, enabling **3-7**
- TRAP_RATE_ABATE_OFFSET** **9-43**
TRAP_RATE_LIMIT_COUNT **9-43, 9-44**
- trap forwarding properties
 viewing **12-19**
- traps
 FAQs **C-14**
 supported, SGM **G-1**
- troubleshooting **8-40**
 data **D-1**
 diagnosing ITP problems **D-5**
 diagnosing RAN-O problems **D-9**
 error messages **D-2**
 data model mediator service **D-2**
 demand poller manager service **D-2**
 events **D-5**
 IOS commands **D-4**
 locked up display **D-1**
 logs **D-3**
- pane **5-5**
 server processes **D-3**
 web pages **D-4**
- Troubleshooting subscriber information **8-133**
-
- U**
- uninstalling
 FAQs **C-2**
MWTM **4-27**
- unmanaging
 ITP signaling points **6-42**
 nodes **6-42**
- user-based access (see security)
 user password
 FAQs **C-11**
- users (see security)
- using
 MWTM main menu **4-18**
 provisioning **8-43**
 Windows Start menu **4-26**
-
- V**
- view
 basic information **7-2**
 client-specific **7-13**
 creating **7-7**
 creating (see view editor window)
 custom **7-2**
 data panel **7-12**
 default **7-2**
 loading **7-13**
 detailed information
 viewing **7-4**
 directory listing panel **7-12**
 displaying new objects **7-10**
 editing **7-5**

- excluding objects from **7-10**
 - ignoring **7-14**
 - including objects in **7-10**
 - listing
 - defined **7-11**
 - subfolders **7-12**
 - subviews **7-12**
 - list panel **7-11**
 - managing **7-1**
 - right-click menu **7-3**
 - saving **7-5**
 - table **7-3**
 - view editor window **7-7**
 - closing **7-12**
 - left pane **7-9**
 - menu **7-8**
 - objects, right-click menu **7-10**
 - views, right-click menu **7-9**
 - viewing **8-40**
 - accounting reports **13-52**
 - alarms **8-42**
 - details **8-9**
 - error data **8-105**
 - MLR
 - details **8-119**
 - MTP3
 - event log **8-118**
 - notes **6-39**
 - online help **5-20**
 - RAN shorthauls **8-129**
 - recent events **8-42**
 - reports **13-3**
 - route detail **8-113**
 - server properties **12-17**
 - server status information **5-39**
 - statistics reports **13-5**
 - status contributors **8-7**
 - syslog **8-53**
 - system properties **12-15**
 - topology **10-1**
 - trap forward properties **12-19**
 - troubleshooting **8-40**
 - web configuration properties **12-17**
 - viewing reports properties **12-19**
 - views
 - status definitions **E-2**
-
- W**
- web configuration properties
 - viewing **12-17**
 - web pages
 - metrics
 - dates **9-25**
 - day **9-24**
 - files **9-25**
 - severity **9-22**
 - status **9-23**
 - traps **9-23**
 - types **9-22**
 - SNMP trap
 - messages/day table **9-24**
 - status change
 - messages/day table **9-24**
 - troubleshooting **D-4**
 - web preference, settings
 - changing **5-1**
 - web server
 - downloading SSL module **2-21**
 - Windows
 - FAQs **C-11**
 - Windows Start menu
 - changing default
 - MWTM server name **4-26**
 - launching
 - DOS prompt **4-27**
 - MWTM client **4-26**
 - MWTM event editor **4-27**

MWTM README file [4-27](#)

SSL Certificate Tool [4-27](#)

uninstalling MWTM [4-27](#)

using [4-26](#)

Y

yellow nodes

FAQs [C-25](#)