



CONTENTS

Preface xxxiii

CHAPTER 1

Overview 1-1

- What Is the MWTM? 1-1
 - Server and Network Features 1-2
 - Graphical User Interface and Web Features 1-2
 - Event Monitoring Features 1-3
 - Performance Features 1-3
 - Provisioning Features 1-3
 - Security Features 1-4
 - Topology Features 1-4
 - Troubleshooting Features 1-4
 - Customization Features 1-5
 - Integration Features 1-5
- What Is ITP? 1-6
- What is CDT? 1-7
- What is IPRAN? 1-7
- What is PWE3? 1-8
- What Is RAN-O? 1-8
- What Is mSEF? 1-9
- How Do I Identify My Network Type? 1-9
- What Is Client/Server Architecture? 1-10

CHAPTER 2

Configuring Security 2-1

- Configuring User Access 2-1
 - Implementing Secure User Access (Server Only) 2-2
 - Security Authentication 2-2
 - Configuring User Levels 2-4
 - Configuring User Passwords 2-4
 - Enabling Secure User Access 2-5
 - Creating Secure Passwords 2-6
 - Configuring MWTM User Account Levels (Server Only) 2-6
 - Basic User (Level 1) Access 2-7
 - Power User (Level 2) Access 2-7

Network Operator (Level 3) Access	2-8
Network Administrator (Level 4) Access	2-8
System Administrator (Level 5) Access	2-8
Automatically Disabling Users and Passwords (Server Only)	2-9
Manually Disabling Users and Passwords (Server Only)	2-11
Enabling and Changing Users and Passwords (Server Only)	2-12
Displaying a Message of the Day (Server Only)	2-13
Manually Synchronizing Local MWTM Passwords (Server Only)	2-15
Listing All Currently Defined Users (Server Only)	2-15
Displaying the Contents of the System Security Log (Server Only)	2-16
Restoring Security-Related MWTM Data (Server Only)	2-17
Disabling MWTM User-Based Access (Server Only)	2-17
Specifying a Super User (Server Only)	2-17
Implementing SSL Support in the MWTM	2-19
Enabling SSL Support on the MWTM Server	2-20
Downloading the MWTM SSL Module for Windows Using the Web Interface	2-21
Downloading the Self-Signed SSL Certificate from the MWTM Server	2-22
Launching the MWTM Certificate Tool for SSL	2-23
Importing an SSL Certificate to an MWTM Client	2-23
Exporting an SSL Certificate	2-24
Viewing Detailed Information About a SSL Certificate	2-25
Managing SSL Support in the MWTM	2-26
Enabling SSL for the Firefox Web Client	2-26
Disabling SSL Support in the MWTM	2-27
Limiting MWTM Client Access to the MWTM Server (Server Only)	2-27
Backing Up or Restoring MWTM Files (Server Only)	2-28
Backing Up MWTM Data Files	2-29
Changing the Backup Directory	2-29
Setting the Number of Backup Days	2-30
Restoring MWTM Data Files	2-30
Removing MWTM Data from the MWTM Server	2-31

CHAPTER 3

Setting Up Your Server 3-1

Importing SNMP Community Names from CiscoWorks (Solaris Only)	3-2
Changing MWTM Server Poller Settings	3-2
Changing the Message Display	3-4
Changing the Location of MWTM Message Log Files	3-4
Changing the Size of the MWTM Message Log Files	3-4
Changing the Time Mode for Dates in Log Files	3-5

Changing the Age of the MWTM Message Log Files	3-5
Setting the ITP Point Code Format	3-5
Connecting a Single-Instance ITP to a Multiple-Instance ITP	3-6
Enabling SNMP Traps	3-7
Limiting Traps by IP Address	3-9
Configuring a Backup MWTM Server	3-10
Configuring an MWTM Client Connection Timer	3-11
Enabling the Terminal Server Proxy Service	3-11
Setting Up TFTP on Your Server (ITP Only)	3-12
Setting Up TFTP on Solaris	3-12
Setting Up TFTP on Linux	3-13
Configuring Nodes	3-14
Node SNMP and Credentials Menu	3-15
Configuring SNMP Settings	3-15
SNMP Settings Table	3-16
SNMP Configuration Table	3-16
SNMP Configuration Buttons	3-18
SNMP Configuration Commands	3-18
Configuring Login Credentials	3-20
Setting Up Login Credentials	3-20
Credentials Fields	3-21
Credentials Buttons	3-22
Adding Nodes	3-22
Credentials Commands	3-22
Creating New Troubleshooting Categories and Commands	3-23

CHAPTER 4

Getting Started 4-1

Starting the MWTM Server	4-1
Becoming the Root User (Server Only)	4-2
Starting the MWTM Client	4-2
Before Starting the MWTM Client	4-3
Setting the DISPLAY Variable for Solaris or Linux Clients	4-3
Starting the MWTM Client on Solaris or Linux	4-3
Access the Node	4-4
Starting the MWTM Client on Windows	4-4
Discovering Your Network	4-4
Discovery Overview	4-4
Launching the Discovery Dialog	4-6

Discovery Dialog Menu	4-6
Discovery Dialog Tabs	4-7
Loading Seed Nodes and Seed Files	4-7
Loading a Seed Node	4-7
Loading a Seed File	4-7
Saving a Seed File	4-8
Creating a New Seed File	4-10
Changing an Existing Seed File	4-10
Creating and Changing Seed Files Using a Text Editor	4-11
Running Discovery	4-11
Discovery Settings	4-12
Discovered Nodes	4-14
Verifying Discovery	4-14
Displaying the MWTM Main Window	4-14
Navigational Features	4-15
MWTM Client Navigation Tree	4-16
MWTM Client Content Area	4-17
Displaying Summary Lists Alarms	4-17
Right-Click Menu for the Summary Lists	4-18
Using the MWTM Main Menu	4-18
Using the MWTM Toolbar	4-23
Accessing the MWTM Through a Web Browser	4-24
Loading and Saving MWTM Files	4-25
Using the Windows Start Menu	4-26
Changing the Default MWTM Server Name	4-26
Launching the MWTM Client	4-26
Launching the MWTM DOS Prompt	4-27
Launching the MWTM Event Editor	4-27
Launching the MWTM SSL Certificate Tool	4-27
Displaying the MWTM README File	4-27
Uninstalling the MWTM	4-27
Locating Technology Specific Information	4-27
Exiting the MWTM Client	4-29

CHAPTER 5

Basic Operations 5-1

Changing Client and Web Preference Settings	5-1
Changing Client Preference Settings	5-2
Displaying the Preferences Menu	5-2
Changing General GUI Settings	5-3

Changing Alarm and Event Settings	5-7
Changing Charts Settings	5-10
Changing Status Settings	5-11
Changing CiscoWorks Server Settings	5-12
Changing Topology Settings	5-13
Changing Deploy Settings	5-14
Customizing Colors	5-16
Restoring Default Preference Settings	5-18
Changing Web Preference Settings	5-18
Changing Real-Time Poller and Counter Settings	5-19
Viewing Online Help	5-20
Finding Information in a Window	5-21
Navigating Table Columns	5-22
Printing Windows	5-23
Managing and Deploying ITP Files	5-23
Node File Management	5-23
Node File Management Menu	5-24
Node File Management MWTM Pane	5-27
Node File Management Node Pane	5-28
Node Archive Management	5-30
Node Archive Management Menu	5-30
Node Archive Management Selector Pane	5-30
Node Archive Management Display Pane	5-31
Deploying ITP Files	5-32
Exporting Data	5-34
Exporting Current Data for Network Objects	5-34
Exporting Current Node Names and SNMP Community Names	5-35
Integrating the MWTM with Other Products	5-35
Integrating the MWTM with CiscoWorks	5-35
Launch CiscoWorks Applications from the MWTM Client	5-36
Launch Integrated Applications from the MWTM Web Interface	5-37
Launch the MWTM Web Interface from the CiscoWorks Dashboard	5-37
Forwarding Traps to Other Hosts (Server Only)	5-37
Running Simultaneous Client Sessions	5-38
Performing Basic Server Operations	5-38
Connecting to a New Server	5-39
Viewing Server Status Information	5-39
Server Status Information: Fields and Buttons	5-40
Server Status Information: Processes	5-40

Server Status Information: Pollers	5-40
Server Status Information: Tasks	5-41
Server Status Information: Clients	5-41
Using the Command Line Interface	5-42

CHAPTER 6

Understanding Basic Object Functions 6-1

Displaying Object Windows	6-2
Right-Click Menu for All Objects	6-3
Alarms Table	6-4
Nodes Table	6-5
Signaling Points Table	6-9
Linksets Table	6-10
Links Table	6-13
Application Servers Table	6-14
Application Server Processes Table	6-16
Application Server Process Associations Table	6-17
Signaling Gateway Mated Pairs Table	6-19
Interfaces Table	6-21
Cards Table	6-23
RAN Backhauls Table	6-25
RAN Shorthauls Table	6-26
PWE3 Backhauls Table	6-28
PWE3 Virtual Circuits	6-29
Access Point Names Table	6-31
Software Versions Table	6-32
Point Codes	6-32
IP Addresses	6-33
Editing Properties	6-33
Editing Properties for a RAN-O Backhaul	6-37
Attaching Notes	6-38
Viewing Notes	6-39
Deleting Objects	6-40
Deleting an Object from Your Network	6-40
Deleting an Object from the MWTM Database	6-40
Deleting a Node from the MWTM Discovery Dialog	6-42
Unmanaging and Managing Nodes or ITP Signaling Points	6-42
Excluding Nodes or ITP Signaling Points from a View	6-44
Ignoring and Unignoring Objects	6-44

CHAPTER 7**Managing Views 7-1**

- Overview 7-1
 - Default View 7-2
 - Custom View and Subviews 7-2
- Viewing Basic Information for Custom Views 7-2
 - Right-Click Menu for Views 7-3
 - Views Summary List Table 7-3
- Viewing Detailed Information for Views 7-4
- Editing a View 7-5
- Saving a View 7-5
- Creating a New View 7-7
 - View Editor Window Menu 7-8
 - Objects In Current View 7-9
 - Right-Click Menu for a View 7-9
 - Right-Click Menu for a Subview 7-9
 - Right-Click Menu for an Object 7-10
 - Excluded from View Pane 7-10
 - New on the Network Pane 7-10
 - Views List Pane 7-11
 - View Data Pane 7-12
 - Directory Listing Pane 7-12
 - Closing the View Editor Window 7-12
 - Choosing a View 7-13
- Loading the DEFAULT View 7-13
- Loading a Client-Specific View 7-13
- Ignoring a View 7-14
- Viewing Ignored Views 7-14

CHAPTER 8**Understanding Detailed Object Functions 8-1**

- Viewing the Right-Click Menu for an Object 8-2
- Deploying a File Associated with an ITP Node or Signaling Point 8-6
- Viewing Management Interfaces and Physical Folders 8-7
- Viewing Status Contributors 8-7
- Viewing Details 8-9
 - Address Information 8-11
 - Advanced Details (Web) 8-11
 - Association Information 8-11
 - Bandwidth Information 8-12

Capability Point Code	8-12
Description	8-13
Descriptive Information	8-13
General Information	8-13
Interfaces	8-13
ITP Application Servers	8-13
ITP Linksets	8-15
Interface Information	8-15
IP Addresses for SNMP	8-16
IP Addresses Not for SNMP	8-16
Links Information	8-16
Local IP Address Information	8-17
Naming Information	8-17
Nodes	8-18
Cards	8-19
Interfaces	8-19
ITP Application Servers	8-20
ITP Application Server Processes	8-20
ITP Application Server Process Associations	8-20
ITP Links	8-20
ITP Linksets	8-21
ITP Signaling Gateway-Mated Pairs	8-21
ITP Signaling Points	8-21
Point Code	8-22
Polling Information	8-23
Protection Information	8-24
PWE3 Information	8-24
QoS Information	8-24
RAN Information	8-24
Remote IP Address Information	8-25
Uptime Information	8-26
Status Information	8-26
Nodes	8-26
Interfaces and Cards	8-27
ITP Application Servers	8-30
ITP Application Server Processes	8-31
ITP Application Server Process Associations	8-32
ITP Links	8-34
ITP Linksets	8-35
ITP Signaling Gateway Mated Pairs	8-36

ITP Signaling Points	8-37
Threshold Information (RAN-O Only)	8-38
Editing SNMP IP Addresses for a Node	8-39
Viewing Troubleshooting	8-40
Troubleshooting Menu and Toolbar	8-41
Commands That Require Additional User Input	8-42
Viewing Alarms and Recent Events	8-42
About Provisioning	8-43
Prerequisites for Using Provisioning	8-46
Setting Up the MWTM to Retrieve Running Configuration from the Object	8-47
Using the Provisioning Wizard	8-47
Polling Nodes	8-48
Polling from the Discovery Dialog	8-49
Performing a Normal Poll	8-49
Performing a Clean Poll	8-50
Allowing and Disallowing Trap Processing for a Node	8-51
Viewing Real-Time Data	8-52
Viewing the Syslog	8-53
Viewing CPU and Memory Performance	8-53
Viewing CPU Processes	8-54
Viewing CPU Utilization	8-55
Viewing Historical CPU Utilization	8-56
Viewing Memory Utilization	8-57
Viewing Historical Memory Utilization	8-59
Viewing Trap Settings	8-59
Viewing Data for Interfaces	8-61
Real-Time Interface Performance	8-62
Real-Time Interface Errors	8-63
Viewing Data for ITP Objects	8-64
Charts: Application Servers and Application Server Process Associations	8-66
Charts: Links and Linksets	8-68
Interface Details	8-70
Poll Settings	8-72
Q.752 Measurements	8-73
Right-Click Menu	8-75
SCTP Association Configuration Details	8-75
SCTP Association Statistics Details	8-77
Statistics: Application Servers	8-78
Statistics: Application Server Process Associations	8-79

Statistics: Links and Linksets	8-81
Status Details	8-84
Viewing ITP MTP3 Errors	8-88
Viewing ITP MSU Rates	8-89
Right-click Menu	8-89
Viewing ITP Non-Stop Operation	8-90
Viewing TDM Statistics	8-95
Line Configuration Pane	8-96
Line Status Information Pane	8-99
Performance and Error Information Pane	8-99
Viewing RAN-O Performance Data	8-100
Viewing Shorthaul Performance Data	8-101
Viewing Backhaul Performance Data	8-102
Viewing RAN-O Error Data	8-105
Viewing Shorthaul Errors	8-106
Viewing Backhaul Errors	8-110
Viewing PWE3 Statistics	8-110
Viewing ITP Linkset Access Lists	8-112
Viewing ITP Linkset Statistics	8-112
Viewing Data Specific for ITP Signaling Points	8-113
Viewing Route Detail	8-113
Viewing GTT MAP Status	8-115
Viewing GTT Statistics	8-116
Viewing the MTP3 Event Log	8-118
Viewing MLR Details	8-119
Viewing MLR Counters	8-120
Viewing MLR Trigger Config	8-121
Viewing MLR Trigger Results	8-125
Viewing RAN Shorthauls	8-129
Creating Virtual RAN Backhauls	8-129
Viewing APN-Specific Tables	8-130
Viewing APN Instances	8-131
Viewing GGSN Nodes	8-132
Using the APN Search Tool	8-133

CHAPTER 9

Managing Alarms and Events 9-1

Basic Concepts and Terms	9-1
Event Definition	9-1
Alarm Definition	9-2

Displaying Active Alarms and Event History	9-3
Toolbar Buttons	9-7
Right-click Menus	9-9
Right-Click Menu for All Alarms and Events	9-9
Right-Click Menu for a Specific Alarm or Event	9-9
Managing Filters for Alarms and Events	9-10
Setting Alarm or Event Filters	9-10
Alarm and Event Filter Buttons	9-11
Properties Settings	9-12
Selected Objects Settings	9-14
Event Filter Example	9-16
Loading Existing Filters	9-17
Saving Filter Files	9-17
Viewing Properties for Alarms and Events	9-18
Attaching Notes to Alarms or Events	9-20
Viewing Archived Event Files on the Web	9-21
Viewing Event Metrics Report on the Web	9-21
Message Types Table	9-22
Message Severity Table	9-22
Status Messages Table	9-23
Trap Messages Table	9-23
Messages/Day Table	9-24
Status Change Messages/Day Table	9-24
SNMP Trap Messages/Day Table	9-24
Files Processed Table	9-25
Date Range Table	9-25
Changing the Way the MWTM Processes Events	9-25
Changing Event Limits	9-27
Specifying SNMP Servers for Trap Forwarding	9-31
Changing Event Categories	9-32
Configuring Trap, Status Alarm, or User Action Events	9-32
Forwarding Events as Traps to Other Hosts	9-37
Setting Sounds for Events at an MWTM Client	9-38
Listing Event Sound Filters	9-38
Creating New Event Sound Filters	9-39
Adding Sound Files to the MWTM	9-41
Changing an Existing Event Sound Filter	9-42
Deleting Event Sound Filters	9-42
Playing and Muting Event Sounds	9-42

Event Processing	9-43
Event Queue Congestion	9-43
Trap Rate Limits	9-43
Database Archiving	9-44
Event Archival Process	9-44
Alarm Archival Process	9-45
File-based Archiving	9-48

CHAPTER 10

Viewing Network Topology	10-1
Topology Menu	10-2
Topology Toolbar Buttons	10-3
Topology Tabs	10-5
Tables Tab	10-5
New Objects Tab	10-8
Excluded Objects Tab	10-9
Topology Map	10-9
Topology Right-Click Menu: Map	10-14
Topology Right-Click Menu: Object	10-14
Topology Alarm Pane	10-15
Creating a Custom Layout	10-15
Finding an Object	10-15
Using the Selection Dialog	10-16
Centering the Topology Map on an Object	10-16
Displaying Detailed Information About a Topology Map Element	10-17
Printing the Topology Map	10-17
Saving the Topology Map as a JPEG File	10-17
Selecting a Directory for the JPEG File	10-18
Activating a Magnetic Grid on the Topology Map	10-19
Specifying a Color for the Magnetic Grid	10-20
Swatches Pane (Recommended)	10-20
HSB Pane	10-20
RGB Pane	10-21
Select Grid Color Field and Buttons	10-21
Specifying a Background Color for the Topology Map	10-21
Swatches Pane (Recommended)	10-22
HSB Pane	10-22
RGB Pane	10-22
Select Background Color Field and Buttons	10-22

Aligning Objects on the Topology Map	10-23
Hiding and Displaying Non-ITP Nodes and Linksets	10-24
Locking and Unlocking the Position of an Icon	10-24
Improving Topology Performance	10-24
Turning Off Antialiasing	10-24
Connecting Locally for Large Networks—Solaris Clients Only	10-25
Hiding and Redrawing Connections When Redrawing	10-25
Hiding and Showing Connections When Redrawing	10-25
Saving the Topology Map	10-25
Restoring the Topology Map	10-26

CHAPTER 11

Accessing Data from the Web Interface	11-1
Supported Browsers	11-1
Checking Your Browser	11-2
Accessing the MWTM Web Interface	11-2
Overview of the MWTM Web Interface	11-3
MWTM Web Interface Navigation Tree	11-3
MWTM Web Interface Content Area	11-4
Customizing Date Ranges	11-5
Using the Toolbar	11-5
Displaying the Home Page	11-7
Downloading the MWTM Client from the Web	11-8
Downloading the Solaris Client	11-9
Downloading the Windows Client	11-9
Downloading the Linux Client (Unsupported)	11-9
Accessing Software Updates and Additional Information	11-10
Viewing the MWTM Technical Documentation	11-10
Displaying Alarms and Events	11-10
Displaying Summary Lists	11-11
Displaying Software Versions	11-11
Displaying Status and Summary Reports	11-12
Viewing Report Status	11-12
Performance Summary Hourly Report	11-13
Performance Summary Daily Report	11-13
Viewing Historical Statistics Report Settings	11-14
Tools	11-15
Launch Tools	11-16
Event Sounds	11-16

Using the Batch Provision Tool	11-16
Search Tools	11-17
Searching for Home Agent Subscribers	11-17
Searching for GGSN Subscribers	11-18
Understanding Groups	11-18
Creating Groups	11-18
Editing Groups	11-19
Viewing Group Summary Information	11-20
Displaying Group Details	11-20
Viewing Group Details	11-21
Viewing Statistics	11-21
Displaying RAN-O Statistics	11-21
Displaying Shorthaul Performance Statistics	11-22
Displaying Backhaul Performance Statistics	11-23
Displaying Error Statistics	11-25
Displaying Shorthaul Error Statistics	11-26
Displaying Backhaul Error Statistics	11-27
Generating RAN Data Export Files	11-27
Displaying CSG2 Real-Time Statistics	11-28
Global Statistics	11-28
Load Statistics	11-29
BMA Statistics	11-30
Quota Server Statistics	11-31
User Database Statistics	11-32
Displaying BWG Real-Time Statistics	11-33
Global Statistics	11-33
Status	11-34
Creation and Deletion Statistics	11-34
Miscellaneous Statistics	11-35
Signaling Packet Statistics	11-36
DHCP Packet Statistics	11-36
Handoff Statistics	11-37
Data Packet Statistics	11-38
Dropped Packet Statistics	11-39
Profile Statistics	11-40
Rejected Statistics	11-41
Paths Statistics	11-41
User Groups Statistics	11-42
Sessions and Flow Statistics	11-43

Traffic Statistics	11-43
Displaying HA Real-Time Statistics	11-45
Global	11-45
Registrations Processed by AAA	11-45
Registration Requests	11-46
Standby Synchronization	11-46
IP Local Pool Config	11-47
IP Local Pool Stats	11-47
Displaying GGSN Real-Time Statistics	11-48
Global	11-48
GTP Statistics	11-48
Charging Statistics	11-49
GTP Throughput Statistics	11-49
PDP Context Statistics	11-49
AAA Statistics	11-50
IP and UDP Statistics	11-50
SGSN Throughput	11-51
APN General	11-52
APN Miscellaneous Statistics	11-52
APN PDP Context Statistics	11-52
APN Throughput Statistics	11-53
IP Local Pool Config	11-53
IP Local Pool Stats	11-54
Displaying PWE3 Real-Time Statistics	11-54
Displaying TDM Real-Time Statistics	11-54

CHAPTER 12

Viewing Administrative Information from the Web Interface 12-1

Viewing MWTM System Information	12-3
Viewing System Messages	12-5
Viewing Info Messages	12-5
Viewing Error Messages	12-6
Viewing MWTM User Action Messages	12-6
Last Action Messages Menu	12-7
Last Action Messages Table	12-7
Viewing All Archived MWTM Messages	12-8
Viewing System Status Information	12-9
Viewing System Status	12-10
Viewing System Versions	12-10
Viewing Connected Clients	12-10

Viewing User Accounts	12-10
Viewing License Information	12-11
Viewing System Logs	12-11
Viewing the Install Log	12-12
Viewing the Console Log	12-12
Viewing the Command Log	12-12
Viewing the Event Automation Log	12-12
Viewing the Security Log	12-13
Viewing the Install Log	12-13
Viewing the Web Access Logs	12-14
Viewing the Web Error Logs	12-14
Viewing the Report Log	12-14
Viewing the Report Timers	12-14
Viewing Properties	12-15
Viewing System Properties	12-15
Viewing Server Properties	12-17
Viewing Web Configuration Properties	12-17
Viewing Reports Properties	12-19
Viewing Trap Forwarding Properties	12-19

CHAPTER 13

Managing Reports 13-1

Using the Reports Page	13-1
Enabling Automatic Reports Using the CLI	13-2
Viewing Reports	13-3
Viewing Statistics Reports	13-5
Application Server Reports	13-6
Application Server Process Reports	13-8
CPU/Memory Reports	13-13
GTT Rates Reports	13-19
Link Reports	13-22
Link Multi-Day Report	13-28
Linkset Reports	13-29
MLR Reports	13-34
MSU Rates Reports	13-38
RAN Reports	13-40
SCTP Reports	13-47
Generating Node-Level CPU/Memory Reports	13-51
Viewing Accounting Reports	13-52
AS/ASP Accounting Reports	13-52

GTT Accounting Reports	13-53
MTP3 Accounting Reports	13-54
Viewing Subscriber Count Reports	13-55
Node Instance Counts in BWG and GGSN Subscriber Reports	13-55
BWG Subscriber Count Reports	13-56
CSG2 Subscriber Count Reports	13-57
GGSN Subscriber Count Reports	13-58
HA Subscriber Count Reports	13-59
Viewing File Archive Reports	13-60
Custom ITP Archived Reports	13-61
Daily Archived Reports	13-64
Hourly Archived Reports	13-64
15 Minute Archived Reports	13-64
Rolling ITP Archived Reports	13-64
Access Point Name Archived Reports	13-65
Application Server Archived Reports	13-66
Application Server Process Archived Reports	13-67
CPU Archived Reports	13-67
CSG Archived Reports	13-68
GTT Accounting Archived Reports	13-69
GTT Rates Archived Reports	13-69
GGSN Archived Reports	13-70
HA Archived Reports	13-71
Link Archived Reports	13-72
Linkset Archived Reports	13-73
Memory Archived Reports	13-74
MLR Archived Reports	13-74
MSU Archived Reports	13-75
MTP3/AS Events Reports	13-76
Point Code Archived Reports	13-77
Q752 Archived Reports	13-78
RAN Archived Reports	13-78
SCTP Archived Reports	13-79
Viewing the MWTM Statistics Reports Logs	13-79
Locating Stored Reports	13-82
Changing the MWTM Reports Directory	13-83
Customizing ITP Reports	13-83
Generating Custom ITP Statistics Reports Using the CLI	13-83
Including or Excluding Specified Objects in ITP Reports	13-85

CHAPTER 14

Editing an ITP Route Table File 14-1

- Editing an MWTM ITP Route Table File 14-1
- Opening a Route Table File from a File 14-2
- Opening a Route Table File from a Node 14-3
- Opening a Route Table File from an Archive 14-4
- Editing ITP Route Tables 14-5
 - Route Table Dialog Menu 14-6
 - Route Table Dialog Right-Click Menu 14-7
 - Route Table 14-7
- Loading an Existing Route Table File 14-11
- Deploying a Route Table File 14-12
- Saving a Route Table File 14-12
- Reverting to the Last Saved Route Table File 14-14
- Editing a Non-MWTM ITP Route Table 14-14

CHAPTER 15

Editing an ITP Global Title Translation Table 15-1

- Launching the GTT Editor 15-2
- GTT Menu 15-4
- GTT Editor: Selectors and GTA Tab 15-6
 - Selector Table 15-7
 - GTA Table 15-8
 - App Group Table 15-8
 - MAP Table 15-9
 - CPC List 15-10
- GTT Editor: App Group Tab 15-10
- GTT Editor: MAPs Tab 15-11
- GTT Editor: CPC Tab 15-12
 - Concerned Pt. Code Name List 15-13
- GTT Editor: Address Conversion Tab 15-13
 - Address Conversion Table 15-14
 - Conversion Entry Table 15-14
 - Selector Table for Address Conversion 15-15
- Editing a GTT Table 15-16
- Adding a Selector to a Selector Table 15-17
- Adding a GTA Entry to a GTT 15-18
- Searching the GTA Table for GTA Digits 15-21
- Adding an Application Group Entry to an App Group Table 15-22
- Adding a MAP Entry to a GTT 15-24

Adding a CPC List to a GTT	15-25
Adding a GTT Address Conversion Table	15-26
Adding an Entry to a GTT Conversion Table Entry	15-26
Deleting Rows from a Table	15-28
Creating a New GTT File	15-29
Loading an Existing GTT File	15-30
Loading a GTT File from a Node	15-32
Loading a GTT File from the Archive	15-33
Displaying the Progress Dialog Box	15-33
Checking the Semantics of a GTT File	15-34
Deploying a GTT File	15-35
Displaying Basic Information About a GTT File	15-35
Supporting Cross-Instance GTT Files	15-37
Network Name Configuration Dialog Box Menu	15-38
Network Name Configuration Dialog Box Table	15-39
Saving a GTT File	15-39
Reverting to the Last Saved GTT File	15-41

CHAPTER 16

Editing ITP MLR Address Table Files	16-1
Launching the Address Table Editor	16-2
Address Table Menu	16-3
Creating a New Address Table File	16-5
Loading an Existing Address Table File	16-6
Loading an Address Table File from a Node	16-8
Loading an Address Table File from the Archive	16-9
Working in Address Table Files	16-10
Result Types and Values	16-11
Editing Address Table Properties	16-12
Checking the Semantics of an Address Table File	16-13
Deploying an Address Table File	16-14
Displaying Basic Information About an Address Table File	16-14
Listing Archived Address Tables	16-14
Creating Network Name Mapping Files	16-15
Network Name Configuration Dialog Menu	16-15
Network Name Configuration Dialog Table	16-16
Saving an Address Table File	16-17

Reverting to the Last Saved Address Table File 16-18

APPENDIX A

Client Object Map Reference A-1

BWG Node Tabs	A-2
CSG1 and CSG2 Node Tabs	A-2
CSR Node Tabs	A-3
Generic Node Tabs	A-3
GGSN Node Tabs	A-4
HA Node Tabs	A-4
IP-RAN Node Tabs	A-5
ITP Node Tabs	A-5
Metro Ethernet Node Tabs	A-6
mSEF Node Tabs	A-6
ONS Node Tabs	A-7
RAN Service Card Node Tabs	A-7
CDT Node Tabs	A-8
Unknown Node Tabs	A-8
Signaling Point Tabs	A-9
Linkset Tabs	A-9
Link Tabs	A-10
Application Server Tabs	A-10
Application Server Process Tabs	A-11
Application Server Process Association Tabs	A-11
Signaling Gateway-Mated Pair Tabs	A-12
Interface Tabs	A-12
UMTS and GSM Interface Tabs	A-13
Card Tabs	A-13
RAN Backhaul Tabs	A-14
PWE3 Backhaul Tabs	A-14
PWE3 Shorthauls Tabs	A-15
PWE3 Virtual Circuits Tabs	A-15
Access Point Name Node Tabs	A-15
Physical and Management Interface Folder Tabs	A-16

APPENDIX B

Command Reference B-1

General Commands	B-1
------------------	-----

mwtm	B-6
mwtm addcreds	B-6
mwtm addsnmpcomm	B-7
mwtm adduser	B-7
mwtm archivedirsize	B-8
mwtm authtype	B-8
mwtm backup	B-9
mwtm backupdays	B-10
mwtm backupdir	B-11
mwtm badloginalarm	B-11
mwtm badlogindisable	B-12
mwtm browserpath	B-12
mwtm certgui	B-12
mwtm certtool	B-13
mwtm changes	B-14
mwtm chartwindow	B-14
mwtm checksystem	B-14
mwtm clean	B-15
mwtm cleanall	B-15
mwtm cleandb	B-16
mwtm cleandiscover	B-16
mwtm cliconntimer	B-17
mwtm client	B-18
mwtm clientfailoverprompt	B-18
mwtm clientlogs	B-18
mwtm clitimeout	B-19
mwtm cmdlog	B-19
mwtm collectstats	B-20
mwtm compressdb	B-20
mwtm console	B-21
mwtm consolelogsize	B-21
mwtm countnodes	B-21
mwtm countobjects	B-21
mwtm cwsetup	B-21
mwtm datadir	B-22
mwtm dbcheckdir	B-23
mwtm dbtool	B-23
mwtm delete	B-24
mwtm deletcreds	B-24
mwtm deletesnmpcomm	B-25

mwtm deluser	B-25
mwtm disablepass	B-26
mwtm disableuser	B-26
mwtm discover	B-27
mwtm diskmonitor	B-27
mwtm enableuser	B-28
mwtm eventautolog	B-28
mwtm eventconfig	B-28
mwtm eventeditor	B-29
mwtm eventtool	B-29
mwtm evilstop	B-31
mwtm export	B-31
mwtm export cw	B-32
mwtm groups	B-32
mwtm help	B-33
mwtm importcw	B-34
mwtm inactiveuserdays	B-34
mwtm installlog	B-35
mwtm inventorytool	B-35
mwtm iosreport	B-37
mwtm ipaccess	B-38
mwtm jspport	B-38
mwtm keytool	B-39
mwtm killclients	B-39
mwtm licenseinfo	B-40
mwtm listusers	B-40
mwtm logger	B-40
mwtm logincreds	B-41
mwtm logsize	B-41
mwtm logtimemode	B-42
mwtm manage	B-43
mwtm maxascirows	B-43
mwtm maxevhist	B-44
mwtm maxhtmlrows	B-44
mwtm mldebug	B-45
mwtm modifysnmpcomm	B-45
mwtm motd	B-46
mwtm msglog	B-46
mwtm msglogage	B-47
mwtm msglogdir	B-47

mwtm netlog	B-48
mwtm netlogger	B-48
mwtm newlevel	B-48
mwtm osinfo	B-49
mwtm passwordage	B-49
mwtm patchlog	B-50
mwtm poll	B-50
mwtm pollertimeout	B-50
mwtm print	B-51
mwtm props	B-51
mwtm provisiontool	B-51
mwtm purgedb	B-52
mwtm readme	B-53
mwtm reboot	B-53
mwtm rep15minage	B-53
mwtm repdailyage	B-54
mwtm repdir	B-54
mwtm rephelp	B-55
mwtm rephourlyage	B-55
mwtm replog	B-56
mwtm repmonthlyage	B-56
mwtm restart	B-56
mwtm restore	B-57
mwtm restoreprops	B-58
mwtm rootvars	B-58
mwtm sechelp	B-58
mwtm seclog	B-58
mwtm secondaryserver	B-59
mwtm servername	B-60
mwtm setpath	B-60
mwtm showcreds	B-62
mwtm showsnmpcomm	B-62
mwtm snmpcomm	B-63
mwtm snmpconf	B-63
mwtm snmpget	B-64
mwtm snmphelp	B-66
mwtm snmpmaxrows	B-66
mwtm snmpnext	B-67
mwtm snmpsetup	B-69
mwtm snmpwalk	B-70

mwtm sounddir	B-72
mwtm ssl	B-73
mwtm sslstatus	B-74
mwtm start	B-74
mwtm start client	B-74
mwtm start jsp	B-75
mwtm start pm	B-75
mwtm start web	B-75
mwtm statreps	B-75
mwtm statreps 15minage	B-80
mwtm statreps monthlyage	B-81
mwtm status	B-81
mwtm stop	B-81
mwtm stopclients	B-81
mwtm stop jsp	B-82
mwtm stop pm	B-82
mwtm stop web	B-82
mwtm superuser	B-82
mwtm syncusers	B-83
mwtm tac	B-83
mwtm termproxy	B-84
mwtm trapaccess	B-84
mwtm trapratelimit abate	B-85
mwtm trapratelimit major	B-85
mwtm trapratelimit interval	B-86
mwtm trapratelimit minor	B-86
mwtm trapsetup	B-86
mwtm trapstatus	B-87
mwtm tshootlog	B-87
mwtm uninstall	B-88
mwtm unknownage	B-88
mwtm updateuser	B-88
mwtm useraccess	B-89
mwtm userpass	B-89
mwtm version	B-90
mwtm viewlog	B-90
mwtm wall	B-90
mwtm webaccesslog	B-91
mwtm weberrorlog	B-91
mwtm weblogupdate	B-92

mwtm webnames	B-92
mwtm webport	B-92
mwtm webutil	B-93
mwtm who	B-93
mwtm xtermpath	B-93
ITP-Only Commands	B-94
mwtm accstats	B-95
mwtm archivedir	B-97
mwtm atblclient	B-97
mwtm atbldir	B-98
mwtm autosyncconfig	B-99
mwtm checkgtt	B-99
mwtm checkmlr	B-100
mwtm checkroute	B-100
mwtm countas	B-100
mwtm countasp	B-100
mwtm countaspa	B-101
mwtm countlinks	B-101
mwtm countlinksets	B-101
mwtm countsgrp	B-101
mwtm countsps	B-101
mwtm deletearchive	B-102
mwtm deployarchive	B-102
mwtm deploycomments	B-103
mwtm evreps clean	B-103
mwtm evreps cleancustom	B-103
mwtm evreps diskcheck	B-103
mwtm evreps enable	B-104
mwtm evreps hourlyage	B-104
mwtm evreps mtp	B-105
mwtm evreps status	B-105
mwtm evreps timer	B-105
mwtm gttacct	B-106
mwtm gttclient	B-107
mwtm gttmdir	B-107
mwtm gttstats	B-109
mwtm linkstats	B-110
mwtm listarchive	B-111
mwtm listgtt	B-112
mwtm listhistory	B-113

mwtm listmlr	B-113
mwtm listroute	B-113
mwtm mlrstats	B-114
mwtm mtpevents	B-115
mwtm pcformat	B-116
mwtm pclist	B-117
mwtm pushgtt	B-117
mwtm pushmlr	B-118
mwtm pushroute	B-119
mwtm q752stats	B-119
mwtm repcustage	B-120
mwtm routedir	B-121
mwtm routetabledefs	B-122
mwtm start atblclient	B-122
mwtm start gttclient	B-123
mwtm xuastats	B-123
mSEF-Only Commands	B-125
mwtm ggsnstats	B-125
mwtm msefsubscout	B-126

APPENDIX C

FAQs C-1

General FAQs	C-1
Installation Questions	C-1
Server Questions	C-2
GUI Questions	C-5
Browser Questions	C-6
Topology Questions	C-7
Events and Alarms Questions	C-7
Polling Questions	C-9
MIB Questions	C-10
Miscellaneous Questions	C-10
ITP Specific FAQs	C-14
IP-RAN Specific FAQs	C-20
mSEF Internet Specific FAQs	C-26

APPENDIX D

Troubleshooting the MWTM and the Network D-1

Clearing a Locked-Up MWTM Display	D-1
Investigating Data Problems	D-1
Understanding MWTM Client Start Error Messages	D-2

Data Model Mediator Service Error	D-2
Demand Poller Manager Service Error	D-2
Checking MWTM Server Start Processes	D-3
Viewing the MWTM Troubleshooting Log	D-3
Viewing MWTM Data on the Web	D-4
Troubleshooting IOS Commands on the Web	D-4
Viewing Detailed Troubleshooting Instructions for Events	D-5
Diagnosing a Typical Network Problem	D-5
Diagnosing a Typical ITP Network Problem	D-6
Diagnosing a Typical RAN-O Network Problem	D-9

APPENDIX E

Status Definitions E-1

General Status Definitions	E-1
Status Definitions for Nodes	E-1
Status Definitions for Views	E-2
Status Definitions for Folders	E-2
Status Definitions for Interfaces	E-2
Admin Status	E-2
Operational Status	E-3
Status	E-3
ITP Status Definitions	E-3
Status Definitions for Application Servers	E-4
Status Definitions for Application Server Processes	E-4
Status Definitions for Application Server Process Associations	E-4
Status Definitions for ITP Interfaces	E-5
Admin Status	E-5
Operational Status	E-5
Status	E-6
Status Definitions for Links	E-6
Status Definitions for Linksets	E-7
Status Definitions for Signaling Gateway Mated Pairs	E-7
Status Definitions for Signaling Points	E-7
RAN-O Status Definitions	E-7
Status Definitions for RAN-O Interfaces and Virtual Circuits	E-8
Admin Status	E-8
Operational Status	E-8
Connect State for GSM Abis	E-8
Connect State for UMTS Iub	E-9
Alarm States	E-9

Redundancy State	E-10
Status	E-10
Status Definitions for Cards	E-10
Status Definitions for RAN-O and PWE3 Backhauls	E-10
mSEF Status Definitions	E-10
Status Definitions for APNs	E-10

APPENDIX F

MIB Reference F-1

BWG Specific MIBs	F-1
Common MIBs	F-2
CSG1 Specific MIBs	F-4
CSG2 Specific MIBs	F-5
GGSN Specific MIBs	F-5
HA Specific MIBs	F-6
ITP Specific MIBs	F-7
IPRAN Specific MIBs	F-9

APPENDIX G

Trap Reference G-1

General Traps	G-1
ITP Specific Traps	G-7
CDT Specific Traps	G-11
IPRAN Specific Traps	G-11
RAN-O Specific Traps	G-11
PWE3 Specific Traps	G-11
mSEF Specific Traps	G-12
Generic mSEF Traps	G-12
CSG1 Traps	G-13
CSG2 Traps	G-14
GGSN Traps	G-15
BWG Traps	G-17
HA Traps	G-17

APPENDIX H

Configuring MWTM to Run with Various Networking Options H-1

How Does RMI Work?	H-2
VPN Communication	H-3
NAT Communication	H-4
Firewall Communication	H-5

Configuring Port Numbers and Parameters	H-5
Configuring Firewalls	H-7
Sample Firewall Configuration	H-9
Port-Forwarding Communication	H-10
Configuring MWTM to Work With a Dual-Interface Machine Connected to Separate Networks	H-12
MWTM Server Configuration	H-13
MWTM Client A Configuration	H-13
MWTM Client B Configuration	H-14
Additional Network Configurations	H-15
SSL Communication	H-15
Configuring MWTM with IOS Server Load Balancing	H-16

APPENDIX I**MWTM Ports I-1**

INDEX

