



## INDEX

---

### A

access, node **4-cxiv**

accessing

    MWTM web browser **4-cxxxv**

accounting FAQs **C-16**

address

    information **8-11**

address tables **16-1**

    editor

        launching **16-2**

        startup options **16-2**

    files

        basic information **16-14**

        creating **16-5**

        deploying **16-14**

        loading, from file **16-6**

        loading, from ITP **16-8**

        reverting **16-18**

        saving **16-17**

        semantics **16-13**

        working **16-10**

    listing **16-14**

    menu **16-3**

    properties

        editing **16-12**

administrative page

    displaying **12-1**

alarm filter

    dialog buttons **9-11**

    loading **9-17**

    saving **9-18**

    setting **9-11**

alarms

    displaying **9-3, 11-11**

    right-click menu **9-9**

    viewing **8-42**

application server

    tabs **A-12**

application server process

    tabs **A-13**

application server process association

    configuration

        general information **8-13**

    tabs **A-13**

application server process associations

    table **7-17**

application server processes

    export files, daily **13-146**

    table **7-16**

application servers

    configuration

        associations **8-11**

    export files, hourly **13-146**

    reports

        daily **13-145**

        hourly **13-145**

    statistics details window **8-67**

    table **7-14**

AS

    accounting reports **13-126**

ASP accounting reports **13-126**

asterisks

    FAQs **C-15**

attaching notes **7-38**

audience

document [3-xxxvi](#)

## B

backup  
MWTM files [2-lxxxii](#)  
secondary server [3-xcvii](#)

basic object functions  
understanding [7-1](#)

browser  
FAQs [C-6](#)

BWG  
traps [G-20](#)

## C

capacity planning  
FAQs [C-22](#)

card  
naming information [8-19](#)  
table [7-23](#)  
tabs [A-16](#)

changing  
client preference, settings [5-cxliii](#)  
poller settings [3-lxxxviii](#)  
web preference, settings [5-cxliii](#)

charts  
settings, changing [5-cliii](#)

CiscoWorks  
integrating with MWTM [5-clxxviii](#)  
SNMP [3-lxxxviii](#)

client  
disconnect sound [11-17](#)  
preferences, changing [5-cxliii](#)

client, MWTM  
access, limiting [2-lxxx](#)  
connection timer [3-xcvii](#)  
downloading (see MWTM web interface)

exiting [4-cxli](#)  
launching from Windows Start menu [4-cxxxviii](#)

starting  
on Solaris/Linux [4-cxiii](#)  
on Windows [4-cxiv](#)  
prerequisites [4-cxiii](#)

client/server architecture, overview [1-I](#)

client A configuration  
MWTM [H-13](#)

client B configuration  
MWTM [H-14](#)

color  
severity, customizing [5-clviii](#)

command line interface, using [5-clxxxv](#)

command reference [B-1](#)

commands  
general [B-1](#)  
ITP [B-95](#)

configuring  
firewalls [H-7](#)  
port numbers and parameters [H-5](#)  
sample firewall [H-9](#)

connection settings [5-cxlviii](#)

connection timer [3-xcvii](#)

content area  
MWTM client [4-cxxviii](#)

conventions  
document [3-xxxvii](#)

conversion entry  
table [15-14](#)

counters, resetting [5-clxii](#)

CPU  
performance, viewing [8-54](#)

credentials, login  
setting up [3-cvi](#)

CSG  
MIBS [F-5](#)

CSG1, traps [G-15](#)

CSG2, traps [G-16](#)

customizing view **6-cxiii**

custom reports

generating **13-173**

## D

data

accessing, from web **11-1**

exporting **5-clxxvii**

MWTM

exporting current, for node names **5-clxxviii**

exporting current, for SNMP community  
names **5-clxxviii**

removing from server **2-lxxxiv**

default

server name, changing **4-cxxxvii**

view, loading **6-cc**

deleting

data from server **2-lxxxiv**

objects **7-40**

deploying

GTT **15-35**

deployment

FAQs **C-15**

details, viewing **8-9**

device configuration

buttons **3-cviii**

commands **3-cviii**

dialog box **3-c**

menu **3-ci**

diagram, network **10-1**

disconnect sound **11-17**

discovering ITP networks

dialog menu **4-cxvi**

discovered nodes **4-cxxv**

running discovery **4-cxxii**

settings **4-cxxii**

verifying discovery **4-cxxv**

discovery

FAQs **C-15**

display, customizing **6-cxiii**

displaying **11-12**

administrative page **12-1**

alarms **9-3, 11-11**

error statistics **11-26**

events **9-3, 11-11**

RAN data export files **11-28**

software versions **11-12**

DISPLAY variable, setting **4-cxiii**

document

audience **3-xxxvi**

conventions **3-xxxvii**

objectives **3-xxxv**

organization **3-xxxvi**

documentation

related **3-xxxviii**

DOS prompt, launching **4-cxxxviii**

dual-interface machine

MWTM, configuring **H-12**

## E

editing

ITP route table file **14-1**

properties **7-33**

error data, viewing **8-109**

error statistics, displaying **11-26**

event

adding sound files **9-38**

attaching notes **9-21**

categories **9-28**

filter

loading **9-17**

setting **9-11**

forwarding as traps **9-34**

limits **9-24**

managing **9-1**

playing or muting sounds **9-39**

- properties
    - viewing **9-19**
  - settings
    - categories **5-clii**
    - changing **5-cxlix**
    - colors **5-cl**
    - date **5-cl**
    - time **5-cl**
  - SNMP servers and traps **9-27**
  - sound filters
    - creating new **9-36**
    - deleting **9-39**
    - listing **9-35**
    - sounds, setting **9-35**
    - traps **9-29**
  - event editor **9-22**
    - categories **9-28**
    - launching **4-cxxxviii**
    - limits **9-24**
    - SNMP servers and traps **9-27**
    - traps **9-29**
  - event files
    - archived **9-22**
  - event filter
    - dialog
      - buttons **9-11**
      - properties **9-12**
      - selected objects **9-14**
    - example **9-17**
    - loading **9-17**
    - saving **9-18**
    - setting **9-11**
  - events
    - displaying **9-3, 11-11**
    - settings
      - other **5-clii**
      - severities **5-cl**
    - sound filters
      - changing **9-39**
  - window
    - toolbar buttons **9-7**
  - events and alarms
    - FAQs **C-7**
    - Event Sounds **11-17**
    - excluding
      - objects
        - ITP reports **13-174**
    - exit settings **5-cxlv**
    - export files
      - application server process archived reports **13-146**
      - MLR, daily **13-149**
      - point code, inventory **13-152**
    - exporting current MWTM data
      - for network objects **5-clxxvii**
      - node names **5-clxxviii**
      - SNMP community names **5-clxxviii**
    - exporting data **5-clxxvii**
- 
- F**
- FAQs **C-1**
    - accounting **C-16**
    - applications, other **C-10**
    - asterisks **C-15**
    - browser **C-6**
    - capacity planning **C-22**
    - deployment **C-15**
    - discovery **C-15**
    - events and alarms **C-7**
    - HSRP **C-22**
    - in-band management **C-20**
    - installation **C-2**
    - ITP reports **C-17**
    - Java RMI **C-11**
    - limited functionality **C-18**
    - linkset totals **C-16**
    - link totals **C-16**
    - locked up display **C-5**

- MIBs **C-10**
  - moving servers **C-3**
  - out-of-band management **C-20**
  - percentages **C-15**
  - polling **C-9**
  - rebooting **C-5**
  - requirements **C-3**
  - server communication **C-21**
  - server messages **C-4**
  - sounds **C-8**
  - SSL, installing **C-5**
  - status **C-11**
  - superuser **C-11**
  - syncing **C-23**
  - syslog **C-11**
  - text entry fields **C-5**
  - timing service **C-8**
  - topology maps **C-7**
  - traps **C-14**
  - uninstallation **C-2**
  - user password **C-11**
  - Windows **C-11**
  - workstations **C-3**
  - yellow nodes **C-24**
  
  - features
    - customization **1-xlv**
    - GUI **1-xlii**
    - integration **1-xlv**
    - monitoring **1-xliii**
    - navigational **4-cxxvi**
    - performance **1-xliii**
    - provisioning **1-xliii**
    - security **1-xliv**
    - server and network **1-xlii**
    - topology **1-xliv**
    - troubleshooting **1-xlv**
    - web **1-xlii**
  
  - file
    - node
  
  - MWTM panel **5-clxx**
    - panel **5-clxxi**
    - file menu **4-cxxx**
    - files
      - ITP
        - deploying **5-clxxv**
        - managing **5-clxvi**
        - loading **4-cxxxvi**
        - saving MWTM **4-cxxxvi**
      - filtering view **6-cxcii**
      - firewalls **H-5**
        - configuring **H-7**
- 

**G**

- General commands
  - `mwtm datadir` **B-23**
  - `general commands` **B-1**
    - `mwtm` **B-6**
    - `mwtm addcreds` **B-6**
    - `mwtm adduser` **B-7**
    - `mwtm authtype` **B-8**
    - `mwtm backup` **B-9**
    - `mwtm backupdir` **B-11**
    - `mwtm badloginalarm` **B-12**
    - `mwtm badlogindisable` **B-12**
    - `mwtm browserpath` **B-13**
    - `mwtm certgui` **B-13**
    - `mwtm certtool` **B-14**
    - `mwtm changes` **B-14**
    - `mwtm checksystem` **B-15**
    - `mwtm clean` **B-15**
    - `mwtm cleanall` **B-16**
    - `mwtm cleandb` **B-16**
    - `mwtm cleandiscover` **B-17**
    - `mwtm ciconntimer` **B-18**
    - `mwtm client` **B-18**
    - `mwtm clientlogs` **B-19**
    - `mwtm clitimeout` **B-19**

- mwitm cmdlog **B-20**  
 mwitm console **B-21**  
 mwitm countnodes **B-22**  
 mwitm countobjects **B-22**  
 mwitm cwsetup **B-22**  
 mwitm dbtool **B-24**  
 mwitm delete **B-24**  
 mwitm deletecreds **B-25**  
 mwitm deluser **B-26**  
 mwitm disablepass **B-26**  
 mwitm disableuser **B-27**  
 mwitm discover **B-27**  
 mwitm diskmonitor **B-28**  
 mwitm enableuser **B-28**  
 mwitm eventautolog **B-29**  
 mwitm eventconfig **B-29**  
 mwitm eventeditor **B-30**  
 mwitm eventtool **B-30**  
 mwitm evilstop **B-32**  
 mwitm export **B-32**  
 mwitm export cw **B-33**  
 mwitm groups **B-33**  
 mwitm help **B-34**  
 mwitm inactiveuserdays **B-35**  
 mwitm installog **B-36**  
 mwitm inventorytool **B-36**  
 mwitm iosreport **B-38**  
 mwitm ipaccess **B-39**  
 mwitm jspport **B-39**  
 mwitm keytool **B-40**  
 mwitm killclients **B-40**  
 mwitm listusers **B-41**  
 mwitm logger **B-41**  
 mwitm logtimemode **B-43**  
 mwitm manage **B-44**  
 mwitm maxascirows **B-44**  
 mwitm maxevhist **B-45**  
 mwitm maxhtmlrows **B-45**  
 mwitm mldebug **B-46**  
 mwitm motd **B-47**  
 mwitm msglog **B-47**  
 mwitm msglogage **B-48**  
 mwitm msglogdir **B-48**  
 mwitm msglogsize **B-42**  
 mwitm netlog **B-49**  
 mwitm netlogger **B-49**  
 mwitm newlevel **B-49**  
 mwitm osinfo **B-50**  
 mwitm passwordage **B-50**  
 mwitm patchlog **B-51**  
 mwitm poll **B-51**  
 mwitm polltimeout **B-51**  
 mwitm print **B-52**  
 mwitm props **B-52**  
 mwitm provisiontool **B-52**  
 mwitm purgedb **B-53**  
 mwitm readme **B-54**  
 mwitm reboot **B-54**  
 mwitm rep15minage **B-54**  
 mwitm repdailyage **B-55**  
 mwitm rephelp **B-56**  
 mwitm rephourlyage **B-56**  
 mwitm repmonthlyage **B-57**  
 mwitm restart **B-57**  
 mwitm restore **B-58**  
 mwitm restoreprops **B-59**  
 mwitm rootvars **B-59**  
 mwitm sechelp **B-59**  
 mwitm seclogmwitm seclog **B-59**  
 mwitm secondaryserver **B-60**  
 mwitm servername **B-62**  
 mwitm setpath **B-62**  
 mwitm showcreds **B-63**  
 mwitm snmpcomm **B-64**  
 mwitm snmpconf **B-64**  
 mwitm snmpget **B-65**  
 mwitm snmphelp **B-67**  
 mwitm snmpnext **B-68**

mwtmp snmpwalk **B-71**  
 mwtmp sounddir **B-73**  
 mwtmp ssl **B-74**  
 mwtmp sslstatus **B-74**  
 mwtmp start **B-74**  
 mwtmp start client **B-75**  
 mwtmp start jsp **B-75**  
 mwtmp start pm **B-75**  
 mwtmp start web **B-76**  
 mwtmp statreps **B-76**  
 mwtmp status **B-82**  
 mwtmp stop **B-82**  
 mwtmp stopclients **B-83**  
 mwtmp stop jsp **B-83**  
 mwtmp stop pm **B-83**  
 mwtmp stop web **B-83**  
 mwtmp superuser **B-83**  
 mwtmp syncusers **B-84**  
 mwtmp tac **B-84**  
 mwtmp termproxy **B-85**  
 mwtmp trapaccess **B-85**  
 mwtmp traprate limit abate **B-86**  
 mwtmp trapratelimit count **B-86**  
 mwtmp trapratelimit interval **B-87**  
 mwtmp trapratelimit minor **B-87**  
 mwtmp trapsetup **B-87**  
 mwtmp trapstatus **B-88**  
 mwtmp tshootlog **B-88**  
 mwtmp uninstall **B-89**  
 mwtmp unknownage **B-89**  
 mwtmp updateuser **B-89**  
 mwtmp useraccess **B-90**  
 mwtmp userpass **B-90**  
 mwtmp version **B-91**  
 mwtmp viewlog **B-91**  
 mwtmp wall **B-91**  
 mwtmp webaccesslog **B-92**  
 mwtmp weberrorlog **B-92**  
 mwtmp weblogupdate **B-93**  
 mwtmp webnames **B-93**  
 mwtmp webport **B-93**  
 mwtmp webutil **B-94**  
 mwtmp who **B-94**  
 mwtmp xtermpath **B-94**  
 generating  
     custom reports **13-173**  
     reports **13-2**  
 getting started **4-cxi**  
 GGSN  
     MIBS **F-6**  
     traps **G-18**  
 Global Title Translation (see GTT)  
 go menu **4-cxxxii**  
 GTT  
     address conversion **15-14**  
     selector table **15-15**  
     tab **15-13**  
     table **15-14**  
 address conversion table  
     adding **15-26**  
     entries, adding **15-27**  
 app group tab **15-10**  
 application groups  
     adding **15-23**  
 basic information **15-1, 15-35**  
 CPC  
     lists, adding **15-25**  
     tab **15-12**  
     tab, concerned pt code name list **15-13**  
 deploying **15-35**  
 editor  
     launching **15-2**  
     menu **15-4**  
 files  
     creating **15-29**  
     cross-instance **15-37**  
     editing **15-16**  
     loading **15-30, 15-32**

- 
- loading from archive **15-33**  
 reverting **15-41**  
 saving **15-39**
- GTA  
 entries, adding **15-18**  
 searching **15-21**
- MAP  
 adding entries **15-24**  
 tab **15-11**
- MAP status  
 viewing **8-119**
- network name configuration **15-37**  
 menu **15-38**  
 table **15-39**
- progress dialog **15-33**
- reports, daily **13-127**
- rows, deleting **15-28**
- selectors, adding **15-17**
- selectors and GTA tab **15-6**  
 CPC **15-10**
- selectors and GTA table  
 app group **15-8**  
 GTA **15-8**  
 MAP **15-9**  
 selector **15-7**  
 semantics **15-34**  
 statistics, viewing **8-120**
- GTT accounting reports **13-127**
- 
- H**
- HA traps **G-21**
- help menu **4-cxxxiv**
- home page
- MWMT web interface **11-8**
- HSRP
- FAQs **C-22**
- ignoring and unignoring objects **7-44**  
 in-band management  
 FAQs **C-20**  
 including objects  
 ITP reports **13-174**
- indxexas **13-146, 13-149**  
 indxexasp **13-147**  
 indxpwe3avg **13-110**  
 indxpwe3peak **13-107**  
 idxwb019 **13-148**  
 idxwb026 **13-149**
- information  
 address **8-11**  
 bandwidth  
 RAN-O backhauls **8-12**  
 ITP  
 application server process associations **8-20**  
 application servers **8-13, 8-20**  
 linksets **8-15**  
 links **8-16**  
 naming  
 card **8-19**  
 interfaces **8-19**  
 ITP application servers **8-20**  
 ITP links **8-20**  
 ITP linkset **8-21**  
 ITP signaling-gateway mated pairs **8-21**  
 ITP signaling points **8-21**  
 nodes **8-18**  
 polling nodes **8-23**  
 protection  
 ONS nodes **8-24**  
 QoS, ITP signaling points **8-24**  
 RAN **8-25**  
 remote IP address **8-25**  
 status  
 interface and card **8-27**

- ITP application server process **8-31**
- ITP application server process associations **8-32**
- ITP application servers **8-30**
- ITP links **8-34**
- ITP linksets **8-35**
- ITP signaling gateway mated pairs **8-36**
- ITP signaling points **8-37**
- node **8-26**
- threshold (RAN-O only) **8-38**
- uptime
  - node **8-26**
- information, in a window
  - finding **5-clxiv**
- installation
  - FAQs **C-2**
- integration
  - with CiscoWorks **5-clxxviii**
- interface
  - tabs **A-14**
    - UMTS and GSM tabs (RAN-O only) **A-15**
  - interface and card, status information **8-27**
  - interface content
    - MWTM web interface **11-5**
- interfaces
  - naming **8-19**
  - packet size **8-13**
  - table **7-21**
- introduction to SGM **1-xli**
- inventory
  - point code **7-32**
- IOS
  - commands, troubleshooting **D-4**
  - server load balancing **H-16**
- IP addresses accounting
  - reports **7-32**
- IP Transfer Point (see ITP)
- ITP
  - application server processes **8-20**
  - application server process
    - status, information **8-31**
  - application server process associations **8-20**
  - application servers **8-13**
    - naming, information **8-20**
    - status, information **8-30**
  - commands **B-95**
  - files
    - deploying **5-clxxv**
    - managing **5-clxvi**
  - linkset
    - naming, information **8-21**
  - linksets
    - information **8-15**
  - non-stop operation
    - viewing **8-94**
  - overview **1-xlii**
  - signaling gateway-mated pairs
    - naming, information **8-21**
  - signaling points
    - naming, information **8-21**
  - ITP application server process associations
    - status **8-32**
  - ITP commands
    - mwtm 15minage **B-81**
    - mwtm accstats **B-96**
    - mwtm archivedir **B-98**
    - mwtm atblclient **B-98, B-123**
    - mwtm atbldir **B-99**
    - mwtm autosyncconfig **B-100**
    - mwtm chartwindow **B-15**
    - mwtm checkggtt **B-100**
    - mwtm checkmlr **B-101**
    - mwtm checkroute **B-101**
    - mwtm countas **B-101**
    - mwtm countasp **B-101**
    - mwtm countaspa **B-102**
    - mwtm countlinks **B-102**
    - mwtm countlinksets **B-102**
    - mwtm countsgmp **B-102**

- mwitm countsps **B-102**  
 mwitm deletearchive **B-103**  
 mwitm deploarchive **B-103**  
 mwitm deplocomments **B-104**  
 mwitm evreps clean **B-104**  
 mwitm evreps cleancustom **B-104**  
 mwitm evreps diskcheck **B-104**  
 mwitm evreps enable **B-105**  
 mwitm evreps hourlyage **B-105**  
 mwitm evreps mtp **B-106**  
 mwitm evreps status **B-106**  
 mwitm evrepstimer **B-106**  
 mwitm gtclient **B-108, B-124**  
 mwitm gttdir **B-108**  
 mwitm gttstats **B-110**  
 mwitm linkstats **B-111**  
 mwitm listarchive **B-112**  
 mwitm listgtt **B-113**  
 mwitm listhistory **B-113**  
 mwitm listmlr **B-114**  
 mwitm listroute **B-114**  
 mwitm mlrstats **B-114**  
 mwitm mtpevents **B-116**  
 mwitm pcformat **B-117**  
 mwitm pclist **B-118**  
 mwitm pushgtt **B-118**  
 mwitm pushmlr **B-119**  
 mwitm pushroute **B-119**  
 mwitm q752stats **B-120**  
 mwitm repcustage **B-121**  
 mwitm repdir **B-55**  
 mwitm replog **B-57**  
 mwitm routedir **B-122**  
 mwitm routetabledefs **B-123**  
 mwitm statreps monthlyage **B-82**  
 mwitm xuastats **B-124**
- ITP links  
 naming  
 information **8-20**
- status  
 information **8-34**
- ITP linkset  
 access lists, viewing **8-116**  
 status **8-35**
- ITP MIBS **F-8**
- ITP MSU  
 errors, viewing **8-93**
- ITP MTP3  
 errors, viewing **8-92**
- ITP networks  
 discovery  
 dialog menu **4-cxvi**  
 dialog tabs **4-cxvii**  
 nodes **4-cxxv**  
 running **4-cxxii**  
 settings **4-cxxii**  
 verifying **4-cxxv**
- ITP reports  
 excluding objects **13-174**  
 FAQs **C-17**  
 including objects **13-174**  
 locating **13-171**
- ITP signaling gateway mated pairs  
 status **8-36**
- ITP signaling point  
 description **8-13**  
 specific data, viewing **8-117**
- ITP signaling points  
 managing **7-42**  
 QoS **8-24**  
 status **8-37**  
 unmanaging **7-42**
- ITP traps **G-7**

**J**

- JAVA RMI  
 FAQs **C-11**

**L**

launching  
     discovery dialog [4-cxvi](#)  
 limited functionality  
     FAQs [C-18](#)  
 link  
     configuration  
         interfaces [8-15](#)  
     reports  
         daily [13-44](#)  
         hourly [13-42](#)  
     tabs [A-12](#)  
 links  
     configuration  
         IP addresses [8-17](#)  
     information [8-16](#)  
     reports [13-42](#)  
     table [7-13](#)  
 linkset  
     archived reports  
         daily [13-148](#)  
         hourly [13-148](#)  
     description [8-13](#)  
     reports  
         daily [13-52](#)  
         daily peaks [13-54](#)  
         hourly [13-50](#)  
     table [7-10](#)  
     tabs [A-11](#)  
 linkset totals  
     FAQs [C-16](#)  
 link totals  
     FAQs [C-16](#)  
 Linux MWTM client, starting [4-cxiii](#)  
 locating  
     ITP reports [13-171](#)  
 locked up display  
     FAQs [C-5](#)

---

login credentials, setting up [3-cvi](#)

**M**

management interface folder  
     tabs [A-18](#)  
 managing  
     event [9-1](#)  
     ITP signaling points [7-42](#)  
     nodes [7-42](#)  
     reports [13-1](#)  
 mapping files, network name [16-15](#)  
 MaxAlarmAge [9-26](#)  
 menu  
     address tables [16-3](#)  
 menus  
     file [4-cxxx](#)  
     go [4-cxxxii](#)  
     help [4-cxxxiv](#)  
     tools [4-cxxxiii](#)  
 messages  
     display, changing [3-xc](#)  
     log file  
         age [3-xci](#)  
         dates [3-xci](#)  
         location [3-xc](#)  
         size [3-xc](#)  
         of the day [2-lxvi](#)  
 MIBs  
     common [F-2](#)  
     FAQs [C-10](#)  
 MLR  
     details [8-123](#)  
     export files, daily [13-149](#)  
     reports [13-55](#)  
         aborts [13-56](#)  
         continues [13-57](#)  
         daily [13-56](#)  
         processed [13-57](#)

- result invokes **13-58**
- rule matches **13-59**
- subtriggers **13-59**
- triggers **13-60**
- mobile Services Exchange Framework (see mSEF)
- Mobile Wireless Transport Manager (see MWTM)
- moving servers
- FAQs **C-3**
- mSEF
  - overview **1-xlix**
  - traps **G-14**
- MSU
  - archived reports
    - daily **13-150**
    - hourly **13-150**
  - load
    - reports **13-60**
  - peaks
    - reports **13-61**
  - rates
    - reports **13-60**
- MTP3
  - event log
    - viewing **8-122**
  - reports
    - daily **13-128**
- MTP3 event reports **13-150**
- multiple-instance ITPs, connecting **3-xcii**
- MWTM
  - about **3-xxxx**
  - backup **2-lxxxi**
  - client and server communication
    - dynamic NAT **H-15**
    - firewalls **H-5**
    - NAT **H-4**
    - port-forwarding **H-10**
    - SSL **H-15**
    - TCP **H-15**
    - VPN **H-3**
  - integration **5-clxxviii**
  - ITP route table file
    - editing **14-1**
  - main menu, using **4-cxxxix**
  - main window **4-cxxv**
  - MIB reference **F-1**
  - networking options (see MWTM, client and server communication) **H-1**
  - overview **1-xli**
  - restoring **2-lxxxi**
  - sessions, running simultaneous **5-clxxxix**
  - traps, supported **G-1**
  - troubleshooting (see troubleshooting)
  - uninstalling **4-cxxxix**
  - web browser, accessing **4-cxxxv**
- MWTM process
  - events, changing **9-22**
- MWTM server (see server, MWTM)
- MWTM web interface
  - additional information **11-10**
  - archived messages **12-9**
  - home page **11-8**
  - interface content **11-5**
  - logs
    - command **12-12**
    - console **12-12**
    - event automation **12-13**
    - security **12-13**
    - web access **12-14**
    - web server error **12-14**
  - messages **12-5**
    - action **12-7**
    - error **12-6**
    - info **12-5**
  - MWTM client, downloading **11-9**
  - navigation tree **11-3**
  - software updates **11-10**
  - system
    - clients **12-11**

- information **12-4**  
 status **12-11**  
 versions **12-11**  
 technical documentation **11-11**
- MWMTM windows  
 printing **5-clxvi**
- 
- N**
- navigating  
 table columns **5-clxv**  
 navigational features **4-cxxvi**  
 navigation tree  
   MWTM client **4-cxxvii**  
   MWTM web interface **11-3**
- network  
 topology **10-1**  
 views  
   topology **10-1**  
 network name mapping files, creating **16-15**  
 network objects  
   viewing a summary **4-cxxviii**
- node  
 access **4-cxiv**  
 archive  
   management **5-clxxiii**  
 BWG tabs **A-2**  
 CSG tabs **A-3**  
 CSR tabs **A-3**  
 file  
   management **5-clxvi**  
   menu, management **5-clxvii**  
   MWTM panel **5-clxx**
- files  
 ITP panel **5-clxxi**
- GGSN tabs **A-4**
- HA tabs **A-5**
- ITP tabs **A-6**
- naming information **8-18**
- ONS tabs **A-8**  
 polling information **8-23**  
 RAN service module tabs **A-9**  
 status information **8-26**  
 uptime information **8-26**
- node and ONS card details window  
 configuration data  
   descriptive information **8-13**
- node details window  
 configuration data  
   IP addresses for SNMP **8-16**
- node name settings **5-cxlvii**
- nodes  
 deleting  
   from MWTM discovery database **7-42**  
 excluding from view **7-44**  
 managing **7-42**  
 polling **8-50**  
 SNMP IP addresses  
   editing **8-39**
- trap  
 processing **8-52**
- unmanaging **7-42**
- window **7-2**  
 menus, right-click **7-3**  
 node table **7-5**
- nodes and files, seed  
 loading **4-cxvii**
- notes  
 attaching **7-38**  
 event **9-21**  
 viewing **7-39**
- 
- O**
- object details window  
 configuration data  
   naming **8-17**
- object functions

- detailed
  - understanding **8-1**
- objectives
  - document **3-xxxv**
- object map
  - reference **A-1**
- objects
  - deleting **7-40**
    - from MWTM database **7-40**
    - from network **7-40**
    - ignoring and unignoring **7-44**
  - online help, viewing **5-clxiii**
  - ONS nodes
    - protection information **8-24**
  - operations
    - basic server performance **5-clxxxii**
  - organization
    - document **3-xxxvi**
  - out-of-band management
    - FAQs **C-20**
  - overview
    - discovery **4-cxv**

---

- P**
  - passwords (see security)
  - peak
  - reports **13-46**
  - percentages
    - FAQs **C-15**
  - physical folder
    - tabs **A-18**
  - point code
    - export files, inventory **13-152**
    - inventory **7-32**
    - reports **7-32**
    - setting format **3-xci**
  - poller
    - settings **5-cxlvii**
- poller
  - settings, changing **3-lxxxviii**
- poller settings window **8-105**
- polling
  - FAQs **C-9**
  - polling nodes **8-50**
  - port numbers and parameters
    - configuring **H-5**
  - ports
    - MWTM **I-1**
  - preferences
    - menu **5-cxlii**
    - settings
      - CiscoWorks server **5-clv**
      - deploy **5-clvii**
      - troubleshooting **5-cxlviii**
    - preference settings
      - default, restoring **5-clx**
      - web, changing **5-clx**
    - printing
      - MWTM windows **5-clxvi**
    - products menu **4-cxxxiii**
    - properties, editing **7-33**
    - provisioning
      - prerequisites **8-47**
      - using **8-43**
      - wizard
        - using **8-48**

---

- R**
  - Radio Access Network Optimization (see RAN-O)
  - RAN
    - information **8-25**
    - RAN backhaul
      - table **7-25**
      - tabs **A-16**
      - virtual
        - creating **8-134**
    - RAN data export files

displaying [11-28](#)  
**RAN-O**  
     backhaul  
         properties, editing [7-37](#)  
     MIBS  
         specific [F-9](#)  
     overview [1-xlviii](#)  
     traps [G-11](#)  
**RAN-O only**  
     threshold  
         information [8-38](#)  
**RAN shorthauls**  
     viewing [8-133](#)  
**README file** [4-cxxxviii](#)  
**real-time data**  
     ITP objects  
         viewing [8-67](#)  
     objects  
         viewing [8-53](#)  
**real-time poller**  
     settings  
         changing [5-clxii](#)  
**rebooting**  
     FAQs [C-5](#)  
**recent events**  
     viewing [8-42](#)  
**reference**  
     command [B-1](#)  
     object map [A-1](#)  
**remote IP address**  
     information [8-25](#)  
**reports**  
     archived  
         custom [13-140](#)  
         daily [13-143](#)  
         hourly [13-143](#)  
         rolling [13-144](#)  
     AS accounting [13-126](#)  
     ASP accounting [13-126](#)  
     custom (see custom reports)  
     directory [13-172](#)  
     generating [13-2](#)  
     GTT, daily [13-127](#)  
     GTT accounting [13-127](#)  
     IP addresses accounting [7-32](#)  
     link [13-42](#)  
         five day [13-49](#)  
     linkset [13-50](#)  
     log [13-167](#)  
     managing [13-1](#)  
     MLR [13-55](#)  
         aborts [13-56](#)  
         continues [13-57](#)  
         processed [13-57](#)  
         subtriggers [13-59](#)  
     MSU load [13-60](#)  
     MSU peaks [13-61](#)  
     MSU rates [13-60](#)  
     MTP3, daily [13-128](#)  
     MTP3 accounting [13-128](#)  
     MTP3 event [13-150](#)  
     MTP3 events  
         hourly [13-151](#)  
     point code [7-32](#)  
     point code, inventory [7-32, 13-126](#)  
     system  
         parameters [13-167](#)  
         timers [13-167](#)  
     system log [12-15](#)  
     viewing [13-3](#)  
     reports, accounting  
         viewing [13-126](#)  
     reports properties  
         viewing [12-20](#)  
     requirements  
         FAQs [C-3](#)  
     restoring  
         MWTM files [2-lxxxi](#)

## RMI

    how does it work [H-2](#)

root user, becoming [4-cxii](#)

route detail

    viewing [8-117](#)

route table files [14-1](#)

    deploying [14-12](#)

    editing [14-5](#)

    loading [14-11](#)

    non-MWMTM [14-14](#)

    opening

        from archive [14-4](#)

        from file [14-2](#)

        from ITP [14-3](#)

    reverting to last saved [14-14](#)

route table dialog

    menu [14-6](#)

    menus, right-click [14-7](#)

    table [14-7](#)

saving [14-12](#)

**S**

sample firewall

    configuration [H-9](#)

saving

    address table files [16-17](#)

    alarm filter [9-18](#)

    event filter [9-18](#)

    GTT files [15-39](#)

    MWMTM files [4-cxxxvi](#)

    route table files [14-12](#)

    seed files [4-cxviii](#)

    topology [10-16](#)

    view [6-cxci](#)

security [2-liii](#)

    client access, limiting [2-lxxx](#)

    data, restoring [2-lxx](#)

    logs, system [2-lxix](#)

message of the day [2-lxvi](#)

overview [2-liii](#)

passwords

    changing [2-lxiv](#)

    creating [2-lviii](#)

    disabling, automatically [2-lxi](#)

    disabling, manually [2-lxiii](#)

    re-enabling [2-lxiv](#)

    synchronizing [2-lxviii](#)

SSL [2-lxxii](#)

    enabling [2-lxxiii](#)

    support, disabling [2-lxxx](#)

    support, managing [2-lxxix](#)

SSL certificates

    details [2-lxxviii](#)

    downloading [2-lxxv](#)

    exporting [2-lxxvii](#)

    importing [2-lxxvi](#)

    tool [2-lxxvi](#)

superuser [2-lxx](#)

user-based access

    disabling [2-lxx](#)

    implementing [2-liv](#)

user levels [2-lviii](#)

    (level 1) basic user [2-lix](#)

    (level 2) power user [2-lix](#)

    (level 3) network operator [2-lx](#)

    (level 4) network administrator [2-lx](#)

    (level 5) system administrator [2-lx](#)

users

    changing [2-lxiv](#)

    disabling, automatically [2-lxi](#)

    disabling, manually [2-lxiii](#)

    listing current [2-lxviii](#)

    re-enabling [2-lxiv](#)

seed files

    changing [4-cxxi](#)

    creating [4-cxx](#)

    loading [4-cxviii](#)

saving **4-cxviii**  
 using a text editor **4-cxi**  
 seed nodes, loading **4-cxvii**  
 semantics  
     address table files **16-13**  
     GTT files **15-34**  
 server  
     setting up **3-lxxxvii**  
 server, MWTM  
     changing default name **4-cxxxvii**  
     connecting new **5-clxxxii**  
     IOS server load balancing **H-16**  
     removing data **2-lxxxiv**  
 server communication  
     FAQs **C-21**  
 server configuration, MWTM **H-13**  
 server messages  
     FAQs **C-4**  
 server properties  
     viewing **12-18**  
 server status information  
     viewing **5-clxxxii**  
 sessions, MWTM, running simultaneous **5-clxxxii**  
 setting  
     alarm filter **9-11**  
     CiscoWorks server  
         changing **5-clv**  
     deploy  
         changing **5-cvii**  
     event filter **9-11**  
 settings  
     charts  
         changing **5-cliii**  
     connection **5-cxlviii**  
     event  
         changing **5-cxlix**  
     exit **5-cxlv**  
     general, displaying **5-cxlvi**  
     GUI, changing **5-cxlv**  
     node name **5-cxlvii**  
     poller **5-cxlvii**  
     repaint **5-cxlviii**  
     startup **5-cxlv**  
     status, changing **5-cliii**  
     topology  
         changing **5-clv**  
     severity alarm **4-cxxix**  
     SGM  
         commands **B-1**  
         FAQs (see FAQs)  
         status definitions (see status, definitions)  
     shorthaul table **7-26**  
     signaling gateway-mated pair  
         tabs **A-14**  
     signaling gateway mated pairs  
         table **7-19**  
     signaling point  
         tabs **A-11**  
     signaling point details window  
         configuration data  
             capability point code **8-12**  
             point code **8-22**  
     signaling points  
         window  
             signaling point information **7-9**  
     single-instance ITPs, connecting **3-xcii**  
     SNMP  
         settings  
             buttons **3-civ**  
             commands **3-civ**  
             configuring **3-ci**  
             table **3-cii**  
             trap, enabling **3-xciii**  
     software versions  
         displaying **11-12**  
         table **7-32**  
     Solaris MWTM client, starting **4-cxiii**  
     sound files, adding **9-38**

sound filters, event  
     creating new **9-36**  
     deleting **9-39**  
     listing for **9-35**  
     setting **9-35**

sound filters, events  
     changing **9-39**

sounds  
     FAQs **C-8**

SSL (see also security)

SSL, downloading module  
     from web server **2-Ixxiv**

SSL certificate tool, launching **4-cxxxviii**

starting MWTM  
     client **4-cxiii**  
     server **4-cxi**

startup settings **5-cxlv**

statistics  
     archived reports  
         daily **13-148**  
         hourly **13-147**

status  
     FAQs **C-11**  
     settings, changing **5-cliii**

status contributors, viewing **8-7**

Summary lists **4-cxxviii**

summary lists **4-cxxix, 11-12**  
     displaying **11-12**

superuser **2-Ixx**  
     FAQs **C-11**

syncing  
     FAQs **C-23**

syslog  
     FAQs **C-11**  
     viewing **8-54**

system properties  
     viewing **12-15**

---

**T**

table  
     application server process **7-16**  
     application server process associations **7-17**  
     application servers **7-14**  
     card **7-23**  
     interfaces **7-21**  
     linkset **7-10**  
     RAN backhaul **7-25**  
     RAN shorthaul **7-26**  
     signaling gateway mated pairs **7-19**  
     software versions **7-32**

table columns  
     navigating **5-clxv**

table file  
     address  
     loading **16-9**

tabs  
     application server **A-12**  
     application server process **A-13**  
     application server process association **A-13**  
     BWG node **A-2**  
     card **A-16**  
     CSG node **A-3**  
     CSR node **A-3**  
     GGSN node **A-4**  
     HA node **A-5**  
     interface **A-14**  
         UMTS and GSM (RAN-O only) **A-15**  
     ITP node **A-6**  
     link **A-12**  
     linkset **A-11**  
     management interface folder **A-18**  
     ONS node **A-8**  
     physical folder **A-18**  
     RAN backhaul **A-16**  
     RAN service module node **A-9**  
     signaling gateway-mated pair **A-14**

signaling point **A-11**  
 technical documentation (see MWTM web interface)  
 terminal  
     enabling proxy **3-xcvii**  
 text entry fields  
     FAQs **C-5**  
 TFTP  
     server (ITP only), setting up **3-xcviii**  
 timing service  
     FAQs **C-8**  
 topology maps  
     FAQs **C-7**  
 topology  
     centering **10-15**  
     color **10-20**  
     directories **10-17**  
     hiding **10-24**  
     icons, locking **10-23**  
     layouts, creating custom **10-14**  
     magnetic grid **10-18, 10-19**  
     map **10-8**  
     map menu **10-13**  
     menu **10-2**  
     network **10-1**  
     objects  
         aligning **10-22**  
         details **10-16**  
         finding **10-14**  
         hiding **10-23**  
         redrawing **10-24**  
     printing **10-16**  
     RAN-O **10-5**  
     redrawing **10-24**  
     restoring **10-25**  
     saving **10-16, 10-24**  
     settings  
         changing **5-clv**  
     toolbar buttons **10-3**  
     viewing **10-1**  
     views menu **10-13**  
 trap  
     event, forwarding **9-34**  
     IP address, limiting by **3-xcv**  
     nodes, processing **8-52**  
     server, forwarding **5-clxxx**  
     settings  
         viewing **8-60**  
     SNMP, enabling **3-xciii**  
     TRAP\_RATE\_ABATE\_OFFSET **9-40**  
     TRAP\_RATE\_LIMIT\_COUNT **9-40, 9-41**  
     trap forwarding properties  
         viewing **12-21**  
     traps  
         FAQs **C-14**  
         supported, SGM **G-1**  
     troubleshooting **8-40**  
         data **D-1**  
         diagnosing ITP problems **D-5**  
         diagnosing RAN-O problems **D-8**  
         error messages **D-2**  
             data model mediator service **D-2**  
             demand poller manager service **D-2**  
             events **D-5**  
             IOS commands **D-4**  
             locked up display **D-1**  
             pane **5-cxlviii**  
             server processes **D-3**  
             web pages **D-3**  
     Troubleshooting subscriber information **8-138**

---

**U**

uninstalling  
     FAQs **C-2**  
     MWTM **4-cxxxx**  
 unmanaging  
     ITP signaling points **7-42**  
     nodes **7-42**

user-based access (see security)

user password

FAQs [C-11](#)

users (see security)

using

MWTM main menu [4-cxxix](#)

provisioning [8-43](#)

Windows Start menu [4-cxxxvii](#)

## V

view

basic information [6-clxxxviii](#)

client-specific [6-cc](#)

creating [6-cxciii](#)

creating (see view editor window)

custom [6-clxxxviii](#)

default

loading [6-cc](#)

detailed information

viewing [6-cxc](#)

editing [6-cxci](#)

including objects in [6-cxcvii](#)

managing [6-clxxxvii](#)

right-click menu [6-clxxxix](#)

saving [6-cxci](#)

table [6-clxxxix](#)

view editor window [6-cxciii](#)

closing [6-cxcix](#)

left pane [6-cxcv](#)

menu [6-cxciii](#)

objects, right-click menu [6-cxcvi](#)

views, right-click menu [6-cxcv](#)

viewing [8-40](#)

accounting reports [13-126](#)

alarms [8-42](#)

details [8-9](#)

error data [8-109](#)

MLR

details [8-123](#)

MTP3

event log [8-122](#)

notes [7-39](#)

online help [5-clxiii](#)

RAN shorthauls [8-133](#)

recent events [8-42](#)

reports [13-3](#)

route detail [8-117](#)

server properties [12-18](#)

server status information [5-clxxxii](#)

status contributors [8-7](#)

syslog [8-54](#)

system properties [12-15](#)

topology [10-1](#)

trap forward properties [12-21](#)

troubleshooting [8-40](#)

web configuration properties [12-18](#)

viewing reports properties [12-20](#)

## W

web configuration properties

viewing [12-18](#)

web pages

troubleshooting [D-3](#)

web preference, settings

changing [5-cxlili](#)

web server

downloading SSL module [2-lxxiv](#)

Windows

FAQs [C-11](#)

Windows Start menu

changing default

MWTM server name [4-cxxxvii](#)

launching

DOS prompt [4-cxxxviii](#)

MWTM client [4-cxxxviii](#)

MWTM event editor [4-cxxxviii](#)

MWTM README file [4-cxxxviii](#)  
SSL Certificate Tool [4-cxxxviii](#)  
uninstalling MWTM [4-cxxxix](#)  
using [4-cxxxvii](#)

---

**Y**

yellow nodes

FAQs [C-24](#)

