



## INDEX

### A

- access, node **4-4**
- accessing
  - MWTM web browser **4-24**
- accounting FAQs **C-16**
- address
  - information **8-11**
- address tables **16-1**
  - editor
    - launching **16-2**
    - startup options **16-2**
  - files
    - basic information **16-14**
    - creating **16-5**
    - deploying **16-14**
    - loading, from file **16-6**
    - loading, from ITP **16-8**
    - reverting **16-18**
    - saving **16-17**
    - semantics **16-13**
    - working **16-10**
  - listing **16-14**
  - menu **16-3**
  - properties
    - editing **16-12**
- administrative page
  - displaying **12-1**
- alarm filter
  - dialog buttons **9-11**
  - loading **9-17**
  - saving **9-18**
  - setting **9-11**
- alarms
  - displaying **9-3, 11-11**
  - right-click menu **9-9**
  - viewing **8-42**
- application server
  - tabs **A-13**
- application server process
  - application server process association
    - configuration
      - general information **8-13**
    - tabs **A-14**
  - application server process associations
    - table **7-17**
  - application server processes
    - export files, daily **13-222**
    - table **7-16**
  - application servers
    - configuration
      - associations **8-11**
    - export files, hourly **13-222**
    - reports
      - daily **13-221**
      - hourly **13-222**
    - statistics details window **8-66**
    - table **7-14**
- AS
  - accounting reports **13-202**
- ASP accounting reports **13-202**
- asterisks
  - FAQs **C-15**
- attaching notes **7-38**
- audience

document [3-xxxvi](#)

---

## B

backup  
MWTM files [2-29](#)  
secondary server [3-10](#)

basic object functions  
understanding [7-1](#)

browser  
FAQs [C-6](#)

BWG  
traps [G-20](#)

---

## C

capacity planning  
FAQs [C-22](#)

card  
naming information [8-19](#)  
table [7-23](#)  
tabs [A-16](#)

changing  
client preference, settings [5-1](#)  
poller settings [3-2](#)  
web preference, settings [5-1](#)

charts  
settings, changing [5-11](#)

CiscoWorks  
integrating with MWTM [5-36](#)  
SNMP [3-2](#)

client  
disconnect sound [11-17](#)  
preferences, changing [5-1](#)

client, MWTM  
access, limiting [2-27](#)  
connection timer [3-11](#)  
downloading (see MWTM web interface)

Exiting [4-30](#)  
launching from Windows Start menu [4-27](#)  
starting  
on Solaris/Linux [4-3](#)  
on Windows [4-4](#)  
prerequisites [4-3](#)

client/server architecture, overview [1-11](#)

client A configuration  
MWTM [H-13](#)

client B configuration  
MWTM [H-14](#)

color  
severity, customizing [5-16](#)

command line interface, using [5-43](#)

command reference [B-1](#)

commands  
general [B-1](#)  
ITP [B-95](#)

configuring  
firewalls [H-7](#)  
port numbers and parameters [H-5](#)  
sample firewall [H-9](#)

connection settings [5-6](#)

connection timer [3-11](#)

content area  
MWTM client [4-17](#)

conventions  
document [3-xxxvii](#)

conversion entry  
table [15-14](#)

counters, resetting [5-20](#)

CPU  
performance, viewing [8-54](#)

credentials, login  
setting up [3-20](#)

CSG  
MIBS [F-5](#)

CSG1, traps [G-15](#)

CSG2, traps [G-16](#)

customizing view **6-8**  
 custom reports  
   generating **13-252**

---

**D**

data  
   accessing, from web **11-1**  
   exporting **5-35**  
   MWTM  
     exporting current, for node names **5-36**  
     exporting current, for SNMP community  
       names **5-36**  
     removing from server **2-31**  
 default  
   server name, changing **4-26**  
   view, loading **6-14**  
 deleting  
   data from server **2-31**  
   objects **7-40**  
 deploying  
   GTT **15-34**  
 deployment  
   FAQs **C-15**  
 details, viewing **8-9**  
 device configuration  
   buttons **3-22**  
   commands **3-22**  
   dialog box **3-14**  
   menu **3-15**  
 diagram, network **10-1**  
 disconnect sound **11-17**  
 discovering ITP networks  
   dialog menu **4-6**  
   discovered nodes **4-14**  
   running discovery **4-12**  
   settings **4-12**  
   verifying discovery **4-14**  
 discovery

FAQs **C-15**  
 display, customizing **6-8**  
 displaying **11-12**  
   administrative page **12-1**  
   alarms **9-3, 11-11**  
   error statistics **11-27**  
   events **9-3, 11-11**  
   RAN data export files **11-29**  
   software versions **11-12**  
 DISPLAY variable, setting **4-3**  
 document  
   audience **3-xxxvi**  
   conventions **3-xxxvii**  
   objectives **3-xxxvi**  
   organization **3-xxxvi**  
 documentation  
   related **3-xxxviii**  
 DOS prompt, launching **4-27**  
 dual-interface machine  
   MWTM, configuring **H-12**

---

**E**

editing  
   ITP route table file **14-1**  
   properties **7-33**  
 error data, viewing **8-107**  
 error statistics, displaying **11-27**  
 event  
   adding sound files **9-38**  
   attaching notes **9-21**  
   categories **9-28**  
   filter  
     loading **9-17**  
     setting **9-11**  
   forwarding as traps **9-34**  
   limits **9-24**  
   managing **9-1**  
   playing or muting sounds **9-39**

- properties
    - viewing **9-19**
  - settings
    - categories **5-9**
    - changing **5-7**
    - colors **5-8**
    - date **5-8**
    - time **5-8**
  - SNMP servers and traps **9-27**
  - sound filters
    - creating new **9-36**
    - deleting **9-39**
    - listing **9-35**
  - sounds, setting **9-35**
  - traps **9-29**
  - event editor **9-22**
    - categories **9-28**
    - launching **4-27**
    - limits **9-24**
  - SNMP servers and traps **9-27**
  - traps **9-29**
  - event files
    - archived **9-22**
  - event filter
    - dialog
      - buttons **9-11**
      - properties **9-12**
      - selected objects **9-14**
    - example **9-17**
    - loading **9-17**
    - saving **9-18**
    - setting **9-11**
  - events
    - displaying **9-3, 11-11**
    - settings
      - other **5-10**
      - severities **5-9**
    - sound filters
      - changing **9-39**
  - window
    - toolbar buttons **9-7**
  - events and alarms
    - FAQs **C-7**
    - Event Sounds **11-17**
    - excluding
      - objects
        - ITP reports **13-254**
    - exit settings **5-3**
    - export files
      - application server process archived reports **13-222**
      - MLR, daily **13-225**
      - point code, inventory **13-228**
    - exporting current MWTM data
      - for network objects **5-35**
      - node names **5-36**
      - SNMP community names **5-36**
    - exporting data **5-35**
- 
- F**
- FAQs **C-1**
    - accounting **C-16**
    - applications, other **C-10**
    - asterisks **C-15**
    - browser **C-6**
    - capacity planning **C-22**
    - deployment **C-15**
    - discovery **C-15**
    - events and alarms **C-7**
    - HSRP **C-22**
    - in-band management **C-20**
    - installation **C-2**
    - ITP reports **C-17**
    - Java RMI **C-11**
    - limited functionality **C-18**
    - linkset totals **C-16**
    - link totals **C-16**
    - locked up display **C-5**

- MIBs **C-10**
  - moving servers **C-3**
  - out-of-band management **C-20**
  - percentages **C-15**
  - polling **C-9**
  - rebooting **C-5**
  - requirements **C-3**
  - server communication **C-21**
  - server messages **C-4**
  - sounds **C-8**
  - SSL, installing **C-5**
  - status **C-11**
  - superuser **C-11**
  - syncing **C-23**
  - syslog **C-11**
  - text entry fields **C-5**
  - timing service **C-8**
  - topology maps **C-7**
  - traps **C-14**
  - uninstallation **C-2**
  - user password **C-11**
  - Windows **C-11**
  - workstations **C-3**
  - yellow nodes **C-24**
  
  - features
    - customization **1-5**
    - GUI **1-2**
    - integration **1-5**
    - monitoring **1-3**
    - navigational **4-15**
    - performance **1-3**
    - provisioning **1-3**
    - security **1-4**
    - server and network **1-2**
    - topology **1-4**
    - troubleshooting **1-5**
    - web **1-2**
  
  - file
    - node
  
  - MWMT panel
    - 5-28**
    - panel **5-29**
    - file menu **4-19**
    - files
      - ITP
        - deploying **5-33**
        - managing **5-24**
        - loading **4-25**
        - saving MWMT **4-25**
      - filtering view **6-8**
      - firewalls **H-5**
        - configuring **H-7**
- 

**G**

- General commands
  - mwtmp datadir B-23**
  - general commands B-1**
    - mwtmp B-6**
    - mwtmp addcreds B-6**
    - mwtmp adduser B-7**
    - mwtmp authtype B-8**
    - mwtmp backup B-9**
    - mwtmp backupdir B-11**
    - mwtmp badloginalarm B-12**
    - mwtmp badlogindisable B-12**
    - mwtmp browserpath B-13**
    - mwtmp certgui B-13**
    - mwtmp certtool B-14**
    - mwtmp changes B-14**
    - mwtmp checksystem B-15**
    - mwtmp clean B-15**
    - mwtmp cleanall B-16**
    - mwtmp cleandb B-16**
    - mwtmp cleandiscover B-17**
    - mwtmp cliconntimer B-18**
    - mwtmp client B-18**
    - mwtmp clientlogs B-19**
    - mwtmp clitimeout B-19**

- mwitm cmdlog **B-20**  
 mwitm console **B-21**  
 mwitm countnodes **B-22**  
 mwitm countobjects **B-22**  
 mwitm cwsetup **B-22**  
 mwitm dbtool **B-24**  
 mwitm delete **B-24**  
 mwitm deletecreds **B-25**  
 mwitm deluser **B-26**  
 mwitm disablepass **B-26**  
 mwitm disableuser **B-27**  
 mwitm discover **B-27**  
 mwitm diskmonitor **B-28**  
 mwitm enableuser **B-28**  
 mwitm eventautolog **B-29**  
 mwitm eventconfig **B-29**  
 mwitm eventeditor **B-29**  
 mwitm eventtool **B-30**  
 mwitm evilstop **B-32**  
 mwitm export **B-32**  
 mwitm export cw **B-33**  
 mwitm groups **B-33**  
 mwitm help **B-34**  
 mwitm inactiveuserdays **B-35**  
 mwitm installog **B-36**  
 mwitm inventorytool **B-36**  
 mwitm iosreport **B-38**  
 mwitm ipaccess **B-39**  
 mwitm jspport **B-39**  
 mwitm keytool **B-40**  
 mwitm killclients **B-40**  
 mwitm listusers **B-41**  
 mwitm logger **B-41**  
 mwitm logtimemode **B-43**  
 mwitm manage **B-44**  
 mwitm maxascirows **B-44**  
 mwitm maxevhist **B-45**  
 mwitm maxhtmlrows **B-45**  
 mwitm mldebug **B-46**  
 mwitm motd **B-47**  
 mwitm msglog **B-47**  
 mwitm msglogage **B-48**  
 mwitm msglogdir **B-48**  
 mwitm msglogsize **B-42**  
 mwitm netlog **B-49**  
 mwitm netlogger **B-49**  
 mwitm newlevel **B-49**  
 mwitm osinfo **B-50**  
 mwitm passwordage **B-50**  
 mwitm patchlog **B-51**  
 mwitm poll **B-51**  
 mwitm polltimeout **B-51**  
 mwitm print **B-52**  
 mwitm props **B-52**  
 mwitm provisiontool **B-52**  
 mwitm purgedb **B-53**  
 mwitm readme **B-54**  
 mwitm reboot **B-54**  
 mwitm rep15minage **B-54**  
 mwitm repdailyage **B-55**  
 mwitm rephelp **B-56**  
 mwitm rephourlyage **B-56**  
 mwitm repmonthlyage **B-57**  
 mwitm restart **B-57**  
 mwitm restore **B-58**  
 mwitm restoreprops **B-59**  
 mwitm rootvars **B-59**  
 mwitm sechelp **B-59**  
 mwitm seclogmwitm seclog **B-59**  
 mwitm secondaryserver **B-60**  
 mwitm servername **B-62**  
 mwitm setpath **B-62**  
 mwitm showcreds **B-63**  
 mwitm snmpcomm **B-64**  
 mwitm snmpconf **B-64**  
 mwitm snmpget **B-65**  
 mwitm snmphelp **B-67**  
 mwitm snmpnext **B-68**

mwtmp snmpwalk **B-71**  
 mwtmp sounddir **B-73**  
 mwtmp ssl **B-74**  
 mwtmp sslstatus **B-74**  
 mwtmp start **B-74**  
 mwtmp start client **B-75**  
 mwtmp start jsp **B-75**  
 mwtmp start pm **B-75**  
 mwtmp start web **B-76**  
 mwtmp statreps **B-76**  
 mwtmp status **B-82**  
 mwtmp stop **B-82**  
 mwtmp stopclients **B-83**  
 mwtmp stop jsp **B-83**  
 mwtmp stop pm **B-83**  
 mwtmp stop web **B-83**  
 mwtmp superuser **B-83**  
 mwtmp syncusers **B-84**  
 mwtmp tac **B-84**  
 mwtmp termproxy **B-85**  
 mwtmp trapaccess **B-85**  
 mwtmp traprate limit abate **B-86**  
 mwtmp trapratelimit count **B-86**  
 mwtmp trapratelimit interval **B-87**  
 mwtmp trapratelimit minor **B-87**  
 mwtmp trapsetup **B-87**  
 mwtmp trapstatus **B-88**  
 mwtmp tshootlog **B-88**  
 mwtmp uninstall **B-89**  
 mwtmp unknownage **B-89**  
 mwtmp updateuser **B-89**  
 mwtmp useraccess **B-90**  
 mwtmp userpass **B-90**  
 mwtmp version **B-91**  
 mwtmp viewlog **B-91**  
 mwtmp wall **B-91**  
 mwtmp webaccesslog **B-92**  
 mwtmp weberrorlog **B-92**  
 mwtmp weblogupdate **B-93**  
 mwtmp webnames **B-93**  
 mwtmp webport **B-93**  
 mwtmp webutil **B-94**  
 mwtmp who **B-94**  
 mwtmp xtermpath **B-94**  
 generating  
     custom reports **13-252**  
     reports **13-2**  
 getting started **4-1**  
 GGSN  
     MIBS **F-6**  
     traps **G-18**  
 Global Title Translation (see GTT)  
 go menu **4-21**  
 GTT  
     address conversion **15-14**  
     selector table **15-15**  
     tab **15-13**  
     table **15-14**  
 address conversion table  
     adding **15-25**  
     entries, adding **15-26**  
 app group tab **15-10**  
 application groups  
     adding **15-22**  
 basic information **15-1, 15-34**  
 CPC  
     lists, adding **15-24**  
     tab **15-12**  
     tab, concerned pt code name list **15-13**  
 deploying **15-34**  
 editor  
     launching **15-2**  
     menu **15-4**  
 files  
     creating **15-28**  
     cross-instance **15-36**  
     editing **15-16**  
     loading **15-29, 15-31**

- 
- loading from archive **15-32**  
 reverting **15-40**  
 saving **15-38**
- GTA  
 entries, adding **15-18**  
 searching **15-20**
- MAP  
 adding entries **15-23**  
 tab **15-11**
- MAP status  
 viewing **8-117**
- network name configuration **15-36**  
 menu **15-37**  
 table **15-38**
- progress dialog **15-32**
- reports, daily **13-203**
- rows, deleting **15-27**
- selectors, adding **15-17**
- selectors and GTA tab **15-6**  
 CPC **15-10**
- selectors and GTA table  
 app group **15-8**  
 GTA **15-8**  
 MAP **15-9**  
 selector **15-7**  
 semantics **15-33**  
 statistics, viewing **8-118**
- GTT accounting reports **13-203**
- 
- H**
- HA traps **G-21, G-24, G-27**
- help menu **4-23**
- home page
- MWMT web interface **11-8**
- HSRP
- FAQs **C-22**
- 
- ignoring and unignoring objects **7-44**  
 in-band management  
 FAQs **C-20**  
 including objects  
 ITP reports **13-254**
- indxexas **13-222, 13-225**  
 indxexasp **13-223**  
 indxpwe3avg **13-181**  
 indxpwe3peak **13-178**  
 idxwb019 **13-224**  
 idxwb026 **13-225**
- information  
 address **8-11**  
 bandwidth  
 RAN-O backhauls **8-12**
- ITP  
 application server process associations **8-20**  
 application servers **8-14, 8-20**  
 linksets **8-15**  
 links **8-16**  
 naming  
 card **8-19**  
 interfaces **8-19**  
 ITP application servers **8-20**  
 ITP links **8-20**  
 ITP linkset **8-21**  
 ITP signaling-gateway mated pairs **8-21**  
 ITP signaling points **8-21**  
 nodes **8-18**  
 polling nodes **8-23**  
 protection  
 ONS nodes **8-24**  
 QoS, ITP signaling points **8-24**  
 RAN **8-25**  
 remote IP address **8-25**  
 status  
 interface and card **8-27**

- ITP application server process **8-31**
- ITP application server process associations **8-32**
- ITP application servers **8-30**
- ITP links **8-34**
- ITP linksets **8-35**
- ITP signaling gateway mated pairs **8-36**
- ITP signaling points **8-37**
- node **8-26**
- threshold (RAN-O only) **8-38**
- uptime
  - node **8-26**
- information, in a window
  - finding **5-22**
- installation
  - FAQs **C-2**
- integration
  - with CiscoWorks **5-36**
- interface
  - tabs **A-15**
  - UMTS and GSM tabs (RAN-O only) **A-15**
- interface and card, status information **8-27**
- interface content
  - MWTM web interface **11-5**
- interfaces
  - naming **8-19**
  - packet size **8-13**
  - table **7-21**
- introduction to SGM **1-1**
- inventory
  - point code **7-32**
- IOS
  - commands, troubleshooting **D-4**
  - server load balancing **H-16**
- IP addresses accounting
  - reports **7-32**
- IP Transfer Point (see ITP)
- ITP
  - application server processes **8-20**
  - application server process
    - status, information **8-31**
  - application server process associations **8-20**
  - application servers **8-14**
    - naming, information **8-20**
    - status, information **8-30**
  - commands **B-95**
  - files
    - deploying **5-33**
    - managing **5-24**
  - linkset
    - naming, information **8-21**
  - linksets
    - information **8-15**
  - non-stop operation
    - viewing **8-92**
  - overview **1-6**
  - signaling gateway-mated pairs
    - naming, information **8-21**
  - signaling points
    - naming, information **8-21**
  - ITP application server process associations
    - status **8-32**
  - ITP commands
    - mwtm 15minage **B-81**
    - mwtm accstats **B-96**
    - mwtm archivedir **B-98**
    - mwtm atblclient **B-98, B-123**
    - mwtm atbldir **B-99**
    - mwtm autosyncconfig **B-100**
    - mwtm chartwindow **B-15**
    - mwtm checkggtt **B-100**
    - mwtm checkmlr **B-101**
    - mwtm checkroute **B-101**
    - mwtm countas **B-101**
    - mwtm countasp **B-101**
    - mwtm countaspa **B-102**
    - mwtm countlinks **B-102**
    - mwtm countlinksets **B-102**
    - mwtm countsgmp **B-102**

- mwitm countsps **B-102**  
 mwitm deletearchive **B-103**  
 mwitm deploarchive **B-103**  
 mwitm deplocomments **B-104**  
 mwitm evreps clean **B-104**  
 mwitm evreps cleancustom **B-104**  
 mwitm evreps diskcheck **B-104**  
 mwitm evreps enable **B-105**  
 mwitm evreps hourlyage **B-105**  
 mwitm evreps mtp **B-106**  
 mwitm evreps status **B-106**  
 mwitm evrepstimer **B-106**  
 mwitm gttclient **B-108, B-124**  
 mwitm gttdir **B-108**  
 mwitm gttstats **B-110**  
 mwitm linkstats **B-111**  
 mwitm listarchive **B-112**  
 mwitm listgtt **B-113**  
 mwitm listhistory **B-113**  
 mwitm listmlr **B-114**  
 mwitm listroute **B-114**  
 mwitm mlrstats **B-114**  
 mwitm mtpevents **B-116**  
 mwitm pcformat **B-117**  
 mwitm pclist **B-118**  
 mwitm pushgtt **B-118**  
 mwitm pushmlr **B-119**  
 mwitm pushroute **B-119**  
 mwitm q752stats **B-120**  
 mwitm repcustage **B-121**  
 mwitm repdir **B-55**  
 mwitm replog **B-57**  
 mwitm routedir **B-122**  
 mwitm routetabledefs **B-123**  
 mwitm statreps monthlyage **B-82**  
 mwitm xuastats **B-124**
- ITP links  
 naming  
 information **8-20**
- status  
 information **8-34**
- ITP linkset  
 access lists, viewing **8-114**  
 status **8-35**
- ITP MIBS **F-8**
- ITP MSU  
 errors, viewing **8-91**
- ITP MTP3  
 errors, viewing **8-90**
- ITP networks  
 discovery  
 dialog menu **4-6**  
 dialog tabs **4-7**  
 nodes **4-14**  
 running **4-12**  
 settings **4-12**  
 verifying **4-14**
- ITP reports  
 excluding objects **13-254**  
 FAQs **C-17**  
 including objects **13-254**  
 locating **13-251**
- ITP signaling gateway mated pairs  
 status **8-36**
- ITP signaling point  
 description **8-13**  
 specific data, viewing **8-115**
- ITP signaling points  
 managing **7-42**  
 QoS **8-24**  
 status **8-37**  
 unmanaging **7-42**
- ITP traps **G-7**
- 
- J**
- JAVA RMI  
 FAQs **C-11**

**L**

launching  
     discovery dialog **4-6**  
 limited functionality  
     FAQs **C-18**  
 link  
     configuration  
         interfaces **8-15**  
     reports  
         daily **13-52**  
         hourly **13-49**  
     tabs **A-12**  
 links  
     configuration  
         IP addresses **8-17**  
     information **8-16**  
     reports **13-49**  
     table **7-13**  
 linkset  
     archived reports  
         daily **13-224**  
         hourly **13-224**  
     description **8-13**  
     reports  
         daily **13-64**  
         daily peaks **13-67**  
         hourly **13-61**  
     table **7-10**  
     tabs **A-12**  
 linkset totals  
     FAQs **C-16**  
 link totals  
     FAQs **C-16**  
 Linux MWTM client, starting **4-3**  
 locating  
     ITP reports **13-251**  
 locked up display  
     FAQs **C-5**

---

login credentials, setting up **3-20**

**M**

management interface folder  
     tabs **A-18**  
 managing  
     event **9-1**  
     ITP signaling points **7-42**  
     nodes **7-42**  
     reports **13-1**  
 mapping files, network name **16-15**  
 MaxAlarmAge **9-26**  
 menu  
     address tables **16-3**  
 menus  
     file **4-19**  
     go **4-21**  
     help **4-23**  
     tools **4-22**  
 messages  
     display, changing **3-4**  
 log file  
     age **3-5**  
     dates **3-5**  
     location **3-4**  
     size **3-4**  
     of the day **2-14**  
 MIBs  
     common **F-2**  
     FAQs **C-10**  
 MLR  
     details **8-121**  
     export files, daily **13-225**  
     reports **13-70**  
         aborts **13-70**  
         continues **13-71**  
         daily **13-70**  
         processed **13-72**

- result invokes **13-73**
- rule matches **13-73**
- subtriggers **13-73**
- triggers **13-74**
- mobile Services Exchange Framework (see mSEF)
- Mobile Wireless Transport Manager (see MWTM)
- moving servers
- FAQs **C-3**
- mSEF
  - overview **1-9**
  - traps **G-14**
- MSU
  - archived reports
    - daily **13-226**
    - hourly **13-226**
  - load
    - reports **13-75**
  - peaks
    - reports **13-75**
  - rates
    - reports **13-75**
- MTP3
  - event log
    - viewing **8-120**
  - reports
    - daily **13-204**
- MTP3 event reports **13-226**
- multiple-instance ITPs, connecting **3-6**
- MWTM
  - about **3-xxxx**
  - backup **2-29**
  - client and server communication
    - dynamic NAT **H-15**
    - firewalls **H-5**
    - NAT **H-4**
    - port-forwarding **H-10**
    - SSL **H-15**
    - TCP **H-15**
    - VPN **H-3**
  - integration **5-36**
  - ITP route table file
    - editing **14-1**
  - main menu, using **4-18**
  - main window **4-14**
  - MIB reference **F-1**
  - networking options (see MWTM, client and server communication) **H-1**
  - overview **1-1**
  - restoring **2-29**
  - sessions, running simultaneous **5-39**
  - traps, supported **G-1**
  - troubleshooting (see troubleshooting)
  - uninstalling **4-28**
  - web browser, accessing **4-24**
- MWTM process
  - events, changing **9-22**
- MWTM server (see server, MWTM)
- MWTM web interface
  - additional information **11-10**
  - archived messages **12-10**
  - home page **11-8**
  - interface content **11-5**
  - logs
    - command **12-13**
    - console **12-13**
    - event automation **12-14**
    - security **12-14**
    - web access **12-15**
    - web server error **12-15**
  - messages **12-6**
    - action **12-8**
    - error **12-7**
    - info **12-6**
  - MWTM client, downloading **11-9**
  - navigation tree **11-3**
  - software updates **11-10**
  - system
    - clients **12-12**

- information **12-5**  
 status **12-12**  
 versions **12-12**  
 technical documentation **11-11**
- MWMTM windows  
 printing **5-24**
- 
- N**
- navigating  
 table columns **5-23**  
 navigational features **4-15**  
 navigation tree  
   MWTM client **4-16**  
   MWTM web interface **11-3**
- network  
 topology **10-1**  
 views  
   topology **10-1**  
 network name mapping files, creating **16-15**  
 network objects  
   viewing a summary **4-17**
- node  
 access **4-4**  
 archive  
   management **5-31**  
 BWG tabs **A-2**  
 CSG tabs **A-3**  
 CSR tabs **A-3**  
 file  
   management **5-24**  
   menu, management **5-25**  
   MWTM panel **5-28**  
 files  
   ITP panel **5-29**  
 GGSN tabs **A-4**  
 HA tabs **A-5**  
 ITP tabs **A-6**  
 naming information **8-18**
- ONS tabs **A-8**  
 polling information **8-23**  
 RAN service module tabs **A-10**  
 status information **8-26**  
 uptime information **8-26**
- node and ONS card details window  
 configuration data  
   descriptive information **8-13**
- node details window  
 configuration data  
   IP addresses for SNMP **8-16**
- node name settings **5-5**
- nodes  
 deleting  
   from MWTM discovery database **7-42**  
 excluding from view **7-44**  
 managing **7-42**  
 polling **8-49**  
 SNMP IP addresses  
   editing **8-39**
- trap  
 processing **8-52**
- unmanaging **7-42**
- window **7-2**  
 menus, right-click **7-3**  
 node table **7-5**
- nodes and files, seed  
 loading **4-7**
- notes  
 attaching **7-38**  
 event **9-21**  
 viewing **7-39**
- 
- O**
- object details window  
 configuration data  
   naming **8-17**
- object functions

detailed understanding **8-1**

objectives document **3-xxxvi**

object map reference **A-1**

objects deleting **7-40**  
from MWTM database **7-40**  
from network **7-40**  
ignoring and unignoring **7-44**

online help, viewing **5-21**

ONS nodes protection information **8-24**

operations basic server performance **5-39**

organization document **3-xxxvi**

out-of-band management FAQs **C-20**

overview discovery **4-5**

**P**

passwords (see security)

peak

reports **13-56**

percentages

FAQs **C-15**

physical folder

tabs **A-18**

point code

export files, inventory **13-228**

inventory **7-32**

reports **7-32**

setting format **3-5**

poller

settings **5-5**

settings, changing **3-2**

poller settings window **8-103**

polling FAQs **C-9**  
polling nodes **8-49**

port numbers and parameters configuring **H-5**

ports MWTM **I-1**

preferences menu **5-2**  
settings CiscoWorks server **5-13**  
deploy **5-15**  
troubleshooting **5-6**

preference settings default, restoring **5-18**  
web, changing **5-18**

printing MWTM windows **5-24**

products menu **4-22**

properties, editing **7-33**

provisioning prerequisites **8-47**  
using **8-43**  
wizard using **8-48**

**R**

Radio Access Network Optimization (see RAN-O)

RAN

information **8-25**

RAN backhaul

table **7-25**

tabs **A-17**

virtual

creating **8-132**

RAN data export files

displaying [11-29](#)  
**RAN-O**  
 backhaul  
 properties, editing [7-37](#)  
**MIBS**  
 specific [F-9](#)  
 overview [1-8](#)  
 traps [G-11](#)  
**RAN-O only**  
 threshold  
 information [8-38](#)  
**RAN shorthauls**  
 viewing [8-131](#)  
**README file** [4-27](#)  
**real-time data**  
 ITP objects  
 viewing [8-66](#)  
 objects  
 viewing [8-52](#)  
**real-time poller**  
 settings  
 changing [5-20](#)  
**rebooting**  
 FAQs [C-5](#)  
**recent events**  
 viewing [8-42](#)  
**reference**  
 command [B-1](#)  
 object map [A-1](#)  
**remote IP address**  
 information [8-25](#)  
**reports**  
 archived  
 custom [13-216](#)  
 daily [13-219](#)  
 hourly [13-219](#)  
 rolling [13-220](#)  
 AS accounting [13-202](#)  
 ASP accounting [13-202](#)  
 custom (see custom reports)  
 directory [13-252](#)  
 generating [13-2](#)  
 GTT, daily [13-203](#)  
 GTT accounting [13-203](#)  
 IP addresses accounting [7-32](#)  
 link [13-49](#)  
 five day [13-59](#)  
 linkset [13-60](#)  
 log [13-246](#)  
 managing [13-1](#)  
**MLR** [13-70](#)  
 aborts [13-70](#)  
 continues [13-71](#)  
 processed [13-72](#)  
 subtriggers [13-73](#)  
 MSU load [13-75](#)  
 MSU peaks [13-75](#)  
 MSU rates [13-75](#)  
 MTP3, daily [13-204](#)  
 MTP3 accounting [13-204](#)  
 MTP3 event [13-226](#)  
 MTP3 events  
 hourly [13-227](#)  
 point code [7-32](#)  
 point code, inventory [7-32, 13-202](#)  
**system**  
 parameters [13-247](#)  
 timers [13-247](#)  
 system log [12-16](#)  
 viewing [13-3](#)  
**reports, accounting**  
 viewing [13-202](#)  
**reports properties**  
 viewing [12-20](#)  
**requirements**  
 FAQs [C-3](#)  
**restoring**  
 MWTM files [2-29](#)

RMI  
    how does it work [H-2](#)

root user, becoming [4-2](#)  
route detail  
    viewing [8-115](#)  
route table files [14-1](#)  
    deploying [14-12](#)  
    editing [14-5](#)  
    loading [14-11](#)  
    non-MWMTM [14-14](#)  
    opening  
        from archive [14-4](#)  
        from file [14-2](#)  
        from ITP [14-3](#)  
    reverting to last saved [14-14](#)  
route table dialog  
    menu [14-6](#)  
    menus, right-click [14-7](#)  
    table [14-7](#)  
saving [14-12](#)

---

## S

sample firewall  
    configuration [H-9](#)  
saving  
    address table files [16-17](#)  
    alarm filter [9-18](#)  
    event filter [9-18](#)  
    GTT files [15-38](#)  
    MWMTM files [4-25](#)  
    route table files [14-12](#)  
    seed files [4-8](#)  
    topology [10-16](#)  
    view [6-5](#)  
security [2-1](#)  
    client access, limiting [2-27](#)  
    data, restoring [2-17](#)  
    logs, system [2-16](#)

message of the day [2-14](#)  
overview [2-1](#)  
passwords  
    changing [2-12](#)  
    creating [2-6](#)  
    disabling, automatically [2-9](#)  
    disabling, manually [2-11](#)  
    re-enabling [2-12](#)  
    synchronizing [2-15](#)  
SSL [2-19](#)  
    enabling [2-20](#)  
    support, disabling [2-27](#)  
    support, managing [2-26](#)  
SSL certificates  
    details [2-25](#)  
    downloading [2-22](#)  
    exporting [2-24](#)  
    importing [2-23](#)  
    tool [2-23](#)  
superuser [2-18](#)  
user-based access  
    disabling [2-17](#)  
    implementing [2-2](#)  
user levels [2-6](#)  
    (level 1) basic user [2-7](#)  
    (level 2) power user [2-7](#)  
    (level 3) network operator [2-8](#)  
    (level 4) network administrator [2-8](#)  
    (level 5) system administrator [2-8](#)  
users  
    changing [2-12](#)  
    disabling, automatically [2-9](#)  
    disabling, manually [2-11](#)  
    listing current [2-15](#)  
    re-enabling [2-12](#)  
seed files  
    changing [4-11](#)  
    creating [4-10](#)  
    loading [4-8](#)

saving **4-8**  
 using a text editor **4-11**

seed nodes, loading **4-7**

semantics  
 address table files **16-13**  
 GTT files **15-33**

server  
 setting up **3-1**

server, MWTM  
 changing default name **4-26**  
 connecting new **5-40**  
 IOS server load balancing **H-16**  
 removing data **2-31**

server communication  
 FAQs **C-21**

server configuration, MWTM **H-13**

server messages  
 FAQs **C-4**

server properties  
 viewing **12-18**

server status information  
 viewing **5-40**

sessions, MWTM, running simultaneous **5-39**

setting  
 alarm filter **9-11**  
 CiscoWorks server  
 changing **5-13**  
 deploy  
 changing **5-15**  
 event filter **9-11**

settings  
 charts  
 changing **5-11**  
 connection **5-6**  
 event  
 changing **5-7**  
 exit **5-3**  
 general, displaying **5-4**  
 GUI, changing **5-3**

node name **5-5**  
 poller **5-5**  
 repaint **5-6**  
 startup **5-3**  
 status, changing **5-11**  
 topology  
 changing **5-13**

severity alarm **4-18**

SGM  
 commands **B-1**  
 FAQs (see FAQs)  
 status definitions (see status, definitions)

shorthaul table **7-26**

signaling gateway-mated pair  
 tabs **A-14**  
 signaling gateway mated pairs  
 table **7-19**

signaling point  
 tabs **A-11**  
 signaling point details window  
 configuration data  
 capability point code **8-12**  
 point code **8-22**

signaling points  
 window  
 signaling point information **7-9**

single-instance ITPs, connecting **3-6**

SNMP  
 settings  
 buttons **3-18**  
 commands **3-18**  
 configuring **3-15**  
 table **3-16**  
 trap, enabling **3-7**

software versions  
 displaying **11-12**  
 table **7-32**

Solaris MWTM client, starting **4-3**

sound files, adding **9-38**

sound filters, event  
 creating new **9-36**  
 deleting **9-39**  
 listing for **9-35**  
 setting **9-35**  
 sound filters, events  
 changing **9-39**  
 sounds  
 FAQs **C-8**  
 SSL (see also security)  
 SSL, downloading module  
 from web server **2-22**  
 SSL certificate tool, launching **4-27**  
 starting MWTM  
 client **4-3**  
 server **4-1**  
 startup settings **5-3**  
 statistics  
 archived reports  
 daily **13-224**  
 hourly **13-223**  
 status  
 FAQs **C-11**  
 settings, changing **5-11**  
 status contributors, viewing **8-7**  
 Summary lists **4-17**  
 summary lists **4-18, 11-12**  
 displaying **11-12**  
 superuser **2-18**  
 FAQs **C-11**  
 syncing  
 FAQs **C-23**  
 syslog  
 FAQs **C-11**  
 viewing **8-53**  
 system properties  
 viewing **12-16**

---

**T**

table  
 application server process **7-16**  
 application server process associations **7-17**  
 application servers **7-14**  
 card **7-23**  
 interfaces **7-21**  
 linkset **7-10**  
 RAN backhaul **7-25**  
 RAN shorthaul **7-26**  
 signaling gateway mated pairs **7-19**  
 software versions **7-32**  
 table columns  
 navigating **5-23**  
 table file  
 address  
 loading **16-9**  
 tabs  
 application server **A-13**  
 application server process **A-13**  
 application server process association **A-14**  
 BWG node **A-2**  
 card **A-16**  
 CSG node **A-3**  
 CSR node **A-3**  
 GGSN node **A-4**  
 HA node **A-5**  
 interface **A-15**  
 UMTS and GSM (RAN-O only) **A-15**  
 ITP node **A-6**  
 link **A-12**  
 linkset **A-12**  
 management interface folder **A-18**  
 ONS node **A-8**  
 physical folder **A-18**  
 RAN backhaul **A-17**  
 RAN service module node **A-10**  
 signaling gateway-mated pair **A-14**

signaling point **A-11**  
 technical documentation (see MWTM web interface)  
 terminal  
     enabling proxy **3-11**  
 text entry fields  
     FAQs **C-5**  
 TFTP  
     server (ITP only), setting up **3-12**  
 timing service  
     FAQs **C-8**  
 topology maps  
     FAQs **C-7**  
 topology  
     centering **10-15**  
     color **10-20**  
     directories **10-17**  
     hiding **10-24**  
     icons, locking **10-23**  
     layouts, creating custom **10-14**  
     magnetic grid **10-18, 10-19**  
     map **10-8**  
     map menu **10-13**  
     menu **10-2**  
     network **10-1**  
     objects  
         aligning **10-22**  
         details **10-16**  
         finding **10-14**  
         hiding **10-23**  
         redrawing **10-24**  
     printing **10-16**  
     RAN-O **10-5**  
     redrawing **10-24**  
     restoring **10-25**  
     saving **10-16, 10-24**  
     settings  
         changing **5-13**  
     toolbar buttons **10-3**  
     viewing **10-1**  
     views menu **10-13**  
 trap  
     event, forwarding **9-34**  
     IP address, limiting by **3-9**  
     nodes, processing **8-52**  
     server, forwarding **5-38**  
     settings  
         viewing **8-60**  
     SNMP, enabling **3-7**  
     TRAP\_RATE\_ABATE\_OFFSET **9-40**  
     TRAP\_RATE\_LIMIT\_COUNT **9-40, 9-41**  
     trap forwarding properties  
         viewing **12-21**  
     traps  
         FAQs **C-14**  
         supported, SGM **G-1**  
     troubleshooting **8-40**  
         data **D-1**  
         diagnosing ITP problems **D-5**  
         diagnosing RAN-O problems **D-8**  
         error messages **D-2**  
             data model mediator service **D-2**  
             demand poller manager service **D-2**  
             events **D-5**  
             IOS commands **D-4**  
             locked up display **D-1**  
             pane **5-6**  
             server processes **D-3**  
             web pages **D-3**  
     Troubleshooting subscriber information **8-136**

---

**U**

uninstalling  
     FAQs **C-2**  
     MWTM **4-28**  
 unmanaging  
     ITP signaling points **7-42**  
     nodes **7-42**



MWTM README file [4-27](#)  
SSL Certificate Tool [4-27](#)  
uninstalling MWTM [4-28](#)  
using [4-26](#)

---

**Y**

yellow nodes

FAQs [C-24](#)

