



INDEX

A

access, node 4
accessing
 MWTM web browser 24
 accounting FAQs 16
address
 information 8
address tables 1
editor
 launching 2
 startup options 2
 files
 basic information 15
 creating 5
 deploying 15
 loading, from file 6
 loading, from ITP 8
 reverting 20
 saving 18
 semantics 14
 working 10
listing 15
menu 3
properties
 editing 13
administrative page
 displaying 1
alarm filter
dialog buttons 13
loading 19
saving 20
setting 12
alarms
displaying 3, 19
right-click menu 11
viewing 41
application server
 tabs 15
application server process
 tabs 15
application server process association
configuration
 general information 10
 tabs 16
application server process associations
 table 29
application server processes
 export files, daily 243
 table 28
application servers
configuration
 associations 9
 export files, hourly 243
reports
 daily 242
 hourly 242
 statistics details window 73
 table 25
AS
 accounting reports 210
 ASP accounting reports 210
asterisks
FAQs 16
attaching notes 54
audience
 document xxxviii

B

backup
MWTM files 30
secondary server 9
basic object functions
understanding 1
browser
FAQs 6
BWG
traps 23

C

capacity planning
FAQs 21
card
naming information 16
table 36
tabs 18
changing
client preference, settings 1
poller settings 2
web preference, settings 1
charts
settings, changing 11
CiscoWorks
integrating with MWTM 36
SNMP 1
client
disconnect sound 25
preferences, changing 1
client A configuration
MWTM 13
client B configuration
MWTM 14
client, MWTM
access, limiting 29
connection timer 10
downloading (see MWTM web interface)
exiting 30
launching from Windows Start menu 27
starting
on Solaris/Linux 3
on Windows 4
prerequisites 3
client/server architecture, overview 11
color
severity, customizing 16
command line interface, using 43
command reference 1
commands
general 1
ITP 97
configuring
firewalls 7
port numbers and parameters 5
sample firewall 9
connection settings 6
connection timer 10
content area
MWTM client 17
conventions
document xxxix
conversion entry
table 13
counters, resetting 20
CPU
performance, viewing 55
credentials, login
setting up 19
CSG
MIBS 6
CSG1, traps 17
CSG2, traps 18
custom reports
generating 282
customizing view 8

D

data

- accessing, from web 1
- exporting 35

MWTM

- exporting current, for node names 36
- exporting current, for SNMP community names 36
- removing from server 32

default

- server name, changing 26
- view, loading 14

deleting

- data from server 32
- objects 56

deploying

- GTT 34

deployment

- FAQs 16
- details, viewing 7

device configuration

- buttons 21
- commands 21
- dialog box 14
- menu 14

diagram, network 1

disconnect sound 25

discovering ITP networks

- dialog menu 6
- discovered nodes 14
- running discovery 12
- settings 12
- verifying discovery 14

discovery

- FAQs 15

DISPLAY variable, setting 3

display, customizing 8

displaying 20

- administrative page 1

alarms 3, 19

error statistics 38

events 3, 19

RAN data export files 40

software versions 20

document

audience xxxviii

conventions xxxix

objectives xxxviii

organization xxxviii

documentation

related xl

DOS prompt, launching 27

dual-interface machine

MWTM, configuring 12

E

editing

ITP route table file 1

properties 49

error data, viewing 114

error statistics, displaying 38

event

adding sound files 41

attaching notes 23

categories 31

filter

loading 19

setting 12

forwarding as traps 37

limits 26

managing 1

playing or muting sounds 42

properties

viewing 21

settings

categories 9

changing 7

colors 8
 date 8
 time 8
 SNMP servers and traps 30
 sound filters
 creating new 39
 deleting 42
 listing 38
 sounds, setting 38
 traps 32
 event editor 25
 categories 31
 launching 27
 limits 26
 SNMP servers and traps 30
 traps 32
 event files
 archived 24
 event filter
 dialog
 buttons 13
 selected objects 16
 example 19
 loading 19
 saving 20
 setting 12
 Event Sounds 25
 events
 displaying 3, 19
 settings
 other 10
 severities 9
 sound filters
 changing 42
 window
 toolbar buttons 8
 events and alarms
 FAQs 7
 excluding
 objects
 ITP reports 284
 exit settings 3
 export files
 application server process archived reports 243
 MLR, daily 245
 point code, inventory 248
 exporting current MWTM data
 for network objects 35
 node names 36
 SNMP community names 36
 exporting data 35

F

FAQs 1
 accounting 16
 applications, other 10
 asterisks 16
 browser 6
 capacity planning 21
 deployment 16
 discovery 15
 events and alarms 7
 HSRP 22
 in-band management 19
 installation 2
 ITP reports 17
 Java RMI 11
 limited functionality 18
 link totals 16
 linkset totals 16
 locked up display 5
 MIBs 10
 moving servers 3
 out-of-band management 19
 percentages 16
 polling 9
 rebooting 5

- requirements 3
 - server communication 21
 - server messages 4
 - sounds 8
 - SSL, installing 5
 - status 11
 - superuser 11
 - syncing 22
 - syslog 11
 - text entry fields 5
 - timing service 8
 - topology maps 7
 - traps 15
 - uninstallation 2
 - user password 11
 - Windows 11
 - workstations 3
 - yellow nodes 23

 - features
 - customization 5
 - GUI 2
 - integration 5
 - monitoring 3
 - navigational 15
 - performance 3
 - provisioning 3
 - security 4
 - server and network 2
 - topology 4
 - troubleshooting 5
 - web 2

 - file
 - node
 - MWTM panel 28
 - panel 29
 - file menu 19
 - files
 - ITP
 - deploying 33

 - managing 24
 - loading 25
 - saving MWTM 25
 - filtering view 8
 - firewalls 5
 - configuring 7
-
- ## G
- General commands
 - `mwtm datadir` 24
 - general commands 1
 - `mwtm` 6
 - `mwtm addcreds` 6
 - `mwtm adduser` 7
 - `mwtm authtype` 8
 - `mwtm backup` 9
 - `mwtm backupdir` 11
 - `mwtm badloginalarm` 12
 - `mwtm badlogindisable` 12
 - `mwtm browserpath` 13
 - `mwtm certgui` 13
 - `mwtm certtool` 14
 - `mwtm changes` 14
 - `mwtm checksystem` 15
 - `mwtm clean` 15
 - `mwtm cleanall` 16
 - `mwtm cleandb` 17
 - `mwtm cleandiscover` 17
 - `mwtm ciconntimer` 18
 - `mwtm client` 19
 - `mwtm clientlogs` 19
 - `mwtm clitimeout` 20
 - `mwtm cmdlog` 21
 - `mwtm console` 22
 - `mwtm countnodes` 22
 - `mwtm countobjects` 23
 - `mwtm cwsetup` 23
 - `mwtm dbtool` 25

mwitm delete 25
 mwitm deletecreds 26
 mwitm deluser 27
 mwitm disablepass 27
 mwitm disableuser 28
 mwitm discover 28
 mwitm diskmonitor 29
 mwitm enableuser 29
 mwitm eventautolog 30
 mwitm eventconfig 30
 mwitm eventeditor 30
 mwitm eventtool 31
 mwitm evilstop 33
 mwitm export 33
 mwitm export cw 34
 mwitm groups 34
 mwitm help 36
 mwitm inactiveuserdays 37
 mwitm installlog 37
 mwitm inventorytool 38
 mwitm iosreport 40
 mwitm ipaccess 41
 mwitm jspport 41
 mwitm keytool 42
 mwitm killclients 42
 mwitm listusers 43
 mwitm logger 43
 mwitm logtimemode 45
 mwitm manage 46
 mwitm maxascirows 46
 mwitm maxevhist 47
 mwitm maxhtmlrows 47
 mwitm mldebug 48
 mwitm motd 49
 mwitm msglog 49
 mwitm msglogage 50
 mwitm msglogdir 50
 mwitm msglogsize 44
 mwitm netlog 51
 mwitm netlogger 51
 mwitm newlevel 51
 mwitm osinfo 52
 mwitm passwordage 52
 mwitm patchlog 53
 mwitm poll 53
 mwitm polltimeout 53
 mwitm print 54
 mwitm props 54
 mwitm provisiontool 54
 mwitm purgedb 55
 mwitm readme 56
 mwitm reboot 56
 mwitm rephelp 57
 mwitm restart 58
 mwitm restore 58
 mwitm restoreprops 59
 mwitm rootvars 60
 mwitm sechelp 60
 mwitm seclogmwitm seclog 60
 mwitm secondaryserver 61
 mwitm servername 62
 mwitm setpath 63
 mwitm showcreds 64
 mwitm snmpcomm 65
 mwitm snmpconf 66
 mwitm snmpget 66
 mwitm snmphelp 68
 mwitm snmpnext 69
 mwitm snmpwalk 72
 mwitm sounddir 74
 mwitm ssl 75
 mwitm sslstatus 75
 mwitm start 76
 mwitm start client 76
 mwitm start jsp 76
 mwitm start pm 76
 mwitm start web 77
 mwitm statreps 77

mwitm status 84
 mwitm stop 84
 mwitm stop jsp 85
 mwitm stop pm 85
 mwitm stop web 85
 mwitm stopclients 84
 mwitm superuser 85
 mwitm syncusers 86
 mwitm tac 86
 mwitm termproxy 86
 mwitm trapaccess 87
 mwitm traprate limit abate 87
 mwitm trapratelimit count 88
 mwitm trapratelimit interval 88
 mwitm trapratelimit minor 89
 mwitm trapsetup 89
 mwitm trapstatus 90
 mwitm tshootlog 90
 mwitm uninstall 90
 mwitm unknownage 91
 mwitm updateuser 91
 mwitm useraccess 92
 mwitm userpass 92
 mwitm version 93
 mwitm viewlog 93
 mwitm wall 93
 mwitm webaccesslog 94
 mwitm weberrorlog 94
 mwitm weblogupdate 94
 mwitm webnames 95
 mwitm webport 95
 mwitm webutil 95
 mwitm who 96
 mwitm xtermpath 96
 generating
 custom reports 282
 reports 2
 getting started 1
 GGSN

MIBS 7
 traps 20
 Global Title Translation (see GTT)
 go menu 21
 GTT
 address conversion 13
 selector table 14
 tab 12
 table 12
 address conversion table
 adding 24
 entries, adding 25
 app group tab 9
 application groups
 adding 21
 basic information 1, 34
 CPC
 lists, adding 23
 tab 11
 tab, concerned pt code name list 12
 deploying 34
 editor
 launching 2
 menu 3
 files
 creating 27
 cross-instance 36
 editing 15
 loading 29, 30
 loading from archive 31
 reverting 40
 saving 38
 GTA
 entries, adding 17
 searching 19
 MAP
 adding entries 22
 tab 10
 MAP status

viewing 124
network name configuration 36
menu 37
table 38
progress dialog 32
reports, daily 211
rows, deleting 26
selectors and GTA tab 5
CPC 9
selectors and GTA table
app group 8
GTA 7
MAP 9
selector 6
selectors, adding 16
semantics 33
statistics, viewing 126
GTT accounting reports 211

H
HA traps 23, 24, 27, 29, 30
help menu 23
home page
MWTM web interface 12
HSRP
FAQs 22

ignoring and unignoring objects 60
in-band management
FAQs 19
including objects
ITP reports 284
indxexas 242, 246
indxexasp 243
indxpwe3peak 185

indxwb019 244
indxwb026 245
information
address 8
bandwidth
RAN-O backhauls 9
ITP
application server process associations 17
application servers 11, 17
linksets 12
links 13
naming
card 16
interfaces 16
ITP application servers 17
ITP links 17
ITP linkset 18
ITP signaling points 18
ITP signaling-gateway mated pairs 18
nodes 15
polling nodes 20
protection
ONS nodes 21
QoS, ITP signaling points 21
RAN 22
remote IP address 22
status
interface and card 24
ITP application server process 29
ITP application server process associations 29
ITP application servers 27
ITP links 31
ITP linksets 32
ITP signaling gateway mated pairs 33
ITP signaling points 34
node 23
threshold (RAN-O only) 35
uptime
node 23

information, in a window
 finding 22

installation
 FAQs 2

integration
 with CiscoWorks 36

interface
 tabs 17
 UMTS and GSM tabs (RAN-O only) 18

interface and card, status information 24

interface content
 MWTM web interface 5

interfaces
 naming 16
 packet size 11
 table 33

introduction to SGM 1

inventory
 point code 48

IOS
 commands, troubleshooting 4
 server load balancing 16

IP addresses accounting
 reports 48

IP Transfer Point (see ITP)

ITP
 application server processes 17
 application server process
 status, information 29
 application server process associations 17
 application servers 11
 naming, information 17
 status, information 27
 commands 97
 files
 deploying 33
 managing 24
 linkset
 naming, information 18

links
 sets
 information 12
 overview 6
 signaling gateway-mated pairs
 naming, information 18
 signaling points
 naming, information 18

ITP application server process associations
 status 29

ITP commands
 mwitm 15minage 83
 mwitm accstats 98
 mwitm archivedir 100
 mwitm atblclient 100, 125
 mwitm atbldir 101
 mwitm autosyncconfig 102
 mwitm chartwindow 15
 mwitm checkggt 102
 mwitm checkmlr 103
 mwitm checkroute 103
 mwitm countas 103
 mwitm countasp 103
 mwitm countasp 104
 mwitm countlinks 104
 mwitm countlinksets 104
 mwitm countsgmp 104
 mwitm countsps 104
 mwitm deletearchive 105
 mwitm deploarchive 105
 mwitm deplocomments 106
 mwitm evreps clean 106
 mwitm evreps cleancustom 106
 mwitm evreps diskcheck 107
 mwitm evreps enable 107
 mwitm evreps hourlyage 108
 mwitm evreps mtp 108
 mwitm evreps status 108
 mwitm evrepstimer 109
 mwitm gttclient 110, 126

- mwitm gttdir 111
 - mwitm gttstats 112
 - mwitm linkstats 113
 - mwitm listarchive 115
 - mwitm listgtt 115
 - mwitm listhistory 115
 - mwitm listmlr 116
 - mwitm listroute 116
 - mwitm mlrstats 116
 - mwitm mtpevents 118
 - mwitm pcformat 119
 - mwitm pclist 120
 - mwitm pushgtt 120
 - mwitm pushmlr 121
 - mwitm pushroute 122
 - mwitm q752stats 122
 - mwitm repcustage 123
 - mwitm repdir 56
 - mwitm replog 57
 - mwitm routedir 124
 - mwitm routetabledefs 125
 - mwitm statreps monthlyage 84
 - mwitm xuastats 126
 - ITP links**
 - naming
 - information 17
 - status
 - information 31
 - ITP linkset**
 - access lists, viewing 121
 - status 32
 - ITP MIBS** 9
 - ITP MSU**
 - errors, viewing 98
 - ITP MTP3**
 - errors, viewing 97
 - ITP networks**
 - discovery
 - dialog menu 6
 - dialog tabs 7
 - nodes 14
 - running 12
 - settings 12
 - verifying 14
 - ITP reports**
 - excluding objects 284
 - FAQs 17
 - including objects 284
 - locating 281
 - ITP signaling gateway mated pairs**
 - status 33
 - ITP signaling point**
 - description 10
 - specific data, viewing 123
 - ITP signaling points**
 - managing 58
 - QoS 21
 - status 34
 - unmanaging 58
 - ITP traps** 7
-
- J**
- JAVA RMI**
 - FAQs 11
-
- L**
- launching
 - discovery dialog 6
 - limited functionality
 - FAQs 18
 - link
 - configuration
 - interfaces 12
 - reports
 - daily 70

hourly 67
 tabs 14
 link totals
 FAQs 16
 links
 configuration
 IP addresses 14
 information 13
 reports 67
 table 23
 linkset
 archived reports
 daily 245
 hourly 245
 description 10
 reports
 daily 82
 daily peaks 85
 hourly 79
 table 20
 tabs 14
 linkset totals
 FAQs 16
 Linux MWTM client, starting 3
 locating
 ITP reports 281
 locked up display
 FAQs 5
 login credentials, setting up 19

M

management interface folder
 tabs 20
 managing
 event 1
 ITP signaling points 58
 nodes 58
 reports 1
 mapping files, network name 16
 MaxAlarmAge 28
 menu
 address tables 3
 menus
 file 19
 go 21
 help 23
 tools 22
 messages
 display, changing 4
 log file
 age 4
 dates 4
 location 4
 size 4
 of the day 15
 MIBs
 common 2
 FAQs 10
 MLR
 details 129
 export files, daily 245
 reports 88
 aborts 89
 continues 90
 daily 89
 processed 90
 result invokes 91
 rule matches 92
 subtriggers 92
 triggers 93
 mobile Services Exchange Framework (see mSEF)
 Mobile Wireless Transport Manager (see MWTM)
 moving servers
 FAQs 3
 mSEF
 overview 9
 traps 16

- MSU
 archived reports
 daily 247
 hourly 246
 load
 reports 94
 peaks
 reports 94
 rates
 reports 93
- MTP3
 event log
 viewing 129
 reports
 daily 212
- MTP3 event reports 247
- multiple-instance ITPs, connecting 6
- MWTM
 about xxxvii
 backup 30
 client and server communication
 dynamic NAT 15
 firewalls 5
 NAT 4
 port-forwarding 10
 SSL 15
 TCP 15
 VPN 3
 integration 36
 ITP route table file
 editing 1
 main menu, using 18
 main window 14
 MIB reference 1
 networking options (see MWTM, client and server communication) 1
 overview 1
 restoring 30
 sessions, running simultaneous 39
- traps, supported 1
 troubleshooting (see troubleshooting)
 uninstalling 28
 web browser, accessing 24
- MWTM process
 events, changing 24
- MWTM server (see server, MWTM)
- MWTM web interface
 additional information 17
 archived messages 6
 home page 12
 interface content 5
 logs
 command 10
 console 9
 event automation 11
 security 11
 web access 12
 web server error 12
 messages 3
 action 4
 error 4
 info 3
 MWTM client, downloading 15
 navigation tree 3
 software updates 17
 system
 clients 8
 information 17
 status 8
 versions 8
 technical documentation 17
- MWTM windows
 printing 24
-
- N**
- navigating
 table columns 23

navigation tree
 MWTM client 16
 MWTM web interface 3

navigational features 15

network
 topology 1
 views
 topology 1

network name mapping files, creating 16

network objects
 viewing a summary 17

node
 access 4
 archive
 management 31
 BWG tabs 2
 CSG tabs 3
 CSR tabs 4
 file
 management 24
 menu, management 25
 MWTM panel 28

files
 ITP panel 29
 GGSN tabs 5
 HA tabs 5
 ITP tabs 7
 naming information 15
 ONS tabs 9
 polling information 20
 RAN service module tabs 12
 status information 23
 uptime information 23

node and ONS card details window
 configuration data
 descriptive information 10

node details window
 configuration data
 IP addresses for SNMP 13

node name settings 5

nodes
 deleting
 from MWTM discovery database 58
 excluding from view 60
 managing 58
 polling 50
 SNMP IP addresses
 editing 38

trap
 processing 52
 unmanaging 58

window 3
 menus, right-click 4
 node table 8

nodes and files, seed
 loading 7

notes
 attaching 54
 event 23
 viewing 55

O

object details window
 configuration data
 naming 14
 object functions
 detailed
 understanding 1
 object map
 reference 1
 objectives
 document [xxxviii](#)

objects
 deleting 56
 from MWTM database 56
 from network 56
 ignoring and unignoring 60

online help, viewing 21
ONS nodes
protection information 21
operations
basic server performance 39
organization
document [xxxviii](#)
out-of-band management
FAQs 19
overview
discovery 5

P

passwords (see security)
peak
reports 74
percentages
FAQs 16
physical folder
tabs 20
point code
export files, inventory 248
inventory 48
reports 48
setting format 4
poller
settings 5
settings, changing 2
poller settings window 110
polling
FAQs 9
polling nodes 50
port numbers and parameters
configuring 5
ports
MWTM 1
preference settings
default, restoring 18

web, changing 18
preferences
menu 2
settings
CiscoWorks server 13
deploy 15
troubleshooting 6
printing
MWTM windows 24
products menu 22
properties, editing 49
provisioning
prerequisites 47
using 42
wizard
using 48

R

Radio Access Network Optimization (see RAN-O)
RAN
information 22
RAN backhaul
table 38
tabs 18
virtual
creating 143
RAN data export files
displaying 40
RAN shorthauls
viewing 142
RAN-O
backhaul
properties, editing 53
MIBS
specific 11
overview 8
traps 11
RAN-O only

threshold
 information 35

README file 27

real-time data
 ITP objects
 viewing 73

objects
 viewing 53

real-time poller
 settings
 changing 20

rebooting
 FAQs 5

recent events
 viewing 41

reference
 command 1
 object map 1

remote IP address

information 22

reports
 archived
 custom 238
 rolling 241
 AS accounting 210
 ASP accounting 210
 custom (see custom reports)
 directory 281
 generating 2
 GTT accounting 211
 GTT, daily 211
 IP addresses accounting 48
 link 67
 five day 77
 linkset 78
 log 275
 managing 1
 MLR 88
 aborts 89

continues 90
 processed 90
 subtriggers 92

MSU load 94
 MSU peaks 94
 MSU rates 93

MTP3 accounting 212
 MTP3 event 247
 MTP3 events
 hourly 247
 MTP3, daily 212
 point code 48
 point code, inventory 48, 210

system
 parameters 275
 timers 275
 system log 13
 viewing 3

reports properties
 viewing 17

reports, accounting
 viewing 210

requirements
 FAQs 3

restoring
 MWTM files 30

RMI
 how does it work 2

root user, becoming 2

route detail
 viewing 123

route table files 1
 deploying 12
 editing 5
 loading 11
 non-MWTM 14
 opening
 from archive 4
 from file 2

S

sample firewall

 configuration 9

saving

 address table files 18

 alarm filter 20

 event filter 20

 GTT files 38

 MWTM files 25

 route table files 12

 seed files 8

 topology 16

 view 5

security 1

 client access, limiting 29

 data, restoring 18

 logs, system 17

 message of the day 15

 overview 1

 passwords

 changing 13

 creating 7

 disabling, automatically 10

 disabling, manually 12

 re-enabling 13

 synchronizing 16

SSL 21

 enabling 21

 support, disabling 28

 support, managing 27

SSL certificates

 details 26

 downloading 23

 exporting 26

 importing 25

 tool 24

superuser 19

user levels 7

 (level 1) basic user 8

 (level 2) power user 8

 (level 3) network operator 9

 (level 4) network administrator 9

 (level 5) system administrator 9

user-based access

 disabling 18

 implementing 2

users

 changing 13

 disabling, automatically 10

 disabling, manually 12

 listing current 16

 re-enabling 13

seed files

 changing 11

 creating 10

 loading 8

 saving 8

 using a text editor 11

seed nodes, loading 7

semantics

 address table files 14

 GTT files 33

server

 setting up 1

server communication

 FAQs 21

server configuration, MWTM 13

server messages

 FAQs 4

server properties
viewing 15

server status information
viewing 40

server, MWTM
changing default name 26
connecting new 40
IOS server load balancing 16
removing data 32

sessions, MWTM, running simultaneous 39

setting
alarm filter 12
CiscoWorks server
changing 13

deploy
changing 15

event filter 12

settings
charts
changing 11

connection 6

event
changing 7

exit 3

general, displaying 4

GUI, changing 3

node name 5

poller 5

repaint 6

startup 3

status, changing 11

topology
changing 13

severity alarm 18

SGM
commands 1
FAQs (see FAQs)
status definitions (see status, definitions)

shorthaul table 40

signaling gateway mated pairs
table 31

signaling gateway-mated pair
tabs 16

signaling point
tabs 13

signaling point details window
configuration data
capability point code 9
point code 19

signaling points
window
signaling point information 18

single-instance ITPs, connecting 6

SNMP
settings
buttons 17
commands 17
configuring 15
table 15
trap, enabling 7

software versions
displaying 20

Solaris MWTM client, starting 3

sound files, adding 41

sound filters, event
creating new 39
deleting 42
listing for 38
setting 38

sound filters, events
changing 42

sounds
FAQs 8

SSL (see also security)

SSL certificate tool, launching 27

SSL, downloading module
from web server 23

starting MWTM

client 3
 server 1
 startup settings 3
 statistics
 archived reports
 daily 244
 hourly 244
 status
 FAQs 11
 settings, changing 11
 status contributors, viewing 36
 Summary lists 17
 summary lists 18, 20
 displaying 20
 superuser 19
 FAQs 11
 syncing
 FAQs 22
 syslog
 FAQs 11
 viewing 54
 system properties
 viewing 13

T

table
 application server process 28
 application server process associations 29
 application servers 25
 card 36
 interfaces 33
 linkset 20
 RAN backhaul 38
 RAN shorthaul 40
 signaling gateway mated pairs 31
 table columns
 navigating 23
 table file
 address
 loading 9
 tabs
 application server 15
 application server process 15
 application server process association 16
 BWG node 2
 card 18
 CSG node 3
 CSR node 4
 GGSN node 5
 HA node 5
 interface 17
 UMTS and GSM (RAN-O only) 18
 ITP node 7
 link 14
 linkset 14
 management interface folder 20
 ONS node 9
 physical folder 20
 RAN backhaul 18
 RAN service module node 12
 signaling gateway-mated pair 16
 signaling point 13
 technical documentation (see MWTM web interface)
 terminal
 enabling proxy 11
 text entry fields
 FAQs 5

TFTP

server (ITP only), setting up 11
 timing service
 FAQs 8
 topology maps
 FAQs 7
 topology
 centering 15
 color 20
 directories 17

- hiding 24
 - icons, locking 23
 - layouts, creating custom 14
 - magnetic grid 18, 19
 - map 8
 - map menu 13
 - menu 2
 - network 1
 - objects
 - aligning 22
 - details 16
 - finding 14
 - hiding 23
 - redrawing 24
 - printing 16
 - RAN-O 5
 - redrawing 24
 - restoring 25
 - saving 16, 24
 - settings
 - changing 13
 - toolbar buttons 3
 - viewing 1
 - views menu 13
-
- trap
 - event, forwarding 37
 - IP address, limiting by 8
 - nodes, processing 52
 - server, forwarding 38
 - settings
 - viewing 63
 - SNMP, enabling 7
 - trap forwarding properties
 - viewing 18
 - TRAP_RATE_ABATE_OFFSET 43
 - TRAP_RATE_LIMIT_COUNT 43, 44
 - traps
 - FAQs 15
 - supported, SGM 1
-
- troubleshooting 39
 - data 1
 - diagnosing ITP problems 5
 - diagnosing RAN-O problems 8
 - error messages 2
 - data model mediator service 2
 - demand poller manager service 2
 - events 5
 - IOS commands 4
 - locked up display 1
 - pane 6
 - server processes 3
 - web pages 3
-
- U**
 - uninstalling
 - FAQs 2
 - MWTM 28
 - unmanaging
 - ITP signaling points 58
 - nodes 58
 - user password
 - FAQs 11
 - user-based access (see security)
 - users (see security)
 - using
 - MWTM main menu 18
 - provisioning 42
 - Windows Start menu 26
-
- V**
 - view
 - basic information 2
 - client-specific 14
 - creating 7
 - creating (see view editor window)

custom 2
default
 loading 14
detailed information
 viewing 5
editing 5
including objects in 11
managing 1
right-click menu 3
saving 5
table 3
view editor window 7
 closing 13
 left pane 9
 menu 8
 objects, right-click menu 10
 views, right-click menu 10
viewing 39
accounting reports 210
alarms 41
details 7
error data 114
MLR
 details 129
MTP3
 event log 129
notes 55
online help 21
RAN shorthauls 142
recent events 41
reports 3
route detail 123
server properties 15
server status information 40
status contributors 36
syslog 54
system properties 13
topology 1
trap forward properties 18

troubleshooting 39
web configuration properties 15
viewing reports properties 17

W

web configuration properties
 viewing 15
web pages
 troubleshooting 3
web preference, settings
 changing 1
web server
 downloading SSL module 23
Windows
 FAQs 11
Windows Start menu
 changing default
 MWTM server name 26
 launching
 DOS prompt 27
 MWTM client 27
 MWTM event editor 27
 MWTM README file 27
 SSL Certificate Tool 27
 uninstalling MWTM 28
 using 26

Y

yellow nodes
 FAQs 23