



INDEX

A

- activate, monitor component [3-7](#)
- administrative tasks [4-2](#)
 - diagnostics [4-4](#)
 - system parameters, set [4-2](#)
- altitude
 - guidelines [4-11](#)
- Application ID, field details [B-6](#)
- audit trail
 - user activities logged [4-4](#)
- audit trail, viewing data [4-2](#)

B

- backing up NGA configuration [5-1](#)
- booting recovery CD [6-1](#)
- Boot loader [6-1](#)

C

- CLI
 - comparison to GUI features [1-3](#)
 - when to use [1-3](#)
- collectors
 - configuring [3-4](#)
 - field descriptions in UI [B-4](#)
 - troubleshooting [A-2](#)
- config restore command [5-1](#)
- config upload command [5-1](#)
- configuration
 - advanced setup [3-1](#)
 - collectors [3-4](#)

- exporters [3-5](#)
- filters [3-3](#)
- manage devices [2-4](#)
- monitors [3-6](#)
- multiple components [3-1](#)
- overview [1-3](#)
- quick setup [2-5](#)
- record [3-4](#)
- traffic sources [2-4](#)
- configuration records [3-4](#)
- corrosion
 - preventing damage [4-9](#)

D

- diagnostics
 - audit trail [4-2](#)
 - tech support [4-2](#)
- dust
 - preventing damage [4-11](#)

E

- electromagnetic interference
 - See* EMI
- electrostatic discharge
 - See* ESD
- EMI
 - preventing effects of [4-11](#)
- environment
 - maintaining [4-8](#)
- ESD
 - preventing damage [4-11](#)

preventing effects of [4-11](#)

exporters

configuring [3-5](#)

field descriptions in UI [B-5](#)

F

features [1-2](#)

filtering

audit trail [4-4](#)

filters

configuring [3-3](#)

field descriptions in UI [B-2](#)

Flow Record Match and Collect fields [B-1](#)

G

getting started

advanced setup GUI [3-1](#)

configure multiple components [3-1](#)

overview [2-2](#)

quick setup GUI [2-5](#)

single group of components [2-5](#)

GNU GRUB [6-1](#)

guidelines

temperature maintenance [4-10](#)

H

hard drives, replacing [4-6](#)

help

(see also troubleshooting) [A-1](#)

helper utility [6-1](#)

how it works [3-6](#)

configure using quick setup [2-5](#)

humidity

maintenance guidelines [4-11](#)

I

inactivate, monitor component [3-7](#)

L

LEDs

front panel and NIC [A-4](#)

logging in [2-3](#)

M

magnetism

preventing effects of [4-12](#)

maintenance [4-8](#)

hard drives [4-6](#)

power supplies [4-7](#)

required equipment [4-5](#)

solid state drives [4-6](#)

temperature [4-10](#)

managed devices

configuring [2-4](#)

data port [2-5](#)

See also compatibility matrix [2-4](#)

match and collect field descriptions [B-1](#)

monitors

activating [3-7](#)

configuring [3-6](#)

field descriptions in UI [B-5](#)

inactivating [3-7](#)

troubleshooting [A-1](#)

N

network parameters, accessing data [4-2](#)

O

order of configuration using advanced setup [3-6](#)
 overview
 configuring NetFlow Generation [1-3](#)
 what to do first [2-2](#)

P

ping
 troubleshooting [A-2](#)
 power
 power supply redundancy [4-7](#)
 power source interruptions
 preventing damage from [4-12](#)
 power supplies, replacing [4-7](#)

Q

Quick Setup
 using [2-5](#)

R

radio frequency interference. *See* RFI
 records
 configuring [3-4](#)
 field descriptions in UI [B-3](#)
 recovery CD, using [6-1](#)
 reinstalling NGA image [6-1](#)
 required equipment
 maintenance [4-5](#)
 resource info, viewing [4-2](#)
 restoring, NGA configuration (see Command Reference) [5-1](#)
 RFI
 preventing effects of [4-11](#)

S

site
 environment
 maintenance factors [4-8](#)
 SNMP agent data
 accessing [4-2](#)
 configuring [4-3](#)
 software field descriptions, tables [B-1](#)
 collectors [B-4](#)
 Configure Filter [B-2](#)
 configure records [B-3](#)
 Flow Record Match and Collect [B-1](#)
 software upgrade [5-1](#)
 solid state drives, replacing [4-6](#)
 SPAN session requirement [2-4](#)
 system admin
 network parameters, accessing data [4-2](#)
 resource info [4-2](#)
 SNMP agent data [4-2](#)
 system time, setting [4-2](#)
 system time, setting [4-2](#)

T

TAC (Technical Assistance Center)
 (see also troubleshooting) [A-1](#)
 technical assistance, obtaining
 (see also troubleshooting) [A-1](#)
 tech support
 viewing [4-4](#)
 tech support, accessing data [4-2](#)
 temperature
 maintenance guidelines [4-10](#)
 troubleshooting [A-1](#)
 cables [A-4](#)
 front-panel and NIC LEDs [A-4](#)

U

UDP port

troubleshooting [A-2](#)

upgrade software [5-1](#)

user interface

comparison to CLI features [1-3](#)

V

verifying

flow record generation [4-1](#)

packets coming into NetFlow Generation [2-7](#)

viewing

audit trail [4-4](#)

tech support [4-4](#)