



Preface

After performing the initial Prime Collaboration server setup, see this guide to perform the following tasks:

- Add the device credentials details to manage the devices using Prime Collaboration.
- Discover the devices, using various discovery methods, based on the device that you want to manage.
- Define the polling parameters to keep the inventory database up-to-date.
- Monitor the inventory.

This guide is one of multiple short guides for Cisco Prime Collaboration 9.0. To perform other Prime Collaboration tasks, such as user management, device management, voice provisioning, network monitoring, and fault management, see [Cisco Prime Collaboration 9.0 Documentation Overview](#) for a list of all available documents.

Audience

This guide is for voice and video engineers who are responsible for the configuration, provisioning, inventory, and maintenance of infrastructure-based, real-time collaboration services such as video (TelePresence) and telephony (VoIP), including endpoints, management servers, and service-specific network devices.

Prime Collaboration is deployed on a virtual server. The user must be familiar with virtual server configuration and with UNIX commands using the CLI.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.

