

A

AAA server adding 3-25 changing information 3-26 deleting 3-27 testing connection 3-27 about batch projects 6-14 business rules 11-2 Cisco IOS Routers 3-27 configuration templates 5-1 infrastructure configuration 5-49 infrastructure configuration scheduling 5-55 licensing 2-2 provisioning attributes 11-15 service areas 4-16 accessing subscriber record 10-2 ACS servers 3-24 adding Cisco IOS Router 3-4 **Cisco Unified Communications Manager Business** Edition 3-4 Cisco Unified Communications Manager Express 3-4 Cisco Unity Connection 3-4 Cisco Unity Express 3-4 devices 3-1, 3-4 infrastructure configuration instance 5-50 administration authorization role 8-14 advanced assignment authorization role 8-15 ordering authorization role 8-15 approval authorization role 8-15

ΙΝΟΕΧ

assets, tracking. *See* inventory assignment authorization role **8-16** AssignSoftPhoneName **11-2** AssociateAllUsersInCallProcessor **11-2** AssociateAllUsersInUMProcessor **11-3** AssociateOnlyExistingUsers **11-3** AssociateUsersByDeptCode **11-3** AssociateUsersByDevicePool **11-3** AssociateUsersByDevicePool **11-3** AssociateUsersByLocation **11-4** authorization roles applying to subscriber **8-5** tasks permitted by **8-14**

В

backing up database 12-1 batch action file adding orders 6-1 users 6-1 format 6-1 guidelines 6-9 product dependencies 6-9 multiple instances 6-9 sample files on server 6-1 batch project about 6-14 creating 6-13 deleting 6-14 keyword usage 6-11 provisioning attribute precedence 6-11 running 6-15

canceling 6-15 paused, restarting 6-15 pausing 6-15 status, viewing 6-17 scheduling 6-15 canceling 6-16 rescheduling 6-15 scheduled pause, adding 6-16 scheduled pause, canceling 6-16 updating 6-14 viewing details 6-17 business rules about 11-2 configuring 11-13 mandatory 11-11 orders 11-13 products 11-12 descriptions 11-2 for domain synchronization 4-7 using 11-11 busy trigger attributes, default values A-1

С

call park 5-5 pickup group 5-5 search space 5-6 call processor configuring Cisco Unified Communications Manager 3-7 configuring Cisco Unified Communications Manager Express 3-8, 3-21 definition 3-6 deleting 3-12 directory number block for 4-24 infrastructure data, examples 3-9 provisioning attributes supported by product 11-51, 11-68

subscriber data, examples 3-9 synchronization troubleshooting 3-12 synchronizing 3-9 updating 3-8, 3-21 call processor passwords understanding 8-5 canceling batch project 6-15 orders 10-37 products 10-37 ChangeUnityPasswordOnNextLogin 11-4 changing IP address on Provisioning Manager system 2-9 changing phone settings 10-25 changing voicemail 10-31 Cisco IOS commands and configuration templates 5-1 **Cisco IOS Router** adding 3-4 **Cisco IOS Routers** about 3-27 **Cisco Unified Communications** deployment, initial 1-1, 1-13 deployment, ongoing 1-13 Cisco Unified Communications Manager adding 3-1 call processor 3-6 configuration template 5-1 dependencies 5-36 infrastructure data objects supported by release 5-1 objects synchronized 3-11 PIN 8-4 setting throttling 3-13 subscriber password 8-4 Cisco Unified Communications Manager call processor configuring 3-7 Cisco Unified Communications Manager Express adding 3-4 call processor 3-6

configuration template 5-1 Cisco IOS commands in 5-1 dependencies 5-36 Cisco Unified Communications Manager Express call processor configuring 3-8, 3-21 Cisco Unified Operations Manager configuring to open from Provisioning Manager 2-12 launching from Provisioning Manager 2-12 Cisco Unity products and services 10-11 subscriber password 8-4 Cisco Unity Connection adding 3-4 Cisco Unity Connection, products and services 10-11 Cisco Unity Connection unified message processor configuring 3-15 Cisco Unity Express adding 3-4 configuration template 5-1 Cisco IOS commands in 5-1 dependencies 5-36 products and services 10-11 Cisco Unity Express unified message processor configuring 3-16 Cisco Unity unified message processor configuring 3-15 common device config **5-6** common shared line 10-19 complex attributes configuring 5-51 complex attributes, working with 5-50 configuration, generating from a template 5-45 configuration templates about 5-1 Cisco IOS commands in 5-1 configuring adding items to 5-36 copying 5-45

deleting 5-45 renaming 5-44 updating 5-42 creating 5-36 exporting 5-47 generating configuration from 5-45 importing 5-47 keywords 5-40 usage scenarios 5-1 configuring AAA servers 3-24 ACS 3-24 business rules 11-13 business rules for Domain synchronization 11-14 call processors 3-6 domain notification 10-40 domain notification template 10-39 domains 4-3 domain synchronization 11-12 LDAP 3-24 message processors 3-6 orders 11-13 phone, shared 10-21 products 11-12 provisioning attributes 11-15 service areas 4-18 shared lines, primary 10-20 system notifications 10-41 to open Cisco Unified Operations Manager IP phone details 2-12 transformation template for provisioning attributes 11-69 unified message processors 3-14 user access 11-12 contractor subscriber role 8-9 copying configuration templates 5-45 items 5-44 CreateSelfCareAccounts 11-4

creating

directory number blocks 4-22 domains 4-2 Generic IOS Router 3-4 pseudo subscriber 8-10 service areas 4-17 subscriber 8-1 subscriber role type 8-10 users 8-14 CTI route point 5-4 customer domain template 4-2

D

database backup and restore 12-1 debugging, enabling and disabling 2-4 DefaultCallManagerPassword 11-4 DefaultCallManagerPIN 11-4 DefaultCUPMPassword 11-5 DefaultDeviceProfile 11-5 DefaultUnitySubscriberPassword 11-5 DefaultUserType 11-5, 11-6 Defaultusertype business rule 8-2 default values for busy trigger attributes A-1 default values for maximum calls A-1 deleting call processors 3-12 configuration templates 5-45 domains 4-16 infrastructure configuration instance 5-54 items 5-44 keyword list 5-42 subscriber 8-7 subscriber role type 8-12 unified message processors 3-18 user 8-17 deployment voice infrastructure, adding a site 1-13 voice infrastructure, initial 1-13

DescriptionString 11-6 device pool 5-8 devices adding 3-4 deleting 3-5 updating information 3-5 viewing information 3-5 directory inventory, managing 7-4 See also directory numbers directory number blocks adding 4-22 viewing for call processor 4-24 for service area 4-24 directory number inventory report 7-17 directory numbers adding 7-5, 7-6 deleting 7-7 reservations, expired 7-7 states 7-4 updating 7-6 DNAutoReservation 11-6 DNAutoReservationTimeout 11-7 DNB (Directory Number Blocks) 7-5 domain business rules for, synchronizing 4-7 configuring 4-3 creating 4-2 deleting 4-16 notification 10-40 provisioning attributes 4-11, 11-15 synchronization log, viewing 4-9 synchronization log messages 4-9 synchronizing 4-3 synchronizing with a LDAP server 4-12 template 4-2 domain notification template 10-39

Е

editing infrastructure configuration instance 5-53 EmailSender 11-7 employee subscriber role 8-9 executive subscriber role 8-9 exporting configuration templates 5-49 phones without associated users 4-16 extension mobility access changing 10-29 extension mobility line provisioning attributes assignment levels 11-38 call processor support 11-51, 11-68 ExternalNumberMasks 11-7

G

generating configuration 5-45 Generic IOS Router changing information 3-23 deleting 3-23 testing connection 3-23 viewing 3-23

Η

H323 gateway **5-8** hunt list **5-10** hunt pilot **5-10**

I

importing configuration templates **5-48** infrastructure configuration

about 5-49 adding an instance 5-50 changing the order of items 5-52 complex attributes, using 5-50 deleting 5-54 deleting scheduled tasks 5-56 editing an instance 5-53 purging scheduled tasks 5-57 scheduling 5-55 scheduling tasks 5-55 selecting items 5-52 infrastructure configuration scheduling about **5-55** viewing tasks 5-55 infrastructure data objects by Cisco Unified Communications Manager release number 5-1 call park 5-5 pickup group 5-5 search space 5-6 common device config 5-6 CTI route point 5-4 device pool 5-8 H323 gateway 5-8 hunt list 5-10 pilot **5-10** line group 5-12 location 5-13 media resource group 5-13 group list 5-13 route group 5-14 list **5-14** partition 5-15 pattern 5-15 SIP trunk 5-17, 5-31

translation pattern 5-34 Unified CM group 5-31, 5-34 voice region 5-35 voicemail pilot 5-35 profile 5-35 infrastructure provisioning states 5-57 interfaces Provisioning Manager 1-2 inventory directory numbers 7-4 phones 7-1 report 7-4 searches advanced 7-10 basic 7-9 IOS commands. See Cisco IOS commands. **IP** address changing on Provisioning Manager database 2-10 changing on Provisioning Manager server 2-9 changing on Provisioning Manager system 2-9 IP phone details opening dialog box 2-12 IsAuthorizationRequiredForAddOrder 11-7 IsAuthorizationRequiredForCancelOrder 11-7 IsAuthorizationRequiredForChangeOrder 11-8 items copying 5-44 deleting 5-44 editing 5-43 order of, changing 5-43 See also infrastructure data objects 5-43

K

keywords

about 5-40

adding to a configuration template **5-40**

Cisco Prime Collaboration 9.0 Provisioning Guide

deleting **5-42** editing **5-41** figure **5-41** format of **5-40** list, deleting **5-42** keyword substitution. *See* keywords

L

language setting 1-15 launching Cisco Unified Operations Manager IP phone details 2-12 LDAP directory integration 3-7 LDAP servers 3-24 configuring synchronization 4-14 scheduling synchronization 4-14 synchronization report description 4-15 synchronizing with 4-12 viewing synchronization report 4-15 license information, viewing 2-2 licensing about 2-2 new 2-2 obtaining a license file 2-3 obtaining a PAK 2-3 Provisioning Manager NBI 2-3 registering with Provisioning Manager 2-3 upgrade 2-3 line end-user association 10-16 information, changing 10-28 LineDisplayString 11-8 line group 5-12 lines common shared, setting up 10-19 primary shared, setting up 10-20 lists adding items 5-43

reordering 5-43 See also infrastructure data objects localizing 1-15 location 5-13 log file 2-4 debugging 2-4 log purging level, changing 2-6 maximum size, changing 2-6 naming 2-4 logging into Provisioning Manager 1-14 logging out of Provisioning Manager 1-14 log level, updating 2-5

Μ

MailHost 11-8 maintenance authorization role 8-15 maintenance mode 2-8 manager subscriber role 8-9 Managing Licenses 2-2 maximum calls, default values A-1 media resource group 5-13 group list 5-13 MonitorPhoneReturnEnabled 11-8 moving subscribers 8-7 moving subscriber services 8-8

Ν

NameDialingInfo 11-8 Non-RestrictedDomainSync 11-9 notification testing 10-42 notifications 3-13 email 3-13 system 10-41

0

opening the Cisco Unified Operations Manager IP phone details dialog box 2-12 operator subscriber role 8-9 order adding, in batch action file 6-1 approving 10-35 bulk services 10-34 canceling 10-37 configuring business rules for 11-13 procedure, example 10-11 processing 10-34 approval 10-35 receiving 10-36 shipping 10-36 searching for 10-33 viewing 10-1 order entry fields 10-12 ordering adding notes 10-3 phones without an associated subscriber 10-22, 10-23 shared lines 10-18 shared phones 10-18 ordering authorization role 8-15 OrderProvisionedEmailTemplate 11-9 OrderRejectedEmailTemplate 11-9

Ρ

password subscriber, resetting 8-4 Cisco Unified Communications Manager 8-4 Cisco Unity 8-4 Provisioning Manager login 8-4 user, resetting 8-17 pattern

Cisco Prime Collaboration 9.0 Provisioning Guide

5-15 route translation 5-34 pausing batch project 6-15 phone activating 10-4 changing settings 10-25 managing phones without an associated subscriber 10-22 ordering without an associated subscriber 10-22, 10-23 ownership, changing 10-26 provisioning attributes assignment levels 11-38 call processor support 11-51, 11-68 replacing 10-24 settings, changing 10-25 setting up 10-21 shared 10-21 PhoneAssignmentDoneBy 11-9 phone button template default for phone type 11-1 maximum lines, viewing 11-1 synchronization, retrieval during 11-1 phone inventory adding phones to 7-2 clearing expired reservations 7-3 phone information, updating 7-2, 7-3 removing phones from 7-4 report, viewing 7-4 phone inventory report 7-4 phone line provisioning attributes assignment levels 11-38 call processor support 11-51, 11-68 PhoneReceiptDoneBy 11-10 PhoneReservationTimeout 11-10 PhoneShippingDoneBy 11-10 phones without an associated subscriber 10-23 ordering 10-22, 10-23 phones without associated users

exporting 4-16 phone type, default phone button template for 11-1 policy authorization role 8-15 precedence provisioning attribute 11-70 primary shared line 10-20 processes, running on the system 2-11 processors, configuring 3-6 product business rules, configuring 11-12 provisioning attributes 11-16 products adding notes 10-3 viewing inventory 10-2 viewing provisioning attributes 10-2 products and services 10-4 canceling 10-37 Cisco Unity 10-11 Cisco Unity Connection 10-11 Cisco Unity Express 10-11 ordering 10-4 Provisioning Manager 10-5 provisioning attribute precedence, changing 11-70 provisioning attribute precedence batch project 6-11 provisioning attributes about 11-15 configuring transformation template for 11-69 descriptions 11-16 editing domain 4-11 service area 4-21 subscriber role type 8-12 levels domain 11-15 service area 11-15 subscriber type 11-15 precedence 11-15

Provisioning Manager changing IP address 2-9 interfaces 1-2 products and services 10-5 subscriber login 8-4 Provisioning Manager interfaces 1-2 provisioning states infrastructure 5-57 pseudo subscriber role using 8-10 PseudoUserID 11-10 PurgeUponUmRemoval 11-11 purging data, enabling 2-7

R

receiving authorization role 8-16 Registering a License File with Provisioning 2-3 renaming configuration templates 5-44 replacing phones 10-24 reports directory number inventory 7-17 phone inventory 7-4 resource configuration 7-17 service area 7-17 service configuration 7-17 rescheduling batch project 6-15 reservation, phone expired 7-3 status 7-2 resetting passwords subscriber 8-4 user 8-17 resource configuration report 7-17 restarting batch project 6-15 restore database 12-1 roles subscriber 8-9 route

group 5-14 list 5-14 partition 5-15 pattern 5-15 rules *See* business rules running batch project 6-15

S

scheduling batch project 6-15 synchronization 2-11 searching inventory 2-11 search reports creating 7-15 deleting 7-17 security Internet Explorer and Provisioning Manager 1-14 Windows 2003 and Provisioning Manager 1-14 senior manager subscriber role 8-9 service area adding 4-17 configuring 4-18 definition 4-16 deleting 4-21 directory number block for 4-24 provisioning attributes, configuring 4-21, 11-15 report 7-17 service configuration report 7-17 services moving 8-7 shared 10-21 line, setting up primary 10-20 phone, setting up 10-21 shared line setting up common 10-19 shared lines

Cisco Prime Collaboration 9.0 Provisioning Guide

ordering 10-18 shared phones ordering 10-18 shipping authorization role 8-16 sip profile infrastructure 5-31 SIP trunk 5-17, 5-31 infrastructure 5-17 starting Provisioning Manager from a client system 1-14 Provisioning Manager from the server 1-14 subscriber authorization roles, applying 8-5 creating 8-1 definition 8-1 deleting 8-7 moving 8-7 records finding 8-9, 8-22 synchronizing 3-9 viewing 10-1 synchronizing 8-6 updating 8-2 See also subscriber role type subscriber record accessing 10-2 subscriber role type adding 8-10 deleting 8-12 precedence 8-11 products associated with 8-11 provisioning attributes for 8-12, 11-15 updating 8-11 subscriber services moving 8-7 synchronization, scheduling 2-11 synchronization log messages domain 4-9 LDAP synchronization 4-15

synchronizing call processors 3-9 domains 4-3 log file for 4-9 purpose 4-3 objects synchronized 3-11 recommended order 3-9, 3-17, 4-3 subscriber 8-6 troubleshooting 3-12 unified message processor log file for 3-18 unified message processors 3-17 users 8-21 system reports 7-17

Т

TakePrimaryUserInfoFromUMProcessor 11-11 templates configuration 5-1 customer domain 4-2 phone button 11-1 testing notification settings 10-42 testing connection Generic IOS Router 3-23 throttling setting for Cisco Unified Communications Manager 3-13 tracking assets. See inventory transformation template for provisioning attributes configuring 11-69 translation pattern 5-34 troubleshooting synchronization call processors 3-12 trunk SIP 5-31

U

Unified CM group 5-34 unified message processor configuring Cisco Unity 3-15 configuring Cisco Unity Connection 3-15 configuring Cisco Unity Express 3-16 synchronization log, viewing 3-18 unified message processors definition 3-6 deleting 3-18 synchronizing 3-17 updating 3-16 Unified Messaging provisioning attributes assignment levels 11-38 call processor support 11-51, 11-68 unlocking voicemail accounts 10-32 updating call processor 3-8, 3-21 configuration template 5-42 directory numbers 7-6 items 5-43 subscriber 8-2 subscriber role type 8-11 unified message processor 3-16 user 8-16 usage scenarios 1-12 configuration templates 5-1 deployment additional site 1-13 initial 1-13 subscriber services, managing 1-13 voice services, enabling others to manage 1-12 users access configuring 11-12 example 10-11 adding, in batch action file 6-1

creating 8-14 synchronizing 8-21 using pseudo subscriber role 8-10

V

viewing license information 2-2 viewing provisioning attributes 10-2 voicemail changing 10-31 pilot 5-35 profile 5-35 provisioning attributes assignment levels 11-38 call processor support 11-51, 11-68 unlocking accounts 10-32 voice region 5-35 voice services, managing 1-12

W

What Is Provisioning 1-1 work order states 10-38

Index