



INDEX

Numerics

6PE, 6VPE [A-2](#)

6RD [A-2](#)

A

Access List [A-2](#)

activations. See workflows and activations

Administration GUI client

- installing [1-1](#)

- launching [1-1](#)

- login banner [11-12](#)

- overview [1-1](#)

- setup tasks [1-3](#)

Administrator (user access role) [7-3](#)

Advanced Overload Prevention

- changing default behavior [8-24](#)

- configuring Global Event Filter [8-24](#)

- display current status [8-24](#)

- overview [8-23](#)

Agent Not Loaded (VNE communication state) [4-6, 4-8, 4-43](#)

Agent Unreachable (VNE communication state) [4-6, 4-43](#)

alarms [8-5, 8-8](#)

All Managed Elements (device scope) [6-2](#)

ANAHOME [2-1, 3-4](#)

analyze (integrity test) [8-7](#)

AOP. See Advanced Overload Prevention

APN [A-2](#)

ARP [A-3](#)

ATM [A-2](#)

ATM PW [A-2](#)

auto-archiving (tickets). See tickets

Auto Detect (VNE type) [D-3](#)

autodiscovery (Network Discovery) [4-19](#)

AVM 0 [3-9, 3-28](#)

- impact of failure [5-6](#)

- log file [B-3](#)

AVM 100 [3-10, 3-23](#)

- and changing gateway server IP [3-22](#)

- impact of failure [5-7](#)

- log file [B-3](#)

- unit redundancy and [5-3](#)

AVM 11 [3-9](#)

- impact of failure [5-6](#)

- log file [B-3](#)

- timeouts and restarts [5-4](#)

AVM 19 [3-9](#)

AVM 25 [3-9](#)

- database connectivity and [1-6, 9-5, 9-15](#)

- event flow and [9-4](#)

- impact of failure [5-6](#)

- log file [B-3](#)

- overview [9-5](#)

AVM 35 [3-9](#)

- impact of failure [5-6](#)

- log file [B-3](#)

AVM 66 [3-9](#)

- activations and [10-1](#)

- impact of failure [5-6](#)

- log file [B-3](#)

- workflows and [10-1](#)

- AVM 76 [3-9](#)
 - impact of failure [5-6](#)
 - jobs and [3-9](#)
 - log file [B-3](#)
- AVM 77 [3-10](#)
 - Change and Configuration Management and [3-10](#)
 - impact of failure [5-7](#)
 - log file [B-3](#)
- AVM 78 [3-10](#)
 - impact of failure [5-7](#)
 - log file [B-3](#)
- AVM 83 [3-10](#)
 - impact of failure [5-7](#)
 - log file [B-3](#)
- AVM 84 [3-10](#)
 - impact of failure [5-7](#)
 - log file [B-3](#)
- AVM 99 [3-10, 3-28](#)
 - impact of failure [5-7](#)
 - log file [B-3](#)
 - timeouts and restarts [5-4](#)
- AVM process protection
 - changing default settings [5-10](#)
 - check setting [3-12](#)
 - events [5-11](#)
 - failure (AVM) impact [5-5](#)
 - overview [5-1](#)
 - restarts [5-4, 5-10](#)
 - timeouts [5-4, 5-10](#)
 - watchdog protocol [5-1](#)
- AVMs [3-2](#)
 - adding [3-9, 3-28, 3-30](#)
 - communication problems [4-39](#)
 - defaults for load balancing warnings [1-5](#)
 - defaults for user-created AVMs [1-7](#)
 - failures [4-41](#)
 - installed on gateway [3-9](#)
 - installed on units [3-9](#)
 - log files [B-3](#)
 - moving [3-33](#)
 - Prime Network architecture and [3-2](#)
 - properties [3-8](#)
 - redundancy. See AVM process protection
 - starting and stopping [3-33](#)
 - user-defined. See AVMs, user-defined
- AVMs, user-defined
 - default memory size [3-32](#)
 - diagnostics [3-34](#)
 - impact of failure [5-7](#)
 - load balancing and [3-32](#)
 - numbering [3-28](#)
 - restarts and [3-18](#)
 - See also AVMs

B

- backup (integrity test) [8-7](#)
- backup and restore
 - backup schedule overview [1-5](#)
 - embedded database. See database, embedded
 - Prime Network (gateway) data
 - changing backup schedule [2-15](#)
 - default backup location [2-11](#)
 - manual backup [2-13, 2-16](#)
 - manual restore [2-13, 2-16](#)
 - purging [1-4, 8-15](#)
- Backup Pseudowire [A-2](#)
- banner, login [1-9](#)
- BFD [A-2](#)
- BGP [A-2](#)
- BNG [A-2](#)
- bos users, passwords [11-8](#)
- BQL, communication with gateway [11-3](#)
- businessObject (integrity test) [8-7](#)

C

CDP [A-2](#)
 CEM Group [A-2](#)
 CFM [A-3](#)
 CGN [A-3](#)
 Change and Configuration Management

- AVM 77 and [3-10](#)
- AVM 83 and [3-10](#)
- database schema [8-3](#)
- data purging defaults [1-4](#)
- log files [B-3, B-4](#)

 checkDbClock (integrity test) [8-7](#)
 Cisco Carrier Packet Transport VNEs [A-13](#)
 Cisco CatOS VNEs [A-7, A-17, A-18, A-20](#)
 Cisco documentation, obtaining [xv](#)
 Cisco IOS VNEs [A-7, A-17, A-18, A-20](#)
 Cisco IOS XE VNEs [A-7, A-17, A-18, A-20](#)
 Cisco IOS XR VNEs [A-8, A-17, A-18, A-20](#)
 Cisco Nexus VNEs [A-12, A-16](#)
 Cisco Unified Computing Systems VNEs [A-14](#)
 clearing events and tickets, defined [8-5](#)
 clients

- communication with gateway [11-3](#)
- gateway sessions, maximum [1-5](#)

 Clocking Enhancements [A-3](#)
 Cloud (VNE type) [D-3](#)
 command scripts

- activations and [10-1](#)
- banner, adding [10-6](#)
- credential requirements [1-8, 7-6, 10-6](#)
- events [10-7](#)
- message, adding [10-6](#)
- overview [10-1](#)
- workflows and [10-1](#)

communication security

- database [11-4](#)
- devices [11-5](#)
 - SNMPv3 [11-6](#)
 - SSHv1 and SSHv2 [11-6](#)
- gateway to unit [11-3](#)
- registry [11-7](#)

 Configurator (user access role) [7-3](#)
 Connecting (VNE communication state) [4-7, 4-43](#)
 conventions, in this guide [xiv](#)
 CPT. See Cisco Carrier Packet Transport devices
 CSC (Carrier Supporting Carrier) [A-2](#)
 Currently Unsynchronized (VNE investigation state) [4-8, 4-56, 4-60](#)

D

database

- archiving vs. purging [8-5](#)
- communication, encrypted [11-4](#)
- data purging [8-4, 8-6, 8-8](#)
- embedded. See database, embedded
- Event Archive [8-2](#)
- external [1-5, 8-1](#)
- Fault Database [8-2, 8-3](#)
- integrity tests [8-7](#)
- passwords [11-9](#)
- reports [8-2](#)
- schemas [8-1](#)
- tables [8-2](#)
- tickets. See tickets
- units with no connection [9-15](#)
- workflows and activations [8-3](#)

 database, embedded

- backup schedule [1-5](#)
- backups saved [1-4](#)
- datafiles, adding [8-20](#)
- disk usage [8-16](#)
- emdbctl utility [8-18](#)

database, embedded (continued)

- enable backups [8-18](#)
- events and errors [8-16](#)
- log file [B-4](#)
- overview [8-1, 8-15](#)
- purging defaults [8-4](#)
- stop and start [8-18](#)
- tablespace, adding [8-20](#)
- tablespace usage [8-16](#)
- See also database

data purging

- default settings [1-4](#)
- setup tasks [1-4](#)

Default (VNE scheme) [4-3, A-2](#)Defined Not Started (VNE investigation state) [4-8, 4-56](#)

device configuration files

- database schema [8-3](#)
- purging [8-4, 8-13](#)
- See also Change and Configuration Management

device discovery

- devices, adding. See VNEs, creating
- overview [4-3](#)
- poll now [4-9](#)
- status. See VNE investigation states
- VNE schemes [4-11, D-3](#)
 - choosing a scheme [A-2](#)
 - customizing [4-11](#)
 - overview [4-3](#)

device modeling. See VNE investigation states

Device Packages, VNE. See VNE Device Packages

Device Partially Reachable (VNE communication state) [4-7](#)

- mechanism for determining [12-24](#)
- troubleshooting [4-39, 4-43](#)
- See also device reachability

device reachability [4-42](#)

- events [4-39](#)
- management communication policies and [4-39](#)
- mechanism for determining [4-39](#)

troubleshooting [4-39](#)

See also VNE communication states

Device Reachable (VNE communication state) [4-7, 4-43, 12-24](#)

devices

- adding. See VNEs, creating
- device proxy (firewall) [3-23](#)
- firewalls and [3-23](#)
- security. See communication security
- unmanaged, and Event Notification Service [9-16](#)
- vs. VNEs [4-1](#)

device scopes

- adding and deleting devices [6-5](#)
- adjusting [7-12](#)
- All Managed Elements [6-2](#)
- creating [1-9, 6-3](#)
- deleting [6-6](#)
- links and [6-4](#)
- overview [6-1](#)
- security levels [6-1, 7-10](#)
- user access roles and [6-1, 6-3, 7-3](#)

device software image files

- database schema [8-3](#)
- purging [8-4, 8-13](#)
- See also Change and Configuration Management

device support [A-5](#)Device Unreachable (VNE communication state) [4-7, 4-44, 12-24](#)

diagnostics (graphs) tool

- data purging defaults [1-4, 8-4, 8-15](#)
- overview [3-36](#)
- passwords [3-39, 11-12](#)
- starting [3-39](#)

Disconnected

- AVM stats [3-11](#)
- VNE status [3-13, 4-5](#)

Discovering (VNE investigation state) [4-8, 4-56](#)

document

- contents [xii](#)
- conventions [xiv](#)
- organization [xii](#)

documentation, obtaining [xv](#)

Down

- AVM status [3-11](#)
- VNE status [3-13, 4-5](#)

DSx [A-3](#)duplicate IP addresses (VNEs) [4-35](#)

EEFP [A-3](#)EGPTC [A-3](#)

embedded database. See database, embedded

emdbctl utility [8-18](#)emergency user (external authentication) [7-2, 7-5, 7-14](#)EMS (VNE scheme) [4-3, A-2](#)

encryption

- between AVMs [11-3](#)
- between gateway and clients [11-3](#)
- between unit and gateway [11-3](#)
- database connections [11-4](#)

ensure-management (VNE management communication) [12-25](#)Ethernet (technology) [A-3](#)Ethernet Channel [A-3](#)Ethernet LMI [A-3](#)Ethernet OAM [A-3](#)

Event Archive

- AVM 25 and [3-9](#)
- database schema [8-2](#)
- disable/enable saving raw events [8-12](#)
- overview [8-2](#)
- purging [8-4, 8-8](#)
- See also AVM 100

Event Collector

- and traps and syslogs [4-48](#)
- AVM 100 and [3-10](#)
- configuring [9-6](#)
- database and [1-6, 8-2, 8-12](#)
- default location [1-6, 9-3](#)
- device event forwarding and [1-6](#)
- enabling on gateway or unit [9-11](#)
- filtering out raw events [9-3](#)
- firewalls and [3-23, 11-5](#)
- moving to a different unit [3-17](#)
- multiple, configuring [9-12](#)
- on gateway server(s) [9-7, 9-10](#)
- on unit server [9-8, 9-9](#)
- overview [9-1, 9-3, 9-5](#)
- unit redundancy (switchovers) and [9-3](#)
- VNEs and [9-4, 9-15](#)
- See also AVM 100

Event Notification Service [9-16](#)

events

- archiving vs. purging [8-5](#)
- clearing [8-5](#)
- Event Notification Service [9-16](#)
- filter, global event filter (AOP) [8-24](#)
- from embedded database [8-16](#)
- purging [8-8](#)
- raw, disabling/enabling saving (Event Archive) [8-12](#)
- system integrity [8-26](#)

external database. See database

external user authentication. See user authentication

FFault Agent [3-9](#)

Fault Database

- archiving [8-4, 8-8](#)
- database schema [8-2](#)
- overview [8-2](#)

Fault Database (continued)

purging [8-4, 8-8](#)

See also AVM 25

firewalls [3-23](#)

device proxy, configuring [3-24](#)

gateways and [11-5](#)

managed devices behind [3-24](#)

servers and units behind [3-23](#)

units and [11-5](#)

Frame Relay [A-3](#)

G

gateway

AVMs installed on [3-9](#)

communication problems [4-39](#)

communication with clients [11-3](#)

communication with unit [11-3](#)

Event Collector, enabling [9-11](#)

firewalls and [3-23, 11-5](#)

gateway AVM [3-9](#)

in Prime Network architecture [3-2](#)

log file [B-3](#)

maximum client sessions [1-5](#)

overview [3-4](#)

registry. See registry

time zone [3-4](#)

See also AVM 11

Generic SNMP (VNE type) [D-3](#)GGSN [A-3](#)global event filter (AOP) [8-24](#)GMT [3-4](#)

golden source (registry). See registry

GPRS [A-3](#)

graphs tool. See diagnostics (graphs) tool

GRE [A-3](#)GTP [A-3](#)

GUI clients

communication with gateway [11-3](#)

connection limits (individual users) [7-11](#)

login banner [1-9](#)

HHDLC [A-3](#)

high availability, gateway [5-1, B-4](#)

high availability, unit. See redundancy, units

HSRP [A-3](#)

HTTP properties, VNE [D-13](#)

HVPLS [A-3](#)

I

ICMP

VNE properties [D-13](#)

VNE type [D-3](#)

icons

VNE communication states [4-6](#)

VNE investigation states [4-7](#)

IMA [A-3](#)

installation

default directory [2-1](#)

log files [B-4](#)

integrity service

events [8-26](#)

tests [8-7](#)

IOX. See Cisco IOS XR VNEs

IP (technology) [A-3](#)

IpCore (VNE scheme) [4-3, A-2](#)

IP Multicast (technology) [A-3](#)

IPoDWDM [A-3](#)

IP Pool (technology) [A-3](#)

IP Routing (technology) [A-3](#)

IPSLA Probes (Y.1731) [A-3](#)

IPSLA Responder [A-3](#)

IPv6 [A-3](#)
 ISIS [A-3](#)
 ISIS IGPv6 [A-3](#)

J

jobs
 credential requirements [1-8, 7-6](#)
 job purging defaults [1-4, 8-4, 8-13](#)
 log file [B-3](#)
 user account setting [7-5](#)
 See also AVM 76

L

L3 VPN and VRF [A-3](#)
 LAG [A-3](#)
 Layer 2 VPN [A-4](#)
 Layer 3
 VPN [A-3](#)
 VRF [A-3](#)
 LDAP. See user authentication
 licenses
 license files, installing [2-8](#)
 license server, controlling [2-9](#)
 log file [B-3, B-4](#)
 Prime Central and [1-9](#)
 setup tasks [1-4](#)
 links
 problems viewing [6-4](#)
 static, creating [12-43](#)
 LLDP [A-3](#)
 Local Switching [A-4](#)
 log files [B-3](#)
 changing default behavior [B-2](#)
 list of [B-3](#)

location [B-2](#)
 mechanism overview [B-1](#)
 login banner [1-9, 11-12](#)

M

Maintenance (VNE investigation state) [4-8, 4-9, 4-57](#)
 mapAspect (integrity test) [8-7](#)
 maps (Vision GUI client), controlling access [7-22](#)
 Martini (technology) [A-4](#)
 message of the day (banner) [1-9, 11-12](#)
 MLACP [A-2](#)
 MLPPP [A-4](#)
 MLPS P2MP TE [A-4](#)
 Monitoring tool. See diagnostics (graphs) tool
 MP-BGP [A-4](#)
 MPLS [A-4](#)
 MPLS Multicast [A-4](#)
 MPLS TE-Tunnel [A-4](#)
 MPLS TP [A-4](#)
 MST-AG [A-4](#)
 MSTP [A-4](#)

N

NAT devices
 behind firewalls [11-5](#)
 connection to gateway/unit [11-5](#)
 network-conf [3-39](#)
 networkctl
 starting Prime Network gradually [3-18](#)
 using [3-19](#)
 NETWORKHOME [2-1, 3-4](#)
 Nexus. See Cisco Nexus VNEs
 notifications (Event Notification Service) [9-16](#)
 notstrict (VNE management communication) [12-25](#)

O

Operational (VNE investigation state) [4-8, 4-56](#)
 Operator (user access role) [7-3](#)
 OperatorPlus (user access role) [7-3](#)
 Oracle. See database
 organization, of this guide [xii](#)
 OSPF [A-4](#)

P

Partially Discovered (VNE investigation state) [4-8, 4-57, 4-60](#)
 passwords
 bos users [11-8](#)
 database [11-9](#)
 diagnostics (graphs) tool [3-39, 11-12](#)
 root [11-8](#)
 user accounts [1-8, 7-5, 7-8](#)
 See also user authentication
 P-GW [A-4](#)
 pnuser [2-1, 3-4](#)
 POS [A-4](#)
 PPP [A-4](#)
 Prime Central [1-9](#)
 Prime Network
 AVMs. See AVMs
 database. See database
 gateway. See gateway
 GUI client. See Administration GUI client
 Monitoring tool. See diagnostics (graphs) tool
 registry. See registry
 suite mode. See Prime Central
 units. See units
 VNEs. See VNEs
 Product (VNE scheme) [4-3, A-2](#)
 supported devices [A-5](#)
 supported technologies [A-2](#)

protection groups. See redundancy, units
 protection manager. See redundancy, units
 PTP 1588 [A-4](#)
 PVST [A-4](#)
 PWE3 [A-4](#)
 PW VCCV [A-4](#)

Q

Q-in-Q [A-4](#)

R

redundancy, units
 changing default settings [5-10](#)
 dropped events [5-3](#)
 Event Collector and [9-3, 9-9](#)
 events [5-11](#)
 log file [B-3](#)
 overview [5-1](#)
 protection groups [5-2, 5-9](#)
 protection manager [5-2](#)
 restarts [5-10](#)
 setup tasks [1-4](#)
 switchovers [5-2, 5-7, 5-9](#)
 timeouts [5-7, 5-10](#)
 registry
 location [C-1](#)
 on gateway [C-2](#)
 on units [C-2](#)
 overview [C-1](#)
 runRegTool command usage [C-2](#)
 security [11-7](#)
 site.xml file [C-2](#)
 related documentation [i-xv](#)
 REP [A-4](#)
 REP-AG [A-4](#)

reports

- AVM 84 and [3-10](#)
- controlling [1-9](#)
- credential requirements [7-8](#)
- database schema [8-2](#)
- integrity test [8-7](#)
- log file [B-3](#)
- public and private [1-9](#)
- purging [1-4, 8-4, 8-13](#)
- setting up [1-9](#)

restore. See backup and restore

root password [11-8](#)

runRegTool command [C-2](#)

S

SAE (System Architecture Evolution) [A-4](#)

safe mode. See Advanced Overload Prevention

SBC [A-4](#)

SDH [A-4](#)

security, communication [11-1](#)

security levels (device scopes) [6-1](#)

service discovery log file [B-3](#)

service request, submitting [xv](#)

S-GW [A-4](#)

Shutting Down

AVM status [3-11](#)

VNE investigation state [4-8, 4-57](#)

VNE status [3-13, 4-5](#)

site.xml [C-2](#)

SL-XLAT [A-4](#)

SNMP

traps [A-15, A-20](#)

VNE credentials, default [1-7, 4-12](#)

VNE properties [D-5](#)

VNE settings, configuring defaults [4-12](#)

SONET [A-4](#)

SSH

device configuration prerequisites [A-15](#)

prerequisites to adding VNEs [A-15](#)

VNE credentials, default [1-7, 4-12](#)

VNE properties [D-6](#)

Starting Up

AVM status [3-11](#)

VNE status [3-13, 4-5](#)

status

AVMs [3-33](#)

VNEs [3-13](#)

Stopped (VNE investigation state) [4-8, 4-57](#)

STP [A-4](#)

strict (VNE management communication) [12-25](#)

suite mode. See Prime Central

SVI [A-4](#)

SynCE [A-4](#)

syslogs

dropped [A-22](#)

Event Collector and [4-48](#)

VNE settings [A-20](#)

system stability

integrity tests [8-7](#)

See also Advanced Overload Prevention

T

TDM [A-4](#)

TDM PW [A-4](#)

technology support

customizing collected device information [4-11](#)

VNE schemes and [A-2](#)

Telnet

VNE credentials, default [1-7, 4-12](#)

VNE properties [D-6](#)

tickets

- archiving vs. purging [8-5](#)
- auto-archiving [8-10](#)
 - based on cleared timeout [8-10](#)
 - based on number [8-10](#)
 - based on ticket size [8-11](#)
- auto-clearing [8-8](#)
- clearing [8-5](#)
- purging [8-8](#)

time zones, gateway [3-4](#)TL1 properties, VNEs [D-14](#)topology AVM, VNEs (AVM 78) [3-10](#)Tracking Disabled (VNE communication state) [4-7, 4-44](#)

traps

- dropped [A-22](#)
- Event Collector and [4-48](#)
- VNEs [A-15, A-20](#)

troubleshooting

- device connectivity
 - See device reachability
 - See VNE communication states
- device discovery. See VNE investigation states

Uunits [3-2](#)

- AVM 99 and [3-10](#)
- AVMs installed on [3-9](#)
- communication problems [4-39](#)
- communication with gateway [11-3](#)
- connecting and disconnecting [3-17](#)
- deleting [3-27](#)
- Event Collector, enabling [9-12](#)
- failures [4-41](#)
- firewalls and [3-23, 11-5](#)
- log file [B-3](#)
- overview [3-6](#)
- Prime Network architecture and [3-2](#)
- registry. See registry

restarting [3-19](#)without database connectivity [9-15](#)

See also AVM 0

Unreachable

- AVM status [3-11](#)
- VNE status [3-13, 4-5](#)

Unsupported (VNE investigation state) [4-8, 4-56, 4-59](#)

Up

- AVM status [3-11](#)
- VNE status [3-13, 4-5](#)

updating VNEs. See VNE Device Packages

user access roles [7-3](#)

- changing [7-13](#)
- checking [7-4](#)
- device scopes and [6-1, 6-3, 7-3](#)
- setting [7-10](#)

user accounts [7-4](#)

- adjusting [7-12](#)
- authentication. See user authentication
- authorization. See user authorization
- connection limits [7-11](#)
- creating [1-9, 7-9](#)
- default settings [1-8](#)
- device scopes. See device scopes
- enabling and disabling [1-8, 7-23](#)
- jobs privileges [7-6](#)
- lockout settings [7-6](#)
- maps (Vision GUI client), controlling access to [7-22](#)
- passwords. See passwords
- Prime Central and [1-9](#)
- report privileges [7-8](#)
- workflows and activations privileges [7-6](#)

user authentication

- external [1-7, 7-2](#)
 - checking [7-5](#)
 - configuring [7-14](#)
 - emergency user [7-5](#)
 - importing Prime Network users [7-20](#)
 - overview [7-14](#)

user authentication (continued)

- local (Prime Network) [7-2](#)
- methods [7-2, 7-21](#)
- overview [7-2](#)
- passwords. See passwords, user accounts
- Prime Central and [1-9](#)

user authorization

- access roles. See user access roles
- device scopes. See device scopes
- overview [7-2, 7-3](#)

V

VC Switching [A-4](#)

Viewer (user access role) [7-3](#)

Vision GUI client

- controlling event display [8-8](#)
- Inventory Viewer settings [1-5](#)
- maps, controlling access [7-22](#)

VLAN [A-3](#)

VLAN Bridging [A-4](#)

VNE communication states

- events [4-39](#)
- icons [4-6](#)
- identifying [4-4, 4-6, 4-42](#)
- overview [4-3, 4-6](#)
- troubleshooting [4-39, 4-41](#)
- versus status [4-3](#)

VNE Device Packages

- check for new support [4-27](#)
- downloading and installing [4-30](#)
- identify DPs on gateway [4-28](#)
- uninstalling [4-32](#)
- See also VNEs, drivers

VNE investigation states

- icons [4-7](#)
- identifying [4-4](#)
- overview [4-3, 4-7](#)

repolling [4-9](#)

troubleshooting [4-53](#)

versus status [4-3](#)

VNEs [3-2](#)

Cisco Carrier Packet Transport (CPT) devices [A-13](#)

Cisco CatOS devices [A-7, A-17, A-18, A-20](#)

Cisco IOS devices [A-7, A-17, A-18, A-20](#)

Cisco IOS XE devices [A-7, A-17, A-18, A-20](#)

Cisco IOS XR devices [A-8, A-17, A-18, A-20](#)

Cisco Nexus devices [A-12, A-16](#)

Cisco Unified Computing System (UCS) devices [A-14](#)

default settings (protocol credentials) [1-7, 4-12](#)

deleting [4-38](#)

device discovery and. See device discovery

Device Packages (DPs). See Device Packages, VNEs

device reachability and [12-25](#)

drivers

- change driver used by VNE [4-30](#)
- identify driver used by VNE [4-29](#)
- See also Device Packages, VNEs

Event Collector and [9-4, 9-15](#)

IP address [D-2](#)

- changing [4-34](#)
- duplicate [4-35](#)

maintenance mode [4-9](#)

moving [4-9](#)

prerequisites to creating [A-1](#)

Prime Central and [1-10](#)

Prime Network architecture and [3-2](#)

properties [D-1](#)

- Adaptive Polling [D-16](#)

- Events [D-17](#)

- General [D-2](#)

- HTTP [D-13](#)

- ICMP [D-13](#)

- Polling [D-14](#)

- SNMP [D-5](#)

- Telnet [D-6](#)

VNEs (continued)

properties (continued)

TL1 [D-14](#)XML [D-12](#)SSH properties [D-6](#)SSH settings, configuring default [4-12](#)

states, communication. See VNE communication states

states, investigation. See VNE investigation states

status [4-3, 4-5](#)stopping and starting [4-9](#)syslog settings [A-20, A-22](#)Telnet settings, configuring default [4-12](#)traps [A-15, A-20, A-22](#)

updating. See VNE Device Packages

vs. devices [4-1](#)

VNEs, adding

auto-add mechanism [4-13](#)based on existing devices (cloning) [4-14](#)for new device type [4-17](#)methods [4-12](#)overview of steps [4-10](#)using a CSV file to import [4-22](#)using autodiscovery (Network Discovery) [4-19](#)

VNE schemes. See device discovery

VNE topology log file [B-3](#)VNE Unreachable (VNE communication state) [4-6, 4-43](#)VPLS [A-4](#)

VPN

Layer 2 [A-4](#)Layer 3 [A-3](#)VRF, Layer 3 [A-3](#)VRRP [A-4](#)VTP [A-4](#)

W

watchdog protocol. See AVM process protection

workflowEngine (integrity test) [8-7](#)

workflows and activations

banner, adding [10-6](#)command scripts and [10-1](#)credential requirements [1-8, 7-6, 10-6](#)database schema [8-3](#)data purging [8-4, 8-14](#)events [10-7](#)executed [10-2, 10-4](#)aborting and deleting [10-6](#)output [10-3](#)properties [10-3](#)integrity test [8-7](#)log file [B-3](#)message, adding [10-6](#)overview [10-1](#)purging defaults [1-4](#)templates [10-4](#)

See also AVM 66

X

XML

enabling on device [A-9](#)VNE properties (tab) [D-12](#)

XMP

database schema [8-3](#)log file [B-4](#)