

ΙΝΟΕΧ

Numerics

3.6.x tabs, in Prime Network Events 9-12
6rd tunnels, viewing properties 19-48
6VPE and IPv6 18-1

IPv6 VPN over MPLS 18-1

Α

AAA diameter configuration 23-6 radius configuration 23-7 AAA configuration 23-1 supported protocols 23-1 AAA configurations view 23-2 AAA group 23-2 aaa groups 23-2 access gateway badge 3-8, A-20 viewing properties 13-19 accumulating affected parties in an alarm 10-23 in the correlation tree 10-23 acknowledged tickets 10-7 acknowledging tickets 10-19 ACS overview 26-52 activating images on devices (NEIM) Cisco IOS XR devices and 4-35 permissions 4-56, 4-57 activation script, launching 2-37, 5-1

active charging service 26-52 adding associated VLANs 13-54 EFP cross-connects 13-75 Ethernet services 13-103 MPLS-TP tunnels 19-5 pseudowires 13-89 unassociated bridges 13-72 VLANs 13-49 VPLS instances 13-78 VPNs existing 19-22 new 19-21 address family ipv4 profile 20-4 address family ipv6 profile 20-5 administration global settings 4-47 Advanced tab events 9-17 tickets 10-18 affected elements, finding 10-19 affected parties 10-22 accumulating 10-23 Affected Parties tab (tickets) 10-14 calculating 10-22 finding 10-19 affected severity, updating over time 10-24 Agent Not Loaded, VNE communication state 2-20 Agent Unreachable, VNE communication state 2-20 aggregation, definition 1-1 aggregations adding elements to 5-18

aggregating network elements 5-16

disaggregating 5-19 viewing thumbnails 5-16 working with thumbnail views 5-15, 5-18 alarm count, definition **10-6** alarms badges A-21 customizing 2-39 definition 1-1 disabling on a port 3-26 severities 10-22 All tab, in Prime Network Events 9-3 APN additional characteristics 26-18 overview 26-12 view properties 26-13 APN profiles 26-41 APN remaps 26-41 application, launching external 2-32, 2-37, 5-1 applying overlays Ethernet service 13-104 MPLS-TP tunnels 19-16 network clock 21-49 pseudowire 13-101 VLAN 13-60 VPLS instance 13-79 VPN 19-24 ARP table 19-35 associated VLANs adding 13-54 tag manipulations 13-54 viewing mapping properties 13-56 service links 13-56 working with 13-54 association, definition 1-1 ATM cross-connects in logical and physical inventory 21-6 overview 21-6 properties 21-7

viewing 21-6 audience, intended xxi audio options, customizing 2-39 Audit tab events 9-17 in Prime Network Events 9-3 auto refresh, in Prime Network Events 9-21

В

background images for maps 5-12 backing up files to archive (CM) 4-17, 4-56, 4-57 badges access gateway 3-8, A-20 alarms 2-18, A-21 blocking 3-8, A-20 clock service 3-8, A-20 for elements and links 3-8 icons A-18 lock 3-8, 19-6, A-20 management states A-18 multiple links 3-8, A-20 reconciliation 3-9, 7-7, 13-49, A-20 redundancy service 3-9, A-21 REP primary 3-9, A-21 REP primary blocking 3-9, A-21 STP root 3-9, A-21 technology related A-20 tickets A-21 VNE communication states A-18 VNE investigation states A-19 VNE management states 2-18 bba groups 25-3 BER thresholds, SONET (commands) 21-54 BFD configuration commands 19-56 template commands 19-56 viewing BFD session properties 19-50 viewing MPLS-TP BFD session properties 19-52

BGP, viewing inventory details 19-47 Bidirectional Forwarding Detection. See BFD Blacklists (SBC), configuring 22-15 blacklists (SBC), configuring 22-26 blocked ports, using with Cisco PathTracer 12-4 blocking badge 3-8, A-20 bng 25-1 retail model 25-2 subscriber access points 25-5, 25-6 user roles 25-2 wholesale model 25-2 bridges understanding unassociated 13-72 viewing properties for VLANs 13-69 broadband access groups 25-3 broadband network gateway overview 25-1 bulk lock mpls tp tunnels 19-57 bulk unlock mpls tp tunnels 19-57 business configurations 7-7 business elements definition 1-1 icons 2-10, A-4 roles required 7-1 business tag definition 1-1 roles required 7-1 searching for 7-4 using Chinese characters 7-2 working with 7-3 buttons A-16 for filtering links A-16 in table toolbars A-15 Prime Network Events Auto Refresh 9-21 Refresh Now 9-21 Ticket Properties dialog box A-17 toolbar A-16 Prime Network Vision A-12

link filtering A-16 table toolbar A-15 toolbar A-13 Report Manager toolbar A-17

С

CAC Policies (SBC), configuring 22-15, 22-28 callouts, VPN service overlay 19-25 Call Policies (SBC), configuring 22-15, 22-32 Carrier Ethernet services, monitoring 13-1, 14-1 Carrier Grade NAT Add CGNAT or 6rd forwarding 13-116, 14-6 Create CGNAT instance 13-116, 14-6 Pool Utilization (command) 14-5 roles required for viewing properties 14-2 viewing properties logical inventory 14-2 physical inventory 14-5 Carrier Supporting Carrier (CSC) path traces 12-31 CEM groups configured on physical interfaces 21-52 virtual CEM interfaces 21-53 viewing in logical inventory 21-53 physical inventory 21-52 viewing properties 21-51 **CEM** interfaces properties 21-52 viewing in physical inventory 21-51 CESoPSN, viewing properties 21-3 CFM 16-10 commands 16-10 configure parameters 16-10 description maintenance domains 16-3 maintenance endpoints (MEPs) 16-3 maintenance intermediate points (MIPS) 16-3

Cisco Prime Network 3.10 User Guide

maintenance domain, configure 16-10 overview 16-3 service ID, configure 16-10 SNMP server traps, enable 16-10 viewing properties for maintenance associations 16-8 maintenance domains 16-5, 16-7 MEPs 16-8 MIPs 16-6 remote MEPs 16-10 Change and Configuration Management global settings 4-47 change logs (CM) 4-23, 4-56, 4-57 Chinese characters support for business tags 7-2 Circuit Emulation Services over PSN. See CESoPSN Cisco.com credentials for NEIM 4-7 Cisco Discovery Protocol (CDP) properties in logical inventory 13-6 in physical inventory 13-8 viewing 13-6 Cisco IOS XR devices committing image changes (NEIM) 4-39 logical routers and 4-35 rolling back images (NEIM) 4-40 special notes for NEIM 4-35 Cisco PathTracer across CSC configurations 12-31 comparing paths 12-27 counter values, saving 12-26 destinations 12-11 details pane 12-25 details window menu options 12-22 toolbar 12-22 in MPLS networks 12-29 launching from Ethernet Flow Point (EFP) 12-8 Ethernet port 12-12

examples 12-7 IP interface 12-9 MPLS-TP tunnel endpoint 12-13 pseudowire endpoint 12-12 VLAN bridge 12-10 Layer 2 VPNs 12-32 Layer 3 VPNs 12-32 menus 12-16 opening 12-3 overview 12-1, 12-2 path pane 12-18 path trace from inventory 12-7 from map view 12-5 options for starting 12-5 path trace pane 12-18, 12-23 rerunning paths 12-27 right-click options in path trace window 12-19 trace launch options 12-4 roles required 12-1 single-path window 12-16 starting points 12-30 tabs 12-18 toolbar 12-17 viewing Layer 2 Tunnel Protocol path information 12-28 path trace details 12-20 path traces 12-14 QinQ path information 12-27 Cisco Prime Network setup tasks 4-3 clear flash image distribution 4-30 clearing and removing tickets 10-21 clearing tickets 10-7, 10-20 clock recovery, pseudowire properties 21-45 clock service badge 3-8, A-20

properties 21-36 Clock source, SONET (commands) 21-54 CM archive, using 4-11, 4-56, 4-57 backing up files to archive 4-17 change logs 4-23 comparing files 4-13 deleting files from archive 4-22 exporting files 4-15 labels and 4-12 permissions 4-56, 4-57 restoring files from archive to devices 4-20 setup tasks 4-5 synchronizing files 4-16 CMF global parameters, configure 16-10 Codec Lists (SBC), configuring 22-36 Codec lists (SBC), configuring 22-15 color coding, severity icons 8-4 commands fabricpath 27-8 mobile 26-68 vPC 27-4 committing image changes (NEIM) 4-39, 4-56, 4-57 communication status, for VNEs 3-17 comparing files (CM) 4-13, 4-56, 4-57 configuraiton audit schedule 4-44 configuration audit 4-42 view result 4-45 configuration management permissions 4-56, 4-57 configuration policy create 4-43 manage 4-43 sample 4-43 sample CLIs 4-42 configuration scripts, launching 2-37, 5-1 configuring IP SLA parameters 17-11

configuring probe endpoint association 17-5 configuring profiles 17-5 configuring y.1731 probes 17-4 Connecting, VNE communication state 2-20 Connectivity Fault Management. See CFM content pane in Prime Network Vision 2-7 in the Prime Network Vision inventory window 3-13 tabs in logical inventory 3-30 continuity check 16-10 Control Channel (CC), viewing information for pseudowire endpoint 13-97 conventions, used in this document xxiv Correlation tab (tickets) 10-17 counters, SONET (commands) 21-54 CPU usage graph, opening 5-27 create configuration policy 4-43 create on demand probe configuration 17-7 creating maps 5-6 report folders 11-46 VPNs 19-21 cross-connects ATM overview 21-6 properties 21-7 viewing 21-6 EFP adding 13-75 overview 13-74 properties 13-75 cross-VRF routing entries 19-52 Currently Unsynchronized, VNE investigation state 2-21 customizing audio options 2-39 event history size 2-39

D

Daily Average and Peak report 11-12 Daily Event Count by device report 11-15 data center 27-1 data store view configuration 27-10 deassociating a profile 17-10 Defined Not Started, VNE investigation state 2-20 defining report types 11-46 deleting business elements 7-7 report folders 11-48 reports 11-44 deleting a profile 17-10 deleting files from archive (CM) 4-22 deleting images from repository (NEIM) 4-41 deleting IP SLA 17-12 Dense Wavelength Division Multiplexing. See DWDM destination, for Cisco PathTracer 12-11 Detailed Audit Events report 11-17 Detailed Provisioning Events report 11-17 Detailed Security Events report 11-18 Detailed Service Events report 11-15 Detailed Syslogs report 11-16 Detailed System Events report 11-18 Detailed Tickets report 11-16 Detailed Traps report 11-16 details pane, Cisco PathTracer 12-25 Details tab events 9-15 tickets 9-19, 10-12 Device Partially Reachable, VNE communication state 2-20 devices aggregations 5-16 CPU usage, checking 5-27 icons 2-7, A-2 in maps 5-16

pinging 5-28 severity indicator 2-17 status indicators 2-16 Telnet to a device 5-28 viewing operating system information 3-31 properties 3-6 Devices with the Most Events report by severity 11-12 by type 11-12 Devices with the Most Syslogs report 11-13 Devices with the Most Traps report 11-13 Device Unreachable, VNE communication state 2-20 device view pane in the Prime Network Vision inventory window 3-13 toolbar 3-14 dhcp service 25-7 diagnose subscriber access points 25-6 diagnose y.1731 probes 17-13 disaggregating aggregations 5-19 Discovering, VNE investigation state 2-21 discovery based on Link OAM 16-21 EFD 13-44 EVC multiplex services 13-103 MPLS-TP tunnels 19-5 VLAN 13-44 distributing images to devices (NEIM) 4-27, 4-35, 4-56, 4-57 document audience xxi conventions xxiv organization xxii related documentation xxv duplication count, definition 10-6 DWDM channel, configure 15-15 commands 15-15 history (commands) 15-15 laser state, setting 15-15

loopback, setting 15-15 roles required for viewing properties 15-1 thresholds, setting 15-15 viewing alert and alarm counters 15-10 G.709 properties 15-5 ODU alarm properties 15-8 ODU alert properties 15-9 OTU alarm properties 15-8 OTU alert properties 15-9 performance monitoring configuration 15-11 properties 15-3 dynamic authorization profile 23-3 dynamic config templates 25-9 ppp template 25-11 dynamic host configuration protocol 25-7

Ε

EFD discovery 13-44 EFP launching a path trace 12-8 overview 13-46 understanding severity and ticket badges 13-37 EFP cross-connects adding 13-75 viewing properties 13-75 working with 13-74 egress adjacents, VRF 19-31 EGTP overview 26-31 element icons, and information displayed 3-3 elements, business deleting 7-7 renaming 7-7 elements, viewing operating system information 3-31 e-mail notification configuration settings 4-6, 4-51 image management settings 4-7

Ethernet flow domains renaming 13-41 viewing 13-41 Ethernet Flow Domains inventory tab 2-4 Ethernet flow point (EFP), viewing properties 13-32 Ethernet LAGs viewing 13-22 viewing properties 13-23 Ethernet links, and configured LSPs 19-11 Ethernet LMI commands 16-20 Device EVC Properties window 16-18 enable 16-20 EVC, configure 16-20 overview 16-16 service instance, configure 16-20 UNI, configure 16-20 viewing properties for device EVCs 16-17 for physical interfaces 16-18 for UNI interfaces 16-19 in logical inventory 16-17 Ethernet Local Management Interface. See Ethernet LMI Ethernet OAM overview 16-2 roles required for viewing properties 16-1 Ethernet Operations, Administration, and Maintenance. See Ethernet OAM Ethernet port, launching a path trace 12-12 Ethernet Service report detailed 11-21 options 11-36 summary 11-21 Ethernet services adding overlays 13-104 adding to maps 13-103 viewing properties 13-106 working with 13-102 EVC (E-LMI), configure 16-20

EVC (L-OAM), configuring 16-25 EVC multiplex services, discovery 13-103 **EVCs** shared switching entities 13-39 viewing service properties 13-39 event history size, customizing 2-39 Event Reduction Statistics report 11-13 events Advanced tab 9-17 Audit tab 9-17 categories 8-4 definition 1-2 Details tab 9-15 filtering 9-22, 9-23 Provisioning tab 9-17 refreshing list in Prime Network Events 9-21 removing filters 9-24 Security tab 9-17 Trap tab 9-18 viewing in Prime Network Events 9-2 properties 9-14 events reports 11-11 detailed network events, report options 11-28 detailed non-network events, report options 11-31 generating from Prime Network Vision 11-39 Report Manager 11-24 Reports menu 11-38 report options 11-26 Run Report dialog box 11-25 exporting data from Prime Network Events 9-25 exporting files (CM) 4-15, 4-56, 4-57 external application, launching 2-32, 2-37, 5-1

Fault Database vs. Event Archive Statistics report 11-13 FEC commands 15-15 filtering events 9-22, 9-23 links by type 5-26, 5-27 during map creation 5-26 in an existing map 5-27 using collection method 6-17 removing for events and tickets 9-24 tickets by criteria 10-8 flickering links 6-3

G

G.709 commands 15-15 General tab, in inventory window 3-13 generated ticket **10-7** GGSN overview 26-5 view properties 26-6 global settings 4-47 NEIM 4-53 GPRS/UMTS network 26-4 working technologies 26-5 graphical links, reducing number of in maps 2-11 GTPP additional characteristics 26-26 overview 26-24 view properties 26-25, 26-31 GTPU overview 26-10 view properties 26-10 GUI overview of 4-1

F

fabricpath 27-5

Cisco Prime Network 3.10 User Guide

Η

Hardware Summary By Selected Property 11-19 Hardware Summary Detailed report 11-19 History tab (tickets) 10-13 host server view configuration 27-10 HSRP view properties 13-17 H-VPLS working with 13-77 working with in Prime Network Vision 13-77

I

icons See also buttons and badges alarm and ticket A-21 badges A-18 business elements 2-10, A-4 information displayed for elements 3-3 links A-9 logical inventory 3-30, A-6 management states 2-18, A-18 maps 19-20 map view 2-8 network elements 2-7, 2-9, A-2 physical inventory 3-19, A-9 Prime Network Events A-12 Prime Network Vision 2-8, A-1 reconciliation 3-9 reference A-1 REP 13-62 severities A-12 severity, color coding 2-17, 8-4 sizes 2-8, 3-3 tickets 2-22 VLAN domains 13-62 VLAN overlays 13-62

IGMP profile 20-5 image management permissions 4-56, 4-57 IMA group properties 21-13 viewing properties 21-13 impact analysis accumulating affected parties 10-22 affected severities 10-22 automatic mode 10-22 links and 6-12 proactive mode 10-22 importing images into archive (NEIM) 4-24 Initializing management state 2-18 Inter-Chassis Communication Protocol (ICCP), viewing properties 13-28 inventory reports 11-19 generating from Prime Network Vision 11-39 Report Manager 11-32 Reports menu 11-38 report options 11-33 Run Report dialog box 11-33 inventory tabs Ethernet Flow Domains 2-4 in Prime Network Vision 2-4 Network Elements 2-4 types of 2-4 VTP Domains 2-4 inventory window content pane 3-13 device view pane 3-13 device view pane toolbar 3-14 General tab 3-13 logical inventory 3-27 navigation pane 3-12 Network Events tab 3-15 opening 3-9 options

Disable Sending Alarms button 3-21, 21-6 Open Port Utilization Graph button 3-21, 21-6 Show Cross-Connect Table button 3-21, 21-6 Show DLCI Table button 3-21, 21-6 Show Encapsulation button 3-21, 21-6 Show VC Table button 3-21, 21-6 overview 3-9, 3-11 physical inventory 3-19, 3-21, 21-6 Ports tab 3-13, 3-23 Provisioning Events tab 3-15 ticket and events pane 3-15 Tickets tab 3-15 IOS-XR Software Package Summary report 11-20 ip and mpls multicast configuration 20-1 IP interface, launching a path trace 12-9 **IPoDWDM** See also DWDM IPoDWDM commands 15-15 IP pools 24-1 IP SLA 17-12, 17-14 IP SLA, viewing responder service properties 13-109 IP SLA parameters 17-11 ip subscriber template 25-9 IPv6 addresses in logical inventory 18-3 in physical inventory 18-4 in inventory 18-3 in Prime Network 18-2 notes, for viewing IPv6 addresses 18-4 support in Prime Network 18-1 viewing IPv6 information 18-2 IPv6 VPN over MPLS (6VPE) 18-1 IS-IS, viewing properties 13-111

J

jobs

CM 4-56, 4-57

Cisco Prime Network 3.10 User Guide

e-mail notification 4-55 NEIM 4-56, 4-57 jobs scheduler 11-40

L

labeling files (CM) 4-12, 4-56, 4-57 labels, MPLS-TP tunnel (commands) 19-56 launching Prime Network Events from Prime Central 8-2 in Find mode 8-3 launching Prime Network Vision as a standalone application 2-2, 8-2 from Prime Central 2-2 Layer 2 Cisco PathTracer (VPN) 12-32 Layer 3 Cisco PathTracer (VPN) 12-32 link aggregation group. See Ethernet LAGs Link Layer Discovery Protocol (LLDP), viewing properties 13-8 Link OAM and topology discovery 16-21 commands 16-25 enabling and disabling 16-25 EVCs, configuring 16-25 overview 16-20 remote loopback, enabling and disabling 16-25 templates, managing 16-25 viewing properties in logical inventory 16-22 physical inventory 16-25 link properties window link list pane 6-11 overview 6-10 properties pane 6-11 ticket and events pane 6-12 links adding 6-15 arrowheads 6-5, A-11 bidirectional vs. unidirectional 6-5. A-11

colors 6-5 dashed line 6-4, A-11 definition 1-3 dynamic 6-3 exceeding number that can be displayed 2-10 filtering A-16 by type 5-26, 5-27 in maps 5-25 using collection method 6-17 flickering 6-3 graphical representation 2-10 icons A-9 impact analysis 6-12 in maps 2-10 links view 6-8 normal vs. wide vs. tunnel 6-5 overview 6-1 properties 6-4 quick view 6-7 reducing number of in maps 2-11 selecting in maps 6-18 significance of arrowheads A-11 characteristics A-11 color A-10 solid vs. dashed lines A-11 width A-11 solid line 6-4, A-11 static 6-3 tooltips 2-11, 6-6 tunnels 6-5 types A-9 use of arrowheads 6-5 user roles required for working with 6-1 viewing between VLAN elements and devices 13-57 in links view 6-8 options 6-17 properties 6-4, 6-10

width 6-5 links, MPLS-TP tunnel (commands) 19-56 links view filtering 2-16, A-16 information displayed 2-15 in Prime Network Vision 2-14 list view in Prime Network Vision 2-11 overview 2-11 right-click options 2-13 toolbar 2-41, A-15 LLDP, viewing properties 13-8 lock badge 3-8, A-20 lock mpls tp tunnels 19-57 logical inventory branches 3-29 content pane 3-30 content pane tabs 3-31 icons 3-30, A-6 navigation pane 3-29 tabs 3-31 viewing in Prime Network Vision 3-27 window 3-28 logical link, definition 1-3 logical routers (Cisco IOS XR) 4-35 loopback, remote (L-OAM), enabling/disabling 16-25 **LSEs** inventory details 19-41 viewing 19-41 LSP LSP Lockout (commands) 19-56 LSP Lookup (command 19-56 LSP Ping and Trace (commands) 19-56 LSP endpoints 19-13 properties 19-13 **LSPs** lockout state 19-6 on Ethernet links 19-11 properties 19-13

redundancy service properties 19-13 Working and Protected 19-5

Μ

Maintenance, VNE investigation state 2-21 maintenance domain (CFM), configure 16-10 maintenance domains, in CFM 16-3 managed element, definition 1-3 management states badges A-18 icons A-18 overview 2-18 managing maps, roles required 5-2 managing report folders creating 11-46 deleting 11-48 moving 11-47 renaming 11-47 viewing properties 11-48 managing reports deleting 11-44 moving reports 11-44 renaming 11-42 roles required 11-1 saving 11-41 sharing 11-43 viewing report properties 11-45 reports 11-41 managing tickets 10-19 managing VPNs 19-21 adding to maps 19-22 creating 19-21 moving virtual routers between 19-23 overlays adding 19-24 displaying 19-25 hiding 19-25

removing from maps 19-23 maps adding VLANs 13-49 aggregations 5-16 applying background images 5-12 Cisco PathTracer files 12-26 closing 5-5 creating 5-6 customizing 2-39 filtering links 5-25 in Prime Network Vision 2-7 link icons A-9 network elements in 5-16 opening 2-6, 5-5 overlays callouts 19-25 VPN 19-24 overview 19-18, 19-19 red border and graphical links 2-10 removing VLANs 13-52 VPNs 19-23 roles required 5-2 saving 5-15 selecting views 5-12 using overview windows 5-14 viewing aggregation thumbnails 5-16 thumbnails 5-16 VPNs adding 19-22 overlays 19-24 viewing 19-18 working with 5-1 map view adding VLAN overlays 13-60 in Prime Network Vision 2-7 multi chassis devices 5-19 Mean Time to Repair report 11-14

Media Addresses (SBC), configuring 22-15, 22-37 menus Cisco PathTracer 12-16 Cisco PathTracer details window 12-22 Prime Network Events 8-6 Prime Network Vision 2-24 Report Manager 11-6 MEP (CFM), configure 16-10 MEPs, in CFM 16-3 MIP (CFM), configure 16-10 MIPS, in CFM 16-3 mldp database 19-44 mldp neighbors 19-45 MLPPP viewing link properties 21-30 viewing properties 21-27 Mobile technologies 26-1 ACS 26-52 APN 26-12 commands 26-68 EGTP 26-31 GGSN 26-5 GTPP 26-24 GTPU 26-10 PDN-GW 26-36 SAE-GW 26-34 S-GW 26-38 mobile technologies user roles 26-1 Mobile Transport over Packet. See MToP modifying VNE properties 3-16 Modules Summary By Type 11-20 monitoring Carrier Ethernet services 13-1 Carrier Grade NAT properties 14-1

network clocking service 21-35 PTP service 21-37 Most Common Daily Events report 11-14

Most Common Syslogs report 11-14

moving report folders 11-47 reports between folders 11-44 MP-BGP properties in logical inventory 19-47 **MPLS** ARP table 19-35 BGPs, viewing 19-47 Cisco PathTracer and 12-29 LSEs, viewing 19-41 monitoring services 19-26 NDP table 19-36 pseudowire end-to-end emulation tunnels, viewing 19-53 rate limit information 19-38 roles required for viewing properties 19-1 routing entities 19-32 TE tunnels, viewing 19-55 MPLS pseudowire over GRE, properties 21-33 MPLS TE tunnel, inventory details 19-55 MPLS-TP BFD commands 19-56 MPLS-TP tunnel label commands 19-56 MPLS-TP tunnel endpoint, launching a path trace 12-13 **MPLS-TP** tunnels adding to maps 19-5 applying overlays 19-16 BFD sessions, viewing properties 19-52 commands supported 19-56 discovery 19-5 global configuration (commands) **Global Configuration Commands** (MPLS-TP) 19-56 links, adding and removing 19-56 LSP commands 19-56 LSP lockout state 19-6 LSP Ping and Trace (commands) 19-56 overview 19-4 properties 19-7

Tunnel Ping and Trace (commands) 19-56 working with 19-4 mpls tp tunnels 19-57 MToP channelized lines 21-18 IMA group properties 21-13 monitoring network clocking service 21-35 PTP service 21-37 network clocking service 21-35 PTP service overview 21-37 roles required for working with 21-1 TDM overview 21-17 viewing properties in physical inventory 21-18 viewing ATM cross-connects 21-6 ATM VCI properties 21-10 ATM VPI properties 21-10 CEM groups 21-51, 21-52, 21-53 CEM interfaces 21-51 CEM properties 21-50 CESoPSN pseudowire properties 21-3 encapsulation information 21-11 IMA group properties **21-13** MLPPP link properties 21-30 MLPPP properties 21-27 network clocking service 21-35 pseudowire clock recovery properties 21-42 PTP service properties 21-37 SAToP pseudowire properties 21-2 SONET/SDH channelization properties 21-19 SyncE properties 21-46 T3 DS1 and DS3 channelization properties 21-22 TDM properties 21-18 virtual CEMs, list of 21-51 virtual CEMs properties 21-50 multicast configuration 19-30 overview 20-1

supported network elements 20-1 user roles required 20-2 multicast label distribution protocol 19-44 multicast label switching 19-44, 20-9 multicast profile PIM profile 20-7 multicast protocol

IGMP profile 20-5 address family ipv6 20-5 multicast protocols 20-4 address family ipv4 20-4 multicast routing entities 20-10 multi chassis device map view 5-19 Multichassis LACP (mLACP) show commands 13-28 viewing properties 13-28 multiple links badge 3-8, A-20 multiplex services, discovery of 13-103

Ν

navigation pane logical inventory 3-29 physical inventory 3-19 Prime Network Vision 2-6 NDP table 19-36 NEIM Cisco IOS XR devices and 4-35 committing image changes 4-39 deleting images from repository 4-41 distributing images to devices 4-27 global settings 4-53 importing images 4-24 permissions 4-56, 4-57 rolling back images on devices 4-40 setup tasks 4-6 upgrade analysis and 4-27

viewing repository 4-56, 4-57 Network Activation Activation Framework 3-34 network clocking service applying an overlay 21-49 clock service properties 21-36 monitoring 21-35 monitoring PTP service 21-37 overview 21-35 PTP interface properties 21-38 PTP service 21-37 network elements adding to existing aggregations 5-18 aggregating 5-16 aggregations 5-16 CPU usage, checking 5-27 definition 1-4 icons 2-7, 2-9, A-2 information displayed in icons 3-3 in maps 5-16 management state 2-18 pinging 5-28 severity indicators and network elements 2-17 status indicators 2-16 Telnet to 5-28 viewing operating system information 3-31 properties 3-6 Network Elements inventory tab 2-4 Network Events tab inventory window 3-15 link properties window 6-12 network event tabs, in Prime Network Events 9-7 Network Pseudowire report detailed 11-22 options 11-37 summary 11-22 network service reports 11-21 generating from

Prime Network Vision 11-39 Report Manager 11-35 Reports menu 11-38 report options 11-36 Run Report dialog box 11-35 Notes tab (tickets) 10-18, 10-19

0

OAM See also Link OAM on demand probe configuration 17-7 opening maps 2-6 operating system information, viewing for devices 3-31 Operational, VNE investigation state 2-21 operator policy 26-41 options working with aggregation thumbnails 5-15, 5-18 **OSPF** supported versions 13-114 viewing properties 13-114 overlays applying to Ethernet services 13-104 maps 5-22 MPLS-TP tunnels 19-16 network clocks 21-49 pseudowire 13-101 VLANs 13-60 VPLS instances 13-79 VPNs 19-24 displaying and hiding for VLANs 13-61 for VPNs 19-25 in maps 5-25 Ethernet service 13-104 pseudowire 13-89, 13-101 removing 13-61

viewing 5-25 pseudowire tunnel links in VPLS 13-81 REP information 13-62 STP information 13-65 VLAN adding 13-60 removing 13-61 viewing STP link information 13-65 working with 13-44 VPLS callouts 13-81 instance 13-79 viewing pseudowire tunnel links 13-81 VPN 19-24 adding 19-24 callouts 19-25 working with 5-21 overview ATM cross-connects 21-6 CFM 16-3 Cisco PathTracer 12-1 EFP cross-connects 13-74 EFPs 13-46 Ethernet LMI 16-16 Ethernet OAM 16-2 Link OAM 16-20 MPLS-TP tunnels 19-4 network clocking service 21-35 Prime Network Events 1-2 Prime Network Vision inventory window 3-9 Prime Network Vision maps 2-5 PTP service 21-37 reports 11-1 SAToP 21-2 SBC 22-1 switching entities 13-45 TDM **21-17** unassociated bridges 13-72 VLANs 13-45

overview window 5-14

Ρ

package management, defined 4-35 Partially Discovered, VNE investigation state 2-21 password, changing 2-3 path pane, in Cisco PathTracer 12-18 path trace and blocked ports 12-4 examples 12-7 launching from EFP 12-8 Ethernet port 12-12 IP interface 12-9 MPLS-TP tunnel endpoint 12-13 pseudowire endpoint 12-12 VLAN bridge 12-10 starting 12-5 from inventory 12-7 from map view 12-5 viewing in Cisco PathTracer 12-14 Layer 2 Tunnel Protocol path information 12-28 path trace details 12-20 QinQ path information 12-27 path trace details window 12-20 path trace pane, Cisco PathTracer 12-18, 12-23 PDN-GW overview 26-36 performance management, SBC 22-39 P-GW view properties 26-36 physical inventory branches 3-19 buttons Disable Sending Alarms 3-21, 21-6 Open Port Utilization Graph 3-21, 21-6 Show Encapsulation 3-21, 21-6

content pane 3-20 icons 3-19, A-9 navigation pane 3-19 viewing device properties 3-19 viewing in Prime Network Vision 3-19 window 3-14 physical link, definition 1-4 PIM profile 20-7 pinging devices 5-28 network elements 5-28 pseudowires 13-95 ping pseudowire (command) 13-116 policy container 25-12 polling, initiating 3-18 Poll Now button 3-18 Pool Utilization (CG NAT command) 14-5 ports alarms disabling 3-26 viewing configuration 3-25 status 3-23 with IPv4 and IPv6 addresses 18-5 Ports tab, in inventory window 3-13, 3-23 Port Utilization graph, generating 3-27 ppp template 25-9, 25-11 Prime Central launching Prime Network Events 8-2 launching Prime Network Vision 2-2 Prime Network 3.6.x tabs, in Prime Network Events 9-12 Prime Network Command Builder launching scripts 2-37, 5-1 Prime Network Events All tab 9-3 Audit tab 9-3 buttons Ticket Properties dialog box A-17 toolbar A-16

customizing 8-8 displaying all events 8-4 event categories 8-4 exporting data 9-25 icon severities A-12 launching from Prime Central 8-2 in Find mode 8-3 options 8-2 menus 8-6 network event tabs 9-7 overview 1-2 Prime Network 3.6.x tabs 9-12 Provisioning tab 9-5 right-click options 8-7 roles required 8-1, 9-1 Security tab 9-6 Service tab 9-7 Syslog tab 9-8 system event tabs 9-3 System tab 9-6 Ticket tab 9-8 toolbar 8-5 toolbar buttons A-16 V1 Trap tab 9-10 V2 Trap tab 9-10 V3 Trap tab 9-11 viewing all events 8-4 events and tickets 9-2 window 8-2 working with 9-14 Prime Network Vision buttons A-12 filtering links A-16 table toolbar A-15 toolbar A-13 creating maps 5-6 customizing 2-39

generating reports 11-39 GUI overview 19-18, 19-19 icons 19-20, A-1 links A-9 logical inventory A-6 map A-2, A-4 physical inventory A-9 sizes 2-8 interface components 2-3 inventory tabs 2-4 launching as a standalone application 2-2, 8-2 from Prime Central 2-2 options 2-2 links characteristics A-11 colors A-10 icons A-9 list view toolbar A-15 maps 2-7, 2-39 closing 5-5 creating 5-6 opening 5-5 overview 2-5 saving 5-15 viewing options 5-12 menus 2-24 Activation 2-28 Edit 2-26 File **2-25** Help 2-29 Network Inventory 2-28 Node 2-27 Reports 2-29 right-click 2-29 Tools 2-27 View 2-26 Window 2-29 navigation 2-3

opening the inventory window 3-9 overlays 19-25 port information 3-25 properties window 3-6 right-click menus 2-29 roles required 2-1, 3-1 tables managing 2-40 toolbar buttons A-13 viewing tickets 10-3 VLAN elements and icons 13-45 windows 2-3 working with H-VPLS 13-77 tickets 10-1 VPLS 13-77 Prime Network Vision window content pane 2-7 inventory tabs 2-4 links view 2-14 list view overview 2-11 toolbar 2-41 map view 2-7 icons 2-8 right-click options 2-11 severity indicators 2-11 navigation pane 2-6 right-click menus aggregation 2-34 device 2-31 link 2-35 links view 2-37 list view 2-35 maps 2-30 ticket 2-38 ticket pane 2-16 toolbar 2-22

layout tools 2-24 map options 2-22 map zoom tools 2-24 navigation tools 2-23 overlay tools 2-23 viewing options 2-22 probe endpoint association 17-5 properties 6rd tunnels 19-48 CEM interface 21-52 clock service 21-36 ICCP 13-28 mLACP 13-28 MPLS pseudowire over GRE 21-33 MPLS-TP tunnels 19-7 MToP ATM VCI 21-10 ATM VPI 21-10 pseudowire clock recovery 21-45 PTP interface 21-38 REP 13-14 report folders 11-48 report types 11-50 SBC 22-4 AAA 22-7 DBE 22-5 H.248 22-5, 22-7 media address 22-5 policy 22-8 SBE 22-6 SIP 22-12 virtual connections 21-5 properties window in Prime Network Vision 3-6 provider, definition 1-4 Provider Backbone Bridge (PBB), viewing properties 13-31 Provisioning Events tab, in the inventory window 3-15 Provisioning tab

events 9-17

in Prime Network Events 9-5 proxy server importing images from Cisco.com 4-7 pseudowire clock recovery properties 21-45 viewing properties 21-42 pseudowire endpoint, launching a path trace 12-12 pseudowires adding 13-89 applying overlay 13-101 commands 13-116 overlays 13-89 pinging 13-95, 13-116 redundancy service properties 13-99 viewing endpoint properties 13-86 properties 13-92 redundancy service properties 13-99 tunnel links in VPLS overlays 13-81 VCCV and CC information 13-97 working with 13-89 PTP interface properties 21-38 monitoring service 21-37 service overview 21-37 PWE3 inventory details 19-53 viewing 19-53

Q

QCI-QoS mapping 26-40 QoS profile 25-15 QoS Profiles (SBC), configuring 22-15, 22-38 quality of service profile 25-15 quick view, for links 6-7

R

radius global configuration 23-4 rate limits, for routing entities 19-38 reconciliation badge A-20 aggregations 2-35 business elements 7-7 description 3-9 EFPs 13-49 switching entities 13-49 VPLS forwards 13-77 red border in maps, and graphical links 2-10 reduced polling 3-18 reduction count, definition 10-6 redundancy service 19-13 badge 3-9, A-21 on LSP endpoints 19-13 pseudowires 13-99 related documentation xxv removing tickets 10-20 VLAN overlays 13-61 VLANs from maps 13-52 VPNs 19-23 renaming Ethernet flow domains 13-41 report folders 11-47 reports 11-42 REP icons and badges 13-62 viewing for VLAN service link properties 13-63 in VLAN domain views 13-62 in VLAN overlays 13-62 report categories 11-11 report folders creating 11-46 deleting 11-48 moving 11-47

renaming 11-47 viewing properties 11-48 working with 11-46 Report Manager content pane 11-7 events reports 11-11 generating reports 11-24 inventory reports 11-19 menu options 11-6 navigation tree 11-7 network service reports 11-21 report categories 11-11 right-click options 11-9 roles required 11-1 toolbar buttons 11-6, A-17 using 11-4 report properties, viewing 11-45 reports and database load 11-24 canceled 11-24 creating folders 11-46 defining types 11-46 deleting folders 11-48 reports 11-44 events Daily Average and Peak 11-12 Devices with the Most Events by severity 11-12 Devices with the Most Events by type 11-12 Devices with the Most Syslogs 11-13 Devices with the Most Traps 11-13 Event Reduction Statistics 11-13 Fault Database vs. Event Archive Statistics 11-13 Mean Time to Repair 11-14 Most Common Daily Events 11-14 Most Common Syslogs 11-14 Syslog Count by device 11-14 Syslog Count by type 11-14 Syslog Trend by severity 11-14

fail to generate 11-24 formats 11-41 generating 11-23 events reports 11-24 inventory reports 11-32 network service reports 11-35 generating from Prime Network Vision 11-39 Report Manager 11-24 Reports menu 11-38 inventory Hardware Summary By Selected Property 11-19 Hardware Summary Detailed 11-19 IOS-XR Software Package Summary 11-20 Modules Summary By Type 11-20 Software Version Summary by device 11-20 Software Version Summary by version 11-20 limiting access to 11-44 managing maximum concurrent reports 11-40 options 11-40 maximum number of concurrent reports 11-40 moving folders 11-47 reports between folders 11-44 network events Detailed Event Count (by device) 11-15 Detailed Service Events 11-15 Detailed Syslogs 11-16 Detailed Tickets 11-16 Detailed Traps 11-16 network service Ethernet Service Detailed 11-21 Ethernet Service Summary 11-21 Network Pseudowire Detailed 11-22 Network Pseudowire Summary 11-22 VPLS Detailed 11-23 VPLS Summary 11-23 non-network events

Detailed Audit Events 11-17 Detailed Provisioning Events 11-17 Detailed Security Events 11-18 Detailed System Events 11-18 options for detailed network events reports 11-28 detailed non-network events reports 11-31 events reports 11-26 inventory reports 11-33 network service reports 11-36 overview 11-1 queued 11-40 renaming folders 11-47 reports 11-42 Report Properties dialog box 11-45 roles required 11-1 saving 11-41 scheduling 11-39 sharing 11-43 using Report Manager 11-4 viewing 11-41 report folder properties 11-48 report properties 11-45 report type properties 11-50 working with folders 11-46 Reports menu, and generating reports 11-38 report types, viewing properties 11-50 REP primary badge 3-9, A-21 REP primary blocking badge 3-9, A-21 Resilient Ethernet Protocol (REP), viewing properties 13-14 restore mode (CM) 4-6 merge 4-50 overwrite 4-50 restoring files from archive to devices (CM) 4-20, 4-56, 4-57 right-click options aggregations 2-34

Cisco PathTracer 12-4, 12-19 devices 2-31 links 2-35 links view 2-37 list view 2-13, 2-35 maps 2-30 Prime Network Events 8-7 Prime Network Vision 2-11, 2-29 Report Manager 11-9 tickets 2-38 roles managing reports 11-1 viewing Carrier Ethernet properties 13-2 Carrier Grade NAT properties 14-2 DWDM properties 15-1 Ethernet OAM tool properties 16-1 IPv6 information 18-2 SBC properties 22-2 working with business tags 7-1 Cisco PathTracer 12-1 links 6-1 maps 5-2 MPLS networks 19-1 MToP 21-1 Prime Network Events 8-1, 9-1 Prime Network Vision 2-1, 3-1 reports 11-1 tickets 10-1 rolling back images on devices (NEIM) 4-35, 4-40, 4-56, 4-57 routers, logical (Cisco IOS XR) 4-35 routing entities 19-32 ARP table 19-35 NDP table 19-36 rate limit information 19-38 viewing properties 19-32 RTPM commands 15-15

S

SAE-GW overview 26-34 SAToP, overview 21-2 saving maps 5-15 reports 11-41 SBC AAA properties 22-7 blacklists, configuring 22-26 CAC policies, configuring 22-28 Call Policies, configuring 22-32 Codec Lists, configuring 22-36 commands 22-14, 22-39 configuration commands 22-15 DBE properties 22-5 H.248 properties 22-5, 22-7 logical inventory properties 22-1 Media Addresses, configuring 22-37 media address properties 22-5 overview 22-1 performance management commands 22-39 policy properties 22-8 properties 22-4, 22-39 QoS Profiles, configuring 22-38 SBE properties 22-6 SIP properties 22-12 SIPs, configuring 22-15, 22-20 user roles required for viewing properties 22-2 viewing in logical inventory 22-3, 22-5 schedule configuration audit 4-44 scheduled jobs monitoring 11-40 scripts launching 2-37 launching for activation and configuration 5-1 Security tab events 9-17

in Prime Network Events 9-6 service policy 25-12 Service tab, in Prime Network Events 9-7 service template 25-9 service view overlays 19-25 removing VLANs 13-52 removing VPNs 19-23 virtual routers 19-23 VPNs 19-21, 19-26 Session Border Controller. See SBC setup tasks Cisco Prime Network 4-3 CM 4-5 global settings 4-47 NEIM 4-6 severity color of device icon 2-18 icons A-12 indicators in Prime Network Vision map view 2-11 overview 2-17 propagation 2-17 S-GW overview 26-38 view properties 26-38 shared switching entities 13-39 sharing reports 11-43 Show Channel (mLACP command) 13-28 Show Group (mLACP command) 13-28 showing IP SLA 17-14 showing SLA operations 17-13 showing SLA profiles 17-13 Show LACP Internal (mLACP command) 13-28 Show MPLS LDP (mLACP command) 13-28 Shutting Down, VNE investigation state 2-21 SIPs (SBC), configuring 22-15, 22-20, 22-24 sites, viewing properties 19-27 SLA operation details 17-13

SLA profiles 17-13 **SNMP** CFM server traps, enable 16-10 Software Version Summary report by device 11-20 by version 11-20 SONET BER thresholds, setting 21-54 commands 21-54 controller data 21-54 counters 21-54 SONET/SDH, viewing properties 21-19 Spanning Tree Protocol. See STP static link, adding 6-15 status indicators, for network elements 2-16 Stopped, VNE investigation state 2-21 STP viewing link information in VLAN overlay 13-65 properties 13-10 VLAN service link properties 13-66 viewing in VLAN domain views 13-65 VLAN overlays 13-65 STP root badge 3-9, A-21 Structure-Agnostic TDM over Packet. See SAToP subscriber, definition 1-4 subscriber access points 25-5 diagnose 25-6 switching entities containing termination points 13-49 overview 13-45 synchronizing files (CM) 4-16, 4-56, 4-57 Synchronous Ethernet (SyncE), viewing properties 21-46 Syslog Count report by device 11-14 by type 11-14 Syslog tab, in Prime Network Events 9-8 Syslog Trend report by severity 11-14

Cisco Prime Network 3.10 User Guide

system event tabs, in Prime Network Events 9-3System tab, in Prime Network Events 9-6

Т

T3 DS1 and DS3, viewing properties 21-22 tables managing in Prime Network Vision 2-40 toolbar buttons A-15 tabs in Cisco PathTracer window 12-18 tag manipulations, for associated VLANs 13-54 TDM overview 21-17 viewing properties in physical inventory 21-18 Telnet to devices 5-28 termination points, in switching entities 13-49 TE tunnels and Cisco PathTracer 12-33 thumbnail views, options 5-15, 5-18 ticket and events pane, Prime Network Vision inventory window 3-15 ticket pane information displayed 10-5 Prime Network Vision 2-16 ticket properties, Details tab 9-19 Ticket Properties dialog box Advanced tab 10-18 Affected Parties tab 10-14 Correlation tab 10-17 Details tab 10-12 History tab 10-13 Notes tab 10-18, 10-19 toolbar 10-12 tickets acknowledged 10-7 acknowledging 10-19 and EFP severities 13-37 badges A-21 clearing 10-7, 10-20

clearing and removing 10-21 definition 1-4 filtering by criteria 10-8 finding affected elements using the ticket pane 10-19 generated 10-7 icons 2-22 managing 10-19 propagating new 2-17 properties 10-10 removing 10-20 removing filters 9-24 right-click menu 2-38 roles required 10-1 status 10-6 viewing in Prime Network Events 9-2 in Prime Network Vision 10-3 properties 10-12 working with in Prime Network Vision 10-1 Tickets tab inventory window 3-15 link properties window 6-12 Prime Network Events 9-8 Time Division Multiplexing. See TDM or MToP TDM toolbar buttons Cisco PathTracer single-path window 12-17 for filtering links A-16 for tables A-15 Prime Network Vision list view A-15 Report Manager 11-6, A-17 Ticket Properties window 10-12 toolbars Cisco PathTracer 12-17 Cisco PathTracer details window 12-22 device view pane 3-14 Prime Network Events 8-5 Prime Network Vision 2-22

Prime Network Vision list view 2-41 Report Manager 11-6 Ticket Properties window 10-12 tooltips for links 6-6 Tracking Disabled, VNE communication state 2-20 traps CFM SNMP, enable 16-10 Trap tab (events) 9-18

U

unassociated bridges adding 13-72 overview 13-72 understanding EFP severity and ticket badges 13-37 static and dynamic links 6-3 unassociated bridges 13-72 VLAN and EFD discovery 13-44 ungrouping aggregations 5-19 UNI (E-LMI), configure 16-20 unlock mpls tp tunnels 19-58 unmanaged network, definition 1-5 Unsupported, VNE investigation state 2-20 updating affected severity 10-24 VNE information 3-18 upgrade analysis (NEIM) 4-27 Up ticket 10-8 User-defined device groups permissions 4-56, 4-57 user roles mobile technologies 26-1 viewing Carrier Grade NAT properties 14-2 DWDM properties 15-1 Ethernet OAM properties 16-1 MToP properties 21-1 SBC properties 22-2

working with business elements 7-1 business tags 7-1 Carrier Ethernet services 13-2 Cisco PathTracer 12-1 IPv6 and 6VPE 18-2 links 6-1 maps 5-2 MPLS networks 19-1 Prime Network Events 8-1, 9-1 Prime Network Vision 2-1, 3-1 reports 11-1 tickets 10-1 user roles for bng 25-2

V

V1 Trap tab, in Prime Network Events 9-10 V2 Trap tab, in Prime Network Events 9-10 V3 Trap tab, in Prime Network Events 9-11 View HSRP properties 13-17 viewing 6rd tunnel properties 19-48 access gateway properties 13-19 additional APN characteristics 26-18 additional GTPP characteristics 26-26 APN properties 26-13 ATM cross-connects 21-6 ATM VCI properties 21-10 ATM VPI properties 21-10 BFD session properties 19-50 Carrier Ethernet properties, roles required 13-2 Carrier Grade NAT properties 14-2, 14-5 CDP properties 13-6 CEM groups 21-51, 21-52, 21-53 CEM interfaces 21-51 CEM properties 21-50 CESoPSN pseudowire properties 21-3

Cisco Prime Network 3.10 User Guide

Γ

CFM properties 16-3 cross-VRF routing entries 19-52 device operating system information 3-31 device properties **3-6** DWDM properties 15-3 EFP cross-connect properties 13-75 EFP properties 13-32 encapsulation information 21-11 Ethernet flow domains 13-41 Ethernet LAG properties 13-23 Ethernet LAGs 13-22 Ethernet Link Aggregation Groups 13-22 Ethernet services properties 13-106 EVC service properties 13-39 GGSN properties 26-6 GTPP properties 26-25, 26-31 GTPU properties 26-10 ICCP properties 13-28 IMA group properties 21-13 IP SLA responder service properties 13-109 IPv6 information 18-2 IS-IS properties 13-111 Layer 2 Tunnel Protocol path trace 12-28 Link Layer Discovery Protocol (LLDP) properties 13-8 Link Layer Discovery Protocol properties 13-8 Link OAM properties 16-20 link properties 6-10 links between VLAN elements and devices 13-57 LLDP properties 13-8 LSE properties 19-41 LSP endpoint properties 19-13 LSPs on Ethernet links 19-11 mLACP properties 13-28 MLPPP link properties 21-30 MLPPP properties 21-27 MPLS TE tunnel information 19-55 MPLS-TP BFD sessions 19-52 MPLS-TP tunnel properties 19-7

network element properties 3-6 operating system information for devices 3-31 OSPF properties 13-114 path trace details in Cisco PathTracer 12-20 path traces in Cisco PathTracer 12-14 PBB properties 13-31 P-GW properties 26-36 port configuration information 3-25 pseudowire clock recovery properties 21-42 endpoint properties 13-86 properties 13-92 redundancy service properties 13-99 VCCV and CC information 13-97 PWE3 tunnel information 19-53 QinQ path trace 12-27 **REP** information in VLAN domain views 13-62 VLAN overlays 13-62 report folder properties 11-48 report properties 11-45 reports 11-41 report type properties 11-50 **REP** properties for VLAN service links 13-63 in logical inventory 13-14 routing entities **19-32** SAToP pseudowire properties 21-2 SBC properties 22-3, 22-5 S-GW properties 26-38 SONET/SDH channelization properties 21-19 STP information in VLAN domain views 13-65 information in VLAN overlays 13-65 properties 13-10 properties for VLAN service links 13-66 SyncE properties 21-46 T3 DS1 and DS3 channelization properties 21-22 TDM properties 21-18

ticket properties 9-18 tickets in Prime Network Vision 10-3 virtual CEMs list of **21-51** properties 21-50 virtual connection properties 21-5 Virtual Switching Instance properties 13-84 VLAN bridge properties 13-69 mapping properties 13-56 mappings 13-52 service link properties 13-62 trunk group properties 13-67 VNE properties 3-16 VPLS access Ethernet EFP properties 13-88 instance properties 13-83 properties 13-82 VPN properties 19-26 site properties 19-27 VRF properties 19-27 VRRP information 19-39 VSI properties 13-84 viewing address family ipv4 profile 20-4 viewing address family ipv6 profile 20-5 viewing IGMP profile 20-5 viewing mldp database details 19-44 viewing mldp neighbor details 19-45 viewing multicast details 20-2 viewing multicast protocols 20-4 viewing the PIM profile 20-7 viewing VRF multicast configuration 19-30 viewing y.1731 probes 17-2 virtual CEMs listing 21-51 viewing properties 21-50

Virtual Circuit Connectivity Verification (VCCV), viewing information for pseudowire endpoint 13-97

virtual cloud, definition 1-5 virtual connections viewing encapsulation information 21-11 viewing properties 21-5 virtual data center view configuration 27-9 virtualization 27-8 virtual machine view configuration 27-13 Virtual Router Redundancy Protocol (VRRP), viewing information 19-39 virtual routers moving 19-23 properties, viewing 19-27 VRF tables 19-31 Virtual Switching Instance. See VSI VLAN bridge, launching a path trace 12-10 VLAN overlays adding to maps 13-60 working with 13-44 **VLANs** adding associated VLANs 13-54 adding to map view 13-49 associations 13-54 definition 1-5 discovery 13-44 elements EFPs 13-46 icons in Prime Network Vision 13-45 network VLAN 13-45 overview 13-45 switching entities 13-45 overlays STP link information 13-65 viewing REP information 13-62 viewing STP information 13-65 overview 13-45 removing from maps 13-52

overlays 13-61 tag manipulations for associations 13-54 viewing associated VLAN mapping properties 13-56 associated VLAN service links 13-56 bridge properties 13-69 links between elements and devices 13-57 mappings 13-52 REP properties 13-63 service link properties 13-62 STP properties 13-66 working with 13-44 VLAN trunk group, viewing properties 13-67 VNE/Agent Unreachable, VNE communication state 2-20 VNE communication states Agent Not Loaded 2-20 Connecting 2-20 Device Partially Reachable 2-20 Device Unreachable 2-20 Tracking Disabled 2-20 VNE/Agent Unreachable 2-20 VNE investigation states Currently Unsynchronized 2-21 Defined Not Started 2-20 Discovering 2-21 Maintenance 2-21 Operational 2-21 Partially Discovered 2-21 Shutting Down 2-21 Stopped 2-21 Unsupported 2-20 **VNEs** communication state badges A-18 investigation state badges A-19 management state 2-18 modifying properties 3-16 updating information 3-18 viewing communication status 3-17 viewing properties 3-16

vPC 27-1 commands 27-4, 27-8 fabricpathconfiguration 27-6 view configuration 27-3 VPLS adding instances to maps 13-78 instance overlays 13-79 overlays link callout 13-81 viewing pseudowire tunnel links 13-81 viewing access Ethernet EFP properties 13-88 instance properties 13-83 properties 13-82 pseudowire endpoint properties 13-86 working with 13-77 VPLS report detailed 11-23 options 11-37 summary 11-23 **VPNs** adding to maps 19-22 and virtual routers 19-23 creating 19-21 definition 1-5 managing 19-21 moving virtual routers between 19-23 overlays 19-24 callouts 19-25 creating 19-24 displaying 19-25 hiding 19-25 properties, viewing 19-26 removing from maps 19-23 sites 19-27 viewing in maps 19-18 virtual routers 19-27 VRF multicast configuration 19-30 VRFs

overview 17-1

cross-VRF routing entries 19-52 tables egress 19-31 ingress 19-31 viewing properties 19-27 with IPv4 and IPv6 addresses 18-6 VSI, viewing properties 13-84 VTP Domains inventory tab 2-4

W

Working and Protected LSPs 19-5 working with associated VLANs 13-54 business elements 7-1 business tags 7-1 EFP cross-connects 13-74 Ethernet services 13-102 H-VPLS 13-77 links, user roles required 6-1 MPLS-TP tunnels 19-4 overlays 5-21 Prime Network Events 9-14 pseudowire overlays 13-89 pseudowires 13-89 tickets in Prime Network Vision 10-1 VLAN overlays 13-44 VLANs 13-44 VPLS 13-77

Y

y.1731
performance management mechanisms 17-1
y.1731 probes 17-1, 17-2, 17-4
diagnose commands 17-13
user roles required 17-2
y.1731 technology

Index