



Preface

This VNE Reference Guide lists the devices, software versions, topologies, modules, events, and technologies that are supported on VNEs for third-party devices provided with Cisco Prime Network (Prime Network) Version 3.8.x and 3.9.x.



Note

This guide contains a subset of the total list of VNEs supported by this version of Prime Network. For information about additional supported VNEs, contact Cisco Professional Services.

Audience

The audience for this document includes:

- Network viewers, who monitor the network and perform basic (non-privileged) system functions.
- Network operators, who perform day-to-day operations, such as creating business tags and maps, and controlling alarm life cycles.
- Network administrators, who activate services and configure the network.
- System administrators, who manage the system configuration and security.

Conventions

This document uses the following conventions:

Table 1 Conventions

Convention	Description
<i>string</i>	A string is a nonquoted set of characters. For example, when setting an SNMP community string to public, do not use quotation marks around the string, or the string will include the quotation marks.
^ or Ctrl	^ or Ctrl represents the Control key. For example, the key combination ^D or Ctrl-D means hold down the Control key while you press the D key. Alphabetic character keys are indicated in capital letters but are not case sensitive.
< >	Angle brackets show nonprinting characters, such as passwords.
!	An exclamation point at the beginning of a line indicates a comment line.

Table 1 **Conventions (Continued)**

Convention	Description
[]	Square brackets show optional elements.
{ }	Braces group alternative, mutually exclusive elements that are part of a required choice.
	A vertical bar, also known as a pipe, separates alternative, mutually exclusive elements of a choice.
boldface font	Button names, commands, keywords, and menu items.
boldface screen font	Courier bold shows an example of text that you must enter.
<i>italic</i> font	Variables for which you supply values.
<i>italic</i> screen font	Variables you enter.
screen font	Courier plain shows an example of information displayed on the screen.
Blue text	Indicates a link or reference to a section, table or object elsewhere in this Guide or on the World Wide Web.
Option > Network Preferences	Choosing a menu item.

Related Documentation

**Note**

We sometimes update the documentation after original publication. Therefore, you should also review the documentation on Cisco.com for any updates.

For all the related documentation for Cisco Prime Network 3.9, see the [Cisco Prime Network 3.9 Documentation Guide](#).

The Prime Network Technology Center is an online resource for additional downloadable Prime Network support content, including help for integration developers who use Prime Network application programming interfaces (APIs). It provides information, guidance, and examples to help you integrate your applications with Prime Network. It also provides a platform for you to interact with subject matter experts. To view the information on the Prime Network Technology Center website, you must have a Cisco.com account with partner level access, or you must be a Prime Network licensee. You can access the Prime Network Technology Center at:

http://developer.cisco.com/web/prime-network/docs/-/document_library/view/2356901.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.