

ΙΝΟΕΧ

Numerics

3.6.x tabs, in Prime Network Events 8-14
6rd tunnels, viewing properties 17-46
6VPE

and IPv6
16-1
IPv6 VPN over MPLS
16-1

A

access gateway badge 3-9, A-21 viewing properties 12-18 accumulating affected parties in an alarm 9-25 in the correlation tree 9-25 acknowledged tickets 9-6 acknowledging tickets 9-20 activation script, launching 2-48, 2-53, 4-1 adding associated VLANs 12-54 EFP cross-connects 12-76 Ethernet services 12-107 MPLS-TP tunnels 17-5 network elements 4-9 pseudowires 12-92 unassociated bridges 12-74 VLANs 12-49 VPLS instances 12-79 VPNs existing 17-23 new 17-22

Advanced tab events 8-18 tickets 9-18 affected elements, finding 9-20 Affected Elements window 4-31 affected parties 9-23 accumulating 9-7, 9-25 Affected Parties tab (tickets) 9-14 calculating 9-24 finding 9-20 affected severity, updating over time 9-26 Agent Not Loaded, VNE communication state 2-33 Agent Unreachable, VNE communication state 2-33 aggregation, definition 1-1 aggregations adding elements to 4-33 aggregating network elements 4-31 disaggregating 4-36 renaming 4-36 using Chinese characters 4-5 viewing thumbnails 4-33 working with thumbnail views 4-35 alarm count, definition 2-29 alarms badges A-22 customizing 2-56 definition 1-1 disabling on a port 3-28 enabling on a port 3-29 severities 9-23 All tab, in Prime Network Events 8-3 application, launching external 2-48, 2-52, 4-1

applying overlays Ethernet service 12-109 MPLS-TP tunnels 17-17 network clock 18-49 pseudowire 12-105 VLAN 12-60 VPLS instance 12-80 VPN 17-26 ARP table 17-37 associated VLANs adding 12-54 tag manipulations 12-54 viewing mapping properties 12-56 service links 12-56 working with 12-54 association, definition 1-2 ATM cross-connects in logical and physical inventory 18-6 overview 18-6 properties 18-7 viewing 18-6 audience, intended xvii audio options, customizing 2-56 Audit tab events 8-18 in Prime Network Events 8-4 auto refresh. in Prime Network Events 8-23

В

background images for maps 4-18 badges access gateway 3-9, A-21 alarms 2-31, A-22 blocking 3-9, A-21 clock service 3-9, A-21 for elements and links 3-9 icons A-19 lock 3-9, 17-6, A-22 management states A-19 multiple links 3-10, A-22 reconciliation 3-10, 6-9, 12-48, A-22 redundancy service 3-10, A-22 REP primary 3-10, A-22 REP primary blocking 3-10, A-22 STP root 3-10, A-22 technology related A-21 tickets A-22 VNE communication states A-20 VNE investigation states A-20 VNE management states 2-31 BFD viewing BFD session properties 17-48 viewing MPLS-TP BFD session properties 17-50 BGP, viewing inventory details 17-45 Bidirectional Forwarding Detection. See BFD blocked ports, using with Cisco PathTracer 11-4 blocking badge 3-9, A-21 borders for selected icons 4-14 bridges understanding unassociated 12-73 viewing properties for VLANs 12-70 business configurations 6-8 business elements definition 1-2 icons 2-17, A-4 roles required 6-1

business tag definition 1-2 detaching 6-5 roles required 6-1 searching for 6-5 using Chinese characters 6-3 working with 6-3 buttons A-17 for filtering links A-17 in table toolbars A-16 Prime Network Events Auto Refresh 8-23 Refresh Now 8-23 Ticket Properties dialog box A-18 toolbar A-17 Prime Network Vision A-12 link filtering A-17 table toolbar A-16 toolbar A-13 Report Manager toolbar A-19

С

callouts, VPN service overlay 17-27 Carrier Ethernet services, monitoring 12-1, 13-1 Carrier Grade NAT roles required for viewing properties 13-1 viewing properties logical inventory 13-2 physical inventory 13-5 Carrier Supporting Carrier (CSC) path traces 11-34 CEM groups configured on physical interfaces 18-52 virtual CEM interfaces 18-54 viewing in logical inventory 18-54 physical inventory 18-52 viewing properties 18-52

CEM interfaces properties 18-53 viewing in physical inventory 18-51 CESoPSN, viewing properties 18-3 CFM description maintenance domains 15-3 maintenance endpoints (MEPs) 15-3 maintenance intermediate points (MIPS) 15-3 overview 15-3 viewing properties for maintenance associations 15-7 maintenance domains 15-4, 15-6 MEPs 15-8 MIPs 15-5 remote MEPs 15-9 Chinese characters support for business tags 6-3 using in map and aggregation names 4-5 Circuit Emulation Services over PSN. See CESoPSN Cisco Discovery Protocol (CDP) properties in logical inventory 12-6 in physical inventory 12-8 viewing 12-6 Cisco PathTracer across CSC configurations 11-34 comparing paths 11-30 counter values, saving 11-29 destinations 11-12 details pane 11-27 details window menu options 11-24 toolbar 11-25 in MPLS networks 11-33

launching from Ethernet Flow Point (EFP) 11-9 Ethernet port 11-13 examples 11-9 IP interface 11-10 MPLS-TP tunnel endpoint 11-14 pseudowire endpoint 11-13 VLAN bridge 11-11 Layer 2 VPNs 11-36 Layer 3 VPNs 11-35 menus 11-17 opening 11-4 overview 1-6, 11-1, 11-2 path pane 11-19 path trace from inventory 11-8 from map view 11-6 options for starting 11-6 path trace pane 11-20, 11-25 rerunning paths 11-30 right-click options in path trace window 11-20 trace launch options 11-5 roles required 11-1 single-path window 11-17 starting points 11-33 tabs 11-19 toolbar 11-18 viewing Layer 2 Tunnel Protocol path information 11-31 path trace details 11-22 path traces 11-15 QinQ path information 11-31 clearing and removing tickets 9-22 clearing tickets 9-6, 9-21 clock recovery, pseudowire properties 18-45

clock service badge 3-9, A-21 properties 18-36 color coding, severity icons 7-5 Command Builder. See Prime Network Command Builder communication status, for VNEs 3-12 configuration scripts, launching 2-48, 2-53, 4-1 Connecting, VNE communication state 2-33 Connectivity Fault Management. See CFM content pane in Prime Network Vision 2-12 in the Prime Network Vision inventory window 3-18 tabs in logical inventory 3-36 Control Channel (CC), viewing information for pseudowire endpoint 12-100 conventions, used in this document xx Correlation tab (tickets) 9-17 CPU usage graph, opening 4-44 creating maps 4-8 report folders 10-48 VPNs 17-22 cross-connects ATM overview 18-6 properties 18-7 viewing 18-6 EFP adding 12-76 overview 12-75 properties 12-76 cross-VRF routing entries 17-51 Currently Unsynchronized, VNE investigation state 2-34 customizing audio options 2-56 event history size 2-56

D

Daily Average and Peak report 10-12 Daily Event Count by device report **10-15** Defined Not Started, VNE investigation state 2-34 defining report types 10-47 deleting business elements 6-8 maps **4-27** report folders 10-50 reports 10-45 Dense Wavelength Division Multiplexing. See DWDM destination, for Cisco PathTracer 11-12 Detailed Audit Events report 10-17 Detailed Provisioning Events report 10-17 Detailed Security Events report 10-17 Detailed Service Events report 10-15 Detailed Syslogs report 10-16 Detailed System Events report 10-17 Detailed Tickets report 10-16 Detailed Traps report **10-16** details pane, Cisco PathTracer 11-27 Details tab events 8-17 tickets 8-21, 9-12

Device Partially Reachable, VNE communication state 2-33

devices adding to maps 4-9 aggregations 4-31 CPU usage, checking 4-44 finding in maps 4-29 icons 2-12, A-2 in maps 4-31 pinging 4-44 removing from map 4-16 renaming aggregations 4-36 resizing in maps 4-14 severity indicator 2-30 status indicators 2-30 Telnet to a device 4-45 viewing operating system information 3-36 properties 3-6 Devices with the Most Events report by severity 10-12 by type 10-12 Devices with the Most Syslogs report 10-12 Devices with the Most Traps report 10-12 Device Unreachable, VNE communication state 2-33 device view pane in the Prime Network Vision inventory window 3-18 toolbar 3-19 disaggregating aggregations 4-36 Discovering, VNE investigation state 2-34 discovery based on Link OAM 15-13 EFD 12-43 EVC multiplex services 12-107 MPLS-TP tunnels 17-5 VLAN 12-43

document audience xvii conventions xx organization xviii related documentation xxi terminology 1-1 duplication count, definition 2-29 DWDM roles required for viewing properties 14-1 viewing alert and alarm counters 14-9 G.709 properties 14-5 ODU alarm properties 14-7 ODU alert properties 14-8 OTU alarm properties 14-7 OTU alert properties 14-8 performance monitoring configuration 14-10 properties 14-2

Е

EFD discovery 12-43 EFP launching a path trace 11-9 overview 12-45 understanding severity and ticket badges 12-37 EFP cross-connects adding 12-76 viewing properties 12-76 working with 12-75 egress adjacents, VRF 17-33 element icons, and information displayed 3-3 elements, business deleting 6-8 renaming 6-8 elements, viewing operating system information 3-36 Ethernet flow domains renaming 12-40 viewing 12-40 Ethernet Flow Domains inventory tab 2-7 Ethernet flow point (EFP), viewing properties 12-33 Ethernet LAGs viewing 12-21 viewing properties 12-22 Ethernet links, and configured LSPs 17-12 Ethernet LMI Device EVC Properties window 15-11 overview 15-9 viewing properties for device EVCs 15-10 for physical interfaces 15-11 for UNI interfaces 15-12 in logical inventory 15-10 Ethernet Local Management Interface. See Ethernet LMI Ethernet OAM overview 15-2 roles required for viewing properties 15-1 Ethernet Operations, Administration, and Maintenance. See Ethernet OAM Ethernet port, launching a path trace 11-13 Ethernet Service report detailed 10-19 options 10-36 summary 10-20 Ethernet services adding overlays 12-109 adding to maps 12-107 viewing properties 12-110 working with 12-106 EVC multiplex services, discovery 12-107 **EVCs** shared switching entities 12-38 viewing service properties 12-38 event history size, customizing 2-56 Event Reduction Statistics report 10-13

events Advanced tab 8-18 Audit tab 8-18 categories 7-5 definition 1-2 Details tab 8-17 filtering 8-24, 8-25 Provisioning tab 8-19 refreshing list in Prime Network Events 8-23 removing filters 8-27 Security tab 8-19 Trap tab 8-19 viewing in Prime Network Events 8-2 properties 8-16 events reports 10-11 detailed network events, report options 10-27 detailed non-network events, report options 10-30 generating from Prime Network Vision 10-39 Report Manager 10-23 Reports menu 10-38 report options 10-25 Run Report dialog box 10-24 exporting data from Prime Network Events 8-27 Prime Network Vision 2-65 external application, launching 2-48, 2-52, 4-1

F

Fault Database vs. Event Archive Statistics report 10-13 filtering events 8-24, 8-25 links by type 4-41, 4-43 during map creation 4-41 in an existing map 4-43 using collection method 5-18 removing for events and tickets 8-27 tables 2-62, 2-64 tickets by criteria 9-7 by network element 9-7 flickering links 5-3

G

General tab, in inventory window 3-18 generated ticket 9-6 graphical links, reducing number of in maps 2-19

Η

History tab (tickets) 9-13 H-VPLS working with 12-78 working with in Prime Network Vision 12-78

icons

See also buttons and badges alarm and ticket A-22 badges A-19 business elements 2-17, A-4 information displayed for elements 3-3 links A-8, A-9 logical inventory 3-34, A-6 management states 2-31, A-19 maps 17-21 map view 2-13 network elements 2-12, 2-15, A-2 physical inventory 3-22, A-8 Prime Network Events A-11 Prime Network Vision 2-13, A-1 reconciliation 3-10 reference A-1 REP 12-63 selecting 4-14 severities A-11 severity, color coding 2-30, 7-5 sizes 2-13, 3-3 tickets 2-35 VLAN domains 12-63 VLAN overlays 12-63 IMA group properties 18-13 viewing properties 18-13 impact analysis accumulating affected parties 9-24 affected severities 9-23 automatic mode 9-23 links and 5-13 proactive mode 9-23 Initializing management state 2-31 Inter-Chassis Communication Protocol (ICCP), viewing properties 12-28

inventory reports 10-18 generating from Prime Network Vision 10-39 Report Manager 10-31 Reports menu 10-38 report options 10-33 Run Report dialog box 10-32 inventory tabs Ethernet Flow Domains 2-7 in Prime Network Vision 2-6 Network Elements 2-7 opening 2-7 types of 2-7 VTP Domains 2-7 working with 2-8 inventory window content pane 3-18 device view pane 3-18 device view pane toolbar 3-19 General tab 3-18 logical inventory 3-30 navigation pane 3-17 Network Events tab 3-20 opening 3-14 options Disable Sending Alarms button 3-24, 18-6 Open Port Utilization Graph button 3-24, 18-6 Show Cross-Connect Table button 3-24, 18-6 Show DLCI Table button 3-24, 18-6 Show Encapsulation button 3-24, 18-6 Show VC Table button 3-24, 18-6 overview 3-14, 3-15 physical inventory 3-21, 3-24, 18-6 Ports tab 3-18, 3-25 Provisioning Events tab 3-20 ticket and events pane 3-20 Tickets tab 3-20 IOS-XR Software Package Summary report 10-18 IP interface, launching a path trace 11-10

IP SLA, viewing responder service properties 12-113 IPv6

addresses

in logical inventory 16-3 in physical inventory 16-4 in inventory 16-3 in Prime Network 16-3 notes, for viewing IPv6 addresses 16-4 support in Prime Network 16-1 viewing IPv6 information 16-3 IPv6 VPN over MPLS (6VPE) 16-1 IS-IS, viewing properties 12-115

Κ

keyboard shortcuts, for tables 2-60

L

launching Prime Network Events as a standalone application 7-3 from Prime Central 7-3 launching Prime Network Vision as a standalone application 2-3 from Prime Central 2-3 Layer 2 Cisco PathTracer (VPN) 11-36 Layer 3 Cisco PathTracer (VPN) 11-35 link aggregation group. See Ethernet LAGs Link Layer Discovery Protocol (LLDP), viewing properties 12-8 Link OAM and topology discovery 15-13 overview 15-13 viewing properties in logical inventory 15-14 physical inventory 15-17

link properties window link list pane 5-11 overview 5-10 properties pane 5-11 ticket and events pane 5-13 links adding 5-16 arrowheads 5-5, A-11 bidirectional vs. unidirectional 5-5, A-11 colors 5-6 dashed line 5-5, A-10 definition 1-2 dynamic 5-3 exceeding number that can be displayed 2-18 filtering A-17 by type 4-41, 4-43 in maps 4-41 using collection method 5-18 finding in maps 4-30 flickering 5-3 graphical representation 2-18 icons A-8, A-9 impact analysis 5-13 in maps 2-18 links view 5-8 normal vs. wide vs. tunnel 5-5 overview 5-1 properties 5-4 quick view 5-7 reducing number of in maps 2-19 selecting in maps 4-30, 5-19 significance of arrowheads A-11 characteristics A-10 color A-10 solid vs. dashed lines A-10 width A-10 solid line 5-5, A-10 static 5-3

tooltips 2-19, 5-6 tunnels 5-5 types A-9 use of arrowheads 5-5 user roles required for working with 5-1 viewing between VLAN elements and devices 12-57 in links view **5-8** options 5-18 properties 5-4, 5-10 width 5-5 links view filtering 2-26, A-17 information displayed 2-26 in Prime Network Vision 2-25 list view in Prime Network Vision 2-21 overview 2-21 right-click options 2-24 toolbar 2-23, 2-59, A-16 LLDP, viewing properties 12-8 lock badge 3-9, A-22 logical inventory branches 3-32 content pane 3-36 content pane tabs 3-36 icons 3-34, A-6 navigation pane 3-32 tabs 3-36 viewing in Prime Network Vision 3-30 window 3-31 logical link, definition 1-2 **LSEs** inventory details 17-42 viewing 17-42 LSP endpoints 17-14 properties 17-14

LSPs lockout state 17-6 on Ethernet links 17-12 properties 17-14 redundancy service properties 17-14 Working and Protected 17-6

Μ

Maintenance, VNE investigation state 2-34 maintenance domains, in CFM 15-3 managed element, definition 1-2 management states badges A-19 icons A-19 overview 2-31 managing maps, roles required 4-2 managing report folders creating 10-48 deleting 10-50 moving 10-49 renaming 10-49 viewing properties 10-51 managing reports deleting 10-45 moving reports 10-44 renaming 10-42 roles required 10-1 saving 10-41 sharing 10-43 viewing report properties 10-46 reports 10-41 managing tickets 9-19

managing VPNs 17-22 adding to maps 17-23 creating 17-22 moving virtual routers between 17-25 overlays adding 17-26 displaying 17-27 hiding 17-27 removing from maps 17-24 maps adding network elements 4-9 adding VLANs 12-49 aggregations 4-31 applying background images 4-18 Cisco PathTracer files 11-28 closing 4-5, 4-8 creating 4-8 customizing 2-56 deleting 4-27 devices in 4-29 filtering links 4-41 finding affected elements 4-30 links in maps 4-30 in Prime Network Vision 2-12 layouts 4-17 link icons A-8 network elements in 4-29, 4-31 opening 2-9, 4-5 any map 4-6 options 4-7 previously viewed 4-6 overlays callouts 17-27 VPN 17-26 overview 17-19, 17-20 previewing before printing 4-24 printing 4-24 print setup 4-25

red border and graphical links 2-18 removing devices 4-16 network elements 4-16 VLANs 12-52 VPNs 17-24 renaming 4-20 renaming aggregations 4-36 roles required 4-2 saving 4-21 as an image 4-22 as new map 4-22 with information 4-21 selecting views 4-17 using Chinese characters 4-5 using overview windows 4-19 viewing aggregation thumbnails 4-33 thumbnails 4-33 VPNs adding 17-23 overlays 17-26 viewing 17-19 working with 4-1 zooming in 4-15 map view adding VLAN overlays 12-60 in Prime Network Vision 2-12 Mean Time to Repair report 10-13 menus Cisco PathTracer 11-17 Cisco PathTracer details window 11-24 Prime Network Events 7-8 Prime Network Vision 2-38 Report Manager 10-6 MEPs, in CFM 15-3 MIPS, in CFM 15-3

MLPPP viewing link properties 18-30 viewing properties 18-26 Mobile Transport over Packet. See MToP modifying VNE properties 3-11 monitoring Carrier Ethernet services 12-1 Carrier Grade NAT properties 13-1 network clocking service 18-35 PTP service 18-38 Most Common Daily Events report 10-14 Most Common Syslogs report 10-14 moving report folders 10-49 reports between folders 10-44 MP-BGP properties in logical inventory 17-45 **MPLS** ARP table 17-37 BGPs, viewing 17-45 Cisco PathTracer and 11-33 LSEs, viewing 17-42 monitoring services 17-29 NDP table 17-37 pseudowire end-to-end emulation tunnels, viewing 17-51 rate limit information 17-39 roles required for viewing properties 17-1 routing entities 17-34 TE tunnels, viewing 17-53 MPLS pseudowire over GRE, properties 18-33 MPLS TE tunnel, inventory details 17-53 MPLS-TP tunnel endpoint, launching a path trace 11-14 MPLS-TP tunnels adding to maps 17-5 applying overlays 17-17 BFD sessions, viewing properties 17-50 discovery 17-5 LSP lockout state 17-6 overview 17-4

properties 17-7 working with 17-4 MToP channelized lines 18-17 IMA group properties 18-13 monitoring network clocking service 18-35 PTP service 18-38 network clocking service 18-35 PTP service overview 18-38 roles required for working with 18-1 TDM overview 18-16 viewing properties in physical inventory 18-17 viewing ATM cross-connects 18-6 ATM VCI properties 18-10 ATM VPI properties 18-10 CEM groups 18-52, 18-54 CEM interfaces 18-51 CEM properties 18-51 CESoPSN pseudowire properties 18-3 encapsulation information 18-11 IMA group properties 18-13 MLPPP link properties 18-30 MLPPP properties 18-26 network clocking service 18-35 pseudowire clock recovery properties 18-42 PTP service properties 18-38 SAToP pseudowire properties 18-2 SONET/SDH channelization properties 18-18 SyncE properties 18-46 T3 DS1 and DS3 channelization properties 18-22 TDM properties 18-17 virtual CEMs, list of 18-52 virtual CEMs properties 18-51 Multichassis LACP (mLACP), viewing properties 12-28 multiple links badge 3-10, A-22 multiplex services, discovery of 12-107

Ν

navigation pane logical inventory 3-32 physical inventory 3-21 Prime Network Vision 2-11 NDP table 17-37 network clocking service applying an overlay 18-49 clock service properties 18-36 monitoring 18-35 monitoring PTP service 18-38 overview 18-35 PTP interface properties 18-38 PTP service 18-38 network elements adding to existing aggregations 4-33 adding to maps 4-9 aggregating 4-32 aggregations 4-31 CPU usage, checking 4-44 definition 1-2 finding in maps 4-29 icons 2-12, 2-15, A-2 information displayed in icons 3-3 in maps 4-31 management state 2-31 pinging 4-44 removing from maps 4-16 renaming aggregations 4-36 resizing in maps 4-14 severity indicators and network elements 2-30 status indicators 2-30 Telnet to 4-45 viewing operating system information 3-36 properties 3-6 zooming in 4-15

Network Elements inventory tab 2-7 Network Events tab inventory window 3-20 link properties window 5-13 network event tabs, in Prime Network Events 8-7 Network Pseudowire report detailed 10-20 options 10-37 summary 10-20 network service reports 10-19 generating from Prime Network Vision 10-39 Report Manager 10-34 Reports menu 10-38 report options 10-36 Run Report dialog box 10-35 Notes tab (tickets) 9-19

0

obtaining documentation xxi opening inventory tabs 2-7 maps 2-9 Open Map dialog box options 4-7 operating system information, viewing for devices 3-36 Operational, VNE investigation state 2-34 options Open Map dialog box 4-7 working with aggregation thumbnails 4-35 OSPF supported versions 12-118 viewing properties 12-118

Γ

overlays applying to Ethernet services 12-109 maps 4-37 MPLS-TP tunnels 17-17 network clocks 18-49 pseudowire 12-105 VLANs 12-60 VPLS instances 12-80 VPNs 17-26 displaying and hiding for VLANs 12-61 for VPNs 17-27 in maps 4-40 Ethernet service 12-109 pseudowire 12-92, 12-105 removing 4-41, 12-62 viewing 4-40 pseudowire tunnel links in VPLS 12-83 REP information 12-62 STP information 12-65 VLAN adding 12-60 removing 12-62 viewing STP link information 12-66 working with 12-43 VPLS callouts 12-83 instance 12-80 viewing pseudowire tunnel links 12-83 VPN 17-25 adding 17-26 callouts 17-27 working with 4-29, 4-37

overview ATM cross-connects 18-6 CFM 15-3 Cisco PathTracer 1-6, 11-1 EFP cross-connects 12-75 EFPs 12-45 Ethernet LMI 15-9 Ethernet OAM 15-2 Link OAM 15-13 MPLS-TP tunnels 17-4 network clocking service 18-35 Prime Network Command Builder 1-7 Prime Network Events 1-8 Prime Network Soft Properties Manager 1-6 Prime Network Vision 1-5 Prime Network Vision inventory window 3-14 Prime Network Vision maps 2-8 PTP service 18-38 Report Manager 1-7 reports 10-1 SAToP 18-2 SBC 19-1 switching entities 12-45 TDM 18-16 unassociated bridges 12-73 VLANs 12-44 overview window 4-19

Ρ

Partially Discovered, VNE investigation state 2-34 parties, accumulating affected 9-7 password, changing 2-55 path pane, in Cisco PathTracer 11-19 path trace and blocked ports 11-4 examples 11-9 launching from EFP 11-9 Ethernet port 11-13 IP interface 11-10 MPLS-TP tunnel endpoint 11-14 pseudowire endpoint 11-13 VLAN bridge 11-11 starting 11-6 from inventory 11-8 from map view 11-6 viewing in Cisco PathTracer 11-15 Layer 2 Tunnel Protocol path information 11-31 path trace details 11-22 QinQ path information 11-31 path trace details window 11-22 path trace pane, Cisco PathTracer 11-20, 11-25 PathTracer. See Cisco PathTracer permissions, security 1-3 physical inventory branches 3-21 buttons Disable Sending Alarms 3-24, 18-6 Open Port Utilization Graph 3-24, 18-6 Show Encapsulation 3-24, 18-6 content pane 3-23 icons 3-22, A-8 navigation pane 3-21 viewing device properties 3-21 viewing in Prime Network Vision 3-21 window 3-19 physical link, definition 1-2

pinging devices 4-44 network elements 4-44 pseudowires 12-98 polling, initiating 3-14 Poll Now button 3-14 ports alarms disabling 3-28 enabling 3-29 viewing configuration 3-26 status 3-25 with IPv4 and IPv6 addresses 16-5 Ports tab, in inventory window 3-18, 3-25 Port Utilization graph, generating 3-30 Prime Central launching Prime Network Events 7-3 launching Prime Network Vision 2-3 Prime Network 3.6.x tabs, in Prime Network Events 8-14 Prime Network Command Builder launching scripts 2-48, 2-53, 4-1 overview 1-7 Prime Network Events All tab 8-3 Audit tab 8-4 buttons Ticket Properties dialog box A-18 toolbar A-17 customizing 7-10 displaying all events 7-5 event categories 7-5 exporting data 8-27 icon severities A-11 launching as a standalone application 7-3 from Prime Central 7-3 options 7-2

menus 7-8 network event tabs 8-7 overview 1-8 Prime Network 3.6.x tabs 8-14 Provisioning tab 8-5 right-click options 7-9 roles required 7-1, 8-1 Security tab 8-6 Service tab 8-8 Syslog tab 8-8 system event tabs 8-4 System tab 8-7 Ticket tab 8-9 toolbar 7-7 toolbar buttons A-17 V1 Trap tab 8-11 V2 Trap tab 8-11 V3 Trap tab 8-12 viewing all events 7-5 events and tickets 8-2 window 7-4 working with 8-15 Prime Network Soft Properties Manager overview 1-6 Prime Network Vision adding network elements 4-9 buttons A-12 filtering links A-17 table toolbar A-16 toolbar A-13 creating maps 4-8 customizing 2-56 deleting maps 4-27 exporting data 2-65 generating reports 10-39

GUI overview 17-19, 17-20

icons 17-21, A-1 links A-9 logical inventory A-6 map A-2, A-4 physical inventory A-8 selecting 4-14 sizes 2-13 interface components 2-5 inventory tabs 2-6 launching as a standalone application 2-3 from Prime Central 2-3 options 2-2 links characteristics A-10 colors A-10 icons A-9 list view toolbar A-16 maps 2-12, 2-56 adding network elements 4-9 choosing layout 4-17 closing 4-5, 4-8 creating 4-8 deleting 4-27 opening 4-5 overview 2-8 renaming 4-20 resizing elements 4-14 saving 4-21 saving as an image 4-22 saving as new map 4-22 saving with information 4-21 using Chinese characters 4-5 viewing options 4-17

menus 2-38 Activation 2-42 Edit 2-40 File 2-39 Help 2-44 Network Inventory 2-43 Node 2-41 Reports 2-43 right-click 2-45 Tools 2-42 View 2-40 Window 2-44 navigation 2-5 opening inventory tabs 2-7 the inventory window 3-14 overlays 17-27 overview 1-5 port information 3-26 properties window 3-7 removing network elements 4-16 renaming maps 4-20 resizing map elements 4-14 right-click menus 2-45 roles required 2-1, 3-2 tables defining filters 2-62 finding text in 2-60 managing 2-58 setting selection filters 2-64 sorting 2-61 toolbar options 2-59 toolbar buttons A-13 viewing tickets 9-4 VLAN elements and icons 12-44 windows 2-5

working with H-VPLS 12-78 inventory tabs 2-8 multiple tabs 2-11 tickets 9-1 VPLS 12-78 Prime Network Vision window content pane 2-12 inventory tabs 2-6 links view 2-25 list view overview 2-21 toolbar 2-23, 2-59 map view 2-12 icons 2-13 right-click options 2-20 severity indicators **2-20** navigation pane 2-11 right-click menus aggregation 2-50 device 2-46 link 2-51 links view 2-53 list view 2-51 maps 2-46 ticket 2-54 ticket pane 2-27 toolbar 2-35 layout tools 2-37 map options 2-36 map zoom tools 2-37 navigation tools 2-37 overlay tools 2-36 viewing options 2-36 printing maps 4-24

properties 6rd tunnels 17-46 CEM interface 18-53 clock service 18-36 ICCP 12-28 mLACP 12-28 MPLS pseudowire over GRE 18-33 MPLS-TP tunnels 17-7 MToP ATM VCI 18-10 ATM VPI 18-10 pseudowire clock recovery 18-45 PTP interface 18-38 REP 12-14 report folders 10-51 report types 10-52 SBC 19-4 AAA 19-7 DBE 19-4 H.248 19-5, 19-9 media address 19-5 policy 19-10 SBE 19-7 SIP 19-13 virtual connections 18-5 properties window in Prime Network Vision 3-7 provider, definition 1-2 Provider Backbone Bridge (PBB), viewing properties 12-31 Provisioning Events tab, in the inventory window 3-20 Provisioning tab events 8-19 in Prime Network Events 8-5 pseudowire clock recovery properties 18-45 viewing properties 18-42 pseudowire endpoint, launching a path trace 11-13

pseudowires adding 12-92 applying overlay 12-105 overlays 12-92 pinging 12-98 redundancy service properties 12-102 viewing endpoint properties 12-89 properties 12-95 redundancy service properties 12-102 tunnel links in VPLS overlays 12-83 VCCV and CC information 12-100 working with 12-92 PTP interface properties 18-38 monitoring service 18-38 service overview 18-38 PWE3 inventory details 17-51 viewing 17-51

Q

quick view, for links 5-7

R

rate limits, for routing entities 17-39 reconciliation badge A-22 aggregations 2-50 business elements 6-9 description 3-10 EFPs 12-48 switching entities 12-48 VPLS forwards 12-78 red border in maps, and graphical links 2-18 reduced polling 3-14 reduction count, definition 2-29

redundancy service 17-14 badge **3-10**, **A-22** on LSP endpoints 17-14 pseudowires 12-102 related documentation xxi removing overlays 4-41 tickets 9-21 VLAN overlays 12-62 VLANs from maps 12-52 VPNs 17-24 renaming Ethernet flow domains 12-40 maps 4-20 report folders 10-49 reports 10-42 REP icons and badges 12-63 viewing for VLAN service link properties 12-64 in VLAN domain views 12-62 in VLAN overlays 12-62 report categories 10-11 report folders creating 10-48 deleting 10-50 moving 10-49 renaming 10-49 viewing properties 10-51 working with 10-48

Report Manager content pane 10-8 events reports 10-11 generating reports 10-23 inventory reports 10-18 menu options 10-6 navigation tree 10-7 network service reports 10-19 overview 1-7 report categories **10-11** right-click options 10-9 roles required 10-1 toolbar buttons 10-6, A-19 using 10-4 report properties, viewing 10-46 reports and database load **10-22** canceled 10-22 creating folders 10-48 defining types 10-47 deleting folders 10-50 reports 10-45 events Daily Average and Peak 10-12 Devices with the Most Events by severity 10-12 Devices with the Most Events by type 10-12 Devices with the Most Syslogs 10-12 Devices with the Most Traps 10-12 Event Reduction Statistics 10-13 Fault Database vs. Event Archive Statistics 10-13 Mean Time to Repair 10-13 Most Common Daily Events 10-14 Most Common Syslogs 10-14 Syslog Count by device 10-14 Syslog Count by type 10-14 Syslog Trend by severity 10-14

fail to generate 10-22 formats 10-41 generating 10-22 events reports 10-23 inventory reports 10-31 network service reports 10-34 generating from Prime Network Vision 10-39 Report Manager 10-23 Reports menu 10-38 inventory IOS-XR Software Package Summary 10-18 Software Version Summary by device 10-18 Software Version Summary by version 10-18 limiting access to 10-44 managing maximum concurrent reports 10-40 options 10-40 maximum number of concurrent reports 10-40 moving folders 10-49 reports between folders 10-44 network events Detailed Event Count (by device) 10-15 Detailed Service Events 10-15 Detailed Syslogs 10-16 Detailed Tickets 10-16 Detailed Traps 10-16 network service Ethernet Service Detailed **10-19** Ethernet Service Summary 10-20 Network Pseudowire Detailed 10-20 Network Pseudowire Summary 10-20 VPLS Detailed 10-21 VPLS Summary 10-21

non-network events Detailed Audit Events 10-17 Detailed Provisioning Events 10-17 Detailed Security Events 10-17 Detailed System Events 10-17 options for detailed network events reports 10-27 detailed non-network events reports 10-30 events reports 10-25 inventory reports 10-33 network service reports 10-36 overview 10-1 queued 10-40 renaming folders 10-49 reports 10-42 Report Properties dialog box 10-46 roles required 10-1 saving 10-41 sharing 10-43 using Report Manager 10-4 viewing 10-41 report folder properties 10-51 report properties 10-46 report type properties **10-52** working with folders 10-48 Reports menu, and generating reports 10-38 report types, viewing properties 10-52 REP primary badge 3-10, A-22 REP primary blocking badge 3-10, A-22 Resilient Ethernet Protocol (REP), viewing properties 12-14 resizing icons using the Resize option 4-14 using your mouse 4-14

right-click options aggregations 2-50 Cisco PathTracer 11-5, 11-20 devices 2-46 links 2-51 links view 2-53 list view 2-24, 2-51 maps 2-46 Prime Network Events 7-9 Prime Network Vision 2-20, 2-45 Report Manager 10-9 tickets 2-54 roles managing reports 10-1 security 1-3 viewing Carrier Ethernet properties 12-2 Carrier Grade NAT properties 13-1 DWDM properties 14-1 Ethernet OAM tool properties 15-1 IPv6 information 16-2 SBC properties 19-2 working with business tags 6-1 Cisco PathTracer 11-1 links 5-1 maps 4-2 MPLS networks 17-1 MToP 18-1 Prime Network Events 7-1, 8-1 Prime Network Vision 2-1, 3-2 reports 10-1 tickets 9-1, 9-2 tickets in Prime Network Vision 9-2 routing entities 17-34 ARP table 17-37 NDP table 17-37 rate limit information 17-39 viewing properties 17-34

S

SAToP, overview 18-2 saving maps 4-21 reports 10-41 SBC AAA properties 19-7 DBE properties 19-4 H.248 properties 19-5, 19-9 logical inventory properties 19-1 media address properties 19-5 overview 19-1 policy properties 19-10 properties 19-4 SBE properties 19-7 SIP properties 19-13 user roles required for viewing properties 19-2 viewing in logical inventory 19-3, 19-4 scopes, and security 1-3 scripts launching 2-48, 2-53 launching for activation and configuration 4-1 security permissions 1-3 roles 1-3 scopes 1-3 Security tab events 8-19 in Prime Network Events 8-6 selecting icons 4-14 links in maps 4-30 Service tab, in Prime Network Events 8-8

service view overlays 17-27 removing VLANs 12-52 removing VPNs 17-24 virtual routers 17-25 VPNs 17-22, 17-29 Session Border Controller. See SBC severity color of device icon 2-31 icons A-11 indicators in Prime Network Vision map view 2-20 overview 2-30 propagation 2-30 shared switching entities 12-38 sharing reports 10-43 Shutting Down, VNE investigation state 2-35 sites, viewing properties 17-30 Soft Properties Manager. See Prime Network Soft **Properties Manager** Software Version Summary report by device 10-18 by version 10-18 SONET/SDH, viewing properties 18-18 Spanning Tree Protocol. See STP static link, adding 5-16 status indicators, for network elements 2-30 Stopped, VNE investigation state 2-35 STP viewing link information in VLAN overlay 12-66 properties 12-10 VLAN service link properties 12-66 viewing in VLAN domain views 12-65 VLAN overlays 12-65 STP root badge 3-10, A-22 Structure-Agnostic TDM over Packet. See SAToP submitting a service request xxi

subscriber, definition 1-2
switching entities

containing termination points 12-49
overview 12-45

Synchronous Ethernet (SyncE), viewing properties 18-46
Syslog Count report

by device 10-14
by type 10-14

Syslog tab, in Prime Network Events 8-8
Syslog Trend report by severity 10-14
system event tabs, in Prime Network Events 8-4
System tab, in Prime Network Events 8-7

Т

T3 DS1 and DS3, viewing properties 18-22 tables filtering 2-62 finding text in 2-60 keyboard shortcuts 2-60 keyboard shortcuts for 2-60 managing in Prime Network Vision 2-58 sorting 2-61 toolbar buttons A-16 tabs in Cisco PathTracer window 11-19 working with multiple tabs 2-11 tag manipulations, for associated VLANs 12-54 TDM overview 18-16 viewing properties in physical inventory 18-17 Telnet to devices 4-45 termination points, in switching entities 12-49 terminology in this document 1-1 TE tunnels and Cisco PathTracer 11-37 thumbnail views, options 4-35 ticket and events pane, Prime Network Vision inventory window 3-20

ticket pane information displayed 2-28 Prime Network Vision 2-27 ticket properties, Details tab 8-21 Ticket Properties dialog box Advanced tab 9-18 Affected Parties tab 9-14 Correlation tab 9-17 Details tab 9-12 History tab 9-13 Notes tab 9-19 toolbar 9-11 tickets acknowledged 9-6 acknowledging 9-20 and EFP severities 12-37 badges A-22 clearing 9-6, 9-21 clearing and removing 9-22 definition 1-3 filtering by criteria 9-7 by network element 9-7 finding affected elements in map 4-30 affected elements using the ticket pane generated 9-6 icons 2-35 managing 9-19 propagating new 2-30 properties 9-10 removing 9-21 removing filters 8-27 right-click menu 2-54 roles required 9-1 status 9-5

9-20

viewing in Prime Network Events 8-2 in Prime Network Vision 9-4 properties 9-11 working with in Prime Network Vision 9-1 Tickets tab inventory window 3-20 link properties window 5-13 Prime Network Events 8-9 Time Division Multiplexing. See TDM or MToP TDM toolbar buttons Cisco PathTracer single-path window 11-18 for filtering links A-17 for tables 2-59, A-16 Prime Network Vision list view A-16 Report Manager 10-6, A-19 Ticket Properties window 9-11 toolbars Cisco PathTracer 11-18 Cisco PathTracer details window 11-25 device view pane 3-19 Prime Network Events 7-7 Prime Network Vision 2-35, 2-59 Prime Network Vision list view 2-23, 2-59 Report Manager 10-6 Ticket Properties window 9-11 tooltips for links 5-6 Tracking Disabled, VNE communication state 2-33 Trap tab (events) 8-19

U

unassociated bridges adding 12-74 overview 12-73 understanding EFP severity and ticket badges 12-37 static and dynamic links 5-3 unassociated bridges 12-73 VLAN and EFD discovery 12-43 ungrouping aggregations 4-36 unmanaged network, definition 1-3 Unsupported, VNE investigation state 2-34 updating affected severity 9-26 VNE information 3-14 Up ticket 9-7 user roles viewing Carrier Grade NAT properties 13-1 DWDM properties 14-1 Ethernet OAM properties 15-1 MToP properties 18-1 SBC properties 19-2 working with business elements 6-1 business tags 6-1 Carrier Ethernet services 12-2 Cisco PathTracer 11-1 IPv6 and 6VPE 16-2 links 5-1 maps 4-2 MPLS networks 17-1 Prime Network Events 7-1, 8-1 Prime Network Vision 2-1, 3-2 reports 10-1 tickets 9-1 tickets in Prime Network Vision 9-2

V

V1 Trap tab, in Prime Network Events 8-11 V2 Trap tab, in Prime Network Events 8-11 V3 Trap tab, in Prime Network Events 8-12 viewing 6rd tunnel properties 17-46 access gateway properties 12-18 ATM cross-connects 18-6 ATM VCI properties 18-10 ATM VPI properties 18-10 BFD session properties 17-48 Carrier Ethernet properties, roles required 12-2 Carrier Grade NAT properties 13-2, 13-5 CDP properties 12-6 CEM groups 18-52, 18-54 CEM interfaces 18-51 CEM properties 18-51 CESoPSN pseudowire properties 18-3 CFM properties 15-3 cross-VRF routing entries 17-51 device operating system information 3-36 device properties 3-6 DWDM properties 14-2 EFP cross-connect properties 12-76 EFP properties 12-33 encapsulation information 18-11 Ethernet flow domains 12-40 Ethernet LAG properties 12-22 Ethernet LAGs 12-21 Ethernet Link Aggregation Groups 12-21 Ethernet services properties 12-110 EVC service properties 12-38 ICCP properties 12-28 IMA group properties 18-13 IP SLA responder service properties 12-113 IPv6 information 16-2 IS-IS properties 12-115 Layer 2 Tunnel Protocol path trace 11-31

Link Layer Discovery Protocol (LLDP) properties 12-8 Link Layer Discovery Protocol properties 12-8 Link OAM properties 15-13 link properties 5-10 links between VLAN elements and devices 12-57 LLDP properties 12-8 LSE properties 17-42 LSP endpoint properties 17-14 LSPs on Ethernet links 17-12 mLACP properties 12-28 MLPPP link properties 18-30 MLPPP properties 18-26 MPLS TE tunnel information 17-53 MPLS-TP BFD sessions 17-50 MPLS-TP tunnel properties 17-7 network element properties **3-6** operating system information for devices 3-36 OSPF properties 12-118 path trace details in Cisco PathTracer 11-22 path traces in Cisco PathTracer 11-15 PBB properties 12-31 port configuration information 3-26 pseudowire clock recovery properties 18-42 endpoint properties 12-89 properties 12-95 redundancy service properties 12-102 VCCV and CC information 12-100 PWE3 tunnel information 17-51 QinQ path trace 11-31 **REP** information in VLAN domain views 12-62 VLAN overlays 12-62 report folder properties 10-51 report properties 10-46 reports 10-41 report type properties 10-52

REP properties for VLAN service links 12-64 in logical inventory 12-14 routing entities 17-34 SAToP pseudowire properties 18-2 SBC properties 19-3, 19-4 SONET/SDH channelization properties 18-18 STP information in VLAN domain views 12-65 information in VLAN overlays 12-65 properties 12-10 properties for VLAN service links 12-66 SyncE properties 18-46 T3 DS1 and DS3 channelization properties 18-22 TDM properties 18-17 ticket properties 8-20 tickets in Prime Network Vision 9-4 virtual CEMs list of 18-52 properties 18-51 virtual connection properties 18-5 Virtual Switching Instance properties 12-87 VLAN bridge properties 12-70 mapping properties 12-56 mappings 12-52 service link properties 12-62 trunk group properties 12-68 VNE properties 3-11 VPLS access Ethernet EFP properties 12-91 instance properties 12-85 properties 12-85 VPN properties 17-29 site properties 17-30 VRF properties 17-30 VRRP information 17-40 VSI properties 12-87

virtual CEMs listing 18-52 viewing properties 18-51 Virtual Circuit Connectivity Verification (VCCV), viewing information for pseudowire endpoint 12-100 virtual cloud, definition 1-3 virtual connections viewing encapsulation information 18-11 viewing properties 18-5 Virtual Router Redundancy Protocol (VRRP), viewing information 17-40 virtual routers moving 17-25 properties, viewing 17-30 VRF tables 17-33 Virtual Switching Instance. See VSI VLAN bridge, launching a path trace **11-11** VLAN overlays adding to maps 12-60 working with 12-43 **VLANs** adding associated VLANs 12-54 adding to map view 12-49 associations 12-54 definition 1-3 discovery 12-43 elements EFPs 12-45 icons in Prime Network Vision 12-44 network VLAN 12-44 overview 12-44 switching entities 12-45 overlays STP link information 12-66 viewing REP information 12-62 viewing STP information 12-65 overview 12-44

removing from maps 12-52 overlays 12-62 tag manipulations for associations 12-54 viewing associated VLAN mapping properties 12-56 associated VLAN service links 12-56 bridge properties 12-70 links between elements and devices 12-57 mappings 12-52 REP properties 12-64 service link properties 12-62 STP properties 12-66 working with 12-43 VLAN trunk group, viewing properties 12-68 VNE/Agent Unreachable, VNE communication state 2-33 VNE communication states Agent Not Loaded 2-33 Connecting 2-33 Device Partially Reachable 2-33 Device Unreachable 2-33 Tracking Disabled 2-33 VNE/Agent Unreachable 2-33 VNE investigation states Currently Unsynchronized 2-34 Defined Not Started 2-34 Discovering 2-34 Maintenance 2-34 Operational 2-34 Partially Discovered 2-34 Shutting Down 2-35 Stopped 2-35 Unsupported 2-34

VNEs

communication state badges A-20 investigation state badges A-20 management state 2-31 modifying properties 3-11 updating information 3-14 viewing communication status 3-12 viewing properties 3-11 VPLS adding instances to maps 12-79 instance overlays 12-80 overlays link callout 12-83 viewing pseudowire tunnel links 12-83 viewing access Ethernet EFP properties 12-91 instance properties 12-85 properties 12-85 pseudowire endpoint properties 12-89 working with 12-78 **VPLS** report detailed 10-21 options 10-37 summary 10-21 **VPNs** adding to maps 17-23 and virtual routers 17-25 creating 17-22 definition 1-3 managing 17-22 moving virtual routers between 17-25 overlays 17-25 callouts 17-27 creating 17-26 displaying 17-27 hiding 17-27 properties, viewing 17-29 removing from maps 17-24

sites 17-30 viewing in maps 17-19 virtual routers 17-30 VRFs cross-VRF routing entries 17-51 tables egress 17-33 ingress 17-33 viewing properties 17-30 with IPv4 and IPv6 addresses 16-6 VSI, viewing properties 12-87 VTP Domains inventory tab 2-7

W

Working and Protected LSPs 17-6 working with associated VLANs 12-54 business elements 6-1 business tags 6-1 EFP cross-connects 12-75 Ethernet services 12-106 H-VPLS 12-78 inventory tabs 2-8 links, user roles required 5-1 MPLS-TP tunnels 17-4 overlays 4-37 Prime Network Events 8-15 pseudowire overlays 12-92 pseudowires 12-92 tickets in Prime Network Vision 9-1 VLAN overlays 12-43 VLANs 12-43 VPLS 12-78

Ζ

zooming in and out of maps 4-15

Index