

#### ΙΝΟΕΧ

#### **Numerics**

3.6.x tabs, in Prime Network Events 8-12
6rd tunnels, viewing properties 17-43
6VPE and IPv6 16-1

IPv6 VPN over MPLS 16-1

# Α

access gateway badge 3-8, A-20 viewing properties 12-18 accumulating affected parties in an alarm 9-23 in the correlation tree 9-23 acknowledged tickets 9-7 acknowledging tickets 9-19 activation script, launching 2-40, 2-44, 4-1 adding associated VLANs 12-52 EFP cross-connects 12-73 Ethernet services 12-102 MPLS-TP tunnels 17-5 network elements 4-9 pseudowires 12-88 unassociated bridges 12-70 VLANs 12-48 VPLS instances 12-76 VPNs existing 17-22 new 17-21 Advanced tab

events 8-17 tickets 9-18 affected elements, finding 9-19 Affected Elements window 4-28 affected parties 9-22 accumulating 9-23 Affected Parties tab (tickets) 9-14 calculating 9-23 finding 9-19 affected severity, updating over time 9-24 Agent Not Loaded, VNE communication state 2-27 Agent Unreachable, VNE communication state 2-27 aggregation, definition 1-1 aggregations adding elements to 4-30 aggregating network elements 4-28 disaggregating 4-33 renaming 4-32 using Chinese characters 4-5 viewing thumbnails 4-30 working with thumbnail views 4-32 alarm count, definition 9-6 alarms badges A-20 customizing 2-47 definition 1-1 disabling on a port 3-26 enabling on a port 3-26 severities 9-22 All tab, in Prime Network Events 8-3 APN additional characteristics 20-12 overview 20-8

roles required for viewing properties 20-2 view properties 20-9 application, launching external 2-40, 2-44, 4-1 applying overlays Ethernet service 12-104 MPLS-TP tunnels 17-16 network clock 18-48 pseudowire 12-100 VLAN 12-58 VPLS instance 12-77 VPN 17-24 ARP table 17-33 associated VLANs adding 12-52 tag manipulations 12-52 viewing mapping properties 12-54 service links 12-54 working with 12-52 association, definition 1-2 ATM cross-connects in logical and physical inventory 18-6 overview 18-6 properties 18-7 viewing 18-6 audience, intended xvii audio options, customizing 2-47 Audit tab events 8-17 in Prime Network Events 8-3 auto refresh, in Prime Network Events 8-21

#### В

background images for maps 4-17 badges access gateway 3-8, A-20 alarms 2-25, A-20

blocking 3-8, A-20

clock service 3-8, A-20 for elements and links 3-8 icons A-17 lock 3-8, 17-6, A-20 management states A-17 multiple links 3-8, A-20 reconciliation 3-9, 6-8, 12-47, A-20 redundancy service 3-9, A-20 REP primary 3-9, A-20 REP primary blocking 3-9, A-20 STP root 3-9, A-20 technology related A-20 tickets A-20 VNE communication states A-18 VNE investigation states A-18 VNE management states 2-25 BFD viewing BFD session properties 17-44 viewing MPLS-TP BFD session properties 17-46 BGP, viewing inventory details 17-42 Bidirectional Forwarding Detection. See BFD blocked ports, using with Cisco PathTracer 11-4 blocking badge 3-8, A-20 borders for selected icons 4-14 bridges understanding unassociated 12-70 viewing properties for VLANs 12-67 business configurations 6-8 business elements definition 1-2 icons 2-14, A-4 roles required 6-1 business tag definition 1-2 detaching 6-5 roles required 6-1 searching for 6-5 using Chinese characters 6-3

working with 6-3

buttons A-15 for filtering links A-15 in table toolbars A-15 Prime Network Events Auto Refresh 8-21 Refresh Now 8-21 Ticket Properties dialog box A-16 toolbar A-16 Prime Network Vision A-12 link filtering A-15 table toolbar A-15 toolbar A-12 Report Manager toolbar A-17

## С

callouts, VPN service overlay 17-25 Carrier Ethernet services, monitoring 12-1, 13-1 Carrier Grade NAT roles required for viewing properties 13-1 viewing properties logical inventory 13-2 physical inventory 13-5 Carrier Supporting Carrier (CSC) path traces 11-31 CEM groups configured on physical interfaces 18-51 virtual CEM interfaces 18-53 viewing in logical inventory 18-53 physical inventory 18-51 viewing properties 18-51 **CEM** interfaces properties 18-52 viewing in physical inventory 18-50 CESoPSN, viewing properties 18-3 CFM description maintenance domains 15-3

maintenance endpoints (MEPs) 15-3 maintenance intermediate points (MIPS) 15-3 overview 15-3 viewing properties for maintenance associations 15-7 maintenance domains 15-4, 15-6 MEPs 15-8 MIPs 15-5 remote MEPs 15-9 Chinese characters support for business tags 6-3 using in map and aggregation names 4-5 Circuit Emulation Services over PSN. See CESoPSN Cisco Discovery Protocol (CDP) properties in logical inventory 12-6 in physical inventory 12-8 viewing 12-6 Cisco PathTracer across CSC configurations 11-31 comparing paths 11-27 counter values, saving 11-27 destinations 11-11 details pane 11-25 details window menu options 11-22 toolbar 11-23 in MPLS networks 11-29 launching from Ethernet Flow Point (EFP) 11-8 Ethernet port 11-12 examples 11-7 IP interface 11-9 MPLS-TP tunnel endpoint 11-13 pseudowire endpoint 11-12 VLAN bridge 11-10 Layer 2 VPNs 11-33 Layer 3 VPNs 11-32 menus 11-16 opening 11-3

overview 1-6, 11-1, 11-2 path pane 11-18 path trace from inventory 11-7 from map view 11-5 options for starting 11-5 path trace pane 11-18, 11-23 rerunning paths 11-27 right-click options in path trace window 11-19 trace launch options 11-4 roles required 11-1 single-path window 11-16 starting points 11-30 tabs 11-18 toolbar 11-17 viewing Layer 2 Tunnel Protocol path information 11-29 path trace details 11-21 path traces 11-14 QinQ path information 11-28 clearing and removing tickets 9-21 clearing tickets 9-7, 9-20 clock recovery, pseudowire properties 18-44 clock service badge 3-8, A-20 properties 18-35 color coding, severity icons 7-5 Command Builder. See Prime Network Command Builder communication status, for VNEs 3-11 configuration scripts, launching 2-40, 2-44, 4-1 Connecting, VNE communication state 2-27 Connectivity Fault Management. See CFM content pane in Prime Network Vision 2-10 in the Prime Network Vision inventory window 3-16 tabs in logical inventory 3-32 Control Channel (CC), viewing information for pseudowire endpoint 12-96

conventions, used in this document xx Correlation tab (tickets) 9-17 CPU usage graph, opening 4-40 creating maps 4-8 report folders 10-46 VPNs 17-21 cross-connects ATM overview 18-6 properties 18-7 viewing 18-6 EFP adding 12-73 overview 12-72 properties 12-73 cross-VRF routing entries 17-47 Currently Unsynchronized, VNE investigation state 2-28 customizing audio options 2-47 event history size 2-47

### D

Daily Average and Peak report 10-12 Daily Event Count by device report 10-15 Defined Not Started, VNE investigation state 2-27 defining report types 10-46 deleting business elements 6-8 maps 4-25 report folders 10-48 reports 10-43 Dense Wavelength Division Multiplexing. See DWDM destination, for Cisco PathTracer 11-11 Detailed Audit Events report 10-17 Detailed Provisioning Events report 10-17 Detailed Security Events report 10-17 Detailed Security Events report 10-15

Detailed Syslogs report 10-16 Detailed System Events report 10-17 Detailed Tickets report 10-16 Detailed Traps report 10-16 details pane, Cisco PathTracer 11-25 Details tab events 8-16 tickets 8-20, 9-12 Device Partially Reachable, VNE communication state 2-27 devices adding to maps 4-9 aggregations 4-28 CPU usage, checking 4-40 finding in maps 4-26 icons 2-10, A-2 in maps 4-28 pinging 4-41 removing from map 4-15 renaming aggregations 4-32 resizing in maps 4-14 severity indicator 2-24 status indicators 2-24 Telnet to a device 4-41 viewing operating system information 3-33 properties 3-5 Devices with the Most Events report by severity 10-12 by type 10-12 Devices with the Most Syslogs report 10-12 Devices with the Most Traps report **10-12** Device Unreachable, VNE communication state 2-27 device view pane in the Prime Network Vision inventory window 3-16 toolbar 3-17 disaggregating aggregations 4-33 Discovering, VNE investigation state 2-28 discovery

based on Link OAM 15-13 EFD 12-42 EVC multiplex services 12-102 MPLS-TP tunnels 17-5 VLAN 12-42 document audience xvii conventions xx organization xviii related documentation xxi terminology 1-1 duplication count, definition 9-6 **DWDM** roles required for viewing properties 14-1 viewing alert and alarm counters 14-9 G.709 properties 14-4 ODU alarm properties 14-7 ODU alert properties 14-8 OTU alarm properties 14-7 OTU alert properties 14-8 performance monitoring configuration 14-10 properties 14-2

### Е

EFD discovery 12-42 EFP launching a path trace 11-8 overview 12-44 understanding severity and ticket badges 12-36 EFP cross-connects adding 12-73 viewing properties 12-73 working with 12-72 egress adjacents, VRF 17-30 element icons, and information displayed 3-3 elements, business deleting 6-8

renaming 6-8 elements, viewing operating system information 3-33 Ethernet flow domains renaming 12-39 viewing 12-39 Ethernet Flow Domains inventory tab 2-6 Ethernet flow point (EFP), viewing properties 12-31 Ethernet LAGs viewing 12-21 viewing properties 12-22 Ethernet links, and configured LSPs 17-11 Ethernet LMI Device EVC Properties window 15-11 overview 15-9 viewing properties for device EVCs 15-10 for physical interfaces 15-11 for UNI interfaces 15-12 in logical inventory 15-10 Ethernet Local Management Interface. See Ethernet LMI Ethernet OAM overview 15-2 roles required for viewing properties 15-1 Ethernet Operations, Administration, and Maintenance. See Ethernet OAM Ethernet port, launching a path trace 11-12 Ethernet Service report detailed 10-20 options 10-35 summary 10-20 Ethernet services adding overlays 12-104 adding to maps 12-102 viewing properties 12-105 working with 12-101 EVC multiplex services, discovery 12-102 **EVCs** shared switching entities 12-37

viewing service properties 12-37

event history size, customizing 2-47 Event Reduction Statistics report 10-13 events Advanced tab 8-17 Audit tab 8-17 categories 7-5 definition 1-2 Details tab 8-16 filtering 8-22, 8-23 Provisioning tab 8-17 refreshing list in Prime Network Events 8-21 removing filters 8-24 Security tab 8-18 Trap tab 8-18 viewing in Prime Network Events 8-2 properties 8-14 events reports 10-11 detailed network events, report options 10-27 detailed non-network events, report options 10-30 generating from Prime Network Vision 10-38 Report Manager 10-23 Reports menu 10-37 report options 10-25 Run Report dialog box 10-24 exporting data from Prime Network Events 8-25 Prime Network Vision 2-55

### F

Fault Database vs. Event Archive Statistics report 10-13 filtering events 8-22, 8-23 links by type 4-38, 4-40 during map creation 4-38

external application, launching 2-40, 2-44, 4-1

in an existing map 4-40 using collection method 5-18 removing for events and tickets 8-24 tables 2-53, 2-54 tickets by criteria 9-8 flickering links 5-3

### G

General tab, in inventory window 3-16 generated ticket 9-7 GGSN overview 20-3 roles required for viewing properties 20-2 view properties 20-4 graphical links, reducing number of in maps 2-17 GTPU overview 20-6 roles required for viewing properties 20-2 view properties 20-6

### Η

Hardware Summary By Selected Property 10-18 Hardware Summary Detailed report 10-18 History tab (tickets) 9-13 H-VPLS working with 12-75 working with in Prime Network Vision 12-75

### I

icons

See also buttons and badges alarm and ticket A-20 badges A-17 business elements 2-14, A-4

information displayed for elements 3-3 links A-8, A-9 logical inventory 3-30, A-6 management states 2-25, A-17 maps 17-20 map view 2-11 network elements 2-10, 2-13, A-2 physical inventory 3-19, A-8 Prime Network Events A-11 Prime Network Vision 2-11, A-1 reconciliation 3-9 reference A-1 REP 12-60 selecting 4-14 severities A-11 severity, color coding 2-24, 7-5 sizes 2-11, 3-3 tickets 2-29 VLAN domains 12-60 VLAN overlays 12-60 IMA group properties 18-13 viewing properties 18-13 impact analysis accumulating affected parties 9-23 affected severities 9-22 automatic mode 9-22 links and 5-13 proactive mode 9-22 Initializing management state 2-25 Inter-Chassis Communication Protocol (ICCP), viewing properties 12-27 inventory reports 10-18 generating from Prime Network Vision 10-38 Report Manager 10-31 Reports menu 10-37 report options 10-32 Run Report dialog box 10-32

inventory tabs Ethernet Flow Domains 2-6 in Prime Network Vision 2-5 Network Elements 2-5 opening 2-6 types of 2-5 VTP Domains 2-6 working with 2-7 inventory window content pane 3-16 device view pane 3-16 device view pane toolbar 3-17 General tab 3-16 logical inventory 3-27 navigation pane 3-15 Network Events tab 3-18 opening 3-12 options Disable Sending Alarms button 3-22, 18-6 Open Port Utilization Graph button 3-22, 18-6 Show Cross-Connect Table button 3-21, 18-6 Show DLCI Table button 3-22, 18-6 Show Encapsulation button 3-21, 18-6 Show VC Table button 3-21, 18-6 overview 3-12, 3-14 physical inventory 3-19, 3-21, 3-22, 18-6 Ports tab 3-16, 3-22 Provisioning Events tab 3-18 ticket and events pane 3-18 Tickets tab 3-18 IOS-XR Software Package Summary report 10-19 IP interface, launching a path trace **11-9** IP SLA, viewing responder service properties 12-108 IPv6 addresses in logical inventory 16-3 in physical inventory 16-4 in inventory 16-3 in Prime Network 16-3

notes, for viewing IPv6 addresses 16-4 support in Prime Network 16-1 viewing IPv6 information 16-3 IPv6 VPN over MPLS (6VPE) 16-1 IS-IS, viewing properties 12-110

### J

jobs scheduler 10-39

### К

keyboard shortcuts, for tables 2-51

### L

launching Prime Network Events as a standalone application 7-3 from Prime Central 7-3 in Find mode 7-4 launching Prime Network Vision as a standalone application 2-3 from Prime Central 2-2 Layer 2 Cisco PathTracer (VPN) 11-33 Layer 3 Cisco PathTracer (VPN) 11-32 link aggregation group. See Ethernet LAGs Link Layer Discovery Protocol (LLDP), viewing properties 12-8 Link OAM and topology discovery 15-13 overview 15-13 viewing properties in logical inventory 15-14 physical inventory 15-17 link properties window link list pane 5-11 overview 5-10 properties pane 5-11 ticket and events pane 5-12

links

adding 5-15 arrowheads 5-5, A-11 bidirectional vs. unidirectional 5-5, A-11 colors 5-5 dashed line 5-4, A-10 definition 1-2 dynamic 5-3 exceeding number that can be displayed 2-16 filtering A-15 by type 4-38, 4-40 in maps 4-38 using collection method 5-18 finding in maps 4-27 flickering 5-3 graphical representation 2-16 icons A-8, A-9 impact analysis 5-13 in maps 2-16 links view 5-8 normal vs. wide vs. tunnel 5-5 overview 5-1 properties 5-4 quick view 5-7 reducing number of in maps 2-17 selecting in maps 4-27, 5-18 significance of arrowheads A-11 characteristics A-10 color A-10 solid vs. dashed lines A-10 width A-10 solid line 5-4, A-10 static 5-3 tooltips 2-17, 5-6 tunnels 5-5 types A-9 use of arrowheads 5-5 user roles required for working with 5-1

viewing between VLAN elements and devices 12-55 in links view 5-8 options 5-18 properties 5-4, 5-10 width 5-5 links view filtering 2-23, A-15 information displayed 2-23 in Prime Network Vision 2-22 list view in Prime Network Vision 2-18 overview 2-18 right-click options 2-21 toolbar 2-20, 2-50, A-15 LLDP, viewing properties 12-8 lock badge 3-8, A-20 logical inventory branches 3-29 content pane 3-32 content pane tabs 3-32 icons 3-30, A-6 navigation pane 3-29 tabs 3-32 viewing in Prime Network Vision 3-27 window 3-28 logical link, definition 1-2 **LSEs** inventory details 17-38 viewing 17-38 LSP endpoints 17-13 properties 17-13 **LSPs** lockout state 17-6 on Ethernet links 17-11 properties 17-13 redundancy service properties 17-13 Working and Protected 17-5

#### Μ

Maintenance, VNE investigation state 2-28 maintenance domains, in CFM 15-3 managed element, definition 1-2 management states badges A-17 icons A-17 overview 2-25 managing maps, roles required 4-2 managing report folders creating 10-46 deleting 10-48 moving 10-47 renaming 10-47 viewing properties 10-48 managing reports deleting 10-43 moving reports 10-43 renaming 10-41 roles required 10-1 saving 10-40 sharing 10-42 viewing report properties 10-44 reports 10-40 managing tickets 9-19 managing VPNs 17-21 adding to maps 17-22 creating 17-21 moving virtual routers between 17-23 overlays adding 17-24 displaying 17-25 hiding 17-25 removing from maps 17-23 maps adding network elements 4-9 adding VLANs 12-48

aggregations 4-28 applying background images 4-17 Cisco PathTracer files 11-26 closing 4-5, 4-8 creating 4-8 customizing 2-47 deleting 4-25 devices in 4-26 filtering links 4-38 finding affected elements 4-27 links in maps 4-27 in Prime Network Vision 2-10 layouts 4-17 link icons A-8 network elements in 4-26, 4-28 opening 2-8, 4-5 any map 4-6 options 4-7 previously viewed 4-6 overlays callouts 17-25 VPN 17-24 overview 17-18, 17-19 previewing before printing 4-23 printing 4-23 print setup 4-23 red border and graphical links 2-16 removing devices 4-15 network elements 4-15 VLANs 12-50 VPNs 17-23 renaming 4-20 renaming aggregations 4-32 roles required 4-2 saving 4-20 as an image 4-21 as new map 4-21

with information 4-20 selecting views 4-16 using Chinese characters 4-5 using overview windows 4-19 viewing aggregation thumbnails 4-30 thumbnails 4-30 **VPNs** adding 17-22 overlays 17-24 viewing 17-18 working with 4-1 zooming in 4-15 map view adding VLAN overlays 12-58 in Prime Network Vision 2-10 Mean Time to Repair report 10-13 menus Cisco PathTracer 11-16 Cisco PathTracer details window 11-22 Prime Network Events 7-8 Prime Network Vision 2-31 Report Manager 10-6 MEPs, in CFM 15-3 MIPS, in CFM 15-3 **MLPPP** viewing link properties 18-29 viewing properties 18-26 Mobile technologies 20-1 APN 20-8 GGSN 20-3 GTPU 20-6 user roles 20-2 Mobile Transport over Packet. See MToP modifying VNE properties 3-9 Modules Summary By Type 10-19 monitoring Carrier Ethernet services 12-1 Carrier Grade NAT properties 13-1

network clocking service 18-34 PTP service 18-36 Most Common Daily Events report 10-14 Most Common Syslogs report 10-14 moving report folders 10-47 reports between folders 10-43 MP-BGP properties in logical inventory 17-42 **MPLS** ARP table 17-33 BGPs, viewing 17-42 Cisco PathTracer and 11-29 LSEs, viewing 17-38 monitoring services 17-26 NDP table 17-34 pseudowire end-to-end emulation tunnels, viewing 17-47 rate limit information 17-35 roles required for viewing properties 17-1 routing entities 17-31 TE tunnels, viewing 17-49 MPLS pseudowire over GRE, properties 18-32 MPLS TE tunnel, inventory details 17-49 MPLS-TP tunnel endpoint, launching a path trace 11-13 **MPLS-TP** tunnels adding to maps 17-5 applying overlays 17-16 BFD sessions, viewing properties 17-46 discovery 17-5 LSP lockout state 17-6 overview 17-4 properties 17-7 working with 17-4 MToP channelized lines 18-17 IMA group properties 18-13 monitoring network clocking service 18-34 PTP service 18-36

network clocking service 18-34 PTP service overview 18-36 roles required for working with 18-1 TDM overview 18-16 viewing properties in physical inventory 18-17 viewing ATM cross-connects 18-6 ATM VCI properties 18-10 ATM VPI properties 18-10 CEM groups 18-51, 18-53 CEM interfaces 18-50 CEM properties 18-50 CESoPSN pseudowire properties 18-3 encapsulation information 18-11 IMA group properties 18-13 MLPPP link properties 18-29 MLPPP properties 18-26 network clocking service 18-34 pseudowire clock recovery properties 18-41 PTP service properties 18-36 SAToP pseudowire properties 18-2 SONET/SDH channelization properties 18-18 SyncE properties 18-45 T3 DS1 and DS3 channelization properties 18-21 TDM properties 18-17 virtual CEMs, list of 18-51 virtual CEMs properties 18-50 Multichassis LACP (mLACP), viewing properties 12-27 multiple links badge 3-8, A-20 multiplex services, discovery of 12-102

#### Ν

navigation pane logical inventory **3-29** physical inventory **3-19** Prime Network Vision **2-9** NDP table **17-34**  network clocking service applying an overlay 18-48 clock service properties 18-35 monitoring 18-34 monitoring PTP service 18-36 overview 18-34 PTP interface properties 18-37 PTP service 18-36 network elements adding to existing aggregations 4-30 adding to maps 4-9 aggregating 4-29 aggregations 4-28 CPU usage, checking 4-40 definition 1-2 finding in maps 4-26 icons 2-10, 2-13, A-2 information displayed in icons 3-3 in maps 4-28 management state 2-25 pinging 4-41 removing from maps 4-15 renaming aggregations 4-32 resizing in maps 4-14 severity indicators and network elements 2-24 status indicators 2-24 Telnet to 4-41 viewing operating system information 3-33 properties 3-5 zooming in 4-15 Network Elements inventory tab 2-5 Network Events tab inventory window 3-18 link properties window 5-12 network event tabs, in Prime Network Events 8-6 Network Pseudowire report detailed 10-21 options 10-36

summary 10-21 network service reports 10-20 generating from Prime Network Vision 10-38 Report Manager 10-34 Reports menu 10-37 report options 10-35 Run Report dialog box 10-34 Notes tab (tickets) 9-18, 9-19

### 0

opening inventory tabs 2-6 maps 2-8 Open Map dialog box options 4-7 operating system information, viewing for devices 3-33 Operational, VNE investigation state 2-28 options Open Map dialog box 4-7 working with aggregation thumbnails **4-32 OSPF** supported versions 12-113 viewing properties 12-113 overlays applying to Ethernet services 12-104 maps 4-34 MPLS-TP tunnels 17-16 network clocks 18-48 pseudowire 12-100 VLANs 12-58 VPLS instances 12-77 VPNs 17-24 displaying and hiding for VLANs 12-59 for VPNs 17-25 in maps 4-37 Ethernet service 12-104

pseudowire 12-88, 12-100 removing 4-37, 12-59 viewing 4-37 pseudowire tunnel links in VPLS 12-79 REP information 12-60 STP information 12-63 VLAN adding 12-58 removing 12-59 viewing STP link information 12-63 working with 12-42 VPLS callouts 12-80 instance 12-77 viewing pseudowire tunnel links 12-79 VPN 17-24 adding 17-24 callouts 17-25 working with 4-26, 4-33 overview ATM cross-connects 18-6 CFM 15-3 Cisco PathTracer 1-6, 11-1 EFP cross-connects 12-72 EFPs 12-44 Ethernet LMI 15-9 Ethernet OAM 15-2 Link OAM 15-13 MPLS-TP tunnels 17-4 network clocking service 18-34 Prime Network Command Builder 1-6 Prime Network Events 1-7 Prime Network Soft Properties Manager 1-6 Prime Network Vision 1-4 Prime Network Vision inventory window 3-12 Prime Network Vision maps 2-7 PTP service 18-36 Report Manager 1-6 reports 10-1

SAToP 18-2 SBC 19-1 switching entities 12-43 TDM 18-16 unassociated bridges 12-70 VLANs 12-43 overview window 4-19

#### Ρ

Partially Discovered, VNE investigation state 2-28 password, changing 2-47 path pane, in Cisco PathTracer 11-18 path trace and blocked ports 11-4 examples 11-7 launching from EFP 11-8 Ethernet port 11-12 IP interface 11-9 MPLS-TP tunnel endpoint 11-13 pseudowire endpoint 11-12 VLAN bridge 11-10 starting 11-5 from inventory 11-7 from map view 11-5 viewing in Cisco PathTracer 11-14 Layer 2 Tunnel Protocol path information 11-29 path trace details 11-21 QinQ path information 11-28 path trace details window 11-21 path trace pane, Cisco PathTracer 11-18, 11-23 PathTracer. See Cisco PathTracer permissions, security 1-3 physical inventory branches 3-19 buttons Disable Sending Alarms 3-22, 18-6

Open Port Utilization Graph 3-22, 18-6 Show Encapsulation 3-21, 18-6 content pane 3-20 icons 3-19, A-8 navigation pane 3-19 viewing device properties 3-19 viewing in Prime Network Vision 3-19 window 3-17 physical link, definition 1-2 pinging devices 4-41 network elements 4-41 pseudowires 12-94 polling, initiating 3-12 Poll Now button 3-12 ports alarms disabling 3-26 enabling 3-26 viewing configuration 3-24 status 3-22 with IPv4 and IPv6 addresses 16-5 Ports tab, in inventory window 3-16, 3-22 Port Utilization graph, generating 3-27 Prime Central launching Prime Network Events 7-3 launching Prime Network Vision 2-2 Prime Network 3.6.x tabs, in Prime Network Events 8-12 Prime Network Command Builder launching scripts 2-40, 2-44, 4-1 overview 1-6 Prime Network Events All tab 8-3 Audit tab 8-3 buttons Ticket Properties dialog box A-16 toolbar A-16 customizing 7-10

displaying all events 7-5 event categories 7-5 exporting data 8-25 icon severities A-11 launching as a standalone application 7-3 from Prime Central 7-3 in Find mode 7-4 options 7-2 menus 7-8 network event tabs 8-6 overview 1-7 Prime Network 3.6.x tabs 8-12 Provisioning tab 8-5 right-click options 7-9 roles required 7-1, 8-1 Security tab 8-5 Service tab 8-7 Syslog tab 8-7 system event tabs 8-3 System tab 8-6 Ticket tab 8-8 toolbar 7-7 toolbar buttons A-16 V1 Trap tab 8-10 V2 Trap tab 8-10 V3 Trap tab 8-11 viewing all events 7-5 events and tickets 8-2 window 7-3 working with 8-14 Prime Network Soft Properties Manager overview 1-6 Prime Network Vision adding network elements 4-9 buttons A-12 filtering links A-15 table toolbar A-15 toolbar A-12

creating maps 4-8 customizing 2-47 deleting maps 4-25 exporting data 2-55 generating reports 10-38 GUI overview 17-18, 17-19 icons 17-20, A-1 links A-9 logical inventory A-6 map A-2, A-4 physical inventory A-8 selecting 4-14 sizes 2-11 interface components 2-4 inventory tabs 2-5 launching as a standalone application 2-3 from Prime Central 2-2 options 2-2 links characteristics A-10 colors A-10 icons A-9 list view toolbar A-15 maps 2-10, 2-47 adding network elements 4-9 choosing layout 4-17 closing 4-5, 4-8 creating 4-8 deleting 4-25 opening 4-5 overview 2-7 renaming 4-20 resizing elements 4-14 saving 4-20 saving as an image 4-21 saving as new map 4-21 saving with information 4-20 using Chinese characters 4-5

viewing options 4-16 menus 2-31 Activation 2-35 Edit 2-33 File **2-32** Help 2-37 Network Inventory 2-36 Node 2-34 Reports 2-36 right-click 2-37 Tools 2-35 View 2-33 Window 2-36 navigation 2-4 opening inventory tabs 2-6 the inventory window 3-12 overlays 17-25 overview 1-4 port information 3-24 properties window 3-6 removing network elements 4-15 renaming maps 4-20 resizing map elements 4-14 right-click menus 2-37 roles required 2-1, 3-2 tables defining filters 2-53 finding text in 2-51 managing 2-49 setting selection filters 2-54 sorting 2-51 toolbar options 2-50 toolbar buttons A-12 viewing tickets 9-3 VLAN elements and icons 12-43 windows 2-4 working with H-VPLS 12-75

inventory tabs 2-7 multiple tabs 2-9 tickets 9-1 VPLS 12-75 Prime Network Vision window content pane 2-10 inventory tabs 2-5 links view 2-22 list view overview 2-18 toolbar 2-20, 2-50 map view 2-10 icons 2-11 right-click options 2-18 severity indicators 2-17 navigation pane 2-9 right-click menus aggregation 2-42 device 2-38 link 2-42 links view 2-45 list view 2-43 maps 2-38 ticket 2-46 ticket pane 2-24 toolbar 2-29 layout tools 2-31 map options 2-29 map zoom tools 2-31 navigation tools 2-30 overlay tools 2-30 viewing options 2-30 printing maps 4-23 properties 6rd tunnels 17-43 CEM interface 18-52 clock service 18-35 ICCP 12-27 mLACP 12-27

MPLS pseudowire over GRE 18-32 MPLS-TP tunnels 17-7 MToP ATM VCI 18-10 ATM VPI 18-10 pseudowire clock recovery 18-44 PTP interface 18-37 REP 12-14 report folders 10-48 report types 10-50 SBC 19-4 AAA 19-6 DBE 19-4 H.248 19-5, 19-7 media address 19-4 policy 19-8 SBE 19-6 SIP 19-11 virtual connections 18-5 properties window in Prime Network Vision 3-6 provider, definition 1-2 Provider Backbone Bridge (PBB), viewing properties 12-30 Provisioning Events tab, in the inventory window 3-18 Provisioning tab events 8-17 in Prime Network Events 8-5 pseudowire clock recovery properties 18-44 viewing properties 18-41 pseudowire endpoint, launching a path trace 11-12 pseudowires adding 12-88 applying overlay 12-100 overlays 12-88 pinging 12-94 redundancy service properties 12-98 viewing

```
properties 12-91
redundancy service properties 12-98
tunnel links in VPLS overlays 12-79
VCCV and CC information 12-96
working with 12-88
PTP
interface properties 18-37
monitoring service 18-36
service overview 18-36
PWE3
inventory details 17-47
viewing 17-47
```

### Q

quick view, for links 5-7

#### R

rate limits, for routing entities 17-35 reconciliation badge A-20 aggregations 2-42 business elements 6-8 description 3-9 EFPs 12-47 switching entities 12-47 VPLS forwards 12-75 red border in maps, and graphical links 2-16 reduced polling 3-12 reduction count, definition 9-6 redundancy service 17-13 badge 3-9, A-20 on LSP endpoints 17-13 pseudowires 12-98 related documentation xxi removing overlays 4-37 tickets 9-21

endpoint properties 12-85

VLAN overlays 12-59 VLANs from maps 12-50 VPNs 17-23 renaming Ethernet flow domains 12-39 maps 4-20 report folders 10-47 reports 10-41 REP icons and badges 12-60 viewing for VLAN service link properties 12-61 in VLAN domain views 12-60 in VLAN overlays 12-60 report categories 10-11 report folders creating 10-46 deleting 10-48 moving 10-47 renaming 10-47 viewing properties 10-48 working with 10-46 Report Manager content pane 10-7 events reports 10-11 generating reports 10-23 inventory reports 10-18 menu options 10-6 navigation tree 10-7 network service reports 10-20 overview 1-6 report categories 10-11 right-click options 10-9 roles required 10-1 toolbar buttons 10-6, A-17 using 10-4 report properties, viewing 10-44 reports and database load 10-23

canceled 10-23 creating folders 10-46 defining types 10-46 deleting folders 10-48 reports 10-43 events Daily Average and Peak 10-12 Devices with the Most Events by severity 10-12 Devices with the Most Events by type 10-12 Devices with the Most Syslogs 10-12 Devices with the Most Traps 10-12 Event Reduction Statistics 10-13 Fault Database vs. Event Archive Statistics 10-13 Mean Time to Repair 10-13 Most Common Daily Events 10-14 Most Common Syslogs 10-14 Syslog Count by device 10-14 Syslog Count by type 10-14 Syslog Trend by severity 10-14 fail to generate 10-23 formats 10-40 generating 10-22 events reports 10-23 inventory reports 10-31 network service reports 10-34 generating from Prime Network Vision 10-38 Report Manager 10-23 Reports menu 10-37 inventory Hardware Summary By Selected Property 10-18 Hardware Summary Detailed 10-18 IOS-XR Software Package Summary 10-19 Modules Summary By Type 10-19 Software Version Summary by device 10-19 Software Version Summary by version 10-19 limiting access to 10-43 managing

maximum concurrent reports 10-39 options 10-39 maximum number of concurrent reports 10-39 moving folders 10-47 reports between folders 10-43 network events Detailed Event Count (by device) 10-15 Detailed Service Events 10-15 Detailed Syslogs 10-16 Detailed Tickets 10-16 Detailed Traps 10-16 network service Ethernet Service Detailed 10-20 Ethernet Service Summary 10-20 Network Pseudowire Detailed 10-21 Network Pseudowire Summary 10-21 VPLS Detailed 10-22 VPLS Summary 10-22 non-network events Detailed Audit Events 10-17 Detailed Provisioning Events 10-17 Detailed Security Events 10-17 Detailed System Events 10-17 options for detailed network events reports 10-27 detailed non-network events reports 10-30 events reports 10-25 inventory reports 10-32 network service reports 10-35 overview 10-1 queued 10-39 renaming folders 10-47 reports 10-41 Report Properties dialog box 10-45 roles required 10-1 saving 10-40 scheduling 10-38

sharing 10-42 using Report Manager 10-4 viewing 10-40 report folder properties 10-48 report properties 10-44 report type properties 10-50 working with folders 10-46 Reports menu, and generating reports 10-37 report types, viewing properties 10-50 REP primary badge 3-9, A-20 REP primary blocking badge 3-9, A-20 Resilient Ethernet Protocol (REP), viewing properties 12-14 resizing icons using the Resize option 4-14 using your mouse 4-14 right-click options aggregations 2-42 Cisco PathTracer 11-4, 11-19 devices 2-38 links 2-42 links view 2-45 list view 2-21, 2-43 maps 2-38 Prime Network Events 7-9 Prime Network Vision 2-18, 2-37 Report Manager 10-9 tickets 2-46 roles managing reports 10-1 security 1-3 viewing Carrier Ethernet properties 12-2 Carrier Grade NAT properties 13-1 DWDM properties 14-1 Ethernet OAM tool properties 15-1 IPv6 information 16-2 SBC properties 19-2 working with

business tags 6-1 Cisco PathTracer 11-1 links 5-1 maps 4-2 MPLS networks 17-1 MToP 18-1 Prime Network Events 7-1, 8-1 Prime Network Vision 2-1, 3-2 reports 10-1 tickets 9-1 routing entities 17-31 ARP table 17-33 NDP table 17-34 rate limit information 17-35 viewing properties 17-31

### S

SAToP, overview 18-2 saving maps 4-20 reports 10-40 SBC AAA properties 19-6 DBE properties 19-4 H.248 properties 19-5, 19-7 logical inventory properties 19-1 media address properties 19-4 overview 19-1 policy properties 19-8 properties 19-4 SBE properties 19-6 SIP properties 19-11 user roles required for viewing properties 19-2 viewing in logical inventory 19-3, 19-4 scheduled jobs monitoring 10-39 scopes, and security 1-3 scripts

launching 2-40, 2-44 launching for activation and configuration 4-1 security permissions 1-3 roles 1-3 scopes 1-3 Security tab events 8-18 in Prime Network Events 8-5 selecting icons 4-14 links in maps 4-27 Service tab, in Prime Network Events 8-7 service view overlays 17-25 removing VLANs 12-50 removing VPNs 17-23 virtual routers 17-23 VPNs 17-21, 17-26 Session Border Controller. See SBC severity color of device icon 2-25 icons A-11 indicators in Prime Network Vision map view 2-17 overview 2-24 propagation 2-24 shared switching entities 12-37 sharing reports 10-42 Shutting Down, VNE investigation state 2-28 sites, viewing properties 17-27 Soft Properties Manager. See Prime Network Soft **Properties Manager** Software Version Summary report by device 10-19 by version 10-19 SONET/SDH, viewing properties 18-18 Spanning Tree Protocol. See STP static link, adding 5-15

status indicators, for network elements 2-24 Stopped, VNE investigation state 2-28 STP viewing link information in VLAN overlay 12-63 properties 12-10 VLAN service link properties 12-64 viewing in VLAN domain views 12-63 VLAN overlays 12-63 STP root badge 3-9, A-20 Structure-Agnostic TDM over Packet. See SAToP subscriber, definition 1-2 switching entities containing termination points 12-48 overview 12-43 Synchronous Ethernet (SyncE), viewing properties 18-45 Syslog Count report by device 10-14 by type 10-14 Syslog tab, in Prime Network Events 8-7 Syslog Trend report by severity 10-14 system event tabs, in Prime Network Events 8-3 System tab, in Prime Network Events 8-6

# Т

T3 DS1 and DS3, viewing properties 18-21 tables filtering 2-53 finding text in 2-51 keyboard shortcuts 2-51 keyboard shortcuts for 2-51 managing in Prime Network Vision 2-49 sorting 2-51 toolbar buttons A-15 tabs in Cisco PathTracer window 11-18

working with multiple tabs 2-9

tag manipulations, for associated VLANs 12-52 TDM overview 18-16 viewing properties in physical inventory 18-17 Telnet to devices 4-41 termination points, in switching entities 12-48 terminology in this document 1-1 TE tunnels and Cisco PathTracer 11-34 thumbnail views, options 4-32 ticket and events pane, Prime Network Vision inventory window 3-18 ticket pane information displayed 9-5 Prime Network Vision 2-24 ticket properties, Details tab 8-20 Ticket Properties dialog box Advanced tab 9-18 Affected Parties tab 9-14 Correlation tab 9-17 Details tab 9-12 History tab 9-13 Notes tab 9-18, 9-19 toolbar 9-12 tickets acknowledged 9-7 acknowledging 9-19 and EFP severities 12-36 badges A-20 clearing 9-7, 9-20 clearing and removing 9-21 definition 1-3 filtering by criteria 9-8 finding affected elements in map 4-27 affected elements using the ticket pane 9-19 generated 9-7 icons 2-29 managing 9-19

propagating new 2-25 properties 9-10 removing 9-21 removing filters 8-24 right-click menu 2-46 roles required 9-1 status 9-6 viewing in Prime Network Events 8-2 in Prime Network Vision 9-3 properties 9-12 working with in Prime Network Vision 9-1 Tickets tab inventory window 3-18 link properties window 5-12 Prime Network Events 8-8 Time Division Multiplexing. See TDM or MToP TDM toolbar buttons Cisco PathTracer single-path window 11-17 for filtering links A-15 for tables 2-50, A-15 Prime Network Vision list view A-15 Report Manager 10-6, A-17 Ticket Properties window 9-12 toolbars Cisco PathTracer 11-17 Cisco PathTracer details window 11-23 device view pane 3-17 Prime Network Events 7-7 Prime Network Vision 2-29, 2-50 Prime Network Vision list view 2-20, 2-50 Report Manager 10-6 Ticket Properties window 9-12 tooltips for links 5-6 Tracking Disabled, VNE communication state 2-27 Trap tab (events) 8-18

### U

unassociated bridges adding 12-70 overview 12-70 understanding EFP severity and ticket badges 12-36 static and dynamic links 5-3 unassociated bridges 12-70 VLAN and EFD discovery 12-42 ungrouping aggregations 4-33 unmanaged network, definition 1-3 Unsupported, VNE investigation state 2-27 updating affected severity 9-24 VNE information 3-12 Up ticket 9-8 user roles viewing APN 20-2 Carrier Grade NAT properties 13-1 DWDM properties 14-1 Ethernet OAM properties 15-1 GGSN 20-2 GTPU 20-2 MToP properties 18-1 SBC properties 19-2 working with business elements 6-1 business tags 6-1 Carrier Ethernet services 12-2 Cisco PathTracer 11-1 IPv6 and 6VPE 16-2 links 5-1 maps 4-2 MPLS networks 17-1 Prime Network Events 7-1, 8-1 Prime Network Vision 2-1, 3-2 reports 10-1

tickets 9-1

#### V

V1 Trap tab, in Prime Network Events 8-10 V2 Trap tab, in Prime Network Events 8-10 V3 Trap tab, in Prime Network Events 8-11 viewing 6rd tunnel properties 17-43 access gateway properties 12-18 additional APN characteristics 20-12 APN properties 20-9 ATM cross-connects 18-6 ATM VCI properties 18-10 ATM VPI properties 18-10 BFD session properties 17-44 Carrier Ethernet properties, roles required 12-2 Carrier Grade NAT properties 13-2, 13-5 CDP properties 12-6 CEM groups 18-51, 18-53 CEM interfaces 18-50 CEM properties 18-50 CESoPSN pseudowire properties 18-3 CFM properties 15-3 cross-VRF routing entries 17-47 device operating system information 3-33 device properties 3-5 DWDM properties 14-2 EFP cross-connect properties 12-73 EFP properties 12-31 encapsulation information 18-11 Ethernet flow domains 12-39 Ethernet LAG properties 12-22 Ethernet LAGs 12-21 Ethernet Link Aggregation Groups 12-21 Ethernet services properties 12-105 EVC service properties 12-37 GGSN properties 20-4 GTPU properties **20-6** 

ICCP properties 12-27 IMA group properties 18-13 IP SLA responder service properties 12-108 IPv6 information 16-2 IS-IS properties 12-110 Layer 2 Tunnel Protocol path trace 11-29 Link Layer Discovery Protocol (LLDP) properties 12-8 Link Layer Discovery Protocol properties 12-8 Link OAM properties 15-13 link properties 5-10 links between VLAN elements and devices 12-55 LLDP properties 12-8 LSE properties 17-38 LSP endpoint properties 17-13 LSPs on Ethernet links 17-11 mLACP properties 12-27 MLPPP link properties 18-29 MLPPP properties 18-26 MPLS TE tunnel information 17-49 MPLS-TP BFD sessions 17-46 MPLS-TP tunnel properties 17-7 network element properties 3-5 operating system information for devices 3-33 OSPF properties 12-113 path trace details in Cisco PathTracer 11-21 path traces in Cisco PathTracer 11-14 PBB properties 12-30 port configuration information 3-24 pseudowire clock recovery properties 18-41 endpoint properties 12-85 properties 12-91 redundancy service properties 12-98 VCCV and CC information 12-96 PWE3 tunnel information 17-47 QinQ path trace 11-28 **REP** information in VLAN domain views 12-60

VLAN overlays 12-60 report folder properties 10-48 report properties 10-44 reports 10-40 report type properties 10-50 **REP** properties for VLAN service links 12-61 in logical inventory 12-14 routing entities 17-31 SAToP pseudowire properties 18-2 SBC properties 19-3, 19-4 SONET/SDH channelization properties 18-18 STP information in VLAN domain views 12-63 information in VLAN overlays 12-63 properties 12-10 properties for VLAN service links 12-64 SyncE properties 18-45 T3 DS1 and DS3 channelization properties 18-21 TDM properties 18-17 ticket properties 8-19 tickets in Prime Network Vision 9-3 virtual CEMs list of 18-51 properties 18-50 virtual connection properties 18-5 Virtual Switching Instance properties 12-83 VLAN bridge properties 12-67 mapping properties 12-54 mappings 12-50 service link properties 12-60 trunk group properties 12-65 VNE properties 3-9 VPLS access Ethernet EFP properties 12-87 instance properties 12-81 properties 12-81 VPN

properties 17-26 site properties 17-27 VRF properties 17-27 VRRP information 17-36 VSI properties 12-83 virtual CEMs listing 18-51 viewing properties 18-50 Virtual Circuit Connectivity Verification (VCCV), viewing information for pseudowire endpoint 12-96 virtual cloud, definition 1-3 virtual connections viewing encapsulation information 18-11 viewing properties 18-5 Virtual Router Redundancy Protocol (VRRP), viewing information 17-36 virtual routers moving 17-23 properties, viewing 17-27 VRF tables 17-30 Virtual Switching Instance. See VSI VLAN bridge, launching a path trace **11-10** VLAN overlays adding to maps 12-58 working with 12-42 **VLANs** adding associated VLANs 12-52 adding to map view 12-48 associations 12-52 definition 1-3 discovery 12-42 elements EFPs 12-44 icons in Prime Network Vision 12-43 network VLAN 12-43 overview 12-43 switching entities 12-43 overlays STP link information 12-63

viewing REP information 12-60 viewing STP information 12-63 overview 12-43 removing from maps 12-50 overlays 12-59 tag manipulations for associations 12-52 viewing associated VLAN mapping properties 12-54 associated VLAN service links 12-54 bridge properties 12-67 links between elements and devices 12-55 mappings 12-50 REP properties 12-61 service link properties 12-60 STP properties 12-64 working with 12-42 VLAN trunk group, viewing properties 12-65 VNE/Agent Unreachable, VNE communication state 2-27 VNE communication states Agent Not Loaded 2-27 Connecting 2-27 Device Partially Reachable 2-27 Device Unreachable 2-27 Tracking Disabled 2-27 VNE/Agent Unreachable 2-27 VNE investigation states Currently Unsynchronized 2-28 Defined Not Started 2-27 Discovering 2-28 Maintenance 2-28 Operational 2-28 Partially Discovered 2-28 Shutting Down 2-28 Stopped 2-28 Unsupported 2-27 **VNEs** communication state badges A-18 investigation state badges A-18

management state 2-25 modifying properties 3-9 updating information 3-12 viewing communication status 3-11 viewing properties 3-9 VPLS adding instances to maps 12-76 instance overlays 12-77 overlays link callout 12-80 viewing pseudowire tunnel links 12-79 viewing access Ethernet EFP properties 12-87 instance properties 12-81 properties 12-81 pseudowire endpoint properties 12-85 working with 12-75 VPLS report detailed 10-22 options 10-36 summary 10-22 VPNs adding to maps 17-22 and virtual routers 17-23 creating 17-21 definition 1-3 managing 17-21 moving virtual routers between 17-23 overlays 17-24 callouts 17-25 creating 17-24 displaying 17-25 hiding 17-25 properties, viewing 17-26 removing from maps 17-23 sites 17-27 viewing in maps 17-18 virtual routers 17-27 VRFs

cross-VRF routing entries 17-47 tables egress 17-30 ingress 17-30 viewing properties 17-27 with IPv4 and IPv6 addresses 16-6 VSI, viewing properties 12-83 VTP Domains inventory tab 2-6

### W

Working and Protected LSPs 17-5 working with associated VLANs 12-52 business elements 6-1 business tags 6-1 EFP cross-connects 12-72 Ethernet services 12-101 H-VPLS 12-75 inventory tabs 2-7 links, user roles required 5-1 MPLS-TP tunnels 17-4 overlays 4-33 Prime Network Events 8-14 pseudowire overlays 12-88 pseudowires 12-88 tickets in Prime Network Vision 9-1 VLAN overlays 12-42 VLANs 12-42 VPLS 12-75

### Ζ

zooming in and out of maps 4-15

I