



## Numerics

3GPP inventory retrieval [25-109](#)

6rd

add 6rd forwarding (command) [13-6](#)

tunnels, viewing properties [18-46](#)

6VPE

and IPv6 [17-1](#)

IPv6 VPN over MPLS [17-1](#)

## A

A10/A11 configurations (HSGW) [25-58](#)

AAA [22-9](#)

APN and [25-18](#)

commands. See AAA commands

diameter protocol [22-1](#)

dynamic protocol authorization profile [22-3](#)

foreign agent and [25-73, 25-76](#)

groups

charging configuration [22-10](#)

charging trigger configuration [22-11](#)

configuration [22-5](#)

diameter configuration [22-6](#)

profile [22-2](#)

RADIUS accounting configuration [22-7](#)

RADIUS authentication configuration [22-9](#)

RADIUS configuration [22-7](#)

home agent and [25-69](#)

HSGW and [25-54](#)

LAC configuration and [25-51](#)

overview [22-1](#)

PDSN and [25-92](#)

RADIUS global configuration [22-4](#)

RADIUS protocol [22-1](#)

AAA commands

create AAA group [25-138](#)

create diameter accounting server [22-12](#)

create diameter authentication server [22-12](#)

delete AAA group [22-12](#)

modify AAA group [22-12](#)

access gateway

badge [3-8, A-21](#)

viewing properties [12-19](#)

access list commands

create route access lists [25-138](#)

remove access list [1-6](#)

show route access lists [25-138](#)

See also route maps

accumulating affected parties

in an alarm [9-18](#)

in the correlation tree [9-19](#)

acknowledging tickets [9-15](#)

ACS

bandwidth policies [25-135](#)

charging action

rule base, viewing [25-133](#)

viewing properties [25-128](#)

commands. See ACS commands

content filtering

overview [25-122](#)

viewing categories [25-125](#)

content services steering [25-121](#)

create active charging service (command) [25-138](#)

credit control properties, viewing [25-125](#)

fair usage properties [25-136](#)

- overview [25-121](#)
  - protocol analyzer [25-121](#)
  - rule base
    - for charging action, viewing [25-133](#)
    - overview [25-122](#)
  - rule definition groups
    - commands. See ACS commands
    - viewing [25-132](#)
  - rule definitions
    - overview [25-121](#)
    - viewing [25-131](#)
  - viewing [25-123](#)
- ACS commands
- create access ruledef [25-136](#)
  - create charging action [25-136](#)
  - create group of ruledefs [25-136](#)
  - create host pool [25-136](#)
  - create rulebase [25-136](#)
  - create ruledef [25-136](#)
  - delete access ruledef [25-136](#)
  - delete active charging service [25-136](#)
  - delete charging action [25-136](#)
  - delete host pool [25-136](#)
  - modify active charging service [25-136](#)
  - modify charging action [25-136](#)
  - modify host pool [25-136](#)
  - rule definition groups
    - delete group of ruledefs [25-133](#)
    - show group of ruledefs [25-133](#)
  - show access ruledef [25-136](#)
  - show charging action [25-136](#)
- Activation
- cloning an activation [3-37](#)
  - deleting activations [3-37](#)
  - menu [2-29](#)
  - rolling back activations [3-36](#)
  - running activations [3-35](#)
  - searching for activations [3-36](#)
  - window [3-35](#)
  - wizards [3-35](#)
- activation script, launching [2-39](#)
- Active Charging Service. See ACS
- ADSL2+
- device inventory, viewing [28-4](#)
  - DSL cable bonding group [28-5](#)
  - n-to-one access profile [28-8](#)
  - one-to-one access profile [28-8, 28-10](#)
  - overview [28-2](#)
  - TLS access profile [28-8, 28-11](#)
  - user roles required [28-1](#)
  - viewing properties [28-2](#)
  - XDSL traffic descriptors [28-2](#)
- Advanced tab (Events GUI) [8-13, 9-13](#)
- affected elements [9-13](#)
- affected parties [9-17](#)
- accumulating [9-18, 9-19](#)
  - Affected Parties tab (tickets) [9-11](#)
  - calculating [9-18](#)
- affected severities [9-13, 9-19](#)
- Agent Not Loaded (VNE communication state) [2-21](#)
- Agent Unreachable, VNE communication state [2-21](#)
- aggregations [5-16](#)
- adding elements to [5-18](#)
  - creating [5-16](#)
  - disaggregating [5-19](#)
  - right-click options [2-36](#)
  - thumbnails [5-16](#)
  - working with thumbnail views [5-15](#)
- alarms
- alarm count in ticket [9-6](#)
  - alarm count in tickets [9-13](#)
  - badges [A-22](#)
  - customizing [2-40](#)
  - disabling on a port [3-26](#)
  - severities [9-17](#)
- APN
- commands. See APN commands
  - overview [25-13](#)

- profiles [25-115, 25-119](#)
- remap tables [25-113](#)
- view properties [25-14, 25-18](#)
- APN commands
  - create APN [25-138](#)
  - create QoS to DSCP mapping [25-22](#)
  - create virtual APN [25-22](#)
  - delete APN [25-22](#)
  - modify APN [25-22](#)
  - show APN [25-138](#)
- application, launching external [2-34, 2-38](#)
- applying overlays
  - VPLS instance [12-80](#)
  - VPN [18-24](#)
- APS commands
  - create APS [20-59](#)
  - modify APS [20-59](#)
- ARP table [18-34](#)
- associated VLANs
  - adding [12-55](#)
  - tag manipulations [12-55](#)
  - viewing
    - mapping properties [12-57](#)
    - service links [12-57](#)
  - working with [12-55](#)
- ATM cross-connects
  - in logical and physical inventory [20-6](#)
  - overview [20-6](#)
  - viewing [20-6](#)
- audience, intended [xxiii](#)
- audio options, customizing [2-40](#)
- Audit tab (events) [8-4, 8-13](#)

## B

- background images for maps [5-12](#)
- badges [A-19](#)
  - access gateway [3-8, A-21](#)
  - alarms [2-19, A-22](#)

- blocking [3-8, A-21](#)
- clock service [3-8, A-21](#)
- for elements and links [3-8](#)
- lock [3-8, 18-6, A-22](#)
- management states [A-19](#)
- multiple links [3-8, A-22](#)
- reconciliation [3-9, 12-50, A-22](#)
- redundancy service [3-9, A-22](#)
- REP primary [3-9, A-22](#)
- REP primary blocking [3-9, A-22](#)
- STP root [3-9, A-22](#)
- technology related [A-21](#)
- tickets [A-22](#)
- VNE communication states [A-20](#)
- VNE investigation states [A-20](#)
- VNE management states [2-19](#)
- BBA (Broadband Access) groups [24-3](#)
- BFD
  - commands. See MPLS-TP commands
  - viewing BFD session properties [18-47](#)
  - viewing MPLS-TP BFD session properties [18-49](#)
- BGP
  - commands
    - create BGP address family [18-59](#)
    - create BGP neighbor [18-59](#)
    - create BGP router [18-59](#)
    - delete BGP address family [18-59](#)
    - delete BGP neighbor [18-59](#)
    - delete BGP router [18-59](#)
    - modify BGP address family [18-59](#)
    - modify BGP neighbor [18-59](#)
    - modify BGP router [18-59](#)
  - viewing inventory details [18-45](#)
- Bidirectional Forwarding Detection. See BFD
- blocking badge [3-8, A-21](#)
- BNG
  - Broadband Access Groups (BBG) [24-3](#)
  - configuration templates [24-9](#)
  - IP subscriber [24-9](#)

- overview [24-9](#)
- PPP [24-12](#)
- service [24-9](#)
- viewing [24-9](#)
- DHCP service profile [24-7](#)
- overview [24-1](#)
- QoS profile [24-16](#)
- service groups [24-13](#)
- service policies [24-13](#)
- subscriber access points
  - diagnosing [24-6](#)
  - viewing [24-5](#)
- user role required [24-2](#)
- bridges
  - unassociated [12-73](#)
  - viewing properties for VLANs [12-70](#)
- Broadband Access (BBA) groups [24-3](#)
- Broadband Network Gateway. See BNG
- bundle ethernet, configuring (configure bundle ethernet command) [18-61](#)
- business elements [7-1](#)
  - defined [7-1](#)
  - deleting [7-7](#)
  - icons [2-11, A-4](#)
  - renaming [7-7](#)
  - user roles required [7-1](#)
- See also business tags
- business tags [7-1](#)
  - attaching and detaching [7-3](#)
  - Chinese characters [7-2](#)
  - defined [7-1](#)
  - searching for [7-4](#)
  - user roles required [7-1](#)
- See also business elements
- buttons (GUI)
  - in Prime Network Events [A-18](#)
  - in Prime Network Vision [A-14](#)
    - for filtering links [A-17](#)
  - in tables [A-17](#)

- in Report Manager [A-19](#)
- in tickets window [A-18](#)

## C

- cable
  - CMTS [27-1](#)
  - DOCSIS [27-1](#)
  - DSL [27-1](#)
  - fiber node [27-10](#)
  - MAC domain [27-6](#)
  - narrowband channels [27-8](#)
  - overview [27-1](#)
  - QAM domain [27-5](#)
  - user roles required [27-2](#)
  - wideband channels [27-8](#)
- Carrier Ethernet services
  - types [12-1](#)
  - user roles required [12-2](#)
- Carrier Grade NAT
  - commands
    - add 6rd forwarding [13-6](#)
    - add CGNAT or 6rd forwarding [13-6](#)
    - add NAT 64 forwarding [13-6](#)
    - add static port forwarding [13-6](#)
    - create CGNAT instance [13-6](#)
    - show pool utilization [13-5, 13-6](#)
    - static port forwarding [13-6](#)
  - monitoring [13-1](#)
  - user roles required [13-2](#)
  - viewing properties
    - logical inventory [13-2](#)
    - physical inventory [13-5](#)
- Carrier Supporting Carrier (CSC) path traces [11-31](#)
- CCM
  - Compliance Audit. See Compliance Audit
  - Configuration Audit. See Configuration Audit
  - device groups. See device groups (CCM)
  - global settings [4-61](#)

- GUI [4-1](#)
- jobs [4-68](#)
- overview [1-3, 4-1](#)
- processes, check [4-68](#)
- setup tasks
  - Configuration Management [4-5](#)
  - device groups [4-9](#)
  - devices [4-4](#)
  - Prime Network [4-3](#)
  - user roles [4-69](#)
- CDP. See Cisco Discovery Protocol
- CESoPSN, viewing properties [20-3](#)
- CFM
  - commands. See CFM commands
  - description
    - maintenance domains [15-3](#)
    - maintenance endpoints (MEPs) [15-3](#)
    - maintenance intermediate points (MIPS) [15-3](#)
  - overview [15-3](#)
  - viewing properties for
    - maintenance associations [15-8](#)
    - maintenance domains [15-5, 15-7](#)
    - MEPs [15-8](#)
    - MIPs [15-6](#)
    - remote MEPs [15-10](#)
- CFM commands
  - configure CFM continuity check [15-18](#)
  - configure CFM global parameters [15-18](#)
  - configure CFM maintenance domain [15-18](#)
  - configure CFM MEP [15-18](#)
  - configure CFM MIP [15-18](#)
  - configure CFM service ID [15-18](#)
  - enable CFM continuity check [15-18](#)
  - enable CFM SNMP server traps [15-18](#)
- CG-NAT. See Carrier Grade NAT
- Change and Configuration Management. See CCM
- change logs (Configuration Management) [4-69](#)
- channelization and TDM. See TDM and channelization
- chassis, devices with multi [5-19](#)
- Chinese characters in business tags [7-2](#)
- Circuit Emulation Services over PSN. See CESoPSN
- Cisco Discovery Protocol (CDP) properties
  - in logical inventory [12-6](#)
  - in physical inventory [12-8](#)
  - viewing [12-6](#)
- clearing and removing tickets [9-16](#)
- clock
  - commands (MToP)
    - create ESMC global [20-55](#)
    - create ESMC interface [20-55](#)
    - create PTP clock global [20-55](#)
    - create PTP clock port [20-55](#)
    - create PTP interface [20-55](#)
    - create syncE global [20-55](#)
    - create syncE interface [20-55](#)
    - delete PTP clock global [20-55](#)
    - delete PTP clock port [20-55](#)
    - disable ESMC interface [20-55](#)
    - modify ESMC global [20-55](#)
    - modify ESMC interface [20-55](#)
    - modify PTP clock global [20-55](#)
    - modify PTP clock port [20-55](#)
    - modify PTP interfaces [20-55](#)
    - modify syncE global [20-55](#)
    - modify syncE interface [20-55](#)
    - show PTP clock global [20-55](#)
  - recovery, pseudowire properties [20-44](#)
  - service
    - badge [3-8, A-21](#)
    - properties [20-35](#)
- CM. See Configuration Management
- CMTS [27-1](#)
- Command Builder [2-39](#)
- Command Manager [2-39](#)
- commands
  - AAA
    - create diameter accounting service [22-12](#)
    - create diameter authentication server [22-12](#)

- delete AAA group [22-12](#)
- modify AAA group [22-12](#)
- ACS. See ACS commands
- cable
  - DEPI and L2TP. See DEPI and L2TP commands
  - interfaces. See interfaces commands
  - ports. See ports commands
  - QAM. See QAM configurations
  - show downstream [27-12](#)
  - show upstream [27-12](#)
- Carrier Ethernet services
  - IS-IS. See IS-IS commands
  - mLACP. See mLACP commands
  - pseudowire. See pseudowire commands
  - REP. See REP commands
  - VLANs. See VLAN commands
- CG NAT. See CG-NAT commands
- configuration files
  - from FTP/TFTP [1-10](#)
  - show running config [1-10](#)
  - show startup config [1-10](#)
  - to FTP/TFTP [1-10](#)
  - write memory [1-10](#)
- data center. See data center commands
- delete context [25-138](#)
- device setup
  - access lists. See access list commands
  - DNS. See DNS commands
  - host name. See host name commands
  - interfaces. See interfaces commands
  - NTP. See NTP commands
  - ports. See ports commands
  - RADIUS. See RADIUS commands
  - SNMP configuration. See SNMP configuration
  - SNMP traps. See SNMP traps
  - TACACS. See TACACS commands
- DHCP. See DHCP commands
- DWDM. See DWDM commands
- Ethernet OAM
  - CFM. See CFM commands
  - E-LMI. See E-LMI commands
  - L-OAM. See L-OAM commands
- FabricPath (data center). See FabricPath commands
- GPRS/UMTS
  - APN. See APN commands
  - eGTP. See eGTP commands
  - GGSN. See GGSN commands
  - GTPP. See GTPP commands
  - GTPU. See GTPU commands
- IP pool
  - delete IP pool [23-3](#)
  - modify IP pool [23-3](#)
- licenses
  - modify licenses [25-138](#)
  - show licenses [25-138](#)
- LTE
  - ePDG. See ePDG commands
  - foreign agent. See foreign agent commands
  - HSGW. See HSGW commands
  - MME. See MME commands
  - PDSN. See PDSN commands
  - P-GW. See P-GW commands
  - SAE-GW. See SAE-GW commands
  - S-GW. See S-GW commands
- modify license [25-138](#)
- MPLS services
  - BGP. See BGP commands
  - bundle ethernet. See bundle ethernet commands
  - IP interface. See IP interface (MPLS) commands
  - MPLS. See MPLS commands
  - MPLS-TE. See MPLS-TE commands
  - MPLS-TP commands. See MPLS-TP commands
  - RSVP. See RSVP commands
  - VRF. See VRF commands
  - VRRP. See VRRP commands
- MToP services
  - APS. See APS
  - clock. See clock commands (MToP)

- SONET. See SONET commands
- TDM and channelization. See TDM and channelization commands
- PDP. See PDP commands
- ping. See ping commands
- route maps. See route maps commands
- SBC. See SBC commands
- show users (Telnet sessions) [1-10](#)
- subscriber. See subscriber commands
- syslog host logging [1-9](#)
- trace route. See trace route commands
- VLAN commands. See VLAN commands
- vPC (data center). See data center commands
- Y.1731. See Y.1731 commands
- Y.1731 IPSLA. See Y.1731 IPSLA commands

communication status, for VNEs [3-17](#)

#### Compliance Audit

- audit, run [4-58](#)
- compliance policy [4-52](#)
- Configuration Audit and [4-2](#)
- overview [4-2](#), [4-50](#), [4-52](#)
- policy profile [4-57](#)
- results, view [4-59](#)
- user roles required [4-51](#)
- violations [4-59](#)

See also CCM

#### Configuration Audit [4-45](#)

- Compliance Audit and [4-2](#)
- jobs, manage [4-48](#)
- policies
  - create [4-46](#)
  - manage [4-47](#)
- policy example [4-45](#)
- results, view [4-48](#)
- schedule [4-47](#)
- user roles required [4-69](#)

See also CCM

#### Configuration Management

- archive [4-12](#)

- backing up files to archive [4-18](#)
- change logs [4-25](#)
- cleaning up archive [4-25](#)
- comparing files [4-14](#)
- exported files per device families [4-66](#)
- exporting files [4-16](#)
- global settings [4-61](#)
- labelling files [4-13](#)
- overview [4-2](#)
- restoring file from archive to devices [4-22](#)
- setup tasks [4-5](#)
- synchronizing files [4-17](#)
- user roles required [4-69](#)

See also CCM

configuration scripts, launching [2-39](#)

Connecting, VNE communication state [2-21](#)

Connectivity Fault Management. See CFM

Control Channel (CC), viewing information for pseudowire endpoint [12-95](#)

conventions, used in this document [xxvi](#)

Correlation tab (tickets) [9-13](#)

CPU usage graph, opening [5-27](#)

crypto template (ePDG) [25-84](#)

CSR 1000v [26-29](#)

Currently Unsynchronized, VNE investigation state [2-22](#)

## D

### data center

- commands. See data center commands

- FabricPath. See FabricPath

- overview [26-1](#)

- user roles required [26-2](#)

- virtualization. See virtualization

- vPC. See vPC

### data center commands

- FabricPath

- show FabricPath conflict [26-10](#)

- show MAC address table learning mode [26-10](#)

- vPC
  - show port channel capacity [26-7](#)
  - show vPC [26-7](#)
  - show vPC consistency parameter [26-7](#)
- Defined Not Started, VNE investigation state [2-21](#)
- Dense Wavelength Division Multiplexing. See DWDM
- DEPI and L2TP commands [27-14](#)
  - create DEPI class [27-14](#)
  - create DEPI tunnel [27-14](#)
  - create L2TP class [27-14](#)
  - delete DEPI class [27-14](#)
  - delete DEPI tunnel [27-14](#)
  - delete L2TP class [27-14](#)
  - modify DEPI tunnel [27-14](#)
  - modify L2TP class [27-14](#)
  - show cable DEPI session [27-14](#)
  - show DEPI session [27-14](#)
  - show DEPI tunnel [27-14](#)
  - show L2TP class [27-14](#)
- Details tab (Events GUI) [8-11, 8-15, 9-10](#)
- device configuration files
  - commands
    - copy from FTP/TFTP [1-10](#)
    - copy to FTP/TFTP [1-10](#)
  - See also Configuration Management
- device groups (CCM)
  - setup tasks [4-9](#)
  - user roles required [4-69](#)
  - See also CCM
- device image files. See Image Management
- Device Partially Reachable, VNE communication state [2-21](#)
- devices
  - aggregations [5-16](#)
  - configuration files. See device configuration files
  - CPU usage, checking [5-27](#)
  - icons [2-9, A-2](#)
  - in maps [5-16](#)
  - multi-chassis [5-19](#)
  - pinging [5-28](#)
  - right-click menu [2-32](#)
  - satellite [3-22, 4-41](#)
  - setting up [1-4](#)
  - severity indicator [2-18](#)
  - software image files. See Image Management
  - status indicators [2-17](#)
  - Telnet to a device [5-28](#)
  - traceroute from device (command) [1-9](#)
  - viewing
    - operating system information [3-31](#)
    - properties [3-6](#)
- Device Unreachable, VNE communication state [2-21](#)
- DHCP
  - commands
    - create DHCP [25-138](#)
    - delete DHCP [25-138](#)
    - modify DHCP [25-138](#)
    - show DHCP [25-138](#)
    - show DHCP binding (subscriber access points) [24-6](#)
  - service profile [24-7](#)
- Discovering, VNE investigation state [2-22](#)
- discovery
  - EFD [12-45](#)
  - EVC multiplex services [12-106](#)
  - MPLS-TP tunnels [18-5](#)
  - VLAN [12-45](#)
- DNS commands
  - add DNS server [1-5](#)
  - add DNS server command [1-5](#)
  - create proxy DNS [25-138](#)
  - delete proxy DNS [25-138](#)
  - modify proxy DNS [25-138](#)
  - remove DNS server [1-5](#)
  - remove DNS server command [1-5](#)
- document
  - audience [xxiii](#)
  - conventions [xxvi](#)



- organization [xxiv](#)
- related documentation [xxvii](#)
- downstream rates, show (cable) [27-12](#)

## DSL

- ADSL2. See ADSL2
- cable technologies and [27-1](#)
- VDSL2. See VDSL2

- duplication count (tickets) [9-13](#)

## DWDM

- commands. See DWDM commands
- user roles required [14-1](#)
- viewing
  - alert and alarm counters [14-9](#)
  - G.709 properties [14-5](#)
  - ODU alarm properties [14-8](#)
  - ODU alert properties [14-9](#)
  - OTU alarm properties [14-8](#)
  - OTU alert properties [14-9](#)
  - performance monitoring configuration [14-11](#)
  - properties [14-3](#)

## DWDM commands

- clear counters [14-15](#)
- configure channel [14-15](#)
- configure FEC mode [14-15](#)
- configure G.709 ODU [14-15](#)
- configure G.709 OTU [14-15](#)
- configure G.709 TTI [14-15](#)
- configure G.709 wrapper [14-15](#)
- configure laser state [14-15](#)
- configure loopback [14-15](#)
- configure PM FEC data [14-15](#)
- configure PM optics data [14-15](#)
- configure PM OTN data [14-15](#)
- configure Rx LOS threshold [14-15](#)
- configure transmit power [14-15](#)
- show controller data [14-15](#)
- show device log [14-15](#)
- show IM trace details [14-15](#)
- show PM history data [14-15](#)

- show RTPM counters [14-15](#)
- show RTPM threshold [14-15](#)
- show wavelength map [14-15](#)

Dynamic Host Configuration Protocol. See DHCP

---

## E

- EAP profile (ePDG) [25-87](#)

- EFD discovery [12-45](#)

## EFP

- cross-connects [12-75](#)
  - adding [12-76](#)
  - viewing properties [12-76](#)
- overview [12-47](#)
- severity and ticket badges [12-38](#)

- egress adjacents, VRF [18-31](#)

## eGTP

- commands
  - create EGTP [25-138](#)
  - delete eGTP [25-31](#)
  - modify eGTP [25-31](#)
  - show EGTP [25-138](#)
- overview [25-30](#)
- view properties [25-31](#)

- element icons, and information displayed [3-3](#)

E-LMI. See Ethernet LMI

## ePDG

- commands
  - create ePDG service [25-92](#)
  - delete ePDG service [25-92](#)
  - modify ePDG service [25-92](#)
  - show ePDG service [25-92](#)

- IPSec and [25-84](#)

- overview [25-83](#)

- security [25-84](#)

- crypto template [25-84](#)

- EAP profile [25-87](#)

- transform set details [25-88](#)

- viewing configuration details [25-90](#)

ESM configuration (MME) [25-151](#)

Ethernet flow domains

listing all [2-5](#)

renaming [12-42](#)

viewing properties of [12-42](#)

Ethernet flow point (EFP), viewing properties [12-33](#)

Ethernet LAGs, viewing [12-23](#)

Ethernet links, and configured LSPs [18-11](#)

Ethernet LMI

commands. See Ethernet LMI commands

Device EVC Properties window [15-12](#)

enable [15-18, 15-20](#)

EVC, configure [15-18, 15-20](#)

overview [15-10](#)

service instance, configure [15-18, 15-20](#)

UNI, configure [15-18, 15-20](#)

viewing properties

for device EVCs [15-11](#)

for physical interfaces [15-12](#)

for UNI interfaces [15-13](#)

in logical inventory [15-11](#)

Ethernet LMI commands

configure multipoint to multipoint or point to point EVC [15-20](#)

configure service instance VLAN ID on interface [15-20](#)

configure UNI in an interface [15-20](#)

enable global E-LMI [15-20](#)

enable on interface [15-20](#)

Ethernet Local Management Interface. See Ethernet LMI

Ethernet OAM

overview [15-2](#)

user roles required [15-1](#)

Ethernet Operations, Administration, and Maintenance. See Ethernet OAM

Ethernet services

adding overlays [12-108](#)

adding to maps [12-106](#)

viewing properties [12-109](#)

working with [12-106](#)

EVC

E-LMI

configuring [15-20](#)

viewing [15-12](#)

E-LMI, configuring [15-18](#)

L-OAM, configuring [15-21](#)

services

multiplex [12-106](#)

shared switching entities [12-40](#)

viewing properties [12-40](#)

events

Advanced tab [8-13](#)

Audit tab [8-13](#)

customizing GUI [2-40](#)

Details tab [8-11](#)

filtering [8-18, 8-20](#)

Provisioning tab [8-13](#)

refreshing information [8-17](#)

reports. See reports

Security tab [8-13](#)

tabs in Prime Network Events [8-4](#)

tickets. See tickets

Trap tab [8-14](#)

viewing event properties [8-10](#)

exporting event data [8-21](#)

external application, launching [2-34, 2-38](#)

## F

FabricPath

commands

show FabricPath conflict [26-10](#)

show MAC address table learning mode [26-10](#)

monitoring [26-10](#)

overview [26-7](#)

viewing configuration [26-9](#)

Fault Database vs. Event Archive Statistics report [10-13](#)

fiber node (cable) [27-10](#)

foreign agent

- AAA and [25-73, 25-76](#)
- advertisement configuration [25-75](#)
- authentication [25-76](#)
- commands. See foreign agent commands
- GRE configuration [25-77](#)
- home agent details for [25-78](#)
- overview [25-72](#)
- proxy mobile [25-79](#)
- registration revocation [25-80](#)
- viewing [25-72](#)
- foreign agent commands
  - create FA [25-81](#)
  - create IKE [25-81](#)
  - create SPI [25-81](#)
  - delete FA [25-81](#)
  - delete IKE [25-81](#)
  - delete SPI [25-81](#)
  - modify authentication [25-81](#)
  - modify FA [25-81](#)
  - modify GRE [25-81](#)
  - modify HA configuration [25-81](#)
  - modify IKE [25-81](#)
  - modify proxy mobile IP [25-81](#)
  - modify registration revocation [25-81](#)
  - modify SPI [25-81](#)
  - show FA [25-81](#)

## G

General tab, in inventory window [3-13](#)

### GGSN

- commands
  - create GGSN [25-138](#)
  - create PLMN identifier [25-10](#)
  - create SGSN [25-10](#)
  - delete GGSN [25-10](#)
  - modify GGSN [25-10](#)
- overview [25-6](#)
- view properties [25-7, 25-8](#)

GMM properties (SGSN) [25-37](#)

### GPRS/UMTS network

GGSN. See GGSN

### GPRS/UMTS networks

APN. See APN

eGTP. See eGTP

GTPP. See GTPP

GTPU. See GTPU

overview [25-4](#)

SGSN. See SGSN

technologies [25-6](#)

graphical links, reducing number of in maps [2-11](#)

### GRE

foreign agent configuration (LTE networks) [25-77](#)

home agent and [25-70](#)

HSGW [25-59](#)

PDSN [25-96](#)

### groups

RADIUS keepalive and detect dead server [22-9](#)

### GTPP

create GTPP (command) [25-138](#)

overview [25-23](#)

view properties [25-24, 25-25](#)

### GTPU

#### commands

- create GTPU [25-138](#)
- create GTPU bind IP address [25-12](#)
- delete GTPU [25-12](#)
- delete GTPU bind IP address [25-12](#)
- modify GTPU [25-12](#)
- modify GTPU bind IP address [25-12](#)

overview [25-11](#)

view properties [25-11](#)

### GTPP

#### commands

- create CGF [25-29](#)
- create storage server [25-29](#)
- delete CGF [25-29](#)
- delete GTPP [25-29](#)

- delete storage server [25-29](#)
- modify CGF [25-29](#)
- modify GTPP [25-29](#)
- modify storage server [25-29](#)
- show CGF [25-29](#)

## H

History tab (tickets) [9-11](#)

home agent

- AAA and [25-69](#)
- commands. See home agent commands
- configuration, viewing [25-66](#)
- details for foreign agent [25-78](#)
- GRE and [25-70](#)
- overview [25-65](#)
- policy configuration [25-70](#)
- registration revocation [25-71](#)
- service details [25-67](#)
- topology [25-66](#)

home agent commands

- create HA Service [25-138](#)
- create HA SPI list [25-138](#)
- delete HA service [25-138](#)
- delete HA SPI list [25-138](#)
- modify HA service [25-138](#)
- show HA service [25-138](#)
- show HA SPI [25-138](#)

host name commands

- add host name [1-5](#)
- remove host name [1-5](#)

HRPD, create QCI-QOS mapping (command) [25-138](#)

HSGW

- A10/A11 configurations [25-58](#)
- AAA and [25-54](#)
- basic features [25-54](#)
- commands. See HSGW commands
- GRE parameters [25-59](#)
- IP source violation [25-60](#)

MAG [25-62](#)

overview [25-53](#)

QCI mapping details (profile) [25-64](#)

topology [25-54](#)

viewing [25-55](#)

HSGW commands

- create HSGW [25-61](#)
- create overload policy [25-61](#)
- create PLMN entries [25-61](#)
- create QCI-QOS mapping [25-138](#)
- create SPI [25-61](#)
- delete HSGW [25-61](#)
- delete overload policy [25-61](#)
- delete PLMN entries [25-61](#)
- delete SPI [25-61](#)

MAG commands

- create MAG [25-64](#)
- create profile [25-64](#)
- create profile ID QCI mapping [25-64](#)
- delete MAG [25-64](#)
- delete profile [25-64](#)
- delete profile ID QCI mapping [25-64](#)
- modify MAG [25-64](#)
- modify profile [25-64](#)
- show MAG [25-64](#)
- modify A10 A11 interfaces [25-61](#)
- modify GRE [25-61](#)
- modify HSGW [25-61](#)
- modify IP source violation [25-61](#)
- modify overload policy [25-61](#)
- modify PLMN entries [25-61](#)
- modify SPI [25-61](#)
- show HSGW [25-61](#)

HSRP [12-18](#)

H-VPLS

working with [12-78](#)

## icons

- alarm and ticket [A-22](#)
- badges [A-19](#)
- business elements [2-11](#), [A-4](#)
- information displayed for elements [3-3](#)
- links [A-10](#), [A-11](#)
- logical inventory [3-30](#), [A-7](#)
- management states [A-19](#)
- management states (VNE) [2-19](#)
- maps [18-20](#)
- network elements [2-10](#), [A-2](#)
- physical inventory [A-10](#)
- Prime Network Events [A-13](#)
- Prime Network Vision [A-1](#)
- reconciliation [3-9](#)
- reference [A-1](#)
- REP [12-63](#)
- severities [A-13](#)
- severity, color coding [2-18](#)
- sizes [3-3](#)
- tickets [2-23](#)
- VLAN domains [12-63](#)
- VLAN overlays [12-63](#)
- See also buttons

## Image Management

- add images to repository [4-27](#)
- Cisco IOS XR [4-37](#)
  - activate and deactivate packages [4-39](#)
  - add packages [4-38](#)
  - commit packages [4-41](#)
  - considerations [4-37](#)
  - delete packages [4-39](#)
  - roll back packages [4-42](#)
  - satellites [4-40](#)
- clean up repository [4-44](#)
- clear flash (distributing images) [4-33](#)
- delete packages from repository [4-44](#)

- distributing images to devices [4-29](#)
- global settings [4-66](#)
- overview [4-2](#)
- repository [4-27](#)
- setup tasks [4-7](#)
- upgrade analysis and [4-29](#)
- user roles required [4-69](#)
- See also CCM

IMA group, viewing properties [20-13](#)

## impact analysis

- accumulating affected parties [9-18](#)
- affected severities [9-17](#)
- automatic mode [9-17](#)
- links and [6-12](#)
- proactive mode [9-17](#)

Initializing (VNE management state) [2-19](#)Inter-Chassis Communication Protocol (ICCP), viewing properties [12-29](#)

## interfaces

## commands

- add interface configuration
- add loopback interface [1-8](#)
- configure secondary IP address (MPLS) [18-54](#)
- create interface (MPLS) [18-54](#)
- create IP interface [27-12](#)
- delete interface (MPLS) [18-54](#)
- delete IP interfaces [27-12](#)
- delete secondary IP address (MPLS) [18-54](#)
- disable interfaces
- enable interfaces
- modify interface (MPLS) [18-54](#)
- modify IP interfaces [27-12](#)
- remove interface configuration [1-8](#)
- show IP interface brief [1-9](#)
- show IP route [1-9](#)
- update interface configuration [1-8](#)

viewing in physical inventory [3-19](#)

## inventory window

- content pane [3-13](#)

- device view pane [3-13](#)
- device view pane toolbar [3-14](#)
- General tab [3-13](#)
- logical inventory [3-27](#)
- navigation pane [3-12](#)
- Network Events tab [3-15](#)
- opening [3-9](#)
- overview [3-9, 3-11](#)
- physical inventory [3-19, 3-21](#)
- Ports tab [3-13, 3-23](#)
- Provisioning Events tab [3-15](#)
- ticket and events pane [3-15](#)
- Tickets tab [3-15](#)
- IP interface (MPLS) commands
  - configure secondary IP address [18-54](#)
  - create interface [18-54](#)
  - delete interface [18-54](#)
  - delete secondary IP address [18-54](#)
  - modify interface [18-54](#)
  - See also interfaces commands
- IPoDWDM. See DWDM
- IP pools [23-1](#)
  - commands
    - create IP pool [25-138](#)
    - delete IP pool [23-3](#)
    - modify IP pool [23-3](#)
    - show IP pool [25-138](#)
  - viewing properties [23-1](#)
- IPSec and ePDG [25-84](#)
- IP SLA
  - viewing responder service properties [12-112](#)
  - See also Y.1731
- IP source violation
  - HSGW [25-60](#)
  - PDSN [25-98](#)
- IPv6
  - addresses
    - in logical inventory [17-3](#)
    - in physical inventory [17-4](#)
  - in inventory [17-3](#)
  - in Prime Network [17-2](#)
  - IPv6 VPN over MPLS (6VPE) [17-1](#)
  - notes, for viewing IPv6 addresses [17-4](#)
  - support in Prime Network [17-1](#)
  - user roles required [17-2](#)
  - viewing IPv6 information [17-2](#)
- IS-IS
  - commands
    - create ISIS address family [12-121](#)
    - create ISIS interface [12-121](#)
    - create ISIS interface address family [12-121](#)
    - create ISIS router [12-121](#)
    - delete ISIS address family [12-121](#)
    - delete ISIS interface [12-121](#)
    - delete ISIS interface address family [12-121](#)
    - delete ISIS router [12-121](#)
    - modify ISIS address family [12-121](#)
    - modify ISIS interface [12-121](#)
    - modify ISIS interface address family [12-121](#)
    - modify ISIS router [12-121](#)
    - show ISIS configuration [12-121](#)
  - viewing properties [12-114](#)

---

## L

- L2TP (cable). See DEPI and L2TP
- label ranges (MPLS-TP)
  - add label range configuration [18-54](#)
  - remove label range configuration [18-54](#)
- LACs (LTE networks) [25-49](#)
- Layer 2 PathTracer (VPN) [11-32](#)
- Layer 3 PathTracer (VPN) [11-32](#)
- licenses
  - modify licenses (command) [25-138](#)
  - show licenses (command) [25-138](#)
- link aggregation group. See Ethernet LAGs
- Link Layer Discovery Protocol (LLDP), viewing properties [12-8](#)

## Link OAM

- commands. See Link OAM commands
- enabling and disabling [15-21](#)
- EVCs, configuring [15-21](#)
- overview [15-14](#)
- remote loopback, enabling and disabling [15-21](#)
- templates, managing [15-21](#)
- topology discovery and [15-14](#)
- viewing properties in
  - logical inventory [15-15](#)
  - physical inventory [15-18](#)

## Link OAM commands

- assign template on interface [15-21](#)
- configure multipoint to multipoint or point to point EVC [15-21](#)
- configure OAM parameters on interface [15-21](#)
- disable OAM on interface [15-21](#)
- enable E-LMI on interface [15-21](#)
- enable OAM on interface [15-21](#)
- start remote loopback [15-21](#)
- stop remote loopback [15-21](#)

## links

- adding [6-15](#)
- arrowheads [6-5, A-13](#)
- bidirectional vs. unidirectional [6-5, A-13](#)
- colors [6-5](#)
- dashed line [6-4, A-12](#)
- dynamic [6-3](#)
- exceeding number that can be displayed [2-11](#)
- filtering [5-25, 5-27](#)
  - using collection method [6-17](#)
- flickering [6-3](#)
- graphical representation [2-11](#)
- icons [A-10, A-11](#)
- impact analysis [6-12](#)
- in maps [2-11](#)
- links view [6-8](#)
- normal vs. wide vs. tunnel [6-5](#)
- overview [6-1](#)

- properties [6-4](#)
- quick view [6-7](#)
- reducing number of in maps [2-11](#)
- right-click options [2-36](#)
- selecting in maps [6-18](#)
- solid line [6-4, A-12](#)
- static [6-3](#)
- tooltips [6-6](#)
- tunnels [6-5](#)
- types [A-11](#)
- user roles required [6-1](#)
- viewing
  - between VLAN elements and devices [12-58](#)
  - in links view [6-8](#)
  - options [6-17](#)
  - properties [6-4, 6-10](#)
  - width [6-5, A-12](#)

LLDP, viewing properties [12-8](#)

LMAs (LTE networks) [25-106](#)

L-OAM. See Link OAM

lock badge [3-8, A-22](#)

## logical inventory

- branches [3-29](#)
- content pane [3-31](#)
- content pane tabs [3-31](#)
- context [25-138](#)
- icons [3-30, A-7](#)
- navigation pane [3-29](#)
- tabs [3-31](#)
- viewing in Prime Network Vision [3-27](#)
- window [3-28](#)

## loopback

- add loopback interface (command) [1-8](#)
- remote, enable/disable [15-21](#)

## LSEs

- inventory details [18-39](#)
- viewing [18-39](#)

## LSPs

- commands. See MPLS-TP commands

- endpoints [18-14](#)
- lockout state [18-6](#)
- on Ethernet links [18-11](#)
- redundancy service properties [18-14](#)
- Working and Protected [18-5](#)
- LTE networks
  - ePDG. See ePDG
  - foreign agent. See foreign agent
  - home agent. See home agent
  - HSGW. See HSGW
  - LACs [25-49](#)
  - LMAs [25-106](#)
  - overview [25-40](#)
  - PDSN. See PDSN
  - P-GW. See P-GW
  - QCI-QoS mapping [25-48](#)
  - SAE-GW. See SAE-GW
  - S-GW. See S-GW
  - technologies [25-41](#)
- LTE security procedure (MME) [25-152](#)

## M

- MAC domain (cable) [27-6](#)
- MAG (HSGW)
  - commands. See HSGW commands
  - viewing configuration [25-62](#)
- Maintenance, VNE investigation state [2-22](#)
- maintenance domains, in CFM [15-3](#)
- management states (VNEs)
  - badges [A-19](#)
  - icons [A-19](#)
  - overview [2-19](#)
- maps [5-1](#)
  - adding VLANs [12-50](#)
  - aggregations. See aggregations
  - applying background images [5-12](#)
  - closing [5-5](#)
  - creating [5-6](#)

- customizing [2-40](#)
- Ethernet services, adding [12-106](#)
- filtering links [5-25](#)
- link icons [A-10](#)
- NE icons, zooming in and out [2-9](#)
- network elements in [5-16](#)
- opening [2-7, 5-5](#)
- overlays
  - callouts [18-25](#)
  - VPN [18-24](#)
- overview [18-18, 18-19](#)
- overview window [5-14](#)
- PathTracer files [11-26](#)
- red border and graphical links [2-11](#)
- removing
  - VLANs [12-52](#)
  - VPNs [18-23](#)
- right-click menu [2-12, 2-32](#)
- saving [5-15](#)
- selecting views [5-12](#)
- severity indicators [2-12](#)
- user roles required [5-2](#)
- views [2-8](#)
  - links view [2-15, 2-39](#)
  - link view [2-16](#)
  - list view [2-12, 2-37](#)
  - map view [2-8](#)
- VPNs
  - adding [18-22](#)
  - overlays [18-24](#)
  - viewing [18-18](#)
- MEPs, in CFM [15-3, 15-18](#)
- MIPs, in CFM [15-3, 15-18](#)
- mLACP
  - commands
    - show channel [12-119](#)
    - show group [12-119](#)
    - show LACP internal [12-119](#)
    - show MPLS LDP [12-119](#)



- viewing properties [12-29](#)
- mLDP
  - database, viewing [18-42](#)
  - neighbors, viewing [18-43](#)
  - overview [18-42](#)
- MLPPP
  - link properties [20-29](#)
  - MLPPP properties [20-26](#)
- MME
  - commands
    - create policy accounting [25-138](#)
    - create QCI-QoS mapping [25-138](#)
    - delete policy accounting [25-138](#)
    - modify policy accounting [25-138](#)
  - configuration details [25-145](#)
  - EMM configurations [25-150](#)
  - ESM configuration [25-151](#)
  - interfaces [25-144](#)
  - LTE security procedure [25-152](#)
  - overview [25-143](#)
  - policy configuration [25-153](#)
  - S1 interface configuration [25-154](#)
  - service details [25-146](#)
- Mobile Management Entity. See MME
- mobile technologies
  - 3GPP inventory retrieval [25-109](#)
  - ACS [25-121](#)
  - APN. See APN
  - GPRS/UMTS. See GRPS/UMTS
  - LTE. See LTE
  - operator policies [25-111](#)
  - user roles required [25-1](#)
- Mobile Transport over Packet. See MToP
- MP-BGP. See BGP
- MPLS
  - ARP table [18-34](#)
  - BGP. See BGP
  - commands. See MPLS commands
  - LSEs, viewing [18-39](#)
  - monitoring services [18-26](#)
  - NDP table [18-34](#)
  - PathTracer and [11-29](#)
  - pseudowire end-to-end emulation tunnels, viewing [18-50](#)
  - pseudowire over GRE, properties [20-32](#)
  - rate limit information [18-36](#)
  - routing entities [18-31](#)
  - user roles required [18-1](#)
- MPLS commands
  - configure MPLS discovery [18-57](#)
  - configure MPLS label range [18-57](#)
  - disable MPLS on interface [18-57](#)
  - enable MPLS on interface [18-57](#)
  - show MPLS LDP [12-119](#)
- MPLS-TE
  - commands
    - configure MPLS-TE global [18-57](#)
    - configure MPLS-TE interface [18-57](#)
  - tunnels, viewing [18-52](#)
- MPLS-TP commands
  - add BFD template configuration [18-54](#)
  - add global configuration [18-54](#)
  - add label range configuration [18-54](#)
  - add link configuration [18-54](#)
  - BFD global configuration [18-54](#)
  - LSP lockout [18-54](#)
  - LSP path lockout [18-54](#)
  - LSP path no lockout [18-54](#)
  - LSP ping [18-54](#)
  - LSP trace [18-54](#)
  - remove BFD template configuration [18-54](#)
  - remove global configuration [18-54](#)
  - remove label range configuration [18-54](#)
  - remove link configuration [18-54](#)
  - show BFD template [18-54](#)
  - show BFD template at tunnel [18-54](#)
  - tunnel ping [18-54](#)
  - tunnel trace [18-54](#)

- update global configuration [18-54](#)
  - MPLS-TP tunnels
    - adding to maps [18-5](#)
    - applying overlays [18-16](#)
    - BFD sessions, viewing properties [18-49](#)
    - discovery [18-5](#)
    - labeling [18-54](#)
    - locking and unlocking (bulk) [18-56](#)
    - LSP lockout state [18-6](#)
    - overview [18-4](#)
    - properties [18-7](#)
    - viewing [18-7](#)
    - working with [18-4](#)
  - MSID configuration (PDSN) [25-98](#)
  - MToP
    - ATM cross-connects [20-6](#)
    - ATM VPI properties [20-10](#)
    - CEM interfaces [20-49](#)
      - groups [20-50](#)
      - viewing [20-50](#)
      - virtual, viewing [20-50](#)
    - channelized lines [20-17](#)
    - encapsulation information [20-11](#)
    - IMA groups [20-13](#)
    - MLPPP link properties [20-29](#)
    - MLPPP properties [20-26](#)
    - network clock service [20-34](#)
    - pseudowire clock recovery properties [20-41](#)
    - SONET/SDH channelization properties [20-18](#)
    - Synchronous Ethernet (SyncE), viewing properties [20-45](#)
    - T3 DS1 and DS3 channelization properties [20-21](#)
    - TDM [20-16, 20-17](#)
    - user roles required [20-1](#)
    - viewing
      - CESoPSN pseudowire properties [20-3](#)
      - SAToP pseudowire properties [20-2](#)
  - multicast configurations [19-2](#)
    - multicast node [19-2](#)
    - multicast profiles
      - IPv4 [19-4](#)
      - IPv6 [19-5](#)
      - PIM [19-7](#)
    - multicast protocols [19-4](#)
    - overview [19-1](#)
    - routing entities [19-10](#)
    - supported network elements [19-1](#)
    - user roles required [19-2](#)
  - multicast label switching. See mLDP
  - multi-chassis devices, viewing [5-19](#)
  - Multichassis LACP. See mLACP
  - multiple links badge [3-8, A-22](#)
  - multiplex services, discovery of [12-106](#)
- 
- ## N
- narrowband channels (cable) [27-8](#)
  - NAT 64 forwarding, add (command) [13-6](#)
  - NDP table [18-34](#)
  - NEIM. See Image Management
  - network clock service
    - applying an overlay [20-48](#)
    - clock service properties [20-35](#)
    - overview [20-34](#)
    - PTP interface [20-37](#)
    - PTP service [20-36](#)
  - network elements
    - adding to aggregations [5-18](#)
    - aggregations [5-16](#)
    - CPU usage, checking [5-27](#)
    - icons [2-10, A-2](#)
    - information displayed in icons [3-3](#)
    - in maps [5-16](#)
    - management state (VNEs) [2-19](#)
    - pinging [5-28](#)
    - severity indicators and network elements [2-18](#)
    - status indicators [2-17](#)
    - Telnet to [5-28](#)

- viewing
  - operating system information [3-31](#)
  - properties [3-6](#)
- See also devices
- Network Events tab
  - inventory window [3-15](#)
  - link properties window [6-12](#)
- Notes tab (tickets) [9-14](#)
- NRI properties (SGSN) [25-38](#)
- NTP commands
  - add NTP server command [1-6](#)
  - remove NTP server command [1-6](#)
- nV. See virtualization

## O

- OAM
  - commands
    - ping destination from device [1-9](#)
    - ping VRF [1-9](#)
    - trace route from device [1-9](#)
    - traceroute VRF [1-9](#)
  - See also Link OAM
  - operating system information (NE), viewing [3-31](#)
  - Operational, VNE investigation state [2-22](#)
  - operator policies (mobile technologies) [25-111](#)
- OSPF
  - supported versions [12-117](#)
  - viewing properties [12-117](#)
- overlays [5-21](#)
  - applying to
    - Ethernet services [12-108](#)
    - maps [5-21](#)
    - MPLS-TP tunnels [18-16](#)
    - network clocks [20-48](#)
    - pseudowire [12-98](#)
    - VPLS instances [12-80](#)
    - VPNs [18-24](#)
  - displaying and hiding

- for VLANs [12-62](#)
- for VPNs [18-25](#)
- in maps [5-24](#)
- Ethernet service [12-108](#)
- pseudowire [12-90, 12-98](#)
- removing [12-62](#)
- viewing [5-24](#)
- VLAN [12-45](#)
  - removing [12-62](#)
- REP information [12-63](#)
- STP information [12-66](#)
- viewing STP link information [12-66](#)
- VPLS
  - callouts [12-82](#)
  - instance [12-80](#)
  - pseudowire tunnel links in [12-82](#)
  - viewing pseudowire tunnel links [12-82](#)
- VPN [18-24](#)
  - adding [18-24](#)
  - callouts [18-25](#)

## P

- Partially Discovered, VNE investigation state [2-22](#)
- password, changing user (GUI clients) [2-4](#)
- PathTracer
  - across CSC configurations [11-31](#)
  - blocked ports and [11-4](#)
  - comparing paths [11-27](#)
  - counter values, saving [11-26](#)
  - destinations [11-11](#)
  - in MPLS networks [11-29](#)
  - launching from
    - Ethernet Flow Point (EFP) [11-8](#)
    - Ethernet port [11-12](#)
    - examples [11-7](#)
    - IP interface [11-9](#)
    - MPLS-TP tunnel endpoint [11-13](#)
    - pseudowire endpoint [11-12](#)

- VLAN bridge [11-10](#)
- Layer 2 TP path information [11-28](#)
- Layer 2 VPNs [11-32](#)
- Layer 3 VPNs [11-32](#)
- opening [11-3](#)
- overview [11-1](#), [11-2](#)
- path trace
  - from inventory [11-7](#)
  - from map view [11-5](#)
  - options for starting [11-5](#)
- QinQ path information [11-27](#)
- rerunning paths [11-27](#)
- results, viewing [11-20](#)
- single-path window [11-16](#)
- starting points [11-30](#)
- user roles required [11-1](#)
- viewing results [11-14](#)
- PCF configuration (PDSN) [25-99](#)
- PDP commands
  - create network requested PDP context [25-138](#)
  - delete network requested PDP context [25-138](#)
- PDSN
  - AAA and [25-92](#)
  - commands. See PDSN commands
  - configurations [25-93](#)
  - GRE configuration [25-96](#)
  - IP source violation [25-98](#)
  - MSID configuration [25-98](#)
  - overview [25-92](#)
  - PCF configuration [25-99](#)
  - policy configuration [25-100](#)
  - QoS configuration [25-101](#)
  - registration details [25-102](#)
  - restrictions [25-103](#)
  - timers [25-103](#)
  - viewing [25-94](#)
- PDSN commands
  - create PCF security entity [25-105](#)
  - create PCF security entry [25-105](#)
  - create PDSN [25-105](#)
  - delete PCF security entry [25-105](#)
  - delete PDSN [25-105](#)
  - modify GRE [25-105](#)
  - modify IP source violation [25-105](#)
  - modify MSID [25-105](#)
  - modify PCF parameters [25-105](#)
  - modify PCF security entry [25-105](#)
  - modify PDSN [25-105](#)
  - modify policy [25-105](#)
  - modify PPP [25-105](#)
  - modify registrations [25-105](#)
  - modify timers and registrations [25-105](#)
  - show PDSN [25-105](#)
- P-GW
  - commands
    - create P-GW [25-138](#)
    - create P-GW PLMN [25-45](#)
    - create QCI-QOS mapping [25-138](#)
    - delete P-GW [25-45](#)
    - modify P-GW [25-45](#)
  - overview [25-44](#)
  - SAE-GW and [25-42](#)
  - view properties [25-44](#)
- physical inventory
  - Disable Sending Alarms [3-21](#)
  - icons [3-19](#), [A-10](#)
  - Open Port Utilization Graph [3-21](#)
  - Show Encapsulation [3-21](#)
  - viewing device properties [3-19](#)
  - window [3-14](#)
- ping
  - commands
    - ping destination from device [1-9](#)
    - ping pseudowire [12-120](#)
    - ping VRF [1-9](#)
    - ping device (Tools menu) [5-28](#)
  - policy configuration
    - MME [25-153](#)

- PDSN [25-100](#)
- polling, initiating [3-18](#)
- Poll Now button [3-18](#)
- ports
  - alarms, disabling [3-26](#)
  - commands
    - add port description
    - assign port to VLAN [1-7](#)
    - change port status command [1-7](#)
    - configure downstream port [27-11](#)
    - create upstream port [27-11](#)
    - deassign port to VLAN [1-7](#)
    - modify cable port [27-11](#)
    - modify port [1-7, 27-11](#)
    - modify upstream port [27-11](#)
    - remove port description
    - update port description
  - viewing
    - configuration [3-25](#)
    - status [3-23](#)
  - with IPv4 and IPv6 addresses [17-5](#)
- Ports tab, in inventory window [3-13, 3-23](#)
- Port Utilization graph, generating [3-27](#)
- Prime Central
  - launching Prime Network Events [8-1](#)
  - launching Prime Network Vision [2-2](#)
- Prime Network Administration [1-3](#)
- Prime Network Events [1-3](#)
  - Audit tab [8-4, 8-13](#)
  - Details tab [8-11](#)
  - event details. See events
  - GUI overview [8-2](#)
  - icon severities [A-13](#)
  - launching [8-1](#)
  - Provisioning tab [8-5, 8-13](#)
  - Security tab [8-5, 8-13](#)
  - Service tab [8-6](#)
  - severity indicators [8-3](#)
  - Syslog tab [8-7](#)
  - System tab [8-6](#)
  - tickets. See tickets
  - Tickets tab [8-9](#)
  - Trap tab [8-14](#)
  - user roles required [8-1](#)
  - V1 Traps tab [8-7](#)
  - V2 Traps tab [8-8](#)
  - V3 Traps tab [8-8](#)
- Prime Network Operations Reports [1-3](#)
- Prime Network Vision
  - aggregations. See aggregations
  - customizing [2-40](#)
  - GUI overview [2-4, 18-18, 18-19](#)
  - icons [18-20, A-1](#)
    - links [A-11](#)
    - logical inventory [A-7](#)
    - map [A-2, A-4](#)
    - physical inventory [A-10](#)
  - inventory tabs [2-5](#)
  - launching [2-2](#)
  - links
    - characteristics [A-12](#)
    - colors [A-12](#)
    - icons [A-11](#)
  - maps. See maps
  - menus [2-25](#)
  - port information [3-25](#)
  - right-click menus [2-31](#)
  - roles required [2-1, 3-1](#)
  - severity indicators [2-18](#)
  - status indicators [2-17](#)
  - tables [2-42](#)
  - ticket pane [2-17](#)
  - tickets. See tickets
  - toolbar [2-23](#)
  - VLAN elements and icons [12-46](#)
- Provider Backbone Bridge (PBB), viewing properties [12-32](#)
- Provisioning tab (events) [3-15, 8-5, 8-13](#)

## pseudowires

- adding [12-90](#)
- applying overlay [12-98](#)
- clock recovery [20-44](#)
- commands
  - display pseudowire [12-95, 12-120](#)
  - ping pseudowire [12-120](#)
- defined [12-100](#)
- headend [12-101](#)
  - associated routing entity [12-105](#)
  - associated VRF entity [12-105](#)
  - generic interface list [12-105](#)
  - view configuration [12-102](#)
- overlays [12-90](#)
- overview [12-90](#)
- pinging [12-120](#)
- redundancy service properties [12-96](#)
- viewing
  - endpoint properties [12-87](#)
  - properties [12-93](#)
  - redundancy service properties [12-96](#)
  - tunnel links in VPLS overlays [12-82](#)
  - VCCV and CC information [12-95](#)

## PTP

- interface properties [20-37](#)
- monitoring service [20-36](#)

## PWE3

- inventory details [18-50](#)
- viewing [18-50](#)

**Q**

## QAM commands

- create block [27-13](#)
- create lane [27-13](#)
- create RF profile [27-13](#)
- delete frequency profile [27-13](#)
- delete RF profile [27-13](#)
- modify QAM channel [27-13](#)

- modify QAM port [27-13](#)
- modify RF profile [27-13](#)
- show frequency profile [27-13](#)
- show QAM channel [27-13](#)
- show QAM port [27-13](#)
- show RF profile [27-13](#)

QAM domain [27-5](#)QCI mapping (HSGW) [25-64](#)QCI-QoS mapping [25-138](#)QCI-QoS mapping (LTE networks) [25-48](#)QoS, configuration (PDSN) [25-101](#)quick view, for links [6-7](#)**R**

## RADIUS

AAA and [22-1](#)

## commands

- add RADIUS server [1-6](#)
- remove RADIUS server [1-6](#)
- global configuration (AAA) [22-4](#)

rate limits, for routing entities [18-36](#)reconciliation badge [A-22](#)aggregations [2-36](#)description [3-9](#)EFPs [12-50](#)switching entities [12-50](#)red border in maps, and graphical links [2-11](#)reduced polling [3-18](#)reduction count (tickets) [9-13](#)redundancy service [18-14](#)badge [3-9, A-22](#)on LSP endpoints [18-14](#)pseudowires [12-96](#)redundancy status, in physical inventory [3-21](#)refreshing data in Prime Network Events [8-17](#)registration details (PDSN) [25-102](#)

## registration revocation

foreign agent (LTE networks) [25-80](#)

- home agent (LTE networks) [25-71](#)
- related documentation [xxvii](#)
- REP
  - icons and badges [12-63](#)
  - primary badge [3-9, A-22](#)
  - primary blocking badge [3-9, A-22](#)
  - show REP segment information (command) [12-119](#)
  - viewing
    - for VLAN service link properties [12-64](#)
    - in VLAN domain views [12-63](#)
    - in VLAN overlays [12-63](#)
  - viewing properties
- Report Manager. See reports
- reports
  - database load and [10-22](#)
  - events
    - Daily Average and Peak [10-11](#)
    - Devices with the Most Events by severity [10-12](#)
    - Devices with the Most Events by type [10-12](#)
    - Devices with the Most Syslogs [10-12](#)
    - Devices with the Most Traps [10-12](#)
    - Event Reduction Statistics [10-13](#)
    - Fault Database vs. Event Archive Statistics [10-13](#)
    - Mean Time to Repair [10-13](#)
    - Most Common Daily Events [10-14](#)
    - Most Common Syslogs [10-14](#)
    - Syslog Count by device [10-14](#)
    - Syslog Count by type [10-14](#)
    - Syslog Trend by severity [10-14](#)
- folder management [10-43, 10-45](#)
- generating from
  - Prime Network Vision [10-38](#)
  - Report Manager [10-23](#)
  - Reports menu [10-37](#)
- inventory
  - Hardware Summary By Selected Property [10-18](#)
  - Hardware Summary Detailed [10-18](#)
  - IOS-XR Software Package Summary [10-19](#)
  - Modules Summary By Type [10-19](#)
  - Software Version Summary by device [10-19](#)
  - Software Version Summary by version [10-19](#)
- maximum concurrent reports [10-39](#)
- network events
  - Detailed Event Count (by device) [10-15](#)
  - Detailed Service Events [10-15](#)
  - Detailed Syslogs [10-15](#)
  - Detailed Tickets [10-16](#)
  - Detailed Traps [10-16](#)
- network service
  - Ethernet Service Detailed [10-20](#)
  - Ethernet Service Summary [10-20](#)
  - Network Pseudowire Detailed [10-21](#)
  - Network Pseudowire Summary [10-21](#)
  - VPLS Detailed [10-21](#)
  - VPLS Summary [10-22](#)
- non-network events
  - Detailed Audit Events [10-17](#)
  - Detailed Provisioning Events [10-17](#)
  - Detailed Security Events [10-17](#)
  - Detailed System Events [10-18](#)
- overview [10-1](#)
- report failures [10-22](#)
- Report Manager [10-4, 10-11](#)
- scheduling [10-38](#)
- sharing and limiting access to [10-42](#)
- user roles required [10-1](#)
- Resilient Ethernet Protocol. See REP
- restoring files from archive to devices (Configuration Management) [4-69](#)
- RF (cable). See QAM
- roles, user (GUI). See user roles required
- route map commands
  - create route access lists [25-138](#)
  - create route map [25-138](#)
  - delete route access list [25-138](#)
  - delete route maps [25-138](#)
  - modify route access lists [25-138](#)
  - modify route map [25-138](#)

- show route access lists [25-138](#)
- show route map [25-138](#)
- routing entities [18-31](#)
  - ARP table [18-34](#)
  - NDP table [18-34](#)
  - rate limit information [18-36](#)
  - viewing properties [18-31](#)
- RSVP commands
  - configure RSVP [18-58](#)
  - delete RSVP [18-58](#)
  - disable RSVP on interface [18-58](#)
  - enable RSVP on interface [18-58](#)
- running config
  - file copy from FTP/TFTP [1-10](#)
  - file copy to FTP/TFTP [1-10](#)
  - show command [1-10](#)
  - write memory command [1-10](#)

## S

S1 interface configuration [25-154](#)

### SAE

#### GW

S-GW and [25-42](#)

### SAE-GW

#### commands

- create SAE GW [25-43](#)
- delete SAE GW [25-43](#)
- modify SAE-GW [25-43](#)

#### MME [25-42](#)

overview [25-42](#)

P-GW and [25-42](#)

viewing [25-42](#)

SAN, viewing [26-37](#)

satellite devices [3-22](#), [4-41](#)

SAToP, overview [20-2](#)

### SBC

AAA properties [21-6](#)

commands. See SBC commands

DBE properties [21-4](#)

H.248 properties [21-5](#), [21-7](#)

logical inventory properties [21-1](#)

media address properties [21-4](#)

overview [21-1](#)

policy properties [21-7](#)

properties [21-3](#)

SBE properties [21-5](#)

SIP properties [21-10](#)

user roles required [21-2](#)

viewing in logical inventory [21-3](#), [21-4](#)

### SBC commands, blacklists

- add blacklist [21-16](#)
- add blacklist reason [21-16](#)
- delete blacklist [21-16](#)
- delete blacklist reason [21-16](#)
- update blacklist reason [21-16](#)

### SBC commands, CAC policies

- add CAC policy set [21-17](#)
- add CAC policy table [21-17](#)
- add CAC rule entry [21-17](#)
- add call policy set [21-17](#)
- add call policy table [21-17](#)
- add call rule entry [21-17](#)
- delete CAC policy set [21-17](#)
- delete CAC policy table [21-17](#)
- delete CAC rule entry [21-17](#)
- delete call policy set [21-17](#)
- delete call policy table [21-17](#)
- delete call rule entry [21-17](#)
- update CAC policy set [21-17](#)
- update CAC policy table [21-17](#)
- update CAC rule entry [21-17](#)
- update call policy set [21-17](#)
- update call policy table [21-17](#)
- update call rule entry [21-17](#)

### SBC commands, Codec lists

- add Codec list [21-18](#)
- add Codec list entry [21-18](#)



- delete Codec list [21-18](#)
- delete Codec list entry [21-18](#)
- update Codec list entry [21-18](#)
- SBC commands, media addresses
  - add media address [21-18](#)
  - add media address DBE [21-18](#)
  - delete media address DBE [21-18](#)
- SBC commands, performance statistics
  - show CPS data [21-13](#)
  - show current 15 min [21-13](#)
  - show current 5 min [21-13](#)
  - show current day [21-13](#)
  - show H.248 [21-13](#)
  - show previous 15 minutes [21-13](#)
  - show previous 5 minutes [21-13](#)
  - show previous day [21-13](#)
  - show previous hour [21-13](#)
- SBC commands, QoS profiles
  - add QoS profile [21-18](#)
  - delete QoS profile [21-18](#)
  - update QoS profile [21-18](#)
- SBC commands, show
  - components [21-13](#)
  - media statistics [21-13](#)
- SBC commands, SIP adjacencies
  - add SIP adjacency [21-14](#)
  - add SIP adjacency outbound AuthRealm [21-14](#)
  - delete SIP adjacency [21-14](#)
  - delete SIP adjacency outbound AuthRealm [21-14](#)
  - update SIP adjacency [21-14](#)
  - update SIP adjacency outbound AuthRealm [21-14](#)
- SBC commands, SIP header profiles [21-15](#)
  - add SIP header profile [21-15](#)
  - add SIP header profile condition [21-15](#)
  - add SIP header profile entry [21-15](#)
  - add SIP header profile header [21-15](#)
  - delete SIP header profile [21-15](#)
  - delete SIP header profile entry [21-15](#)
  - delete SIP header profile header [21-15](#)
- update SIP header profile [21-15](#)
- update SIP header profile entry [21-15](#)
- SBC commands, SIP option profiles
  - add SIP option profile [21-16](#)
  - add SIP parameter profile [21-16](#)
  - add SIP parameter profile parameter [21-16](#)
  - delete SIP option profile [21-16](#)
  - delete SIP parameter profile [21-16](#)
  - delete SIP parameter profile parameter [21-16](#)
  - update SIP option profile [21-16](#)
  - update SIP parameter profile parameter [21-16](#)
- scripts
  - launching [2-39](#)
- SCTP [25-155](#)
- SDH. See SONET
- Security tab (events) [8-5, 8-13](#)
- Service tab (events) [8-6](#)
- service view
  - overlays [18-25](#)
  - removing VLANs [12-52](#)
  - removing VPNs [18-23](#)
  - virtual routers [18-23](#)
  - VPNs [18-21, 18-26](#)
- Session Border Controller. See SBC
- session management (SGSN) [25-39](#)
- severity
  - color of device icon [2-19](#)
  - icons [A-13](#)
  - indicators
    - events [8-3](#)
    - overview [2-18](#)
  - propagation [2-18](#)
- SGNS
  - service properties
    - GMM [25-37](#)
    - NRI [25-37](#)
    - session management [25-37](#)
- SGSN
  - overview [25-32](#)

- service properties
  - NRI [25-38](#)
  - session management [25-39](#)
  - view properties [25-32](#)
- S-GW
  - commands
    - create QCI-QOS mapping [25-138](#)
    - create S-GW [25-138](#)
    - create S-GW PLMN [25-47](#)
    - delete S-GW [25-47](#)
    - modify S-GW [25-47](#)
  - overview [25-46](#)
  - view properties [25-46](#)
- shared switching entities [12-40](#)
- Shutting Down, VNE investigation state [2-22](#)
- sites, viewing properties [18-27](#)
- SNMP
  - configuration commands
    - add SNMP configuration
    - remove SNMP configuration
    - update SNMP configuration
  - traps commands
    - add traps [1-7](#)
    - enable CFM SNMP server traps [15-18](#)
    - enable traps command [1-7](#)
    - remove traps command [1-7](#)
- software images (device). See Image Management
- SONET
  - channelization properties [20-18](#)
  - commands
    - clear SDH counter [20-53](#)
    - configure BER threshold [20-53](#)
    - configure clock source [20-53](#)
    - configure TCA threshold [20-53](#)
    - show BER threshold [20-53](#)
    - show controller data [20-53](#)
    - show PM line counters [20-53](#)
    - show PM medium counters [20-53](#)
    - show PM path counters [20-53](#)
  - show PM section counters [20-53](#)
  - show PM trace details [20-53](#)
  - show TCA threshold [20-53](#)
  - See also TDM and channelization commands
- Spanning Tree Protocol. See STP
- startup config
  - file copy from FTP/TFTP [1-10](#)
  - file copy to FTP/TFTP [1-10](#)
  - show command [1-10](#)
  - write memory command [1-10](#)
- static link, adding [6-15](#)
- Stopped, VNE investigation state [2-22](#)
- STP
  - in VLAN domain views [12-66](#)
  - in VLAN overlays [12-66](#)
  - links (in VLAN overlays) [12-66](#)
  - properties, viewing [12-10](#)
  - root badge [3-9, A-22](#)
  - VLAN service links [12-67](#)
- stream control transmission protocol [25-155](#)
- Structure-Agnostic TDM over Packet. See SAToP
- subscriber access points (BNG)
  - diagnosing [24-6](#)
  - viewing [24-5](#)
- subscriber commands
  - create subscribers
  - delete subscriber
  - modify subscriber
  - show subscriber [25-138](#)
- switching entities
  - containing termination points [12-50](#)
  - overview [12-46](#)
- syslogs
  - syslog host logging (command) [1-9](#)
  - Syslog tab (in Prime Network Events) [8-7](#)
- System tab (events) [8-6](#)

## T

T3 DS1 and DS3, viewing properties [20-21](#)

### TACACS commands

- add TACACS+ server [1-6](#)
- add TACACS server
- remove TACACS+ server [1-6](#)
- remove TACACS server

tag manipulations, for associated VLANs [12-55](#)

### TDM and channelization commands

- configure AU3 [20-57](#)
- configure AU4 [20-57](#)
- configure AUG mapping [20-57](#)
- configure card type [20-57](#)
- configure controller [20-57](#)
- configure framing [20-57](#)
- configure STS [20-57](#)
- configure TUG3 [20-57](#)
- delete AU3 [20-57](#)
- delete AU4 [20-57](#)
- delete STS [20-57](#)
- delete TUG3 [20-57](#)
- modify E1 controller [20-57](#)
- modify T1 controllers [20-57](#)

TDM overview [20-16](#)

### Telnet

- show Telnet users (command) [1-10](#)
- to devices [5-28](#)

termination points, in switching entities [12-50](#)

TE tunnels and PathTracer [11-33](#)

thumbnail views, options [5-15](#)

ticket and events pane, Prime Network Vision inventory window [3-15](#)

### Ticket Properties dialog box

- Advanced tab [9-13](#)
- Affected Parties tab [9-11](#)
- Correlation tab [9-13](#)
- Details tab [9-10](#)
- History tab [9-11](#)

Notes tab [9-14](#)

toolbar [9-10](#)

### tickets

- acknowledging [9-15](#)
- alarm count [9-6](#)
- badges [A-22](#)
- clearing [9-15](#)
- clearing and removing [9-16](#)
- Details tab [8-15](#)
- duplication count [9-6](#)
- EFP severities and [12-38](#)
- filtering [8-18, 8-20, 9-7](#)
- icons [2-23](#)
- managing [9-15](#)
- overview [9-1](#)
- propagating new [2-18](#)
- properties [9-9](#)
- reduction count [9-6](#)
- removing [9-16](#)
- right-click options [2-40](#)
- user roles required [9-2](#)
- viewing
  - in Prime Network Vision [9-3](#)
  - properties [9-10](#)
- viewing details [8-14](#)
- working with in Prime Network Vision [9-1](#)

### Tickets tab

- inventory window [3-15](#)
- link properties window [6-12](#)
- Prime Network Events [8-9](#)

Time Division Multiplexing. See TDM or MToP TDM

### trace route

- trace route from device (command) [1-9](#)
- traceroute VRF (command) [1-9](#)

Tracking Disabled, VNE communication state [2-21](#)

transform set details (ePDG) [25-88](#)

Trap tab (events) [8-14](#)

## U

UCS [26-32](#)  
 UNI (E-LMI), configure [15-18, 15-20](#)  
 Unified Computing System (UCS) devices. See virtualization  
 Unsupported, VNE investigation state [2-21](#)  
 upgrade analysis (NEIM) [4-29](#)  
 upstream rates, show (cable) [27-12](#)  
 user roles required  
     ADSL2+ [28-1](#)  
     BNG [24-2](#)  
     business elements [7-1](#)  
     business tags [7-1](#)  
     cable [27-2](#)  
     Carrier Ethernet services [12-2](#)  
     Carrier Grade NAT [13-2](#)  
     CCM [4-51, 4-69](#)  
     Compliance Audit [4-51](#)  
     Configuration Audit [4-69](#)  
     Configuration Management [4-69](#)  
     data center [26-2](#)  
     device groups (CCM) [4-69](#)  
     DWDM [14-1](#)  
     Ethernet OAM [15-1](#)  
     Image Management [4-69](#)  
     IP and multicast configurations [19-2](#)  
     IPv6 [17-2](#)  
     links [6-1](#)  
     maps [5-2](#)  
     mobile technologies [25-1](#)  
     MPLS services [18-1](#)  
     MToP [20-1](#)  
     PathTracer [11-1](#)  
     Prime Network Events [8-1](#)  
     Prime Network Vision [2-1, 3-1](#)  
     reports [10-1](#)  
     SBC [21-2](#)  
     tickets, working with [9-2](#)

VDSL2 [28-1](#)

Y.1731 [16-2](#)

## V

V1 Traps (tab) [8-7](#)  
 V2 Traps (tab) [8-8](#)  
 V3 Traps (tab) [8-8](#)  
 VDSL2  
     device inventory, viewing [28-4](#)  
     DSL cable bonding group [28-5](#)  
     n-to-one access profile [28-8](#)  
     one-to-one access profile [28-8, 28-10](#)  
     overview [28-2](#)  
     TLS access profile [28-8, 28-11](#)  
     user roles required [28-1](#)  
     viewing properties [28-2](#)  
     XDSL traffic descriptors [28-2](#)  
 Virtual Circuit Connectivity Verification (VCCV),  
     viewing information for pseudowire endpoint [12-95](#)  
 virtual connections  
     viewing encapsulation information [20-11](#)  
     viewing properties [20-5](#)  
 virtualization  
     blade server [26-32, 26-46](#)  
     cluster [26-12](#)  
     compute services, searching for [26-46](#)  
     data center container [26-12, 26-13](#)  
     data store [26-12, 26-13](#)  
     FCoE interface details [26-43](#)  
     guest operating system [26-12](#)  
     host cluster [26-22](#)  
     host server [26-14](#)  
     hypervisor (host server) [26-12](#)  
     hypervisors [26-46](#)  
     overview [26-11](#)  
     resource pools [26-12, 26-24](#)  
     third party devices [26-35](#)  
     UCS

- hypervisor [26-36](#)
- network discovery and [26-28](#)
- viewing map node [26-26](#)
- viewing properties [26-32](#)
- vCenter and [26-11](#)
- virtual machine [26-12, 26-19, 26-46](#)
- virtual network devices, viewing [26-29](#)
- virtual storage area network (VSAN). See VSAN
- VMware and [26-11](#)
- VSG
  - deploying [26-30](#)
  - viewing [26-30](#)
- virtual port channel. See vPC
- Virtual Router Redundancy Protocol (VRRP), viewing information [18-37](#)
- virtual routers
  - moving [18-23](#)
  - properties, viewing [18-27](#)
  - VRF tables [18-31](#)
- Virtual Security Gateway (VSG). See virtualization
- Virtual Storage Area Network (VSAN). See VSAN
- Virtual Storage Area Network. See VSAN
- Virtual Switching Instance. See VSI
- VLAN commands
  - assign port to VLAN [1-7](#)
  - create VLAN [12-72](#)
  - deassign port to VLAN [1-7](#)
  - delete VLAN [12-72](#)
  - modify VLAN [12-72](#)
- VLANs
  - adding associated VLANs [12-55](#)
  - adding to map view [12-50](#)
  - associations [12-55](#)
  - commands. See VLAN commands
  - discovery [12-45](#)
  - elements
    - EFPs [12-47](#)
    - icons in Prime Network Vision [12-46](#)
    - network VLAN [12-46](#)
    - overview [12-46](#)
    - switching entities [12-46](#)
  - overlays [12-45](#)
  - STP link information [12-66](#)
  - viewing REP information [12-63](#)
  - viewing STP information [12-66](#)
- overview [12-46](#)
- removing
  - from maps [12-52](#)
  - overlays [12-62](#)
- tag manipulations for associations [12-55](#)
- trunk groups [12-68](#)
- viewing
  - associated VLAN mapping properties [12-57](#)
  - associated VLAN service links [12-57](#)
  - bridge properties [12-70](#)
  - links between elements and devices [12-58](#)
  - mappings [12-53](#)
  - REP properties [12-64](#)
  - service link properties [12-63](#)
  - STP properties [12-67](#)
  - trunk groups [12-68](#)
- VNE/Agent Unreachable, VNE communication state [2-21](#)
- VNE communication states
  - Agent Not Loaded [2-21](#)
  - Connecting [2-21](#)
  - Device Partially Reachable [2-21](#)
  - Device Unreachable [2-21](#)
  - Tracking Disabled [2-21](#)
  - VNE/Agent Unreachable [2-21](#)
- VNE investigation states
  - Currently Unsynchronized [2-22](#)
  - Defined Not Started [2-21](#)
  - Discovering [2-22](#)
  - Maintenance [2-22](#)
  - Operational [2-22](#)
  - Partially Discovered [2-22](#)
  - Shutting Down [2-22](#)
  - Stopped [2-22](#)

Unsupported [2-21](#)

## VNEs

communication state badges [A-20](#)

investigation state badges [A-20](#)

management state [2-19](#)

modifying properties [3-16](#)

updating information [3-18](#)

viewing communication status [3-17](#)

viewing properties [3-16](#)

## vPC

commands (data center)

show port channel capacity [26-7](#)

show vPC [26-7](#)

show vPC consistency parameter [26-7](#)

defined [26-3](#)

view configuration [26-5](#)

viewing [26-5](#)

## VPLS

adding instances to maps [12-79](#)

instance overlays [12-80](#)

overlays

link callout [12-82](#)

viewing pseudowire tunnel links [12-82](#)

viewing

access Ethernet EFP properties [12-89](#)

instance properties [12-84](#)

properties [12-83](#)

pseudowire endpoint properties [12-87](#)

working with [12-78](#)

## VPNs

adding to maps [18-22](#)

and virtual routers [18-23](#)

creating [18-21](#)

moving virtual routers between [18-23](#)

overlays [18-24](#)

callouts [18-25](#)

creating [18-24](#)

displaying [18-25](#)

hiding [18-25](#)

properties, viewing [18-26](#)

removing from maps [18-23](#)

sites [18-27](#)

viewing in maps [18-18](#)

virtual routers [18-27](#)

## VRFs

commands

create VRF [25-138](#)

delete VRF [18-53](#)

modify VRF [18-53](#)

ping VRF [1-9](#)

show VRF IP route [1-9](#)

traceroute VRF [1-9](#)

cross-VRF routing entries [18-49](#)

multicast configurations [18-30](#)

tables

egress [18-31](#)

ingress [18-31](#)

viewing properties [18-27](#)

with IPv4 and IPv6 addresses [17-6](#)

## VRRP commands

create VRRP group [18-60](#)

delete VRRP [18-60](#)

delete VRRP interface [18-60](#)

modify VRRP group [18-60](#)

show VRRP [18-60](#)

## VSAN

FC interface details [26-41](#)

FC link aggregation [26-44](#)

network configuration details [26-37](#)

VSI, viewing properties [12-85](#)

VTP domains, listing all [2-5](#)

## W

web services scheduler (3GPP inventory) [25-109](#)

wideband channels (cable) [27-8](#)

Working and Protected LSPs [18-5](#)

---

**Y**

## Y.1731

## commands

- configure IP SLA parameters [16-4](#)
- configure probe endpoint association [16-4](#)
- configure profile [16-4](#)
- create on demand probe configuration [16-4](#)
- deassociate profile [16-4](#)
- delete IP SLA parameters [16-4](#)
- delete profile [16-4](#)
- show IP SLA [16-4](#)
- show SLA operations detail [16-4](#)
- show SLA profiles [16-4](#)

performance management [16-1](#)probes [16-2](#), [16-4](#)technology overview [16-1](#)user roles required [16-2](#)

