



INDEX

A

attributes

 notification **15-4, 15-5, 15-8**

audience

 document **3-xiv**

C

changing

 poller settings **3-10**

client, Prime Performance Manager

 access, limiting **2-9**

client/server architecture, overview **1-3**

command reference **B-1**

commands

 general **B-1**

conventions

 document **3-xvi**

D

data

 accessing, from web **3-1, 8-1, 10-1, 11-1**

Discovering network devices

 Prime Network imports **4-2**

discovering networks

 verifying discovery **4-10**

document

 audience **3-xiv**

 conventions **3-xvi**

 organization **3-xv**

F

features

 integration **1-5**

 security **1-5**

G

General commands

 ppm datadir **B-14**

 general commands **B-1**

 ppm **B-5**

 ppm adduser **B-6**

 ppm backup **B-8**

 ppm backupdir **B-9**

 ppm badloginalarm **B-10**

 ppm badlogindisable **B-11**

 ppm certtool **B-11**

 ppm changes **B-12**

 ppm checksystem **B-12**

 ppm clitimeout **B-13**

 ppm cmdlog **B-13**

 ppm console **B-14**

 ppm countnodes **B-14**

 ppm delete **B-15**

 ppm deluser **B-16**

 ppm disablepass **B-17**

 ppm disableuser **B-17**

 ppm discover **B-18**

 ppm diskmonitor **B-18**

 ppm enableuser **B-19**

 ppm eventautolog **B-19**

 ppm eventconfig **B-19**

- ppm eventtool **B-20**
 ppm evilstop **B-21**
 ppm export **B-21**
 ppm export cw **B-22**
 ppm help **B-23**
 ppm inactiveuserdays **B-24**
 ppm installog **B-25**
 ppm ipaccess **B-26**
 ppm jspport **B-27**
 ppm keytool **B-27**
 ppm listusers **B-28**
 ppm logger **B-28**
 ppm logtimemode **B-30**
 ppm maxhtmlrows **B-30**
 ppm mldebug **B-30**
 ppm motd **B-32**
 ppm msglog **B-32**
 ppm msglogage **B-33**
 ppm msglogdir **B-33**
 ppm msglogsize **B-28**
 ppm netlog **B-34**
 ppm netlogger **B-34**
 ppm newlevel **B-34**
 ppm osinfo **B-35**
 ppm passwordage **B-35**
 ppm patchlog **B-35**
 ppm poll **B-36**
 ppm print **B-36**
 ppm props **B-36**
 ppm purgedb **B-37**
 ppm readme **B-37**
 ppm reboot **B-37**
 ppm redundancygroup **B-38**
 ppm rephelp **B-39**
 ppm restart **B-39**
 ppm restore **B-40**
 ppm restoreprops **B-41**
 ppm rootvars **B-41**
 ppm sechelp **B-41**
 ppm seclogppm seclog **B-41**
 ppm servername **B-42**
 ppm setpath **B-43**
 ppm snmpcomm **B-45**
 ppm snmpconf **B-45**
 ppm snmpget **B-46**
 ppm snmphelp **B-48**
 ppm snmpnext **B-48**
 ppm snmpwalk **B-51**
 ppm ssl **B-53**
 ppm sslstatus **B-53**
 ppm start **B-54**
 ppm start jsp **B-54**
 ppm start pm **B-54**
 ppm start web **B-55**
 ppm statreps **B-55**
 ppm status **B-56**
 ppm stop **B-57**
 ppm stop jsp **B-57**
 ppm stop pm **B-57**
 ppm stop web **B-57**
 ppm tac **B-58**
 ppm traprate limit abate **B-58**
 ppm trapratelimit count **B-58**
 ppm trapratelimit interval **B-59**
 ppm trapratelimit minor **B-59**
 ppm uninstall **B-59**
 ppm unknownage **B-60**
 ppm updateuser **B-60**
 ppm useraccess **B-61**
 ppm userpass **B-61**
 ppm version **B-62**
 ppm webport **B-62**
 ppm who **B-62**
 generating
 reports **7-3**
 getting started **4-1**

H

home page

Prime Performance Manager web interface **11-1**

I
ITP networks

discovery

verifying **4-10**

M

managing

reports **7-1**

messages

display, changing **12-16**

of the day **6-11**

N

navigation tree

Prime Performance Manager web interface **3-4**

Network

discovery **4-1**

notification attributes (table) **15-4, 15-5, 15-8**

O

organization

document **3-xv**

overview

discovery **4-1**

P

poller

settings, changing **3-10**

polling

creating a new polling group **14-2**

editing polling group parameters **14-2**

polling group parameters **14-1**

polling groups **14-1**

polling group

assigning devices to **14-3**

Ports

used by Prime Performance Manager **17-3**

PPM

commands **B-1**

ppm addunitconf **B-6**

ppm crosslaunch **B-12**

ppm deleteunitconf **B-17**

ppm exportcustnames **B-22**

ppm exportusers **B-23**

ppm importcustnames **B-24**

ppm inventoryimport **B-25**

ppm modifyunitconf **B-32**

ppm reloadmibs **B-39, B-56**

ppm repdir **B-39**

ppm showunitconf **B-44**

ppm syncunits **B-56**

Prime Performance Manager

about **3-xiii**

client and server communication

VPN **17-2**

ports **17-3**

Server, starting **4-1**

Prime Performance Manager web interface

archived messages **12-6**

home page **11-1**

logs

command **12-10**

console **12-9**

event automation **12-10**

security **12-11**

navigation tree **3-4**

R

reference

 command **B-1**

reports

 generating **7-3**

 managing **7-1**

 viewing **7-4**

RMI

 how does it work **17-2**

root user, becoming **4-1**

S

security

 client access, limiting **2-9**

 logs, system **6-13**

 message of the day **6-11**

 overview **6-1**

 passwords

 changing **6-10**

 creating **6-5**

 disabling, automatically **6-7**

 disabling, manually **6-9**

 re-enabling **6-10**

 user-based access

 disabling **6-14**

 implementing **6-2**

 user levels **6-6**

 (level 1) basic user **6-6**

 (level 3) network operator **6-6**

 (level 5) system administrator **6-6**

 users

 changing **6-10**

 disabling, automatically **6-7**

 disabling, manually **6-9**

 listing current **6-12**

 re-enabling **6-10**

server properties

viewing **12-13**

SSH

 adding credentials **16-1**

starting Prime Performance Manager

 gateways and units **2-1, 2-3**

Starting the Prime Performance Manager server **4-1**

system properties

 viewing **12-12**

T

Telnet

 adding credentials **16-1**

thresholds

 Add Threshold dialog box **10-2**

 creating **10-1**

 deleting **10-5**

 editing **10-4**

 enabling and disabling **10-5**

 managing **10-4**

 viewing from Alarms window **10-6**

U

users (see security)

V

viewing

 reports **7-4**

 server properties **12-13**

 system properties **12-12**

 web configuration properties **12-13**

W

web configuration properties

 viewing **12-13**