



INDEX

A

- accessing
 - geographical HA gateways using the GUI [12-22](#)
- active alarms and event history
 - displaying [9-1](#)
- active alarms and event history [9-2](#)
- active sessions
 - displaying [6-20](#)
- adding
 - upstream OSS hosts [9-11](#)
 - views to the Navigation Tree [7-35](#)
- adding and removing, properties [3-13](#)
- alarm and event properties
 - displaying [9-6](#)
- alarm events
 - displaying [9-8](#)
- alarm or event details
 - displaying [9-8](#)
- alarms
 - active alarms and event history [9-2](#)
 - and event filter dialog box other pane [9-5](#)
 - and events [A-2](#)
 - bulk statistics [7-29](#)
 - by device properties [8-5](#)
 - displaying by device from the alarms window [9-11](#)
 - sent to e-mail addresses, configuring [9-13](#)
 - sent to OSS hosts, configuring [9-13](#)
- alarms and events, filtering [9-4](#)
- alarms and events, managing [9-3](#)
- alarms and events in geographical HA gateways, managing [12-23](#)
- alarms by device

- displaying [8-6](#)
- algorithms
 - creating [7-45](#)
- algorithms, editor [7-46](#)
- and editing device polling groups
 - creating [8-22](#)
- and removing properties from property views
 - adding [3-13](#)
- a new polling group
 - creating [8-23](#)
- application audit logs, displaying [11-7](#)
- architecture
 - local HA [12-13](#)
 - Prime Performance Manager [1-4](#)
- archived, messages [11-14](#)
- archived messages, displaying [11-13](#)
- assigning devices, polling group [8-24](#)
- attributes
 - notification [9-17](#)
- authentication
 - local [6-9](#)
 - PAM, TACACS+, and LDAP [6-7](#)
 - Solaris and Linux [6-9](#)
- auto expand, report summary tables [3-10](#)

B

- backup directory
 - changing [14-3](#)
- backup directory, changing [14-3](#)
- backup logs, displaying [11-5](#)
- bulk statistics
 - alarms [7-29](#)

bulk statistics device configurations, removing [7-28](#)
 bulk statistics reports, setting up [7-24](#)

C

capability polling [7-18](#)

changing

report settings [7-14](#)

changing, poller settings [3-13](#)

chart legends, editing color [3-8](#)

CISCO-EPM-2 trap, notification attributes [9-19](#)

CISCO-PRIME trap

notification attributes [9-16](#)

CISCO-PRIME trap, notification attributes [9-16](#)

CLI command log, displaying [11-5](#)

client access, limiting access to servers [2-9](#)

color

setting chart legend colors [3-8](#)

command line interface [A-3](#)

command reference [B-1](#)

commands

changing system properties [11-8](#)

hacommands [B-36](#)

ppm [B-5](#)

ppm addunitconf [B-6](#)

ppm adduser [B-7](#)

ppm backup [B-8](#)

ppm backupdir [B-10](#)

ppm badloginalarm [B-12](#)

ppm badlogindisable [B-12, B-13](#)

ppm certtool [B-13](#)

ppm changes [B-14](#)

ppm checksystem [B-14](#)

ppm clitimeout [B-14](#)

ppm cmdlog [B-15](#)

ppm console [B-16](#)

ppm consolelogsize [B-16](#)

ppm countnodes [B-16](#)

ppm datadir [B-17](#)

ppm delete [B-18](#)

ppm deletesnmpcomm [B-19](#)

ppm deleteunitconf [B-19](#)

ppm deluser [B-20](#)

ppm disablepass [B-20](#)

ppm disableuser [B-21](#)

ppm discover [B-22](#)

ppm diskcheck [B-22](#)

ppm diskmonitor [B-22](#)

ppm enablepwdage [B-24](#)

ppm enableuser [B-21, B-24](#)

ppm eventautolog [B-24](#)

ppm eventconfig [B-25](#)

ppm eventlimitsconfig [B-25](#)

ppm eventsnmpserversconfig [B-26](#)

ppm eventtool [B-26](#)

ppm evilstop [B-28](#)

ppm export [B-28](#)

ppm exportcustnames [B-28](#)

ppm exportusers [B-28](#)

ppm gatewayname [B-29](#)

ppm habackupflag [B-35](#)

ppm happmtimeout [B-36](#)

ppm help [B-29](#)

ppm ifnameformat [B-30](#)

ppm inactiveuserdays [B-31](#)

ppm installlog [B-32](#)

ppm inventoryimport [B-32](#)

ppm iosreport [B-32](#)

ppm ipaccess [B-33](#)

ppm ipslaftpfilesize [B-33](#)

ppm jspport [B-34](#)

ppm keytool [B-34](#)

ppm listusers [B-35](#)

ppm logger [B-37](#)

ppm logsize [B-37](#)

ppm logtimemode [B-38](#)

ppm maxascirows [B-39](#)

ppm maxhtmlrows [B-39](#)

ppm maxpagesize [B-40](#)
 ppm maxrepqueries [B-40](#)
 ppm mldebug [B-40](#)
 ppm modifyunitconf [B-42](#)
 ppm motd [B-42](#)
 ppm msglog [B-43](#)
 ppm msglogage [B-43](#)
 ppm msglogdir [B-44](#)
 ppm netlog [B-44](#)
 ppm netlogger [B-45](#)
 ppm newlevel [B-45](#)
 ppm optimizecapabilitypoll [B-45](#)
 ppm osinfo [B-46](#)
 ppm passwordage [B-46](#)
 ppm patchlog [B-47](#)
 ppm ping [B-47](#)
 ppm poll [B-47](#)
 ppm premotd [B-48](#)
 ppm primecentralintegration [B-48](#)
 ppm primeha [B-49](#)
 ppm print [B-50](#)
 ppm printreportstatus [B-50](#)
 ppm props [B-50](#)
 ppm purgedb [B-51](#)
 ppm pwdchangeinterval [B-51](#)
 ppm pwdchangelimit [B-52](#)
 ppm pwdchangerestrict [B-52](#)
 ppm readme [B-53](#)
 ppm reboot [B-53](#)
 ppm redistributenodes [B-53](#)
 ppm redundancygroups [B-54](#)
 ppm reloadbulkstats [B-55](#)
 ppm repdir [B-56](#)
 ppm rephelp [B-56](#)
 ppm restart [B-56](#)
 ppm restore [B-57](#)
 ppm restoreprops [B-58](#)
 ppm rootvars [B-58](#)
 ppm sechelp [B-58](#)

ppm seclog [B-59](#)
 ppm servername [B-59](#)
 ppm setpath [B-60](#)
 ppm setpctrappedestination [B-61](#)
 ppm showcreds [B-61](#)
 ppm showsnmpcomm [B-61](#)
 ppm showunitconf [B-62](#)
 ppm singlesess [B-62](#)
 ppm smtpport [B-75](#)
 ppm snmpcomm [B-63](#)
 ppm snmpconf [B-63](#)
 ppm snmpget [B-63](#)
 ppm snmphelp [B-66](#)
 ppm snmpmaxrows [B-66](#)
 ppm snmpnext [B-66](#)
 ppm snmpwalk [B-69](#)
 ppm ssl [B-71](#)
 ppm sslstatus [B-72](#)
 ppm starbuild [B-72](#)
 ppm start [B-73](#)
 ppm statreps [B-73](#)
 ppm status [B-75](#)
 ppm syncunits [B-76](#)
 ppm tac [B-77](#)
 ppm topxxsize [B-77](#)
 ppm traceroute [B-77](#)
 ppm uninstall [B-78](#)
 ppm unknownage [B-78](#)
 ppm updateuser [B-78](#)
 ppm useraccess [B-79](#)
 ppm userpass [B-79](#)
 ppm version [B-80](#)
 ppm who [B-80](#)
 ppm xmlpoll [B-81](#)

configuring

gateway and unit communication [13-3](#)
 gateways and units for firewalls [13-2](#)
 unit and device communication [13-6](#)
 web client and gateway communication [13-3](#)

- connected clients and system status, displaying [11-2](#)
- console log, displaying [11-5](#)
- console log archived messages, displaying [11-7](#)
- creating
 - custom device star graphs [7-12](#)
 - custom report views [7-34](#)
 - device bulk statistics configuration [7-27](#)
 - device polling groups [8-22](#)
 - device-to-unit maps [12-6](#)
 - report groups [7-42](#)
 - report policies [7-20](#)
 - star graphs [7-12](#)
 - unit protection groups [12-8](#)
- creating, a new polling group [8-23](#)
- creating, thresholds [10-1](#)
- credentials for Cisco Carrier Packet Transport devices
 - adding [5-10](#)
- cross launch, enabling from Prime Network [5-4](#)
- CSV
 - exporting [7-5](#)
- custom device star graphs, creating [7-12](#)
- customizing
 - date and time [7-7](#)
 - report display [7-9](#)
- custom report view
 - creating [7-34](#)
- custom report views, creating [7-34](#)

D

- daily alarm and event archives, displaying [9-9](#)
- dashboards
 - editing the display [7-32](#)
 - enabling and disabling [7-31](#)
 - managing [7-31](#)
 - menu bar [7-33](#)
- dashboards, managing [7-31](#)
- data
 - accessing, from the web [10-1](#)

- collection [8-20](#)
- data center
 - device support [5-12](#)
 - supported devices and technologies [7-22](#)
- deleting
 - device-to-unit maps [12-7](#)
 - SNMP credentials [5-6](#)
 - Telnet/SSH credentials [5-9](#)
- deleting, thresholds [10-9](#)
- device
 - average poll responses [8-7](#)
 - changing history limit [3-8](#)
 - contacts and locations [8-9](#)
 - details [8-18](#)
 - details in prime style [8-10](#)
 - details when cursor is placed over a link [3-8](#)
 - discovery [A-2](#)
 - discovery overview [1-6](#)
 - discovery requirements [5-1](#)
 - distributions [8-5](#)
 - management actions [A-2](#)
 - name settings, changing [3-8](#)
 - properties [8-2](#)
 - show domain name [3-8](#)
 - up time [8-8](#)
 - vendor information [8-10](#)
- device bulk statistics configuration
 - creating [7-27](#)
- device contacts and locations, displaying [8-9](#)
- device credentials, managing [5-5](#)
- device discovery
 - from Prime Performance Manager [5-10](#)
- device name and web port, editing [8-13](#)
- device polling groups, creating [8-22](#)
- device poll responses, displaying [8-7, 8-8](#)
- devices
 - assigning to polling groups [8-24](#)
 - assigning to report policies [7-21](#)
 - discovering [5-4](#)

- importing from Prime Network [5-2](#)
- devices in geographical HA gateways, managing [12-23](#)
- devices in the network-level view, managing [8-11](#)
- device snmp ip addresses, editing [8-16](#)
- device SNMP time out alarms, displaying [8-7](#)
- device software versions, displaying [8-9](#)
- devices to units, relocating [8-16](#)
- device-to-unit assignment
 - changing [12-8](#)
- device-to-unit assignments, changing [12-8](#)
- device-to-unit assignments, managing [12-5](#)
- device-to-unit assignments, viewing [12-6](#)
- device-to-unit maps
 - creating [12-6](#)
- device-to-unit maps, creating [12-6](#)
- device-to-unit maps, deleting [12-7](#)
- device-to-unit maps, editing [12-7](#)
- device type distributions, displaying [8-4](#)
- device up time, displaying [8-8](#)
- disabling [7-16](#)
 - passwords [6-17](#)
 - users [6-17](#)
- disaster recovery, manual [12-26](#)
- discovering
 - network devices from Prime Network [5-2](#)
- discovery
 - from Prime Performance Manager [5-10](#)
 - XEN and KVM TLS requirements [5-14](#)
- discovery, overview [5-1](#)
- discovery requirements
 - hypervisor [5-14](#)
- displaying
 - active alarms and event history [9-1](#)
 - alarm and event properties [9-6](#)
 - alarm events [9-8](#)
 - alarm or event details [9-8](#)
 - alarms by device [8-5](#)
 - alarms by device from the alarms window [9-11](#)
 - alarms by device type [8-6](#)
 - alarms by device type from the alarms window [9-11](#)
 - an alarm summary [9-4](#)
 - application audit logs [11-7](#)
 - archived messages [11-13](#)
 - backup log [11-5](#)
 - cli command log [11-5](#)
 - connected clients and system status [11-2](#)
 - console log [11-5](#)
 - console log archived messages [11-7](#)
 - daily alarm and event archives [9-9](#)
 - dashboards status [7-31](#)
 - data center reports [7-22](#)
 - detailed gateway and unit information and performance [12-3](#)
 - device contacts and locations [8-9](#)
 - device details for an alarm [9-9](#)
 - device details in cisco prime format [8-10](#)
 - device icmp ping responses and availability [8-8](#)
 - device poll responses [8-7](#)
 - device snmp TIME out alarms [8-7](#)
 - device software [8-9](#)
 - device-to-unit assignments [12-6](#)
 - device type distributions [8-4](#)
 - device up time [8-8](#)
 - device vendors [8-10](#)
 - event automation log [11-6](#)
 - gateway and unit information [12-1](#)
 - gateway and unit software versions [2-8](#)
 - gateway and unit status [2-6](#)
 - geographical HA status [12-19](#)
 - group reports [7-48](#)
 - individual device information [8-17](#)
 - information and error messages [11-11](#)
 - install log [11-4](#)
 - network and device reports [7-6](#)
 - network-level device information [8-1](#)
 - patch log [11-4](#)
 - poller settings [11-9](#)
 - Prime Performance Manager information [3-14](#)

- Prime Performance Manager version [2-8](#)
- report definitions [7-22](#)
- reports [7-1](#)
- reports settings [11-10](#)
- security log [11-6](#)
- system check log [11-5](#)
- system logs [11-4](#)
- system messages [11-11](#)
- system properties and settings [11-8](#)
- system security log [6-21](#)
- system settings [11-8](#)
- threshold parameters from the alarms window [10-6](#)
- user actions [11-12](#)
- web configuration properties [11-9](#)
- web settings [11-9](#)
- display settings, changing [3-9](#)
- duplicating, thresholds [10-7](#)

E

editing

- dashboard display [7-32](#)
- device credentials [8-13](#)
- device name, web port, and time zone [8-13](#)
- device SNMP IP addresses [8-16](#)
- device-to-unit maps [12-7](#)
- polling group assigned to a device [8-15](#)
- polling group parameters [8-23](#)
- report policy assigned to a device [8-15](#)
- report policy parameters [7-20](#)
- snmp credentials [5-6](#)
- thresholds from the alarms window [10-6](#)
- thresholds from the threshold editor [10-5](#)
- upstream OSS hosts [9-12](#)
- views [7-40](#)

- editing polling group parameters, polling [8-23](#)

enabling

- Prime Network cross-launch [5-4](#)
- reports and report intervals [7-18](#)

- secure user access [6-11](#)

- SSL on a gateway or collocated gateway and unit [6-3](#)

- SSL on gateways and units [6-2](#)

- SSL on remote units [6-4](#)

- user accounts and passwords using the CLI [6-18](#)

enabling and disabling

- reports [7-16](#)

- thresholds [10-8](#)

- error messages, information [11-11](#)

- event automation log, displaying [11-6](#)

F

failovers and switchovers

- local HA [12-14](#)

features

- security [1-6](#)

filtering

- alarms and events [9-4](#)

- report information [7-13](#)

floating IP address

- changing [12-15](#)

- floating IP address, changing [12-15](#)

forwarding

- traps to hosts [9-14](#)

G

gateway

- HA operations notes [12-13](#)

- high availability architecture [12-13](#)

- gateway and unit, properties [12-2](#)

- gateway and unit connectivity, managing [12-5](#)

- gateway and unit information, displaying [12-1](#)

- gateway and unit status, displaying [2-6](#)

- gateway high availability, managing [12-11](#)

- gateways, restarting [2-4](#)

- gateways, starting [2-2](#)

gateways, stopping [2-3](#)
gateways and units
 properties [12-3](#)
 starting using the CLI [2-1](#)
gateways and units, discovering [5-2](#)
gateways and units, version [2-8](#)
gateway-to-unit connectivity [13-1](#)
geographical and local high availability, managing [12-25](#)
geographical HA
 configuring [12-21](#)
geographical HA gateway data
 backing up and restoring [12-22](#)
geographical HA gateways, freezing and unfreezing [12-22](#)
geographical HA gateways, synchronizing [12-21](#)
geographical high availability, managing [12-18](#)
graph, time span bar [7-12](#)
graph bar and data display options [7-11](#)
groups
 protection [12-10](#)
 provided [7-43](#)
GUI, optimize for slow connections [3-9](#)
GUI polling refresh setting, changing [3-13](#)

H

HA, failovers and switchovers [12-14](#)
hypervisor, discovery requirements [5-14](#)

I

individual device information, displaying [8-17](#)
individual devices, managing [8-21](#)
information
 error messages [11-11](#)
 from the Help Menu [3-5](#)
information and error messages, displaying [11-11](#)
install log, displaying [11-4](#)
integrating

Prime Performance Manager with Prime Central [4-1](#)
IPv6
 Prime Performance Manager support [A-1](#)
 troubleshooting [A-3](#)

J

JVM, checking versions [6-8](#)

L

last login date and time, changing [3-9](#)
launching, web interface [3-1](#)
LDAP [6-7](#)
local HA
 architecture [12-13](#)
 failovers and switchovers [12-14](#)
 operations notes [12-13](#)
local high availability, managing [12-12](#)
log files, managing [11-7](#)
logging in
 as the Root user [2-1](#)
login window [3-2](#)
log messages, RHCS [12-16](#)

M

managing
 alarms and events [9-3](#)
 alarms and events in geographical HA gateways [12-23](#)
 dashboards [7-31](#)
 device credentials [5-5](#)
 devices in geographical HA gateways [12-23](#)
 devices in the network-level view [8-11](#)
 device-to-unit assignments [12-5](#)
 gateway and unit connectivity [12-5](#)
 gateway high availability [12-11](#)
 geographical and local high availability [12-25](#)

- geographical high availability [12-18](#)
- individual devices [8-21](#)
- local high availability [12-12](#)
- log files [11-7](#)
- report groups [7-47](#)
- reports [7-1](#)
- reports, views, and groups in geographical HA gateways [12-23](#)
- thresholds [10-5](#)
- thresholds and upstream alarm hosts in geographical HA Gateways [12-24](#)
- user access and security [6-1](#)
- users and user security [6-12](#)
- users in geographical HA gateways [12-23](#)
- manual, disaster recovery [12-26](#)
- master report settings, changing [7-14](#)
- menus, navigation [3-4](#)
- merging
 - view charts [7-40](#)
- message of the day, configuring [6-19](#)
- messages
 - display, changing [11-7](#)
- messages of the day [6-19](#)
 - creating [6-19](#)
- modifying
 - custom report views [7-37](#)
 - password policy [6-9](#)

N

- navigation
 - menus [3-4](#)
- network alarms by device properties [8-5](#)
- network-level device information [8-1](#)
- network-level device information, displaying [8-1](#)
- network-level device properties, displaying [8-2](#)
- new bulk statistics schemas or counters
 - adding [7-28](#)
- new polling group

- creating [8-23](#)
- new report policy
 - creating [7-21](#)
- new users
 - adding [6-12](#)
- Nexus switches in VDC mode, discovering [5-13](#)
- notes to alarms or events
 - adding [9-7](#)
- notification, attributes [9-17](#)
- notification attributes
 - CISCO-EPM-2 trap [9-19](#)
- number of backup days, setting [14-3](#)

O

- operations notes
 - local HA [12-13](#)
- options, data [7-11](#)
- options, graph bar [7-11](#)

P

- page size [7-5](#)
- parameters
 - polling group [8-23](#)
- passwords, changing user [6-15](#)
- patch log, displaying [11-4](#)
- Pluggable Authentication Modules (PAM) [6-7](#)
- poller
 - settings, changing [3-13](#)
- poller settings, displaying [11-9](#)
- polling
 - creating a new polling group [8-23](#)
 - editing polling group parameters [8-23](#)
 - polling group parameters [8-23](#)
- polling, capability [7-18](#)
- polling group
 - assigning devices to [8-24](#)

- parameters [8-23](#)
 - polling group assigned to a device, editing [8-15](#)
 - polling group parameters, editing [8-23](#)
 - polling group parameters, polling [8-23](#)
 - ports
 - used by Prime Performance Manager [13-3](#)
 - post integration, commands and procedures [4-6](#)
 - primary and secondary geographical HA gateways, switching [12-20](#)
 - primary gateway, running status [12-19](#)
 - Prime Central
 - integrating Prime Performance Manager [4-1](#)
 - Prime Central integration
 - considerations and next steps [4-5](#)
 - post integration commands and procedures [4-6](#)
 - troubleshooting [4-4](#)
 - Prime Network, importing devices [5-2](#)
 - Prime Network cross-launch, enabling [5-4](#)
 - Prime Performance Manager
 - about [3-xv](#)
 - architecture [1-4](#)
 - backing up data files [14-2](#)
 - back up and restore process [14-1](#)
 - client and server communication
 - VPN [13-2](#)
 - commands [B-1](#)
 - communication [13-1](#)
 - dashboards overview [1-3](#)
 - database [1-5](#)
 - device discovery [5-4](#)
 - discovering devices [5-10](#)
 - displaying information about [3-14](#)
 - features and functions [1-1](#)
 - integrating with Prime Central [4-1](#)
 - IPv6 [A-1](#)
 - login window [3-2](#)
 - ports [13-3](#)
 - ports [13-3](#)
 - reports overview [1-3](#)
 - restarting gateways and units [2-4](#)
 - server [5-1](#)
 - SNMP traps [9-16](#)
 - starting gateways and units [2-1](#)
 - stopping gateways and units [2-3](#)
 - supported browsers [3-1](#)
 - user levels [6-10](#)
 - user levels [6-10](#)
 - web interface
 - archived messages [11-13](#)
 - logs
 - command [11-5](#)
 - console [11-5](#)
 - event automation [11-6](#)
 - security [11-6](#)
 - Prime Performance Manager, architecture [1-4](#)
 - Prime Performance Manager bulk statistics schema file, updating [7-28](#)
 - Prime Performance Manager client, limiting access [2-9](#)
 - Prime Performance Manager data files
 - backing up [14-2](#)
 - Prime Performance Manager data files, restoring [14-3](#)
 - Prime Performance Manager server, starting [5-1](#)
 - Prime Performance Manager Window [3-4](#)
 - Prime Performance Manager with Prime Central, integrating [4-1](#)
 - properties
 - tables, sorting [3-14](#)
 - properties, adding and removing [3-13](#)
 - properties, detailed gateway and unit [12-3](#)
 - properties, gateway
 - and unit [12-2](#)
 - protection, groups [12-10](#)
 - provided, groups [7-43](#)
-
- ## R
- redundant units, in active status [12-10](#)
 - reference, commands [B-1](#)
 - relocating

- devices to units [8-16](#)
- removing
 - bulk statistics device configurations [7-28](#)
- report chart, adding to clipboard tool [7-9](#)
- report graphs
 - add to star charts tool [7-10](#)
 - export to image tool [7-10](#)
- report group
 - creating [7-44](#)
- report groups, creating [7-42](#)
- report groups, managing [7-47](#)
- report policies
 - assigning devices to [7-21](#)
 - creating [7-20](#)
 - creating new [7-21](#)
 - editing [7-20](#)
- report policies, creating [7-20](#)
- report policy assigned to a device, editing [8-15](#)
- reports
 - changing settings [7-14](#)
 - creating policies [7-20](#)
 - custom views [7-34](#)
 - data options [7-17](#)
 - definitions, displaying [7-22](#)
 - displaying [7-1](#)
 - enabling and disabling [7-16](#)
 - filtering information [7-13](#)
 - historical statistics settings [7-15](#)
 - managing [7-1](#)
 - menu bar [7-3](#)
 - settings, changing [3-10](#)
 - viewing [7-6](#)
- reports, searching [7-3](#)
- reports, views, and groups in geographical HA gateways, managing [12-23](#)
- reports, window [3-4](#)
- reports and report intervals, enabling [7-18](#)
- reports graphs
 - show chart in full screen tool [7-9](#)
 - toggle area charts tool [7-10](#)
- reports in 3GPP XML format, exporting [7-19](#)
- reports settings, displaying [11-10](#)
- reports table view
 - hide series tool [7-9](#)
- restarting
 - gateways [2-4](#)
 - units [2-5](#)
- restoring
 - Prime Performance Manager data files [14-3](#)
- RHCS, freezing and unfreezing [12-14](#)
- RHCS, log messages [12-16](#)
- RHCS cluster server, switching [12-15](#)
- RHCS Conga web interface
 - configuring [12-17](#)
- RHCS conga web interface, configuring [12-17](#)
- RMI
 - how it works [13-2](#)
- RMI components [13-2](#)
- root user
 - becoming [5-1](#)
 - login [2-1](#)
- Root user, logging in [2-1](#)
- RSA, generation [6-3](#)

S

- searching
 - reports [7-3](#)
- secondary HA gateway, running status [12-19](#)
- secure user access
 - disabling [6-12](#)
- secure user access, enabling [6-11](#)
- security
 - client access, limiting [2-9](#)
 - days before forcing password change [6-16](#)
 - editing user security [6-16](#)
 - logs, system [6-21](#)
 - message of the day [6-19](#)

- number of active client sessions [6-16](#)
- overview [1-6](#)
- passwords, creating [6-9](#)
- passwords, disabling manually [6-17](#)
- passwords, re-enabling [6-18](#)
- user-based access
 - disabling [6-12](#)
 - implementing [6-7](#)
- user levels [6-10](#)
 - basic user [6-10](#)
 - network operator [6-10](#)
 - system administrator [6-11](#)
- users
 - changing [6-18](#)
 - listing current [6-20](#)
- security log, displaying [11-6](#)
- server
 - Prime Performance Manager [5-1](#)
- server properties
 - displaying [11-9](#)
- setting
 - number of backup days [14-3](#)
- settings
 - historical reports [7-15](#)
- setting up
 - bulk statistics reports [7-24](#)
- slow connections, optimize [3-9](#)
- SNMP and Telnet/SSH credentials
 - adding [A-1](#)
- SNMP credentials
 - adding [5-5](#)
 - deleting [5-6](#)
 - editing [5-6](#)
- SNMP credentials, deleting [5-6](#)
- software versions [8-9](#)
- Sorting, tables [3-14](#)
- SSH
 - adding credentials [5-7](#)
- SSL
 - configuring on geographical HA gateways and remote units [12-24](#)
 - disabling [6-6](#)
 - enabling [6-2](#)
 - enabling on gateway or collocated gateway and unit [6-3](#)
 - enabling on remote units [6-4](#)
 - key and certificate, displaying [6-6](#)
 - status, displaying [6-5](#)
 - status and printing certificates [6-5](#)
 - viewing and exporting certificates [6-5](#)
- SSL certificates, exporting [6-5](#)
- SSL certificates, printing [6-5](#)
- SSL on a gateway or collocated gateway and unit, enabling [6-3](#)
- SSL on gateways and units, enabling [6-2](#)
- SSL on remote units, enabling [6-4](#)
- star graphs, creating [7-12](#)
- starting
 - gateways [2-2](#)
 - Prime Performance Manager server [5-1](#)
 - units [2-3](#)
- status, gateway and unit [2-6](#)
- stopping
 - gateways [2-3](#)
 - units [2-4](#)
- strict synchronization [5-3](#)
- switching
 - primary and secondary geographical HA gateways [12-20](#)
 - RHCS cluster server [12-15](#)
- synchronizing, geographical HA gateways [12-21](#)
- system
 - menu logs and messages [11-2](#)
- system configuration settings, changing [3-11](#)
- system logs, displaying [11-4](#)
- system messages, displaying [11-11](#)
- system properties
 - statuses, logs, and messages overview [11-1](#)
- systemproperties

viewing [11-8](#)
 system properties and settings, displaying [11-8](#)
 system settings, displaying [11-8](#)

T

tables, sorting [3-14](#)
 TACACS+ [6-7](#)
 Telnet
 adding credentials [5-7](#)
 Telnet/SSH credentials, deleting [5-9](#)
 Telnet and SSH, credential notes [5-9](#)
 Telnet and SSH credentials
 adding [5-7](#)
 threshold dialog box
 adding [10-2](#)
 threshold events, viewing [10-9](#)
 threshold parameters from the alarms window, displaying [10-6](#)
 thresholds
 creating [10-1](#)
 deleting [10-9](#)
 editing [10-5, 10-7](#)
 enabling and disabling [10-8](#)
 managing [10-5](#)
 predefined [C-1](#)
 viewing from Alarms window [10-6](#)
 thresholds, deleting [10-9](#)
 thresholds, duplicating [10-7](#)
 thresholds, managing [10-5](#)
 thresholds, predefined [C-1](#)
 thresholds and upstream alarm hosts in geographical HA Gateways, managing [12-24](#)
 thresholds from the alarms window, editing [10-6](#)
 thresholds from the threshold editor, editing [10-5](#)
 threshold tools
 adding [10-1](#)
 time span bar, graph [7-12](#)
 trap forwarding [A-3](#)

traps to hosts, forwarding [9-14](#)
 tuning
 event and alarm parameters [9-11, 9-15](#)

U

unit protection groups
 creating [12-8](#)
 units
 configuration [A-2](#)
 protection group failover scenarios [12-11](#)
 redundancy groups and geographical HA [12-25](#)
 units, restarting [2-5](#)
 units, starting [2-3](#)
 units, stopping [2-4](#)
 updating
 Prime Performance Manager bulk statistics schema file [7-28](#)
 upstream alarm hosts
 configuring [9-11](#)
 upstream OSS hosts, adding [9-11](#)
 upstream OSS hosts, editing [9-12](#)
 user
 access, disabling [6-12](#)
 access, enabling [6-11](#)
 actions [11-12](#)
 authentication [6-7](#)
 passwords, configuring [6-9](#)
 security levels [6-10](#)
 user, editing information [6-13](#)
 user access and security, managing [6-1](#)
 user accounts and passwords using the CLI, enabling [6-18](#)
 user actions, displaying [11-12](#)
 user passwords
 changing [6-15](#)
 configuring [6-9](#)
 user preferences
 changing [3-7](#)
 user preferences, changing [3-7](#)

user reports, editing [6-14](#)

users

changing passwords [6-15](#)

changing preferences [3-7](#)

editing information [6-13](#)

managing through GUI [6-12](#)

setting up access and security [6-1](#)

setting up and managing [6-1](#)

users, list currently defined [6-20](#)

users and passwords

manually disable [6-17](#)

users and user security, managing [6-12](#)

user security settings, editing [6-16](#)

users in geographical HA gateways, managing [12-23](#)

V

view

editor [7-41](#)

graph [7-3](#)

list [7-3](#)

tab [7-39](#)

table [7-3](#)

tree [7-3](#)

view charts, merging [7-40](#)

viewing

device-to-unit assignments [12-6](#)

reports [7-6](#)

system properties [11-8](#)

threshold events [10-9](#)

views

copying and pasting [7-36](#)

creating custom [7-34](#)

managing [7-40](#)

modifying custom [7-37](#)

views to the Navigation Tree, adding [7-35](#)

W

web

checking browser settings [3-7](#)

configuration properties, displaying [11-9](#)

settings [11-10](#)

web browser

checking [3-7](#)

web browsers,supported [3-1](#)

web interface, launching [3-1](#)

web settings, displaying [11-9](#)

X

XEN and KVM TLS, discovery requirements [5-14](#)

