



---

## A

- accessing
  - geographical HA gateways using the GUI [12-22](#)
- active alarms and event history
  - displaying [9-1](#)
- active alarms and event history [9-2](#)
- active sessions
  - displaying [6-22](#)
- adding
  - upstream OSS hosts [9-12](#)
  - views to the Navigation Tree [7-49](#)
- adding and removing, properties [3-16](#)
- alarm and event properties
  - displaying [9-7](#)
- alarm events
  - displaying [9-9](#)
- alarm or event details
  - displaying [9-9](#)
- alarms
  - active alarms and event history [9-2](#)
  - and event filter dialog box other pane [9-5](#)
  - and events [A-2](#)
  - bulk statistics [7-41](#)
  - by device properties [8-6](#)
  - displaying by device from the alarms window [9-12](#)
  - sent to e-mail addresses, configuring [9-14](#)
  - sent to OSS hosts, configuring [9-14](#)
- alarms and events, filtering [9-5](#)
- alarms and events, managing [9-3](#)
- alarms and events in geographical HA gateways, managing [12-23](#)
- alarms by device

- displaying [8-6](#)
- algorithms
  - creating [7-59](#)
- and editing device polling groups
  - creating [8-29](#)
- and removing properties from property views
  - adding [3-16](#)
- a new polling group
  - creating [8-30](#)
- application audit logs, displaying [11-7](#)
- architecture
  - local HA [12-13](#)
  - Prime Performance Manager [1-5](#)
- archived, messages [11-14](#)
- archived messages, displaying [11-14](#)
- assigning devices, polling group [8-31](#)
- attributes
  - notification [9-18](#)
- authentication
  - local [6-8](#)
  - PAM, TACACS+, and LDAP [6-7](#)
  - Solaris and Linux [6-8](#)
- auto expand, report summary tables [3-10](#)

---

## B

- backup directory
  - changing [14-3](#)
- backup directory, changing [14-3](#)
- backup logs, displaying [11-5](#)
- bulk statistics
  - alarms [7-41](#)
- bulk statistics device configurations, removing [7-40](#)

bulk statistics reports, setting up [7-36](#)

## C

capability polling [7-24](#)

changing

report settings [7-20](#)

chart legends, editing color [3-8](#)

CISCO-EPM-2 trap, notification attributes [9-20](#)

CISCO-PRIME trap

notification attributes [9-17](#)

CISCO-PRIME trap, notification attributes [9-17](#)

CLI command log, displaying [11-5](#)

client access, limiting access to servers [2-9](#)

color

setting chart legend colors [3-8](#)

command line interface [A-3](#)

command reference [B-1](#)

commands

changing system properties [11-8](#)

hacommmands [B-38](#)

ppm [B-5](#)

ppm addunitconf [B-7](#)

ppm adduser [B-7](#)

ppm backup [B-9](#)

ppm backupdir [B-11](#)

ppm badloginalarm [B-13](#)

ppm badlogindisable [B-13, B-14](#)

ppm certtool [B-14](#)

ppm changes [B-15](#)

ppm checksystem [B-15](#)

ppm clitimeout [B-16](#)

ppm cmdlog [B-16](#)

ppm console [B-17](#)

ppm consolelogsize [B-17](#)

ppm countnodes [B-18](#)

ppm datadir [B-19](#)

ppm days [B-10, B-11](#)

ppm delete [B-20](#)

ppm deletesnmpcomm [B-21](#)

ppm deleteunitconf [B-21](#)

ppm deluser [B-21](#)

ppm disablepass [B-22](#)

ppm disableuser [B-23](#)

ppm discover [B-23](#)

ppm diskcheck [B-24](#)

ppm diskmonitor [B-24](#)

ppm disnable [B-84](#)

ppm enablepwdage [B-25](#)

ppm enableuser [B-23, B-26](#)

ppm eventautolog [B-26](#)

ppm eventconfig [B-26](#)

ppm eventlimitsconfig [B-27](#)

ppm eventsnmpserversconfig [B-27](#)

ppm eventtool [B-28](#)

ppm evilstop [B-29](#)

ppm export [B-29](#)

ppm exportcustnames [B-30](#)

ppm exportusers [B-30](#)

ppm fastinterval [B-30](#)

ppm gatewayname [B-31](#)

ppm getbackuptimes [B-31](#)

ppm happmtimeout [B-38](#)

ppm help [B-32](#)

ppm ifnameformat [B-32](#)

ppm inactiveuserdays [B-33](#)

ppm installlog [B-34](#)

ppm inventoryimport [B-34](#)

ppm iosreport [B-34](#)

ppm ipaccess [B-35](#)

ppm ipslaftpfilesize [B-36](#)

ppm jspport [B-36](#)

ppm keytool [B-36](#)

ppm listusers [B-37](#)

ppm localhabackupflag [B-38](#)

ppm logger [B-39](#)

ppm lognum [B-39](#)

ppm logsize [B-39](#)

- ppm logtimemode [B-41](#)
- ppm manage [B-42](#)
- ppm maxhtmlrows [B-42](#)
- ppm maxpagesize [B-43](#)
- ppm maxrepqueries [B-43](#)
- ppm mldebug [B-43](#)
- ppm modifyunitconf [B-45](#)
- ppm motd [B-45](#)
- ppm msglog [B-46](#)
- ppm msglogage [B-46](#)
- ppm msglogdir [B-47](#)
- ppm netflow [B-47](#)
- ppm netflowport [B-48](#)
- ppm netflowservfile [B-48](#)
- ppm netlog [B-49](#)
- ppm netlogger [B-49](#)
- ppm networktopology [B-49](#)
- ppm newlevel [B-49](#)
- ppm nontoerrcount [B-50](#)
- ppm numfastthreads [B-50](#)
- ppm numslowthreads [B-51](#)
- ppm optimizecapabilitypoll [B-51](#)
- ppm osinfo [B-51](#)
- ppm passwordage [B-52](#)
- ppm patchlog [B-52](#)
- ppm ping [B-53](#)
- ppm pingpolldelay [B-53](#)
- ppm poll [B-53](#)
- ppm premotd [B-54](#)
- ppm primecentralintegration [B-54, B-56](#)
- ppm primeha [B-55](#)
- ppm print [B-56](#)
- ppm printreportstatus [B-57](#)
- ppm props [B-57](#)
- ppm purgedb [B-57](#)
- ppm pwdchangeinterval [B-58](#)
- ppm pwdchangelimit [B-58](#)
- ppm pwdchangerestrict [B-59](#)
- ppm readme [B-59](#)
- ppm reboot [B-59](#)
- ppm redistributenodes [B-60](#)
- ppm redundancygroups [B-60](#)
- ppm reloadbulkstats [B-61](#)
- ppm repdir [B-62](#)
- ppm rephelp [B-62](#)
- ppm resolvehostnames [B-62](#)
- ppm restart [B-63](#)
- ppm restore [B-63](#)
- ppm restoreprops [B-64](#)
- ppm rootvars [B-65](#)
- ppm sechelp [B-65](#)
- ppm seclog [B-65](#)
- ppm servername [B-66](#)
- ppm setpath [B-66](#)
- ppm setpctrappedestination [B-67](#)
- ppm showcreds [B-67](#)
- ppm showsnmpcomm [B-68](#)
- ppm showunitconf [B-68](#)
- ppm singlesess [B-69](#)
- ppm smtpport [B-82](#)
- ppm snmpcomm [B-69](#)
- ppm snmpconf [B-69](#)
- ppm snmpget [B-70](#)
- ppm snmphelp [B-72](#)
- ppm snmpmaxrows [B-72](#)
- ppm snmpnext [B-73](#)
- ppm snmpwalk [B-75](#)
- ppm ssl [B-78](#)
- ppm sslstatus [B-78](#)
- ppm starbuild [B-78](#)
- ppm start [B-79](#)
- ppm statreps [B-79](#)
- ppm status [B-81](#)
- ppm syncunits [B-82, B-83](#)
- ppm tac [B-83](#)
- ppm toerrcount [B-83](#)
- ppm topxxsize [B-84](#)
- ppm traceroute [B-84](#)

- ppm uaenable [B-85](#)
- ppm uninstall [B-85](#)
- ppm unknownage [B-85](#)
- ppm updateuser [B-86](#)
- ppm useraccess [B-86](#)
- ppm userpass [B-87](#)
- ppm version [B-87](#)
- ppm who [B-88](#)
- ppm xmlpoll [B-88](#)
- ppm zipoldbackups [B-88](#)
- configuring
  - gateway and unit communication [13-3](#)
  - gateways and units for firewalls [13-2](#)
  - unit and device communication [13-6](#)
  - web client and gateway communication [13-3](#)
- connected clients and system status, displaying [11-2](#)
- console log, displaying [11-5](#)
- console log archived messages, displaying [11-7](#)
- creating
  - custom device star graphs [7-14](#)
  - custom report views [7-46](#)
  - device bulk statistics configuration [7-39](#)
  - device polling groups [8-29](#)
  - device-to-unit maps [12-6](#)
  - report groups [7-56](#)
  - report policies [7-25](#)
  - star graphs [7-14](#)
  - unit protection groups [12-8](#)
- creating, a new polling group [8-30](#)
- creating, thresholds [10-1](#)
- credentials for Cisco Carrier Packet Transport devices
  - adding [5-11](#)
- CSV
  - exporting [7-6, 7-9](#)
- custom device star graphs, creating [7-14](#)
- customizing
  - date and time [7-9](#)
  - report display [7-11](#)
- custom report view

- creating [7-48](#)
- custom report views, creating [7-46](#)

---

## D

- daily alarm and event archives, displaying [9-10](#)
- dashboards
  - editing the display [7-44](#)
  - enabling and disabling [7-44](#)
  - managing [7-43](#)
- dashboards, managing [7-43](#)
- data
  - accessing, from the web [10-1](#)
  - collection [8-26](#)
- data center
  - device support [5-13](#)
  - supported devices and technologies [7-28](#)
- deleting
  - device-to-unit maps [12-8](#)
  - SNMP credentials [5-7](#)
  - Telnet/SSH credentials [5-9](#)
- deleting, thresholds [10-10](#)
- device
  - average poll responses [8-7](#)
  - changing history limit [3-8](#)
  - contacts and locations [8-11](#)
  - details [8-24](#)
  - details in prime style [8-12](#)
  - discovery [A-2](#)
  - discovery overview [1-7](#)
  - discovery requirements [5-1](#)
  - management actions [A-2](#)
  - name settings, changing [3-7](#)
  - properties [8-3](#)
  - show domain name [3-8](#)
  - up time [8-8](#)
  - vendor information [8-12](#)
- device bulk statistics configuration
  - creating [7-39](#)

- device contacts and locations, displaying [8-10](#)
- device credentials, managing [5-5](#)
- device discovery
  - from Prime Performance Manager [5-11](#)
- device name and web port, editing [8-17](#)
- device polling groups, creating [8-29](#)
- device poll responses, displaying [8-7, 8-8](#)
- devices
  - assigning to polling groups [8-31](#)
  - assigning to report policies [7-27](#)
  - discovering [5-4](#)
  - importing from Prime Network [5-3](#)
- devices in geographical HA gateways, managing [12-23](#)
- devices in the network-level view, managing [8-16](#)
- device snmp ip addresses, editing [8-20](#)
- device SNMP time out alarms, displaying [8-7](#)
- device software versions, displaying [8-9, 8-10](#)
- devices to units, relocating [8-21](#)
- device-to-unit assignment
  - changing [12-8](#)
- device-to-unit assignments, changing [12-8](#)
- device-to-unit assignments, managing [12-6](#)
- device-to-unit assignments, viewing [12-6](#)
- device-to-unit maps
  - creating [12-6](#)
- device-to-unit maps, creating [12-6](#)
- device-to-unit maps, deleting [12-8](#)
- device-to-unit maps, editing [12-7](#)
- device type distributions, displaying [8-5](#)
- device up time, displaying [8-8](#)
- disabling [7-22](#)
  - passwords [6-19](#)
  - users [6-19](#)
- disaster recovery, manual [12-26](#)
- discovering
  - network devices from Prime Network [5-3](#)
- discovery
  - from Prime Performance Manager [5-11](#)
  - XEN and KVM TLS requirements [5-15](#)
- discovery, overview [5-1](#)
- discovery requirements
  - hypervisor [5-15](#)
- displaying
  - active alarms and event history [9-1](#)
  - alarm and event properties [9-7](#)
  - alarm events [9-9](#)
  - alarm or event details [9-9](#)
  - alarms by device [8-5](#)
  - alarms by device from the alarms window [9-12](#)
  - alarms by device type [8-6](#)
  - alarms by device type from the alarms window [9-12](#)
  - an alarm summary [9-4](#)
  - application audit logs [11-7](#)
  - archived messages [11-14](#)
  - backup log [11-5](#)
  - cli command log [11-5](#)
  - connected clients and system status [11-2](#)
  - console log [11-5](#)
  - console log archived messages [11-7](#)
  - daily alarm and event archives [9-10](#)
  - dashboards status [7-44](#)
  - data center reports [7-28](#)
  - detailed gateway and unit information and performance [12-4](#)
  - device contacts and locations [8-10](#)
  - device details for an alarm [9-11](#)
  - device details in cisco prime format [8-12](#)
  - device icmp ping responses and availability [8-8](#)
  - device poll responses [8-7](#)
  - device snmp TIME out alarms [8-7](#)
  - device software [8-9, 8-10](#)
  - device-to-unit assignments [12-6](#)
  - device type distributions [8-5](#)
  - device up time [8-8](#)
  - device vendors [8-11](#)
  - event automation log [11-6](#)
  - gateway and unit information [12-1](#)
  - gateway and unit software versions [2-8](#)

- gateway and unit status [2-6](#)
- geographical HA status [12-19](#)
- group reports [7-60](#)
- individual device information [8-23](#)
- information and error messages [11-12](#)
- install log [11-4](#)
- network and device reports [7-7](#)
- network-level device information [8-2](#)
- patch log [11-4](#)
- poller settings [11-9](#)
- Prime Performance Manager information [3-17](#)
- Prime Performance Manager version [2-8](#)
- report definitions [7-27](#)
- reports [7-1](#)
- reports settings [11-10, 11-11](#)
- security log [11-6](#)
- system check log [11-5](#)
- system logs [11-4](#)
- system messages [11-12](#)
- system properties and settings [11-8](#)
- system security log [6-23](#)
- system settings [11-8](#)
- threshold parameters from the alarms window [10-7](#)
- user actions [11-13](#)
- web configuration properties [11-9](#)
- web settings [11-9](#)
- display settings, changing [3-9](#)
- duplicating, thresholds [10-8](#)

---

## E

### editing

- dashboard display [7-44](#)
- device credentials [8-18](#)
- device name, web port, and time zone [8-17](#)
- device SNMP IP addresses [8-20](#)
- device-to-unit maps [12-7](#)
- polling group assigned to a device [8-20](#)
- polling group parameters [8-30](#)

- report policy assigned to a device [8-20](#)
- report policy parameters [7-25](#)
- snmp credentials [5-6](#)
- thresholds from the alarms window [10-7](#)
- thresholds from the threshold editor [10-6](#)
- upstream OSS hosts [9-13](#)
- views [7-53](#)
- editing polling group parameters, polling [8-30](#)
- enabling
  - secure user access [6-11](#)
  - SSL on a gateway or collocated gateway and unit [6-3](#)
  - SSL on gateways and units [6-2](#)
  - SSL on remote units [6-3](#)
  - user accounts and passwords using the CLI [6-20](#)
- enabling and disabling
  - reports [7-22](#)
  - thresholds [10-9](#)
- error messages, information [11-12](#)
- event automation log, displaying [11-6](#)

---

## F

### failovers and switchovers

- local HA [12-14](#)

### features

- security [1-7](#)

### filtering

- alarms and events [9-5](#)
- report information [7-15](#)

### floating IP address

- changing [12-16](#)

floating IP address, changing [12-16](#)

### forwarding

- traps to hosts [9-15](#)

---

## G

### gateway

- HA operations notes [12-13](#)
- high availability architecture [12-13](#)
- gateway and unit, properties [12-2](#)
- gateway and unit connectivity, managing [12-5](#)
- gateway and unit information, displaying [12-1](#)
- gateway and unit status, displaying [2-6](#)
- gateway high availability, managing [12-12](#)
- gateways, restarting [2-5](#)
- gateways, starting [2-2](#)
- gateways, stopping [2-4](#)
- gateways and units
  - properties [12-3](#)
  - starting using the CLI [2-2](#)
- gateways and units, discovering [5-2](#)
- gateways and units, version [2-8](#)
- gateway-to-unit connectivity [13-1](#)
- geographical and local high availability, managing [12-25](#)
- geographical HA
  - configuring [12-21](#)
- geographical HA gateway data
  - backing up and restoring [12-22](#)
- geographical HA gateways, freezing and unfreezing [12-22](#)
- geographical HA gateways, synchronizing [12-21](#)
- geographical high availability, managing [12-18](#)
- groups
  - protection [12-10](#)
  - provided [7-57](#)
- GUI, optimize for slow connections [3-9](#)

---

## H

- HA, failovers and switchovers [12-14](#)
- hypervisor, discovery requirements [5-15](#)

---

## I

- individual device information, displaying [8-23](#)
- individual devices, managing [8-28](#)

- information
  - error messages [11-12](#)
  - from the Help Menu [3-5](#)
- information and error messages, displaying [11-12](#)
- install log, displaying [11-4](#)
- integrating
  - Prime Performance Manager with Prime Central [4-1](#)
- IPv6
  - Prime Performance Manager support [A-1](#)
  - troubleshooting [A-3](#)

---

## J

- JVM, checking versions [6-8](#)

---

## L

- last login date and time, changing [3-9](#)
- launching, web interface [3-1](#)
- LDAP [6-7](#)
- local HA
  - architecture [12-13](#)
  - failovers and switchovers [12-14](#)
  - operations notes [12-13](#)
- local high availability, managing [12-12](#)
- log files, managing [11-7](#)
- logging in
  - as the Root user [2-1](#)
- log messages, RHCS [12-16](#)

---

## M

- managing
  - alarms and events [9-3](#)
  - alarms and events in geographical HA gateways [12-23](#)
  - dashboards [7-43](#)
  - device credentials [5-5](#)
  - devices in geographical HA gateways [12-23](#)

- devices in the network-level view [8-16](#)
- device-to-unit assignments [12-6](#)
- gateway and unit connectivity [12-5](#)
- gateway high availability [12-12](#)
- geographical and local high availability [12-25](#)
- geographical high availability [12-18](#)
- individual devices [8-28](#)
- local high availability [12-12](#)
- log files [11-7](#)
- report groups [7-59](#)
- reports [7-1](#)
- reports, views, and groups in geographical HA gateways [12-23](#)
- thresholds [10-5](#)
- thresholds and upstream alarm hosts in geographical HA Gateways [12-24](#)
- user access and security [6-2](#)
- users and user security [6-12](#)
- users in geographical HA gateways [12-23](#)
- manual, disaster recovery [12-26](#)
- master report settings, changing [7-20](#)
- menus, navigation [3-4](#)
- merging
  - view charts [7-53](#)
- message of the day, configuring [6-21](#)
- messages
  - display, changing [11-7](#)
- messages, sending to online users [6-22](#)
- messages of the day [6-21](#)
  - creating [6-21](#)
- modifying
  - custom report views [7-51](#)
  - password policy [6-9](#)

---

## N

- navigation
  - menus [3-4](#)
- network alarms by device properties [8-6](#)

- network-level device information [8-2](#)
- network-level device information, displaying [8-2](#)
- network-level device properties, displaying [8-3](#)
- new bulk statistics schemas or counters
  - adding [7-40](#)
- new polling group
  - creating [8-30](#)
- new report policy
  - creating [7-26](#)
- new users
  - adding [6-12](#)
- Nexus switches in VDC mode, discovering [5-14](#)
- notes to alarms or events
  - adding [9-8](#)
- notification, attributes [9-18](#)
- notification attributes
  - CISCO-EPM-2 trap [9-20](#)
- number of backup days, setting [14-3](#)

---

## O

- operations notes
  - local HA [12-13](#)

---

## P

- page size [7-6](#)
- parameters
  - polling group [8-30](#)
- passwords, changing user [6-17](#)
- patch log, displaying [11-4](#)
- Pluggable Authentication Modules (PAM) [6-7](#)
- poller settings, displaying [11-9](#)
- polling
  - creating a new polling group [8-30](#)
  - editing polling group parameters [8-30](#)
  - polling group parameters [8-30](#)
- polling, capability [7-24](#)



- polling group
    - assigning devices to [8-31](#)
    - parameters [8-30](#)
  - polling group assigned to a device, editing [8-20](#)
  - polling group parameters, editing [8-30](#)
  - polling group parameters, polling [8-30](#)
  - ports
    - used by Prime Performance Manager [13-3](#)
  - post integration, commands and procedures [4-6](#)
  - primary and secondary geographical HA gateways, switching [12-20](#)
  - primary gateway, running status [12-19](#)
  - Prime Central
    - integrating Prime Performance Manager [4-1](#)
  - Prime Central integration
    - considerations and next steps [4-6](#)
    - post integration commands and procedures [4-6](#)
    - troubleshooting [4-5](#)
  - Prime Network, importing devices [5-3](#)
  - Prime Performance Manager
    - about [iii-xvii](#)
    - architecture [1-5](#)
    - backing up data files [14-2](#)
    - back up and restore process [14-1](#)
    - client and server communication
      - VPN [13-2](#)
    - commands [B-1](#)
    - communication [13-1](#)
    - dashboards overview [1-4](#)
    - database [1-6](#)
    - device discovery [5-4](#)
    - discovering devices [5-11](#)
    - displaying information about [3-17](#)
    - features and functions [1-1](#)
    - integrating with Prime Central [4-1](#)
    - IPv6 [A-1](#)
    - ports [13-3](#)
    - ports [13-3](#)
    - reports overview [1-3](#)
    - restarting gateways and units [2-5](#)
    - server [5-1](#)
    - SNMP traps [9-17](#)
    - starting gateways and units [2-2](#)
    - stopping gateways and units [2-4](#)
    - supported browsers [3-1](#)
    - user levels [6-9](#)
    - user levels [6-10](#)
    - web interface
      - archived messages [11-14](#)
      - logs
        - command [11-5](#)
        - console [11-5](#)
        - event automation [11-6](#)
        - security [11-6](#)
  - Prime Performance Manager, architecture [1-5](#)
  - Prime Performance Manager bulk statistics schema file, updating [7-41](#)
  - Prime Performance Manager client, limiting access [2-9](#)
  - Prime Performance Manager data files
    - backing up [14-2](#)
  - Prime Performance Manager data files, restoring [14-3](#)
  - Prime Performance Manager server, starting [5-1](#)
  - Prime Performance Manager Window [3-3](#)
  - Prime Performance Manager with Prime Central, integrating [4-1](#)
  - properties
    - tables, sorting [3-16](#)
  - properties, adding and removing [3-16](#)
  - properties, detailed gateway and unit [12-3](#)
  - properties, gateway
    - and unit [12-2](#)
  - protection, groups [12-10](#)
  - provided, groups [7-57](#)
- 
- ## R
- redundant units, in active status [12-11](#)
  - reference, commands [B-1](#)
  - relocating

- devices to units [8-21](#)
  - removing
    - bulk statistics device configurations [7-40](#)
  - report chart, adding to clipboard tool [7-12](#)
  - report graphs
    - add to star charts tool [7-12](#)
    - export to image tool [7-13](#)
  - report group
    - creating [7-58](#)
  - report groups, creating [7-56](#)
  - report groups, managing [7-59](#)
  - report policies
    - assigning devices to [7-27](#)
    - creating [7-25](#)
    - creating new [7-26](#)
    - editing [7-25](#)
  - report policies, creating [7-25](#)
  - report policy assigned to a device, editing [8-20](#)
  - reports
    - changing settings [7-20](#)
    - creating policies [7-25](#)
    - custom views [7-46](#)
    - data options [7-23](#)
    - definitions, displaying [7-27](#)
    - displaying [7-1](#)
    - enabling and disabling [7-22](#)
    - filtering information [7-15](#)
    - historical statistics settings [7-21](#)
    - managing [7-1](#)
    - menu bar [7-5](#)
    - settings, changing [3-10](#)
    - viewing [7-7](#)
  - reports, searching [7-4](#)
  - reports, views, and groups in geographical HA gateways, managing [12-23](#)
  - reports, window [3-3](#)
  - reports graphs
    - show chart in full screen tool [7-11](#)
    - toggle area charts tool [7-12](#)
  - reports in 3GPP XML format, exporting [7-24](#)
  - reports settings, displaying [11-10, 11-11](#)
  - reports table view
    - hide series tool [7-11](#)
  - restarting
    - gateways [2-5](#)
    - units [2-6](#)
  - restoring
    - Prime Performance Manager data files [14-3](#)
  - RHCS, freezing and unfreezing [12-15](#)
  - RHCS, log messages [12-16](#)
  - RHCS cluster server, switching [12-15](#)
  - RHCS Conga web interface
    - configuring [12-17](#)
  - RHCS conga web interface, configuring [12-17](#)
  - RMI
    - how it works [13-2](#)
  - RMI components [13-2](#)
  - root user
    - becoming [5-1](#)
    - login [2-1](#)
  - Root user, logging in [2-1](#)
  - RSA, generation [6-3](#)
- 
- ## S
- searching
    - reports [7-4](#)
  - secondary HA gateway, running status [12-20](#)
  - secure user access
    - disabling [6-11](#)
  - secure user access, enabling [6-11](#)
  - security
    - client access, limiting [2-9](#)
    - days before forcing password change [6-18](#)
    - editing user security [6-17](#)
    - logs, system [6-23](#)
    - message of the day [6-21](#)
    - number of active client sessions [6-18](#)

- overview [1-7](#)
- passwords, creating [6-9](#)
- passwords, disabling manually [6-19](#)
- passwords, re-enabling [6-20](#)
- user-based access
  - disabling [6-11](#)
  - implementing [6-6](#)
- user levels [6-9](#)
  - basic user [6-10](#)
  - network operator [6-10](#)
  - system administrator [6-10](#)
  - view administrator [6-10](#)
- users
  - changing [6-20](#)
  - listing current [6-23](#)
- security log, displaying [11-6](#)
- server
  - Prime Performance Manager [5-1](#)
- server properties
  - displaying [11-9](#)
- setting
  - number of backup days [14-3](#)
- settings
  - historical reports [7-21](#)
- setting up
  - bulk statistics reports [7-36](#)
- slow connections, optimize [3-9](#)
- SNMP and Telnet/SSH credentials
  - adding [A-1](#)
- SNMP credentials
  - adding [5-5](#)
  - deleting [5-7](#)
  - editing [5-6](#)
- SNMP credentials, deleting [5-7](#)
- software versions [8-9, 8-10](#)
- Sorting, tables [3-16](#)
- SSH
  - adding credentials [5-7](#)
- SSL
  - configuring on geographical HA gateways and remote units [12-24](#)
  - disabling [6-6](#)
  - enabling [6-2](#)
  - enabling on gateway or collocated gateway and unit [6-3](#)
  - enabling on remote units [6-3](#)
  - key and certificate, displaying [6-5](#)
  - status, displaying [6-5](#)
  - status and printing certificates [6-5](#)
  - viewing and exporting certificates [6-5](#)
- SSL certificates, exporting [6-5](#)
- SSL certificates, printing [6-5](#)
- SSL on a gateway or collocated gateway and unit, enabling [6-3](#)
- SSL on gateways and units, enabling [6-2](#)
- SSL on remote units, enabling [6-3](#)
- star graphs, creating [7-14](#)
- starting
  - gateways [2-2](#)
  - Prime Performance Manager server [5-1](#)
  - units [2-3](#)
- status, gateway and unit [2-6](#)
- stopping
  - gateways [2-4](#)
  - units [2-4](#)
- strict synchronization [5-3](#)
- switching
  - primary and secondary geographical HA gateways [12-20](#)
  - RHCS cluster server [12-15](#)
- synchronizing, geographical HA gateways [12-21](#)
- system
  - menu logs and messages [11-2](#)
- system configuration settings, changing [3-13](#)
- system logs, displaying [11-4](#)
- system messages, displaying [11-12](#)
- system properties
  - statuses, logs, and messages overview [11-1](#)
- systemproperties

viewing [11-8](#)

system properties and settings, displaying [11-8](#)

system settings, displaying [11-8](#)

## T

tables, sorting [3-16](#)

TACACS+ [6-7](#)

Telnet

adding credentials [5-7](#)

Telnet/SSH credentials, deleting [5-9](#)

Telnet and SSH, credential notes [5-10](#)

Telnet and SSH credentials

adding [5-7](#)

threshold events, viewing [10-10](#)

threshold parameters from the alarms window, displaying [10-7](#)

thresholds

creating [10-1](#)

deleting [10-10](#)

editing [10-6, 10-8](#)

enabling and disabling [10-9](#)

filtering [10-10](#)

managing [10-5](#)

predefined [C-1](#)

viewing from Alarms window [10-7](#)

thresholds, deleting [10-10](#)

thresholds, duplicating [10-8](#)

thresholds, managing [10-5](#)

thresholds, predefined [C-1](#)

thresholds and upstream alarm hosts in geographical HA Gateways, managing [12-24](#)

thresholds from the alarms window, editing [10-7](#)

thresholds from the threshold editor, editing [10-6](#)

threshold tools

adding [10-1](#)

trap forwarding [A-3](#)

traps to hosts, forwarding [9-15](#)

tuning

event and alarm parameters [9-12, 9-16](#)

## U

unit protection groups

creating [12-8](#)

units

configuration [A-2](#)

protection group failover scenarios [12-11](#)

redundancy groups and geographical HA [12-25](#)

units, restarting [2-6](#)

units, starting [2-3](#)

units, stopping [2-4](#)

updating

Prime Performance Manager bulk statistics schema file [7-41](#)

upstream alarm hosts

configuring [9-12](#)

upstream OSS hosts, adding [9-12](#)

upstream OSS hosts, editing [9-13](#)

user

access, disabling [6-11](#)

access, enabling [6-11](#)

actions [11-13](#)

authentication [6-6](#)

passwords, configuring [6-8](#)

security levels [6-9](#)

user, editing information [6-13](#)

user access and security, managing [6-2](#)

user accounts and passwords using the CLI, enabling [6-20](#)

user actions, displaying [11-13](#)

user passwords

changing [6-17](#)

configuring [6-8](#)

user preferences

changing [3-7](#)

user preferences, changing [3-7](#)

user reports, editing [6-16](#)

users

- changing passwords [6-17](#)
- changing preferences [3-7](#)
- editing information [6-13](#)
- managing through GUI [6-12](#)
- setting up access and security [6-1](#)
- setting up and managing [6-1](#)
- users, list currently defined [6-23](#)
- users and passwords
  - manually disable [6-19](#)
- users and user security, managing [6-12](#)
- user security settings, editing [6-17](#)
- users in geographical HA gateways, managing [12-23](#)

---

## V

- view
  - editor [7-55](#)
  - graph [7-4](#)
  - list [7-4](#)
  - table [7-4](#)
  - tree [7-4](#)
- view charts, merging [7-53](#)
- viewing
  - device-to-unit assignments [12-6](#)
  - reports [7-7](#)
  - system properties [11-8](#)
  - threshold events [10-10](#)
- views
  - copying and pasting [7-50](#)
  - creating custom [7-48](#)
  - managing [7-53](#)
  - modifying custom [7-51](#)
- views to the Navigation Tree, adding [7-49](#)

---

## W

- web
  - checking browser settings [3-6](#)

- configuration properties, displaying [11-9](#)
- settings [11-10](#)
- web browser
  - checking [3-6](#)
- web browsers,supported [3-1](#)
- web interface, launching [3-1](#)
- web settings, displaying [11-9](#)

---

## X

- XEN and KVM TLS, discovery requirements [5-15](#)

