

Private Hosts (Using PACLs)

This chapter describes the Private Hosts feature, which is being introduced for the Cisco 7600 series router in Cisco IOS Release 12.2SRB. This chapter contains the following sections:

- Overview, page 39-1
- Configuration Guidelines and Limitations, page 39-5
- Configuring Private Hosts, page 39-9
- Command Reference, page 39-13

Overview

The Private Hosts feature provides Layer 2 (L2) isolation between the hosts in a VLAN. You can use Private Hosts as an alternative to the Private VLAN isolated-trunks feature, which is currently not available on the Cisco 7600 router.

Service Providers (SPs) worldwide face increasing demand to provide their customers with triple-play services (voice, video, and data) over a single physical interface (copper or fiber). Typically, triple-play services are delivered over three different VLANs for each user, even though the VLAN for video traffic is often shared by multiple end users.

The key benefits of the Private Hosts feature are the ability to:

- Isolate traffic among hosts (subscribers) that share the same VLAN ID
- Reuse VLAN IDs across different subscribers, which improves VLAN scalability by making better use of the 4096 VLANs allowed
- Prevent MAC spoofing to prevent denial of service (DOS) attacks

The Private Hosts feature uses port-based access control lists (PACLs) to provide Layer 2 isolation between hosts on trusted ports within a purely Layer 2 domain. The PACLs isolate the hosts by imposing Layer 2 forwarding constraints on the router ports.



In Release 12.2SRB, PACLs are supported only as part of Private Hosts; you cannot configure your own PACLs. Instead, the router creates and applies PACLs based on your Private Hosts configuration.

The sections that follow provide more detail about the following Private Hosts concepts:

- Isolating Hosts in a VLAN, page 39-2
- Restricting Traffic Flow (Using Private Hosts Port Mode and PACLs), page 39-3

• Port ACLs, page 39-4

Isolating Hosts in a VLAN

Typically, triple-play services (voice, video, and data) are delivered over three different VLANs for each user, even though the VLANs for the same set of services could be shared among multiple end users. For example, if 10 end users all receive the same set of services, Private Hosts can be used to deliver the services to all of 10 end users over a single set of VLANs. However, to allow VLAN sharing, the service provider must be able to isolate traffic between the users (hosts) at Layer 2.

The Private Hosts feature provides Layer 2 isolation among hosts (end users) in a VLAN. By isolating the hosts, a service provider can use a single set of VLANs to deliver the same set of broadband or metro Ethernet services to multiple end users while ensuring that none of the hosts in the VLAN can communicate directly with each other. For example, VLAN 10 can be used for voice traffic, VLAN 20 for video traffic, and VLAN 30 for data traffic.

When the Cisco 7600 router is used as a DSLAM Gigabit Ethernet (GE) aggregator, the DSLAM is connected to the router through a trunk port that can carry data for multiple VLANs. The service provider uses a single physical port and a single set of VLANs to deliver the same set of services to different end users (isolated hosts). A separate VLAN is used for each service (voice, video, and data).

Figure 39-1 shows an example of triple-play services being delivered from the Cisco 7600 router to multiple end users attached to a DSLAM. In the figure note that:

- A single trunk link (between the router and the DSLAM) carries traffic for all three VLANs.
- Virtual circuits deliver the VLAN traffic from the DSLAM to individual end users.



Figure 39-1 VC to VLAN Mapping

Α	Trunk link carries: • One voice VLAN	B	DSLAM maps voice, video, and data traffic between VLANs and VCs.
	One video VLAN	C	Individual VCs carry voice, video, and data traffic between DSLAM and each host.
	One data VLAN		

Restricting Traffic Flow (Using Private Hosts Port Mode and PACLs)

The Private Hosts feature uses PACLs to restrict the type of traffic that is allowed to flow through each of the ports configured for Private Hosts. A port's mode (specified when you enable Private Hosts on the port) determines what type of PACL is applied to the port. Each type of PACL restricts the traffic flow for a different type of traffic (for example, from content servers to isolated hosts, from isolated hosts to servers, and traffic between isolated hosts).

The following list describes the port modes used by the Private Hosts feature (see Figure 39-2):

- Isolated—Ports connected to the DSLAMs that the end users (isolated hosts) are connected to. The hosts on the VLANs on these ports need to be isolated from each other. Hosts connected through these ports are allowed to pass unicast traffic to upstream devices only.
- Promiscuous—Ports that face the core network or the Broadband Remote Access Server (BRAS) devices and multicast servers that are providing the broadband services.
- Mixed—Ports that interconnect Cisco 7600 routers. These ports can act as either an isolated port or a promiscuous port, depending on Spanning Tree Protocol (STP) topology changes. These ports allow unicast traffic to upstream devices (such as BRAS and multicast servers) only.

The following list summarizes how the Private Hosts feature restricts traffic flow:

- Broadcast traffic at the ingress of the service provider network is redirected to BRAS and multicast servers (such as video servers).
- All unicast traffic between access routers (Cisco 7600 routers connected to each other) is blocked except for traffic directed toward BRAS and multicast servers.
- The unknown unicast flood blocking (UUFB) feature is used to block unknown unicast traffic on DSLAM-facing ports.

Figure 39-2 shows the different types of port modes (isolated, promiscuous, and mixed) used in a Private Hosts configuration.

Fig	ure 39-2 Private	Hosts Port Types (Modes)
	Video s	Video servers
	BRAS	Access router (network edge)
Cis	co 7600 Router	Cisco 7600 Router
	DSLAM	DSLAM
	Host	Ho Host Ho Host 5
A	Promiscuous ports	Permit all traffic from BRAS to hosts.
В	Mixed-mode ports	Permit broadcast traffic from BRAS. Redirect broadcast traffic from hosts to promiscuous and mixed-mode ports.
		Permit traffic from BRAS to hosts and from hosts to BRAS.
		Deny all other host to host traffic.
C	Isolated ports	Permit unicast traffic from host to BRAS only; block unicast traffic between ports.
		Redirect all broadcast traffic from host to BRAS.
		Deny traffic from BRAS (to prevent spoofing).
		Permit multicast traffic (IPv4 and IPv6).
Not	multicast servers	represents upstream devices such as BRAS, (such as video servers), or core network devices ss to these devices.

20 2 **D** · ata Uaata Daut Tumaa (Madaa)

Port ACLs

The Private Hosts software creates several types of port ACLs (PACLs) to impose Layer 2 forwarding constraints on router ports. Each type of PACL restricts traffic flow for a particular type of traffic (for example, from content servers to isolated hosts, from isolated hosts to servers, and traffic between isolated hosts).

The software creates PACLs for the different types of Private Hosts ports based on the MAC addresses of the content servers providing broadband services and the VLAN IDs of the isolated hosts to deliver those services to. You specify the mode in which each Private Hosts port is to operate and the software applies the appropriate PACL to the port based on the port's mode (isolated, promiscuous, or mixed).

Following are examples of the different types of PACLs that are used by the Private Hosts feature.

Isolated Hosts PACL

Following is an example of a PACL for isolated ports:

```
deny host BRAS_MAC any
permit any host BRAS_MAC
redirect any host FFFF.FFFF.FFFF to LTLINdex 6
permit any 0100.5E00.0000/0000.007F.FFFF
permit any 3333.0000.0000/000.FFFF.FFFF
deny any any
```

Promiscuous Port PACL

Following is an example of a PACL for promiscuous ports:

permit host BRAS_MAC any deny any any

Mixed-Mode Port PACL

Following is an example of a PACL for mixed-mode ports:

```
permit host BRAS_MAC ffff.ffff.ffff
redirect any host FFFF.FFFF.FFFF to LTLINdex 6
permit host BRAS_MAC any
permit any host BRAS_MAC
deny any any
```

Configuration Guidelines and Limitations

Observe the following guidelines and limitations as you configure the Private Hosts feature on Cisco 7600 routers:

- Software and hardware requirements:
 - Cisco IOS Release 12.2SRB or later
 - RSP720 (with PFC3C or PFC3CXL), Sup720 (with PFC3B or PFC3BXL), or Sup32
 - Supported on line cards with Fast Ethernet or Gigabit Ethernet (GE) interfaces that can be configured as switch ports (for example, SIP-600, ESM-20, and 67xx LAN cards). (Note that the SIP-400 and Enhanced FlexWAN do not support Private Hosts.)
- Private Hosts and Private VLANs cannot both be configured on the same port (interface). Both features can co-exist on the router, but each feature must be configured on different ports.
- Private Hosts is an end-to-end feature. You must enable the feature on all of the routers between the DSLAMs and upstream devices like BRAS and multicast servers.
- Currently, only trusted ports can be configured as isolated ports.
- Supported on Layer 2 interfaces that are configured as switchports (802.1q or ISL trunk ports).
- Supported on port-channel interfaces (Etherchannel, FastEtherchannel, and GigabitEtherchannel). You must enable Private Hosts on the port-channel interface; you cannot enable the feature on member ports.

• LAN based features such as DAI and DHCP-snooping will not co-exist functionally on the Private Host's port because the Private Host feature enforces a mac-based lookup at the switchport and not vlan-based. In other words, the Private Host's vlan-list and the DAI or DHCP snooping vlan list should be mutually exclusive and should not overlap on the Private Host's switchport.

The following protocol-independent MAC ACL restrictions also apply:

- You can configure the following interface types for Protocol-independent MAC ACL filtering:
 - VLAN interfaces with no IP address
 - Physical LAN ports that support EoMPLS
 - Logical LAN subinterfaces that support EoMPLS
- Protocol-independent MAC ACL filtering applies MAC ACLs to all ingress traffic types (for example, IPv4 traffic, IPv6 traffic, and MPLS traffic, in addition to MAC-layer traffic).
- Ingress traffic that is permitted or denied by a protocol-independent MAC ACL is processed by egress interfaces as MAC-layer traffic. You cannot apply egress IP ACLs to traffic permitted or denied by a MAC ACL on an interface configured for protocol-independent MAC ACL filtering.
- Do not configure protocol-independent MAC ACL filtering on VLAN interfaces where you have configured an IP address.
- Do not configure protocol-independent MAC ACL filtering with microflow policing when the permitted traffic would be bridged or Layer 3 switched in hardware by the PFC3.
- Protocol-independent MAC ACL filtering supports microflow policing when the permitted traffic is routed in software by the MSFC.

The following limitations are applicable when you apply a private host to a port with only a subset of configured VLANS:

Scenarios	Limitations
For all the VLANs in the Private-Host enabled port associated with Private-Host VLAN-list	• Since IP and non-IP traffic are subjected to PACL, based on the configured MAC addresses in the mac-list, both IP and non-IP traffic are permitted or denied.
	• From 12.2(SRD4) onwards, you can associate Private Host VLAN-list with one VLAN having cross connect(xconnect). Traffic received from the isolated Port is subjected to PACL.If another VLAN in the VLAN-list is configured with cross-connect, it is rejected. Similarly if a VLAN configured with cross-connect is added to Private Host VLAN-list, it is rejected if the VLAN-list already has a VLAN with cross-connect.
	• In the above case traffic which are permitted by PACL will be switched over the cross-connect.
For all the VLANs in the Private-Host enabled port not associated with Private-Host VLAN-list	• All Non-IP traffic are subjected to the PACL. The traffic is permitted or denied based on mac addresses configured in the Private Host mac-list.
	• IP traffic on these VLANs are not subjected to PACL.
	• If cross connect is configured on these VLANs, the IP traffic is switched to the cross connect without being subjected to PACL.
	• If the VLAN is Layer-3 routed (SVI), and the IP traffic is Layer-3 routed, the default ACL on the port denies all the packet. However, the L3 packets are forwarded to the CPU (MSFC) where it is rate-limited.
	• If the VLAN is associated with cross-connect, non-IP traffic is switched on the cross- connect only if the PACL permits the traffic.
	• If the VLAN is configured with mac packet-classify , then both IP and non-IP traffic on the VLAN are subjected to PACL.

Table 39-1	PACL Scenarios and Limitations

- The following protocol-independent MAC ACL restrictions also apply from release 12.2(33) SRD4 onwards:
 - The Private Host feature prevents any traffic on the VLAN, which has Private Host configured, from passing directly between any two subscribers that share the VLAN.
 - You can configure the system where one VLAN on the system operates with Private Host and cross-connect connectivity.

- If one VLAN is configured for cross-connect and Private Host, then the configured VLAN's cross-connect is in promiscuous mode. However, you cannot apply a ACL on the configured cross-connect when traffic is relayed from the core side.
- There is no change in scale or performance when you apply the MAC ACL restrictions.
- Private Host limits VPLS support for only one VLAN. If the Private Host VLAN-list already
 has a VPLS VLAN (VLAN with cross-connect), the addition of another VPLS VLAN is
 blocked. Similarly, if any VLAN in the VLAN-list has cross-connect configured, the
 configuration of cross-connect on another VLAN in the VLAN-list is blocked.



In Release 12.2SRB, PACLs are supported only as part of Private Hosts; you cannot configure your own PACLs. Instead, the router creates and applies PACLs based on your Private Hosts configuration.

ACL Guidelines

The following configuration guidelines and limitations apply to access control lists (ACLs):

- 12.2 (33) SRD4 release of the Private Hosts feature uses Protocol Independent MAC ACLs. Do not apply IP-based ACLs to any port configured for Private Hosts or you will break the Private Hosts feature (because the router will not be able to apply a Private Hosts MAC ACL to the port).
- VLAN ACLs (VACLs) and port ACLs cannot both be applied to the same interface.
- Routing ACLs (RACLs) and PACLs cannot both be applied to the same interface. However, you can apply ACLs to separate interfaces.
- You can apply an ACL based IPv4 port feature on a trunk port, but it will work only if the trunk port is configured in prefer port mode. Use the **access-group mode prefer port** command to configure the trunk port in prefer port mode.

VLANs on the Trunk Port

The following guidelines and limitations apply to VLANs:

- You can enable IGMP snooping on VLANs that use trunk ports configured for Private Hosts.
- You cannot enable IP multicast on a VLAN that uses a trunk port that is configured for Private Hosts.
- Because PACLs operate in override mode on trunk ports, you cannot apply VLAN-based features to switchports.
- The Multicast VLAN Registration (MVR) feature can co-exist with Private Hosts as long as the multicast source exists on a promiscuous port.

Interaction with Other Features

The following list describes how the Private Hosts feature interacts with other features that are configured on the router:

- Private Hosts feature does not affect Layer 2 based services such as MAC limiting, unicast flood protection (UFP), or unknown unicast flood blocking (UUFB).
- Private Hosts feature does not affect IGMP snooping. However, if IGMP snooping is globally disabled, IGMP control packets will be subject to ACL checks. To permit IGMP control packets, the Private Hosts software adds a multicast permit statement to the PACLs for isolated hosts. Note that this behavior occurs automatically and no user intervention is required.
- Port security can be enabled on isolated ports to provide added security to those ports.

- When enabled on promiscuous or mixed-mode ports, the port security feature may restrict a change in source port for upstream devices (such as BRAS or multicast servers).
- When enabled on an access port, 802.1x is not affected by the Private Hosts.

Spoofing Protection

The Private Hosts feature prevents MAC address spoofing but does not validate the customer MAC or IP address. To prevent MAC address spoofing the Private Hosts feature:

- Uses a static MAC address for the BRAS and multicast servers.
- Disables learning in the Layer 2 (L2) forwarding table.
- Alerts the router software when a BRAS or multicast server moves from one source port to another. The software then validates the move, and updates the L2 forwarding table.

Multicast Operation

Multicast traffic that originates from upstream devices (such as BRAS or multicast servers) is always permitted. In addition, the Private Hosts PACLs are not applied to multicast control packets (such as IGMP query and join requests). This behavior allows isolated hosts to participate in multicast groups, respond to IGMP queries, and receive traffic from any groups of interest.

Multicast traffic that originates from a host is dropped by the Private Hosts PACLs. However, if other hosts need to receive multicast traffic originating from a host, Private Hosts does the following adds a *multicast permit* entry to the PACLs.

Configuring Private Hosts

The following sections provide information about configuring the Private Hosts feature on a Cisco 7600 series router and instructions for configuring the feature:

- Configuration Summary, page 39-9
- Detailed Configuration Steps, page 39-10
- Configuration Examples, page 39-12

Configuration Summary

This section provides a summary of the steps to perform to configure the Private Hosts feature on Cisco 7600 routers. Detailed configuration instructions follow in the next section.

- Determine which router ports (interfaces) to use for the Private Hosts feature. You can configure the
 feature on switchports (802.1q or ISL trunk ports) or port-channel interfaces (Etherchannel,
 FastEtherchannel, and GigabitEtherchannel). Note that Private Hosts must be enabled on the
 port-channel interface; you cannot enable the feature on member ports.
- **2.** Configure each port (interface) for normal, non-Private Hosts service. Note that you can configure the VLANs at this point or later.
- **3.** Determine which VLAN or set of VLANs will be used to deliver broadband services to end-users. The Private Hosts feature will provide Layer 2 isolation among the hosts in these VLANs.

4. Identify the MAC addresses of all Broadband Remote Access Servers (BRAS) and multicast servers that are being used to provide broadband services to end-users (isolated hosts).



- **Note** If a server is not connected directly to the router, determine the MAC address of the core network device that provides access to the server.
- **5.** (Optional) If you plan to offer different types of broadband services to different sets of isolated hosts, create multiple MAC and VLAN lists.
 - Each MAC address list identifies a server or set of servers providing a particular type of service.
 - Each VLAN list identifies the isolated hosts where that service to be delivered.
- **6.** Configure promiscuous ports and specify a MAC and VLAN list to identify the server and receiving hosts for a particular type of service.



You can specify multiple MAC and VLAN combinations to allow for different types of services to be delivered to different sets of hosts. For example, the BRAS at xxxx.xxxx could be used to deliver a basic set of services over VLANs 20, 25, and 30, and the BRAS at yyyy.yyyy could be used to deliver a premium set of services over VLANs 5, 10, and 15.

- 7. Globally enable Private Hosts.
- 8. Enable Private Hosts on individual ports (interfaces) and specify the mode in which the port is to operate. To determine port mode, you need to know whether the port faces upstream (toward content servers or core network), faces downstream (toward DSLAM and isolated hosts), or is connected to another Cisco 7600 router (typically, in a ring topology). See Restricting Traffic Flow (Using Private Hosts Port Mode and PACLs), page 39-3.

After you enable the feature on individual ports, the router is ready to run the Private Hosts feature. The Private Hosts software uses the MAC and VLAN lists you defined to create the isolated, promiscuous, and mixed-mode PACLs for your configuration. The software then applies the appropriate PACL to each Private Hosts port based on the port's mode.

Detailed Configuration Steps

Perform the following steps to configure the Private Hosts feature. Note that these steps assume that you have already configured the Layer 2 interfaces that you plan for Private Hosts. See the "Command Reference" section on page 39-13 for detailed descriptions of the commands listed in the following table.



You can configure Private Hosts only on switchports (802.1q or ISL trunk ports) or Etherchannel ports. In addition, you must enable Private Hosts on all of the routers between the DSLAMs and upstream devices.

	Command or Action	Purpose
	Router(config)# configure terminal	Enters global configuration mode.
	Router(config)# private-hosts mac-list mac-list-name mac-address [remark device-name comment]	Creates a list of MAC addresses that identify the BRAS and multicast servers providing broadband services, where:
		• <i>mac-list-name</i> specifies a name to assign to this list o content servers.
Example: Router(config)# private-hosts mac-list BRAS_list 0000.1111.1111 remark BRAS_SanJo	•	• <i>mac-address</i> identifies the BRAS or multicast server (or set of servers) providing a particular broadband service or set of services.
		• remark allows you to specify an optional device name or comment to assign to this MAC list.
		Specify the MAC address of every content server being used to deliver services. If you plan to offer different types of services to different sets of hosts, create a separate MAC lis for each server or set of servers providing a particular service.
		Note If a server is not directly connected to the router, specify the MAC address of the core network device that provides access to the server.
	Router(config)# private-hosts vlan-list <i>vlan-ids</i>	Creates a list of the VLANs (<i>vlan-ids</i>) whose hosts need to be isolated so that the hosts can receive broadband services
	<pre>Example: Router(config)# private-hosts vlan-list 10,12,15,200-300</pre>	Create separate VLAN lists if you plan to offer particular services to different sets of hosts. Otherwise, all of the broadband services will be delivered to all isolated hosts.
	Router(config)# private-hosts promiscuous mac-list-name [vlan-list vlan-ids]	Identifies the content servers for broadband services and th end users (isolated hosts) to deliver the services to, where
	Example: Router(config)# private-hosts promiscuous BRAS_list vlan-list 1,2,3	• <i>mac-list-name</i> specifies the name of the MAC address lists that identifies the BRAS or multicast server (or se of servers) providing a particular type of broadband service or set of services.
		• <i>vlan-ids</i> identifies the VLAN or set of VLANs whose hosts are to receive services from the above servers. If no VLAN list is specified, the software uses the global VLAN list (configured in Step 3).
		Note You can issue this command multiple times to configure multiple MAC and VLAN combinations each defining the server and receiving hosts for a particular type of service.
	Router(config)# private-hosts	Globally enables Private Hosts on the router.
	Router(config)# interface interface	Selects the switchport (802.1Q or ISL trunk port) or Etherchannel port to enable for Private Hosts.

	Command or Action	Purpose
Step 7	Router(config-if)# private-hosts mode {promiscuous isolated mixed}	Enables Private Hosts on the port. Use one of the following keywords to define the mode that the port is to operate in:
	Example: Router(config-if)# private-hosts mode isolated	• promiscuous —upstream-facing ports that connect to broadband servers (BRAS, multicast, or video) or to core network devices providing access to the servers.
		• isolated —ports that connect to DSLAMs.
		• mixed —ports that connect to other Cisco 7600 routers, typically in a ring topology.
		Note You must perform this step on each port being used for Private Hosts.
Step 8	Router(config-if)# end	Exits interface and global configuration modes and returns to privileged EXEC mode. Private Hosts configuration is complete.

Configuration Examples

The following example shows the interface configuration of a Private Hosts isolated port:

```
Router# show run int gi 5/2
Building configuration...
Current configuration : 200 bytes
!
interface GigabitEthernet5/2
switchport
switchport trunk encapsulation dot1q
switchport mode trunk
private-hosts mode isolated
end
```

The following example shows the interface configuration of a Private Hosts promiscuous port:

```
Router# show run int gi 4/2
Building configuration...
Current configuration : 189 bytes
!
interface GigabitEthernet4/2
switchport
switchport access vlan 200
switchport mode access
private-hosts mode promiscuous
end
private-hosts vlan-list 200
private-hosts promiscuous bras-list
private-hosts mac-list bras-list 0000.1111.1111 remark BRAS-SERVER
```

Command Reference

This section documents the commands related to the Private Hosts feature introduced in release 12.2(33) SRD4:

- private-hosts
- private-hosts mac-list
- private-hosts mode
- private-hosts promiscuous
- private-hosts vlan-list
- show fm private-hosts
- show private-hosts access-lists
- show private-hosts configuration
- show private-hosts interface configuration
- show private-hosts mac-list
- debug fm private-hosts
- debug private-hosts

private-hosts

To globally enable the Private Hosts feature, use the **private-hosts** command in global configuration mode. Use the **no** form of the command to disable the feature.

private-hosts

no private-hosts

Syntax Description	This command has no argume	nts or keywords.
--------------------	----------------------------	------------------

- **Defaults** This command is disabled by default.
- **Command Modes** Global configuration

Command History	Release	Modification
	12.2(33)SRB	This command was introduced.

Usage Guidelines Use this command to enable Private Hosts on the router. Then, use the **private-hosts mode** command to enable Private Hosts on individual interfaces (ports).

 Examples
 The following command example globally enables the Private Hosts feature on the router:

 Router(config)# private-hosts

Related Commands	Command	Description
	private-hosts mac list	Creates a MAC address list that identifies the content servers that are being used to provide broadband services to isolated hosts.
	private-hosts mode	Specifies the operating mode for a Private Hosts port.
	private-hosts promiscuous	Identifies the content servers and receiving hosts for broadband services.
	private-hosts vlan-list	Identifies the VLANs whose hosts need to be isolated.
	show private-hosts configuration	Displays Private Hosts configuration information for the router.
	show private-hosts interface configuration	Displays Private Hosts configuration information for individual interfaces.

private-hosts mac-list

Identifies the content servers that provide broadband services to isolated hosts and create a MAC address list, use the **private-hosts mac-list** command in global configuration mode. To delete an address from the MAC address list and remove that device from the list of content servers providing services for the Private Hosts feature, use the **no** form of the command.

private-hosts mac-list mac-list-name mac-address [remark device-name | comment]

no private-hosts mac-list mac-list-name mac-address

Syntax Description	mac-list-name	A name assigned to the address list (up to 80 characters).
	mac-address	The MAC address of a Broadband Remote Access Server (BRAS), multicast server, or video server that provides broadband services for the Private Hosts feature.
		Note If the server is not directly connected to the router, specify the MAC address of the core network device that provides access to the server.
	remark device-name comment	(Optional) Specifies an optional device name or comment to assign to this MAC address list.
Defaults	This command has no de	fault settings.
Command Modes	Global configuration	
Command History	Release	Modification
Command History	Release 12.2(33)SRB	Modification This command was introduced.
	12.2(33)SRB This command creates a	
	12.2(33)SRB This command creates a broadband services to isc Use this command to spe for the Private Hosts feat	This command was introduced. list of MAC addresses that identify the content servers being used to provide
	12.2(33)SRB This command creates a broadband services to isc Use this command to spe for the Private Hosts feat multicast server, or video You can assign all the co address lists, each identifi of services. When you compared to the private of the services.	This command was introduced. list of MAC addresses that identify the content servers being used to provide blated hosts in the Private Hosts configuration. cify the MAC address of every content server that provides broadband services ture. A <i>content server</i> is any Broadband Remote Access Server (BRAS), o server that provides services to the isolated hosts in your network. ntent servers to a single MAC address list, or you can create multiple MAC
Command History Usage Guidelines	12.2(33)SRB This command creates a broadband services to isc Use this command to spe for the Private Hosts feat multicast server, or video You can assign all the co address lists, each identifi of services. When you compared to the private of the services.	This command was introduced. list of MAC addresses that identify the content servers being used to provide blated hosts in the Private Hosts configuration. cify the MAC address of every content server that provides broadband services rure. A <i>content server</i> is any Broadband Remote Access Server (BRAS), o server that provides services to the isolated hosts in your network. Intent servers to a single MAC address list, or you can create multiple MAC fying the content server providing a particular type of broadband service or server onfigure the promiscuous ports for Private Hosts, you specify a MAC address

Examples This example creates a MAC address list named BRAS_list that identifies the MAC address of the upstream BRAS. The optional remark indicates that the BRAS is in San Jose.

Router(config) # private-hosts mac-list BRAS_list 0000.1111.1111 remark BRAS_San-Jose

Related Commands Command Description		Description
	show private-hosts	Displays a list of the MAC addresses that identify the content servers that
	mac-list	are providing broadband defined for Private Hosts.

private-hosts mode

To enable Private Hosts on an interface (port) and specify the mode in which the port is to operate, use the **private-hosts mode** command in interface configuration mode. Use the **no** form of the command to disable Private Hosts on the port.

private-hosts mode {promiscuous | isolated | mixed}

no private-hosts

Syntax Description	promiscuous	Configures the port for promiscuous mode. Use this mode for ports that face upstream traffic. These are the ports that connect the router to servers providing broadband services (BRAS, multicast, or video), or to core network devices providing access to the servers.
	isolated	Configures the port for isolated mode. Use this mode for ports that face the DSLAM to which isolated hosts are connected.
	mixed	Configures the port for mixed mode. Use this mode for ports that connect to other Cisco 7600 routers, typically in a ring topology. The behavior of this port can change depending on the Spanning Tree Protocol (STP) topology.
Defaults	This command is di The default for mo	•
Command Modes	Interface configurat	tion (switchport or port-channel)
Command History	Release	Modification
	12.2(33)SRB	This command was introduced.
	12.2(55)SKB	
Usage Guidelines		command, you must globally enable the Private Hosts feature on the router by issuing
Usage Guidelines	Before you use this the private-hosts c Use this command operation for the por restrict the type of t flow for a different hosts to servers, and	command, you must globally enable the Private Hosts feature on the router by issuing
Usage Guidelines Examples	Before you use this the private-hosts c Use this command operation for the por restrict the type of t flow for a different hosts to servers, and configuration com	command, you must globally enable the Private Hosts feature on the router by issuing ommand. to enable the Private Hosts feature on individual ports and to define the mode of ort. A port's mode determines which type of PACL is assigned to the port in order to raffic that is allowed to pass through the port. Each type of PACL restricts the traffic type of traffic (for example, from content servers to isolated hosts, from isolated d traffic between isolated hosts). Use the show private-hosts interface

Related Commands	Command	Description
	show private-hosts interface configuration	Displays Private Hosts configuration information for individual interfaces.

private-hosts promiscuous

To identify the content servers and receiving hosts that provide broadband services, use the **private-hosts promiscuous** command in global configuration mode. Use the **no** form of the command to remove a promiscuous ports setting.

private-hosts promiscuous mac-list-name [vlan vlan-ids]

no private-hosts promiscuous mac-list-name

Syntax Description	mac-list-name	The name of MAC address list that identifies the content servers (BRAS, multicast, or video) providing broadband services for Private Hosts.	
	vlan vlan-ids(Optional) The VLAN or set of VLANs whose hosts will be allo receive services from the content servers identified by the MAC list. Use commas to separate individual VLANs or specify a rang VLANs (for example, 1,3,5,20-25).		
		Note If no VLAN list is specified, the global VLAN list is used.	
Defaults	This command has	no default settings.	
Command Modes	Global configuratio	n	
Command History	Release	Modification	
	12.2(33)SRB	This command was introduced.	
Usage Guidelines		ist and the VLAN list define the content servers and receiving hosts that provide If no VLAN list is specified, the system uses the global VLAN list created with the -list command.	
	You can issue this command multiple times to specify multiple combinations of MAC and VLAN lists, each defining the server and receiving hosts for a particular type of service. For example, the BRAS at xxxx.xxxx could be used to deliver a basic set of services over VLANs 20, 25, and 30, and the BRAS at yyyy.yyyy.yyyy could be used to deliver a premium set of services over VLANs 5, 10, and 15.		
Examples	-	nand example configures the broadband services provided by content servers defined ddress list, to be delivered to isolated hosts in VLANs 10, 12, 15, and 200 through	
	Router(config)# p	rivate-hosts promiscuous BRAS_list vlan 10,12,15,200-300	

Related Commands	Command	Description
	show private-hosts configuration	Displays Private Hosts configuration information for the router.
	show private-hosts interface configuration	Displays Private Hosts configuration information for individual interfaces.

private-hosts vlan-list

Identifies the VLANs whose hosts need to be isolated from each other (so that the VLANs can be used to deliver broadband services), use the **private-hosts vlan-list** command in global configuration mode. Use the **no** form of the command to remove a VLAN from the list of VLANs requiring host isolation.

private-hosts vlan-list vlan-ids

no private-hosts vlan-list vlan-ids

Syntax Description	vlan-ids	A list of the VLANs whose hosts need to be isolated from each other. Use commas to separate individual VLANs or specify a range of VLANs (for example, 1,3,5,20-25).
Defaults	This command has	no default settings.
Command Modes	Global configuratio	n
Command History	Release	Modification
	12.2(33)SRB	This command was introduced.
Usage Guidelines	This command creates a list of VLANs whose hosts need to be isolated through the Private Hosts feature. The VLAN list should include all of the VLANs that are being used to deliver broadband services to multiple end-users (isolated hosts). If you plan to deliver different types of broadband services to different sets of hosts, you can create multiple VLAN lists and multiple MAC address lists. When you configure promiscuous ports, you can specify different combinations of MAC and VLAN lists to identify content servers and receiving hosts for each type of service.	
	If you do not specify a VLAN list when you configure promiscuous ports, the system uses the global VLAN list created by this command.	
Note		eature isolates the hosts in all VLANs included in the VLAN lists; therefore, VLAN only those VLANs that are being used to deliver broadband services.
Examples	This command conf through 300:	figures the Private Hosts feature to isolate the hosts in VLANs 10, 12, 15, and 200
	Router(config)# p	rivate-hosts vlan-list 10,12,15,200-300

Related Commands	Command	Description
	show private-hosts configuration	Displays Private Hosts configuration information for the router.

show fm private-hosts

To display information about the Private Hosts feature manager, use the **show fm private-hosts** command in privileged EXEC mode.

show fm private-hosts {all | interface intf}

Syntax Description	all	Displays the feature manager information for all of the interfaces that are configured for Private Hosts.
	interface intf	Specifies the interface where the feature manager information is displayed.
Defaults	This command has	no default settings.
Command Modes	Privileged EXEC	
Command History	Release	Modification
	12.2(33)SRB	This command was introduced.
Examples	Router# show fm p: FM_FEATURE_PVT_HO: PVT_HOST_ISOLATED	nple shows sample command output: rivate-hosts interface GigabitEthernet 1/2 ST_INGRESS i/f: Gi1/2 map name:
	MAC Seq. No: 10	Seq. Result : PVT_HOSTS_ACTION_DENY
	Indx - VMR index EtTy - Ethernet T	T - V(Value)M(Mask)R(Result) ype EtCo - Ethernet Code
	Indx T Dest N	++++ ode
		.0000 0000.1111.4001 0 0 .0000 ffff.ffff.ffff 0 0 ESULT
		.0000 0000.0000 0 0 .0000 0000.0000 0 0 RESULT
	MAC Seq. No: 20	Seq. Result : PVT_HOSTS_ACTION_PERMIT
	+	ode Source Node EtTy EtCo

```
V 0000.1111.4001 0000.0000.0000 0 0
1
   M ffff.fff.ffff 0000.0000.0000
                          0 0
   TM_PERMIT_RESULT
   V 0000.0000.0000 0000.0000
                          0 0
2
   M 0000.0000.0000 0000.0000.0000
                          0 0
   TM_L3_DENY_RESULT
_____
MAC Seq. No: 30 Seq. Result : PVT_HOSTS_ACTION_REDIRECT
  -----
+----+
|Indx|T| Dest Node | Source Node |EtTy|EtCo|
1
   V ffff.ffff.ffff 0000.0000.0000
                          0 0
   M ffff.ffff.ffff 0000.0000.0000
                          0 0
   TM_PERMIT_RESULT
   V 0000.0000.0000 0000.0000
                          0 0
2
   M 0000.0000.0000 0000.0000.0000
                          0 0
   TM_L3_DENY_RESULT
_____
MAC Seq. No: 40
               Seq. Result : PVT_HOSTS_ACTION_PERMIT
   -----
+----+
|Indx|T| Dest Node | Source Node |EtTy|EtCo|
+---+
1
   V 0100.5e00.0000 0000.0000.0000
                          0 0
   M ffff.ff80.0000 0000.0000.0000
                          0 0
   TM_PERMIT_RESULT
2
   V 3333.0000.0000 0000.0000.0000
                          0 0
   M ffff.0000.0000 0000.0000.0000
                          0 0
   TM_PERMIT_RESULT
   V 0000.0000.0000 0000.0000
                          0 0
3
   M 0000.0000.0000 0000.0000.0000
                          0 0
   TM_L3_DENY_RESULT
_____
MAC Seq. No: 50
               Seq. Result : PVT_HOSTS_ACTION_DENY
  _____
+----+
|Indx|T| Dest Node | Source Node |EtTy|EtCo|
V 0000.0000.0000 0000.0000
                          0 0
1
   M 0000.0000.0000 0000.0000.0000
                          0 0
   TM_PERMIT_RESULT
   V 0000.0000.0000 0000.0000
2
                          0 0
   M 0000.0000.0000 0000.0000.0000
                          0 0
   TM_L3_DENY_RESULT
Interfaces using this pvt host feature in ingress dir .:
_____
 Interfaces (I/E = Ingress/Egress)
```

Router#

	Commands
Related	I ummanne

Command	Description
show private-hosts configuration	Displays Private Hosts configuration information for the router.
show private-hosts interface configuration	Displays Private Hosts configuration information for individual interfaces.

show private-hosts access-lists

To display the access lists for a Private Hosts configuration, use the **show private-hosts access-lists** command in privileged EXEC mode.

show private-hosts access-lists

- **Syntax Description** This command has no arguments or keywords.
- **Defaults** This command has no default settings.
- Command Modes Privileged EXEC

 Release
 Modification

 12.2(33)SRB
 This command was introduced.

Examples

The following example shows how to display the Private Hosts access lists for the customized configuration:

Router# show private-hosts access-lists

```
Promiscuous ACLs
Action Permit Sequence # 010
   Source:0000.1111.4001 0000.0000 Destination:0000.0000 ffff.ffff
Action Denv
             Seguence # 020
   Source:0000.0000.0000 ffff.ffff.ffff Destination:0000.0000.0000 ffff.ffff.
Isolated ACLs
Action Deny
               Sequence # 010
   Source:0000.1111.4001 0000.0000 Destination:0000.0000 ffff.ffff
Action Permit Sequence # 020
   Source:0000.0000.0000 ffff.ffff.ffff Destination:0000.1111.4001 0000.0000.0000 Action
Redirect Sequence # 030 Redirect index 6
   Source:0000.0000.0000 ffff.ffff Destination:ffff.ffff 0000.0000.0000
Action Permit Sequence # 040
   Source:0000.0000.0000 ffff.ffff Destination:0100.5e00.0000 0000.007f.ffff
   Source:0000.0000.0000 ffff.ffff Destination:3333.0000.0000 0000.ffff.ffff
               Sequence # 050
Action Deny
   Source:0000.0000.0000 ffff.ffff Destination:0000.0000 ffff.ffff.ffff
Mixed ACLs
Action Permit Sequence # 010
   Source:0000.1111.4001 0000.0000 Destination:ffff.ffff 0000.0000.0000 Action
Redirect Sequence # 020 Redirect index 6
   Source:0000.0000.0000 ffff.ffff Destination:ffff.ffff 0000.0000.0000
             Sequence # 030
Action Permit
   Source:0000.1111.4001 0000.0000.0000 Destination:0000.0000 ffff.ffff.ffff
Action Permit Sequence # 040
   Source:0000.0000.0000 ffff.ffff Destination:0000.1111.4001 0000.0000.0000
Action Denv
              Sequence # 050
```

Source:0000.0000 ffff.ffff Destination:0000.0000 ffff.ffff.ffff

Router#

Related Commands	Command	Description
	show fm private-hosts	Displays information about the Private Hosts feature manager.
	show private-hosts configuration	Displays Private Hosts configuration information for the router.
	show private-hosts interface configuration	Displays Private Hosts configuration information for individual interfaces.

show private-hosts configuration

To display information about the Private Hosts configuration on the router, use the **show private-hosts configuration** command in privileged EXEC mode.

show private-hosts configuration

Syntax Description This command has no arguments or keywords.

Defaults This command has no default settings.

Command Modes Privileged EXEC

 Release
 Modification

 12.2(33)SRB
 This command was introduced.

Examples The following example shows sample command output:

Router# show private-hosts configuration

Related Commands	Command	Description
	show private-hosts interface configuration	Displays Private Hosts configuration information for individual interfaces.

show private-hosts interface configuration

To display information about the Private Hosts configuration on individual interfaces (ports), use the **show private-hosts interface configuration** command in privileged EXEC mode.

show private-hosts interface configuration

Syntax Description	This command has no arguments or keywords.		
Defaults	This command has	no default settings.	
Command Modes	Privileged EXEC		
Command History	Release	Modification	
	12.2(33)SRB	This command was introduced.	
Examples	The following exan	pple shows sample command output:	
	Router# show private-hosts interface configuration		
	Private hosts enabled Debug Events: 0 Acl: 0 API: 0 Promiscuous interface list		
	GigabitEthernet4/2 Isolated interface list		
	GigabitEthernet5/2 Mixed mode interface list		

Related Commands	Command	Description	
	show private-hosts configuration	Displays Private Hosts configuration information for the router.	

show private-hosts mac-list

To display the contents of the MAC address lists defined for Private Hosts, use the **show private-hosts mac-list** command in privileged EXEC mode.

show private-hosts mac-list [list-name]

Syntax Description		(Optional) The name of the MAC address list whose contents you want to display.		
Defaults	This command has no default settings.			
Command Modes	Privileged EXEC			
Command History	Release	Modification		
	12.2(33)SRB	This command was introduced.		
Examples	The following example shows sample command output:			
	Router# show private-hosts mac-list			
	MAC-List: bras-list			
	MAC address Des	scription		
	0000.1111.1111 BRAS-SERVER			
Related Commands	Command	Description		
	private-hosts mac-list	Creates a MAC address list that identifies a content server that is being used to provide broadband services to isolated hosts.		

debug fm private-hosts

To enable debug messages for the Private Hosts feature manager, use the **debug fm private-hosts** command in privileged EXEC mode.

debug fm private-hosts {all | vmr | unusual | events}

Syntax Description	all	Enables debug messages for all Private Hosts errors and events.
	vmr	Enables debug messages for the Multicast VLAN Registration (MVR) feature.
	unusual	Enables debug messages for unexpected Private Hosts behavior.
	events	Enables debug messages for Private Hosts events.
Defaults	This command ha	as no default settings.
Command Modes	Privileged EXEC	
Command History	Release	Modification
Command History	Release 12.2(33)SRB	Modification This command was introduced.
	12.2(33)SRB	
	12.2(33)SRB The following ex Router# debug f fm private-host fm private-host fm private-host	This command was introduced.
Command History Examples Related Commands	12.2(33)SRB The following ex Router# debug f fm private-host fm private-host	This command was introduced. ample shows sample command output: im private-hosts all is vmr debugging is on is unusual debugging is on

debug private-hosts

To enable debug messages for the Private Hosts feature, use the **debug private-hosts** command in privileged EXEC mode.

debug private-hosts {all | events | acl | api}

Syntax Description	all	Enables debug messages for all Private Hosts errors and events.	
	events	Enables debug messages for issues related to Private Hosts events.	
	acl	Enables debug messages for issues and events related to ACLs.	
	api	Enables debug messages for issues related to the application programming interface.	
Defaults	This command has no default settings.		
Command Modes	Privileged EXE	C	
Command History	Release	Modification	
	12.2(33)SRB	This command was introduced.	
Examples	The following example shows sample command output:		
	Router# debug private-hosts all private-hosts events debugging is on private-hosts api debugging is on private-hosts acl debugging is on		
Related Commands	Router# Command	Description	
	debug fm priva	ate-hosts Enables debug messages for the Private Hosts feature manager.	