



Symbols

- ? command **3**
- ? command **4, 3**

Numerics

- 802.1x authentication **8**

A

- AAL **6**
 - AAL3/4 **6**
 - AAL5 **6**
 - abbreviating commands **6**
 - access groups **3**
 - access lists
 - applying to interfaces **4**
 - configuration commands **2**
 - configuring for firewalls **3**
 - description **11**
 - ACK bits **11**
 - Address Resolution Protocol
 - See ARP*
 - ADSL
 - configuring **6**
 - ordering **5**
 - overview **1**
 - troubleshooting **2**
 - aggregator
 - configuring **12**
 - ARP **2**
 - Asymmetric Digital Line Subscriber Line
- See ADSL*
- asynchronous interface
 - configuring **13**
- ATM
 - configuring the ATM interface **8**
 - errors, displaying **6**
 - events, displaying **7**
 - interface
 - configuration scenario **5**
 - overview **5**
 - packets, displaying **8**
 - PVC encapsulation types **6**
 - queues **10**
 - troubleshooting commands **2 to 9**
 - WAN interface **5**
 - ATM adaptation layer
 - See AAL*
 - ATM interface
 - See ATM*
 - audience, user **11**
 - authentication protocols
 - See PPP authentication protocols*
 - AutoSecure
 - configuring **2**
- B**
- backup interfaces
 - for dial backup activation **1**
- b command **3**
- b flash command **3**
- boot commands **3**
- bridging

configuring **10, 4**
 broadcast intervals, RIP **3**

C

CAR **9**
 caution, described **13**
 CBAC firewall
 configuring **3**
 CBWFQ **9**
 Challenge Handshake Authentication Protocol
 See CHAP
 CHAP **4, 4**
 Cisco IOS firewall IDS **4**
 Cisco IOS queues **10**
 class-based weighted fair queuing
 See CBWFQ
 command conventions **13**
 command-line access configuration example **12**
 command-line access to router, configuring **10**
 command modes **2 to 4**
 commands
 abbreviating **6**
 access list **2**
 ATM troubleshooting **2 to 9**
 completing **4**
 debug atm events **7**
 debug atm packet **9**
 finding available **4**
 help with **4**
 privileged EXEC, accessing **5**
 redisplaying **4**
 ROM monitor debugging **9**
 undoing **6**
 command variables
 listing **4**
 TFTP download **3**
 committed access rate
 See CAR

configuration changes
 making **5**
 saving **12, 7**
 configuration examples
 command-line access **12**
 DHCP server **3**
 dynamic routes **15**
 EIGRP **16**
 PPPoA with NAT **11**
 PPPoE with NAT **9**
 simple firewall **5**
 static routes **13**
 VPN with IPSec and GRE **10**
 VPN with IPSec tunnel **10**
 wireless LAN **6**
 configuration prerequisites **4**
 configuration register
 changing **10**
 changing from ROM monitor **6**
 value, resetting **12**
 configuring
 ATM interface **8**
 basic router parameters **1**
 bridging **10**
 command-line access **10**
 DHCP server **1**
 dial backup **1**
 dialer interface **5**
 dynamic routes **13, 15**
 Easy VPN **1**
 EIGRP **15**
 EIGRP, IP **15 to 16**
 Fast Ethernet interface **6, 9**
 firewall **1**
 global parameters **6**
 GRE tunnel **8**
 group policy **4**
 IKE policy **3**
 inspection rules for firewalls **3**

IP EIGRP **15 to 16**
 IPSec tunnel **1**
 loopback interface **9 to 10**
 NAT **9**
 PPPoE with NAT **1, 2**
 RIP **14**
 router from PC **1**
 static routes **12**
 VLANs **1**
 VPNs **1, 3**
 WAN interfaces **7**
 your network, preparing for **4**
 confreg command **6**
 connections
 setting up **4**
 console download **7 to 8**
 context command **8**
 conventions, command **13**
 copy running-config startup-config command **7**
 copy tftp flash command **3**
 corporate network, connecting to **4**
 crypto map
 applying to interface **7, 8**

D

debug atm commands **6**
 debug atm errors command **6**
 debug atm events command **7**
 debug atm packet command **8, 9**
 debug commands, ROM monitor **8, 9**
 default configuration, viewing **2**
 DHCP
 configuring DHCP server **2**
 IP address assignment **1**
 DHCP and Easy IP (Phase 2) **8**
 DHCP server
 configuration example **3**
 configuring as **1**

verify configuration **4**
 dial backup
 configuring **1, 9, 13**
 dialer watch **4**
 feature limitations and configuration **1**
 floating static routes **2**
 dialer interface
 configuring **5, 3**
 description **6**
 dialer watch **4, 7**
 dir device command **3**
 disaster recovery **3 to 5**
 DSL signaling protocol **6**
 Dynamic Host Configuration Protocol
 See DHCP
 dynamic routes
 configuration example **15**
 configuring **13, 15**

E

Easy IP (Phase 1)
 overview **8**
 Easy IP (Phase 2)
 overview **8**
 Easy VPN
 configuration tasks **2**
 configuring **1**
 remote configuration **9**
 verify configuration **10**
 EIGRP
 configuration example **16**
 configuring **15**
 configuring for IP **15 to 16**
 overview **2, 3**
 enable password
 recovering **12**
 setting **5**
 enable secret password

recovering **12**
setting **5**
encapsulation **6**
See also examples
Enhanced Interior Gateway Routing Protocol
See EIGRP
error messages, configuration **6**
error reporting, ROM monitor **8**
errors, ATM, displaying **6**
Ethernet **5**
events, ATM, displaying **7**
experience, user **11**
extended access list
 overview **11**

F

fallback bridging **10**
Fast Ethernet interface
 configuring **6, 9**
Fast Ethernet WAN interfaces
 configuring **7, 3**
filtering
 See access lists
firewalls
 access list configuration **3**
 applying access lists to interfaces **4**
 applying inspection rules to interfaces **4**
 configuration example **5**
 configuration tasks **2**
 configuring **1**
 configuring inspection rules **3**
floating static routes
 configuring **3**
 description **7**
flowcontrol command **2**
fragmentation, PPP **9**
frame command **8**

G

G.SHDSL
 configuring **7**
 ordering **5**
 overview **2**
 troubleshooting **2**
global configuration mode
 entering **5**
 summary **2, 3**
global parameters, setting up **6**
GRE
 configuring **1**
GRE tunnel
 configuration example **10**
 configuration tasks **8**
group policy
 configuring **4**

H

handshake
 defined **2**
 three-way **4**
 two-way **4**
help command **3**
help with commands **4**
hop count, defined **3**

i command **3**
IGMP snooping **10**
IKE policy
 configuring **3**
inspection rules
 applying to interfaces **4**
 configuring **3**
interface configuration mode **3**

interface port labels (table) **1**

interfaces

ATM

 displaying status for **5**

dialer **6**

interleaving

 PPP **9**

Internet connection, setting up **4**

IP

 overview **2**

 routing, setting up **4**

IPCP **8**

IP multicast switching **9**

IP Precedence

 with CBWFQ **10**

 overview **9**

IPSec tunnel

 configuration example **10**

 configuration tasks **2**

 configuring **1**

 crypto method **7**

 transforms and protocols **6**

ISDN interface

 configuring **9**

ISDN peer router

 configuring **12**

ISDN S/T port

 for dial backup **9**

K

k command **8**

L

LAN with DHCP and VLANs

 configuring **1**

Layer 2 interfaces **9**

LCP **4**

LFQ **10**

line configuration

 for V.92 modem **15**

line configuration mode **4**

Link Control Protocol

See LCP

LLC **6**

loopback interface

 configuring **9 to 10**

low latency queuing

See LFQ

M

MAC table manipulation **9**

meminfo command **9**

metrics

 EIGRP **3**

 RIP **3**

mode configuration, applying to crypto map **5**

modes

See command modes

N

NAT

 configuration example **9, 11**

 configuring with PPPoA **9**

 configuring with PPPoE **1, 7**

 overview **7 to 8**

See also Easy IP (Phase 1)

NCP **4**

network address translation

See NAT

network configuration, preparing for **4**

Network Control Protocols

See NCP

network protocols **2**

nonvolatile RAM

See NVRAM

note, described **13**

NVRAM, saving changes to **7**

O

overloading, defined **8**

P

packets, ATM, displaying **8**

PAP **4**

parameters

global, setting up **6**

Password Authentication Protocol

See PAP

password protection **5**

passwords

recovery **9 to 12**

resetting **12**

setting **5**

permanent virtual circuit

See PVC

permit command **11**

per-port storm control **10**

ping atm interface command **3**

Point-to-Point Protocol

See PPP

policy-based routing **9**

policy lookup, enabling **6, 4, 5**

port assignments, common **1 to 2**

port labels for interfaces **1**

port numbers currently assigned **1 to 2**

PPP **9**

authentication protocols **3 to 4**

fragmentation **9**

interleaving **9**

overview **3**

PPP/Internet Protocol Control Protocol

See IPCP

PPPoA, configuration example **11**

PPPoE

configuration example **9**

configuring **1**

verify configuration **10**

PPPoE client **1**

prerequisites, for configuration **4**

privileged EXEC commands, accessing **5**

privileged EXEC mode **2, 3**

protocols

ATM **5**

Ethernet **5**

network **2**

network interface **5 to 6**

PPP authentication **3 to 4**

routing overview **2 to 3**

PVC

encapsulation types **6**

overview **6**

Q

QoS

parameters **9 to 10**

queues, ATM **10**

R

radio station subinterfaces

configuring **5**

related documents **14**

remote access VPN

with Easy VPN and IPSec tunnel **1**

remote management

- configuring [9, 13](#)
- reset command [3](#)
- resetting
 - configuration register value [12](#)
 - passwords [12](#)
 - router [11](#)
- RIP
 - configuring [14](#)
 - overview [2 to 3](#)
- ROM monitor
 - commands [2](#)
 - debug commands [8, 9](#)
 - entering [1](#)
 - exiting [9](#)
- root radio station
 - configuring [2](#)
- router configuration mode [4](#)
- Routing Information Protocol
 - See* RIP
- routing protocol overview [2 to 3](#)
- RST bits [11](#)
- RSVP [10](#)

- S**
 - saving configuration changes [12, 7](#)
 - security authentication protocols [4](#)
 - security features
 - configuring [1 to 4](#)
 - settings
 - router default [2](#)
 - standard VT-100 emulation [2](#)
 - SHDSL
 - See* G.SHDSL
 - show atm interface command [5, 6](#)
 - show controllers dsl command [8](#)
 - show dsl interface atm command [7](#)
 - show interface command [3](#)
 - site-to-site VPN
- with GRE and IPSec tunnel [1](#)
- software, upgrading methods [9](#)
- stack command [8](#)
- static routes
 - configuration example [13](#)
 - configuring [12](#)
- Switch [7](#)
 - Switched Port Analyzer (SPAN) [9](#)
 - Switched Virtual Interfaces (SVIs) [9](#)
 - Switch Port Configurations [7](#)
 - Switch port configurations [7](#)
 - Switch Ports Configuration, Cisco 1800 [7](#)
 - symmetrical high-data-rate digital subscriber line
 - See* G.SHDSL
 - sysret command [9](#)

- T**
 - TACACS+ [5](#)
 - TCP/IP-oriented configuration [1](#)
 - TCP port numbers, currently assigned [1 to 2](#)
 - terminal emulation software [1](#)
 - tftpdnld command [3, 5](#)
 - TFTP download [3 to 5](#)
 - See also* console download
 - Timesaver, defined [13](#)
 - transform set
 - configuring [6](#)
 - translation
 - See* NAT
 - triggered extensions to RIP [3](#)
 - troubleshooting commands, ATM [2 to 9](#)

- U**
 - UDP
 - port numbers, currently assigned [1 to 2](#)
 - undoing commands [6](#)

upgrading software, methods for **9**

User Datagram Protocol

See UDP

user EXEC mode **2, 3**

X

xmodem command **7**

V

V.92 modem

for dial backup **13**

variables, command listing **4**

VC **6**

verify

DHCP server configuration **4**

Easy VPN configuration **10**

PPPoE with NAT configuration **10**

VLAN configuration **5**

viewing default configuration **2**

virtual configuration register **6**

virtual private dialup network group number

configuring **2**

VLANs

configuring **1**

verify configuration **5**

VLAN trunking protocol (VTP) **8**

VPDN **2**

VPNs

configuration example **10**

configuration tasks **2, 3**

configuring **1, 4**

W

WAN interfaces

configuring **7, 3, 5**

wireless LAN

configuration example **6**

configuration tasks **2**