



Cisco ASR 9000 Series Aggregation Services Router Interface and Hardware Component Command Reference

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Text Part Number: OL-24762-01

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <http://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2012 Cisco Systems, Inc. All rights reserved.



CONTENTS

Preface

Preface xxi

Changes to This Document xxi

Obtaining Documentation and Submitting a Service Request xxi

CHAPTER 1

Bidirectional Forwarding Detection Commands on the Cisco ASR 9000 Series Router 1

address-family ipv4 unicast (BFD) 3

bfd 5

bfd address-family ipv4 destination 7

bfd address-family ipv4 fast-detect 9

bfd address-family ipv4 minimum-interval 10

bfd address-family ipv4 multiplier 13

bfd address-family ipv4 timers 16

bfd fast-detect 18

bfd minimum-interval 21

bfd multipath include location 25

bfd multiplier 27

clear bfd counters 30

dampening (BFD) 32

echo disable 35

echo ipv4 source 37

echo latency detect 39

echo startup validate 41

interface (BFD) 43

ipv6 checksum 46

multihop ttl-drop-threshold 48

show bfd 50

show bfd client 53

show bfd counters 55
 show bfd mib session 58
 show bfd multipath 61
 show bfd session 63
 show bfd summary 71

CHAPTER 2

Dense Wavelength Division Multiplexing Commands on the Cisco ASR 9000 Series Router 73

admin-state 75
 controller dwdm 77
 g709 bdi-to-client-gais 79
 g709 fec 80
 g709 odu overhead tti 82
 g709 odu report disable 84
 g709 otu overhead tti 86
 g709 otu report disable 88
 g709 otu threshold 90
 g709 tim-to-client-gais 92
 g709 tti-processing 93
 log signal 94
 loopback (DWDM) 96
 network connection id 98
 network port id 100
 pm fec report enable 102
 pm fec threshold 104
 pm optics report enable 106
 pm optics threshold 108
 pm otn report enable 110
 pm otn threshold 113
 proactive 116
 proactive revert threshold 117
 proactive revert window 119
 proactive trigger threshold 121
 proactive trigger window 123
 show controller dwdm 125
 show controller dwdm pm 132

CHAPTER 3**Diagnostics Commands on the Cisco ASR 9000 Series Router 139**

diagnostic monitor 140

diagnostic monitor interval 142

diagnostic monitor syslog 144

diagnostic monitor threshold 145

diagnostic ondemand action-on-failure 147

diagnostic ondemand iterations 149

diagnostic schedule 150

diagnostic start 152

diagnostic stop 154

show diag 156

show diagnostic bootup level 160

show diagnostic content 162

show diagnostic ondemand settings 165

show diagnostic result 166

show diagnostic schedule 170

show diagnostic status 172

CHAPTER 4**Ethernet Interface Commands on the Cisco ASR 9000 Series Router 173**

carrier-delay 175

clear frequency synchronization esmc statistics 177

clear frequency synchronization wait-to-restore 178

clear lldp 179

clear mac-accounting (Ethernet) 181

clock-interface 183

clock-interface sync 185

flow-control 186

frequency synchronization 188

interface (Ethernet) 190

lldp 192

lldp (interface) 193

lldp holdtime 194

lldp reinit 196

lldp timer 198

lldp tlv-select disable	199
log selection	201
loopback (Ethernet)	202
mac-accounting	204
mac-address (Ethernet)	206
negotiation auto	208
packet-gap non-standard	209
priority (frequency synchronization)	211
quality itu-t	213
quality receive	214
quality transmit	217
selection input	220
show controllers (Ethernet)	221
show frequency synchronization clock-interfaces	223
show frequency synchronization configuration-errors	225
show frequency synchronization interfaces	227
show frequency synchronization selection	229
show lldp	232
show lldp entry	234
show lldp errors	236
show lldp interface	238
show lldp neighbors	240
show lldp traffic	243
show mac-accounting (Ethernet)	245
ssm disable	247
transport-mode	248
wait-to-restore	250

CHAPTER 5
Ethernet OAM Commands on the Cisco ASR 9000 Series Router 253

action capabilities-conflict	257
action critical-event	259
action discovery-timeout	261
action dying-gasp	263
action high-threshold	265
action remote-loopback	267

- action session-down 269
- action session-up 271
- action uni-directional link-fault 273
- action wiring-conflict 275
- aggregate 277
- ais transmission 279
- ais transmission up 281
- buckets archive 283
- buckets size 285
- clear ethernet cfm ccm-learning-database location 287
- clear ethernet cfm interface statistics 288
- clear ethernet cfm local meps 290
- clear ethernet cfm peer meps 292
- clear ethernet cfm traceroute-cache 294
- clear ethernet lmi interfaces 296
- clear ethernet oam statistics 298
- clear ethernet sla statistics all 300
- clear ethernet sla statistics on-demand 302
- clear ethernet sla statistics profile 305
- clear ethernet udld statistics 307
- connection timeout 309
- continuity-check archive hold-time 311
- continuity-check interval 312
- continuity-check loss auto-traceroute 314
- cos (CFM) 315
- debug ethernet cfm packets 317
- debug ethernet cfm protocol-state 320
- domain 322
- efd 324
- ethernet cfm (global) 326
- ethernet cfm (interface) 328
- ethernet lmi 330
- ethernet oam 331
- ethernet oam loopback 332
- ethernet oam profile 334

- ethernet sla 335
 - ethernet sla on-demand operation type cfm-delay-measurement probe 336
 - ethernet sla on-demand operation type cfm-loopback probe 342
 - ethernet udlld reset interface 348
 - ethernet uni id 349
 - extension remote-uni disable 351
 - frame-period threshold 353
 - frame-period window 355
 - frame-seconds threshold 356
 - frame-seconds window 358
 - frame threshold 360
 - frame window 362
 - hello-interval 364
 - link-monitor 366
 - log ais 368
 - log continuity-check errors 369
 - log continuity-check mep changes 371
 - log crosscheck errors 373
 - log disable 375
 - log efd 377
 - maximum-meps 379
 - mep crosscheck 381
 - mep-id 382
 - mep domain 384
 - mib-retrieval 386
 - mip auto-create 388
 - mode (Ethernet OAM) 390
 - monitoring 392
 - packet size 394
 - ping ethernet cfm 396
 - polling-verification-timer 399
 - priority (SLA) 401
 - probe 403
 - profile (EOAM) 404
 - profile (SLA) 406

remote-loopback 408

require-remote 410

schedule (SLA) 412

send (SLA) 416

service 419

show efd interface 422

show ethernet cfm ccm-learning-database 424

show ethernet cfm configuration-errors 426

show ethernet cfm interfaces ais 428

show ethernet cfm interfaces statistics 431

show ethernet cfm local maintenance-points 433

show ethernet cfm local meps 436

show ethernet cfm peer meps 442

show ethernet cfm traceroute-cache 449

show ethernet lmi interfaces 456

show ethernet oam configuration 465

show ethernet oam discovery 468

show ethernet oam interfaces 471

show ethernet oam statistics 474

show ethernet sla configuration-errors 476

show ethernet sla operations 478

show ethernet sla statistics 481

show ethernet udld interfaces 487

show ethernet udld statistics 490

sla operation 492

snmp-server traps ethernet cfm 494

snmp-server traps ethernet oam events 495

statistics measure 496

status-counter 498

symbol-period threshold 500

symbol-period window 502

tags 503

traceroute cache 505

traceroute ethernet cfm 507

uni-directional link-fault detection 510

CHAPTER 6**Frame Relay Commands on the Cisco ASR 9000 Series Router 513**

clear frame-relay multilink interface 515

clear frame-relay lmi interface 517

encap (PVC) 519

encapsulation frame-relay 521

frame-relay intf-type 523

frame-relay lmi disable 525

frame-relay lmi-n391dte 526

frame-relay lmi-n392dce 528

frame-relay lmi-n392dte 530

frame-relay lmi-n393dce 531

frame-relay lmi-n393dte 533

frame-relay lmi-t391dte 534

frame-relay lmi-t392dce 536

frame-relay lmi-type 538

frame-relay multilink ack 540

frame-relay multilink bandwidth-class 542

frame-relay multilink bid 544

frame-relay multilink hello 546

frame-relay multilink lid 548

frame-relay multilink retry 550

pvc (frame relay) 552

show frame-relay lmi 554

show frame-relay lmi-info 557

show frame-relay multilink 560

show frame-relay pvc 572

show frame-relay vcm-info interface 576

show interfaces (frame relay) 578

snmp-server traps frame-relay pvc 583

CHAPTER 7**Global Interface Commands on the Cisco ASR 9000 Series Router 585**

bandwidth (global) 586

bundle wait-while 588

clear interface 589

[dampening](#) 591
[interface \(global\)](#) 593
[lacp system](#) 595
[mlacp reset priority](#) 596
[mlacp switchback](#) 597
[mlacp switchover maximize](#) 598
[mlacp switchover type](#) 600
[mtu](#) 601
[show im dampening](#) 604
[show interfaces](#) 608
[show mlacp inconsistencies](#) 618
[shutdown \(global\)](#) 619

CHAPTER 8

Internal Ethernet Control Network Commands on the Cisco ASR 9000 Series Router 621

[clear controller backplane ethernet location statistics](#) 622
[show controllers backplane ethernet local brief](#) 623
[show controllers backplane ethernet local clients](#) 625
[show controllers backplane ethernet local detail](#) 627
[show controllers backplane ethernet local multicast groups](#) 629
[show controllers backplane ethernet location brief](#) 631
[show controllers backplane ethernet location clients](#) 634
[show controllers backplane ethernet location detail](#) 636
[show controllers backplane ethernet location multicast groups](#) 639
[show controllers switch ports](#) 641
[show controllers switch stats](#) 643

CHAPTER 9

Integrated Routing and Bridging Commands on the Cisco ASR 9000 Series Router 645

[interface bvi](#) 646
[routed interface bvi](#) 648
[show interfaces bvi](#) 650

CHAPTER 10

Link Bundling Commands on the Cisco ASR 9000 Series Router 655

[backbone interface](#) 657
[bundle-hash](#) 659
[bundle id](#) 664

- bundle load-balancing hash 666
- bundle load-balancing hash (EFP) 668
- bundle maximum-active links 670
- bundle minimum-active bandwidth 672
- bundle minimum-active links 673
- bundle port-priority 675
- clear lacp counters 677
- hw-module load-balance bundle l2-service l3-params 679
- interface (bundle) 681
- isolation recovery-delay 682
- lacp cisco enable 683
- lacp fast-switchover 685
- lacp packet-capture 687
- lacp period short 690
- lacp system priority 693
- member neighbor 695
- mlacp connect 696
- mlacp iccp-group 698
- mlacp node 699
- mlacp port-priority 700
- mlacp system mac 701
- mlacp system priority 703
- redundancy iccp group 705
- redundancy one-way 706
- show bundle 707
- show bundle brief 722
- show bundle load-balancing 725
- show bundle replication bundle-ether 729
- show iccp group 730
- show lacp bundle 732
- show lacp counters 735
- show lacp io 737
- show lacp packet-capture 740
- show lacp port 743
- show lacp system-id 746

show mlacp 748
show mlacp counters 750

CHAPTER 11

Management Ethernet Interface Commands on the Cisco ASR 9000 Series Router 753

duplex (Management Ethernet) 754
interface MgmtEth 756
mac-address (Management Ethernet) 758
speed (Management Ethernet) 760

CHAPTER 12

Multilink Commands on the Cisco ASR 9000 Series Router 763

bundle 764
controller MgmtMultilink 766
interface multilink 768
multilink 770
multilink fragment 771
multilink group 773
show controllers mgmtmultilink 775
show interfaces multilink 778

CHAPTER 13

Packet-over-SONET Interface Commands on the Cisco ASR 9000 Series Router 781

crc (POS) 782
encapsulation (POS) 784
interface pos 786
keepalive (POS) 788
pos 790
show interfaces pos 792
transmit-delay 795

CHAPTER 14

PPP Commands on the Cisco ASR 9000 Series Router 797

clear ppp sso state 799
clear ppp statistics 801
encapsulation ppp 802
group 804
multi-router aps 806
peer ipv4 address 807

[ppp authentication](#) 808
[ppp chap password](#) 811
[ppp chap refuse](#) 813
[ppp ipcp dns](#) 815
[ppp ipcp neighbor-route disable](#) 816
[ppp ipcp peer-address default](#) 817
[ppp max-bad-auth](#) 818
[ppp max-configure](#) 820
[ppp max-failure](#) 822
[ppp max-terminate](#) 824
[ppp ms-chap hostname](#) 826
[ppp ms-chap password](#) 827
[ppp ms-chap refuse](#) 829
[ppp multilink multiclass](#) 831
[ppp multilink multiclass local](#) 832
[ppp multilink multiclass remote apply](#) 834
[ppp pap refuse](#) 836
[ppp pap sent-username password](#) 838
[ppp timeout authentication](#) 840
[ppp timeout retry](#) 842
[redundancy](#) 843
[security ttl](#) 844
[show ppp interfaces](#) 845
[show ppp sso alerts](#) 853
[show ppp sso state](#) 855
[show ppp sso summary](#) 857
[ssrp group](#) 859
[ssrp location](#) 861
[ssrp profile](#) 862

CHAPTER 15

Serial Interface Commands on the Cisco ASR 9000 Series Router 863

[clear iphc ipv4](#) 865
[crc \(serial\)](#) 867
[description \(IPHC profile\)](#) 869
[encapsulation \(serial\)](#) 870

[feedback disable](#) 872
[fragment end-to-end](#) 873
[interface serial](#) 875
[invert](#) 878
[iphc profile](#) 879
[ipv4 iphc profile](#) 881
[keepalive \(serial\)](#) 883
[max-header](#) 885
[non-tcp compression](#) 886
[non-tcp context absolute](#) 887
[refresh max-period](#) 889
[refresh max-time](#) 891
[refresh rtp](#) 893
[rtp](#) 894
[scramble](#) 895
[serial](#) 897
[show iphc idb](#) 898
[show iphc ipv4 rtp](#) 900
[show iphc ipv4 tcp](#) 902
[show iphc platform trace](#) 904
[show iphc profile](#) 906
[show iphc trace all](#) 909
[show tech-support iphc](#) 911
[tcp compression](#) 914
[tcp context absolute](#) 916
[transmit-delay \(serial\)](#) 918

CHAPTER 16

SONET Controller Commands on the Cisco ASR 9000 Series Router 921

[ais-shut \(SONET\)](#) 923
[ais-shut \(SONET path\)](#) 925
[aps group](#) 927
[aps group \(global\)](#) 930
[au](#) 932
[authenticate \(PGP\)](#) 934
[b3-ber-prdi](#) 936

- channel local 937
- channel remote 939
- clear counters sonet 941
- clock source (SONET) 943
- controller (SONET) 945
- delay clear 947
- delay trigger 949
- down-when-looped 951
- framing (SONET) 952
- line delay clear 954
- line delay trigger 956
- lockout 958
- loopback (SONET) 960
- mode (SONET) 962
- overhead (SONET) 964
- overhead (SONET path) 966
- path delay clear 968
- path delay trigger 970
- path (SONET) 972
- report (SONET) 974
- report (SONET path) 976
- revert 978
- scrambling disable (SONET path) 980
- show aps 981
- show aps agents 983
- show aps group 985
- show controllers pos 988
- show controllers sonet 994
- show sonet-local trace frr 1002
- shutdown (SONET) 1004
- signalling 1006
- sts 1008
- timers (APS) 1009
- threshold (SONET) 1011
- threshold (SONET path) 1013

tug3 1015
 uneq-shut (SONET path) 1017
 unidirectional 1018
 width 1020

CHAPTER 17
T3, E3, T1, E1 Controller Commands on the Cisco ASR 9000 Series Router 1023

bert e1 1026
 bert e3 1029
 bert error 1031
 bert interval 1033
 bert pattern 1035
 bert t1 1038
 bert t3 1041
 cablelength 1043
 channel-group 1045
 clear controller lnm 1047
 clear controller t1 1050
 clear controller t3 1052
 clock source (T1/E1) 1054
 clock source (T3/E3) 1056
 controller e1 1058
 controller e3 1060
 controller t1 1062
 controller t3 1064
 delay clear (T1/E1) 1066
 delay clear (T3/E3) 1068
 delay trigger (T1/E1) 1070
 delay trigger (T3/E3) 1072
 description (T1/E1) 1074
 description (T3/E3) 1076
 down-when-looped (T1/E1) 1078
 down-when-looped (T3/E3) 1080
 dsu bandwidth 1082
 dsu mode 1084
 dsu remote 1086

fdl 1088
 framing (E1) 1090
 framing (E3) 1092
 framing (T1) 1094
 framing (T3) 1096
 linecode 1098
 lnm major-warning 1100
 lnm minor-warning 1103
 lnm remove 1106
 lnm syslog 1109
 loopback (T1/E1) 1111
 loopback (T3/E3) 1113
 mdl 1115
 mode 1117
 national bits (E1) 1119
 national bits (E3) 1120
 show controllers e1 1122
 show controllers e3 1126
 show controllers lnm 1130
 show controllers t1 1134
 show controllers t3 1142
 shutdown (T1/E1) 1151
 shutdown (T3/E3) 1153
 speed (DS0) 1155
 timeslots 1157
 yellow 1159

CHAPTER 18
Traffic Mirroring Commands on Cisco ASR 9000 Series Router 1161

acl 1162
 clear monitor-session counters 1164
 destination interface 1166
 destination pseudowire 1168
 mirror first 1169
 monitor-session 1170
 monitor-session (interface) 1171

[monitor-session \(l2vpn\) 1173](#)
[show monitor-session status 1175](#)
[show monitor-session counters 1177](#)

CHAPTER 19**VLAN Subinterface Commands on the Cisco ASR 9000 Series Router 1179**

[dot1q vlan 1180](#)
[interface \(VLAN\) 1182](#)

CHAPTER 20**10-Gigabit Ethernet WAN PHY Controller Commands on the Cisco ASR 9000 Series Router 1185**

[clear controller wanphy 1186](#)
[clear counters wanphy 1188](#)
[controller wanphy 1190](#)
[show controllers wanphy 1192](#)



Preface

This command reference describes the Cisco IOS XR Interfaces commands. The preface for the *Cisco ASR 9000 Series Aggregation Services Router Interface and Hardware Component Command Reference* contains the following sections:

- [Changes to This Document](#), page xxi
- [Obtaining Documentation and Submitting a Service Request](#), page xxi

Changes to This Document

[Changes to This Document](#), on page xxi lists the technical changes made to this document since it was first published.

Table 1: Changes to This Document

Revision	Date	Change Summary
OL-24762-01	May 4, 2011	Initial release of this document.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.



Bidirectional Forwarding Detection Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring Bidirectional Forwarding Detection (BFD) on the Cisco ASR 9000 Series Router.

- [address-family ipv4 unicast \(BFD\), page 3](#)
- [bfd, page 5](#)
- [bfd address-family ipv4 destination, page 7](#)
- [bfd address-family ipv4 fast-detect, page 9](#)
- [bfd address-family ipv4 minimum-interval, page 10](#)
- [bfd address-family ipv4 multiplier, page 13](#)
- [bfd address-family ipv4 timers, page 16](#)
- [bfd fast-detect, page 18](#)
- [bfd minimum-interval, page 21](#)
- [bfd multipath include location, page 25](#)
- [bfd multiplier, page 27](#)
- [clear bfd counters, page 30](#)
- [dampening \(BFD\), page 32](#)
- [echo disable, page 35](#)
- [echo ipv4 source, page 37](#)
- [echo latency detect, page 39](#)
- [echo startup validate, page 41](#)
- [interface \(BFD\), page 43](#)
- [ipv6 checksum, page 46](#)
- [multihop ttl-drop-threshold, page 48](#)
- [show bfd, page 50](#)

- [show bfd client, page 53](#)
- [show bfd counters, page 55](#)
- [show bfd mib session, page 58](#)
- [show bfd multipath, page 61](#)
- [show bfd session, page 63](#)
- [show bfd summary, page 71](#)

address-family ipv4 unicast (BFD)

To enable Bidirectional Forwarding Detection (BFD) fast-detection on a specific IPV4 unicast destination address prefix and on the forwarding next-hop address, use the **address-family ipv4 unicast** command in static route configuration mode. To return the router to the default setting, use the **no** form of this command.

address-family ipv4 unicast *address nexthop* **bfd fast-detect** [**minimum interval** *interval*] [**multiplier** *multiplier*]

no address-family ipv4 unicast *address nexthop* **bfd fast-detect** [**minimum interval** *interval*] [**multiplier** *multiplier*]

Syntax Description

<i>address</i>	Specifies the IPv4 unicast destination address and prefix on which to enable BFD fast-detection.
<i>nexthop</i>	Specifies the next-hop address on which to enable BFD fast-detection.
bfd fast-detect	Enables BFD fast-detection on the specified IPV4 unicast destination address prefix and on the forwarding next-hop address.
minimum interval <i>interval</i>	(Optional) Ensures that the next hop is assigned with the same hello interval. Replace <i>interval</i> with a number that specifies the interval in milliseconds. Range is from 10 through 10000.
multiplier <i>multiplier</i>	(Optional) Ensures that the next hop is assigned with the same detect multiplier. Replace <i>multiplier</i> with a number that specifies the detect multiplier. Range is from 1 through 10.

Command Default

interval: 100
multiplier: 3

Command Modes

Static route configuration mode

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the multiplier is changed using the **bfd multiplier** command, the new parameter is used to update all existing BFD sessions for the protocol (BGP, IS-IS, MPLS-TE, or OSPF).

Task ID

Task ID	Operations
static	read, write

Examples

The following example shows how to enable BFD on a static route. In this example, BFD sessions are established with the next-hop 3.3.3.3 when it becomes reachable.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router static
RP/0/RSP0/CPU0:router (config-static)# address-family ipv4 unicast 2.2.2.0/24 3.3.3.3 bfd
fast-detection
```

Related Commands

Command	Description
bfd fast-detect, on page 18	Enables BFD to detect failures in the path between adjacent forwarding engines.
show bfd, on page 50	Displays BFD information for a specific location.

bfd

To enter Bidirectional Forwarding Detection (BFD) configuration mode, use the **bfd** command in global configuration mode. To exit BFD configuration mode and return to global configuration mode, use the **no** form of this command.

bfd

no bfd

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes Global configuration

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you issue the **bfd** command in global configuration mode, the CLI prompt changes to “config-bfd,” indicating that you have entered BFD configuration mode. In the following sample output, the question mark (?) online help function displays all the commands available under BFD configuration mode:

```
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# ?

commit      Commit the configuration changes to running
describe    Describe a command without taking real actions
do          Run an exec command
echo        Configure BFD echo parameters
exit        Exit from this submode
interface   Configure BFD on an interface
no          Negate a command or set its defaults
root        Exit to the global configuration mode
show        Show contents of configuration
```

Task ID	Operations
bgp	read, write
ospf	read, write

Task ID	Operations
isis	read, write
mpls-te	read, write

Examples

The following example shows how to enter BFD configuration mode:

```
RP/0/RSP0/CPU0:router # configure
RP/0/RSP0/CPU0:router(config) # bfd
RP/0/RSP0/CPU0:router(config-bfd) #
```

Related Commands

Command	Description
echo disable, on page 35	Disables echo mode on a router or on an individual interface or bundle.
interface (BFD), on page 43	Enters BFD interface configuration mode, where you can disable echo mode on an interface.
show bfd, on page 50	Displays BFD information for a specific location.

bfd address-family ipv4 destination

To specify the destination address for BFD sessions on bundle member links, use the **bfd address-family ipv4 destination** command in interface configuration mode. To return to the default, use the **no** form of this command.

bfd address-family ipv4 destination *ip-address*

no bfd address-family ipv4 destination *ip-address*

Syntax Description

<i>ip-address</i>	32-bit IPv4 address in dotted-decimal format (A.B.C.D).

Command Default

No destination IPv4 address is configured.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command is supported on bundle interfaces only.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example specifies the IPv4 address of 10.20.20.1 as the destination address for the BFD session on an Ethernet bundle interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 1
RP/0/RSP0/CPU0:router(config-if)# bfd address-family ipv4 destination 10.20.20.1
```

Related Commands

Command	Description
bfd address-family ipv4 fast-detect , on page 9	Enables IPv4 BFD sessions on bundle member links.

bfd address-family ipv4 fast-detect

To enable IPv4 BFD sessions on bundle member links, use the **bfd address-family ipv4 fast-detect** command in interface configuration mode. To return to the default, use the **no** form of this command.

bfd address-family ipv4 fast-detect

no bfd address-family ipv4 fast-detect

Syntax Description This command has no keywords or arguments.

Command Default BFD sessions are disabled.

Command Modes Interface configuration (config-if)

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command is supported on bundle interfaces only.

Task ID	Task ID	Operations
	bundle	read, write

Examples The following example enables IPv4 BFD sessions on member links of an Ethernet bundle:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 1
RP/0/RSP0/CPU0:router(config-if)# bfd address-family ipv4 fast-detect
```

Related Commands	Command	Description
	bfd address-family ipv4 destination , on page 7	Specifies the destination address for BFD sessions on bundle member links.

bfd address-family ipv4 minimum-interval

To specify the minimum interval for asynchronous mode control packets on IPv4 BFD sessions on bundle member links, use the **bfd address-family ipv4 minimum-interval** command in interface configuration mode. To return to the default, use the **no** form of this command.

bfd address-family ipv4 minimum-interval *milliseconds*

no bfd address-family ipv4 minimum-interval [*milliseconds*]

Syntax Description

milliseconds	Shortest interval between sending BFD control packets to a neighbor. The range is 15 to 30000 milliseconds.
Note	Although the command allows you to configure a minimum of 15 ms, the supported minimum is 50 ms.

Command Default

The default is 150 ms.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command is supported on bundle interfaces only.

The BFD minimum interval is used with a configurable multiplier (**bfd address-family ipv4 multiplier** command) to determine the intervals and failure detection times for both control and echo packets in asynchronous mode on bundle member links.

For example, with a session interval of I and a multiplier of M , the following packet intervals and failure detection times apply for BFD asynchronous mode:

- Value of I —Minimum period between sending of BFD control packets.
- Value of $I \times M$
 - BFD control packet failure detection time. This is the maximum amount of time that can elapse without receipt of a BFD control packet before the session is declared down.
 - Minimum period between sending of BFD echo packets.

- Value of $(I \times M) \times M$ —BFD echo packet failure detection time. This is the maximum amount of time that can elapse without receipt of a BFD echo packet before the session is declared down.

When used with bundled VLANs, the following restrictions apply:

- The command specifies control packet intervals only because echo packets are not supported.
- The minimum interval is 250 ms.

The **bfd address-family ipv4 minimum-interval** command in bundle interface configuration overrides the minimum intervals specified by the **bfd minimum-interval** command in other areas of BFD configuration.



Note

When multiple applications share the same BFD session, the application with the most aggressive timer is used locally. Then, the result is negotiated with the peer router.

Keep the following router-specific rules in mind when configuring the minimum BFD interval:

- The maximum rate in packets-per-second (pps) for BFD sessions is linecard-dependent. If you have multiple linecards supporting BFD, then the maximum rate for BFD sessions per system is the supported linecard rate multiplied by the number of linecards.
 - The maximum rate for BFD sessions per linecard is 9600 pps.
- The maximum number of all BFD sessions on the router is 1024.
- The maximum number of all BFD sessions on the router is 1440.

To calculate the rate for BFD sessions on bundle members running in asynchronous mode without echo:

- Divide 1000 by the value of the minimum interval (as specified by the **bfd address-family ipv4 minimum-interval** command). This is also the base rate used per member session with echo:
Asynchronous rate per bundle member = $(1000 / \text{Min-interval})$

To calculate the rate for BFD sessions on bundle members running in asynchronous mode with echo:

- Determine the echo interval, which is the value of the minimum interval (specified by the **bfd address-family ipv4 minimum-interval** command) multiplied by the multiplier value (specified by the **bfd address-family ipv4 multiplier** command).
Echo interval = $(\text{Min-interval} \times \text{Multiplier})$
- Calculate the overall rate supported for all members on the bundle:
Ethernet bundle rate = $(1000 / \text{Echo interval}) \times 64$
- Add the asynchronous base rate per bundle member to find the total rate for all bundle links:
Total bundle rate = Ethernet bundle rate + $(\text{Base asynchronous rate} \times \text{Number of links})$

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example specifies that control packets will be sent at a minimum interval of 200 ms for IPv4 BFD sessions on member links of an Ethernet bundle:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 1
RP/0/RSP0/CPU0:router(config-if)# bfd address-family ipv4 minimum-interval 200
```

Related Commands

Command	Description
bfd minimum-interval , on page 21	Specifies the minimum control packet interval for BFD sessions for the corresponding BFD configuration scope.
bfd address-family ipv4 multiplier , on page 13	Specifies a number that is used as a multiplier with the minimum interval to determine BFD control and echo packet failure detection times and echo packet transmission intervals for IPv4 BFD sessions on bundle member links.

bfd address-family ipv4 multiplier

To specify a number that is used as a multiplier with the minimum interval to determine BFD control and echo packet failure detection times and echo packet transmission intervals for IPv4 BFD sessions on bundle member links, use the **bfd address-family ipv4 multiplier** command in interface configuration mode. To return to the default, use the **no** form of this command.

bfd address-family ipv4 multiplier *multiplier*

no bfd address-family ipv4 multiplier [*multiplier*]

Syntax Description

<i>multiplier</i>	Number from 2 to 50.
Note	Although the command allows you to configure a minimum of 2, the supported minimum is 3.

Command Default

The default multiplier is 3.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command is supported on bundle interfaces only.

The BFD multiplier is used with a configurable minimum interval (**bfd address-family ipv4 minimum-interval** command) to determine the intervals and failure detection times for both control and echo packets in asynchronous mode on bundle member links.

For example, with a session interval of I and a multiplier of M , the following packet intervals and failure detection times apply for BFD asynchronous mode:

- Value of I —Minimum period between sending of BFD control packets.
- Value of $I \times M$
 - BFD control packet failure detection time. This is the maximum amount of time that can elapse without receipt of a BFD control packet before the session is declared down.
 - Minimum period between sending of BFD echo packets.

**Note**

The maximum echo packet interval for BFD on bundle member links is the minimum of either 30 seconds or the asynchronous control packet failure detection time.

- Value of $(I \times M) \times M$ —BFD echo packet failure detection time. This is the maximum amount of time that can elapse without receipt of a BFD echo packet before the session is declared down.

Keep the following router-specific rules in mind when configuring the minimum BFD interval:

- The maximum rate in packets-per-second (pps) for BFD sessions is linecard-dependent. If you have multiple linecards supporting BFD, then the maximum rate for BFD sessions per system is the supported linecard rate multiplied by the number of linecards.
 - The maximum rate for BFD sessions per linecard is 9600 pps.
- The maximum number of all BFD sessions per linecard is 1024.
- The maximum number of all BFD sessions per linecard is 1440.

To calculate the rate for BFD sessions on bundle members running in asynchronous mode without echo:

- Divide 1000 by the value of the minimum interval (as specified by the **bfd address-family ipv4 minimum-interval** command). This is also the base rate used per member session with echo:
Asynchronous rate per bundle member = $(1000 / \text{Min-interval})$

To calculate the rate for BFD sessions on bundle members running in asynchronous mode with echo:

- Determine the echo interval, which is the value of the minimum interval (specified by the **bfd address-family ipv4 minimum-interval** command) multiplied by the multiplier value (specified by the **bfd address-family ipv4 multiplier** command).
Echo interval = $(\text{Min-interval} \times \text{Multiplier})$
- Calculate the overall rate supported for all members on the bundle:
Ethernet bundle rate = $(1000 / \text{Echo interval}) \times 64$
- Add the asynchronous base rate per bundle member to find the total rate for all bundle links:
Total bundle rate = Ethernet bundle rate + $(\text{Base asynchronous rate} \times \text{Number of links})$

Task ID

Task ID	Operations
bundle	read, write

Task ID**Examples**

The following example specifies the following packet intervals and failure detection times for IPv4 BFD sessions on member links with asynchronous echo mode on an Ethernet bundle:

- 200 ms control packet interval
- 600 ms control packet failure detection interval

- 600 ms echo packet interval
- 1800 ms echo packet failure detection interval

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 1
RP/0/RSP0/CPU0:router(config-if)# bfd address-family ipv4 minimum-interval 200
RP/0/RSP0/CPU0:router(config-if)# bfd address-family ipv4 multiplier 3
```

Related Commands

Command	Description
bfd address-family ipv4 minimum-interval , on page 10	Specifies the minimum interval for asynchronous mode control packets on IPv4 BFD sessions on bundle member links.
bfd minimum-interval , on page 21	Specifies the minimum control packet interval for BFD sessions for the corresponding BFD configuration scope.

bfd address-family ipv4 timers

To configure timers to allow for delays in receipt of BFD state change notifications (SCNs) from peers before declaring a link bundle BFD session down for IPv4 BFD sessions on bundle member links, use the **bfd address-family ipv4 timers** command in interface configuration mode. To return to the default, use the **no** form of this command.

bfd address-family ipv4 timers [*start*| *nbr-unconfig*] *seconds*

no bfd address-family ipv4 timers [*start*| *nbr-unconfig*] *seconds*

Syntax Description

start <i>seconds</i>	Number of seconds after startup of a BFD member link session to wait for the expected notification from the BFD peer to be received, so that the session can be declared up. If the SCN is not received after that period of time, the BFD session is declared down. The range is 60 to 3600. Note In Cisco IOS XR Releases 4.0 and 4.0.1, the available minimum is 30, but is not recommended.
nbr-unconfig <i>seconds</i>	Number of seconds to wait after receipt of notification that the BFD configuration has been removed by a BFD neighbor, so that any configuration inconsistency between the BFD peers can be fixed. If the BFD configuration issue is not resolved before the specified timer is reached, the BFD session is declared down. The range is 60 to 3600. Note In Cisco IOS XR Releases 4.0 and 4.0.1, the available minimum is 30, but is not recommended.

Command Default

No timers are configured.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command is supported on bundle interfaces only.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example configures a timer for members of the specified Ethernet bundle that allows up to 1 minute (60 seconds) after startup of a BFD member link session to wait for receipt of the expected notification from the BFD peer to declare the session up:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 1
RP/0/RSP0/CPU0:router(config-if)# bfd address-family ipv4 timers start 60
```

The following example configures a timer for members of the specified Ethernet bundle that allows up to 1 minute (60 seconds) to wait after receipt of notification that the BFD configuration has been removed by a BFD neighbor, before declaring a BFD session down:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 1
RP/0/RSP0/CPU0:router(config-if)# bfd address-family ipv4 timers nbr-unconfig 60
```

bfd fast-detect

To enable Bidirectional Forwarding Detection (BFD) to detect failures in the path between adjacent forwarding engines, use the **bfd fast-detect** command in the appropriate configuration mode. To return the software to the default state in which BFD is not enabled, use the **no** form of this command.

bfd fast-detect [**disable**] **ipv4**

no bfd fast-detect

Syntax Description

disable	Disables the detection of failures in the path between adjacent forwarding engines for a specified entity, such as a BGP neighbor or OSPF interface. Note The disable keyword is available in the following modes only: BGP configuration, OSPF area configuration, OSPF area interface configuration, OSPFv3 area configuration, and OSPFv3 area interface configuration .
ipv4	Enables Intermediate System-to-Intermediate System (IS-IS) BFD detection of failures in the path between adjacent forwarding engines. Note The ipv4 keyword is available in IS-IS router configuration mode only.

Command Default

BFD detection of failures in the path between adjacent forwarding engines is disabled.

Command Modes

Neighbor configuration
Session group configuration
Neighbor group configuration
Interface configuration
Interface configuration
Router configuration
Area configuration
Area interface configuration
Router configuration
Area configuration
Area interface configuration
Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Release	Modification
Release 4.0.0	The bfd fast-detect command was supported in the following modes: OSPFv3 router configuration, OSPFv3 area configuration, and OSPFv3 area interface configuration.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

BFD can support multihop for internal and external BGP peers.

Use the **bfd fast-detect** command to provide protocol- and media-independent, short-duration failure detection of the path between adjacent forwarding engines, including the interfaces and data links.

BFD must be configured on directly connected neighbors for a BFD session to be established between the neighbors.

When MPLS-TE tunnels are protected by backup tunnels, BFD failure triggers fast reroute on affected tunnels.

In OSPF and OSPFv3 environments, the setting of the **bfd fast-detect** command is inherited from the highest-level configuration mode in which the command was configured. From the lowest to the highest configuration modes, the inheritance rules are as follows:

- If you enable BFD in area interface configuration mode, it is enabled on the specified interface only.
- If you enable BFD in area configuration mode, it is enabled on all interfaces in the specified area.
- If you enable BFD in router configuration mode, it is enabled on all areas and all associated interfaces in the specified routing process.

The **disable** keyword is available in the following modes: BGP configuration, OSPF area configuration, OSPF area interface configuration, OSPFv3 area configuration, and OSPFv3 area interface configuration. In OSPF and OSPFv3 environments, the **disable** option enables you to override the inheritance rules described previously. For example, if you enable BFD in an OSPF area, BFD is enabled on all interfaces in that area. If you do not want BFD running on one of the interfaces in that area, you must specify the **bfd fast-detect disable** command for that interface only.

To disable BFD or return the software to the default state in which BFD is not enabled in IS-IS router configuration mode and MPLS-TE configuration mode, you must enter the **no bfd fast-detect** command.

Task ID

Task ID	Operations
bgp	read, write
isis	read, write
mpls-te	read, write
ospf	read, write

Task ID	Operations
multicast	read, write

Examples

The following example shows how to configure BFD on a BGP router:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router bgp 65000
RP/0/RSP0/CPU0:router(config-bgp)# neighbor 192.168.70.24
RP/0/RSP0/CPU0:router(config-bgp-nbr)# remote-as 2
RP/0/RSP0/CPU0:router(config-bgp-nbr)# bfd fast-detect
```

The following example shows the configuration of an OSPFv3 routing process named `san_jose`. The example shows two areas, each of which includes Gigabit Ethernet interfaces. In area 0, BFD is enabled at the area level, which means that by virtue of the inheritance rules, BFD is enabled on all interfaces within the area except those on which BFD is explicitly disabled. Given this rule, BFD is enabled on Gigabit Ethernet interfaces 1/0/0/0 and 2/0/0/0 and is disabled on interface 3/0/0/0.

In area 1, BFD is enabled on Gigabit Ethernet interface 5/0/0/0 only. Because BFD is not enabled at the area level nor explicitly enabled on interface 4/0/0/0, it is disabled on this interface.

```
router ospfv3 san_jose
  area 0
    bfd fast-detect
    ...
    int gige 1/0/0/0
    !
    int gige 2/0/0/0
    ...
int gige 3/0/0/0
    bfd fast-detect disable
!
!
  area 1
    int gige 4/0/0/0
    !
    int gige 5/0/0/0
      bfd fast-detect
    !
  !
```

Related Commands

Command	Description
address-family ipv4 unicast (BFD), on page 3	Enables BFD fast-detection on a specific IPV4 unicast destination address prefix and on the forwarding next-hop address.
bfd minimum-interval, on page 21	Specifies the minimum control packet interval for BFD sessions for the corresponding BFD configuration scope.
bfd multiplier, on page 27	Sets the BFD multiplier.
show bfd, on page 50	Displays BFD information for a specific location.

bfd minimum-interval

To specify the minimum control packet interval for BFD sessions for the corresponding BFD configuration scope, use the **bfd minimum-interval** command in the appropriate configuration mode. To return the router to the default setting, use the **no** form of this command.

bfd minimum-interval *milliseconds*

no bfd minimum-interval [*milliseconds*]

Syntax Description

<i>milliseconds</i>	Interval between sending BFD hello packets to the neighbor. The range is 15 to 30000 milliseconds. For MPLS-TE, the range is 15 to 200 milliseconds.

Command Default

BGP *interval*: 50 milliseconds
 IS-IS *interval*: 150 milliseconds
 OSPF and OSPFv3 *interval*: 150 milliseconds
 MPLS-TE *interval*: 15 milliseconds
 PIM *interval*: 150 milliseconds

Command Modes

Router configuration
 Interface configuration
 MPLS TE configuration
 Router configuration
 Area configuration
 Area interface configuration
 Router configuration
 Area configuration
 Area interface configuration
 Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	The bfd minimum-interval command was supported in the following modes: OSPFv3 router configuration, OSPFv3 area configuration, and OSPFv3 area interface configuration.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

In OSPF and OSPFv3 environments, the setting of the **bfd minimum-interval** command is inherited from the highest-level configuration mode in which the command was configured. From the lowest to the highest configuration modes, the inheritance rules are as follows:

- If you configure the minimum interval in area interface configuration mode, the updated interval affects the BFD sessions on the specified interface only.
- If you configure the minimum interval in area configuration mode, the updated interval affects the BFD sessions on all interfaces in the specified area.
- If you configure the minimum interval in router configuration mode, the updated interval affects the BFD sessions in all areas and all associated interfaces in the specified routing process.

If desired, you can override these inheritance rules by explicitly configuring the **bfd minimum-interval** command for a specific area interface or area.

**Note**

When multiple applications share the same BFD session, the application with the most aggressive timer wins locally. Then, the result is negotiated with the peer router.

Keep the following router-specific rules in mind when configuring the minimum BFD interval:

- The maximum rate in packets-per-second (pps) for BFD sessions is linecard-dependent. If you have multiple linecards supporting BFD, then the maximum rate for BFD sessions per system is the supported linecard rate multiplied by the number of linecards.
 - The maximum rate for BFD sessions per linecard is 9600 pps.
- If a session is running in asynchronous mode without echo, then PPS used for this session is (1000 / asynchronous interval in milliseconds).
- If a session is running in asynchronous mode with echo, then PPS used for this session is (1000 / echo interval in milliseconds).
This is calculated as: 1000 / value of the **bfd minimum-interval** command.

**Note**

The rate for BFD sessions on bundle member links is calculated differently. For more information, see the **bfd address-family ipv4 minimum-interval** command.

- The maximum number of all BFD sessions per linecard is 1024.
- The maximum number of all BFD sessions per linecard is 1440.
- When asynchronous mode is available, the minimum interval must be greater than or equal to 15 milliseconds for up to 100 sessions on the line card. If you are running the maximum of 1024 sessions, the failure detection interval must be greater than or equal to 150 milliseconds.

- When asynchronous mode is available, the minimum interval must be greater than or equal to 250 milliseconds, with a multiplier of 3 for up to 100 sessions per line card
- When asynchronous mode is available, the minimum interval must be greater than or equal to 15 milliseconds for up to 100 sessions on the line card. If you are running the maximum of 1440 sessions, the failure detection interval must be greater than or equal to 150 milliseconds.
- When echo mode is available, the minimum interval must be greater than or equal to 15 milliseconds for up to 100 sessions on the line card. If you are running the maximum of 1024 sessions, the failure detection interval must be less than or equal to 150 milliseconds.
- When echo mode is available, the minimum interval must be 50 milliseconds with a multiplier of 3.
- When echo mode is available, the minimum interval must be greater than or equal to 15 milliseconds for up to 100 sessions on the line card. If you are running the maximum of 1440 sessions, the failure detection interval must be less than or equal to 150 milliseconds.

Task ID

Task ID	Operations
bgp	read, write
isis	read, write
mpls-te	read, write
ospf	read, write
multicast	read, write

Examples

The following example shows how to set the BFD minimum interval for a BGP routing process:

```
RP/0/RSP0/CPU0:router(config)# router bgp 6500
RP/0/RSP0/CPU0:router(config-bgp)# bfd minimum-interval 275
```

The following example shows the configuration of an OSPFv3 routing process named `san_jose`. The example shows two areas, each of which includes Gigabit Ethernet interfaces. In area 0, the minimum interval is set to 200 at the area level, which means that by virtue of the inheritance rules, the same value is set on all interfaces within the area except those on which a different value is explicitly configured. Given this rule, Gigabit Ethernet interface 1/0/0/0 uses the interval of 200, which is inherited from the area, while interface 2/0/0/0 uses the explicitly configured value of 300.

In area 1, the minimum interval is not configured at the area or interface levels, which means that interfaces 3/0/0/0 and 4/0/0/0 use the default interval of 150.

```
router ospfv3 san_jose
bfd fast-detect
  area 0
bfd minimum-interval 200
int gige 1/0/0/0
!
int gige 2/0/0/0
bfd minimum-interval 300
!
!
```

bfd minimum-interval

```

        area 1
    int gige 3/0/0/0
        !
    int gige 4/0/0/0
        !
    !

```

Related Commands

Command	Description
address-family ipv4 unicast (BFD), on page 3	Enables BFD fast-detection on a specific IPV4 unicast destination address prefix and on the forwarding next-hop address.
bfd fast-detect, on page 18	Enables BFD to detect failures in the path between adjacent forwarding engines.
bfd multiplier, on page 27	Sets the BFD multiplier.
show bfd, on page 50	Displays BFD information for a specific location.

bfd multipath include location

To include specific linecards to host BFD multiple path sessions, use the **bfd multipath include location** command in the global configuration mode. To remove the configuration, use the **no** form of this command.

bfd multipath include location *node-id*

no bfd multipath include location *node-id*

Syntax Description

location <i>node-id</i>	Configures BFD multipath on the specified location. The <i>node-id</i> variable is mentioned in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
bgp	read, write
ospf	read, write
isis	read, write
mpls-te	read, write

Examples

This example shows how to run the **bfd multipath include location** command on a specific location:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd multipath include location 0/5/CPU0
```

Related Commands

Command	Description
bfd, on page 5	Enters BFD configuration mode.
show bfd multipath, on page 61	Displays information regarding BFD multipath sessions.

bfd multiplier

To set the Bidirectional Forwarding Detection (BFD) multiplier, use the **bfd multiplier** command in the appropriate configuration mode. To return the router to the default setting, use the **no** form of this command.

bfd multiplier *multiplier*

no bfd multiplier [*multiplier*]

Syntax Description

<i>multiplier</i>	Number of times a packet is missed before BFD declares the neighbor down. The ranges are as follows: • BGP—2 to 16 • IS-IS—2 to 50 • MPLS-TE—2 to 10 • OSPF and OSPFv3—2 to 50 • PIM—2 to 50

Command Default

The default multiplier is 3.

Command Modes

Router configuration
 Interface configuration
 MPLS-TE configuration
 Router configuration
 Area configuration
 Area interface configuration
 Router configuration
 Area configuration
 Area interface configuration
 Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	The bfd multiplier command was supported in the following modes: OSPFv3 router configuration, OSPFv3 area configuration, and OSPFv3 area interface configuration.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

In OSPF and OSPFv3 environments, the setting of the **bfd multiplier** command is inherited from the highest-level configuration mode in which the command was configured. From the lowest to the highest configuration modes, the inheritance rules are as follows:

- If you configure a multiplier in area interface configuration mode, the updated multiplier affects the BFD sessions on the specified interface only.
- If you configure a multiplier in area configuration mode, the updated multiplier affects the BFD sessions on all interfaces in the specified area.
- If you configure a multiplier in router configuration mode, the updated multiplier affects the BFD sessions in all areas and all associated interfaces in the specified routing process.

If desired, you can override these inheritance rules by explicitly configuring the **bfd multiplier** command for a specific area interface or area.

If the multiplier is changed using the **bfd multiplier** command, the new value is used to update all existing BFD sessions for the protocol (BGP, IS-IS, MPLS-TE, OSPF, or OSPFv3) .

Task ID

Task ID	Operations
bgp	read, write
isis	read, write
mpls-te	read, write
ospf	read, write
multicast	read, write

Examples

The following example shows how to set the BFD multiplier in a BGP routing process:

```
RP/0/RSP0/CPU0:router(config)# router bgp 65000
RP/0/RSP0/CPU0:router(config-bgp)# bfd multiplier 2
```

The following example shows the configuration of an OSPFv3 routing process named `san_jose`. The example shows two areas, each of which includes Gigabit Ethernet interfaces. In area 0, the multiplier is set to 5 at the area level, which means that by virtue of the inheritance rules, the same value is set on all interfaces within the area except those on which a different value is explicitly configured. Given this rule, Gigabit Ethernet interface 1/0/0/0 uses a multiplier of 5, which is inherited from the area, while interface 2/0/0/0 uses the explicitly configured multiplier of 2.

In area 1, a multiplier is not configured at the area or interface levels, which means that interfaces 3/0/0/0 and 4/0/0/0 use the default value of 3.

```
router ospfv3 san_jose
bfd fast-detect
  area 0
bfd multiplier 5
int gige 1/0/0/0
!
int gige 2/0/0/0
bfd multiplier 2
!
!
  area 1
int gige 3/0/0/0
!
int gige 4/0/0/0
!
!
```

Related Commands

Command	Description
address-family ipv4 unicast (BFD), on page 3	Enables BFD fast-detection on a specific IPV4 unicast destination address prefix and on the forwarding next-hop address.
bfd fast-detect, on page 18	Enables BFD to detect failures in the path between adjacent forwarding engines.
bfd minimum-interval, on page 21	Specifies the minimum control packet interval for BFD sessions for the corresponding BFD configuration scope.
show bfd, on page 50	Displays BFD information for a specific location.

clear bfd counters

To clear Bidirectional Forwarding Detection (BFD) counters, use the **clear bfd counters** command in EXEC mode.

clear bfd counters {**ipv4**| [**singlehop**| **multihop**]} [**ipv6**| [**singlehop**| **multihop**]] [**all**| **label**] [**packet**] [**timing**] [**interface** *type interface-path-id*] **location** *node-id*

Syntax Description

ipv4	(Optional) Clears BFD over IPv4 information only.
ipv6	(Optional) Clears BFD over IPv6 information only.
singlehop	(Optional) Clears BFD singlehop information only.
multihop	(Optional) Clears BFD multihop information only.
all	(Optional) Clears both BFD over IPv4 and BFD over IPv6 information.
packet	(Optional) Specifies that packet counters are cleared.
timing	(Optional) Specifies that timing counters are cleared.
interface	(Optional) Specifies the interface from which the BFD packet counters are cleared.
<i>type</i>	Specifies the interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>node-id</i>	Clears BFD counters from the specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

The default is the default address family identifier (AFI) that is set by the **set default-afi** command, IPv4 or IPv6.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	Support for the ipv6 keyword was added.
Release 4.2.0	Support for the singlehop and multihop keywords were added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

Both IPv4 and IPv6 BFD sessions can run simultaneously on the same line card.

Examples

The following example shows how to clear the BFD IPv6 packet counters on a POS interface:

```
RP/0/RSP0/CPU0:router# clear bfd counters packet ipv6 interface POS 0/1/0/0 location 0/1/cpu0
```

The following example shows how to clear the BFD IPv4 timing counters:

```
RP/0/RSP0/CPU0:router# clear bfd counters ipv4 timing location 0/5/cpu0
```

Related Commands

Command	Description
bfd fast-detect, on page 18	Enables BFD to detect failures in the path between adjacent forwarding engines.
bfd minimum-interval, on page 21	Specifies the minimum control packet interval for BFD sessions for the corresponding BFD configuration scope.
bfd multiplier, on page 27	Sets the BFD multiplier.
show bfd, on page 50	Displays BFD information for a specific location.

dampening (BFD)

To specify delays for BFD session startup, use the **dampening** command in Bidirectional Forwarding Detection (BFD) configuration mode. To return to the default, use the **no** form of this command.

dampening [**bundle-member**] {**initial-wait**| **maximum-wait**| **secondary-wait**} *milliseconds*

no dampening [**bundle-member**] {**initial-wait**| **maximum-wait**| **secondary-wait**} *milliseconds*

Syntax Description

bundle-member	(Optional) Specifies initial, maximum, or secondary delays in milliseconds for BFD session startup on BFD bundle members.
initial-wait	Specifies the initial delay in milliseconds before starting a BFD session. For bundle members, the default is 16000. For non-bundle interfaces, the default is 2000.
maximum-wait	Specifies the maximum delay in milliseconds before starting a BFD session. For bundle members, the default is 600000. For non-bundle interfaces, the default is 12000. Note The maximum delay must be greater than the initial delay.
secondary-wait	Specifies a secondary delay in milliseconds before starting a BFD session. For bundle members, the default is 20000. For non-bundle interfaces, the default is 5000.
<i>milliseconds</i>	Number from 1 to 3600000.

Command Default

BFD session startup delays are not configured and the default timer is indefinite.

Command Modes

BFD configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The bundle-member keyword was added.
Release 4.2.0	The l3-only-mode was added to the other dampening options.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You do not have to configure the BFD startup timers. If you do configure the initial wait startup timer (using the **initial-wait** keyword), then it must be less than the value of the maximum wait timer.

By default, BFD dampening is applied to all sessions in the following manner:

- If a session is brought down, then dampening is applied before a session is allowed to transition to initial/up states.
- Length of time a session is dampened grows exponentially with continuous session flap.
- If a session remains up for minimum two minutes, then the length of time a session dampens with the next session flap is reset to the initial dampening value.

BFD on bundle member applies dampening, only if the detected failure is specific to layer 3. BFD dampening is not invoked for L1 or L2 failures. BFD is started after Layer 1 and Layer 2 (LACP) is up to prevent a race condition and false triggers. BFD is notified to stop/ignore when L1 or L2 goes down and must be notified to start/resume when L1 or L2 recovers for a given/affected link/member.

BFD applies dampening till the session transitions from up to down state and the session is not removed. Whenever there is a failure detected at L1 or L2, the bundle manager removes BFD session on a member.

When dampening is removed a syslog message 'Exponential backoff dampening for BFD session has been cleared for specified BFD session. When/if same session gets created by application(s), only calculated initial wait time will be applied' is generated. If this is the desired behavior, then dampening can be enabled by configuring the BFD configuration, by using the command **bfd dampening bundle-member l3-failure-only**.

Task ID

Task ID	Operations
bgp	read, write
ospf	read, write
isis	read, write
mpls-te	read, write

Examples

The following example shows how to configure an initial and maximum delay for BFD session startup on BFD bundle members:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# dampening bundle-member initial-wait 8000
RP/0/RSP0/CPU0:router(config-bfd)# dampening bundle-member maximum-wait 15000
```

The following example shows how to change the default initial-wait for BFD on a non-bundle interface:

```
RP/0/RSP0/CPU0:router# configure
```

dampening (BFD)

```
RP/0/RSP0/CPU0:router(config)# bfd  
RP/0/RSP0/CPU0:router(config-bfd)# dampening initial-wait 30000  
RP/0/RSP0/CPU0:router(config-bfd)# dampening maximum-wait 35000
```

Related Commands

Command	Description
bfd , on page 5	Enters BFD configuration mode.

echo disable

To disable echo mode on a router or on an individual interface or bundle, use the **echo disable** command in Bidirectional Forwarding Detection (BFD) configuration mode. To return the router to the default configuration where echo mode is enabled, use the **no** form of this command.

echo disable

no echo disable

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes BFD configuration
BFD interface configuration

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you are using BFD with Unicast Reverse Path Forwarding (uRPF), you need to use the **echo disable** command to disable echo mode; otherwise, echo packets are rejected.



Note To enable or disable IPv4 uRPF checking on an IPv4 interface, use the **[no] ipv4 verify unicast source reachable-via** command in interface configuration mode. To enable or disable loose IPv6 uRPF checking on an IPv6 interface, use the **[no] ipv6 verify unicast source reachable-via any** command in interface configuration mode.

Task ID	Operations
bgp	read, write
ospf	read, write
isis	read, write

Task ID	Operations
mpls-te	read, write

Examples

The following example shows how to disable echo mode on a router:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# echo disable
```

The following example shows how to disable echo mode on an individual interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-bfd-if)# echo disable
```

Related Commands

Command	Description
bfd, on page 5	Enters BFD configuration mode.
interface (BFD), on page 43	Enters BFD interface configuration mode.
ipv4 verify unicast source reachable-via	Enables and disables IPv4 uRPF checking on an IPv4 interface.
ipv6 verify unicast source reachable-via any	Enables and disables loose IPv6 uRPF checking on an IPv6 interface.
show bfd, on page 50	Displays BFD information.

echo ipv4 source

To specify the IP address that you want to use as the source address for BFD echo packets, use the **echo ipv4 source** command in BFD or BFD interface configuration mode. To return to the default, use the **no** form of this command.

echo ipv4 source *ip-address*

no echo ipv4 source *ip-address*

Syntax Description

<i>ip-address</i>	32-bit IPv4 address in dotted-decimal format (A.B.C.D).

Command Default

The IP address of the output interface, or the IP address in the **router-id** command (if configured), is the default address used for an echo packet when the **echo ipv4 source** command is not configured.

Command Modes

BFD configuration
BFD interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you do not configure the IPv4 source address for echo packets, then BFD uses the IP address of the output interface or the address in the **router-id** command if specified.

You can override the default address for BFD echo packets by specifying an IPv4 source address for echo packets globally for all BFD sessions on the router and at an individual interface. Specifying the IP address at an individual interface will override any value specified globally for BFD on the router.

Task ID

Task ID	Operations
bgp	read, write
ospf	read, write
isis	read, write
mpls-te	read, write

Examples

The following example shows how to specify the IP address 10.10.10.1 as the source address for BFD echo packets for all BFD sessions on the router:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# echo ipv4 source 10.10.10.1
```

The following example shows how to specify the IP address 10.10.10.1 as the source address for BFD echo packets on an individual Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-bfd-if)# echo ipv4 source 10.10.10.1
```

The following example shows how to specify the IP address 10.10.10.1 as the source address for BFD echo packets on an individual Packet-over-SONET (POS) interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# interface pos 0/1/0/0
RP/0/RSP0/CPU0:router(config-bfd-if)# echo ipv4 source 10.10.10.1
```

Related Commands

Command	Description
bfd , on page 5	Enters BFD configuration mode.
echo disable , on page 35	Disables echo mode on a router or on an individual interface or bundle.

echo latency detect

To enable latency detection for BFD echo packets, use the **echo latency detect** command in BFD configuration mode. To return to the default, use the **no** form of this command.

echo latency detect [**percentage** *percent-value* [**count** *packet-count*]]

no echo latency detect [**percentage** *percent-value* [**count** *packet-count*]]

Syntax Description

percentage <i>percent-value</i>	(Optional) Percentage of the echo failure detection time to be detected as bad latency. The range is 100 to 250. The default is 100.
count <i>packet-count</i>	(Optional) Number of consecutive packets received with the detected bad latency that will take down a BFD session. The range is 1 to 10. The default is 1.

Command Default

Echo latency detection is disabled.

Command Modes

BFD configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

Latency detection is only valid where echo mode is supported for BFD. However, it is not supported on bundle interfaces.

Without latency detection, standard BFD echo failure detection tracks only the absence of receipt of echo packets within a period of time based on a counter. However, this standard echo failure detection does not address latency between transmission and receipt of any specific echo packet, which can build beyond desired tolerances over the course of the BFD session.

When latency detection is enabled, a percentage is multiplied to the echo failure detection value ($I \times M \times \%$), and the roundtrip delay is computed for the echo packet. If this delay is greater than ($I \times M \times \%$), then the BFD session is taken down.

If you have specified a packet count, then the system tracks the number of packets received back-to-back with bad latency before taking down the session.

Task ID

Task ID	Operations
bgp	read, write
ospf	read, write
isis	read, write
mpls-te	read, write

Examples

In the following examples, consider that the BFD minimum interval is 50 ms, and the multiplier is 3 for the BFD session.

The following example shows how to enable echo latency detection using the default values of 100% of the echo failure period (I x M) for a packet count of 1. In this example, when one echo packet is detected with a roundtrip delay greater than 150 ms, the session is taken down:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# echo latency detect
```

The following example shows how to enable echo latency detection based on 200% (two times) of the echo failure period for a packet count of 1. In this example, when one packet is detected with a roundtrip delay greater than 300 ms, the session is taken down:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# echo latency detect percentage 200
```

The following example shows how to enable echo latency detection based on 100% of the echo failure period for a packet count of 3. In this example, when three consecutive echo packets are detected with a roundtrip delay greater than 150 ms, the session is taken down:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# echo latency detect percentage 100 count 3
```

Related Commands

Command	Description
bfd , on page 5	Enters BFD configuration mode.
bfd minimum-interval , on page 21	Specifies the minimum control packet interval for BFD sessions for the corresponding BFD configuration scope.
bfd multiplier , on page 27	Sets the BFD multiplier.
echo startup validate , on page 41	Enables verification of the echo packet path before starting a BFD session.

echo startup validate

To enable verification of the echo packet path before starting a BFD session, use the **echo startup validate** command in BFD configuration mode. To return to the default, use the **no** form of this command.

echo startup [force]

no echo startup [force]

Syntax Description

force	(Optional) Ignores the remote 'Required Min Echo RX Interval' setting.

Command Default

Echo startup validation is disabled.

Command Modes

BFD configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

Echo validation is only valid where echo mode is supported for BFD. However, it is not supported on bundle interfaces.

When a BFD session is down and the **echo startup validate** command is configured, an echo packet is periodically transmitted on the link while it is down to verify successful transmission within the configured latency before allowing the BFD session to change state.

Without the **force** option, the echo validation test only runs if the last received control packet contains a non-zero “Required Min Echo RX Interval” value. When the **force** keyword is configured, the echo validation test runs regardless of this value.

Task ID

Task ID	Operations
bgp	read, write
ospf	read, write

Task ID	Operations
isis	read, write
mpls-te	read, write

Examples

The following example shows how to enable echo startup validation for BFD sessions on non-bundle interfaces if the last received control packet contains a non-zero “Required Min Echo RX Interval” value:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# echo startup validate
```

The following example shows how to enable echo startup validation for BFD sessions on non-bundle interfaces regardless of the “Required Min Echo RX Interval” value in the last control packet:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# echo startup validate force
```

Related Commands

Command	Description
bfd , on page 5	Enters BFD configuration mode.
echo latency detect , on page 39	Enables latency detection for BFD echo packets.

interface (BFD)

To enter Bidirectional Forwarding Detection (BFD) interface configuration mode, where you can disable echo mode on an interface, use the **interface** command in BFD configuration mode. To return to BFD configuration mode, use the **no** form of this command.

interface *type interface-path-id*

no interface *type interface-path-id*

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

BFD configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

If you are using BFD with Unicast Reverse Path Forwarding (uRPF) on a particular interface, then you need to use the **echo disable** command in BFD interface configuration mode to disable echo mode on that interface; otherwise, echo packets are rejected by the interface.

**Note**

To enable or disable IPv4 uRPF checking on an IPv4 interface, use the **[no] ipv4 verify unicast source reachable-via** command in interface configuration mode. To enable or disable loose IPv6 uRPF checking on an IPv6 interface, use the **[no] ipv6 verify unicast source reachable-via any** command in interface configuration mode.

Task ID

Task ID	Operations
bgp	read, write
ospf	read, write
isis	read, write
mpls-te	read, write

Examples

The following example shows how to enter BFD interface configuration mode for a Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-bfd-if)#
```

The following example shows how to enter BFD interface configuration mode for a Packet-over-SONET/SDH (POS) interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# interface pos 0/1/0/0
RP/0/RSP0/CPU0:router(config-bfd-if)#
```

Related Commands

Command	Description
bfd , on page 5	Enters BFD configuration mode.
echo disable , on page 35	Disables echo mode on an individual interface or on the entire router.
ipv4 verify unicast source reachable-via	Enables and disables IPv4 uRPF checking on an IPv4 interface.
ipv6 verify unicast source reachable-via any	Enables and disables loose IPv6 uRPF checking on an IPv6 interface.

Command	Description
show bfd, on page 50	Displays BFD information.

ipv6 checksum

To enable and disable IPv6 checksum calculations on BFD UDP packets globally or on a BFD interface, use the **ipv6 checksum** command in Bidirectional Forwarding Detection (BFD) or BFD interface configuration mode. To return to the default, use the **no** form of this command.

BFD Configuration

ipv6 checksum disable

no ipv6 checksum disable

BFD Interface Configuration

ipv6 checksum [disable]

no ipv6 checksum [disable]

Syntax Description

disable	(Optional for BFD interface configuration only) Disables IPv6 checksum calculations.

Command Default

IPv6 checksum calculations on BFD UDP packets is disabled.

Command Modes

BFD configuration

BFD interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

IPv6 checksum calculations for UDP packets are disabled by default for BFD sessions. You can enable IPv6 checksum support either globally for all BFD sessions, or on an individual interface.

Task ID

Task ID	Operations
bgp	read, write
ospf	read, write

Task ID	Operations
isis	read, write
mpls-te	read, write

Examples

The following example shows how to enable IPv6 checksum calculations for UDP packets for all BFD sessions on the router:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# no ipv6 checksum disable
```

The following example shows how to disable IPv6 checksum calculations for UDP packets for all BFD sessions on the router:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# ipv6 checksum disable
```

The following example shows how to enable echo mode for BFD sessions on an individual interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-bfd-if)# ipv6 checksum
```

The following example shows how to disable echo mode for BFD sessions on an individual interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# bfd
RP/0/RSP0/CPU0:router(config-bfd)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-bfd-if)# ipv6 checksum disable
```

Related Commands

Command	Description
bfd , on page 5	Enters BFD configuration mode.
interface (BFD) , on page 43	Enters BFD interface configuration mode, where you can disable echo mode on an interface.
show bfd , on page 50	Displays BFD information for a specific location.

multihop ttl-drop-threshold

To specify the maximum time to live (TTL) value for multihop sessions per system, use the **multihop ttl-drop-threshold** command in the BFD configuration mode. To return to the default, use the **no** form of this command.

multihop ttl-drop-threshold *value*

no multihop ttl-drop-threshold *value*

Syntax Description

<i>value</i>	Specifies the configurable range of values for TTL. It ranges from 0 to 254.

Command Default

No default behavior or values

Command Modes

BFD configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

This configuration command is only applicable for BFD multihop sessions.

Task ID

Task ID	Operation
bgp	read, write
ospf	read, write
isis	read, write
mpls-te	read, write

Examples

This example shows how to set the maximum ttl value as 2 using the **multihop-ttl-drop-threshold** command:

```
RP/0/RSP0/CPU0:router#configure
RP/0/RSP0/CPU0:router#bfd multihop ttl-drop threshold 2
```

Related Commands

Command	Description
show bfd counters, on page 55	Displays BFD counter information.
show bfd multipath, on page 61	Displays information regarding BFD multipath sessions.

show bfd

To display Bidirectional Forwarding Detection (BFD) information for a specific location, use the **show bfd** command in EXEC mode.

show bfd [**ipv4** | [**singlehop** | **multihop**]] [**ipv6** [**singlehop** | **multihop**]] [**all** | **label**] **interface** [**destination** | **source**] [**location** *node-id*]

Syntax Description

ipv4	(Optional) Displays BFD over IPv4 information only.
multihop	(Optional) Displays BFD multihop information only.
singlehop	(Optional) Displays BFD singlehop information only.
ipv6	(Optional) Displays BFD over IPv6 information only.
multihop	(Optional) Displays BFD multihop information only.
all	(Optional) Displays both BFD over IPv4 and BFD over IPv6 information.
label	(Optional) Displays the BFD label information.
interface	Specifies the BFD interface.
destination	(Optional) Specifies the destination IPv4 unicast address.
source	(Optional) Specifies the source IPv4 unicast address.
location <i>node-id</i>	Displays BFD information for the specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

The default is the default address family identifier (AFI) that is set by the **set default-afi** command, IPv4 or IPv6.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	Support for the ipv6 keyword was added.
Release 4.2.0	Support for multihop keyword was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bgp	read
ospf	read
isis	read
mpls-te	read

Examples

The following example shows the output from the **show bfd** command:

```
RP/0/RSP0/CPU0:router# show bfd
IPv4 Sessions Up: 0, Down: 0, Total: 0
```

The following example shows the output from the **show bfd all** command:

```
RP/0/RSP0/CPU0:router# show bfd all
IPv4:
-----
IPv4 Sessions Up: 20, Down: 0, Unknown/Retry: 2, Total: 22
IPv6:
-----
IPv6 Sessions Up: 128, Down: 2, Unknown/Retry: 1, Total: 131
Label:
-----
Label Sessions Up: 10, Down: 0, Unknown/Retry: 1, Total: 11
```

The following example shows the output from the **show bfd ipv4** command:

```
RP/0/RSP0/CPU0:router# show bfd ipv4
IPv4 Sessions Up: 0, Down: 0, Total: 0
```

The following example shows the output from the **show bfd ipv6** command:

```
RP/0/RSP0/CPU0:router# show bfd ipv6
IPv6 Sessions Up: 0, Down: 0, Total: 0
```

The following example shows the output from the **show bfd ipv4 location** command:

```
RP/0/RSP0/CPU0:router# show bfd ipv4 location 0/3/cpu0
IPv4 Sessions Up: 0, Down: 1, Standby: 0, Total: 1
```

Related Commands

Command	Description
bfd fast-detect, on page 18	Enables BFD to detect failures in the path between adjacent forwarding engines.
bfd minimum-interval, on page 21	Specifies the minimum control packet interval for BFD sessions for the corresponding BFD configuration scope.
bfd multiplier, on page 27	Sets the BFD multiplier.

show bfd client

To display Bidirectional Forwarding Detection (BFD) client information, use the **show bfd client** command in EXEC mode.

show bfd client [detail]

Syntax Description

detail	(Optional) Specifies detailed client information including number of sessions and client reconnects.

Command Default

Enter the **show bfd client** command without specifying the **detail** keyword to display summarized BFD client information.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bgp	read
ospf	read
isis	read
mpls-te	read

Examples

The following example shows the output from the **show bfd client** command:

```
RP/0/RSP0/CPU0:router# show bfd client
Name           Node           Num sessions
-----
```

show bfd client

```

bgp          0/RSP0/CPU0 0
isis         0/RSP0/CPU0 0
isis         0/RSP0/CPU0 0

```

Table 2: show bfd client Field Descriptions

Field	Description
Name	Name of the BFD client.
Node	Location of the BFD client.
Num sessions	Number of active sessions for the BFD client.

Related Commands

Command	Description
bfd fast-detect, on page 18	Enables BFD to detect failures in the path between adjacent forwarding engines.
bfd minimum-interval, on page 21	Specifies the minimum control packet interval for BFD sessions for the corresponding BFD configuration scope.
bfd multiplier, on page 27	Sets the BFD multiplier.
show bfd, on page 50	Displays BFD information for a specific location.

show bfd counters

To display Bidirectional Forwarding Detection (BFD) counter information, use the **show bfd counters** command in EXEC mode.

show bfd counters [**ipv4**] [**singlehop** | **multihop**]] [**ipv6**] [**singlehop** | **multihop**]] [**all**] [**label**] **packet** [**interface** *type interface-path-id*] **location** *node-id*

Syntax Description

ipv4	(Optional) Displays BFD over IPv4 information only.
ipv6	(Optional) Displays BFD over IPv6 information only.
singlehop	(Optional) Displays BFD singlehop information only.
multihop	(Optional) Displays BFD multihop information only.
all	(Optional) Displays both BFD over IPv4 and BFD over IPv6 information.
packet	Specifies that packet counters are displayed.
interface	(Optional) Specifies the interface for which to show counters.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>node-id</i>	Displays BFD counters from the specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

The default is the default address family identifier (AFI) that is set by the **set default-afi** command, IPv4 or IPv6.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	Support for the ipv6 keyword was added.

Release	Modification
Release 4.2.0	Support for the singlehop and multihop keywords were added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
bgp	read
ospf	read
isis	read
mpls-te	read

Examples

The following example shows the output from the **show bfd counters packet** command for both IPv4 and IPv6:

```
RP/0/RSP0/CPU0:router# show bfd counters packet all interface POS 0/1/0/0 location 0/1/cpu0
Mon Nov  5 08:49:51.950 UTC
IPv4:
-----
POS 0/1/0/0          Recv      Xmit      Echo:      Recv      Xmit
  Async:             520        515             9400      9400

IPv6:
-----
POS 0/1/0/0          Recv      Xmit      Echo:      Recv      Xmit
  Async:             237        237             0         0
```

The following example shows the output from the **show bfd counters packet** command for IPv4:

```
RP/0/RSP0/CPU0:router# show bfd counters ipv4 packet

IPv4 Singlehop:
GigabitEthernet0/0/1/2          Recv      Xmit
  Async:                        4148      4137      Echo: (    47136)    80192
GigabitEthernet0/1/1/2          Recv      Xmit
  Async:                        116876     125756      Echo: ( 2268192) 2301312
Bundle-Ether10                  Recv      Xmit
  Async:                         2           0      Echo:           0           0
Bundle-Ether20                  Recv      Xmit
  Async:                         91           0      Echo:           0           0

IPv4 Multihop: (Src IP/Dst IP/Vrf Id)
33.15.151.4/33.16.151.4/0x12345678  Recv      Xmit
  Async:                         0          570337
```

Table 3: show bfd counters packet Field Descriptions

Field	Description
Async	Number of asynchronous mode (control) packets that were received or transmitted on the specified interface.
Echo	Number of echo packets that were received or transmitted on the specified interface.

Related Commands

Command	Description
bfd fast-detect, on page 18	Enables BFD to detect failures in the path between adjacent forwarding engines.
bfd minimum-interval, on page 21	Specifies the minimum control packet interval for BFD sessions for the corresponding BFD configuration scope.
bfd multiplier, on page 27	Sets the BFD multiplier.

show bfd mib session

To display IPv4 and IPv6 Bidirectional Forwarding Detection (BFD) MIB session information, use the **show bfd mib session** command in EXEC mode.

show bfd mib session [*location node-id*]

Syntax Description

location node-id	(Optional) Displays all IPv4 and IPv6 BFD MIB session information stored on the specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

When *node-id* is not specified, information for all IPv4 and IPv6 BFD MIB sessions, stored on the route processor node, is displayed.

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for the display of IPv6 BFD MIB session information was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When *node-id* is not specified, information for all IPv4 and IPv6 BFD MIB sessions, stored on the route processor node, is displayed, and this information is populated and updated only after SNMP operations for those BFD MIB sessions are performed.

When *node-id* is specified, information for all IPv4 and IPv6 BFD MIB sessions, stored on the specified node (linecard), is displayed, and this information is updated automatically without SNMP operations being performed.

Task ID

Task ID	Operations
bgp	read
ospf	read

Task ID	Operations
isis	read
mpls-te	read

Examples

The following example displays all IPv4 and IPv6 BFD MIB session information stored on the RP node:

```
RP/0/RSP0/CPU0:router# show bfd mib session
```

```
Tue Sep  9 07:49:30.828 PST DST
Local Discr: 327681(0x50001), Remote Discr: 0(0x0)
BFD session: GigabitEthernet0_1_5_2(0x11800c0), 10.27.4.7
  Current State: ADMIN DOWN, Number of Times UP: 0
  Running Version: 0, Last Down Diag: None
  Last Up Time (s.ns): 0.0
  Last Down Time (s.ns): 0.0
  Detection Multiplier: 0
  Desired Min TX Interval: 0
  Required Min RX Interval: 0
  Required Min RX Echo Interval: 0
  Packets in/out: 0/0
  Current Trap Bitmap: 0x0
  Last Time Cached: Not yet cached
```

The following example displays all IPv4 and IPv6 BFD MIB session information stored on 0/1/CPU0:

```
RP/0/RSP0/CPU0:router# show bfd mib session location 0/1/CPU0
```

```
Tue Sep  9 07:44:49.190 PST DST
Local Discr: 327681(0x50001), Remote Discr: 0(0x0)
BFD session: GigabitEthernet0_1_5_2(0x11800c0), 10.27.4.7
  Number of times UP: 0
  Last Down Diag: None
  Last Up Time (s.ns): 0.0
  Last Down Time (s.ns): 0.0
  Packets in/out: 0/1140134
```

Table 4: show bfd mib Field Descriptions

Field	Description
date and timestamp	Date and time stamp during which a snapshot of the BFD MIB session information is taken.
Local Discr	Local discriminator (in decimal and hexadecimal) that uniquely identifies the BFD MIB session.
Remote Discr	Session discriminator (in decimal and hexadecimal) that was chosen by the remote system for the BFD MIB session.
BFD session	Index of interface upon which the BFD MIB session is running. Also, neighboring IP address that is monitored with the BFD MIB session.

Field	Description
Current State	Current state of the BFD MIB session.
Number of Times UP	Number of times the BFD MIB session has gone into the up state since the router was last rebooted.
Running Version	BFD protocol version number in which the BFD MIB session is running.
Last Down Diag	Diagnostic value associated with the last time the BFD MIB session went down.
Last Up Time (s.ns)	Value of sysUpTime, in <i>seconds.nanoseconds</i> , during which the BFD MIB session last came up. If such an event does not exist, a zero is displayed.
Last Down Time (s.ns)	Value of sysUpTime, in <i>seconds.nanoseconds</i> , during which communication was last lost with the neighbor. If such an event does not exist, a zero is displayed.
Detection Multiplier	Failure detection multiplier.
Desired Min TX Interval	Minimum interval, in microseconds, preferred by the local system when transmitting BFD control packets.
Required Min RX Interval	Minimum interval, in microseconds, that the local system supports between received BFD control packets.
Required Min RX Echo Interval	Minimum interval, in microseconds, that the local system supports between received BFD echo packets.
Packets in/out	Total number of BFD messages received and transmitted for the BFD MIB session.
Current Trap Bitmap	Bits that control the trap for the BFD MIB session. A nonzero value indicates that the trap is generated when the next trap event is triggered.
Last Time Cached	When information for the BFD MIB session was last cached. Typically, the information is cached when SNMP operations for the BFD MIB session are performed.

Related Commands

Command	Description
show bfd session , on page 63	

show bfd multipath

To display information concerning only BFD multipath sessions, use the **show bfd multipath** command in the EXEC mode.

show bfd multipath {**ipv4**| **ipv6**| **label**| **all**} **location** *node-id*

Syntax Description

ipv4	Displays BFD over IPv4 information only.
ipv6	Displays BFD over IPv6 information only.
label	Displays BFD label information.
all	Displays both BFD over IPv4 and BFD over IPv6 information.
location <i>node-id</i>	Displays BFD counters from the specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
bgp	read
ospf	read
isis	read
mpls-te	read

Examples

This example shows the sample output for **show bfd multipath** command:

RP/0/RSP0/CPU0:router#show bfd multipath location 0/5/cpu0

Int/Src Addr	Label/Dest Addr	VRF ID	Discr	Node	State
pw-ether 1	10.10.10.10	0x00000002	0x4	0/5/CPU0	DOWN
tunnel-ip 1	1.1.1.1	0x8	0x5	0/5/CPU0	UP

show bfd session

To display Bidirectional Forwarding Detection (BFD) session information, use the **show bfd session** command in EXEC mode.

show bfd [**ipv4**|**[singlehop| multihop]**]| **ipv6**|**[singlehop| multihop]**]| **all**| **label**] **session** [**interface** *type* *interface-path-id* [**destination** *ip-address*] [**detail**][**in-label**]] **location** *node-id*

Syntax Description

ipv4	(Optional) Displays BFD over IPv4 information only.
ipv6	(Optional) Displays BFD over IPv6 information only.
singlehop	(Optional) Displays BFD singlehop information only.
multihop	(Optional) Displays BFD multihop information only.
all	(Optional) Displays both BFD over IPv4 and BFD over IPv6 information.
label	(Optional) Displays the MPLS Transport Profile (MPLS-TP) label BFD information only.
interface	(Optional) Specifies the interface for which to show information.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
destination <i>ip-address</i>	(Optional) Displays the BFD session destined for the specified IP address.
detail	(Optional) Displays detailed session information, including statistics and number of state transitions.
in-label	(Optional) Displays the BFD session with a specific incoming MPLS-TP label.
location <i>node-id</i>	(Optional) Displays BFD sessions hosted from the specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

The default is the default address family identifier (AFI) that is set by the **set default-afi** command, IPv4 or IPv6.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	Support for the ipv6 keyword was added.
Release 4.2.0	Support for the singlehop and multihop keywords were added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

**Note**

Only VRF ID is displayed in the summary CLI (such as **show bfd multiple-path**, **show bfd all session**, **show bfd counters**) and VRF name and VRF ID is displayed in the detailed CLI (such as **show bfd all session detail**, **show bfd all session status**).

Task ID

Task ID	Operations
bgp	read
ospf	read
isis	read
mpls-te	read

Examples

The following example shows the output from the **show bfd session** command with the **detail** keyword and IPv4 as the default:

```
RP/0/RSP0/CPU0:router# show bfd session detail

I/f:TenGigE0/2/0/0.6, Location:0/2/CPU0, dest:10.0.6.2, src:10.0.6.1
  State:UP for 0d:0h:3m:4s, number of times UP:1
Received parameters:
  Version:1, desired tx interval:2 s, required rx interval:2 s
  Required echo rx interval:1 ms, multiplier:3, diag:None
  My discr:589830, your discr:590028, state UP, D/F/P/C/A:0/0/0/1/0
Transmitted parameters:
  Version:1, desired tx interval:2 s, required rx interval:2 s
  Required echo rx interval:1 ms, multiplier:3, diag:None
  My discr:590028, your discr:589830, state UP, D/F/P/C/A:0/0/0/1/0
Timer Values:
  Local negotiated async tx interval:2 s
  Remote negotiated async tx interval:2 s
  Desired echo tx interval:250 ms, local negotiated echo tx interval:250 ms
  Echo detection time:750 ms(250 ms*3), async detection time:6 s(2 s*3)
Local Stats:
  Intervals between async packets:
    Tx:Number of intervals=100, min=952 ms, max=2001 ms, avg=1835 ms
    Last packet transmitted 606 ms ago
    Rx:Number of intervals=100, min=1665 ms, max=2001 ms, avg=1828 ms
    Last packet received 1302 ms ago
  Intervals between echo packets:
    Tx:Number of intervals=100, min=250 ms, max=252 ms, avg=250 ms
    Last packet transmitted 188 ms ago
    Rx:Number of intervals=100, min=250 ms, max=252 ms, avg=250 ms
    Last packet received 187 ms ago
  Latency of echo packets (time between tx and rx):
    Number of packets:100, min=1 ms, max=2 ms, avg=1 ms
Session owner information:
  Client          Desired interval      Multiplier
  -----
  bgp-            250 ms                          3
```

The following example shows the output from the **show bfd session** command with the **all** keyword, which displays both IPv4 and IPv6 information:

```
RP/0/RSP0/CPU0:router# show bfd all session location 0/1/CPU0

Mon Nov  5 08:51:50.339 UTC
IPv4:
-----
Interface          Dest Addr          Local det time(int*mult)  State
                   Dest Addr          Echo                   Async
-----
PO0/1/0/0          10.0.0.2           300ms(100ms*3)          6s(2s*3)          UP

IPv6:
-----
Interface          Dest Addr          Local det time(int*mult)  State
                   Dest Addr          Echo                   Async
-----
PO0/1/0/0          abcd::2            0s(0s*0)                15s(5s*3)          UP
```

Table 5: show bfd session detail command Field Descriptions

Field	Description
I/f	Interface type.
Location	Location of the node that hosts the local endpoint of the connection, in the <i>rack/slot/module</i> notation
dest	IP address of the destination endpoint.
src	IP address of the source endpoint.
State	Current state of the connection, and the number of days, hours, minutes, and seconds that this connection has been active.
number of times UP	Number of times this connection has been brought up.
Received parameters	Provides information on the last transmitted control packet for the session: • Version—Version number of the BFD protocol. • desired tx interval—Desired transmit interval. • required rx interval—Required receive interval. • Required echo rx interval—Required echo receive interval. • multiplier— Number of times a packets is missed before BFD declares the neighbor down. • diag—diagnostic code specifying the peer system's reason for the last transition of the session from Up to some other state. • My discr—unique, nonzero discriminator value generated by the transmitting system, used to demultiplex multiple BFD sessions between the same pair of systems. • your discr— discriminator received from the corresponding remote system. This field reflects back the received value of My discr, or is zero if that value is unknown.

Field	Description
Transmitted parameters	Provides information on the last transmitted control packet for the session: • Version—Version number of the BFD protocol. • desired tx interval—Desired transmit interval. • required rx interval—Required receive interval • Required echo rx interval—Required echo receive interval • multiplierNumber of times a packets is missed before BFD declares the neighbor down. • diag—diagnostic code specifying the local system's reason for the last transition of the session from Up to some other state. • My discr—unique, nonzero discriminator value generated by the transmitting system, used to demultiplex multiple BFD sessions between the same pair of systems. • your discr— discriminator received from the corresponding remote system. This field reflects back the received value of My discr, or is zero if that value is unknown.

Field	Description
Timer Values	Provides information on the timer values used by the local and remote ends, as follows: • Local negotiated async tx interval—interval at which control packets are being transmitted by the local end. • Remote negotiated async tx interval—interval at which control packets should be transmitted by the remote end. • Desired echo tx interval—interval at which the local end would like to transmit echo packets. • local negotiated echo tx interval—interval at which echo packets are being transmitted by the local end. • Echo detection time—local failure detection time of echo packets. It is the product of the local negotiated echo tx interval and the local multiplier. • async detection time—local failure detection time of the asynchronous mode (control packets). It is the product of the remote negotiated async tx interval and the remote multiplier.

Field	Description
Local Stats	Displays the local transmit and receive statistics, • Intervals between async packets—provides measurements on intervals between control packets (tx and rx): ◦ Number of intervals—number of sampled intervals between control packets ◦ min—minimum measured interval between 2 consecutive control packets ◦ max—maximum measured interval between 2 consecutive control packets ◦ avg—average measured interval between 2 consecutive control packets ◦ Last packet received/transmitted—indicates how long ago the last control packet was received/transmitted. • Intervals between echo packets—provides measurements on intervals between echo packets (tx and rx). The measurements have the same meaning as for async packets. • Latency of echo packets (time between tx and rx)—provides measurements on latency of echo packets, i.e. the time between tx and rx of echo packets: ◦ Number of packets—number of sampled echo packets. ◦ min—minimum measured latency for echo packets. ◦ max—maximum measured latency of echo packets. ◦ avg—average measured latency of echo packets.

Field	Description
Session owner information	Provides the following information about the session owner. • Client—name of the client application process. • Desired interval—desired interval provided by the client, in milliseconds. • Multiplier—multiplier value provided by the client.

Related Commands

Command	Description
bfd fast-detect, on page 18	Enables BFD to detect failures in the path between adjacent forwarding engines.
bfd minimum-interval, on page 21	Specifies the minimum control packet interval for BFD sessions for the corresponding BFD configuration scope.
bfd multiplier, on page 27	Sets the BFD multiplier.
show bfd mib session, on page 58	Displays BFD MIB session information.

show bfd summary

To display the percentage of PPS rate in use per line card, maximum usage of PPS, and total number of sessions, use the **show bfd summary** command in the EXEC mode.

show bfd summary [**private**]**location***node-id*

Syntax Description

private	Displays the private information.
location <i>node-id</i>	Displays BFD counters from the specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
bgp	read
ospf	read
isis	read
mpls-te	read

Examples

This example shows the sample output from the **show bfd summary** command for a specified location:

```
RP/0/RSP0/CPU0:router#show bfd summary location 0/1/cpu0
```

show bfd summary

```

Node          PPS rate usage Session number
%    Used    Max    Total    Max
-----
0/1/CPU0      0    80    9600    4      4000

```

This example shows the sample output from the **show bfd summary** command:

```

RP/0/RSP0/CPU0:router#show bfd summary
Node          PPS rate usage Session number
%    Used    Max    Total    Max
-----
0/0/CPU0      0    0      9600    0      4000
0/1/CPU0      0    0      9600    0      4000
0/2/CPU0      0    0      9600    0      4000
0/5/CPU0      0    0      9600    0      4000
0/6/CPU0      0    0      9600    0      4000
0/7/CPU0      0    0      9600    0      4000

```



Dense Wavelength Division Multiplexing Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring dense wavelength division multiplexing (DWDM) on the Cisco ASR 9000 Series Router.

- [admin-state, page 75](#)
- [controller dwdm, page 77](#)
- [g709 bdi-to-client-gais, page 79](#)
- [g709 fec, page 80](#)
- [g709 odu overhead tti, page 82](#)
- [g709 odu report disable, page 84](#)
- [g709 otu overhead tti, page 86](#)
- [g709 otu report disable, page 88](#)
- [g709 otu threshold, page 90](#)
- [g709 tim-to-client-gais, page 92](#)
- [g709 tti-processing, page 93](#)
- [log signal, page 94](#)
- [loopback \(DWDM\), page 96](#)
- [network connection id, page 98](#)
- [network port id, page 100](#)
- [pm fec report enable, page 102](#)
- [pm fec threshold, page 104](#)
- [pm optics report enable, page 106](#)
- [pm optics threshold, page 108](#)
- [pm otn report enable, page 110](#)
- [pm otn threshold, page 113](#)

- [proactive](#), page 116
- [proactive revert threshold](#), page 117
- [proactive revert window](#), page 119
- [proactive trigger threshold](#), page 121
- [proactive trigger window](#), page 123
- [show controller dwdm](#), page 125
- [show controller dwdm pm](#), page 132

admin-state

To configure the transport administration state on a DWDM port, use the **admin-state** command in DWDM configuration mode. To return the administration state from a DWDM port to the default, use the **no** form of this command.

admin-state {in-service| out-of-service}

no admin-state {in-service| out-of-service}

Syntax Description

in-service	Places the DWDM port in In Service (IS) state, to support all normal operation.
out-of-service	Places the DWDM port in Out of Service (OOS) state. The laser is turned off and all traffic flow is stopped. This is the default.

Command Default

Out-of-service is the default transport administration state.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you configure **admin-state out-of-service**, the DWDM port is placed in OOS state. The laser is turned off, traffic flow is stopped, and proactive protection is disabled. However, configuration changes can still be made on the port.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to turn on the laser and place a DWDM port in In Service (IS) state:

**Note**

This is a required configuration. The DWDM cards will not operate without this configuration.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/1
RP/0/RSP0/CPU0:router(config-dwdm)# admin-state in-service
RP/0/RSP0/CPU0:router(config-dwdm)# commit
```

The following example shows how to stop all operation on a DWDM port:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/1
RP/0/RSP0/CPU0:router(config-dwdm)# admin-state out-of-service
```

controller dwdm

To configure a DWDM controller, use the **controller dwdm** command in global configuration mode. To return to the default state, use the **no** form of this command.

controller dwdm *interface-path-id*

no controller dwdm *interface-path-id*

Syntax Description

interface-path-id Physical interface or virtual interface.

Note Use the **show interfaces** command to see a list of all interfaces currently configured on the router.

For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
dwdm	read, write
interface	read, write
sonet-sdh	read, write

Examples

The following example shows how to configure a DWDM controller in slot 6:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/6/0/0
```

Related Commands

Command	Description
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

g709 bdi-to-client-gais

To insert a Generic Alarm Indication Signal (GAIS) pattern to client on the detection of a backward defect indication (BDI), use the **g709 bdi-to-client-gais** command in DWDM configuration mode. To disable this feature, use the **no** form of this command.

g709 bdi-to-client-gais

no g709 bdi-to-client-gais

Syntax Description This command has no keywords or arguments.

Command Default By default, no GAIS to client is inserted.

Command Modes DWDM configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	dwdm	read, write

Examples The following example shows how to configure sending a Generic Alarm Indication Signal (GAIS) pattern signal to client when a BDI is received:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/6/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# g709 bdi-to-client-gais
```

Related Commands	Command	Description
	show controller dwdm , on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

g709 fec

To configure the Forward Error Correction (FEC) mode for the DWDM controller, use the **g709 fec** command in DWDM configuration mode. To return to the default state, use the **no** form of this command.

g709 fec {[**disable**]| **enhanced**| **standard**| **kuy var**}

no g709 fec {**disable**| **enhanced**| **standard**}

Syntax Description

disable	Disables FEC.
enhanced	Enables ITU-T G.975.1 I.4 FEC.
standard	Enables standard FEC mode. This is the default.

Command Default

Standard FEC mode is enabled by default.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

The enhanced FEC mode supported on the Cisco CRS Router (ITU-T G.975.1 I.7) and the Cisco ASR 9000 Series Router (ITU-T G.975.1 I.4) are different and therefore, incompatible. To support interoperability of DWDM between these routers, standard FEC must be configured.

The **g709 fec** command can be used only when the DWDM controller port is in the out-of-service administrative state. You stop operation using the **admin-state out-of-service** command.

The G.709 wrapper must be enabled to enable forward error correction (FEC) mode on the controller.

Standard FEC is the default mode; therefore, if you use the **no g709 fec** command, standard FEC is used.

To display the FEC mode, use the **show controller dwdm** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to configure the FEC mode on a DWDM controller:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/6/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# admin-state out-of-service
RP/0/RSP0/CPU0:router(config-dwdm)# commit

RP/0/RSP0/CPU0:router(config-dwdm)# g709 fec standard
RP/0/RSP0/CPU0:router(config-dwdm)# commit
RP/0/RSP0/CPU0:router(config-dwdm)# admin-state in-service
RP/0/RSP0/CPU0:router(config-dwdm)# commit
```

Related Commands

Command	Description
admin-state, on page 75	Configures the transport administration state on a DWDM port.
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.
g709 bdi-to-client-gais, on page 79	Inserts a GAIS pattern to client on the detection of a BDI.

g709 odu overhead tti

To configure the Trail Trace Identifier (TTI) level for an Optical Channel Data Unit (ODU), use the **g709 odu overhead tti** command in DWDM configuration mode. To return to the default, use the **no** form of this command.

g709 odu overhead tti {expected| sent} {ascii| hex} *tti-string*

no g709 odu overhead tti {expected| sent} {ascii| hex} *tti-string*

Syntax Description

expected	Configures the expected TTI string.
sent	Configures the transmit TTI string.
ascii	Indicates that the string is in ASCII format.
hex	Indicates that the string is in hexadecimal format.
tti-string	The TTI level string. You can configure the TTI level string in ASCII string format or hexadecimal format. The ASCII text string can be a maximum of 64 characters. The hexadecimal string length must be an even number and can be a maximum of 128 bytes.

Command Default

No TTI level string is configured.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to configure the expected TTI string:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# g709 odu overhead tti expected test OTU 5678
```

Related Commands

Command	Description
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

g709 odu report disable

To disable the logging of selected Optical Channel Data Unit (ODU) alarms to the console for a DWDM controller, use the **g709 odu report disable** command in DWDM configuration mode. To return to the default state, use the **no** form of this command.

g709 odu report {ais| bdi| lck| oci| ptim| tim} disable

no g709 odu report {ais| bdi| lck| oci| ptim| tim} disable

Syntax Description

ais	Alarm indication signal reporting status.
bdi	Backward defect indication reporting status.
lck	Upstream connection locked reporting status.
oci	Open connection indication error reporting status.
ptim	Payload type identifier mismatch reporting status.
tim	Set Trace Identifier Mismatch reporting status.

Command Default

Reporting is enabled for all keywords.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to disable ODU reporting for OCI:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/0/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# g709 odu report oci disable
```

Related Commands

Command	Description
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

g709 otu overhead tti

To configure the OTU Trail Trace Identifier (TTI) buffer for a DWDM controller, use the **g709 otu overhead tti** command in DWDM configuration mode. To return to the default state, use the **no** form of this command.

g709 otu overhead tti {expected| sent} {ascii| hex} *tti-string*

no g709 otu overhead tti {expected| sent} {ascii| hex} *tti-string*

Syntax Description

expected	Configures the expected TTI string.
sent	Configures the transmit TTI string.
ascii	Indicates that the string is in ASCII format.
hex	Indicates that the string is in hexadecimal format.
tti-string	The TTI string. A maximum of 64 characters is allowed.

Command Default

No TTI string is configured

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To display the TTI strings, use the **show controller dwdm g709** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to configure the expected TTI string:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/0/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# g709 otu overhead tti expected test OTU 5678
```

Related Commands

Command	Description
show controller dwdm , on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

g709 otu report disable

To disable the logging of selected Optical Channel Transport Unit (OTU) alarms to the console for a DWDM controller, use the **g709 otu report disable** command in DWDM configuration mode. To return to the default state, use the **no** form of this command.

g709 otu report {bdi| fecmismatch| iae| lof| lom| los| sd-ber| sf-ber| tim} disable

no g709 otu report {bdi| fecmismatch| iae| lof| lom| los| sd-ber| sf-ber| tim} disable

Syntax Description

bdi	Backward defect indication reporting status.
fecmismatch	FEC mismatch alarm reporting status.
iae	Incoming alignment error reporting status.
lof	OTU loss of frame reporting status.
lom	Loss of multiple frame reporting status.
los	Loss of signal reporting status.
sd-ber	SM bit error rate (BER) is in excess of the signal degradation BER threshold.
sf-ber	SM BER is in excess of the signal failure BER threshold.
tim	Trace Identifier Mismatch reporting status.

Command Default

Reporting is enabled for all keywords.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to disable OTU reporting for IAE:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/0/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# g709 otu report iae disable
```

Related Commands

Command	Description
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

g709 otu threshold

To configure thresholds for selected Optical Channel Transport Unit (OTU) bit error rate (BER) alarms, use the **g709 otu threshold** command in DWDM configuration mode. To return to the default state, use the **no** form of this command.

g709 otu threshold {sd-ber| sf-ber} bit-error-rate

no g709 otu threshold {sd-ber| sf-ber} bit-error-rate

Syntax Description

sd-ber <i>bit-error-rate</i>	Signal degradation bit error rate (BER) in the range 1 to 9, where <i>bit-error-rate</i> specifies a negative exponent of base 10 ($10^{-bit-error-rate}$). The default is 6 (10^{-6}).
sf-ber <i>bit-error-rate</i>	Signal failure BER above threshold in the range 1 to 9, where <i>bit-error-rate</i> specifies a negative exponent of base 10 ($10^{-bit-error-rate}$). The default is 3 (10^{-3}).

Command Default

The default bit error rate for **sd-ber** is 6.

The default bit error rate for **sf-ber** is 3.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to set the signal fail BER rate to be 5:

```
RP/0/RSP0/CPU0:router (config) # controller dwdm 0/0/0/0
```



```
RP/0/RSP0/CPU0:router(config-dwdm)# g709 otu threshold sf-ber 5
```

Related Commands

Command	Description
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

g709 tim-to-client-gais

To insert a Generic Alarm Indication Signal (GAIS) on the client side when a Trace Identifier Mismatch (TIM) is detected, use the **g709 tim-to-client-gais** command in DWDM configuration mode. To disable this feature, use the **no** form of this command.

g709 tim-to-client-gais

no g709 tim-to-client-gais

Syntax Description This command has no keywords or arguments.

Command Default By default, no GAIS to client is inserted.

Command Modes DWDM configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	dwdm	read, write

Examples The following example shows how to configure a GAIS to client when a TIM is received:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# g709 tim-to-client-gais
```

Related Commands	Command	Description
	show controller dwdm , on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

g709 tti-processing

To enable Trace Identifier Mismatch (TIM) alarms, use the **g709 tti-processing** command in DWDM configuration mode. To disable TIM alarms, use the **no** form of this command.

g709 tti-processing

no g709 tti-processing

Syntax Description This command has no keywords or arguments.

Command Default By default, trace identifier mismatch (TIM) alarms are disabled.

Command Modes DWDM configuration

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

Trace identifier mismatch (TIM) alarms can be set only when TTI processing is enabled.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to configure the expected TTI string:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# g709 tti-processing
```

Related Commands

Command	Description
show controller dwdm , on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

log signal

To enable 10 millisecond proactive monitoring of Forward Error Correction-Fast Re-Route (FEC-FRR), use the **log signal** command in DWDM configuration mode. To disable proactive monitoring, use the no form of this command.

log signal *file-name*

no log signal *file-name*

Syntax Description

<i>file-name</i>	Specifies the name of the log file.

Command Default

No default behavior or values

Command Modes

DWDM configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The proactive feature is used to trigger Forward Error Correction-Fast Re-Route (FEC-FRR).

To see the proactive status, use the **show controller dwdm proactive status** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to enable 10 millisecond proactive monitoring of Forward Error Correction-Fast Re-Route (FEC-FRR).

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/1
RP/0/RSP0/CPU0:router(config-dwdm)# log signal LogFile1
```

Related Commands

Command	Description
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

loopback (DWDM)

To configure the DWDM controller for loopback mode, use the **loopback** command in DWDM configuration mode. To remove the loopback DWDM command from the configuration file, use the **no** form of this command.

loopback {internal| line}

no loopback {internal| line}

Syntax Description

internal	Specifies that all the packets be looped back to the router.
line	Specifies that the incoming network packets be looped back to the DWDM network.

Command Default

This command is disabled by default.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The DWDM controller supports two loopback operation modes for diagnostic purposes: internal and line. The terminal (internal) loopback mode allows the received data from the Layer 2 Framer (for example, a SONET/SDH framer for POS or Ethernet MAC for 10GE) of the PLIM to be looped back to the ingress side of the Framer. This allows the packets to be looped back to the PLIM. The line loopback mode allows the received trunk/DWDM line Rx to be connected to the trunk/DWDM line Tx towards the line. This is used for line diagnostics.

Task ID

Task ID	Operations
dwdm	read, write

Examples

In the following example, all packets are looped back to the DWDM controller:

```
RP/0/RSP0/CPU0:router (config) # controller dwdm 0/0/0/0
```

```
RP/0/RSP0/CPU0:router(config-dwdm)# loopback internal
```

network connection id

To configure a connection identifier for the Multi Service Transport Protocol (MSTP), use the **network connection id** command in DWDM configuration mode. To remove a connection identifier, use the no form of this command.

network connection id *id-number*

no network connection id *id-number*

Syntax Description

id-number	Connection identifier.

Command Default

No default behavior or values

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to configure a connection identifier for the Multi Service Transport Protocol (MSTP).

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/1
RP/0/RSP0/CPU0:router(config-dwdm)# network connection id 1/1/1/1
```


Related Commands

Command	Description
network port id, on page 100	Assigns an identifier number to a port for the MSTP.

network port id

To assign an identifier number to a port for the Multi Service Transport Protocol (MSTP), use the **network port id** command in DWDM configuration mode. To remove an identifier number from a port, use the no form of this command.

network port id *id-number*

no network port id *id-number*

Syntax Description

id-number	Port identifier.

Command Default

No default behavior or values

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to assign an identifier number to a port for the Multi Service Transport Protocol (MSTP):

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/1
RP/0/RSP0/CPU0:router(config-dwdm)# network port id 1/0/1/1
```

Related Commands

Command	Description
network connection id, on page 98	Configures a connection identifier for the MSTP.

pm fec report enable

To enable Threshold Crossing Alert (TCA) generation for FEC, use the **pm fec report enable** command in DWDM configuration mode. To disable TCAs, use the **no** form of this command.

pm {15-min| 24-hour} fec report {ec-bits| uc-words} enable

no pm {15-min| 24-hour} fec report {ec-bits| uc-words} enable

Syntax Description

15-min	Configures the TCA generation for 15-minute intervals.
24-hour	Configures TCA generation for 24-hour intervals.
ec-bits	Bit errors corrected (BIEC). Indicates the number of bit errors corrected in the DWDM trunk line during the performance monitoring time interval.
uc-words	Uncorrectable words. This is the number of uncorrectable words detected in the DWDM trunk line during the performance monitoring time interval.

Command Default

TCA is not enabled.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To display FEC performance measurement information, use the **show controller dwdm pm fec** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to enable TCAs in FEC reporting for uncorrectable words:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/0/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# pm 15-min fec report uc-words enable
```

Related Commands

Command	Description
show controller dwdm , on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

pm fec threshold

To configure performance monitoring thresholds on the FEC layer, use the **pm fec threshold** command in DWDM configuration mode. To return to the default state, use the **no** form of this command.

pm {15-min| 24-hour} **fec threshold** {ec-bits| uc-words} *threshold*

no pm {15-min| 24-hour} **fec threshold** {ec-bits| uc-words} *threshold*

Syntax Description

15-min	Configures the performance monitoring thresholds for 15-minute intervals.
24-hour	Configures performance monitoring thresholds for 24-hour intervals.
ec-bits	Bit errors corrected (BIEC). Indicates the number of bit errors corrected in the DWDM trunk line during the performance monitoring time interval.
uc-words	Uncorrectable Words. This is the number of uncorrectable words detected in the DWDM trunk line during the performance monitoring time interval.
threshold	Threshold for the performance monitoring parameter in the range 1–4294967295.

Command Default

No threshold is configured.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To display performance measurement information for the FEC layer, use the **show controller dwdm pm fec** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to configure an FEC layer performance monitoring threshold for uncorrectable words:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/0/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# pm 15-min fec threshold uc-words 2000000
```

Related Commands

Command	Description
show controller dwdm pm, on page 132	Displays performance monitoring information for a DWDM controller.

pm optics report enable

To enable Threshold Crossing Alert (TCA) generation on the optics layer, use the **pm optics report enable** command in DWDM configuration mode. To disable TCA reporting, use the **no** form of this command.

pm {15-min| 24-hour} optics report {lbc| opr| opt} {max-tca| min-tca} enable

no pm {15-min| 24-hour} optics report {lbc| opr| opt} {max-tca| min-tca} enable

Syntax Description

15-min	Configures TCA generation for 15-minute intervals.
24-hour	Configures TCA generation for 24-hour intervals.
lbc	Laser bias current.
opr	Optical power on the unidirectional port.
opt	Transmit optical power in dBm.
max-tca	Indicates that the maximum value of the parameter is compared against the threshold to determine if a TCA should be generated.
min-tca	Indicates that the minimum value of the parameter is compared against the threshold to determine if a TCA should be generated.

Command Default

TCA reporting is not enabled.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To display performance monitoring information for the optics, use the **show controller dwdm pm optics** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to enable TCA reporting on the optics layer reporting for the maximum OPT:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/0/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# pm 15-min optics report opt max-tca enable
```

Related Commands

Command	Description
show controller dwdm pm, on page 132	Displays performance monitoring information for a DWDM controller.

pm optics threshold

To configure performance monitoring thresholds on the optics layer, use the **pm optics threshold** command in DWDM configuration mode. To return to the default state, use the **no** form of this command.

pm {15-min| 24-hour} optics threshold {lbc| opr| opt} {max| min} *threshold*

no pm {15-min| 24-hour} optics threshold {lbc| opr| opt} {max| min} *threshold*

Syntax Description

15-min	Configures the performance monitoring thresholds for 15-minute intervals.
24-hour	Configures performance monitoring thresholds for 24-hour intervals.
lbc	Laser bias current.
opr	Optical power on the unidirectional port.
opt	Transmit optical power in dBm.
max	Indicates that the <i>threshold</i> is for the maximum value of the parameter.
min	Indicates that the <i>threshold</i> is for the minimum value of the parameter.
threshold	Threshold for the performance monitoring parameter.

Command Default

No thresholds are configured.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To display performance monitoring information for the optics layer, use the **show controller dwdm pm optics** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to configure an optics layer performance monitoring threshold for maximum OPT:

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/0/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# pm 15-min optics threshold opt max 2000000
```

Related Commands

Command	Description
show controller dwdm pm, on page 132	Displays performance monitoring information for a DWDM controller.

pm otn report enable

To enable Threshold Crossing Alert (TCA) generation on the Optical Transport Network (OTN) layer, use the **pm otn report enable** command in DWDM configuration mode. To disable TCA reporting, use the **no** form of this command.

pm {15-min| 24-hour} otn report *otn-parameter* enable

no pm {15-min| 24-hour} otn report *otn-parameter* enable

Syntax Description

15-min	Configures TCA generation for 15-minute intervals.
24-hour	Configures TCA generation for 24-hour intervals.
otn-parameter	Specific parameter for which to configure the threshold. OTN parameters can be as follows: • bbe-pm-fe—Far-end path monitoring background block errors (BBE-PM). Indicates the number of background block errors recorded in the optical transport network (OTN) path during the performance monitoring time interval. • bbe-pm-ne—Near-end path monitoring background block errors (BBE-PM). • bbe-sm-fe—Far-end section monitoring background block errors (BBE-SM). Indicates the number of background block errors recorded in the OTN section during the performance monitoring time interval. • bbe-sm-ne—Near-end section monitoring background block errors (BBE-SM). • bber-pm-fe—Far-end path monitoring background block errors ratio (BBER-PM). Indicates the background block errors ratio recorded in the OTN path during the performance monitoring time interval. • bber-pm-ne—Near-end path monitoring background block errors ratio (BBER-PM). • bber-sm-fe—Far-end section monitoring background block errors ratio (BBER-SM). Indicates the background block errors ratio recorded in the OTN section during the performance monitoring time interval. • bber-sm-ne—Near-end section monitoring background block errors ratio (BBER-SM). • es-pm-fe—Far-end path monitoring errored seconds (ES-PM). Indicates the errored seconds recorded in the OTN path during the performance monitoring time interval. • es-pm-ne—Near-end path monitoring errored seconds (ES-PM). • es-sm-fe—Far-end section monitoring errored seconds (ES-SM). Indicates the errored seconds recorded in the OTN section during the performance monitoring time interval. • es-sm-ne—Near-end section monitoring errored seconds (ES-SM). • esr-pm-fe—Far-end path monitoring errored seconds ratio (ESR-PM). Indicates the errored seconds ratio recorded in the OTN path during the performance monitoring time interval.

-
- **esr-pm-ne**—Near-end path monitoring errored seconds ratio (ESR-PM).
 - **esr-sm-fe**—Far-end section monitoring errored seconds ratio (ESR-SM). Indicates the errored seconds ratio recorded in the OTN section during the performance monitoring time interval.
 - **esr-sm-ne**—Near-end section monitoring errored seconds ratio (ESR-SM).
 - **fc-pm-fe**—Far-end path monitoring failure counts (FC-PM). Indicates the failure counts recorded in the OTN path during the performance monitoring time interval.
 - **fc-pm-ne**—Near-end path monitoring failure counts (FC-PM).
 - **fc-sm-fe**—Far-end section monitoring failure counts (FC-SM). Indicates the failure counts recorded in the OTN section during the performance monitoring time interval.
 - **fc-sm-ne**—Near-end section monitoring failure counts (FC-SM).
 - **ses-pm-fe**—Far-end path monitoring severely errored seconds (SES-PM). Indicates the severely errored seconds recorded in the OTN path during the performance monitoring time interval.
 - **ses-pm-ne**—Far-end path monitoring severely errored seconds (SES-PM).
 - **ses-sm-fe**—Far-end section monitoring severely errored seconds (SES-SM). Indicates the severely errored seconds recorded in the OTN section during the performance monitoring time interval.
 - **ses-sm-ne**—Near-end section monitoring severely errored seconds (SES-SM).
 - **sesr-pm-fe**—Far-end path monitoring severely errored seconds ratio (SESR-PM). Indicates the severely errored seconds ratio recorded in the OTN path during the performance monitoring time interval.
 - **sesr-pm-ne**—Near-end path monitoring severely errored seconds ratio (SESR-PM).
 - **sesr-sm-fe**—Far-end section monitoring severely errored seconds ratio (SESR-SM). Indicates the severely errored seconds ratio recorded in the OTN section during the performance monitoring time interval.
 - **sesr-sm-ne**—Near-end section monitoring severely errored seconds ratio (SESR-SM).
 - **uas-pm-fe**—Far-end path monitoring unavailable seconds (UAS-PM). Indicates the unavailable seconds recorded in the OTN path during the performance monitoring time interval.
 - **uas-pm-ne**—Near-end path monitoring unavailable seconds (UAS-PM).
 - **uas-sm-fe**—Far-end section monitoring unavailable seconds (UAS-SM). Indicates the unavailable seconds recorded in the OTN section during the performance monitoring time interval.
 - **uas-sm-ne**—Near-end section monitoring unavailable seconds (UAS-SM).
-

Command Default

TCA generation is not enabled.

Command Modes

DWDM configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To display performance measurement information for the OTN layer, use the **show controller dwdm pm otn** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to enable TCA generation on the OTN layer reporting for the path monitoring errored seconds ratio (ESR-PM):

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/0/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# pm 15-min otn report esr-pm-fe enable
```

Related Commands

Command	Description
show controller dwdm pm, on page 132	Displays performance monitoring information for a DWDM controller.

pm otn threshold

To configure performance monitoring thresholds on the optical transport network (OTN) layer, use the **pm otn threshold** command in DWDM configuration mode. To disable TCA reporting, use the **no** form of this command.

pm {15-min| 24-hour} otn threshold *otn-parameter* enable

no pm {15-min| 24-hour} otn threshold *otn-parameter* enable

Syntax Description

15-min	Configures performance monitoring thresholds for 15-minute intervals.
24-hour	Configures performance monitoring thresholds for 24-hour intervals.
otn-parameter	Specific parameter for which to configure the threshold. OTN parameters can be as follows: • bbe-pm-fe—Far-end path monitoring background block errors (BBE-PM). Indicates the number of background block errors recorded in the optical transport network (OTN) path during the performance monitoring time interval. • bbe-pm-ne—Near-end path monitoring background block errors (BBE-PM). • bbe-sm-fe—Far-end section monitoring background block errors (BBE-SM). Indicates the number of background block errors recorded in the OTN section during the performance monitoring time interval. • bbe-sm-ne—Near-end section monitoring background block errors (BBE-SM). • bber-pm-fe—Far-end path monitoring background block errors ratio (BBER-PM). Indicates the background block errors ratio recorded in the OTN path during the performance monitoring time interval. • bber-pm-ne—Near-end path monitoring background block errors ratio (BBER-PM). • bber-sm-fe—Far-end section monitoring background block errors ratio (BBER-SM). Indicates the background block errors ratio recorded in the OTN section during the performance monitoring time interval. • bber-sm-ne—Near-end section monitoring background block errors ratio (BBER-SM). • es-pm-fe—Far-end path monitoring errored seconds (ES-PM). Indicates the errored seconds recorded in the OTN path during the performance monitoring time interval. • es-pm-ne—Near-end path monitoring errored seconds (ES-PM). • es-sm-fe—Far-end section monitoring errored seconds (ES-SM). Indicates the errored seconds recorded in the OTN section during the performance monitoring time interval. • es-sm-ne—Near-end section monitoring errored seconds (ES-SM).

-
- **esr-pm-fe**—Far-end path monitoring errored seconds ratio (ESR-PM). Indicates the errored seconds ratio recorded in the OTN path during the performance monitoring time interval.
 - **esr-pm-ne**—Near-end path monitoring errored seconds ratio (ESR-PM).
 - **esr-sm-fe**—Far-end section monitoring errored seconds ratio (ESR-SM). Indicates the errored seconds ratio recorded in the OTN section during the performance monitoring time interval.
 - **esr-sm-ne**—Near-end section monitoring errored seconds ratio (ESR-SM).
 - **fc-pm-fe**—Far-end path monitoring failure counts (FC-PM). Indicates the failure counts recorded in the OTN path during the performance monitoring time interval.
 - **fc-pm-ne**—Near-end path monitoring failure counts (FC-PM).
 - **fc-sm-fe**—Far-end section monitoring failure counts (FC-SM). Indicates the failure counts recorded in the OTN section during the performance monitoring time interval.
 - **fc-sm-ne**—Near-end section monitoring failure counts (FC-SM).
 - **ses-pm-fe**—Far-end path monitoring severely errored seconds (SES-PM). Indicates the severely errored seconds recorded in the OTN path during the performance monitoring time interval.
 - **ses-pm-ne**—Far-end path monitoring severely errored seconds (SES-PM).
 - **ses-sm-fe**—Far-end section monitoring severely errored seconds (SES-SM). Indicates the severely errored seconds recorded in the OTN section during the performance monitoring time interval.
 - **ses-sm-ne**—Near-end section monitoring severely errored seconds (SES-SM).
 - **sesr-pm-fe**—Far-end path monitoring severely errored seconds ratio (SESR-PM). Indicates the severely errored seconds ratio recorded in the OTN path during the performance monitoring time interval.
 - **sesr-pm-ne**—Near-end path monitoring severely errored seconds ratio (SESR-PM).
 - **sesr-sm-fe**—Far-end section monitoring severely errored seconds ratio (SESR-SM). Indicates the severely errored seconds ratio recorded in the OTN section during the performance monitoring time interval.
 - **sesr-sm-ne**—Near-end section monitoring severely errored seconds ratio (SESR-SM).
 - **uas-pm-fe**—Far-end path monitoring unavailable seconds (UAS-PM). Indicates the unavailable seconds recorded in the OTN path during the performance monitoring time interval.
 - **uas-pm-ne**—Near-end path monitoring unavailable seconds (UAS-PM).
-
- **uas-sm-fe**—Far-end section monitoring unavailable seconds (UAS-SM). Indicates the unavailable seconds recorded in the OTN section during the performance monitoring time interval.
 - **uas-sm-ne**—Near-end section monitoring unavailable seconds (UAS-SM).
-

threshold Threshold for the performance monitoring parameter.

Command Default No thresholds are configured.

Command Modes DWDM configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To display performance measurement information for the OTN layer, use the **show controller dwdm pm otn** command.

Task ID	Task ID	Operations
	dwdm	read, write

Examples

The following example shows how to configure an OTN layer performance monitoring threshold for path monitoring errored seconds ratio (ESR-PM):

```
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/0/0/0
RP/0/RSP0/CPU0:router(config-dwdm)# pm 15-min otn threshold esr-pm-ne 500000
```

Related Commands	Command	Description
	show controller dwdm pm, on page 132	Displays performance monitoring information for a DWDM controller.

proactive

To enable automatic triggering of Forward Error Correction-Fast Re-Route (FEC-FRR), use the **proactive** command in DWDM configuration mode. To disable automatic triggering, use the no form of this command.

proactive

Syntax Description

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

DWDM configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The proactive feature is used to trigger Forward Error Correction-Fast Re-Route (FEC-FRR).

To see the proactive status, use the **show controller dwdm proactive status** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to enable automatic triggering of Forward Error Correction-Fast Re-Route (FEC-FRR):

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/1
RP/0/RSP0/CPU0:router(config-dwdm)# proactive
```

Related Commands

Command	Description
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

proactive revert threshold

To configure the revert threshold to trigger reverting from the Forward Error Correction-Fast Re-Route (FEC-FRR) route back to the original route, use the **proactive revert threshold** command in DWDM configuration mode. To remove the revert threshold, use the no form of this command.

proactive revert threshold *x-coefficient y-power*

no proactive revert threshold *x-coefficient y-power*

Syntax Description

x-coefficient	Bit error rate coefficient (x of xE-y) . The range is 1 to 9. Default is 1.
y-power	Bit error rate exponent (y of xE-y). The range is 3 to 9.

Command Default

No default behavior or values

Command Modes

DWDM configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The proactive feature is used to trigger Forward Error Correction-Fast Re-Route (FEC-FRR).

To see the proactive status, use the **show controller dwdm proactive status** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to configure the revert threshold for FEC-FRR:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/1
RP/0/RSP0/CPU0:router(config-dwdm)# proactive revert threshold 1 9
```

 proactive revert threshold**Related Commands**

Command	Description
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

proactive revert window

To configure the revert window in which reverting from the Forward Error Correction-Fast Re-Route (FEC-FRR) route back to the original route is triggered, use the **proactive revert window** command in DWDM configuration mode. To remove the revert window, use the no form of this command.

proactive revert window *window*

no proactive revert window *window*

Syntax Description	<table> <tr> <td>window</td><td>The length of time (in milliseconds) of the window in which reverting from FEC-FRR may be triggered. The range is 2000 to 100000.</td></tr> </table>	window	The length of time (in milliseconds) of the window in which reverting from FEC-FRR may be triggered. The range is 2000 to 100000.
window	The length of time (in milliseconds) of the window in which reverting from FEC-FRR may be triggered. The range is 2000 to 100000.		

Command Default	No default behavior or values

Command Modes	DWDM configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The proactive feature is used to trigger Forward Error Correction-Fast Re-Route (FEC-FRR).

To see the proactive status, use the **show controller dwdm proactive status** command.

Task ID	Task ID	Operations
	dwdm	read, write

Examples	The following example shows how to configure the window in which reverting from FEC-FRR may be triggered:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/1
RP/0/RSP0/CPU0:router(config-dwdm)# proactive revert window 100000
```

Related Commands

Command	Description
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

proactive trigger threshold

To configure the trigger threshold of Forward Error Correction-Fast Re-Route (FEC-FRR), use the **proactive trigger threshold** command in DWDM configuration mode. To remove the trigger threshold, use the no form of this command.

proactive trigger threshold *x-coefficient y-power*

no proactive trigger threshold *x-coefficient y-power*

Syntax Description

x-coefficient	Bit error rate coefficient (x of xE-y) . The range is 1 to 9. Default is 1.
y-power	Bit error rate exponent (y of xE-y). The range is 3 to 9.

Command Default

No default behavior or values

Command Modes

DWDM configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The proactive feature is used to trigger Forward Error Correction-Fast Re-Route (FEC-FRR).

To see the proactive status, use the **show controller dwdm proactive status** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to configure the trigger threshold of Forward Error Correction-Fast Re-Route (FEC-FRR)

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/1
RP/0/RSP0/CPU0:router(config-dwdm)# proactive trigger threshold 1 9
```

 proactive trigger threshold**Related Commands**

Command	Description
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

proactive trigger window

To configure the trigger window (in milliseconds) in which Fast Re-Route may be triggered, use the **proactive trigger window** command in DWDM configuration mode. To remove the trigger window, use the no form of this command.

proactive trigger window *window*

no proactive trigger window *window*

Syntax Description

window	The length of time (in milliseconds) of the window in which FEC-FRR may be triggered. The range is 10 to 10000.

Command Default

No default behavior or values

Command Modes

DWDM configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The proactive feature is used to trigger Forward Error Correction-Fast Re-Route (FEC-FRR).

To see the proactive status, use the **show controller dwdm proactive status** command.

Task ID

Task ID	Operations
dwdm	read, write

Examples

The following example shows how to configure the trigger window (in milliseconds) in which triggering of Fast Re-Route may happen:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller dwdm 0/1/0/1
RP/0/RSP0/CPU0:router(config-dwdm)# proactive trigger window 10000
```

Related Commands

Command	Description
show controller dwdm, on page 125	Displays optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller.

show controller dwdm

To display optical parameters, G.709 alarms and counters, and register and module information for a DWDM controller, use the **show controller dwdm** command in EXEC mode.

show controller dwdm interface-path-id [g709 [registers]] log| optics [registers] tdc| wavelength-map]

Syntax Description

interface-path-id	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
g709	(Optional) Displays the G.709 Optical Transport Network (OTN) protocol alarms and counters for bit errors, along with the FEC statistics and threshold-based alerts.
log	(Optional) Displays information about signal logging.
optics	(Optional) Displays optical related information about the interface, such as output power level and wavelength.
registers	(Optional) For g709 , displays platform-specific OTN framer registers; for optics , displays transponder registers.
tdc	(Optional) Displays tunable dispersion compensator (TDC) information.
wavelength-map	(Optional) Displays the wavelength information.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
dwdm	read
interface	read
sonet-sdh	read

Examples

The following example shows sample output from the **show controllers dwdm g709** command:

```
RP/0/RSP0/CPU0:Router# show controller dwdm 0/5/0/0 g709
Thu Jul 1 18:34:20.052 UTC
```

G709 Status

OTU

```

      LOS = 0          LOF = 0          LOM = 0
      BDI = 0          IAE = 1          BIP = 0
      BEI = 0          TIM = 0
```

ODU

```

      AIS = 0          BDI = 0          OCI = 0
      LCK = 0          BIP = 0          BEI = 0
      PTIM = 0         TIM = 0
```

FEC Mode: Standard FEC (Default)

```

      EC(current second) = 0          EC = 0          UC = 0
      pre-FEC BER < 9.00E-11         Q > 6.45        Q Margin > 7.52
```

Remote FEC Mode: Standard FEC
FECMISMATCH = 0

Detected Alarms: None

Asserted Alarms: None

Alarm Reporting Enabled for: LOS LOF LOM IAE OTU-BDI OTU-TIM OTU_SF_BER OTU_SD_BER ODU-AIS
ODU-BDI O

CI LCK PTIM ODU-TIM FECMISMATCH

BER Thresholds: OTU-SF = E-3 OTU-SD = E-6

Connectivity Info

```

      Network Port ID: Not Configured
      Network Connection ID: Not Configured
```

```

OTU TTI Sent      String ASCII: Tx TTI Not Configured
OTU TTI Received String ASCII: Rx TTI Not Recieved
OTU TTI Expected String ASCII: Exp TTI Not Configured
```

```

ODU TTI Sent      String ASCII: Tx TTI Not Configured
ODU TTI Received String ASCII: Rx TTI Not Recieved
ODU TTI Expected String ASCII: Exp TTI Not Configured
```

This table describes selected fields from the **show controllers dwdm** command output.

Table 6: show controllers dwdm Command Output Field Descriptions

Field	Description
AIS	Number of alarm indication signal (AIS) alarms. AIS is a signal sent downstream as an indication that an upstream defect has been detected.
Alarm reporting enabled for	Lists the alarms that are enabled for reporting.
Asserted Alarms	Alarms indicated to be reported by the user.
BDI	Number of backward defect indication (BDI) alarms. The BDI is a single bit that conveys information regarding signal failure in the upstream direction.
BER thresholds	Values of the configured bit error rate thresholds.
BIP	Number of bit interleaved parity alarms. The BIP is comprised of one byte and is used for error detection. It is computed over the entire optical channel payload unit (OPU).
Controller State	Status of the controller.
Detected Alarms	Alarms detected by the hardware.
EC	Corrected code words. This is the number of words corrected by the FEC and is displayed as a per second rate.
FEC Mode	Indicates the forward error correction (FEC) mode for the controller. This can be Disabled, Enhanced FEC G.975.1 1.4, or Standard FEC (Default).
IAE	Number of incoming alignment errors (IAE).
LCK	Number of upstream connection locked alarms. LCK is a signal sent downstream as an indication that upstream the connection is locked, and no signal is passed through.
LOF	Number of OTU loss of frame (LOF) alarms.
LOM	Number of OTU loss of multiframe (LOM) alarms.
Loopback	Loopback status. Indicates whether or not loopback is enabled and the type of loopback enabled.

Field	Description
LOS	Number of OTU loss of signal (LOS) alarms. If the receive optical power is less than or equal to this defined threshold, the optical LOS alarm is raised.
OCI	Number of open connection indication alarms. OCI is a signal sent downstream as an indication that upstream the signal is not connected to a trail termination source.
ODU	Optical channel data unit alarms.
OTU	Optical transport unit overhead alarms.
OTU TTI Expected	Value of the expected TTI.
OTU TTI Received	Value of the received TTI.
OTU TTI Sent	Value of the transmit trail trace identifier (TTI).
PTIM	Number of payload type identifier mismatch alarms. This occurs when there is a mismatch between the way the ITU-T G.709 option is configured on the PLIM at each end of the optical span.
TDC Info	Tunable Dispersion Compensator (TDC) information.
Transport Admin State	Current status of the port as set by the admin-state command. Possible values are: IS (In-Service) and OOS (Out-of-Service).
UC	Uncorrectable code words. This is a raw counter.
Pre-FEC BER	Pre - bit error rate (BER) forward error correction (FEC). The pre-FEC BER is calculated using pre-forward error correction (FEC) error counts.
Q	The general signal quality bit error rate (BER) per voltage. The Q and Q margin are calculated using the Pre-FEC BER.
Q Margin	The general signal quality bit error rate (BER) per voltage. The Q and Q margin are calculated using the Pre-FEC BER.
Operational Mode	Indicates whether the tunable dispersion compensator (TDC) operational mode option is set to Auto or Manual.

Field	Description
Status	Indicates whether the tunable dispersion compensator (TDC) is in the acquiring state or locked state. The status is invalid if there is a major alarm.
Dispersion Setting	Indicates a value between –700 and +700 packets per second (pps). The dispersion setting is read from the optics module after the tunable dispersion compensator (TDC) has locked.
Reroute Control	Not used.
Reroute BER	Not used.

See [Table 7: show controllers dwdm optics Command Output Field Descriptions, on page 130](#) for a description of the optics fields.

The following example shows the output from the show controllers dwdm command with the **g709 registers** keywords:

```
RP/0/RSP0/CPU0:router# show controller dwdm 0/3/0/0 g709 registers
```

```

Addr          Name          Value
0x00800030    Serial[0]      0x30303130
0x00800034    Serial[1]      0x30353934
0x00800038    Serial[2]      0x0
0x0080003c    PartNum[0]     0x38303030
0x00800040    PartNum[1]     0x3034312d
0x00800044    PartNum[2]     0x30300010
0x00800048    PartNum[3]     0x0
0x0080004c    Version[0]     0x312e3041
0x00800050    Version[1]     0x6c706861
0x00800054    Version[2]     0x28423133
0x00800058    Version[3]     0x35290000
0x0080005c    Version[4]     0x0
0x00800060    Version[5]     0x0
0x0080002c    Band           0x0
0x0080001c    RefClock       0x0
0x00800020    Loopback       0x0
0x00800000    IntfStatus     0x5000000
0x00800004    ModEnable      0x1
0x0080000c    ModStatus      0x34010000
0x00800010    ModIntrMask    0x7c000000
0x00800014    ModIntr        0x0
0x00800100    TxLineStat     0x80
0x00800104    TxLineEvent    0x0
0x00800108    TxLineIntrMask 0xc1
0x00800114    TxOpticChan    0x1
0x00800118    Wavelength     0x1753c5
0x00800200    RxLineStat     0x8000
0x00800208    RxLineEventMask 0xffe3
0x00800204    RxLineEvent    0x0

```

The following example shows the output from the **show controllers dwdm** command with the **optics** keyword:

```
RP/0/RSP0/CPU0:router# show controllers dwdm 0/2/0/0 optics
Mon Jul 12 21:04:29.254 UTC
```

```
Optics Status
```

```
    Optics Type: 10GBASE-ZR,
```

Wavelength Info: C-Band, MSA ITU Channel= N/A, Frequency=192THz, Wavelength=1558nm

TX Power = 1.50 dBm
RX Power = -11.86 dBm

This table describes selected fields from the **show controllers dwdm** command output with the **optics** keyword.

Table 7: show controllers dwdm optics Command Output Field Descriptions

Field	Description
Optics Type	Indicates the optics type: GE or OC-768c/STM-256c DWDM.
Clock Source	Indicates whether the clock is internal or line.
Wavelength Band	Indicates the wavelength band: C-band or L-band.
MSA ITU Channel	Multi Source Agreement (MSA) ITU channel number.
Frequency	Frequency of the channel in terahertz.
Wavelength	Wavelength corresponding to the channel number in nanometers.
TX power	Value of the transmit power level.
RX Power	Actual optical power at the RX port.
RX LOS Threshold	Receive loss of signal threshold. If the receive optical power is less than or equal to this threshold, the optical LOS alarm is raised.

The following example shows sample output from the **show controllers dwdm** command with the **wavelength-map** keyword on a Gigabit Ethernet controller:

```
RP/0/RSP0/CPU0:router# show controller dwdm 0/5/0/3 wavelength-map
```

```
Wavelength band: C-band
MSA ITU channel range supported: 3~84
```

Wavelength map table

Channel Num	Frequency (THz)	Wavelength (nm)
03	196.00	1529.553
04	195.95	1529.944
05	195.90	1530.334
06	195.85	1530.725
07	195.80	1531.116
08	195.75	1531.507
09	195.70	1531.898

10	195.65	1532.290
11	195.60	1532.681
12	195.55	1533.073
13	195.50	1533.465
14	195.45	1533.858
15	195.40	1534.250
16	195.35	1534.643
17	195.30	1535.036
18	195.25	1535.429
19	195.20	1535.822
.		
.		

This table describes selected fields from the **show controllers dwdm** command output with the **wavelength-map** keyword.

Table 8: show controllers dwdm wavelength Command Output Field Descriptions

Field	Description
channel Num	Channel number.
frequency (THz)	Frequency of the wavelength in terahertz.
wavelength (nm)	Wavelength in nanometers.

Related Commands

Command	Description
admin-state , on page 75	Configures the transport administration state on a DWDM port.
show controller dwdm pm , on page 132	Displays performance monitoring information for a DWDM controller.

show controller dwdm pm

To display performance monitoring information for a DWDM controller, use the **show controller dwdm pm** command in EXEC mode.

show controller dwdm *instance* **pm history** [**15-min**|**24-hour**|**fec**|**optics**|**otn**]

show controller dwdm *instance* **pm interval** [**15-min**|**24-hour**][**fec**|**optics**|**otn**] *index*

Syntax Description

<i>instance</i>	Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. • <i>rack</i>: Chassis number of the rack. • <i>slot</i>: Physical slot number of the line card. • <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. Shared port adapters (SPAs) are referenced by their subslot number. • <i>port</i>: Physical port number of the interface. For more information about the syntax for the router, use the question mark (?) online help function.
<i>history</i>	Displays all performance monitoring data.
<i>interval</i>	Displays specific performance monitoring data in a particular interval.
<i>15-min</i>	Displays performance monitoring data in a 15-minute interval.
<i>24-hour</i>	Displays performance monitoring data in a 24-hour interval.
<i>fec</i>	Displays FEC performance parameters, such as bit errors corrected (BIEC) and uncorrectable words.
<i>optics</i>	Displays optics performance parameters, such as optical power.
<i>otn</i>	Displays OTN performance parameters, such as path monitoring failure counts (FC-PM) and section monitoring unavailable seconds (UAS-SM).
<i>index</i>	Interval for which to display the performance monitoring information.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
dwdm	read
interface	read
sonet-sdh	read

Examples

The following examples show sample output for a DWDM controller:

```
RP/0/RSP0/CPU0:Router# show controller dwdm 0/5/0/0 pm interval 15-min fec 0
Thu Jul 1 18:58:09.353 UTC
```

```
g709 FEC in the current interval [18:45:00 - 18:58:09 Thu Jul 1 2010]
  EC-BITS      : 0          Threshold : 0          TCA(enable)  : NO
  UC-WORDS     : 0          Threshold : 0          TCA(enable)  : NO
```

```
RP/0/RSP0/CPU0:Router# show controller dwdm 0/5/0/0 pm history 15-min
Thu Jul 1 18:59:04.585 UTC
```

```
g709 OTN in the current interval [18:45:00 - 18:59:04 Thu Jul 1 2010]
  ES-SM-NE      : 0          Threshold : -1          TCA(enable)  : NO
  ESR-SM-NE     : 0          Threshold : -1          TCA(enable)  : NO
  SES-SM-NE     : 0          Threshold : -1          TCA(enable)  : NO
  SESR-SM-NE    : 0          Threshold : -1          TCA(enable)  : NO
  UAS-SM-NE     : 0          Threshold : -1          TCA(enable)  : NO
  BBE-SM-NE     : 0          Threshold : -1          TCA(enable)  : NO
  BBER-SM-NE    : 0          Threshold : -1          TCA(enable)  : NO
  FC-SM-NE      : 0          Threshold : -1          TCA(enable)  : NO
  ES-PM-NE      : 0          Threshold : -1          TCA(enable)  : NO
  ESR-PM-NE     : 0          Threshold : -1          TCA(enable)  : NO
  SES-PM-NE     : 0          Threshold : -1          TCA(enable)  : NO
  SESR-PM-NE    : 0          Threshold : -1          TCA(enable)  : NO
  UAS-PM-NE     : 0          Threshold : -1          TCA(enable)  : NO
  BBE-PM-NE     : 0          Threshold : -1          TCA(enable)  : NO
  BBER-PM-NE    : 0          Threshold : -1          TCA(enable)  : NO
  FC-PM-NE      : 0          Threshold : -1          TCA(enable)  : NO

  ES-SM-FE      : 0          Threshold : -1          TCA(enable)  : NO
  ESR-SM-FE     : 0          Threshold : -1          TCA(enable)  : NO
  SES-SM-FE     : 0          Threshold : -1          TCA(enable)  : NO
  SESR-SM-FE    : 0          Threshold : -1          TCA(enable)  : NO
  UAS-SM-FE     : 0          Threshold : -1          TCA(enable)  : NO
  BBE-SM-FE     : 0          Threshold : -1          TCA(enable)  : NO
  BBER-SM-FE    : 0          Threshold : -1          TCA(enable)  : NO
  FC-SM-FE      : 0          Threshold : -1          TCA(enable)  : NO
```

show controller dwdm pm

```

ES-PM-FE      : 0          Threshold : -1          TCA(enable) : NO
ESR-PM-FE     : 0          Threshold : -1          TCA(enable) : NO
SES-PM-FE     : 0          Threshold : -1          TCA(enable) : NO
SESR-PM-FE    : 0          Threshold : -1          TCA(enable) : NO
UAS-PM-FE     : 0          Threshold : -1          TCA(enable) : NO
BBE-PM-FE     : 0          Threshold : -1          TCA(enable) : NO
BBER-PM-FE    : 0          Threshold : -1          TCA(enable) : NO
FC-PM-FE      : 0          Threshold : -1          TCA(enable) : NO

g709 FEC in the current interval [18:45:00 - 18:59:04 Thu Jul 1 2010]
  EC-BITS      : 0          Threshold : 0          TCA(enable) : NO
  UC-WORDS     : 0          Threshold : 0          TCA(enable) : NO

Optics in the current interval [18:45:00 - 18:59:04 Thu Jul 1 2010]
      MIN      AVG      MAX  Threshold  TCA  Threshold  TCA
      (min)    (enable) (max)    (enable)
LBC[mA ] : 17210 17542 17662      0      NO      0      NO
OPT[dBm] : -1.46 -1.46 -1.46    0.00      NO    0.00    NO
OPR[dBm] : -31.67 -31.66 -31.65 0.00      NO    0.00    NO

g709 OTN in interval 1 [18:30:00 - 18:45:00 Thu Jul 1 2010]
  ES-SM-NE : 0          ES-SM-FE : 0
  ESR-SM-NE : 0          ESR-SM-FE : 0
  SES-SM-NE : 0          SES-SM-FE : 0
  SESR-SM-NE : 0         SESR-SM-FE : 0
  UAS-SM-NE : 0          UAS-SM-FE : 0
  BBE-SM-NE : 0          BBE-SM-FE : 0
  BBER-SM-NE : 0         BBER-SM-FE : 0
  FC-SM-NE : 0          FC-SM-FE : 0
  ES-PM-NE : 0          ES-PM-FE : 0
  ESR-PM-NE : 0          ESR-PM-FE : 0
  SES-PM-NE : 0          SES-PM-FE : 0
  SESR-PM-NE : 0         SESR-PM-FE : 0
  UAS-PM-NE : 0          UAS-PM-FE : 0
  BBE-PM-NE : 0          BBE-PM-FE : 0
  BBER-PM-NE : 0         BBER-PM-FE : 0
  FC-PM-NE : 0          FC-PM-FE : 0

g709 FEC in interval 1 [18:30:00 - 18:45:00 Thu Jul 1 2010]
  EC-BITS      : 0          UC-WORDS : 0

Optics in interval 1 [18:30:00 - 18:45:00 Thu Jul 1 2010]
      MIN      AVG      MAX
LBC[mA ] : 17210 17526 17662
OPT[dBm] : -1.46 -1.46 -1.46
OPR[dBm] : -31.67 -31.67 -31.66

g709 OTN in interval 2 [18:15:00 - 18:30:00 Thu Jul 1 2010]
  ES-SM-NE : 0          ES-SM-FE : 0
  ESR-SM-NE : 0          ESR-SM-FE : 0
  SES-SM-NE : 0          SES-SM-FE : 0
  SESR-SM-NE : 0         SESR-SM-FE : 0
  UAS-SM-NE : 0          UAS-SM-FE : 0
  BBE-SM-NE : 0          BBE-SM-FE : 0
  BBER-SM-NE : 0         BBER-SM-FE : 0
.
.
.

```

This table describes selected fields from the **show controllers dwdm pm** command output.

Table 9: show controllers dwdm pm Command Output Field Descriptions

Field	Description
EC-BITS	Bit errors corrected (BIEC). Indicates the number of bit errors corrected in the DWDM trunk line during the performance monitoring time interval.
UC-WORDS	Uncorrectable words. This is the number of uncorrectable words detected in the DWDM trunk line during the performance monitoring time interval.
LBC	Laser bias current.
OPR	Optical power on the unidirectional port.
OPT	Transmit optical power in dBm.
MAX	Indicates the maximum value of the parameter.
AVG	Indicates the average value of the parameter
MIN	Indicates the minimum value of the parameter.
THRESHOLD	Indicates the parameter's configured threshold.
TCA	Indicates if TCA reporting is enabled or not.
BBE-PM-FE	Far-end path monitoring background block errors (BBE-PM)—Indicates the number of background block errors recorded in the optical transport network (OTN) path during the performance monitoring time interval.
BBE-PM-NE	Near-end path monitoring background block errors (BBE-PM).
BBE-SM-FE	Far-end section monitoring background block errors (BBE-SM)—Indicates the number of background block errors recorded in the OTN section during the performance monitoring time interval.
BBE-SM-NE	Near-end section monitoring background block errors (BBE-SM).
BBER-PM-FE	Far-end path monitoring background block errors ratio (BBER-PM)—Indicates the background block errors ratio recorded in the OTN path during the performance monitoring time interval.

Field	Description
BBER-PM-NE	Near-end path monitoring background block errors ratio (BBER-PM).
BBER-SM-FE	Far-end section monitoring background block errors ratio (BBER-SM)—Indicates the background block errors ratio recorded in the OTN section during the performance monitoring time interval.
BBER-SM-NE	Near-end section monitoring background block errors ratio (BBER-SM).
ES-PM-FE	Far-end path monitoring errored seconds (ES-PM)—Indicates the errored seconds recorded in the OTN path during the performance monitoring time interval.
ES-PM-NE	Near-end path monitoring errored seconds (ES-PM).
ES-SM-FE	Far-end section monitoring errored seconds (ES-SM)—Indicates the errored seconds recorded in the OTN section during the performance monitoring time interval.
ES-SM-NE	Near-end section monitoring errored seconds (ES-SM).
ESR-PM-FE	Far-end path monitoring errored seconds ratio (ESR-PM)—Indicates the errored seconds ratio recorded in the OTN path during the performance monitoring time interval.
ESR-PM-NE	Near-end path monitoring errored seconds ratio (ESR-PM).
ESR-SM-FE	Far-end section monitoring errored seconds ratio (ESR-SM)—Indicates the errored seconds ratio recorded in the OTN section during the performance monitoring time interval.
ESR-SM-NE	Near-end section monitoring errored seconds ratio (ESR-SM).
FC-PM-FE	Far-end path monitoring failure counts (FC-PM)—Indicates the failure counts recorded in the OTN path during the performance monitoring time interval.
FC-PM-NE	Near-end path monitoring failure counts (FC-PM).

Field	Description
FC-SM-FE	Far-end section monitoring failure counts (FC-SM)—Indicates the failure counts recorded in the OTN section during the performance monitoring time interval.
FC-SM-NE	Near-end section monitoring failure counts (FC-SM).
SES-PM-FE	Far-end path monitoring severely errored seconds (SES-PM)—Indicates the severely errored seconds recorded in the OTN path during the performance monitoring time interval.
SES-PM-NE	Near-end path monitoring severely errored seconds (SES-PM).
SES-SM-FE	Far-end section monitoring severely errored seconds (SES-SM)—Indicates the severely errored seconds recorded in the OTN section during the performance monitoring time interval.
SES-SM-NE	Near-end section monitoring severely errored seconds (SES-SM).
SESR-PM-FE	Far-end path monitoring severely errored seconds ratio (SESR-PM)—Indicates the severely errored seconds ratio recorded in the OTN path during the performance monitoring time interval.
SESR-PM-NE	Near-end path monitoring severely errored seconds ratio (SESR-PM).
SESR-SM-FE	Far-end section monitoring severely errored seconds ratio (SESR-SM)—Indicates the severely errored seconds ratio recorded in the OTN section during the performance monitoring time interval.
SESR-SM-NE	Near-end section monitoring severely errored seconds ratio (SESR-SM).
UAS-PM-FE	Far-end path monitoring unavailable seconds (UAS-PM)—Indicates the unavailable seconds recorded in the OTN path during the performance monitoring time interval.
UAS-PM-NE	Near-end path monitoring unavailable seconds (UAS-PM).

Field	Description
UAS-SM-FE	Far-end section monitoring unavailable seconds (UAS-SM)—Indicates the unavailable seconds recorded in the OTN section during the performance monitoring time interval.
UAS-SM-NE	Near-end section monitoring unavailable seconds (UAS-SM).



Diagnostics Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring diagnostics on your router.

- [diagnostic monitor, page 140](#)
- [diagnostic monitor interval, page 142](#)
- [diagnostic monitor syslog, page 144](#)
- [diagnostic monitor threshold, page 145](#)
- [diagnostic ondemand action-on-failure, page 147](#)
- [diagnostic ondemand iterations, page 149](#)
- [diagnostic schedule, page 150](#)
- [diagnostic start, page 152](#)
- [diagnostic stop, page 154](#)
- [show diag , page 156](#)
- [show diagnostic bootup level, page 160](#)
- [show diagnostic content, page 162](#)
- [show diagnostic ondemand settings, page 165](#)
- [show diagnostic result, page 166](#)
- [show diagnostic schedule, page 170](#)
- [show diagnostic status, page 172](#)

diagnostic monitor

To configure the health-monitoring diagnostic testing for a specified location, use the **diagnostic monitor** command in administration configuration mode. To remove the specified command from the configuration file and restore the system to its default condition, use the **no** form of this command.

diagnostic monitor location *node-id* **test** {*id* | *test-name*} [**disable**]

no diagnostic monitor location *node-id* **test** {*id* | *test-name*} [**disable**]

Syntax Description

node-id	Location to enable diagnostic monitoring. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
test { <i>id</i> <i>test-name</i> }	Specifies diagnostic test selection. The following test selections are available: • <i>id</i>—Test ID, as shown in the show diagnostic content command . • <i>test-name</i>—Name of the test.
disable	Disables diagnostic monitoring for a specified location.

Command Default

To view the default value for each test, use the **show diagnostic content** command when the diagnostic image is first installed. The default may be different for each test.

Command Modes

Administration configuration

Command History

Release	Modification
Release 3.4.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **diagnostic monitor** command to enable or disable health-monitoring diagnostic testing for a specified test at the specified location.

Use the **disable** keyword to disable a health-monitoring diagnostic test that is enabled by default. For example, if test 1 is enabled by default, the **disable** keyword disables the diagnostic test. If the **no** form of the command is used, the test is set to the default condition, which is enabled.

**Note**

To specify a node using the *node-id* argument, use the *rack/slot/module* notation. For example, 0/0/CPU0 is a fully qualified location specification for a line card, 0/2/CPU0 is a fully qualified location specification for a line card, 0/7/CPU0 is a fully qualified location specification for a line card, 0/RSP0/CPU0 is a fully qualified location specification for a Route Switch Processor, and 0/RSP0/CPU0 is also a fully qualified location specification for a Route Switch Processor.

Task ID

Task ID	Operations
diag	read, write

Examples

The following example shows how to enable health-monitoring diagnostic testing for 0/1/cpu0:

```
RP/0/RSP0/CPU0:router(admin-config) # diagnostic monitor location 0/1/cpu0 test 1
```

Related Commands

Command	Description
show diagnostic content, on page 162	Displays test information including test ID, test attributes, and supported coverage test levels for each test and for all components.

diagnostic monitor interval

To configure the health-monitoring diagnostic testing for a specified interval for a specified location, use the **diagnostic monitor interval** command in administration configuration mode. To remove the specified command from the configuration file and restore the system to its default condition, use the **no** form of this command.

diagnostic monitor interval location *node-id* **test** {*id* | *test-name*} *number-of-days* *hour* : *minutes* : *seconds* . *milliseconds*

no diagnostic monitor interval location *node-id* **test** {*id* | *test-name*} *number-of-days* *hour* : *minutes* : *seconds* . *milliseconds*

Syntax Description

location <i>node-id</i>	Specifies a location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
test { <i>id</i> <i>test-name</i> }	Specifies diagnostic test selection. The following test selections are available: • <i>id</i>—Test ID. • <i>test-name</i>—Test name , as shown in the show diagnostic content command..
<i>number-of-days</i> <i>hour:minutes:seconds.milliseconds</i>	Interval between each test run. The <i>number-of-days</i> argument specifies the number of days between testing. The <i>hour:minutes:seconds.milliseconds</i> argument specifies the interval, where <i>hour</i> is a number in the range from 0 through 23, <i>minutes</i> is a number in the range from 0 through 59, <i>seconds</i> is a number in the range from 0 through 59, and <i>milliseconds</i> is a number in the range from 0 through 999.

Command Default

To view the default value for each test, use the **show diagnostic content** command when the diagnostic image is first installed. The default may be different for each test.

Command Modes

Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **diagnostic monitor interval** command to set the health-monitoring interval of a specified test at the specified location. The **no** version of the command resets the interval to the default setting. The **diagnostic monitor** command is used to enable health-monitoring.

**Note**

To specify a node using the *node-id* argument, use the *rack/slot/module* notation. For example, 0/0/CPU0 is a fully qualified location specification for a line card, 0/2/CPU0 is a fully qualified location specification for a line card, 0/7/CPU0 is a fully qualified location specification for a line card, 0/RSP0/CPU0 is a fully qualified location specification for a Route Switch Processor, and 0/RSP0/CPU0 is also a fully qualified location specification for a Route Switch Processor.

Task ID

Task ID	Operations
diag	read, write

Examples

The following example shows how to set the health-monitoring diagnostic testing at an interval of 1 hour, 2 minutes, 3 seconds, and 4 milliseconds for 0/1/cpu0:

```
RP/0/RSP0/CPU0:router(admin-config)# diagnostic monitor interval location 0/1/cpu0 test 1
0 1:2:3.4
```

Related Commands

Command	Description
diagnostic monitor , on page 140	Configures the health-monitoring diagnostic testing for a specified location.
show diagnostic content , on page 162	Displays test information including test ID, test attributes, and supported coverage test levels for each test and for all components.

diagnostic monitor syslog

To enable the generation of a syslog message when any health monitoring test fails, use the **diagnostic monitor syslog** command in administration configuration mode. To remove the specified command from the configuration file and restore the system to its default condition, use the **no** form of this command.

diagnostic monitor syslog

no diagnostic monitor syslog

Syntax Description This command has no keywords or arguments.

Command Default Syslog is disabled.

Command Modes Administration configuration

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **diagnostic monitor syslog** command to enable the generation of a syslog message when a health-monitoring test fails.

Task ID	Operations
diag	read, write

Examples The following example shows how to enable the generation of syslog messages:

```
RP/0/RSP0/CPU0:router(admin-config)# diagnostic monitor syslog
```

Command	Description
show diagnostic content , on page 162	Displays test information including test ID, test attributes, and supported coverage test levels for each test and for all components.

diagnostic monitor threshold

To configure the health-monitoring diagnostic testing failure threshold, use the **diagnostic monitor threshold** command in administration configuration mode. To remove the specified command from the configuration file and restore the system to its default condition, use the **no** form of this command.

diagnostic monitor threshold location *node-id* **test** {*id* | *test-name*} **failure count** *failures*

no diagnostic monitor threshold location *node-id* **test** {*id* | *test-name*} **failure count** *failures*

Syntax Description

location <i>node-id</i>	Specifies a location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
test { <i>id</i> <i>test-name</i> }	Specifies diagnostic test selection. The following test selections are available: • <i>id</i>—Test ID. • <i>test-name</i>—Test name , as shown in the show diagnostic content command. .
failure count <i>failures</i>	Specifies the number of allowable test failures. Range is 1 to 99.

Command Default

To view the default value for each test, use the **show diagnostic content** command when the diagnostic image is first installed. The default can be different for each test.

Command Modes

Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **diagnostic monitor threshold** command to specify health-monitoring diagnostic testing failure threshold.

**Note**

To specify a node using the *node-id* argument, use the *rack/slot/module* notation. For example, 0/0/CPU0 is a fully qualified location specification for a line card, 0/2/CPU0 is a fully qualified location specification for a line card, 0/7/CPU0 is a fully qualified location specification for a line card, 0/RSP0/CPU0 is a fully qualified location specification for a Route Switch Processor, and 0/RSP0/CPU0 is also a fully qualified location specification for a Route Switch Processor.

Task ID

Task ID	Operations
diag	read, write

Examples

The following example shows how to set the failure threshold to 35 test failures for test 1 for 0/1/cpu0:

```
RP/0/RSP0/CPU0:router(admin-config)# diagnostic monitor threshold location 0/1/cpu0 test 1
failure count 35
```

Related Commands

Command	Description
show diagnostic content , on page 162	Displays test information including test ID, test attributes, and supported coverage test levels for each test and for all components.

diagnostic ondemand action-on-failure

To set when to stop test execution for a **diagnostic start** command, use the **diagnostic ondemand action-on-failure** command in administration EXEC mode. This command is used in conjunction with the **diagnostic ondemand iteration** command.

diagnostic ondemand action-on-failure {*continue failure-count*| **stop**}

Syntax Description

continue <i>failure-count</i>	Specifies that test execution continue until the number of failures reaches the specified <i>failure-count</i> . Range is 0 to 65534. A <i>failure-count</i> of 0 indicates to not stop execution until all iterations are complete, no matter how many failures are encountered.
stop	Stops execution immediately when the first test failure occurs.

Command Default

failure-count: 0

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **diagnostic ondemand action-on-failure** command to specify whether or when to stop test execution if a test fails. This command is used in conjunction with the **diagnostic ondemand iterations** command.

Task ID

Task ID	Operations
diag	read, write

Examples

The following example shows how to set the test failure action to stop:

```
RP/0/RSP0/CPU0:router(admin)# diagnostic ondemand action-on-failure stop
```

Related Commands

Command	Description
diagnostic ondemand iterations, on page 149	Sets the number of times to repeat execution of the diagnostic test.
diagnostic start, on page 152	Runs a specified diagnostic test.

diagnostic ondemand iterations

To set the number of times to repeat execution of the tests specified by the **diagnostic start** command, use the **diagnostic ondemand iterations** command in administration EXEC mode.

diagnostic ondemand iterations *count*

Syntax Description

<i>count</i>	Number of times to repeat the specified on-demand tests. Range is 1 to 999.

Command Default

count: 1

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **diagnostic ondemand iterations** command to specify the number of times the specified on-demand tests run. The on-demand tests are specified using the **diagnostic start** command.

Task ID

Task ID	Operations
diag	read, write

Examples

The following example shows how to set the number of iterations to 12:

```
RP/0/RSP0/CPU0:router(admin)# diagnostic ondemand iterations 12
```

Related Commands

Command	Description
diagnostic ondemand action-on-failure , on page 147	Sets when to stop test execution for a diagnostic test.
diagnostic start , on page 152	Runs a specified diagnostic test.

diagnostic schedule

To configure a diagnostic schedule, use the **diagnostic schedule** command in administration configuration mode. To disable the diagnostic schedule, use the **no** form of this command.

diagnostic schedule location *node-id* **test** {*id*| **all**| **non-disruptive**} {**daily**| **on** *month day year*| **weekly** *day-of-week*} *hour:minute*

no diagnostic schedule location *node-id* **test** {*id*| **all**} {**daily**| **on** *month day year*| **weekly** *day-of-week*} *hour:minute*

Syntax Description

location <i>node-id</i>	Schedules a diagnostic test for a specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
test	Specifies a specific diagnostic test, or all diagnostic tests.
id	Test ID or list of test IDs, as shown in the show diagnostic content command. Multiple tests can be listed if separated by semicolons (;) and a range of dates can be listed if separated by a hyphen (-), as follows: x;y-z (for example: 1; 3-4 or 1;3;4)
all	Specifies all tests.
non-disruptive	Specifies the nondisruptive test suite [Attribute = N].
daily	Specifies a daily schedule.
on <i>month day year</i>	Schedules an exact date.
weekly <i>day-of-week</i>	Specifies a weekly schedule with a set day of the week. Enter the name of a day of the week or a number that specifies a day of the week in the range from 0 through 6, where 0 is today.
<i>hour:minute</i>	Scheduled start time, where <i>hour</i> is a number in the range from 0 through 23, and <i>minute</i> is a number in the range from 0 through 59.

Command Default

No default behavior or values

Command Modes

Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

**Note**

To specify a node using the *node-id* argument, use the *rack/slot/module* notation. For example, 0/0/CPU0 is a fully qualified location specification for a line card, 0/2/CPU0 is a fully qualified location specification for a line card, 0/7/CPU0 is a fully qualified location specification for a line card, 0/RSP0/CPU0 is a fully qualified location specification for a Route Switch Processor, and 0/RSP0/CPU0 is also a fully qualified location specification for a Route Switch Processor.

For more information about running Cisco IOS XR diagnostics, refer to *Cisco IOS XR Diagnostics*.

Task ID

Task ID	Operations
diag	read, write

Examples

The following example shows how to schedule a diagnostic test:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# configure
RP/0/RSP0/CPU0:router(admin-config)# diagnostic schedule location 0/0/CPU0 test all daily
complete device 1 weekly 12:30
```

Related Commands

Command	Description
show diagnostic schedule, on page 170	Displays the current scheduled diagnostic tasks.

diagnostic start

To run a specified diagnostic test, use the **diagnostic start** command in administration EXEC mode.

diagnostic start location *node-id* test {*id*| all| non-disruptive}

Syntax Description

location <i>node-id</i>	Runs diagnostic testing for a specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
test	Specifies a specific diagnostic test, or all diagnostic tests.
id	Test ID or list of test IDs, as shown in the show diagnostic content command. Multiple tests can be listed if separated by semicolons (;) a range of dates can be listed if separated by a hyphen (-), as follows: • x;y-z (for example: 1; 3-4 or 1;3;4)
all	Specifies all tests.
non-disruptive	Specifies the nondisruptive test suite [Attribute = N].

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **diagnostic start** command to run a diagnostic test on a specified card.

**Note**

To specify a node using the *node-id* argument, use the *rack/slot/module* notation. For example, 0/0/CPU0 is a fully qualified location specification for a line card, 0/2/CPU0 is a fully qualified location specification for a line card, 0/7/CPU0 is a fully qualified location specification for a line card, 0/RSP0/CPU0 is a fully qualified location specification for a Route Switch Processor, and 0/RSP0/CPU0 is also a fully qualified location specification for a Route Switch Processor.

For more information about running Cisco IOS XR diagnostics, refer to *Cisco IOS XR Diagnostics*.

Task ID

Task ID	Operations
diag	execute

Examples

The following example shows how to run a complete suite of diagnostic tests for a specified location:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# diagnostic start location 0/0/CPU0 test all
```

Related Commands

Command	Description
diagnostic stop , on page 154	Stops the diagnostic testing in progress on a node.

diagnostic stop

To stop the diagnostic testing in progress on a node, use the **diagnostic stop** command in administration EXEC mode.

diagnostic stop location *node-id*

Syntax Description

location <i>node-id</i>	Stops diagnostic testing for a specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **diagnostic stop** command to stop a diagnostic test on a specified node. The command is used for scheduled tests, a test that is causing errors, or a test that does not finish.



Note

To specify a node using the *node-id* argument, use the *rack/slot/module* notation. For example, 0/0/CPU0 is a fully qualified location specification for a line card, 0/2/CPU0 is a fully qualified location specification for a line card, 0/7/CPU0 is a fully qualified location specification for a line card, 0/RSP0/CPU0 is a fully qualified location specification for a Route Switch Processor, and 0/RSP0/CPU0 is also a fully qualified location specification for a Route Switch Processor.

Task ID

Examples

The following example shows how to stop the diagnostic test process:

Related Commands

Command	Description
diagnostic start , on page 152	Runs a specified diagnostic test.

show diag

To display details about the hardware and software on each node in a router, use the **show diag** command in the appropriate mode.

EXEC Mode

show diag [*node-id*] [**details** | **eprom-info** | **power-regs** | **summary**]

Administration EXEC Mode

show diag [*node-id*] [**chassis** | **fans** | **power-supply**] [**details** | **eprom-info** | **power-regs** | **summary**]

Syntax Description

node-id	(Optional) Identifies the node whose information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Follow the <i>node-id</i> argument with one of the following optional keywords to specify specific test results: • details • eprom-info • power-regs • summary
details	(Optional) Displays detailed diagnostics information for the current node.
eprom-info	(Optional) Displays field diagnostics results from the EEPROM.
power-regs	(Optional) Displays field diagnostics results from the power registers.
summary	(Optional) Displays summarized diagnostics results for all nodes in the system.
chassis-info	(Optional) Displays information about the chassis.
fans	(Optional) Displays information about the fans tray.
power-supply	(Optional) Displays information about the power supply.

Command Default

Diagnostics for all nodes installed in the router are displayed.

Command Modes

EXEC

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show diag** command displays detailed information on the hardware components for each node, and on the status of the software running on each node.

Task ID

Task ID	Operations
sysmgr	read

Examples

The following example shows excerpts of output from the **show diag details** command:

```
RP/0/RSP0/CPU0:router# show diag details
```

```

NODE module 0/RSP0/CPU0 : ASR9K Fabric, Controller, 4G memory
MAIN board type 0x100302 S/N: FOC1229801R
Top Assy. Number68-3160-04PID A9K-RSP-4GUDI_VIDHwRev: V4.8New Deviation NumberCLEI
TBDTBDBoard State IOS XR RUNBoard State IOS XR RUN PLD: Motherboard: N/A, Processor:
0x8004 (rev: 2.2), Power: N/A
MONLIBQNXXFFS Monlib Version 32ROMMONVersion 1(20081208:173612) [ASR9K ROMMON] Board
FPGA/CPLD/ASIC Hardware Revision:
CompactFlash V1.0XbarSwitch0 V1.3 XbarSwitch1 V1.3 XbarArbiter V1.0XbarInterface
V18.4IntCtrl V114ClkCtrl V1.13PuntFPGA V1.4HD V3.USB0 V17.USB1 V17CPUCtrl V1.17UTI
V1.6LIU V1.MLANSwitch V0.EOBCSwitch V2CBC (active partition) v1.1CBC (inactive
partition) v1.More--

```

This table describes the significant fields shown in the display.

Table 10: show diag Field Descriptions

Field	Description
MAIN	Provides the following general information about the hardware: • Board type • Revision • Device identifier • Serial number

Field	Description
PCA	Cisco printed circuit assembly (PCA) hardware and revision number.
PID	Displays the product identifier (PID) revision for the specified node.
VID	Displays the version identifier (VID) for the specified node.
CLEI	Displays the common language equipment identifier (CLEI) for the specified node.
ECI	Displays the equipment catalog item (ECI) for the specified node.
Board State	Displays the current software on the board and whether or not the board is running.
PLD	Displays the information about the following programmable logic device (PLD) components on the current module: • Processor • Power • MONLIB
SPEED	Displays speed information for the various components of the specified node, in megahertz.
MEM Size	Displays the memory size of the specified node, in megabytes.
RMA	Displays returned material adjustment (RMA) information for the specified node.

Field	Description
DIAGNOSTICS RESULTS	Provides the following information about the last diagnostics test that was run on the specified node: • ENTRY 1 • TIMESTAMP—Time stamp for the last diagnostic test that was run on the node. • VERSION • PARAM1 • PARAM2 • TESTNUM—Identifies the test that was run on the node. • RESULT—Displays whether the last diagnostic test passed or failed. • ERRCODE

The following example shows how to display EEPROM information:

```
RP/0/RSP15/CPU0:router# show diag chassis eeprom-info

Rack 0 - ASR-9010 Chassis, Includes Accessories
Controller Family HW config: 0x20 SW key: ef Controller Type
: 2fePID ASR9010AC Version Identifier : 0UDI Name
chassis ASR-9010-ACUDI Description ASR9010, AC Chassis Part Number (68-bbbb-vv)
: 68-1234-56
Part Revision : 0.1
PCB Serial Number : FOX1232H67MPCA Number (73-bbbb-vv) : 73-1159-02 PCA
Revision : 0.
Deviation Number # 1 0 CLEI Code : NOCLEI
Manufacturing Test Data : 00 00 00 00 00 00 00 00
Base MAC Address : 001d.e5eb.bfa8
MAC Address block size : 264
Hardware Revision : 0.100
Capabilities : 00
Field Diagnostics Data 00 00 00 00 00 00 00 00 Device values :
Power Usage (10mW units) : 0
ENVMON Information 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
0
0 0 0 0 0 0 0 0
0 0 0 0 0 0 0 0
```

Related Commands

Command	Description
show platform	Displays information and status for each node in the system.
show version	Displays details on the hardware and software status of the system.

show diagnostic bootup level

To display the current diagnostic bootup level, use the **show diagnostic bootup level** command in administration EXEC mode.

show diagnostic bootup level location *node-id*

Syntax Description

location <i>node-id</i>	Specifies a card. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show diagnostic bootup level** command to display the current diagnostic bootup level for a specified card.



Note

To specify a node using the *node-id* argument, use the *rack/slot/module* notation. For example, 0/0/CPU0 is a fully qualified location specification for a line card, 0/2/CPU0 is a fully qualified location specification for a line card, 0/7/CPU0 is a fully qualified location specification for a line card, 0/RSP0/CPU0 is a fully qualified location specification for a Route Switch Processor, and 0/RSP0/CPU0 is also a fully qualified location specification for a Route Switch Processor.

Task ID

Task ID	Operations
diag	read

Examples

The following example shows how to display the current diagnostic bootup level for 0/1/cpu0:

```
RP/0/RSP0/CPU0:router(admin)# show diagnostic bootup level location 0/1/cpu0  
Current bootup diagnostic level for LC 0/1/CPU0: minimal
```

Related Commands

Command	Description
diagnostic bootup level	Configures the diagnostic for booting a card.

show diagnostic content

To display test information including test ID, test attributes, and supported coverage test levels for each test and for all components, use the **show diagnostic content** command in administration EXEC mode.

show diagnostic content location *node-id*

Syntax Description

location <i>node-id</i>	Displays the diagnostic content for a specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show diagnostic content** command to display diagnostic test information for a specific location. The test information includes the supported tests and attributes.



Note

To specify a node using the *node-id* argument, use the *rack/slot/module* notation. For example, 0/0/CPU0 is a fully qualified location specification for a line card, 0/2/CPU0 is a fully qualified location specification for a line card, 0/7/CPU0 is a fully qualified location specification for a line card, 0/RSP0/CPU0 is a fully qualified location specification for a Route Switch Processor, and 0/RSP0/CPU0 is also a fully qualified location specification for a Route Switch Processor.

For more information about running Cisco IOS XR diagnostics, refer to *Cisco IOS XR Diagnostics*.

Task ID

Task ID	Operations
diag	read

Examples

The following example shows how to display the test information for a specified location:

For a route switch processor:

```
RP/0/RSP0/CPU0:router(admin)# show diagnostic content location 0/rsp0/cpu0
```

Wed Feb 16 09:17:07.293 PST

RP 0/RSP0/CPU0:

Diagnostics test suite attributes:

M/C/* - Minimal bootup level test / Complete bootup level test / NA

B/* - Basic ondemand test / NA

P/V/* - Per port test / Per device test / NA

D/N/* - Disruptive test / Non-disruptive test / NA

S/* - Only applicable to standby unit / NA

X/* - Not a health monitoring test / NA

F/* - Fixed monitoring interval test / NA

E/* - Always enabled monitoring test / NA

A/I - Monitoring is active / Monitoring is inactive

ID	Test Name	Attributes	Test Interval (day hh:mm:ss.ms)	Thre- shold
1)	PuntFPGAScratchRegister ----->	***N****A	000 00:01:00.000	1
2)	FIAScratchRegister ----->	***N****A	000 00:01:00.000	1
3)	ClkCtrlScratchRegister ----->	***N****A	000 00:01:00.000	1
4)	IntCtrlScratchRegister ----->	***N****A	000 00:01:00.000	1
5)	CPUCtrlScratchRegister ----->	***N****A	000 00:01:00.000	1
6)	FabSwitchIdRegister ----->	***N****A	000 00:01:00.000	1
7)	EccSbeTest ----->	***N****I	000 00:01:00.000	3
8)	SrspStandbyEobcHeartbeat ----->	***NS****A	000 00:00:05.000	3
9)	SrspActiveEobcHeartbeat ----->	***NS****A	000 00:00:05.000	3
10)	FabricLoopback ----->	M**N****A	000 00:01:00.000	3
11)	PuntFabricDataPath ----->	***N****A	000 00:01:00.000	3
12)	FPDimageVerify ----->	***N****I	001 00:00:00.000	1

For a line card:

```
RP/0/RSP0/CPU0:router(admin)# show diagnostic content location 0/1/cpu0
```

A9K-40GE-L 0/1/CPU0:

Diagnostics test suite attributes:

M/C/* - Minimal bootup level test / Complete bootup level test / NAab

P/V/* - Per port test / Per device test / NA

D/N/* - Disruptive test / Non-disruptive test / NA

S/* - Only applicable to standby unit / NA

X/* - Not a health monitoring test / NA

F/* - Fixed monitoring interval test / NA

E/* - Always enabled monitoring test / NA

A/I - Monitoring is active / Monitoring is inactive

ID	Test Name	Attributes	Test Interval (day hh:mm:ss.ms)	Thre- shold
1)	PHYCtrlScratchRegister ----->	***N****A	000 00:01:00.000	1
2)	PortCtrlScratchRegister ----->	***N****A	000 00:01:00.000	1
3)	CPUCtrlScratchRegister ----->	***N****A	000 00:01:00.000	1
4)	NPScratchRegister ----->	***N****A	000 00:01:00.000	1
5)	BridgeScratchRegister ----->	***N****A	000 00:01:00.000	1
6)	FIAScratchRegister ----->	***N****A	000 00:01:00.000	1
7)	EccSbeTest ----->	***N****I	000 00:01:00.000	3
8)	LcEobcHeartbeat ----->	***N****A	000 00:00:05.000	3
9)	NPULoopback ----->	***N****A	000 00:01:00.000	3
10)	FPDimageVerify ----->	***N****I	001 00:00:00.000	1

Table 11: show diagnostic content Field Descriptions, on page 164 describes the significant fields shown in the display.

Table 11: show diagnostic content Field Descriptions

Field	Description
M/C/* - Minimal bootup level test / Complete bootup level test / NA	Minimal bootup test or complete bootup test.
B/* - Basic ondemand test / NA	Basic on-demand test.
P/V/* - Per port test / Per device test / NA	Test is per port or device.
D/N/* - Disruptive test / Non-disruptive test / NA	Test is disruptive or nondisruptive.
S/* - Only applicable to standby unit / NA	Test is available for standby node only.
X/* - Not a health monitoring test / NA	Test is not a health-monitoring test.
F/* - Fixed monitoring interval test / NA	Test is a fixed monitoring interval test.
E/* - Always enabled monitoring test / NA	Test is an always enabled monitoring test.
A/I - Monitoring is active / Monitoring is inactive	Test is active or inactive.
ID	ID of the test.
Test Name	Name of the test.
Attributes	Attributes for the test.
Test Interval	Interval of the test.
Threshold	Failure threshold of the text.

Related Commands

Command	Description
diagnostic bootup level	Configures the diagnostic for booting a card.
diagnostic monitor interval, on page 142	Configures the health-monitoring diagnostic testing for a specified interval for a specified location.
diagnostic schedule, on page 150	Configures a diagnostic schedule.
diagnostic start, on page 152	Runs a specified diagnostic test.

show diagnostic ondemand settings

To display the current on-demand settings, use the **show diagnostic ondemand settings** command in administration EXEC mode.

show diagnostic ondemand settings

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes Administration EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	diag	read

Examples The following example shows how to display the on-demand settings:

```
RP/0/RSP0/CPU0:router(admin)# show diagnostic ondemand settings

Test iterations = 45
Action on test failure = continue until test failure limit reaches 25
```

show diagnostic result

To display diagnostic test results, use the **show diagnostic result** command in administration EXEC mode.

show diagnostic result location *node-id* [**test** {*id* | **all**}] [**detail**]

Syntax Description

location <i>node-id</i>	Displays the diagnostic test results for a specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
test { <i>id</i> all }	(Optional) Specifies diagnostic test selection. The following test selections are available: • <i>id</i>—Test ID or list of test IDs , as shown in the show diagnostic content command . Multiple tests can be listed if separated by semicolons (;) as follows: ◦ x;y-z (for example: 1; 3-4 or 1;3;4) • all—Specifies all tests.
detail	(Optional) Specifies detailed results.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show diagnostic result** command to display diagnostic results for a specific location.



Note

To specify a node using the *node-id* argument, use the *rack/slot/module* notation. For example, 0/0/CPU0 is a fully qualified location specification for a line card, 0/2/CPU0 is a fully qualified location specification for a line card, 0/7/CPU0 is a fully qualified location specification for a line card, 0/RSP0/CPU0 is a fully qualified location specification for a Route Switch Processor, and 0/RSP0/CPU0 is also a fully qualified location specification for a Route Switch Processor.

For more information about running Cisco IOS XR diagnostics, refer to *Cisco IOS XR Diagnostics*.

Task ID

Task ID	Operations
diag	read

Examples

The following example shows how to display detailed diagnostic test results:

```
RP/0/RSP0/CPU0:router(admin)# show diagnostic result loc 0/RSP0/CPU0 test 1
Current bootup diagnostic level for RP 0/RSP0/CPU0: minimal
Test results: (. = Pass, F = Fail, U = Untested)
1 ) PuntFPGAScratchRegister -----> .
RP/0/RSP0/CPU0:router(admin)#
RP/0/RSP0/CPU0:router(admin)# show diagnostic result loc 0/RSP0/CPU0 test all
Current bootup diagnostic level for RP 0/RSP0/CPU0: minimal
Test results: (. = Pass, F = Fail, U = Untested)
1 ) PuntFPGAScratchRegister -----> .
2 ) XbarInterfaceScratchRegister ----> .
3 ) ClkCtrlScratchRegister -----> .
4 ) IntCtrlScratchRegister -----> .
5 ) CPUCtrlScratchRegister -----> .
6 ) XbarSwitchIdRegister -----> .
7 ) EccSbeTest -----> U
8 ) SrspStandbyEobcHeartbeat -----> U
9 ) SrspActiveEobcHeartbeat -----> U
10 ) FabricLoopback -----> .
11 ) PuntFabricDataPath -----> .
12 ) FPDImageVerify -----> .
```

Here is an example of the **show diagnostic results detail** command run on the route switch processor labeled RSP0:

```
RP/0/RSP0/CPU0:router(admin)# show diagnostic result loc 0/RSP0/CPU0 detail
Current bootup diagnostic level for RP 0/RSP0/CPU0: minimal
RP 0/RSP0/CPU0:
Overall diagnostic result: PASS
Diagnostic level at card bootup: minimal
Test results: (. = Pass, F = Fail, U = Untested)

1 ) PuntFPGAScratchRegister -----> .
Error code -----> 0 (DIAG_SUCCESS)
Total run count -----> 265
Last test execution time ----> Tue Mar 10 16:31:43 2009
First test failure time ----> n/a
Last test failure time ----> n/a
Last test pass time -----> Tue Mar 10 16:31:43 2009
Total failure count -----> 0
Consecutive failure count ---> 0

2 ) XbarInterfaceScratchRegister ----> .
Error code -----> 0 (DIAG_SUCCESS)
Total run count -----> 265
Last test execution time ----> Tue Mar 10 16:31:43 2009
First test failure time ----> n/a
```

```

Last test failure time -----> n/a
Last test pass time -----> Tue Mar 10 16:31:43 2009
Total failure count -----> 0
Consecutive failure count ---> 0

```

```

3 ) ClkCtrlScratchRegister -----> .

Error code -----> 0 (DIAG_SUCCESS)
Total run count -----> 265
Last test execution time ----> Tue Mar 10 16:31:43 2009
First test failure time ----> n/a
Last test failure time -----> n/a
Last test pass time -----> Tue Mar 10 16:31:43 2009
Total failure count -----> 0
Consecutive failure count ---> 0

```

```

4 ) IntCtrlScratchRegister -----> .

Error code -----> 0 (DIAG_SUCCESS)
Total run count -----> 265
Last test execution time ----> Tue Mar 10 16:31:43 2009
First test failure time ----> n/a
Last test failure time -----> n/a
Last test pass time -----> Tue Mar 10 16:31:43 2009
Total failure count -----> 0
Consecutive failure count ---> 0

```

```

5 ) CPUCtrlScratchRegister -----> .

Error code -----> 0 (DIAG_SUCCESS)
Total run count -----> 264
Last test execution time ----> Tue Mar 10 16:31:43 2009
First test failure time ----> n/a
Last test failure time -----> n/a
Last test pass time -----> Tue Mar 10 16:31:43 2009
Total failure count -----> 0
Consecutive failure count ---> 0

```

```

6 ) XbarSwitchIdRegister -----> .

Error code -----> 0 (DIAG_SUCCESS)
Total run count -----> 264
Last test execution time ----> Tue Mar 10 16:31:43 2009
First test failure time ----> n/a
Last test failure time -----> n/a
Last test pass time -----> Tue Mar 10 16:31:43 2009
Total failure count -----> 0
Consecutive failure count ---> 0

```

Table 12: show diagnostic result Field Descriptions

Field	Description
Test results	Test result options: • .—Pass • F—Fail • U—Untested

Field	Description
Error code	Code for the error. DIAG_SUCCESS is indicated if there were no code errors. DIAG_FAILURE is indicated for any failure. DIAG_SKIPPED is indicated if the test was stopped.
Total run count	Number of times the test has run.
Last test execution time	Last time the test was run.
First test failure time	First time the test failed.
Last test failure time	Last time the test failed.
Last test pass time	Last time the test passed.
Total failure count	Number of times the test has failed.
Consecutive failure count	Number of consecutive times the test has failed.

Related Commands

Command	Description
diagnostic schedule , on page 150	Configures a diagnostic schedule.
diagnostic start , on page 152	Runs a specified diagnostic test.

show diagnostic schedule

To display the current scheduled diagnostic tasks, use the **show diagnostic schedule** command in administration EXEC mode.

show diagnostic schedule location *node-id*

Syntax Description

location <i>node-id</i>	Displays the diagnostic schedule for a specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show diagnostic schedule** command to display scheduled diagnostic tasks for a specific location.



Note

To specify a node using the *node-id* argument, use the *rack/slot/module* notation. For example, 0/0/CPU0 is a fully qualified location specification for a line card, 0/2/CPU0 is a fully qualified location specification for a line card, 0/7/CPU0 is a fully qualified location specification for a line card, 0/RSP0/CPU0 is a fully qualified location specification for a Route Switch Processor, and 0/RSP0/CPU0 is also a fully qualified location specification for a Route Switch Processor.

For more information about running Cisco IOS XR diagnostics, refer to *Cisco IOS XR Diagnostics*.

Task ID

Task ID	Operations
diag	read

Examples

The following example shows how to display scheduled diagnostic tasks:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show diagnostic schedule location 0/3/CPU0

Current Time = Tue Sep 27 12:41:24 2005
Diagnostic for LC 0/3/CPU0:

Schedule #1:
  To be run daily 14:40
  Test ID(s) to be executed: 1 .
```

Table 13: show diagnostic schedule Field Descriptions

Field	Description
Current Time	Current system time.
Diagnostic for	Card for which the diagnostic is scheduled.
Schedule	Schedule number.
To be run	Time at which the diagnostics are scheduled to run.
Test ID(s) to be executed	Tests to be run at scheduled time.

Related Commands

Command	Description
diagnostic schedule , on page 150	Configures a diagnostic schedule.

show diagnostic status

To display the current running tests, use the **show diagnostic status** command in administration EXEC mode.

show diagnostic status

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes Administration EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	diag	read

Examples The following example shows how to display the current running tests:

```
RP/0/RSP0/CPU0:router(admin)# show diagnostic status

<BU> - Bootup Diagnostics, <HM> - Health Monitoring Diagnostics, <OD> - OnDemand
Diagnostics, <SCHD> - Scheduled Diagnostics
=====
Card Description Current Running Test Run by
-----
RP 0/RSP0/CPU0 N/A N/A
-----
RP 0/RSP1/CPU0 N/A N/A
-----
A9K-8T/4-B 0/2/CPU0 N/A N/A
-----
A9K-40GE-E 0/7/CPU0 N/A N/A
-----
A9K-40GE-B 0/0/CPU0 N/A N/A
=====
```



Ethernet Interface Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring Ethernet interfaces on the Cisco ASR 9000 Series Router.

- [carrier-delay, page 175](#)
- [clear frequency synchronization esmc statistics, page 177](#)
- [clear frequency synchronization wait-to-restore, page 178](#)
- [clear lldp, page 179](#)
- [clear mac-accounting \(Ethernet\), page 181](#)
- [clock-interface, page 183](#)
- [clock-interface sync, page 185](#)
- [flow-control, page 186](#)
- [frequency synchronization, page 188](#)
- [interface \(Ethernet\), page 190](#)
- [lldp, page 192](#)
- [lldp \(interface\), page 193](#)
- [lldp holdtime, page 194](#)
- [lldp reinit, page 196](#)
- [lldp timer, page 198](#)
- [lldp tlv-select disable, page 199](#)
- [log selection, page 201](#)
- [loopback \(Ethernet\), page 202](#)
- [mac-accounting, page 204](#)
- [mac-address \(Ethernet\), page 206](#)
- [negotiation auto, page 208](#)

- [packet-gap non-standard](#), page 209
- [priority \(frequency synchronization\)](#), page 211
- [quality itu-t](#), page 213
- [quality receive](#), page 214
- [quality transmit](#), page 217
- [selection input](#), page 220
- [show controllers \(Ethernet\)](#), page 221
- [show frequency synchronization clock-interfaces](#), page 223
- [show frequency synchronization configuration-errors](#), page 225
- [show frequency synchronization interfaces](#), page 227
- [show frequency synchronization selection](#), page 229
- [show lldp](#), page 232
- [show lldp entry](#), page 234
- [show lldp errors](#), page 236
- [show lldp interface](#), page 238
- [show lldp neighbors](#), page 240
- [show lldp traffic](#), page 243
- [show mac-accounting \(Ethernet\)](#), page 245
- [ssm disable](#), page 247
- [transport-mode](#), page 248
- [wait-to-restore](#), page 250

carrier-delay

To delay the processing of hardware link down notifications, use the **carrier-delay** command in interface configuration mode.

carrier-delay {**down** *milliseconds* [**up** *milliseconds*]| **up** *milliseconds* [**down** *milliseconds*]}

Syntax Description

down <i>milliseconds</i>	Length of time, in milliseconds, to delay the processing of hardware link down notifications. Range is from 0 through 65535.
up <i>milliseconds</i>	Length of time, in milliseconds, to delay the processing of hardware link up notifications. Range is from 0 through 65535.

Command Default

No carrier-delay is used, and the upper layer protocols are notified as quickly as possible when a physical link goes down.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you delay the processing of hardware link down notifications, the higher layer routing protocols are unaware of a link until that link is stable.

If the **carrier-delay down** *milliseconds* command is configured on a physical link that fails and cannot be recovered, link down detection is increased, and it may take longer for the routing protocols to re-route traffic around the failed link.

In the case of very small interface state flaps, running the **carrier-delay down** *milliseconds* command prevents the routing protocols from experiencing a route flap.



Note

Enter the **show interface** command to see the current state of the carrier-delay operation for an interface. No carrier-delay information is displayed if carrier-delay has not been configured on an interface.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to delay the processing of hardware link down notifications:

```
RP/0/RSP0/CPU0:router(config-if)# carrier-delay down 10
```

The following example shows how to delay the processing of hardware link up and down notifications:

```
RP/0/RSP0/CPU0:router(config-if)# carrier-delay up 100 down 100
```

Related Commands

Command	Description
dampening , on page 591	Turns on event dampening.

clear frequency synchronization esmc statistics

To clear the ESMC (Ethernet Synchronization Messaging Channel) statistics, use the **clear frequency synchronization esmc statistics** command in configuration mode.

clear frequency synchronization esmc statistics interface *{interface| all| summary location {node-id| all}}*

Syntax Description

<i>interface</i>	The command can be restricted to clear the ESMC (Ethernet Synchronization Messaging Channel) statistics for a particular interface by specifying the interface.
<i>node-id</i>	The output can be restricted to clear the ESMC (Ethernet Synchronization Messaging Channel) statistics for a particular node by specifying the location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to clear the ESMC (Ethernet Synchronization Messaging Channel) statistics:

```
RP/0/RSP0/CPU0:router# clear frequency synchronization esmc statistics interface
gigabitethernet 0/1/0/1
```

clear frequency synchronization wait-to-restore

To clear the frequency synchronization wait-to-restore timer, use the **clear frequency synchronization wait-to-restore** command in configuration mode.

clear frequency synchronization esmc wait-to-restore {**interface** {*interface*| **all**}| **clock-interface** {*sync port-num* **location** *node-id*| **all**}}

Syntax Description

<i>interface</i>	The output can be restricted to a particular interface by specifying the interface.
<i>port-num</i>	The output can be restricted to a particular clock-interface sync port by specifying the port number.
<i>node-id</i>	The output can be restricted to a particular node by specifying the location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to clear the frequency synchronization wait-to-restore timer:

```
RP/0/RP0/CPU0:router# clear frequency synchronization wait-to-restore interface gigabitethernet 0/1/0/1
```


clear lldp

To reset Link Layer Discovery Protocol (LLDP) traffic counters or LLDP neighbor information, use the **clear lldp** command in EXEC configuration mode.

clear lldp {counters| table}

Syntax Description

counters	Specifies that LLDP traffic counters are cleared.
table	Specifies that LLDP information in the neighbor table is cleared.

Command Default

LLDP traffic counters are not reset, and LLDP neighbor information is not cleared.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To reset counters from the **show lldp traffic** command, use the **clear lldp counters** command. To clear neighbor information displayed by the **show lldp neighbors** command, use the **clear lldp table** command.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to clear the LLDP counters and display LLDP traffic. The output from the **show lldp traffic** command shows that all the traffic counters have been reset to zero.

```
RP/0/RSP0/CPU0:router# clear lldp counters
RP/0/RSP0/CPU0:router# show lldp traffic
LLDP traffic statistics:
  Total frames out: 0
  Total entries aged: 0
  Total frames in: 0
  Total frames received in error: 0
  Total frames discarded: 0
```

clear lldp

```
Total TLVs discarded: 0
Total TLVs unrecognized: 0
```

The following example shows how to clear the LLDP table. The output of the **show lldp neighbors** command shows that all information has been deleted from the table.

```
RP/0/RSP0/CPU0:router# clear lldp table
RP/0/RSP0/CPU0:router# show lldp neighbors
Capability codes:
  (R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device
  (W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other

Device ID                Local Intf      Hold-time  Capability      Port ID
```

Related Commands

Command	Description
show lldp neighbors, on page 240	Displays information about LLDP neighbors.
show lldp traffic, on page 243	Displays statistics for LLDP traffic.

clear mac-accounting (Ethernet)

To clear Media Access Control (MAC) accounting statistics, use the **clear mac-accounting** command in EXEC mode.

clear mac-accounting {**GigabitEthernet**|**TenGigE**} *interface-path-id* [**location** *node-id*]

Syntax Description

{GigabitEthernet TenGigE}	Type of Ethernet interface whose MAC accounting statistics you want to clear. Enter GigabitEthernet , TenGigE .
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>node-id</i>	(Optional) Clears MAC accounting statistics for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.1.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
interface	read, write
basic-services	read, write

Examples

The following example shows how to clear all MAC accounting statistics for the TenGigE port at 1/0/0/1:

```
RP/0/RSP0/CPU0:router# clear mac-accounting TenGigE 0/1/5/0 location 1/0/0/1
```

Related Commands

Command	Description
mac-accounting , on page 204	Generates accounting information for IP traffic based on the source and destination MAC addresses on LAN interfaces.
show mac-accounting (Ethernet) , on page 245	Displays MAC accounting statistics for an interface.

clock-interface

To configure the timing-mode for the clock-interfaces on the router, use the **clock-interface** command in configuration mode. To remove the timing-mode, use the no form of this command.

{**clock-interface timing-mode independent**| **system**}

{**no clock-interface timing-mode independent**| **system**}

Syntax Description

timing-mode Specifies the timing mode for the clock-interfaces on the router:

- **independent**—the output of the clock-interfaces is driven only by line-interfaces (Ethernet and SONET). Each clock-interface port on the router is completely independent. The same timing source cannot be used on more than one port and no loopbacks are allowed between clock-interface ports.
- **system**—the output of the clock-interfaces is driven by the system-selected timing source, which can be either the line-interface or the clock-interface.

Command Default

No default behavior or values

Command Modes

Configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following examples show how to configure the timing-mode for the clock-interfaces on the router:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# frequency synchronization
RP/0/RSP0/CPU0:router(config-freqsync)#clock-interface independent

RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# frequency synchronization
RP/0/RSP0/CPU0:router(config-freqsync)#clock-interface system
```

clock-interface sync

To configure a clock interface for frequency synchronization on a specific node, use the **clock-interface sync** command in configuration mode. To remove the clock interface from a node, use the no form of this command.

clock-interface sync *port-id* **location** *node-id*

no clock-interface sync *port-id* **location** *node-id*

Syntax Description

<i>port-id</i>	Clock interface port number.
location <i>node-id</i>	Specifies the node for clock interface frequency synchronization. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows configure a clock interface for frequency synchronization on a specific node:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# clock-interface sync 0 location 0/1/cpu0
RP/0/RSP0/CPU0:router(config-clock-if)# frequency synchronization
RP/0/RSP0/CPU0:router(config-clk-freqsync)#
```

flow-control

To enable the sending of flow-control pause frames, use the **flow-control** command in interface configuration mode. To disable flow control, use the **no** form of this command.

```
flow-control {bidirectional| egress| ingress}
no flow-control ingress {bidirectional| egress| ingress}
```

Syntax Description

bidirectional	Enables flow-control for egress and ingress direction.
egress	Pauses egress traffic if IEEE 802.3x PAUSE frames are received.
ingress	Sends IEEE 802.3x PAUSE frames in case of congestion with ingress traffic.

Command Default

If autonegotiate is enabled on the interface, then the default is negotiated.
If autonegotiate is disabled on the interface, then the sending of flow-control pause frames is disabled for both egress and ingress traffic.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was first introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

When you explicitly enable the sending of flow-control pause frames, the value you configured with the **flow-control** command overrides any autonegotiated value. This prevents a link from coming up if the value you set with the **flow-control** command conflicts with the allowable settings on the other end of the connection.



Note

The **flow-control** command is supported on Gigabit Ethernet, TenGigE interfaces only; the **flow-control** command is not supported on Management Ethernet Interfaces.

**Note**

The **flow-control** command syntax options may vary, depending on the type of PLIM or SPA that is installed in your router.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enable the sending of flow-control pause frames for ingress traffic on the TenGigE interface 0/3/0/0:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/3/0/0
RP/0/RSP0/CPU0:router(config-if)# flow-control ingress
```

Related Commands

Command	Description
show interfaces , on page 608	Displays statistics for all interfaces configured on the router or for a specific node.

frequency synchronization

To enable frequency synchronization globally on the router and to configure frequency synchronization options for a controller or interface, use the **frequency synchronization** command in global configuration mode and SONET, interface, or clock-interface configuration modes. To disable frequency synchronization, use the **no** form of this command.

frequency synchronization

no frequency synchronization

Syntax Description This command has no keywords or arguments.

Command Default Disabled

Command Modes

- Global configuration (config)
- SONET configuration (config-sonet)
- Interface configuration (config-interface)
- Clock interface configuration (config-clock-if)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Configuration of frequency synchronization on the router involves enabling it both in global configuration, and at the SONET, interface, or clock-interface, where you can configure additional commands.

When you configure frequency synchronization in global configuration mode, the default clocking is configured for line timing mode.

Task ID	Task ID	Operations
	ethernet-services	execute
	sonet-sdh	execute

Examples

The following example shows how to enable Frequency Synchronization in global configuration:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-freqsync)# commit
```

The following example shows how to enable Frequency Synchronization on a SONET controller:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# controller sonet 0/4/1/0  
RP/0/RSP0/CPU0:router(config-sonet)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-sonet-freqsync)#
```

The following example shows how to enable Frequency Synchronization on an Ethernet interface:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# interface gigabitEthernet 0/5/0/0  
RP/0/RSP0/CPU0:router(config-if)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-if-freqsync)#
```

The following example shows how to enable Frequency Synchronization on a clock interface:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# clock-interface sync 0 location 0/1/cpu0  
RP/0/RSP0/CPU0:router(config-clock-if)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-clk-freqsync)#
```

interface (Ethernet)

To specify or create an Ethernet interface and enter interface configuration mode, use the **interface (Ethernet)** command in global configuration mode.

```
interface {GigabitEthernet| TenGigE} interface-path-id
no interface {GigabitEthernet| TenGigE} interface-path-id
```

Syntax Description

GigabitEthernet	Specifies or creates a Gigabit Ethernet (1000 Mbps) interface.
TenGigE	Specifies or creates a Ten Gigabit Ethernet (10 Gbps) interface.
<i>interface-path-id</i>	Physical interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

None

Command Modes

Global configuration (config)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To specify a physical interface, the notation for the *interface-path-id* is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:

- *rack*: Chassis number of the rack.
- *slot*: Physical slot number of the line card.
- *module*: Module number. A physical layer interface module (PLIM) is always 0.
- *port*: Physical port number of the interface.

Task ID

Task ID	Operation
interface	read, write

Examples

The following example shows how to enter interface configuration mode for a Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router(config)# interface GigabitEthernet 0/4/0/0  
RP/0/RSP0/CPU0:router(config-if)#
```

Related Commands

Command	Description
show interfaces , on page 608	Displays statistics for all interfaces configured on the router or for a specific node.

lldp

To enable the Link Layer Discovery Protocol (LLDP) globally for both transmit and receive operation on the system, use the **lldp** command in global configuration mode. To disable LLDP, use the **no** form of this command.

lldp

no lldp

Syntax Description

This command has no keywords or arguments.

Command Default

LLDP is disabled.

Command Modes

Global configuration (config)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you enable LLDP globally using the **lldp** command, all supported interfaces are enabled for both transmit and receive operation. You can disable either transmit or receive operation for a particular interface using the **lldp (interface)** command.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to enable LLDP globally on the router:

```
RP/0/RSP0/CPU0:router(config)# lldp
```

Related Commands

Command	Description
show lldp , on page 232	Displays the global LLDP operational characteristics on the system.

lldp (interface)

To enter LLDP configuration mode, use the **lldp (interface)** command.

lldp

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Interface configuration (config-if)

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	ethernet-services	read, write
	interface	read, write

Examples The following example shows how to enter LLDP configuration mode from Ethernet interface configuration mode:

```
RP/0/RSP0/CPU0:router(config)# interface GigabitEthernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# lldp
RP/0/RSP0/CPU0:router(config-lldp)#
```

Related Commands	Command	Description
	interface (Ethernet) , on page 190	Specifies or creates an Ethernet interface and enters interface configuration mode.
	lldp , on page 192	Enables LLDP globally for both transmit and receive operation on the system.

lldp holdtime

To specify the length of time that information from a Link Layer Discovery Protocol (LLDP) packet should be held by the receiving device before aging and removing it, use the **lldp holdtime** command in global configuration mode. To return to the default, use the **no** form of this command.

lldp holdtime *seconds*

no lldp holdtime *seconds*

Syntax Description

<i>seconds</i>	Number from 0 to 65535 that specifies the amount of time (in seconds) to hold the packet information. The default is 120.

Command Default

The packet hold time is 120 seconds (2 minutes).

Command Modes

Global configuration (config)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to change the default hold time to 1 minute:

```
RP/0/RSP0/CPU0:router (config) # lldp holdtime 60
```

Related Commands

Command	Description
lldp , on page 192	Enables LLDP globally for both transmit and receive operation on the system.

Command	Description
show lldp, on page 232	Displays the global LLDP operational characteristics on the system.

lldp reinit

To specify the length of time to delay initialization of the Link Layer Discovery Protocol (LLDP) on an interface, use the **lldp reinit** command in global configuration mode. To return to the default, use the **no** form of this command.

lldp reinit *seconds*

no lldp reinit *seconds*

Syntax Description

<i>seconds</i>	Number from 2 to 5 that specifies the length of time (in seconds) that LLDP should delay initialization. The default is 2.

Command Default

Initialization of LLDP is delayed for 2 seconds on an interface.

Command Modes

Global configuration (config)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to change the default initialization delay from 2 to 4 seconds:

```
RP/0/RSP0/CPU0:router(config)# lldp reinit 4
```

Related Commands

Command	Description
lldp , on page 192	Enables LLDP globally for both transmit and receive operation on the system.

Command	Description
show lldp, on page 232	Displays the global LLDP operational characteristics on the system.

lldp timer

To specify the Link Layer Discovery Protocol (LLDP) packet rate, use the **lldp timer** command in global configuration mode. To return to the default, use the **no** form of this command.

lldp timer *seconds*

no lldp timer *seconds*

Syntax Description	<i>seconds</i>	Number from 5 to 65534 that specifies the rate (in seconds) at which to send LLDP packets. The default is 30.

Command Default	LLDP packets are sent every 30 seconds.

Command Modes	Global configuration (config)

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	ethernet-services	read, write

Examples	The following example shows how to change the default LLDP packet rate from 30 seconds to 1 minute:

```
RP/0/RSP0/CPU0:router (config) # lldp timer 60
```

Related Commands	Command	Description
	lldp , on page 192	Enables LLDP globally for both transmit and receive operation on the system.
	show lldp , on page 232	Displays the global LLDP operational characteristics on the system.

lldp tlv-select disable

To disable transmission of the selected Type Length Value (TLV) in Link Layer Discovery Protocol (LLDP) packets, use the **lld tlv-select disable** command in global configuration mode. To return to the default, use the **no** form of this command.

lldp tlv-select *tlv-name* **disable**

no lldp tlv-select *tlv-name* **disable**

Syntax Description

<i>tlv-name</i>	Name of the TLV to be suppressed from LLDP packets. The <i>tlv-name</i> can be one of the following LLDP TLV types: • management-address • port-description • system-capabilities • system-description • system-name

Command Default

All TLVs are sent in LLDP packets.

Command Modes

Global configuration (config)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Certain TLVs are classified as mandatory in LLDP packets, such as the Chassis ID, Port ID, and Time to Live (TTL) TLVs. These TLVs must be present in every LLDP packet. You can use the **lldp tlv-select disable** command to suppress transmission of certain other optional TLVs in LLDP packets.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to disable transmission of the System Capabilities TLV from LLDP packets:

```
RP/0/RSP0/CPU0:router(config)# lldp tlv-select system-capabilities disable
```

Related Commands

Command	Description

log selection

To enable logging of changes or errors to frequency synchronization, use the **log selection** command in global frequency synchronization mode. To disable logging, use the no form of this command.

{**log selection changes**| **errors**}

{**no log selection changes**| **errors**}

Syntax Description

changes	Logs selection changes.
errors	Logs selection errors.

Command Default

No default behavior or values

Command Modes

Global frequency synchronization

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to enable logging of changes to frequency synchronization:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-freqsync)# log selection changes
```

loopback (Ethernet)

To configure an Ethernet controller for loopback mode, use the **loopback** command in interface configuration mode. To disable loopback, use the **no** form of this command.

```
loopback {external| internal| line}
no loopback
```

Syntax Description

external	All IPv4 self-ping packets are sent out of the interface and looped back externally before being received on the ingress path.
internal	All packets are looped back internally within the router before reaching an external cable.
line	Incoming network packets are looped back through the external cable.

Command Default

Loopback mode is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was first introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **loopback** command is available for all Ethernet interface types (Gigabit Ethernet, 10-Gigabit Ethernet).

Two loopback operation modes are supported for diagnostic purposes: internal and line. In the terminal (internal) loopback, the sent signal is looped back to the receiver. In the facility (line) loopback, the signal received from the far end is looped back and sent on the line. The two loopback modes cannot be active at the same time. In normal operation mode, neither of the two loopback modes is enabled.



Tip

Use the **loopback external** command when an external loopback connector is attached to the interface.

Task ID

Task ID	Operations
interface	read, write

Examples

In the following example, all packets are looped back to the TenGigE controller:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/3/0/0  
RP/0/RSP0/CPU0:router(config-if)# loopback internal
```

mac-accounting

To generate accounting information for IP traffic based on the source and destination Media Access Control (MAC) addresses on LAN interfaces, use the **mac-accounting** command in interface configuration mode. To disable MAC accounting, use the **no** form of this command.

mac-accounting {egress| ingress}

Syntax Description

egress	Generates accounting information for IP traffic based on the destination MAC addresses (egress direction).
ingress	Generates accounting information for IP traffic based on the source MAC addresses (ingress direction).

Command Default

MAC accounting is disabled

Command Modes

Interface configuration

Command History

Release	Modification
Release 4.1.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **mac-accounting** command calculates the total packet and byte counts for a LAN interface that receives or sends IPv4 packets to or from a unique MAC address.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enable MAC accounting for the source MAC address on the ingress direction:

```
RP/0/RSP0/CPU0:router(config-if)# mac-accounting ingress
```

Related Commands

Command	Description
clear mac-accounting (Ethernet), on page 181	Clears MAC accounting statistics for an interface.
show mac-accounting (Ethernet), on page 245	Displays MAC accounting statistics for an interface.

mac-address (Ethernet)

To set the MAC layer address of an Ethernet interface, use the **mac-address** command in interface configuration mode. To return the device to its default MAC address, use the **no** form of this command.

mac-address *value1.value2.value3*

no mac-address

Syntax Description

<i>value1.</i>	High 2 bytes of the MAC address in hexadecimal format. Range is from 0 to ffff.
<i>value2.</i>	Middle 2 bytes of the MAC address in hexadecimal. Range is from 0 to ffff.
<i>value3</i>	Low 2 bytes of the MAC address in hexadecimal. Range is from 0 to ffff.

Command Default

The default MAC address is read from the hardware burned-in address (BIA).

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was first introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The MAC address must be in the form of three 4-digit values (12 digits in dotted decimal notation).

The **mac-address** command is available for all types of line card Ethernet interfaces (Gigabit Ethernet, 10-Gigabit Ethernet) and for the Management Ethernet interface.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to set the MAC address of a Gigabit Ethernet interface located at 0/1/5/0:

```
RP/0/RSP0/CPU0:router(config)# interface GigabitEthernet 0/1/5/0
```

```
RP/0/RSP0/CPU0:router(config-if)# mac-address 0001.2468.ABCD
```

negotiation auto

To enable link autonegotiation on Gigabit Ethernet interfaces, use the **negotiation auto** command in interface configuration mode. To disable link autonegotiation, use the **no** form of this command.

negotiation auto

no negotiation auto

Syntax Description This command has no keywords or arguments.

Command Default Link autonegotiation is disabled.

Command Modes Interface configuration

Release	Modification
Release 3.7.2	This command was first introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **negotiation auto** command is available on Gigabit Ethernet interfaces only.

Task ID	Operations
interface	read, write

Examples The following example shows how to enable link autonegotiation on an interface:

```
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/0/2/0
RP/0/RSP0/CPU0:router(config-if)# negotiation auto
```

The following example shows how to disable link autonegotiation on an interface:

```
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/0/2/0
RP/0/RSP0/CPU0:router(config-if)# no negotiation auto
```

packet-gap non-standard

To change the packet interval for traffic on an interface for improved interoperability with Cisco Catalyst 6000 series switches, use the **packet-gap non-standard** command in interface configuration mode. To use the standard packet interval as defined by the IEEE 802.3 specification, use the **no** form of this command.

packet-gap non-standard

no packet-gap non-standard

Syntax Description

This command has no keywords or arguments.

Command Default

The interface uses the standard packet interval as defined by the IEEE 802.3 specification.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was first introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

An interface that is connected to a Cisco Catalyst 6000 series switch may experience packet loss problems that can be resolved by changing the packet interval of traffic from standard (as defined by the IEEE 802.3 specification) to nonstandard using the **packet-gap non-standard** command.



Note

The **packet-gap non-standard** command is available on 10-Gigabit Ethernet interfaces only.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to change the packet interval for traffic on an interface from standard to nonstandard:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/3/0/0
```

packet-gap non-standard

```
RP/0/RSP0/CPU0:router(config-if)# packet-gap non-standard
```


priority (frequency synchronization)

To configure the priority of the frequency source on a controller or an interface, use the **priority** command in frequency synchronization configuration mode. To return the priority to the default value, use the no form of this command.

priority *priority-value*

no priority *priority-value*

Syntax Description	<i>priority-value</i>	Priority of the frequency source. The priority is used to select between sources with the same Quality Level (QL). The range is 1 (highest priority) to 254 (lowest priority).

Command Default	100

Command Modes	Frequency synchronization configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ethernet-services	execute
	sonet-sdh	execute

Examples	The following example shows how to configure the frequency synchronization priority on a SONET controller:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/1
RP/0/RSP0/CPU0:router(config-sonet)# frequency synchronization
RP/0/RSP0/CPU0:router(config-sonet-freqsync)# priority 150
RP/0/RSP0/CPU0:router(config-sonet-freqsync)# commit
```

The following example shows how to configure the frequency synchronization priority on interface:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1  
RP/0/RSP0/CPU0:router(config-if)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-if-freqsync)# priority 150  
RP/0/RSP0/CPU0:router(config-if-freqsync)# commit
```

quality itu-t

To configure the ITU-T QL options, use the **quality itu-t** command in global configuration mode. To return to the default levels, use the no form of this command.

quality itu-t option

no quality itu-t option

Syntax Description

option	Valid options are:
	• 1 ITU-T QL option 1 • 2 ITU-T QL option 2

Command Default

Enabled

Command Modes

Global configuration mode

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to configure the ITU-T QL options:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# frequency synchronization
RP/0/RSP0/CPU0:router(config-sonet-freqsync)# quality itu-t option 1
```

quality receive

To configure all the Synchronization Status Message (SSM) quality levels for the frequency source from the receive interface, use the **quality receive** command in SONET controller frequency synchronization mode. To return to the default levels, use the no form of this command.

quality receive {**lowest** *ql option ql* [**highest** *ql*] | **highest** *ql option ql* | **exact** *ql option ql*}

no quality receive {**lowest** *ql option ql* [**highest** *ql*] | **highest** *ql option ql* | **exact** *ql option ql*}

Syntax Description

ql option Quality Level (QL) ITU-T options.

Valid values are:

- Option 1
- Option 2 Generation 1
- Option 2 Generation 2

ql Quality Level (QL) value.

For line interfaces and clock-interface with SSM support, any of the following combinations of QL values may be specified to modify the QL value received via SSM:

- QL-exact: If this is specified and the received or default QL is not DNU, then this value is used (rather than the received/default QL).
- QL-min: If this is specified and the received QL is a lower quality than this, then the received QL value is ignored and DNU is used instead.
- QL-max: If this is specified and the received QL is higher quality than this, then the received QL value is ignored and this value is used instead.
- QL-min and QL-max: The behavior is as above; QL-max must be at least as high quality as QL-min.

Note For clock-interfaces that don't support SSM only, QL-exact may be specified to override the default QL for the source which is set by the platform.

Valid QL values for ITU-T Option 1 are:

- PRC
- SSU-A
- SSU-B
- SEC
- DNU

Valid QL values for ITU-T Option 2 Generation 1 are:

- PRS
- STU
- ST2
- ST3
- SMC
- ST4
- RES
- DUS

Valid QL values for ITU-T Option 2 Generation 2 are:

- PRS
 - STU
 - ST2
 - TNC
 - ST3E
 - ST3
 - SMC
 - ST4
 - PROV
 - DUS
-

Command Default ITU-T Option I

Command Modes SONET controller frequency synchronization

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

quality receive



Note If SSM is disabled, only the exact ql option is available.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to configure all the SSM quality levels for the frequency source from the receive interface:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/1
RP/0/RSP0/CPU0:router(config-sonet)# frequency synchronization
RP/0/RSP0/CPU0:router(config-sonet-freqsync)# quality receive itu-t
option 2 generation 2 ST3
```

quality transmit

To configure all the Synchronization Status Message (SSM) quality levels for the frequency source from the transmit interface, use the **quality transmit** command in SONET controller frequency synchronization mode. To return to the default levels, use the no form of this command.

quality transmit {lowest *ql option ql* [**highest ql**] | **highest ql option ql** | **exact ql option ql**}

no quality transmit {lowest *ql option ql* [**highest ql**] | **highest ql option ql** | **exact ql option ql**}

Syntax Description

ql option Quality Level (QL) ITU-T options.

Valid values are:

- Option 1
- Option 2 Generation 1
- Option 2 Generation 2

ql Quality Level (QL) value.

For line interfaces and clock-interface with SSM support, any of the following combinations of QL values may be specified to modify the QL value received via SSM:

- QL-exact: If this is specified and the received or default QL is not DNU, then this value is used (rather than the received/default QL).
- QL-min: If this is specified and the received QL is a lower quality than this, then the received QL value is ignored and DNU is used instead.
- QL-max: If this is specified and the received QL is higher quality than this, then the received QL value is ignored and this value is used instead.
- QL-min and QL-max: The behavior is as above; QL-max must be at least as high quality as QL-min.

Note For clock-interfaces that don't support SSM only, QL-exact may be specified to override the default QL for the source which is set by the platform.

Valid QL values for ITU-T Option 1 are:

- PRC
- SSU-A
- SSU-B
- SEC
- DNU

quality transmit

Valid QL values for ITU-T Option 2 Generation 1 are:

- PRS
- STU
- ST2
- ST3
- SMC
- ST4
- RES
- DUS

Valid QL values for ITU-T Option 2 Generation 2 are:

- PRS
- STU
- ST2
- TNC
- ST3E
- ST3
- SMC
- ST4
- PROV
- DUS

Command Default	ITU-T Option I	
Command Modes	SONET controller frequency synchronization	
Command History	Release	Modification
	Release 3.9.0	This command was introduced.
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.	

**Note**

If SSM is disabled, only the exact ql option is available.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example show how to configure all the SSM quality levels for the frequency source from the transmit interface:

```
RP/0/RSP0/CPU0:router(config)#controller sonet 0/1/0/1  
RP/0/RSP0/CPU0:router(config-sonet)#frequency synchronization  
RP/0/RSP0/CPU0:router(config-sonet-freqsync)quality transmit itu-t option 2 generation 2  
RP/0/RSP0/CPU0:router(config-sonet-freqsync)#commit
```

selection input

To configure an interface so that it is available as a timing source for selection by the system, use the **selection input** command in interface frequency synchronization configuration mode. To remove the interface as an available timing source, use the no form of this command.

selection input

no selection input

Syntax Description This command has no keywords or arguments.

Command Default Disabled

Command Modes Interface frequency synchronization configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ethernet-services	execute
	sonet-sdh	execute

Examples The following example shows how to configure an interface so that it is available as a timing source for selection by the system:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frequency synchronization
RP/0/RSP0/CPU0:router(config-if-freqsync)# selection input
RP/0/RSP0/CPU0:router(config-if-freqsync)# commit
```

show controllers (Ethernet)

To display status and configuration information about the Ethernet interfaces on a specific node, use the **show controllers** command in EXEC mode.

show controllers {GigabitEthernet| TenGigE} *interface-path-id* [**all**| **bert**| **internal**| **mac**| **phy**| **stats**| **xgxs**]

Syntax Description

{GigabitEthernet TenGigE}	Specifies the type of Ethernet interface whose status and configuration information you want to display. Enter GigabitEthernet or TenGigE.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	Displays detailed information for the specified interface.
bert	Displays BERT status information for the interface.
internal	Displays internal information for the interface.
mac	Displays mac information for the interface.
phy	Displays physical information for the interface.
stats	Displays statistical information for the interface.
xgxs	Displays information about the 10 Gigabit Ethernet Extended Sublayer (XGXS).

Command Default

No default behavior or values

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was first introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
cisco-support	read
	Note Required in addition to the interface (read) task ID to use the control keyword only.
dwdm	read
interface	read
sonet-sdh	read

show frequency synchronization clock-interfaces

To display the frequency synchronization information for all clock-interfaces or for a specific node, use the **show frequency synchronization clock-interfaces** command in EXEC mode.

show frequency synchronization clock-interfaces [**brief**] [**location** *node-id*]

Syntax Description

location <i>node-id</i>	The output can be restricted to a particular node by specifying the location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows the output for the **show frequency synchronization clock-interfaces** command:

```
RP/0/RSP0/CPU0:router# show frequency synchronization clock-interfaces
```

```
Node 0/0/CPU0:
```

```
=====
```

```
  Clock interface Sync0 (Up):
    Assigned as input for selection
    SSM supported and enabled
  Input:
    Going down in 00:00:20
    Last received QL: OPT-II,1/PRC
    Effective QL: OPT-II,1/PRC, Priority: 200
```

show frequency synchronization clock-interfaces

```

Output:
  Selected source: GigabitEthernet0/0/0/3
  Selected source QL: OPT-II,1/PRC
  Effective QL: DNU
Next selection points: RP_SELECTOR

Clock interface Sync1 (Down: mode is not configured):
  Assigned as input for selection
  SSM supported and enabled
  Input:
    Restore in 00:02:00
    Last received QL: Opt-II,2/ST3
    Effective QL: Opt-II,2/ST3, Priority: 100
  Output:
    Selected source: GigabitEthernet0/0/0/3
    Selected source QL: Opt-II,2/PRC
    Effective QL: DNU
Next selection points: RP_SYSTEM

Clock interface Internal0 (Up):
  Input:
    Default QL: OPT-II,2/ST3
    Effective QL: OPT-II,2/ST3, Priority 255
Next selection points: RP_SELECTOR

```

**Note**

The last received QL and effective output QL are only shown if SSM is supported and enabled on the clock.

The output in brief mode is as follows:

```

RP/0/RSP0/CPU0:router# show frequency synchronization clock-interfaces brief

Flags:  > - Up           D - Down           S - Assigned for selection
        d - SSM Disabled  s - Output squelched  L - Looped back
Node 0/0/CPU0:
=====
Fl   Clock Interface    QLrcv  QLuse  Pri  QLsnd  Source
=====
>S   Sync0              PRC     PRC    100  DNU    GigabitEthernet0/0/0/3
DS   Sync1              FAILED  DNU    100  n/a    GigabitEthernet0/0/0/3
>S   Internal0          ST3     ST3    255  n/a

```

show frequency synchronization configuration-errors

To display information about any configuration inconsistencies that are detected, but that are not rejected by verification, use the **show frequency synchronization configuration-errors** command in EXEC mode.

show frequency synchronization configuration-errors [**location** *node-id*]

Syntax Description

location	Location of the card, specified by <i>node-id</i> .
<i>node-id</i>	The output can be restricted to a particular node by specifying the location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows the normal output for the **show frequency synchronization configuration-errors** command:

```
RP/0/RSP0/CPU0:router# show frequency synchronization configuration-errors
```

```
Node 0/0/CPU0:
```

```
=====
```

```
interface GigabitEthernet0/0/0/0 frequency synchronization
```

```
* Frequency synchronization is enabled on this interface, but isn't enabled globally.
```

show frequency synchronization configuration-errors

```
clock-interface Sync 0 location 0/0/CPU0 frequency synchronization quality transmit exact  
itu-t option 1 PRC  
  
* The QL that is configured is from a different QL option set than is configured globally.
```


show frequency synchronization interfaces

To show the frequency synchronization information for all interfaces or for a specific interface, use the **show frequency synchronization interfaces** command in EXEC mode.

{**show frequency synchronization interfaces** [**brief**] [**summary**] [**location** *node-id*] [**interface**]}

Syntax Description

node-id The output can be restricted to a particular node by specifying the location. The *node-id* argument is entered in the *rack/slot/module* notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows the display output for the **show frequency synchronization interfaces** command:

```
RP/0/RSP0/CPU0:router# show frequency synchronization interfaces

Interface GigabitEthernet0/0/0/0 (Up)
  Assigned as input for selection
  SSM Enabled
    Peer Up for 00:01:30, last SSM received 0.345s ago
    Peer has come up 4 times and timed out 3 times
    ESMC SSMs      Total  Information      Event      DNU
      Sent:      98765      98665      100      50
      Received:   54321      54320      1      54300
    13 malformed packets received
```

show frequency synchronization interfaces

```

    11 received packets were not handled
Input:
  Restore in 00:03:30
  Last received QL: Opt-II,2/PRC
  Effective QL: DNU, Priority 100
Output:
  Selected source: Sync0 [0/0/CPU0]
  Selected source QL: OPT-II,2/SEC
  Effective QL: OPT-II,2/SEC
  Output is squelched
Next selection points: LC_INGRESS

Interface SONET0/2/0/0 (Up)
Assigned as input for selection
SSM Enabled
Input:
  Restore in 00:03:30
  Last received QL: Opt-II,2/PRC
  Effective QL: DNU, Priority 100
Output:
  Selected source: Sync0 [0/0/CPU0]
  Selected source QL: OPT-II,2/SEC
  Effective QL: OPT-II,2/SEC
  Output is squelched
Next selection points: LC_INGRESS

```

The output in brief mode is as follows:

```

Flags:  > - Up                D - Down                S - Assigned for selection
        d - SSM Disabled      x - Peer timed out    i - Init state
        s - Output squelched

Fl  Interface                QLrcv  QLuse  Pri  QLsnd  Source
==== =====
>S  GigabitEthernet0/0/0/0   ST2    ST3    100  PRC    Sync0 [0/0/CPU0]
>S  GigabitEthernet0/0/0/1   PROV   DNU    100  PRC    Sync0 [0/0/CPU0]
DdS GigabitEthernet0/1/0/0   n/a    ST3    50   Sync0 [0/0/CPU0]
D   SONET0/1/0/0            n/a    n/a    100  DNU    Sync0 [0/0/CPU0]
>   GigabitEthernet0/12/0/13 PRC    n/a    200  DNU    Sync0 [0/0/CPU0]

```

The output in summary mode is as follows, for each node:

```

Node 0/0/CPU0:
  34 Ethernet interfaces in Synchronous mode, 10 assigned for selection, 23 with SSM enabled

ESMC SSMs      Total  Information  Event      DNU
Sent:          198765      189665      9100       650
Received:      654321      654320      91         54321

  12 SONET interfaces in Synchronous mode, 5 assigned for selection, 11 with SSM enabled

```

show frequency synchronization selection

To display the frequency synchronization selection information for all selection points or for a specific node, use the **show frequency synchronization selection** command in EXEC mode.

show frequency synchronization selection [**summary**| **location** *node-id*]

Syntax Description	<i>node-id</i>	The output can be restricted to a particular node by specifying the location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default	No default behavior or values

Command Modes	Configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ethernet-services	execute
	sonet-sdh	execute

Examples	The following example shows the normal output for the show frequency synchronization selection command:

```
RP/0/RSP0/CPU0:router# show frequency synchronization selection
Node 0/0/CPU0:
=====
Selection point: LC_INGRESS (4 inputs, 2 selected)
  Last programmed 00:01:30 ago, and selection made 00:01:29 ago
  Next selection points:
    SPA scoped      : None
    Node scoped     : None
    Chassis scoped  : None
    Router scoped   : RP_SELECTOR RP_CLOCK_INTF_SELECTOR
```

show frequency synchronization selection

S	Input	Last Selection Point	QL	Pri	Status
1	GigabitEthernet0/0/0/3	n/a	PRC	100	Unmonitored
2	GigabitEthernet0/0/0/0	n/a	PRC	200	Down
	GigabitEthernet0/0/0/1	n/a	ST2	50	Unmonitored
	GigabitEthernet0/0/0/2	n/a	ST3	100	Unmonitored

Selection point: LC_EGRESS (2 inputs, 1 selected)
 Last programmed 00:25:42 ago, and selection made 00:00:15 ago

Next selection points:

SPA scoped : None
 Node scoped : None
 Chassis scoped: None
 Router scoped : None

Used for local line interface output

Used for local clock-interface output

S	Input	Last Selection Point	QL	Pri	Status
1	GigabitEthernet0/0/0/3	0/1/CPU0 RP_SELECTOR 1	PRC	100	Ok
	GigabitEthernet0/0/0/3	0/2/CPU0 RP_SELECTOR 1	PRC	100	Ok

Node 0/1/CPU0:

Selection point: RP_SELECTOR (5 inputs, 1 selected)
 Last programmed 00:01:32 ago, and selection made 00:01:28 ago

Next selection points:

SPA scoped : None
 Node scoped : None
 Chassis scoped: None
 Router scoped : LC_EGRESS

S	Input	Last Selection Point	QL	Pri	Status
1	GigabitEthernet0/0/0/3	0/0/CPU0 LC_INGRESS 1	PRC	100	Ok
	Sync0 [0/1/CPU0]	n/a	PRC	50	LOS
	GigabitEthernet0/0/0/3	0/2/CPU0 RP_SELECTOR 1	PRC	100	Ok
	GigabitEthernet0/0/0/0	0/0/CPU0 LC_INGRESS 2	PRC	200	Ok
	Internal0 [0/1/CPU0]	n/a	ST3	255	Ok

Selection point: RP_CLOCK_INTF_SELECTOR (4 inputs, 1 selected)
 Last programmed 00:01:32 ago, and selection made 00:01:28 ago

Next selection points:

SPA scoped : None
 Node scoped : None
 Chassis scoped: None
 Router scoped : None

Used for local clock-interface output

S	Input	Last Selection Point	QL	Pri	Status
1	GigabitEthernet0/0/0/3	0/0/CPU0 LC_INGRESS 1	PRC	100	Ok
	GigabitEthernet0/0/0/3	0/2/CPU0 RP_SELECTOR 1	PRC	100	Ok
	GigabitEthernet0/0/0/0	0/0/CPU0 LC_INGRESS 2	PRC	200	Ok
	Internal0 [0/1/CPU0]	n/a	ST3	255	Ok

Node 0/2/CPU0:

Selection point: RP_SELECTOR (4 inputs, 1 selected)
 Last programmed 00:28:55 ago, and selection made 00:00:20 ago

Next selection points:

SPA scoped : None
 Node scoped : None
 Chassis scoped: None
 Router scoped : LC_EGRESS

S	Input	Last Selection Point	QL	Pri	Status
1	GigabitEthernet0/0/0/3	0/1/CPU0 RP_SELECTOR 1	PRC	100	Ok
	GigabitEthernet0/0/0/3	0/0/CPU0 LC_INGRESS 1	PRC	100	Ok
	GigabitEthernet0/0/0/0	0/0/CPU0 LC_INGRESS 2	PRC	200	Ok
	Internal0 [0/2/CPU0]	n/a	ST3	255	Ok

Selection point: RP_CLOCK_INTF_SELECTOR (4 inputs, 1 selected)
 Last programmed 00:28:55 ago, and selection made 00:00:20 ago

Next selection points:

SPA scoped : None

```

Node scoped   : None
Router scoped  : None
Chassis scoped: None
Used for local clock-interface output
S  Input                               Last Selection Point          QL  Pri  Status
== =====
1  GigabitEthernet0/0/0/3              0/1/CPU0 RP_SELECTOR 1        PRC  100  Ok
   GigabitEthernet0/0/0/3              0/0/CPU0 LC_INGRESS 1        PRC  100  Ok
   GigabitEthernet0/0/0/0              0/0/CPU0 LC_INGRESS 2        PRC  200  Ok
   Internal0 [0/2/CPU0]                n/a                          ST3   255  Ok

```

The output in summary mode is as follows, showing the timing sources which are selected in the system, and are clocking 1 or more outputs:

```

GigabitEthernet0/0/0/3 is selected for 2 outputs
Sync0 [0/0/CPU0] is selected for 25 outputs

```

show lldp

To display the global Link Layer Discovery Protocol (LLDP) operational characteristics on the system, use the **show lldp** command in EXEC configuration mode.

show lldp

Syntax Description	This command has no keywords or arguments.	
Command Default	None	
Command Modes	EXEC (#)	
Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show lldp** command displays the LLDP operational characteristics when LLDP is enabled globally on the system using the **lldp** command. The settings for the following commands are displayed:

- **lldp timer**
- **lldp holdtime**
- **lldp reinit**

Task ID	Task ID	Operation
	ethernet-services	read

Examples

The following example shows the default LLDP operational characteristics when LLDP is enabled globally on the system:

```
RP/0/RSP0/CPU0:router# show lldp
Wed Apr 13 06:16:45.510 DST
Global LLDP information:
  Status: ACTIVE
  LLDP advertisements are sent every 30 seconds
  LLDP hold time advertised is 120 seconds
  LLDP interface reinitialisation delay is 2 seconds
```

The following example shows the output when LLDP is not enabled globally on the system:

```
RP/0/RSP0/CPU0:router# show lldp
Wed Apr 13 06:42:48.221 DST
% LLDP is not enabled
```

Related Commands

Command	Description
lldp, on page 192	Enables LLDP globally for both transmit and receive operation on the system.
lldp timer, on page 198	Specifies the LLDP packet rate.
lldp holdtime, on page 194	Specifies the length of time that information from an LLDP packet should be held by the receiving device before aging and removing it.
lldp reinit, on page 196	Specifies the length of time to delay initialization of LLDP on an interface.

show lldp entry

To display detailed information about LLDP neighbors, use the **show lldp entry** command in EXEC configuration mode.

show lldp entry *{* | name}*

Syntax Description	<i>*</i>	Displays detailed information about all LLDP neighbors.
	<i>name</i>	Name of a specific LLDP neighbor for which detailed information is displayed.

Syntax Description This command has no keywords or arguments.

Command Modes EXEC (#)

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	ethernet-services	read

Examples The following example shows sample output for all LLDP neighbor table entries on the system:

```
RP/0/RSP0/CPU0:router# show lldp entry *
Wed Apr 13 10:29:40.342 UTC
Capability codes:
  (R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device
  (W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other

-----
Local Interface: GigabitEthernet0/0/0/8
Chassis id: 0026.9815.c3e6
Port id: Gi0/0/0/8
Port Description: GigabitEthernet0/0/0/8
System Name: asr9k-5

System Description:
```



```
Cisco IOS XR Software, Version 4.1.0.32I[Default]
Copyright (c) 2011 by Cisco Systems, Inc.
```

```
Time remaining: 102 seconds
Hold Time: 120 seconds
System Capabilities: R
Enabled Capabilities: R
Management Addresses:
  IPv4 address: 10.5.173.110
```

```
-----
Local Interface: GigabitEthernet0/0/0/8
Chassis id: 0026.9815.c3e6
Port id: Gi0/0/0/8.1
Port Description: GigabitEthernet0/0/0/8.1
System Name: asr9k-5
```

```
System Description:
Cisco IOS XR Software, Version 4.1.0.32I[Default]
Copyright (c) 2011 by Cisco Systems, Inc.
```

```
Time remaining: 96 seconds
Hold Time: 120 seconds
System Capabilities: R
Enabled Capabilities: R
Management Addresses:
  IPv4 address: 10.5.173.110
```

```
Total entries displayed: 2
```

Related Commands

Command	Description
lldp, on page 192	Enables LLDP globally for both transmit and receive operation on the system.

show lldp errors

To display Link Layer Discovery Protocol (LLDP) error and overflow statistics, use the **show lldp errors** command in EXEC configuration mode.

show lldp errors [**location** *location*]

Syntax Description	location <i>location</i>	(Optional) Displays information about LLDP neighbors for the specified location. The <i>location</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default	Totals of LLDP error and overflow statistics for the system are displayed.

Command Modes	EXEC (#)

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	ethernet-services	read

Examples The following example shows sample output for the **show lldp errors** command:

```
RP/0/RSP0/CPU0:router# show lldp errors
Wed Apr 13 06:17:08.321 DST

LLDP errors/overflows:
  Total memory allocation failures: 0
  Total encapsulation failures: 0
  Total input queue overflows: 0
  Total table overflows: 0
```

Related Commands

Command	Description
lldp, on page 192	Enables LLDP globally for both transmit and receive operation on the system.
show lldp traffic, on page 243	Displays statistics for LLDP traffic.

show lldp interface

To display Link Layer Discovery Protocol (LLDP) configuration and status information on an interface, use the **show lldp interface** command in EXEC configuration mode.

show lldp interface [*type interface-path-id* | **location** *location*]

Syntax Description	<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
	<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
	location <i>location</i>	(Optional) Displays information about LLDP neighbors for the specified location. The <i>location</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default LLDP configuration and status information for all interfaces is displayed.

Command Modes EXEC (#)

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When LLDP is enabled globally on the system, all supported interfaces are automatically enabled for both LLDP receive and transmit operations. You can individually disable interfaces for either LLDP receive or transmit operations using the **receive disable** command or **transmit disable** command in LLDP configuration mode under the interface.

Task ID	Task ID	Operation
	ethernet-services	read

Examples

The following example shows sample output for the **show lldp interface** command for the Gigabit Ethernet interface at 0/1/0/7:

```
RP/0/RSP0/CPU0:router# show lldp interface gigabitethernet 0/1/0/7
Wed Apr 13 13:22:30.501 DST
```

```
GigabitEthernet0/1/0/7:
  Tx: enabled
  Rx: enabled
  Tx state: IDLE
  Rx state: WAIT FOR FRAME
```

Table 14: show lldp interface Field Descriptions

Field	Description
Tx:	Configuration status of the interface to transmit LLDP advertisements.
Rx:	Configuration status of the interface to receive LLDP advertisements.
Tx state:	Status of the LLDP transmit process on the interface.
Rx state:	Status of the LLDP receive process on the interface.

Related Commands

Command	Description
lldp , on page 192	Enables LLDP globally for both transmit and receive operation on the system.
lldp (interface) , on page 193	Enters LLDP configuration mode.
receive disable	Disables LLDP receive operations on the interface.
transmit disable	Disables LLDP transmit operations on the interface.

show lldp neighbors

To display information about Link Layer Discovery Protocol (LLDP) neighbors, use the **show lldp neighbors** command in EXEC configuration mode.

show lldp neighbors [*type interface-path-id* | **location** *location*] [**detail**]

Syntax Description

<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>location</i>	(Optional) Displays information about LLDP neighbors for the specified location. The <i>location</i> argument is entered in the <i>rack/slot/module</i> notation.
detail	(Optional) Displays all available information about LLDP neighbors.

Command Default

Basic device information for LLDP neighbors is displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To clear the neighbor information displayed by the **show lldp neighbors** command, use the **clear lldp table** command.

Task ID

Task ID	Operation
ethernet-services	read

Examples

The following example show sample output for the **show lldp neighbors** command:

```
RP/0/RSP0/CPU0:router# show lldp neighbors
Capability codes:
  (R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device
  (W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other

Device ID           Local Intf      Hold-time   Capability     Port ID
R1                  Et1/0          150         R              Et1/0

Total entries displayed: 1
```

Table 15: show lldp neighbors Field Descriptions

Field	Description
Device ID	Name of the neighbor device. Note If the device ID has more than 20 characters, the ID will be truncated to 20 characters in command output because of display constraints.
Local Intf	Local interface through which this neighbor is connected.
Hold-time	Amount of time (in seconds) that the local device will hold the LLDP advertisement from a sending device before discarding it.
Capability	The device type of the neighbor, whose values correspond to the characters and definition displayed in the "Capability codes" section.
Port ID	Interface and port number of the neighboring device.

The following example shows sample output for the **show lldp neighbors detail** command:

```
RP/0/RSP0/CPU0:router# show lldp neighbors detail
Wed Apr 13 10:29:40.342 UTC
Capability codes:
  (R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device
  (W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other

-----
Local Interface: GigabitEthernet0/0/0/8
Chassis id: 0026.9815.c3e6
Port id: Gi0/0/0/8
Port Description: GigabitEthernet0/0/0/8
System Name: asr9k-5

System Description:
Cisco IOS XR Software, Version 4.1.0.32I[Default]
Copyright (c) 2011 by Cisco Systems, Inc.

Time remaining: 102 seconds
Hold Time: 120 seconds
System Capabilities: R
Enabled Capabilities: R
```

show lldp neighbors

```
Management Addresses:
  IPv4 address: 10.5.173.110

-----
Local Interface: GigabitEthernet0/0/0/8
Chassis id: 0026.9815.c3e6
Port id: Gi0/0/0/8.1
Port Description: GigabitEthernet0/0/0/8.1
System Name: asr9k-5

System Description:
Cisco IOS XR Software, Version 4.1.0.32I[Default]
Copyright (c) 2011 by Cisco Systems, Inc.

Time remaining: 96 seconds
Hold Time: 120 seconds
System Capabilities: R
Enabled Capabilities: R
Management Addresses:
  IPv4 address: 10.5.173.110

Total entries displayed: 2
```

Related Commands

Command	Description
lldp, on page 192	Enables LLDP globally for both transmit and receive operation on the system.
clear lldp, on page 179	Resets LLDP traffic counters or LLDP neighbor information.

show lldp traffic

To display statistics for Link Layer Discovery Protocol (LLDP) traffic, use the **show lldp traffic** command in EXEC configuration mode.

show lldp traffic [*location location*]

Syntax Description

location <i>location</i>	(Optional) Displays LLDP statistics for traffic at the specified location. The <i>location</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

Totals of LLDP statistics for the system are displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To reset the counters displayed by the **show lldp traffic** command, use the **clear lldp counters** command.

Task ID

Task ID	Operation
ethernet-services	read

Examples

The following example shows sample output for statistics for all LLDP traffic on the system:

```
RP/0/RSP0/CPU0:router# show lldp traffic
LLDP traffic statistics:
  Total frames out: 277
  Total entries aged: 0
  Total frames in: 328
  Total frames received in error: 0
  Total frames discarded: 0
  Total TLVs discarded: 0
  Total TLVs unrecognized: 0
```

Table 16: show lldp traffic Field Descriptions

Field	Description
Total frames out:	Number of LLDP advertisements sent from the device.
Total entries aged:	Number of LLDP neighbor entries removed due to expiration of the hold time.
Total frames in:	Number of LLDP advertisements received by the device.
Total frames received in error:	Number of times the LLDP advertisements contained errors of any type.
Total frames discarded:	Number of times the LLDP process discarded an incoming advertisement.
Total TLVs discarded:	Number of times the LLDP process discarded a Type Length Value (TLV) from an LLDP frame.
Total TLVs unrecognized:	Number of TLVs that could not be processed because the content of the TLV was not recognized by the device or the contents of the TLV were incorrectly specified.

Related Commands

Command	Description
lldp , on page 192	Enables LLDP globally for both transmit and receive operation on the system.
clear lldp , on page 179	Resets LLDP traffic counters or LLDP neighbor information.

show mac-accounting (Ethernet)

To display MAC accounting statistics for an interface, use the **show mac-accounting** command in EXEC mode.

show mac-accounting {GigabitEthernet| TenGigE} *interface-path-id* [**location node-id**]

Syntax Description

{GigabitEthernet TenGigE }	Indicates the type of Ethernet interface whose MAC accounting statistics you want to display. Enter GigabitEthernet , TenGigE .
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location node-id	(Optional) Displays detailed MAC accounting information for the specified interface on the specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module/port</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.1.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.

- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows the output from the **show mac-accounting** command, which displays MAC accounting statistics on the specified interface:

```
RP/0/RSP0/CPU0:router# show mac-accounting TenGigE 0/2/0/4 location 0/1/CPU0
TenGigE0/2/0/4
  Input (511 free)
000b.4558.caca: 4 packets, 456 bytes
                Total: 4 packets, 456 bytes
```

Table 17: show mac-accounting Field Descriptions

Field	Description
Interface	The interface from which the statistics are generated.
Input	Heading for the ingress MAC accounting statistics. The number of MAC accounting entries still available is shown in parentheses.
Total	Total statistics for the traffic accounted for by MAC accounting. This excludes any traffic for which there is no MAC address entry, such as non-IP traffic from an unknown MAC source address.

Related Commands

Command	Description
clear mac-accounting (Ethernet) , on page 181	Clears MAC accounting statistics for an interface.
mac-accounting , on page 204	Generates accounting information for IP traffic based on the source and destination MAC addresses on LAN interfaces.

ssm disable

To disable Synchronization Status Messaging (SSM) on an interface, use the **ssm disable** command in interface frequency synchronization configuration mode. To return SSM to the default value of enabled, use the no form of this command.

ssm disable

no ssm disable

Command Default

Enabled

Command Modes

Interface frequency synchronization configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to disable SSM on an interface:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frequency synchronization
RP/0/RSP0/CPU0:router(config-if-freqsync)# ssm disable
RP/0/RSP0/CPU0:router(config-if-freqsync)# commit
```

transport-mode

To specify the transport mode for a 10-Gigabit Ethernet interface, use the **transport-mode** command in interface configuration mode. To return to the default mode, use the **no** form of this command.

transport-mode {wan| otn bit-transparent {opu1e| opu2e}}

no transport-mode {wan| otn bit-transparent {opu1e| opu2e}}

Syntax Description

wan	Configures the interface for 10GBASE-W WAN SONET/SDH (9.95328Gb/s) transport.
otn bit-transparent	Configures the interface for 10-Gigabit Ethernet over Optical Transport Network (ITU-T G.709) with 10GBASE-R transparently mapped into OTU-2.
opu1e	Configures the interface for 10GBASE-R over OPU1e without fixed stuffing (11.0491Gb/s).
opu2e	Configures the interface for 10GBASE-R over OPU2e with fixed stuffing (11.0957Gb/s)

Command Default

The interface is in LAN mode. Neither WAN mode or OTN mode is configured.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Three modes are supported for a 10-Gigabit Ethernet interface: LAN, WAN, or OTN on the following Ethernet line cards:

- 2-Port 10-Gigabit Ethernet, 20-Port Gigabit Ethernet Combination line card (A9K-2T20GE-B and A9K-2T20GE-L)
- 8-Port 10-Gigabit Ethernet line card (A9K-8T-L, -B, or -E)
- 16-Port 10-Gigabit Ethernet SFP+ line card (A9K-16T/8-B and A9K-16T/8-B+AIP)

If you want to configure the interface for DWDM support, configure the 10-Gigabit Ethernet interface for OTN transport mode.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to configure the interface for WAN PHY mode:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface 10gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# transport-mode wan
RP/0/RSP0/CPU0:router(config-if)# commit
```

The following example shows how to configure a DWDM interface using OTN transport:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface 10gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# transport-mode otn bit-transparent opule
RP/0/RSP0/CPU0:router(config-if)# commit
```

The following example shows how to return the interface configuration to its default LAN mode from OTN or WAN PHY mode:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface 10gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# no transport-mode
RP/0/RSP0/CPU0:router(config-if)# commit
```

Related Commands

Command	Description
controller wanphy, on page 1190	Enters WAN physical controller configuration mode in which you can configure a 10-Gigabit Ethernet WAN PHY controller.

wait-to-restore

To configure the wait-to-restore time for frequency synchronization on an interface, use the **wait-to-restore** command in interface frequency synchronization configuration mode. To return the wait-to-restore time to the default value, use the **no** form of this command.

wait-to-restore *minutes*

no wait-to-restore *minutes*

Syntax Description

<i>minutes</i>	The delay time (in minutes) between when an interface comes up and when it is used for synchronization. The range is 0 to 12.

Command Default

There is a 5-minute delay for frequency synchronization after an interface comes up.

Command Modes

Interface frequency synchronization (config-if-freqsync)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to configure the wait-to-restore time for frequency synchronization on an interface:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frequency synchronization
RP/0/RSP0/CPU0:router(config-if-freqsync)# wait-to-restore 0
RP/0/RSP0/CPU0:router(config-if-freqsync)# selection input
```



```
RP/0/RSP0/CPU0:router(config-sonet-freqsync)# commit
```

wait-to-restore



Ethernet OAM Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring Ethernet Operations, Administration, and Maintenance (EOAM) on the Cisco ASR 9000 Series Router.

- [action capabilities-conflict, page 257](#)
- [action critical-event, page 259](#)
- [action discovery-timeout, page 261](#)
- [action dying-gasp, page 263](#)
- [action high-threshold, page 265](#)
- [action remote-loopback, page 267](#)
- [action session-down, page 269](#)
- [action session-up, page 271](#)
- [action uni-directional link-fault, page 273](#)
- [action wiring-conflict, page 275](#)
- [aggregate, page 277](#)
- [ais transmission, page 279](#)
- [ais transmission up, page 281](#)
- [buckets archive, page 283](#)
- [buckets size, page 285](#)
- [clear ethernet cfm ccm-learning-database location, page 287](#)
- [clear ethernet cfm interface statistics, page 288](#)
- [clear ethernet cfm local meps, page 290](#)
- [clear ethernet cfm peer meps, page 292](#)
- [clear ethernet cfm traceroute-cache, page 294](#)
- [clear ethernet lmi interfaces, page 296](#)

- [clear ethernet oam statistics, page 298](#)
- [clear ethernet sla statistics all, page 300](#)
- [clear ethernet sla statistics on-demand, page 302](#)
- [clear ethernet sla statistics profile, page 305](#)
- [clear ethernet udd statistics, page 307](#)
- [connection timeout, page 309](#)
- [continuity-check archive hold-time, page 311](#)
- [continuity-check interval, page 312](#)
- [continuity-check loss auto-traceroute, page 314](#)
- [cos \(CFM\), page 315](#)
- [debug ethernet cfm packets, page 317](#)
- [debug ethernet cfm protocol-state, page 320](#)
- [domain, page 322](#)
- [efd, page 324](#)
- [ethernet cfm \(global\), page 326](#)
- [ethernet cfm \(interface\), page 328](#)
- [ethernet lmi, page 330](#)
- [ethernet oam, page 331](#)
- [ethernet oam loopback, page 332](#)
- [ethernet oam profile, page 334](#)
- [ethernet sla, page 335](#)
- [ethernet sla on-demand operation type cfm-delay-measurement probe, page 336](#)
- [ethernet sla on-demand operation type cfm-loopback probe, page 342](#)
- [ethernet udd reset interface, page 348](#)
- [ethernet uni id, page 349](#)
- [extension remote-uni disable, page 351](#)
- [frame-period threshold, page 353](#)
- [frame-period window, page 355](#)
- [frame-seconds threshold, page 356](#)
- [frame-seconds window, page 358](#)
- [frame threshold, page 360](#)
- [frame window, page 362](#)
- [hello-interval, page 364](#)

- [link-monitor, page 366](#)
- [log ais, page 368](#)
- [log continuity-check errors, page 369](#)
- [log continuity-check mep changes, page 371](#)
- [log crosscheck errors, page 373](#)
- [log disable, page 375](#)
- [log efd, page 377](#)
- [maximum-meps, page 379](#)
- [mep crosscheck, page 381](#)
- [mep-id, page 382](#)
- [mep domain, page 384](#)
- [mib-retrieval, page 386](#)
- [mip auto-create, page 388](#)
- [mode \(Ethernet OAM\), page 390](#)
- [monitoring, page 392](#)
- [packet size, page 394](#)
- [ping ethernet cfm, page 396](#)
- [polling-verification-timer, page 399](#)
- [priority \(SLA\), page 401](#)
- [probe, page 403](#)
- [profile \(EOAM\), page 404](#)
- [profile \(SLA\), page 406](#)
- [remote-loopback, page 408](#)
- [require-remote, page 410](#)
- [schedule \(SLA\), page 412](#)
- [send \(SLA\), page 416](#)
- [service, page 419](#)
- [show efd interface, page 422](#)
- [show ethernet cfm ccm-learning-database, page 424](#)
- [show ethernet cfm configuration-errors, page 426](#)
- [show ethernet cfm interfaces ais, page 428](#)
- [show ethernet cfm interfaces statistics, page 431](#)
- [show ethernet cfm local maintenance-points, page 433](#)

- [show ethernet cfm local meps, page 436](#)
- [show ethernet cfm peer meps, page 442](#)
- [show ethernet cfm traceroute-cache, page 449](#)
- [show ethernet lmi interfaces, page 456](#)
- [show ethernet oam configuration, page 465](#)
- [show ethernet oam discovery, page 468](#)
- [show ethernet oam interfaces, page 471](#)
- [show ethernet oam statistics, page 474](#)
- [show ethernet sla configuration-errors, page 476](#)
- [show ethernet sla operations, page 478](#)
- [show ethernet sla statistics, page 481](#)
- [show ethernet udd interfaces, page 487](#)
- [show ethernet udd statistics, page 490](#)
- [sla operation, page 492](#)
- [snmp-server traps ethernet cfm, page 494](#)
- [snmp-server traps ethernet oam events, page 495](#)
- [statistics measure, page 496](#)
- [status-counter, page 498](#)
- [symbol-period threshold, page 500](#)
- [symbol-period window, page 502](#)
- [tags, page 503](#)
- [traceroute cache, page 505](#)
- [traceroute ethernet cfm, page 507](#)
- [uni-directional link-fault detection, page 510](#)

action capabilities-conflict

To configure what action is taken on an interface when a capabilities-conflict event occurs, use the **action capabilities-conflict** command in Ethernet OAM configuration mode or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of this command.

action capabilities-conflict {disable| efd | error-disable-interface| log}

no action capabilities-conflict {disable| efd | error-disable-interface| log}

Syntax Description

disable	Performs no action on the interface when a capabilities-conflict event occurs.
efd	Puts the line protocol into the down state for an interface when a capabilities-conflict event occurs. The state is removed when the first packet is received without a conflict.
error-disable-interface	Puts the interface into the error-disable state when a capabilities-conflict event occurs.
log	(Interface Ethernet OAM configuration only) Creates a syslog entry when a capabilities-conflict event occurs. This action is available only in interface Ethernet OAM configuration mode to override the OAM profile on a specific interface.

Command Default

The default action is to create a syslog entry.

Command Modes

Ethernet OAM configuration (config-eoam)

Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The efd keyword was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure that no action is performed on the interface when a capabilities-conflict event occurs.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action capabilities-conflict disable
```

The following example shows how to configure putting the interface into the line-protocol-down state when a capabilities-conflict event occurs.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action capabilities-conflict efd
```

The following example shows how to configure that the interface is put into the error-disable state when a capabilities-conflict event occurs.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action capabilities-conflict error-disable-interface
```

The following example shows how to configure that a syslog entry is created when a capabilities-conflict event occurs. This configuration overrides the interface Ethernet OAM profile.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# action capabilities-conflict log
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.

action critical-event

To configure what action is taken on an interface when a critical-event notification is received from the remote Ethernet OAM peer, use the **action critical-event** command in Ethernet OAM configuration mode or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of this command.

action critical-event {**disable**| **error-disable-interface**| **log**}

no action critical-event {**disable**| **error-disable-interface**| **log**}

Syntax Description

disable	Performs no action on the interface when a critical-event notification is received.
error-disable-interface	Puts the interface into the error-disable state when a critical-event notification is received.
log	(Interface Ethernet OAM configuration only) Creates a syslog entry when a critical-event notification is received. This action is available only in interface Ethernet OAM configuration mode to override the OAM profile on a specific interface.

Command Default

The default action is to create a syslog entry.

Command Modes

Ethernet OAM configuration (config-eoam)

Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure that no action is performed on the interface when a critical-event notification is received.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action critical-event disable
```

The following example shows how to configure that the interface is put into the error-disable state when a critical-event notification is received.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action critical-event error-disable-interface
```

The following example shows how to configure that a syslog entry is created when a critical-event notification is received. This configuration overrides the interface Ethernet OAM profile.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# action critical-event log
```

Related Commands

Command	Description
ethernet oam profile , on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam , on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM) , on page 404	Attaches an Ethernet OAM profile to an interface.

action discovery-timeout

To configure what action is taken on an interface when a connection timeout occurs, use the **action discovery-timeout** command in Ethernet OAM configuration mode or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of this command.

action discovery-timeout {**disable**| **efd error-disable-interface**| **log**}

no action discovery-timeout {**disable**| **efd error-disable-interface**| **log**}

Syntax Description

disable	Performs no action on the interface when a connection timeout occurs.
efd	Puts the line protocol into the down state for an interface when a connection timeout occurs. The state is removed when the session is re-established.
error-disable-interface	Puts the interface into the error-disable state when a connection timeout occurs.
log	(Interface Ethernet OAM configuration only) Creates a syslog entry when a connection timeout occurs. This action is available only in interface Ethernet OAM configuration mode to override the OAM profile on a specific interface.

Command Default

The default action is to create a syslog entry.

Command Modes

Ethernet OAM configuration (config-eoam)

Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The efd keyword was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure that no action is performed on the interface when a connection timeout occurs.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action discovery-timeout disable
```

The following example shows how to configure putting the interface into the line-protocol-down state when a connection timeout occurs.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action discovery-timeout efd
```

The following example shows how to configure that the interface is put into the error-disable state when a connection timeout occurs.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action discovery-timeout error-disable-interface
```

The following example shows how to configure that a syslog entry is created when a connection timeout occurs. This configuration overrides the interface Ethernet OAM profile.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# action discovery-timeout log
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.

action dying-gasp

To configure what action is taken on an interface when a dying-gasp notification is received from the remote Ethernet OAM peer, use the **action dying-gasp** command in Ethernet OAM configuration mode or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of this command.

action dying-gasp {**disable**| **error-disable-interface**| **log**}

no action dying-gasp {**disable**| **error-disable-interface**| **log**}

Syntax Description

disable	Performs no action on the interface when a dying-gasp notification is received.
error-disable-interface	Puts the interface into the error-disable state when a dying-gasp notification is received.
log	(Interface Ethernet OAM configuration only) Creates a syslog entry when a dying-gasp notification is received. This action is available only in interface Ethernet OAM configuration mode to override the OAM profile on a specific interface.

Command Default

The default action is to create a syslog entry.

Command Modes

Ethernet OAM configuration (config-eoam)
Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure that no action is performed on the interface when a dying-gasp notification is received.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action dying-gasp disable
```

The following example shows how to configure that the interface is put into the error-disable state when a dying-gasp notification is received.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action dying-gasp error-disable-interface
```

The following example shows how to configure that a syslog entry is created when a dying-gasp notification is received. This configuration overrides the interface Ethernet OAM profile.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# action dying-gasp log
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.

action high-threshold

To configure what action is taken on an interface when a high threshold is exceeded, use the **action high-threshold** command in Ethernet OAM configuration mode or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of this command.

action high-threshold {**disable**| **error-disable-interface**| **log**}

no action high-threshold {**disable**| **error-disable-interface**| **log**}

Syntax Description

disable	(Interface Ethernet OAM configuration only) Performs no action on the interface when a high threshold is exceeded.
error-disable-interface	Puts the interface into the error-disable state when a high threshold is exceeded.
log	Creates a syslog entry when a high threshold is exceeded. This action is available only in interface Ethernet OAM configuration mode to override the OAM profile on a specific interface.

Command Default

The default is that no action is taken when a high threshold is exceeded.

Command Modes

Ethernet OAM configuration (config-eoam)

Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure that a syslog entry is created on the interface when a high threshold is exceeded.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action high-threshold log
```

The following example shows how to configure that the interface is put into the error-disable state when a high threshold is exceeded.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action high-threshold error-disable-interface
```

The following example shows how to configure that no action is taken when a high threshold is exceeded. This configuration overrides the Ethernet OAM profile configuration.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# action high-threshold disable
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.

action remote-loopback

To configure what action is taken on an interface when a remote-loopback event occurs, use the **action remote-loopback** command in Ethernet OAM configuration mode or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of this command.

action remote-loopback {disable| log}

no action remote-loopback {disable| log}

Syntax Description

disable	Performs no action on the interface when a remote-loopback event occurs.
log	(Interface Ethernet OAM configuration only) Creates a syslog entry when a remote-loopback event occurs. This action is available only in interface Ethernet OAM configuration mode to override the OAM profile on a specific interface.

Command Default

The default action is to create a syslog entry.

Command Modes

Ethernet OAM configuration (config-eoam)

Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure that no action is performed on the interface when a remote-loopback event occurs.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
```

```
RP/0/RSP0/CPU0:router(config-eoam)# action remote-loopback disable
```

The following example shows how to configure that a syslog entry is created when a remote-loopback event occurs. This configuration overrides the interface Ethernet OAM profile.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# action remote-loopback log
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.

action session-down

To configure what action is taken on an interface when an Ethernet OAM session goes down, use the **action session-down** command in Ethernet OAM configuration mode or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of this command.

action session-down {**disable**| **efd** | **error-disable-interface**| **log**}

no action session-down {**disable**| **efd** | **error-disable-interface**| **log**}

Syntax Description

disable	Performs no action on the interface when a capabilities-conflict event occurs.
efd	Puts the line protocol into the down state for an interface when a capabilities-conflict event occurs. The state is removed when the first packet is received without a conflict.
error-disable-interface	Puts the interface into the error-disable state when a capabilities-conflict event occurs.
log	(Interface Ethernet OAM configuration only) Creates a syslog entry when a capabilities-conflict event occurs. This action is available only in interface Ethernet OAM configuration mode to override the OAM profile on a specific interface.

Command Default

The default action is to create a syslog entry.

Command Modes

Ethernet OAM configuration (config-eoam)

Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The efd keyword was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure that no action is performed on the interface when an Ethernet OAM session goes down.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action session-down disable
```

The following example shows how to configure putting the interface into the line-protocol-down state when an Ethernet OAM session goes down.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action session-down efd
```

The following example shows how to configure that the interface is put into the error-disable state when an Ethernet OAM session goes down.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action session-down error-disable-interface
```

The following example shows how to configure that a syslog entry is created when an Ethernet OAM session goes down. This configuration overrides the interface Ethernet OAM profile.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# action session-down log
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.

action session-up

To configure what action is taken on an interface when an Ethernet OAM session is established, use the **action session-up** command in Ethernet OAM configuration mode or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of this command.

action session-up {disable| log}

no action session-up {disable| log}

Syntax Description

disable	Performs no action on the interface when an Ethernet OAM session is established.
log	(Interface Ethernet OAM configuration only) Creates a syslog entry when an Ethernet OAM session is established. This action is available only in interface Ethernet OAM configuration mode to override the OAM profile on a specific interface.

Command Default

The default action is to create a syslog entry.

Command Modes

Ethernet OAM configuration (config-eoam)

Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure that no action is performed on the interface when an Ethernet OAM session is established.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
```

```
RP/0/RSP0/CPU0:router(config-eoam)# action session-up disable
```

The following example shows how to configure that a syslog entry is created when an Ethernet OAM session is established. This configuration overrides the interface Ethernet OAM profile.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# action session-up log
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.

action uni-directional link-fault

To configure what action is taken on an interface when a link-fault notification is received from the remote Ethernet OAM peer, use the **action uni-directional link-fault** command in Ethernet OAM configuration mode or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of this command.

action uni-directional link-fault {disable| efd | error-disable-interface| log}

no action uni-directional link-fault {disable| efd | error-disable-interface| log}

Syntax Description

disable	Performs no action on the interface when a capabilities-conflict event occurs.
efd	Puts the line protocol into the down state for an interface when a capabilities-conflict event occurs. The state is removed when the first packet is received without a conflict.
error-disable-interface	Puts the interface into the error-disable state when a capabilities-conflict event occurs.
log	(Interface Ethernet OAM configuration only) Creates a syslog entry when a capabilities-conflict event occurs. This action is available only in interface Ethernet OAM configuration mode to override the OAM profile on a specific interface.

Command Default

The default action is to create a syslog entry.

Command Modes

Ethernet OAM configuration (config-eoam)

Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 4.0.0	This command was introduced.
	This command replaces the action link-fault command.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command only determines the action taken when a uni-directional link fault notification is received from the peer; it does not affect the action taken when a fault is detected locally.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure that no action is performed on the interface when a link-fault notification is received.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action uni-directional link-fault disable
```

The following example shows how to configure putting the interface into the line-protocol-down state when a link-fault notification is received.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action uni-directional link-fault efd
```

The following example shows how to configure that the interface is put into the error-disable state when a link-fault notification is received.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action uni-directional link-fault error-disable-interface
```

The following example shows how to configure that a syslog entry is created when a link-fault notification is received. This configuration overrides the interface Ethernet OAM profile.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# action uni-directional link-fault log
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.

action wiring-conflict

To configure what action is taken on an interface when a wiring-conflict event occurs, use the **action wiring-conflict** command in Ethernet OAM configuration mode or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of this command.

action wiring-conflict {**disable**| **efd** | **error-disable-interface**| **log**}

no action wiring-conflict {**disable**| **efd** | **error-disable-interface**| **log**}

Syntax Description

disable	Performs no action on the interface when a capabilities-conflict event occurs.
efd	Puts the line protocol into the down state for an interface when a capabilities-conflict event occurs. The state is removed when the first packet is received without a conflict.
error-disable-interface	Puts the interface into the error-disable state when a capabilities-conflict event occurs.
log	(Interface Ethernet OAM configuration only) Creates a syslog entry when a capabilities-conflict event occurs. This action is available only in interface Ethernet OAM configuration mode to override the OAM profile on a specific interface.

Command Default

The default action is to put the interface into error-disable state.

Command Modes

Ethernet OAM configuration (config-eoam)

Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The efd keyword was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure that no action is performed on the interface when a wiring-conflict event occurs.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action wiring-conflict disable
```

The following example shows how to configure putting the interface into the line-protocol-down state when a wiring-conflict event occurs.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action wiring-conflict efd
```

The following example shows how to configure that a syslog entry is created when a wiring-conflict event occurs.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# action wiring-conflict log
```

The following example shows how to configure that the interface is put into the error-disable state when a wiring-conflict event occurs. This configuration overrides the interface Ethernet OAM profile.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
(config-if-eoam)# action wiring-conflict error-disable-interface
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.

aggregate

To configure the size and number of bins into which to aggregate the results of statistics collection, use the **aggregate** command in SLA profile statistics configuration mode. To return to the default, use the **no** form of this command.

aggregate {*bins count width width*| **none**}

no aggregate {*bins count width width*| **none**}

Syntax Description

bins <i>count</i>	Number of bins. The range is 2 to 200.
width <i>width</i>	Size of each bin in milliseconds. The range is 1 to 10000.
none	No aggregation is performed. All samples are stored individually.

Command Default

All collected statistics are aggregated into one bin.

Command Modes

SLA profile statistics configuration (config-sla-prof-stat-cfg)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Changing the aggregation for a given metric clears all stored data for that metric.

When aggregation is enabled, a number of bins are created, each of which represents a range of values. Instead of storing each individual result, all that is stored is a counter of the number of results that fall within the range for each bin. This uses much less memory than storing each individual result.

For round-trip-delay, the first bin starts at 0, each bin covers a range of values defined by the specified width, except for the last bin which ends at infinity. For example, an aggregate bin count of 4 and a width of 20 for delay measurements yields 4 bins of statistics for the following sample ranges:

- Bin 1—Samples with delay ranges 0 to < 20 ms.
- Bin 2—Samples with delay ranges greater than or equal to 20 and < 40 ms.
- Bin 3—Samples with delay ranges greater than or equal to 40 and < 60 ms.
- Bin 4—Samples with delay ranges 60 ms or greater (unbounded).

For round-trip-jitter, the bins are centered around 0 to include negative ranges. In this case, bins begin outward from 0 in the positive and negative direction. Using the example of a bin count of 4 with a width of 20 for jitter measurements, yields 4 bins of statistics for the following sample ranges:

- Bin 1—Samples with jitter ranges -20 ms or lower (unbounded in negative direction)
- Bin 2—Samples with jitter ranges greater than -20 ms to 0 ms.
- Bin 3—Samples with jitter ranges 0 to < than 20 ms.
- Bin 4—Samples with jitter ranges 20 ms or greater (unbounded in positive direction)

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure round-trip-delay statistics measurement in 4 bins each with a range of 20 milliseconds:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# statistics measure round-trip-delay
RP/0/RSP0/CPU0:router(config-sla-prof-stat-cfg)# aggregate bins 4 width 20
```

ais transmission

To configure Alarm Indication Signal (AIS) transmission for a Connectivity Fault Management (CFM) domain service, use the **ais transmission** command in CFM domain service configuration mode. To disable AIS transmission in a CFM domain service, use the no form of this command.

ais transmission [**interval 1s| 1m**] [**cos cos**]

no ais transmission [**interval 1s| 1m**] [**cos cos**]

Syntax Description

interval	(Optional) Interval at which AIS packets are transmitted. Valid values are: • 1s – Interval of 1 second • 1m – Interval of 1 minute
cos cos	(Optional) Specifies the Class of Service (CoS) for the AIS packets. Valid values are 0 to 7.

Command Default

AIS transmission is disabled by default.

If **interval** is not specified, the default interval is 1 second.

If **cos** is not specified, each MEP uses its own CoS value, inherited from the interface.

Command Modes

CFM domain service configuration (config-cfm-dmn-svc)

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command enables AIS for all MEPs in the service. AIS messages are triggered by the following events:

- Detection of a CCM defect.
- Detection of a missing peer MEP (when cross-check is configured).
- Receipt of AIS or LCK messages.
- Detection of interface down events (for down MEPs only).

AIS messages are transmitted in the opposite direction of CCMs and other CFM messages that are sent by the MEP. Therefore, up MEPs send AIS messages out of the interface, whereas down MEPs send AIS messages toward the bridging function.

In addition, AIS messages are sent at a higher maintenance level than other CFM messages sent by the MEP:

- If there is a higher-level MEP on the interface in the same direction (up MEP or down MEP), then the AIS messages are passed internally to this higher level MEP. In this case, no AIS messages are actually transmitted (unless the higher-level MEP is also in a service with AIS transmission configured).
- If there is a MIP on the interface, then AIS messages are sent at the level of the MIP.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure Alarm Indication Signal (AIS) transmission for a CFM domain service:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain D1 level 1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service S1 bridge group BG1 bridge-domain BD2
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# ais transmission interval 1m cos 7
```

Related Commands

Command	Description
log ais, on page 368	Configures AIS logging for a CFM domain service to indicate when AIS or LCK packets are received.
ais transmission up, on page 281	Configures AIS transmission on a CFM interface.
show ethernet cfm interfaces ais, on page 428	Displays the information about interfaces that are currently transmitting AIS.
show ethernet cfm local meps, on page 436	Displays information about local MEPs.

ais transmission up

To configure Alarm Indication Signal (AIS) transmission on a Connectivity Fault Management (CFM) interface, use the **ais transmission up** command in interface CFM configuration mode. To disable AIS transmission on an interface, use the no form of this command.

ais transmission up [*interval 1s*| *1m*] [*cos cos*]

no ais transmission up [*interval 1s*| *1m*] [*cos cos*]

Syntax Description

interval	(Optional) Interval at which AIS packets are transmitted. Valid values are: • 1s – Interval of 1 second • 1m – Interval of 1 minute
cos cos	(Optional) Specifies the Class of Service (CoS) for the AIS packets. Valid values are 0 to 7.

Command Default

AIS transmission is disabled by default.

If **interval** is not specified, the default interval is 1 second.

If **cos** is not specified, each MEP uses its own CoS value, inherited from the interface.

Command Modes

Interface CFM configuration (config-if-cfm)

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

AIS transmission packets for CFM can be configured only on interfaces with no down MEPs. AIS packets are transmitted only if a MIP exists on the interface and the line protocol state is down. AIS messages are transmitted up, toward the bridging function (same direction as an up MEP sends CCMs), and they are transmitted at the level of the MIP.

If AIS transmission is configured on an interface with any down MEPs, the configuration is ignored, and an error is displayed in the **show ethernet cfm configuration-errors** command.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure AIS transmission on a CFM interface.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/2
RP/0/RSP0/CPU0:router(config-if)# ethernet cfm
RP/0/RSP0/CPU0:router(config-if-cfm)# ais transmission up interval 1m cos 7
```

Related Commands

Command	Description
ais transmission, on page 279	Configures AIS transmission for a CFM domain service.
log ais, on page 368	Configures AIS logging for a CFM domain service to indicate when AIS or LCK packets are received.
show ethernet cfm interfaces ais, on page 428	Displays the information about interfaces that are currently transmitting AIS.
show ethernet cfm local meps, on page 436	Displays information about local MEPS.

buckets archive

To configure the number of buckets to store in memory, use the **buckets archive** command in SLA profile statistics configuration mode. To return to the default value, use the no form of this command.

buckets archive *number*

Syntax Description	<i>number</i>	Number of buckets to store. The range is 1 to 100.

Command Default The default number of buckets stored in memory is 100.

Command Modes SLA profile statistics configuration (config-sla-prof-stat-cfg)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The results stored in the oldest bucket are discarded when the limit is reached, to make room for new results. If the number of archived buckets for a given metric decreases, the oldest buckets are deleted and the remaining buckets are untouched. If the number archived buckets for a given metric increases, the newest buckets are filled when the data is collected. See the Usage Guidelines in the [buckets size, on page 285](#) command for a description of buckets.

Task ID	Task ID	Operations
	ethernet-services	read, write

Examples The following example shows how to configure the number of buckets to store in memory:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# statistics measure round-trip-delay
RP/0/RSP0/CPU0:router(config-sla-prof-stat-cfg)# buckets archive 50
```

Related Commands

Command	Description
buckets size, on page 285	Configures the size of the buckets in which statistics are collected.

buckets size

To configure the size of the buckets in which statistics are collected, use the **buckets size** command in SLA profile statistics configuration mode. To return the **buckets size** to the default value, use the no form of this command.

buckets size *number* {**per-probe**| **probes**}

no buckets size *number* {**per-probe**| **probes**}

Syntax Description

<i>number</i>	Specifies the size of each bucket. The number of probes that each buckets may contain. The range is 1 to 100.
per-probe	Probes span multiple buckets.
probes	Buckets span multiple probes.

Command Default

1 probe per bucket is collected.

Command Modes

SLA profile statistics configuration mode (config-sla-prof-stat-cfg)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A bucket represents a time period during which statistics are collected. All the results received during that time period are recorded in the corresponding bucket. If aggregation is enabled, each bucket has its own set of bins and counters, and only results received during the time period represented by the bucket are included in those counters.

By default, there is a separate bucket for each probe. The time period is determined by how long the probe lasts (configured by the [probe](#), on page 403, [send \(SLA\)](#), on page 416, and [schedule \(SLA\)](#), on page 412 commands). This command allows you to modify the size of buckets so that you can have more buckets per probe, or fewer buckets per probe (fewer buckets allows the results from multiple probes to be included in the same bucket).

**Note**

Changing the size of the buckets for a given metric clears all stored data for that metric. All existing buckets are deleted and new buckets are created.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the size of the buckets in which statistics are collected.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# statistics measure round-trip-delay
RP/0/RSP0/CPU0:router(config-sla-prof-stat-cfg)# buckets size 100 per-probe
```

Related Commands

Command	Description
buckets archive , on page 283	Configures the number of buckets to store in memory.
probe , on page 403	Enters SLA profile probe configuration mode.
schedule (SLA) , on page 412	
send (SLA) , on page 416	Configures the number and timing of packets sent by a probe in an operations profile.

clear ethernet cfm ccm-learning-database location

To clear the Continuity Check Message (CCM) learning database, use the **clear ethernet cfm ccm-learning-database location** command in EXEC mode.

clear ethernet cfm ccm-learning-database location {**all**| *node-id*}

Syntax Description

all	Clears the CCM learning database for all interfaces.
<i>node-id</i>	Clears the CCM learning database for the designated node, entered in <i>r ack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to clear all the CFM CCM learning databases on all interfaces:

```
RP/0/RSP0/CPU0:router# clear ethernet cfm ccm-learning-database location all
```

Related Commands

Command	Description
show ethernet cfm ccm-learning-database , on page 424	Displays the CCM learning database.

clear ethernet cfm interface statistics

To clear the counters for an Ethernet CFM interface, use the **clear ethernet cfm interface statistics** command in EXEC mode.

clear ethernet cfm interface *interface-path-id* **statistics** [**location** {**all**| **location**}]

clear ethernet cfm interface statistics **location** {**all**| *node-id*}

Syntax Description

<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location	(Optional only when used with a specified interface) Clears MAC accounting statistics for a designated interface or for all interfaces.
all	Clears CFM counters for all interfaces.
<i>node-id</i>	Clears CFM counters for a specified interface, using <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to clear all the CFM counters from all interfaces:

```
RP/0/RSP0/CPU0:router# clear ethernet cfm interface statistics location all
```

Related Commands

Command	Description
show ethernet cfm interfaces statistics, on page 431	Displays the per-interface counters for CFM.

clear ethernet cfm local meps

To clear the counters for all MEPs or a specified MEP, use the **clear ethernet cfm local meps** command in EXEC mode.

clear ethernet cfm local meps [**all** | **domain** *domain-name* [**all** | **service** *service-name* [**all** | **mep-id** *id*]] | **interface** *interface-name* [**all** | **domain** *domain-name*]]

Syntax Description

all	Clears counters for all local MEPs.
domain <i>domain-name</i>	String of a maximum of 80 characters that identifies the domain in which the maintenance points reside. Note For more information about the syntax, use the question mark (?) online help function.
service <i>service-name</i>	String of a maximum of 80 characters that identifies the maintenance association to which the maintenance points belong.
mep-id <i>id</i>	Maintenance end point (MEP) ID number. The range for MEP ID numbers is 1 to 8191.
interface <i>interface-name</i>	String of a maximum of 80 characters that identifies the Ethernet interface.

Command Default

No default behavior or values

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The following counters are cleared:

- Number of continuity-check messages (CCMs) sent
- Number of CCMs received
- Number of CCMs received out of sequence
- Number of CCMs received, but discarded due to the **maximum-meps** limit

- Number of loopback messages (LBMs), used for CFM ping
- Number of loopback replies (LBRs), used for CFM ping, sent and received
- Number of LBRs received out of sequence
- Number of LBRs received with bad data (such as LBRs containing padding which does not match the padding sent in the corresponding LBM)
- Number of alarm indication signal (AIS) messages sent and received
- Number of lock (LCK) messages received

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to clear counters for all MEPs:

```
RP/0/RSP0/CPU0:router# clear ethernet cfm local meps all
```

Related Commands

Command	Description
show ethernet cfm local meps, on page 436	Displays information about local MEPs.

clear ethernet cfm peer meps

To clear all peer MEPs or peer MEPs for a specified local MEP, use the **clear ethernet cfm peer meps** command in EXEC mode.

clear ethernet cfm peer meps {**all**| **domain** *domain-name* {**all**| **service** *service-name* {**all**| **local mep-id** *id* } }| **interface** *interface-name* {**all**| **domain** *domain-name* } }

all	Clears counters for all peer MEPs.
domain <i>domain-name</i>	String of a maximum of 80 characters that identifies the domain in which the maintenance points reside. Note For more information about the syntax, use the question mark (?) online help function.
service <i>service-name</i>	String of a maximum of 80 characters that identifies the maintenance association to which the maintenance end points belong.
local mep-id <i>id</i>	Local maintenance end point (MEP) ID number. The range for MEP ID numbers is 1 to 8191.
interface <i>interface-name</i>	String of a maximum of 80 characters that identifies the Ethernet interface.

Command Default

No default behavior or values

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command removes all received CCMs and corresponding peer MEPs from the database (other than those configured with cross-check). The peer MEPs will be added again when the next CCM is received.

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to clear all peer MEPs:

```
RP/0/RSP0/CPU0:router# clear ethernet cfm peer meps all
```

Related Commands

Command	Description
show ethernet cfm peer meps , on page 442	Displays information about maintenance end points (MEPs) for peer MEPs.

clear ethernet cfm traceroute-cache

To remove the contents of the traceroute cache, use the **clear ethernet cfm traceroute-cache** command in EXEC mode.

```
clear ethernet cfm traceroute-cache {all| domain domain-name {all| service service-name {all| mep-id id}}| interface interface-name {all| domain domain-name}}
```

Syntax Description

domain <i>domain-name</i>	String of a maximum of 80 characters that identifies the domain in which the maintenance points reside. Note For more information about the syntax, use the question mark (?) online help function.
service <i>service-name</i>	String of a maximum of 80 characters that identifies the maintenance association to which the maintenance end points belong.
mep-id <i>id</i>	Maintenance end point (MEP) ID number. The range for MEP ID numbers is 1 to 8191.
interface <i>interface-name</i>	String of a maximum of 80 characters that identifies the Ethernet interface.

Command Default

No default behavior or values

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to clear all ethernet cfm traceroute-cache:

```
RP/0/RSP0/CPU0:router# clear ethernet cfm traceroute-cache all
```

Related Commands

Command	Description
traceroute cache, on page 505	Sets the maximum limit of traceroute cache entries or the maximum time limit to hold the traceroute cache entries.
show ethernet cfm traceroute-cache, on page 449	Displays the contents of the traceroute cache.

clear ethernet lmi interfaces

To clear Ethernet LMI statistics on one or all interfaces, use the **clear ethernet lmi interfaces** command in EXEC configuration mode.

clear ethernet lmi interfaces *{type interface-path-id | all}*

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	Specifies clearing of LMI statistics for all Ethernet interfaces running the E-LMI protocol.

Command Default

None

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	execute

Examples

The following example shows how to clear E-LMI statistics for Gigabit Ethernet interface 0/0/0/0:

```
RP/0/RSP0/CPU0:router# clear ethernet lmi interfaces GigabitEthernet 0/0/0/0
```

Related Commands

Command	Description
show ethernet lmi interfaces, on page 456	Displays E-LMI information for an interface, including protocol status and error and event statistics.

clear ethernet oam statistics

To clear the packet counters on Ethernet OAM interfaces, use the **clear ethernet oam statistics** command in EXEC mode.

clear ethernet oam statistics [*interface type interface-path-id*] **location** *node-id* **all**]

Syntax Description

interface type <i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location	Clears the statistics for a specific node. For more information about the syntax for the router, use the question mark (?) online help function.
<i>node-id</i>	Path ID of the node.
all	Clears the statistics for all nodes on the router.

Command Default

No parameters clears the packet counters on all Ethernet OAM interfaces.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to clear the packet counters on a specific interface:

```
RP/0/RSP0/CPU0:router# clear ethernet oam statistics interface gigabitethernet 0/1/5/1
```

Related Commands

Command	Description
show ethernet oam statistics, on page 474	Displays the local and remote Ethernet OAM statistics for interfaces.
show ethernet oam interfaces, on page 471	

clear ethernet sla statistics all

To delete the contents of buckets containing SLA statistics collected by all operations probes, including on-demand operations, use the **clear ethernet sla statistics all** command in EXEC mode.

clear ethernet sla statistics [**current**| **history**] **all**

Syntax Description

current	(Optional) Clears statistics for buckets currently being filled for all operations.
history	(Optional) Clears statistics for full buckets for all operations.
all	Clears statistics for all operations.

Command Default

When **current** or **history** are not used, all buckets (current, old, new, half empty, and full) for all operations (including on-demand operations) are cleared. This is equivalent to restarting the operation.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you clear a bucket for a currently running probe, the remaining statistics are still collected and stored in that bucket.

See the Usage Guidelines in the [buckets size, on page 285](#) command for a description of buckets.

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to delete the contents of all buckets containing SLA metrics collected by all probes:

```
RP/0/RSP0/CPU0:router# clear ethernet sla statistics all
```

The following example shows how to delete the contents of all current buckets containing SLA metrics collected by all probes:

```
RP/0/RSP0/CPU0:router# clear ethernet sla statistics current all
```

The following example shows how to delete the contents of all full buckets containing SLA metrics collected by all probes:

```
RP/0/RSP0/CPU0:router# clear ethernet sla statistics history all
```

clear ethernet sla statistics on-demand

To delete the contents of buckets containing SLA statistics collected by on-demand probes, use the **clear ethernet sla statistics on-demand** command in EXEC mode.

clear ethernet sla statistics [**current**|**history**] **on-demand** {**all**|*id*} [**interface type** *interface-path-id* **domain** **all**|**interface type** *interface-path-id* **domain** *domain-name* **target** {**all**|**mac-address** *H.H.H*|**mep-id** *id*}|**interface all domain** *domain-name*]

Syntax Description

current	(Optional) Clears statistics for all buckets currently being filled.
history	(Optional) Clears statistics for all full buckets.
all	Clears statistics for all on-demand operations.
<i>id</i>	Clears statistics for the on-demand operation of the specified number.
interface type	(Optional) Clears statistics for the specified interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
domain all	Clears statistics for on-demand operations for all domains.
domain <i>domain-name</i>	Clears statistics for on-demand operations for the specified domain.
target all	Clears statistics for on-demand operations targeted to all MEPs for the specified interface domain.
target mac-address <i>H.H.H</i>	Clears statistics for on-demand operations targeted to the specified MAC address.
target mep-id <i>id</i>	Clears statistics for on-demand operations targeted to the specified MEP ID.
interface all	(Optional) Clears statistics for on-demand operations on all interfaces.

Command Default

When **current** or **history** are not used, all buckets for on-demand operations (current, old, new, half empty, and full) are cleared. This is equivalent to restarting the operation.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you clear a bucket for a currently running probe, the remaining statistics are still collected and stored in that bucket.

See the Usage Guidelines in the [buckets size, on page 285](#) command for a description of buckets.

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to delete the contents of all buckets currently being filled for the on-demand operation with ID 1:

```
RP/0/RSP0/CPU0:router# clear ethernet sla statistics current on-demand 1
```

The following example shows how to delete the contents of all buckets for all on-demand operations:

```
RP/0/RSP0/CPU0:router# clear ethernet sla statistics on-demand all
```

The following example shows how to delete the contents of all buckets for all on-demand operations on a specified interface and domain that is targeted to a specific MEP:

```
RP/0/RSP0/CPU0:router# clear ethernet sla statistics on-demand all interface TenGigE 0/6/1/0
domain D1 target mep-id 3
```

Related Commands

Command	Description
clear ethernet sla statistics all, on page 300	Deletes the contents of buckets containing SLA statistics collected by all operations probes.
ethernet sla on-demand operation type cfm-delay-measurement probe, on page 336	Executes an on-demand Ethernet SLA operation probe for CFM delay measurement.
ethernet sla on-demand operation type cfm-loopback probe, on page 342	Executes an on-demand Ethernet SLA operation probe for CFM loopback measurements
show ethernet sla operations, on page 478	Displays information about configured Ethernet SLA operations.

Command	Description
show ethernet sla statistics, on page 481	Displays the contents of buckets containing Ethernet SLA metrics collected by probes.

clear ethernet sla statistics profile

To delete the contents of buckets containing SLA statistics collected by probes for a profile, use the **clear ethernet sla statistics profile** command in EXEC mode.

clear ethernet sla statistics [**current**| **history**] **profile** {**all**| *profile-name*} [**interface type interface-path-id domain all**| **interface type interface-path-id domain domain-name target** {**all**| **mac-address H.H.H**| **mep-id id**}| **interface all domain domain-name**]

Syntax Description

current	(Optional) Clears statistics for all buckets currently being filled.
history	(Optional) Clears statistics for all full buckets.
<i>profile-name</i>	Clears statistics for the specified profile name.
all	Clears statistics for all profiles.
interface type	(Optional) Clears statistics for the specified interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
domain all	Clears statistics for on-demand operations for all domains.
domain domain-name	Clears statistics for on-demand operations for the specified domain.
target all	Clears statistics for on-demand operations targeted to all MEPs for the specified interface domain.
target mac-address H.H.H	Clears statistics for on-demand operations targeted to the specified MAC address.
target mep-id id	Clears statistics for on-demand operations targeted to the specified MEP ID.
interface all	(Optional) Clears statistics for on-demand operations on all interfaces.

Command Default

When **current** or **history** are not used, all buckets in the profile (current, old, new, half empty, and full) are cleared. This is equivalent to restarting the operation.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you clear a bucket for a currently running probe, the remaining statistics are still collected and stored in that bucket.

See the Usage Guidelines in the [buckets size, on page 285](#) command for a description of buckets.

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to delete the contents of all buckets currently being filled for a specified profile:

```
RP/0/RSP0/CPU0:router# clear ethernet sla statistics current profile P1
```

The following example shows how to delete the contents of all full buckets for a specified profile:

```
RP/0/RSP0/CPU0:router# clear ethernet sla statistics history profile P2
```

The following example shows how to delete the contents of all buckets for a specified profile:

```
RP/0/RSP0/CPU0:router# clear ethernet sla statistics profile P3
```

The following example shows how to delete the contents of all buckets for all profiles:

```
RP/0/RSP0/CPU0:router# clear ethernet sla statistics profile all
```

The following example shows how to delete the contents of all buckets for all profiles on a specified interface and domain that is targeted to a specific MEP:

```
RP/0/RSP0/CPU0:router# clear ethernet sla statistics profile all interface TenGigE 0/6/1/0
domain D1 target mep-id 3
```

Related Commands

Command	Description
buckets size, on page 285	Configures the size of the buckets in which statistics are collected.

clear ethernet udd statistics

To remove the statistics of state machine transitions and packets exchanged on an interface running UDLD protocol, use the **clear ethernet udd statistics** command in the ethernet interface configuration mode.

clear ethernet udd statistics[interface *type* |**unaccounted-drops** |**all**]

Syntax Description

interfacetype	(Optional) Clears information about the specified interface type. If an interface is specified, only the interface-specific counters are shown and not the node counters.
unaccounted-drops	(Optional) Clears information for only the node counters.
all	(Optional) Clears all the udd statistics.

Command Default

None

Command Modes

Ethernet Interface Configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	read

Examples

This example shows how to run the **clear ethernet udd statistics** command for an interface:

```
RP/0/RSP0/CPU0:router#clear ethernet udd statistics interface GigabitEthernet 0/1/0/1
```

 clear ethernet udd statistics**Related Commands**

Command	Description
show ethernet udd statistics, on page 490	Displays statistics on state machine transitions and packets sent and received for an UDD interface.

connection timeout

To configure the timeout value for an Ethernet OAM session, use the **connection timeout** command in Ethernet OAM configuration mode.

connection timeout *seconds*

Syntax Description	<i>seconds</i>	Connection timeout period in seconds. The range is 2 to 30.

Command Default The default value is 5.

Command Modes Ethernet OAM configuration (config-eoam)
Interface Ethernet OAM configuration (config-if-eoam)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If no packets are received from the OAM peer in the specified time, the OAM session is brought down, and the negotiation phase starts again.

Task ID	Task ID	Operations
	ethernet-services	read, write

Examples The following example shows how to configure the connection timeout value of an Ethernet OAM session:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# connection timeout 20
```

Related Commands

Command	Description
action discovery-timeout, on page 261	Configures what action is taken on an interface when a connection timeout occurs.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
show ethernet oam configuration, on page 465	Displays the current active Ethernet OAM configuration on an interface.
show ethernet oam discovery, on page 468	Displays the currently configured OAM information of Ethernet OAM sessions on interfaces.
show ethernet oam interfaces, on page 471	

continuity-check archive hold-time

To configure the time limit for how long peer maintenance-end-points (MEPs) are held in the continuity-check database after they have timed out (no more CCMs are received), use the **continuity-check archive hold-time** command in CFM domain service configuration mode. To return to the default value, use the no form of this command.

continuity-check archive hold-time *minutes*

no continuity-check archive hold-time *minutes*

Syntax Description

<i>minutes</i>	Time limit (in minutes) that peer MEPs are held in the continuity-check database before they are cleared. Range is 1 to 65535.

Command Default

The default is 100.

Command Modes

CFM domain service configuration (config-cfm-dmn-svc)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Peer MEPs appear in **show ethernet cfm peer meps** command display output after they timeout (no more continuity check messages (CCMs) are received).

Task ID

Task ID	Operations
ethernet-services	read, write

Related Commands

Command	Description
show ethernet cfm peer meps , on page 442	Displays information about maintenance end points (MEPs) for peer MEPs.

continuity-check interval

To enable continuity check and configure the time interval at which continuity-check messages are transmitted or to set the threshold limit for when a MEP is declared down, use the **continuity-check interval** command in CFM domain service configuration mode. To disable continuity check, use the **no** form of this command.

continuity-check interval *time* [**loss-threshold** *threshold*]

no continuity-check interval *time* [**loss-threshold** *threshold*]

Syntax Description

<i>time</i>	Interval at which continuity-check messages are transmitted. Valid values are: • 100ms: 100 milliseconds • 1s: 1 second • 10s: 10 seconds • 1m: 1 minute • 10m: 10 minutes
loss-threshold <i>threshold</i>	(Optional) Specifies the number of continuity-check messages that are lost before CFM declares that a MEP is down (unreachable). Range is 2 to 255. Used in conjunction with interval .

Command Default

Continuity check is off by default.

If **loss-threshold** is not specified, the default is 3.

Command Modes

CFM domain service configuration (config-cfm-dmn-svc)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

continuity-check loss auto-traceroute

To configure automatic triggering of a traceroute when a MEP is declared down, use the **continuity-check loss auto-traceroute** command in CFM domain service configuration mode. To disable automatic triggering of a traceroute, use the no form of this command.

continuity-check loss auto-traceroute

no continuity-check loss auto-traceroute

This command has no keywords or arguments.

Command Default

Auto-trigger is off.

Command Modes

CFM domain service configuration (config-cfm-dmn-svc)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The results of the traceroute can be seen using the **show ethernet cfm traceroute-cache** command.

Task ID

Task ID	Operations
ethernet-services	read, write

Related Commands

Command	Description
show ethernet cfm traceroute-cache , on page 449	Displays the contents of the traceroute cache.

cos (CFM)

To configure the class of service (CoS) for all CFM packets generated by the maintenance end point (MEP) on an interface, use the **cos** command in interface CFM MEP configuration mode. To return to the default CoS, use the no form of this command.

cos *cos*

no cos *cos*

Syntax Description

<i>cos</i>	Class of Service for this MEP. The range is 0 to 7.

Command Default

When not configured, the default CoS value is inherited from the Ethernet interface.

Command Modes

Interface CFM MEP configuration (config-if-cfm-mep)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Configuring the class of service (CoS) on maintenance end points (MEPs) is supported on all Ethernet interfaces.

The specified CoS value is used for all CFM messages transmitted by the MEP, except for the following:

- Loopback and Linktrace replies—These are transmitted using the CoS value received in the corresponding loopback or linktrace message.
- AIS messages—If a different CoS value is specified in the AIS configuration.
- Ethernet SLA probe messages.



Note

For Ethernet interfaces, the CoS is carried as a field in the VLAN tag. Therefore, CoS only applies to interfaces where packets are sent with VLAN tags. If the **cos (CFM)** command is specified for a MEP on an interface that does not have a VLAN encapsulation configured, an error message will be logged and no CFM packets will be sent.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the class of service (CoS) for a maintenance end point (MEP) on an interface.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# ethernet cfm mep domain Dm1 service Sv1 mep-id 1
RP/0/RSP0/CPU0:router(config-if-cfm-mep)# cos 7
```

Related Commands

Command	Description
ethernet cfm (interface) , on page 328	Enters interface CFM configuration mode.

debug ethernet cfm packets

To log debug messages about CFM packets that are sent or received by the Ethernet connectivity fault management (CFM) process, use the **debug ethernet cfm packets** command in EXEC mode.

debug ethernet cfm packets [**domain** *domain-name* [**service** *service-name* [**mep-id** *mep-id*]]] [**interface** *type interface-path-id* [**domain** *domain-name*]] [**packet-type** {**ccm**|**linktrace**|**loopback**}] [**remote mac-address** *mac-address*] [**remote mep-id** *mep-id*] [**sent**|**received**] [**brief**|**full**|**hexdump**]
debug ethernet cfm packets [**domain** *domain-name* [**service** *service-name* [**mep-id** *mep-id*]]] [**interface** *type interface-path-id* [**domain** *domain-name*]] [**packet-type** {**ais**|**ccm**|**delay-measurement**|**linktrace**|**loopback**}] [**remote mac-address** *mac-address*] [**remote mep-id** *mep-id*] [**sent**|**received**] [**brief**|**full**|**hexdump**]

Syntax Description

domain <i>domain-name</i>	(Optional) Filters packets for display by the specified CFM maintenance domain, where <i>domain-name</i> is a string of up to 80 characters.
service <i>service-name</i>	(Optional) Filters packets for display by the specified service name, where <i>service-name</i> is a string of up to 80 characters.
mep-id <i>mep-id</i>	(Optional) Filters packets for display by the specified maintenance end point (MEP) ID number. The range for MEP ID numbers is 1 to 8191.
interface <i>type interface-path-id</i>	(Optional) Filters packets for display by the specified physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
<i>packet-type</i>	(Optional) Filters packets for display by the specified packet type. The following packet types are valid: • ais • ccm • delay-measurement • linktrace • loopback
remote mac-address <i>mac-address</i>	(Optional) Filters packets for display by the specified MAC address.
remote mep-id <i>mep-id</i>	(Optional) Filters packets for display by the remote MEP properties.
sent	(Optional) Displays only sent packets.
received	(Optional) Displays only received packets.

brief	(Optional) Displays brief information about each packet.
full	(Optional) Displays a full decode of each packet.
hexdump	(Optional) Displays a full decode and hexadecimal output of each packet.

Command Default If no parameters are specified, all CFM packets are debugged and logged.

Command Modes EXEC (#)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Caution

Enabling packet debugging without filters can have an adverse effect on the performance of the router. To avoid this, filters should always be specified to restrict the output to the domain, service, local MEP, interface, direction and packet type of interest.

Packets can be filtered for debugging by specifying any of the optional parameters.

Task ID	Task ID	Operations
	ethernet-services	read

Examples The following example shows a sample output of the **debug ethernet cfm packets** command with a full decode and hexadecimal output for sent and received CCM packets:

```
RP/0/RSP0/CPU0:router# debug ethernet cfm packets hexdump
```

```
RP/0/RSP0/CPU0:May 29 14:15:39.621 : cfmd[150]: PKT-RX: GigabitEthernet0/1/0/0 ingress: CCM
packet rcvd at level 2 for domain foo, service foo: length 91, src MAC 0001.0203.0402, dst
MAC 0180.c200.0032: Packet processed successfully
RP/0/RSP0/CPU0:May 29 14:15:39.621 : cfmd[150]: PKT-RX: CCM: Level 2, opcode CCM, version
0, RDI bit unset, interval 10s, seq. num 1, remote MEP ID 16, flags 0x05, first TLV offset
70, 0 unknown TLVs
RP/0/RSP0/CPU0:May 29 14:15:39.621 : cfmd[150]: PKT-RX: CCM: MAID: MDID String 'dom4',
SMAN String 'ser4'
RP/0/RSP0/CPU0:May 29 14:15:39.621 : cfmd[150]: PKT-RX: CCM: Sender ID: Chassis ID Local
'hpr', Mgmt Addr <none>
```

```

RP/0/RSP0/CPU0:May 29 14:15:39.621 : cfmd[150]: PKT-RX: CCM: Port status: Up, interface
status Up
RP/0/RSP0/CPU0:May 29 14:15:39.622 : cfmd[150]: PKT-RX: Raw Frame:
RP/0/RSP0/CPU0:May 29 14:15:39.622 : cfmd[150]: PKT-RX: 0x40010546 00000001 00100404
646F6D34 02047365 72340000 00000000 00000000
RP/0/RSP0/CPU0:May 29 14:15:39.622 : cfmd[150]: PKT-RX: 0x00000000 00000000 00000000
00000000 00000000 00000000 00000000 00000000
RP/0/RSP0/CPU0:May 29 14:15:39.622 : cfmd[150]: PKT-RX: 0x00000000 00000000 00000200
01020400 01010100 05030768 707200
RP/0/RSP0/CPU0:May 29 14:15:43.625 : cfmd[150]: PKT-TX: GigabitEthernet0/1/0/0 egress: CCM
packet sent at level 2 for domain foo, service foo: length 91, src MAC 0001.0203.0400, dst
MAC 0180.c200.0032
RP/0/RSP0/CPU0:May 29 14:15:43.625 : cfmd[150]: PKT-TX: CCM: Level 2, opcode CCM, version
0, RDI bit set, interval 10s, seq. num 16, remote MEP ID 1, flags 0x85, first TLV offset
70, 0 unknown TLVs
RP/0/RSP0/CPU0:May 29 14:15:43.625 : cfmd[150]: PKT-TX: CCM: MAID: MDID String 'foo',
SMAN String 'foo'
RP/0/RSP0/CPU0:May 29 14:15:43.625 : cfmd[150]: PKT-TX: CCM: Sender ID: Chassis ID Local
'ios', Mgmt Addr <none>
RP/0/RSP0/CPU0:May 29 14:15:43.625 : cfmd[150]: PKT-TX: CCM: Port status: Up, interface
status Up
RP/0/RSP0/CPU0:May 29 14:15:43.625 : cfmd[150]: PKT-TX: Raw Frame:
RP/0/RSP0/CPU0:May 29 14:15:43.625 : cfmd[150]: PKT-TX: 0x40018546 00000010 00010403
666F6F02 03666F6F 00000000 00000000 00000000
RP/0/RSP0/CPU0:May 29 14:15:43.625 : cfmd[150]: PKT-TX: 0x00000000 00000000 00000000
00000000 00000000 00000000 00000000 00000000
RP/0/RSP0/CPU0:May 29 14:15:43.625 : cfmd[150]: PKT-TX: 0x00000000 00000000 00000200
01020400 01010100 05030769 6F7300

```

Related Commands

Command	Description
debug ethernet cfm protocol-state , on page 320	Logs debug messages about CFM state machines and protocol events.

debug ethernet cfm protocol-state

To log debug messages about CFM state machines and protocol events, use the **debug ethernet cfm protocol-state** command in EXEC mode.

debug ethernet cfm protocol-state [**domain** *domain-name* [**service** *service-name* [**mep-id** *mep-id*]]] [**interface** *type interface-path-id* [**domain** *domain-name*]]

Syntax Description

domain <i>domain-name</i>	(Optional) Filters information for display by the specified CFM maintenance domain, where <i>domain-name</i> is a string of up to 80 characters.
service <i>service-name</i>	(Optional) Filters information for display by the specified service name, where <i>service-name</i> is a string of up to 80 characters.
mep-id <i>mep-id</i>	(Optional) Filters information for display by the specified maintenance end point (MEP) ID number. The range for MEP ID numbers is 1 to 8191.
interface <i>type interface-path-id</i>	(Optional) Filters information for display by the specified physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

If no parameters are specified, all CFM state machines and protocol events are debugged and logged.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Debug messages can be filtered by specifying any of the optional parameters.

Task ID

Task ID	Operations
ethernet-services	read

Examples

The following example shows a sample output of the **debug ethernet cfm protocol-state** command.

```
RP/0/RSP0/CPU0:router# debug ethernet cfm protocol-state
```

```
RP/0/RSP0/CPU0:May 29 14:41:49.966 : cfmd[150]: CFM: Created 1 local MEPs in PM and Engine
RP/0/RSP0/CPU0:May 29 14:41:49.967 : cfmd[150]: CFM: State changes notification for 1 EFPs
RP/0/RSP0/CPU0:May 29 14:42:14.143 : cfmd[150]: CFM: New remote MEP detected in domain foo,
  service foo for local MEP ID 1 on interface GigabitEthernet0/1/0/0; remote MEP ID 16, MAC
  0001.0203.0402, errors: set: mismatched MAID; current: mismatched MAID;
RP/0/RSP0/CPU0:May 29 14:42:16.644 : cfmd[150]: CFM: Fault alarm notification for local MEP
  - domain: foo, service: foo, MEP ID: 1, interface: GigabitEthernet0/1/0/0, defect:
cross-connect CCM
RP/0/RSP0/CPU0:May 29 14:43:32.247 : cfmd[150]: CFM: Initiated exploratory linktrace to
ffff.ffff.ffff from MEP in domain foo, service foo, MEP ID 1, interface GigabitEthernet0/1/0/0
  with ttl 64 and transaction ID 65537, reply-filtering Default and directed MAC None
May 29 14:43:49.155 : cfmd[150]: CFM: Remote MEP timed out in domain foo, service foo for
local MEP ID 1 on interface GigabitEthernet0/1/0/0; remote MEP ID 16, MAC 0001.0203.0402,
errors: cleared: mismatched MAID; current: none
```

Related Commands

Command	Description
debug ethernet cfm packets, on page 317	Logs debug messages about CFM packets that are sent or received by the Ethernet CFM process.

domain

To create and name a container for all domain configurations and enter the CFM domain configuration mode, use the **domain** command in CFM configuration mode. To remove the domain, use the no form of this command.

domain *domain-name* **level** *level-value* [**id** **null** [**dns** *dns-name*][**mac** *H.H.H*][**string** *string*]]

no domain *domain-name* **level** *level-value* [**id** **null** [**dns** *dns-name*][**mac** *H.H.H*][**string** *string*]]

Syntax Description

<i>domain-name</i>	Administrative name unique to this container, case sensitive ASCII string, up to 80 characters.
level <i>level-value</i>	The CFM protocol level of this domain. Range is 0 to 7.
id	(Optional) Maintenance domain identifier (MDID) used in conjunction with one of the following keywords to specify the MDID type and value: • null • dns <i>DNS-name</i> • mac <i>H.H.H</i> • string <i>string</i>
null	(Optional) Null value ID, used with the id keyword.
dns <i>DNS-name</i>	(Optional) DNS name, up to 43 characters in length, used with the id keyword.
mac <i>H.H.H</i>	(Optional) Hexadecimal MAC address, used with the id keyword.
string <i>string</i>	(Optional) Maintenance domain identifier (MDID) value, up to 43 characters in length, used with the id keyword. Note The domain name may be the used here as the maintenance domain identifier (MDID) if desired.

Command Default

If **id** is not specified, the domain name is used as the MDID.

Command Modes

CFM configuration (config-cfm)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The level must be specified.

The maintenance domain identifier (MDID) is used as the first part of the maintenance association identifier (MAID) in CFM frames. If the MDID is not specified, the domain name is used as the MDID by default.

Multiple domains may be specified at the same level. If the MDID is specified as NULL, the MAID is constructed as a short maintenance association name.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to create a domain and give it a domain name, level, and maintenance domain identifier (MDID):

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)#
```

Related Commands

Command	Description
ethernet cfm (global), on page 326	Enters CFM configuration mode.
ethernet cfm (interface), on page 328	Enters interface CFM configuration mode.
mep domain, on page 384	Creates a MEP on an interface.
service, on page 419	
show ethernet cfm configuration-errors, on page 426	Displays information about errors that are preventing configured CFM operations from becoming active, as well as any warnings that have occurred.
show ethernet cfm local maintenance-points, on page 433	Displays a list of local maintenance points.
show ethernet cfm local meps, on page 436	Displays information about local MEPs.

efd

To enable Ethernet Fault Detection (EFD) on all down Maintenance End Points (MEPs) in a down MEPs service, use the **efd** command in CFM domain service configuration mode. To disable EFD, use the no form of this command.

efd

no efd

Syntax Description

This command has no keywords or arguments.

Command Default

EFD is disabled.

Command Modes

CFM domain service configuration (config-cfm-dmn-svc)

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

EFD can only be enabled for down MEPs within a down MEPs service.

If the **efd** command is issued when any MEP in the service has any of the following error conditions, the MEP will shut down the interface:

- The MEP appears cross-connected to another MAID.
- The MEP is receiving invalid CCMs, such as receiving its own MAC or MEP-ID.
- All peer MEPs are reporting a state other than UP via the Port Status TLV.
- A peer MEP is reporting a state other than UP in Interface Status TLV.
- When cross-check is configured, and a session with an expected MEP times out, EFD is triggered on the local MEP.
- No CCMs are received from a peer MEP appearing in the configured cross-check list.
- An RDI is being received from a peer MEP.
- The MEP is receiving an AIS/LCK.

The MEP will bring the interface back up when the error condition is no longer detected.

**Note**

When an interface is shut down by a MEP using EFD, the MEP will continue to send and receive CCMs and other CFM messages.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enable EFD:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain D1 level 1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service S1 down-meps
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# efd
```

Related Commands

Command	Description
log efd, on page 377	Enables logging of EFD state changes to an interface (such as when an interface is shut down or brought up via EFD).
show efd interface, on page 422	Displays all interfaces that are shut down because of EFD.
show ethernet cfm local meps, on page 436	Displays information about local MEPs.

ethernet cfm (global)

To enter Connectivity Fault Management (CFM) configuration mode, use the **ethernet cfm (global)** command in global configuration mode.

ethernet cfm

Syntax Description

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

Global configuration (config)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enter the CFM configuration mode.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)#
```

Related Commands

Command	Description
domain , on page 322	
ethernet cfm (interface) , on page 328	Enters interface CFM configuration mode.

Command	Description
show ethernet cfm configuration-errors, on page 426	Displays information about errors that are preventing configured CFM operations from becoming active, as well as any warnings that have occurred.
show ethernet cfm local maintenance-points, on page 433	Displays a list of local maintenance points.
show ethernet cfm local meps, on page 436	Displays information about local MEPS.

ethernet cfm (interface)

To enter interface CFM configuration mode, use the **ethernet cfm (interface)** command in interface configuration mode.

ethernet cfm

Syntax Description

This command has no keywords or arguments.

Command Default

No MEPs are configured on the interface.

Command Modes

Interface configuration (config-if)
Subinterface configuration (config-subif)

Command History

Release	Modification
Release 3.9.1	This command was introduced.
Release 4.1.0	Support for subinterface configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enter interface CFM configuration mode:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# ethernet cfm
RP/0/RSP0/CPU0:router(config-if-cfm)#
```

Related Commands

Command	Description
cos (CFM) , on page 315	Configures the CoS for all CFM packets generated by the MEP on an interface.

Command	Description
ethernet cfm (global) , on page 326	Enters CFM configuration mode.
mep domain , on page 384	Creates a MEP on an interface.
show ethernet cfm configuration-errors , on page 426	Displays information about errors that are preventing configured CFM operations from becoming active, as well as any warnings that have occurred.
show ethernet cfm local maintenance-points , on page 433	Displays a list of local maintenance points.
show ethernet cfm local meps , on page 436	Displays information about local MEPs.

ethernet lmi

To enable Ethernet Local Management Interface (E-LMI) operation on an interface and enter interface Ethernet LMI configuration mode, use the **ethernet lmi** command in interface configuration mode. To disable Ethernet LMI and return to the default, use the **no** form of the command.

ethernet lmi

no ethernet lmi

Syntax Description This command has no keywords or arguments.

Command Default Ethernet LMI is disabled.

Command Modes Interface configuration (config-if)

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Ethernet LMI is supported only on physical Ethernet interfaces.

Task ID	Operation
ethernet-services	read, write

Examples The following example shows how to enable Ethernet LMI on a Gigabit Ethernet interface and enter Ethernet LMI configuration mode:

```
RP/0/RSP0/CPU0:router# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet lmi
RP/0/RSP0/CPU0:router(config-if-elmi)#
```

Command	Description
interface (Ethernet), on page 190	Specifies or creates an Ethernet interface and enters interface configuration mode.

ethernet oam

To enable Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode, use the **ethernet oam** command in interface configuration mode. To disable Ethernet Link OAM, use the **no** form of this command.

ethernet oam

no ethernet oam

Syntax Description

This command has no keywords or arguments.

Command Default

When enabled on an interface, the Ethernet Link OAM default values apply.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you enable Ethernet Link OAM on an interface, the default Ethernet Link OAM values are applied to the interface. For the default Ethernet Link OAM values, see the related Ethernet Link OAM commands.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enable Ethernet Link OAM and enter interface Ethernet OAM configuration mode.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/5/6
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)#
```

ethernet oam loopback

To start or stop a loopback at the remote end of an Ethernet OAM interface, use the **ethernet oam loopback** command in EXEC mode.

ethernet oam loopback {**enable**|**disable**} *type interface-path-id*

Syntax Description

enable	Starts a loopback at the remote end.
disable	Stops the loopback at the remote end.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

Loopback is not enabled.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command puts the remote peer device into loopback mode. This means that all traffic sent to the peer is looped back, which means that it is sent back from the peer and received by the router. All traffic received from the peer device is discarded.

This command returns when the OAM client receives confirmation from the remote end that the remote loopback has been enabled or disabled. If no response or a failure response is received, an error is returned.

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to start a loopback at the far end of an Ethernet OAM interface.

```
RP/0/RSP0/CPU0:router# ethernet oam loopback enable tengigabitethernet 0/6/1/0
```

Related Commands

Command	Description
remote-loopback, on page 408	Enables a remote loopback on the far end of an Ethernet OAM interface.
action remote-loopback, on page 267	Configures what action is taken on an interface when a remote-loopback event occurs.
snmp-server traps ethernet oam events, on page 495	
show ethernet oam configuration, on page 465	Displays the current active Ethernet OAM configuration on an interface.

ethernet oam profile

To create an Ethernet Operations, Administration and Maintenance (EOAM) profile and enter EOAM configuration mode, use the **ethernet oam profile** command in global configuration mode. To delete an EOAM profile, use the **no** form of this command.

ethernet oam profile *profile-name*

no ethernet oam profile *profile-name*

Syntax Description

<i>profile-name</i>	Text string name of the OAM profile. The maximum length is 32 bytes.

Command Default

No default behavior or values

Command Modes

Global configuration (config)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Before you can delete an EOAM profile, you must remove the profile from all interfaces to which it is attached.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to create an Ethernet OAM profile and enter Ethernet OAM configuration mode:

```
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)#
```

ethernet sla

To enter the Ethernet Service Level Agreement (SLA) configuration mode, use the **ethernet sla** command in global configuration mode.

ethernet sla

Syntax Description	This command has no keywords or arguments.

Command Default	No default behavior or values

Command Modes	Global configuration (config)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ethernet-services	read, write

Examples	The following example shows how to enter the Ethernet SLA configuration mode.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)#
```

ethernet sla on-demand operation type cfm-delay-measurement probe

To execute an on-demand Ethernet SLA operation probe for CFM delay measurement, use the **ethernet sla on-demand operation type cfm-delay-measurement probe** command in EXEC mode.

ethernet sla on-demand operation type cfm-delay-measurement probe [**priority** *number*] [**send** {**packet** {**once**| **every** *number* {**milliseconds**| **seconds**| **minutes**| **hours**}}| **burst** {**once**| **every** *number* {**seconds**| **minutes**| **hours**}}}| **packet count** *number* **interval** *number* {**milliseconds**| **seconds**}}] **domain** *domain_name* **source interface** *type interface-path-id* **target** {**mac-address** *H.H.H.H*| **mep-id** *id_number*} **statistics measure** {**one-way-delay-ds**| **one-way-delay-sd**| **one-way-jitter-ds**| **one-way-jitter-sd**| **round-trip-delay**| **round-trip-jitter**} [**aggregate** {**none**| **bins** *number* **width** *milliseconds*}] [**buckets** {**archive** *number*| **size** *number* {**per-probe**| **probes**}}] [**schedule** {**now**| **at** *hh:mm* [*.ss*] [*day* [*month* [*year*]]]}] **in** *number* {**seconds**| **minutes**| **hours**}} [**for** *duration* {**seconds**| **minutes**| **hours**}}] [**repeat** **every** *number* {**seconds**| **minutes**| **hours**} **count** *probes*]] [**asynchronous**]

Syntax Description

priority <i>number</i>	(Optional) Configures the priority of outgoing SLA probe packets. The range is 0 to 7. The default is to use the COS bits for the egress interface.
send packet once	(Optional) Sends one packet one time.
send packet every <i>number</i> { milliseconds seconds minutes hours }	(Optional) Sends one packet every specified number of milliseconds, seconds, minutes, or hours, where <i>number</i> is in the following range: • 1 to 3600 seconds • 1 to 1440 minutes • 1 to 168 hours • 100 to 10000 milliseconds (specified in increments of 100)
send burst once	(Optional) Specifies that a burst of packets is sent one time. This is the default.
send burst every <i>number</i> { seconds minutes hours }	(Optional) Sends a burst of packets every specified number of seconds, minutes, or hours, where <i>number</i> is in the following range: • 1–3600 seconds • 1–1440 minutes • 1–168 hours The default is to send a burst every 10 seconds.
packet count <i>number</i>	Specifies the number of packets to be sent in a burst, in the range 2 to 600. The default is 10.

interval <i>number</i> { milliseconds seconds }	Specifies the time between sending packets in a burst, where <i>number</i> is in the following range: • 100 to 30000 milliseconds • 1 to 30 seconds Note The total length of a burst (the packet count multiplied by the interval) must not exceed 1 minute.
domain <i>domain-name</i>	Specifies the name of the domain for the locally defined CFM MEP.
source interface <i>type</i>	Specifies the source interface type of the locally defined CFM MEP. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
target mac-address <i>H.H.H</i>	Specifies the MAC address (in dotted hexadecimal format) of the target MEP that is known to the local MEP for the probe.
target mep-id <i>id-number</i>	Specifies the ID (from 1 to 8191) of the target MEP that is known to the local MEP for the probe.
statistics measure	(Optional) Specifies the type of statistics to collect: • one-way-delay-ds—One-way delay statistics from destination to source. • one-way-delay-sd—One-way delay statistics from source to destination. • one-way-jitter-ds—One-way delay jitter from destination to source. • one-way-jitter-sd—One-way delay jitter from source to destination. • round-trip-delay—Round-trip delay statistics. • round-trip-jitter—Round-trip jitter statistics. All statistics are collected by default.
aggregate none	(Optional) Specifies that statistics are not aggregated into bins, and each statistic is stored individually. Caution This option can be memory-intensive and should be used with care.
aggregate bins <i>number</i>	(Optional) Specifies the number of bins (from 2 to 100) within each bucket to store sample packets from the probe. The default is to aggregate into one bin.

width <i>milliseconds</i>	Specifies the range of the samples to be collected within each bin in milliseconds, from 1 to 10000. Based on the specified width, bins are established in the following way: • Delay measurements (round-trip or one-way)—The lower bound of the bins is zero and the first bin's upper limit is 0 plus the specified width, and the last bin is unbounded. • Jitter measurements (round-trip or one-way)—The bins are evenly distributed around zero, with both the lowest and highest numbered bins being unbounded. See the Usage Guidelines for more information.
buckets archive <i>number</i>	(Optional) Specifies the number of buckets to store in memory from 1 to 100. The default is 100.
buckets size <i>number</i>	(Optional) Specifies the number of buckets to be used for probes from 1 to 100. The default is 1.
per-probe	Specifies that probes span multiple buckets.
probes	Specifies that buckets span multiple probes.
schedule now	(Optional) Specifies that the probe begins as soon as you enter the command. This is the default.
schedule at <i>hh:mm</i>	(Optional) Specifies a specific time at which to start the probe in 24-hour notation.
<i>ss</i>	(Optional) Number of seconds into the next minute at which to start the probe.
day	(Optional) Number in the range 1 to 31 of the day of the month on which to start the probe.
month	(Optional) Name of the month (full word in English) in which to start the probe.
year	(Optional) Year (fully specified as 4 digits) in which to start the probe.
schedule in <i>number</i> {seconds minutes hours}	(Optional) Specifies a relative time, as a number of seconds, minutes or hours from the current time, at which to start the probe, where <i>number</i> is in the following ranges: • 1 to 3600 seconds • 1 to 1440 minutes • 1 to 24 hours

for duration {seconds minutes hours}	(Optional) Specifies the length of the probe as a number of seconds, minutes, or hours, where <i>number</i> is in the following ranges: • 1 to 3600 seconds • 1 to 1440 minutes • 1 to 24 hours Note The duration should not exceed the interval specified by the repeat every option.
repeat every <i>number</i> {seconds minutes hours}	(Optional) Specifies the interval at which to restart the probe as a number of seconds, minutes, or hours, where <i>number</i> is in the following ranges: • 1 to 90 seconds • 1 to 90 minutes • 1 to 24 hours The default is that probes are not repeated, and there is no default interval.
count <i>probes</i>	Specifies the number of probes to run in the range 1–100. There is no default.
asynchronous	(Optional) Specifies that the command displays the on-demand operation ID and exits immediately, with the operation continuing in the background. The default is synchronous and the operation displays the on-demand operation ID and all results on the console when it completes.

Command Default No on-demand operations are configured or executed.

Command Modes EXEC (#)

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When aggregation is enabled, a number of bins are created, each of which represents a range of values. Instead of storing each individual result, all that is stored is a counter of the number of results that fall within the range for each bin. This uses much less memory than storing each individual result.

For delay measurements, the first bin starts at 0, and each bin covers a range of values defined by the specified width, except for the last bin which ends at infinity. For example, an aggregate bin count of 4 and a width of 20 for delay measurements yields 4 bins of statistics for the following sample ranges:

- Bin 1—Samples with delay ranges 0 to < 20 ms.
- Bin 2—Samples with delay ranges greater than or equal to 20 and < 40 ms.
- Bin 3—Samples with delay ranges greater than or equal to 40 and < 60 ms.
- Bin 4—Samples with delay ranges 60 ms or greater (unbounded).

For jitter measurements, the bins are centered around 0 to include negative ranges. In this case, bins begin outward from 0 in the positive and negative direction. Using the example of a bin count of 4 with a width of 20 for jitter measurements, yields 4 bins of statistics for the following sample ranges:

- Bin 1—Samples with jitter ranges -20 ms or lower (unbounded in negative direction)
- Bin 2—Samples with jitter ranges greater than -20 ms to 0 ms.
- Bin 3—Samples with jitter ranges 0 to < than 20 ms.
- Bin 4—Samples with jitter ranges 20 ms or greater (unbounded in positive direction)

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to enter the most basic SLA on-demand operation to measure CFM delay statistics. This example implements the following defaults:

- Send a burst once for a packet count of 10 and interval of 1 second (10-second probe).
- Use default class of service (CoS) for the egress interface.
- Measure all statistics, including both one-way and round-trip delay and jitter statistics.
- Aggregate statistics into one bin.
- Schedule now.
- Display results on the console.

```
RP/0/RSP0/CPU0:router# ethernet sla on-demand operation type cfm-delay-measurement
probe domain D1 source interface TenGigE 0/6/1/0 target mep-id 100
```

Related Commands

Command	Description
clear ethernet sla statistics all , on page 300	Deletes the contents of buckets containing SLA statistics collected by all operations probes.
clear ethernet sla statistics on-demand , on page 302	Deletes the contents of buckets containing SLA statistics collected by on-demand probes.

Command	Description
show ethernet sla operations, on page 478	Displays information about configured Ethernet SLA operations.
show ethernet sla statistics, on page 481	Displays the contents of buckets containing Ethernet SLA metrics collected by probes.

ethernet sla on-demand operation type cfm-loopback probe

To execute an on-demand Ethernet SLA operation probe for CFM loopback measurement, use the **ethernet sla on-demand operation type cfm-loopback probe** command in EXEC configuration mode.

ethernet sla on-demand operation type cfm-delay-measurement probe [*priority number*]**send** {*packet* {*once*| *every number* {*milliseconds*| *seconds*| *minutes*| *hours*}}| *burst* {*once*| *every number* {*seconds*| *minutes*| *hours*}}| *packet count number interval number* {*milliseconds*| *seconds*}}| *domain domain_name* *source interface type interface-path-id target* {*mac-address H.H.H.H*| *mep-id id_number*}| *statistics measure* {*one-way-delay-ds*| *one-way-delay-sd*| *one-way-jitter-ds*| *one-way-jitter-sd*| *round-trip-delay*| *round-trip-jitter*}| *aggregate* {*none*| *bins number width milliseconds*}| *buckets* {*archive number*| *size number* {*per-probe*| *probes*}}| *schedule* {*now*| *at hh:mm:ss* [*day month year*]| *in number* {*seconds*| *minutes*| *hours*}}| *for duration* {*seconds*| *minutes*| *hours*}| *repeat every number* {*seconds*| *minutes*| *hours*}| *count probes*[*asynchronous*]

Syntax Description

priority number	(Optional) Configures the priority of outgoing SLA probe packets. The range is 0 to 7. The default is to use the COS bits for the egress interface.
send packet once	(Optional) Sends one packet one time.
send packet every number { <i>milliseconds</i> <i>seconds</i> <i>minutes</i> <i>hours</i> }	(Optional) Sends one packet every specified number of milliseconds, seconds, minutes, or hours, where <i>number</i> is in the following range: • 1 to 3600 seconds • 1 to 1440 minutes • 1 to 168 hours • 100 to 10000 milliseconds (specified in increments of 100)
send burst once	(Optional) Specifies that a burst of packets is sent one time. This is the default.
send burst every number { <i>seconds</i> <i>minutes</i> <i>hours</i> }	(Optional) Sends a burst of packets every specified number of seconds, minutes, or hours, where <i>number</i> is in the following range: • 1–3600 seconds • 1–1440 minutes • 1–168 hours The default is to send a burst every 10 seconds.
packet count number	Specifies the number of packets to be sent in a burst, in the range 2 to 600. The default is 10.

interval <i>number</i> { milliseconds seconds }	Specifies the time between sending packets in a burst, where <i>number</i> is in the following range: • 100 to 30000 milliseconds • 1 to 30 seconds Note The total length of a burst (the packet count multiplied by the interval) must not exceed 1 minute.
domain <i>domain-name</i>	Specifies the name of the domain for the locally defined CFM MEP.
source interface <i>type</i>	Specifies the source interface type of the locally defined CFM MEP. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
target mac-address <i>H.H.H.H</i>	Specifies the MAC address (in dotted hexadecimal format) of the target MEP that is known to the local MEP for the probe.
target mep-id <i>id-number</i>	Specifies the ID (from 1 to 8191) of the target MEP that is known to the local MEP for the probe.
statistics measure	(Optional) Specifies the type of statistics to collect: • one-way-delay-ds—One-way delay statistics from destination to source. • one-way-delay-sd—One-way delay statistics from source to destination. • one-way-jitter-ds—One-way jitter statistics from destination to source. • one-way-jitter-sd—One-way jitter statistics from source to destination. • round-trip-delay—Round-trip delay statistics. • round-trip-jitter—Round-trip jitter statistics. All statistics are collected by default.
aggregate none	(Optional) Specifies that statistics are not aggregated into bins, and each statistic is stored individually. Caution This option can be memory-intensive and should be used with care.
aggregate bins <i>number</i>	(Optional) Specifies the number of bins (from 2 to 100) within each bucket to store sample packets from the probe. The default is to aggregate into one bin.

width <i>milliseconds</i>	Specifies the range of the samples to be collected within each bin in milliseconds, from 1 to 10000. Based on the specified width, bins are established in the following way: • Delay measurements (round-trip or one-way)—The lower bound of the bins is zero and the first bin's upper limit is 0 plus the specified width, and the last bin is unbounded. • Jitter measurements (round-trip or one-way)—The bins are evenly distributed around zero, with both the lowest and highest numbered bins being unbounded. See the Usage Guidelines for more information.
buckets archive <i>number</i>	(Optional) Specifies the number of buckets to store in memory from 1 to 100. The default is 100.
buckets size <i>number</i>	(Optional) Specifies the number of buckets to be used for probes from 1 to 100. The default is 1.
per-probe	Specifies that probes span multiple buckets.
probes	Specifies that buckets span multiple probes.
schedule now	(Optional) Specifies that the probe begins as soon as you enter the command. This is the default.
schedule at <i>hh:mm:ss</i>	(Optional) Specifies a specific time at which to start the probe in 24-hour notation.
<i>day</i>	(Optional) Number in the range 1 to 31 of the day of the month on which to start the probe.
<i>month</i>	(Optional) Name of the month (full word in English) in which to start the probe.
<i>year</i>	(Optional) Year (fully specified as 4 digits) in which to start the probe.
schedule in <i>number</i> { seconds minutes hours }	(Optional) Specifies a relative time, as a number of seconds, minutes or hours from the current time, at which to start the probe, where <i>number</i> is in the following ranges: • 1 to 3600 seconds • 1 to 1440 minutes • 1 to 24 hours

for duration {seconds minutes hours}	(Optional) Specifies the length of the probe as a number of seconds, minutes, or hours, where <i>number</i> is in the following ranges: • 1 to 3600 seconds • 1 to 1440 minutes • 1 to 24 hours Note The duration should not exceed the interval specified by the repeat every option.
repeat every <i>number</i> {seconds minutes hours}	(Optional) Specifies the interval at which to restart the probe as a number of seconds, minutes, or hours, where <i>number</i> is in the following ranges: • 1 to 90 seconds • 1 to 90 minutes • 1 to 24 hours The default is that probes are not repeated, and there is no default interval.
count <i>probes</i>	Specifies the number of probes to run in the range 1–100. There is no default.
asynchronous	(Optional) Specifies that the command displays the on-demand operation ID and exits immediately, with the operation continuing in the background. The default is synchronous and the operation displays the on-demand operation ID and all results on the console when it completes.

Command Default No on-demand operations are configured or executed.

Command Modes EXEC (#)

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When aggregation is enabled, a number of bins are created, each of which represents a range of values. Instead of storing each individual result, all that is stored is a counter of the number of results that fall within the range for each bin. This uses much less memory than storing each individual result.

For delay measurements, the first bin starts at 0, and each bin covers a range of values defined by the specified width, except for the last bin which ends at infinity. For example, an aggregate bin count of 4 and a width of 20 for delay measurements yields 4 bins of statistics for the following sample ranges:

- Bin 1—Samples with delay ranges 0 to < 20 ms.
- Bin 2—Samples with delay ranges greater than or equal to 20 and < 40 ms.
- Bin 3—Samples with delay ranges greater than or equal to 40 and < 60 ms.
- Bin 4—Samples with delay ranges 60 ms or greater (unbounded).

For jitter measurements, the bins are centered around 0 to include negative ranges. In this case, bins begin outward from 0 in the positive and negative direction. Using the example of a bin count of 4 with a width of 20 for jitter measurements, yields 4 bins of statistics for the following sample ranges:

- Bin 1—Samples with jitter ranges -20 ms or lower (unbounded in negative direction)
- Bin 2—Samples with jitter ranges greater than -20 ms to 0 ms.
- Bin 3—Samples with jitter ranges 0 to < than 20 ms.
- Bin 4—Samples with jitter ranges 20 ms or greater (unbounded in positive direction)

Task ID

Task ID	Operations
ethernet-services	execute

Examples

The following example shows how to enter the most basic SLA on-demand operation to measure CFM loopback statistics. This example implements the following defaults:

- Send a burst once for a packet count of 10 and interval of 1 second (10-second probe).
- Use default test pattern of 0's for padding.
- Use default class of service (CoS) for the egress interface.
- Measure all statistics.
- Aggregate statistics into one bin.
- Schedule now.
- Display results on the console.

```
RP/0/RSP0/CPU0:router# ethernet sla on-demand operation type cfm-loopback
probe packet size 1500 domain D1 source interface TenGigE 0/6/1/0 target mep-id 100
```

Related Commands

Command	Description
clear ethernet sla statistics all, on page 300	Deletes the contents of buckets containing SLA statistics collected by all operations probes.

Command	Description
clear ethernet sla statistics on-demand, on page 302	Deletes the contents of buckets containing SLA statistics collected by on-demand probes.
show ethernet sla operations, on page 478	Displays information about configured Ethernet SLA operations.
show ethernet sla statistics, on page 481	Displays the contents of buckets containing Ethernet SLA metrics collected by probes.

ethernet udd reset interface

To reset the UDLD protocol state for a specified interface or for all interfaces, use the **ethernet udd reset interface** command in the Ethernet Interface Configuration mode.

ethernet udd reset interface [*interface type* | **all**]

Syntax Description

interface type	(Optional) Specifies the interface type for which the UDLD protocol state needs to be reset.
all	(Optional) Resets the UDLD state for all interfaces.

Command Default

No default behavior or values

Command Modes

Ethernet Interface Configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	read

Examples

This example shows how to run the **ethernet udd reset interface** command:

```
RP/0/RSP0/CPU0:router# ethernet udd reset interface GigabitEthernet 0/10/0/11
```

ethernet uni id

To specify a name for the Ethernet User-Network Interface (UNI) link, use the **ethernet uni id** command in interface configuration mode.

ethernet uni id *name*

Syntax Description

<i>name</i>	Maximum of 64 characters to identify the Ethernet UNI link.

Command Default

No name is specified for the Ethernet UNI link.

Command Modes

Interface (config-if)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The UNI name should be unique among all UNIs that are part of a given Ethernet Virtual Connection (EVC).

When the Ethernet Local Management Interface (E-LMI) protocol is running on the UNI, the name specified in the **ethernet uni id** command is advertised by E-LMI to the Customer Edge (CE) device. It is also carried in Ethernet Connectivity Fault Management (CFM) Continuity Check Messages (CCMs) if there is an Up MEP on the UNI, and passed to E-LMI on the peer MEP so that it can be advertised to the remote CE device.

Task ID

Task ID	Operation
interface	read, write

Examples

The following example shows how to configure the UNI name called "PE1-CustA-Slot0-Port0" on Gigabit Ethernet interface 0/0/0/0:

```
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/0/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet uni id PE1-CustA-Slot0-Port0
```

Related Commands

Command	Description
interface (Ethernet), on page 190	Specifies or creates an Ethernet interface and enters interface configuration mode.

extension remote-uni disable

To disable transmission of the Cisco-proprietary Remote UNI Details information element in Ethernet LMI (E-LMI) STATUS messages, use the **extension remote-uni disable** command in interface Ethernet LMI configuration mode. To return to the default, use the **no** form of the command.

extension remote-uni disable

no extension remote-uni disable

This command has no keywords or arguments.

Command Default

The Cisco-proprietary Remote UNI Details information element is sent in E-LMI STATUS messages.

Command Modes

Interface Ethernet LMI configuration (config-if-elmi)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **extension remote-uni disable** command to have stricter conformance to the MEF 16 E-LMI specification for information elements in STATUS messages.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to disable transmission of the Cisco-proprietary Remote UNI Details information element:

```
RP/0/RSP0/CPU0:router# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet lmi
RP/0/RSP0/CPU0:router(config-if-elmi)# extension remote-uni disable
```

Related Commands

Command	Description
interface (Ethernet), on page 190	Specifies or creates an Ethernet interface and enters interface configuration mode.

Command	Description
ethernet lmi, on page 330	Enables E-LMI operation on an interface and enters interface Ethernet LMI configuration mode.

frame-period threshold

To configure the thresholds that trigger an Ethernet OAM frame-period error event, use the **frame-period threshold** command in Ethernet OAM link monitor or interface Ethernet OAM link monitor configuration mode. To return the threshold to the default value, use the **no** form of this command.

frame-period threshold low threshold [**high threshold**]

no frame-period threshold low threshold [**high threshold**]

Syntax Description

low threshold	Low threshold, in frames, that triggers a frame-period error event. The range is 0 to 1000000.
high threshold	(Optional) High threshold, in frames, that triggers a frame-period error event. The range is 0 to 1000000. The high threshold value can be configured only in conjunction with the low threshold value.

Command Default

The default low threshold is 1.

Command Modes

Ethernet OAM link monitor configuration (config-eoam-lm)

Interface Ethernet OAM link monitor configuration (config-if-eoam-lm)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When the low threshold is passed, a frame-period error event notification is generated and transmitted to the OAM peer. Additionally, any registered higher level OAM protocols, such as Connectivity Fault Management (CFM), are also notified. When the high threshold is passed, the configured high threshold action is performed in addition to the low threshold actions. The high threshold is optional and is configurable only in conjunction with the low threshold.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the low and high thresholds that trigger a frame-period error event.

```
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1  
RP/0/RSP0/CPU0:router(config-eoam)# link-monitor  
RP/0/RSP0/CPU0:router(config-eoam-lm)# frame-period threshold low 100 high 600000
```


frame-period window

To configure the window size for an Ethernet OAM frame-period error event, use the **frame-period window** command in Ethernet OAM link monitor or interface Ethernet OAM link monitor configuration mode. To return the window size to the default value, use the **no** form of this command.

frame-period window *window*

no frame-period window *window*

Syntax Description

<i>window</i>	Size of the window for a frame-period error in milliseconds. The range is 100 to 60000.

Command Default

The default value is 1000.

Command Modes

Ethernet OAM link monitor configuration (config-eoam-lm)

Interface Ethernet OAM link monitor configuration (config-if-eoam-lm)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the window size for a frame-period error.

```
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# link-monitor
RP/0/RSP0/CPU0:router(config-eoam-lm)# frame-period window 60000
```

frame-seconds threshold

To configure the thresholds that trigger a frame-seconds error event, use the **frame-seconds threshold** command in Ethernet OAM link monitor or interface Ethernet OAM link monitor configuration mode. To return the threshold to the default value, use the **no** form of this command.

frame-seconds threshold low threshold [**high threshold**]

no frame-seconds threshold low threshold [**high threshold**]

Syntax Description

low threshold	Low threshold, in seconds, that triggers a frame-seconds error event. The range is 0 to 900.
high threshold	(Optional) High threshold, in seconds, that triggers a frame-seconds error event. The range is 1 to 900. The high threshold value can be configured only in conjunction with the low threshold value.

Command Default

The default value is 1.

Command Modes

Ethernet OAM link monitor configuration (config-eoam-lm)
Interface Ethernet OAM link monitor configuration (config-if-eoam-lm)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When the low threshold is passed, a frame-seconds error event notification is generated and transmitted to the OAM peer. Additionally, any registered higher level OAM protocols, such as Connectivity Fault Management (CFM), are also notified. When the high threshold is passed, the configured high threshold action is performed in addition to the low threshold actions. The high threshold is optional and is configurable only in conjunction with the low threshold.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the low and high thresholds that trigger a frame-seconds error event:

```
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# link-monitor (config-eoam)# link-monitor
RP/0/RSP0/CPU0:router(config-eoam-lm)# frame-seconds threshold low 10 high 900
```

Related Commands

Command	Description
ethernet oam profile , on page 334	Creates an EOAM profile and enters EOAM configuration mode.
link-monitor , on page 366	Enters Ethernet OAM link monitor configuration mode.

frame-seconds window

To configure the window size for the OAM frame-seconds error event, use the **frame-seconds window** command in Ethernet OAM link monitor or interface Ethernet OAM link monitor configuration mode. To return the window size to the default value, use the **no** form of this command.

frame-seconds window *window*

no frame-seconds window *window*

Syntax Description

<i>window</i>	Size of the window for a frame-seconds error in milliseconds. The range is 10000 to 900000.

Command Default

The default value is 60000.

Command Modes

Ethernet OAM link monitor configuration (config-eoam-lm)
Interface Ethernet OAM link monitor configuration (config-if-eoam-lm)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the window size for a frame-seconds error.

```
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# link-monitor
RP/0/RSP0/CPU0:router(config-eoam-lm)# frame-seconds window 900000
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
link-monitor, on page 366	Enters Ethernet OAM link monitor configuration mode.

frame threshold

To configure the thresholds that triggers an Ethernet OAM frame error event, use the **frame threshold** command in Ethernet OAM link monitor or interface Ethernet OAM link monitor configuration mode. To return the threshold to the default value, use the **no** form of this command.

frame threshold low threshold [**high threshold**]

no frame threshold low threshold [**high threshold**]

Syntax Description

low threshold	Low threshold, in symbols, that triggers a frame error event. The range is 0 to 12000000.
high threshold	(Optional) High threshold, in symbols, that triggers a frame error event. The range is 0 range is 0 to 12000000. The high threshold value can be configured only in conjunction with the low threshold value.

Command Default

The default low threshold is 1.

Command Modes

Ethernet OAM link monitor configuration (config-eoam-lm)

Interface Ethernet OAM link monitor configuration (config-if-eoam-lm)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When the low threshold is passed, a frame error event notification is generated and transmitted to the OAM peer. Additionally, any registered higher level OAM protocols, such as Connectivity Fault Management (CFM), are also notified. When the high threshold is passed, the configured high threshold action is performed in addition to the low threshold actions. The high threshold is optional and is configurable only in conjunction with the low threshold.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the low and high thresholds that trigger a frame error event:

```
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# link-monitor
RP/0/RSP0/CPU0:router(config-eoam-lm)# frame threshold low 100 high 60000
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
link-monitor, on page 366	Enters Ethernet OAM link monitor configuration mode.

frame window

To configure the frame window size of an OAM frame error event, use the **frame window** command in Ethernet OAM link monitor or interface Ethernet OAM link monitor configuration mode. To return the window size to the default value, use the **no** form of this command.

frame window *window*

no frame window *window*

Syntax Description

<i>window</i>	Size of the window for a frame error in seconds. The range is 1000 to 60000.

Command Default

The default value is 1000.

Command Modes

Ethernet OAM link monitor configuration (config-eoam-lm)
Interface Ethernet OAM link monitor configuration (config-if-eoam-lm)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the window size for a frame error.

```
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# link-monitor
RP/0/RSP0/CPU0:router(config-eoam-lm)# frame window 60
```


Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
link-monitor, on page 366	Enters Ethernet OAM link monitor configuration mode.

hello-interval

To specify the time interval between hello packets for an Ethernet OAM session, use the **hello-interval** command in Ethernet OAM or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of the command.

hello-interval {100ms| 1s}

no hello-interval {100ms| 1s}

Syntax Description

100ms	Specifies a 100-millisecond interval between hello packets.
1s	(Interface Ethernet OAM configuration mode only) Specifies a 1-second interval between hello packets. This is the default.

Command Default

The default is 1 second.

Command Modes

Ethernet OAM configuration (config-eoam)
Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If a profile exists on the interface, setting the mode with this command overrides the mode setting in the profile on an interface.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to set the hello interval to 100 milliseconds on a Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/5/6
```

```
RP/0/RSP0/CPU0:router(config-if)# ethernet oam  
RP/0/RSP0/CPU0:router(config-if-eoam)# profile Profile_1  
RP/0/RSP0/CPU0:router(config-if-eoam)# hello-interval 100ms
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.
show ethernet oam configuration, on page 465	Displays the current active Ethernet OAM configuration on an interface.
show ethernet oam interfaces, on page 471	

link-monitor

To enter Ethernet OAM link monitor configuration mode, use the **link-monitor** command in Ethernet OAM configuration mode. To enter interface Ethernet OAM link monitor configuration mode, use the **link-monitor** command in interface Ethernet OAM configuration mode.

link-monitor

Syntax Description

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

Ethernet OAM configuration (config-eoam)
Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enter the Ethernet OAM link monitor configuration mode from global configuration mode.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# link-monitor
RP/0/RSP0/CPU0:router(config-eoam-lm)#
```

The following example shows how to enter the link monitor configuration mode from interface Ethernet OAM configuration mode.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/5/6
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
```

```
RP/0/RSP0/CPU0:router(config-if-eoam)# link-monitor
```

log ais

To configure AIS logging for a Connectivity Fault Management (CFM) domain service to indicate when AIS or LCK packets are received, use the **log ais** command in CFM domain service configuration mode. To disable AIS logging, use the no form of this command.

log ais

no log ais

Syntax Description This command has no keywords or arguments.

Command Default Logging is disabled.

Command Modes CFM domain service configuration (config-cfm-dmn-svc)

Command History	Release	Modification
	Release 3.9.1	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ethernet-services	read, write

Related Commands	Command	Description
	ais transmission , on page 279	Configures AIS transmission for a CFM domain service.
	ais transmission up , on page 281	Configures AIS transmission on a CFM interface.
	show ethernet cfm interfaces ais , on page 428	Displays the information about interfaces that are currently transmitting AIS.
	show ethernet cfm local meps , on page 436	Displays information about local MEPS.

log continuity-check errors

To enable logging of continuity-check errors, use the **log continuity-check errors** command in CFM domain service configuration mode. To disable logging of continuity-check errors, use the no form of this command.

log continuity-check errors

no log continuity-check errors

Syntax Description This command has no keywords or arguments.

Command Default Logging is disabled.

Command Modes CFM domain service configuration (config-cfm-dmn-svc)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The following types of continuity-check errors are logged:

- Incorrect level (cross-connect)
- Incorrect interval
- Incorrect MA-ID (cross-connect)
- Local MAC address received (loop)
- Local MEP-ID received (mis-config)
- Invalid source MAC received
- RDI received

Task ID	Task ID	Operations
	ethernet-services	read, write

Examples

The following example shows how to enable logging of continuity check errors:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Bridge_Service bridge group BD1 bridge-domain
B1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# log continuity-check errors

RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Cross_Connect_1 xconnect group XG1 p2p X1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# log continuity-check errors
```


log continuity-check mep changes

To enable logging of peer maintenance-end-point (MEP) state changes, use the **log continuity-check mep changes** command in CFM domain service configuration mode. To disable logging of peer MEP state changes, use the no form of this command.

log continuity-check mep changes

no log continuity-check mep changes

Syntax Description This command has no keywords or arguments.

Command Default Logging is disabled

Command Modes CFM domain service configuration (config-cfm-dmn-svc)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command enables logging of state changes that occur in MEPs for a particular service, such as:

- New peer MEP detected.
- Peer MEP time out (loss of continuity) detected.

Task ID	Task ID	Operations
	ethernet-services	read, write

Examples The following example shows how to enable logging of continuity-check mep changes:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Bridge_Service bridge group BD1 bridge-domain B1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# log continuity-check mep changes
```

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Cross_Connect_1 xconnect group XG1 p2p X1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# log continuity-check mep changes
```

log crosscheck errors

To enable logging of crosscheck error events, use the **log crosscheck errors** command in CFM domain service configuration mode. To disable logging of crosscheck error events, use the no form of this command.

log crosscheck errors

no log crosscheck errors

Syntax Description

This command has no keywords or arguments.

Command Default

Logging is disabled.

Command Modes

CFM domain service configuration (config-cfm-dmn-svc)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command enables logging of crosscheck errors, such as:

- MEPs missing
- Additional peer MEPs detected



Note

Crosscheck errors are only detected and logged when crosscheck is configured using the **mep crosscheck** and **mep-id** commands.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enable logging of crosscheck errors:

```
RP/0/RSP0/CPU0:router# configure
```

```

RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Bridge_Service bridge group BD1 bridge-domain B1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# log crosscheck errors

```

```

RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Cross_Connect_1 xconnect group XG1 p2p X1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# log crosscheck errors

```

Related Commands

Command	Description
mep crosscheck, on page 381	Enters CFM MEP crosscheck configuration mode.
mep-id, on page 382	Enables crosscheck on a MEP.

log disable

To turn off syslog messages for Ethernet LMI (E-LMI) errors or events, use the **log disable** command in interface Ethernet LMI configuration mode. To return to the default, use the **no** form of the command.

log {errors | events} disable

no log {errors | events} disable

Syntax Description

errors	Disables logging of E-LMI protocol and reliability errors.
events	Disables logging of significant E-LMI protocol events.

Command Default

E-LMI syslog messages are enabled for errors and events.

Command Modes

Interface Ethernet LMI configuration (config-if-elmi)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To see statistics on E-LMI protocol and reliability errors and protocol events, use the **show ethernet lmi interfaces** command.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to disable logging of E-LMI protocol and reliability errors:

```
RP/0/RSP0/CPU0:router# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet lmi
RP/0/RSP0/CPU0:router(config-if-elmi)# log errors disable
```

The following example shows how to disable logging of E-LMI events:

```
RP/0/RSP0/CPU0:router# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet lmi
RP/0/RSP0/CPU0:router(config-if-elmi)# log events disable
```

Related Commands

Command	Description
interface (Ethernet), on page 190	Specifies or creates an Ethernet interface and enters interface configuration mode.
ethernet lmi, on page 330	Enables E-LMI operation on an interface and enters interface Ethernet LMI configuration mode.
show ethernet lmi interfaces, on page 456	Displays E-LMI information for an interface, including protocol status and error and event statistics.

log efd

To enable logging of Ethernet Fault Detection (EFD) state changes to an interface (such as when an interface is shut down or brought up via EFD), use the **log efd** command in CFM domain service configuration mode. To disable EFD logging, use the no form of this command.

log efd

no log efd

Syntax Description

This command has no keywords or arguments.

Command Default

EFD logging is disabled.

Command Modes

CFM domain service configuration (config-cfm-dmn-svc)

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When EFD logging is enabled, a syslog is generated whenever the EFD state of an interface changes.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enable EFD logging:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain D1 level 1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service S1 down-meps
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# log efd
```

Related Commands

Command	Description
efd, on page 324	Enables EFD on all down MEPs in a down MEPs service.
show efd interface, on page 422	Displays all interfaces that are shut down because of EFD.

maximum-meps

To configure the maximum number of maintenance end points (MEPs) for a service, use the **maximum-meps** command in CFM domain service configuration mode. To return to the default value, use the no form of this command.

maximum-meps *number*

Syntax Description

<i>number</i>	Maximum number of MEPs allowed for this service. The range is 2 to 8190.

Command Default

The default is 100.

Command Modes

CFM domain service configuration (config-cfm-dmn-svc)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command configures the maximum number of peer maintenance end points (MEPs). It does not limit the number of local MEPs. The configured **maximum-meps** *number* must be at least as great as the number of configured crosscheck MEPs.

The **maximum-meps** *number* limits the number of peer MEPs, for which local MEPs store continuity-check messages (CCMs). When the limit is reached, CCMs from any new peer MEPs are ignored, but CCMs from existing peer MEPs continue to be processed normally.

The **maximum-meps** *number* also limits the size of the CCM learning database.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the maximum number of maintenance end points (MEPs) for a service:

```
RP/0/RSP0/CPU0:router# configure
```

```

RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Bridge_Service bridge group BD1 bridge-domain B1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# maximum-meps 4000

```

```

RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Cross_Connect_1 xconnect group XG1 p2p X1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# maximum-meps 4000

```

Related Commands

Command	Description
domain, on page 322	
ethernet cfm (global), on page 326	Enters CFM configuration mode.
ethernet cfm (interface), on page 328	Enters interface CFM configuration mode.
service, on page 419	
show ethernet cfm configuration-errors, on page 426	Displays information about errors that are preventing configured CFM operations from becoming active, as well as any warnings that have occurred.
show ethernet cfm local maintenance-points, on page 433	Displays a list of local maintenance points.
show ethernet cfm local meps, on page 436	Displays information about local MEPS.
show ethernet cfm peer meps, on page 442	Displays information about maintenance end points (MEPs) for peer MEPS.

mep crosscheck

To enter CFM MEP crosscheck configuration mode, use the **mep crosscheck** command in CFM domain service configuration mode.

mep crosscheck

Syntax Description

This command has no keywords or arguments.

Command Default

Not configured, in which case no crosscheck is performed on the MEP.

Command Modes

CFM domain service configuration (config-cfm-dmn-svc)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enter CFM MEP crosscheck configuration mode:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Bridge_Service bridge group BD1 bridge-domain
B1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# mep crosscheck
RP/0/RSP0/CPU0:router(config-cfm-xcheck)#
```

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Cross_Connect_1 xconnect group XG1 p2p X1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# mep crosscheck
RP/0/RSP0/CPU0:router(config-cfm-xcheck)#
```

mep-id

To enable crosscheck on a maintenance end point (MEP), use the **mep-id** command in CFM MEP crosscheck configuration mode. To disable crosscheck on a MEP, use the **no** form of this command.

mep-id *mep-id-number* [**mac-address** *mac-address*]

no mep-id *mep-id-number* [**mac-address** *mac-address*]

Syntax Description

mac <i>mac-address</i>	(Optional) MAC address of the interface upon which the MEP resides, in standard hexadecimal format, hh:hh:hh:hh:hh:hh.

Command Default

Not configured, in which case no crosscheck is performed on the MEP.

Command Modes

CFM MEP crosscheck configuration (config-cfm-xcheck)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command enables Crosscheck on the maintenance end point (MEP) specified by the MEP ID number (*mep-id-number*). The range for MEP ID numbers is 1 to 8191. Crosscheck is enabled when the first crosscheck MEP is entered.

Repeat this command for every MEP that you want to include in the expected set of MEPs for crosscheck.

Crosscheck detects the following two additional defects for continuity-check messages (CCMs) on peer MEPs:

- Peer MEP missing—A crosscheck MEP is configured, but has no corresponding peer MEP from which to receive CCMs.
- Peer MEP unexpected—A peer MEP is sending CCMs, but no crosscheck MEP is configured for it.



Note

If more than one local MEP is configured for a service, all the local MEPs must be included in the list of configured crosscheck MEPs.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to statically define a maintenance end point (MEP) under a service, so that it can be crosschecked.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Bridge_Service bridge group BD1 bridge-domain
B1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# mep crosscheck
RP/0/RSP0/CPU0:router(config-cfm-xcheck)# mep-id 10

RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Cross_Connect_1 xconnect group XG1 p2p X1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# mep crosscheck
RP/0/RSP0/CPU0:router(config-cfm-xcheck)# mep-id 10
```

mep domain

To create a maintenance end point (MEP) on an interface, use the **mep domain** command in interface CFM configuration mode. To remove the MEP from the interface, use the **no** form of this command.

mep domain *domain-name* **service** *service-name* **mep-id** *id-number*

no mep domain *domain-name* **service** *service-name* **mep-id** *id-number*

Syntax Description

domain <i>domain-name</i>	Domain in which to create the maintenance end point (MEP).
service <i>service-name</i>	Operation service in which to create the maintenance end point (MEP).
mep-id <i>id-number</i>	Maintenance end points (MEP) identifier to assign to this MEP. The range is 1 to 8191.

Command Default

No MEPs are configured on the interface.

Command Modes

Interface CFM configuration (config-if-cfm)

Command History

Release	Modification
Release 3.9.1	This command was introduced. This command replaces the ethernet cfm mep command.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

CFM Maintenance end points (MEPs) are supported on all Ethernet interfaces and VLAN subinterfaces.

This command creates MEPs in the UP MEP state, unless the specified **service** is configured with MEPs in the DOWN MEP state. See the [service, on page 419](#) command.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to create a MEP using an ID of 1 on the CFM domain named DM1 and service named Sv1:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# ethernet cfm
RP/0/RSP0/CPU0:router(config-if-cfm)# mep domain Dm1 service Sv1 mep-id 1
```

Related Commands

Command	Description
ethernet cfm (interface) , on page 328	Enters interface CFM configuration mode.
show ethernet cfm configuration-errors , on page 426	Displays information about errors that are preventing configured CFM operations from becoming active, as well as any warnings that have occurred.

mib-retrieval

To enable MIB retrieval in an Ethernet OAM profile or on an Ethernet OAM interface, use the **mib-retrieval** command in Ethernet OAM or interface Ethernet OAM configuration mode. To return the interface to the default (disabled), use the **disable** keyword.

mib-retrieval [disable]

Syntax Description

disable	Disables MIB retrieval the Ethernet OAM interface.

Command Default

MIB retrieval is disabled by default.

Command Modes

Ethernet OAM configuration (config-eoam)
Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When MIB retrieval is enabled on an Ethernet OAM interface, the OAM client advertises support for MIB retrieval to the peer.

When MIB retrieval is disabled (the default), only the enable form of the **mib-retrieval** command is available in interface Ethernet OAM configuration mode. The **disable** keyword is provided to override the profile when needed.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enable MIB retrieval on a Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/5/6
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
```



```
RP/0/RSP0/CPU0:router(config-if-eoam)# mib-retrieval
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.
show ethernet oam configuration, on page 465	Displays the current active Ethernet OAM configuration on an interface.
show ethernet oam interfaces, on page 471	

mip auto-create

To enable the automatic creation of MIPs in a bridge domain or cross-connect, use the **mip auto-create** command in CFM domain service configuration mode. To disable automatic creation of MIPs, use the **no** form of this command.

mip auto-create {all| lower-mep-only}

no mip auto-create {all| lower-mep-only}

Syntax Description

all	Enables automatic creation of MIPs on all interfaces.
lower-mep-only	Enables automatic creation of MIPs only on interfaces with a MEP at a lower level.

Command Default

No default behavior or values

Command Modes

CFM domain service configuration (config-cfm-dmn-svc)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The MIP auto-creation feature is only configured for services associated with bridge domains or cross-connects.

Unlike MEPs, MIPs are not explicitly configured on each interface. MIPs are created automatically according to the algorithm specified in the CFM 802.1ag standard. The algorithm, in brief, operates as follows for each interface:

- The bridge-domain or cross-connect for the interface is found, and all services associated with that bridge-domain or cross-connect are considered for MIP auto-creation.
- The level of the highest-level MEP on the interface is found. From among the services considered above, the service in the domain with the lowest level that is higher than the highest MEP level is selected. If there are no MEPs on the interface, the service in the domain with the lowest level is selected.
- The MIP auto-creation configuration for the selected service is examined to determine whether a MIP should be created.

**Note**

Configuring a MIP auto-creation policy for a service does not guarantee that a MIP will automatically be created for that service. The policy is only considered if that service is selected by the algorithm first.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enable the automatic creation of MIPs for all interfaces in a bridge domain:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Bridge_Service bridge group BD1 bridge-domain
B1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# mip auto-create all
```

Related Commands

Command	Description
domain , on page 322	
ethernet cfm (global) , on page 326	Enters CFM configuration mode.
service , on page 419	
show ethernet cfm configuration-errors , on page 426	Displays information about errors that are preventing configured CFM operations from becoming active, as well as any warnings that have occurred.
show ethernet cfm local maintenance-points , on page 433	Displays a list of local maintenance points.
show ethernet cfm local meps , on page 436	Displays information about local MEPs.
show ethernet cfm peer meps , on page 442	Displays information about maintenance end points (MEPs) for peer MEPs.

mode (Ethernet OAM)

To configure the Ethernet OAM mode on an interface, use the **mode** command in Ethernet OAM or interface Ethernet OAM configuration mode. To return to the default, use the **no** form of the command.

mode {**active**|**passive**}

Syntax Description

passive	Specifies that the interface operates in passive mode, where it cannot initiate the discovery process, generate a retrieval PDU, or request loopback.
active	(Interface Ethernet OAM configuration only) Specifies that the interface operates in active mode to initiate processes and make requests.

Command Default

The default is active.

Command Modes

Ethernet OAM configuration (config-eoam)
Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If a profile exists on the interface, setting the mode with this command overrides the mode setting in the profile on an interface.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enable Ethernet OAM passive mode on a Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/5/6
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# profile Profile_1
```

```
RP/0/RSP0/CPU0:router(config-if-eoam)# mode passive
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.
show ethernet oam configuration, on page 465	Displays the current active Ethernet OAM configuration on an interface.
show ethernet oam interfaces, on page 471	

monitoring

To enable Ethernet OAM link monitoring, use the **monitoring** command in Ethernet OAM link monitor or interface Ethernet OAM link monitor configuration mode. To return link monitoring to its default state of enabled, use the **no** form of this command.

monitoring [disable]

no monitoring [disable]

Syntax Description

disable	(Optional) Disables Ethernet OAM link monitoring.
Note	When configuring on a profile, only the monitoring disable form of the command is supported.

Command Default

Link monitoring is enabled by default.

Command Modes

Ethernet OAM link monitor configuration (config-eoam-lm)
Interface Ethernet OAM link monitor configuration (config-if-eoam-lm)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Monitoring is enabled by default. To disable it either on a profile or an interface, use the **monitoring disable** form of the command.

If monitoring is disabled on a profile, but you want to override the configuration and enable it for an interface, use the **monitoring** command in interface Ethernet OAM link monitor configuration mode.

You cannot configure the **monitoring** command without the **disable** keyword on a profile.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to disable link-monitoring on an Ethernet OAM interface:

```
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# link-monitor
RP/0/RSP0/CPU0:router(config-eoam-lm)# monitoring disable
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
link-monitor, on page 366	Enters Ethernet OAM link monitor configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.
show ethernet oam configuration, on page 465	Displays the current active Ethernet OAM configuration on an interface.
show ethernet oam statistics, on page 474	Displays the local and remote Ethernet OAM statistics for interfaces.
show ethernet oam interfaces, on page 471	

packet size

To configure the minimum size (in bytes) for outgoing probe packets, including padding when necessary, use the **packet size** command in SLA profile probe configuration mode. To remove this configuration, use the no form of this command.

packet size *bytes* [**test pattern** {**hex 0x HHHHHHHH**|**pseudo-random**}]

no packet size *bytes* [**test pattern** {**hex 0x HHHHHHHH**|**pseudo-random**}]

Syntax Description

<i>bytes</i>	Minimum size of the packet including padding when necessary. The range is 1 to 9000 bytes. This value is the total frame size including the Layer 2 or Layer 3 packet header.
test pattern hex 0x HHHHHHHH	(Optional) Specifies a 4-byte string (8 hexadecimal characters) to repeat as many times as required to fill the outgoing probe packet to the specified minimum packet size. The default is all 0s.
test pattern pseudo-random	(Optional) Specifies a pseudo-random bit sequence determined by the protocol to fill the outgoing probe packet to the specified minimum packet size.

Command Default

The minimum packet size is not configured. When a minimum packet size is configured and padding is required, the default padding is all 0s.

Command Modes

SLA profile probe configuration (config-sla-prof-pb)

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The test pattern hex and pseudo-random keywords were added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For supported packet types, this configuration determines the minimum size of all outgoing SLA probe packets, including the size to which they are padded. The amount of padding that is added to a packet depends on the type of frame that is sent and the amount of data in the frame.

When the packet size is not configured, packets are sent at the minimum size required to fit all the required information. Even when the packet size is configured, the packets may be larger than the configured size if the required information exceeds the configured value.

**Note**

If a probe packet is too large, it may get dropped somewhere in the network.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the minimum size of outgoing probe packets using default padding of all 0s as needed:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# probe
RP/0/RSP0/CPU0:router(config-sla-prof-pb)# packet size 9000
RP/0/RSP0/CPU0:router(config-sla-prof-pb)# commit
```

The following example shows how to configure a hexadecimal test pattern to pad packets with to reach the minimum packet size:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# probe
RP/0/RSP0/CPU0:router(config-sla-prof-pb)# packet size 9000 test pattern hex 0xabcdabcd
RP/0/RSP0/CPU0:router(config-sla-prof-pb)# commit
```

ping ethernet cfm

To send Ethernet connectivity fault management (CFM) loopback messages to a maintenance end point (MEP) or MAC address destination from the specified source MEP, and display a summary of the responses, use the **ping ethernet cfm** command in EXEC mode.

ping ethernet cfm domain *domain-name* **service** *service-name* {**mac-address** *mac* | **mep-id** *id*} **source** [**mep-id** *source-id*] **interface** *interface-path-id* [**cos** *cos-val*] [**count** *n*] [**frame-size** *size*] [**data-pattern** *hex*] [**interval** *seconds*] [**timeout** *time*]

Syntax Description

domain <i>domain-name</i>	String of a maximum of 80 characters that identifies the domain in which the maintenance points reside. Note For more information about the syntax, use the question mark (?) online help function.
service <i>service-name</i>	String of a maximum of 80 characters that identifies the maintenance association to which the maintenance points belong.
mac-address <i>mac</i>	6-byte ID number of the MAC address of the destination MEP.
mep-id <i>id</i>	Maintenance end point (MEP) ID number of the destination MEP. The range for MEP ID numbers is 1 to 8191.
source	Source information.
mep-id <i>source-id</i>	(Optional) Maintenance end point (MEP) ID number of the source MEP. The range for MEP ID numbers is 1 to 8191.
interface <i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
cos <i>cos-val</i>	(Optional) Class of Service (CoS) value that identifies the class of traffic of the source MEP. The valid values are from 0 to 7.
count <i>n</i>	(Optional) Number of pings as an integer value. The default is 5.
frame-size <i>size</i>	(Optional) Size, as an integer, of the ping frames. Frames are padded to reach the specified size. The default is 0 (no padding).
data-pattern <i>hex</i>	(Optional) Hexadecimal value to be used as the data pattern for padding within a ping frame, when padding is required due to the frame-size configuration. The default is 0.
interval <i>seconds</i>	(Optional) Specifies, in seconds, the time between pings. The <i>n</i> argument is entered in seconds. The default is 1 second.

timeout *time* (Optional) Timeout, in seconds, for the ping packet. The default is 2.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Before you can use this command, a local MEP must be configured for the domain and the interface.

The command displays the following information:

- Number of loopback message being sent
- Timeout period
- Domain name
- Domain level
- Service name
- Source MEP ID
- Interface
- Target MAC address
- MEP ID – If no MEP ID is specified, “No MEP ID specified” is displayed.
- Running time for the current ping operation to complete

**Note**

The remaining information is not displayed until the current ping operation is complete. If the user interrupts the operation during this time (by pressing control-C), the prompt is returned and no further information is displayed. However, all loopback messages continue to be sent.

- Success rate of responses received – displayed as a percentage followed by the actual number of responses
- The round trip time minimum/maximum/average in milliseconds
- Out-of-sequence responses – displayed as a percentage followed by the actual number of out-of-sequence responses when at least one response is received. An out-of-sequence response occurs if the first response does not correspond with the first message sent, or a subsequent response is not the expected next response after a previously received response.

- Bad data responses – displayed as a percentage followed by the actual number of bad data responses when at least one response is received. A bad data response occurs if the padding data in the response does not match the padding data that in the sent message. This can only happen if the sent message is padded using the **frame-size** option.
- Received packet rate – displayed in packets per second when at least two responses are received. This approximate rate of response is the time between the first response received and the last response received, divided by the total number of responses received.

Task ID

Task ID	Operations
basic-services	execute
ethernet-services	execute

Examples

The following example shows how to send an Ethernet CFM loopback message:

```
RP/0/RSP0/CPU0:router# ping ethernet cfm domain D1 service S1 mep-id 16 source
interface GigabitEthernet 0/0/0/0

Type escape sequence to abort.
Sending 5 CFM Loopbacks, timeout is 2 seconds -
Domain foo (level 2), Service foo
Source: MEP ID 1, interface GigabitEthernet0/0/0/0
Target: 0001.0002.0003 (MEP ID 16):
Running (5s) ...
Success rate is 60.0 percent (3/5), round-trip min/avg/max = 1251/1349/1402 ms
Out-of-sequence: 0.0 percent (0/3)
Bad data: 0.0 percent (0/3)
Received packet rate: 1.4 pps
```

polling-verification-timer

To set or disable the Metro Ethernet Forum (MEF) T392 Polling Verification Timer (PVT) for Ethernet Local Management Interface (E-LMI) operation, use the **polling-verification-timer** command in interface Ethernet LMI configuration mode. To return to the default, use the **no** form of the command.

polling-verification-timer {*interval* | **disable**}

no polling-verification-timer {*interval* | **disable**}

Syntax Description

<i>interval</i>	Number of seconds in the range 5 to 30. The default is 15.
disable	Turns off the timer.

Command Default

The T392 Polling Verification Timer is set to 15 seconds.

Command Modes

Interface Ethernet LMI configuration (config-if-elmi)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The PVT specifies the allowable time between transmission of a STATUS message and receipt of a STATUS ENQUIRY from the Customer Edge (CE) device before recording an error. If the PVT expiration time is reached on consecutive packets for the number of times specified by the **status-counter** command without a STATUS ENQUIRY being received, the E-LMI protocol status is changed to Down.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to set the MEF Polling Verification Timer for E-LMI to 30 seconds:

```
RP/0/RSP0/CPU0:router# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet lmi
RP/0/RSP0/CPU0:router(config-if-elmi)# polling-verification-timer 30
```

Related Commands

Command	Description
interface (Ethernet), on page 190	Specifies or creates an Ethernet interface and enters interface configuration mode.
ethernet lmi, on page 330	Enables E-LMI operation on an interface and enters interface Ethernet LMI configuration mode.
show ethernet lmi interfaces, on page 456	Displays E-LMI information for an interface, including protocol status and error and event statistics.

priority (SLA)

To configure the priority of outgoing SLA probe packets, use the **priority** command in SLA profile probe configuration mode. To return the priority to the default value, use the no form of this command.

priority *priority*

no priority *priority*

Syntax Description

<i>priority</i>	Priority level. The range is 0 to 7.

Command Default

When the priority is not configured by SLA, the default is the Class of Service (CoS) priority for the egress interface.

Command Modes

SLA profile probe configuration (config-sla-prof-pb)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The default priority for all CFM operation types is the Class of Service (CoS) priority for the egress interface. SLA operations that are configured on Maintenance End Points (MEPs) do not use the Class of Service (CoS) settings that are configured independently on Maintenance End Points (MEPs). Use this command to change the priority level of SLA probe packets.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the priority of outgoing SLA probe packets.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# probe
```

```
RP/0/RSP0/CPU0:router(config-sla-prof-pb)# priority 7
```


probe

To enter SLA profile probe configuration mode, use the **probe** command in SLA profile configuration mode. To exit to the previous mode, use the no form of this command.

probe

no probe

Syntax Description This command has no keywords or arguments.

Command Default If no items are configured in the probe mode, all items in the probe mode use their default values.

Command Modes SLA profile configuration (config-sla-prof)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Each profile may optionally have 1 probe submode.

Task ID	Task ID	Operations
	ethernet-services	read, write

Examples The following example shows how to enter the SLA profile probe configuration mode:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# probe
RP/0/RSP0/CPU0:router(config-sla-prof-pb)#
```

profile (EOAM)

To attach an Ethernet OAM profile to an interface, use the **profile** command in interface Ethernet OAM configuration mode. To remove the profile from the interface, use the no form of this command.

profile *name*

no profile *name*

Syntax Description

<i>name</i>	Text name of the Ethernet OAM profile to attach to the interface.

Command Default

No profile is attached.

Command Modes

Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When an Ethernet OAM profile is attached to an interface using this command, all of the parameters configured for the profile are applied to the interface.

Individual parameters that are set by the profile configuration can be overridden by configuring them directly on the interface.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to attach an Ethernet OAM profile to a Gigabit Ethernet interface.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/5/6
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# profile Profile_1
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
show ethernet oam configuration, on page 465	Displays the current active Ethernet OAM configuration on an interface.
show ethernet oam interfaces, on page 471	

profile (SLA)

To create an SLA operation profile and enter the SLA profile configuration mode, use the **profile** command in SLA configuration mode. To remove the profile, use the **no** form of this command.

profile *profile-name* **type** {**cfm-delay-measurement**| **cfm-loopback**}

no profile *profile-name* **type** {**cfm-delay-measurement**| **cfm-loopback**}

Syntax Description

<i>profile-name</i>	Profile name, case-sensitive string up to 31 characters in length. The name “all” cannot be used.
type	Specifies the type of packets sent by operations in this profile. Valid types are: • cfm-delay-measurement: CFM delay measurement packets • cfm-loopback: CFM loopback packets

Command Default

No default behavior or values

Command Modes

SLA configuration (config-sla)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

Changing the packet **type** for the profile removes all stored data from the profile and is equivalent to deleting the profile and creating a new profile.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure an SLA operation profile and enter the SLA profile configuration mode:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)#
```

remote-loopback

To enable a remote loopback on the far end of an Ethernet OAM interface, use the **remote-loopback** command in Ethernet OAM configuration or interface Ethernet OAM configuration mode. To return the interface to the default (disabled), use the **disable** keyword.

remote-loopback [disable]

Syntax Description

disable	Disables the remote loopback at the far end of the Ethernet OAM interface.

Command Default

Remote loopback is disabled by default.

Command Modes

Ethernet OAM configuration (config-eoam)
Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When remote loopback is enabled on an Ethernet OAM interface, the OAM client advertises support for remote loopback to the peer.

When remote loopback is disabled (the default), only the enable form of the **remote-loopback** command is available in interface Ethernet OAM configuration mode. The **disable** keyword is provided to override the profile when needed.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enable remote loopback on a Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/5/6
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
```

```
RP/0/RSP0/CPU0:router(config-if-eoam)# profile Profile_1  
RP/0/RSP0/CPU0:router(config-if-eoam)# remote-loopback
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
ethernet oam loopback, on page 332	Starts or stops a loopback at the remote end of an Ethernet OAM interface.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.
show ethernet oam configuration, on page 465	Displays the current active Ethernet OAM configuration on an interface.
show ethernet oam interfaces, on page 471	

require-remote

To require that certain features are enabled before an OAM session can become active, or to disable a requirement that is part of an active OAM profile, use the **require-remote** command in Ethernet OAM configuration or interface Ethernet OAM configuration mode. To remove the configuration and return to the default, use the **no** form of this command.

require-remote {mode {active| passive}}| mib-retrieval| remote-loopback| link-monitoring [disabled]}
no require-remote {mode {active| passive}}| mib-retrieval| remote-loopback| link-monitoring [disabled]}

Syntax Description

mode {active passive}	Requires that active or passive mode is configured on the peer device before the OAM profile can become active.
mib-retrieval	Requires that MIB-retrieval is configured on the peer device before the OAM profile can become active.
remote-loopback	Requires that remote-loopback is configured on the peer device before the OAM profile can become active.
link-monitoring	Requires that link-monitoring feature is configured on the peer device before the OAM profile can become active.
disabled	(Optional—Interface Ethernet OAM configuration only) Overrides the Ethernet OAM profile configuration for this option and disables the feature at the specified interface.

Command Default

No default behavior or values

Command Modes

Ethernet OAM configuration (config-eoam)
 Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **disabled** keyword is available only when you are configuring Ethernet OAM on an interface, and is used to override the configuration that is part of an active OAM profile.

The **disabled** keyword does not remove the configuration of the command. Use the **no** form of this command to do that.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to require that specific features are enabled before an OAM session can become active

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# require-remote mode active
RP/0/RSP0/CPU0:router(config-eoam)# require-remote mib-retrieval
RP/0/RSP0/CPU0:router(config-eoam)# require-remote link-monitoring
```

The following example shows how to disable requirements on a particular interface that is part of an active OAM profile:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/6/5/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# require-remote mode active disabled
RP/0/RSP0/CPU0:router(config-if-eoam)# require-remote mib-retrieval disabled
RP/0/RSP0/CPU0:router(config-if-eoam)# require-remote link-monitoring disabled
```

Related Commands

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.
action capabilities-conflict, on page 257	Configures what action is taken on an interface when a capabilities-conflict event occurs.
show ethernet oam configuration, on page 465	Displays the current active Ethernet OAM configuration on an interface.
show ethernet oam discovery, on page 468	Displays the currently configured OAM information of Ethernet OAM sessions on interfaces.
show ethernet oam interfaces, on page 471	

schedule (SLA)

To schedule an operation probe in a profile, use the **schedule** command in SLA profile configuration mode. To disable a schedule, use the **no** form of this command.

Hourly Scheduling

schedule every number {hours| minutes} [first at hh:mm[:ss]] [for duration {seconds| minutes| hours}]

no schedule every number {hours| minutes} [first at hh:mm[:ss]] [for duration {seconds| minutes| hours}]

Daily Scheduling

schedule every day [at hh:mm] [for duration {seconds| minutes| hours| days}]

no schedule every day [at hh:mm] [for duration {seconds| minutes| hours| days}]

Weekly Scheduling

schedule every week on day [at hh:mm] [for duration {seconds| minutes| hours| days| week}]

no schedule every week on day [at hh:mm] [for duration {seconds| minutes| hours| days| week}]

Syntax Description

every week on day [at hh:mm][f or <i>duration</i> {seconds minutes hours days week}]	Schedules a probe one day per week, on the specified <i>day</i> , at the specified time (<i>hh:mm</i>), for the specified <i>duration</i> .
every day [at hh:mm][f or <i>duration</i> {seconds minutes hours days}	Schedules a probe every day, at the specified time (<i>hh:mm</i>), for the specified <i>duration</i> .
every number {hours minutes} first at hh:mm[:ss]	Schedules a probe every specified <i>number</i> of hours or minutes , starting at the specified time after midnight (<i>hh:mm[:ss]</i>).
every number {hours minutes} [f or <i>duration</i> {seconds minutes hours}]	Schedules a probe every specified <i>number</i> of hours or minutes , for the specified <i>duration</i> .

<i>day</i>	Day of the week. Valid values are: • Monday • Tuesday • Wednesday • Thursday • Friday • Saturday • Sunday
<i>hh:mm hh:mm[:s s]</i>	Time of day in 24 hour time: • <i>hh:mm</i> = hour:minutesexample: 22:30 • <i>hh:mm:ss</i> = hour:minutes:seconds example: 12:30:10(seconds are optional)
<i>duration</i>	Duration of probe. The ranges are : • 1 to 3600 seconds • 1 to 1440 minutes • 1 to 24 hours • 1 day • 1 week
<i>number</i>	Number of hours or minutes . • Valid values for hours are the factors of 24: 1, 2, 3, 4, 6, 8, 12 • Valid values for minutes are the factors of 1440 (up to 90): 1, 2, 3, 4, 5, 6, 8, 9, 10, 12, 15, 16, 18, 20, 24, 30, 32, 36, 40, 45, 48, 60, 80, 90

Command Default

The default is every hour. If the **at** keyword is not specified, the start time of each operation is distributed uniformly within the duration of the probe. If the **for** keyword is not specified, only one single burst is sent.

Command Modes

SLA profile configuration (config-sla-prof)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Schedules are optional, but a profile may contain only one schedule.

**Note**

Any change to a schedule causes all stored data for that operation to be deleted.

Changing a schedule is equivalent to deleting an operation and creating a new operation.

The **for duration** option must be specified if (and only if) the probe is configured to send multiple packets (or bursts of packets), using the **send packet every** or **send burst every** configuration of the **send (SLA)** command. If the **send (SLA)** command is not configured for the probe, or if **send burst once** is configured, the **for duration** option must not be used. If it is used in those cases, an error is returned.

The **for duration** option must not exceed the **schedule every {week | day | number}** option.

When the “**first at hh:hh[:ss]**” option is used, the configured time is used to calculate an offset after midnight when the first probe should be sent each day. The offset is calculated by taking the configured time plus the interval. Thus, probes may be sent before the configured time.

For example, if you configure “**schedule every 6 hours first at 11:15,**” then the offset after midnight will be 5:15 (11:15 plus 6:00) and probes will be sent each day at 05:15, 11:15, 17:15 and 23:15.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following examples show how to schedule operation probes in a profile:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# schedule every week on Monday at 23:30 for 1 hour
```

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# schedule every day at 11:30 for 5 minutes
```

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# schedule every 2 hours first at 13:45:01
```

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# schedule every 6 hours for 2 hours
```

Related Commands

Command	Description
send (SLA) , on page 416	Configures the number and timing of packets sent by a probe in an operations profile.

send (SLA)

To configure the number and timing of packets sent by a probe in an operations profile, use the **send** command in SLA profile probe configuration mode. To return to the default, use the **no** form of the command.

send burst {every *number* {seconds| minutes| hours}| once} **packet count** *packets* **interval** *number* {seconds| milliseconds}

no send burst {every *number* {seconds| minutes| hours}| once} **packet count** *packets* **interval** *number* {seconds| milliseconds}

send packet {every *number* {milliseconds| seconds| minutes| hours}| once}

no send packet {every *number* {milliseconds| seconds| minutes| hours}| once}

Syntax Description

burst every <i>number</i> {seconds minutes hours}	Sends a burst of packets every specified number of seconds, minutes, or hours, where <i>number</i> is in the following range: • 1–3600 seconds • 1–1440 minutes • 1–168 hours
burst once	Sends a single burst one time.
packet count <i>packets</i>	Specifies the number of <i>packets</i> in each burst. The range is 2 to 600.
interval <i>number</i> {seconds milliseconds}	Specifies the time interval (in seconds or milliseconds) between each packet in a burst, where <i>number</i> is in the following range: • 1–30 seconds • 100–30000 milliseconds
packet every <i>number</i> {milliseconds seconds minutes hours}	Sends one packet every specified number of milliseconds, seconds, minutes, or hours, where <i>number</i> is in the following range: • 1–3600 seconds • 1–1440 minutes • 1–168 hours • 100–10000 milliseconds
packet once	Sends a single packet one time.

Command Default

If the operation is configured to measure jitter or data packet loss, the default is to send a single burst of 2 packets with a second interval between the packets.

If the operation does not calculate jitter or data packet loss, the default is to send a single packet one time.

Command Modes

SLA profile probe configuration (config-sla-prof-pb)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

The total length of a burst is the packet count multiplied by the interval and must not exceed 1 minute.

The minimum **interval** supported is platform dependent, so certain a configuration may cause an error even if it falls within the specified limits.

When **burst once** is sent, a single burst is sent at the start of the probe. If the schedule defines a duration for the probe, a configuration warning is flagged. The same is true if the default is in effect.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following examples show how to configure the types of packets sent by a probe in an operations profile:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# probe
RP/0/RSP0/CPU0:router(config-sla-prof-pb)# send burst every 60 seconds packet count 30
interval 1 second
RP/0/RSP0/CPU0:router(config-sla-prof-pb)#

RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# probe
RP/0/RSP0/CPU0:router(config-sla-prof-pb)# send burst once packet count 2 interval 1 second

RP/0/RSP0/CPU0:router(config-sla-prof-pb)#

RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# probe
```

send (SLA)

```
RP/0/RSP0/CPU0:router(config-sla-prof-pb)# send packet every 1 second
```


service

To associate a service with a domain and enter CFM domain service configuration mode, use the **service** command in CFM domain configuration mode. To remove a service from a domain, use the **no** form of this command.

service *service-name* {**bridge group** *bridge-domain-group* **bridge-domain** *bridge-domain-name*| **down-meps**| **xconnect group** *xconnect-group-name* **p2p** *xconnect-name*} [**id** [**icc-based** *icc-string* *umc-string*] || [**string** *text*]] [**number** *number*]] [**vlan-id** *id-number*]] [**vpn-id** *oui-vpnid*]]

no service *service-name* {**bridge group** *bridge-domain-group* **bridge-domain** *bridge-domain-name*| **down-meps**| **xconnect group** *xconnect-group-name* **p2p** *xconnect-name*} [**id** [**icc-based** *icc-string* *umc-string*] || [**string** *text*]] [**number** *number*]] [**vlan-id** *id-number*]] [**vpn-id** *oui-vpnid*]]

Syntax Description

<i>service-name</i>	Administrative name for the service. Case sensitive ASCII string up to 80 characters. Used in conjunction with one of the following service types: • bridge • down-meps • xconnect
bridge	Specifies the use of a bridge domain. Used in conjunction with group and bridge-domain . Note When bridge is specified, all MEPs are up and MIPs are permitted.
group <i>bridge-domain-group</i>	Specifies the name of the bridge domain group.
bridge-domain <i>bridge-domain-name</i>	Specifies the name of the bridge domain and enters the Ethernet CFM domain service mode.
down-meps	Specifies that all MEPs are down and no MIPs are permitted.
xconnect	Specifies the use of a cross connect. Used in conjunction with group and p2p . Note When xconnect is specified, all MEPs are up and MIPs are permitted.
group <i>xconnect-group-name</i>	Specifies the name of the cross connect group.
p2p <i>xconnect-name</i>	Specifies the name of the point-to-point cross connect and enters the Ethernet CFM domain service mode.

id	(Optional) Service identifier. Valid service identifiers are: • icc-based <i>icc-string umc-string</i>—ITU-based Carrier Code format, with the total ICC and Unique MEG ID Code (UMC) string length no greater than 13 characters. • number <i>number</i>—Number from 0 to 65535. • string <i>text</i>—String length no longer than 46 minus MDID length. • vlan-id <i>id-number</i>—Number from 1 to 4094. • vpn-id <i>oui-vpnid</i> —VPN ID in RFC 2685 format (HHH:HHHH)

Command Default If **id** is not specified, the service name is used as the Short MA name.

Command Modes CFM domain configuration (config-cfm-dmn)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.
	Release 4.1.0	This command was modified. The icc-based keyword was added.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The Short MA Name is the second part of the Maintenance Association Identifier (MAID) in CFM frames. If the Short MA Name (service id) is not specified, the service administrative name is used by default.

Task ID	Task ID	Operations
	ethernet-services	read, write

Examples The following example shows how to associate a bridge domain service to a domain and enter CFM domain service configuration mode.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Bridge_Service bridge group BD1 bridge-domain
B1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)#
```

The following example shows how to specify that all MEPs are down and no MIPs are permitted, and enter CFM domain service configuration mode.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Serv_1 down-meps
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)#
```

The following example shows how to associate a cross connect service to a domain and enter CFM domain service configuration mode.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain Domain_One level 1 id string D1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service Cross_Connect_1 xconnect group XG1 p2p X1
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)#
```

Related Commands

Command	Description
bridge group (VPLS)	Creates a bridge group to contain bridge domains.
bridge-domain (VPLS)	Establishes a bridge domain and enters L2VPN bridge group bridge domain configuration mode.
domain, on page 322	Creates and names a container for all domain configurations and enter the CFM domain configuration mode.
ethernet cfm (global), on page 326	Enters Ethernet CFM configuration mode.
p2p	Enters p2p configuration mode to configure point-to-point cross-connects.
show ethernet cfm configuration-errors, on page 426	Displays information about errors that are preventing configured cfm operations from becoming active, as well as any warnings that have occurred.
show ethernet cfm local maintenance-points, on page 433	Displays all the maintenance points that have been created.
show ethernet cfm local meps, on page 436	Displays information about local MEPs.
show ethernet cfm peer meps, on page 442	Displays other MEPs detected by a local MEP.
xconnect group	Configures a cross-connect group.

show efd interface

To display all interfaces that are shut down because of Ethernet Fault Detection (EFD), or to display whether a specific interface is shut down because of EFD, use the **show efd interface** command in EXEC mode.

show efd interface [*type interface-path-id*]

Syntax Description

<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

If no parameters are specified, all interfaces that are shut down because of EFD are displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If this command is issued when no EFD errors are detected, the system displays the following message:

```
< date time >
No matching interfaces with EFD-shutdown triggered
```

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to display all interfaces that are shut down because of Ethernet Fault Detection (EFD):

```
RP/0/RSP0/CPU0:router# show efd interfaces
```

```
Server VLAN MA
=====
Interface      Clients
-----
GigE0/0/0/0.0  CFM
```

Related Commands

Command	Description
efd , on page 324	Enables EFD on all down MEPs in a down MEPs service.
log efd , on page 377	Enables logging of EFD state changes to an interface (such as when an interface is shut down or brought up via EFD).

show ethernet cfm ccm-learning-database

To display the Continuity Check Message (CCM) learning database, use the **show ethernet cfm ccm-learning-database** command in EXEC configuration mode.

show ethernet cfm ccm-learning-database [*location node-id*]

Syntax Description

location <i>node-id</i>	(Optional) Displays the CFM CCM learning database for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

All CFM ccm-learning-databases on all interfaces are displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The CCM Learning Database is populated by MEPs and MIPs that have received continuity-check messages (CCMs). The information in the CCM Learning Database is used to reply to traceroutes when no applicable entries are found in the main MAC learning table.

Task ID

Task ID	Operations
ethernet-services	read

Examples

The following example shows how to display all the CFM CCM learning databases on all interfaces:

```
RP/0/RSP0/CPU0:router# show ethernet cfm ccm-learning-database
```

```
Location 0/0/CPU0:
```

Domain/Level	Service	Source MAC	Interface
foo/2	foo	0001.0203.0401	Gi0/0/0/0
foo/2	foo	0001.0203.0402	PW

Location 0/1/CPU0:

Domain/Level	Service	Source MAC	Interface
foo/2	foo	0001.0203.0401	XC ID: 0xff000002

Table 18: show ethernet cfm ccm-learning-database Field Descriptions

Domain/Level	The domain name and the level of the domain for the maintenance point that received the CCM that caused this entry to be created. This entry will be used to respond to traceroute messages received by maintenance points in this domain.
Service	The name of the service for the maintenance point that received the CCM that caused this entry to be created. This entry will be used to respond to traceroute messages received by maintenance points in this domain.
Source MAC	Source MAC address in the CCM that caused this entry to be created. This entry will be used to respond to traceroute messages targeted at this MAC address.
Interface	The interface through which the CCM entered the router. This will be one of the following: • An interface or sub-interface name • A pseudowire identification (neighbor address and PW ID) • PW – Indicates the CCM was received through the PW in a cross-connect • XC ID – the internal cross-connect ID value, indicating that the CCM was received through an interface that no longer exists, or is no longer in L2 mode.

show ethernet cfm configuration-errors

To display information about errors that are preventing configured CFM operations from becoming active, as well as any warnings that have occurred, use the **show ethernet cfm configuration-errors** command in EXEC mode.

show ethernet cfm configuration-errors [**domain** *domain-name*] [**interface** *type interface-path-id*]

Syntax Description

domain <i>domain-name</i>	(Optional) Displays information about the specified CFM domain name.
interface <i>type</i>	(Optional) Displays information about the specified interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

All CFM configuration errors on all domains are displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read

Examples

The following example shows how to display all the CFM configuration errors on all domains:

```
RP/0/RSP0/CPU0:router# show ethernet cfm configuration-errors
```

```
Domain fig (level 5), Service bay
* MIP creation configured using bridge-domain blort, but bridge-domain blort does not
exist.
* An Up MEP is configured for this domain on interface GigabitEthernet0/1/2/3.234 and an
Up MEP is also configured for domain blort, which is at the same level (5).
* A MEP is configured on interface GigabitEthernet0/3/2/1.1 for this domain/service, which
has CC interval 100ms, but the lowest interval supported on that interface is 1s.
```

Related Commands

Command	Description
ethernet cfm (global), on page 326	Enters CFM configuration mode.
ethernet cfm (interface), on page 328	Enters interface CFM configuration mode.
traceroute ethernet cfm, on page 507	Sends Ethernet CFM traceroute messages to generate a basic.

show ethernet cfm interfaces ais

To display the information about interfaces that are currently transmitting Alarm Indication Signal (AIS), use the **show ethernet cfm interfaces ais** command in EXEC mode.

show ethernet cfm interfaces [*type interface-path-id*] **ais** [**location** *node-id*]

Syntax Description

<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>node-id</i>	(Optional) Displays information about the node location specified as <i>rack / slot / module</i> . Location cannot be specified if you configure an interface type.

Command Default

If no parameters are specified, information for all AIS interfaces is displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

The **location** keyword cannot be specified if an interface has been specified.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to display the information published in the Interface AIS table:

```
RP/0/RSP0/CPU0:router# show ethernet cfm interfaces ais
```

Defects (from at least one peer MEP):

```
A - AIS received           I - Wrong interval
R - Remote Defect received V - Wrong Level
L - Loop (our MAC received) T - Timed out (archived)
C - Config (our ID received) M - Missing (cross-check)
X - Cross-connect (wrong MAID) U - Unexpected (cross-check)
P - Peer port down         D - Local port down
```

Interface (State)	AIS Dir	Trigger	Via Levels	Transmission			Packets
		L Defects		L	Int	Last started	
Gi0/1/0/0.234 (Up)	Dn	5 RPC	6	7	1s	01:32:56 ago	5576
Gi0/1/0/0.567 (Up)	Up	0 M	2,3	5	1s	00:16:23 ago	983
Gi0/1/0/1.1 (Dn)	Up	D		7	60s	01:02:44 ago	3764
Gi0/1/0/2 (Up)	Dn	0 RX	1!				

Table 19: show ethernet cfm interfaces ais Field Descriptions

Interface (State)	The name and state of the interface.
AIS dir	The direction that the AIS packets are transmitted, up or down.
Trigger L	The level of the lowest MEP that is transmitting AIS. The field is blank if there are no down MEPs on the interface, and AIS is being transmitted due to configuration on the interface itself.
Trigger Defects	Defects detected by the lowest MEP transmitting AIS.
Via Levels	The levels of any MEPs on the interface that are receiving AIS from a lower MEP, and potentially re-transmitting the signal. If the highest MEP is not re-transmitting the signal, the list of levels is ended using an exclamation point.
Transmission L	The level at which AIS is being transmitted outside of the interface, via a MIP. The field is blank if this is not occurring.
Transmission Int	The interval at which AIS is being transmitted outside of the interface via a MIP. The field is blank if this is not occurring.
Transmission last started	If AIS is being transmitted outside of the interface, the time that the signal started. The field is blank if this is not occurring.

Transmission packets	If AIS is being transmitted outside of the interface, the number of packets sent by the transmitting MEP since it was created or since its counters were last cleared. The field is blank if this is not occurring.

Related Commands

Command	Description
ais transmission, on page 279	Configures AIS transmission for a CFM domain service.
log ais, on page 368	Configures AIS logging for a CFM domain service to indicate when AIS or LCK packets are received.
ais transmission up, on page 281	Configures AIS transmission on a CFM interface.
show ethernet cfm local meps, on page 436	Displays information about local MEPs.

show ethernet cfm interfaces statistics

To display the per-interface counters for Ethernet Connectivity Fault Management (CFM), use the **show ethernet cfm interfaces statistics** command in EXEC mode.

show ethernet cfm interfaces [*type interface-path-id*] **statistics** [**location** *node-id*]

Syntax Description

<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>node-id</i>	(Optional) Displays information about the node location specified as <i>rack / slot / module</i> . Location cannot be specified if you configure an interface type.

Command Default

All CFM counters from all interfaces are displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

The location cannot be specified if a particular interface is specified.

Task ID

Task ID	Operations
ethernet-services	read

Examples

The following example shows all the CFM counters on all interfaces:

```
RP/0/RSP0/CPU0:router# show ethernet cfm interfaces statistics
Location 0/1/CPU0:

Interface           Malformed   Dropped   Last Malformed Reason
-----
Gi0/1/0/3.185       0           0
Gi0/1/0/7.185       0           0
Gi0/1/0/7.187       0           0
```

Table 20: show ethernet cfm statistics Field Descriptions

Interface	Name of the interface.
Malformed	Number of packets that have been received at this interface that have been found to be non-compliant with the packet formats specified in IEEE 802.1ag and ITU-T Y.1731.
Dropped	Number of valid (well-formed) packets that have been received at this interface, that have been dropped in software. Packets may be dropped for the following reasons: • Packet has an unknown operation code, and reached a MEP. • Packet dropped at a MEP because it has a lower CFM level than the MEP. • Packet could not be forwarded because the interface is STP blocked. • Packet could not be forwarded because it is destined for this interface.
Last Malformed Reason	Operation code for the last malformed packet received, and the reason that it was found to be malformed. If no malformed packets have been received, this field is blank.

Related Commands

Command	Description
clear ethernet cfm interface statistics , on page 288	Clears the counters for an Ethernet CFM interface.

show ethernet cfm local maintenance-points

To display a list of local maintenance points, use the **show ethernet cfm local maintenance-points** command in EXEC mode.

show ethernet cfm local maintenance-points [**domain** *domain-name* [**service** *service-name*]] **interface** *type* *interface-path-id* [**mep**| **mip**]

Syntax Description

domain <i>domain-name</i>	(Optional) Displays information about the specified domain, where <i>domain-name</i> is a string of a maximum of 80 characters that identifies the domain in which the maintenance points reside.
service <i>service-name</i>	(Optional) Displays information about the specified service, where <i>service-name</i> is a string of a maximum of 80 characters that identifies the maintenance association to which the maintenance points belong.
interface <i>type</i>	(Optional) Displays information about the specified interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
mep	(Optional) Displays information about maintenance end points (MEPs).
mip	(Optional) Displays information about maintenance intermediate points (MIPs).

Command Default

All maintenance points from all interfaces are displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read

Examples

The following example shows how to display maintenance points:

```
RP/0/RSP0/CPU0:router# show ethernet cfm local maintenance-points
```

Domain/Level	Service	Interface	Type	ID	MAC
bar/0	bar	Gi0/0/0/0	Dn MEP	1	03:04:00
baz/4	baz	Gi0/0/0/1.1	MIP		03:04:01
baz/4	baz	Gi0/0/0/2	MIP		03:04:02
foo/?	foo	Gi0/0/0/3	MEP	1	03:04:03!
qux/2	qux	Gi0/0/0/1.1	Up MEP	10	03:04:01
qux/2	qux	Gi0/0/0/2	Up MEP	11	03:04:02

Table 21: show ethernet cfm local maintenance-points Field Descriptions

Domain/Level	The domain name and the level of the domain. If the domain is not configured globally, a question mark (?) is displayed for the Level.
Service	The name of the service.
Interface	The interface containing the maintenance point.
Type	The type of maintenance point: • MIP • Up MEP • Down MEP • MEP—If the MEP belongs to a service that is not configured globally, the type cannot be determined and just MEP is displayed.
ID	The configured MEP ID. Note Since MIPs do not have an ID, this column is blank for MIPs.
MAC	The last 3 octets of the interface MAC address. Note The first three octets are typically the Cisco OUI.
Note	If the MEP has a configuration error, an exclamation point (!) is displayed at the end of the line in the display output.

Related Commands

Command	Description
show ethernet cfm local meps, on page 436	Displays information about local MEPs.
show ethernet cfm peer meps, on page 442	Displays information about maintenance end points (MEPs) for peer MEPs.
traceroute cache, on page 505	Sets the maximum limit of traceroute cache entries or the maximum time limit to hold the traceroute cache entries.
traceroute ethernet cfm, on page 507	Sends Ethernet CFM traceroute messages to generate a basic.

show ethernet cfm local meps

To display information about local maintenance end points (MEPs), use the **show ethernet cfm local meps** command in EXEC mode.

show ethernet cfm local meps [**domain** *domain-name* [**service** *service-name* [**mep-id** *id*]]] **interface** *type* *interface-path-id* [**domain** *domain-name*]] [**errors** [**detail**| **verbose**]] **detail**| **verbose**]

Syntax Description

domain <i>domain-name</i>	(Optional) Displays information about the specified CFM domain, where <i>domain-name</i> is a string of a maximum of 80 characters that identifies the domain in which the maintenance points reside.
service <i>service-name</i>	(Optional) Displays information about the specified service, where <i>service-name</i> is a string of a maximum of 80 characters that identifies the maintenance association to which the maintenance points belong.
interface <i>type</i>	(Optional) Displays information about the specified interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
mep-id <i>id</i>	(Optional) Displays information about the specified MEP, where <i>id</i> is a number of a local maintenance end point (MEP). The range is 1 to 8191.
errors	(Optional) Displays information about peer MEPs with errors.
detail	(Optional) Displays detailed information.
verbose	(Optional) Displays detailed information, plus counters for each type of CFM packet.

Command Default

Brief information is displayed for all local MEPs.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.1	New output fields were added for AIS.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

All MEPs are displayed in the **show ethernet cfm local meps** command output, unless they have configuration errors.

Task ID

Task ID	Operations
ethernet-services	read

Examples

The following example shows sample output of the default statistics for local MEPs without any filtering:

```
RP/0/RSP0/CPU0:router# show ethernet cfm local meps
```

```

A - AIS received           I - Wrong interval
R - Remote Defect received V - Wrong Level
L - Loop (our MAC received) T - Timed out (archived)
C - Config (our ID received) M - Missing (cross-check)
X - Cross-connect (wrong MAID) U - Unexpected (cross-check)
P - Peer port down

```

```

Domain foo (level 6), Service bar
  ID Interface (State)   Dir MEPS/Err RD Defects AIS
-----
  100 Gi1/1/0/1.234 (Up) Up    0/0   N   A       L7

```

```

Domain fred (level 5), Service barney
  ID Interface (State)   Dir MEPS/Err RD Defects AIS
-----
   2 Gi0/1/0/0.234 (Up) Up    3/2   Y  RPC      L6

```

```
RP/0/0/CPU0:router# show ethernet cfm local meps
```

```

A - AIS received           I - Wrong interval
R - Remote Defect received V - Wrong Level
L - Loop (our MAC received) T - Timed out (archived)
C - Config (our ID received) M - Missing (cross-check)
X - Cross-connect (wrong MAID) U - Unexpected (cross-check)
P - Peer port down

```

```

Domain foo (level 6), Service bar
  ID Interface (State)   Dir MEPS/Err RD Defects AIS
-----
  100 Gi1/1/0/1.234 (Up) Up    0/0   N   A

```

```

Domain fred (level 5), Service barney
  ID Interface (State)   Dir MEPS/Err RD Defects AIS
-----
   2 Gi0/1/0/0.234 (Up) Up    3/2   Y  RPC

```

Table 22: show ethernet cfm local meps Field Descriptions

ID	Configured MEP ID of the MEP.

Interface (State)	Interface that the MEP is configured under, and the state of the interface. The states are derived from the interface state, the Ethernet Link OAM interworking state, and the Spanning Tree Protocol (STP) state. The following states are reported: • Up – Interface Up, Ethernet Link OAM Up, STP Up • Down – Interface Down or Admin Down • Test – Interface Up, Ethernet Link OAM loopback mode • Blkd – Interface Up, Ethernet Link OAM Up, STP Blocked • Otherwise, the interface state.
Dir	Direction of the MEP.
RD	Remote Defect. Y (yes) indicates that a remote defect is detected on at least one peer MEP. In which case, the RDI bit is set in outgoing CCM messages. Otherwise, N (no).
MEPs	Total number of peer MEPs sending CCMs to the local MEP.
Err	Number of peer MEPs for which at least one error has been detected.
Defects	Types of errors detected. Each error is listed as a single character. Multiple errors are listed if they are from the same MEP. Possible errors are listed at the top of the display output of the command.
AIS	Alarm Indication Signal. If AIS is configured for the service, the configured level is displayed when an alarm is signaled. If AIS is not configured for the service, or if no alarm is currently signaled, this field is blank.

```
RP/0/RSP0/CPU0:router# show ethernet cfm local meps domain foo service bar
```

```

A - AIS received           I - Wrong interval
R - Remote Defect received V - Wrong Level
L - Loop (our MAC received) T - Timed out (archived)
C - Config (our ID received) M - Missing (cross-check)
X - Cross-connect (wrong MAID) U - Unexpected (cross-check)
P - Peer port down

```

```
Domain foo (level 6), Service bar
```

ID	Interface (State)	Dir	MEPs/Err	RD	Defects	AIS
100	Gil1/1/0/1.234 (Up)	Up	0/0	N	A	L7

RP/0/0/CPU0:router# **show ethernet cfm local meps domain foo service bar**

```

A - AIS received           I - Wrong interval
R - Remote Defect received V - Wrong Level
L - Loop (our MAC received) T - Timed out (archived)
C - Config (our ID received) M - Missing (cross-check)
X - Cross-connect (wrong MAID) U - Unexpected (cross-check)
P - Peer port down

```

Domain foo (level 6), Service bar

ID	Interface (State)	Dir	MEPs/Err	RD	Defects	AIS
100	Gil1/1/0/1.234 (Up)	Up	0/0	N	X	

The following example shows sample output of detailed statistics for local MEPs:



Note

The Discarded CCMs field is not displayed when the number is zero (0). It is unusual for the count of discarded CCMs to be anything other than zero, since CCMs are only discarded when the limit on the number of peer MEPs is reached. The Peer MEPs field is always displayed, but the counts are always zero when continuity check is not enabled.

RP/0/RSP0/CPU0:router# **show ethernet cfm local meps detail**

Domain foo (level 6), Service bar

Up MEP on GigabitEthernet0/1/0/0.234, MEP-ID 100

```

=====
Interface state: Up      MAC address: 1122.3344.5566
Peer MEPs: 0 up, 0 with errors, 0 timed out (archived)

CCM generation enabled: No
AIS generation enabled: Yes (level: 7, interval: 1s)
Sending AIS:           Yes (started 01:32:56 ago)
Receiving AIS:         Yes (from lower MEP, started 01:32:56 ago)

```

Domain fred (level 5), Service barney

Up MEP on GigabitEthernet0/1/0/0.234, MEP-ID 2

```

=====
Interface state: Up      MAC address: 1122.3344.5566
Peer MEPs: 3 up, 2 with errors, 0 timed out (archived)
Cross-check defects: 0 missing, 0 unexpected

CCM generation enabled: Yes (Remote Defect detected: Yes)
CCM defects detected:  R - Remote Defect received
                      P - Peer port down
                      C - Config (our ID received)
AIS generation enabled: Yes (level: 6, interval: 1s)
Sending AIS:           Yes (to higher MEP, started 01:32:56 ago)
Receiving AIS:         No

```

RP/0/0/CPU0:router# **show ethernet cfm local meps detail**

Domain foo (level 6), Service bar

Up MEP on GigabitEthernet0/1/0/0.234, MEP-ID 100

```

=====
Interface state: Up      MAC address: 1122.3344.5566
Peer MEPs: 0 up, 0 with errors, 0 timed out (archived)

CCM generation enabled: No
AIS generation enabled: No
Sending AIS:           No
Receiving AIS:         No

```

Domain fred (level 5), Service barney

show ethernet cfm local meps

```

Up MEP on GigabitEthernet0/1/0/0.234, MEP-ID 2
=====
Interface state: Up      MAC address: 1122.3344.5566
Peer MEPS: 3 up, 2 with errors, 0 timed out (archived)
Cross-check defects: 0 missing, 0 unexpected

CCM generation enabled: Yes (Remote Defect detected: Yes)
CCM defects detected:   R - Remote Defect received
                       P - Peer port down
                       C - Config (our ID received)

AIS generation enabled: No
Sending AIS:            No
Receiving AIS:          No

```

The following example shows sample output of detailed statistics for local MEPS:

```
RP/0/RSP0/CPU0:router# show ethernet cfm local meps verbose
```

```

Domain foo (level 6), Service bar
Up MEP on GigabitEthernet0/1/0/0.234, MEP-ID 100
=====
Interface state: Up      MAC address: 1122.3344.5566
Peer MEPS: 0 up, 0 with errors, 0 timed out (archived)

CCM generation enabled: No
AIS generation enabled: Yes (level: 7, interval: 1s)
Sending AIS:           Yes (started 01:32:56 ago)
Receiving AIS:         Yes (from lower MEP, started 01:32:56 ago)

```

Packet	Sent	Received
CCM	0	0 (out of seq: 0)
LBM	0	0
LBR	0	0 (out of seq: 0, with bad data: 0)
AIS	5576	0
LCK	-	0

```

Domain fred (level 5), Service barney
Up MEP on GigabitEthernet0/1/0/0.234, MEP-ID 2
=====
Interface state: Up      MAC address: 1122.3344.5566
Peer MEPS: 3 up, 2 with errors, 0 timed out (archived)
Cross-check defects: 0 missing, 0 unexpected

CCM generation enabled: Yes (Remote Defect detected: Yes)
CCM defects detected:   R - Remote Defect received
                       P - Peer port down
                       C - Config (our ID received)

AIS generation enabled: Yes (level: 6, interval: 1s)
Sending AIS:           Yes (to higher MEP, started 01:32:56 ago)
Receiving AIS:         No

```

Packet	Sent	Received
CCM	12345	67890 (out of seq: 6, discarded: 10)
LBM	5	0
LBR	0	5 (out of seq: 0, with bad data: 0)
AIS	0	46910
LCK	-	0

Related Commands

Command	Description
show ethernet cfm local maintenance-points , on page 433	Displays a list of local maintenance points.
show ethernet cfm peer meps , on page 442	Displays information about maintenance end points (MEPs) for peer MEPs.

Command	Description
traceroute ethernet cfm, on page 507	Sends Ethernet CFM traceroute messages to generate a basic.

show ethernet cfm peer meps

To display information about maintenance end points (MEPs) for peer MEPs, use the **show ethernet cfm peer meps** command in EXEC mode.

show ethernet cfm peer meps [**domain** *domain-name* [**service** *service-name* [**local mep-id** *id* [**peer {mep-id id} mac-address** *H . H . H*]]]]] [**interface type** *interface-path-id* [**domain** *domain-name* [**peer {mep-id id} mac-address** *H . H . H*]]]]] [**cross-check** [**missing**|**unexpected**] **errors**] [**detail**]

Syntax Description

cross-check	(Optional) Displays information about peer MEPs with cross-check errors.
detail	(Optional) Displays detailed information.
domain <i>domain-name</i>	(Optional) Displays information about a CFM domain, where <i>domain-name</i> is a string of a maximum of 80 characters that identifies the domain in which the maintenance points reside.
errors	(Optional) Displays information about peer MEPs with errors.
interface type	(Optional) Displays information about the specified interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
local mep-id <i>id</i>	(Optional) Displays information about a local MEP, where <i>id</i> is the number of the MEP.
<i>missing</i>	(Optional) Displays information about peer MEPs that are missing.
peer mep-id <i>id</i>	(Optional) Displays information about a peer MEP, where <i>id</i> is the number of the MEP.
peer mac-address <i>H.H.H</i>	(Optional) Displays information about a peer MEP, where <i>H.H.H</i> is the hexadecimal address of the MEP.
service <i>service-name</i>	(Optional) Displays information about a CFM service, where <i>service-name</i> is a string of a maximum of 154 characters that identifies the maintenance association to which the maintenance points belong.
unexpected	(Optional) Displays information about unexpected peer MEPs.

Command Default

Peer MEPs for all domains are displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read

Examples

The following example shows sample output of MEPs detected by a local MEP:

```
RP/0/RSP0/CPU0:router# show ethernet cfm peer meps
```

Flags:

```
> - Ok
R - Remote Defect received
L - Loop (our MAC received)
C - Config (our ID received)
X - Cross-connect (wrong MAID)
* - Multiple errors received
I - Wrong interval
V - Wrong level
T - Timed out
M - Missing (cross-check)
U - Unexpected (cross-check)
```

```
Domain dom3 (level 5), Service ser3
Down MEP on GigabitEthernet0/0/0/0 MEP-ID 1
```

St	ID	MAC Address	Port	Up/Downtime	CcmRcvd	SeqErr	RDI	Error
V	10	0001.0203.0403	Up	00:01:35	2	0	0	2

```
Domain dom4 (level 2), Service ser4
Down MEP on GigabitEthernet0/0/0/0 MEP-ID 1
```

St	ID	MAC Address	Port	Up/Downtime	CcmRcvd	SeqErr	RDI	Error
>	20	0001.0203.0402	Up	00:00:03	4	1	0	0
>	21	0001.0203.0403	Up	00:00:04	3	0	0	0

```
Domain dom5 (level 2), Service dom5
```

Table 23: show ethernet cfm peer meps Field Descriptions

St	Status: one or two characters, representing the states listed at the top of the output.
ID	Peer MEP ID

MAC address	Peer MAC Address. If this entry is a configured cross-check MEP, with no MAC address specified, and no CCMs are currently being received from a peer MEP with a matching MEP ID, then this field is blank.
Port	Port state of the peer, based on the Port Status and Interface Status TLVs. If no TLVs or CCMs have been received, this field is blank. Otherwise, the port status is displayed—unless it is Up. If the port status is Up, then the interface status is displayed.
Up/Downtime	Time since the peer MEP last came up or went down. If CCMs are currently being received, it is the time since the peer MEP last came up, which is the time since the first CCM was received. If CCMs are not currently being received, it is the time since the peer MEP last went down, which is the time since the loss threshold was exceeded and a loss of continuity was detected.
CcmRcvd	Total number of CCMs received from this peer MEP.
SeqErr	Number of CCMs received out-of-sequence.
RDI	Number of CCMs received with the RDI bit set.
Error	Number of CCMs received with CCM defects, such as: • Invalid level error • Maintenance Association Identifier (MAID) error • Interval error • Received with out MEP ID error • Invalid source MAC error

The following example shows sample detailed output of MEPs detected by a local MEP:

```
RP/0/RSP0/CPU0:router# show ethernet cfm peer meps detail
```

```
Domain dom3 (level 5), Service ser3
Down MEP on GigabitEthernet0/0/0/0 MEP-ID 1
```

```
=====
Peer MEP-ID 10, MAC 0001.0203.0403
  CFM state: Wrong level, for 00:01:34
  Port state: Up
  CCM defects detected:    V - Wrong Level
  CCMs received: 5
```

```

        Out-of-sequence:          0
        Remote Defect received:    5
        Wrong Level:              0
        Cross-connect (wrong MAID): 0
        Wrong Interval:          5
        Loop (our MAC received):   0
        Config (our ID received):  0
Last CCM received 00:00:06 ago:
    Level: 4, Version: 0, Interval: 1min
    Sequence number: 5, MEP-ID: 10
    MAID: String: dom3, String: ser3
    Port status: Up, Interface status: Up

Domain dom4 (level 2), Service ser4
Down MEP on GigabitEthernet0/0/0/0 MEP-ID 1
=====
Peer MEP-ID 20, MAC 0001.0203.0402
    CFM state: Ok, for 00:00:04
    Port state: Up
    CCMs received: 7
        Out-of-sequence:          1
        Remote Defect received:    0
        Wrong Level:              0
        Cross-connect (wrong MAID): 0
        Wrong Interval:          0
        Loop (our MAC received):   0
    Config (our ID received):      0
Last CCM received 00:00:04 ago:
    Level: 2, Version: 0, Interval: 10s
    Sequence number: 1, MEP-ID: 20
    MAID: String: dom4, String: ser4
    Chassis ID: Local: ios; Management address: 'Not specified'
    Port status: Up, Interface status: Up

Peer MEP-ID 21, MAC 0001.0203.0403
    CFM state: Ok, for 00:00:05
    Port state: Up
    CCMs received: 6
        Out-of-sequence:          0
        Remote Defect received:    0
        Wrong Level:              0
        Cross-connect (wrong MAID): 0
        Wrong Interval:          0
        Loop (our MAC received):   0
        Config (our ID received):  0
Last CCM received 00:00:05 ago:
    Level: 2, Version: 0, Interval: 10s
    Sequence number: 1, MEP-ID: 21
    MAID: String: dom4, String: ser4
    Port status: Up, Interface status: Up

Domain dom5 (level 2), Service ser5
Up MEP on Standby Bundle-Ether 1 MEP-ID 1
=====
Peer MEP-ID 600, MAC 0001.0203.0401
    CFM state: Ok (Standby), for 00:00:08, RDI received
    Port state: Down
    CCM defects detected:          Defects below ignored on local standby MEP
                                   I - Wrong Interval
                                   R - Remote Defect received

    CCMs received: 5
        Out-of-sequence:          0
        Remote Defect received:    5
    Wrong Level:              0
        Cross-connect W(wrong MAID): 0
        Wrong Interval:          5
        Loop (our MAC received):   0
        Config (our ID received):  0
Last CCM received 00:00:08 ago:
    Level: 2, Version: 0, Interval: 10s
    Sequence number: 1, MEP-ID: 600

```

show ethernet cfm peer meps

```

MAID: DNS-like: dom5, String: ser5
Chassis ID: Local: ios; Management address: 'Not specified'
Port status: Up, Interface status: Down

Peer MEP-ID 601, MAC 0001.0203.0402
CFM state: Timed Out (Standby), for 00:15:14, RDI received
Port state: Down
CCM defects detected:      Defects below ignored on local standby MEP
                          I - Wrong Interval
                          R - Remote Defect received
                          T - Timed Out
                          P - Peer port down

CCMs received: 2
  Out-of-sequence:          0
  Remote Defect received:    2
  Wrong Level:              0
  Cross-connect (wrong MAID): 0
  Wrong Interval:           2
  Loop (our MAC received):   0
  Config (our ID received):  0
Last CCM received 00:15:49 ago:
  Level: 2, Version: 0, Interval: 10s
  Sequence number: 1, MEP-ID: 600
  MAID: DNS-like: dom5, String: ser5
  Chassis ID: Local: ios; Management address: 'Not specified'
  Port status: Up, Interface status: Down

```

Table 24: show ethernet cfm peer meps detail Field Descriptions

CFM state	State of the peer MEP, how long it has been up or down, and whether the RDI bit was set in the last received CCM. The following possible states are shown if CCMs are currently being received: • Missing • Timed out—No CCMs have been received for the loss time • Ok • Indication of a defect
Port state	Port state of the peer, based on the Port Status and Interface Status TLVs. If no TLVs or CCMs have been received, this field is blank. Otherwise, the port status is displayed—unless it is Up. If the port status is Up, then the interface status is displayed.

CCM defects detected	Types of CCM defects that have been detected. The possible defects are: • Remote Defect received—The last CCM received from the peer had the RDI bit set. • Loop (our MAC received)—CCMs were received from a peer with the same MAC address as the local MEP. • Config (our ID received)—CCMs were received from a peer with the same MEP ID as the local MEP. • Cross-connect (wrong MAID)—The last CCM received from the peer contained a domain/service identifier that did not match the locally configured domain/service identifier. • Peer port down—The last CCM received from the peer contained an Interface Status indicating that the interface on the peer was not up. • Wrong interval—The last CCM received contained a CCM interval that did not match the locally configured CCM interval. • Wrong level—The last CCM received was for a lower level than the level of the local MEP. • Timed out—No CCMs have been received within the loss time. • Missing (cross-check)—Cross-check is configured and lists this peer MEP, but no CCMs have been received within the loss time. • Unexpected (cross-check)—Cross check is configured for this service and does not list this peer MEP, but CCMs have been received from it within the loss time.
CCMs received	Number of CCMs received in total, by defect type.
Last CCM received	How long ago the last CCM was received, and a full decode of its contents. Any unknown TLVs are displayed in hexadecimal.

Related Commands

Command	Description
show ethernet cfm local maintenance-points , on page 433	Displays a list of local maintenance points.

Command	Description
show ethernet cfm local meps, on page 436	Displays information about local MEPs.
traceroute ethernet cfm, on page 507	Sends Ethernet CFM traceroute messages to generate a basic.

show ethernet cfm traceroute-cache

To display the contents of the traceroute cache, use the **show ethernet cfm traceroute-cache** command in EXEC mode.

```
{show ethernet cfm traceroute-cache [[domain domain-name] [service service-name] [local mep-id id]
[transaction-id id]] interface type interface-path-id [[domain domain-name] [transaction-id id]]
[exploratory|targeted] [status {complete|incomplete}] [detail]}
```

Syntax Description

domain <i>domain-name</i>	(Optional) Displays information about a CFM domain, where <i>domain-name</i> is a string of a maximum of 80 characters that identifies the domain in which the maintenance points reside.
service <i>service-name</i>	(Optional) Displays information about a CFM service, where <i>service-name</i> is a string of a maximum of 80 characters that identifies the maintenance association to which the maintenance points belong.
local mep-id <i>id</i>	(Optional) Displays information for the specified local maintenance end point (MEP). The range for MEP ID numbers is 1 to 8191.
transaction-id <i>id</i>	(Optional) Displays information for the specified transaction.
interface <i>type</i>	(Optional) Displays information about the specified interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
exploratory	(Optional) Displays information for exploratory traceroutes.
targeted	(Optional) Displays information for traceroutes that are not exploratory, but explicitly mapped.
status	(Optional) Displays status information.
complete	(Optional) Displays status information for traceroutes that have received all replies.
incomplete	(Optional) Displays status information for traceroutes that are still receiving replies.
detail	(Optional) Displays detailed information.

Command Default Shows output for the default traceroute.

Command Modes EXEC (#)

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show ethernet cfm traceroute-cache** command to display the contents of the traceroute cache; for example, to see the maintenance intermediate points (MIPs) and maintenance end points (MEPs) of a domain as they were discovered. The data is historic. The traceroute cache stores entries from previous traceroute operations.

In the output, the traceroutes sourced from each local MEP are listed. The heading for the local MEP contains the domain name and level, service name, MEP ID and interface name.

Task ID	Task ID	Operations
	ethernet-services	read

Examples The following example shows sample output for the **show ethernet cfm traceroute-cache** command:

```
RP/0/RSP0/CPU0:router# show ethernet cfm traceroute-cache
```

```
Traceroutes in domain bar (level 4), service bar
Source: MEP-ID 1, interface GigabitEthernet0/0/0/0
=====
Traceroute at 2009-05-18 12:09:10 to 0001.0203.0402,
TTL 64, Trans ID 2:
```

Hop	Hostname/Last	Ingress MAC/name	Egress MAC/Name	Relay
1	ios	0001.0203.0400 [Down]		FDB
	0000-0001.0203.0400	Gi0/0/0/0		
2	abc		0001.0203.0401 [Ok]	FDB
	ios		Not present	
3	bcd	0001.0203.0402 [Ok]		Hit
	abc	GigE0/0		

Replies dropped: 0

```
Traceroutes in domain foo (level 2), service foo
Source: MEP-ID 1, interface GigabitEthernet0/0/0/0
=====
Traceroute at 2009-05-18 12:03:31 to 0001.0203.0403,
TTL 64, Trans ID 1:
```



```

Hop  Hostname/Last          Ingress MAC/name      Egress MAC/Name      Relay
-----
  1  abc                    0001.0203.0401 [Ok]
      0000-0001.0203.0400  Not present
  2  bob                    0001.0203.0402 [Ok]
      abc                  Gi0/1/0/2.3
  3  cba                    0001.0203.0403 [Ok]
      bob                  Gi0/2/0/3.45
Replies dropped: 0

```

Traceroute at 2009-05-18 12:15:47 to 0001.0203.0409,
TTL 64, Trans ID 3, automatic:
00:00:05 remaining

Traceroute at 2009-05-18 12:20:10 explore to ffff.ffff.ffff,
TTL 64, Trans ID 4, Timeout auto, Reply Filter Default:

```

Hop      Hostname/Last          Ingr/Egr MAC/name      Relay
-----
  1      abc                    Ingress  0015.0000.323f [Ok]  FDB
      0000-0001.0203.0400
  2      abc                    Egress   0015.0000.323e [Ok]  FDB
      abc                    Te0/1/0/0.1
  3      0002-0016.eeee.1234    Ingress  0016.eeee.1234 [Ok]  FDB
      abc                    Te0/4.23
  4      0000-0016.eeee.4321    Egress   0016.eeee.4321 [Ok]  FDB
      0002-0016.eeee.1234
  5      rtr                    Ingress  0015.0000.f123 [Ok]  FDB
      0002-00.16.eeee.4321
  2      abc                    Egress   0015.0000.323d [Ok]  FDB
      abc                    Te0/1/0/1.1
  3      pe2                   Ingress  0017.0000.cf01 [Ok]  FDB
      abc                    Te0/0/2/0/1.450
  4      pe2                   Egress   0017.0000.cf01 [Ok]  Drop
      pe2                    Gi0/0/0/0.451
  4      pe2                   Egress   0017.0000.cf01 [Ok]  FDB
      pe2                    Gi0/0/0/1.452
  5      ce2                   Ingress  0015.0000.8830 [Ok]  FDB
      pe2                    Gi0/1/0/0
Replies dropped: 0

```

Table 25: show ethernet cfm traceroute-cache Field Descriptions

Field	Description
Traceroute at	Date and time the traceroute was started.
to	Destination MAC address.
explore to	(Exploratory traceroutes) MAC address of the target for the exploratory traceroute.
TTL	Initial Time To Live used for the traceroute operation.
Trans ID	Transaction ID
Timeout	(Exploratory traceroutes) If no timeout was configured, "Timeout auto" is shown.
Reply Filter	(Exploratory traceroutes) Type of filter.

Field	Description
automatic	Indicates that the traceroute was triggered automatically (for example, as a result of a peer MEP exceeding the loss threshold, or if Continuity-Check Auto-traceroute is configured).
00:00:00 remaining	If the traceroute is in progress, the time remaining until it completes.
No replies received	Traceroute has completed but no replies were received.
Replies dropped	Number of replies dropped.
FDB only	Indicates FDB-only was configured for a standard traceroute.
Hop	Number of hops between the source MEP and the Maintenance Point that sent the reply. (Exploratory traceroutes) The display is indented by an extra character as the hop increases, so that the tree of responses can be seen.
Hostname/Last	On the first line, the hostname of the Maintenance Point that sent the reply. On the second line, the hostname of the previous Maintenance Point in the path. If either of the hostnames is unknown, the corresponding Egress ID is displayed instead.
Ingr/Egr	(Exploratory traceroutes) Indicates whether the reply is for an ingress or egress interface, but never both.
Ingress MAC/Name	If the reply includes information about the ingress interface, then the first line displays the ingress interface MAC address and the ingress action. The ingress interface name, if known, is displayed on the second line.
Egress MAC/Name	If the reply includes information about the egress interface, then the first line displays the egress interface MAC address and the egress action. The egress interface name, if known, is displayed on the second line.

Field	Description
MAC/Name	(Exploratory traceroutes) The MAC address of the interface from which the reply was sent, and the ingress/egress action, are displayed on the first line. If the interface name was present in the reply, it is displayed on the second line.
Relay	Type of relay action performed. For standard traceroutes, the possible values are: • Hit—The target MAC address was reached. • FDB—The target MAC address was found in the Filtering Database (the MAC learning table on the switch) and will be forwarded by the interface. • MPDB—The target MAC address was found in the MP Database (the CCM Learning database on the switch). In addition, “MEP” is displayed on the second line if a terminal MEP was reached. For exploratory traceroutes, the possible values are: • Hit—The target MAC address was reached. • FDB—The target MAC address was found in the Filtering Database and will be forwarded at this interface. • Flood—The target MAC address was not found in the Filtering database, and will be flooded at this interface. • Drop—The target MAC address will not be forwarded at this interface.

The following example shows sample output for the **show ethernet cfm traceroute-cache detail** command:

```
RP/0/RSP0/CPU0:router# show ethernet cfm traceroute-cache domain bar detail

Traceroutes in domain bar (level 4), service bar
Source: MEP-ID 1, interface GigabitEthernet0/0/0/0
=====
Traceroute at 2009-05-18 12:09:10 to 0001.0203.0402,
TTL 64, Trans ID 2:

Hop Hostname                               Ingress MAC           Egress MAC             Relay
-----
  1 ios                                     0001.0203.0400 [Down]
                                     Level: 4, version: 0, Transaction ID: 2
                                     TTL: 63, Relay Action: RlyFDB
                                     Forwarded, Terminal MEP not reached
                                     Last egress ID: 0000-0001.0203.0400
```

show ethernet cfm traceroute-cache

```

Next egress ID: 0000-0001.0203.0400
Ingress interface:
  Action: IngDown, MAC: 0001.0203.0400
  ID: Local: Gi0/0/0/0
Hostname: Local: ios, address Not specified

2 abc                                0001.0203.0401 [Ok]    FDB
Level: 4, version: 0, Transaction ID: 2
TTL: 62, Relay Action: RlyFDB
Forwarded, Terminal MEP not reached
Last egress ID: 0000-0001.0203.0400
Next egress ID: 0000-0001.0203.0401
Egress interface:
  Action: EgOk, MAC: 0001.0203.0401
  ID: Not present
Hostname: Local: abc, address Not specified

3 bcd                                0001.0203.0402 [Ok]    Hit
Level: 4, version: 0, Transaction ID: 2
TTL: 61, Relay Action: RlyHit
Not Forwarded, Terminal MEP not reached
Last egress ID: 0000-0001.0203.0401
Next egress ID: Not Forwarded
Ingress interface:
  Action: IngOk, MAC: 0001.0203.0402
  ID: Local: GigE0/0
Hostname: Local: bcd, address Not specified

Replies dropped: 0

```

Traceroute at 2009-05-18 12:30:10 explore to ffff.ffff.ffff from 0204.0608.0a0c, TTL 255, Trans ID 5, Timeout auto, Reply Filter Spanning Tree:

Hop	Hostname	Ingr/Egr	MAC	Relay
1	0000-0015.0000.ffffe	Ingress	0015.0000.ffffe [Ok]	FDB
Level: 2, version: 0, Transaction ID: 5 TTL: 254, Relay Action: RlyFDB Forwarded, Terminal MEP not reached Next-Hop Timeout: 5 seconds Delay Model: Logarithmic Last egress ID: 0000-0002.0002.0002 Next egress ID: 0000-0015.0000.ffffe Ingress interface: Action: ELRIngOk, MAC: 0015.0000.ffffe ID: Local: Gi0/0/0/0.1				
2	0001-0030.0000.ffffd	Egress	0030.0000.ffffd [Ok]	Drop
Level: 2, version: 0, Transaction ID: 5 TTL: 253, Relay Action: RlyDrop Not Forwarded, Terminal MEP not reached Next-Hop Timeout: 5 seconds Delay Model: Logarithmic Last egress ID: 0000-0015.0000.ffffe Next egress ID: 0030-0000.0000.ffffd Egress interface: Action: ELREgrOk, MAC: 0030.0000.ffffd ID: Local: Gi0/1/0/1.2				

Related Commands

Command	Description
traceroute cache, on page 505	Sets the maximum limit of traceroute cache entries or the maximum time limit to hold the traceroute cache entries.
clear ethernet cfm traceroute-cache, on page 294	Removes the contents of the traceroute cache.

Command	Description
traceroute ethernet cfm, on page 507	Sends Ethernet CFM traceroute messages to generate a basic.

show ethernet lmi interfaces

To display Ethernet Local Management Interface (E-LMI) information for an interface, including protocol status and error and event statistics, use the **show ethernet lmi interfaces** command in EXEC configuration mode.

show ethernet lmi interfaces [*type interface-path-id*][**brief** | **detail**]

show ethernet lmi interfaces [**brief** | **detail**][**location** *location*]

Syntax Description

brief	(Optional) Displays summary information about the E-LMI protocol status, number of EVCs and errors, and CE-VLAN/EVC map type.
detail	(Optional) Displays the configured and operational state of E-LMI on the interface, with counts for reliability and protocol errors and elapsed time since various events have occurred, including details about subinterfaces and EVC status.
<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>location</i>	(Optional) Displays E-LMI information for the designated node. The <i>location</i> argument is entered in the <i>rack/slot/module</i> notation. Note The location cannot be specified when you specify an interface type.

Command Default

The output displays the configured and operational state of E-LMI on the interface, with counts for reliability and protocol errors and elapsed time since various events have occurred since the protocol was enabled on the interface or counters were cleared.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If Protocol Errors are seen in the output, then the CE device is sending packets to the PE device, but the PE does not understand those packets. This suggests an incorrect implementation of the E-LMI protocol on the CE side, or corruption of the packets on the path between the CE and PE. E-LMI packets have a strictly defined structure in the MEF 16 standard, and any deviation from that results in a protocol error. The PE will not respond to any packets that are malformed and result in a protocol error.

The Reliability Error counters can indicate that messages are being lost between the PE and CE devices. The timers in the last block of the output should indicate that messages are being sent and received by the PE device. Consider the following actions when these Reliability Errors occur:

- Status Enq Timeouts—If this counter is continuously incrementing, it indicates that the Polling Timer on the CE is configured to a greater value than the PVT configuration on the PE. Status Enquiry messages will be sent less frequently than the PVT expects them and PVT timeouts occur. Be sure that the value of the PVT (specified by the **polling-verification-timer** command on the PE) is greater than the Polling Timer value on the CE device.
- Invalid Sequence Number—Indicates that messages from the PE are not being received by the CE. Be sure that the correct interface on the CE device is connected to the corresponding E-LMI interface on the PE device, so that communication can take place. Verify that both interfaces are Up.
- Invalid Report Type—This error can occur under the following conditions:
 - If the protocol is in the process of a status update and an "E-LMI Check" type of STATUS ENQUIRY is received by the PE, then the PE ignores the ENQUIRY and records an error.
 - If the protocol is not in the process of a status update and a "Full Status Continued" type of STATUS ENQUIRY is received by the PE, then the PE ignores the ENQUIRY and records an error.

**Note**

If the protocol is in the process of a status update and a "Full Status" type of STATUS ENQUIRY is received by the PE, then the PE restarts the status update but does not record any error.

Task ID

Task ID	Operation
ethernet-services	read

Examples

The following example shows sample output for the default form of the command:

```
RP/0/RSP0/CPU0:router# show ethernet lmi interfaces
Interface: GigabitEthernet0/0/0/0
  Ether LMI Link Status: Up
  UNI Id: PE1-CustA-Slot1-Port0
  Line Protocol State: Up
  MTU: 1500 (2 PDUs reqd. for full report)
  CE-VLAN/EVC Map Type: Bundling (1 EVC)
  Configuration: Status counter 4, Polling Verification Timer 15 seconds
  Last Data Instance Sent: 1732
  Last Sequence Numbers: Sent 128, Received 128

Reliability Errors:
  Status Enq Timeouts          19 Invalid Sequence Number      0
  Invalid Report Type          0

Protocol Errors:
  Malformed PDUs               0 Invalid Protocol Version    0
  Invalid Message Type         0 Out of Sequence IE          0
  Duplicated IE                0 Mandatory IE Missing        0
  Invalid Mandatory IE         0 Invalid non-Mandatory IE    0
  Unrecognized IE              0 Unexpected IE               0

Full Status Enq Rcvd    00:00:10 ago  Full Status Sent    00:00:10 ago
PDU Rcvd               00:00:00 ago  PDU Sent            00:00:00 ago
LMI Link Status Changed 10:00:00 ago  Last Protocol Error never
Counters cleared       never
```

Table 26: show ethernet lmi interfaces Field Descriptions

Field	Description
Interface:	Name of the interface running the E-LMI protocol.
Ether LMI Link Status:	Status of the E-LMI protocol on the interface. Possible values are Up, Down, or Unknown (PVT disabled).
UNI Id:	Name of the UNI as configured by the ethernet uni id command. This output field does not appear if the UNI ID is not configured.
Line Protocol State:	Status of the interface line protocol. Possible values are Up, Down, or Admin-Down.
MTU (x PDUs reqd for full report)	Maximum Transmission Unit of the interface and the number (x) of E-LMI PDUs of that size required to send one full status report.
CE-VLAN/EVC Map Type: <i>type</i> (x EVCs)	Map type, which describes how CE VLAN IDs are mapped to specific EVCs. Possible values for <i>type</i> are Bundling, All to One Bundling, or Service Multiplexing with no bundling. The number x of EVCs in the map are displayed in parentheses.
Configuration: Status counter	Value of the MEF N393 Status Counter as configured by the status-counter command.

Field	Description
Polling Verification Timer	Value of the MEF T392 Polling Verification Timer (in seconds) as configured by the polling-verification-timer command. Displays "disabled" if the PVT is turned off.
Last Data Instance Sent:	Current value of the Data Instance.
Last Sequence Numbers: Sent <i>x</i> , Received <i>y</i>	Values of the last sent (<i>x</i>) and received (<i>y</i>) sequence numbers as reported in sent PDUs.
Reliability Errors:	Number of times the specified types of reliability errors have occurred since the protocol was enabled on the interface or counters were cleared: • Status Enq Timeouts—Increments every time the Polling Verification Timer (PVT) expires. • Invalid Report Type—Increments if the Report Type is not appropriate to the protocol's current state. There are four Report Types defined by the E-LMI Standard, and only three of them can appear in Status Enquiry messages that the PE receives. These are: E-LMI Check, Full Status and Full Status Continued. • Invalid Sequence Number—Increments whenever the received sequence number in a Status Enquiry from the CE does not match the last sent sequence number in the PE response. Indicates that messages from the PE are not being received by the CE. The PE continues to respond with the requested Report Type. For more information about possible actions, see the "Usage Guidelines" section.
Protocol Errors: (Malformed PDUs, Invalid Message Type, Duplicated IE, and others)	Number of times the specified types of protocol errors have occurred since the protocol was enabled on the interface or counters were cleared.
Full Status Enq Rcvd, PDU Rcvd, LMI Link Status Changed, Counters cleared, Full Status Sent, PDU Sent, and Last Protocol Error.	Elapsed time (hrs:mins:secs ago) since the specified events last occurred or counters were cleared. Displays "never" if the event has not occurred since the protocol was enabled on the interface or counters were cleared.

The following example shows sample output for the **show ethernet lmi interfaces brief** form of the command:

```
RP/0/RSP0/CPU0:router# show ethernet lmi interfaces brief
      ELMI      LineP      #      CE-VLAN/
```

Interface	State	State	EVCs	Errors	EVC Map
Gi0/0/0/0	Up	Up	3	19	Multiplexing, no bundling
Gi0/0/0/1	Down	Admin-down	1	0	All to One Bundling

Table 27: show ethernet lmi interfaces brief Field Descriptions

Field	Description
Interface	Name of the interface running the E-LMI protocol.
ELMI State	Status of the E-LMI protocol. Possible values are Up, Down, or N/A if the Polling Verification Timer is disabled.
LineP State	Status of the interface line protocol. Possible values are Up, Down, or Admin-Down.
# EVCs	Total number of EVCs in the CE-VLAN/EVC map.
Errors	Total number of reliability and protocol errors encountered since the protocol was enabled on the interface or counters were cleared.
CE-VLAN/EVC Map	Map type, which describes how CE VLAN IDs are mapped to specific EVCs. Possible values are Bundling, All to One Bundling, or Multiplexing, no bundling.

The following example shows sample output for the **show ethernet lmi interfaces detail** form of the command:

```
RP/0/RSP0/CPU0:router #show ethernet lmi interfaces detail
Interface: GigabitEthernet0/0/0/0
  Ether LMI Link Status: Up
  UNI Id: PE1-CustA-Slot1-Port0
  Line Protocol State: Up
  MTU: 1500 (2 PDUs reqd. for full report)
  CE-VLAN/EVC Map Type: Bundling (1 EVC)
  Configuration: Status counter 4, Polling Verification Timer 15 seconds
  Last Data Instance Sent: 1732
  Last Sequence Numbers: Sent 128, Received 128

Reliability Errors:
  Status Enq Timeouts          19 Invalid Sequence Number      0
  Invalid Report Type          0

Protocol Errors:
  Malformed PDUs              0 Invalid Protocol Version      0
  Invalid Message Type        0 Out of Sequence IE            0
  Duplicated IE                0 Mandatory IE Missing          0
  Invalid Mandatory IE         0 Invalid non-Mandatory IE      0
  Unrecognized IE              0 Unexpected IE                  0

Full Status Enq Rcvd          00:00:10 ago    Full Status Sent           00:00:10 ago
PDU Rcvd                      00:00:00 ago    PDU Sent                   00:00:00 ago
LMI Link Status Changed       10:00:00 ago    Last Protocol Error        never
Counters cleared              never

Sub-interface: GigabitEthernet0/0/0/0.1
  VLANs: 1,10,20-30, default, untagged/priority tagged
```

```

EVC Status: New, Partially Active
EVC Type: Multipoint-to-Multipoint
OAM Protocol: CFM
  CFM Domain: Global (level 5)
  CFM Service: CustomerA
Remote UNI Count: Configured = 2, Active = 1

```

```

Remote UNI Id                               Status
-----
PE2-CustA-Slot2-Port2                       Up
PE2-CustA-Slot3-Port3                       Unreachable

```

Table 28: show ethernet lmi interfaces detail Field Descriptions

Field	Description
Interface:	Name of the interface running the E-LMI protocol.
Ether LMI Link Status:	Status of the E-LMI protocol on the interface. Possible values are Up, Down, or Unknown (PVT disabled).
UNI Id:	Name of the UNI as configured by the ethernet uni id command. This output field does not appear if the UNI ID is not configured.
Line Protocol State:	Status of the interface line protocol. Possible values are Up, Down, or Admin-Down.
MTU (x PDUs reqd for full report)	Maximum Transmission Unit of the interface and the number (x) of E-LMI PDUs of that size required to send one full status report.
CE-VLAN/EVC Map Type: <i>type</i> (x EVCs)	Map type, which describes how CE VLAN IDs are mapped to specific EVCs. Possible values for <i>type</i> are Bundling, All to One Bundling, or Service Multiplexing with no bundling. The number x of EVCs in the map are displayed in parentheses.
Configuration: Status counter	Value of the MEF N393 Status Counter as configured by the status-counter command.
Polling Verification Timer	Value of the MEF T392 Polling Verification Timer (in seconds) as configured by the polling-verification-timer command. Displays "disabled" if the PVT is turned off.
Last Data Instance Sent:	Current value of the Data Instance.
Last Sequence Numbers: Sent x, Received y	Values of the last sent (x) and received (y) sequence numbers as reported in sent PDUs.
Reliability Errors: (Status Enq Timeouts, Invalid Report Type, and Invalid Sequence Number)	Number of times the specified types of reliability errors have occurred since the protocol was enabled on the interface or counters were cleared.

Field	Description
Protocol Errors: (Malformed PDUs, Invalid Message Type, Duplicated IE, and others)	Number of times the specified types of protocol errors have occurred since the protocol was enabled on the interface or counters were cleared.
Full Status Enq Rcvd, PDU Rcvd, LMI Link Status Changed, Counters cleared, Full Status Sent, PDU Sent, and Last Protocol Error.	Elapsed time (hrs:mins:secs ago) since the specified events last occurred or counters were cleared. Displays "never" if the event has not occurred since the protocol was enabled on the interface or counters were cleared.
Subinterface:	Name of the subinterface corresponding to the EVC.
VLANs:	VLAN traffic on the interface that corresponds to the EFPs encapsulation, with the following possible values: - Numbers of the matching VLAN IDs Note If Q-in-Q encapsulation is configured, only the outer tag is displayed. - default—Indicates that Default tagging is configured, or the encapsulation specifies to match "any." - none—No matches for the configured encapsulation have occurred on the interface. - untagged/priority—Traffic is either untagged or has priority tagging. Note If the message "EVC omitted from Full Status due to encapsulation conflict" is displayed above the VLAN output, a misconfiguration has occurred with two or more EFPs having a conflicting encapsulation.

Field	Description
EVC Status:	State of the EVC, with the following possible values: • Active—E-LMI is operational for this EVC. • Inactive—All of the remote UNIs are unreachable or down. • New—The EVC has not yet been reported to the CE device. • Not yet known—E-LMI is still waiting to receive the status from CFM. This condition should not persist for more than a few seconds. • Partially Active—One or more of the remote UNIs is unreachable or down.
EVC Type:	Type of the EVC, with the following possible values: "Point-to-Point," "Multipoint-to-Multipoint," or "EVC type not yet known."
OAM Protocol:	The OAM protocol from which the EVC status and type are derived. Possible values are either "CFM" or "None."
CFM Domain:	Name of the CFM domain for this EVC.
CFM Service:	Name of the CFM service for this EVC.
Remote UNI Count: Configured = x , Active = y	Number of configured or expected remote UNIs (x) and the number of active remote UNIs (y) within the EVC.
Remote UNI Id:	ID of each remote UNI, including both configured and active remote UNIs where these two sets are not identical. If the number of configured and active remote UNIs is zero, no table is displayed. Note Where no ID is configured for a remote UNI using the ethernet uni id command, then the CFM remote MEP ID is displayed, for example, "<Remote UNI Reference Id: x>"
Status	Status of each remote UNI, with the following possible values: "Up," "Down," "Admin Down," "Unreachable (a configured remote UNI is not active or missing)," or "Unknown (a remote UNI is active but not reporting its status)."

Related Commands

Command	Description
clear ethernet lmi interfaces, on page 296	Clears Ethernet LMI statistics on one or all interfaces.

show ethernet oam configuration

To display the current active Ethernet OAM configuration on an interface, use the **show ethernet oam configuration** command in EXEC mode.

show ethernet oam configuration [*interface type interface-path-id*]

Syntax Description

interface type	(Optional) Displays information about the specified interface type. For more information, use the question mark (?) online help function.
interface-path-id	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

If no parameters are specified, the configurations for all Ethernet OAM interfaces is displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command displays the Ethernet OAM configuration information for all interfaces, or a specified interface.

Task ID

Task ID	Operations
ethernet-services	read

Examples

The following example shows how to display Ethernet OAM configuration information for a specific interface:

```
RP/0/RSP0/CPU0:router# show ethernet oam configuration interface gigabitethernet 0/4/0/0
Thu Aug  5 21:54:34.050 DST
GigabitEthernet0/4/0/0:
  Hello interval:                               1s
  Link monitoring enabled:                       Y
  Remote loopback enabled:                      N
  Mib retrieval enabled:                       N
  Uni-directional link-fault detection enabled: N
  Configured mode:                             Active
  Connection timeout:                           5
  Symbol period window:                        0
  Symbol period low threshold:                  1
  Symbol period high threshold:                None
  Frame window:                                1000
  Frame low threshold:                         1
  Frame high threshold:                        None
  Frame period window:                         1000
  Frame period low threshold:                   1
  Frame period high threshold:                 None
  Frame seconds window:                        60000
  Frame seconds low threshold:                  1
  Frame seconds high threshold:                None
  High threshold action:                       None
  Link fault action:                           Log
  Dying gasp action:                           Log
  Critical event action:                       Log
  Discovery timeout action:                     Log
  Capabilities conflict action:                 Log
  Wiring conflict action:                      Error-Disable
  Session up action:                           Log
  Session down action:                         Log
  Remote loopback action:                      Log
  Require remote mode:                         Ignore
  Require remote MIB retrieval:                 N
  Require remote loopback support:              N
  Require remote link monitoring:              N
```

The following example shows how to display the configuration for all EOAM interfaces:

```
RP/0/RSP0/CPU0:router# show ethernet oam configuration
Thu Aug  5 22:07:06.870 DST
GigabitEthernet0/4/0/0:
  Hello interval:                               1s
  Link monitoring enabled:                       Y
  Remote loopback enabled:                      N
  Mib retrieval enabled:                       N
  Uni-directional link-fault detection enabled: N
  Configured mode:                             Active
  Connection timeout:                           5
  Symbol period window:                        0
  Symbol period low threshold:                  1
  Symbol period high threshold:                None
  Frame window:                                1000
  Frame low threshold:                         1
  Frame high threshold:                        None
  Frame period window:                         1000
  Frame period low threshold:                   1
  Frame period high threshold:                 None
  Frame seconds window:                        60000
  Frame seconds low threshold:                  1
  Frame seconds high threshold:                None
  High threshold action:                       None
  Link fault action:                           Log
  Dying gasp action:                           Log
  Critical event action:                       Log
  Discovery timeout action:                     Log
```


Capabilities conflict action:	Log
Wiring conflict action:	Error-Disable
Session up action:	Log
Session down action:	Log
Remote loopback action:	Log
Require remote mode:	Ignore
Require remote MIB retrieval:	N
Require remote loopback support:	N
Require remote link monitoring:	N

Related Commands

Command	Description
show ethernet oam discovery, on page 468	Displays the currently configured OAM information of Ethernet OAM sessions on interfaces.
show ethernet oam statistics, on page 474	Displays the local and remote Ethernet OAM statistics for interfaces.
show ethernet oam interfaces, on page 471	

show ethernet oam discovery

To display the currently configured OAM information of Ethernet OAM sessions on interfaces, use the **show ethernet oam discovery** command in EXEC mode.

show ethernet oam discovery [**brief**] **interface** *type interface-path-id* [**remote**]

Syntax Description

brief	Displays minimal, currently configured OAM information in table form.
interface <i>type</i>	(Optional) Displays information about the specified interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
remote	(Optional) Retrieves and displays information from a remote device, as if the command was run on the remote device.

Command Default

Displays detailed information for Ethernet OAM sessions on all interfaces.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read

Examples

The following example shows how to display the minimal, currently configured OAM information for Ethernet OAM sessions on all interfaces:

```
RP/0/RSP0/CPU0:router# show ethernet oam discovery brief

Sat Jul  4 13:52:42.949 PST
Flags:
  L - Link Monitoring support
  M - MIB Retrieval support
  R - Remote Loopback support
  U - Unidirectional detection support
  * - data is unavailable

Local          Remote      Remote
Interface      MAC Address  Vendor Mode   Capability
-----
Gi0/1/5/1      0010.94fd.2bfa 00000A Active L
Gi0/1/5/2      0020.95fd.3bfa 00000B Active M
Gi0/1/6/1      0030.96fd.6bfa 00000C Passive L R
Fa0/1/3/1      0080.09ff.e4a0 00000C Active L R
```

The following example shows how to display detailed, currently configured OAM information for the Ethernet OAM session on a specific interface:

```
RP/0/RSP0/CPU0:router# show ethernet oam discovery interface gigabitethernet 0/1/5/1

Sat Jul  4 13:56:49.967 PST
GigabitEthernet0/1/5/1:
Local client
-----
Administrative configuration:
  PDU revision:                1
  Mode:                        Active
  Unidirectional support:      N
  Link monitor support:        Y
  Remote loopback support:     N
  MIB retrieval support:       N
  Maximum PDU size:            1500
  Mis-wiring detection key:     5E9D

Operational status:
  Port status:                 Active send
  Loopback status:             None
  Interface mis-wired:         N

Remote client
-----
MAC address:                   0030.96fd.6bfa
Vendor (OUI):                  00.00.0C (Cisco)

Administrative configuration:
  PDU revision:                5
  Mode:                        Passive
  Unidirectional support:      N
  Link monitor support:        Y
  Remote loopback support:     Y
  MIB retrieval support:       N
  Maximum PDU size:            1500
```

Related Commands

Command	Description
show ethernet oam configuration , on page 465	Displays the current active Ethernet OAM configuration on an interface.

Command	Description
show ethernet oam statistics, on page 474	Displays the local and remote Ethernet OAM statistics for interfaces.
show ethernet oam interfaces, on page 471	

show ethernet oam interfaces

To display the current state of Ethernet OAM interfaces, use the **show ethernet oam interfaces** command in EXEC mode.

show ethernet oam interfaces [**interface type interface-path-id**]

Syntax Description

interface type	(Optional) Displays information about the specified interface type. For more information, use the question mark (?) online help function.
interface-path-id	Physical interface or virtual interface.
Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.	

Command Default

No parameters displays the current state for all Ethernet OAM interfaces.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read

Examples

The following example shows how to display the current state for all Ethernet OAM interfaces:

```
RP/0/RSP0/CPU0:router# show ethernet oam interfaces
GigabitEthernet0/0/0/0
In REMOTE_OK state
Local MWD_key: 80081234
Remote MWD key: 8F08ABCC
```

EFD triggered: Yes (link-fault)

Table 29: show ethernet oam interfaces Field Descriptions

Field	Description
In <i>type</i> state	The possible discovery state <i>type</i> values are: • ACTIVE_SEND_LOCAL—The interface is configured in active mode (the default), but no Information PDUs have been received from the peer (except possibly link-fault PDUs). Information PDUs are sent. • FAULT—A local unidirectional link fault has been detected. Link-fault PDUs are sent. • INACTIVE—The interface is down. • PASSIVE_WAIT—The interface is configured in passive mode (mode passive command) but no Information PDUs have been received from the peer (except possibly link-fault PDUs). No PDUs are sent. • REMOTE—(Also known as SEND_LOCAL_REMOTE). Information PDUs are being sent and received, but the local device is not satisfied with the remote peer's capabilities (for example, because there is a 'require-remote' configuration and the peer does not have the required capabilities). • REMOTE_OK—(Also known as SEND_LOCAL_REMOTE_OK). Information PDUs are being sent and received, and the local device is satisfied with the peer's capabilities, but the remote peer is not satisfied with the local device capabilities (for example, because there is a 'require-remote' configuration on the peer device). • SEND_ANY—The discovery process has completed, both devices are satisfied with the configuration and the session is up. All types of PDU can be sent and received.

Field	Description
EFD triggered	Indicates if an Ethernet Fault Detection (EFD) event has occurred on the interface and the type of fault that triggered the interface to be moved to the down state for the line protocol. The possible EFD trigger events are: • capabilities-conflict • discovery-timeout • link-fault • session-down • wiring-conflict

Related Commands

Command	Description
show ethernet oam configuration, on page 465	Displays the current active Ethernet OAM configuration on an interface.
show ethernet oam discovery, on page 468	Displays the currently configured OAM information of Ethernet OAM sessions on interfaces.
show ethernet oam statistics, on page 474	Displays the local and remote Ethernet OAM statistics for interfaces.

show ethernet oam statistics

To display the local and remote Ethernet OAM statistics for interfaces, use the **show ethernet oam statistics** command in EXEC mode.

show ethernet oam statistics [*interface type interface-path-id* [*remote*]]

Syntax Description

interface type	(Optional) Displays information about the specified interface type. For more information, use the question mark (?) online help function.
interface-path-id	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
remote	(Optional) Retrieves and displays information from a remote device, as if the command was run on the remote device.

Command Default

No parameters displays statistics for all Ethernet OAM interfaces.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read

Examples

The following example shows how to display Ethernet OAM statistics for a specific interface:

```
RP/0/RSP0/CPU0:router# show ethernet oam statistics interface gigabitethernet 0/1/5/1
```



```

Sat Jul  4 14:34:52.320 PST
GigabitEthernet0/1/5/1:
Counters
-----
Information OAMPDU Tx          161177
Information OAMPDU Rx          151178
Unique Event Notification OAMPDU Tx      0
Unique Event Notification OAMPDU Rx      0
Duplicate Event Notification OAMPDU Tx    0
Duplicate Event Notification OAMPDU Rx    0
Loopback Control OAMPDU Tx              0
Loopback Control OAMPDU Rx              0
Variable Request OAMPDU Tx              0
Variable Request OAMPDU Rx              0
Variable Response OAMPDU Tx             0
Variable Response OAMPDU Rx             0
Organization Specific OAMPDU Tx          0
Organization Specific OAMPDU Rx          0
Unsupported OAMPDU Tx                  45
Unsupported OAMPDU Rx                  0
Frames Lost due to OAM                  23
Fixed frames Rx                        1

Local event logs
-----
Errored Symbol Period records           0
Errored Frame records                   0
Errored Frame Period records            0
Errored Frame Second records            0

Remote event logs
-----
Errored Symbol Period records           0
Errored Frame records                   0
Errored Frame Period records            0
Errored Frame Second records            0

```

Related Commands

Command	Description
show ethernet oam configuration, on page 465	Displays the current active Ethernet OAM configuration on an interface.
show ethernet oam discovery, on page 468	Displays the currently configured OAM information of Ethernet OAM sessions on interfaces.
show ethernet oam interfaces, on page 471	

show ethernet sla configuration-errors

To display information about errors that are preventing configured Ethernet Service Level Agreement (SLA) operations from becoming active, as well as any warnings that have occurred, use the **show ethernet sla configuration-errors** command in EXEC mode.

show ethernet sla configuration-errors [**domain** *domain-name*] [**interface** *type interface-path-id*] [**profile** *profile-name*]

Syntax Description

domain <i>domain-name</i>	Displays information for the specified domain, where <i>domain-name</i> is a string of a maximum of 80 characters that identifies the domain where the SLA operation is configured.
interface <i>type</i>	(Optional) Displays information for the specified interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
profile <i>profile-name</i>	(Optional) Displays information for the specified profile name.

Command Default

No default behavior or values

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to display information about errors that are preventing configured SLA operations from becoming active:

```
RP/0/RSP0/CPU0:router# show ethernet sla configuration-errors
```

```
Errors:
```

```
-----
```

```
Profile 'gold' is not defined but is used on Gi0/0/0/0.0
```

```
Profile 'red' defines a test-pattern, which is not supported by the type
```

show ethernet sla operations

To display information about configured Ethernet Service Level Agreement (SLA) operations, use the **show ethernet sla operations** command in EXEC mode.

show ethernet sla operations [**detail**] [**domain** *domain-name*] [**interface** *type interface-path-id*] [**on-demand** {**all** | *id*}] [**profile** {*profile-name* | **all**}]

Syntax Description

detail	(Optional) Displays detailed information.
domain <i>domain-name</i>	(Optional) Displays information for the specified domain, where <i>domain-name</i> is a string of a maximum of 80 characters that identifies the domain where the SLA operation is configured.
interface <i>type</i>	(Optional) Displays information for the specified interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Displays information for the specified interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
on-demand all	(Optional) Displays information for all on-demand operations.
on-demand <i>id</i>	(Optional) Displays information for the specified on-demand operation, where <i>id</i> is the number of the operation.
profile <i>profile-name</i>	(Optional) Displays information for the specified profile name.
profile all	(Optional) Displays information for all profiles.

Command Default

No default behavior or values

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The on-demand { all <i>id</i> } and profile all keyword options were added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to display information about configured SLA operations in brief:

```
RP/0/RSP0/CPU0:router# show ethernet sla operations
```

```

Profile          Instance
-----
business-gold    Gi0/0/0/0, dom mydom, to 00ab.cdef.1234
business-gold    Gi0/0/0/0, dom mydom, to MEP-ID 2

```

The following example shows how to display information about configured SLA operations in detail:

```
RP/0/RSP0/CPU0:router# show ethernet sla operations detail
```

```

Source: Interface GigabitEthernet0/0/0/0, Domain mydom
Destination: Target MAC Address 00ab.cdef.1234
=====
Profile 'business-gold'
Probe type 'cfm-delay-measurement':
    burst sent every 1min, each of 20 packets sent every 100ms
Measures RT Delay: 5 bins; 1 buckets/probe; 75 of 100 archived
Measures RT Jitter (interval 1): no aggregation; 5 probes/bucket; 10 of 10 archived
Scheduled to run every 5min first at 00:02:00 UTC for 2min (2 bursts)
    last run at 07:32:00 PST Tue 19 January 2010

Source: Interface GigabitEthernet0/0/0/0, Domain mydom
Destination: Target MEP-ID 2
=====
Profile 'business-gold'
Probe type 'cfm-delay-measurement':
    burst sent every 1min, each of 20 packets sent every 100ms
Measures RT Delay: 5 bins; 1 buckets/probe; 75 of 100 archived
Measures RT Jitter (interval 1): no aggregation; 5 probes/bucket; 10 of 10 archived
Scheduled to run every 5min first at 00:02:00 UTC for 2min (2 bursts)
    last run at 07:32:00 PST Tue 19 January 2010

```

The following example shows how to display information about on-demand SLA operations in detail:

```
RP/0/RSP0/CPU0:router# show ethernet sla operations detail on-demand
```

```

Source: Interface GigabitEthernet0/0/0/0.0, Domain mydom
Destination: Target MAC Address 00ab.cdef.1234
=====
On-demand operation ID #6
Probe type 'cfm-loopback':
    burst sent every 10s, each of 10 packets sent every 1s
    packets padded to 1024 bytes with pattern 0xabcd56ef
    packets use priority value of 3
Measures RT Delay: no aggregation; 1 buckets/probe; 1 of 100 archived
Started at 12:01:49 GMT Tue 02 March 2010, runs every 1hr for 1hr (360 bursts)
    repeats 10 times, ends at 22:01:49 GMT Tue 02 March 2010

```

The following example shows how to display information about configured and on-demand SLA operations on a specific interface:

```
RP/0/RSP0/CPU0:router# show ethernet sla operations interface gigabitethernet 0/0/0/0.0
detail
```

```
Interface GigabitEthernet 0/0/0/0.0
Domain mydom Service myser to 00AB.CDEF.1234
-----
Profile 'business-gold'
Probe type CFM-delay-measurement:
  bursts sent every 1min, each of 20 packets sent every 100ms
  packets padded to 1500 bytes with zeroes
  packets use priority value of 7
Measures RTT: 5 bins 20ms wide; 2 buckets/ probe; 75/100 archived
Measures Jitter (interval 1): 3 bins 40ms wide; 2 buckets/probe; 50 archived
Scheduled to run every Sunday at 4am for 2 hours:
  last run at 04:00 25/05/2008
```

show ethernet sla statistics

To display the contents of buckets containing Ethernet Service Level Agreement (SLA) metrics collected by probes, use the **show ethernet sla statistics** command in EXEC mode.

show ethernet sla statistics [**current**|**history**] [**detail**] [**domain** *domain-name*] [**interface** *type* *interface-path-id*] [**on-demand** {**all**|*id*}] [**profile** {*profile-name*|**all**}] [**statistic** *stat-type*]

Syntax Description

current	(Optional) Displays the content of buckets currently being filled.
history	(Optional) Displays the content of all full buckets.
detail	(Optional) Displays detailed content of buckets.
domain <i>domain-name</i>	(Optional) Displays the content of buckets for the specified domain, where <i>domain-name</i> is a string of a maximum of 80 characters that identifies the domain where the SLA operation is configured.
interface <i>type</i>	(Optional) Displays the content of buckets for the specified interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Displays the content of buckets for the specified interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
on-demand all	(Optional) Displays the content of buckets for all on-demand operations.
on-demand <i>id</i>	(Optional) Displays the content of buckets for the specified on-demand operation, where <i>id</i> is the number of the operation.
profile <i>profile-name</i>	(Optional) Displays the content of buckets for the specified profile name.
profile all	(Optional) Displays the content of buckets for all profiles.
statistic <i>stat-type</i>	(Optional) Displays only the specified type of statistic. Valid values are: • one-way-delay-ds—Displays only one-way (destination-to-source) delay. • one-way-delay-sd—Displays only one-way (source-to-destination) delay. • one-way-jitter-ds—Displays only one-way (destination-to-source) jitter. • one-way-jitter-sd—Displays only one-way (source-to-destination) jitter. • round-trip-delay—Displays only round-trip delay. • round-trip-jitter—Displays only round-trip jitter.

Command Default No default behavior or values

Command Modes EXEC (#)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.
	Release 4.0.0	• The one-way-delay-ds, one-way-delay-sd, one-way-jitter-ds, and one-way-jitter-sd statistics type keywords were added. • The on-demand all and on-demand id keyword options and arguments were added. • When the detail keyword is used, the “occurred at” field was added to the display output to show when the last Min/Max statistic happened.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

See the Usage Guidelines in the **buckets size** command for a description of buckets.

Task ID	Task ID	Operations
	ethernet-services	read, write

Examples The following example shows how to display the current contents of buckets containing SLA metrics collected by probes in brief:

```
RP/0/RSP0/CPU0:router# show ethernet sla statistics

Source: Interface GigabitEthernet0/0/0/0, Domain mydom
Destination: Target MEP-ID 2
=====
Profile 'business-gold', packet type 'cfm-delay-measurement'
Scheduled to run every 5min first at 00:02:00 UTC for 2min

Round Trip Delay
~~~~~
1 buckets per probe

Bucket started at 07:47:00 PST Tue 19 January 2010 lasting 2min
  Pkts sent: 20; Lost: 0 (0.0%); Corrupt: 0 (0.0%); Misordered: 0 (0.0%)
  Min: 0.24ms; Max: 0.49ms; Mean: 0.34ms; StdDev: 0.05ms

Bucket started at 07:52:00 PST Tue 19 January 2010 lasting 2min
```



```
Pkts sent: 20; Lost: 0 (0.0%); Corrupt: 0 (0.0%); Misordered: 0 (0.0%)
Min: 0.24ms; Max: 0.69ms; Mean: 0.34ms; StdDev: 0.12ms
```

```
Round Trip Jitter
~~~~~
1 buckets per probe
```

```
Bucket started at 07:47:00 PST Tue 19 January 2010 lasting 2min
Pkts sent: 20; Lost: 0 (0.0%); Corrupt: 0 (0.0%); Misordered: 0 (0.0%)
Min: -0.25ms; Max: 0.13ms; Mean: -0.01ms; StdDev: 0.08ms
```

```
Bucket started at 07:52:00 PST Tue 19 January 2010 lasting 2min
Pkts sent: 20; Lost: 0 (0.0%); Corrupt: 0 (0.0%); Misordered: 0 (0.0%)
Min: -0.38ms; Max: 0.38ms; Mean: -0.02ms; StdDev: 0.14ms
```

The following example shows how to display the current contents of buckets containing SLA metrics collected by probes in detail:



Note

In this example, the round-trip-delay measurement is configured with aggregation (and hence bins are displayed), whereas the round-trip-jitter measurement is configured with no aggregation (and hence individual samples are displayed).

```
RP/0/RSP0/CPU0:router# show ethernet sla statistics detail
Source: Interface GigabitEthernet0/0/0/0, Domain mydom
Destination: Target MEP-ID 2
=====
Profile 'business-gold', packet type 'cfm-delay-measurement'
Scheduled to run every 5min first at 00:02:00 UTC for 2min
```

```
Round Trip Delay
~~~~~
1 buckets per probe
```

```
Bucket started at 07:47:00 PST Tue 19 January 2010 lasting 2min
Pkts sent: 20; Lost: 0 (0.0%); Corrupt: 0 (0.0%); Misordered: 0 (0.0%)
Min: 0.24ms, occurred at 07:47:29 on Tue 19 Jan 2010 UTC
Max: 0.49ms, occurred at 07:48:04 on Tue 19 Jan 2010 UTC
Mean: 0.34ms; StdDev: 0.05ms
```

Bins:	Range	Samples	Cum. Count	Mean
	0 to 20 ms	20 (100.0%)	20 (100.0%)	0.34ms
	20 to 40 ms	0 (0.0%)	20 (100.0%)	-
	40 to 60 ms	0 (0.0%)	20 (100.0%)	-
	60 to 80 ms	0 (0.0%)	20 (100.0%)	-
	> 80 ms	0 (0.0%)	20 (100.0%)	-

```
Bucket started at 07:52:00 PST Tue 19 January 2010 lasting 2min
Pkts sent: 20; Lost: 0 (0.0%); Corrupt: 0 (0.0%); Misordered: 0 (0.0%)
Min: 0.24ms, occurred at 07:53:10 on Tue 19 Jan 2010 UTC
Max: 0.69ms, occurred at 07:53:42 on Tue 19 Jan 2010 UTC
Mean: 0.34ms; StdDev: 0.12ms
```

Bins:	Range	Samples	Cum. Count	Mean
	0 to 20 ms	20 (100.0%)	20 (100.0%)	0.34ms
	20 to 40 ms	0 (0.0%)	20 (100.0%)	-
	40 to 60 ms	0 (0.0%)	20 (100.0%)	-
	60 to 80 ms	0 (0.0%)	20 (100.0%)	-
	> 80 ms	0 (0.0%)	20 (100.0%)	-

```
Round Trip Jitter
~~~~~
```

show ethernet sla statistics

1 buckets per probe

Bucket started at 07:47:00 PST Tue 19 January 2010 lasting 2min
 Pkts sent: 20; Lost: 0 (0.0%); Corrupt: 0 (0.0%); Misordered: 0 (0.0%)
 Min: -0.25ms, occurred at 07:47:53 on Tue 19 Jan 2010 UTC
 Max: 0.13ms, occurred at 07:48:11 on Tue 19 Jan 2010 UTC
 Mean: -0.01ms; StdDev: 0.08ms

Time sent	Result	Notes
07:47:00.0	...	
07:47:00.1	-0.12ms	
07:47:00.2	0.06ms	
07:47:00.3	0.00ms	
07:47:00.4	-0.06ms	
07:47:00.5	0.00ms	
07:47:00.6	0.00ms	
07:47:00.7	0.00ms	
07:47:00.8	0.06ms	
07:47:00.9	0.00ms	
07:48:00.0	0.11ms	
07:48:00.1	-0.25ms	
07:48:00.2	0.13ms	
07:48:00.3	0.00ms	
07:48:00.4	-0.06ms	
07:48:00.5	0.00ms	
07:48:00.6	0.06ms	
07:48:00.7	-0.06ms	
07:48:00.8	0.00ms	
07:48:00.9	0.00ms	

Bucket started at 07:52:00 PST Tue 19 January 2010 lasting 2min
 Pkts sent: 20; Lost: 0 (0.0%); Corrupt: 0 (0.0%); Misordered: 0 (0.0%)
 Min: -0.38ms, occurred at 07:52:13 on Tue 19 Jan 2010 UTC
 Max: 0.38ms, occurred at 07:53:26 on Tue 19 Jan 2010 UTC
 Mean: -0.02ms; StdDev: 0.14ms

Time sent	Result	Notes
07:52:00.0	...	
07:52:00.1	-0.38ms	
07:52:00.2	0.00ms	
07:52:00.3	-0.05ms	
07:52:00.4	0.00ms	
07:52:00.5	0.05ms	
07:52:00.6	0.00ms	
07:52:00.7	0.00ms	
07:52:00.8	0.00ms	
07:52:00.9	0.00ms	
07:53:00.0	0.38ms	
07:53:00.1	-0.32ms	
07:53:00.2	0.00ms	
07:53:00.3	-0.13ms	
07:53:00.4	0.06ms	
07:53:00.5	0.00ms	
07:53:00.6	0.00ms	
07:53:00.7	0.00ms	
07:53:00.8	0.06ms	
07:53:00.9	0.00ms	

The following example shows how to display the current contents of buckets containing SLA metrics collected by probes on a specific interface:

```
RP/0/RSP0/CPU0:router# show ethernet sla statistics current interface GigabitEthernet
0/0/0/0.0
```

```
Interface GigabitEthernet 0/0/0/0.0
Domain mydom Service myser to 00AB.CDEF.1234
=====
```

```

Profile 'business-gold', packet type 'cfm-superpacket'
Scheduled to run every Sunday at 4am for 2 hours

Round Trip Delay
~~~~~
2 buckets per probe

Bucket started at 04:00 Sun 17 Feb 2008 lasting 1 hour:
  Pkts sent: 2342; Lost 2 (0%); Corrupt: 0 (0%); Misordered: 0 (0%)
  Min: 13ms; Max: 154ms; Mean: 28ms; StdDev: 11ms

Round Trip Jitter
~~~~~
2 buckets per probe

Bucket started at 04:00 Sun 17 Feb 2008 lasting 1 hour:
  Pkts sent: 2342; Lost: 2 (0%); Corrupt: 0 (0%); Misordered: 0 (0%)
  Min: -5ms; Max: 8ms; Mean: 0ms; StdDev: 3.6ms

```

The following example shows how to display a history detail of buckets containing SLA metrics collected by probes on a specific interface:

```

RP/0/RSP0/CPU0:router# show ethernet sla history detail GigabitEthernet 0/0/0/0.0

Interface GigabitEthernet 0/0/0/0.0
Domain mydom Service myser to 00AB.CDEF.1234
=====
Profile 'business-gold', packet type 'cfm-loopback'
Scheduled to run every Sunday at 4am for 2 hours

Round Trip Delay
~~~~~
2 buckets per probe

Bucket started at 04:00 Sun 17 Feb 2008 lasting 1 hour:
  Pkts sent: 2342; Lost: 2 (0%); Corrupt: 0 (0%); Misordered: 0 (0%)
  Min: 13ms, occurred at 04:43:29 on Sun 22 Aug 2010 UTC
  Max: 154ms, occurred at 05:10:32 on Sun 22 Aug 2010 UTC
  Mean: 28ms; StdDev: 11ms

Results suspect as more than 10 seconds time drift detected
Results suspect as scheduling latency prevented some packets being sent

Samples:
Time sent      Result  Notes
-----
04:00:01.324   23ms
04:00:01.425   36ms
04:00:01.525   -   Timed Out
...

Round Trip Jitter
~~~~~
2 buckets per probe

Bucket started at 04:00 Sun 17 Feb 2008, lasting 1 hour:
  Pkts sent: 2342; Lost: 2 (0%); Corrupt: 0 (0%); Misordered: 0 (0%)
  Min: -5ms, occurred at 04:15:03 on Sun 22 Aug 2010 UTC
  Max: 10ms, occurred at 05:29:15 on Sun 22 Aug 2010 UTC
  Mean: 0ms; StdDev: 3.6ms

Samples:
Time sent      Result  Notes
-----
04:00:01.324   -
04:00:01.425   13ms
04:00:01.525   -   Timed out
...

```

The following example shows how to display statistics for all full buckets for on-demand operations in detail:

```
RP/0/RSP0/CPU0:router# show ethernet sla statistics history detail on-demand

Interface GigabitEthernet0/0/0/0.1
Domain mydom Service myser to 0123.4567.890A
=====
On-demand operation ID #1, packet type 'cfm-delay-measurement'
Started at 15:38 on 06 July 2010 UTC, runs every 1 hour for 1 hour

Round Trip Delay
~~~~~
1 bucket per probe

Bucket started at 15:38 on Tue 06 Jul 2010 UTC, lasting 1 hour:
  Pkts sent: 1200; Lost: 4 (0%); Corrupt: 600 (50%); Misordered: 0 (0%)
  Min: 13ms, occurred at 15:43:29 on Tue 06 Jul 2010 UTC
  Max: 154ms, occurred at 16:15:34 on Tue 06 Jul 2010 UTC
  Mean: 28ms; StdDev: 11ms

  Bins:
  Range      Samples      Cum. Count      Mean
  -----
    0 - 20 ms    194 (16%)    194 (16%)    17ms
    20 - 40 ms   735 (61%)    929 (77%)    27ms
    40 - 60 ms   212 (18%)   1141 (95%)    45ms
    > 60 ms      55 (5%)    1196         70ms

Bucket started at 16:38 on Tue 01 Jul 2008 UTC, lasting 1 hour:
  Pkts sent: 3600; Lost: 12 (0%); Corrupt: 1800 (50%); Misordered: 0 (0%)
  Min: 19ms, occurred at 17:04:08 on Tue 06 Jul 2010 UTC
  Max: 70ms, occurred at 16:38:00 on Tue 06 Jul 2010 UTC
  Mean: 28ms; StdDev: 11ms

  Bins:
  Range      Samples      Cum. Count      Mean
  -----
    0 - 20 ms    194 (16%)    194 (16%)    19ms
    20 - 40 ms   735 (61%)    929 (77%)    27ms
    40 - 60 ms   212 (18%)   1141 (95%)    45ms
    > 60 ms      55 (5%)    1196         64ms
```

Related Commands

Command	Description
buckets size, on page 285	Configures the size of the buckets in which statistics are collected.

show ethernet udd interfaces

To display the ethernet interfaces configured with unidirectional link detection protocol, use the **show ethernet udd interfaces** in the ethernet interface configuration mode.

show ethernet udd interfaces {brief}

Syntax Description

brief	Displays a brief summary of the ethernet udd interfaces.

Command Default

No parameters displays the current state for all udd interfaces.

Command Modes

Ethernet Interface Configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	read

Examples

This example shows a sample output of the **show ethernet udd interfaces** command:

RP/0/RSP0/CPU0:router# **show ethernet udd interfaces**

```
Device ID:                00:0c:cc:cc:01:02
Device name:              harpenden2.cisco.com

GigabitEthernet0/1/0/2
  Port state:             Up
  Main FSM state:         Advertisement
  Detection FSM state:    Bidirectional
  Message interval:       60 seconds
  Timeout interval:       5 seconds

Neighbor 1
  Device ID:              00:0a:0b:0c:cc:cc
  Device name:            cambridge53.cisco.com
  Port ID:                Gi0/12
```

show ethernet uddi interfaces

```

Message interval: 7 seconds
Timeout interval: 4 seconds
Echo 1: 00:0c:cc:cc:01:02, Gi0/1/0/2
Echo 2: 00:0a:0b:0c:dd:dd, GE100
Neighbor 2
Device ID: 00:0a:0b:0c:dd:dd
Device name: cambridge54.cisco.com
Port ID: GE100
Message interval: 7 seconds
Timeout interval: 4 seconds
Echo 1: 00:0c:cc:cc:01:02, Gi0/1/0/2
Echo 2: 00:0a:0b:0c:cc:cc, Gi0/12

```

This example shows a sample output of the **show ethernet uddi interfaces** command with the brief keyword:

RP/0/RSP0/CPU0:router# **show ethernet uddi interfaces brief**

Port	State	Neighbor Device	N'bor port
Gi0/1/0/1	Bidirectional	london-xr22.cisco.com	Gi3/12/0/24
Gi0/1/0/2	Bidirectional	[2 neighbors]	-
Gi0/1/0/3	Unknown	-	-
Gi0/1/0/4	Unidirectional	sj-ios25.cisco.com	Gi3/5
Te0/12/0/10	Admin Down	-	-
Te0/12/0/11	N'bor Mismatch	long-device.cisco.com	LongPortNam>>

Table 30: show ethernet uddi interfaces Field Descriptions

Admin Down	Indicates that the port is administratively down (shutdown configuration is in effect).
Error Disabled	Specifies that the port is in Error Disabled state for a non-UDLD reason, or the port has been disabled by UDLD but the daemon has restarted and does not have a record of the cause.
Down	Indicates that the port is operationally down but not Error Disabled.
Initializing	Indicates that the port is not yet operating the UDLD protocol.
Detecting	Indicates that the port is in the detection phase and is synchronizing the data with its peers.
Loopback	Specifies that the port has been detected to be in loopback.
Unidirectional	Indicates that the port was unidirectional and was disabled by UDLD.
N'bor Mismatch	Indicates that the port has been disabled by UDLD due to mismatched neighbors.
No Neighbors	Specified that the port does not have an active UDLD session with any of the neighbors.
Bidirectional	Indicates that the port is up and has been detected to be bidirectional.

Device ID	Specifies the ID advertised by the device to its peers. This is a MAC address.
Device name	Specifies the string identifier for the device sent to peers. This is a concatenation of the hostname with the configured IP domain (if present), separated by a dot.

Related Commands

Command	Description
show ethernet uddl statistics , on page 490	Displays statistics on state machine transitions and packets sent and received for an UDL interface.

show ethernet udd statistics

To display the statistics of state machine transitions and packets exchanged on an interface running UDLD protocol, use the **show ethernet udd statistics** command in the ethernet interface configuration mode.

show ethernet udd statistics[*interface type* [**unaccounted-drops**]

Syntax Description

interface type	(Optional) Displays information about the specified interface type. If an interface is specified, only the interface-specific counters are shown and not the node counters.
unaccounted-drops	(Optional) Displays information for only the node counters.

Command Default

No default behavior or values

Command Modes

Ethernet Interface Configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	read

Examples

This example shows a sample output of the **show ethernet udd statistics** command:

```
RP/0/RSP0/CPU0:router# show ethernet udd statistics interface GigabitEthernet 0/10/0/11
```

```
Interface GigabitEthernet0/10/0/11
  Counters last cleared:          01:12:11 ago
  Main FSM transitions (to each state)
    Link up:                      1
    Detection:                    12
    Advertize:                    12
    Port shutdown:                0
    UDLD inactive:                0
```



```

Detection FSM transitions (to each state)
  Unknown:                                12
  Bidirectional:                          12
  Unidirectional:                         0
  Neighbor mismatch:                      0
  Loopback:                              0
Rx packet counts
  Probe:                                  1
  Echo:                                  1819
  Flush:                                  5
  Invalid packets (dropped):              154
Tx packet counts
  Probe:                                  1
  Echo:                                  1824
  Flush:                                  0
  Unable to send (dropped):               0

Node 0/10/CPU0
  Counters last cleared:                  01:12:11 ago
  Received on ports without UDLD configured
    Total packet count:                   12
    Last port:                            Gi0/10/0/5
  Rx port could not be determined:        0

```

Related Commands

Command	Description
show ethernet udd interfaces, on page 487	Displays a summary of UDLD protocol states for each interface.
show ethernet oam statistics, on page 474	Displays the local and remote Ethernet OAM statistics for interfaces.

sla operation

To create an operation instance from a maintenance end point (MEP) to a specified destination, use the **sla operation** command in interface CFM MEP configuration mode. To remove the operation, use the **no** form of this command.

sla operation profile *profile-name* **target** {**mep-id** *id*| **mac-address** *mac-address*}

no sla operation profile *profile-name* **target** {**mep-id** *id*| **mac-address** *mac-address*}

Syntax Description

profile <i>profile-name</i>	Name of the profile to assign this operation.
target mep-id <i>id</i>	Destination MEP ID. The range is 1 to 8191.
mac-address <i>mac-address</i>	Destination MAC address in standard hexadecimal format, hh:hh:hh:hh:hh:hh.

Command Default

No operations are configured

Command Modes

Interface CFM MEP configuration (config-if-cfm-mep)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **sla operation** command is supported on all Ethernet interfaces.

Multiple SLA operation instances may be configured under each MEP, and may have different targets, and may be assigned to different profiles.

If an operation is assigned to a nonexistent profile, a warning message is issued, and the offending configuration is shown in the output of the related show commands.

Changing the configuration of an SLA operation is equivalent to deleting the operation and creating a new operation. All stored data for the operation is discarded.

When **target mep-id** is specified, the operation is activated only if that MEP is in the peer MEP database. You can verify that a MEP is in the database, using the **show ethernet cfm peer meps** command.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to create an SLA operation instance using a profile named “Profile_1” to a destination MEP with the specified MAC address:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# ethernet cfm
RP/0/RSP0/CPU0:router(config-if-cfm)# mep domain Dm1 service Sv1 mep-id 1
RP/0/RSP0/CPU0:router(config-if-cfm-mep)# sla operation profile Profile_1 target mac-address
01:23:45:67:89:ab
```

Related Commands

Command	Description
show ethernet cfm peer meps , on page 442	Displays information about maintenance end points (MEPs) for peer MEPs.

snmp-server traps ethernet cfm

To enable SNMP traps for Ethernet Connectivity Fault Management (CFM), use the **snmp-server traps ethernet cfm** command in global configuration mode.

snmp-server traps ethernet cfm

Syntax Description

This command has no keywords or arguments.

Command Default

Ethernet OAM event traps are not enabled.

Command Modes

Global configuration (config)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
snmp	read, write

Examples

The following example shows how to enable SNMP server traps on an Ethernet OAM interface.

```
RP/0/RSP0/CPU0:router #configure
RP/0/RSP0/CPU0:router(config)# snmp-server traps ethernet cfm
```

snmp-server traps ethernet oam events

To enable SNMP traps for Ethernet OAM events, use the **snmp-server traps ethernet oam events** command in global configuration mode.

snmp-server traps ethernet oam events

Syntax Description This command has no keywords or arguments.

Command Default Ethernet OAM event traps are not enabled.

Command Modes Global configuration (config)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	snmp	read, write

Examples The following example shows how to enable SNMP server traps on an Ethernet OAM interface.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server traps ethernet oam events
```

statistics measure

To enable the collection of Ethernet Service Level Agreement (SLA) statistics, and enter the SLA profile statistics configuration mode, use the **statistics measure** command in SLA profile configuration mode. To disable statistics collection, use the **no** form of this command.

statistics measure {one-way-delay-ds| one-way-delay-sd| one-way-jitter-ds| one-way-jitter-sd| round-trip-delay| round-trip-jitter}

no statistics measure {one-way-delay-ds| one-way-delay-sd| one-way-jitter-ds| one-way-jitter-sd| round-trip-delay| round-trip-jitter}

Syntax Description

one-way-delay-ds	(CFM delay measurement profile type only) Enables the collection of statistics that measure delay in one direction, from destination to source.
one-way-delay-sd	(CFM delay measurement profile type only) Enables the collection of statistics that measure delay in one direction, from source to destination.
one-way-jitter-ds	(CFM delay measurement profile type only) Enables the collection of statistics that measure delay variance in one direction, from destination to source.
one-way-jitter-sd	(CFM delay measurement profile type only) Enables the collection of statistics that measure delay variance in one direction, from source to destination.
round-trip-delay	Enables the collection of statistics that measure the delay in the round trip of a packet.
round-trip-jitter	Enables the collection of statistics that measure the amount of delay variance in the round trip of a packet.

Command Default

No statistics are collected

Command Modes

SLA profile configuration (config-sla-prof)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Release	Modification
Release 4.0.0	The following keyword options were added: • one-way-delay-ds • one-way-delay-sd • one-way-jitter-ds • one-way-jitter-sd

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For statistics to be collected, at least one statistics entry must be present in each profile. To measure more than one type of statistic, this command may be configured more than once in a single profile.

The one-way delay and jitter statistics are available for CFM delay measurement profile types only (**profile (SLA)** command with the **type cfm-delay-measurement** keywords).

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enable the collection of round-trip-delay statistics, and enter the SLA profile statistics configuration mode:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet sla
RP/0/RSP0/CPU0:router(config-sla)# profile Prof1 type cfm-loopback
RP/0/RSP0/CPU0:router(config-sla-prof)# statistics measure round-trip-delay
RP/0/RSP0/CPU0:router(config-sla-prof-stat-cfg)#
```

Related Commands

Command	Description
ethernet sla , on page 335	Enters the Ethernet SLA configuration mode.
profile (SLA) , on page 406	Creates an SLA operation profile and enter the SLA profile configuration mode.

status-counter

To set the Metro Ethernet Forum (MEF) N393 Status Counter value that is used to determine Ethernet Local Management Interface (E-LMI) operational status, use the **status-counter** command in interface Ethernet LMI configuration mode. To return to the default, use the **no** form of the command.

status-counter *threshold*

no status-counter *threshold*

Syntax Description

<i>threshold</i>	Number from 2 to 10. The default is 4.

Command Default

The N393 Status Counter is set to 4.

Command Modes

Interface Ethernet LMI configuration (config-if-elmi)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the E-LMI protocol status is currently Up, the Status Counter specifies how many consecutive times the PVT must expire before the status is changed to Down. If the E-LMI status is currently Down, the Status Counter specifies how many STATUS ENQUIRY messages must be received without the PVT expiring before the status is changed to Up. If the PVT is disabled, the status counter has no effect.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to set the MEF Status Counter for E-LMI to 6:

```
RP/0/RSP0/CPU0:router# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet lmi
RP/0/RSP0/CPU0:router(config-if-elmi)# status-counter 6
```


Related Commands

Command	Description
interface (Ethernet), on page 190	Specifies or creates an Ethernet interface and enters interface configuration mode.
ethernet lmi, on page 330	Enables E-LMI operation on an interface and enters interface Ethernet LMI configuration mode.
show ethernet lmi interfaces, on page 456	Displays E-LMI information for an interface, including protocol status and error and event statistics.

symbol-period threshold

To configure the thresholds that trigger an Ethernet OAM symbol-period error event, use the **symbol-period threshold** command in Ethernet OAM link monitor configuration mode. To return the threshold to the default value, use the **no** form of this command.

symbol-period threshold low threshold [**high t hreshold**]

no symbol-period threshold low threshold [**high t hreshold**]

Syntax Description

low threshold	Low threshold value, in symbols, that triggers a symbol-period error event. The range is 0 to 60000000.
high threshold	(Optional) High threshold value, in symbols, that triggers a symbol-period error event. The range is 0 to 60000000. The high threshold value can be configured only in conjunction with the low threshold value.

Command Default

The default low threshold is 1.

Command Modes

Ethernet OAM link monitor configuration (config-eoam-lm)
Interface Ethernet OAM link monitor configuration (config-if-eoam-lm)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When the low threshold is passed, a symbol-period error event notification is generated and transmitted to the OAM peer. Additionally, any registered higher level OAM protocols, such as Connectivity Fault Management (CFM), are also notified. When the high threshold is passed, the configured high threshold action is performed in addition to the low threshold actions. The high threshold is optional and is configurable only in conjunction with the low threshold.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the symbol-period low and high thresholds that trigger a symbol-period error event:

```
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1  
RP/0/RSP0/CPU0:router(config-eoam)# link-monitor  
RP/0/RSP0/CPU0:router(config-eoam-lm)# symbol-period threshold low 100 high 6000
```

symbol-period window

To configure the window size for an Ethernet OAM symbol-period error event, use the **symbol-period window** command in Ethernet OAM link monitor or interface Ethernet OAM link monitor configuration mode. To return the window size to the default value, use the **no** form of this command.

symbol-period window *window*

no symbol-period window *window*

Syntax Description

<i>window</i>	Size of the window for symbol-period error in milliseconds. The range is 1000 to 60000.

Command Default

The default value is 1000.

Command Modes

Ethernet OAM link monitor configuration (config-eoam-lm)
Interface Ethernet OAM link monitor configuration (config-if-eoam-lm)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to configure the window size for a symbol-period error.

```
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# link-monitor
RP/0/RSP0/CPU0:router(config-eoam-lm)# symbol-period window 60000
```

tags

To set the number of outer tags in CFM packets sent from up MEPs in a CFM domain service, use the **tags** command in CFM domain service configuration mode. To return the number of tags in CFM packets to the default value, use the **no** form of this command.

tags *number*

no tags *number*

Syntax Description

<i>number</i>	Specifies the number of tags in CFM packets from up MEPs. Currently, the only valid value is 1.

Command Default

When not configured, CFM packets are sent with the same number of tags as customer data traffic, according to the encapsulation and rewrite configuration.

Command Modes

CFM domain service configuration (config-cfm-dmn-svc)

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command allows you to set the number of tags in CFM packets from up MEPs to 1, so that the system can differentiate between CFM packets and data packets. When not configured, CFM packets from UP MEPs have the same number of tags as data packets, and consequently, may not be forwarded to the appropriate route.

Tags can be configured only for services that are associated with a bridge domain or cross-connect.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to set the number of tags in CFM packets from up MEPs in a CFM domain service:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# domain D1 level 1
RP/0/RSP0/CPU0:router(config-cfm-dmn)# service S2 bridge group BG1 bridge-domain BD2
RP/0/RSP0/CPU0:router(config-cfm-dmn-svc)# tags 1
```

traceroute cache

To set the maximum limit of traceroute cache entries or the maximum time limit to hold the traceroute cache entries, use the **traceroute cache** command in CFM configuration mode. To return the traceroute cache to its default limits, use the **no** form of this command.

traceroute cache hold-time *minutes* **size** *entries*

no traceroute cache hold-time *minutes* **size** *entries*

Syntax Description

hold-time <i>minutes</i>	Timeout value in minutes that entries are held in the Ethernet CFM traceroute cache table before being cleared. Range is 1 minute or greater.
size <i>entries</i>	Maximum number of entries that are stored in the Ethernet CFM traceroute cache table. An entry is a single traceroute reply. Range is 1 to 5000.

Command Default

hold-time: 100

size: 100

Command Modes

CFM configuration (config-cfm)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A separate cache is managed for each node that sends a traceroute request. All replies to a single traceroute request are cached at once. The **hold-time** begins when the last reply to a request is received. When the **hold-time** limit is reached, all replies to that request are cleared. The size of each traceroute reply is limited by the MTU of the interface.

When the maximum number of entries (**size** *entries*) is exceeded, all replies for the oldest request are deleted.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to set the **hold-time** and the **size** of a tracertoute cache.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet cfm
RP/0/RSP0/CPU0:router(config-cfm)# tracertoute cache hold-time 1 size 3000
```

Related Commands

Command	Description
ethernet cfm (global), on page 326	Enters CFM configuration mode.
tracertoute ethernet cfm, on page 507	Sends Ethernet CFM tracertoute messages to generate a basic.

traceroute ethernet cfm

To send Ethernet connectivity fault management (CFM) traceroute messages to generate a basic, targeted, or exploratory traceroute, use the **traceroute ethernet** command in EXEC mode.

traceroute ethernet cfm domain *domain-name* **service** *service-name* [**mac-address** *target-mac-address*] [**mep-id** *target-mep-id*] [**explore** [**all-ports**] [**from** *from-mac-address*]] [**source** [**mep-id** *source-mep-id*]] [**interface** *type interface-path-id*] [**asynchronous**] [**timeout** *seconds*] [**filtering-db-only**] [**cos** *cos-no*] [**ttl** *ttl*] [**detail**]

Syntax Description

domain <i>domain-name</i>	String of a maximum of 80 characters that identifies the domain in which the destination MEP resides. (Basic traceroute)
service <i>service-name</i>	String of a maximum of 80 characters that identifies the maintenance association to which the destination MEP belongs. (Basic traceroute)
mac-address <i>target-mac-address</i>	Identifies the 6-byte MAC address (in hexadecimal H.H.H format) of the destination MEP. (Targeted traceroute)
mep-id <i>target-mepid</i>	Destination maintenance end point (MEP) ID number. The range for MEP ID numbers is 1 to 8191. (Targeted traceroute)
explore	(Optional) Specifies that an exploratory traceroute is performed.
all-ports	(Optional) Specifies an exploratory traceroute of all ports.
from <i>from-mac-address</i>	(Optional) Specifies an exploratory traceroute beginning at the specified MAC address (in hexadecimal H.H.H format).
source	Specifies source information for the traceroute.
mep-id <i>source-mep-id</i>	(Optional) Source maintenance end point (MEP) ID number. The range for MEP ID numbers is 1 to 8191.
interface <i>type</i>	Source interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
asynchronous	(Optional) Specifies that the traceroute is performed asynchronously, where control is returned to the command prompt immediately, and no results are displayed. The results can be displayed later using the show ethernet cfm traceroute-cache command.

timeout <i>seconds</i>	(Optional) Timeout value (in seconds) for the specified interface. For a basic traceroute, the timeout is a fixed value that defaults to 5 seconds. For an exploratory traceroute, a logarithmic algorithm is used unless this value is specified.
filtering-db-only	(Optional) Sets whether or not the remote maintenance points should base their responses on the filtering database only. The default is no—use both the filtering and MIP-CCM databases. Note The filtering-db-only option is only available for basic traceroute (when the MAC address or MEP ID is specified). It is not available with the explore option.
cos <i>cos-no</i>	(Optional) Identifies the class of traffic of the source MEP by setting a Class of Service (CoS) value. The valid values are from 0 to 7.
ttl <i>tll</i>	Specifies the initial time-to-live (TTL) value (from 1 to 255) for the traceroute message. The default is 64.
detail	(Optional) Specifies that details are displayed in the output for the traceroute.

Command Default

No default behavior or values

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

By default, this command pauses until the traceroute operation is complete, then displays the results. If the **asynchronous** option is used, this command returns immediately and no results are displayed. Results are placed in the traceroute cache and can be retrieved using the **show ethernet cfm traceroute-cache** command.

An exploratory traceroute, by default uses a **timeout** value that is calculated by a logarithmic delay algorithm. If the **timeout** value is specified, the specified value is used.

The display output of this command is similar to the output of the **show ethernet cfm traceroute-cache** command.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows how generate a basic traceroute:

```
RP/0/RSP0/CPU0:router# traceroute ethernet cfm domain bar service bar mep-id 1 source  
interface gigabitethernet 0/0/0/0
```

```
Traceroutes in domain bar (level 4), service bar  
Source: MEP-ID 1, interface GigabitEthernet0/0/0/0
```

```
=====
```

```
Traceroute at 2009-05-18 12:09:10 to 0001.0203.0402,  
TTL 64, Trans ID 2:
```

Hop	Hostname/Last	Ingress MAC/name	Egress MAC/Name	Relay
1	ios	0001.0203.0400 [Down]		FDB
	0000-0001.0203.0400	Gi0/0/0/0		
2	abc		0001.0203.0401 [Ok]	FDB
	ios		Not present	
3	bcd	0001.0203.0402 [Ok]		Hit
	abc	GigE0/0		

Replies dropped: 0

Related Commands

Command	Description
traceroute cache, on page 505	Sets the maximum limit of traceroute cache entries or the maximum time limit to hold the traceroute cache entries.
clear ethernet cfm traceroute-cache, on page 294	Removes the contents of the traceroute cache.
show ethernet cfm traceroute-cache, on page 449	Displays the contents of the traceroute cache.

uni-directional link-fault detection

To enable detection of a local, unidirectional link fault and send notification of that fault to an Ethernet OAM peer, use the **uni-directional link-fault detection** command in Ethernet OAM configuration mode or interface Ethernet OAM configuration mode. To remove the configuration from a profile and return to the default, or to remove the override configuration at an interface, use the **no** form of this command.

uni-directional link-fault detection [disable]

no uni-directional link-fault detection [disable]

Syntax Description

disable	(Optional, Interface Ethernet OAM configuration only) Overrides the setting of unidirectional link fault detection from an Ethernet OAM profile, and disables it for this interface only.

Command Default

Detection and sending notification of local, unidirectional link faults is disabled.

Command Modes

Ethernet OAM configuration (config-eoam)

Interface Ethernet OAM configuration (config-if-eoam)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command does not affect how the receipt of link-fault messages are handled by the router. Actions to be taken for the receipt of link-fault messages are configured using the **action uni-directional link-fault** command.

Consider the following guidelines when configuring the **uni-directional link-fault detection** command:

- You can configure unidirectional link-fault detection for multiple interfaces that share a similar configuration using the command within an Ethernet OAM profile and attaching the profile to the interfaces to which it applies.
- You can override the profile configuration for unidirectional link-fault detection using the command in interface Ethernet OAM configuration.
- The **disable** keyword is only available in interface Ethernet OAM configuration mode, and it allows you to override the feature set by the profile, and disable it for a particular interface. For example, if unidirectional link-fault detection is enabled within a profile that is attached to an interface, you can

override that configuration to disable it at the interface using the **uni-directional link-fault detection disable** command in interface Ethernet OAM configuration mode.

- You can use the **no** form of the command in either the profile or interface configuration:
 - Running the **no** form of the command within the profile removes the configuration of the uni-directional command in the profile, effectively disabling the feature for all interfaces.
 - Running the **no** form of the command within interface Ethernet OAM configuration removes the override setting of the command at the interface and uses the profile setting.
- The **show ethernet oam configuration** command output will show either Y or N and (Overridden) depending on whether the interface is driving the configuration of the feature, or the profile is driving it. “Overridden” means that the configuration is being applied by the interface.

Task ID

Task ID	Operations
ethernet-services	read, write

Examples

The following example shows how to enable detection of a local, unidirectional link fault and send notification of that fault to an Ethernet OAM peer within an Ethernet OAM profile that can be attached to multiple interfaces:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# ethernet oam profile Profile_1
RP/0/RSP0/CPU0:router(config-eoam)# uni-directional link-fault detection
```

The same profile can be applied to multiple interfaces. The following example shows how to attach the Ethernet OAM profile to an interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# profile Profile_1
RP/0/RSP0/CPU0:router(config-if-eoam)# commit
```

Consider that you have decided that you do not want unidirectional link-fault detection enabled at this particular interface, but you do want to keep the other attached profile settings. The following example shows how to disable link-fault detection at this interface only:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# uni-directional link-fault detection disable
RP/0/RSP0/CPU0:router(config-if-eoam)# commit
```

Related Commands

Command	Description
action uni-directional link-fault , on page 273	Configures what action is taken on an interface when a link-fault notification is received from the remote Ethernet OAM peer.

Command	Description
ethernet oam profile, on page 334	Creates an EOAM profile and enters EOAM configuration mode.
ethernet oam, on page 331	Enables Ethernet Link OAM, with default values, on an interface and enter interface Ethernet OAM configuration mode.
profile (EOAM), on page 404	Attaches an Ethernet OAM profile to an interface.



Frame Relay Commands on the Cisco ASR 9000 Series Router

This module provides CLI commands for configuring Frame Relay services on the Cisco ASR 9000 Series Router.

- [clear frame-relay multilink interface, page 515](#)
- [clear frame-relay lmi interface, page 517](#)
- [encap \(PVC\), page 519](#)
- [encapsulation frame-relay, page 521](#)
- [frame-relay intf-type, page 523](#)
- [frame-relay lmi disable, page 525](#)
- [frame-relay lmi-n391dte, page 526](#)
- [frame-relay lmi-n392dce, page 528](#)
- [frame-relay lmi-n392dte, page 530](#)
- [frame-relay lmi-n393dce, page 531](#)
- [frame-relay lmi-n393dte, page 533](#)
- [frame-relay lmi-t391dte, page 534](#)
- [frame-relay lmi-t392dce, page 536](#)
- [frame-relay lmi-type, page 538](#)
- [frame-relay multilink ack, page 540](#)
- [frame-relay multilink bandwidth-class, page 542](#)
- [frame-relay multilink bid, page 544](#)
- [frame-relay multilink hello, page 546](#)
- [frame-relay multilink lid, page 548](#)
- [frame-relay multilink retry, page 550](#)
- [pvc \(frame relay\), page 552](#)

- [show frame-relay lmi](#), page 554
- [show frame-relay lmi-info](#), page 557
- [show frame-relay multilink](#), page 560
- [show frame-relay pvc](#), page 572
- [show frame-relay vcm-info interface](#), page 576
- [show interfaces \(frame relay\)](#), page 578
- [snmp-server traps frame-relay pvc](#), page 583

clear frame-relay multilink interface

To clear the multilink frame-relay (MFR) statistics for the given interface or location, use the **clear frame-relay multilink interface** command in EXEC mode.

clear frame-relay multilink interface {*type interface-path-id*} **all** [**location node id**]

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	Clears MFR statistics for all interfaces
location node-id	(Optional) Clears MFR statistics for all interfaces at the location specified by <i>node-id</i> . The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
fr	execute

Examples

The following example shows how to use the **clear frame-relay multilink interface** command to clear the multilink frame-relay protocol and internal statistics on an interface:

```
RP/0/RSP0/CPU0:router# clear frame-relay multilink interface serial 0/1/0/0
```

Related Commands

Command	Description
show frame-relay lmi-info, on page 557	Displays Frame Relay information for the LMI.
show interfaces multilink, on page 778	Displays information about a multilink interface.

clear frame-relay lmi interface

To clear the LMI statistics for the given interface or location, use the **clear frame-relay lmi** command in EXEC mode.

clear frame-relay lmi interface {*type interface-path-id*| **all** [**location node id**]}

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	Clears LMI statistics for all interfaces
location node-id	(Optional) Clears LMI statistics for all interfaces at the location specified by <i>node-id</i> . The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
fr	execute

Examples

The following example shows how to use the **clear frame-relay lmi** command to clear the LMI counters on an interface:

```
RP/0/RSP0/CPU0:router# clear frame-relay lmi interface pos 0/1/0/0
```

Related Commands

Command	Description
show frame-relay lmi , on page 554	Displays Frame Relay statistics for the LMI.

encap (PVC)

To change the encapsulation for a Frame Relay permanent virtual circuit (PVC), use the **encap** command in Frame Relay PVC configuration mode. To restore default encapsulation from the Frame Relay main interface, use the **no** form of this command.

encap {**cisco**|**ietf**}

no encap {**cisco**|**ietf**}

Syntax Description

cisco	(Optional) Uses Cisco encapsulation, which is a 4-byte header, with 2 bytes to identify the data-link connection identifier (DLCI) and 2 bytes to identify the packet type.
ietf	(Optional) Sets the encapsulation method to comply with the Internet Engineering Task Force (IETF) standard (RFC 1490). Use this keyword when connecting to equipment that belongs to a vendor other than Cisco across a Frame Relay network.

Command Default

The default encapsulation keyword is Cisco.

When this command is not configured, encapsulation is inherited from the Frame Relay main interface.

Command Modes

Frame Relay PVC configuration (config-fr-vc)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

Use the **encap** command to configure encapsulation for a Frame Relay PVC. If this command is not configured, encapsulation is inherited from the Frame Relay subinterface.

This command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to set encapsulation on PVC data-link connection identifier (DLCI) 16 for Packet-over-SONET/SDH (POS) subinterface 0/4/0/1.1:

```
RP/0/RSP0/CPU0:router(config)# interface POS 0/4/0/1.1 l2transport
RP/0/RSP0/CPU0:router(config-subif)# pvc 16
RP/0/RSP0/CPU0:router(config-fr-vc)# encap ietf
```

Related Commands

Command	Description
encapsulation frame-relay, on page 521	Enables Frame Relay encapsulation.

encapsulation frame-relay

To enable Frame Relay encapsulation, use the **encapsulation frame-relay** command in interface configuration mode. To disable Frame Relay encapsulation, use the **no** form of this command.

encapsulation frame-relay [ietf]

no encapsulation frame-relay [ietf]

Syntax Description

ietf	(Optional) Sets the encapsulation method to comply with the Internet Engineering Task Force (IETF) standard (RFC 1490). Use this keyword when connecting to equipment from another vendor across a Frame Relay network.

Command Default

The default encapsulation method is Cisco.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **encapsulation frame-relay** command to connect an interface to a Frame Relay network. When this command is configured, outgoing packets are encapsulated with a Frame Relay header and Frame Relay headers are removed from incoming packets to the interface.

A Cisco or IETF encapsulation method controls the Network Layer Protocol Identifier (NLPID) that is added to outgoing packets on the interface. The encapsulation method enabled for an outgoing packet can be changed for each data-link connection identifier (DLCI) per subinterface by using the **encap (PVC)** command in Frame Relay PVC configuration mode.

When the **encapsulation frame-relay** command is configured, LMI is enabled by default. To disable LMI use the **frame-relay lmi disable** command.

The following restrictions apply to the **encapsulation frame-relay** command upon configuration or removal of the command on an interface:

- When configuring this command, Layer 3 and Layer 2 configurations are not allowed on the interface.
- Before removing this command, all Frame Relay subinterfaces and LMI configuration should be deleted from the interface.

The **encapsulation frame-relay** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
interface	read, write
fr	read, write

Examples

The following example shows Frame Relay encapsulation configured on Packet-over-SONET/SDH (POS) 0/3/0/1:

```
RP/0/RSP0/CPU0:router(config)# interface POS 0/3/0/1
RP/0/RSP0/CPU0:router(config-if)# encapsulation frame-relay ietf
```

Related Commands

Command	Description
encap (PVC), on page 519	Changes the encapsulation for a Frame Relay PVC.
frame-relay lmi disable, on page 525	Disables the Frame Relay LMI.

frame-relay intf-type

To configure the interface type of the User-Network Interface (UNI), use the **frame-relay intf-type** command in interface configuration mode. To change the configuration, use the **no** form of this command.

frame-relay intf-type {dce| dte| nni}

no frame-relay intf-type {dce| dte| nni}

Syntax Description

dce	Router functions as a switch connected to a router.
dte	Router is connected to a Frame Relay network.
nni	Router is connected to a NNI signaling interface.

Command Default

DTE

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.
Release 4.2.1	The nni keyword was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **frame-relay intf-type** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to configure a DCE switch type on the interface:

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/4/0/0
```

frame-relay intf-type

```
RP/0/RSP0/CPU0:router(config-if)# frame-relay intf-type dce
```

frame-relay lmi disable

To disable the Frame Relay Local Management Interface (LMI), use the **frame-relay lmi disable** command in interface configuration mode. To reenble LMI, use the **no** form of this command.

frame-relay lmi disable
no frame-relay lmi disable

Syntax Description This command has no keywords or arguments.

Command Default LMI is enabled.

Command Modes Interface configuration (config-if)

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **frame-relay lmi disable** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID	Task ID	Operations
	fr	read, write

Examples The following example shows how to configure a DCE switch type on the interface:

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/4/0/0
RP/0/RSP0/CPU0:router(config-if)# frame-relay lmi disable
```

frame-relay lmi-n391dte

To set the full status polling interval, use the **frame-relay lmi-n391dte** command in interface configuration mode. To restore the default interval value, use the **no** form of this command.

frame-relay lmi-n391dte *polling-cycles*

no frame-relay lmi-n391dte *polling-cycles*

Syntax Description

<i>polling-cycles</i>	Number of Line Integrity Verification (LIV) exchanges performed before requesting a full status message. Range is from 1 to 255. The default is 6.

Command Default

The full status polling interval is 6.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **frame-relay lmi-n391dte** command to set the full status message polling interval. This command is relevant only when the interface type is data terminal equipment (DTE).

Two message types are supported: status inquiry and status. Status inquiry messages are sent from DTE to DCE. Status messages are sent from DCE to DTE (in response to a status inquiry). The Status (Full) and LIV report types are contained within these messages, and typically there is one status transaction for every five LIV transactions.

This command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows that one out of every four status inquiries generated requests a full status response from the DCE on the interface:

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frame-relay intf-type dte
RP/0/RSP0/CPU0:router(config-if)# frame-relay lmi-n391dte 4
```

frame-relay lmi-n392dce

To set the error threshold on a DCE interface, use the **frame-relay lmi-n392dce** command in interface configuration mode. To restore the default setting, use the **no** form of this command.

frame-relay lmi-n392dce *threshold*

no frame-relay lmi-n392dce *threshold*

Syntax Description

<i>threshold</i>	Error threshold value. Range is from 1 to 10. Default is 3.

Command Default

The DCE error threshold is 3.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

N392 errors must occur within the number defined by the N393 event count for the link to be declared down. Therefore, the threshold value for this command must be less than the count value defined in the **frame-relay lmi-n393dce** command.

The **frame-relay lmi-n392dce** command is relevant only when the interface type is data communication equipment (DCE).

This command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to set the Local Management Interface (LMI) failure threshold to 4. The router acts as a Frame Relay DCE switch:

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frame-relay intf-type dce
```

```
RP/0/RSP0/CPU0:router(config-if)# frame-relay lmi-n392dce 4
```

Related Commands

Command	Description
frame-relay lmi-n393dce, on page 531	Sets the DCE monitored events count.

frame-relay lmi-n392dte

To set the error threshold on a DTE interface, use the **frame-relay lmi-n392dte** command in interface configuration mode. To restore the default setting, use the **no** form of this command.

frame-relay lmi-n392dte *threshold*

no frame-relay lmi-n392dte *threshold*

Syntax Description

<i>threshold</i>	Error threshold value. Range is from 1 to 10. The default is 3.

Command Default

The DTE error threshold is 3.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **frame-relay lmi-n392dte** command is relevant only when the interface type is data terminal equipment (DTE).

This command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to set the Local Management Interface (LMI) failure threshold to 4. The router acts as a Frame Relay DTE switch.

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frame-relay intf-type dte
RP/0/RSP0/CPU0:router(config-if)# frame-relay lmi-n392dte 4
```


frame-relay lmi-n393dce

To set the DCE monitored events count, use the **frame-relay lmi-n393dce** command in interface configuration mode. To restore the default setting, use the **no** form of this command.

frame-relay lmi-n393dce *events*

no frame-relay lmi-n393dce *events*

Syntax Description

<i>events</i>	Monitored events count. Range is from 1 to 10. The default is 4.

Command Default

The number of DCE monitored events is 4.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **frame-relay lmi-n393dce** command is used along with the **frame-relay lmi-n392dce** command to define the condition that causes the link to be declared down.

N392 errors must occur within the *events* argument count in order for the link to be declared down. Therefore, the events value defined in this command must be greater than the threshold value defined in the **frame-relay lmi-n392 dce** command.

The **frame-relay lmi-n393dce** command is relevant only when the interface type is data communication equipment (DCE).

This **frame-relay lmi-n393dce** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to set the Local Management Interface (LMI) monitored events count to 5.

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frame-relay intf-type dce
RP/0/RSP0/CPU0:router(config-if)# frame-relay lmi-n393dce 5
```

Related Commands

Command	Description
frame-relay lmi-n392dce , on page 528	Sets the error threshold on a DCE interface.

frame-relay lmi-n393dte

To set the monitored event count on a DTE interface, use the **frame-relay lmi-n393dte** command in interface configuration mode. To restore the default setting, use the **no** form of this command.

frame-relay lmi-n393dte *events*

no frame-relay lmi-n393dte *events*

Syntax Description

<i>events</i>	Monitored events count. Range is from 1 to 10. The default is 4.

Command Default

The number of DTE monitored events is 4.

Command Modes

Interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **frame-relay lmi-n393dte** command is relevant only when the interface type is data terminal equipment (DTE).

This **frame-relay lmi-n393dte** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to set the Local Management Interface (LMI) monitored events count to 5.

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frame-relay intf-type dte
RP/0/RSP0/CPU0:router(config-if)# frame-relay lmi-n393dte 5
```

frame-relay lmi-t391dte

To set the Local Management Interface (LMI) polling interval, use the **frame-relay lmi-t391dte** command in interface configuration mode. To restore the default interval value, use the **no** form of this command.

frame-relay lmi-t391dte *seconds*

no frame-relay lmi-t391dte *seconds*

Syntax Description

<i>seconds</i>	Polling interval between each status inquiry from the DTE end, in seconds. Range is from 5 to 30. The default is 10.

Command Default

The LMI polling interval is 10 seconds.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This **frame-relay lmi-t391dte** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

The *seconds* value defined in this command must be less than the polling verification timer defined in the **frame-relay lmi-t392 dce** command.

The **frame-relay lmi-t391dte** command is relevant only when the interface type is data terminal equipment (DCE).

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to set the LMI polling timer interval to 15 seconds:

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frame-relay intf-type dte
```

```
RP/0/RSP0/CPU0:router(config-if)# frame-relay lmi-t391dte 15
```

frame-relay lmi-t392dce

To set the Local Management Interface (LMI) polling verification timer on the DCE, use the **frame-relay lmi-t392dce** command in interface configuration mode. To restore the default setting, use the **no** form of this command.

frame-relay lmi-t392dce *seconds*

no frame-relay lmi-t392dce *seconds*

Syntax Description

<i>seconds</i>	Polling verification timer, in seconds. The range is from 5 to 30. The default is 15.

Command Default

The LMI polling verification timer is 15 seconds.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **frame-relay lmi-t392dce** command is used along with the **frame-relay lmi-t391dte** command to define the condition that causes the link to be declared down.

The *seconds* value defined in this command must be greater than the polling verification timer defined in the **frame-relay lmi-t391 dte** command.

This **frame-relay lmi-n392dce** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to set the Local Management Interface (LMI) polling timer interval to 30 seconds:

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frame-relay intf-type dce
RP/0/RSP0/CPU0:router(config-if)# frame-relay lmi-t392dce 30
```

frame-relay lmi-type

To select the Local Management Interface (LMI) type, use the **frame-relay lmi-type** command in interface configuration mode. To restore the default setting, use the **no** form of this command.

frame-relay lmi-type [**ansi**| **cisco**| **q933a**]

no frame-relay lmi-type [**ansi**| **cisco**| **q933a**]

Syntax Description

ansi	(Optional) Uses LMI as defined by ANSI T1.617a-1994 Annex D.
cisco	(Optional) Uses LMI as defined by Cisco (not standard).
q933a	(Optional) Uses LMI as defined by ITU-T Q.933 (02/2003) Annex A.

Command Default

The default is **cisco**.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the DTE is not explicitly configured or the **no** form is not used after explicit configuration, then the DTE automatically senses the LMI type of the DCE and use that type of LMI.

This **frame-relay lmi-type** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to set the Local Management Interface (LMI) type to Q.933, Annex A:

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/1/0/1
```



```
RP/0/RSP0/CPU0:router(config-if)# frame-relay lmi-type q933a
```

frame-relay multilink ack

To configure the MFR acknowledge timeout value for a Frame Relay multilink bundle link, use the **frame-relay multilink ack** command in interface configuration mode. To revert to the default settings, use the **no** form of this command.

frame-relay multilink ack *ack-timeout*
no frame-relay multilink ack

Syntax Description	<i>ack-timeout</i>	Ack timeout value, in seconds. The range is from 1 to 10.

Command Default	The default MFR acknowledge timeout value is 4 seconds.

Command Modes	Interface configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note The **frame-relay multilink ack** command is supported only on serial interfaces. The **frame-relay multilink ack** command is not supported on Packet-over-SONET/SDH (POS) or multilink frame relay interfaces.

The **frame-relay multilink ack** command can be configured only on bundle link interfaces that have been associated with a bundle using the **encapsulation frame-relay mfr** command.



Note You can enter the **frame-relay multilink ack** command at any time without affecting the current state of the interface; however, the configured timeout value does not go into effect until the interface has gone from the down state to the up state. One way to bring the interface down and back up again is by using the **shutdown** and **no shutdown** commands in interface configuration mode.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to configure the MFR acknowledge timeout value as 2 seconds. for the serial interface 0/3/1/0:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/3/1/0
RP/0/RSP0/CPU0:router(config-if)# frame-relay multilink ack 2
```

Related Commands

Command	Description
encapsulation frame-relay, on page 521	Enables Frame Relay encapsulation.
frame-relay multilink bid, on page 544	Assigns a BID name to a multilink Frame Relay bundle.
show frame-relay lmi-info, on page 557	Displays frame relay information for the LMI.
shutdown (interface)	Disables an interface.

frame-relay multilink bandwidth-class

To configure the bandwidth class for a Frame Relay multilink bundle interface, use the **frame-relay multilink bid bandwidth-class** command in interface configuration mode. To restore the default setting, use the **no** form of this command.

```
frame-relay multilink bandwidth-class {a| b| c threshold}
no frame-relay multilink bandwidth-class
```

Syntax Description		
a		Configures bandwidth class A. When one or more member links are up, the bundle interface is up. When all the member links are down, the bundle interface is down.
b		Configures bandwidth class B. When all the member links are up, the bundle interface is up. When any member link is down, the bundle interface is down.
c		Configures bandwidth class C. The bundle link <i>threshold</i> must be configured.
<i>threshold</i>		Minimum number of links that must be up for the bundle interface to be up. The range is 1 to 255.

Command Default The default is a (Bandwidth Class A).

Command Modes Interface configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Bandwidth class is configurable only under Frame Relay Forum 16.1 (FRF 16.1).

 **Note**

The **frame-relay multilink bandwidth-class** command is supported only on multilink frame relay interfaces. The **frame-relay multilink bandwidth-class** command is not supported on Packet-over-SONET/SDH (POS) or serial interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to set a multilink frame relay interface to bandwidth Class C with a threshold of 3:

```
RP/0/RSP0/CPU0:router(config)# interface Multilink 0/3/1/0/100
RP/0/RSP0/CPU0:router(config-if)# frame-relay multilink bandwidth-class c 3
```

Related Commands

Command	Description
show frame-relay lmi-info, on page 557	Displays Frame Relay information for the LMI.

frame-relay multilink bid

To create a name for a Frame Relay multilink bundle interface, use the **frame-relay multilink bid** command in interface configuration mode. To restore the default setting, use the **no** form of this command.

frame-relay multilink bid bundle-id-name

no frame-relay multilink bid

Syntax Description

bundle-id-name Name for the Frame Relay multilink bundle. The bundle identifier (**bid**) name identifies the bundle interface at both endpoints. The **bid** name is exchanged in the information elements to ensure consistent link assignments. The **bid** name can be up to 50 characters including the null termination character. The **bid** name is configured at the bundle interface level and is applied to each member link.

Command Default

By default, the interface name, for example, Multilink 0/4/1/0/1, is used as the bundle identifier.

Command Modes

Interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

The **frame-relay multilink bid** command is supported only on multilink frame relay interfaces. The **frame-relay multilink bid** command is not supported on Packet-over-SONET/SDH (POS) or serial interfaces.

Regardless of whether you create a bundle identifier name using the **frame-relay multilink bid** command or whether the system uses the default name for the interface, each bundle should have a unique name.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to create a Frame Relay multilink interface bundle identifier name:

```
RP/0/RSP0/CPU0:router(config)# interface Multilink 0/3/1/0/100  
RP/0/RSP0/CPU0:router(config-if)# frame-relay multilink bid MFRBundle
```

Related Commands

Command	Description
show frame-relay lmi-info , on page 557	Displays Frame Relay information for the LMI.

frame-relay multilink hello

To configure the hello interval used by a Frame Relay multilink bundle link, use the **frame-relay multilink hello** command in interface configuration mode. To reset the name to the default, use the **no** form of this command.

```
frame-relay multilink hello hello-interval
no frame-relay multilink hello
```

Syntax Description	<i>hello-interval</i>	Hello interval for the Frame Relay multilink bundle link, in seconds. The range is from 1 to 180.

Command Default	The default hello interval is 10 seconds.

Command Modes	Interface configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

The **frame-relay multilink hello** command is supported only on serial interfaces. The **frame-relay multilink hello** command is not supported on Packet-over-SONET/SDH (POS) or multilink frame relay interfaces.

The **frame-relay multilink hello** command can be configured only on bundle link interfaces that have been associated with a bundle using the **encapsulation frame-relay mfr** command.



Note

You can enter the **frame-relay multilink hello** command at any time without affecting the current state of the interface; however, the configured hello interval value does not go into effect until the interface has gone from the down state to the up state. One way to bring the interface down and back up again is by using the **shutdown** and **no shutdown** commands in interface configuration mode.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to configure the hello interval value as 10 seconds. for the serial interface 0/3/1/0:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/3/1/0
RP/0/RSP0/CPU0:router(config-if)# frame-relay multilink hello 10
```

Related Commands

Command	Description
encapsulation frame-relay, on page 521	Enables Frame Relay encapsulation.
frame-relay multilink bid, on page 544	Assigns a BID name to a multilink Frame Relay bundle.
show frame-relay lmi-info, on page 557	Displays frame relay information for the LMI.
shutdown (interface)	Disables an interface.

frame-relay multilink lid

To create a name for a Frame Relay multilink bundle link, use the **frame-relay multilink lid** command in interface configuration mode. To reset the name to the default, use the **no** form of this command.

```
frame-relay multilink lid link-id name
no frame-relay multilink lid
```

Syntax Description

<i>link-id name</i>	Specifies the name for the Frame Relay multilink bundle link. The link identifier (lid) name can be up to 49 characters long.

Command Default

The name of the physical interface, for example, Serial 0/3/0/0/1/2:0, is used as the lid.

Command Modes

Interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

The **frame-relay multilink lid** command is supported only on serial interfaces. The **frame-relay multilink lid** command is not supported on Packet-over-SONET/SDH (POS) or multilink frame relay interfaces.

The **frame-relay multilink lid** command can be configured only on bundle link interfaces that have been associated with a bundle using the **encapsulation frame-relay mfr** command.



Note

You can enter the **frame-relay multilink lid** command at any time without affecting the current state of the interface; however, the link identifier name does not go into effect until the interface has gone from the down state to the up state. One way to bring the interface down and back up again is by using the **shutdown** and **no shutdown** commands in interface configuration mode.

The lid name is used to identify the bundle link to peer devices and to enable the devices to identify which bundle links are associated with which bundles. The lid name can also be assigned when the bundle link is created using the **encapsulation frame-relay mfr** command with the *name* argument. If a lid name is not assigned, the default lid is the name of the physical interface.

The local and peer lid names do not have to be unique. However, regardless of whether you create a lid name using the **frame-relay multilink lid** command or the system uses the default name for the bundle link, each link within a bundle must have a unique name. If the same name is used by different links in the same bundle, the bundles will flap indefinitely.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to configure the lid name as 'BL1' for the serial interface 0/3/1/0:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/3/1/0
RP/0/RSP0/CPU0:router(config-if)# frame-relay multilink lid BL1
```

Related Commands

Command	Description
encapsulation frame-relay, on page 521	Enables Frame Relay encapsulation.
frame-relay multilink bid, on page 544	Assigns a BID name to a multilink Frame Relay bundle.
show frame-relay lmi-info, on page 557	Displays frame relay information for the LMI.
shutdown (interface)	Disables an interface.

frame-relay multilink retry

To configure the retry count for retransmissions for a Frame Relay multilink bundle link, use the **frame-relay multilink retry** command in interface configuration mode. To reset the name to the default, use the **no** form of this command.

```
frame-relay multilink retry retry-count
no frame-relay multilink retry
```

Syntax Description	<i>retry-count</i>	Retry count for retransmissions. The range is from 1 to 5.

Command Default	The default retry count for retransmissions is 2.

Command Modes	Interface configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

 **Note** The **frame-relay multilink retry** command is supported only on serial interfaces. The **frame-relay multilink retry** command is not supported on Packet-over-SONET/SDH (POS) or multilink frame relay interfaces.

The **frame-relay multilink retry** command can be configured only on bundle link interfaces that have been associated with a bundle using the **encapsulation frame-relay mfr** command.

 **Note** You can enter the **frame-relay multilink retry** command at any time without affecting the current state of the interface; however, the configured retry count value does not go into effect until the interface has gone from the down state to the up state. One way to bring the interface down and back up again is by using the **shutdown** and **no shutdown** commands in interface configuration mode.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to configure the retry count for retransmissions as 2 on the serial interface 0/3/1/0:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/3/1/0
RP/0/RSP0/CPU0:router(config-if)# frame-relay multilink retry 2
```

Related Commands

Command	Description
encapsulation frame-relay, on page 521	Enables Frame Relay encapsulation.
frame-relay multilink bid, on page 544	Assigns a BID name to a multilink Frame Relay bundle.
show frame-relay lmi-info, on page 557	Displays frame relay information for the LMI.
shutdown (interface)	Disables an interface.

pvc (frame relay)

To associate a data-link connection identifier (DLCI) number to a permanent virtual circuit (PVC), and to enter Frame Relay PVC configuration mode, use the **pvc** command in subinterface configuration mode. To delete the PVC, use the **no** form of this command.

pvc *dlci-number*

no pvc *dlci-number*

Syntax Description

<i>dlci-number</i>	DLCI number used to identify the PVC. The range is from 16 to 1007.

Command Default

No PVC is defined.

Command Modes

Subinterface configuration (config-subif)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Commands available in Frame Relay PVC configuration mode are:

```
RP/0/RSP0/CPU0:router(config-fr-vc)# ?
```

```
commit    Commit the configuration changes to running
describe  Describe a command without taking real actions
do        Run an exec command
encap     Set the Encapsulation of this PVC
exit      Exit from this submode
no        Negate a command or set its defaults
show      Show contents of configuration
```

The **pvc** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to create a PVC with DLCI 16:

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/4/0/0.1 12transport  
RP/0/RSP0/CPU0:router(config-subif)# pvc 16  
RP/0/RSP0/CPU0:router(config-fr-vc)#
```

show frame-relay lmi

To display Frame Relay statistics for the Local Management Interface (LMI), use the **show frame-relay lmi** EXEC command.

show frame-relay lmi [**interface** *type interface-path-id*] **location** *node-id*]

Syntax Description

interface	(Optional) Interface for which information is to be displayed. Use the <i>interface-path-id</i> argument to specify the interface.
<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>node-id</i>	(Optional) Displays information about all interfaces on the specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

Frame Relay LMI statistics are displayed for all interfaces enabled for LMI.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show frame-relay lmi** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

This command is used to check the status enquiry and status message between DCE and DTE.

Task ID

Task ID	Operations
fr	read

Examples

The following example shows the output from the **show frame-relay lmi** command:

```
RP/0/RSP0/CPU0:router# show frame-relay lmi
```

```
LMI Statistics for interface POS0/1/0/0/ (Frame Relay DCE) LMI TYPE = ANSI
  Invalid Unnumbered Info 0          Invalid Prot Disc 0
  Invalid Dummy Call Ref 0          Invalid Msg Type 0
  Invalid Status Message 0          Invalid Lock Shift 9
  Invalid Information ID 0           Invalid Report IE Len 0
  Invalid Report Request 0          Invalid Keep IE Len 0
  Num Status Enq. Rcvd 9444         Num Status Msgs Sent 9444
  Num Full Status Sent 1578         Num St Enq. Timeouts 41
  Num Link Timeouts 7

LMI Statistics for interface POS0/1/0/1/ (Frame Relay DCE) LMI TYPE = CISCO
  Invalid Unnumbered Info 0          Invalid Prot Disc 0
  Invalid Dummy Call Ref 0          Invalid Msg Type 0
  Invalid Status Message 0          Invalid Lock Shift 0
  Invalid Information ID 0           Invalid Report IE Len 0
  Invalid Report Request 0          Invalid Keep IE Len 0
  Num Status Enq. Rcvd 9481         Num Status Msgs Sent 9481
  Num Full Status Sent 1588         Num St Enq. Timeouts 16
  Num Link Timeouts 4
```

Table 31: show frame-relay lmi Field Descriptions

Field	Description
LMI Statistics	Signaling or LMI specification: CISCO, ANSI, or CCITT. Note CCITT is LMI as defined by ITU-T Q.933 (02/2003) Annex A.
Invalid Unnumbered Info	Number of received LMI messages with invalid unnumbered information field.
Invalid Dummy Call	Number of received LMI messages with invalid dummy calls.
Invalid Status Message	Number of received LMI messages with invalid status message.
Invalid Information ID	Number of received LMI messages with invalid information identifier.
Invalid Report Request	Number of received LMI messages with invalid report request.

Field	Description
Num Status Enq. Rcvd	Number of LMI status enquiry messages received.
Num Link Timeouts	Number of link timeouts.
Invalid Prot Disc	Number of received LMI messages with invalid protocol discriminator.
Invalid Msg Type	Number of received LMI messages with invalid message type.
Invalid Lock Shift	Number of received LMI messages with invalid lock shift type.
Invalid Report IE Len	Number of received LMI messages with invalid report IE Length.
Invalid Keep IE Len	Number of received LMI messages with invalid report request.
Num Status Msgs Sent	Number of LMI status enquiry messages sent.
Num St Enq. Timeouts	Number of times the status enquiry message was not received within the T392 DCE timer value.

show frame-relay lmi-info

To display Frame Relay information for the Local Management Interface (LMI), use the **show frame-relay lmi-info** command in EXEC mode.

show frame-relay lmi-info [**interface** *type interface-path-id*] **location** *node-id*] [**detail**]

Syntax Description

interface	(Optional) Displays information on the the interface specified by the <i>type interface-path-id</i> argument.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>node-id</i>	(Optional) Displays information about all interfaces on the specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
detail	(Optional) Displays managed delci list.

Command Default

Displays LMI information for all Frame Relay interfaces enabled for LMI.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show frame-relay lmi-info** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

This command is used to check the status enquiry and status message between DCE and DTE.

Task ID

Task ID	Operations
fr	read

Examples

The following example shows sample output for the **show frame-relay lmi-info** command:

```
RP/0/RSP0/CPU0:router# show frame-relay lmi-info

LMI IDB Info for interface Multilink0/3/0/0/2
ifhandle: 0x6176840
Interface type: DTE
Interface state: UP
Line Protocol: UP
LMI type (cnf/oper): AUTO/CISCO
LMI type autosense: OFF
Interface MTU: 1504
----- DTE -----
T391: 10s
N391: (cnf/oper): 6/5
N392: (cnf/oper): 3/0
N393: 4
My seq#: 83
My seq# seen: 83
Your seq# seen: 82
----- DCE -----
T392: 15s
N392: (cnf/oper): 3/0
N393: 4
My seq#: 0
My seq# seen: 0
Your seq# seen: 0
LMI IDB Info for interface Multilink0/3/0/0/1
ifhandle: 0x6186240
Interface type: DTE
Interface state: UP
Line Protocol: UP
LMI type (cnf/oper): AUTO/CISCO
LMI type autosense: OFF
Interface MTU: 1504
----- DTE -----
T391: 10s
N391: (cnf/oper): 6/5
N392: (cnf/oper): 3/0
N393: 4
My seq#: 83
My seq# seen: 83
Your seq# seen: 82
----- DCE -----
T392: 15s
N392: (cnf/oper): 3/0
N393: 4
My seq#: 0
My seq# seen: 0
Your seq# seen: 0
```

Table 32: show frame-relay lmi-info Field Descriptions

Field	Description
DTE	

Field	Description
T391	Local Management Interface polling interval
N391	Full status polling interval
N392	Error threshold value
N393	DTE monitored events count
DCE	
T392	Local Management Interface polling verification timer
N392	Error threshold value
N393	DCE monitored events count

show frame-relay multilink

To display the multilink Frame-Relay (MFR) information about the given interface along with MFR protocol and internal statistics, use the **show frame-relay multilink interface** command in EXEC mode.

show frame-relay multilink [**detail** [**location** *node id*]] **interface** *type interface-path-id* [**detail**| **verbose**]| **location** *node id*| **verbose** [**location** *node id*]]

Syntax Description

detail	(Optional) Displays Interface Descriptor Block (IDB) information and Feasible Successor Metrics (FSM) statistics.
location <i>node-id</i>	(Optional) Displays information about all interfaces on the specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
interface	(Optional) Interface for which you want to display information.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
verbose	(Optional) Displays IDB information, FSM statistics and internal statistics.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
fr	read

Examples

The following example shows how to display the multilink Frame-Relay information for all interfaces:

```
RP/0/RSP0/CPU0:router# show frame-relay multilink

Bundle interface: Multilink0/3/0/0/1, ifhandle 0x060322c0
  Member Links: 2 active, 0 inactive
  State = Up,   BW Class = A

  Member Links:
    Serial0/3/0/0/1/2:0,   HW state = Up, link state = Up
    Serial0/3/0/0/1/1:0,   HW state = Up, link state = Up

Bundle interface: Multilink0/3/0/0/2, ifhandle 0x06032280
  Member Links: 2 active, 0 inactive
  State = Up,   BW Class = A

  Member Links:
    Serial0/3/0/0/1/4:0,   HW state = Up, link state = Up
    Serial0/3/0/0/1/3:0,   HW state = Up, link state = Up

Member interface: Serial0/3/0/0/1/1:0, ifhandle 0x060323c0
  HW state = Up, link state = Up
  Member of bundle interface Multilink0/3/0/0/1 with ifhandle 0x060322c0

Member interface: Serial0/3/0/0/1/2:0, ifhandle 0x06032380
  HW state = Up, link state = Up
  Member of bundle interface Multilink0/3/0/0/1 with ifhandle 0x060322c0

Member interface: Serial0/3/0/0/1/3:0, ifhandle 0x06032340
  HW state = Up, link state = Up
  Member of bundle interface Multilink0/3/0/0/2 with ifhandle 0x06032280

Member interface: Serial0/3/0/0/1/4:0, ifhandle 0x06032300
  HW state = Up, link state = Up
  Member of bundle interface Multilink0/3/0/0/2 with ifhandle 0x06032280
```

The following example shows how to display detailed multilink Frame-Relay information for all interfaces, including IDB information and FSM statistics:

```
RP/0/RSP0/CPU0:router# show frame-relay multilink detail

Bundle interface: Multilink0/3/0/0/1, ifhandle 0x060322c0
  Member Links: 2 active, 0 inactive
  State = Up,   BW Class = A
    nodeid:      0x838
    group:       1
    my_bid:      Multilink0/3/0/0/1
    peer_bid:    Multilink0/6/0/0/1
    magic:       0x696d8a95
    flags:       0x0
    im_state:    3   [Up]
    fsm_req_state: 3   [Up]
    is_owned_resource: Y
    is_zombie:   N
```

show frame-relay multilink

```

active_mbr_count: 2
cfg_bid:
bw_class: 1
bw_class_threshold: 0

```

===== Member Links =====

```

Serial0/3/0/0/1/2:0, HW state = Up, link state = Up
my_lid: Serial0/3/0/0/1/2:0
peer_lid: Serial0/6/0/0/1/2:0
flags: 0x0
fsm_state: 3 [Up]
im_state: 3 [Up]
fsm_req_state: 3 [Up]
cause: 0 [None]
retry_count: 0
in_loopback: No
bc_init_rcvd: Yes
bc_owned_res: Yes
cc_owned_res: Yes
is_parent_up: Yes
Last Packet Tx: 00:00:09 ago
Round trip: 00:00.000 (0 secs 999997 nsecs)
Min Round trip: 00:00.000 (0 secs 999997 nsecs)
Max Round trip: 00:00.003 (0 secs 3999988 nsecs)
cfg_lid:
mfr_t_hello: 10
mfr_t_ack: 4
mfr_retry_max: 2

```

```

----- Member Link Statistics -----
Add Link Tx: 3 Add Link Rx: 2
Add Link Ack Tx: 2 Add Link Ack Rx: 1
Add Link Rej Tx: 0 Add Link Rej Rx: 0
Remove Link Tx: 0 Remove Link Rx: 0
Remove Link Ack Tx: 0 Remove Link Ack Rx: 0
Hello Tx: 6235 Hello Rx: 6236
Hello Ack Tx: 6236 Hello Ack Rx: 6235
Loopback Detected: 0 Invalid Pkts Rx: 0
Bundle Mismatch: 0 Expired Ack Rx: 0
Hello Timer expiry: 6236 Ack Timer expiry: 1

```

```

Serial0/3/0/0/1/1:0, HW state = Up, link state = Up
my_lid: Serial0/3/0/0/1/1:0
peer_lid: Serial0/6/0/0/1/1:0
flags: 0x0
fsm_state: 3 [Up]
im_state: 3 [Up]
fsm_req_state: 3 [Up]
cause: 0 [None]
retry_count: 0
in_loopback: No
bc_init_rcvd: Yes
bc_owned_res: Yes
cc_owned_res: Yes
is_parent_up: Yes
Last Packet Tx: 00:00:01 ago
Round trip: 00:00.000 (0 secs 999997 nsecs)
Min Round trip: 00:00.000 (0 secs 999997 nsecs)
Max Round trip: 00:00.004 (0 secs 4999985 nsecs)
cfg_lid:
mfr_t_hello: 10
mfr_t_ack: 4
mfr_retry_max: 2

```

```

----- Member Link Statistics -----
Add Link Tx: 3 Add Link Rx: 2
Add Link Ack Tx: 2 Add Link Ack Rx: 1
Add Link Rej Tx: 0 Add Link Rej Rx: 0
Remove Link Tx: 0 Remove Link Rx: 0
Remove Link Ack Tx: 0 Remove Link Ack Rx: 0
Hello Tx: 6234 Hello Rx: 6237
Hello Ack Tx: 6237 Hello Ack Rx: 6234
Loopback Detected: 0 Invalid Pkts Rx: 0

```



```

Bundle Mismatch:          0      Expired Ack Rx:          0
Hello Timer expiry:       6235   Ack Timer expiry:       1

```

```

Bundle interface: Multilink0/3/0/0/2, ifhandle 0x06032280
Member Links: 2 active, 0 inactive
State = Up,    BW Class = A
  nodeid:          0x838
  group:           2
  my_bid:          Multilink0/3/0/0/2
  peer_bid:        Multilink0/6/0/0/2
  magic:           0x303c008f
  flags:           0x0
  im_state:        3   [Up]
  fsm_req_state:   3   [Up]
  is_owned_resource: Y
  is_zombie:       N
  active_mbr_count: 2
  cfg_bid:         0
  bw_class:        1
  bw_class_threshold: 0

```

```

===== Member Links =====

```

```

Serial0/3/0/0/1/4:0,    HW state = Up, link state = Up
  my_lid:          Serial0/3/0/0/1/4:0
  peer_lid:        Serial0/6/0/0/1/4:0
  flags:           0x0
  fsm_state:       3   [Up]
  im_state:        3   [Up]
  fsm_req_state:   3   [Up]
  cause:           0   [None]
  retry_count:     0
  in_loopback:     No
  bc_init_rcvd:    Yes
  bc_owned_res:    Yes
  cc_owned_res:    Yes
  is_parent_up:    Yes
  Last Packet Tx:  00:00:00 ago
  Round trip:      00:00.000 (0 secs 999997 nsecs)
  Min Round trip:  00:00.000 (0 secs 999997 nsecs)
  Max Round trip:  00:00.004 (0 secs 4999985 nsecs)
  cfg_lid:         10
  mfr_t_hello:     4
  mfr_t_ack:       4
  mfr_retry_max:   2

```

```

----- Member Link Statistics -----
Add Link Tx:          3      Add Link Rx:          2
Add Link Ack Tx:      2      Add Link Ack Rx:        1
Add Link Rej Tx:      0      Add Link Rej Rx:        0
Remove Link Tx:       0      Remove Link Rx:        0
Remove Link Ack Tx:   0      Remove Link Ack Rx:    0
Hello Tx:             6236   Hello Rx:             6235
Hello Ack Tx:         6235   Hello Ack Rx:         6236
Loopback Detected:    0      Invalid Pkts Rx:      0
Bundle Mismatch:      0      Expired Ack Rx:      0
Hello Timer expiry:   6237   Ack Timer expiry:    1

```

```

Serial0/3/0/0/1/3:0,    HW state = Up, link state = Up
  my_lid:          Serial0/3/0/0/1/3:0
  peer_lid:        Serial0/6/0/0/1/3:0
  flags:           0x0
  fsm_state:       3   [Up]
  im_state:        3   [Up]
  fsm_req_state:   3   [Up]
  cause:           0   [None]
  retry_count:     0
  in_loopback:     No
  bc_init_rcvd:    Yes
  bc_owned_res:    Yes
  cc_owned_res:    Yes

```

show frame-relay multilink

```

is_parent_up:    Yes
Last Packet Tx:  00:00:01 ago
Round trip:      00:00.000 (0 secs 999997 nsecs)
Min Round trip:  00:00.000 (0 secs 999997 nsecs)
Max Round trip:  00:00.003 (0 secs 3999988 nsecs)
cfg_lid:
mfr_t_hello:     10
mfr_t_ack:        4
mfr_retry_max:    2
----- Member Link Statistics -----
Add Link Tx:      3      Add Link Rx:      2
Add Link Ack Tx:  2      Add Link Ack Rx:    1
Add Link Rej Tx:  0      Add Link Rej Rx:    0
Remove Link Tx:   0      Remove Link Rx:     0
Remove Link Ack Tx: 0      Remove Link Ack Rx: 0
Hello Tx:         6236   Hello Rx:         6237
Hello Ack Tx:     6237   Hello Ack Rx:     6236
Loopback Detected: 0      Invalid Pkts Rx:   0
Bundle Mismatch:  0      Expired Ack Rx:    0
Hello Timer expiry: 6237  Ack Timer expiry:  1

Member interface: Serial0/3/0/0/1/1:0, ifhandle 0x060323c0
HW state = Up, link state = Up
Member of bundle interface Multilink0/3/0/0/1 with ifhandle 0x060322c0
Local bid: Multilink0/3/0/0/1 Peer bid: Multilink0/6/0/0/1
my_lid:          Serial0/3/0/0/1/1:0
peer_lid:        Serial0/6/0/0/1/1:0
flags:           0x0
fsm_state:       3 [Up]
im_state:        3 [Up]
fsm_req_state:   3 [Up]
cause:           0 [None]
retry_count:     0
in_loopback:     No
bc_init_rcvd:    Yes
bc_owned_res:    Yes
cc_owned_res:    Yes
is_parent_up:    Yes
Last Packet Tx:  00:00:00 ago
Round trip:      00:00.000 (0 secs 999997 nsecs)
Min Round trip:  00:00.000 (0 secs 999997 nsecs)
Max Round trip:  00:00.004 (0 secs 4999985 nsecs)
cfg_lid:
mfr_t_hello:     10
mfr_t_ack:        4
mfr_retry_max:    2
----- Member Link Statistics -----
Add Link Tx:      3      Add Link Rx:      2
Add Link Ack Tx:  2      Add Link Ack Rx:    1
Add Link Rej Tx:  0      Add Link Rej Rx:    0
Remove Link Tx:   0      Remove Link Rx:     0
Remove Link Ack Tx: 0      Remove Link Ack Rx: 0
Hello Tx:         6235   Hello Rx:         6237
Hello Ack Tx:     6237   Hello Ack Rx:     6235
Loopback Detected: 0      Invalid Pkts Rx:   0
Bundle Mismatch:  0      Expired Ack Rx:    0
Hello Timer expiry: 6236  Ack Timer expiry:  1

Member interface: Serial0/3/0/0/1/2:0, ifhandle 0x06032380
HW state = Up, link state = Up
Member of bundle interface Multilink0/3/0/0/1 with ifhandle 0x060322c0
Local bid: Multilink0/3/0/0/1 Peer bid: Multilink0/6/0/0/1
my_lid:          Serial0/3/0/0/1/2:0
peer_lid:        Serial0/6/0/0/1/2:0
flags:           0x0
fsm_state:       3 [Up]
im_state:        3 [Up]
fsm_req_state:   3 [Up]
cause:           0 [None]
retry_count:     0
in_loopback:     No
bc_init_rcvd:    Yes
bc_owned_res:    Yes

```

```

cc_owned_res:    Yes
is_parent_up:    Yes
Last Packet Tx:  00:00:00 ago
Round trip:      00:00.000 (0 secs 999997 nsecs)
Min Round trip:  00:00.000 (0 secs 999997 nsecs)
Max Round trip:  00:00.003 (0 secs 3999988 nsecs)
cfg_lid:
mfr_t_hello:     10
mfr_t_ack:        4
mfr_retry_max:    2
----- Member Link Statistics -----
Add Link Tx:      3      Add Link Rx:      2
Add Link Ack Tx:  2      Add Link Ack Rx:  1
Add Link Rej Tx:  0      Add Link Rej Rx:  0
Remove Link Tx:   0      Remove Link Rx:   0
Remove Link Ack Tx: 0      Remove Link Ack Rx: 0
Hello Tx:         6236   Hello Rx:         6237
Hello Ack Tx:     6237   Hello Ack Rx:     6236
Loopback Detected: 0      Invalid Pkts Rx:  0
Bundle Mismatch:  0      Expired Ack Rx:   0
Hello Timer expiry: 6237 Ack Timer expiry:   1

Member interface: Serial0/3/0/0/1/3:0, ifhandle 0x06032340
HW state = Up, link state = Up
Member of bundle interface Multilink0/3/0/0/2 with ifhandle 0x06032280
Local bid: Multilink0/3/0/0/2 Peer bid: Multilink0/6/0/0/2
my_lid:          Serial0/3/0/0/1/3:0
peer_lid:         Serial0/6/0/0/1/3:0
flags:           0x0
fsm_state:       3 [Up]
im_state:        3 [Up]
fsm_req_state:   3 [Up]
cause:           0 [None]
retry_count:     0
in_loopback:     No
bc_init_rcvd:    Yes
bc_owned_res:    Yes
cc_owned_res:    Yes
is_parent_up:    Yes
Last Packet Tx:  00:00:02 ago
Round trip:      00:00.000 (0 secs 999997 nsecs)
Min Round trip:  00:00.000 (0 secs 999997 nsecs)
Max Round trip:  00:00.003 (0 secs 3999988 nsecs)
cfg_lid:
mfr_t_hello:     10
mfr_t_ack:        4
mfr_retry_max:    2
----- Member Link Statistics -----
Add Link Tx:      3      Add Link Rx:      2
Add Link Ack Tx:  2      Add Link Ack Rx:  1
Add Link Rej Tx:  0      Add Link Rej Rx:  0
Remove Link Tx:   0      Remove Link Rx:   0
Remove Link Ack Tx: 0      Remove Link Ack Rx: 0
Hello Tx:         6236   Hello Rx:         6237
Hello Ack Tx:     6237   Hello Ack Rx:     6236
Loopback Detected: 0      Invalid Pkts Rx:  0
Bundle Mismatch:  0      Expired Ack Rx:   0
Hello Timer expiry: 6237 Ack Timer expiry:   1

Member interface: Serial0/3/0/0/1/4:0, ifhandle 0x06032300
HW state = Up, link state = Up
Member of bundle interface Multilink0/3/0/0/2 with ifhandle 0x06032280
Local bid: Multilink0/3/0/0/2 Peer bid: Multilink0/6/0/0/2
my_lid:          Serial0/3/0/0/1/4:0
peer_lid:         Serial0/6/0/0/1/4:0
flags:           0x0
fsm_state:       3 [Up]
im_state:        3 [Up]
fsm_req_state:   3 [Up]
cause:           0 [None]
retry_count:     0
in_loopback:     No
bc_init_rcvd:    Yes

```

show frame-relay multilink

```

bc_owned_res:   Yes
cc_owned_res:   Yes
is_parent_up:   Yes
Last Packet Tx: 00:00:01 ago
Round trip:     00:00.000 (0 secs 999997 nsecs)
Min Round trip: 00:00.000 (0 secs 999997 nsecs)
Max Round trip: 00:00.004 (0 secs 4999985 nsecs)
cfg_lid:
mfr_t_hello:    10
mfr_t_ack:       4
mfr_retry_max:   2
----- Member Link Statistics -----
Add Link Tx:      3      Add Link Rx:      2
Add Link Ack Tx:  2      Add Link Ack Rx:    1
Add Link Rej Tx:  0      Add Link Rej Rx:    0
Remove Link Tx:   0      Remove Link Rx:     0
Remove Link Ack Tx: 0      Remove Link Ack Rx: 0
Hello Tx:         6236   Hello Rx:         6235
Hello Ack Tx:     6235   Hello Ack Rx:     6236
Loopback Detected: 0      Invalid Pkts Rx:   0
Bundle Mismatch:  0      Expired Ack Rx:    0
Hello Timer expiry: 6237  Ack Timer expiry:  1

```

The following example shows how to display detailed multilink Frame Relay information for all interfaces, including IDB information and FSM statistics, on a Cisco 2-Port Channelized OC-12c/DS0 SPA:

```

RP/0/RSP0/CPU0:router# show frame-relay multilink detail
Fri Mar 25 14:04:05.425 UTC
Bundle interface: Multilink0/2/1/0/1, ifhandle 0x04002840
Member Links: 2 active, 0 inactive
State = Up, BW Class = A
nodeid:          0x829
group:           1
my_bid:          Multilink0/2/1/0/1
peer_bid:        Multilink0/2/1/0/1
magic:           0x75b06726
flags:           0x0
im_state:        3 [Up]
fsm_req_state:   3 [Up]
is_owned_resource: Y
is_zombie:       N
active_mbr_count: 2
cfg_bid:         1
bw_class:        1

bw_class_threshold: 0

```

===== Member Links =====

```

Serial0/2/1/0/1/2:0, HW state = Up, link state = Up
my_lid:          Serial0/2/1/0/1/2:0
peer_lid:        Serial0/2/1/0/1/2:0
flags:           0x0
fsm_state:       3 [Up]
im_state:        3 [Up]
fsm_req_state:   3 [Up]
cause:           0 [None]
retry_count:     0
in_loopback:     No
bc_init_rcvd:    Yes
bc_owned_res:    Yes
cc_owned_res:    Yes
is_parent_up:    Yes
Last Packet Tx:  00:00:06 ago
Round trip:      00:00.000 (0 secs 999997 nsecs)
Min Round trip:  00:00.000 (0 secs 999997 nsecs)
Max Round trip:  00:00.002 (0 secs 2999991 nsecs)
cfg_lid:
mfr_t_hello:     10
mfr_t_ack:       4
mfr_retry_max:   2

```

```

----- Member Link Statistics -----
Add Link Tx:                2      Add Link Rx:                1
Add Link Ack Tx:            1      Add Link Ack Rx:            1
Add Link Rej Tx:            0      Add Link Rej Rx:            0
Remove Link Tx:             0      Remove Link Rx:             0
Remove Link Ack Tx:         0      Remove Link Ack Rx:         0
Hello Tx:                   2      Hello Rx:                   2
Hello Ack Tx:               2      Hello Ack Rx:               2
Loopback Detected:          0      Invalid Pkts Rx:            1
Bundle Mismatch:            0      Expired Ack Rx:             0
Hello Timer expiry:         2      Ack Timer expiry:           0

```

Serial0/2/1/0/1/1:0, HW state = Up, link state = Up

```

my_lid:      Serial0/2/1/0/1/1:0
peer_lid:    Serial0/2/1/0/1/1:0
flags:       0x0
fsm_state:   3 [Up]
im_state:    3 [Up]
fsm_req_state: 3 [Up]
cause:       0 [None]
retry_count: 0
in_loopback: No
bc_init_rcvd: Yes
bc_owned_res: Yes
cc_owned_res: Yes
is_parent_up: Yes
Last Packet Tx: 00:00:06 ago
Round trip:    00:00.000 (0 secs 999997 nsecs)
Min Round trip: 00:00.000 (0 secs 999997 nsecs)
Max Round trip: 00:00.002 (0 secs 2999991 nsecs)
cfg_lid:
mfr_t_hello: 10
mfr_t_ack:   4
mfr_retry_max: 2

```

```

----- Member Link Statistics -----
Add Link Tx:                2      Add Link Rx:                1
Add Link Ack Tx:            1      Add Link Ack Rx:            1
Add Link Rej Tx:            0      Add Link Rej Rx:            0
Remove Link Tx:             0      Remove Link Rx:             0
Remove Link Ack Tx:         0      Remove Link Ack Rx:         0
Hello Tx:                   2      Hello Rx:                   2
Hello Ack Tx:               2      Hello Ack Rx:               2
Loopback Detected:          0      Invalid Pkts Rx:            1
Bundle Mismatch:            0      Expired Ack Rx:             0
Hello Timer expiry:         2      Ack Timer expiry:           0

```

Bundle interface: Multilink0/2/1/0/2, ifhandle 0x04002880

Member Links: 2 active, 0 inactive

```

State = Up, BW Class = A
nodeid:      0x829
group:       2
my_bid:      Multilink0/2/1/0/2
peer_bid:    Multilink0/2/1/0/2
magic:       0x41f1f15a
flags:       0x0
im_state:    3 [Up]
fsm_req_state: 3 [Up]
is_owned_resource: Y
is_zombie:   N
active_mbr_count: 2
cfg_bid:
bw_class:    1
bw_class_threshold: 0

```

===== Member Links =====

Serial0/2/1/0/1/4:0, HW state = Up, link state = Up

```

my_lid:      Serial0/2/1/0/1/4:0
peer_lid:    Serial0/2/1/0/1/4:0
flags:       0x0

```

show frame-relay multilink

```

fsm_state:      3  [Up]
im_state:       3  [Up]
fsm_req_state:  3  [Up]
cause:          0  [None]
retry_count:    0
in_loopback:    No
bc_init_rcvd:   Yes
bc_owned_res:   Yes
cc_owned_res:   Yes
is_parent_up:   Yes
Last Packet Tx: 00:00:06 ago
Round trip:     00:00.000 (0 secs 999997 nsecs)
Min Round trip: 00:00.000 (0 secs 999997 nsecs)
Max Round trip: 00:00.002 (0 secs 2999991 nsecs)
cfg_lid:
mfr_t_hello:    10
mfr_t_ack:       4
mfr_retry_max:   2
----- Member Link Statistics -----
Add Link Tx:      2      Add Link Rx:      1
Add Link Ack Tx:  1      Add Link Ack Rx:    1
Add Link Rej Tx:  0      Add Link Rej Rx:    0
Remove Link Tx:   0      Remove Link Rx:     0
Remove Link Ack Tx: 0      Remove Link Ack Rx: 0
Hello Tx:         2      Hello Rx:          2
Hello Ack Tx:     2      Hello Ack Rx:      2
Loopback Detected: 0      Invalid Pkts Rx:    1
Bundle Mismatch:  0      Expired Ack Rx:     0
Hello Timer expiry: 2      Ack Timer expiry:   0

Serial0/2/1/0/1/3:0,  HW state = Up, link state = Up
my_lid:      Serial0/2/1/0/1/3:0
peer_lid:    Serial0/2/1/0/1/3:0
flags:       0x0
fsm_state:   3  [Up]
im_state:    3  [Up]
fsm_req_state: 3  [Up]
cause:       0  [None]
retry_count: 0
in_loopback: No
bc_init_rcvd: Yes
bc_owned_res: Yes
cc_owned_res: Yes
is_parent_up: Yes
Last Packet Tx: 00:00:06 ago
Round trip:     00:00.000 (0 secs 999997 nsecs)
Min Round trip: 00:00.000 (0 secs 999997 nsecs)
Max Round trip: 00:00.002 (0 secs 2999991 nsecs)
cfg_lid:
mfr_t_hello:    10
mfr_t_ack:       4
mfr_retry_max:   2
----- Member Link Statistics -----
Add Link Tx:      2      Add Link Rx:      1
Add Link Ack Tx:  1      Add Link Ack Rx:    1
Add Link Rej Tx:  0      Add Link Rej Rx:    0
Remove Link Tx:   0      Remove Link Rx:     0
Remove Link Ack Tx: 0      Remove Link Ack Rx: 0
Hello Tx:         2      Hello Rx:          2
Hello Ack Tx:     2      Hello Ack Rx:      2
Loopback Detected: 0      Invalid Pkts Rx:    1
Bundle Mismatch:  0      Expired Ack Rx:     0
Hello Timer expiry: 2      Ack Timer expiry:   0

```

The following example shows how to display detailed multilink Frame Relay information for all interfaces, including IDB information and FSM statistics, on a Cisco 4-Port Channelized T3 SPA:

```

RP/0/RSP0/CPU0:router# show frame-relay multilink detail
Member interface: Serial0/0/0/0/1:0, ifhandle 0x00005180
  HW state = Up, link state = Up
  Member of bundle interface Multilink0/0/0/0/1 with ifhandle 0x00005280
  Local bid: Multilink0/0/0/0/1  Peer bid: Multilink0/0/0/0/1
  my_lid:      Serial0/0/0/0/1:0

```

```

peer_lid:      Serial0/0/0/0/1:0
flags:         0x0
fsm_state:     3   [Up]
im_state:      3   [Up]
fsm_req_state: 3   [Up]
cause:         0   [None]
retry_count:   0
in_loopback:   No
bc_init_rcvd:  Yes
bc_owned_res:  Yes
cc_owned_res:  Yes
is_parent_up:  Yes
Last Packet Tx: 00:00:06 ago
Round trip:    00:00.000 (0 secs 999997 nsecs)
Min Round trip: 00:00.000 (0 secs 999997 nsecs)
Max Round trip: 00:00.001 (0 secs 1999994 nsecs)
cfg_lid:
mfr_t_hello:   10
mfr_t_ack:     4
mfr_retry_max: 2
----- Member Link Statistics -----
Add Link Tx:           3      Add Link Rx:           1
Add Link Ack Tx:       1      Add Link Ack Rx:       1
Add Link Rej Tx:       0      Add Link Rej Rx:       0
Remove Link Tx:        0      Remove Link Rx:        0
Remove Link Ack Tx:    0      Remove Link Ack Rx:    0
Hello Tx:              21692   Hello Rx:              21690
Hello Ack Tx:          21690   Hello Ack Rx:          21692
Loopback Detected:     0      Invalid Pkts Rx:       0
Bundle Mismatch:       0      Expired Ack Rx:        0
Hello Timer expiry:    21693   Ack Timer expiry:      1

Member interface: Serial0/0/0/0/2:0, ifhandle 0x000051c0
HW state = Up, link state = Up
Member of bundle interface Multilink0/0/0/0/1 with ifhandle 0x00005280
Local bid: Multilink0/0/0/0/1 Peer bid: Multilink0/0/0/0/1
my_lid:      Serial0/0/0/0/2:0
peer_lid:    Serial0/0/0/0/2:0
flags:       0x0
fsm_state:   3   [Up]
im_state:    3   [Up]
fsm_req_state: 3   [Up]
cause:       0   [None]
retry_count: 0
in_loopback: No
bc_init_rcvd: Yes
bc_owned_res: Yes
cc_owned_res: Yes
is_parent_up: Yes
Last Packet Tx: 00:00:03 ago
Round trip:    00:00.000 (0 secs 999997 nsecs)
Min Round trip: 00:00.000 (0 secs 999997 nsecs)
Max Round trip: 00:00.001 (0 secs 1999994 nsecs)
cfg_lid:
mfr_t_hello:   10
mfr_t_ack:     4
mfr_retry_max: 2
----- Member Link Statistics -----
Add Link Tx:           3      Add Link Rx:           1
Add Link Ack Tx:       1      Add Link Ack Rx:       1
Add Link Rej Tx:       0      Add Link Rej Rx:       0
Remove Link Tx:        0      Remove Link Rx:        0
Remove Link Ack Tx:    0      Remove Link Ack Rx:    0
Hello Tx:              21688   Hello Rx:              21694
Hello Ack Tx:          21694   Hello Ack Rx:          21688
Loopback Detected:     0      Invalid Pkts Rx:       0
Bundle Mismatch:       0      Expired Ack Rx:        0
Hello Timer expiry:    21689   Ack Timer expiry:      1

```

show frame-relay multilink

```

Member interface: Serial0/0/0/0/3:0, ifhandle 0x00005200
HW state = Up, link state = Up
Member of bundle interface Multilink0/0/0/0/2 with ifhandle 0x000052c0
Local bid: Multilink0/0/0/0/2 Peer bid: Multilink0/0/0/0/2
  my_lid:      Serial0/0/0/0/3:0
  peer_lid:    Serial0/0/0/0/3:0
  flags:       0x0
  fsm_state:   3 [Up]
  im_state:    3 [Up]
  fsm_req_state: 3 [Up]
  cause:       0 [None]
  retry_count: 0
  in_loopback: No
  bc_init_rcvd: Yes
  bc_owned_res: Yes
  cc_owned_res: Yes
  is_parent_up: Yes
  Last Packet Tx: 00:00:03 ago
  Round trip:   00:00.000 (0 secs 999997 nsecs)
  Min Round trip: 00:00.000 (0 secs 999997 nsecs)
  Max Round trip: 00:00.001 (0 secs 1999994 nsecs)
  cfg_lid:
  mfr_t_hello:  10
  mfr_t_ack:     4
  mfr_retry_max: 2
----- Member Link Statistics -----
Add Link Tx:      3      Add Link Rx:      1
Add Link Ack Tx:  1      Add Link Ack Rx:    1
Add Link Rej Tx:  0      Add Link Rej Rx:    0
Remove Link Tx:   0      Remove Link Rx:    0
Remove Link Ack Tx: 0      Remove Link Ack Rx: 0
Hello Tx:         21694   Hello Rx:         21689
Hello Ack Tx:     21689   Hello Ack Rx:     21694
Loopback Detected: 0      Invalid Pkts Rx:  0
Bundle Mismatch:  0      Expired Ack Rx:   0
Hello Timer expiry: 21695 Ack Timer expiry:  1

```

```

Member interface: Serial0/0/0/0/4:0, ifhandle 0x00005240
HW state = Up, link state = Up
Member of bundle interface Multilink0/0/0/0/2 with ifhandle 0x000052c0
Local bid: Multilink0/0/0/0/2 Peer bid: Multilink0/0/0/0/2
  my_lid:      Serial0/0/0/0/4:0
  peer_lid:    Serial0/0/0/0/4:0
  flags:       0x0
  fsm_state:   3 [Up]
  im_state:    3 [Up]
  fsm_req_state: 3 [Up]
  cause:       0 [None]
  retry_count: 0
  in_loopback: No
  bc_init_rcvd: Yes
  bc_owned_res: Yes
  cc_owned_res: Yes
  is_parent_up: Yes
  Last Packet Tx: 00:00:00 ago
  Round trip:   00:00.000 (0 secs 999997 nsecs)
  Min Round trip: 00:00.000 (0 secs 999997 nsecs)
  Max Round trip: 00:00.001 (0 secs 1999994 nsecs)
  cfg_lid:
  mfr_t_hello:  10
  mfr_t_ack:     4
  mfr_retry_max: 2
----- Member Link Statistics -----
Add Link Tx:      3      Add Link Rx:      1
Add Link Ack Tx:  1      Add Link Ack Rx:    1
Add Link Rej Tx:  0      Add Link Rej Rx:    0
Remove Link Tx:   0      Remove Link Rx:    0
Remove Link Ack Tx: 0      Remove Link Ack Rx: 0
Hello Tx:         21691   Hello Rx:         21689
Hello Ack Tx:     21689   Hello Ack Rx:     21691
Loopback Detected: 0      Invalid Pkts Rx:  0

```



```

Bundle Mismatch:          0      Expired Ack Rx:          0
Hello Timer expiry:      21692   Ack Timer expiry:       1

```

```

Bundle interface: Multilink0/0/0/0/1, ifhandle 0x00005280
Member Links: 2 active, 0 inactive
State = Up,    BW Class = A
  nodeid:          0x808
  group:           1
  my_bid:          Multilink0/0/0/0/1
  peer_bid:        Multilink0/0/0/0/1
  magic:           0x48bac00c
  flags:           0x0
  im_state:        3    [Up]
  fsm_req_state:   3    [Up]
  is_owned_resource: Y
  is_zombie:       N
  active_mbr_count: 2
  cfg_bid:         0
  bw_class:        1
  bw_class_threshold: 0

```

The following example shows how to display the multilink Frame-Relay information for the interface at location 0/3/0/0/1:

```
RP/0/RSP0/CPU0:router# show frame-relay multilink interface multilink 0/3/0/0/1
```

```

Bundle interface: Multilink0/3/0/0/1, ifhandle 0x060322c0
Member Links: 2 active, 0 inactive
State = Up,    BW Class = A

Member Links:
Serial0/3/0/0/1/2:0,    HW state = Up, link state = Up
Serial0/3/0/0/1/1:0,    HW state = Up, link state = Up

```

Related Commands

Command	Description
interface multilink, on page 768	Configures a multilink interface and enters multilink interface configuration mode.
frame-relay multilink bid, on page 544	Creates a name for a Frame Relay multilink bundle interface.

show frame-relay pvc

To display statistics about Frame Relay permanent virtual circuits (PVCs), use the **show frame-relay pvc** command in EXEC mode.

show frame-relay pvc [**interface** *type interface-path-id*] **location** *node-id*] [*dlci-number*]

Syntax Description

interface	(Optional) Interface for which information is to be displayed. Use the <i>type</i> and <i>interface-path-id</i> arguments to specify the interface.
<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>node-id</i>	(Optional) Displays information about all interfaces on the specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<i>dlci-number</i>	(Optional) DLCI number used to identify the PVC. The range is from 16 to 1007.

Command Default

Information for all Frame Relay interfaces and PVCs is displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show frame-relay pvc** command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

This command is used to check the status of PVCs on interfaces.

Task ID

Task ID	Operations
fr	read

Examples

The following example shows the output from the **show frame-relay pvc** command:

```
RP/0/RSP0/CPU0:router# show frame-relay pvc
```

```
PVC Statistics for interface POS0/3/2/0 (Frame Relay DCE)
```

	Active	Inactive	Deleted	Static
Local	4	0	0	0
Switched	0	0	0	0
Dynamic	0	0	0	0

```
DLCI = 612, DLCI USAGE = LOCAL, ENCAP = CISCO, INHERIT = TRUE, PVC STATUS = ACT
VE, INTERFACE = POS0/3/2/0.1
input pkts 0          output pkts 0          in bytes 0
out bytes 0          dropped pkts 0      in FECN packets 0
in BECN pkts 0      out FECN pkts 0      out BECN pkts 0
in DE pkts 0        out DE pkts 0
out bcast pkts 0    out bcast bytes 0
pvc create time 00:00:00    last time pvc status changed 00:00:00
```

```
DLCI = 613, DLCI USAGE = LOCAL, ENCAP = CISCO, INHERIT = TRUE, PVC STATUS = ACT
VE, INTERFACE = POS0/3/2/0.2
input pkts 0          output pkts 0          in bytes 0
out bytes 0          dropped pkts 0      in FECN packets 0
in BECN pkts 0      out FECN pkts 0      out BECN pkts 0
in DE pkts 0        out DE pkts 0
out bcast pkts 0    out bcast bytes 0
pvc create time 00:00:00    last time pvc status changed 00:00:00
```

```
DLCI = 614, DLCI USAGE = LOCAL, ENCAP = CISCO, INHERIT = TRUE, PVC STATUS = ACT
VE, INTERFACE = POS0/3/2/0.3
input pkts 0          output pkts 0          in bytes 0
out bytes 0          dropped pkts 0      in FECN packets 0
in BECN pkts 0      out FECN pkts 0      out BECN pkts 0
in DE pkts 0        out DE pkts 0
out bcast pkts 0    out bcast bytes 0
pvc create time 00:00:00    last time pvc status changed 00:00:00
```

```
DLCI = 615, DLCI USAGE = LOCAL, ENCAP = CISCO, INHERIT = TRUE, PVC STATUS = ACT
VE, INTERFACE = POS0/3/2/0.4
input pkts 0          output pkts 0          in bytes 0
out bytes 0          dropped pkts 0      in FECN packets 0
in BECN pkts 0      out FECN pkts 0      out BECN pkts 0
in DE pkts 0        out DE pkts 0
out bcast pkts 0    out bcast bytes 0
pvc create time 00:00:00    last time pvc status changed 00:00:00
```

The following example shows the output for a specific frame-relay PVC:

```
RP/0/RSP0/CPU0:router# show frame-relay pvc 613
```

```
DLCI = 613, DLCI USAGE = LOCAL, ENCAP = CISCO, INHERIT = TRUE, PVC STATUS = ACTI
VE, INTERFACE = POS0/3/2/0.2
input pkts 0          output pkts 0          in bytes 0
out bytes 0          dropped pkts 0      in FECN packets 0
in BECN pkts 0      out FECN pkts 0      out BECN pkts 0
in DE pkts 0        out DE pkts 0
out bcast pkts 0    out bcast bytes 0
```

```
pvc create time 00:00:00      last time pvc status changed 00:00:00
```

Table 33: show frame-relay pvc Field Descriptions

Field	Description
DLCI	One of the DLCI numbers for the PVC.
DLCI USAGE	Lists SWITCHED when the router or access server is used as a switch, or LOCAL when the router or access server is used as a DTE device.
ENCAP	Type of encapsulation.
INHERIT	Encapsulation type for the PVC is inherited from the main interface.
PVC STATUS	Status of the PVC: ACTIVE, INACTIVE, or DELETED.
INTERFACE	Specific subinterface associated with this DLCI.
input pkts	Number of packets received on this PVC.
output pkts	Number of packets sent on this PVC.
in bytes	Number of bytes received on this PVC.
out bytes	Number of bytes sent on this PVC.
dropped pkts	Number of incoming and outgoing packets dropped by the router at the Frame Relay level.
in FECN pkts	Number of packets received with the FECN bit set.
in BECN pkts	Number of packets received with the BECN bit set.
out FECN pkts	Number of packets sent with the FECN bit set.
out BECN pkts	Number of packets sent with the BECN bit set.
in DE pkts	Number of DE packets received.
out DE pkts	Number of DE packets sent.
out bcast pkts	Number of output broadcast packets.
out bcast bytes	Number of output broadcast bytes.
pvc create time	Time at which the PVC was created.

Field	Description
last time pvc status changed	Time at which the PVC changed status.
shaping drops	Number of packets dropped by the traffic-shaping process.
Fragment Counters	Displays whether fragment counters are enabled or disabled on the PVC. Fragment counters are disabled by default. Use the fragment-counter command to enable collection of these statistics.

show frame-relay vcm-info interface

To display Virtual Circuit (VC) manager information for a given interface, use the **show frame-relay vcm-info interface** command in EXEC mode.

show frame-relay vcm-info interface *type interface-path-id* [**vc dlc***i*]

Syntax Description	<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
	<i>interface-path-id</i>	Physical interface or virtual interface.
		Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
	vc	(Optional) Specifies a VC on the interface.
	<i>dlci</i>	(Optional) Data-link Connection Identifier number. Range is from 0 to 1023.

Command Default No default behavior or values

Command Modes EXEC

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	fr	read

Examples

The following example shows how to display Virtual Circuit (VC) manager information for the multilink interface 0/1/0/0:

```
RP/0/RSP0/CPU0:router# show frame-relay vcm-info interface multilink 0/3/0/0/1

VCM IDB:Multilink0_3_0_0_1
=====
IDB type:                      IFT_MAIN
<main specific>
  i/f term type:                L3
  i/f handle:                   0x06186240
  BW:                           0x000000c00
  OIR insert:                   F
VC chkpt oid:                  0x00000000
proto info:                    500323c8 [ptr]
proto fn table:                500323d4 [ptr]
i/f type:                      0x00000037 [IFT_MULTILINK]
i/f state:                     0x00000003 [up]
i/f basecaps num:              0x0000004c [fr]
i/f basecaps state:            0x00000003 [up]
VCM states:                    5002c708 [ptr]
in db:                         T
chkpt:                         F
datapath info                  0 [0 bytes]
partner info                   50016d98 [16 bytes]
  encaps type:                 IETF
  intf type:                   DTE
non chkptd info                0 [0 bytes]
```

Related Commands

Command	Description
interface multilink , on page 768	Configures a multilink interface and enters multilink interface configuration mode.
frame-relay multilink bid , on page 544	Creates a name for a Frame Relay multilink bundle interface.

show interfaces (frame relay)

To display statistics about Frame Relay interfaces, use the **show interfaces** command in EXEC mode.

show interfaces [**summary**] [*type interface-path-id*] [**brief**|**description**|**detail**|**accounting** [**rates**]] [**location** *node-id*]

Syntax Description

summary	(Optional) Displays a summary of interface information by interface type.
<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
brief	(Optional) Displays brief information about each interface (one line per interface).
description	(Optional) Displays an interface description.
detail	(Optional) Displays detailed information about each interface. This is the default.
accounting	(Optional) Displays the number of packets of each protocol type that have been sent through the interface.
rates	(Optional) Displays interface accounting rates.
location <i>node-id</i>	(Optional) Displays information about all interfaces on the specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.0.0	This command was introduced

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show interfaces** (Frame Relay) command is available on Packet-over-SONET/SDH (POS), serial, and multilink interfaces.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows the output from the **show interfaces** command when the interface is configured with Frame Relay encapsulation:

```
RP/0/RSP0/CPU0:router# show interfaces pos 0/1/0/0

POS0/1/0/0 is up, line protocol is up
  Hardware is Packet over SONET/SDH
  Internet address is Unknown
  MTU 4474 bytes, BW 622080 Kbit
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation FRAME-RELAY, crc 32, controller loopback not set,
  LMI enq sent 0, LMI stat recvd 0, LMI upd recvd 0
  LMI enq recvd 9463, LMI stat sent 9463, LMI upd sent 0, DCE LMI up
  LMI DLCI 0 LMI type is ANSI Annex D frame relay DCE
  Last clearing of "show interface" counters never
  5 minute input rate 0 bits/sec, 0 packets/sec
  5 minute output rate 0 bits/sec, 0 packets/sec
    20934 packets input, 1508069 bytes, 1151 total input drops
      0 drops for unrecognized upper-level protocol
    Received 0 broadcast packets, 0 multicast packets
      0 runts, 0 giants, 0 throttles, 0 parity
    1151 input errors, 1058 CRC, 0 frame, 0 overrun, 93 ignored, 0 abort
    19590 packets output, 990924 bytes, 0 total output drops
    Output 0 broadcast packets, 0 multicast packets
    0 output errors, 0 underruns, 0 applique, 0 resets
    0 output buffer failures, 0 output buffers swapped out
```

Table 34: show interfaces Field Descriptions

Field	Description
Interface name	Displays the name of the current interface. In the example, the interface name is POS0/1/0/0.
Interface state	Displays the state of the interface. In the example, the interface is in the administratively up state.

Field	Description
Line protocol state	Displays the state of the Layer 2 line protocol. This field may be different from the interface state if, for example, a keepalive failure has brought down the Layer 2. Note The line protocol state is not the same as the protocol state displayed in the show ip interfaces command, because it is the state of Layer 2 (media) rather than Layer 3 (IP protocol).
Hardware	Displays the current hardware type.
Internet address is <i>n.n.n.n/n</i>	Displays the Layer 2 address (MAC address for Ethernet interfaces). Note Enter the mac-address command to configure the hardware address.
MTU	Displays the maximum transmission unit (MTU) for the interface. The MTU is the maximum packet size that can be transmitted over the interface. Note The MTU field indicates the interface MTU. Enter the mtu command to configure a lower MTU value at the layer 3 level.
BW	Displays the bandwidth of the interface in kbps.
reliability	Displays the proportion of packets that are not dropped and do not have errors. Note The reliability is shown as a fraction of 255.
txload	Indicates the traffic flowing out of the interface as a proportion of the bandwidth. Note The txload is shown as a fraction of 255.
rxload	Indicates the traffic flowing into the interface as a proportion of the bandwidth. Note The rxload is shown as a fraction of 255.
Encapsulation	Layer 2 encapsulation installed on the interface.
CRC	Indicates the length of the cyclic redundancy check (CRC), in bytes. Note Enter the pos crc command to configure the CRC.

Field	Description
controller loopback	Indicates that the hardware was configured as controller loopback.
LMI enq sent	Number of LMI enquiry messages sent.
LMI stat recvd	Number of LMI status messages received.
LMI upd recvd	Number of LMI updated messages received.
LMI enq recvd	Number of LMI enquiry messages received.
LMI stat sent	Number of LMI status messages sent.
LMI upd sent	Number of LMI updated messages sent.
DCE LMI	Displays the state of the DCE LMI.
LMI DLCI	Displays the LMI DLCI identifier.
LMI type	Displays the LMI type.
Last clearing	Time at which the counters that measure cumulative statistics (such as number of bytes transmitted and received) shown in this report were last reset to zero. Note that variables that might affect routing for example, load and reliability) are not cleared when the counters are cleared.
5 minute input rate5 minute output rate	Average number of bits and packets transmitted per second in the last 5 minutes. The 5-minute input and output rates should be used only as an approximation of traffic per second during a given 5-minute period. These rates are exponentially weighted averages with a time constant of 5 minutes. A period of four time constants must pass before the average is within two percent of the instantaneous rate of a uniform stream of traffic over that period.
packets input	Total number of error-free packets received by the system.
bytes	Total number of bytes, including data and MAC encapsulation, in the error-free packets received by the system.
Received...broadcasts	Total number of broadcast or multicast packets received by the interface

Field	Description
runts	Number of packets that are discarded because they are smaller than the minimum packet size of the medium.
giants	Number of packets that are discarded because they exceed the maximum packet size of the medium
input errors	Total number of no buffer, runts, giants, CRCs, frame, overrun, ignored, and abort counts. Other input-related errors can also increment the count, so that this sum might not balance with the other counts.
CRC	Cyclic redundancy checksum generated by the originating station or far-end device does not match the checksum calculated from the data received. On a serial link, CRCs usually indicate noise, gain hits, or other transmission problems on the data link.
frame	Number of packets received incorrectly having a CRC error and a noninteger number of octets. On a serial line, this is usually the result of noise or other transmission problems.
overrun	Number of times the serial receiver hardware was unable to hand received data to a hardware buffer because the input rate exceeded the receiver's ability to handle the data.
ignored	Number of received packets ignored by the interface because the interface hardware ran low on internal buffers. Broadcast storms and bursts of noise can cause the ignored count to be increased.
abort	Illegal sequence of one bits on a serial interface. This usually indicates a clocking problem between the serial interface and the data link equipment.
carrier transitions	Number of times the carrier detect signal of a serial interface has changed state. For example, if data carrier detect (DCD) goes down and comes up, the carrier transition counter will increment two times. Indicates modem or line problems if the carrier detect line is changing state often.

snmp-server traps frame-relay pvc

To enable Simple Network Management Protocol (SNMP) trap notifications for a Frame Relay permanent virtual circuit (PVC), use the **snmp-server traps frame-relay pvc** command in global configuration mode. To disable SNMP notifications for a FR PVC, use the **no** form of this command.

snmp-server traps frame-relay pvc [*interval seconds*]

no snmp-server traps frame-relay pvc [*interval seconds*]

Syntax Description	interval <i>seconds</i> (Optional) Minimum period between successive traps. The range is from 1 to 3600.

Command Default	<i>seconds</i> : 30

Command Modes	Global configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server traps frame-relay pvc** command to enable trap requests for a Frame Relay PVC. This command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

See *Implementing SNMP on Cisco IOS XR Software* in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide* for detailed information about SNMP configuration tasks and commands.

Task ID	Task ID	Operations
	snmp	read, write
	fr	read, write

Examples

The following example shows how to configure the router to send SNMP trap notifications for a Frame Relay PVC:

```
RP/0/RSP0/CPU0:router(config)# snmp-server host 12.26.25.61 traps public udp-port 5000
RP/0/RSP0/CPU0:router(config)# snmp-server community public RW
RP/0/RSP0/CPU0:router(config)# snmp-server traps frame-relay pvc interval 50
```

Related Commands

Command	Description
snmp-server community	Configures the community access string to permit access to the SNMP.
snmp-server host	Specifies the recipient of an SNMP notification operation.



Global Interface Commands on the Cisco ASR 9000 Series Router

This module describes the global command line interface (CLI) commands for configuring interfaces on the Cisco ASR 9000 Series Router.

- [bandwidth \(global\), page 586](#)
- [bundle wait-while, page 588](#)
- [clear interface, page 589](#)
- [dampening, page 591](#)
- [interface \(global\), page 593](#)
- [lACP system , page 595](#)
- [mlACP reset priority, page 596](#)
- [mlACP switchback, page 597](#)
- [mlACP switchover maximize, page 598](#)
- [mlACP switchover type, page 600](#)
- [mtu, page 601](#)
- [show im dampening, page 604](#)
- [show interfaces, page 608](#)
- [show mlACP inconsistencies, page 618](#)
- [shutdown \(global\), page 619](#)

bandwidth (global)

To configure the bandwidth of an interface, use the **bandwidth** command in interface configuration mode.

bandwidth *rate*

Syntax Description

<i>rate</i>	Amount of bandwidth to be allocated on the interface, in Kilobits per second (kbps). Range is from 0 through 4294967295.

Command Default

The default bandwidth depends on the interface type.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

To obtain the default bandwidth for a specific interface, use the **show interfaces** command after you first bring up the interface. The default interface bandwidth is displayed in the **show interfaces** command output.

Task ID

Task ID	Operations
interface	execute
basic-services	read, write

Examples

The following example shows how to configure the bandwidth on a Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router# interface GigabitEthernet 0/4/1/0
```



```
RP/0/RSP0/CPU0:router# bandwidth 4000000
```

Related Commands

Command	Description
interface (global), on page 593	Configures an interface or creates or configures a virtual interface.
shutdown (global), on page 619	Disables an interface (forces an interface to be administratively down).

bundle wait-while

To specify the duration of the wait-while timer for a bundle, use the **bundle wait-while** command in the bundle interface configuration mode. To disable waiting, use the **no** form of the command.

bundle wait-while *time*
no**bundle wait-while** *time*

Syntax Description	<i>time</i> Wait-while time in milliseconds, range is 0-2000.

Command Default	2000 milliseconds

Command Modes	Bundle Interface Configuration

Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 4.0.0</td><td>This command was introduced.</td></tr></table>	Release	Modification	Release 4.0.0	This command was introduced.
Release	Modification				
Release 4.0.0	This command was introduced.				

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator.

Task ID	<table><tr><th>Task ID</th><th>Operation</th></tr><tr><td>bundle</td><td>read, write</td></tr><tr><td>interface</td><td>read, write</td></tr></table>	Task ID	Operation	bundle	read, write	interface	read, write
Task ID	Operation						
bundle	read, write						
interface	read, write						

Examples	In the following example, the while-while time is configured for 20 seconds: <pre>RP/0/RSP0/CPU0:router(config-if)#bundle wait-while 20</pre>

clear interface

To clear interface statistics or packet counters, use the **clear interface** command in EXEC mode.

clear interface *type interface-path-id*

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
interface	execute
basic-services	read, write

Examples

The following example shows how to use the **clear interface** command to clear the loopback interface 2:

```
RP/0/RSP0/CPU0:router# clear interface loopback 2
```

Related Commands

Command	Description
interface (global), on page 593	Configures an interface or creates or configures a virtual interface.
shutdown (global), on page 619	Disables an interface (forces an interface to be administratively down).

dampening

To limit propagation of transient or frequently changing interface states on Interface Manager (IM) clients, turn on event dampening by using the **dampening** command in interface configuration mode. To turn dampening off, use the **no** form of this command.

dampening [*half-life* [*reuse suppress max-suppress-time*]]

no dampening [*half-life* [*reuse suppress max-suppress-time*]]

Syntax Description

<i>half-life</i>	(Optional) Time (in minutes) after which a penalty is decreased. Once the interface has been assigned a penalty, the penalty is decreased by half after the half-life period. The process of reducing the penalty happens every 5 seconds. The range of the half-life period is 1 to 45 minutes. The default is 1 minute.
<i>reuse</i>	(Optional) Penalty value below which a stable interface is unsuppressed. Range is from 1 through 20000. Default value is 750.
<i>suppress</i>	(Optional) Limit at which an interface is suppressed when its penalty exceeds that limit. Range is from 1 through 20000, and must be greater than the reuse threshold. The default value is 2000.
<i>max-suppress-time</i>	(Optional) Maximum time (in minutes) that an interface can be suppressed. This value effectively acts as a ceiling that the penalty value cannot exceed. Default value is four times the half-life period.

Command Default

Dampening is turned off by default. When you use the **dampening** command, the following default values are enabled for any optional parameters that you do not enter:

- *half-life*: 1 minute
- *reuse*: 750
- *suppress*: 2000
- *max-suppress-time*: Four times the half-life

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Event dampening suppresses a constantly unstable interface until it remains stable for a period of time. Enabling dampening on an interface that already has dampening configured has the effect of resetting the penalty associated with that interface to zero. The reuse threshold must always be less than the suppress threshold.

Consider the following guidelines when configuring event dampening:

- Configuring dampening on both a subinterface and its parent is usually unnecessary because their states are almost always the same and dampening would be triggered at the same time on each interface.
- If all subinterfaces require dampening, then apply dampening to the main interface only. Applying configuration to large numbers of subinterfaces requires an abundance of memory and increases the time required to process the configuration during boot and failover.
- When dampening is enabled, an interface has a penalty value associated with it. The value starts at 0 and is increased by 1000 whenever the underlying state of the interface changes from up to down.
- The penalty value decreases exponentially while the interface state is stable. If the penalty value exceeds a configured suppress threshold, then the state of the interface is suppressed and IM will not notify upper layers of further state transitions. The suppressed state remains until the penalty value decreases past a configured reuse threshold.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enable dampening with default values on an interface:

```
RP/0/RSP0/CPU0:router(config)# interface POS 0/4/0/0
RP/0/RSP0/CPU0:router(config-if)# dampening
```

Related Commands

Command	Description
show im dampening , on page 604	Displays the state of all interfaces on which dampening has been configured.

interface (global)

To configure an interface or to create or configure a virtual interface, use the **interface** command in global configuration mode. To delete the interface configuration, use the **no** form of this command.

interface *type interface-path-id*

no interface *type interface-path-id*

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No interfaces are configured

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **interface** command enters interface configuration mode to allow you to configure interfaces. If a virtual interface is configured, then the interface is created if it did not already exist.

The **no** form of this command applies only to virtual interfaces or to subinterfaces (that is, interfaces that have been created in global configuration mode).

Task ID

Task ID	Operations
interface	read, write

Examples

In the following example, the **interface** command is given for the card in location 0/2/0/1, and interface configuration mode is entered for that interface:

```
RP/0/RSP0/CPU0:router(config)# interface POS 0/2/0/1
```

Related Commands

Command	Description
clear interface, on page 589	Clears interface statistics or packet counters.
shutdown (global), on page 619	Disables an interface (forces an interface to be administratively down).

lACP system

To set the default system parameters for the Link Aggregation Control Protocol (LACP) bundles, use the **lACP system** command in global configuration mode.

lACP system { **mac**|**priority**}

Syntax Description

mac	Unique MAC address used to identify the system in LACP negotiations.
priority	Priority for this system. Lower value is higher priority. Range is from 1 to 65535.

Command Default

System priority is 32768. MAC address is automatically assigned from the backplane pool.

Command Modes

Global configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator.

The parameters are the system MAC address and the priority of the system. The MAC address must be unique to the system (if it matches a partner system, LACP negotiations fail). The combination of the MAC address and the set system priority determine the priority of the LACP bundles.

Task ID

Task ID	Operation
bundle	read, write

Examples

The following example shows how to configure the MAC address on an LACP system:

```
RP/0/RSP0/CPU0:router(config)#lACP system mac 000c.15c0.bd15
```

mlacp reset priority

To reset operational priorities of mlacp members to their configured mLACP priorities, use the **mlacp reset priority** command in EXEC mode.

mlacp reset priority **bundle-ether** *interface-path-id*

Syntax Description	bundle-ether <i>interface-path-id</i>	Specifies a physical interface instance or a virtual interface instance.

Command Default	No default behavior or values.

Command Modes	EXEC

Command History	Release	Modification
	Release 4.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator.
	This command is for aggregated ethernet interfaces only. The command cannot be used if brute-force switchover is employed.

Task ID	Task ID	Operation
	bundle	execute

Examples	The following example shows how to use the mlacp reset priority command:
	RP/0/RSP0/CPU0:router # mlacp reset priority bundle-ether 10

mlacp switchback

To force a switchback to the local mlacp device for a specified bundle, use the **mlacp switchback** command in the bundle interface configuration mode.

mlacp switchback interface *interface-path-id* [**at** | **in** | **no prompt**]

Syntax Description

interface <i>interface-path-id</i>	Specifies a physical interface instance or a virtual interface instance.
at	Schedules the operation for a future time and date.
in	Schedules the operation for a specified delay.
no prompt	Attempts to carry out the command without prompting.

Command Default

No default behavior or values.

Command Modes

EXEC

Command History

Release	Modification
Release 4.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator.

Task ID

Task ID	Operation
bundle	read, write
interface	read, write

Examples

The following example shows how to schedule the operation at a specified time and date on a bundle-ether interface:

```
RP/0/RSP0/CPU0:router#mlacp switchback bundle-ether 20 at march 21 08:30:10
```

mlacp switchover maximize

To set the maximum number of links or bandwidth in the bundle, use the **mlacp switchover maximize** command in the bundle interface configuration mode.

```
mlacp switchover maximize { links | bandwidth } [threshold value]
```

Syntax Description

links	Compares the operational links, with respect to the total number of links.
bandwidth	Compares the available bandwidth, with respect to the total bandwidth.
threshold	Sets the threshold value to switch to the peer, if its has more links/ bandwidth available.
value	- When used with the links keyword, sets the minimum number of links, below which the device switches to the peer if more links are available. Range is 1-64. - When used with the bandwidth keyword, sets the minimum bandwidth (in kbps), below which the device switches to the peer if more bandwidth is available. Range is 1-4294967295.

Command Default

No default behavior or value.

Command Modes

Bundle interface configuration.

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator.

This command allows switchovers to take place such that the active device is the one with most bandwidth or maximum links in the bundle.

Task ID

Task ID	Operation
bundle	read,write
interface	read,write

Examples

The following example shows how to maximize the links:

```
RP/0/RSP0/CPU0:router(config-if)#interface bundle-ether 10 mlacp switchover maximize links  
threshold 20
```

mlacp switchover type

To specify a non-default switchover method , use the **mlacp switchover type**command in the bundle interface configuration mode.

mlacp switchover type [**brute-force** | **revertive**]

Syntax Description	brute-force	Force switchover by disabling all local member links.
	revertive	Revert based on configured priority values.

Command Default The default switchover type is non-revertive.

Command Modes Bundle interface configuration.

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator.

The **brute-force** and **revertive** options are mutually exclusive, and the value must match on the bundle on both POAs. They determine whether the dynamic priority management or brute force mechanism is used, and whether the behavior is revertive or non-revertive.

Task ID	Task ID	Operation
	interface	read, write

Examples

The following example shows how to force a switchover by disabling all local member links on an bundle-ether interface:

```
RP/0/RSP0/CPU0:router(config-if)#mlacp switchover type brute-force
```

mtu

To adjust the maximum transmission unit (MTU) value for packets on the interface, use the **mtu** command in interface configuration mode. To return the interface to the default MTU for the interface type, use the **no** form of this command.

mtu *bytes*

no mtu

Syntax Description

<i>bytes</i>	Maximum number of bytes in a Layer 2 frame. Range is from 64 through 65535.

Command Default

The default MTU for each interface is as follows:

- Ethernet—1514 bytes
- POS—4474 bytes
- Tunnel—1500 bytes
- Loopback—1514 bytes
- ATM—4470 bytes

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **mtu** command to set a specific MTU value for an interface, or use the **no mtu** command to return the interface to the default MTU value for that interface type. The MTU value can be increased or decreased using the **mtu** command, subject to minimum and maximum MTU limits for the interface type.

If the MTU value is not configured, then each interface will have a default MTU value that is specific to the interface type. The default MTU value is generally the largest Layer 2 frame size possible for the interface type.

The default/configured MTU value on an atm interface includes the L2 header.

The MTU size consists of L2 header that includes either SNAP(8bytes)/MUX(0)/NLPID(2) header or the AAL5 SDU. The AAL5 SDU includes the L3 datagram and the optional Logical Link Control/Subnetwork Access Protocol (LLC/SNAP) header.

The Ethernet interface is the Layer 3 datagram plus 14 bytes. For ATM main interface, the MTU is L3 datagram + 0 bytes.

For ATM L3 sub interface, mtu is as follows:

- SNAP - L3 datagram + 8 bytes
- NLPID - L3 datagram + 2 bytes
- MUX - L3datagram + 0 bytes
- When no pvc is configured under sub interface - L3datagram + 0 bytes

You can use the **show interfaces** command to determine if the MTU value has been changed. The **show interfaces** command output displays the MTU size for each interface in the MTU (byte) field. Note that the MTU size that is displayed includes the Layer 2 header bytes used for each encapsulation type.

**Note**

You can use the **show interfaces** command to determine if the MTU value has been changed. The **show interfaces** command output displays the MTU size for each interface in the MTU (byte) field. Note that the MTU size that is displayed includes the Layer 2 header bytes used for each encapsulation type.

**Note**

Changing the MTU on an interface triggers a change on the protocols and capsulations configured on that interface, although some protocol-specific configurations can override the interface MTU. For example, specifically changing the interface MTU configuration does not affect the IP MTU configuration, but may affect the resulting MTU on that node.

Task ID

Task ID	Operations
interface	read, write

Examples

In the following example, the MTU value for all interfaces is verified. The MTU value is shown in the next-to-last column:

```
RP/0/RSP0/CPU0:router# show interfaces all brief
```

Intf Name	Intf State	LineP State	Encap Type	MTU (byte)	BW (Kbps)
Nu0	up	up	Null	1500	Unknown
PO6/0/0/0	up	up	HDLC	4474	2488320
PO6/0/0/1	up	up	HDLC	4474	2488320
PO6/0/0/2	admin-down	admin-down	HDLC	4474	2488320
PO6/0/0/3	admin-down	admin-down	HDLC	4474	2488320
Mg0/RSP0/CPU0/0	up	up	ARPA	1514	100000

```
RP/0/RSP0/CPU0:router# configure
```

```
RP/0/RSP0/CPU0:router(config)# interface POS 6/0/0/0
```



```
RP/0/RSP0/CPU0:router(config-if)# mtu 1000
```

After the **mtu** command is used to decrease the MTU Layer 2 frame size for the POS interface on 6/0/0/0 to 1000 bytes, the **show interfaces all brief** command is used again to verify that the MTU Layer 2 frame size has been changed:

```
RP/0/RSP0/CPU0:router# show interfaces all brief
```

Intf Name	Intf State	LineP State	Encap Type	MTU (byte)	BW (Kbps)
Nu0	up	up	Null	1500	Unknown
PO6/0/0/0	up	up	HDLC	1000	2488320
PO6/0/0/1	up	up	HDLC	4474	2488320
PO6/0/0/2	admin-down	admin-down	HDLC	4474	2488320
PO6/0/0/3	admin-down	admin-down	HDLC	4474	2488320
Mg0/RSP0/CPU0/0	up	up	ARPA	1514	100000

Related Commands

Command	Description
shutdown (global) , on page 619	Disables an interface (forces an interface to be administratively down).

show im dampening

To display the state of all interfaces on which dampening has been configured, use the **show im dampening** command in EXEC mode.

show im dampening [*interface type*] *ifhandle handle*

Syntax Description

interface type	(Optional) Interface type. For more information, use the question mark (?) online help function.
ifhandle handle	(Optional) Identifies the caps node whose Interface Manager (IM) dampening information you want to display.

Command Default

If you do not specify an interface, then the system displays brief details about all dampened interfaces.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you do not specify an interface, then the system displays brief details about all dampened interfaces.

The physical hardware (layer 1) is not the only part of an interface that can change state. L2 keepalive failure event is one of the many instances that can have a similar impact on routing protocols despite the underlying interface state staying UP. To take account of such events, when dampening is configured on an interface, it is applied independently to every layer. They all use the same parameters as the interface but they have their own penalty value which is incremented when that layer changes state.

Capsulations that may be dampened in this way include these:

- L2 basecaps, such as HDLC and PPP, which may flap if keepalives are not received due to events such as intermittent packet loss.
- L3 capsulations (for example ipv4, ipv6). These may be brought down if another link has a conflicting IP address configured.
- Other locations where negotiation takes place with a peer router, as in the case of PPP control protocols such as IPCP. If the negotiation fails, then the caps is brought down.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows the output from the **show im dampening** command issued with default values:

```
RP/0/RSP0/CPU0:router(config)# interface POS 0/4/0/3
RP/0/RSP0/CPU0:router(config-if)# no shutdown
RP/0/RSP0/CPU0:router(config-if)# dampening
RP/0/RSP0/CPU0:router# show im dampening
```

Interface	Proto	Caps	Penalty Suppressed
-----	-----	----	-----
POS0/4/0/3	0	0	0 NO

```
RP/0/RSP0/CPU0:router# show im dampening interface POS 0/4/0/3
```

```
POS0/4/0/3 (0x05000d00)
Dampening enabled: penalty 0, not suppressed
  underlying state: Up
    half_life: 1      reuse:          750
    suppress: 3000    max-suppress-time: 4
```

```
RP/0/RSP0/CPU0:router# show interfaces POS 0/4/0/3
```

```
POS0/4/0/3 is up, line protocol is down
  Dampening enabled: penalty 0, not suppressed
    half_life: 1      reuse:          750
    suppress: 3000    max-suppress-time: 4
  Hardware is Packet-over-SONET
  Description: ensoft-gsr5 POS 4\2
  Internet address is Unknown
  MTU 4474 bytes, BW 155520 Kbit
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation HDLC, crc 16, controller loopback not set, keepalive set (10 sec)
  Last clearing of "show interface" counters never
  30 second input rate 0 bits/sec, 0 packets/sec
  30 second output rate 0 bits/sec, 0 packets/sec
    0 packets input, 0 bytes, 0 total input drops
    0 drops for unrecognized upper-level protocol
  Received 0 broadcast packets, 0 multicast packets
    0 runts, 0 giants, 0 throttles, 0 parity
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
  48 packets output, 1504 bytes, 0 total output drops
  Output 0 broadcast packets, 0 multicast packets
  0 output errors, 0 underruns, 0 applique, 0 resets
  0 output buffer failures, 0 output buffers swapped out
```

The following sample output shows a POS interface with PPP basecaps and IPCP. The subsequent output for **show im dampening interface <ifname>** contains a table of any encapsulations which have their own penalty as shown below:

```
RP/0/RSP0/CPU0:router# show im dampening
```

Interface	Protocol	Capsulation	Pen	Sup
-----	-----	-----	----	----
GigabitEthernet0/0/0/0			629	NO
GigabitEthernet0/0/0/1			2389	YES
POS0/2/0/0			0	NO

show im dampening

```

POS0/2/0/0          <base>          ppp          0 NO
POS0/2/0/0          ipv4            ipcp          0 NO

```

RP/0/RSP0/CPU0:router# **show im dampening interface TenGigaE 0/1/0/0**

```

TenGigE 0/1/0/0 (0x01180020)
Dampening enabled: Penalty 1625, SUPPRESSED (42 secs remaining)
  Underlying state: Down
    half-life: 1      reuse:          1000
    suppress: 1500    max-suppress-time: 4

```

Protocol	Capsulation	Pen	Suppression	U-L State
ipv6	ipv6	1625	YES 42s remaining	Down

**Note**

When dampening is configured on an interface it is also applied independently to all encapsulations on that interface. For example, the ppp or hdlc basecaps state can flap even while the interface stays up and if keepalives fail. The **show im dampening interface** command contains one line for each such encapsulation as well as the interface itself as shown for the POS interface in the previous example.

Table 35: show im dampening Field Descriptions

Field	Description
Dampening	Indicates the dampening state and penalty value: not suppressed, suppressed.
underlying state	Underlying state of the interface: up, down, administratively down (if an interface has been configured to be “shutdown”).
half_life	This is the time (in minutes) at which the penalty on the interface would be half that of the original penalty (of 1000) when the interface transitions from UP to DOWN. It ranges from 1 to 45 minutes and the default is 1 minute.
reuse	Penalty value below which a stable interface is unsuppressed. It ranges from 1 to 20000 and the default value is 750.
suppress	Limit at which an unstable interface is suppressed when the penalty value exceeds the suppress value. It ranges from 1 to 20000 and the default value is 2000.
max-suppress-time	Maximum time (in minutes) that an interface can be suppressed. The default is 4 minutes.

Related Commands

Command	Description
dampening , on page 591	Turns on event dampening.
shutdown (global) , on page 619	Disables an interface (forces an interface to be administratively down).

show interfaces

To display statistics for all interfaces configured on the router or for a specific node, use the **show interfaces** command in EXEC mode.

show interfaces [*type interface-path-id*] **all** | **local** | **location** *node-id*] [**accounting** | **brief** | **detail** | **summary**]

Syntax Description

<i>type</i>	(Optional) Specifies the type of interface for which you want to display statistics. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	(Optional) Displays interface information for all interfaces. This is the default.
local	(Optional) Displays interface information for all interfaces in the local card.
location <i>node-id</i>	(Optional) Displays information about all interfaces on the specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
accounting	(Optional) Displays the number of packets of each protocol type that have been sent through the interface.
brief	(Optional) Displays brief information about each interface (one line per interface).
detail	(Optional) Displays detailed information about each interface. This is the default.
summary	(Optional) Displays a summary of interface information by interface type.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	The err-disable interface state was added as a possible Interface state output value for bundle member links that have been administratively shut down.

Release	Modification
Release 4.2.0	Support for Bundle-POS and CEM interfaces was included.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show interfaces** command displays statistics for the network interfaces. The resulting display shows the interface processors in slot order.

For example, if you type the **show interfaces** command without an interface type, you receive information for all the interfaces installed in the networking device. Only by specifying the interface *type*, *slot*, and *port* arguments can you display information for a particular interface.

If you enter a **show interfaces** command for an interface type that has been removed from the networking device, an error message is displayed: "Interface not found."

The output displayed depends on the network for which an interface has been configured.

Beginning in Cisco IOS XR Release 3.9.0, when you shut down a bundle interface, the member links are put into err-disable link interface status and admin-down line protocol state.

Beginning in Cisco IOS XR Release 4.2.0, the Bundle-POS interface type is supported.



Note

The 5-minute input and output rates should be used only as an approximation of traffic per second during a given 5-minute period. These rates are exponentially weighted averages with a time constant of 5 minutes. A period of four time constants must pass before the average is within 2 percent of the instantaneous rate of a uniform stream of traffic over that period.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows the output from the **show interfaces** command. The output displayed depends on the type and number of interface cards in the networking device.

```
RP/0/RSP0/CPU0:router# show interfaces tenGigE 0/0/0/1
```

```
TenGigE0/0/0/1 is administratively down, line protocol is administratively down
  Hardware is TenGigE, address is 0800.4539.d909 (bia 0800.4539.d909)
  Description: user defined string
  Internet address is Unknown
  MTU 1514 bytes, BW 10000000 Kbit
    reliability 255/255, txload 0/255, rxload 0/255
  Encapsulation ARPA,
  Full-duplex, 10000Mb/s, L/R
  output flow control is off, input flow control is off
  loopback not set
  ARP type ARPA, ARP timeout 01:00:00
```

show interfaces

```

Last clearing of "show interface" counters never
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
  0 packets input, 0 bytes, 0 total input drops
  0 drops for unrecognized upper-level protocol
Received 0 broadcast packets, 0 multicast packets
    0 runts, 0 giants, 0 throttles, 0 parity
0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
0 packets output, 0 bytes, 0 total output drops
Output 0 broadcast packets, 0 multicast packets
0 output errors, 0 underruns, 0 applique, 0 resets
0 output buffer failures, 0 output buffers swapped out
0 carrier transitions

```

The following example shows bundle member links whose link interface status is “err-disable” and line protocol state is “admin-down” after the bundle interface has been administratively shut down using the **shutdown** command:

```
RP/0/RSP0/CPU0:router# show interfaces brief
```

```
Thu May  6 06:30:55.797 DST
```

Intf Name	Intf State	LineP State	Encap Type	MTU (byte)	BW (Kbps)
BE16	admin-down	admin-down	ARPA	9216	1000000
BE16.160	up	up	802.1Q VLAN	9220	1000000
BE16.161	up	up	802.1Q VLAN	9220	1000000
BE16.162	up	up	802.1Q VLAN	9220	1000000
BE16.163	up	up	802.1Q VLAN	9220	1000000
Lo0	up	up	Loopback	1500	Unknown
Nu0	up	up	Null	1500	Unknown
tt44190	up	up	TUNNEL	1500	Unknown
tt44192	up	up	TUNNEL	1500	Unknown
tt44194	up	up	TUNNEL	1500	Unknown
tt44196	up	up	TUNNEL	1500	Unknown
Mg0/RSP0/CPU0/0	up	up	ARPA	1514	100000
Mg0/RSP0/CPU0/1	admin-down	admin-down	ARPA	1514	10000
Gi0/1/0/0	admin-down	admin-down	ARPA	1514	1000000
Gi0/1/0/1	admin-down	admin-down	ARPA	1514	1000000
Gi0/1/0/2	up	up	ARPA	9014	1000000
Gi0/1/0/3	up	up	ARPA	9014	1000000
Gi0/1/0/3.160	up	up	802.1Q VLAN	9022	1000000
Gi0/1/0/3.161	up	up	802.1Q VLAN	9018	1000000
Gi0/1/0/3.185	up	up	802.1Q VLAN	9022	1000000
Gi0/1/0/3.189	up	up	802.1Q VLAN	9022	1000000
Gi0/1/0/3.215	up	up	802.1Q VLAN	9022	1000000
Gi0/1/0/4	admin-down	admin-down	ARPA	1514	1000000
Gi0/1/0/5	admin-down	admin-down	ARPA	1514	1000000
Gi0/1/0/6	admin-down	admin-down	ARPA	1514	1000000
Gi0/1/0/7	up	up	ARPA	9014	1000000
Gi0/1/0/7.185	up	up	802.1Q VLAN	9022	1000000
Gi0/1/0/7.187	up	up	802.1Q VLAN	9014	1000000
Gi0/1/0/7.189	up	up	802.1Q VLAN	9022	1000000
Gi0/1/0/7.210	up	up	802.1Q VLAN	9022	1000000
Gi0/1/0/7.211	up	up	802.1Q VLAN	9022	1000000
Gi0/1/0/7.215	up	up	802.1Q VLAN	9022	1000000
Gi0/1/0/8	up	up	ARPA	9014	1000000
Gi0/1/0/9	admin-down	admin-down	ARPA	1514	1000000
Gi0/1/0/10	admin-down	admin-down	ARPA	1514	1000000
Gi0/1/0/11	admin-down	admin-down	ARPA	1514	1000000
Gi0/1/0/12	up	up	ARPA	9216	1000000
Gi0/1/0/13	admin-down	admin-down	ARPA	1514	1000000
Gi0/1/0/14	admin-down	admin-down	ARPA	1514	1000000
Gi0/1/0/15	admin-down	admin-down	ARPA	1514	1000000
Gi0/1/0/16	up	up	ARPA	9216	1000000
Gi0/1/0/17	up	up	ARPA	1514	1000000
Gi0/1/0/18	up	up	ARPA	9216	1000000
Gi0/1/0/19	up	up	ARPA	9014	1000000
Gi0/1/0/19.2127	up	up	802.1Q VLAN	9022	1000000
Gi0/1/0/19.2130	up	up	802.1Q VLAN	9022	1000000


```

      Gi0/1/0/20          up          up          ARPA 9014 1000000
Gi0/1/0/20.2125         up          up          802.1Q VLAN 9022 1000000
      Gi0/1/0/21      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/22      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/23          up          up          ARPA 9216 1000000
      Gi0/1/0/24      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/25      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/26      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/27          up          up          ARPA 1514 1000000
      Gi0/1/0/28      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/29      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/30          up          up          ARPA 9014 1000000
Gi0/1/0/30.215         up          up          802.1Q VLAN 9018 1000000
      Gi0/1/0/31          up          up          ARPA 9014 1000000
      Gi0/1/0/32      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/33      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/34      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/35      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/36      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/37      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/38      admin-down  admin-down  ARPA 1514 1000000
      Gi0/1/0/39      admin-down  admin-down  ARPA 1514 1000000
      Te0/4/0/0      err-disable  admin-down  ARPA 1514 10000000
      Te0/4/0/1      err-disable  admin-down  ARPA 1514 10000000
      Te0/4/0/2      err-disable  admin-down  ARPA 1514 10000000
      Te0/4/0/3      err-disable  admin-down  ARPA 1514 10000000
      Te0/4/0/4      err-disable  admin-down  ARPA 1514 10000000
      Te0/4/0/5      err-disable  admin-down  ARPA 1514 10000000
      Te0/4/0/6      err-disable  admin-down  ARPA 1514 10000000
      Te0/4/0/7      err-disable  admin-down  ARPA 1514 10000000
      Te0/6/0/0      admin-down  admin-down  ARPA 1514 10000000
      Te0/6/0/1      admin-down  admin-down  ARPA 1514 10000000
      Te0/6/0/2      admin-down  admin-down  ARPA 1514 10000000
      Te0/6/0/3      admin-down  admin-down  ARPA 1514 10000000

```

Table 36: show interfaces Field Descriptions

Field	Description
Interface name	Displays the name of the current interface. In the example, the interface name is TenGigE0/1/0/1.
Interface state	Displays the state of the interface. In the example, the interface is in the administratively down state.
line protocol state	Displays the state of the Layer 2 line protocol. This field may be different from the interface state if, for example, a keepalive failure has brought down the Layer 2. Note The line protocol state is not the same as the protocol state displayed in the show ip interfaces command, because it is the state of Layer 2 (media) rather than Layer 3 (IP protocol).
Hardware	Displays the current hardware type.
address is <i>n.n.n.n/n</i>	Displays the Layer 2 address (MAC address for Ethernet interfaces). Note Enter the mac-address command to configure the hardware address.

Field	Description
bia	Displays the burned-in address (BIA) for the interface. The BIA is the default L2 (MAC) address for the interface. Note The BIA is not configurable.
description	Displays the user-defined string that is associated with the interface. Note Enter the description command to configure the description associated with the interface.
Internet address	Displays the Layer 3 (IP) address for the interface. Note Enter the ipv4 address command to configure the internet address for the interface.
MTU	Displays the maximum transmission unit (MTU) for the interface. The MTU is the maximum packet size that can be transmitted over the interface. Note The MTU field indicates the interface MTU. Enter the mtu command to configure a lower MTU value at the Layer 3 level.
BW	Displays the bandwidth of the interface in kbps.
reliability	Displays the proportion of packets that are not dropped and do not have errors. Note The reliability is shown as a fraction of 255.
txload	Indicates the traffic flowing out of the interface as a proportion of the bandwidth. Note The txload is shown as a fraction of 255.
rxload	Indicates the traffic flowing into the interface as a proportion of the bandwidth. Note The rxload is shown as a fraction of 255.
Encapsulation	Layer 2 encapsulation installed on the interface.
CRC	Indicates the length of the cyclic redundancy check (CRC), in bytes. Note The CRC is not present for all interface types. Note Enter the pos crc command to configure the CRC.

Field	Description
loopback or controller loopback	Indicates whether the hardware has been configured to be looped back. Note Enter the loopback command to configure the loopback or controller loopback.
keepalive	Displays the configured keepalive value, in seconds. Note Enter the keepalive command to configure the value of the keepalive field. Note The <i>keepalive</i> field may not be present if it is not applicable to the interface type.
Duplexity	Displays the duplexity of the link. Note This field is present only for shared media. Note For some interface types, you can configure the duplexity by entering the full-duplex and half-duplex commands.
Speed	Speed and bandwidth of the link in Mbps. This field is present only when other parts of the media info line are also displayed (see duplexity and media type).
Media Type	Media type of the interface.
output flow control	Whether output flow control is enabled on the interface.
input flow control	See output flow control.
ARP type	Address Resolution Protocol (ARP) type used on the interface. This value is not displayed on interface types that do not use ARP.
ARP timeout	ARP timeout in <i>hours:mins:secs</i> . This value is configurable using the arp timeout command.
Last clearing of counters	Time since the following counters were last cleared using the clear counters exec command in <i>hours:mins:secs</i> .

Field	Description
5 minute input rate	Average number of bits and packets received per second in the last 5 minutes. If the interface is not in promiscuous mode, it senses network traffic that it sends and receives (rather than all network traffic). Note The 5-minute period referenced in the command output is a load interval that is configurable under the interface. The default value is 5 minutes. Note The 5-minute input should be used only as an approximation of traffic per second during a given 5-minute period. This rate is exponentially weighted average with a time constant of 5 minutes. A period of four time constants must pass before the average will be within two percent of the instantaneous rate of a uniform stream of traffic over that period.
5 minute output rate	Average number of bits and packets transmitted per second in the last 5 minutes. If the interface is not in promiscuous mode, it senses network traffic that it sends and receives (rather than all network traffic). Note The 5-minute period referenced in the command output is a load interval that is configurable under the interface. The default value is 5 minutes. Note The 5-minute output should be used only as an approximation of traffic per second during a given 5-minute period. This rate is exponentially weighted average with a time constant of 5 minutes. A period of four time constants must pass before the average will be within two percent of the instantaneous rate of a uniform stream of traffic over that period.
packets input	Number of packets received on the interface that were successfully delivered to higher layers.
bytes input	Total number of bytes successfully received on the interface.
total input drops	Total number of packets that were dropped after they were received. This includes packets that were dropped due to configured quality of service (QoS) or access control list (ACL) policies. This does not include drops due to unknown Layer 3 protocol.

Field	Description
drops for unrecognized upper-level protocol	Total number of packets that could not be delivered because the necessary protocol was not configured on the interface.
Received broadcast packets	Total number of Layer 2 broadcast packets received on the interface. This is a subset of the total input packet count.
Received multicast packets	Total number of Layer 2 multicast packets received on the interface. This is a subset of the total input packet count.
runts	Number of received packets that were too small to be handled. This is a subset of the input errors count.
giants	Number of received packets that were too large to be handled. This is a subset of the input errors count.
throttles	Number of packets dropped due to throttling (because the input queue was full).
parity	Number of packets dropped because the parity check failed.
input errors	Total number of received packets that contain errors and hence cannot be delivered. Compare this to total input drops, which counts packets that were not delivered despite containing no errors.
CRC	Number of packets that failed the CRC check.
frame	Number of packets with bad framing bytes.
overrun	Number of overrun errors experienced by the interface. Overruns represent the number of times that the receiver hardware is unable to send received data to a hardware buffer because the input rate exceeds the receiver's ability to handle the data.
ignored	Total number of ignored packet errors. Ignored packets are those that are discarded because the interface hardware does not have enough internal buffers. Broadcast storms and bursts of noise can result in an increased number of ignored packets.
abort	Total number of abort errors on the interface.
packets output	Number of packets received on the interface that were successfully delivered to higher layers.

Field	Description
bytes output	Total number of bytes successfully received on the interface.
total output drops	Number of packets that were dropped before being transmitted
Received broadcast packets	Number of Layer 2 broadcast packets transmitted on the interface. This is a subset of the total input packet count.
Received multicast packets	Total number of Layer 2 multicast packets transmitted on the interface. This is a subset of the total input packet count.
output errors	Number of times that the receiver hardware was unable to handle received data to a hardware buffer because the input rate exceeded the receiver's ability to handle the data.
underruns	Number of underrun errors experienced by the interface. Underruns represent the number of times that the hardware is unable to transmit data to a hardware buffer because the output rate exceeds the transmitter's ability to handle the data.
applique	Number of applique errors.
resets	Number of times that the hardware has been reset. The triggers and effects of this event are hardware-specific.
output buffer failures	Number of times that a packet was not output from the output hold queue because of a shortage of MEMD shared memory.
output buffers swapped out	Number of packets stored in main memory when the output queue is full; swapping buffers to main memory prevents packets from being dropped when output is congested. The number is high when traffic is bursty.
carrier transitions	Number of times the carrier detect (CD) signal of a serial interface has changed state.

Related Commands

Command	Description
show controller interface	Displays information that is specific to the interface hardware statistics for all interfaces configured on the networking device.

show mlacp inconsistencies

To check and highlight inconsistencies and misconfigurations in mlacp setup, use the **show mlacp inconsistencies** command in EXEC mode.

show mlacp inconsistencies

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values.

Command Modes EXEC

Command History	Release	Modification
	Release 4.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes the proper task IDs. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator.

Task ID	Task ID	Operation
	bundle	read

Examples The following example shows how to view mlacp inconsistencies:

```
RP/0/RSP0/CPU0:router # show mlacp inconsistencies
```


shutdown (global)

To disable an interface (to force an interface to be administratively down), use the **shutdown** command in interface configuration mode. To enable an interface that has been shut down, use the **no** form of this command.

shutdown

no shutdown

Syntax Description

This command has no keywords or arguments.

Command Default

The interface is enabled by default and is disabled only when shutdown is configured.



Note

When you add an interface to the system, or when all the configuration for an interface is lost or deleted, the interface is put in the shutdown state by the system adding the interface.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **shutdown** command to move the state of an interface to administratively down, which stops traffic flowing through the interface. This state does not stop other action from happening on the interface such as changes in configuration, protocols, encapsulations, and so forth.

The **shutdown** command also marks the interface as unavailable. To check whether the state of an interface is down, use the **show interfaces** command in EXEC mode, which displays the current state of the interface. An interface that has been shut down is shown as administratively down in the display from the **show interfaces** command.

Task ID

Task ID	Operations
interface	read, write

Examples

In the following example, POS interface 0/4/0/2 is turned off:

```
RP/0/RSP0/CPU0:router(config)# interface POS 0/4/0/2
RP/0/RSP0/CPU0:router(config-if)# shutdown
```

Related Commands

Command	Description
show interfaces , on page 608	Displays statistics for all interfaces configured on the router or on a specific node.
show ip interface	Displays IPv4 interface status and configuration.



Internal Ethernet Control Network Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring internal ethernet control on your router.

- [clear controller backplane ethernet location statistics, page 622](#)
- [show controllers backplane ethernet local brief, page 623](#)
- [show controllers backplane ethernet local clients, page 625](#)
- [show controllers backplane ethernet local detail, page 627](#)
- [show controllers backplane ethernet local multicast groups, page 629](#)
- [show controllers backplane ethernet location brief, page 631](#)
- [show controllers backplane ethernet location clients, page 634](#)
- [show controllers backplane ethernet location detail, page 636](#)
- [show controllers backplane ethernet location multicast groups, page 639](#)
- [show controllers switch ports, page 641](#)
- [show controllers switch stats, page 643](#)

clear controller backplane ethernet location statistics

To delete the aggregate statistics of traffic sent and received over the control Ethernet, use the **clear controller backplane ethernet location statistics** command in EXEC mode.

clear controller backplane ethernet location *node-id* **statistics**

Syntax Description

<i>node-id</i>	Identifies the node whose controller information you want to delete. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples

The following example shows how to clear all client statistics on the node at 0/1/1:

```
RP/0/RSP0/CPU0:router# clear controller backplane ethernet location 0/1/1 clients all
statistics
```

show controllers backplane ethernet local brief

To display brief information about the Ethernet interface that connects the node to the router control Ethernet, use the **show controllers backplane ethernet local brief** command in EXEC mode.

show controllers backplane ethernet local brief

Syntax Description This command has no keywords or arguments.

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples The following example shows the output from the **show controllers backplane ethernet local brief** command:

```
RP/0/RSP0/CPU0:router# show controllers backplane ethernet local brief

FastEthernet0_RP1_0 (local) is up, MTU 1514 bytes
    561688 packets input, 53760372 bytes
    683424 packets output, 216565877 bytes
RP/0/RSP0/CPU0:router#
```

Table 37: show controllers backplane ethernet local brief Field Descriptions

Field	Description
MTU	Maximum packet size, in bytes, that a particular interface can handle.
packets input	Total number of packets received.
packets output	Total number of packets transmitted.

Related Commands	Command	Description
	show controllers backplane ethernet local clients , on page 625	

Command	Description
show controllers backplane ethernet local detail , on page 627	
show controllers backplane ethernet local multicast groups , on page 629	Displays all multicast addresses currently being used by active interfaces on the router.

show controllers backplane ethernet local clients

To display information about local client applications, use the **show controllers backplane ethernet local clients** command in EXEC mode.

show controllers backplane ethernet local clients [*client-id statistics*] *all*

Syntax Description

<i>client-id statistics</i>	Displays a list of client statistics for the specified client ID. Range is from 1 to 22.
all	Displays a list of all client applications and their IDs.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples

The following example shows the output from the **show controllers backplane ethernet local clients** command, which displays a list of client statistics for client ID 1:

```
RP/0/RSP0/CPU0:router# show controllers backplane ethernet local clients 1 statistics

Client QNET, ES Client Id 1, PID 20498 running on FastEthernet0_33_1
490915 packets input, 41918238 bytes
490912 packets delivered, 41918120 bytes
0 packets discarded (0 bytes) in garbage collection
0 (0 bytes) unicast packets filtered
0 (0 bytes) multicast packets filtered
0 (0 bytes) buffer mgmt policy discards
555660 packets output, 134265364 bytes, 0 could not be transmitted
```

Table 38: show controllers backplane ethernet local clients Field Descriptions

Field	Description
Client	Client application name and ID, followed by backplane client application statistics.

show controllers backplane ethernet local clients

Field	Description
PID	Process ID.

Related Commands

Command	Description
show controllers backplane ethernet local brief , on page 623	Displays brief information about the Ethernet interface that connects the node to the router control Ethernet.
show controllers backplane ethernet local detail , on page 627	
show controllers backplane ethernet local multicast groups , on page 629	Displays all multicast addresses currently being used by active interfaces on the router.

show controllers backplane ethernet local detail

To display detailed information for the Ethernet interface that connects the node to the router control Ethernet, use the **show controllers backplane ethernet local detail** command in EXEC mode.

show controllers backplane ethernet local detail

Syntax Description This command has no keywords or arguments.

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples The following example shows the output from the **show controllers backplane ethernet local detail** command:

```
RP/0/RSP0/CPU0:router# show controllers backplane ethernet local detail

FastEthernet0_33_1 is up
  Hardware is 10/100 Ethernet, H/W address is 5246.4800.0211
  Internet address is 10.0.2.17
  MTU 1514 bytes
  Encapsulation HFRIES (HFR Internal Ethernet Server)
  Mode : Full Duplex, Rate : 100Mb/s
    787486 packets input, 64535218 bytes, 0 total input drops
    0 packets discarded (0 bytes) in garbage collection
    3 packets discarded (582 bytes) in recv processing
  Received 8 broadcast packets, 285994 multicast packets
  Input errors: 0 CRC, 0 overrun, 0 alignment, 0 length, 0 collision
  682244 packets output, 157245225 bytes, 0 total output drops
  Output 42649 broadcast packets, 42649 multicast packets
  Output errors: 0 underruns, 0 aborts, 0 loss of carrier
```

Table 39: show controllers backplane ethernet local detail Field Descriptions

Field	Description
Hardware	Provides the hardware type, followed by the hardware address.
Internet address	IP address of the interface.

show controllers backplane ethernet local detail

Field	Description
MTU	Maximum packet size, in bytes, that a particular interface can handle.
Encapsulation	Encapsulation method assigned to the interface.
Mode	Indicates the operating mode of the interface, followed by transmission data.

Related Commands

Command	Description
show controllers backplane ethernet local brief , on page 623	Displays brief information about the Ethernet interface that connects the node to the router control Ethernet.
show controllers backplane ethernet local clients , on page 625	
show controllers backplane ethernet local multicast groups , on page 629	Displays all multicast addresses currently being used by active interfaces on the router.

show controllers backplane ethernet local multicast groups

To display all multicast addresses currently being used by active interfaces on the router, use the **show controllers backplane ethernet local multicast groups** command in EXEC mode.

show controllers backplane ethernet local multicast groups

Syntax Description This command has no keywords or arguments.

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples The following example shows the output from the **show controllers backplane ethernet local multicast groups** command:

```
RP/0/RSP0/CPU0:router# show controllers backplane ethernet local multicast groups
```

Intf Name	Multicast address	Client Id	registered for this address Name
FastEthernet0_RP1_CPU0	0100.0000.0064	2	GSP
	0100.0000.0065	2	GSP
	0100.0000.0066	2	GSP
	0100.0000.0068	2	GSP
	0100.0000.006a	2	GSP
	0100.0000.006c	2	GSP
	0100.0000.006e	2	GSP
	0100.0000.0070	2	GSP
	0100.0000.0072	2	GSP
	0100.0000.2774	2	GSP
	0100.0000.2775	2	GSP
	0100.0000.2776	2	GSP
	0100.0000.2778	2	GSP
	0100.0000.277a	2	GSP
	0100.0000.277c	2	GSP
	0100.0000.277e	2	GSP
	0100.0000.2780	2	GSP
	0100.0000.2782	2	GSP
	0100.0000.2784	2	GSP
	0100.0000.2786	2	GSP

--More--

Table 40: show controllers backplane ethernet local multicast groups Field Descriptions

Field	Description
Intf Name	Identifies the interface whose multicast addresses are displayed. Note A multicast address is a single address that refers to multiple network devices.
Multicast address	Multicast addresses associated with the specified interface. Note A multicast address is a single address that refers to multiple network devices.
ID	Client identifier.
Name	Client application name.

Related Commands

Command	Description
show controllers backplane ethernet local brief, on page 623	Displays brief information about the Ethernet interface that connects the node to the router control Ethernet.
show controllers backplane ethernet local clients, on page 625	
show controllers backplane ethernet local detail, on page 627	

show controllers backplane ethernet location brief

To display brief information about backplane Ethernet interfaces in a particular location, use the **show controllers backplane ethernet location brief** command in EXEC mode.

show controllers backplane ethernet location *node-id* brief

Syntax Description This command has no keywords or arguments.

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples The following example shows the output from the **show controllers backplane ethernet location brief** command:

```
RP/0/RSP0/CPU0:router# show controllers backplane ethernet location 0/1/0 brief

FastEthernet0_0_CPU0 (local) is up, MTU 1514 bytes
    57569 packets input, 5999749 bytes
    36963 packets output, 4105673 bytes
RP/0/RSP0/CPU0:router#
```

Table 41: show controllers backplane ethernet location brief Field Descriptions

Field	Description
MTU	Maximum packet size, in bytes, that a particular interface can handle.
packets input	Total number of packets received.
packets output	Total number of packets transmitted.

Field	Description
Input errors	Displays the number of errors received by the interface. Input errors occur when incoming cells are dropped or corrupted. The possible input errors are as follows: • CRC—Number of times that the checksum calculated from the data received did not match the checksum from the transmitted data. • overrun—Number of times that the receiver hardware was incapable of handing received data to a hardware buffer because the input rate exceeded the receiver's capability to handle the data. • alignment—Number of nonoctets received. • length—Number of times the interface prevented the ASIC from overrunning a maximum transmission unit (MTU) size. • collision—Number of messages retransmitted because of an Ethernet collision.
packets output	Total number of messages transmitted by the system.
bytes	Total number of bytes, including data and MAC encapsulation, in the error-free packets transmitted by the system.
total output drops	Total number of packets dropped from the output queue because the queue was full.
Output	Indicates the total number of broadcast and multicast packets transmitted by the interface.
Output errors	Displays the number of errors transmitted on the interface. Output errors occur when outgoing cells are dropped or corrupted. The possible types output errors are as follows: • underruns—Number of times that the far-end transmitter has been running faster than the near-end receiver can handle. • aborts—Number of illegal sequences of one bits on the interface. • loss of carrier—Number of times the interface was reset because the carrier detect line of that interface was up, but the line protocol was down.

Related Commands

Command	Description
show controllers backplane ethernet location clients , on page 634	Displays information about client applications in a particular location.
show controllers backplane ethernet location detail , on page 636	Displays detailed information about the backplane interfaces in a particular location.

show controllers backplane ethernet location clients

To display information about client applications in a particular location, use the **show controllers backplane ethernet location clients** command in EXEC mode.

show controllers backplane ethernet location *node-id* clients *client-id* {statistics| all}

Syntax Description

<i>node-id</i>	Identifies the node whose local client applications information you want to display. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. Note Enter the show platform command to obtain the <i>node-id</i> .
<i>client-id</i> statistics	Displays a list of client statistics for the specified client ID. Range is from 1 through 22.
<i>client-id</i> all	Displays a list of all client applications and their IDs.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples

The following example shows the output from the **show controllers backplane ethernet location clients** command, which displays detailed information about the backplane client application statistics:

```
RP/0/RSP1/CPU0:router# show controllers backplane ethernet location 0/0/CPU0 clients all
```

Intf Name	Client ethernet server id	Client Process Id	Description
FE0_0_CPU0	1	12307	QNX network manager
	2	28726	Group services
	3	0	Reserved for Attach
	4	0	Plugin controller
	5	0	Designated SC
	6	0	HFR H/W diags
	7	0	IP packet handler
	8	16415	Redundancy controller
	9	0	HFR Virtual console
	10	12312	HFR Virtual terminal


```

11          12305      Control ethernet echo
12          0          Control eth echo reply
13          0          Card Configuration Protocol
14          0          Reserved for Attach
15          0          Chassis controller
16          0          Forwarding driver
17          16414      MBI hello
18          0          MBI Boot Server Source
19          0          HSR ES client
20          0          Test application 1
21          0          Test application 2
22          0          Test client out-of-band

```

Table 42: show controllers backplane ethernet location clients Field Descriptions

Field	Description
Intf Name	Identifies the Ethernet interface.
Client ethernet server id	Identifies the Ethernet server for the specified interface.
Client process id	Identifies the client process running on the specified interface.
Description	Describes the backplane client application.

Related Commands

Command	Description
show controllers backplane ethernet location brief , on page 631	display brief information about backplane Ethernet interfaces in a particular location
show controllers backplane ethernet location detail , on page 636	Displays detailed information about the backplane interfaces in a particular location.

show controllers backplane ethernet location detail

To display detailed information about the backplane interfaces in a particular location, use the **show controllers backplane ethernet location detail** command in EXEC mode.

show controllers backplane ethernet location *node-id* detail

Syntax Description This command has no keywords or arguments.

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples The following example shows the output from the **show controllers backplane ethernet location detail** command:

```
RP/0/RSP0/CPU0:router# show controllers backplane ethernet location 0/1/0 detail

FastEthernet0_1_0 is up
  Hardware is 10/100 Ethernet, H/W address is 5246.4800.0010
  Internet address is 10.0.0.16
  MTU 1514 bytes
  Encapsulation HFRIES (HFR Internal Ethernet Server)
  Mode : Full Duplex, Rate : 100Mb/s
    426422 packets input, 0 bytes, 1 total input drops
    14170 packets discarded (935122 bytes) in garbage collection
    16 packets discarded (5344 bytes) in recv processing
    Received 0 broadcast packets, 0 multicast packets
    Input errors: 0 CRC, 0 overrun, 0 alignment, 0 length, 0 collision
    440272 packets output, 0 bytes, 0 total output drops
    Output 0 broadcast packets, 0 multicast packets
    Output errors: 0 underruns, 0 aborts, 0 loss of carrier
```

Table 43: show controllers backplane ethernet location detail Field Descriptions

Field	Description
Hardware	Provides the hardware type, followed by the hardware address.
Internet address	IP address of the interface.

Field	Description
MTU	Maximum packet size, in bytes, that a particular interface can handle.
Encapsulation	Encapsulation method assigned to the interface.
Mode	Indicates the operating mode of the interface, followed by transmission data.
packets input	Total number of packets received.
bytes	Total number of bytes, including data and MAC encapsulation, in the error-free packets received by the system.
total input drops	Total number of packets dropped from the input queue because the queue was full.
packets discarded in garbage collection	Number of packets and bytes discarded.
packets discarded in recv processing	Number of packets and bytes discarded.
Received broadcast packets and multicast packets	Indicates the total number of broadcast and multicast packets received by the interface.
Input errors	Displays the number of errors received by the interface. Input errors occur when incoming cells are dropped or corrupted. The possible input errors are as follows: • CRC—Number of times that the checksum calculated from the data received did not match the checksum from the transmitted data. • overrun—Number of times that the receiver hardware was incapable of handing received data to a hardware buffer because the input rate exceeded the receiver's capability to handle the data. • alignment—Number of nonoctets received. • length—Number of times the interface prevented the ASIC from overrunning a maximum transmission unit (MTU) size. • collision—Number of messages retransmitted because of an Ethernet collision.
packets output	Total number of messages transmitted by the system.

show controllers backplane ethernet location detail

Field	Description
bytes	Total number of bytes, including data and MAC encapsulation, in the error-free packets transmitted by the system.
total output drops	Total number of packets dropped from the output queue because the queue was full.
Output	Indicates the total number of broadcast and multicast packets transmitted by the interface.
Output errors	Displays the number of errors transmitted on the interface. Output errors occur when outgoing cells are dropped or corrupted. The possible types output errors are as follows: • underruns—Number of times that the far-end transmitter has been running faster than the near-end receiver can handle. • aborts—Number of illegal sequences of one bits on the interface. • loss of carrier—Number of times the interface was reset because the carrier detect line of that interface was up, but the line protocol was down.

Related Commands

Command	Description
show controllers backplane ethernet location brief , on page 631	display brief information about backplane Ethernet interfaces in a particular location
show controllers backplane ethernet location clients , on page 634	Displays information about client applications in a particular location.

show controllers backplane ethernet location multicast groups

To display information about backplane interfaces that are in multicast groups in a particular location, use the **show controllers backplane ethernet location multicast groups** command in EXEC mode.

show controllers backplane ethernet location multicast groups

Syntax Description This command has no keywords or arguments.

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples The following example shows the output from the **show controllers backplane ethernet location multicast groups** command, which displays detailed information about the backplane interfaces.

RP/0/RSP0/CPU0:router# **show controllers backplane ethernet location multicast groups**

Intf Name	Multicast address	Client registered for this address	
		Id	Name
FastEthernet0_2_CPU0	0100.0000.0064	2	GSP
	0100.0000.0065	2	GSP
	0100.0000.0066	2	GSP
	0100.0000.0068	2	GSP
	0100.0000.006a	2	GSP
	0100.0000.006c	2	GSP
	0100.0000.006e	2	GSP
	0100.0000.0071	2	GSP
	0100.0000.2774	2	GSP
	0100.0000.2775	2	GSP
	0100.0000.2776	2	GSP
	0100.0000.2778	2	GSP
	0100.0000.277a	2	GSP
	0100.0000.2782	2	GSP
	0100.0000.278a	2	GSP
	0100.0000.2796	2	GSP
	0100.0000.2798	2	GSP

Table 44: show controllers backplane ethernet location multicast groups Field Description

Field	Description
Intf Name	Identifies the interface whose multicast addresses are displayed. Note A multicast address is a single address that refers to multiple network devices.
Multicast address	Multicast addresses associated with the specified interface. Note A multicast address is a single address that refers to multiple network devices.
ID	Client identifier.
Name	Client application name.

Related Commands

Command	Description
show controllers backplane ethernet location brief , on page 631	display brief information about backplane Ethernet interfaces in a particular location
show controllers backplane ethernet location clients , on page 634	Displays information about client applications in a particular location.
show controllers backplane ethernet location detail , on page 636	Displays detailed information about the backplane interfaces in a particular location.

show controllers switch ports

To display status on a switch port, use the **show controllers switch ports** command in EXEC mode.

show controllers switch {0|1} ports

Syntax Description

{0 1}	Instance of the controller.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples

The following example shows the output from the **show controllers switch ports** command, which displays status about switch controller ports on switch 0:

```
RP/0/RSP0/CPU0:router# show controllers switch 0 ports

Ports Active on Switch 0
FE Port  2  STP State : FORWARDING  (Connected to - 0/RP1)
FE Port  9  STP State : FORWARDING  (Connected to - 0/SM0)
FE Port 10  STP State : FORWARDING  (Connected to - 0/SM1)
GE Port  2  STP State : FORWARDING
```

Table 45: show controllers switch ports Field Descriptions

Field	Description
Ports Active	Indicates the active switch ports on the controller.
FE Port	Identifies the FE port.
GE Port	Identifies the GE port.
STP State	The state of the Spanning-Tree Protocol: FORWARDING or DISABLED.

show controllers switch ports

Field	Description
Connected to	The node that owns the specified port.

Related Commands

Command	Description
show controllers switch stats, on page 643	Displays statistics on all ports on the switch controllers.

show controllers switch stats

To display statistics on all ports on the switch controllers, use the **show controllers switch stats** command in EXEC mode.

show controllers switch {0|1} stats

Syntax Description	{0 1} Instance of the controller.				
Command Default	No default behavior or values.				
Command Modes	EXEC				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Release 3.7.2</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Release 3.7.2	This command was introduced.
Release	Modification				
Release 3.7.2	This command was introduced.				

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples The following example shows the output from the **show controllers switch stats** command, which displays information about switch controller statistics on all ports:

```
RP/0/RSP0/CPU0:router# show controllers switch 0 stats

Port 1 : Tx Frames 541417 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 2 : Tx Frames 820214 Tx Errors 0 Rx Frames 707494 Rx Errors 1
Port 3 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 4 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 5 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 6 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 7 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 8 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 9 : Tx Frames 633546 Tx Errors 0 Rx Frames 158250 Rx Errors 2
Port 10 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 11 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 12 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 13 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 14 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 15 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 16 : Tx Frames 0 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 25 : Tx Frames 541417 Tx Errors 0 Rx Frames 0 Rx Errors 0
Port 26 : Tx Frames 541330 Tx Errors 0 Rx Frames 587917 Rx Errors 0
```

Table 46: show controllers switch stats Field Descriptions

Field	Description
Tx Frames 541417	Number of packets transmitted from the switch port.
Tx Errors 0	Number of transmission errors.
Rx Frames 0	Number of packets received on the switch port.
Rx Errors 0	Number of receive errors.

Related Commands

Command	Description
show controllers switch ports, on page 641	Displays status on a switch port.



Integrated Routing and Bridging Commands on the Cisco ASR 9000 Series Router

This module describes the commands to configure Integrated Routing and Bridging (IRB) on the Cisco ASR 9000 Series Router.

- [interface bvi, page 646](#)
- [routed interface bvi, page 648](#)
- [show interfaces bvi, page 650](#)

interface bvi

To create a bridge-group virtual interface (BVI), use the **interface bvi** command in global configuration mode. To delete the BVI, use the **no** form of this command.

interface bvi *identifier*

no interface bvi *identifier*

Syntax Description

<i>identifier</i>	Number for the BVI interface from 1 to 65535.

Command Default

No BVI interface is configured.

Command Modes

Global configuration (config)

Command History

Release	Modification
Release 4.0.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The BVI is a virtual interface within the router that acts like a normal routed interface. The BVI does not support bridging itself, but acts as a gateway for the corresponding bridge-domain to a routed interface within the router.

Aside from supporting a configurable MAC address, a BVI supports only Layer 3 attributes, and has the following characteristics:

- Uses a MAC address taken from the local chassis MAC address pool, unless overridden at the BVI interface.
- Is configured as an interface type using the **interface bvi** command and uses an IPv4 or IPv6 address that is in the same subnet as the hosts on the segments of the bridged domain. The BVI also supports secondary addresses.
- The BVI identifier is independent of the bridge-domain identifier. These identifiers do not need to correlate like they do in Cisco IOS software.
- Is associated to a bridge group using the **routed interface bvi** command.
- The following interface commands are supported on a BVI:
 - **arp purge-delay**

- **arp timeout**
- **bandwidth** (The default is 10 Gbps and is used as the cost metric for routing protocols for the BVI.)
- **ipv4**
- **ipv6** (Supported on Gigabit Ethernet line cards only in Cisco IOS XR Release 4.1)
- **mac-address**
- **mtu** (The default is 1514 bytes.)
- **shutdown**

- The BVI supports IP helper addressing and secondary IP addressing.

To display bridge group, bridge-domain, interface status, line protocol state, and packet counters for the specified BVI, use the **show l2vpn bridge domain interface bvi** form of the **show l2vpn bridge domain (VPLS)** command. To display the reason that a BVI is down, you can use the **detail** keyword option.

Task ID

Task ID	Operation
interface	read, write

Examples

The following example shows how to create a BVI interface and configure its IPv4 address:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface bvi 50
RP/0/RSP0/CPU0:router(config-if)# ipv4 address 10.10.0.4 255.255.255.0
RP/0/RSP0/CPU0:router(config-if)# commit
```

Related Commands

Command	Description
routed interface bvi , on page 648	Associates the specified bridge group virtual interface (BVI) as the routed interface for the interfaces assigned to the bridge domain.
show interfaces bvi , on page 650	Displays interface status, line protocol state, and packet counters for the specified BVI.
show adjacency	
show l2vpn bridge-domain (VPLS)	Display information for the bridge ports such as attachment circuits and pseudowires for the specific bridge domains.

routed interface bvi

To associate the specified bridge group virtual interface (BVI) as the routed interface for the interfaces assigned to the bridge domain, use the **routed interface bvi** command in L2VPN bridge group bridge domain configuration mode. To remove the BVI as the routed interface for the interfaces assigned to the bridge domain, use the **no** form of this command.

routed interface bvi *identifier*

no routed interface bvi *identifier*

Syntax Description	<i>identifier</i>	Number for the BVI interface from 1 to 65535.

Command Default	No routed interface is configured.

Command Modes	L2VPN bridge group bridge domain configuration mode (config-l2vpn-bg-bd)

Command History	Release	Modification
	Release 4.0.1	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

- Only one BVI can be configured in any bridge domain.
- The same BVI can not be configured in multiple bridge domains.

Task ID	Task ID	Operation
	l2vpn	read, write

Examples	The following example shows association of a BVI interface numbered “50” on the bridge domain named “IRB”:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# l2vpn
RP/0/RSP0/CPU0:router(config-l2vpn)# bridge group 10
RP/0/RSP0/CPU0:router(config-l2vpn-bg) # bridge-domain IRB
```

```
RP/0/RSP0/CPU0:router(config-l2vpn-bg-bd) # routed interface bvi 50
RP/0/RSP0/CPU0:router(config-l2vpn-bg-bd) # commit
```

Related Commands

Command	Description
interface bvi, on page 646	Creates a BVI interface.
l2vpn	Enters L2VPN configuration mode.
bridge group (VPLS)	Creates a bridge group so that it can contain bridge domains and then to assign network interfaces to the bridge domain.
bridge-domain (VPLS)	Establishes a bridge domain and enters L2VPN bridge group bridge domain configuration mode.
show interfaces bvi, on page 650	Displays interface status, line protocol state, and packet counters for the specified BVI.
show adjacency	
show l2vpn bridge-domain (VPLS)	Display information for the bridge ports such as attachment circuits and pseudowires for the specific bridge domains.

show interfaces bvi

To display interface status, line protocol state, and packet counters for the specified BVI, use the **show interfaces bvi** command in EXEC mode.

show interfaces bvi *identifier* [**accounting** | **brief** | **description** | **detail** | **location** *location*]

Syntax Description

<i>identifier</i>	Number for the BVI interface from 1 to 65535.
accounting	(Optional) Displays the number of packets of each protocol type that have been sent through the interface.
brief	(Optional) Displays summary information about the interface.
description	(Optional) Displays summary status information and the description for the interface.
detail	(Optional) Displays detailed information about the interface. This is the default.
location <i>location</i>	(Optional) Displays information the interface on the specified node. The <i>location</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

Detailed information about the BVI interface is displayed.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 4.0.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
interface	read

Examples

The following example shows sample output for the **show interfaces bvi** command:

```
RP/0/RSP0/CPU0:router# show interfaces bvi 50
Wed Feb 16 16:05:11.508 PST
BVI50 is up, line protocol is up
  Interface state transitions: 3
  Hardware is Bridge-Group Virtual Interface, address is 0000.0000.0002
  Description: IRB Routed Example
  Internet address is 172.16.0.1/24
  MTU 9014 bytes, BW 10000000 Kbit (Max: 10000000 Kbit)
    reliability 255/255, txload 0/255, rxload 0/255
  Encapsulation ARPA, loopback not set,
  ARP type ARPA, ARP timeout 04:00:00
  Last input 00:00:37, output 00:00:00
  Last clearing of "show interface" counters never
  5 minute input rate 0 bits/sec, 0 packets/sec
  5 minute output rate 0 bits/sec, 0 packets/sec
    25643 packets input, 1641152 bytes, 0 total input drops
    0 drops for unrecognized upper-level protocol
    Received 0 broadcast packets, 25445 multicast packets
    208 packets output, 9472 bytes, 0 total output drops
    Output 8 broadcast packets, 0 multicast packets
```

Table 47: show interfaces bvi Field Descriptions

Field	Description
BVIx is	Displays the state of the specified BVI interface, where <i>x</i> is the number of the interface. The possible values are: administratively down, down, or up.
line protocol is	Displays the state of the line protocol for the BVI interface. The possible values are: administratively down, down, or up. Note The line protocol state is not the same as the protocol state displayed in the show ip interfaces command, because it is the state of Layer 2 (media) rather than Layer 3 (IP protocol).
Interface state transitions:	Displays the number of times the interface has changed states.
Hardware is	Displays Bridge-Group Virtual Interface for a BVI.
address is	Layer 2 MAC address of the BVI.
Description:	Displays the description of the interface when configured.
Internet address is <i>n.n.n.n/n</i>	Layer 3 IP address of the BVI in dotted decimal format.

Field	Description
MTU	Displays the maximum transmission unit (MTU) for the interface. The MTU is the maximum packet size that can be transmitted over the interface. 1514 is the default.
BW x Kbit	Displays the current bandwidth of the interface in kilobits per second.
Max:	Displays the maximum bandwidth available on the interface in kilobits per second.
reliability	Displays the proportion of packets that are not dropped and do not have errors. Note The reliability is shown as a fraction of 255.
txload	Indicates the traffic flowing out of the interface as a proportion of the bandwidth. Note The txload is shown as a fraction of 255.
rxload	Indicates the traffic flowing into the interface as a proportion of the bandwidth. Note The rxload is shown as a fraction of 255.
Encapsulation	Layer 2 encapsulation on the interface.
loopback	Always displays “not set” for a BVI because loopbacks are not supported.
ARP type	Address Resolution Protocol (ARP) type used on the interface.
ARP timeout	ARP timeout in the format hours:mins:secs. This value is configurable using the arp timeout command.
Last input	Number of hours, minutes, and seconds since the last packet was successfully received by an interface and processed locally on the router. Useful for knowing when a dead interface failed.
output	Number of hours, minutes, and seconds since the last packet was successfully transmitted by the interface. Useful for knowing when a dead interface failed.

Field	Description
Last clearing of “show interface” counters	Time since the counters in this command were last cleared using the clear counters Exec command in hours:mins:secs.
5 minute input rate	Average number of bits and packets received per second in the last 5 minutes. If the interface is not in promiscuous mode, it senses network traffic that it sends and receives (rather than all network traffic). Note The 5-minute period referenced in the command output is a load interval that is configurable under the interface. The default value is 5 minutes. Note The 5-minute input should be used only as an approximation of traffic per second during a given 5-minute period. This rate is exponentially weighted average with a time constant of 5 minutes. A period of four time constants must pass before the average will be within two percent of the instantaneous rate of a uniform stream of traffic over that period.
5 minute output rate	Average number of bits and packets transmitted per second in the last 5 minutes. If the interface is not in promiscuous mode, it senses network traffic that it sends and receives (rather than all network traffic). Note The 5-minute period referenced in the command output is a load interval that is configurable under the interface. The default value is 5 minutes. Note The 5-minute output should be used only as an approximation of traffic per second during a given 5-minute period. This rate is exponentially weighted average with a time constant of 5 minutes. A period of four time constants must pass before the average will be within two percent of the instantaneous rate of a uniform stream of traffic over that period.
packets input	Number of packets received on the interface that were successfully delivered to higher layers.
bytes	Number of bytes received on the interface.

Field	Description
total input drops	Total number of valid packets that were dropped after they were received. This includes packets that were dropped due to configured quality of service (QoS) or access control list (ACL) policies. This does not include drops due to unknown Layer 3 protocol.
drops for unrecognized upper-level protocol	Total number of packets that could not be delivered because the necessary protocol was not configured on the interface.
Received x broadcast packets	Total number of Layer 2 broadcast packets received on the interface. This is a subset of the total input packet count.
multicast packets	Total number of Layer 2 multicast packets received on the interface. This is a subset of the total input packet count.
packets output	Number of packets sent from the interface.
bytes	Total number of bytes successfully sent from the interface.
total output drops	Number of packets that were dropped before being transmitted.
Output x broadcast packets	Number of Layer 2 broadcast packets transmitted on the interface. This is a subset of the total output packet count.
multicast packets	Total number of Layer 2 multicast packets received on the interface. This is a subset of the total output packet count.

Related Commands

Command	Description
interface bvi , on page 646	Creates a BVI interface.
show l2vpn bridge-domain (VPLS)	Display information for the bridge ports such as attachment circuits and pseudowires for the specific bridge domains.



Link Bundling Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring Link Bundle interfaces on the Cisco ASR 9000 Series Router.

- [backbone interface, page 657](#)
- [bundle-hash, page 659](#)
- [bundle id, page 664](#)
- [bundle load-balancing hash, page 666](#)
- [bundle load-balancing hash \(EFP\), page 668](#)
- [bundle maximum-active links, page 670](#)
- [bundle minimum-active bandwidth, page 672](#)
- [bundle minimum-active links, page 673](#)
- [bundle port-priority, page 675](#)
- [clear lacp counters, page 677](#)
- [hw-module load-balance bundle l2-service l3-params, page 679](#)
- [interface \(bundle\), page 681](#)
- [isolation recovery-delay, page 682](#)
- [lacp cisco enable, page 683](#)
- [lacp fast-switchover, page 685](#)
- [lacp packet-capture, page 687](#)
- [lacp period short, page 690](#)
- [lacp system priority, page 693](#)
- [member neighbor, page 695](#)
- [mlacp connect, page 696](#)
- [mlacp iccp-group, page 698](#)

- [mlacp node, page 699](#)
- [mlacp port-priority, page 700](#)
- [mlacp system mac, page 701](#)
- [mlacp system priority, page 703](#)
- [redundancy iccp group, page 705](#)
- [redundancy one-way, page 706](#)
- [show bundle, page 707](#)
- [show bundle brief, page 722](#)
- [show bundle load-balancing, page 725](#)
- [show bundle replication bundle-ether, page 729](#)
- [show iccp group, page 730](#)
- [show lacp bundle, page 732](#)
- [show lacp counters, page 735](#)
- [show lacp io, page 737](#)
- [show lacp packet-capture, page 740](#)
- [show lacp port, page 743](#)
- [show lacp system-id, page 746](#)
- [show mlacp, page 748](#)
- [show mlacp counters, page 750](#)

backbone interface

To configure interchassis group ICCP backbone interface, use the **backbone interface** command in the redundancy group ICCP configuration mode. To return to the default behavior, use the **no** form of this command.

backbone interface *type interface-path-id*

no backbone interface *type interface-path-id*

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

None

Command Modes

Redundancy group ICCP configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
config-services	read, write

Examples

The following example shows how to configure interchassis group ICCP backbone interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# redundancy iccp group 10
RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)# backbone interface GigabitEthernet
```

0/2/1/0

RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)#

Related Commands

Command	Description
redundancy iccp group, on page 705	Configures Inter Chassis Communication Protocol (ICCP) parameters.

bundle-hash

To display the source and destination IP addresses for the member links, distributed by the load balancing feature, in a multilink interface bundle, use the **bundle-hash** command in EXEC mode.

bundle-hash {**Bundle-Ether** *bundle-id*| **members** {**GigabitEthernet**| **TenGigabitEthernet**} *interface-path-id*}

Syntax Description

Bundle-Ether <i>bundle-id</i>	Specifies an Ethernet bundle for which you want to calculate load balancing. Range is 1- 65535.
members	Identifies specific bundle member links for which you want to calculate load balancing.
GigabitEthernet	Specifies the Gigabit Ethernet interface for which you want to calculate load balancing.
TenGigE	Specifies the 10 Gigabit Ethernet interface for which you want to calculate load balancing.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Bundle interface traffic is distributed over the various member links of a bundle according to a hash function. The **bundle-hash** command allows you to determine which bundle member link will carry a particular flow of traffic.

You can use the **bundle-hash** command to get the following information:

- Which members are used for a specified source/destination address pair,
- such as 10.10.10.1 20.20.20.1
- The destination IP address for a specified source IP address on a specified member.
- The load balancing distribution—how many times the members of a bundle are used for a specified range of IP addresses.

**Note**

The **bundle-hash** command does not display all possible IP addresses in an entire series. It stops displaying addresses after all the addresses for all the members of the bundle have been displayed once.

The **bundle-hash** command invokes a utility that initially prompts you to select some options. Based on the options you select, the utility prompts you more options to select. The initial options to select are as follows:

- L3/3-tuple or L4/7-tuple
- Single pair or Range
- IPv4 or IPv6

The **bundle-hash** command utility prompts you for these options as follows:

- Specify load-balance configuration (L3/3-tuple or L4/7-tuple) (L3,L4):
- Single SA/DA pair (IPv4,IPv6) or range (IPv4 only): S/R [S]:
- Enter bundle type IP V4 (1) or IP V6 (2):
- Enter source IP V4 address:
- Enter destination IP V4 address:
- Compute destination address set for all members? [y/n]:
- Enter subnet prefix for destination address set:
- Enter bundle IP V4 address [10.10.10.10]:

You may also be prompted to make further option choices depending on your selections.

You can use the **show bundle** command to get IP address information.

[Table 48: bundle-hash Command Options, on page 660](#) provides a general summary of the options and the information you need to provide for each selected option. The actual information that you need to provide depends on the selections you make and may vary from the information provided in [Table 48: bundle-hash Command Options, on page 660](#).

Table 48: bundle-hash Command Options

Option	Information You Need to Provide
L3/3-tuple	L3 information: • Source IP address • Destination IP address • Destination subnet prefix • Bundle IP address
L4/7-tuple	L3 information: • Source IP address • Destination IP address • Protocol L4 information: • Source port • Destination port Platform-related information: • Router ID • Ingress interface
Single pair	Information for a single source port and destination port. The utility uses this information to calculate the hash and display the bundle load-balance distribution among the user-provided physical/bundle links. The default is single mode. While in single mode, you may receive the following prompt:
Range	Information for sets of source and destination addresses to generate a packet flow for each set. The utility uses this information to calculate the hash for the generated packet flows and display the user-provided egress member links/bundle interfaces and the number of packet flows on each link.
IPv4	IPv4 addresses
IPv6	IPv6 addresses

Compute destination address set for all members [y|n]:

If you enter y(es), several sample IPv4 addresses in the destination subnet are generated, and the link is calculated for each sample address. During this calculation, the destination network address is derived from the destination IPv4 address and the subnet prefix.

Task ID

Task ID	Operations
bundle	read

Examples

The following example shows how to calculate load balancing across the members of a link bundle (bundle-ether 28) using the 3-tuple hash algorithm, a single source and destination, and IPv4 addresses:

```
RP/0/RSP0/CPU0:router# bundle-hash bundle-ether 28

Specify load-balance configuration (L3/3-tuple or L4/7-tuple) (L3,L4): 13
Single SA/DA pair (IPv4,IPv6) or range (IPv4 only): S/R [S]: s

Enter bundle type IP V4 (1) or IP V6 (2): 1
Enter source IP V4 address: 10.12.28.2
Enter destination IP V4 address: 10.12.28.1
Compute destination address set for all members? [y/n]: y
Enter subnet prefix for destination address set: 8
Enter bundle IP V4 address [10.12.28.2]: 10.12.28.2

Link hashed to is GigabitEthernet0/6/5/7

Destination address set for subnet 10.0.0.0:
 10.0.0.6 hashes to link GigabitEthernet0/1/5/6
 10.0.0.8 hashes to link GigabitEthernet0/6/5/5
 10.0.0.12 hashes to link GigabitEthernet0/6/5/6
 10.0.0.2 hashes to link GigabitEthernet0/6/5/7
 10.0.0.1 hashes to link GigabitEthernet0/1/5/7
```

The following example shows how to calculate load balancing across the members of a link bundle (bundle-ether 28) using the 3-tuple hash algorithm, a range of source and destinations, and IPv4 addresses:

```
RP/0/RSP0/CPU0:router# bundle-hash bundle-ether 28

Specify load-balance configuration (L3/3-tuple or L4/7-tuple) (L3,L4): 13
Single SA/DA pair (IPv4,IPv6) or range (IPv4 only): S/R [S]: r

Maximum number of flows (num src addr * num dst addr): 65536

Enter first source IP address: 10.12.28.2
Enter subnet prefix for source address set: 8
Enter number of source addresses (1-245): 20
Enter source address modifier (1-12) [def:1]: 5

Enter destination IP address: 10.12.28.1
Enter subnet prefix for destination address set: 8
Enter number of destination addresses (1-245): 20
Enter destination address modifier (1-12) [1]: 5
Many to many (M) or simple pairs (S)? [M]: s

Calculating simple pairs...
```

```

Total number of hits 20
Member GigabitEthernet0/1/5/6 has 6 hits
Member GigabitEthernet0/6/5/5 has 2 hits
Member GigabitEthernet0/6/5/6 has 2 hits
Member GigabitEthernet0/6/5/7 has 9 hits
Member GigabitEthernet0/1/5/7 has 1 hits

```

The following example shows how to calculate load balancing across the members of a link bundle (bundle-ether 202) using the 7-tuple hash algorithm, a single source and destination, and IPv4 addresses:

```

RP/0/RSP0/CPU0:router# bundle-hash bundle-ether 202

Specify load-balance configuration (L3/3-tuple or L4/7-tuple) (L3,L4): 14
Single SA:SP/DA:SP pair (IPv4,IPv6) or range (IPv4 only): S/R [S]: s

Enter bundle type IP V4 (1) or IP V6 (2): 1
Enter source IP V4 address: 172.20.180.167
Enter destination IP V4 address: 172.30.15.42

  Ingress interface --
  - physical interface format: [ GigabitEthernet | TenGigE ]R/S/I/P
  - bundle interface format:   [ Bundle-Ether ]bundle-id
  Enter ingress interface: GigabitEthernet0/2/0/3

  Enter L4 protocol (TCP,UDP,SCTP,L2TPV3,NONE): UDP
  Enter src port: 1000
  Enter destination port: 2000
Compute destination address set for all members? [y/n]: n

S/D pair 172.20.180.167:1000/172.30.15.42:2000 -- Link hashed to is GigabitEthernet0/3/3/6

Another? [y]: y

Enter bundle type IP V4 (1) or IP V6 (2): 1
Enter source IP V4 address [172.20.180.167]: 172.20.180.167
Enter destination IP V4 address [172.30.15.42]: 172.30.15.42

  Ingress interface --
  - physical interface format: [GigabitEthernet | TenGigE ]R/S/I/P
  - bundle interface format:   [ Bundle-Ether ]bundle-id
  Enter ingress interface [GigabitEthernet0/2/0/3]: GigabitEthernet0/2/0/3

  Enter L4 protocol (TCP,UDP,SCTP,L2TPV3,NONE) [udp]: UDP
  Enter src port [1000]: 1000
  Enter destination port [2000]: 2000
Compute destination address set for all members? [y/n]: y
Enter subnet prefix for destination address set: 24
Enter bundle IP V4 address [172.20.180.167]: 209.165.200.225

S/D pair 172.20.180.167:1000/172.30.15.42:2000 -- Link hashed to is GigabitEthernet0/3/3/6

Destination address set for subnet 172.30.15.0:
  S/D pair 172.20.180.167:1000/172.30.15.1:2000 hashes to link GigabitEthernet0/3/3/6
  S/D pair 172.20.180.167:1000/172.30.15.6:2000 hashes to link GigabitEthernet0/2/0/1
  S/D pair 172.20.180.167:1000/172.30.15.3:2000 hashes to link GigabitEthernet0/2/0/2
  S/D pair 172.20.180.167:1000/172.30.15.5:2000 hashes to link GigabitEthernet0/0/3/0

Another? [y]: n

```

Related Commands

Command	Description
show bundle , on page 707	Displays information about configured bundles.

bundle id

To add a port to an aggregated interface (or bundle), enter the **bundle id** command in interface configuration mode.

```
bundle id bundle-id [mode {active| on| passive}]
no bundle id bundle-id
```

Syntax Description

<i>bundle-id</i>	Number of the bundle (from 1 to 65535) on which you want to add a port.
mode	(Optional) Specifies the mode of operation, as follows: • active—Use the mode active keywords to run Link Aggregation Control Protocol (LACP) in active mode over the port. When you specify active, the port joins the bundle and is activated if LACP determines that it is compatible. • on—Use the mode on keywords to configure an Etherchannel link over the port (no LACP running over the port). • passive—Use the mode passive keywords to run LACP in passive mode over the port. When you specify passive, LACP packets are sent only if the other end of the link is using active LACP. The link joins the bundle and is activated if LACP packets are exchanged and the port is compatible.

Command Default

The default setting is **mode on**.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you enter the **bundle id** command and specify a port that is already bound to a bundle, the port unbinds from the original bundle and becomes attached to the new bundle. If the bundle numbers are the same, then the port does not unbind, but the mode changes to mode you specified with the **bundle id** command.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example shows how to add a port onto a bundle:

```
RP/0/RSP0/CPU0:router(config)# interface GigabitEthernet 0/1/5/0
RP/0/RSP0/CPU0:router(config-if)# bundle id 1
```

The following example shows how to add an active LACP port onto an aggregated interface (or bundle):

```
RP/0/RSP0/CPU0:router(config)# interface GigabitEthernet 0/6/5/7
RP/0/RSP0/CPU0:router(config-if)# bundle id 5 mode active
```

Related Commands

Command	Description
show bundle, on page 707	Displays information about configured bundles.
show interfaces, on page 608	Displays statistics for all interfaces configured on the router or for a specific node.
show lacp bundle, on page 732	Displays detailed information about LACP ports and their peers.
show lacp port, on page 743	

bundle load-balancing hash

To specify the hash function to be used for traffic being forwarded over a bundle interface, use the **bundle load-balancing hash** command in interface configuration mode. To return to the default, use the **no** form of the command.

bundle load-balancing hash {dst-ip| src-ip}

no bundle load-balancing hash {dst-ip| src-ip}

Syntax Description

dst-ip	Specifies a load-balancing hash based on destination IP address.
src-ip	Specifies a load-balancing hash based on source IP address.

Command Default

The default platform hashes for the bundle are used. For IPv4 traffic, the default hash is based on router ID, source IP, destination IP, and if available, source and destination Layer 4 port.

Command Modes

Interface configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Bundle load balancing hashes based on source IP address or destination IP address are used for MGSCP deployment models where traffic forwarded from the subscriber side of the network is based on source IP address, and traffic forwarded from the core side of the network is based on destination IP address.

Task ID

Task ID	Operation
bundle	read, write

Examples

The following example configures load balancing on bundle members based on source IP address:

```
RP/0/RSP0/CPU0:router(config)#interface Bundle-Ether 100
RP/0/RSP0/CPU0:router(config-if)# bundle load-balancing hash src-ip
```


Related Commands

Command	Description
interface (bundle) , on page 681	Specifies or creates a new bundle and enters interface configuration mode for that bundle.
lacp cisco enable , on page 683	Enables use of Cisco-specific TLVs in addition to standard TLVs for negotiating and exchanging LACP information on link bundles.
show bundle , on page 707	Displays information about configured bundles.
show bundle load-balancing , on page 725	Displays load balancing information, such as the ports, usage, weight, and distribution of traffic on individual members of a link bundle interface.

bundle load-balancing hash (EFP)

To configure all egressing traffic on a particular subinterface of a bundle to flow through the same physical member link, use the **bundle load-balancing hash (EFP)** command in subinterface configuration mode.

bundle load-balancing hash *hash-value* [**auto**]

no bundle load-balancing hash *hash-value* [**auto**]

Syntax Description

<i>hash-value</i>	Numeric value that specifies the physical member link through which all egressing traffic in this bundle will flow. The values are 1 through 64.
auto	The physical member link through which all egressing traffic on this bundle will flow is automatically chosen.

Command Default

Ethernet flow point (EFP) load balancing is enabled.

Command Modes

Subinterface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The <i>hash-value</i> range was changed from an upper limit of 8 to 64.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command is only available on an Ethernet Bundle subinterface with Layer 2 transport (**l2transport**) enabled.

This command allows the user to configure all egressing traffic on the fixed members of a bundle to flow through the same physical member link. If the active members of the bundle change, the traffic for the bundle may get mapped to a different physical link that has a hash value that matches the configured value.

Task ID

Task ID	Operations
vlan	read, write

Examples

The following example shows how to configure all egressing traffic on the fixed members of a bundle to flow through the same physical member link automatically.

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface bundle-ether 1.1 l2transport
RP/0/RSP0/CPU0:router(config-subif)# bundle load-balancing hash auto
```

The following example shows how to configure all egressing traffic on the fixed members of a bundle to flow through a specified physical member link.

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface bundle-ether 1.1 l2transport
RP/0/RSP0/CPU0:router(config-subif)# bundle load-balancing hash 1
```

Related Commands

Command	Description
bundle-hash , on page 659	Displays the source and destination IP addresses for the member links.
interface (bundle) , on page 681	Specifies or creates a new bundle and enters interface configuration mode for that bundle.
show bundle , on page 707	Displays information about configured bundles.
show bundle load-balancing , on page 725	Displays load balancing information, such as the ports, usage, weight, and distribution of traffic on individual members of a link bundle interface.

bundle maximum-active links

To designate one active link and one link in standby mode that can take over immediately for a bundle if the active link fails, use the **bundle maximum-active links** command in interface configuration mode. To return to the default maximum active links value, use the **no** form of this command.

bundle maximum-active links *links*

no bundle maximum-active links *links*

Syntax Description

<i>links</i>	Number of active links you want to bring up in the specified bundle, up to the maximum supported on the platform. The range is 1 to 64.

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **bundle maximum-active links** command is supported only for bundles that are not running LACP.

- Running Link Aggregation Control Protocol (LACP), and the **hot-standby** option is implemented.
- Not running LACP.

If the **bundle maximum-active links** command is issued, then only the highest-priority link within the bundle is active. The priority is based on the value from the **bundle port-priority** command, where a lower value is a higher priority. Therefore, we recommend that you configure a higher priority on the link that you want to be the active link.

- Another Cisco IOS XR device using the same option.
- Another device using an IEEE standard-based switchover. (Cisco does not recommend using this option because unexpected behavior, such as the peer sending traffic on the standby link, can occur.)

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example shows how to set the number of active links required to bring up a specific bundle. In this example, the user sets the required number of active links required to bring up Ethernet bundle 5 to 2:

```
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 5
RP/0/RSP0/CPU0:router(config-if)# bundle maximum-active links 1
```

Related Commands

Command	Description
bundle minimum-active links, on page 673	Sets the number of active links required to bring up a specific bundle.
show bundle, on page 707	Displays information about configured bundles.

bundle minimum-active bandwidth

To set the minimum amount of bandwidth required before a user can bring up a specific bundle, use the **bundle minimum-active bandwidth** command in interface configuration mode.

bundle minimum-active bandwidth *kbps*

Syntax Description

kbps Minimum bandwidth required before you can bring up a bundle. Range is from 1 through a number that is equivalent to the combined bandwidths of 8 TenGigabitEthernet interfaces.

Command Default

The default setting is *kbps* = 1.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example shows how to set the minimum amount of bandwidth required before a user can bring up a specific bundle. In this example, the user sets the minimum amount of bandwidth required to bring up Ethernet bundle 1 to 620000:

```
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 1
RP/0/RSP0/CPU0:router(config-if)# bundle minimum-active bandwidth 620000
```

Related Commands

Command	Description
show bundle , on page 707	Displays information about configured bundles.

bundle minimum-active links

To set the number of active links required to bring up a specific bundle, use the **bundle minimum-active links** command in interface configuration mode.

bundle minimum-active links *links*

Syntax Description

<i>links</i>	Minimum number of active links allowed in the specified bundle. The range is from 1 through 64.

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	The command range maximum was changed from 8 to 64.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example shows how to set the number of active links required to bring up a specific bundle. In this example, the user configures Ethernet bundle 5 so that 2 links must be active before the bundle can be brought up:

```
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 5
RP/0/RSP0/CPU0:router(config-if)# bundle minimum-active links 2
```

Related Commands

Command	Description
bundle maximum-active links, on page 670	
show bundle, on page 707	Displays information about configured bundles.

bundle port-priority

To configure Link Aggregation Control Protocol (LACP) priority for a port , enter the **bundle port-priority** command in interface configuration mode. To return to the default LACP priority value, use the **no** form of this command.

bundle port-priority *priority*

no bundle port-priority *priority*

Syntax Description

<i>priority</i>	Priority for this port, where a lower value equals a higher priority. Replace the <i>priority</i> argument with a number. Range is from 1 through 65535.

Command Default

priority: 32768

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The LACP priority value forms part of the port ID, which is transmitted within the LACP packets that are exchanged with the peer. The peer uses the LACP packets to determine whether a given port should carry traffic for the bundle.

For Multi-Gigabit Service Control Point (MGSCP), the **bundle port-priority** command applies to working links.



Note

A lower LACP value is a higher LACP priority for the port.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example shows how to configure LACP priority on a port:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# bundle port-priority 1
```

Related Commands

Command	Description
bundle id, on page 664	Adds a port to an aggregated interface or bundle.
show lacp bundle, on page 732	Displays detailed information about LACP ports and their peers.
show lacp port, on page 743	
show lacp system-id, on page 746	Displays the local system ID used by the LACP.

clear lacp counters

To clear Link Aggregation Control Protocol (LACP) counters for all members of all bundles, all members of a specific bundle, or for a specific port, enter the **clear lacp counters** command in EXEC mode.

clear lacp counters [**bundle** **Bundle-Ether** *bundle-id*] **port** {**GigabitEthernet** *interface-path-id*| **TenGigE** *interface-path-id*}]

Syntax Description

bundle	(Optional) Clears LACP counters for all members of a bundle.
Bundle-Ether <i>node-id</i>	(Optional) Ethernet bundle. Use the <i>node-id</i> argument to specify the node ID number of the LACP counters you want to clear. Range is 1 through 65535.
port	(Optional) Clears all LACP counters on the specified bundle or interface.
GigabitEthernet	(Optional) Gigabit Ethernet interface. Use the <i>interface-path-id</i> argument to specify the Gigabit Ethernet interface whose LACP counters you want to clear.
TenGigE	(Optional) Ten Gigabit Ethernet interface. Use the <i>interface-path-id</i> argument to specify the Ten Gigabit Ethernet interface whose LACP counters you want to clear.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	execute
basic-services	read, write

Examples

The following example shows how to clear LACP counters:

```
RP/0/RSP0/CPU0:router# clear lacp counters
```

Related Commands

Command	Description
show lacp counters, on page 735	Displays LACP statistics.

hw-module load-balance bundle l2-service l3-params



Note

Effective with Cisco IOS XR Release 4.0.1, the **hw-module load-balance bundle l2-service l3-params** command is replaced by the **load-balancing flow** L2VPN configuration command. See the **load-balancing flow** command in the *Cisco ASR 9000 Series Aggregation Services Router L2VPN and Ethernet Services Command Reference* for more information.

To configure load balancing for L2 services using L3 parameters, use the **hw-module load-balance bundle l2-service l3-params** command in global configuration mode. To disable load balance L2 services, use the **no** form of this command.

hw-module load-balance bundle l2-service l3-params

no hw-module load-balance bundle l2-service l3-params

Syntax Description

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.1	This command was introduced.
Release 4.0.0	This command was replaced by the load-balancing flow command.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command enables the L2 service-specific load-balancing for bundle Ethernet Flow Points (EFPs). By default, bundle load-balancing is done based on the MAC SA/DA fields in the packet header. When L2 service-specific load-balancing is configured, all traffic egressing bundle EFPs are load-balanced based on the IPv4 source and destination addresses in the packet. If the packet does not have IPv4 addresses, the default load-balancing is used.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to configure load balancing for L2 services using L3 parameters:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# hw-module load-balance bundle l2-service l3-params
```

interface (bundle)

To create a new bundle and enter interface configuration mode for that bundle, use the **interface (bundle)** command in global configuration mode. To delete a bundle, use the **no** form of this command.

interface Bundle-Ether *bundle-id*

no interface Bundle-Ether *bundle-id*

Syntax Description

Bundle-Ether	Specifies or creates an Ethernet bundle interface.
<i>bundle-id</i>	Number from 1 to 65535 that identifies a particular bundle.

Command Default

No bundle interface is configured.

Command Modes

Global configuration (config)

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

You must be in a user group associated with a task group that includes the proper task IDs. The command reference guides include the task IDs required for each command. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
bundle	read, write

Examples

The following example shows how to create an Ethernet bundle and enter interface configuration mode:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 3
RP/0/RSP0/CPU0:router(config-if)#
```

Related Commands

Command	Description
show bundle , on page 707	Displays information about configured bundles.

isolation recovery-delay

To specify a delay before clearing the isolation condition after recovery from failure, use the **isolation recovery-delay** command in the redundancy group ICCP configuration mode. To return to the default value, use the **no** form of this command.

isolation recovery-delay *seconds*

no isolation recovery-delay *seconds*

Syntax Description	<i>seconds</i>	Recovery delay in seconds.

Command Default By default, the delay is set to 180 seconds.

Command Modes Redundancy group ICCP configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples The following example shows how to configure ICCP parameters:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# redundancy iccp group 10
RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)# isolation recovery-delay 35
RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)#
```

Task ID	Task ID	Operations
	config-services	read, write

Related Commands	Command	Description
	redundancy iccp group , on page 705	Configures Inter Chassis Communication Protocol (ICCP) parameters.

lacp cisco enable

To enable use of Cisco-specific TLVs in addition to standard TLVs for negotiating and exchanging LACP information on link bundles, use the **lacp cisco enable** command in interface configuration mode. To return to the default, use the **no** form of the command.

lacp cisco enable [link-order signaled]

no lacp cisco enable [link-order signaled]

Syntax Description

link-order signaled	(Optional) Includes link order numbering as part of the LACP processing.
Note	This keyword is required for MGSCP.

Command Default

Cisco type-length values (TLVs) are not used.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

You must be in a user group associated with a task group that includes the proper task IDs. The command reference guides include the task IDs required for each command. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **lacp cisco enable link-order signaled** command is required on bundle interfaces supporting deployment of Multi-Gigabit Service Control Point (MGSCP), and must be configured symmetrically on both the access and core bundle. When link order signaling is enabled, then only one set of Link Ordering Numbers (LONs) are used for the bundle, and LACP processing of LONs is enabled for load balancing tables.

The LONs from the highest priority LACP system take precedence. Where both systems have the same LACP system ID (for example, with MGSCP where both ends of the bundle terminate on the same device), the LONs from the bundle interface with the numerically lowest bundle ID take precedence.

When **lacp cisco enable** command is configured without link order signaling, then links are assigned ordering numbers as they become active and keep them until the link goes inactive. The numbers are exchanged using LACP, but they are not used.

Task ID

Task ID	Operation
bundle	read, write

Examples

The following example enables the use of Cisco TLVs to include link order numbering as part of the LACP processing on this bundle:

```
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 100
RP/0/RSP0/CPU0:router(config-if)# lacp cisco enable link-order signaled
```

Related Commands

Command	Description
interface (bundle) , on page 681	Specifies or creates a new bundle and enters interface configuration mode for that bundle.

lacp fast-switchover

To disable the wait-while timer in the LACP state machine, use the **lacp fast-switchover** command in interface configuration mode. To re-enable the wait-while timer, use the **no** form of this command.

lacp fast-switchover

no lacp fast-switchover

Syntax Description This command has no keywords or arguments.

Command Default The wait-while timer in the LACP state machine is enabled.

Command Modes Interface configuration (config-if)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you have 1:1 link protection enabled (you set the value of the **bundle maximum-active links** command to 1) on a bundle with member links running LACP, you can optionally disable the wait-while timer in the LACP state machine. Disabling this timer causes a bundle member link in standby mode to expedite its normal state negotiations, thereby enabling a faster switchover from a failed active link to the standby link.

Regardless of the type of switchover you are using, the default IEEE standard-based or the faster proprietary optimized switchover, the state negotiations of the standby link is expedited. (For more information about the switchover types, refer to the [bundle maximum-active links, on page 670](#) command.) However, enabling the **lacp fast-switchover** command provides a greater benefit if used with the IEEE standard-based switchover.

Examples The following example shows how to disable the wait-while timer for LACP-enabled member links of Bundle-Ether 28:

```
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 28
RP/0/RSP0/CPU0:router(config-if)# lacp fast-switchover
```

The following example shows how to re-enable the wait-while timer for LACP-enabled member links of Bundle-Ether 28:

```
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 28
RP/0/RSP0/CPU0:router(config-if)# no lacp fast-switchover
```

Related Commands

Command	Description
bundle maximum-active links , on page 670	

lacp packet-capture

To capture LACP packets so that their information can be displayed by the **show lacp packet-capture** command, use the **lacp packet-capture** command in EXEC mode.

```
{lacp packet-capture gigabitethernet interface-path-id | tengige interface-path-id number-of-packets}
```

To stop capturing LACP packets or to clear captured LACP packets, use the lacp packet-capture command in EXEC mode.

```
{lacp packet-capture [bundle-ether bundle-id] [gigabitethernet interface-path-id] [tengige interface-path-id] clear| stop}
```

Syntax Description

bundle-ether	Ethernet bundle interface specified by <i>bundle-id</i> .
GigabitEthernet	Gigabit Ethernet interface specified by <i>interface-path-id</i> .
TenGigE	Ten Gigabit Ethernet interface specified by <i>interface-path-id</i> .
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
<i>bundle-id</i>	Number specifying the bundle interface. The range is 1 to 65535.
<i>number-of-packets</i>	Number of packets to capture.
clear	Clears all currently captured packets.
stop	Stops capturing packets.

Command Default

The default (no parameters) executes globally for all interfaces on the line card.

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **lACP packet-capture** command captures transmitted and received LACP packets on a single bundle member interface. The contents of these packets can then be displayed by the **show lACP packet-capture** command. If the **lACP packet-capture** command is not issued, the **show lACP packet-capture** command does not display any information.

The **lACP packet-capture** command continues capturing LACP packets until the **stop** keyword is issued for that port or that bundle. Captured packets are stored and continue to be displayed until the **clear** keyword is issued for that port or that bundle.

LACP packets can only be captured for one port on a line card at a time. Starting a packet capture on a port implicitly stops and clears all packet-captures on all other ports on that line card.

To **stop** capturing LACP packets before the specified number of packets have been captured, issue the **stop** keyword.

If **stop** is specified for a single interface, packet capturing is stopped only on that interface.

If **stop** is specified for a bundle interface, packet capturing is stopped on all members of that bundle.

If **stop** is specified globally (the default - no parameters), packet capturing is stopped on all bundle interfaces on the router.

To **clear** all captured LACP packets that are stored for an interface, issue the **clear** keyword.

If **clear** is specified for a single interface, packets are cleared only on that interface.

If **clear** is specified for a bundle interface, packets are cleared on all members of that bundle.

If **clear** is specified globally (the default - no parameters), packets are cleared on all bundle interfaces on the router.

Task ID

Task ID	Operations
bundle	read

Examples

```
RP/0/RSP0/CPU0:router# lACP packet-capture pos 0/1/0/0 100
```

```
RP/0/RSP0/CPU0:router# lACP packet-capture pos 0/1/0/0 stop
```

```
RP/0/RSP0/CPU0:router# lACP packet-capture pos 0/1/0/0 clear
```

The following example shows how to capture LACP packets on a Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router# lACP packet-capture gigabitethernet 0/2/0/0 100
```

The following example shows how to stop capturing LACP packets on a Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router# lACP packet-capture gigabitethernet 0/2/0/0 stop
```

Related Commands

Command	Description
show lacp io, on page 737	Displays the LACP transmission information that used by the transmitting device for sending packets on an interface.
show lacp packet-capture, on page 740	Displays the contents of LACP packets that are sent and received on an interface.
lacp period short, on page 690	Enables a short period time interval for the transmission and reception of LACP packets.

lacp period short

To enable a short period time interval for the transmission and reception of Link Aggregation Control Protocol (LACP) packets, use the **lacp period short** command in interface configuration mode. To return to the default short period, use the **no** form of this command.

```
lacp period short [receive interval] [transmit interval]
no lacp period short [receive interval] [transmit interval]
```

Syntax Description	receive interval	Time interval (in milliseconds) for receiving LACP packets when LACP short period is enabled. The range is 100 to 1000 and must be multiples of 100, such as 100, 200, 300, and so on.
	transmit interval	Time interval (in milliseconds) for transmitting LACP packets when LACP short period is enabled. The range is 100 to 1000 and must be multiples of 100, such as 100, 200, 300, and so on.

Command Default The default is 1000.

Command Modes Interface configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you configure a custom LACP short period *transmit* interval at one end of a link, you must configure the same time period for the *receive* interval at the other end of the link.



Note You must always configure the *transmit* interval at both ends of the connection before you configure the *receive* interval at either end of the connection. Failure to configure the *transmit* interval at both ends first results in route flapping (a route going up and down continuously). When you remove a custom LACP short period, you must do it in reverse order. You must remove the *receive* intervals first and then the *transmit* intervals.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example shows how to enable a default Link Aggregation Control Protocol (LACP) short period on a Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# lacp period short
RP/0/RSP0/CPU0:router(config-if)# commit
```

The following example shows how to configure custom Link Aggregation Control Protocol (LACP) short period transmit and receive intervals at both ends of a connection:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# lacp period short
RP/0/RSP0/CPU0:router(config-if)# commit
```

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# lacp period short
RP/0/RSP0/CPU0:router(config-if)# commit
```

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# lacp period short transmit 500
RP/0/RSP0/CPU0:router(config-if)# commit
```

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# lacp period short transmit 500
RP/0/RSP0/CPU0:router(config-if)# commit
```

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# lacp period short receive 500
RP/0/RSP0/CPU0:router(config-if)# commit
```

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# lacp period short receive 500
RP/0/RSP0/CPU0:router(config-if)# commit
```

Related Commands

Command	Description
show lacp io, on page 737	Displays the LACP transmission information that used by the transmitting device for sending packets on an interface.

Command	Description
show lacp packet-capture, on page 740	Displays the contents of LACP packets that are sent and received on an interface.
lacp packet-capture, on page 687	Captures LACP packets so that their information can be displayed.

lacp system priority

To configure the priority for the current system, enter the **lacp system priority** command in global configuration mode. To return to the default LACP system priority value, use the **no** form of this command.

lacp system priority *priority*

no lacp system priority *priority*

Syntax Description

<i>s</i>	Priority for this system. Replace <i>priority</i> with a number. Range is from 1 through 65535. A lower value is higher priority.

Command Default

The default setting is *priority* = 32768.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The system priority value forms part of the LACP system ID, which is transmitted within each LACP packet. The system ID, port ID and key combine to uniquely define a port within a LACP system.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example shows how to configure an LACP priority of 100 on a router:

```
RP/0/RSP0/CPU0:router(config)# lacp system priority 100
```

Related Commands

Command	Description
show lacp system-id, on page 746	Displays the local system ID used by the LACP.
show lacp bundle, on page 732	Displays detailed information about LACP ports and their peers.
show lacp port, on page 743	

member neighbor

To configure interchassis group ICCP members, use the **member neighbor** command in redundancy ICCP group configuration mode. To return to the default behavior, use the **no** form of this command.

member neighbor *neighbor-ip-address*

no member neighbor *neighbor-ip-address*

Syntax Description	<i>neighbor-ip-address</i> Specifies the ICCP member neighbor IP address.					
Command Default	None					
Command Modes	Redundancy ICCP group configuration					
Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 4.0.0</td><td>This command was introduced.</td></tr></table>		Release	Modification	Release 4.0.0	This command was introduced.
Release	Modification					
Release 4.0.0	This command was introduced.					
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.					
Task ID	<table><tr><th>Task ID</th><th>Operations</th></tr><tr><td>config-services</td><td>read, write</td></tr></table>		Task ID	Operations	config-services	read, write
Task ID	Operations					
config-services	read, write					
Examples	The following example shows how to configure interchassis group ICCP members: RP/0/RSP0/CPU0:router# configure RP/0/RSP0/CPU0:router(config)# redundancy iccp group 10 RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)# member neighbor 10.1.1.1 RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)#					
Related Commands	<table><tr><th>Command</th><th>Description</th></tr><tr><td>redundancy iccp group, on page 705</td><td>Configures Inter Chassis Communication Protocol (ICCP) parameters.</td></tr></table>		Command	Description	redundancy iccp group , on page 705	Configures Inter Chassis Communication Protocol (ICCP) parameters.
Command	Description					
redundancy iccp group , on page 705	Configures Inter Chassis Communication Protocol (ICCP) parameters.					

mlacp connect

To specify configuration options for connecting to mLACP peers, use the **mlacp connect** command in the redundancy ICCP group configuration mode. To disable this feature, use the **no** form of this command.

mlacp connect timeout *seconds*

no mlacp connect timeout *seconds*

Syntax Description

timeout	Specifies the time to wait before assuming mLACP peer is down.
<i>seconds</i>	Number of seconds to wait before assuming the mLACP peer is down.

Command Default

No default behavior or values

Command Modes

Redundancy ICCP group configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example shows how to specify configuration options for connecting to mLACP peers:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# redundancy iccp group 10
RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)# mlacp connect timeout 100
RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)#
```

Related Commands

redundancy iccp group	Configures ICCP parameters.

mlacp iccp-group

To configure ICCP redundancy group for a bundle, use the **mlacp iccp-group** command in bundle interface configuration mode. To return to the default value, use the **no** form of this command.

mlacp iccp-group *group-id*
no mlacp iccp-group *group-id*

Syntax Description

<i>group-id</i>	Specifies the ICCP redundancy group in which the bundle should operate. The group-id value ranges between 1-4294967295.

Command Default

The bundle behaves as a single chassis LAG.

Command Modes

Bundle interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
Bundle	read, write

Examples

The following example shows how to configure an ICCP redundancy group for a bundle:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 30
RP/0/RSP0/CPU0:router(config-if)# mlacp iccp-group 200
RP/0/RSP0/CPU0:router(config-if)#
```


mlacp node

To configure the mLACP node ID to be used in the ICCP group, use the **mlacp node** command in the redundancy ICCP group configuration mode. To return to the default value, use the **no** form of this command.

mlacp node *node-id*

no mlacp node *node-id*

Syntax Description

<i>node-id</i>	Specifies the unique node ID in the ICCP group for this system. The node-id value ranges between 0 to 7.

Command Default

No default behavior or values

Command Modes

Redundancy ICCP group configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example shows how to configure the mLACP node ID to be used in the ICCP group:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# redundancy iccp group 10
RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)# mlacp node 3
```

Related Commands

redundancy iccp group	Configures ICCP parameters.

mlacp port-priority

To set the priority for all member links, use the **mlacp port-priority** command in bundle interface configuration mode. To return to the default value, use the **no** form of this command.

mlacp port-priority *priority*

no mlacp port-priority *priority*

Syntax Description

<i>priority</i>	Specifies the priority for member ports. The priority value ranges between 1-65535. A lower value indicates higher priority.

Command Default

No default behavior or values

Command Modes

Bundle interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
Bundle	read, write

Examples

The following example shows how to set the priority for all member links:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether 30
RP/0/RSP0/CPU0:router(config-if)# mlacp port-priority 20
```

mlacp system mac

To configure the LACP system ID to be used in an ICCP group, use the **mlacp system mac** command in the redundancy ICCP group configuration mode. To return to the default value, use the **no** form of this command.

mlacp system mac *mac-id*

no mlacp system mac *mac-id*

Syntax Description

<i>mac-id</i>	Specifies the unique ID for the system.
Note	A non-zero value is permitted.

Command Default

No default behavior or values

Command Modes

Redundancy ICCP group configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example shows how to configure the LACP system ID to be used in an ICCP group:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# redundancy iccp group 10
RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)# mlacp system mac 1.1.1
```

Related Commands

redundancy iccp group	Configures ICCP parameters.

 mlacp system mac

mlacp system priority

To configure the LACP system priority to be used in the ICCP group, use the **mlacp system priority** command in the redundancy ICCP group configuration mode. To return to the default value, use the **no** form of this command.

mlacp system priority *priority*

no mlacp system priority *priority*

Syntax Description

<i>priority</i>	Specifies the priority for the system.
Note	Lower value indicates higher priority.

Command Default

No default behavior or values

Command Modes

Redundancy ICCP group configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	read, write

Examples

The following example shows how to configure the LACP system priority to be used in the ICCP Group:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# redundancy iccp group 10
RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)# mlacp system priority 10
```

Related Commands

redundancy iccp group	Configures ICCP parameters.

redundancy iccp group

To configure Inter Chassis Communication Protocol (ICCP) parameters, use the **redundancy iccp group** command in the global configuration mode. To return to the default, use the **no** form of this command.

redundancy iccp group *group-id*

no redundancy iccp group *group-id*

Syntax Description

<i>group-id</i>	Specifies ICCP group ID.

Command Default

ICCP redundancy is disabled.

Command Modes

Global configuration mode

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
config-services	read, write

Examples

The following example shows how to configure ICCP parameters:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# redundancy iccp group 10
RP/0/RSP0/CPU0:router(config-redundancy-iccp-group)#
```

redundancy one-way

To enforce one-way pseudowire redundancy behavior when the redundancy group is configured, use the **redundancy one-way** command in the L2VPN pseudowire class configuration mode. To return to the default, use the **no** form of this command.

redundancy one-way

no redundancy one-way

This command has no keywords or arguments.

Command Default

One-way redundancy is disabled.

Command Modes

L2VPN pseudowire class configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
l2vpn	read, write

Examples

The following example shows how to :

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# l2vpn
RP/0/RSP0/CPU0:router(config-l2vpn)# pw-class class_mpls
RP/0/RSP0/CPU0:router(config-l2vpn-pwc)# encapsulation mpls
RP/0/RSP0/CPU0:router(config-l2vpn-pwc-mpls)# redundancy one-way
RP/0/RSP0/CPU0:router(config-l2vpn-pwc-mpls)#
```

Related Commands

Command	Description
l2vpn	Enters L2VPN configuration mode.

show bundle

To display information about all bundles or a specific bundle of a particular type, use the **show bundle** command in EXEC configuration mode.

show bundle [**Bundle-Ether****Bundle-POS** *bundle-id*]

Syntax Description

Bundle-Ether	Displays information for the specified Ethernet bundle.
Bundle-POS	Displays information for the specified POS bundle.
<i>bundle-id</i>	Number from 1 to 65535 that identifies a particular bundle.

Command Default

Information is displayed for all configured bundles.

Command Modes

EXEC (#)

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.8.0	The reasons keyword was removed.
Release 4.0.0	The output for this command was replaced with a new format.
Release 4.1.0	The following output fields were added: • Load-balancing • Link order signaling • Hash type • Cisco extensions
Release 4.2.0	Support for Bundle-POS was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To see information for all bundles configured on the router, use the **show bundle** form of the command.

To see information for a specific bundle, use the **show bundle Bundle-Etherbundle-id** form of the command with the number of the configured bundle.

Task ID

Task ID	Operation
bundle	read

Examples

The following example shows output for all bundle interfaces that are configured on the router:

```
RP/0/RSP0/CPU0:router# show bundle
```

```
Bundle-Ether 2
  Status: Up
  Local links <active/standby/configured>: 1 / 0 / 1
  Local bandwidth <effective/available>: 100000 (100000) kbps
  MAC address (source): 1234.4321.1111 (Gi0/0/0/1)
  Minimum active links / bandwidth: 1 / 500 kbps
  Maximum active links: 32
  Wait-while timer: 2000 ms
  Load-balancing: Default
  LACP: Operational
    Flap suppression timer: 2500 ms
    Cisco extensions: Disabled
  mLACP: Operational
    Interchassis group: 3
    Foreign links <active/configured>: 1 / 1
    Switchover type: Revertive
    Recovery delay: 300 s
    Maximize threshold: 2 links
  IPv4 BFD: Not operational
    State: Off
    Fast detect: Enabled
    Start timer: Off
    Neighbor-unconfigured timer: Off
    Preferred min interval: 150 ms
    Preferred multiple: 3
    Destination address: Not Configured
```

Port	Device	State	Port ID	B/W, kbps
Gi0/0/0/1	Local	Active	0x8000, 0x0001	100000
MyFirstInterface	10.10.10.123	Negotiating	0x8000, 0x0032	100000

```
Bundle-Ether 3
  Status: Up
  Local links <active/standby/configured>: 1 / 0 / 1
  Local bandwidth <effective/available>: 100000 / 100000 kbps
  MAC address (source): 1234.4321.2222 (chassis pool)
  Minimum active links / bandwidth: 1 / 500 kbps
  Maximum active links: 32 (from partner)
  Wait-while timer: 100 ms
  Load-balancing:
    Link order signaling: Operational
    Hash type: Src-IP
  LACP: Operational
    Flap suppression timer: 120 s
    Cisco extensions: Enabled
  mLACP: Not configured
  IPv4 BFD: Not operational
```

Port	Device	State	Port ID	B/W, kbps
Gi0/0/0/2	Local	Active	0x8000, 0x0002	100000

Table 49: show bundle Field Descriptions

Field	Description
Bundle- <i>typenumber</i>	Full name of the bundle interface, where <i>type</i> is Ether (Ethernet) , followed by the configured <i>number</i> of the bundle.
Status:	State of the bundle on the local device, with one of the following possible values: • Admin down—The bundle has been configured to be shut down. • Bundle shut—The bundle is holding all links in Standby state and will not support any traffic. • Down—The bundle is operationally down. It has no Active members on the local device. • mLACP cold standby—The bundle is acting as a multichassis LACP Standby device, but the higher layers are not synchronized. • mLACP hot standby—The bundle is Up on the mLACP peer device, and the local device is ready to take over if that bundle goes down on the peer. • Nak—The local and peer devices cannot resolve a configuration error. • Partner down—The partner system indicates that the bundle is unable to forward traffic at its end. • PE isolated—The bundle is isolated from the core. • Up—The bundle has Active members on this device.
Local links <active/standby/configured>:	The number of links on the device (from 0 to the maximum number of supported links for the bundle) in the format <i>x / y / z</i>, with the following values: • <i>x</i>—Number of links in Active state on the bundle. • <i>y</i>—Number of links in Standby state on the bundle. • <i>z</i>—Total number of links configured on the bundle.

Field	Description
Local bandwidth <effective/available>:	Bandwidth characteristics on the bundle in kilobits per second (kbps) in the format x / y, with the following values: x—Current bandwidth of the bundle (this effective bandwidth might be limited by configuration). y—Available bandwidth of the bundle that is the sum of the bandwidths of all of the locally active links.
MAC address (source):	Layer 2 MAC address on the bundle interface in the format <code>xxxx.xxxx.xxxx</code>. The (<i>source</i>) of the address is shown in parentheses with the following possible values: - Interface name—The MAC address is from the displayed member interface type and path. - Configured—The MAC address is explicitly configured. - Chassis pool—The MAC address is from the available pool of addresses for the chassis. [unknown MAC source 0]—No MAC address could be assigned to the bundle. (You might see this display if you have not completed your bundle configuration.)
Minimum active links / bandwidth:	Displays the following information in the format x / y kbps, with the following values: x—Minimum number of active links (from 1 to the maximum number of links supported on the bundle) that are required for the bundle to be operative. y—Minimum total bandwidth on active links (in kbps) that is required for the bundle to be operative. (partner)—Shows that the peer system's value is in use.
Maximum active links:	Maximum number of links (from 1 to the maximum supported on a bundle) that can be active on the bundle.

Field	Description
Wait-while timer:	Amount of time (in milliseconds) that the system allows for the Link Aggregation Control Protocol (LACP) to negotiate on a “working” link, before moving a “protect” or backup link to Standby state.
Load balancing:	Type of load balancing in use on the bundle, with the following possible values: • Default—The default load balancing method for the system is used on the bundle, and the load balancing sub-fields are not displayed. • No value—Another load balancing method is in use on the bundle, with information shown in the related sub-fields of the display.
Link order signaling:	Displays whether or not link order signaling is operating on the bundle, with the following possible values: • Operational—Link ordering for load balancing is working through the exchange of an additional, Cisco-specific LACP type length value (TLV) that contains the ordering information. • Not operational—A consistent set of link ordering numbers (LONs) has not been received by a higher priority partner, or the LONs to be made active are not consistent with the maximum number of active links supported by the bundle. Note Link order signaling is required for the deployment of Multi-Gigabit Service Control Point (MGSCP).
Hash type:	The information to be used for the load balancing hash on the bundle, with the following possible values: • Dst-IP—The load balancing on the bundle is based on the packet's destination IP address. • Src-IP—The load balancing on the bundle is based on the packet's source IP address.

Field	Description
LACP:	Displays whether or not Link Aggregation Control Protocol (LACP) is active on the bundle, with the following possible values: • Operational—All required configuration has been committed and LACP is in use on active members. • Not operational—LACP is not working because some mandatory configuration is missing on the bundle or on the active members of the bundle. • Not configured—None of the mandatory configuration for LACP has been committed on the bundle, and the LACP sub-fields are not displayed.
Flap suppression timer:	Displays the status of the flap suppression timer, with the following possible values: • Off—The flap suppression timer is not configured using the lacp switchover suppress-flaps command. • x ms—Amount of time allowed (in milliseconds) for standby links to activate after a working link fails, before putting the link in Down state.
Cisco extensions:	Displays whether or not the Cisco-specific TLVs for LACP are enabled. The possible values are Enabled or Disabled.
mLACP:	Displays whether or not the bundle is operating using Multichassis Link Aggregation (MC-LAG), with the following possible values: • Operational—All required configuration has been committed for MC-LAG and mLACP is in use on the bundle. • Not operational—mLACP is not working because some mandatory configuration for MC-LAG is missing on the bundle or on the active members of the bundle. • Not configured—None of the mandatory configuration for MC-LAG has been committed on the bundle, and the mLACP sub-fields are not displayed.

Field	Description
ICCP group:	Number of the Interchassis Communication Protocol group (if configured) in which the bundle participates. Otherwise, “Not configured” is displayed.
Role	ICCP redundancy role of the local device for this mLACP bundle, with the following possible values: • Active—Bundle is currently active locally. • Standby—Bundle is a backup locally.
Foreign links <active/configured>:	The number of links on the remote device in the format x / y , with the following values: • x—Number of links in Active state on the remote bundle. • y—Total number of links configured on the remote bundle.
Switchover type:	Method of performing an mLACP switchover on the bundle with the following possible values: • Brute force— Trigger the failover by marking member(s) as Not Aggregatable instead of using dynamic priority management. This is the only possible method of control when the dual-homed device (DHD) is the higher-priority system. Only applies to mLACP bundles. • Non-revertive—This is the default. Dynamic priority management is used, where the bundle does not fail back to the originally active point of attachment (PoA) except when a subsequent failure occurs. • Revertive—Dynamic priority management is used, but the higher-priority device (based on the configured port priorities for the bundle) is always Active unless it has encountered a failure. This means that if a failure is encountered triggering a switchover, once the failure condition is cleared the initially-active links become active again. The switchover type can be changed from the default behavior using the mlacp switchover type command,

Field	Description
Recovery delay:	Number of seconds (s) to delay becoming the active mLACP device after recovering from a failure, using the mlacp switchover recovery delay command. “None” is displayed when the mlacp switchover recovery delay command is not configured.
Maximize threshold:	Threshold value below which mLACP switchovers are triggered to allow the bundle to reach the configured maximum number of active links or bandwidth (using the mlacp switchover maximize command), with the following possible values: • <i>x</i> links—Number of active links used as the maximum threshold target to be maintained as a trigger for an mLACP switchover on a bundle. • <i>y</i> kbps—Bandwidth in kilobits per second used as the target threshold to be maintained as a trigger for an mLACP switchover on a bundle. • Not configured—The mlacp switchover maximize command is not configured. mLACP switchovers are based on the minimum active links or bandwidth for the bundle.
IPv4 BFD:	Displays whether or not IPv4-based bidirectional forwarding (BFD) is operating on the bundle interface, with the following possible values: • Operational—All required configuration has been committed for IPv4 BFD, and it is in use on the bundle. • Not operational—IPv4 BFD is not working because some mandatory configuration is missing on the bundle or on the active members of the bundle. • Not configured—None of the mandatory configuration for IPv4 BFD has been committed on the bundle, and the BFD sub-fields are not displayed.

Field	Description
State:	When BFD is enabled, displays the state of BFD sessions on the bundle from the sessions running on bundle members that is communicated to interested protocols, with the following possible values: • Down—The configured minimum threshold for active links or bandwidth for BFD bundle members is not available so BFD sessions are down. • Off—BFD is not configured on bundle members. • Up—BFD sessions on bundle members are up because the minimum threshold for the number of active links or bandwidth is met.
Fast detect:	Displays whether or not BFD fast detection is configured on the bundle, with the following possible values: • Enabled—The bfd fast-detect command is configured on the bundle. • Disabled—The bfd fast-detect command is not configured on the bundle.
Start timer:	Displays status of the BFD start timer that is configured using the bfd address-family ipv4 timers start command, with the following possible values: • <i>x s</i>—Number of seconds (from 60 to 3600) after startup of a BFD member link session to wait for the expected notification from the BFD peer to be received, so that the session can be declared up. If the SCN is not received after that period of time, the BFD session is declared down. • Off—The start timer is not configured, and a BFD session is only declared Down upon notification from the BFD server.

Field	Description
Neighbor-unconfigured timer:	Displays status of the BFD start timer that is configured using the bfd address-family ipv4 timers nbr-unconfig command, with the following possible values: • <i>x s</i>—Number of seconds (from 60 to 3600) to wait after receipt of notification that the BFD configuration has been removed by a BFD neighbor, so that any configuration inconsistency between the BFD peers can be fixed. If the BFD configuration issue is not resolved before the specified timer is reached, the BFD session is declared down. • Off—The neighbor-unconfigured timer is not configured, and a BFD session is only declared Down upon notification from the BFD server.
Preferred min interval:	Number of milliseconds (in the format <i>x ms</i>) as the minimum control packet interval for BFD sessions. The range is 15 to 30000.
Preferred multiple:	Value of the multiplier (from 2 to 50) that is used for echo failure detection, which specifies the maximum number of echo packets that can be missed before a BFD session is declared Down.
Destination address:	Destination IP address for BFD sessions on bundle member links that is configured using the bfd address-family ipv4 destination command. “Not configured” is displayed when no destination IP address is configured.
Port	Name of the local interface port that is configured to be a bundle member, or a foreign interface received by an mLACP peer device. The possible values are the shortened interface name or a text string.
Device	Label Distribution Protocol (LDP) address of the device where the interface port is located, with the following possible values: • <i>address</i>—IP address of the device. • Local—Interface port is on the local device.

Field	Description
State	Status of the port, with one of the following possible values • Active—Link can send and receive traffic. • BFD Running—Link is inactive because BFD is down or has not been fully negotiated. • Configured—Link is not operational or remains down due to a configuration mismatch. The link is not available for switchover from failure of an active link. • Hot Standby—Link is ready to take over if an active link fails and can immediately transition to Active state without further exchange of LACP protocol data units (PDUs). • Negotiating—Link is in the process of LACP negotiation and is being held in a lower LACP state by the peer (for example, because the link is Standby on the peer.) • Standby—Link is not sending or receiving traffic, but is available for switchover from failure of an active link.
Port ID	ID of the interface port in the format <i>x/y</i>, with the following values: • <i>x</i>—Port priority as a 2-byte hexadecimal value. • <i>y</i>—Link ID as a 2-byte hexadecimal value.
B/W, kbps	Bandwidth of the interface port in kilobits per second.
State reason	Text string that is displayed beneath the bundle member listing explaining why a link has not reached Active state.

Table 50: State Reasons

Reason	Description
BFD session is unconfigured on the remote end	The link is in BFD Running state because LACP is negotiated but the BFD session from the remote device has been unconfigured.

Reason	Description
BFD state of this link is Down	The link is in BFD Running state because LACP is negotiated but the BFD session between the local system and the remote device is Down.
Bundle has been shut down	The link is in Configured state because the bundle it is configured as a member of is administratively down.
Bundle interface is not present in configuration	The link is in Configured state because the bundle it is configured as a member of has not itself been configured.
Bundle is in the process of being created	The link is in Configured state because the bundle it is configured as a member of is still being created.
Bundle is in the process of being deleted	The link is in Configured state because the bundle it is configured as a member of is being deleted.
Bundle is in the process of being replicated to this location	The link is in Configured state because the bundle it is configured as a member of is still being replicated to the linecard where the link is located.
Forced switchover to the mLACP peer	The link is in Configured state because it has been brought down as part of a forced switchover to the mLACP peer PoA. This happens only when brute force switchovers are configured.
ICCP group is isolated from the core network	The link is in Configured state because there is no connectivity through the network core for the ICCP group that the link and its bundle are part of. Therefore, the link has been brought down to prevent any traffic being sent by the LACP partner device.
Incompatible with other links in the bundle (bandwidth out of range)	The link is in Configured state because its bandwidth is incompatible with other links configured to be in the same bundle. The bandwidth may be too high or too low.
LACP shutdown is configured for the bundle	The link is in Standby state because the bundle is configured with LACP shutdown.
Incompatible with other links in the bundle (LACP vs non-LACP)	The link is in Configured state because its use of LACP is incompatible with other links configured in the same bundle. Some links might be running LACP while others are not.

Reason	Description
Link is Attached and has not gone Collecting (reason unknown)	The link is in Negotiating state because the mLACP peer PoA has not indicated that the link has gone Collecting in the Mux machine. This could be because of an issue between the mLACP peer and its LACP partner or because this state has not been communicated to the local system.
Link is Collecting and has not gone Distributing (reason unknown)	The link is in Negotiating state because the mLACP peer PoA has not indicated that the link has gone Distributing in the Mux machine. This could be because of an issue between the mLACP peer and its LACP partner or because this state has not been communicated to the local system.
Link is being removed from the bundle	The link is being removed from the bundle and remains in Configured state while this happens.
Link is Defaulted; LACPDUs are not being received from the partner	The link is in Configured state because no LACPDUs are being received from the LACP partner device. Either the partner is not transmitting or the packets are getting lost.
Link is down	The link is in Configured state because it is operationally or administratively down.
Link is Expired; LACPDUs are not being received from the partner	The link is in Negotiating state because no LACPDUs have been received from the LACP Partner device in the Current-While period and the link is now marked as Expired in the Receive machine.
Link is in the process of being created	The link is in Configured state because the member configuration is still being processed.
Link is marked as Standby by mLACP peer	The link is in Standby state because this has been indicated by the mLACP peer PoA.
Link is Not Aggregatable (reason unknown)	The link is in Configured state because it is marked as an Individual link by the mLACP peer PoA.
Link is not operational as a result of mLACP negotiations	mLACP negotiations with the peer have led to this link being kept in Configured state. This is likely to indicate a misconfiguration between the two peer devices.
Link is Standby; bundle has more links than are supported	The link is in Standby state because the number of links in Selected state has already reached the hard platform limit on the number of active links.

Reason	Description
Link is Standby due to maximum-active links configuration	The link is in Standby state because the number of links in Selected state has already reached the configured maximum active links threshold.
Link is waiting for BFD session to start	The link is in BFD Running state because LACP is negotiated but the BFD session has not started from the remote device.
Loopback: Actor and Partner have the same System ID and Key	The link is in Configured state because a loopback condition has been detected on the link—two links configured to be members of the bundle are actually connected to each other.
Not enough links available to meet minimum-active threshold	The link is in Standby state because there are not enough selectable links (i.e. links which meet the criteria to be marked Selected within the bundle) to meet the minimum active links/bandwidth threshold.
Partner has marked the link as Not Aggregatable	The link is in Configured state because it is marked as an Individual link by the LACP partner device.
Partner has not advertised that it is Collecting	The link is in Negotiating state because the LACP partner device has not advertised that the link is in Collecting state in its LACPDUs.
Partner has not echoed the correct parameters for this link	The link is in Negotiating state because the LACP partner device has not correctly echoed the local system's port information in the LACPDUs it is sending.
Partner is not Synchronized (Waiting, not Selected, or out-of-date)	The link is in Negotiating state because the mLACP peer PoA has not indicated that its LACP partner device is Synchronized. This could be because the devices are genuinely not Synchronized or because this state has not been communicated to the local system.
Partner is not Synchronized (Waiting, Standby, or LAG ID mismatch)	The link is in Negotiating state because the LACP partner device has not indicated that it is Synchronized in the LACPDUs it is sending. On the partner device the link could still be waiting for the Wait-While timer to expire, it could be held in Standby state, or there could be a misconfiguration leading to a LAG ID mismatch between links configured to be within the same bundle.

Reason	Description
Partner System ID/Key do not match that of the Selected links	The link is in Configured state because the System ID or Operational Key specified by the LACP partner device does not match that seen on other Selected links within the same bundle. This probably indicates a misconfiguration.
Wait-while timer is running	The link is in Configured state because the Wait-While timer is still running and the new state has not yet been determined.

Related Commands

Command	Description
interface (bundle) , on page 681	Specifies or creates a new bundle and enters interface configuration mode for that bundle.

show bundle brief

To display summary information about all configured bundles, use the **show bundle brief** command in EXEC configuration mode.

show bundle brief

Syntax Description This command has no keywords or arguments.

Command Default Information for all configured bundles is displayed.

Command Modes EXEC (#)

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Operation
bundle	read

Examples The following examples shows the status of two bundles, BE16 and BE100, that are configured on the router. Both are Ethernet bundles and only bundle 16 is Up:

```
RP/0/RSP0/CPU0:router# show bundle brief
Thu Mar 3 14:40:35.167 PST
```

Name	IG	State	LACP	BFD	Links act/stby/cfgd	Local b/w, kbps
BE16		- Up	On	Off	1 / 1 / 2	1000000
BE100		- Down	Off	Off	0 / 0 / 0	0

Table 51: show bundle brief Field Descriptions, on page 723 describes the fields shown in the display.

Table 51: show bundle brief Field Descriptions

Field	Description
Name	Abbreviated name of the bundle interface, with the following possible formats: • BEx—Ethernet bundle with ID number <i>x</i>.
IG	Interchassis group ID (if configured) of which the bundle is a member.
State	State of the bundle on the local device, with the following possible values: • Admin down—The bundle has been configured to be shut down. • Bundle shut—The bundle is holding all links in Standby state and will not support any traffic. • Down—The bundle is operationally down. It has no Active members on the local device. • mLACP cold standby—The bundle is acting as a multichassis LACP Standby device, but the higher layers are not synchronized. • mLACP hot standby—The bundle is Up on the mLACP peer device, and the local device is ready to take over if that bundle goes down on the peer. • Nak—The local and peer devices cannot resolve a configuration error. • Partner down—The partner system indicates that the bundle is unable to forward traffic at its end. • PE isolated—The bundle is isolated from the core. • Up—The bundle has Active members on this device.
LACP	Status of the Link Aggregation Control Protocol (LACP) on the bundle, with the following possible values: • On—LACP is in use on the bundle. • Off—LACP is not active.

Field	Description
BFD	When BFD is enabled, displays the state of BFD sessions on the bundle from the sessions running on bundle members that is communicated to interested protocols, with the following possible values: • Down—The configured minimum threshold for active links or bandwidth for BFD bundle members is not available so BFD sessions are down. • Off—BFD is not configured on bundle members. • Up—BFD sessions on bundle members are up because the minimum threshold for the number of active links or bandwidth is met.
Links act/stby/cfgd	Number of links on the bundle with a particular status in the format <i>x/y/z</i>, with the following values: • <i>x</i>—Number of links in Active state on the bundle for the local device (from 1 to the maximum number of links supported on the bundle). • <i>y</i>—Number of links in Standby state on the bundle for the local device (from 1 to the maximum number of links supported on the bundle). • <i>z</i>—Total number of links configured on the bundle for the local device (from 1 to the maximum number of links supported on the bundle).
Local b/w, kbps	Current bandwidth of the bundle on the local device (this effective bandwidth might be limited by configuration).

Related Commands

Command	Description
show bundle , on page 707	Displays information about configured bundles.

show bundle load-balancing

To display load balancing information, such as the ports, usage, weight, and distribution of traffic on individual members of a link bundle interface, use the **show bundle load-balancing** command in EXEC mode.

show bundle load-balancing [**Bundle-Ether** |**Bundle-POS** *bundle-id*] [**brief**] [**detail**] [**location**]

Syntax Description

Bundle-Ether <i>bundle-id</i>	(Optional) Specifies the number of the Ethernet bundle whose information you want to display. Range is 1 through 65535.
Bundle-POS <i>bundle-id</i>	(Optional) Specifies the number of the POS bundle whose information you want to display. Range is 1 through 65535.
brief	(Optional) Displays summary information for all nodes or for a specified location.
detail	(Optional) Displays detailed information for all nodes or for a specified location.
location	(Optional) Specifies the location of the node. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

When the **brief** or **detail** keywords are used and no **location** is specified, information is displayed for all nodes on the router.

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.2.0	The Bundle-POS keyword was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	read

Examples

The following examples show how to use the **show bundle load-balancing** command and its various keywords:

```
RP/0/RSP0/CPU0:router# show bundle load-balancing brief
```

```
Node: 0/0/CPU0
```

Interface	Count	Sub-Intf Count	Member Count	Total Wgt.
Bundle-Ether12345	10		63	134

```
Node: 0/1/CPU0
```

Interface	Count	Sub-Intf Count	Member Count	Total Wgt.
Bundle-Ether12345	10		63	134

```
show bundle load-balancing brief location 0/0/CPU0
```

```
Node: 0/0/CPU0
```

Interface	Count	Sub-Intf Count	Member Count	Total Wgt.
Bundle-Ether12345	10		63	134

```
RP/0/RSP0/CPU0:router# show bundle load-balancing location 0/0/CPU0
```

```
Bundle-Ether12345
Type:          Ether (L2)
Members:       63
Total Weighting: 134
Sub-interfaces: 10
```

```
Member Information:
  Port      ID  BW
  -----
  Gi0/0/0/1  0  10
  Gi0/0/0/3  1   1
```

```
[...]
```

```
Platform Information:
```

```
Bundle Summary Information:
```

```
Interface      : Bundle-Ether100      Ifhandle       : 0xa0000a0
Lag ID         : 1                    Virtual Port   : 20
Number of Members : 4                  Local to LC    : 1
```

```
Member Information:
```

ul_id	Interface	ifhandle	SFP	port	slot
0	Gi0/4/0/3	0x8000100	16	3	4
1	Gi0/4/0/10	0x80002c0	17	10	4
2	Gi0/4/0/17	0x8000480	17	17	4
3	Gi0/4/0/24	0x8000640	18	4	4

```
Bundle Table Information:
```

```
[NP 0]:
```

```
Unicast (Global) LAG table | Multicast (Local) LAG table
```

idx	local	ul_id	SFP	port		idx	local	ul_id	SFP	port
1	1	0	16	3		1	1	0	16	3
2	1	1	17	10		2	1	1	17	10
3	1	2	17	17		3	1	2	17	17
4	0	3	18	4		4	0	3	18	4
5	1	0	16	3		5	1	0	16	3
6	1	1	17	10		6	1	1	17	10
7	1	2	17	17		7	1	2	17	17
8	0	3	18	4		8	0	3	18	4

[NP 1]:

Unicast (Global) LAG table						Multicast (Local) LAG table				
idx	local	ul_id	SFP	port		idx	local	ul_id	SFP	port
1	0	0	16	3		1	0	0	16	3
2	0	1	17	10		2	0	1	17	10
3	0	2	17	17		3	0	2	17	17
4	1	3	18	4		4	1	3	18	4
5	0	0	16	3		5	0	0	16	3
6	0	1	17	10		6	0	1	17	10
7	0	2	17	17		7	0	2	17	17
8	1	3	18	4		8	1	3	18	4

Bundle-POS3

Type: POS (L3)
 Members: 2
 Total Weighting: 2
 Sub-interfaces: 0

Member Information:

Port:	ID	BW
-----	--	--
POS0/2/0/1	3	1
POS0/4/0/0	4	1

RP/0/RSP0/CPU0:router# **show bundle load-balancing Bundle-Ether 12345 detail location 0/0/CPU0**

Bundle-Ether12345

Type: Ether (L2)
 Members: 63
 Total Weighting: 134
 Sub-interfaces: 10

Member Information:

Port	ID	BW
-----	--	--
Gi0/0/0/1	0	10
Gi0/0/0/3	1	1

[...]

Sub-interface Information:

Sub-interface	Type	Load Balance
-----	----	-----
Bundle-Ether12345.4294967295	L2	Default
Bundle-Ether12345.2	L2	Hash: XID
Bundle-Ether12345.3	L2	Fixed: 2

[...]

RP/0/RSP0/CPU0:router# **show bundle load-balancing Bundle-Ether12345.2 location 0/0/CPU0**

Bundle-Ether12345

Type: Ether (L2)
 Members: 63

show bundle load-balancing

Total Weighting: 134
Sub-interfaces: 10

Sub-interface Information:

Sub-interface	Type	Load Balance
Bundle-Ether12345.2	L2	Hash: XOR

Platform Information:

=====

Bundle Summary Information:

Interface	: Bundle-Ether100	Ifhandle	: 0xa0000a0
Lag ID	: 1	Virtual Port	: 20
Number of Members	: 4	Local to LC	: 1

Member Information:

ul_id	Interface	ifhandle	SFP	port	slot
0	Gi0/4/0/3	0x8000100	16	3	4
1	Gi0/4/0/10	0x80002c0	17	10	4
2	Gi0/4/0/17	0x8000480	17	17	4
3	Gi0/4/0/24	0x8000640	18	4	4

Bundle Table Information:

[NP 0]:

Unicast (Global) LAG table					Multicast (Local) LAG table				
idx	local	ul_id	SFP	port	idx	local	ul_id	SFP	port
1	1	0	16	3	1	1	0	16	3
2	1	1	17	10	2	1	1	17	10
3	1	2	17	17	3	1	2	17	17
4	0	3	18	4	4	0	3	18	4
5	1	0	16	3	5	1	0	16	3
6	1	1	17	10	6	1	1	17	10
7	1	2	17	17	7	1	2	17	17
8	0	3	18	4	8	0	3	18	4

Related Commands

Command	Description
bundle-hash , on page 659	Displays the source and destination IP addresses for the member links.
bundle load-balancing hash (EFP) , on page 668	Configures all egress traffic on a particular subinterface of a bundle to flow through the same physical member link.
show bundle , on page 707	Displays information about configured bundles.

show bundle replication bundle-ether

To display the replication status of a link bundle interface, use the **show bundle replication bundle-ether** command in EXEC mode.

show bundle replication bundle-ether *bundle_id* [**all**] [**in-progress**] [**pending**]

Syntax Description

all	Shows replication status for all nodes.
in-progress	Shows only nodes with replication in progress.
pending	Shows only nodes pending replication.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	read

Examples

The following example shows how to

```
RP/0/RSP0/CPU0:router# show bundle replication bundle-ether 1 all
```

show iccp group

To display information for the ICCP parameters, use the **show iccp** command in EXEC mode.

show iccp group {*group-id*| **location** *node-id*}

Syntax Description

<i>group-id</i>	ICCP group ID.
location	Specifies the location.
<i>node-id</i>	Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
mpls-ldp	read

Examples

The following example shows the output of the **show iccp group** command:

```
RP/0/RSP0/CPU0:router#show iccp group

Redundancy Group 1
  member ip:2.2.2.2 (router2), up (connected)
  monitor: route-watch (up)
  backbone interface Gi0/2/0/3: up
  enabled applications: mLACP
  isolation recovery delay timer: 180 s, not running
Redundancy Group 2
  member ip:2.2.2.2 (router2), up (disconnected)
```



```
monitor: route-watch (up)
backbone interface Gi0/2/0/3: up
enabled applications: mLACP
isolation recovery delay timer: 180 s, not running
```

```
RP/0/RSP0/CPU0:router#show iccp group 1
Redundancy Group 1
member ip:2.2.2.2 (router2), up (connected)
monitor: route-watch (up)
backbone interface Gi0/2/0/3: up
enabled applications: mLACP
isolation recovery delay timer: 180 s, not running
```

show lacp bundle

To display detailed information about Link Aggregation Control Protocol (LACP) ports and their peers, enter the **show lacp bundle** command in EXEC mode.

show lacp bundle {**Bundle-Ether**} *bundle-id*

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	read

Examples

The following example shows how to display LACP information for a specific Ethernet Bundle:

```
RP/0/RSP0/CPU0:router# show lacp bundle Bundle-Ether 1
```

```
Flags: A - Device is in Active mode. P - Device is in Passive mode.
       S - Device sends PDUs at slow rate. F - Device sends PDUs at fast rate.
       D - Port is using default values for partner information
       E - Information about partner has expired
State: 0 - Port is Not Aggregatable. 1 - Port is Out Of Sync with peer.
       2 - Port is In Sync with peer. 3 - Port is Collecting.
       4 - Port is Collecting and Distributing.
```

Bundle-Ether1

			Minimum active		Maximum active	
B/W (Kbps)	MAC address		Links	B/W (Kbps)	Links	
0	0800.453a.651d		1	620000	32	
Port	State	Flags	Port ID		Key	System-ID
Gi0/0/2/0	1	ASDE	0x8000,	0x0001	0x0001	0x8000, 08-00-45-3a-65-01
PEER	0	PSD	0xffff,	0x0000	0x0000	0xffff, 00-00-00-00-00-00

Table 52: show lacp bundle Field Descriptions

Field	Description
Flags	Describes the possible flags that may apply to a device or port, under the “Flags” field.
State	Describes the possible flags that may apply the port state, under the “State” field.
Port	Port identifier, in the <i>rack/slot/module/port</i> notation.
State	Provides information about the state of the specified port. Possible flags are: • 0—Port is not aggregatable. • 1—Port is out of sync with peer. • 2—Port is in sync with peer. • 3—Port is collecting. • 4—Port is collecting and distributing.
Flags	Provides information about the state of the specified device or port. Possible flags are: • A—Device is in Active mode. • P—Device is in Passive mode. • S—Device requests peer to send PDUs at a slow rate. • F—Device requests peer to send PDUs at a fast rate. • D—Port is using default values for partner information. • E—Information about partner has expired.
Port ID	Port identifier, expressed in the format <i>Nxnnnn</i> . <i>N</i> is the port priority, and <i>nnnn</i> is the port number assigned by the sending router.
Key	Two-byte number associated with the specified link and aggregator. Each port is assigned an operational key. The ability of one port to aggregate with another is summarized by this key. Ports which have the same key select the same bundled interface. The system ID, port ID and key combine to uniquely define a port within a LACP system.

 show lacp bundle

Field	Description
System-ID	System identifier. The system ID is a LACP property of the system which is transmitted within each LACP packet together with the details of the link.

Related Commands

Command	Description
bundle id , on page 664	Adds a port to an aggregated interface or bundle.
show bundle , on page 707	Displays information about configured bundles.

show lacp counters

To display Link Aggregation Control Protocol (LACP) statistics, enter the **show lacp counters** command in EXEC mode.

show lacp counters {**Bundle-Ether**} *bundle-id*

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	read

Examples

The following example shows how to display LACP counters on an Ethernet bundle:

```
RP/0/RSP0/CPU0:router# show lacp counters bundle-ether 1
```

Bundle-Ether1

Port	LACPDUs		Marker		Last Cleared
	Sent	Received	Received	Resp. Sent	
Gi0/0/2/0	12	0	0	0	never

Port	Excess	Excess	Pkt Errors
Gi0/0/2/0	0	0	0

Table 53: show lacp counters Field Descriptions

Field	Description
LACPDUs	Provides the following statistics for Link Aggregation Control Protocol data units (LACPDUs): • Port • Sent • Received • Last Cleared • Excess • Pkt Errors
Marker	Provides the following statistics for marker packets: • Received • Resp. Sent • Last Cleared • Excess • Pkt Errors Note The Marker Protocol is used by IEEE 802.3ad bundles to ensure that data no longer is transmitted on a link when a flow is redistributed away from that link.

Related Commands

Command	Description
clear lacp counters, on page 677	Clears LACP counters for all members of all bundles, all members of a specific bundle, or for a specific port.

show lacp io

To display the Link Aggregation Control Protocol (LACP) transmission information that used by the transmitting device for sending packets on an interface, use the **show lacp io** command in EXEC mode.

show lacp io {**Bundle-Ether**} *bundle-id* {**GigabitEthernet**| **TenGigE**} *interface-path-id*

Syntax Description

Bundle-Ether <i>bundle-id</i>	(Optional) Displays information for the Ethernet bundle interface with the specified <i>bundle-id</i> . The range is 1 through 65535.
GigabitEthernet	(Optional) Displays information for the Gigabit Ethernet interface with the specified <i>interface-path-id</i> .
TenGigE	(Optional) Displays information for the Ten Gigabit Ethernet interface with the specified <i>interface-path-id</i> .
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

The default takes no parameters and displays information for all actively transmitting interfaces.

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command displays information only for interfaces that are actively transmitting packets.

Task ID

Task ID	Operations
bundle	read

Examples

The following example shows how to display Link Aggregation Control Protocol (LACP) information for the Ethernet bundle interface with bundle ID 28.

```
RP/0/RSP0/CPU0:router# show lacp io bundle-ether 28

Thu Jun 18 16:28:54.068 PST

Bundle-Ether28

Interface GigabitEthernet0/1/5/6
=====
Interface handle:      0x01180100
Interface media type:  Ethernet
Fast periodic interval: 1000ms
Source MAC address:    0015.63c0.b3b8
Actor system:          0x8000, 00-15-63-c0-b0-04
Actor key:              0x001c
Actor port:            0x8000, 0x0001
Actor state:           Act (T/o) Agg Sync Coll Dist (Def) (Exp)
Partner system:        0x8000, 00-15-63-58-b9-04
Partner key:           0x001c
Partner port:          0x0001, 0x0003
Partner state:         Act (T/o) Agg Sync Coll Dist (Def) (Exp)

Interface GigabitEthernet0/1/5/7
=====
Interface handle:      0x01180120
Interface media type:  Ethernet
Fast periodic interval: 1000ms
Source MAC address:    0015.63c0.b3b9
Actor system:          0x8000, 00-15-63-c0-b0-04
Actor key:              0x001c
Actor port:            0x8000, 0x0002
Actor state:           Act (T/o) Agg Sync (Coll) (Dist) (Def) (Exp)
Partner system:        0x8000, 00-15-63-58-b9-04
Partner key:           0x001c
Partner port:          0x0002, 0x0004
Partner state:         Act (T/o) Agg (Sync) (Coll) (Dist) (Def) (Exp)
```

The following example shows how to display Link Aggregation Control Protocol (LACP) information for all actively transmitting interfaces:

```
RP/0/RSP0/CPU0:router# show lacp io

Thu Jun 18 16:33:57.330 PST

Bundle-Ether28

Interface GigabitEthernet0/1/5/6
=====
Interface handle:      0x01180100
Interface media type:  Ethernet
Fast periodic interval: 1000ms
Source MAC address:    0015.63c0.b3b8
Actor system:          0x8000, 00-15-63-c0-b0-04
Actor key:              0x001c
Actor port:            0x8000, 0x0001
Actor state:           Act (T/o) Agg Sync Coll Dist (Def) (Exp)
Partner system:        0x8000, 00-15-63-58-b9-04
Partner key:           0x001c
Partner port:          0x0001, 0x0003
Partner state:         Act (T/o) Agg Sync Coll Dist (Def) (Exp)

Interface GigabitEthernet0/1/5/7
=====
Interface handle:      0x01180120
Interface media type:  Ethernet
```



```
Fast periodic interval: 1000ms
Source MAC address:    0015.63c0.b3b9
Actor system:         0x8000, 00-15-63-c0-b0-04
Actor key:             0x001c
Actor port:           0x8000, 0x0002
Actor state:          Act (T/o) Agg Sync (Coll) (Dist) (Def) (Exp)
Partner system:       0x8000, 00-15-63-58-b9-04
Partner key:          0x001c
Partner port:         0x0002, 0x0004
Partner state:        Act (T/o) Agg (Sync) (Coll) (Dist) (Def) (Exp)
```

Related Commands

Command	Description
show lacp packet-capture, on page 740	Displays the contents of LACP packets that are sent and received on an interface.
lacp period short, on page 690	Enables a short period time interval for the transmission and reception of LACP packets.
lacp packet-capture, on page 687	Captures LACP packets so that their information can be displayed.

show lacp packet-capture

To display the contents of Link Aggregation Control Protocol (LACP) packets that are sent and received on an interface, use the **show lacp packet-capture** command in EXEC mode.

show lacp packet-capture [**decoded**] [**in**|**out**] {**GigabitEthernet**|**TenGigE**} *interface-path-id*

Syntax Description

decoded	(Optional) Displays packet information in decoded form for the specified interface.
in	(Optional) Displays packet information for ingress packets only.
out	(Optional) Displays packet information for egress packets only.
GigabitEthernet	Displays packet information for the Gigabit Ethernet interface specified by <i>interface-path-id</i> .
TenGigE	Displays packet information for the Ten Gigabit Ethernet interface specified by <i>interface-path-id</i> .
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

The default displays both in and out information.

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

**Note**

The **lacp packet-capture** command captures transmit and receive packets on a single interface. The contents of these packets can then be displayed by the **show lacp packet-capture** command. If the **lacp packet-capture** command is not issued, the **show lacp packet-capture** command does not display any information.

Task ID

Task ID	Operations
bundle	read

Examples

The following example shows how to display the contents of an LACP packet, in hexadecimal, for a Gigabit Ethernet interface:

**Note**

In the following example, after you issue the **lacp packet-capture** command, you must wait for a reasonable amount of time for the system to capture packets that are sent and received on the interface before you issue the **show lacp packet-capture** command. Otherwise, there is no information to display.

```
RP/0/RSP0/CPU0:router# lacp packet-capture gigabitethernet 0/1/0/0 100
RP/0/RSP0/CPU0:router# show lacp packet-capture gigabitethernet 0/1/0/0

Wed Apr 29 16:27:40.996 GMT
OUT Apr 29 17:05:50.123
=====
01 01 01 14 80 00 02 a7 4c 81 95 04 00 01 80 00 00 01 45 00
00 00 02 14 ff ff 00 00 00 00 00 00 00 00 00 ff ff 00 00 40 00
00 00 03 10 ff ff 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00

OUT Apr 29 17:35:50.124
=====
...
```

The following example shows how to display the LACP parameters, decoded from individual packets, transmitted and received on a Gigabit Ethernet interface:

**Note**

In the following example, after you issue the **lacp packet-capture** command, you must wait for a reasonable amount of time for the system to capture packets that are sent and received on the interface before you issue the **show lacp packet-capture** command. Otherwise, there is no information to display.

```
RP/0/RSP0/CPU0:router# lacp packet-capture gigabitethernet 0/1/0/0 100
RP/0/RSP0/CPU0:router# show lacp packet-capture decoded gigabitethernet 0/1/0/0

Wed Apr 29 16:27:54.748 GMT
OUT Apr 29 17:06:03.008
=====
Subtype: 0x01 - LACP      Version: 1
```

show lacp packet-capture

```

TLV: 0x01 - Actor Information      Length: 20
System: Priority: 32768, ID: 02-a7-4c-81-95-04
Key: 0x0001, Port priority: 32768, Port ID: 1
State: Act (T/o) Agg (Sync) (Coll) (Dist) Def (Exp)

TLV: 0x02 - Partner Information    Length: 20
System: Priority: 65535, ID: 00-00-00-00-00-00
Key: 0x0000, Port priority: 65535, Port ID: 0
State: (Act) (T/o) (Agg) (Sync) (Coll) (Dist) Def (Exp)

TLV: 0x03 - Collector Information  Length: 16
Max delay: 65535

TLV: 0x00 - Terminator             Length: 0

```

Related Commands

Command	Description
show lacp io, on page 737	Displays the LACP transmission information that used by the transmitting device for sending packets on an interface.
lacp period short, on page 690	Enables a short period time interval for the transmission and reception of LACP packets.
lacp packet-capture, on page 687	Captures LACP packets so that their information can be displayed.

show lacp port

To display detailed information about Link Aggregation Control Protocol (LACP) ports, enter the **show lacp port** command in EXEC mode.

show lacp port [[GigabitEthernet| TenGigE] *interface_instance*]

Command Default

No default behavior or values.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	read

Examples

The following example shows how to display LACP port information for all link bundles on a router:

```
RP/0/RSP0/CPU0:router# show lacp port
```

```
Flags: A - Device is in Active mode. P - Device is in Passive mode.
       S - Device sends PDUs at slow rate. F - Device sends PDUs at fast rate.
       D - Port is using default values for partner information
       E - Information about partner has expired
State: 0 - Port is Not Aggregatable. 1 - Port is Out Of Sync with peer.
       2 - Port is In Sync with peer. 3 - Port is Collecting.
       4 - Port is Collecting and Distributing.
```

```
Bundle-Ether1
```

B/W (Kbps)	MAC address	Minimum active Links	B/W (Kbps)	Maximum active Links
-----	-----	----	-----	-----
0	0800.453a.651d	1	620000	32

Port	State	Flags	Port ID	Key	System-ID
-----	----	----	-----	-----	-----
Gi0/0/2/0	1	ASDE	0x8000, 0x0001	0x0001	0x8000, 08-00-45-3a-65-01
PEER	0	PSD	0xffff, 0x0000	0x0000	0xffff, 00-00-00-00-00-00

Table 54: show lacp port Field Descriptions

Field	Description
Port	Identifies the LACP port whose information is displayed. The port number is expressed in the <i>rack/slot/module/port</i> notation.
State	Provides information about the state of the specified device or port. Possible flags are: • 0—Port is not aggregatable. • 1—Port is out of sync with peer. • 2—Port is in sync with peer. • 3—Port is collecting. • 4—Port is collecting and distributing.
Flags	Provides information about the state of the specified port. Possible flags are: • A—Device is in Active mode. • P—Device is in Passive mode. • S—Device requests peer to send PDUs at a slow rate. • F—Device requests peer to send PDUs at a fast rate. • D—Port is using default values for partner information. • E—Information about partner has expired.
Port ID	Port identifier, expressed in the following format: <i>Nxnnnn</i> . <i>N</i> is the port priority, and <i>nnnn</i> is the port number assigned by the sending router.
Key	Two-byte number associated with the specified link and aggregator. Each port is assigned an operational key. The ability of one port to aggregate with another is summarized by this key. Ports which have the same key select the same bundled interface. The system ID, port ID and key combine to uniquely define a port within a LACP system.
System-ID	System identifier. The System ID is an LACP property of the system which is transmitted within each LACP packet together with the details of the link.

Related Commands

Command	Description
bundle id, on page 664	Adds a port to an aggregated interface or bundle.
show bundle, on page 707	Displays information about configured bundles.
show lacp bundle, on page 732	Displays detailed information about LACP ports and their peers.

show lacp system-id

To display the local system ID used by the Link Aggregation Control Protocol (LACP), enter the **show lacp system-id** command in EXEC mode.

show lacp system-id

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note The System ID and details about the specific link are transmitted within each LACP packet.

Task ID	Task ID	Operations
	bundle	read

Examples The following example shows how to display the system ID used by the LACP:

```
RP/0/RSP0/CPU0:router# show lacp system-id

Priority  MAC Address
-----  -
0x8000   08-00-45-3a-65-01
```


Table 55: show lacp system-id Field Descriptions

Field	Description
Priority	Priority for this system. A lower value is higher priority.
MAC Address	MAC address associated with the LACP system ID.

Related Commands

Command	Description
bundle id , on page 664	Adds a port to an aggregated interface or bundle.
show bundle , on page 707	Displays information about configured bundles.
show lacp bundle , on page 732	Displays detailed information about LACP ports and their peers.
show lacp port , on page 743	

show mlacp

To display the MC-LAG information configured locally and for any connected mLACP peer devices, use the **show mlacp** command in the EXEC mode.

show mlacp [**Bundle-Ether** *interface-path-id*] **iccp-group** *group-id*] [**brief**] **verbose**]

Syntax Description

Bundle-Ether <i>interface-path-id</i>	Displays the information for the ICCP group of the bundle and only the specified bundle.
iccp-group <i>group-id</i>	Displays information related to the ICCP group.
brief	Displays only the ICCP group information without any bundle information.
verbose	Displays the ICCP group, the bundle and member information.

Command Default

No default behavior or values

Command Modes

Exec

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	Read

Examples

The following examples display the MC-LAG information:

```
RP/0/RSP0/CPU0:router# show mlacp brief
```

```
ICCP Group 1
  Connect timer: Off
```

Node	LDP ID	State	System ID	Sync	Vers
1	5.4.3.1	Up	0x0001,00-0d-00-0e-00-0f	Done	1
2	Local	Up	0x0001,00-0d-00-0e-00-0f	Done	-

RP/0/RP0/CPU0:poa2#show mlacp

ICCP Group 1
Connect timer: Off

Node	LDP ID	State	System ID	Sync	Vers
1	5.4.3.1	Up	0x0001,00-0d-00-0e-00-0f	Done	1
2	Local	Up	0x0001,00-0d-00-0e-00-0f	Done	-

Bundle-Ether1 (ROID: 0000.0001.0000.0000)

Node	Aggregator Name	State	Agg ID	MAC Address
1	BE1	Up	0x0001	0000.deaf.0000
2	Bundle-Ether1	Up	0x0001	0000.deaf.0000

RP/0/RP0/CPU0:router#show mlacp verbose

ICCP Group 1
Connect timer: Off

Node	LDP ID	State	System ID	Sync	Vers
1	5.4.3.1	Up	0x0001,00-0d-00-0e-00-0f	Done	1
2	Local	Up	0x0001,00-0d-00-0e-00-0f	Done	-

Bundle-Ether1 (ROID: 0000.0001.0000.0000)

Node	Aggregator Name	State	Agg ID	MAC Address
1	BE1	Up	0x0001	0000.deaf.0000
2	Bundle-Ether1	Up	0x0001	0000.deaf.0000

Node	Port Name	State	Port	Priority Oper (Cfgd)
1	Gi0/1/0/3	Up	0x9001	0x03e8 (0x03e8)
2	Gi0/0/0/1	Up	0xa001	0x07d0 (0x07d0)

show mlacp counters

To display counters relating to mLACP information transferred to and from the local device, use the **show mlacp counters** command in the EXEC mode.

```
show mlacp counters [ bdl-info | ig-info | mbr-info [ bundle interface | member interface | iccp-group group-id | mlacp-device device-id | mlacp-interface foreign-member-interface ] ]
```

Syntax Description

Bundle-Ether	Displays the requested information associated with the bundle interface.
member interface	Displays the requested information associated with the member interface.
counters	Displays information on the mLACP counters.
bdl-info	Displays the bundles counters.
ig-info	Displays the ICCP group counters.
mbr-info	Displays the member counters.
mlacp-device	Displays the requested information associated with the mLACP device. Note The mlacp-device and mlacp-interface keywords are available only when mLACP devices and mLACP interfaces are configured.
mlacp-interface	Displays the requested information associated with the mLACP interface.

Command Default

No default behavior or values

Command Modes

Exec

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
bundle	Read

Examples

The following examples display MC-LAG counter information:



Note

The GigabitEthernet 0/0/0/1 is configured to Bundle-Ether 1 which is within ICCP Group1. Hence, the **show mlagp counters bdl-info GigabitEthernet 0/0/0/1** command displays the counters of the bundle that GigabitEthernet 0/0/0/1 is associated with (i.e. Bundle-Ether1). The **show mlagp counters mbr-info Bundle-Ether 1** displays the counters of the members that Bundle-Ether1 is associated with (locally: GigabitEthernet 0/0/0/1, and on the foreign device: GigabitEthernet 0/1/0/3).

```
RP/0/RSP0/CPU0:router# show mlagp counters bdl-info GigabitEthernet 0/0/0/1
```

ICCP Group 1

Bundle	Config	State	TLVs Sent Priority	NAKs	TLVs Received Priority
Local Device					
Bundle-Ether1 ????????????	3	4	0	0	0
mLACP Peer 5.4.3.1					
Bundle-Ether1 ????????????	3	4	0	0	0

Bundle	TLVs	Sync Requests (config)	(state)	Last Cleared
Local Device				
Bundle-Ether1 ????????????	0	0	0	18m12s
mLACP Peer 5.4.3.1				
Bundle-Ether1 ????????????	0	0	0	17m57s

```
RP/0/0/CPU0:router#show mlagp counters mbr-info Bundle-Ether 1
```

Bundle-Ether1 (ICCP Group 1)

Port	Config	State	TLVs Sent Priority	NAKs	TLVs Received Priority
Local Device					
Gi0/0/0/1 ????????????????	7	0	0	0	0
mLACP Peer 5.4.3.1					
Gi0/1/0/3 ????????????????	7	5	3	0	0

Port	TLVs	Sync Requests (config)	(state)	Last Cleared
Local Device				
All ports ????????????????	0	0	0	19m3s
Gi0/0/0/1 ????????????????	0	0	0	19m3s
mLACP Peer 5.4.3.1				
All ports ????????????????	1	1	1	18m49s
Gi0/1/0/3 ????????????????	0	0	0	18m49s

 `show mlacp counters`



Management Ethernet Interface Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring Management Ethernet interfaces on the Cisco ASR 9000 Series Router.

- [duplex \(Management Ethernet\), page 754](#)
- [interface MgmtEth, page 756](#)
- [mac-address \(Management Ethernet\), page 758](#)
- [speed \(Management Ethernet\), page 760](#)

duplex (Management Ethernet)

To configure duplex mode operation on a Management Ethernet interface, use the **duplex** command in interface configuration mode. To return the interface to autonegotiated duplex mode, use the **no** form of the **duplex** command.

duplex {full| half}

no duplex

Syntax Description

full	Configures the Management Ethernet interface to operate in full duplex mode.
half	Configures the Management Ethernet interface to operate in half duplex mode.

Command Default

Autonegotiates duplex operation

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to configure the Management Ethernet interface to operate in full duplex mode:

```
RP/0/RSP0/CPU0:router(config)# interface MgmtEth 0/RSP0/CPU0/0
RP/0/RSP0/CPU0:router(config-if)# duplex full
```


The following example shows how to configure the Management Ethernet interface to operate in half duplex mode:

```
RP/0/RSP0/CPU0:router(config)# interface MgmtEth 0/RSP0/CPU0/0
RP/0/RSP0/CPU0:router(config-if)# duplex half
```

The following example shows how to return a Management Ethernet interface to autonegotiated duplex mode:

```
RP/0/RSP0/CPU0:router(config)# interface MgmtEth 0/RSP0/CPU0/0
RP/0/RSP0/CPU0:router(config-if)# no duplex
```

Related Commands

Command	Description
interface MgmtEth , on page 756	Enters interface configuration mode for the Management Ethernet interface.

interface MgmtEth

To enter interface configuration mode for the Management Ethernet interface, use the **interface MgmtEth** command in global configuration mode. To delete a Management Ethernet interface configuration, use the **no** form of this command.

interface MgmtEth *interface-path-id*

no interface MgmtEth *interface-path-id*

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface.
Note	Use the show interfaces command to see a list of all interfaces currently configured on the router.
	For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enter interface configuration mode for a Management Ethernet interface:

```
RP/0/RSP0/CPU0:router(config)# interface MgmtEth 0/RSP0/CPU0/0
RP/0/RSP0/CPU0:router(config-if)#
```

Related Commands

Command	Description
duplex (Management Ethernet), on page 754	Configures duplex mode operation on a Management Ethernet interface.
mac-address (Management Ethernet), on page 758	Sets the MAC layer address of a Management Ethernet interface.
speed (Management Ethernet), on page 760	Configures the speed for a Management Ethernet interface.

mac-address (Management Ethernet)

To set the MAC layer address of a Management Ethernet interface, use the **mac-address** command in interface configuration mode. To return the interface to its default MAC address, use the **no** form of the **mac-address** command.

mac-address *value1.value2.value3*

no mac-address

Syntax Description

<i>value1</i>	High 2 bytes of the MAC address in hexadecimal. Range is from 0 to ffff.
<i>value2</i>	Middle 2 bytes of the MAC address in hexadecimal. Range is from 0 to ffff.
<i>value3</i>	Low 2 bytes of the MAC address in hexadecimal. Range is from 0 to ffff.

Command Default

The default MAC address is read from the hardware burned-in address (BIA).

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The MAC address must be in the form of three 4-digit values (12 digits in dotted decimal notation).

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to set the MAC address of the Management Ethernet interface located at 0/RSP0/CPU0/0:

```
RP/0/RSP0/CPU0:router(config)# interface MgmtEth 0/RSP0/CPU0/0
RP/0/RSP0/CPU0:router(config-if)# mac-address 0001.2468.ABCD
```

Related Commands

Command	Description
interface MgmtEth, on page 756	Enters interface configuration mode for the Management Ethernet interface.

speed (Management Ethernet)

To configure the speed for a Management Ethernet interface, enter the **speed** command in interface configuration mode. To return the system to autonegotiate speed, use the **no** form of the **speed** command.

speed {10| 100| 1000}

no speed

Syntax Description

10	Configures the interface to transmit at 10 Mbps.
100	Configures the interface to transmit at 100 Mbps.
1000	Configures the interface to transmit at 1000 Mbps (1 Gbps).

Command Default

Interface speed is autonegotiated.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Note

Keep in mind that both ends of a link must have the same interface speed. A manually configured interface speed overrides any autonegotiated speed, which can prevent a link from coming up if the configured interface speed at one end of a link is different from the interface speed on the other end.

[Table 56: Relationship Between duplex and speed Commands, on page 760](#) describes the performance of the system for different combinations of the duplex and speed modes. The specified **duplex** command configured with the specified **speed** command produces the resulting system action.

Table 56: Relationship Between duplex and speed Commands

duplex Command	speed Command	Resulting System Action
no duplex	no speed	Autonegotiates both speed and duplex modes.
no duplex	speed 1000	Forces 1000 Mbps (1 Gbps) and full duplex.

duplex Command	speed Command	Resulting System Action
no duplex	speed 100	Autonegotiates for duplex mode and forces 100 Mbps.
no duplex	speed 10	Autonegotiates for duplex mode and forces 10 Mbps.
duplex full	no speed	Forces full duplex and autonegotiates for speed.
duplex full	speed 1000	Forces 1000 Mbps (1 Gbps) and full duplex.
duplex full	speed 100	Forces 100 Mbps and full duplex.
duplex full	speed 10	Forces 10 Mbps and full duplex.
duplex half	no speed	Forces half duplex and autonegotiates for speed (10 or 100 Mbps.)
duplex half	speed 100	Forces 100 Mbps and half duplex.
duplex half	speed 10	Forces 10 Mbps and half duplex.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to configure the Management Ethernet interface to transmit at one gigabit:

```
RP/0/RSP0/CPU0:router(config)# interface MgmtEth 0/RSP0/CPU0/0
RP/0/RSP0/CPU0:router(config-if)# speed 1000
```

Related Commands

Command	Description
interface MgmtEth, on page 756	Enters interface configuration mode for the Management Ethernet interface.



Multilink Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring multilink interfaces on the Cisco ASR 9000 Series Router.

- [bundle, page 764](#)
- [controller MgmtMultilink, page 766](#)
- [interface multilink, page 768](#)
- [multilink, page 770](#)
- [multilink fragment, page 771](#)
- [multilink group, page 773](#)
- [show controllers mgmtmultilink, page 775](#)
- [show interfaces multilink, page 778](#)

bundle

To create a multilink interface bundle, use the **bundle** command in the interface configuration mode. To remove a multilink interface bundle, use the **no** form of this command.

bundle *bundleID*

Syntax Description

<i>bundleID</i>	ID number of the multilink interface bundle. The bundle ID can be a 9-digit number.

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **bundle** command is used in mgmtmultilink controller mode to dynamically create a multilink interface. This command is similar to the **channel-group** command on the T1 controller, which dynamically creates a serial interface.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to create a multilink interface with a bundle ID of 1:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# controller mgmtmultilink 0/1/0/0
RP/0/RSP0/CPU0:router(config-mgmtmultilink)# bundle 1
RP/0/RSP0/CPU0:router(config-mgmtmultilink)# commit
```

Related Commands

Command	Description
multilink , on page 770	Enters the config-if-multilink submode.
multilink group , on page 773	Attaches a serial interface to a multilink interface bundle.

controller MgmtMultilink

To configure a controller for a generic multilink bundle and enter MgmtMultilink configuration mode, use the **controller MgmtMultilink** command in global configuration mode. To return to the default state, use the **no** form of this command.

controller MgmtMultilink *interface-path-id*

no controller MgmtMultilink *interface-path-id*

Syntax Description

interface-path-id

Virtual interface.

Note Use the **show interfaces** command to see a list of all interfaces currently configured on the router.

For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release

Modification

Release 3.9.0

This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/instance*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number.
 - *instance*: Number of the controller instance. The instance is always 0.
- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enter the MgmtMultilink configuration mode :

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller MgmtMultilink 0/1/0/0
RP/0/RSP0/CPU0:router(config-mgmtmultilink)#
```

Related Commands

Command	Description
show controllers mgmtmultilink, on page 775	Displays information about the state and the number of bundles of a multilink controller.

interface multilink

To configure a multilink interface and enter multilink interface configuration mode, use the **interface multilink** command in global configuration mode. To delete the interface configuration, use the **no** form of this command. To return to the default state, use the **no** form of this command.

interface multilink *interface-path-id* [*.subinterface* {**l2transport** | **point-to-point**}]

no interface multilink *interface-path-id* [*.subinterface* {**l2transport** | **point-to-point**}]

Syntax Description

<i>interface-path-id</i> [<i>.subinterface</i>]	Physical interface or virtual interface followed by the optional subinterface path ID. Naming notation is <i>interface-path-id.subinterface</i> . The period in front of the subinterface value is required as part of the notation. For more information about the syntax for the router, use the question mark (?) online help function.
l2transport	Configures interface to function as one endpoint on a Layer 2 link.
point-to-point	Configures interface to function as one endpoint on a point-to-point link.

Command Default

No interfaces are configured.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The <i>subinterface</i> argument and the keywords l2transport and point-to-point were introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The *subinterface* argument and keywords **l2transport** and **po in t-to-point** are only applicable if frame relay encapsulation is enabled using the **encapsulation frame-relay** command.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enable frame relay encapsulation for a multilink bundle, and enter subinterface configuration mode.

```
RP/0/RSP0/CPU0:routerRP/0/RSP0/CPU0:router#  
RP/0/RSP0/CPU0:router# configure terminal  
RP/0/RSP0/CPU0:router(config)# interface multilink 0/3/0/0/1  
RP/0/RSP0/CPU0:router(config-if)# encapsulation frame-relay  
RP/0/RSP0/CPU0:router(config-if)# exit  
RP/0/RSP0/CPU0:router(config)# interface multilink 0/3/0/0/1.1 point-to-point  
RP/0/RSP0/CPU0:router(config-subif)# ipv4 address 10.86.10.48/24
```

The following example shows how to enter interface configuration mode for a multilink bundle with ppp encapsulation. ppp encapsulation is the default encapsulation type:

```
RP/0/RSP0/CPU0:router# configure terminal  
RP/0/RSP0/CPU0:router(config)# interface multilink 0/3/0/0/1  
RP/0/RSP0/CPU0:router(config-if)#ipv4 address 10.86.10.48/24
```

Related Commands

Command	Description
show interfaces multilink , on page 778	Displays information about a multilink interface.

multilink

To enter the config-if-multilink submode, use the **multilink** command in the interface configuration mode.

multilink

Syntax Description

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For multilink interfaces, the **multilink** command provides access to the config-if-multilink submode to use the **multilink fragment-size** command.

Task ID

Task ID	Operations
hdlc	read, write

Examples

The following example shows how to enter the config-if-multilink submode:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface serial 0/1/0/1/1:0
RP/0/RSP0/CPU0:router(config-if)# multilink
RP/0/RSP0/CPU0:router(config-if-multilink)# group 1
RP/0/RSP0/CPU0:router(config-if-multilink)# commit
```

Related Commands

Command	Description
multilink group , on page 773	Attaches a serial interface to a multilink interface bundle.

multilink fragment

To set the fragmentation size or the fragmentation delay on a multilink interface, use the **multilink fragment** command in interface configuration mode. To remove the fragment size or fragment delay, use the **no** form of this command.

multilink fragment {*size size* | *delay delay-ms*}

no multilink fragment [*size size* | *delay delay-ms*]

Syntax Description

size <i>size</i>	Specifies the fragment size (in bytes) on a multilink interface. The range is 64 to 9216.
delay <i>delay-ms</i>	Specifies the fragment delay (in milliseconds) on a multilink interface. The range is 1 to 1000.

Command Default

No multilink fragment size or fragment delay is set.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Multilink fragmentation is only supported for ppp encapsulation, not for frame-relay encapsulation.

Task ID

Task ID	Operations
hdlc	read, write

Examples

The following example shows how to set the multilink fragment size:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface multilink 0/1/0/0/1
RP/0/RSP0/CPU0:router(config-if)# multilink fragment size 128
RP/0/RSP0/CPU0:router(config-if)#
```

The following example shows how to set the multilink fragment delay:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface multilink 0/1/0/0/1
RP/0/RSP0/CPU0:router(config-if)# multilink fragment delay 2
RP/0/RSP0/CPU0:router(config-if)#
```

Related Commands

Command	Description
interface multilink , on page 768	Configures a multilink interface and enters multilink interface configuration mode.

multilink group

To attach a serial interface to a multilink interface bundle, use the **multilink group** command in interface configuration mode. To remove a serial interface from a multilink interface bundle, use the **no** form of this command.

multilink group *bundleID*

no multilink group *bundleID*

Syntax Description

<i>bundleID</i>	Bundle ID number of the multilink interface, in the format <i>rack/slot/bay/controllerID/bundleID</i>

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
hdlc	read, write

Examples

The following examples show how to attach a serial interface to a multilink interface bundle:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface serial 0/1/0/1/1/1:0
RP/0/RSP0/CPU0:router(config-if)# multilink group 1
RP/0/RSP0/CPU0:router(config-if)# commit
```

or

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface serial 0/1/0/1/1/1:0
```

```
RP/0/RSP0/CPU0:router(config-if)# multilink  
RP/0/RSP0/CPU0:router(config-if-multilink)# group 1  
(config-if-multilink)# commit
```

Related Commands

Command	Description
multilink , on page 770	Enters the config-if-multilink submode.

show controllers mgmtmultilink

To display information about the state and the number of bundles of a multilink controller, use the **show controller mgmtmultilink** command in EXEC mode.

show controllers mgmtmultilink *interface-path-id* [**all**| **brief**| **internal-state**| **tabular**]

Syntax Description

<i>interface-path-id</i>	Virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	Displays all multilink management information.
brief	Displays brief multilink management information.
internal-state	Displays internal multilink management state.
tabular	Displays multilink management information in tabular format.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/instance*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.

- *module*: Module number. A physical layer interface module (PLIM) is always 0.
- *instance*: Number of the controller instance. The instance is always 0.
- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows how to display information for a management multilink controller:

```
RP/0/RSP0/CPU0:router# show controllers mgmtmultilink 0/3/0/0 all
```

```
Controller MgmtMultilink0/3/0/0
State is up
Number of bundles: 2
  Bundle 1 - Multilink0/3/0/0/1 (0x06186240)
    Type: Full Framed T1s
    Bandwidth: 3072 kbps
    Encapsulation: Frame Relay
    Fragment size: 0
    Number of members: 2
    Ancestor name: SONET0/3/0/0
    Member(s):
      Serial0/3/0/0/1/1:0 (0x0619b640) Active
      Serial0/3/0/0/1/2:0 (0x06176980) Active

  Bundle 2 - Multilink0/3/0/0/2 (0x06176840)
    Type: Full Framed T1s
    Bandwidth: 3072 kbps
    Encapsulation: Frame Relay
    Fragment size: 0
    Number of members: 2
    Ancestor name: SONET0/3/0/0
    Member(s):
      Serial0/3/0/0/1/3:0 (0x0619b3c0) Active
      Serial0/3/0/0/1/4:0 (0x0618b9c0) Active
```

```
RP/0/RSP0/CPU0:router# show controllers mgmtmultilink 0/3/0/0 brief
```

```
MgmtMultilink0/3/0/0 is up
```

```
RP/0/RSP0/CPU0:router# show controllers mgmtmultilink 0/3/0/0 tabular
```

```
MgmtMultilink0/3/0/0 is up
```

```
RP/0/RSP0/CPU0:router# show controllers mgmtmultilink 0/3/0/0 internal-state
```

```
Interface(layer)      admin_up  if_state
-----
MgmtMultilink0/3/0/0  up      up
```

```
RP/0/RSP0/CPU0:router# show controllers mgmtmultilink 0/2/0/0
```

```
Controller MgmtMultilink0/2/0/0
State is up
Number of bundles: 1
  Bundle 1 - Multilink0/2/0/0/1 (0x0802e400)
    Type: Full Framed T1s
    Bandwidth: 1536 kbps
    Encapsulation: PPP
    Fragment size: 0
```

```
Number of members: 1
Ancestor name: SONET0/2/0/0
Member(s):
    Serial0/2/0/0/1/1:0  (0x08023c00)  Active
```

Related Commands

Command	Description
show interfaces multilink , on page 778	Displays information about a multilink interface.

show interfaces multilink

To display information about a multilink interface, use the **show interfaces multilink** command in EXEC mode.

show interfaces multilink *interface-path-id*

Syntax Description

interface-path-id

Physical interface or virtual interface.

Note Use the **show interfaces** command to see a list of all interfaces currently configured on the router.

For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows how to display information about a multilink interface:

```
RP/0/RSP0/CPU0:router# show interfaces multilink 0/1/0/0/1
Multilink0/1/0/0/1 is up, line protocol is up
  Interface state transitions: 1
  Hardware is Multilink network interface(s)
  Internet address is 10.1.1.1/24
  MTU 1504 bytes, BW 1536 Kbit
    reliability 255/255, txload 3/255, rxload 3/255
  Encapsulation PPP, loopback not set, keepalive set (10 sec)
  LCP Open
  Open: IPCP
  Last input 00:00:00, output 00:00:00
  Last clearing of "show interface" counters 02:06:24
  5 minute input rate 19000 bits/sec, 5 packets/sec
  5 minute output rate 19000 bits/sec, 5 packets/sec
    48769 packets input, 12425740 bytes, 0 total input drops
    0 drops for unrecognized upper-level protocol
    Received 0 runts, 0 giants, 0 throttles, 0 parity
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
    67905 packets output, 17400050 bytes, 0 total output drops
    0 output errors, 0 underruns, 0 applique, 0 resets
    0 output buffer failures, 0 output buffers swapped out
  Fragmentation Statistics
    Input Fragmented packets 0          Input Fragmented bytes 0
    Output Fragmented packets 0         Output Fragmented bytes 0
    Input Unfragmented packets 0        Input Unfragmented bytes 0
    Output Unfragmented packets 0       Output Unfragmented bytes 0
    Input Reassembled packets 0          Input Reassembled bytes 0
```

 **show interfaces multilink**



Packet-over-SONET Interface Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring Packet-over-SONET/SDH (POS) on the Cisco ASR 9000 Series Router.

This module describes the Cisco IOS XR commands used to configure, monitor, and troubleshoot Packet-over-SONET/SDH (POS).

POS provides a method for efficiently carrying data packets in SONET or Synchronous Digital Hierarchy (SDH) frames. High-bandwidth capacity and efficient link utilization are characteristics that make POS largely preferred for building the core of data networks. POS uses PPP in High-Level Data Link Control (HDLC)-like framing for data encapsulation at Layer 2 (data link) of the Open System Interconnection (OSI) stack. This method provides efficient packet delineation and error control.

In addition to high-bandwidth efficiency, POS offers secure and reliable transmission for data. Reliable data transfer depends on timing integrity.

The real-time POS functionality is performed in hardware, according to the hardware configuration setup. Configured hardware events are detected by the framer application-specific integrated circuits (ASICs) and the control is passed to the software. The generic POS driver is responsible for providing a mechanism to configure the hardware on a per-interface basis, to handle interface state transitions, and to collect POS-related statistics.

- [crc \(POS\), page 782](#)
- [encapsulation \(POS\), page 784](#)
- [interface pos, page 786](#)
- [keepalive \(POS\), page 788](#)
- [pos, page 790](#)
- [show interfaces pos, page 792](#)
- [transmit-delay, page 795](#)

crc (POS)

To set the length of the cyclic redundancy check (CRC) on a Packet-over-SONET/SDH (POS) interface, use the **crc** command in POS configuration mode. To return the CRC setting on a POS interface to the 32-bit default setting, use the **no** form of this command.

crc {16| 32}

no crc [16| 32]

Syntax Description

16	Sets 16-bit CRC mode.
32	Sets 32-bit CRC mode. The default is 32 bits.

Command Default

The default CRC mode is 32 bits.

Command Modes

POS configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

CRC is an error-checking technique that uses a calculated numeric value to detect errors in transmitted data. The designators 16 and 32 indicate the length (in bits) of the frame check sequence (FCS). A CRC of 32 bits provides more powerful error detection, but adds overhead. Both the sender and receiver must use the same setting.

CRC-16, the most widely used error checking method throughout the United States and Europe, is used extensively with WANs. CRC-32 is specified by IEEE standard 802 and as an option by some point-to-point transmission standards. It is often used on Switched Multimegabit Data Service (SMDS) networks and LANs.

Task ID

Task ID	Operations
pos-dpt	read, write

Examples

In the following example, the 32-bit CRC on POS interface 0/1/0/2 is enabled:

```
rack/slot/module (config) # interface POS 0/1/0/2  
rack/slot/module (config-if) # POS  
rack/slot/module (config-if-pos) # crc 32
```

Related Commands

Command	Description
transmit-delay , on page 795	Specifies a number of flag sequences to be inserted between the packets.

encapsulation (POS)

To set the Layer 2 encapsulation of an interface, use the **encapsulation** command in interface configuration mode. To restore the system to the default encapsulation, use the **no** form of this command.

encapsulation {**hdlc**|**ppp**|**frame-relay** [**ietf**] }

no encapsulation [**hdlc**|**ppp**|**frame-relay** [**ietf**]]

Syntax Description

hdlc	Enables Cisco High-Level Data Link Control (cHDLC) encapsulation on the interface. This is the default encapsulation type.
ppp	Enables Point-to-Point Protocol (PPP) encapsulation on the interface.
frame -relay	Enables Frame Relay encapsuation on the interface.
ietf	(Optional) Enables RFC1490/RFC2427 encapsulation.

Command Default

For Packet-over-SONET/SDH (POS) interfaces, the default encapsulation is HDLC.

Command Modes

Interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The task ID **hdlc** (r,w) is required for use of the keyword **hdlc**. The task ID **ppp**(r,w) is required for use of the keyword **ppp**. The task ID **fr**(r,w) is required for use of the keyword **frame-relay**.

Task ID

Task ID	Operations
hdlc OR ppp OR fr	read, write
interface	read, write

Examples

In the following example, PPP encapsulation is set on POS interface 0/3/0/1:

```
RP/0/RSP0/CPU0:router(config)# interface POS 0/3/0/1  
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
```

Related Commands

Command	Description
show interfaces pos , on page 792	Displays information about a POS interface.
show ppp interfaces , on page 845	Displays PPP state information for an interface.

interface pos

To enter interface or subinterface configuration mode for a POS interface or subinterface, use the **interface pos** command in global configuration mode. To delete a POS configuration, use the **no** form of this command.

interface pos *interface-path-id* [.subinterface] {**l2 transport**| **point-to-point**}]

no interface pos *interface-path-id* [.subinterface] {**l2 transport**| **point-to-point**}]

Syntax Description

<i>interface-path-id</i> [.subinterface]	Physical interface or virtual interface followed by the optional subinterface path ID. Naming notation is <i>interface-path-id.subinterface</i> . The period in front of the subinterface value is required as part of the notation. For more information about the syntax for the router, use the question mark (?) online help function.
l2transport	(Optional) Configures the interface to function as an attachment circuit (AC) on one endpoint of a Layer 2 link.
point-to-point	(Optional) Configures interface to function as one endpoint of a point-to-point link.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Subinterfaces of a POS interface can only be configured using the **l2transport** keyword, if Frame Relay encapsulation is configured on the POS interface, using the **encapsulation frame-relay** command. Interfaces configured to use HDLC or PPP encapsulation cannot be configured using the **l2transport** keyword.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.

- *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- *f* specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enter interface configuration mode for a POS interface:

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)#
```

The following example shows how to create a subinterface on a POS interface in slot 1, subslot 1, port 2 and enter subinterface configuration mode:

```
RP/0/RSP0/CPU0:router(config)# interface pos 0/1/1/2.1
RP/0/RSP0/CPU0:router(config-subif)#
```

The following example shows how to configure frame-relay encapsulation on the main POS interface before being able to configure an AC subinterface:

```
RP/0/RSP0/CPU0:router# interface pos 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# encapsulation frame-relay
RP/0/RSP0/CPU0:router(config-if)# commit
RP/0/RSP0/CPU0:router(config-if)# exit
RP/0/RSP0/CPU0:router(config)# interface pos 0/1/0/0.1 l2transport
RP/0/RSP0/CPU0:router(config-subif)# commit
```

Related Commands

Command	Description
show interfaces pos, on page 792	Displays information about a POS interface.

keepalive (POS)

To set the keepalive timer for a specific interface, use the **keepalive** command in interface configuration mode. To reset the keepalive timer to the default of 10 seconds, use the **no** form of this command.

keepalive {*interval* [*retry*] **disable**}

no keepalive

Syntax Description

<i>interval</i>	Number of seconds (from 1 to 30) between keepalive messages. The default is 10.
<i>retry</i>	(Optional) Number of keepalive messages (from 1 to 255) that can be sent to a peer without a response before transitioning the link to the down state. The default is 5 for interfaces with PPP encapsulation, and 3 for interfaces with HDLC encapsulation.
disable	Turns off the keepalive timer.

Command Default

The default interval is 10 seconds between keepalive messages. The default number of retry keepalive messages that can be sent without a response is 5 for interfaces with PPP encapsulation, and 3 for interfaces with HDLC encapsulation. However, when more than 5 (or 3) keepalive messages are sent to a peer without a response, the link transitions to the down state.

Command Modes

Interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

cHDLC keepalives require that the **keepalive** command is configured the same way on both routers. The two connected routers have no way of negotiating the keepalive value, because there is no way for the routers to tell each other what their configured values are. The keepalive value configured on each router (local and partner) sets the rate at which the Cisco IOS XR software sends packets. It also sets the rate at which the local end expects to receive incoming packets.

To set the keepalive value to the default value, use the **keepalive** command without specifying a value for the *seconds* argument.

If three keepalives are sent to the peer and no response is received from the peer, then the link makes the transition to the down state.

Task ID

Task ID	Operations
hdlc	read, write
ppp	read,write

Examples

The following example shows how to configure keepalives for 3 seconds on POS interface 0/7/0/1:

```
RP/0/RSP0/CPU0:router(config)# interface POS 0/7/0/1  
RP/0/RSP0/CPU0:router(config-if)# keepalive 3
```

pos

To access the POS configuration submode, use the **pos** command in interface configuration mode.

pos

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you issue the **pos** command in interface configuration mode for a POS interface, the CLI prompt changes to “config-if-pos,” indicating that you have entered POS configuration submode. In the following sample output, the question mark (?) online help function displays all the commands available under POS configuration submode:

```
RP/0/RSP0/CPU0:router(config)# interface POS 0/1/0/2
RP/0/RSP0/CPU0:router(config-if)# POS
RP/0/RSP0/CPU0:router(config-if-pos)# ?

  commit          Commit the configuration changes to running
  crc             Set the CRC on a POS interface
  describe        Describe a command without taking real actions
  do              Run an exec command
  exit            Exit from this submode
  no              Negate a command or set its defaults
  show            Show contents of configuration
  transmit-delay  Set POS transmit delay on an interface
```

Task ID

Task ID	Operations
pos-dpt	read, write

Examples

The following example shows how to access the POS configuration submode from the POS configuration mode:

```
RP/0/RSP0/CPU0:router(config)# interface POS 0/1/0/2
```

```
RP/0/RSP0/CPU0:router(config-if)# POS  
RP/0/RSP0/CPU0:router(config-if-pos)#
```

Related Commands

Command	Description
crc (POS), on page 782	Sets the length of the CRC on a Packet-over-SONET/SDH (POS) interface.
transmit-delay, on page 795	Specifies a number of flag sequences to be inserted between the packets.

show interfaces pos

To display information about a POS interface, use the **show interfaces pos** command in EXEC mode.

show interfaces pos *interface-path-id* [**accounting** [**rates**]] **brief** | **description** | **detail**] [**location** *node-id*]

Syntax Description

<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
accounting	(Optional) Displays accounting information for all POS interfaces on the router, for a specific POS interface instance, or for all POS interfaces on a specific node.
rates	(Optional) Displays interface accounting rates for all POS interfaces on the router, for a specific POS interface instance, or for all POS interfaces on a specific node.
brief	(Optional) Displays brief output for all POS interfaces on the router, for a specific POS interface instance, or for all POS interfaces on a specific node.
description	Displays descriptive output for all POS interfaces on the router, for a specific POS interface instance, or for all POS interfaces on a specific node.
detail	(Optional) Displays detailed output for all POS interfaces on the router, for a specific POS interface instance, or for all POS interfaces on a specific node.
location <i>node-id</i>	(Optional) Displays detailed POS information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

Enter the **show interfaces pos** command without including any of the optional keywords or arguments to display detailed information about all POS interfaces configured on the router.

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows how to display summarized information for a POS interface on a specific node:

```
RP/0/RSP0/CPU0:router# show interfaces pos summary location 0/1/CPU0
```

Interface Type	Total	UP	Down	Admin Down
-----	----	--	----	-----
ALL TYPES	4	1	1	2

IFT_POS	4	1	1	2

Table 57: show interfaces pos summary Field Descriptions

Field	Description
Intf Type	Type of interface described in the display.
Total	Total number of configured interfaces of the specified type.
Up	Number of interfaces of the specified type that are in the “Up” state.
Down	Number of interfaces of the specified type that are in the “Down” state.

Field	Description
Admin Down	Number of interfaces of the specified type that are in the “Admin Down” state.

The following example shows how to display brief information for a specific POS interface:

```
RP/0/RSP0/CPU0:router# show interfaces pos 0/2/0/0 brief
```

Intf Name	Intf State	LineP State	Encap Type	MTU (byte)	BW (Kbps)
PO0/2/0/0	admin-down	admin-down	HDLC	4474	2488320

Table 58: show interfaces pos Field Descriptions

Field	Description
Intf Name	Interface identifier, in the <i>type*rack/slot/module/port</i> notation.
Intf State	Indicates whether the interface is in the admin-up or admin down state.
LineP State	Line protocol state.
Encap Type	Encapsulation type for the specified interface. Can be HDLC or PPP.
MTU (byte)	Maximum transmission unit (MTU) value configured for the specified interface, in bytes.
BW (Kbps)	Bandwidth of the interface, in kbps.

Related Commands

Command	Description
show controllers pos, on page 988	Displays information on the POS controllers.
show controllers sonet, on page 994	Displays information about the operational status of SONET layers.

transmit-delay

To specify a number of flag sequences to be inserted between the packets, use the **transmit-delay** command in POS configuration mode. To restore the default, use the **no** form of this command.

transmit-delay *microseconds*

no transmit-delay *microseconds*

Syntax Description	<i>microseconds</i>	Number of microseconds of minimum delay after sending a packet. Range is from 0 to 1023. Default is 0 (disabled).

Command Default	<i>microseconds</i> = 0 (disabled)

Command Modes	POS configuration

Command History	Releases	Modifications
	Release 4.0.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	pos-dpt	read, write

Examples	In the following example, a delay of 2 microseconds is specified on POS interface 0/1/0/2:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/1/0/2
RP/0/RSP0/CPU0:router(config-if)# pos
RP/0/RSP0/CPU0:router(config-if-pos)# transmit-delay 2
```

In the following example, the transmit delay on POS interface 0/1/0/2 is disabled:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/1/0/2
RP/0/RSP0/CPU0:router(config-if)# pos
```

transmit-delay

RP/0/RSP0/CPU0:router(config-if-pos)# no transmit-delay

Related Commands

Command	Description
show interfaces	



PPP Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring Point-to-Point Protocol (PPP) on the Cisco ASR 9000 Series Router.

Point-to-Point Protocol (PPP) is an encapsulation scheme that can be used on Packet-over-SONET (POS), serial, and multilink interfaces. PPP is a standard protocol used to send data over synchronous serial links. PPP also provides a Link Control Protocol (LCP) for negotiating properties of the link. LCP uses echo requests and responses to monitor the continuing availability of the link.

PPP provides the following Network Control Protocols (NCPs) for negotiating properties of data protocols that will run on the link:

- Cisco Discovery Protocol Control Protocol (CDPCP) to negotiate CDP properties
 - IP Control Protocol (IPCP) to negotiate IP properties
 - IP Version 6 Control Protocol (IPv6CP) to negotiate IPv6 properties
 - Multiprotocol Label Switching Control Protocol (MPLSCP) to negotiate MPLS properties
 - Open System Interconnection Control Protocol (OSICP) to negotiate OSI properties
-
- [clear ppp sso state, page 799](#)
 - [clear ppp statistics, page 801](#)
 - [encapsulation ppp, page 802](#)
 - [group, page 804](#)
 - [multi-router aps, page 806](#)
 - [peer ipv4 address, page 807](#)
 - [ppp authentication, page 808](#)
 - [ppp chap password, page 811](#)
 - [ppp chap refuse, page 813](#)
 - [ppp ipcp dns, page 815](#)
 - [ppp ipcp neighbor-route disable, page 816](#)

- [ppp ipcp peer-address default, page 817](#)
- [ppp max-bad-auth, page 818](#)
- [ppp max-configure, page 820](#)
- [ppp max-failure, page 822](#)
- [ppp max-terminate, page 824](#)
- [ppp ms-chap hostname, page 826](#)
- [ppp ms-chap password, page 827](#)
- [ppp ms-chap refuse, page 829](#)
- [ppp multilink multiclass, page 831](#)
- [ppp multilink multiclass local, page 832](#)
- [ppp multilink multiclass remote apply, page 834](#)
- [ppp pap refuse, page 836](#)
- [ppp pap sent-username password, page 838](#)
- [ppp timeout authentication, page 840](#)
- [ppp timeout retry, page 842](#)
- [redundancy, page 843](#)
- [security ttl, page 844](#)
- [show ppp interfaces, page 845](#)
- [show ppp sso alerts, page 853](#)
- [show ppp sso state, page 855](#)
- [show ppp sso summary, page 857](#)
- [ssrp group, page 859](#)
- [ssrp location, page 861](#)
- [ssrp profile, page 862](#)

clear ppp sso state

To clear the replicated Inter-Chassis Stateful Switchover (ICSSO) states for the specified standby interface or for all interfaces on the specified node, use the **clear ppp sso state** command in EXEC mode.

clear ppp sso state {**interface** *interface-path-id*| **all**} **location** *node-id*

Syntax Description

interface <i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all location <i>node-id</i>	Specifies the full qualified path of a specific node in the format <i>rack/slot/module</i> .

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command sets the PPP sessions in the Standby-Up state to the Standby-Down state. All replicated data received from the peer is purged, and SSRP Request messages are re-sent to the peer.

Task ID

Task ID	Operations
ppp	execute

Examples

The following example shows how to clear the replicated ICSSO states for the specified standby interface:

```
RP/0/RSP0/CPU0:router# clear ppp sso state interface 0/1/0/1
```

The following example shows how to clear the replicated Inter-Chassis Stateful Switchover (ICSSO) states for all interfaces on the specified node:

```
RP/0/RSP0/CPU0:router# clear ppp sso state all location 1/0/1
```

clear ppp statistics

To clear all Point-to-Point Protocol (PPP) statistics for a PPP interface, use the **clear ppp statistics** command in EXEC mode.

clear ppp statistics interface *interface-path-id*

Syntax Description

interface *interface-path-id* Physical interface or virtual interface.

Note Use the **show interfaces** command to see a list of all interfaces currently configured on the router.

For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ppp	execute

Examples

The following example shows how to clear PPP statistics for a PPP interface:

```
RP/0/RSP0/CPU0:router# clear ppp statistics interface 0/1/0/1
```

encapsulation ppp

To enable encapsulation for communication with routers or bridges using the Point-to-Point Protocol (PPP), use the **encapsulation ppp** command in interface configuration mode. To disable PPP encapsulation, use the **no** form of this command.

encapsulation ppp

no encapsulation ppp

Syntax Description This command has no keywords or arguments.

Command Default PPP encapsulation is disabled.

Command Modes Interface configuration

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **encapsulation ppp** command to enable PPP encapsulation on an interface.

Task ID	Operations
ppp	read, write
interface	read, write

Examples The following example shows how to set up PPP encapsulation on interface POS 0/1/0/1:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
```

The following example shows how to set up PPP encapsulation on a serial interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router# interface serial 0/0/1/2/4:3
```



```
RP/0/RSP0/CPU0:router# encapsulation ppp
```

Related Commands

Command	Description
show ppp interfaces, on page 845	Displays PPP state information for an interface.

group

To create a Session State Redundancy Protocol (SSRP) group and associate it with a profile, use the **group** command in global configuration mode. To remove this group, use the no form of this command.

group *group-id* **profile** *profile_name* [**default**]

no group *group-id* **profile** *profile_name* [**default**]

Syntax Description

<i>group-id</i>	SSRP group identifier. The range is 1 to 65535.
profile <i>profile_name</i>	Profile to associate with this group.
default	Associates the group to the default profile.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Any interfaces on this card can be configured to use this group. The group number must be unique across the router.

Task ID

Task ID	Operations
ppp	read, write

Examples

The following example shows how to create an SSRP group:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# ssrp location 0/1/cpu0
RP/0/RSP0/CPU0:router(config-ssrp-node)# group 1 profile default
```

Related Commands

Command	Description
ssrp location, on page 861	specify the node on which to create a SSRP group and enter the SSRP node configuration mode.

multi-router aps

To configure Multi-Router Automatic Protection Switching (MR-APS) and enter APS redundancy configuration mode, use the **multi-router aps** command in redundancy configuration mode. To deactivate Multi-Router Automatic Protection Switching (MR-APS), use the no form of this command.

multi-router aps

no multi-router aps

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes Redundancy configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ppp	read

Examples The following example shows how to

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# redundancy
RP/0/RSP0/CPU0:router(config-redundancy)# multi-router aps
RP/0/RSP0/CPU0:router(config-redundancy-aps)
```

Related Commands	Command	Description
	redundancy , on page 843	Enters the redundancy configuration mode to configure MR-APS.

peer ipv4 address

To configure the IPv4 address for a Session State Redundancy Protocol (SSRP) peer, use the **peer ipv4 address** command in SSRP configuration mode. To remove the address, use the no form of this command.

peer ipv4 address *ip-address*

no peer ipv4 address *ip-address*

Syntax Description	<i>ip-address</i> IP address of the peer interface whose states will be replicated by SSRP.					
Command Default	No default behavior or values					
Command Modes	SSRP configuration					
Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 3.9.0</td><td>This command was introduced.</td></tr></table>		Release	Modification	Release 3.9.0	This command was introduced.
Release	Modification					
Release 3.9.0	This command was introduced.					
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.					
Task ID	<table><tr><th>Task ID</th><th>Operations</th></tr><tr><td>ppp</td><td>read, write</td></tr></table>		Task ID	Operations	ppp	read, write
Task ID	Operations					
ppp	read, write					
Examples	The following example shows how to configure the IPv4 address for a Session State Redundancy Protocol (SSRP) peer: <pre>RP/0/RSP0/CPU0:router# config RP/0/RSP0/CPU0:router(config)# ssrp profile Profile_1 RP/0/RSP0/CPU0:router(config-ssrp)# peer ipv4 address 10.10.10.10</pre>					
Related Commands	<table><tr><th>Command</th><th>Description</th></tr><tr><td>ssrp profile, on page 862</td><td>Configures a SSRP profile and enters the SSRP configuration mode.</td></tr></table>		Command	Description	ssrp profile , on page 862	Configures a SSRP profile and enters the SSRP configuration mode.
Command	Description					
ssrp profile , on page 862	Configures a SSRP profile and enters the SSRP configuration mode.					

ppp authentication

To enable Challenge Handshake Authentication Protocol (CHAP), MS-CHAP, or Password Authentication Protocol (PAP), and to specify the order in which CHAP, MS-CHAP, and PAP authentication is selected on the interface, use the **ppp authentication** command in interface configuration mode. To disable PPP authentication, use the **no** form of this command.

ppp authentication *protocol* [*protocol* [*protocol*]] {*list-name*| **default**}

no ppp authentication

Syntax Description

<i>protocol</i>	Name of the authentication protocol used for PPP authentication. See Table 59: PPP Authentication Protocols for Negotiation, on page 809 for the appropriate keyword. You may select one, two, or all three protocols, in any order.
<i>list-name</i>	(Optional) Used with authentication, authorization, and accounting (AAA). Name of a list of methods of authentication to use. If no list name is specified, the system uses the default. The list is created with the aaa authentication ppp command.
default	(Optional) Specifies the name of the list of methods created with the aaa authentication ppp command.

Command Default

PPP authentication is not enabled.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you enable CHAP or PAP authentication (or both), the local router requires the remote device to prove its identity before allowing data traffic to flow. PAP authentication requires the remote device to send a name and a password, which is checked against a matching entry in the local username database or in the remote security server database. CHAP authentication sends a challenge message to the remote device. The remote device encrypts the challenge value with a shared secret and returns the encrypted value and its name to the local router in a response message. The local router attempts to match the remote device's name with an associated secret stored in the local username or remote security server database; it uses the stored secret to encrypt the original challenge and verify that the encrypted values match.

You can enable CHAP, MS-CHAP, or PAP in any order. If you enable all three methods, the first method specified is requested during link negotiation. If the peer suggests using the second method, or refuses the first method, the second method is tried. Some remote devices support only one method. Base the order in which you specify methods on the remote device's ability to correctly negotiate the appropriate method, and on the level of data line security you require. PAP usernames and passwords are sent as clear text strings, which can be intercepted and reused.

**Note**

If you use a *list-name* value that was not configured with the **aaa authentication ppp** command, then authentication does not complete successfully and the line does not come up.

[Table 59: PPP Authentication Protocols for Negotiation, on page 809](#) lists the protocols used to negotiate PPP authentication.

Table 59: PPP Authentication Protocols for Negotiation

Protocol	Description
chap	Enables CHAP on an interface.
ms-chap	Enables Microsoft's version of CHAP (MS-CHAP) on an interface.
pap	Enables PAP on an interface.

Enabling or disabling PPP authentication does not affect the ability of the local router to authenticate itself to the remote device.

MS-CHAP is the Microsoft version of CHAP. Like the standard version of CHAP, MS-CHAP is used for PPP authentication. In this case, authentication occurs between a personal computer using Microsoft Windows NT or Microsoft Windows 95 and a Cisco router or access server acting as a network access server.

Enabling or disabling PPP authentication does not affect the local router authenticating itself to the remote device.

Task ID

Task ID	Operations
ppp	read, write
aaa	read, write

Examples

In the following example, CHAP is enabled on POS 0/4/0/1 and uses the authentication list MIS-access:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/4/0/1
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
RP/0/RSP0/CPU0:router(config-if)# ppp authentication chap MIS-access
```

Related Commands

Command	Description
aaa authentication ppp	Specifies one or more AAA authentication methods for use on serial interfaces running PPP.
encapsulation	Sets the encapsulation method used by the interface.
username	Configures a new user with a username, establishes a password, and grants permissions for the user.

ppp chap password

To enable a router calling a collection of routers to configure a common Challenge Handshake Authentication Protocol (CHAP) secret password, use the **ppp chap password** command in interface configuration mode. To disable the password, use the **no** form of this command.

ppp chap password [**clear**| **encrypted**] *password*

no ppp chap password [**clear**| **encrypted**] *password*

Syntax Description

clear	(Optional) Specifies the cleartext encryption parameter for the password.
encrypted	(Optional) Indicates that the password is already encrypted.
<i>password</i>	Cleartext or already-encrypted password.

Command Default

The password is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **ppp chap password** command is sent in CHAP responses and is used by the peer to authenticate the local router. This does not affect local authentication of the peer. This command is useful for routers that do not support this command (such as routers running older Cisco IOS XR images).

The CHAP secret password is used by the routers in response to challenges from an unknown peer.

Task ID

Task ID	Operations
ppp	read, write
aaa	read, write

Examples

In the following example, a password (xxxx) is entered as a cleartext password:

```
RP/0/RSP0/CPU0:router(config-if)# ppp chap password xxxx
```

When the password is displayed (as shown in the following example, using the **show running-config** command), the password xxxx appears as 030752180500:

```
RP/0/RSP0/CPU0:router(config)# show running-config interface POS 1/0/1/0

interface POS0/1/4/2

description Connected to P1_CRS-8 POS 0/1/4/3
ipv4 address 10.12.32.2 255.255.255.0
encapsulation ppp
ppp authentication chap pap
ppp chap password encrypted 030752180500
```

On subsequent logins, entering any of the three following commands would have the same effect of making xxxx the password for remote CHAP authentication:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 1/0/1/0
RP/0/RSP0/CPU0:router(config-if)# ppp chap password xxxx
RP/0/RSP0/CPU0:router(config-if)# ppp chap password clear xxxx
RP/0/RSP0/CPU0:router(config-if)# ppp chap password encrypted 1514190900
```

Related Commands

Command	Description
aaa authentication ppp	Specifies one or more authentication, authorization, and accounting (AAA) methods for use on serial interfaces running PPP.
ppp authentication , on page 808	Enables CHAP, MS-CHAP, or PAP, and specifies the order in which CHAP, MS-CHAP, and PAP authentication is selected on the interface.
ppp chap refuse , on page 813	Refuses CHAP authentication from peers requesting it.
ppp max-bad-auth , on page 818	Configures a PPP interface not to reset itself immediately after an authentication failure but instead to allow a specified number of authentication retries.
show running-config	Displays the contents of the currently running configuration file or the configuration for a specific interface, or map class information.

ppp chap refuse

To refuse Challenge Handshake Authentication Protocol (CHAP) authentication from peers requesting it, use the **ppp chap refuse** command in interface configuration mode. To allow CHAP authentication, use the **no** form of this command.

ppp chap refuse

no ppp chap refuse

Syntax Description This command has no keywords or arguments.

Command Default CHAP authentication is disabled.

Command Modes Interface configuration

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **ppp chap refuse** command specifies that CHAP authentication is disabled for all calls, meaning that all attempts by the peer to force the user to authenticate using CHAP are refused.

If outbound Password Authentication Protocol (PAP) has been configured (using the **ppp authentication** command), PAP is suggested as the authentication method in the refusal packet.

Task ID	Operations
ppp	read, write
aaa	read, write

Examples The following example shows how to specify POS interface 0/3/0/1 and disable CHAP authentication from occurring if a peer calls in requesting CHAP authentication. The method of encapsulation on the interface is PPP.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/3/0/1
```

```
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
RP/0/RSP0/CPU0:router(config-if)# ppp chap refuse
```

Related Commands

Command	Description
aaa authentication ppp	Specifies one or more authentication, authorization, and accounting (AAA) methods for use on serial interfaces running PPP.
ppp authentication, on page 808	Enables CHAP, MS-CHAP, or PAP, and specifies the order in which CHAP, MS-CHAP, and PAP authentication is selected on the interface.
ppp max-bad-auth, on page 818	Configures a PPP interface not to reset itself immediately after an authentication failure but instead to allow a specified number of authentication retries.
ppp pap sent-username password, on page 838	Enables remote PAP support for an interface, and includes the sent-username and password commands in the PAP authentication request packet to the peer.

ppp ipcp dns

To configure the primary and secondary Domain Name System (DNS) IP addresses for the Internet Protocol Control Protocol (IPCP), use the **ppp ipcp dns** command in interface configuration mode. To remove the addresses, use the no form of this command.

ppp ipcp dns *primary-ip-address* [*sec-ip-address*]

no ppp ipcp dns *primary-ip-address* [*sec-ip-address*]

Syntax Description

<i>primary-ip-address</i>	Primary DNS IP address, in the format A.B.C.D.
<i>sec-ip-address</i>	Secondary DNS IP address, in the format W.X.Y.Z.

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ppp	read, write

Examples

The following example shows how to configure the primary and secondary DNS IP addresses for Internet Protocol Control Protocol (IPCP):

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface serial 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# ppp ipcp dns 10.10.10.10 10.10.10.11
```

ppp ipcp neighbor-route disable

To disable installation of a route to the peer address negotiated by Internet Protocol Control Protocol (IPCP), use the **ppp ipcp neighbor-route disable** command in interface configuration mode. To re-enable installation of a route to the peer address negotiated by IPCP, use the no form of this command.

ppp ipcp neighbor-route disable

no ppp ipcp neighbor-route disable

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes Interface configuration

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Operations
ppp	read, write

Examples The following example shows how to disable installation of a route to the peer address negotiated by IPCP:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface serial 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# ppp ipcp neighbor-route disable
```

ppp ipcp peer-address default

To specify the default IPv4 address that is assigned to the peer by the Internet Protocol Control Protocol (IPCP), use the **ppp ipcp peer-address default** command in interface configuration mode. To remove the address, use the no form of this command.

ppp ipcp peer-address default *ip-address*

no ppp ipcp peer-address default *ip-address*

Syntax Description

<i>ip-address</i>	Specifies the IP address for the peer node.

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ppp	read, write

Examples

The following example shows how to specifies the default IPv4 address that is assigned to the peer by IPCP.

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface serial 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# ppp ipcp peer-address default 10.10.10.10
```

ppp max-bad-auth

To configure a PPP interface not to reset itself immediately after an authentication failure but instead to allow a specified number of authentication retries, use the **ppp max-bad-auth** command in interface configuration mode. To reset to the default of immediate reset, use the **no** form of this command.

ppp max-bad-auth *retries*

no ppp max-bad-auth

Syntax Description

<i>retries</i>	Number of retries after which the interface is to reset itself. Range is from 0 to 10. Default is 0 retries.

Command Default

retries: 0

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **ppp max-bad-auth** command applies to any interface on which PPP encapsulation is enabled.

Task ID

Task ID	Operations
ppp	read, write
aaa	read, write

Examples

In the following example, POS interface 0/3/0/1 is set to allow two additional retries after an initial authentication failure (for a total of three failed authentication attempts):

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/3/0/1
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
RP/0/RSP0/CPU0:router(config-if)# ppp authentication chap
```



```
RP/0/RSP0/CPU0:router(config-if)# ppp max-bad-auth 3
```

ppp max-configure

To specify the maximum number of configure requests to attempt (without response) before stopping the requests, use the **ppp max-configure** command in interface configuration mode. To disable the maximum number of configure requests and return to the default, use the **no** form of this command.

ppp max-configure *retries*

no ppp max-configure

Syntax Description	<i>retries</i> Maximum number of retries. Range is 4 through 20. Default is 10.	
Command Default	<i>retries</i> : 10	
Command Modes	Interface configuration	
Command History	Release	Modification
	Release 3.9.0	This command was introduced.
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. Use the ppp max-configure command to specify how many times an attempt is made to establish a Link Control Protocol (LCP) session between two peers for a particular interface. If a configure request message receives a reply before the maximum number of configure requests are sent, further configure requests are abandoned.	
Task ID	Task ID	Operations
	ppp	read, write

Examples In the following example, a limit of four configure requests is specified:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/3/0/1
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
RP/0/RSP0/CPU0:router(config-if)# ppp max-configure 4
```

Related Commands

Command	Description
encapsulation ppp, on page 802	Enables encapsulation for communication with routers or bridges using PPP.
ppp max-failure, on page 822	Configures the maximum number of consecutive CONFNAKs to permit before terminating a negotiation.
ppp max-terminate, on page 824	Configures the maximum number of terminate requests to send without reply before closing down the LCP or NCP.

ppp max-failure

To configure the maximum number of consecutive Configure Negative Acknowledgments (CONFNAKs) to permit before terminating a negotiation, use the **ppp max-failure** command in interface configuration mode. To disable the maximum number of CONFNAKs and return to the default, use the **no** form of this command.

ppp max-failure *retries*

no ppp max-failure

Syntax Description	<i>retries</i>	Maximum number of CONFNAKs to permit before terminating a negotiation. Range is from 2 to 10. Default is 5.

Command Default	<i>retries: 5</i>

Command Modes	Interface configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ppp	read, write

Examples	The following ppp max-failure command specifies that no more than three CONFNAKs are permitted before terminating the negotiation:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/3/0/1
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
RP/0/RSP0/CPU0:router(config-if)# ppp max-failure 3
```

Related Commands

Command	Description
encapsulation ppp, on page 802	Enables encapsulation for communication with routers or bridges using PPP.
ppp max-configure, on page 820	Specifies the maximum number of configure requests to attempt (without response) before stopping the requests.
ppp max-terminate, on page 824	Configures the maximum number of terminate requests to send without reply before closing down the LCP or NCP.

ppp max-terminate

To configure the maximum number of terminate requests (TermReqs) to send without reply before closing down the Link Control Protocol (LCP) or Network Control Protocol (NCP), use the **ppp max-terminate** command in interface configuration mode. To disable the maximum number of TermReqs and return to the default, use the **no** form of this command.

ppp max-terminate *number*

no ppp max-terminate

Command Default

number: 2

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ppp	read, write

Examples

In the following example, a maximum of five TermReqs are specified to be sent before terminating and closing LCP or NCP:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/3/0/1
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
RP/0/RSP0/CPU0:router(config-if)# ppp max-terminate 5
```

Related Commands

Command	Description
ppp max-configure , on page 820	Specifies the maximum number of configure requests to attempt (without response) before stopping the requests.

Command	Description
ppp max-failure, on page 822	Configures the maximum number of consecutive CONFNAKs to permit before terminating a negotiation.

ppp ms-chap hostname

To configure the hostname for MS-CHAP authentication on an interface, use the **ppp ms-chap hostname** command in interface configuration mode. To remove the hostname, use the no form of this command.

ppp ms-chap hostname *hostname*

no ppp ms-chap hostname *hostname*

Syntax Description	
<i>hostname</i>	Specifies the hostname for MS-CHAP authentication.

Command Default	No default behavior or values

Command Modes	Interface configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ppp	read, write
	aaa	read, write

Examples	The following example shows how to configure the hostname for MS-CHAP authentication on an interface:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface serial 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# ppp ms-chap hostname Host_1
```


ppp ms-chap password

To configure a common Microsoft Challenge Handshake Authentication (MS-CHAP) secret password, use the **ppp ms-chap password** command in interface configuration mode. To disable the password, use the **no** form of this command.

ppp ms-chap password [**clear**| **encrypted**] *password*

no ppp ms-chap password [**clear**| **encrypted**] *password*

Syntax Description

clear	(Optional) Specifies the cleartext encryption parameter for the password.
encrypted	(Optional) Indicates that the password is already encrypted.
<i>password</i>	Cleartext or already-encrypted password.

Command Default

The password is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **ppp ms-chap password** command is sent in CHAP responses and is used by the peer to authenticate the local router. This does not affect local authentication of the peer. The **ppp ms-chap password** command is useful for routers that do not support this command (such as routers running older software images).

The MS-CHAP secret password is used by the routers in response to challenges from an unknown peer.

Task ID

Task ID	Operations
ppp	read, write

Examples

The following example shows how to enter a password (xxxx) as a cleartext password:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/3/0/1
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
RP/0/RSP0/CPU0:router(config-if)# ppp ms-chap password clear xxxx
```

ppp ms-chap refuse

To refuse Microsoft Challenge Handshake Authentication Protocol (MS-CHAP) authentication from peers requesting it, use the **ppp ms-chap refuse** command in interface configuration mode. To allow MS-CHAP authentication, use the **no** form of this command.

ppp ms-chap refuse

no ppp ms-chap refuse

Syntax Description	This command has no keywords or arguments.

Command Default	MS-CHAP authentication is disabled.

Command Modes	Interface configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ppp	read, write

Examples	The following example shows how to specify POS interface 0/3/0/1 and disable MS-CHAP authentication from occurring if a peer calls in requesting MS-CHAP authentication. The method of encapsulation on the interface is PPP.

Related Commands

Command	Description
ppp authentication , on page 808	Enables CHAP, MS-CHAP, or PAP, and specifies the order in which CHAP, MS-CHAP, and PAP authentication is selected on the interface.

ppp multilink multiclass

To enable multiclass multilink PPP, use the **ppp multilink multiclass** command in interface configuration mode. To disable multiclass multilink PPP, use the no form of this command.

ppp multilink multiclass

no ppp multilink multiclass

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes Interface configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ppp	read, write

Examples The following example shows how to enable multiclass multilink PPP:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface Multilink 0/1/0/0/1
RP/0/RSP0/CPU0:router(config-if)# ppp multilink multiclass
```

ppp multilink multiclass local

To configure the initial number and maximum number of Multiclass Multilink PPP (MCMP) receive classes in a Conf-Request sent from a local host to its peer, use the **ppp multilink multiclass local** command in interface configuration mode. To remove these settings, use the no form of this command.

ppp multilink multiclass local initial *init-number* **maximum** *max-number*

no ppp multilink multiclass local initial *init-number* **maximum** *max-number*

Syntax Description

initial <i>init-number</i>	Specifies the initial number of receive classes in the Conf-Request. The range is 1 to 16.
maximum <i>max-number</i>	Specifies the maximum number of receive classes in the Conf-Request. The range is 1 to 16.

Command Default

When MCMP is enabled, the default **initial** value is 2 and the default **maximum** value is 4.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The maximum number of receive classes configures the number of transmission classes on the local host.

Task ID

Task ID	Operations
ppp	read, write

Examples

The following example shows how to configure the initial number and maximum number of Multiclass Multilink PPP (MCMP) receive classes in a Conf-Request sent from a local host to its peer:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface Multilink 0/1/0/0/1
```

```
RP/0/RSP0/CPU0:router(config-if)# ppp multilink multiclass local initial 1 maximum 16
```

ppp multilink multiclass remote apply

To configure the minimum number of Multiclass Multilink PPP (MCMP) receive classes that a local host will accept from its peer in a Conf-Request, use the **ppp multilink multiclass** command in interface configuration mode. To remove this setting, use the no form of this command.

ppp multilink multiclass remote apply *min-number*

no ppp multilink multiclass remote apply *min-number*

Syntax Description	<i>min-number</i>	Specifies the minimum number of receive classes in the Conf-Request. The range is 1 to 16.

Command Default	The default is 2 if MCMP is enabled.

Command Modes	Interface configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command is used to coerce the peer to accept a minimum number of MCMP classes. If the peer does not accept the minimum number of MCMP classes specified by this command, the local router will not bring up the PPP link.

Task ID	Task ID	Operations
	ppp	read, write

Examples	The following example shows how to use the ppp multilink multicast remove apply command.

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface Multilink 0/1/0/0/1
RP/0/RSP0/CPU0:router(config-if)# ppp multilink multiclass remote apply 16
```


Related Commands

Command	Description
ppp ipcp dns, on page 815	Configures the primary and secondary DNS IP addresses for the IPCP.
ppp ipcp neighbor-route disable, on page 816	Disables installation of a route to the peer address negotiated by IPCP.
ppp ipcp peer-address default, on page 817	Specifies the default IPv4 address that is assigned to the peer by the IPCP.
ppp ms-chap hostname, on page 826	Configures the hostname for MS-CHAP authentication on an interface.

ppp pap refuse

To refuse Password Authentication Protocol (PAP) authentication from peers requesting it, use the **ppp pap refuse** command in interface configuration mode. To allow PAP authentication, use the **no** form of this command.

ppp pap refuse

no ppp pap refuse

Syntax Description

This command has no keywords or arguments.

Command Default

PAP authentication is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **ppp pap refuse** command specifies that PAP authentication is disabled for all calls, meaning that all attempts by the peer to force the user to authenticate using PAP are refused.

If outbound Challenge Handshake Authentication Protocol (CHAP) has been configured (using the **ppp authentication** command), CHAP is suggested as the authentication method in the refusal packet.

Task ID

Task ID	Operations
ppp	read, write
aaa	read, write

Examples

The following example shows how to specify POS 0/3/0/1 using PPP encapsulation on the interface. This example shows PAP authentication being specified as disabled if a peer calls in requesting PAP authentication.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/3/0/1
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
```

```
RP/0/RSP0/CPU0:router(config-if)# ppp pap refuse
```

Related Commands

Command	Description
aaa authentication ppp	Specifies one or more authentication, authorization, and accounting (AAA) methods for use on serial interfaces running PPP.
ppp authentication , on page 808	Enables CHAP, MS-CHAP, or PAP, and specifies the order in which CHAP, MS-CHAP, and PAP authentication is selected on the interface.
ppp max-bad-auth , on page 818	Configures a PPP interface not to reset itself immediately after an authentication failure but instead to allow a specified number of authentication retries.
ppp pap sent-username password , on page 838	Enables remote PAP support for an interface, and includes the sent-username and password commands in the PAP authentication request packet to the peer.

ppp pap sent-username password

To enable remote Password Authentication Protocol (PAP) support for an interface, and to use the values specified for username and password in the PAP authentication request, use the **ppp pap sent-username password** command in interface configuration mode. To disable remote PAP support, use the **no** form of this command.

ppp pap sent-username *username* **password** [**clear**|**encrypted**] *password*

no ppp pap sent-username *username* **password** [**clear**|**encrypted**] *password*

Syntax Description

<i>username</i>	Username sent in the PAP authentication request.
clear	(Optional) Specifies the cleartext encryption parameter for the password.
encrypted	(Optional) Indicates that the password is already encrypted.
<i>password</i>	Cleartext or already-encrypted password.

Command Default

Remote PAP support is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **ppp pap sent-username password** command to enable remote PAP support (for example, to respond to the peer's request to authenticate with PAP) and to specify the parameters to be used when sending the PAP authentication request.

You must configure the **ppp pap sent-username password** command for each interface.

Task ID

Task ID	Operations
ppp	read, write
aaa	read, write

Examples

In the following example, a password is entered as a cleartext password, xxxx:

```
RP/0/RSP0/CPU0:router(config-if)# ppp pap sent-username xxxx password notified
```

When the password is displayed (as shown in the following example, using the **show running-config** command), the password notified appears as 05080F1C2243:

```
RP/0/RSP0/CPU0:router(config-if)# show running-config

interface POS0/1/0/0
description Connected to P1 CRS-8 POS 0/1/4/2
ipv4 address 10.12.32.2 255.255.255.0
encapsulation ppp
ppp pap sent-username P2_CRS-8 password encrypted 05080F1C2243
```

On subsequent logins, entering any of the three following commands would have the same effect of making xxxx the password for remote PAP authentication:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ppp pap sent-username xxxx password notified
RP/0/RSP0/CPU0:router(config-if)# ppp pap sent-username xxxx password clear notified
RP/0/RSP0/CPU0:router(config-if)# ppp pap sent-username xxxx encrypted 1514190900
```

Related Commands

Command	Description
aaa authentication ppp	Specifies one or more authentication, authorization, and accounting (AAA) methods for use on serial interfaces running PPP.
ppp authentication , on page 808	Enables CHAP, MS-CHAP, or PAP, and specifies the order in which CHAP, MS-CHAP, and PAP authentication is selected on the interface.
ppp multilink multiclass , on page 831	Refuses PAP authentication from peers requesting it
ppp timeout authentication , on page 840	Sets PPP authentication timeout parameters.
show running-config	Displays the contents of the currently running configuration file or the configuration for a specific interface, or map class information.

ppp timeout authentication

To set PPP authentication timeout parameters, use the **ppp timeout authentication** command in interface configuration mode. To reset the default value, use the **no** form of this command.

ppp timeout authentication *seconds*

no ppp timeout authentication

Syntax Description

<i>seconds</i>	Maximum time, in seconds, to wait for a response to an authentication packet. Range is from 3 to 30 seconds. Default is 10 seconds.

Command Default

seconds: 10

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The default authentication time is 10 seconds, which should allow time for a remote router to authenticate and authorize the connection and provide a response. However, it is also possible that it will take much less time than 10 seconds. In such cases, use the **ppp timeout authentication** command to lower the timeout period to improve connection times in the event that an authentication response is lost.



Note

The timeout affects connection times only if packets are lost.



Note

Although lowering the authentication timeout is beneficial if packets are lost, sending authentication requests faster than the peer can handle them results in churn and a slower connection time.

Task ID

Task ID	Operations
ppp	read, write

Examples

In the following example, PPP timeout authentication is set to 20 seconds:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/3/0/1
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
RP/0/RSP0/CPU0:router(config-if)# ppp timeout authentication 20
```

Related Commands

Command	Description
aaa authentication ppp	Specifies one or more authentication, authorization, and accounting (AAA) methods for use on serial interfaces running PPP.
ppp authentication , on page 808	Enables CHAP, MS-CHAP, or PAP, and specifies the order in which CHAP, MS-CHAP, and PAP authentication is selected on the interface.

ppp timeout retry

To set PPP timeout retry parameters, use the **ppp timeout retry** command in interface configuration mode. To reset the time value, use the **no** form of this command.

ppp timeout retry *seconds*

no ppp timeout retry

Syntax Description	<i>seconds</i> Maximum time, in seconds, to wait for a response during PPP negotiation. Range is from 1 to 10 seconds. Default is 3 seconds.					
Command Default	<i>seconds</i> : 3					
Command Modes	Interface configuration					
Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 3.9.0</td><td>This command was introduced.</td></tr></table>		Release	Modification	Release 3.9.0	This command was introduced.
Release	Modification					
Release 3.9.0	This command was introduced.					
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. The ppp timeout retry command is useful for setting a maximum amount of time PPP should wait for a response to any control packet it sends.					
Task ID	<table><tr><th>Task ID</th><th>Operations</th></tr><tr><td>ppp</td><td>read, write</td></tr></table>		Task ID	Operations	ppp	read, write
Task ID	Operations					
ppp	read, write					

Examples

The following example shows the retry timer being set to 8 seconds:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface POS 0/3/0/1
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
RP/0/RSP0/CPU0:router(config-if)# ppp timeout retry 8
```


redundancy

To enter the redundancy configuration mode to configure Multi-Router Automatic Protection Switching (MR-APS), use the **redundancy** command in global configuration mode.

redundancy

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes Global configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ppp	read

Examples The following example shows how to enter the redundancy configuration mode:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# redundancy
RP/0/RSP0/CPU0:router(config-redundancy)#
```

security ttl

To specify that the time-to-live (TTL) value in the IP header of the packet is used to validate that a packet is from the expected source, use the **security ttl** command in SSRP configuration mode. To remove the TTL requirement, use the no form of this command.

security ttl max-hops *number*

no security ttl max-hops *number*

Syntax Description	<table> <tr> <th data-bbox="342 615 771 653">max-hops <i>number</i></th><th data-bbox="771 615 1490 653">Maximum number of hops between the peer routers.</th></tr> </table>	max-hops <i>number</i>	Maximum number of hops between the peer routers.		
max-hops <i>number</i>	Maximum number of hops between the peer routers.				
Command Default	The max-hops default is 255.				
Command Modes	SSRP configuration				
Command History	<table> <tr> <th data-bbox="342 955 771 993">Release</th><th data-bbox="771 955 1490 993">Modification</th></tr> <tr> <td data-bbox="342 993 771 1031">Release 3.9.0</td><td data-bbox="771 993 1490 1031">This command was introduced.</td></tr> </table>	Release	Modification	Release 3.9.0	This command was introduced.
Release	Modification				
Release 3.9.0	This command was introduced.				
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. If max-hops is not specified, the TTL value must be 255 for a packet to be accepted.				
Task ID	<table> <tr> <th data-bbox="342 1362 771 1400">Task ID</th><th data-bbox="771 1362 1490 1400">Operations</th></tr> <tr> <td data-bbox="342 1400 771 1438">ppp</td><td data-bbox="771 1400 1490 1438">read, write</td></tr> </table>	Task ID	Operations	ppp	read, write
Task ID	Operations				
ppp	read, write				

Examples The following example shows how to specify that the time-to-live (TTL) value in the IP header of a packet is used to validate that the packet is from the expected source:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# ssrp profile Profile_1
RP/0/RSP0/CPU0:router(config-ssrp)# peer ipv4 address 10.10.10.10
RP/0/RSP0/CPU0:router(config-ssrp)# security ttl max-hops number 50
```

show ppp interfaces

To display PPP state information for an interface, use the **show ppp interfaces** command in EXEC mode.

show ppp interfaces [**brief** | **detail**] {**all** | *type interface-path-id* | **location node-id**}

Syntax Description

brief	(Optional) Displays brief output for all interfaces on the router, for a specific POS interface instance, or for all interfaces on a specific node.
detail	(Optional) Displays detailed output for all interfaces on the router, for a specific interface instance, or for all interfaces on a specific node.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	(Optional) Displays detailed PPP information for all nodes.
location node-id	(Optional) Displays detailed PPP information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

There are seven possible PPP states applicable for either the Link Control Protocol (LCP) or the Network Control Protocol (NCP).

The command output displays a summary of the interface as it is in the PPP Interface Descriptor Block (IDB). The output includes the following information (where applicable):

- Interface state
- Line protocol state
- Link Control Protocol (LCP) state
- Network Control Protocol (NCP) state
- Multilink PPP state
- Multilink PPP configuration
- Keepalive configuration
- Authentication configuration
- Negotiated MRUs
- Negotiated IP addresses

This command can display information for a single interface, all interfaces on a specified node, or all interfaces on the router.

Task ID

Task ID	Operations
ppp	read

Examples

The following example shows how to display PPP state information for a POS interface:

```
RP/0/RSP0/CPU0:router# show ppp interface POS 0/2/0/3

POS0/2/0/3 is up, line protocol is up
  LCP: Open
    Keepalives enabled (10 sec)
    Local MRU: 4470 bytes
    Peer MRU: 4470 bytes
  Authentication
    Of Us: CHAP (Completed as 'test-user')
    Of Peer: PAP (Completed as 'peer-user')
  CDP: Listen
  IPCP: Open
    Local IPv4 address: 55.0.0.1
    Peer IPv4 address: 55.0.0.2
    Peer DNS Primary: 55.0.0.254
    Peer DNS Secondary: 155.0.0.254
  IPV6CP: Open
    Local IPv6 address: fe80::3531:35ff:fe55:5747/128
    Peer IPv6 address: fe80::3531:35ff:fe55:4213/128
  MPLSCP: Stopped
```

The following example shows how to display PPP state information for a POS interface that is running as a Layer 2 attachment circuit:

```
RP/0/0/CPU0:# show ppp interface POS0/2/0/2
```

```
POS0/2/0/2 is up, line protocol is up
LCP: Open
Running as L2 AC
```

The following example shows how to display PPP state information for a multilink interface:

```
RP/0/RSP0/CPU0:router:# show ppp interface Multilink 0/3/0/0/100
```

```
Multilink0/3/0/0/100 is up, line protocol is down
LCP: Open
SSO-State: Standby-Up
Keepalives disabled
IPCP: Open
SSO-State: Standby-Up
Local IPv4 address: 100.0.0.1
Peer IPv4 address: 100.0.0.2
IPv6CP: Open
Local IPv6 address: fe80::3531:35ff:fe55:4600/128
Peer IPv6 address: fe80::3531:35ff:fe55:3215/128
Multilink
Local MRRU: 1500 bytes
Peer MRRU: 1500 bytes
Local Endpoint Discriminator: 1234567812345678
Peer Endpoint Discriminator: 1111222233334444
MCMP classes: Local 4, Remote 2
Member links: 2 active, 6 inactive (min-active 2)
- Serial0/3/1/3/1 ACTIVE
- Serial0/3/1/3/2 ACTIVE
- Serial0/3/1/3/3 INACTIVE : LCP not negotiated
- Serial0/3/1/3/4 INACTIVE : Mismatching peer endpoint
- Serial0/3/1/3/5 INACTIVE : Mismatching peer auth name
- Serial0/3/1/3/6 INACTIVE : MRRU option rejected by Peer
- Serial0/3/1/3/7 INACTIVE : Mismatching local MCMP classes
- Serial0/3/1/3/8 INACTIVE : MCMP option rejected by peer
```

The following example shows how to display PPP state information for a serial interface:

```
RP/0/RSP0/CPU0:router# show ppp interface Serial 0/3/1/3/1
```

```
Serial0/3/1/3/1 is down, line protocol is down
LCP: Open
SSO-State: Standby-Up
Keepalives enabled (10 sec)
Local MRU: 1500 bytes
Peer MRU: 1500 bytes
Local Bundle MRRU: 1500 bytes
Peer Bundle MRRU: 1500 bytes
Local Endpoint Discriminator: 1234567812345678
Peer Endpoint Discriminator: 1111222233334444
Local MCMP Classes: Not negotiated
Remote MCMP Classes: Not negotiated
Authentication
Of Us: CHAP (Completed as 'test-user')
Of Peer: PAP (Completed as 'peer-user')
Multilink
Multilink group id: 100
Member status: ACTIVE
```

Table 60: show ppp interfaces Field Descriptions

Field	Description
Ack-Rcvd	Configuration acknowledgement was received; waiting for peer to send configuration request.
Ack-Sent	Configuration acknowledgement was sent; waiting for peer to respond to configuration request.
Authentication	Type of user authentication configured on the local equipment and on the peer equipment. Possible PPP authentication protocols are Challenge Handshake Authentication Protocol (CHAP), MS-CHAP, and Password Authentication Protocol (PAP).
Closed	Lower layer is up, but this layer is not required.
Closing	Shutting down due to local change.
Initial	Connection is idle.

Field	Description
IPCP	IP Control Protocol (IPCP) state. The seven possible states that may be displayed are as follows: • Initial—Lower layer is unavailable (Down), and no Open has occurred. The Restart timer is not running in the Initial state. • Starting—An administrative Open has been initiated, but the lower layer is still unavailable (Down). The Restart timer is not running in the Starting state. When the lower layer becomes available (Up), a Configure-Request is sent. • Closed—IPCP is not currently trying to negotiate. • Stopped—A Terminate-Request has been sent and the Restart timer is running, but a Terminate-Ack has not yet been received. • Closing—A Terminate-Request has been sent and the Restart timer is running, but a Terminate-Ack has not yet been received. Upon reception of a Terminate-Ack, the Closed state is entered. Upon the expiration of the Restart timer, a new Terminate-Request is transmitted, and the Restart timer is restarted. After the Restart timer has expired Max-Terminate times, the Closed state is entered. • Stopping—A Terminate-Request has been sent and the Restart timer is running, but a IPCP-Ack has not yet been received. Req-Sent. • ACKsent—IPCP has received a request and has replied to it. • ACKrcvd—IPCP has received a reply to a request it sent. • Open—IPCP is functioning properly.
Keepalive	Keepalive setting and interval in seconds for echo request packets.

Field	Description
LCP	Indicates the current state of LCP. The state of the LCP will report the following states: • Initial—Lower layer is unavailable (Down), and no Open has occurred. The Restart timer is not running in the Initial state. • Starting—An administrative Open has been initiated, but the lower layer is still unavailable (Down). The Restart timer is not running in the Starting state. When the lower layer becomes available (Up), a Configure-Request is sent. • Closed— LCP is not currently trying to negotiate. • Stopped—A Terminate-Request has been sent and the Restart timer is running, but a Terminate-Ack has not yet been received. • Closing—A Terminate-Request has been sent and the Restart timer is running, but a Terminate-Ack has not yet been received. Upon reception of a Terminate-Ack, the Closed state is entered. Upon the expiration of the Restart timer, a new Terminate-Request is transmitted, and the Restart timer is restarted. After the Restart timer has expired Max-Terminate times, the Closed state is entered. • Stopping—A Terminate-Request has been sent and the Restart timer is running, but a Terminate-Ack has not yet been received. Req-Sent. • ACKsent—LCP has received a request and has replied to it. • ACKrcvd—LCP has received a reply to a request it sent. • Open—LCP is functioning properly
Local IPv4 address	IPv4 address for the local interface.
Local MRU	Maximum receive unit. The maximum size of the information transported, in bytes, in the PPP packet received by the local equipment.
Open	Connection open.

Field	Description
OSICP	Open System Interconnection Control Protocol (OSICP) state. The possible states that may be displayed are as follows: • Initial—Lower layer is unavailable (Down), and no Open has occurred. The Restart timer is not running in the Initial state. • Starting—An administrative Open has been initiated, but the lower layer is still unavailable (Down). The Restart timer is not running in the Starting state. When the lower layer becomes available (Up), a Configure-Request is sent. • Closed—OSICP is not currently trying to negotiate. • Stopped—A Terminate-Request has been sent and the Restart timer is running, but a Terminate-Ack has not yet been received. • Closing—A Terminate-Request has been sent and the Restart timer is running, but a Terminate-Ack has not yet been received. Upon reception of a Terminate-Ack, the Closed state is entered. Upon the expiration of the Restart timer, a new Terminate-Request is transmitted, and the Restart timer is restarted. After the Restart timer has expired Max-Terminate times, the Closed state is entered. • Stopping—A Terminate-Request has been sent and the Restart timer is running, but a Terminate-Ack has not yet been received. Req-Sent. • ACKsent—OSICP has received a request and has replied to it. • ACKrcvd—OSICP has received a reply to a request it sent. • Open—OSICP is functioning properly.
Peer IPv4 address	IPv4 address for the peer equipment.
Peer MRU	Maximum receive unit. The maximum size of the information transported, in bytes, in the PPP packet received by the peer equipment.
Req-Sent	Configuration request was sent; waiting for peer to respond.

Field	Description
Starting	This layer is required, but lower layer is down.
Stopped	Listening for a configuration request.
Stopping	Shutting down as a result of interactions with peer.

show ppp sso alerts

To display all Inter-Chassis Stateful Switchover (ICSSO) alerts that have occurred, use the **show ppp sso alerts** command in EXEC mode.

show ppp sso alerts location *node-id*

Syntax Description

location <i>node-id</i>	Specifies the full qualified path of a specific node in the format <i>rack/slot/module</i> .

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command displays the following information for alerts that have prevented a standby session from being brought to the Standby-Up state using replicated data.

- The interfaces on which the alerts have occurred
- The layer in which the error has occurred
- A short description of the error



Note

Only one error is reported for each layer for each interface. The error displayed is the most recent error that has occurred.

Task ID

Task ID	Operations
ppp	read

Examples

The following example shows how to display all ICSSO alerts that have occurred:

```
RP/0/RSP0/CPU0:router# show ppp sso errors location 0/3/cpu0
```

Intf Name	Layer with error	SSO Error
Mu0/3/0/0/100	IPCP	Unsupported IPCP option 0x07
Se0/3/1/3/1:0	LCP	Unacceptable value for LCP MRU option
Se0/3/1/3/2:0	of-us-auth	Incorrect Authentication protocol, CHAP
Se0/3/1/3/3:0	of-peer-auth	Invalid CHAP Authentication options
Se0/3/1/3/4:0	LCP	Inconsistent LCP MRRU options

show ppp sso state

To display the Inter-Chassis Stateful Switchover (ICSSO) states of a Point-to-Point Protocol (PPP) session running under a particular Multi-Router Automatic Protection Switching (MR-APS) group, use the **show ppp sso state** command in EXEC mode.

show ppp sso state *group group-id location node-id*

Syntax Description

group <i>group-id</i>	Specifies the redundancy group number. The range is 1 to 32.
location <i>node-id</i>	Specifies the full qualified path of a specific node in the format <i>rack/slot/module</i> .

Command Default

If group is not specified, states are displayed for all redundancy groups.

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command shows the states of these session layers:

- LCP
- of-us authentication
- of-peer authentication
- IPCP



Note

When an interface is in Standby mode, it is ready to forward traffic immediately after a switchover, if all the session layers, including IPCP, are in the S-Negd state.

show ppp sso state**Task ID**

Task ID	Operations
ppp	read

Examples

The following example shows how to display the ICSSO states for PPP running under a redundancy group:

```
RP/0/RSP0/CPU0:router# show ppp sso state location 0/3/cpu0
```

```
Not-Ready : The session is not yet ready to run as Active or Standby
S-UnNegd  : In Standby mode, no replication state received yet
A-Down    : In Active mode, lower layer not yet up
Deact'ing  : Session was Active, now going Standby
A-UnNegd   : In Active mode, not fully negotiated yet
S-Negd     : In Standby mode, replication state received and pre-programmed
Act'ing    : Session was Standby and pre-programmed, now going Active
A-Negd     : In Active mode, fully negotiated and up
-          : This layer not running
```

SSO-Group	1					
Sess-ID	Ifname	:	LCP	of-us auth	of-peer auth	IPCP
1	Multilink0/3/0/0/100	:	S-Negd	S-Negd	S-Negd	S-Negd
2	Multilink0/3/0/0/101	:	S-UnNegd	S-UnNegd	S-UnNegd	Not-Ready
3	Serial0/3/1/3/1	:	S-Negd	S-Negd	S-Negd	-
4	Serial0/3/1/3/2	:	A-Negd	A-Negd	A-Negd	A-UnNegd
5	Serial0/3/1/3/3	:	A-Down	Not-Ready	Not-Ready	-
6	Serial0/3/1/3/4	:	A-Up	A-Up	A-Up	A-Up

SSO-Group	1					
Sess-ID	Ifname	:	LCP	of-us auth	of-peer auth	IPCP
1	Multilink0/3/0/0/102	:	S-Negd	S-Negd	S-Negd	S-Negd
2	Serial0/3/1/3/5	:	S-Negd	S-Negd	S-Negd	-
3	Serial0/3/1/3/6	:	A-Negd	A-Negd	A-Negd	A-UnNegd

show ppp sso summary

To display the number of sessions in each Inter-Chassis Stateful Switchover (ICSSO) state for each session layer, use the **show ppp sso summary** command in EXEC mode.

show ppp sso summary location *node-id*

Syntax Description

location <i>node-id</i>	Specifies the full qualified path of a specific node in the format <i>rack/slot/module</i> .

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command displays information for these session layers:

- LCP
- of-us
- of-peer authentication
- IPCP



Note

Only sessions with Session State Redundancy Protocol (SSRP) configured are displayed.

Task ID

Task ID	Operations
ppp	read

Examples

The following example shows how to display the number of sessions in each ICSSO state for each session layer.

```
RP/0/RSP0/CPU0:router# show ppp sso summary location 0/3/cpu0
```

```
Not-Ready      : The session is not yet ready to run as Active or Standby
Stby-UnNegd    : In Standby mode, no replication state received yet
Act-Down       : In Active mode, lower layer not yet up
Deactivating   : Session was Active, now going Standby
Act-UnNegd     : In Active mode, not fully negotiated yet
Stby-Negd      : In Standby mode, replication state received and pre-programmed
Activating     : Session was Standby and pre-programmed, now going Active
Act-Negd       : In Active mode, fully negotiated and up
-              : This layer not running
```

Layer	Total	Not-Ready	Stby-UnNegd	Act-Down	Deactivating	Act-UnNegd	Stby-Negd	Activating	Act-Negd
LCP	20	2	5	0	0	3	6	0	4
of-us-auth	20	10	2	0	0	1	4	0	3
of-peer-auth	20	10	3	0	0	2	3	0	2
IPCP	10	1	2	1	0	3	2	0	1

ssrp group

To attach an Session State Redundancy Protocol (SSRP) group on an interface, use the **ssrp group** command in interface configuration mode. To remove the SSRP group from the interface, use the no form of this command.

ssrp group *group-number* **id** *id-number* **ppp**

Syntax Description

<i>group-number</i>	SSRP group number. The range is 1 to 65535.
id <i>id-number</i>	SSRP identifier number. The range is 1 to 4294967295.
ppp	Specifies point-to-point protocol.

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The group must be configured first on a specific location (linecard) and then assigned to the interface. The redundancy ID must be unique within the group. This command specifies a list the protocols that the group can replicate. Currently only PPP is supported.

Task ID

Task ID	Operations
ppp	read, write

Examples

The following example shows how to

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# interface Multilink 0/1/0/0/1
```

```
RP/0/RSP0/CPU0:router(config-if)# ssrp group 1 id 1 ppp
```

ssrp location

To specify the node on which to create a Session State Redundancy Protocol (SSRP) group and enter the SSRP node configuration mode, use the **ssrp location** command in global configuration mode.

ssrp location *node_id*

Syntax Description

<i>node_id</i>	Specifies the full qualified path of a specific node in the format <i>rack/slot/module</i> .

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The location specifies the card on which an SSRP group is created.

Task ID

Task ID	Operations
ppp	read, write

Examples

The following example shows how to create an SSRP group on a specified node for use by any interface on the card:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# ssrp location 0/1/cpu0
RP/0/RSP0/CPU0:router(config-ssrp-node)#
```

ssrp profile

To configure a Session State Redundancy Protocol (SSRP) profile and enter the SSRP configuration mode, use the **ssrp profile** command in global configuration mode. To remove the profile, use the no form of this command.

ssrp profile *profile-name*

no ssrp profile *profile-name*

Syntax Description	
<i>profile-name</i>	Name of this SSRP profile.

Command Default	No default behavior or values

Command Modes	Global configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. A Session State Redundancy Protocol (SSRP) profile allows the same SSRP configuration to be shared across multiple groups. The same profile can be attached to multiple groups across the router. The group must be configured before the interface that uses the group can be configured. The group number is used in the TCP port number so, the group number must be unique across the router.

Task ID	Task ID	Operations
	ppp	read, write

Examples	The following example shows how to configure an SSRP profile:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# ssrp profile Profile_1
RP/0/RSP0/CPU0:router(config-ssrp)#
```



Serial Interface Commands on the Cisco ASR 9000 Series Router

This module provides CLI commands for configuring serial interfaces on the Cisco ASR 9000 Series Router.

- [clear iphc ipv4](#), page 865
- [crc \(serial\)](#), page 867
- [description \(IPHC profile\)](#), page 869
- [encapsulation \(serial\)](#), page 870
- [feedback disable](#), page 872
- [fragment end-to-end](#), page 873
- [interface serial](#), page 875
- [invert](#), page 878
- [iphc profile](#), page 879
- [ipv4 iphc profile](#), page 881
- [keepalive \(serial\)](#), page 883
- [max-header](#), page 885
- [non-tcp compression](#), page 886
- [non-tcp context absolute](#), page 887
- [refresh max-period](#), page 889
- [refresh max-time](#), page 891
- [refresh rtp](#), page 893
- [rtp](#), page 894
- [scramble](#), page 895
- [serial](#), page 897
- [show iphc idb](#), page 898

- [show iphc ipv4 rtp, page 900](#)
- [show iphc ipv4 tcp, page 902](#)
- [show iphc platform trace, page 904](#)
- [show iphc profile, page 906](#)
- [show iphc trace all, page 909](#)
- [show tech-support iphc, page 911](#)
- [tcp compression, page 914](#)
- [tcp context absolute, page 916](#)
- [transmit-delay \(serial\), page 918](#)

clear iphc ipv4

To clear all Real Time Protocol (RTP) and Transport Control Protocol (TCP) statistics for IP header compression (IPHC) packets sent and received on an interface, use the **clear iphc ipv4** command in EXEC mode.

clear iphc ipv4 {**interface** {**serial**| **multilink**} *interface-path-id*| **location** *node-id*}

Syntax Description

interface	Specifies the interface to be configured, by type and the <i>interface-path-id</i> argument.
serial	Specifies a serial network interface.
multilink	Specifies a multilink network interface.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location	Specifies the interface to be configured by its <i>node-id</i> .
<i>node-id</i>	Fully qualified path of the node in the <i>rack/slot/module notation</i> .

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

The **clear counters** command also clears the IPHC statistics for all the interfaces.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to clear RTP and TCP statistics on an interface:

```
RP/0/RSP0/CPU0:router# clear iphc ipv4 interface Serial 0/1/0/1/26:0
Thu Jan  8 20:30:38.155 UTC
```

The following example shows how to clear RTP and TCP statistics on a node:

```
RP/0/RSP0/CPU0:router# clear iphc ipv4 location 0/3/CPU0
Mon Oct 12 22:47:51.430 DST
```


crc (serial)

To set the length of the cyclic redundancy check (CRC) on a serial interface, use the **crc** command in serial configuration mode. To return the CRC setting on a serial interface to the default setting, use the **no** form of this command.

crc {16| 32}

no crc {16| 32}

Syntax Description

16	Sets 16-bit CRC mode.
32	Sets 32-bit CRC mode.

Command Default

The default is 16 bits for serial interfaces.

Command Modes

Serial configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

CRC is an error-checking technique that uses a calculated numeric value to detect errors in transmitted data. The designators 16 and 32 indicate the length (in bits) of the frame check sequence (FCS). A CRC of 32 bits provides more powerful error detection, but adds overhead. Both the sender and receiver must use the same setting.

CRC-16, the most widely used error checking method throughout the United States and Europe, is used extensively with WANs. CRC-32 is specified by IEEE standard 802 and as an option by some point-to-point transmission standards. It is often used on Switched Multimegabit Data Service (SMDS) networks and LANs.

Task ID

Task ID	Operations
hdlc	read, write

Examples

In the following example, the 32-bit CRC on serial interface 0/3/0/0:10 is enabled:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/3/0/0:10
RP/0/RSP0/CPU0:router(config-if)# serial
RP/0/RSP0/CPU0:router(config-if-serial)# crc 32
```

Related Commands

Command	Description
show interfaces, on page 608	Displays statistics for all interfaces configured on the router or for a specific node.

description (IPHC profile)

To add a description to an IPHC profile, use the **description** command in IPHC profile configuration mode. To remove a description for an IPHC profile, use the **no** form of this command.

description *description*

no description

Syntax Description

<i>description</i>	Description to be added to the IPHC profile.

Command Default

By default, no description is attached to an IPHC profile.

Command Modes

IPHC profile configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ip-services	read, write

Examples

In the following example, a description is attached to the IPHC profile test:

```
RP/0/RSP0/CPU0:router(config)# config
RP/0/RSP0/CPU0:router(config)# iphc profile test type iphc
RP/0/RSP0/CPU0:router(config-iphc-profile)# description testprofile
RP/0/RSP0/CPU0:router(config-iphc-profile)# commit
```

encapsulation (serial)

To set the Layer 2 encapsulation of an interface, use the **encapsulation** command in interface configuration mode. To restore the system to the default encapsulation, use the **no** form of this command.

encapsulation {hdlc| ppp| frame-relay| mfr}

no encapsulation

Syntax Description

hdlc	Enables Cisco High-Level Data Link Control (HDLC) encapsulation on the interface. This is the default encapsulation type.
ppp	Enables PPP encapsulation on the interface.
frame -relay	Enables Frame Relay encapsulation on the interface.
mfr	Enables multilink Frame Relay encapsulation on the interface.

Command Default

For serial interfaces, the default encapsulation is HDLC.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Frame Relay and Multilink Frame Relay encapsulation was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
hdlc	read, write
interface	read, write

Examples

The following example shows how to enable PPP encapsulation on serial interface 0/3/0/1:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/3/0/1  
RP/0/RSP0/CPU0:router(config-if)# encapsulation ppp
```

Related Commands

Command	Description
show interfaces, on page 608	Displays statistics for all interfaces configured on the router or for a specific node.
show ppp interfaces, on page 845	Displays PPP state information for an interface.

feedback disable

To disable the IP header compression (IPHC) context status feedback messages on an interface, use the **feedback disable** command in IPHC profile configuration mode. To re-enable feedback messages after they are disabled, use the **no** form of this command.

feedback disable

no feedback disable

Syntax Description This command has no keywords or arguments.

Command Default Feedback messages are enabled by default.

Command Modes IPHC profile configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

Feedback disable can be configured only within an IPHC profile.

Task ID	Task ID	Operations
	ip-services	read, write

Examples The following example shows how to disable the IP header compression (IPHC) context status feedback messages within an IPHC profile:

```
RP/0/RSP0/CPU0:router(config)# config
RP/0/RSP0/CPU0:router(config)# iphc profile Profile_1 type iphc
RP/0/RSP0/CPU0:router(config-iphc-profile)# feedback disable
```

fragment end-to-end

To enable fragmentation of Frame Relay frames on an interface, use the **fragment end-to-end** command in serial Frame Relay PVC configuration mode. To disable Frame Relay fragmentation, use the **no** form of this command.

fragment end-to-end *fragment-size*

no fragment end-to-end

Syntax Description

fragment-size Number of payload bytes from the original Frame Relay frame that go into each fragment. This number excludes the Frame Relay header of the original frame.

All the fragments of a Frame Relay frame, except the last, have a payload size equal to *fragment-size*; the last fragment has a payload less than or equal to *fragment-size*. Valid values are from 64 to 512 bytes, depending on your hardware.

Command Default

Fragmentation is disabled by default.

Command Modes

Frame Relay virtual circuit configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
fr	read, write

Examples

The following example shows how to enter serial Frame Relay virtual circuit configuration mode, set the fragmentation size of Frame Relay frames on subinterface 0/6/2/4.1 to 512 bytes:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/6/2/4.1 point-to-point
RP/0/RSP0/CPU0:router(config-subif)# pvc 100
RP/0/RSP0/CPU0:router(config-fr-vc)# fragment end-to-end 512
```

Related Commands

Command	Description
interface serial , on page 875	Configures a serial interface and enters interface or subinterface configuration mode.
pvc (serial)	Creates a Frame Relay PVC under a serial subinterface and enters Frame Relay virtual circuit configuration mode.

interface serial

To configure a serial interface and enter interface or subinterface configuration mode, use the **interface serial** command in global configuration mode. To delete a serial configuration, use the **no** form of this command.

interface serial *interface-path-id* [. *subinterface*] {**point-to-point**| **l2transport**}

no interface serial *interface-path-id* [. *subinterface*] {**point-to-point**| **l2transport**}

Syntax Description

interface-path-id[.*subinterface*] Physical interface or virtual interface followed by the optional subinterface path ID. Naming notation is *interface-path-id.subinterface*. The period in front of the subinterface value is required as part of the notation.

For more information about the syntax for the router, use the question mark (?) online help function.

point-to-point Interface functions as one endpoint of a point-to-point link.

l2transport Interface functions as one endpoint on an Layer 2 link.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The . <i>subinterface</i> argument, and the point-to-point and l2transport keywords were added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:



Note

A slash between values is required as part of the notation.

- The naming notation for T1 interfaces on a channelized SPA is *rack/slot/module/port/channel-num:channel-group-number*, as shown in the following example:

```
interface serial 0/0/1/2/4:3
```

- If a subinterface is configured under the serial interface, then the router includes the subinterface number at the end of the serial interface address. In this case, the naming notation is *rack/slot/module/port[/channel-num:channel-group-number].subinterface*, as shown in the following example:

```
interface serial 0/0/1/2.1
```

- The naming notation syntax for serial interfaces is as follows:
 - *rack*—Chassis number of the rack.
 - *slot*—Physical slot number of the modular services card or line card.
 - *module*—Module number. Shared port adapters (SPAs) are referenced by their subslot number.
 - *port*—Physical port number of the controller.
 - *channel-num*:—T1 channel number. T1 channels range from 0 to 23.
 - *channel-group-number*:—Time slot number. T1 time slots range from 1 to 24. The *channel-group-number* is preceded by a colon and not a slash.
 - *subinterface*—Subinterface number.
- Use the question mark (?) online help function following the **serial** keyword to view a list of all valid interface choices.

Serial interfaces on channelized T3 can be deleted using the **no channel-group** command in T1 configuration mode. If there are nondefault serial parameters defined, you need to use the **no interface serial** command first to revert to the default configuration, and then delete the serial interface using the **no channel-group** command.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enter interface configuration mode for a serial interface in slot 6, subslot 2, port 4, T1 channel number 10 and channel group 8:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/6/2/4/10:8
RP/0/RSP0/CPU0:router(config-if)#
```

The following example shows how to reference the serial interface on channel group 3 of T1 channel group 4 on port 2 of a SPA in subslot 1 and enter subinterface configuration mode:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/0/1/2/4:3
RP/0/RSP0/CPU0:router(config-if)#
```

Related Commands

Command	Description
channel-group, on page 1045	Configures a DS0 channel group and enters channel group configuration mode.
show interfaces, on page 608	Displays statistics for all interfaces configured on the router or for a specific node.

invert

To invert the data stream on a serial interface, use the **invert** command in serial configuration mode. To disable data inversion, use the **no** form of this command.

invert

no invert

Syntax Description This command has no keywords or arguments.

Command Default Data is not inverted.

Command Modes Serial configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To verify that data inversion is configured on the interface, use the **show interfaces serial** command.

Task ID	Task ID	Operations
	hdlc	read, write

Examples In the following example, data inversion is enabled on serial interface 0/3/0/0/0:10:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/3/0/0/0:10
RP/0/RSP0/CPU0:router(config-if)# serial
RP/0/RSP0/CPU0:router(config-if-serial)# invert
```

Related Commands	Command	Description
	show interfaces , on page 608	Displays statistics for all interfaces configured on the router or for a specific node.

iphc profile

To create an IP header compression (IPHC) profile and enter the IPHC profile configuration mode, use the **iphc profile** command in configuration mode. To remove the profile, use the **no** form of this command.

iphc profile *profile-name* **type** {ietf| iphc}

no iphc profile *profile-name* [**type** {ietf| iphc}]

Syntax Description

<i>profile-name</i>	Text name for the IPHC profile. The maximum number of characters is 50.
type	Specifies the type of compression format.
ietf	Specifies Internet Engineering Task Force (IETF) standard format. Uses RFC2507 and RFC2508 compression schemes.
iphc	Specifies Internet Protocol Header Compression (IPHC) format. Provides options similar to IETF.

Command Default

No default behavior or values

Command Modes

Configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

After you create a profile and enter the IPHC profile configuration mode, you can configure IPHC features in the profile and attach the profile to multiple interfaces. The maximum number of profiles allowed on a router is 250.

A profile cannot be deleted if it is attached to any interfaces. You must remove the profile from all interfaces first. Then, delete the profile using the **no** form of this command.

On-the-fly modifications to IPHC profiles are not supported.

A profile name cannot exceed 50 characters. If you attempt to create a profile name that exceeds 50 characters, you receive the following error message:

```
iphc profile test1test1test1test1test1test1test1test1test1 type iphc
!!% 'iphc_profilemgr' detected the 'warning' condition
```

```
'Name is longer than allowed character length of 50'  
!
```

Examples

The following example shows how to create the IPHC profile Profile_1

```
RP/0/RSP0/CPU0:router(config)# config  
RP/0/RSP0/CPU0:router(config)# iphc profile Profile_1 type iphc  
RP/0/RSP0/CPU0:router(config-iphc-profile)#
```

ipv4 iphc profile

To attach an IP header compression (IPHC) profile to an interface, use the **ipv4 iphc profile** command in interface configuration mode. To remove the profile from the interface, use the **no** form of this command.

ipv4 iphc profile *profile-name* [**mode service-policy**]

no ipv4 iphc profile [*profile-name* [**mode service-policy**]]

Syntax Description

<i>profile-name</i>	Text name of the configured IPHC profile to attach to this interface.
mode service-policy	(Optional) Specifies that the IPHC profile applies to a QoS service policy.

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the profile name is not recognized the system returns the following error message:

```
!!% 'iphc_ma' detected the 'warning' condition 'Profile doesn't exist'
```

If the encapsulation on the interface is not supported, the system returns the following error message:

```
!!% 'iphc_ma' detected the 'warning' condition 'IPHC capability: Encap type not supported'
```

Task ID

Task ID	Operations
ip-services	read, write
ipv4	read, write

Examples

The following example shows how to attach an IP header compression (IPHC) profile to an interface.

```
RP/0/RSP0/CPU0:router(config)# config  
RP/0/RSP0/CPU0:router(config)# interface serial 0/1/0/1  
RP/0/RSP0/CPU0:router(config-if)# ipv4 iphc profile Profile_1
```

The following example shows how to attach an IPHC profile that applies to a QoS service policy to an interface:

```
RP/0/RSP0/CPU0:router(config)# config  
RP/0/RSP0/CPU0:router(config)# interface serial 0/1/0/1  
RP/0/RSP0/CPU0:router(config-if)# ipv4 iphc profile Profile_1 mode service-policy
```


keepalive (serial)

To set the keepalive timer for a specific serial interface, use the **keepalive** command in interface configuration mode. To reset the keepalive timer to the default of 10 seconds, use the **no** form of this command.

keepalive {*interval* [*retry*]} **disable**}

no keepalive

Syntax Description

<i>interval</i>	Number of seconds (from 1 to 30) between keepalive messages. The default is 10.
disable	Turns off the keepalive timer.
<i>retry</i>	(Optional) Number of keepalive messages (from 1 to 255) that can be sent to a peer without a response before transitioning the link to down state. The default is 5.

Command Default

The default interval is 10 seconds between keepalive messages. The default retry is 5 keepalive messages that can be sent without a response. However, when more than 5 keepalive messages are sent to a peer without a response, the link transitions to the down state.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

HDLC keepalives require that the **keepalive** command is configured the same way on both ends of a single connection. The two connected routers have no way of negotiating the keepalive value because there is no way for one router to tell the other about its configured values. The keepalive value configured on each router (local or partner) sets the rate at which the Cisco IOS XR software sends packets. It also sets the rate at which the local end expects to receive incoming packets.

To set the keepalive value to the default value, use the **keepalive** command without specifying a value for the *interval* argument.

By default, if more than five keepalive messages are sent to a peer and no response is received from the peer, then the link transitions to the down state.

Task ID

Task ID	Operations
hdlc	read, write

Examples

The following example shows how to configure keepalives for 3 seconds on serial interface 0/7/0/1:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/7/0/1  
RP/0/RSP0/CPU0:router(config-if)# keepalive 3
```

Related Commands

Command	Description
show interfaces , on page 608	Displays statistics for all interfaces configured on the router or for a specific node.

max-header

To define the maximum size header that can be compressed, use the **max-header** command in IPHC profile configuration mode. To return to the default maximum size, use the **no** form of this command.

max-header *number-of-bytes*

no max-header [*number-of-bytes*]

Syntax Description

<i>number-of-bytes</i>	Maximum size, in bytes, of a header that can be compressed. The range is from 20 to 40. The default is 40.

Command Default

Number-of-bytes; 40.

Command Modes

IPHC profile configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

The maximum header size can be configured only within an IPHC profile.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to define the maximum size header that can be compressed.

```
RP/0/RSP0/CPU0:router(config)# config
RP/0/RSP0/CPU0:router(config)# iphc profile Profile_1 type iphc
RP/0/RSP0/CPU0:router(config-iphc-profile)# max-header 20
```

non-tcp compression

To enable non-TCP compression in an IP header compression (IPHC) profile, use the **non-tcp compression** command in IPHC profile configuration mode. To disable non-TCP compression in the profile, use the **no** form of this command.

non-tcp compression

no non-tcp

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes IPHC profile configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

NON-TCP compression can be enabled only within an IPHC profile. Non-TCP compression does not work unless it is enabled under a profile.

Task ID	Task ID	Operations
	ip-services	read, write

Examples The following example shows how to enable NON-TCP compression within an IP header compression (IPHC) profile:

```
RP/0/RSP0/CPU0:router(config)# config
RP/0/RSP0/CPU0:router(config)# iphc profile Profile_1 type iphc
RP/0/RSP0/CPU0:router(config-iphc-profile)# non-tcp compression
```

non-tcp context absolute

To configure the maximum number of non-TCP contexts that are allowed for IPHC under a profile, use the **non-tcp context absolute** command in IPHC profile configuration mode. To remove the non-TCP context from the profile, use the **no** form of this command.

non-tcp context absolute *number-of-contexts*

no non-tcp context [**absolute** [*number-of-contexts*]]

Syntax Description

<i>number-of-contexts</i>	Numeric value that specifies the maximum number of non-TCP contexts allowed for IPHC under this profile. The range is from 0 to 6000.

Command Default

If the number of contexts is not specified, and only non-TCP compression is enabled, the default number of contexts is 16.

Command Modes

IPHC profile configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The maximum allowed number of non-tcp contexts on a Line Card, across all IPHC profiles and interfaces, is 6000.



Note

Non-TCP context can be set only within an IPHC profile.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to enable non-TCP compression within an IP header compression (IPHC) profile:

```
RP/0/RSP0/CPU0:router(config)# config  
RP/0/RSP0/CPU0:router(config)# iphc profile Profile_1 type iphc  
RP/0/RSP0/CPU0:router(config-iphc-profile)# non-tcp context absolute 255
```

refresh max-period

To configure the maximum number of compressed IP header packets exchanged on a link before IPHC context is refreshed, use the **refresh max-period** command in IPHC profile configuration mode. To return to the default context refresh settings, use the **no** form of this command.

refresh max-period {*max-number*| **infinite**}

no refresh max-period [*max-number*| **infinite**]

Syntax Description

<i>max-number</i>	Maximum number of compressed IP header packets allowed between full headers or before the context is refreshed. Range is from 0 to 65535.
infinite	Allows an unlimited number of packets to be exchanged before context refresh.

Command Default

max-number: 256

Command Modes

IPHC profile configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To enable the configured context refresh settings for RTP packets, the **refresh rtp** command must be used.



Note

The maximum period between context refreshes can be set only within an IPHC profile.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to configure the maximum number of compressed IP header packets that are exchanged on a link before the context is refreshed, in an IPHC profile.

```
RP/0/RSP0/CPU0:router(config)# config  
RP/0/RSP0/CPU0:router(config)# iphc profile Profile_1 type iphc  
RP/0/RSP0/CPU0:router(config-iphc-profile)# refresh max-period 50
```


refresh max-time

To configure the maximum time allowed between context refreshes, use the **refresh max-time** command in IPHC profile configuration mode. To return to the default context refresh settings, use the **no** form of this command.

refresh max-time [*max-time*] **infinite**

no refresh max-time [*max-time*] **infinite**

Syntax Description

<i>max-time</i>	Time, in seconds, between context refreshes. Range is from 0 to 255.
infinite	Allows an unlimited time to pass between context refreshes.

Command Default

max-time: 5

Command Modes

IPHC profile configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To enable the configured context refresh settings for RTP packets, the **refresh rtp** command must be used.



Note

The maximum time between context refreshes can be set only within an IPHC profile.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to configure the maximum allowed time between context refreshes as 60 seconds, in the IPHC profile 'Profile 1':

```
RP/0/RSP0/CPU0:router(config)# config  
RP/0/RSP0/CPU0:router(config)# iphc profile Profile_1 type iphc  
RP/0/RSP0/CPU0:router(config-iphc-profile)# refresh max-time 60
```

refresh rtp

To enable the configured context refresh settings for RTP packets, use the **refresh rtp** command in IPHC profile configuration mode. To disable context refresh settings for RTP packets, use the **no** form of this command.

refresh rtp

no refresh rtp

Syntax Description This command has no keywords or arguments.

Command Default By default, refresh RTP is disabled and only the first packet in the flow is sent as a ‘full-header’ packet.

Command Modes IPHC profile configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ip-services	read, write

Examples The following example shows how to enable the configured refresh settings for RTP packets:

```
RP/0/RSP0/CPU0:router(config)# config
RP/0/RSP0/CPU0:router(config)# iphc profile Profile_1 type iphc
RP/0/RSP0/CPU0:router(config-iphc-profile)# refresh rtp
```

rtp

To enable Real Time Protocol (RTP) compression and decompression on the interface, use the **rtp** command in IPHC profile configuration mode. To remove RTP from the interface, use the **no** form of this command.

rtp

no rtp

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes IPHC profile configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note RTP can be enabled only within an IPHC profile.

You must enable RTP before attaching a profile to an interface. If you do not enable RTP first, the router will display the following message: '!!% 'iphc_capability' detected the 'warning' condition 'IPHC Capability: RTP Compression NOT enabled in the profile'!'

Task ID	Task ID	Operations
	ip-services	read, write

Examples The following example shows how to

```
RP/0/RSP0/CPU0:router(config)# config
RP/0/RSP0/CPU0:router(config)# iphc profile Profile_1 type iphc
RP/0/RSP0/CPU0:router(config-iphc-profile)# rtp
```

scramble

To enable payload scrambling (encryption) on a serial interface, use the **scramble** command in interface configuration mode. To disable scrambling, use the **no** form of this command.

scramble

no scramble

Syntax Description This command has no keywords or arguments.

Command Default Scrambling is disabled.

Command Modes Interface configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Scrambling is used to assist clock recovery on the receiving end. Scrambling is designed to randomize the pattern of 1s and 0s carried in the physical layer frame. Randomizing the digital bits can prevent continuous, nonvariable bit patterns—in other words, long strings of all 1s or all 0s. Several physical layer protocols rely on transitions between 1s and 0s to maintain clocking.

Scrambling can prevent some bit patterns from being mistakenly interpreted as alarms by switches placed between the Data Service Units (DSUs).

The local interface configuration must match the remote interface configuration. For example, if you enable scrambling on the local port, you must also do the same on the remote port.

To verify that scrambling is configured on the interface, use the **show interfaces serial** command.

Task ID

Examples In the following example, scrambling is enabled on serial interface 0/3/0/0/0:10:

```
RP/0/RSP0/CPU0:router(config)# interface serial 0/3/0/0/0:10
RP/0/RSP0/CPU0:router(config-if)# serial
RP/0/RSP0/CPU0:router(config-if-serial)# scramble
```

Related Commands

Command	Description
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

serial

To configure the serial parameters and enter serial configuration mode, use the **serial** command in interface configuration mode. To return to the default state of the serial interface, use the **no** form of this command.

serial

no serial

Syntax Description	This command has no keywords or arguments.

Command Default	No default behavior or values

Command Modes	Interface configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Serial interfaces are automatically created for unchannelized ports; for channelized ports, serial interfaces are created when you add T1/E1 channel groups.

Task ID	Task ID	Operations
	hdlc	read, write

Examples	The following example shows how to enter serial configuration mode:

```
RP/0/RSP0/CPU0:router(config-if)# serial
RP/0/RSP0/CPU0:router(config-if-serial)#
```

show iphc idb

To display status information for an IP header compression (IPHC) interface description block (IDB), use the **show iphc idb** command in EXEC mode.

show iphc idb [**detail** | **interface** *type interface-path-id* [**detail**] | **location** *node-id* [**detail**]]

Syntax Description

detail	Includes statistics information and internal data.
interface	Specifies the interface for which IPHC information is to be displayed.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location	Specifies the node location for which IPHC information is to be displayed.
<i>node-id</i>	Specifies the fully qualified path of a node. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

The default (no parameters) displays information for all interfaces configured for IPHC.

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ip-services	read

Examples

The following examples show how to display status information for an IP header compression (IPHC) interface description block (IDB).

```
RP/0/RSP0/CPU0:router# show iphc idb interface Serial 0/1/0/1/26:0
```

```
Thu Jan  8 20:25:41.079 UTC
EA Status Codes:                  Neg Status Code:
  CFG_AS: Cfg Apply Succeed       NEG_I: Negotiation Init
  CFG_AF: Cfg Apply Failed        NEG_P: Negotiation Progress
  NEG_AS: Neg Apply Succeed       NEG_D: Negotiation Done
  NEG_AF: Neg Apply Failed        NEG_F: Negotiation Failed

Interface_Name: Serial0/1/0/1/26:0  Ifhandle  : 0x02008e00
EA Status      : NEG_AS              Neg Status: NEG_D
MQC Mode       : F                  Prof_Name : iphcfmt
```

```
RP/0/RSP0/CPU0:router# show iphc idb interface Serial 0/1/0/1/26:0 detail
```

```
Thu Jan  8 20:25:44.731 UTC
EA Status Codes:                  Neg Status Code:
  CFG_AS: Cfg Apply Succeed       NEG_I: Negotiation Init
  CFG_AF: Cfg Apply Failed        NEG_P: Negotiation Progress
  NEG_AS: Neg Apply Succeed       NEG_D: Negotiation Done
  NEG_AF: Neg Apply Failed        NEG_F: Negotiation Failed

Interface_Name: Serial0/1/0/1/26:0  Ifhandle  : 0x02008e00
EA Status      : NEG_AS              Neg Status: NEG_D
MQC Mode       : F                  Prof_Name : iphcfmt
```

	Tcp Space	Non-Tcp Space	Max Header	Max Period	Max Time	RTP
Cfg_Option	1	60	40	256	5	T
Neg_Option	1	50	40	256	5	T

show iphc ipv4 rtp

To display IPv4 statistics for Real Time Protocol (RTP) and User Datagram Protocol (UDP) packets sent and received on an interface, use the **show iphc ipv4 rtp** command in EXEC mode.

show iphc ipv4 rtp interface *type interface-path-id* [**location** *node-id*]

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location	(Optional) Specifies the location of the interface
<i>node-id</i>	(Optional) Node-id entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Caution

These Cisco support commands are normally reserved for use by Cisco Technical Support personnel only. If used incorrectly, there is some risk that they may cause performance or other issues that impact products, and we highly recommend that you contact Cisco Technical Support before using any of these commands.

Task ID

Task ID	Operations
ip-services	read

Task ID	Operations
cisco-support	read

Examples

The following example shows how to display IPv4, Real Time Protocol (RTP), User Datagram Protocol (UDP), and Non-Transmission Control Protocol (non-TCP) statistics about IP header compression (IPHC) packets sent and received on an interface:

```
RP/0/RSP0/CPU0:router# show iphc ipv4 rtp interface Serial 0/1/0/1/26:0
```

```
Thu Jan  8 20:28:47.569 UTC
RTP/UDP/IP header compression statistics:
  Interface Serial0/1/0/1/26:0
    Rcvd:    100 total, 93 compressed, 7 full header
             0 dropped, 0 status msgs
    Sent:    0 total, 0 compressed, 0 fullheader, 0 status msgs
             0 bytes saved, 0 bytes sent
             1.00 efficiency improvement factor
```

show iphc ipv4 tcp

To display IPv4 Transport Control Protocol (TCP) statistics about IP header compression (IPHC) packets sent and received on an interface, use the **show iphc ipv4 tcp** command in EXEC mode.

show iphc ipv4 tcp interface *type interface-path-id* [**location** *node-id*]

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location	(Optional) Specifies the location of the interface
<i>node-id</i>	(Optional) Node-id entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Caution

These Cisco support commands are normally reserved for use by Cisco Technical Support personnel only. If used incorrectly, there is some risk that they may cause performance or other issues that impact products, and we highly recommend that you contact Cisco Technical Support before using any of these commands.

Task ID

Task ID	Operations
ip-services	read

Task ID	Operations
cisco-support	read

Examples

The following example shows how to display IPv4, Transport Control Protocol (TCP) statistics about IP header compression (IPHC) packets sent and received on an interface:

```
RP/0/RSP0/CPU0:router# show iphc ipv4 tcp interface Serial 0/1/0/1/26:0
```

```
Thu Jan  8 20:28:54.407 UTC
TCP/IP header compression statistics:
  Interface Serial0/1/0/1/26:0
    Rcvd:    100 total, 93 compressed, 7 full header
            0 dropped, 0 status msgs
    Sent:    0 status msgs
```

show iphc platform trace

To display platform trace information, such as errors or statistics for a file or a node, use the **show iphc platform trace** command in EXEC mode.

show iphc platform trace [**all** | **events** | **errors** [**events**] [**all**] | **internal** [**all** | **errors** [**events**] [**all**] | **events** [**all**]] [**unique** | **wrapping**] [**hexdump**] [**last** *number-of-entries*] [**reverse**] [**stats**] [**tailf**] [**verbose**] [**file** *file-name* **original** *location* *node-id* | **location** {*node-id* | **all** | **mgmt-nodes**}]

Syntax Description

all	(Optional) Displays all platform trace information.
events	(Optional) Displays event platform trace information.
unique	(Optional) Displays trace information for unique entries with counts.
wrapping	(Optional) Displays wrapping entries.
hexdump	(Optional) Displays trace information in hexadecimal format.
last <i>number_of_entries</i>	(Optional) Displays trace information for the last specified number of entries. The range is 1 to 4294967295.
reverse	(Optional) Displays trace information in reverse order (latest traces first).
stats	(Optional) Displays statistics information for the trace.
tailf	(Optional) Displays new traces as they are added.
verbose	(Optional) Displays internal debugging information.
file <i>file_name</i>	(Optional) Displays trace information for the specified file.
original	(Optional) Specifies the original location of file.
location <i>node_id</i>	(Optional) Displays trace information for the specified card location.
all	(Optional) Displays trace information for all nodes.
mgmt-nodes	(Optional) Displays trace information for all management nodes.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The keywords **hexdump**, **last**, **reverse**, **stats**, **tailf**, and **verbose** may be entered in any order.

Use of the keywords **file** and **location** allows any number of desired files or locations to be entered. For more information, use the question mark (?) online help function.

**Caution**

These Cisco support commands are normally reserved for use by Cisco Technical Support personnel only. If used incorrectly, there is some risk that they may cause performance or other issues that impact products, and we highly recommend that you contact Cisco Technical Support before using any of these commands.

Task ID

Task ID	Operations
ip-services	read
cisco-support	read

Examples

The following example shows how to display platform trace information for a specified location:

```
RP/0/RSP0/CPU0:router# show iphc platform trace all location 0/2/CPU0
Mon Aug 16 06:05:17.906 PDT
6 wrapping entries (24576 possible, 0 filtered, 6 total)
Aug 16 05:53:59.674 iphc_ea/internal 0/2/CPU0 t1 PAL IPHC: LC Platform preinit
Aug 16 05:54:00.255 iphc_ea/internal 0/2/CPU0 t1 PAL IPHC: LC Platform init
Aug 16 05:54:00.255 iphc_ea/internal 0/2/CPU0 t1 PAL IPHC: max iphc interfaces 2048
Aug 16 05:54:00.255 iphc_ea/internal 0/2/CPU0 t1 PAL IPHC: ea respawn count 1
Aug 16 05:54:00.284 iphc_ea/internal 0/2/CPU0 t1 PAL IPHC: LC Platform replay end
Aug 16 05:54:00.284 iphc_ea/internal 0/2/CPU0 t1 PAL IPHC: replay end 0 stale entries
```

show iphc profile

To display the configuration information of an IP header compression (IPHC) profile, use the **show iphc profile** command in EXEC mode.

show iphc profile *{profile-name| all}* [**detail**]

Syntax Description

<i>profile-name</i>	Text name of the IPHC profile for which to display information.
all	Displays information for all profiles on the router.
detail	(Optional) Displays the interfaces to which the profile is attached.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ip-services	read

Examples

The following examples show how to display information about an IPHC profile:

```
RP/0/RSP0/CPU0:router# show iphc profile ietf-test1
Tue Aug 10 06:53:19.711 PDT
IPHC Profile: ietf-test1
Type: IETF
Compressing : TCP NON-TCP (RTP)
Context     : TCP fixed at 1 NON-TCP fixed at 10
Refresh     : NON-TCP every 60 seconds or 100 packets
Feedback    : ON
```



```
Max_Header : 40
Refresh RTP : OFF
```

```
RP/0/RSP0/CPU0:router# show iphc profile Profile_1 detail
```

```
Thu Jan 8 20:22:24.276 UTC
```

```
IPHC Profile: Profile_1
```

```
Type: IPHC
```

```
Compressing : TCP NON-TCP (RTP)
Context      : TCP fixed at 1 NON-TCP fixed at 60
Refresh      : NON-TCP every 5 seconds or 256 packets
Feedback     : ON
Max_Header   : 40
```

```
*** No of Intf 1 ****
```

```
Serial0_4_3_1_1:0
```

```
RP/0/RSP0/CPU0:router# show iphc profile all
```

```
Thu Mar 12 11:05:35.987 UTC
```

```
IPHC Profiles : 3
```

```
IPHC Profile: p1
```

```
Type: IETF
```

```
Compressing : TCP NON-TCP (RTP)
Context      : TCP fixed at 1 NON-TCP fixed at 16
Refresh      : NON-TCP every 5 seconds or 256 packets
Feedback     : ON
Max_Header   : 40
```

```
IPHC Profile: p2
```

```
Type: IETF
```

```
Compressing : TCP NON-TCP (RTP)
Context      : TCP fixed at 1 NON-TCP fixed at 16
Refresh      : NON-TCP every 5 seconds or 256 packets
Feedback     : ON
Max_Header   : 40
```

```
IPHC Profile: test
```

```
Type: IETF
```

```
Compressing : TCP NON-TCP (RTP)
Context      : TCP fixed at 1 NON-TCP fixed at 16
Refresh      : NON-TCP every 5 seconds or 256 packets
Feedback     : ON
Max_Header   : 40
```

```
RP/0/RSP0/CPU0:router# show iphc profile all detail
```

```
Thu Mar 12 11:06:26.902 UTC
```

```
IPHC Profiles : 3
```

```
IPHC Profile: p1
```

```
Type: IETF
```

```
Compressing : TCP NON-TCP (RTP)
Context      : TCP fixed at 1 NON-TCP fixed at 16
Refresh      : NON-TCP every 5 seconds or 256 packets
Feedback     : ON
Max_Header   : 40
```

```
*** No of Intf 1 ****
```

```
Serial0_4_3_1_1:0
```

```
IPHC Profile: p2
```

```
Type: IETF
```

```
Compressing : TCP NON-TCP (RTP)
Context      : TCP fixed at 1 NON-TCP fixed at 16
Refresh      : NON-TCP every 5 seconds or 256 packets
Feedback     : ON
Max_Header   : 40
```

```
*** No of Intf 2 ****
```

```
Serial0_4_3_1_2:0
```

```
Serial0_4_3_1_8:0
```

```
IPHC Profile: test
```

show iphc profile

```
Type: IETF
Compressing : TCP  NON-TCP (RTP)
Context      : TCP fixed at 1 NON-TCP fixed at 16
Refresh      : NON-TCP every 5 seconds or 256 packets
Feedback     : ON
Max_Header   : 40

*** No of Intf 0 ****
```

show iphc trace all

To display trace results for all IP header compression (IPHC) configurations on the router, use the **show iphc trace all** command in EXEC mode.

show iphc trace all [**unique**|**wrapping**] [**hexdump**] [**last number-of-entries**] [**reverse**] [**stats**] [**tailf**] [**verbose**] [**file file-name** **original** **location** *node-id*| **location** {*node-id*| **all**| **mgmt-nodes**}]

Syntax Description

unique	(Optional) Displays trace information for unique entries with counts.
wrapping	(Optional) Displays wrapping entries.
hexdump	(Optional) Displays trace information in hexadecimal format.
last number_of_entries	(Optional) Displays trace information for the last specified number of entries. The range is from 1 to 4294967295.
reverse	(Optional) Displays trace information in reverse order (latest traces first).
stats	(Optional) Displays statistics information for the trace.
tailf	(Optional) Displays new traces as they are added.
verbose	(Optional) Displays internal debugging information.
file file_name	(Optional) Displays trace information for the specified file.
original	(Optional) Specifies the original location of file.
location node_id	(Optional) Displays trace information for the specified card location.
all	(Optional) Displays trace information for all nodes.
mgmt-nodes	(Optional) Displays trace information for all management nodes.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The keywords **hexdump**, **last**, **reverse**, **stats**, **tailf**, and **verbose** may be entered in any order. The keywords **unique** or **wrapping** may only be entered as the first keyword in the command. The keywords **file** or **location** may only be entered as the last keyword in the command.

Use of the keywords **file** and **location** allows any number of desired files or locations to be entered. For more information, use the question mark (?) online help function.

**Caution**

These Cisco support commands are normally reserved for use by Cisco Technical Support personnel only. If used incorrectly, there is some risk that they may cause performance or other issues that impact products, and we highly recommend that you contact Cisco Technical Support before using any of these commands.

Task ID

Task ID	Operations
ip-services	read
cisco-support	read

Examples

The following example shows how to display IPHC trace information:

```
RP/0/RSP0/CPU0:router# show iphc trace all

Wed Jul 22 21:48:07.339 DST
20 wrapping entries (3072 possible, 0 filtered, 20 total)
Jul 22 03:31:39.770 iphc/profilemgr/int 0/5/CPU0 t1 : Event Mgr Create Successful
Jul 22 03:31:39.799 iphc/profilemgr/int 0/5/CPU0 t1 : Sysmgr Init Successful
Jul 22 03:31:39.894 iphc/profilemgr/int 0/5/CPU0 t1 : Ens Init Successful
Jul 22 03:31:39.910 iphc/profilemgr/int 0/5/CPU0 t1 : Sysdb Init Successful
Jul 22 03:31:39.911 iphc/profilemgr/int 0/5/CPU0 t1 : Stats thread Init Successful
Jul 22 03:31:39.942 iphc/profilemgr/int 0/5/CPU0 t1 : Cfg thread Init Successful
Jul 22 03:31:39.951 iphc/profilemgr/int 0/5/CPU0 t1 : Registered verifier call7
Jul 22 03:31:39.952 iphc/profilemgr/eve 0/5/CPU0 t1 : Scanning Profile: *** Pr*
Jul 22 03:31:39.952 iphc/profilemgr/eve 0/5/CPU0 t1 : Scanning Option (format))
Jul 22 03:31:39.952 iphc/profilemgr/eve 0/5/CPU0 t1 : Scanning Option (tcp_com)
Jul 22 03:31:39.952 iphc/profilemgr/eve 0/5/CPU0 t1 : Scanning Option (tcp_con)
Jul 22 03:31:39.952 iphc/profilemgr/eve 0/5/CPU0 t1 : Scanning Option (non_tcp)
Jul 22 03:31:39.952 iphc/profilemgr/eve 0/5/CPU0 t1 : Scanning Option (rtpt) in
Jul 22 03:31:39.952 iphc/profilemgr/eve 0/5/CPU0 t1 : Scanning Option (max-per)
Jul 22 03:31:39.952 iphc/profilemgr/eve 0/5/CPU0 t1 : Scanning Option (non_tcp)
Jul 22 03:31:39.952 iphc/profilemgr/eve 0/5/CPU0 t1 : +++++ Profile Verificati+
Jul 22 03:31:39.952 iphc/profilemgr/eve 0/5/CPU0 t1 : Verify Profile (Profile_n
Jul 22 03:31:39.959 iphc/profilemgr/eve 0/5/CPU0 t1 : +++++ Profile Verificati+
Jul 22 03:31:39.981 iphc/profilemgr/int 0/5/CPU0 t1 : Registered applier calle7
Jul 22 03:31:39.999 iphc/profilemgr/eve 0/5/CPU0 t1 : Registered Profile (Profy
```

show tech-support iphc

To collect and display IP header compression (IPHC) data for an interface, node, or rack, and store that data in a file, use the **show tech-support iphc** command in EXEC mode.

show tech-support iphc [**file**| **interface** *type interface-path-id* [**location** *node-id*| **rack** *rack_name*]] [**location** *node-id*| **rack** *rack_name*] **file** *location file_name* [**background**] [**compressed**| **uncompressed**]

Syntax Description

file	(Optional) Specifies a file name and location for IPHC data to be saved to.
interface	(Optional) Collects IPHC data for the specified interface.
<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>node-id</i>	(Optional) Collects IPHC data for the specified card location (<i>node-id</i>).
rack <i>rack_name</i>	(Optional) Collects IPHC data for the specified rack.

file location *file_name* Stores the collected data in the specified file (*file_name*) in one of the following valid file locations:

- bootflash:—stores the collected data to a bootflash file-system file.
- compactflash:—stores the collected data to a compactflash file-system file.
- compactflasha:—stores the collected data to a compactflasha file-system file.
- disk0:—stores the collected data to a disk0 file-system file.
- disk0a:—stores the collected data to a disk0a file-system file.
- disk1:—stores the collected data to a disk1 file-system file.
- disk1a:—stores the collected data to a disk1a file-system file.
- ftp:—stores the collected data to an ftp file-system file.
- harddisk:—stores the collected data to a harddisk file-system file.
- harddiska:—stores the collected data to a harddiska file-system file.
- harddiskb:—stores the collected data to a harddiskb file-system file.
- lcdisk0:—stores the collected data to a lcdisk0 file-system file.
- lcdisk0a:—stores the collected data to a lcdisk0a file-system file.
- nvram:—stores the collected data to an nvram file-system file.
- rcv:—stores the collected data to an rcv file-system file.
- tftp:—stores the collected data to a tftp file-system file.

background	(Optional) Runs this command in the background.

compressed	(Optional) Compresses the output.

uncompressed	(Optional) Does not compress the output.

Command Default	No default behavior or values

Command Modes	EXEC

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
basic-services	read
cisco-support	read
ipv4	read

Examples

The following example shows how to collect and display IP header compression (IPHC) data:

```
RP/0/RSP0/CPU0:router# show tech-support iphc

Mon Oct 12 20:30:58.660 DST
++ Show tech start time: 2009-Oct-12.203059.DST ++
Mon Oct 12 20:31:05 DST 2009 Waiting for gathering to complete
.....
Mon Oct 12 20:31:46 DST 2009 Compressing show tech output
Show tech output available at 0/5/CPU0 : disk0:/showtech/showtech-iphc-2009-Octz
++ Show tech end time: 2009-Oct-12.203148.DST ++
```

tcp compression

To enable TCP compression in an IP header compression (IPHC) profile, use the **tcp compression** command in IPHC profile configuration mode. To disable TCP compression in the profile, use the **no** form of this command.

tcp compression

no tcp

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes IPHC profile configuration

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Where the IPHC profile used by a router is configured using this command, the router will negotiate TCP compression with its peer router and decompress any compressed TCP packets sent by its peer. TCP packets transmitted to the peer are transmitted uncompressed.



Note

TCP compression can be enabled only within an IPHC profile. TCP compression does not work unless it is enabled under a profile.

Task ID	Operations
ip-services	read, write

Examples The following example shows how to enable TCP compression within an IP header compression (IPHC) profile:

```
RP/0/RSP0/CPU0:router(config)# config
```



```
RP/0/RSP0/CPU0:router(config)# iphc profile Profile_1 type iphc
RP/0/RSP0/CPU0:router(config-iphc-profile)# tcp compression
RP/0/RSP0/CPU0:router(config-iphc-profile)#
```

tcp context absolute

To configure the maximum number of TCP contexts that are allowed for IPHC under a profile, use the **tcp context absolute** command in IPHC profile configuration mode. To remove the TCP context from the profile, use the **no** form of this command.

tcp context absolute *number-of-contexts*

no tcp context [absolute] [*number-of-contexts*]

Syntax Description

<i>number-of-contexts</i>	Numeric value that specifies the maximum number of TCP contexts allowed for IPHC under this profile. The range is from 0 to 255.

Command Default

If *number-of-contexts* is not specified, and only TCP compression is enabled, the default *number-of-contexts* is 1.

Command Modes

IPHC profile configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The maximum allowed number of tcp contexts on a Line Card, across all IPHC profiles and interfaces, is 255.



Note

TCP context can be set only within an IPHC profile.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to enable TCP compression within an IP header compression (IPHC) profile:

```
RP/0/RSP0/CPU0:router(config)# config  
RP/0/RSP0/CPU0:router(config)# iphc profile Profile_1 type iphc  
RP/0/RSP0/CPU0:router(config-iphc-profile)# tcp context absolute 255
```

transmit-delay (serial)

To specify a number of High-Level Data Link Control (HDLC) flag sequences to be inserted between the packets, use the **transmit-delay** command in serial configuration mode. To restore the default, use the **no** form of this command.

transmit-delay *microseconds*

no transmit-delay *microseconds*

Syntax Description	<i>microseconds</i>	Number of microseconds of minimum delay after sending a packet. Range is from 0 to 128. The default is 0 (disabled).

Command Default	<i>microseconds</i> : 0 (disabled)

Command Modes	Serial configuration

Command History	Releases	Modifications
	Release 3.9.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	hdlc	read, write

Examples	In the following example, a delay of 2 microseconds is specified on serial interface 0/3/0/0/0:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface serial 0/3/0/0/0
RP/0/RSP0/CPU0:router(config-if)# serial
RP/0/RSP0/CPU0:router(config-if-serial)# transmit-delay 2
```

In the following example, the transmit delay on serial interface 0/3/0/0/0 is disabled:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface serial 0/3/0/0/0
```

```
RP/0/RSP0/CPU0:router(config-if)# serial  
RP/0/RSP0/CPU0:router(config-if-serial)# no transmit-delay
```

Related Commands

Command	Description
show interfaces, on page 608	Displays statistics for all interfaces configured on the router or for a specific node.

 `transmit-delay (serial)`



SONET Controller Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring SONET operation, using Layer 1 SONET transport technology, on the Cisco ASR 9000 Series Router.

The configuration of the SONET controller includes SONET Automatic Protection Switch (APS), which is a feature offering recovery from fiber (external) or equipment (interface and internal) failures at the SONET line layer. You must configure a SONET controller before you can configure a Packet-over-SONET/SDH (POS) interface or a serial interface.

All SONET-related configurations of a SONET-based physical port are grouped under the SONET controller configuration submode. The SONET path-related configuration commands are grouped under the SONET path submode.

- [ais-shut \(SONET\), page 923](#)
- [ais-shut \(SONET path\), page 925](#)
- [aps group, page 927](#)
- [aps group \(global\), page 930](#)
- [au, page 932](#)
- [authenticate \(PGP\), page 934](#)
- [b3-ber-prdi, page 936](#)
- [channel local, page 937](#)
- [channel remote, page 939](#)
- [clear counters sonet, page 941](#)
- [clock source \(SONET\), page 943](#)
- [controller \(SONET\), page 945](#)
- [delay clear, page 947](#)
- [delay trigger, page 949](#)
- [down-when-looped, page 951](#)
- [framing \(SONET\), page 952](#)

- [line delay clear](#), page 954
- [line delay trigger](#), page 956
- [lockout](#), page 958
- [loopback \(SONET\)](#), page 960
- [mode \(SONET\)](#), page 962
- [overhead \(SONET\)](#), page 964
- [overhead \(SONET path\)](#), page 966
- [path delay clear](#), page 968
- [path delay trigger](#), page 970
- [path \(SONET\)](#), page 972
- [report \(SONET\)](#), page 974
- [report \(SONET path\)](#), page 976
- [revert](#), page 978
- [scrambling disable \(SONET path\)](#), page 980
- [show aps](#), page 981
- [show aps agents](#), page 983
- [show aps group](#), page 985
- [show controllers pos](#), page 988
- [show controllers sonet](#), page 994
- [show sonet-local trace frr](#), page 1002
- [shutdown \(SONET\)](#), page 1004
- [signalling](#), page 1006
- [sts](#), page 1008
- [timers \(APS\)](#), page 1009
- [threshold \(SONET\)](#), page 1011
- [threshold \(SONET path\)](#), page 1013
- [tug3](#), page 1015
- [uneq-shut \(SONET path\)](#), page 1017
- [unidirectional](#), page 1018
- [width](#), page 1020

ais-shut (SONET)

To enable automatic insertion of a line alarm indication signal (LAIS) in the sent SONET signal whenever the SONET port enters the administrative shutdown state, use the **ais-shut** command in SONET/SDH configuration mode. To disable automatic insertion of a LAIS, use the **no** form of this command.

ais-shut

no ais-shut

Syntax Description This command has no keywords or arguments.

Command Default This command is disabled by default; no AIS is sent.

Command Modes SONET configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When the line is placed in administrative shutdown state, use the **ais-shut** command to send a signal to downstream equipment that indicates that there is a problem with the line.

The **ais-shut** command is ignored if automatic protection switching (APS) is running for the corresponding port, because the setting must be enabled for proper APS operation.

For SONET ports that do not have hardware support for LAIS insertion, the **ais-shut** command is disabled.

Task ID	Task ID	Operations
	sonet-sdh	read, write

Examples In the following example, the alarm indication is forced on the SONET OC-3 controller:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/0
RP/0/RSP0/CPU0:router(config-sonet)# ais-shut
```

Related Commands

Command	Description
show controllers sonet , on page 994	Displays information about the operational status of SONET layers.

ais-shut (SONET path)

To enable automatic insertion of path alarm indication signal (PAIS) in the sent SONET signal whenever the SONET path enters the administratively down state, use the **ais-shut** command in SONET/SDH path configuration mode. To disable automatic insertion of PAIS in the SONET signal, use the **no** form of this command.

ais-shut

no ais-shut

Syntax Description This command has no keywords or arguments.

Command Default This command is disabled by default; no AIS is sent.

Command Modes SONET/SDH path configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **ais-shut** command to enable automatic insertion of PAIS in the appropriate sent SONET path overhead whenever the corresponding SONET path enters the administratively down state.

Task ID	Task ID	Operations
	sonet-sdh	read, write

Examples The following example shows the alarm indication being enabled on all paths:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/2
RP/0/RSP0/CPU0:router(config-sonet)# path
RP/0/RSP0/CPU0:router(config-sonet-path)# ais-shut
```

Related Commands

Command	Description
show controllers sonet , on page 994	Displays information about the operational status of SONET layers.

aps group

To manually switch an automatic protection switching (APS) channel, use the **aps group** command in EXEC configuration mode.

aps group *number* {**force**|**manual**} {**0**|**1**} {**disable**|**enable**}

Syntax Description

<i>number</i>	Number of the APS group. Range is from 1 to 255.
force	Sends a forced APS request at the local end of a SONET link with the assigned channel number.
manual	Sends a manual APS request at the local end of a SONET link with the assigned channel number, which is implemented when no other higher-priority user-initiated or automatic requests are in effect.
0	Specifies that the protect channel should be switched.
1	Specifies that the working channel should be switched.
disable	Stops sending the SONET K1/K2 bit pattern that informs the remote end to switch ports.
enable	Starts sending a SONET K1/K2 bit pattern to inform the remote end to switch ports.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

In a multirouter APS topology, a manual or force request is supported only on the protect router.

Specify **0** or **1** to identify on which channel the traffic should be stopped and switched to the other channel. Therefore, **force 0** or **manual 0** moves traffic from the protect to the working channel, and **force 1** or **manual 1** moves traffic from the working to the protect channel.

Use the **force** keyword to manually switch the traffic to a protect channel. For example, if you need to change the fiber connection, you can manually force the working channel to switch to the protect interface.

A forced switch can be used to override an automatic (Signal Failed Signal Degraded) or a manual switch request. A lockout request (using the **lockout** command) overrides a force request.

**Note**

If a request of equal or higher priority is in effect, you cannot use the **force** keyword to initiate a forced APS request at the local end of the SONET link.

Use the **manual** keyword to manually switch the circuit to a protect channel. For example, you can use this feature when you need to perform maintenance on the working channel. If a protection switch is already up, you can also use the **manual** keyword to revert the communication link to the working channel before the wait to restore (WTR) time period has expired. The WTR time period is set by the **revert** command. Use the **no** form of this command to cancel the switch.

A manual switch request can be used to control which channel carries the traffic when no other higher-priority user-initiated or automatic requests are in effect.

The manual request has the lowest priority among all user-initiated or automatic requests. Any other such requests override a manual request.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following examples show how to use the **aps group** command in EXEC mode to force or manually switch traffic, and enable and disable sending of the K1/K2 bit pattern to signal the switchover to the remote end:

```
RP/0/RSP0/CPU0:router# aps group 1 force 1 enable
RP/0/RSP0/CPU0:router# aps group 1 force 1 disable
```

```
RP/0/RSP0/CPU0:router# aps group 1 manual 1 enable
RP/0/RSP0/CPU0:router# aps group 1 manual 1 disable
```

```
RP/0/RSP0/CPU0:router# aps group 1 force 0 enable
RP/0/RSP0/CPU0:router# aps group 1 force 0 disable
```

```
RP/0/RSP0/CPU0:router# aps group 1 manual 0 enable
RP/0/RSP0/CPU0:router# aps group 1 manual 0 disable
```

Related Commands

Command	Description
aps group (global), on page 930	Adds an automatic protection switching (APS) group and enter APS group configuration mode.
lockout, on page 958	Overrides a manual or forced APS request at the local end of the SONET link and block the protect channel from receiving traffic.

Command	Description
revert, on page 978	Enables automatic switchover from the protect interface to the working interface after the working interface becomes available.
signalling, on page 1006	Configures the K1K2 overhead byte signaling protocol used for APS.
show aps, on page 981	Displays the operational status for all configured SONET APS groups.

aps group (global)

To add an automatic protection switching (APS) group and enter APS group configuration mode, use the **aps group** command in global configuration mode. To remove a group, use the **no** form of this command.

aps group *number*

no aps group *number*

Syntax Description

<i>number</i>	Number of the group. Range is from 1 to 255.

Command Default

No APS groups are defined.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

An APS group contains one protect (P) SONET port and one working (W) SONET port. The working and protect ports can reside on the same logical channel (LC), on different LCs in the same router, or on different routers. One APS group must be configured for each protect port and its corresponding working ports.

Use the **aps group (global)** command to enter APS group configuration mode and configure APS connections with other SONET equipment.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to use the **aps group** command in global configuration mode to configure APS group 1 and enter APS group configuration mode:

```
RP/0/RSP0/CPU0:router(config)# aps group 1
RP/0/RSP0/CPU0:router(config-aps)#
```


Related Commands

Command	Description
aps group, on page 927	Manually switches an APS channel.
authenticate (PGP), on page 934	Configures the authentication string for the PGP message exchange between the protect and working routers.
channel local, on page 937	Assigns local SONET physical ports as SONET APS channels in the current APS group.
channel remote, on page 939	Assigns a port and interface that is physically located in a remote router as a SONET working or protect APS channel.
lockout, on page 958	Overrides a manual or forced APS request at the local end of the SONET link and block the protect channel from receiving traffic.
revert, on page 978	Enables automatic switchover from the protect interface to the working interface after the working interface becomes available.
signalling, on page 1006	Configures the K1K2 overhead byte signaling protocol used for APS.
timers (APS), on page 1009	Changes the time between hello packets and the time before the protect interface process declares a working interface router to be down.
unidirectional, on page 1018	Configures a protect interface for unidirectional mode.
show aps, on page 981	Displays the operational status for all configured SONET APS groups.

au

To specify the administrative unit (AU) group number and enter the AU controller configuration mode, use the **au** command in SONET controller configuration mode.

au *number*

Syntax Description

<i>number</i>	Administrative unit group number in the range from 1 to 48.

Command Default

The default is 1.

Command Modes

SONET controller configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **au** command enables you to begin configuring the interface in the AU controller configuration mode, where you can configure tributary unit groups (TUGs), virtual containers (VCs), and DS3s, such as shown in the following path example:

STM-1 -> AU-4 -> TUG-3 -> VC-3 -> DS-3

One AU-4 path is equivalent to three AU-3 paths. An administrative unit type 4 (AU-4) consists of three STM-1s or one STM-3. An administrative unit type 3 (AU-3) consists of one STM-1.



Note

Use the **au** command to configure one of the AUGs available for your card. The **au** command is not used to configure the *type* of AU path that you are configuring, such as AU-3 or AU-4, but rather is used to identify one AU group number in the supported range for the card and AU type that you are configuring. For example, the 1-Port Channelized OC-48/STM-16 SPA supports 16 AU-4 groups. Therefore, you can specify a number between 1 and 16 for the **au** command to configure SDH AU-4 on that card.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to specify AU 1.

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/0  
RP/0/RSP0/CPU0:router(config-sonet)# au 1  
RP/0/RSP0/CPU0:router(config-auPath)#
```

Related Commands

Command	Description
tug3, on page 1015	Specifies the tributary unit group (TUG) number and enters the TUG3 controller configuration mode.

authenticate (PGP)

To configure the authentication string for the Protect Group Protocol (PGP) message exchange between the protect and working routers, use the **authenticate** command in APS group configuration mode. To revert to the default authentication string, use the **no** form of this command.

authenticate *string*

no authenticate *string*

Syntax Description

<i>string</i>	Authentication string that the router uses to authenticate PGP message exchange between protect or working routers. The maximum length of the string is eight alphanumeric characters. Spaces are not accepted.

Command Default

The default authentication string is “cisco.”

Command Modes

APS group configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **authenticate** command to configure the authentication string for the PGP message exchange between the protect and working routers. Use the **no** form of this command to revert to the default authentication string.

The **authenticate** command applies only in multirouter automatic protection switching (APS) group configurations.

In multirouter APS topologies, the protect and working routers communicate with each other through the User Datagram Protocol (UDP)-based Pretty Good Privacy protocol. Each Pretty Good Privacy packet contains an authentication string used for packet validation. The authentication string on all routers involved in the same APS group operation must match for proper APS operation.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example enables authentication for APS group 1 in abctown:

```
RP/0/RSP0/CPU0:router(config)# aps group 1  
RP/0/RSP0/CPU0:router(config-aps)# authenticate abctown
```

Related Commands

Command	Description
aps group (global), on page 930	Adds an automatic protection switching (APS) group and enter APS group configuration mode.
channel local, on page 937	Assigns local SONET physical ports as SONET APS channels in the current APS group.
channel remote, on page 939	Assigns a port and interface that is physically located in a remote router as a SONET working or protect APS channel.
show aps, on page 981	Displays the operational status for all configured SONET APS groups.

b3-ber-prdi

To enable sending of a path-level remote defect indication (PRDI) when the bit error rate (BER) bit interleaved parity (BIP) B3 threshold is exceeded, use the **b3-ber-prdi** command in SONET/SDH path configuration mode. To disable sending a PRDI, use the **no** form of this command.

b3-ber-prdi

no b3-ber-prdi

Syntax Description This command has no keywords or arguments.

Command Default This command is disabled by default; a PRDI is not sent.

Command Modes SONET/SDH path configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	sonet-sdh	read, write

Examples The following example shows a PRDI enabled on all paths:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/2
RP/0/RSP0/CPU0:router(config-sonet)# path
RP/0/RSP0/CPU0:router(config-sonet-path)# b3-ber-prdi
```

Related Commands	Command	Description
	path (SONET) , on page 972	Enters SONET/SDH path configuration mode.
	show controllers sonet , on page 994	Displays information about the operational status of SONET layers.

channel local

To assign local SONET physical ports as SONET automatic protection switching (APS) channels in the current APS group, use the **channel local** command in APS group configuration mode. To return to the default setting, use the **no** form of this command.

channel {0|1} **local** [**preconfigure**] **sonet** *interface-path-id*

no channel {0|1} **local** [**preconfigure**] **sonet** *interface-path-id*

Syntax Description

{0 1}	Assigns a protect or working channel type. 0 is protect, 1 is working.
preconfigure	(Optional) Specifies a SONET preconfiguration. This keyword is used only when a modular services or line card is not physically installed in a slot.
sonet	Specifies a SONET interface type.
interface-path-id	Physical interface or virtual interface. Note Use the show controllers sonet command to see a list of all controllers currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

A SONET APS local channel is not assigned.

Command Modes

APS group configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.

- *module*: Module number. A physical layer interface module (PLIM) is always 0.
- *port*: Physical port number of the interface.

- If specifying a virtual interface, the number range varies, depending on interface type.

Use the **channel local** command to designate SONET physical ports as SONET APS channels in the current APS group. Use the **channel remote** command to assign channels that are physically located in a different router.

Preconfigured interfaces are supported.

If the protect channel is local, it must be assigned using a **channel** command *before* any of the working channels are assigned. The reason is that having only a working channel assigned is a valid configuration for a working router in a multirouter APS topology and further attempts to configure a local protect channel are rejected.

The interface type must be a SONET controller.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to configure SONET 0/2/0/2 as a local protect channel:

```
RP/0/RSP0/CPU0:router(config)# aps group 1
RP/0/RSP0/CPU0:router(config-aps)# channel 0 local SONET 0/2/0/2
```

Related Commands

Command	Description
aps group (global), on page 930	Adds an automatic protection switching (APS) group and enter APS group configuration mode.
channel remote, on page 939	Assigns a port and interface that is physically located in a remote router as a SONET working or protect APS channel.
show aps, on page 981	Displays the operational status for all configured SONET APS groups.

channel remote

To assign a port and interface that is physically located in a remote router as a SONET working or protect automatic protection switching (APS) channel, use the **channel remote** command in APS group configuration mode. To return to the default setting, use the **no** form of this command.

channel {0| 1} **remote** *ip-address*

no channel {0| 1} **remote** *ip-address*

Syntax Description

{0 1}	Assigns a protect or working channel type. 0 is protect, 1 is working.
<i>ip-address</i>	Remote router IP address in A.B.C.D format.

Command Default

A SONET APS remote channel is not assigned.

Command Modes

APS group configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **channel remote** command to assign working or protect channels that are physically located in a different router.

Use the **channel local** command to assign channels in the local router.

The *IP address* of the remote router is required only if a working channel configured as the protect router contacts all working routers.

Specifying a remote protect channel is optional. If you do not specify a remote protect channel, the default value of 0.0.0.0 is used. The protect router is always the one that contacts the working router. The working router replies to the protect router using the source address extracted from the incoming messages as the destination address. If an address other than 0.0.0.0 (the default value) is specified, the working router always uses that address when sending messages to the protect router.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

In the following examples, a remote channel with IP address 192.168.1.1 is assigned as the working channel:

```
RP/0/RSP0/CPU0:router(config)# aps group 1
RP/0/RSP0/CPU0:router(config-aps)# channel 1 remote 192.168.1.1
```

Related Commands

Command	Description
aps group (global), on page 930	Adds an automatic protection switching (APS) group and enter APS group configuration mode.
channel local, on page 937	Assigns local SONET physical ports as SONET APS channels in the current APS group.
show aps, on page 981	Displays the operational status for all configured SONET APS groups.

clear counters sonet

To clear SONET counters for a specific SONET controller, use the **clear counters sonet** command in EXEC mode.

clear counters sonet *interface-path-id*

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface.
Note	Use the show controllers sonet command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

Use the **clear counters sonet** command to clear SONET counters for a specific SONET controller.

Task ID

Task ID	Operations
sonet-sdh	read, write
basic-services	read, write

Examples

The following example shows the SONET counters being cleared on the SONET interface:

```
RP/0/RSP0/CPU0:router# clear counters sonet 0/1/0/0
```

Related Commands

Command	Description
show controllers sonet, on page 994	Displays information about the operational status of SONET layers.

clock source (SONET)

To set the clock source of the sent signal on SONET ports, use the **clock source** command in SONET/SDH configuration mode. To cancel a clock source setting, use the **no** form of this command.

clock source {internal| line}

no clock source {internal| line}

Syntax Description

internal	Specifies that the controller will clock its sent data from its internal clock.
line	Specifies that the controller will clock its sent data from a clock recovered from the receive data stream of the line. This is the default value.

Command Default

The clock source for the controller is **line**.

Command Modes

SONET/SDH configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **clock source** command to configure which reference clock is used by the sender.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

In the following example, the SONET controller is configured to clock its sent data from its internal clock:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/2
RP/0/RSP0/CPU0:router(config-sonet)# clock source internal
```

Related Commands

Command	Description
show controllers sonet, on page 994	Displays information about the operational status of SONET layers.

controller (SONET)

To enter SONET/SDH configuration mode so that you can configure a specific SONET controller, use the **controller (SONET)** command in global configuration mode. To return to the default state, use the **no** form of this command.

controller [**preconfigure**] **sonet** *interface-path-id*

no controller [**preconfigure**] **sonet** *interface-path-id*

Syntax Description

preconfigure	(Optional) Specifies a SONET preconfiguration. Use the preconfigure keyword only when a modular services card is not physically installed in a slot.
sonet	Enters the SONET configuration mode or configures the SONET port controller specified by <i>interface-path-id</i> .
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.

◦ *port*: Physical port number of the interface.

- If specifying a virtual interface, the number range varies, depending on interface type.

Use the **path (SONET)** command to enter SONET/SDH path configuration mode to specify other SONET options for a SONET path.

Task ID

Examples

The following example shows how to enter SONET/SDH configuration mode for the SONET controller in slot number 2:

```
RP/0/RSP0/CPU0:router(config)# controller SONET 0/2/0/1
RP/0/RSP0/CPU0:router(config-sonet)#
```

The following example shows how to configure the SONET controller path (0/2/0/1) to send a path-level remote defect indication (PRDI) when the bit error rate (BER) bit interleaved parity (BIP) B3 threshold is exceeded. :

```
RP/0/RSP0/CPU0:router(config)# controller SONET 0/2/0/1 path b3-ber-prdi
RP/0/RSP0/CPU0:router(config-sonet)#
```

Related Commands

Command	Description
path (SONET) , on page 972	Enters SONET/SDH path configuration mode.
show controllers sonet , on page 994	Displays information about the operational status of SONET layers.

delay clear

To configure the amount of time before a Synchronous Transport Signal (STS) path delay trigger alarm is cleared, use the **delay clear** command in STS path configuration mode. To return the command to its default setting, use the **no** form of this command.

delay clear *value*

no delay clear *value*

Syntax Description

<i>value</i>	Value, in milliseconds, before an STS path delay trigger alarm is cleared. The range is from 0 to 180000. The default is 10 seconds.

Command Default

The default is 10 seconds.

Command Modes

STS path configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to specify that STS path delay trigger alarms should be cleared after 7000 milliseconds:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/3
RP/0/RSP0/CPU0:router(config-sonet)# sts 1
RP/0/RSP0/CPU0:router(config-stsPath)# delay clear 7000
```

 delay clear**Related Commands**

Command	Description
delay trigger, on page 949	Configures a time value for the STS path delay trigger.

delay trigger

To configure a time value for the Synchronous Transport Signal (STS) path delay trigger, use the **delay trigger** command in STS path configuration mode. To return the command to its default setting, use the **no** form of this command.

delay trigger *value*

no delay trigger *value*

Syntax Description

<i>value</i>	Value, in milliseconds, for the STS path delay trigger. The range is from 0 through 60000. The default is 0 seconds, which means that there is no delay.

Command Default

The default is 0 seconds, which means that there is no delay.

Command Modes

STS path configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the timer for the STS path delay trigger expires, an alarm is declared.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to set the STS path delay trigger to 6000 milliseconds:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/3
RP/0/RSP0/CPU0:router(config-sonet)# sts 1
RP/0/RSP0/CPU0:router(config-stsPath)# delay trigger 6000
```

Related Commands

Command	Description
delay clear, on page 947	Configures the amount of time before a STS path delay trigger alarm is cleared.

down-when-looped

To configure a SONET controller to inform the system that it is down when loopback is detected, use the **down-when-looped** command in SONET/SDH configuration mode.

down-when-looped

Syntax Description This command has no keywords or arguments.

Command Default The default is disabled.

Command Modes SONET/SDH configuration

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command does not have a **no** form.

Task ID	Operations
sonet-sdh	read, write

Examples The following example shows how to configure a SONET controller to inform the system that the associated line is down if a loopback is detected:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/0
RP/0/RSP0/CPU0:router(config-sonet)# down-when-looped

down-when-looped is a traffic-affecting operation
```

Command	Description
loopback (SONET) , on page 960	Configures the SONET controller for loopback mode.

framing (SONET)

To specify the framing used on the SONET controller, use the **framing** command in SONET/SDH configuration mode. To disable framing on the SONET controller, use the **no** form of this command.

framing {sdh|sonet}

no framing {sdh|sonet}

Syntax Description

sdh	Selects Synchronous Digital Hierarchy (SDH) framing. This framing mode is typically used in Europe.
sonet	Selects SONET framing. This is the default.

Command Default

The default framing on SONET controllers is **sonet**.

Command Modes

SONET/SDH configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The sdh keyword was supported.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **framing** command to select either SONET or SDH framing on the selected physical port, if supported. For physical ports that do not support either of these two options, the **framing** command is disabled.

Use the **no** form of this command to disable SONET or SDH framing on the SONET controller.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

In the following example, the SONET controller is configured for SDH framing:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/2
```

```
RP/0/RSP0/CPU0:router(config-sonet)# framing sdh
```

In the following example, the SONET controller is configured for SONET framing:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/2  
RP/0/RSP0/CPU0:router(config-sonet)# framing sonet
```

Related Commands

Command	Description
show controllers sonet , on page 994	Displays information about the operational status of SONET layers.

line delay clear

To configure the amount of time before a SONET/SDH line delay trigger alarm is cleared, use the **line delay clear** command in SONET controller configuration mode. To return the command to its default setting, use the **no** form of this command.

line delay clear *value*

no line delay clear

Syntax Description

<i>value</i>	Value, in milliseconds, before a SONET/SDH line delay trigger alarm is cleared. The range is 1000 to 180000. The default is 10.

Command Default

The default is 10.

Command Modes

SONET controller configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the timer for the SONET/SDH line delay clear expires, an alarm is cleared.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to specify that SONET/SDH line delay trigger alarms should be cleared after 4000 milliseconds:

```
RP/0/RSP0/CPU0:router(config)# controller SONET 0/0/0/2
RP/0/RSP0/CPU0:router(config-sonet)# line delay clear 4000
```


Related Commands

Command	Description
line delay trigger, on page 956	Configures a time value for the SONET/SDH line delay trigger.

line delay trigger

To configure a time value for the SONET/SDH line delay trigger, use the **line delay trigger** command in SONET controller configuration mode. To return the command to its default setting, use the **no** form of this command.

line delay trigger *value*

no line delay trigger

Syntax Description

<i>value</i>	Value, in milliseconds, for the SONET/SDH line delay trigger. The range is 0 to 60000.

Command Default

The default is 0, which means that there is no delay.

Command Modes

SONET controller configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the timer for the SONET/SDH line delay trigger expires, an alarm is raised.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to set the SONET/SDH line delay trigger to 3000 milliseconds:

```
RP/0/RSP0/CPU0:router(config)# controller SONET 0/0/0/2
RP/0/RSP0/CPU0:router(config-sonet)# line delay trigger 3000
```

Related Commands

Command	Description
line delay clear , on page 954	Configures the amount of time before a SONET/SDH line delay trigger alarm is cleared.

lockout

To override a manual or forced APS request at the local end of the SONET link and block the protect channel from receiving traffic, use the **lockout** command in APS group configuration mode. To remove the lockout, use the **no** form of this command.

lockout [0]

no lockout [0]

Syntax Description

[0]	(Optional) Specifies blocking of the protect channel from a manual or forced APS request. This is the default.

Command Default

The default is 0.

Command Modes

APS group configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A lockout switch request can be used to override a force, an automatic (Signal Failed or Signal Degraded), or a manual switch request. No other request can override a lockout request; it has the highest possible priority.

In a multirouter APS topology, a **lockout** request is allowed only on the protect router.

This command remains in effect until it is unconfigured by using the **no** form of the command.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to lock out or prevent the channel from switching to a protect router in the event that the working channel becomes unavailable:

```
RP/0/RSP0/CPU0:router(config)# aps group 1
```

```
RP/0/RSP0/CPU0:router(config-aps)# lockout 0
```

Related Commands

Command	Description
aps group (global), on page 930	Adds an automatic protection switching (APS) group and enter APS group configuration mode.
aps group, on page 927	Manually switches an APS channel.

loopback (SONET)

To configure the SONET controller for loopback mode, use the **loopback** command in SONET/SDH configuration mode. To remove the loopback SONET command from the configuration file, use the **no** form of this command.

loopback {**internal**| **line**}

no loopback {**internal**| **line**}

Syntax Description

internal	Specifies that all the packets be looped back from the source.
line	Specifies that the incoming network packets be looped back to the SONET network.

Command Default

This command is disabled by default.

Command Modes

SONET/SDH configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The SONET and Synchronous Digital Hierarchy (SDH) transport layers support two loopback operation modes for diagnostic purposes: internal and line. In the terminal (internal) loopback, the sent signal is looped back to the receiver. In the facility (line) loopback, the signal received from the far end is looped back and sent on the line. The two loopback modes cannot be active at the same time. In normal operation mode, neither of the two loopback modes is enabled.

Examples

In the following example, all packets are looped back to the SONET controller:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/2
RP/0/RSP0/CPU0:router(config-sonet)# loopback internal
```

Related Commands

Command	Description
show controllers sonet , on page 994	Displays information about the operational status of SONET layers.

mode (SONET)

To set the mode of an STS path, AU path, T3 controller, or TUG3 controller, use the **mode** command in the applicable controller configuration mode. To disable the mode, use the **no** form of this command.

STS Controller Configuration Mode

mode {t3| vt15-t1| pos}

no mode {t3| vt15-t1| pos}

AU Controller Configuration Mode

mode {e3| t3| tug 3}

no mode {e3| t3| tug 3}

T3 Controller Configuration Mode

mode {e1| serial| t1}

no mode {e1| serial| t1}

TUG3 Controller Configuration Mode

mode {c12| c12-e1| e3| serial| t3}

no mode {c12| c12-e1| e3| serial| t3}

Syntax Description

t3	Specifies the mode of the port to be channelized as an AU3 or a TUG3 path carrying T3.
vt15-t1	Specifies the mode of the port to be channelized VT15-T1.
pos	Specifies the mode of the port to be channelized POS.
tug3	Specifies the mode of the port to be channelized TUG3.
e1	Specifies the mode of the port to be channelized E1.
serial	Specifies the mode of the port to be clear channel serial.
t1	Specifies the mode of the port to be channelized T1.
c12	Specifies the mode of the port to be channelized as a TUG3 path carrying TU-12.
c12-e1	Specifies the mode of the port to be channelized be TUG3 path carrying c12 to E1.
e3	Specifies the mode of the port to be channelized as an AU3 or a TUG3 path carrying E3.

Command Default No default behavior or values

Command Modes STS controller configuration
AU controller configuration
T3 controller configuration
TUG3 controller configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.
	Release 4.0.0	The pos , tug3 , e1 , c12 , c12-e1 , and e3 keywords were supported.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For channelized SPAs, you must use the **mode** command before you can configure any channelized controllers.

Task ID	Task ID	Operations
	sonet-sdh	read, write

Examples The following example shows how to set the mode of a T3 controller to channelized T1:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/1/0/0/1
RP/0/RSP0/CPU0:router(config-t3)# mode t1
```

Related Commands	Command	Description
	width , on page 1020	Sets the number of paths in a stream.

overhead (SONET)

To set the SONET overhead bytes in the frame header to a specific standards requirement, or to ensure interoperability with equipment from another vendor, use the **overhead** command in SONET/SDH configuration mode. To remove the setting of the SONET overhead bytes from the configuration file and restore the default condition, use the **no** form of this command.

overhead {**j0**| **s1s0**} *byte-value*

no overhead {**j0**| **s1s0**} *byte-value*

Syntax Description

j0	Sets the J0/C1 byte value in the SONET section overhead. For interoperability with Synchronous Digital Hierarchy (SDH) equipment in Japan, use the value 0x1. Default is 0xcc.
s1s0	Sets the SS bits value of the H1 byte in the SONET line overhead. Use the following values to tell the SONET transmission equipment the S1 and S0 bit: - For SONET mode, use 0 (this is the default). - For SDH mode, use 2. Range is from 0 to 3. Default is 0. Values 1 and 3 are undefined.
byte-value	Byte value to which the j1 or s1s0 keyword should be set. Range is from 0 to 255.

Command Default

byte-value: 0x01 (j0)

byte-value: 0 (s1s0)

Command Modes

SONET/SDH configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **overhead** command to set the SONET overhead bytes in the frame header to a specific standards requirement.

Use the **no** form of this command to remove the setting of the SONET overhead bytes from the configuration file and restore the default condition.

For the **j0** keyword, the value that you use for the trace byte depends on the type of equipment being used. For the **s1s0** keyword, the value that you use depends on whether you are using the SONET or SDH mode. For SONET mode, use the value 0 (the default). For SDH mode, use the value 2.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to set the SS bits value of the H1 byte in the SONET line overhead to 2 for SDH:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/1
RP/0/RSP0/CPU0:router(config-sonet)# overhead s1s0 2
```

The following example shows how to set the SS bits value of the H1 byte in the SONET line overhead to 0 for SONET:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/1
RP/0/RSP0/CPU0:router(config-sonet)# overhead s1s0 0
```

overhead (SONET path)

To set the SONET path overhead bytes in the frame header to a specific standards requirement or to ensure interoperability with equipment from another vendor, use the **overhead** command in SONET/SDH path configuration mode. To remove the setting of the SONET path overhead bytes from the configuration file and restore the system to its default condition, use the **no** form of this command.

overhead {**c2** *byte-value*| **expected-trace** *LINEascii-text*| **j1** *ascii-value*}

no overhead {**c2** *byte-value*| **expected-trace** *LINEascii-text*| **j1** *ascii-value*}

Syntax Description

c2 <i>byte-value</i>	Specifies Synchronous Transport Signal (STS) synchronous payload envelope (SPE) content (C2) byte. The transmitted c2 value is automatically set to 0xCF for unscrambled payload and 0x16 for scrambled payload. If c2 is configured to a user-specified value, the user-specified value is always applied regardless of scrambling. Replace the <i>byte-value</i> argument with the byte value to which the c2 keyword should be set. Range is from 0 to 255. Default value is 0.
j1 <i>ascii-value</i>	Configures the SONET path trace (j1) buffer. Replace the <i>ascii-value</i> argument with a text string that describes the SONET path trace buffer. Default is a 64-byte path trace ASCII message, which includes default information such as router name, (Layer 2 —POS) interface name, and IP address, if applicable.
expected-trace <i>LINE ascii-text</i>	Configures the SONET/SDH path trace. The trace monitoring feature allows a node to perform trace monitoring by using the SONET/SDH capabilities. Replace the <i>LINE</i> with the expected trace message Replace the <i>ascii-text</i> argument with a text string that describes the SONET path trace buffer. Default is a 64-byte path trace ASCII message, which includes default information such as router name, (Layer 2 —POS) interface name, and IP address, if applicable. the <i>LINE</i> is the expected trace message which should match else ptim mismatch would be reported

Command Default

byte-value: 0xCF

byte-value: 0

Command Modes

SONET/SDH path configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The SONET standards permit or require user access for configuration of some bytes or bits in the SONET path overhead. Use the **overhead** command to set the SONET path overhead bytes in the frame header to a specific standards requirement. Use the **no** form of this command to remove the setting of the SONET path overhead bytes from the configuration file and restore the system to its default condition.

Use the **c2** keyword to configure the desired C2 byte value in the SONET path overhead.

Use the **j1** keyword to configure a user-defined path trace message in the j1 bytes of the SONET path overhead. For the **j1** keyword, use the default message or insert your own message that has a maximum of 62 characters. If no user-defined message is configured, a default message is automatically generated, containing the router name, the controller name, its IP address, and the values of the sent and received K1 and K2 bytes in the SONET line overhead.

Examples

The following example shows how to set the STS SPE C2 byte in the SONET path frame header:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/2
RP/0/RSP0/CPU0:router(config-sonet)# path
RP/0/RSP0/CPU0:router(config-sonet-path)# overhead c2 0x13
```

Related Commands

Command	Description
scrambling disable (SONET path), on page 980	Disables payload scrambling on a SONET path.

path delay clear

To configure the amount of time before a SONET/SDH path delay trigger alarm is cleared, use the **path delay clear** command in SONET controller configuration mode. To return the command to its default setting, use the **no** form of this command.

path delay clear *value*

no path delay clear

Syntax Description

<i>value</i>	Value, in milliseconds, before a SONET/SDH path delay trigger alarm is cleared. The range is 1000 to 180000. The default is 10 seconds.

Command Default

The default is 10 seconds.

Command Modes

SONET controller configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to specify that SONET/SDH path delay trigger alarms should be cleared after 7000 milliseconds:

```
RP/0/RSP0/CPU0:router(config)# controller SONET 0/0/0/1
RP/0/RSP0/CPU0:router(config-sonet)# path delay clear 7000
```

Related Commands

Command	Description
path delay trigger , on page 970	Configures a time value for the SONET/SDH path delay trigger.

path delay trigger

To configure a time value for the SONET/SDH path delay trigger, use the **path delay trigger** command in SONET controller configuration mode. To return the command to its default setting, use the **no** form of this command.

path delay trigger *value*

no path delay trigger

Syntax Description

<i>value</i>	Value, in milliseconds, for the SONET/SDH path delay trigger. The range is 0 to 60000.

Command Default

The default is 0, which means that there is no delay.

Command Modes

SONET controller configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the timer for the SONET/SDH path delay trigger expires, an alarm is declared.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to set the SONET/SDH path delay trigger to 6000 milliseconds:

```
RP/0/RSP0/CPU0:router(config)# controller SONET 0/0/0/1
RP/0/RSP0/CPU0:router(config-sonet)# path delay trigger 6000
```


Related Commands

Command	Description
path delay clear , on page 968	Configures the amount of time before a SONET/SDH path delay trigger alarm is cleared.

path (SONET)

To enter SONET/SDH path configuration mode, use the **path** command in SONET controller configuration mode.

path

Syntax Description

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

SONET controller configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to access SONET path submode from SONET controller configuration mode:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/0
RP/0/RSP0/CPU0:router(config-sonet)# path
```

Related Commands

Command	Description
ais-shut (SONET path), on page 925	Enables automatic insertion of PAIS in the sent SONET signal whenever the SONET path enters the administratively down state.
b3-ber-prdi, on page 936	Enables sending of a PRDI when the BER bit interleaved parity (BIP) B3 threshold is exceeded.

Command	Description
delay clear, on page 947	Configures the amount of time before a STS path delay trigger alarm is cleared.
delay trigger, on page 949	Configures a time value for the STS path delay trigger.
overhead (SONET path), on page 966	Sets the SONET path overhead bytes in the frame header to a specific standards requirement or to ensure interoperability with equipment from another vendor.
report (SONET path), on page 976	Configures whether or not selected SONET alarms are logged to the console for a SONET path controller.
scrambling disable (SONET path), on page 980	Disables payload scrambling on a SONET path.
threshold (SONET path), on page 1013	Sets the bit error rate (BER) threshold values of the specified alarms for a SONET path.
uneq-shut (SONET path), on page 1017	Enables automatic insertion of P-UNEQ code (0x00) in the sent SONET path overhead C2 byte.

report (SONET)

To permit selected SONET alarms to be logged to the console for a SONET controller, use the **report** command in SONET/SDH configuration mode. To disable logging of select SONET alarms, use the **no** form of this command.

report [b1-tca| b2-tca| lais| lrdi| sd-ber| sf-ber| slof| slos]

no report [b1-tca| b2-tca| lais| lrdi| sd-ber| sf-ber| slof| slos]

Syntax Description

b1-tca	(Optional) Reports bit 1 (B1) bit error rate (BER) threshold crossing alert (TCA) errors.
b2-tca	(Optional) Reports bit 2 (B2) BER TCA errors.
lais	(Optional) Reports line alarm indication signal (LAIS) errors.
lrdi	(Optional) Reports line remote defect indication errors.
sd-ber	(Optional) Reports signal degradation BER errors.
sf-ber	(Optional) Reports signal failure BER errors.
slof	(Optional) Reports section loss of frame (SLOF) errors.
slos	(Optional) Reports section loss of signal (SLOS) errors.

Command Default

Alarms from the following keywords are reported by default:

- b1-tca
- b2-tca
- sf-ber
- slof
- slos

Command Modes

SONET/SDH configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Reporting an alarm means that the alarm can be logged to the console, but it is no guarantee that it is logged. SONET alarm hierarchy rules dictate that only the most severe alarm of an alarm group is reported. Whether an alarm is reported or not, you can check the current state of masked alarm, a problem indication that is a candidate for an alarm, by displaying the “Masked Alarms” line in the **show controllers sonet** command output.

For B1, the bit interleaved parity (BIP) error report is calculated by comparing the BIP-8 code with the BIP-8 code that is extracted from the B1 byte of the following frame. Differences indicate that section-level bit errors have occurred.

For B2, the BIP error report is calculated by comparing the BIP-8/24 code with the BIP-8 code that is extracted from the B2 byte of the following frame. Differences indicate that line-level bit errors have occurred.

Path AIS is sent by line terminating equipment to alert the downstream path terminating equipment (PTE) that it has detected a defect on its incoming line signal.

Path loss of pointer (LOP) is reported as a result of an invalid pointer (H1, H2) or an excess number of new data flag enabled indications.

SLOF is detected when an error-framing defect on the incoming SONET signal persists for 3 microseconds.

SLOS is detected when an all-zeros pattern on the incoming SONET signal is observed. This defect might also be reported if the received signal level drops below the specified threshold.

To determine the alarms that are reported on the controller, use the **show controllers sonet** command.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to enable the reporting of line AIS alarms on the path controller:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/1
RP/0/RSP0/CPU0:router(config-sonet)# report lais
```

Related Commands

Command	Description
show controllers sonet , on page 994	Displays information about the operational status of SONET layers.

report (SONET path)

To configure whether or not selected SONET alarms are logged to the console for a SONET path controller, use the **report** command in SONET/SDH path configuration mode. To disable or re-enable the logging of select SONET alarms, use the **no** form of this command.

report [b3-tca| pais| plop| pplm| prdi| ptim]

no report [b3-tca| pais| plop| pplm| prdi| ptim]

Syntax Description

b3-tca	(Optional) Reports bit 3 (B3) bit error rate (BER) threshold crossing alert (TCA) errors.
pais	(Optional) Reports path alarm indication signal (PAIS) errors.
plop	(Optional) Reports path loss of pointer (PLOP) errors.
pplm	(Optional) Reports path payload mismatch (PPLM) defect errors.
prdi	(Optional) Reports path remote defect indication (PRDI) errors.
ptim	(Optional) Reports path trace identity mismatch (PTIM) defect errors.

Command Default

Alarms from the following keywords are reported:

- b3-tca
- plop

Command Modes

SONET/SDH path configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Reporting an alarm means that the alarm can be logged to the console, but it is no guarantee that it is logged. SONET alarm hierarchy rules dictate that only the most severe alarm of an alarm group is reported. Whether an alarm is reported or not, you can view the current state of a masked alarm, a problem indication that is a

candidate for an alarm, by inspecting the “Masked Alarms” line displayed in the **show controllers sonet** command output.

For B3, the bit interleaved parity (BIP) error report is calculated by comparing the BIP-8 code with the BIP-8 code that is extracted from the B3 byte of the following frame. Differences indicate that path-level bit errors have occurred.

Path AIS is sent by line-terminating equipment to alert the downstream path-terminating equipment (PTE) that it has detected a defect on its incoming line signal.

Path LOP is reported as a result of an invalid pointer (H1, H2) or an excess number of new data flag enabled indications.

To determine the alarms that are reported on the controller, use the **show controllers sonet** command.

All report commands accept the default option. The default reporting values are determined based upon the SONET standards specifications and are clearly identified in the corresponding command’s help string.

**Note**

The reporting of B3 BER TCA errors and path LOP errors is enabled by default.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

In the following example, reporting of path PAIS alarms is enabled:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/2
RP/0/RSP0/CPU0:router(config-sonet)# path
RP/0/RSP0/CPU0:router(config-sonet-path)# report pais
```

Related Commands

Command	Description
show controllers sonet, on page 994	Displays information about the operational status of SONET layers.

revert

To enable automatic switchover from the protect interface to the working interface after the working interface becomes available, use the **revert** command in APS configuration mode. To disable automatic switchover, use the **no** form of this command.

revert *minutes*

no revert *minutes*

Syntax Description

<i>minutes</i>	Number of minutes until the circuit is switched back to the working interface after the working interface is available.

Command Default

minutes: 0

Automatic switchover is disabled.

Command Modes

APS group configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **revert** command to enable and disable revertive APS operation mode, if needed. The revertive APS operation mode of the routers should be matched with the APS operation mode of the connected SONET equipment. Use the **no** form of this command to disable automatic switchover.

The revertive APS operation mode is the recommended operation mode because it offers better traffic protection during various possible software failures and upgrade or downgrade scenarios.

The *minutes* argument indicates how many minutes will elapse until automatic protection switching (APS) decides to switch traffic back from protect to working after the condition that caused an automatic (Signal Failed or Signal Degrade) switch to protect disappears. A value of 0 (default) disables APS revertive mode.

In a multirouter APS topology, the **revert** command is allowed only on the protect router.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to enable APS to revert to the protect or working channel after 5 minutes have elapsed:

```
RP/0/RSP0/CPU0:router(config)# aps group 1  
RP/0/RSP0/CPU0:router(config-aps)# revert 5
```

Related Commands

Command	Description
aps group (global), on page 930	Adds an automatic protection switching (APS) group and enter APS group configuration mode.
show aps, on page 981	Displays the operational status for all configured SONET APS groups.

scrambling disable (SONET path)

To disable payload scrambling on a SONET path, use the **scrambling disable** command in SONET/SDH path configuration mode. To enable payload scrambling after it has been disabled, use the **no** form of this command.

scrambling disable

no scrambling disable

Syntax Description This command has no keywords or arguments.

Command Default The default is enable (SONET payload scrambling is on).

Command Modes SONET/SDH path configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

SONET payload scrambling applies a self-synchronous scrambler (x43+1) to the synchronous payload envelope (SPE) of the controller to ensure sufficient bit transition density. Both ends of the connection must be configured using SONET path scrambling.

If the hardware payload scrambling support is not user-configurable, or is not supported, the **scrambling disable** command may be rejected.

Examples In the following example, scrambling is disabled for the path:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/2
RP/0/RSP0/CPU0:router(config-sonet)# path
RP/0/RSP0/CPU0:router(config-sonet-path)# scrambling disable
```

Related Commands	Command	Description
	show controllers sonet , on page 994	Displays information about the operational status of SONET layers.

show aps

To display the operational status for all configured SONET automatic protection switching (APS) groups, use the **show aps** command in EXEC mode.

show aps

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes EXEC

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show aps** command to display operational status for all configured SONET APS groups.

Displaying the SONET APS operational data is considered of lower priority than the APS operation itself. Because the information is collected from several sources scattered across the various nodes involved, there is a small probability that some states will change while the command is being run.

The command should be reissued for confirmation before decisions are made based on the results displayed.

Examples The following is sample output from the **show aps** command:

```
RP/0/RSP0/CPU0:router# show aps

APS Group 1:
Protect ch 0 (SONET3_0):Enabled
  SONET framing, SONET signalling, bidirectional, revertive (300 sec)
  Rx K1:0x21 (Reverse Request - Working)
    K2:0x15 (bridging Working, 1+1, bidirectional)
  Tx K1:0x81 (Manual Switch - Working)
    K2:0x15 (bridging Working, 1+1, bidirectional)
Working ch 1 (SONET2_0):Disabled
  Rx K1:0x00 (No Request - Null)
    K2:0x00 (bridging Null, 1+1, non-aps)
  Tx K1:0x00 (No Request - Null)
    K2:0x00 (bridging Null, 1+1, non-aps)
APS Group 3:
PGP:protocol version: native 2 adopted 2
  PGP:Authentication "cisco", hello timeout 1 sec, hold timeout 3 sec
Protect ch 0 (SONET3_1):Disabled
```

```

SONET framing, SONET signalling, bidirectional, non-revertive
Rx K1:0x00 (No Request - Null)
  K2:0x05 (bridging Null, 1+1, bidirectional)
Tx K1:0x00 (No Request - Null)
  K2:0x05 (bridging Null, 1+1, bidirectional)
Working ch 1 (192.168.1.1):Enabled
APS Group 49:
Protect ch 0 (SONET0_2_0_0):Disabled
SONET framing, SONET signalling, unidirectional, non-revertive
Rx K1:0x00 (No Request - Null)
  K2:0x00 (bridging Null, 1+1, non-aps)
Tx K1:0x00 (No Request - Null)
  K2:0x04 (bridging Null, 1+1, unidirectional)
Working ch 1 (SONET0_2_0_1):Enabled
SONET framing, unidirectional
Rx K1:0x00 (No Request - Null)
  K2:0x00 (bridging Null, 1+1, non-aps)
Tx K1:0x00 (No Request - Null)
  K2:0x00 (bridging Null, 1+1, non-aps)
APS Group 6:
PGP:protocol version: native 2 adopted 2
PGP:Authentication "cisco", hello timeout 1 sec, hold timeout 3 sec
Protect ch 0 (192.168.3.2 - auto):Disabled
Working ch 1 (SONET6_0):Enabled
Rx K1:0x00 (No Request - Null)
  K2:0x00 (bridging Null, 1+1, non-aps)
Tx K1:0x00 (No Request - Null)
  K2:0x00 (bridging Null, 1+1, non-aps)

```

Table 61: show aps Field Descriptions

Field	Description
APS Group	Assigned number of the APS group. Range is from 1 through 255.
Protect ch	Number and address of the protect channel interface.
Working ch	Number and address of the working channel interface.

Related Commands

Command	Description
show aps agents , on page 983	Displays the status of the APS WP distributed communication subsystem.
show aps group , on page 985	Displays information about the APS groups.

show aps agents

To display the status of the automatic protection switching (APS) working to protect (WP) distributed communication subsystem, use the **show aps agents** command in EXEC mode.

show aps agents

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes EXEC

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show aps agents** command to display the status of the APS WP distributed communication subsystem.

The WP communication is critical for the APS functionality. The **show aps agents** command is typically used as a debugging aid for unexpected or unusual APS operation.

Displaying the APS operational data is considered of lower priority than the APS operation itself. Because the information is collected from several sources scattered across the various nodes involved, there is a small probability that some states will change while the command is being run.

The command should be reissued for confirmation before decisions are made based on the results displayed.

Task ID	Task ID	Operations
	sonet-sdh	read

Examples The following is sample output from the **show aps agents** command:

```
RP/0/RSP0/CPU0:router# show aps agents
```

```
SONET APS Manager working-Protect (WP) connections:
Remote peer (192.168.3.2 - auto) is up:
  Group 6    [P.Ch0] 192.168.3.2 === Manager --- SONET6_0 (node6) --- [W.Ch1]
Remote peer (10.1.1.1) is up:
```

show aps agents

```

Group 3    [W.Ch1] 192.168.1.1 === Manager --- SONET3_1 (node3) --- [P.Ch0]
Local agent (node2) is up:
Group 1    [W.Ch1] --- SONET2_0 --- SONET3_0 (node3) --- [P.Ch0]
Local agent (node3) is up:
Group 1    [P.Ch0] --- SONET3_0 --- SONET2_0 (node2) --- [W.Ch1]
Group 3    [P.Ch0] --- SONET3_1 --- Manager === 192.168.1.1 [W.Ch1]
Group 5    [P.Ch0] --- SONET3_2 --- SONET3_3 (node3) --- [W.Ch1]
Group 5    [W.Ch1] --- SONET3_3 --- SONET3_2 (node3) --- [P.Ch0]
Local agent (node6) is up:
Group 6    [W.Ch1] --- SONET6_0 --- Manager === 192.168.3.2 [P.Ch0]

```

Table 62: show aps agents Field Descriptions

Field	Description
Remote peer	IP address of the remote Protect Group Protocol (PGP) peer for the working router in an APS group. An IP address of 0.0.0.0 indicates a dynamically discovered PGP peer not yet contacted, shown on working routers only. (The protect router contacts the working router.)
Local agent	Node name of the local agent, such as (node2).
Group	The interface location or IP address of the SONET APS group. Internal WP communication channel segments are represented as “---” if the segment is operational or “-/-” if the connection is broken. PGP segments are represented as “===” if operational or “==” if broken.

Related Commands

Command	Description
show aps , on page 981	Displays the operational status for all configured SONET APS groups.

show aps group

To display information about the automatic protection switching (APS) groups, use the **show aps group** command in EXEC mode.

show aps group [*number*]

Syntax Description	<i>number</i> (Optional) The assigned group number.

Command Default	No default behavior or values

Command Modes	EXEC

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show aps group** command displays information about APS groups, and is useful if multiple APS groups are configured.

Displaying the APS operational data is considered of lower priority than the APS operation itself. Because the information is collected from several sources scattered across the various nodes involved, there is a small probability that some states will change while the command is being run.

The command should be reissued for confirmation before decisions are made based on the results displayed.

Task ID	Task ID	Operations
	sonet-sdh	read

Examples

The following is sample output from the **show aps group** command:

```
RP/0/RSP0/CPU0:router# show aps group 3
```

```
APS Group 3:
  PGP:Authentication "cisco", hello timeout 1 sec, hold timeout 3 sec
  Protect ch 0 (SONET3_1):Admin Down, Disabled
```

```

SONET framing, SONET signalling, bidirectional, non-revertive
Rx K1:0x00 (No Request - Null)
   K2:0x05 (bridging Null, 1+1, bidirectional)
Tx K1:0x00 (No Request - Null)
   K2:0x05 (bridging Null, 1+1, bidirectional)
Working ch 1 (192.168.1.1):Admin Down, Enabled

```

Table 63: show aps group Field Descriptions

Field	Description
APS Group	Group number assigned to the displayed APS group. For each channel in the group, the following information is displayed: • Authentication string • Hello timer value • Hold timer value • Role of the channel (working or protect) • Channel number • Name of the assigned physical port • Channel status (Enabled, Disabled, Admin Down, Signal Fail, Signal Degraded, or Not Contacted) • Group-related information (for protect channels only) that includes: ◦ Framing of the SONET port ◦ Kilobytes signaling protocol ◦ Unidirectional or bidirectional APS mode ◦ APS revert time, in seconds (in revertive operation mode only)
Rx	Received error signaling bytes and their APS decoded information.
Tx	Sent error signaling bytes and their APS decoded information.
Working ch	IP address of the corresponding Protect Group Protocol (PGP) peer.

The information displayed for the channels local to the routers is identical to the channel information displayed for single-router APS groups.

Related Commands

Command	Description
show aps, on page 981	Displays the operational status for all configured SONET APS groups.
show aps agents, on page 983	Displays the status of the APS WP distributed communication subsystem.

show controllers pos

To display information on the Packet-over-SONET/SDH (POS) controllers, use the **show controllers pos** command in EXEC mode.

show controllers pos *interface-path-id* [**all**| **framer** {**internal**| **register**| **statistics**}| **internal**] [**begin line**| **exclude line**| **file filename**| **include line**]

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	(Optional) Displays information for all POS interface controllers.
framer	(Optional) Displays all POS framer information.
internal	(Optional) Displays all POS internal information.
register	(Optional) Displays the POS framer registers.
statistics	(Optional) Displays the POS framer cumulative counters.
begin line	(Optional) Displays information beginning with the line that includes the regular expression given by the <i>line</i> argument.
exclude line	(Optional) Displays information excluding all lines that contain regular expressions that match the <i>line</i> argument.
file filename	(Optional) Saves the configuration to the designated file. For more information on which standard filenames are recognized, use the question mark (?) online help function.
include line	(Optional) Displays only those lines that contain the regular expression given by the <i>line</i> argument.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

The information displayed is generally useful for diagnostic tasks performed by technical support personnel only.

Task ID

Task ID	Operations
interface	read

Examples

The following is sample output from the **show controllers pos** command:

```
RP/0/RSP0/CPU0:router# show controllers POS 0/3/0/2
```

```
Port Number      : 2
Interface        : POS0/3/0/2
Ifhandle         : 0x1380120
CRC              : 32
MTU              : 4474
Port Bandwidth Kbps : 2488320
Admin state      : Up
Driver Link state : Up
```

```
Bundle member    : No
Bundle MTU        : 4474
Bundle Adminstate : Up
```

The following is sample output from the **show controllers pos all** command:

```
RP/0/RSP0/CPU0:router# show controllers POS 0/3/0/2 all
```

```
Port Number      : 2
Interface        : POS0/3/0/2
Ifhandle         : 0x1380120
CRC              : 32
MTU              : 4474
Port Bandwidth Kbps : 2488320
Admin state      : Up
```

show controllers pos

```

Driver Link state      : Up

Bundle member          : No
Bundle MTU             : 4474
Bundle Adminstate      : Up

```

POS Driver Internal Cooked Stats Values for port 2

```

=====
Rx Statistics                      Tx Statistics
-----
Total Bytes:      1200              Total Bytes:      0
Good Bytes:       1200              Good Bytes:      0
Good Packets:     25                Good Packets:     0
Aborts:           0                 Aborts:           0
FCS Errors:       0                 Min-len errors: 0
Runts:            0                 Max-len errors: 0
FIFO Overflows:   0                 FIFO Underruns: 0
Giants:           0
Drops:            0

```

Sky4402 asic #2 registers:

```

0x000 general_cntrl              0x00
0x002 sys_intf_cntrl_1          0x06
0x003 sys_intf_cntrl_2          0x00
0x004 JTAG3                      0x10
0x005 JTAG2                      0x10
0x006 JTAG1                      0x10
0x007 JTAG0                      0x2f
0x010 active_led                 0x01
0x011 gpio_port_mode             0x01
0x012 gpio_port_fault            0x00
0x013 gpio_port_data             0x58
0x015 gpio_port_cntrl            0x3f
0x017 gpio_port_transition       0x00
0x019 gpio_port_intr_mask       0xff
0x01b gpio_port_intr             0x3f
0x01c master_intr_status         0x00
0x01d master_mask                0x00
0x020 interrupt_4                0x04
0x021 interrupt_3                0x00
0x022 interrupt_2                0x00
0x023 interrupt_1                0x00
0x024 status_4                   0x04
0x025 status_3                   0x00
0x026 status_2                   0x0c
0x027 status_1                   0x80
0x028 mask_4                     0x07
0x029 mask_3                     0x03
0x02a mask_2                     0x1c
0x02b mask_1                     0x8f
0x02d link_state_cntrl           0x80
0x041 diag                       0x00
0x042 stcks                      0x03
0x043 short_frame_cntrl          0x00
0x0c0 ror_ram_c2                 0x16
0x0c1 ror_ram_g1                 0x00
0x0c2 ror_ram_f2                 0x00
0x0c3 ror_ram_h4                 0x00
0x0c4 ror_ram_z3                 0x00
0x0c5 ror_ram_z4                 0x00
0x0c6 ror_ram_z5                 0x00
0x0c7 ror_ram_db_c2              0x16
0x0c8 ror_ram_db_g1              0x00
0x142 tor_ram_c2                 0x16
0x143 tor_ram_g1                 0x00
0x144 tor_ram_f2                 0x00
0x145 tor_ram_h4                 0x00

```

```

0x146 tor_ram_z3          0x00
0x147 tor_ram_z4          0x00
0x148 tor_ram_z5          0x00
0x170 tor_ram_s1          0x00
0x171 tor_ram_e2          0x00
0x172 tor_ram_e1          0x00
0x173 tor_ram_f1          0x00
0x174 tor_ram_k1          0x00
0x175 tor_ram_k2          0x00
0x177 tor_ram_z2          0x00
0x180 rsp_cntrl_1         0x00
0x181 rsp_cntrl_2         0x02
0x184 rtop_fl_ovrhd       0x00
0x185 rtop_k1_ovrhd       0x00
0x186 rtop_k2_ovrhd       0x00
0x187 rtop_s1_ovrhd       0x00
0x188 rtop_e1_ovrhd       0x00
0x189 rtop_e2_ovrhd       0x00
0x18a rtop_deb_s1_ovrhd   0x00
0x18c rtop_b1_mismatch_cnt_u 0x00
0x18d rtop_b1_mismatch_cnt_l 0x00
0x190 rtop_b2_mismatch_cnt_u 0x00
0x191 rtop_b2_mismatch_cnt_l 0x00
0x194 rtop_rei_l_cnt_u    0x00
0x195 rtop_rei_l_cnt_l    0x00
0x198 rtop_ber_thresh_u   0x00
0x199 rtop_ber_thresh_l   0x00
0x19a rtop_ber_leak_u     0x00
0x19b rtop_ber_leak_l     0x00
0x19c rtop_ber_delay_u    0x00
0x19d rtop_ber_delay_l    0x00
0x1c0 rpop_signal_lbl_c2   0x16
0x1c2 rpop_valid_ptr_u     0x02
0x1c3 rpop_valid_ptr_l     0x0a
0x1c4 rpop_b3_mismatch_cnt_u 0x00
0x1c5 rpop_b3_mismatch_cnt_l 0x00
0x1c8 rpop_rei_p_cnt_u     0x00
0x1c9 rpop_rei_p_cnt_l     0x00
0x1cc rpop_ber_thresh_u    0x00
0x1cd rpop_ber_thresh_l    0x00
0x1ce rpop_ber_leak_u      0x00
0x1cf rpop_ber_leak_l      0x00
0x1d0 rpop_ber_delay_u     0x00
0x1d1 rpop_ber_delay_l     0x00
0x200 rpp_cntrl_1          0x11
0x201 rpp_cntrl_2          0x03
0x202 rpp_cntrl_3          0x3e
0x203 rpp_cntrl_4          0x00
0x204 rpp_cntrl_5          0x00
0x208 rpp_max_pkt_len_u    0x08
0x209 rpp_max_pkt_len_l    0xbd
0x20a rpp_min_pkt_len      0x04
0x244 tpp_inter_pkt_u      0x00
0x245 tpp_inter_pkt_l      0x00
0x246 tpp_idle_cell_hdr    0x00
0x247 tpp_idle_cell_filldata 0x00
0x248 tpp_cntrl            0x04
0x280 tpog_cntrl           0x20
0x2c0 ttog_cntrl           0x00
0x2c2 ttog_ovrhd_src_1     0x00
0x2c3 ttog_ovrhd_src_2     0x00
0x2c9 ttog_ovrhd_fill      0x00

```

Table 64: show controllers pos Field Descriptions

Field	Description
Cisco POS ASIC Register Dump (Receive)	Header for display of the contents of the receive ASIC1 register log.

Field	Description
asic mode	Address in hex of the ASIC mode flag.
error source	Address in hex of the error source flag.
error mask	Address in hex of the error mask flag.
error detail 1	Address in hex of the error detail 1 flag.
error detail 2	Address in hex of the error detail 2 flag.
rx offset	Address in hex of the receive offset.
Channel Modes	Location in hex of the channel mode flag.
Port 0:	Port 0 (the first port) statistics display.
Port 1:	Port 1 (the second port) statistics display.
Port 2:	Port 2 (the third port) statistics display.
Port 3:	Port 3 (the fourth port) statistics display.
Runt Threshold	Limit in packets set for runs on the specified port.
Tx Delay	Transmit delay that has been set for the specified port.
Cisco POS ASIC Register Dump (Transmit)	Header for display of the contents of the transmit ASIC register log.
POS Driver Internal Cooked Stats Values for port 0	Statistics relating to the specified POS port (POS port 0).
Rx Statistics	Receive statistics for the indicated POS port.
Total Bytes	Total number of bytes, including data and MAC encapsulation, received by the system.
Good Bytes	Number of bytes received without errors.
Good Packets	Number of packets received without errors.
Aborts	Number of receive bytes that have been aborted
FCS Errors	Number of FCS2 errors that have been received.
Runts	Number of received packets that are discarded because they are smaller than the minimum packet size of the medium.

Field	Description
FIFO Overflows	Number of received packets that exceeded the FIFO stack limit.
Giants	Number of received packets that are discarded because they exceed the maximum packet size of the medium.
Drops	Number of received packets that have been dropped from the system.
Tx Statistics	Transmit statistics for the indicated POS port.
Total Bytes	Total number of bytes, including data and MAC encapsulation, sent by the system.
Good Bytes	Number of bytes sent without errors.
Good Packets	Number of packets sent without errors.
Aborts	Number of sent bytes that have been aborted.
Min-len errors	Minimum queue length violations.
Max-len errors	Maximum queue length violations.
FIFO Underruns	First-in, first-out, a buffering scheme where the first byte of data entering the buffer is the first byte retrieved by the CPU. FIFO underruns reports the number of times that the transmitter has been running faster than the router can handle.

[1](#) [2](#)

¹ 1. application-specific integrated circuit

² 2. frame check sequence

show controllers sonet

To display information about the operational status of SONET layers, use the **show controllers sonet** command in EXEC mode.

show controllers sonet *interface-path-id* {**all**|**framers**|**internal-state**}

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	Displays all information.
framers	Displays framer information.
internal-state	Displays internal SONET state.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.

- If specifying a virtual interface, the number range varies, depending on interface type.

Use the **show controllers sonet** command to display information about the operational status of SONET layers on a particular SONET port.

If the manageability PIE is not installed, you can use the **show controllers sonet** command to display the counters for the current 15 minutes only without history data. However, the SONET MIB is still available but is limited to the current bucket of data. History data is still available only when the manageability PIE is loaded. The **show controllers sonet** command is available at any time to display current data, and history data is stored in the line card rather in the history bucket.

Task ID

Task ID	Operations
interface	read

Examples

The following is sample output from the **show controllers sonet** command:

```
RP/0/RSP0/CPU0:router# show controllers sonet 0/1/2/1

Port SONET0/1/2/1:

Status: Up
Loopback: None

SECTION
  LOF = 0          LOS    = 0          BIP(B1) = 0
LINE
  AIS = 0          RDI    = 1          FEBE = 0          BIP(B2) = 0
PATH
  AIS = 0          RDI    = 0          FEBE = 0          BIP(B3) = 0
  LOP = 0          NEWPTR = 0          PSE  = 0          NSE   = 0
  PLM = 0          TIM    = 0

Line delays trigger:      0 ms clear: 10000 ms
Path delays trigger:      0 ms clear: 10000 ms
Last clearing of "show controllers SONET" counters never

Detected Alarms: None
Asserted Alarms: None
Mask for Detected->Asserted: None
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: None
Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable  C2_rx = 0x16 (22)  C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0  S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : STABLE
  Remote hostname : Pl_CRS-8
  Remote interface: POS0/1/4/0
  Remote IP addr  : 0.0.0.0

APS
No APS Group Configured
Protect Channel 0  DISABLED
Rx(K1/K2) : 0x00/0x00
Tx(K1/K2) : 0x00/0x00
```

```

Remote Rx(K1/K2): 01/0   Remote Tx(K1/K2): 01/0

BER thresholds:  SF = 10e-3  SD = 10e-6
TCA thresholds:  B1 = 10e-6  B2 = 10e-6  B3 = 10e-6

Optics type: OC48 SR/STM16 I-16
Clock source: internal (actual) internal (configured)
Rx S1: 0xf  Tx S1: 0x50

Optical Power Monitoring (accuracy: +/- 1dB)
Rx power = 0.3162 mW, -5.0 dBm
Tx power = 0.2883 mW, -5.4 dBm
Tx laser current bias = 17.2 mA

```

Table 65: show controllers sonet Field Descriptions

Field	Description
Port	Slot number of the POS interface.
Status	Displays whether the link associated with the specified port is up or down.
Loopback	Loopback identifier, if applicable.
LOF	Section loss of frame is detected when a severely error-framing (SEF) defect on the incoming SONET signal persists for 3 milliseconds.
LOS	Section loss of signal is detected when an all-zeros pattern on the incoming SONET signal lasts 19(+/-3) microseconds or longer. This defect might also be reported if the received signal level drops below the specified threshold.
BIP	Bit interleaved parity error reported. • For B1, the bit interleaved parity error report is calculated by comparing the BIP-8 code with the BIP-8 code extracted from the B1 byte of the following frame. Differences indicate that section-level bit errors have occurred. • For B2, the bit interleaved parity error report is calculated by comparing the BIP-8/24 code with the BIP-8 code extracted from the B2 byte of the following frame. Differences indicate that line-level bit errors have occurred. • For B3, the bit interleaved parity error report is calculated by comparing the BIP-8 code with the BIP-8 code extracted from the B3 byte of the following frame. Differences indicate that path-level bit errors have occurred.

Field	Description
AIS	Alarm indication signal. - Line alarm indication signal is sent by the STE1 to alert the downstream LTE2 that a LOS or LOF defect has been detected on the incoming SONET section. - Path alarm indication signal is sent by the LTE to alert the downstream PTE3 that it has detected a defect on its incoming line signal.
RDI	Remote defect indication. - Line remote defect indication is reported by the downstream LTE when it detects LOF4, LOS5, or AIS6. - Path remote defect indication is reported by the downstream PTE when it detects a defect on the incoming signal.
FEBE	Far-end block errors. - Line far-end block error (accumulated from the M0 or M1 byte) is reported when the downstream LTE detects BIP7 (B2) errors. - Path far-end block error (accumulated from the G1 byte) is reported when the downstream PTE detects BIP (B3) errors.
LOP	Path loss of pointer is reported as a result of an invalid pointer (H1, H2) or an excess number of NDF8 enabled indications.
NEWPTR	Inexact count of the number of times the SONET framer has validated a new SONET pointer value (H1, H2).
PSE	Inexact count of the number of times the SONET framer has detected a positive stuff event in the received pointer (H1, H2).
NSE	Inexact count of the number of times the SONET framer has detected a negative stuff event in the received pointer (H1, H2).
PLM	Payload label mismatch. A different payload-specific functionality than the provisioned functionality is reported. For example, 02 to E0, or FD to FE.

Field	Description
TIM	Trace identifier mismatch. Reported TIM defects that occur primarily as a result of provisioning errors; for example, incorrect cross-connections in the network.
Line delays trigger	Line triggers delayed and cleared, in milliseconds.
Path delays trigger	Path triggers delayed and cleared, in milliseconds.
Last clearing of “show controllers SONET” counters	When the counters associated with the show controllers sonet command were last cleared.
Detected/Asserted Alarms	Any alarms detected by the controller are displayed here. Alarms are as follows: • Transmitter is sending remote alarm. • Transmitter is sending AIS. • Receiver has loss of signal. • Receiver is getting AIS. • Receiver has loss of frame. • Receiver has remote alarm. • Receiver has no alarms.
Mask for Detected -> Asserted	Masked alarms for the asserted alarm. For example, when SLOS is asserted, all low-level alarms are masked and are listed in this section of the output.
Detected Alerts	List of alerts that are detected.
Reported Alerts	List of reported alerts, such as B1-TCA B2-TCA B3-TCA, sent to the application layer.
Mask for Detected -> Reported	List of masked alerts for asserted alarms that are reported.
Alarm reporting enabled for	Types of alarms that generate an alarm message.
Alert reporting enabled for	Types of alarms that generate an alert message.
Framing	Type of framing enabled on the controller.
SPE Scrambling	Status of synchronous payload envelope (SPE) scrambling: Enabled, Disabled.
C2 State	Value extracted from the SONET path signal label byte (C2).

Field	Description
S1S0(tx)	Two S bits received in the last H1 byte.
PATH TRACE BUFFER	SONET path trace buffer is used to communicate information regarding the remote hostname, interface name/number, and IP address. This use of the J1 (path trace) byte is proprietary to Cisco.
Remote hostname	Name of the remote host.
Remote interface	Interface of the remote host.
Remote IP addr	IP address of the remote host.
APS	Configuration status of the APS feature
APS Group	Indicates whether or not an APS group is configured.
Protect Channel 0	Indicates whether or not channel 0 is protected.
Rx(K1/K2)/Tx(K1/K2)	Contents of the received and transmitted K1 and K2 bytes at the local end in an APS configuration.
Remote Rx(K1/K2)/Tx(K1/K2)	Contents of the received and transmitted K1 and K2 bytes at the remote end in an APS configuration.
BER thresholds	List of the bit error rate (BER) thresholds you configured with the threshold (SONET) command.
TCA thresholds	List of threshold crossing alarms (TCA) you configured with the threshold (SONET) command.
Optics type	Type of small form-factor pluggable (SFP) used in the associated port.
Tx laser current bias	Measured laser bias current, in milliamps (mA). The valid range is 0 through 131 mA.
Clock source	Actual and configured clock source.
Optical Power Monitoring	Power status of the SONET controller.
Tx laser current bias	Current information, in milliamps (mA), in the transmit direction.

[3](#) [4](#) [5](#) [6](#) [7](#) [8](#) [9](#) [10](#) [11](#)

The following is sample output from the **show controllers sonet** command with the **framers** option:

```
RP/0/RSP0/CPU0:router# show controllers sonet 0/1/2/1 framers
```

```
Common Regs
reg[0]                Master Reset and Identity 0x01
reg[1]                Master Cfg 0000
reg[3]                Master Clock Monitors 0x37
reg[100]              Master Intr Status 1 0000
reg[101]              Master Intr Status Ch 0-7 0000
reg[102]              Master Intr Status Ch 8-15 0000
reg[1000]             Master Clock Source Cfg 0000
reg[1001]             Master DCC Interface Cfg 1 0x0f
reg[1002]             Master DCC Interface Cfg 2 0000
reg[1004]             APS Cfg and Status 0000
reg[1005]             APS FIFO Cfg and Status 0x0f
reg[1006]             APS Intr Status 1 0000
reg[1007]             APS Intr Status 2 0000
reg[1008]             APS Reset Ctrl 0000
reg[1010]             TUL3 Interface Cfg 0x80
reg[1011]             TUL3 Intr Status/Enable 1 0000
reg[1012]             TUL3 Intr Status/Enable 2 0000
reg[1013]             TUL3 ATM Level 3 FIFO Cfg 0x03
reg[1014]             TUL3 ATM Level 3 Signal Label 0x01
reg[1015]             TUL3 POS Level 3 FIFO Low Water Mark 0x15
reg[1016]             TUL3 POS Level 3 FIFO High Water Mark 0x17
reg[1017]             TUL3 POS Level 3 Signal Label 0000
reg[1018]             TUL3 burst 0x0f
--More--
```

The following is sample output from the **show controllers sonet** command with the **internal-state** keyword:

```
RP/0/RSP0/CPU0:router# show controllers sonet 0/1/2/1 internal-state
```

```
Interface(layer)      admin_up  if_state
-----
SONET0/1/2/1          up      up
(SONET Section)       up      up
(SONET Line)          up      up
(SONET Path)          up      up
SonetPath0/1/2/1      up      up
POS0/1/2/1            up      up
```

Table 66: show controllers sonet Field Descriptions

Field	Description
Interface (layer)	Slot number of the POS interface.

- 3 1. section terminating equipment
- 4 2. line terminating equipment
- 5 3. path terminating equipment
- 6 4. loss of frame
- 7 5. loss of synchronization
- 8 6. alarm indication signal
- 9 7. bit interleaved parity
- 10 8. new data flag
- 11

Field	Description
admin_up	Whether the interface and its associated layers are in the admin-up state.
if_state	Whether the interface and its associated layers are in the up or down state.

show sonet-local trace frr

To display the alarms associated with Fast Re-Route (FRR) for all nodes or for a specific node, use the **show sonet-local trace frr** command in EXEC mode.

show sonet-local trace frr location *node-id*

Syntax Description

location *node-id*

Full path location of the node.

For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

Displays the FRR alarms for all nodes on the router.

Command Modes

EXEC

Command History

Release	Modification

Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations

cisco-support	read

Examples

The following example shows how to display the FRR alarms for a specific node:

```
RP/0/RSP0/CPU0:router# show sonet-local trace frr location 0/1/0/0
```

The following example shows how to display the FRR alarms for all nodes on the router:

```
RP/0/RSP0/CPU0:router# show sonet-local trace frr
```


Related Commands

Command	Description
show controllers sonet , on page 994	Displays information about the operational status of SONET layers.

shutdown (SONET)

To disable SONET controller processing, use the **shutdown** command in SONET/SDH configuration mode. To bring back up a SONET controller and enable SONET controller processing, use the **no form of this** command.

shutdown

no shutdown

Syntax Description

This command has no keywords or arguments.

Command Default

The SONET controller is up, and SONET controller processing is enabled.

Command Modes

SONET/SDH configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **shutdown** command to shut down a SONET controller and disable SONET controller processing. Use the **no shutdown** command to bring back up a SONET controller and enable SONET controller processing.

The SONET controller must be brought up for the proper operation of the Layer 2 interface. The Layer 2 interface has a separate **shutdown** command available, which does not operate on the SONET controller's administrative state.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to bring down the SONET controller and disable SONET controller processing:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/2
RP/0/RSP0/CPU0:router(config-sonet)# shutdown
```

Related Commands

Command	Description
show controllers sonet , on page 994	Displays information about the operational status of SONET layers.

signalling

To configure the K1K2 overhead byte signaling protocol used for automatic protection switching (APS), use the **signalling** command in APS group configuration mode. To reset APS signaling to the default, use the **no** form of this command.

signalling {sonet| sdh}

no signalling {sonet| sdh}

Syntax Description

sonet	Sets signaling to SONET.
sdh	Sets signaling to Synchronous Digital Hierarchy (SDH).

Command Default

SONET signaling is set by default.

Command Modes

APS group configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The sdh keyword was supported.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

By default, APS uses the signaling mode matching the framing mode. The **signalling** command may be required, depending upon the transport equipment capabilities, only on “transition” links interconnecting SONET and SDH networks.

In a multirouter APS topology, the **signalling** command is allowed only on the protect router.

Examples

The following example shows how to reset the signaling protocol from the default SONET value to SDH:

```
RP/0/RSP0/CPU0:router(config)# aps group 1
```

```
RP/0/RSP0/CPU0:router(config-aps)# signalling sdh
```

The following example sets the signaling to SONET:

```
RP/0/RSP0/CPU0:router(config)# aps group 1
```

```
RP/0/RSP0/CPU0:router(config-aps)# signalling sonet
```

Related Commands

Command	Description
aps group (global), on page 930	Adds an automatic protection switching (APS) group and enter APS group configuration mode.
show aps group, on page 985	Displays information about the APS groups.

sts

To specify the Synchronous Transport Signal (STS) path and enter the STS controller configuration mode, use the **sts** command in SONET controller configuration mode.

sts *number*

Syntax Description

<i>number</i>	STS path number. The range varies by the type of line card.

Command Default

No default behavior or values

Command Modes

SONET controller configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to specify STS 1:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/0
RP/0/RSP0/CPU0:router(config-sonet)# sts 1
RP/0/RSP0/CPU0:router(config-stsPath)#
```

Related Commands

Command	Description
au , on page 932	Specifies the administrative unit (AU) group number and enters the AU controller configuration mode.

timers (APS)

To change the time between hello packets and the time before the protect interface process declares a working interface router to be down, use the **timers** command in APS group configuration mode. To return to the default timers, use the **no** form of this command.

timers *hello-seconds hold-seconds*

no timers

Syntax Description

<i>hello-seconds</i>	Number of seconds to wait before sending a hello packet (hello timer). Range is from 1 through 255 seconds. Default is 1 second.
<i>hold-seconds</i>	Number of seconds to wait to receive a response from a hello packet before the interface is declared down (hold timer). Range is from 1 through 255 seconds. Default is 3 seconds.

Command Default

hello-seconds: 1

hold-seconds: 3

Command Modes

APS group configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **timers** command to change the time between hello packets and the time before the protect interface process declares a working interface router to be down.

The hello time, in seconds, represents the interval between the periodic message exchange between the Protect Group Protocol (PGP) peers. The hold time, in seconds, represents the interval starting with the first failed periodic message after which, if no successful exchange takes place, the PGP link is declared dead.

If many multirouter APS groups are configured and the CPU load or the User Datagram Protocol (UDP) traffic associated with the PGP communication is considered too high, then the hello interval should be increased.

Increasing the hold time is suggested if the PGP link is flapping. The possible causes include high route processor (RP) CPU load, high traffic, or high error rates on the links between the working and the protect routers.

We recommend that you have a hold time at least three times longer than the hello time (allowing three or more consecutive failed periodic message exchange failures).

The **timers** command is typically used only on the protect router. After the PGP connection is established, the working router learns about the timer settings from the protect router and automatically adjusts accordingly, regardless of its own timer configuration.

The **timers** command is meaningful only in multirouter automatic protection switching (APS) topologies and is ignored otherwise.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to configure APS group 3 with the hello timer at 2 seconds and the hold timer at 6 seconds:

```
RP/0/RSP0/CPU0:router(config)# aps group 3
RP/0/RSP0/CPU0:router(config-aps)# timers 2 6
```

Related Commands

Command	Description
aps group (global), on page 930	Adds an automatic protection switching (APS) group and enter APS group configuration mode.
show aps group, on page 985	Displays information about the APS groups.

threshold (SONET)

To set the bit error rate (BER) threshold values of the specified alarms for a SONET controller, use the **threshold** command in SONET/SDH configuration mode. To remove the setting of the threshold from the configuration file and restore the default condition, use the **no** form of this command.

threshold {b1-tca| b2-tca| sd-ber| sf-ber} *bit-error-rate*

no threshold {b1-tca| b2-tca| sd-ber| sf-ber} *bit-error-rate*

Syntax Description

b1-tca	Sets the B1 BER threshold crossing alarm (TCA). Range is from 3 through 9. Default is 10e-6.
b2-tca	Sets the B2 BER threshold crossing alarm (TCA). Range is from 3 through 9. Default is 10e-6.
sd-ber	Sets the signal degrade BER threshold. Range is from 3 through 9. Default is 10e-6.
sf-ber	Sets the signal failure BER threshold. Range is from 3 through 9. Default is 10e-3.
bit-error-rate	BER from 3 to 9 (10 to the minus <i>x</i>).

Command Default

b1-tca: 10e-6
b2-tca: 10e-6
sd-ber: 10e-6
sf-ber: 10e-3

Command Modes

SONET/SDH configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For B1, the bit interleaved parity (BIP) error report is calculated by comparing the BIP-8 code with the BIP-8 code that is extracted from the B1 byte of the following frame. Differences indicate that section-level bit errors have occurred.

For B2, the BIP error report is calculated by comparing the BIP-8/24 code with the BIP-8 code that is extracted from the B2 byte of the following frame. Differences indicate that line-level bit errors have occurred.

Signal failure BER and signal degrade BER are sourced from B2 BIP-8 error counts (as is B2-TCA). The **b1-tca** and **b2-tca** keywords print only a log message to the console (if reports for them are enabled).

To determine the BER thresholds configured on the controller, use the **show controllers sonet** command.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to configure thresholds on the SONET controller:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/2
RP/0/RSP0/CPU0:router(config-sonet)# threshold sd-ber 8
RP/0/RSP0/CPU0:router(config-sonet)# threshold sf-ber 4
RP/0/RSP0/CPU0:router(config-sonet)# threshold b1-tca 4
```

Related Commands

Command	Description
report (SONET) , on page 974	Permits selected SONET alarms to be logged to the console for a SONET controller.
show controllers sonet , on page 994	Displays information about the operational status of SONET layers.

threshold (SONET path)

To set the bit error rate (BER) threshold values of the specified alarms for a SONET path, use the **threshold** command in SONET/SDH path configuration mode. To remove the setting of the SONET path threshold from the configuration file and restore the default condition, use the **no** form of this command.

threshold b3-tca *bit-error-rate*

no threshold b3-tca *bit-error-rate*

Syntax Description

b3-tca	Sets the B3 BER threshold crossing alarm (TCA). Default is 6.
<i>bit-error-rate</i>	BER from 3 to 9 (10 to the minus <i>x</i>).

Command Default

b3-tca: 6

Command Modes

SONET/SDH path configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For B3, the bit interleaved parity (BIP) error report is calculated by comparing the BIP-8 code with the BIP-8 code that is extracted from the B3 byte of the following frame. Differences indicate that path-level bit errors have occurred.

In addition to BIP errors detected at the local end in the receive direction, B3 error counts detected in the G1 byte (P-REI or P-FEBE) by the far-end SONET equipment are returned.

The **b3-tca** keyword prints only a log message to the console (if reports for them are enabled).

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

In the following example, the BER is set to 4:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/1  
RP/0/RSP0/CPU0:router(config-sonet)# path  
RP/0/RSP0/CPU0:router(config-sonet-path)# threshold b3-tca 4
```

Related Commands

Command	Description
report (SONET), on page 974	Permits selected SONET alarms to be logged to the console for a SONET controller.
show controllers sonet, on page 994	Displays information about the operational status of SONET layers.

tug3

To specify the tributary unit group (TUG) number and enter the TUG3 controller configuration mode, use the **tug3** command in SONET controller configuration mode.

tug3 *number*

Syntax Description

<i>number</i>	The tributary unit group (TUG) number. The ranges are: • AU4—The only value is 1. • AU3—The range is 1 to 3.

Command Default

The default is 1.

Command Modes

SONET controller configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **tug3** command enables you to begin configuring the interface in the TUG3 controller configuration mode, where you can configure virtual containers (VCs) and DS3s:

STM1 -> AU4 -> TUG3 -> VC-3 -> DS3

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to specify tug3 1.

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/0
RP/0/RSP0/CPU0:router(config-sonet)# au 1
RP/0/RSP0/CPU0:router(config-auPath)# tug3 1
RP/0/RSP0/CPU0:router(config-tug3Path)#
```

Related Commands

Command	Description
au, on page 932	Specifies the administrative unit (AU) group number and enters the AU controller configuration mode.

uneq-shut (SONET path)

To enable automatic insertion of P-UNEQ code (0x00) in the sent SONET path overhead C2 byte, use the **uneq-shut** command in SONET/SDH path configuration mode. To disable this feature, use the **no** form of this command.

uneq-shut

no uneq-shut

Syntax Description This command has no keywords or arguments.

Command Default Automatic insertion is enabled.

Command Modes SONET/SDH path configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **uneq-shut** command to disable automatic insertion of P-UNEQ code in the sent SONET path overhead C2 byte whenever the SONET path enters the administratively down state.

Task ID	Task ID	Operations
	sonet-sdh	read, write

Examples In the following example, automatic insertion of P-UNEQ code is disabled in the sent SONET path overhead C2 byte:

```
RP/0/RSP0/CPU0:router(config)# controller sonet 0/2/0/2
RP/0/RSP0/CPU0:router(config-sonet)# path
RP/0/RSP0/CPU0:router(config-sonet-path)# uneq-shut
```

unidirectional

To configure a protect interface for unidirectional mode, use the **unidirectional** command in APS group configuration mode. To restore the default setting, bidirectional mode, use the **no** form of this command.

unidirectional

no unidirectional

Syntax Description

This command has no keywords or arguments.

Command Default

Bidirectional mode is the default mode for the protect interface.

Command Modes

APS group configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **unidirectional** command to configure a protect interface for unidirectional mode. Use the **no** form of this command to restore the default setting.

The unidirectional or bidirectional automatic protection switching (APS) operation mode of the routers should be matched with the APS operation mode of the connected SONET equipment.



Note

We recommend using bidirectional APS mode when it is supported by the interconnecting SONET equipment. When the protect interface is configured as unidirectional, the working and protect interfaces must cooperate to switch the transmit and receive SONET channel in a bidirectional fashion. Cooperation occurs automatically when the SONET network equipment is in bidirectional mode.

In a multirouter APS topology, the **unidirectional** command is allowed only on the protect router.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to configure an APS group for unidirectional mode:

```
RP/0/RSP0/CPU0:router(config)# aps group 1  
RP/0/RSP0/CPU0:router(config-aps)# unidirectional
```

Related Commands

Command	Description
aps group (global), on page 930	Adds an automatic protection switching (APS) group and enter APS group configuration mode.
show aps, on page 981	Displays the operational status for all configured SONET APS groups.

width

To set the number of paths in a stream, use the **width** command in the STS or AU controller configuration mode.

width *number*

Syntax Description

<i>number</i>	Number of STS streams that are concatenated. The possible values are: • 1—Indicating one STS stream • 3—Indicating three STS streams (STS-3c) • 12—Indicating concatenation of 12 STS streams (STS-12c) • 48—Indicating concatenation of 48 STS streams (STS-48c) Widths 3, 12, and 48 are configured on STS paths at natural boundaries, which coincide with the following path numbers: • 1, 4, 7, 10, and so on, for STS-3c • 1, 13, 25, and 37 for STS-12c • 1 for STS-48c

Command Default

The default is 1.

Command Modes

SONET controller configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to specify a width of 3:

```
RP/0/0/CPU0:router(config)# controller sonet 0/1/0/0  
RP/0/0/CPU0:router(config-sonet)# sts 1  
RP/0/0/CPU0:router(config-stsPath)# width 3
```

Related Commands

Command	Description
mode (SONET), on page 962	Sets the mode of an STS path, AU path, T3 controller, or TUG3 controller.

 width



T3, E3, T1, E1 Controller Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring T3/E3 and T1/E1 controllers on the Cisco ASR 9000 Series Router.

- [bert e1, page 1026](#)
- [bert e3, page 1029](#)
- [bert error, page 1031](#)
- [bert interval, page 1033](#)
- [bert pattern, page 1035](#)
- [bert t1, page 1038](#)
- [bert t3, page 1041](#)
- [cablelength, page 1043](#)
- [channel-group, page 1045](#)
- [clear controller lnm, page 1047](#)
- [clear controller t1, page 1050](#)
- [clear controller t3, page 1052](#)
- [clock source \(T1/E1\), page 1054](#)
- [clock source \(T3/E3\), page 1056](#)
- [controller e1, page 1058](#)
- [controller e3, page 1060](#)
- [controller t1, page 1062](#)
- [controller t3, page 1064](#)
- [delay clear \(T1/E1\), page 1066](#)
- [delay clear \(T3/E3\), page 1068](#)
- [delay trigger \(T1/E1\), page 1070](#)

- [delay trigger \(T3/E3\), page 1072](#)
- [description \(T1/E1\), page 1074](#)
- [description \(T3/E3\), page 1076](#)
- [down-when-looped \(T1/E1\), page 1078](#)
- [down-when-looped \(T3/E3\), page 1080](#)
- [dsu bandwidth, page 1082](#)
- [dsu mode, page 1084](#)
- [dsu remote, page 1086](#)
- [fdl, page 1088](#)
- [framing \(E1\), page 1090](#)
- [framing \(E3\), page 1092](#)
- [framing \(T1\), page 1094](#)
- [framing \(T3\), page 1096](#)
- [linecode, page 1098](#)
- [lnm major-warning, page 1100](#)
- [lnm minor-warning, page 1103](#)
- [lnm remove, page 1106](#)
- [lnm syslog, page 1109](#)
- [loopback \(T1/E1\), page 1111](#)
- [loopback \(T3/E3\), page 1113](#)
- [mdl, page 1115](#)
- [mode, page 1117](#)
- [national bits \(E1\), page 1119](#)
- [national bits \(E3\), page 1120](#)
- [show controllers e1, page 1122](#)
- [show controllers e3, page 1126](#)
- [show controllers lnm, page 1130](#)
- [show controllers t1, page 1134](#)
- [show controllers t3, page 1142](#)
- [shutdown \(T1/E1\), page 1151](#)
- [shutdown \(T3/E3\), page 1153](#)
- [speed \(DS0\), page 1155](#)
- [timeslots, page 1157](#)

- [yellow, page 1159](#)

bert e1

To start or stop a configured bit error rate test (BERT) on an E1 controller or channel group, use the **bert e1** command in EXEC mode. To return to the default state, use the **no** form of this command.

bert e1 *interface-path-id* [**channel-group** *channel-group-number*] [**error**] {**start**|**stop**}

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
channel-group <i>channel-group-number</i>	(Optional) Channel group number. When an E1 data line is configured, channel group numbers can be values from 0 to 30. Note For any of the DS0 time slots within the time slot range provided for the channel group, use time slot -1 as the channel number.
error	(Optional) Injects errors into the running BERT stream.
start	Starts the BERT on the E1 controller or channel.
stop	Stops the BERT on the E1 controller or channel.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.

- *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

**Note**

Before you can start a BERT on an E1 controller or channel group, you must configure a BERT pattern using the **bert pattern** command. If desired, you can also adjust the default setting (1 minute) of the BERT interval using the **bert interval** command. Both of these commands are available in E1 configuration mode and channel group configuration mode.

To view the BERT results, use the **show controllers e1** command in EXEC mode. The BERT results include the following information:

- Type of test pattern selected
- Status of the test
- Interval selected
- Time remaining on the BERT
- Total bit errors
- Total bits received

BERT is data intrusive. Regular data cannot flow on a line while the test is in progress. The line is put in an alarm state when a BERT is in progress and restored to a normal state after a BERT has been terminated.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to start and stop a BERT on an E1 controller:

```
RP/0/RSP0/CPU0:router# bert e1 0/3/0/0 start
RP/0/RSP0/CPU0:router# bert e1 0/3/0/0 stop
```

The following example shows how to inject errors into the BERT stream on an E1 controller:

```
RP/0/RSP0/CPU0:router# bert e1 0/3/0/0 error
```

Related Commands

Command	Description
bert interval , on page 1033	Specifies the duration of a bit error rate test (BERT) pattern on a T3/E3 or T1/E1 line.

Command	Description
bert pattern, on page 1035	Enables a BERT pattern on a T3/E3 or T1/E1 line or an individual channel group.
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.

bert e3

To start or stop a configured bit error rate test (BERT) on an E3 controller or channel group, use the **bert e3** command in EXEC mode. To return to the default state, use the **no** form of this command.

bert e3 *interface-path-id* [**error**] {**start**|**stop**}

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
error	(Optional) Injects errors into the running BERT stream.
start	Starts the BERT on the E3 controller or channel.
stop	Stops the BERT on the E3 controller or channel.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.

- If specifying a virtual interface, the number range varies, depending on interface type.

**Note**

Before you can start a BERT on an E3 controller, you must configure a BERT pattern using the **bert pattern** command. If desired, you can also adjust the default setting (1 minute) of the BERT interval using the **bert interval** command. Both of these commands are available in E3 configuration mode.

To view the BERT results, use the **show controllers e3** command in EXEC mode. The BERT results include the following information:

- Type of test pattern selected
- Status of the test
- Interval selected
- Time remaining on the BERT
- Total bit errors
- Total bits received

BERT is data intrusive. Regular data cannot flow on a line while the test is in progress. The line is put in an alarm state when a BERT is in progress and restored to a normal state after a BERT has been terminated.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to start and stop a BERT on an E3 controller:

```
RP/0/RSP0/CPU0:router# bert e3 0/3/0/0/0 start
RP/0/RSP0/CPU0:router# bert e3 0/3/0/0/0 stop
```

The following example shows how to inject errors into the BERT stream on an E3 controller:

```
RP/0/RSP0/CPU0:router# bert e3 0/3/0/0 error
```

Related Commands

Command	Description
bert interval , on page 1033	Specifies the duration of a bit error rate test (BERT) pattern on a T3/E3 or T1/E1 line.
bert pattern , on page 1035	Enables a BERT pattern on a T3/E3 or T1/E1 line or an individual channel group.
show controllers e3 , on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.

bert error

To insert errors into a BERT stream on a T3/E3 or T1/E1 line, use the **bert error** command in T3 or T1 configuration mode. To disable a BERT pattern, use the **no** form of this command.

bert error [*number*]

no bert error [*number*]

Syntax Description

<i>number</i>	Specifies the number of BERT errors to introduce into the bit stream. The range is from 1 to 255. The default is 1.

Command Default

The default is 1.

Command Modes

T3 configuration
E3 configuration
T1 configuration
E1 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 and E1 configuration modes was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **bert error** command with the **bert pattern** command.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to insert 10 errors into the BERT bit stream on the T3 controller in slot 0, subslot 3:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/0/3/1/10
RP/0/RSP0/CPU0:router(config-t3e3)# bert error 10
```

Related Commands

Command	Description
bert interval, on page 1033	Specifies the duration of a bit error rate test (BERT) pattern on a T3/E3 or T1/E1 line.
bert pattern, on page 1035	Enables a BERT pattern on a T3/E3 or T1/E1 line or an individual channel group.
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers e3, on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

bert interval

To specify the duration of a bit error rate test (BERT) pattern on a T3/E3 or T1/E1 line, use the **bert interval** command in the appropriate configuration mode. To revert to the default interval, use the **no** form of this command.

bert interval *time*

no bert interval *time*

Syntax Description

<i>time</i>	Duration (in minutes) of the BERT. The interval can be a value from 1 to 14400. The default is 1 minute.

Command Default

A BERT runs for 1 minute.

Command Modes

T3 configuration
E3 configuration
T1 configuration
E1 configuration
Channel group configuration for T1 and E1

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 and E1 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **bert interval** command with the **bert pattern** command. If the **bert interval** command is not used, then the BERT runs for a default of 1 minute.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to limit the BERT to 10 minutes on the T3 controller in slot 0, subslot 3:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/0/3/1/10
RP/0/RSP0/CPU0:router(config-t3e3)# bert interval 10
```

Related Commands

Command	Description
bert error, on page 1031	Insert errors into a BERT stream on a T3/E3 or T1/E1 line.
bert pattern, on page 1035	Enables a BERT pattern on a T3/E3 or T1/E1 line or an individual channel group.
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers e3, on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

bert pattern

To enable a bit error rate test (BERT) pattern on a T3/E3 or T1/E1 line or an individual channel group, use the **bert pattern** command in T3, E3, T1, E1, or channel group configuration mode. To disable a BERT pattern, use the **no** form of this command.

```
bert pattern {0s| 1in8| 1s| 2^11| 2^15| 2^20| 2^20-QRSS| 2^23| 2^9| 3in24| 55Daly| 55Octet| alt-0-1|
ds0-1| ds0-2| ds0-3| ds0-4}
```

```
no bert pattern {0s| 1in8| 1s| 2^11| 2^15| 2^20| 2^20-QRSS| 2^23| 2^9| 3in24| 55Daly| 55Octet| alt-0-1|
ds0-1| ds0-2| ds0-3| ds0-4}
```

Syntax Description

0s	Invokes a repeating pattern of zeros (...000...).
1in8	(T1 and E1 only) Invokes a repeating pattern of one (1) bit in eight (8).
1s	Invokes a repeating pattern of ones (...111...).
2^11	(Channel group only) Invokes a pseudorandom O.151 test pattern that is 32,768 bits in length.
2^15	Invokes a pseudorandom O.151 test pattern that is 32,768 bits in length.
2^20	Invokes a pseudorandom O.153 test pattern that is 1,048,575 bits in length.
2^20-QRSS	Invokes a pseudorandom quasi-random signal sequence (QRSS) O.151 test pattern that is 1,048,575 bits in length.
2^23	Invokes a pseudorandom O.151 test pattern that is 8,388,607 bits in length.
2^9	(Channel group only) Invokes a pseudorandom O.153 test pattern of 511 bits in length.
3in24	(T1 and E1 only) Invokes a repeating pattern in which three (3) bits in twenty-four (24) are set to one (1) and the others are set to zero (0).
55Daly	(T1 and E1 only) Invokes a repeating pattern of fifty-five (55) 8-bit octets of data. This pattern introduces rapid transitions from long sequences of low-density octets to high-density octets, high-density octets to low-density octets, and rapid 1010 bit transitions.
55Octet	(T1 and E1 only) Invokes a repeating pattern of fifty-five (55) 8-bit octets of data. This pattern has fifteen (15) consecutive zeros.
alt-0-1	Invokes a repeating pattern of alternating zeros and ones (...01010...).
ds0-1	(Channel group only) Invokes a repeating sequence of 100x FFh, followed by 100x 00h. This combination of minimum and maximum densities causes stressing of the signal recovery circuitry.

ds0-2	(Channel group only) Invokes a repeating sequence of 100x 7Eh, followed by 100x 00h. This combination provides minimum ones density stressing as well as Layer 2 flag bytes.
ds0-3	(Channel group only) Invokes a repeating sequence of 200x 4Ch. This combination represents the typical SDD traffic patterns.
ds0-4	(Channel group only) Invokes a repeating sequence of 200x 40h. This combination represents the typical DEC VT traffic.

Command Default

BERT pattern test is disabled

Command Modes

T3 configuration
 E3 configuration
 T1 configuration
 E1 configuration
 Channel group configuration for T1 and E1

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	• Support for E3 and E1 configuration mode was added. • Support for the ds0-1, ds0-2, ds0-3, and ds0-4 keywords was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

BERT is supported on each of the T3/E3 or T1/E1 links. It is done only over an unframed T3/E3 or T1/E1 signal and is run on only one port at a time. It is also supported on an individual channel group.

To begin a BERT, commit the configuration and use the **bert t1**, **bert e1**, **bert t3**, or **bert e3** command in EXEC mode.

To view the BERT results, use the **show controllers t1** or **show controllers t3** command in EXEC mode. The BERT results include the following information:

- Type of test pattern selected
- Status of the test
- Interval selected

- Time remaining on the BERT
- Total bit errors
- Total bits received

BERT is data intrusive. Regular data cannot flow on a line while the test is in progress. The line is put in an alarm state when a BERT is in progress and restored to a normal state after a BERT has been terminated.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to enable the running of a BERT pattern of all zeros on the T3 controller in slot 0, subslot 3:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/0/3/1/10
RP/0/RSP0/CPU0:router(config-t3e3)# bert pattern 0s
```

Related Commands

Command	Description
bert error, on page 1031	Insert errors into a BERT stream on a T3/E3 or T1/E1 line.
bert interval, on page 1033	Specifies the duration of a bit error rate test (BERT) pattern on a T3/E3 or T1/E1 line.
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers e3, on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

bert t1

To start or stop a configured bit error rate test (BERT) on a T1 controller or channel group, use the **bert t1** command in EXEC mode.

bert t1 *interface-path-id* [**channel-group** *channel-group-number*] [**error**] {**start**|**stop**}

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
channel-group <i>channel-group-number</i>	Note (Optional) Channel group number. When a T1 data line is configured, channel group numbers can be values from 0 to 23.
error	(Optional) Injects errors into the running BERT stream.
start	Starts the BERT on the T1 controller or channel.
stop	Stops the BERT on the T1 controller or channel.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.

- *module*: Module number. A physical layer interface module (PLIM) is always 0.
- *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

**Note**

Before you can start a BERT on a T1 controller or channel group, you must configure a BERT pattern using the **bert pattern** command. If desired, you can also adjust the default setting (1 minute) of the BERT interval using the **bert interval** command. Both of these commands are available in T1 configuration mode and channel group configuration mode.

To view the BERT results, use the **show controllers t1** command in EXEC mode. The BERT results include the following information:

- Type of test pattern selected
- Status of the test
- Interval selected
- Time remaining on the BERT
- Total bit errors
- Total bits received

BERT is data intrusive. Regular data cannot flow on a line while the test is in progress. The line is put in an alarm state when a BERT is in progress and restored to a normal state after a BERT has been terminated.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to start and stop a BERT on a T1 controller:

```
RP/0/RSP0/CPU0:router# bert t1 0/3/0/0/0 start
RP/0/RSP0/CPU0:router# bert t1 0/3/0/0/0 stop
```

The following example shows how to inject errors into the BERT stream on an T1 controller:

```
RP/0/RSP0/CPU0:router# bert t1 0/3/0/0 error
```

Related Commands

Command	Description
bert interval , on page 1033	Specifies the duration of a bit error rate test (BERT) pattern on a T3/E3 or T1/E1 line.
bert pattern , on page 1035	Enables a BERT pattern on a T3/E3 or T1/E1 line or an individual channel group.

Command	Description
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

bert t3

To start or stop a configured bit error rate test (BERT) on a T3 controller or channel group, use the **bert t3** command in EXEC mode.

bert t3 *interface-path-id* [**error**] {**start**|**stop**}

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
error	(Optional) Injects errors into the running BERT stream.
start	Starts the BERT on the T3 controller or channel.
stop	Stops the BERT on the T3 controller or channel.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.

- If specifying a virtual interface, the number range varies, depending on interface type.

**Note**

Before you can start a BERT on a T3 controller, you must configure a BERT pattern using the **bert pattern** command. If desired, you can also adjust the default setting (1 minute) of the BERT interval using the **bert interval** command. Both of these commands are available in T3 configuration mode.

To view the BERT results, use the **show controllers t3** command in EXEC mode. The BERT results include the following information:

- Type of test pattern selected
- Status of the test
- Interval selected
- Time remaining on the BERT
- Total bit errors
- Total bits received

BERT is data intrusive. Regular data cannot flow on a line while the test is in progress. The line is put in an alarm state when a BERT is in progress and restored to a normal state after a BERT has been terminated.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to start and stop a BERT on a T3 controller:

```
RP/0/RSP0/CPU0:router# bert t3 0/3/0/0 start
RP/0/RSP0/CPU0:router# bert t3 0/3/0/0 stop
```

The following example shows how to inject errors into the BERT stream on a T3 controller:

```
RP/0/RSP0/CPU0:router# bert t3 0/3/0/0 error
```

Related Commands

Command	Description
bert interval, on page 1033	Specifies the duration of a bit error rate test (BERT) pattern on a T3/E3 or T1/E1 line.
bert pattern, on page 1035	Enables a BERT pattern on a T3/E3 or T1/E1 line or an individual channel group.
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

cablelength

To specify the distance of the cable from the routers to the network equipment, use the **cablelength** command in T3 or E3 configuration mode. To restore the default cable length, use the **no** form of this command.

cablelength *feet*

no cablelength

Syntax Description

<i>feet</i>	Number of feet in the range from 0 to 450. The default is 224 feet.

Command Default

The default is 224 feet.

Command Modes

T3 configuration
E3 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You can specify a cable length from 0 to 450 feet; however, the hardware recognizes only two ranges: 0 to 49 and 50 to 450. For example, entering 35 feet uses the 0 to 49 range. If you later change the cable length to 40 feet, there is no change because 40 is still within the 0 to 49 range. However, if you change the cable length to 50, the 50 to 450 range is used. The actual number you enter is stored in the configuration file.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to set the cable length for the router to 300 feet:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/6/0/0
```

cablelength

```
RP/0/RSP0/CPU0:router(config-t3)# cablelength 300
```

channel-group

To configure a DS0 channel group and enter channel group configuration mode, use the **channel-group** command in T1 or E1 configuration mode. To unassign a channel group, use the **no** form of this command.

channel-group *channel-group-number*

no channel-group *channel-group-number*

Syntax Description

<i>channel-group-number</i>	Note	Channel group number. When a T1 controller is configured, channel group numbers can be values from 0 to 23.

Command Default

No default behavior or values

Command Modes

T1 configuration

E1 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for DS0 channel groups and E1 configuration was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **channel-group** command is available only on channelized SPAs.

Use the **channel-group** command in configurations in which the router must communicate with a T1 or an E1 fractional data line. The channel group number may be arbitrarily assigned and must be unique for the controller. An associated serial interface is created with each defined channel group.

Before the channel group configuration is valid, you must define the associated DS0 time slots using the **timeslots** command.

Use the **no channel group** command to delete a channel group.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to enter channel group configuration mode for channel group number 5 and change the speed of the underlying DS0s in the channel group to 56 kbps:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/10
RP/0/RSP0/CPU0:router(config-t1)# channel-group 5
RP/0/RSP0/CPU0:router(config-t1-channel_group)# speed 56
```

The following example shows how to associate DS0 time slots 1, 6, 8, 9, and 10 to channel group 5:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/10
RP/0/RSP0/CPU0:router(config-t1)# channel-group 5
RP/0/RSP0/CPU0:router(config-t1-channel_group)# timeslots 1:6:8-10
```

Related Commands

Command	Description
bert pattern, on page 1035	Enables a BERT pattern on a T3/E3 or T1/E1 line or an individual channel group.
framing (E1), on page 1090	Selects the frame type for an E1 data line.
framing (T1), on page 1094	Selects the frame type for a T1 data line.
mode, on page 1117	Sets the mode of the T3/E3 or T1/E1 controller.
speed (DS0), on page 1155	Specifies the speed of the underlying DS0s in a channel group.
timeslots, on page 1157	Associates one or more DS0 time slots to a channel group and create an associated serial subinterface.

clear controller lnm

To clear link noise monitoring statistics or reset states, use the **clear controller lnm** command in EXEC configuration mode.

clear controller {**t1**|**e1**} *interface-path-id* **lnm** {**state**|**statistics**}

Syntax Description

t1	Specifies clearing of LNM states or statistics for a T1 controller.
e1	Specifies clearing of LNM states or statistics for an E1 controller.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show controllers command to see a list of all controllers currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
state	Resets the LNM event states for the specified controller.
statistics	Clears the LNM statistics for the specified controller and resets them to zero.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When specifying a channelized T1 controller, use the following guidelines for the *interface-path-id*:

- The naming notation is *rack/slot/module/port/T3Num/T1num*.
- The slash between values is required as part of the notation.
- The following list describes the components of the notation:
 - *rack*—Chassis number of the rack.
 - *slot*—Physical slot number of the line card.

- *module*—Module number or subslot (for a SPA). A physical layer interface module (PLIM) is always 0.
- *port*—Physical port number of the interface.
- *T3num*—T3 controller number.
- *T1num*—T1 controller number.

There should not normally be any need to clear the LNM controller states. The **state** option resets the LNM configuration which causes an update of the current LNM states in the system. Therefore, under normal conditions, if the controller is in alarm state, the reset should continue to report the alarm state; alternatively, if the controller is clear of any alarms, the reset will show the stable state. The use of the **clear controller lnm state** command does not actually clear any alarms, but causes a refresh of their values in the system. Therefore, this command can be used if the reported controller state should happen to be out of synchronization with the actual controller state.

To view the status of the controllers, use the **show controllers t1** command.

Task ID

Task ID	Operations
dwdm	read, write
interface	read, write
sonet-sdh	read, write

Examples

The following example shows how to reset link noise monitoring states for the channelized T1 controller 1 that is located in chassis 0, for a SIP installed in slot 1 with a SPA in subslot 0, and port 0 with T3 controller 1, and channelized T1 controller 1:

```
RP/0/RSP0/CPU0:router# clear controller t1 0/1/0/0/1/1 lnm state
```

The following example shows how to clear link noise monitoring statistics for the channelized T1 controller 1 that is located in chassis 0, for a SIP installed in slot 1 with a SPA in subslot 0, and port 0 with T3 controller 1, and channelized T1 controller 1:

```
RP/0/RSP0/CPU0:router# clear controller t1 0/1/0/0/1/1 lnm statistics
```

Related Commands

Command	Description
controller e1, on page 1058	Configures an E1 controller and enters E1 configuration mode.
controller t1, on page 1062	
lnm major-warning, on page 1100	Enables link noise monitoring and specifies thresholds for noise errors on T1/E1 links that are used to signal major warning events and recovery from those events.

Command	Description
lnm minor-warning, on page 1103	Enables link noise monitoring and specifies thresholds for noise errors on T1/E1 links that are used to signal minor warning events and recovery from those events.
lnm remove, on page 1106	Enables link noise monitoring and specifies thresholds for noise errors on T1/E1 links that are used to signal the noise attribute to PPP for removal of an MLPPP bundle link.
lnm syslog, on page 1109	Enables logging of link noise monitoring major, remove, and minor events and alarms.
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers lnm, on page 1130	Displays information about LNM on T1 or E1 links.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

clear controller t1

To clear T1 controller data, use the **clear controller t1** command in EXEC configuration mode.

clear controller t1 *interface-path-id*

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface.
Note Use the show controllers command to see a list of all controllers currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.	

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When specifying a channelized T1 controller, use the following guidelines for the *interface-path-id*:

- The naming notation is *rack/slot/module/port/T3Num/T1num*.
- The slash between values is required as part of the notation.
- The following list describes the components of the notation:
 - *rack*—Chassis number of the rack.
 - *slot*—Physical slot number of the line card.
 - *module*—Module number or subslot (for a SPA). A physical layer interface module (PLIM) is always 0.
 - *port*—Physical port number of the interface.
 - *T3num*—T3 controller number.
 - *T1num*—T1 controller number.

- If specifying a virtual interface, the number range varies, depending on interface type.
- When specifying a virtual tributary group, the naming notation is *rack/slot/module/port/vtg/vt*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*—Chassis number of the rack.
 - *slot*—Physical slot number of the line card.
 - *module*—Module number or subslot (for a SPA). A physical layer interface module (PLIM) is always 0.
 - *port*—Physical port number of the interface.
 - *vtg*—Virtual tributary group.
 - *vt*—Virtual tributary instance.

To view the status of the controllers, use the **show controllers t1** command.

Task ID

Task ID	Operations
dwdm	read, write
interface	read, write
sonet-sdh	read, write

Examples

The following example shows how to clear controller data for the channelized T1 controller 1 that is located in chassis 0, for a SIP installed in slot 1 with a SPA in subslot 0, and port 0 with T3 controller 1, and channelized T1 controller 1:

```
RP/0/RSP0/CPU0:router# clear controller t1 0/1/0/0/1/1
```

Related Commands

Command	Description
controller t1, on page 1062	
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

clear controller t3

To clear T3 controller data, use the **clear controller t3** command in EXEC configuration mode.

clear controller t3 *interface-path-id*

Syntax Description

interface-path-id

Physical interface or virtual interface.

Note Use the **show controllers** command to see a list of all controllers currently configured on the router.

For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- When specifying a T3 controller, the naming notation is *rack/slot/module/port/T3num*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - rack*—Chassis number of the rack.
 - slot*—Physical slot number of the line card or SIP.
 - module*—Module number or subslot (for a SPA). A physical layer interface module (PLIM) is always 0.
 - port*—Physical port number of the interface.
 - T3num*—T3 controller number.

To view the status of the controllers, use the **show controllers t3** command.

Task ID

Task ID	Operations
dwdm	read, write
interface	read, write
sonet-sdh	read, write

Examples

The following example shows how to clear controller data for T3 controller 1 that is located in chassis 0, for a SIP installed in slot 6 with a SPA in subslot 2, and port 0 with T3 controller 1:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/6/2/0/1
```

Related Commands

Command	Description
controller t3, on page 1064	Configures a T3 controller and enters T3 configuration mode.
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

clock source (T1/E1)

To set clocking for individual T1 or E1 links, use the **clock source** command in T1 or E1 configuration mode. To return to the default, use the **no** form of this command.

clock source {**internal**| **line**}

no clock source

Syntax Description

internal	Specifies that the clock is generated from the internal clock of the T1 or E1 controller. The default is internal.
Note	When configuring clocking on a serial link, you need to configure one end to be internal and the other end to be line . If you configure internal clocking on both ends of a connection, framing slips occur. If you configure line clocking on both ends of a connection, the line does not come up.
line	Specifies that the clock on this controller derives its clocking from the external source to which the controller is connected, which is generally the telephone company central office (CO).

Command Default

The default clock source is internal.

Command Modes

T1 configuration
E1 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E1 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to set the clocking on the T1 controller in slot 6, subslot 0 to internal:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/1/1  
RP/0/RSP0/CPU0:router(config-t1e1)# clock source internal
```

Related Commands

Command	Description
controller e1, on page 1058	Configures an E1 controller and enters E1 configuration mode.
controller t1, on page 1062	

clock source (T3/E3)

To set clocking for individual T3 or E3 links, use the **clock source** command in T3 or E3 configuration mode. To return to the default, use the **no** form of this command.

clock source {**internal**| **line**}

no clock source

Syntax Description

internal	Specifies that the clock is generated from the internal clock of the T3 controller. The default is internal .
Note	When configuring clocking on a serial link, you need to configure one end to be internal and the other end to be line . If you configure internal clocking on both ends of a connection, framing slips occur. If you configure line clocking on both ends of a connection, the line does not come up.
line	Specifies that the clock on this controller derives its clocking from the external source to which the controller is connected, which is generally the telephone company central office (CO).

Command Default

The default clock source is **internal**.

Command Modes

T3 configuration
E3 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you do not specify the **clock source** command, the default clock source is used.

Configure the **clock source line** command if your telephone company or the remote data service unit provides the master clock of the T3 or E3 connection.

Configure the **clock source internal** command if your router provides the master clock of the T3 or E3 connection.

**Note**

For a back-to-back connection between two T3 network modules, one controller must be configured for internal clocking while the other controller must be configured for line clocking.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to set the clocking to line on the T3 controller 1 that is located in chassis 0, on a SIP installed in slot 6 with a SPA in subslot 0, on port 0 with T3 controller 1:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/6/0/0/1
RP/0/RSP0/CPU0:router(config-t3)# clock source line
```

Related Commands

Command	Description
controller e3, on page 1060	Configures an E3 controller and enters E3 configuration mode.
controller t3, on page 1064	Configures a T3 controller and enters T3 configuration mode.

controller e1

To configure an E1 controller and enter E1 configuration mode, use the **controller e1** command in global configuration mode. To return to the default state, use the **no** form of this command.

controller e1 *interface-path-id*

no controller e1 *interface-path-id*

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface.
Note	Use the show controllers command to see a list of all controllers currently configured on the router.
	For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

The **controller e1** command is used in configurations in which the router is intended to communicate with an E1 fractional data line. The **controller e1** command is available only on channelized interfaces.

Use the **mode** command in T3 configuration mode to specify the mode for the port. The default mode for 2-Port and 4-Port Channelized T3 SPAs is T1.

**Note**

If you do not use the **mode** command to define the port to be E1, you cannot configure the E1 controller.

To view the status of the controllers, use the **show controllers e1** command.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enter E1 configuration mode for a controller:

```
RP/0/RSP0/CPU0:router(config)# controller e1 0/1/0/0  
RP/0/RSP0/CPU0:router(config-e1)#
```

Related Commands

Command	Description
mode, on page 1117	Sets the mode of the T3/E3 or T1/E1 controller.
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.

controller e3

To configure an E3 controller and enter E3 configuration mode, use the **controller e3** command in global configuration mode. To return to the default state, use the **no** form of this command.

controller e3 *interface-path-id*

no controller e3 *interface-path-id*

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface.
Note	Use the show controllers command to see a list of all controllers currently configured on the router.
	For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

To view the status of the controllers, use the **show controllers e3** command.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enter E3 configuration mode for a controller in slot 6, on the SPA in subslot 2, on E3 controller 0:

```
RP/0/RSP0/CPU0:router(config)# controller e3 0/6/2/0
RP/0/RSP0/CPU0:router(config-e3)#
```

Related Commands

Command	Description
show controllers e3 , on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.

controller t1

To configure a T1 controller and enter T1 configuration mode, use the **controller t1** command in global configuration mode. To return to the default state, use the **no** form of this command.

controller t1 *interface-path-id*

no controller t1 *interface-path-id*

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface.
Note	Use the show controllers command to see a list of all controllers currently configured on the router.
	For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When specifying a channelized T1 controller, use the following guidelines for the *interface-path-id*:

- The naming notation is *rack/slot/module/port/T3Num/T1num*.
- The slash between values is required as part of the notation.
- The following list describes the components of the notation:
 - *rack*—Chassis number of the rack.
 - *slot*—Physical slot number of the line card.
 - *module*—Module number or subslot (for a SPA). A physical layer interface module (PLIM) is always 0.
 - *port*—Physical port number of the interface.
 - *T3num*—T3 controller number.

- *Tlnum*—T1 controller number.
- If specifying a virtual interface, the number range varies, depending on interface type.
- When specifying a virtual tributary group, the naming notation is *rack/slot/module/port/vtg/vt*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*—Chassis number of the rack.
 - *slot*—Physical slot number of the line card.
 - *module*—Module number or subslot (for a SPA). A physical layer interface module (PLIM) is always 0.
 - *port*—Physical port number of the interface.
 - *vtg*—Virtual tributary group.
 - *vt*—Virtual tributary instance.

The **controller t1** command is used in configurations in which the router is intended to communicate with a T1 fractional data line. The **controller t1** command is available only on channelized SPAs.

Use the **mode** command in T3 configuration mode to specify the mode for each T3 port.

To view the status of the controllers, use the **show controllers t1** command.

If the T1 framing type is super frame (SF), you should consider disabling yellow alarm detection as the yellow alarm can be incorrectly detected with SF framing.

Serial interface may flap and eventually, go down if yellow alarm detection is not disabled on its T1 controller configured with SF framing.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enter T1 configuration mode for a controller:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/1/0/0/1
RP/0/RSP0/CPU0:router(config-t1)#
```

Related Commands

Command	Description
mode , on page 1117	Sets the mode of the T3/E3 or T1/E1 controller.
show controllers t1 , on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

controller t3

To configure a T3 controller and enter T3 configuration mode, use the **controller t3** command in global configuration mode. To return to the default state, use the **no** form of this command.

controller t3 *interface-path-id*

no controller t3 *interface-path-id*

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface.
Note	Use the show controllers command to see a list of all controllers currently configured on the router.
	For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- When specifying a T3 controller, the naming notation is *rack/slot/module/port/T3num*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - rack*—Chassis number of the rack.
 - slot*—Physical slot number of the line card or SIP.
 - module*—Module number or subslot (for a SPA). A physical layer interface module (PLIM) is always 0.
 - port*—Physical port number of the interface.
 - T3num*—T3 controller number.

- If specifying a virtual interface, the number range varies, depending on interface type.

To view the status of the controllers, use the **show controllers t3** command.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enter T3 configuration mode for T3 controller 1 that is located in chassis 0, for a SIP installed in slot 6 with a SPA in subslot 2, and port 0 with T3 controller 1:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/6/2/0/1  
RP/0/RSP0/CPU0:router(config-t3)#
```

Related Commands

Command	Description
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

delay clear (T1/E1)

To configure the amount of time before a T1 or E1 path delay trigger alarm is cleared, use the **delay clear** command in T1 or E1 configuration mode. To return the command to its default setting, use the **no** form of this command.

delay clear *value*

no delay clear *value*

Syntax Description

<i>value</i>	Value, in milliseconds, before a T1 path delay trigger alarm is cleared. The range is from 0 through 180000. The default is 10 seconds.

Command Default

The default is 10 seconds.

Command Modes

T1 configuration

E1 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E1 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to specify that T1 path delay trigger alarms should be cleared after 9000 seconds:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/4/2/0/1
RP/0/RSP0/CPU0:router(config-t1)#delay clear 9000
```


Related Commands

Command	Description
delay trigger (T1/E1) , on page 1070	Configures a time value for the T1 or E1 path delay trigger.

delay clear (T3/E3)

To configure the amount of time before a T3 or E3 path delay trigger alarm is cleared, use the **delay clear** command in T3 or E3 configuration mode. To return the command to its default setting, use the **no** form of this command.

delay clear *value*

no delay clear *value*

Syntax Description

<i>value</i>	Value, in milliseconds, before a T3 or E3 path delay trigger alarm is cleared. The range is from 0 through 180000. The default is 10 seconds.

Command Default

The default is 10 seconds.

Command Modes

T3 configuration
E3 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to specify that T3 path delay trigger alarms should be cleared after 9000 seconds:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/4/2/0/1
RP/0/RSP0/CPU0:router(config-t3)# delay clear 9000
```

Related Commands

Command	Description
delay trigger (T3/E3) , on page 1072	Configures a time value for the T3 or E3 path delay trigger.

delay trigger (T1/E1)

To configure a time value for the T1 or E1 path delay trigger, use the **delay trigger** command in T1 or E1 configuration mode. To return the command to its default setting, use the **no** form of this command.

delay trigger *value*

no delay trigger

Syntax Description

<i>value</i>	Sets the T1 path delay trigger value, in milliseconds. The range is from 0 through 60000. The default is 2.5 seconds.

Command Default

The default is 2.5 seconds.

Command Modes

T1 configuration

E1 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E1 configuration was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the timer for the T1 or E1 path delay trigger expires, an alarm is declared.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to set the T1 path delay trigger to 8000 milliseconds:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/4/2/0/1/1
RP/0/RSP0/CPU0:router(config-t1)# delay trigger 8000
```

Related Commands

Command	Description
delay clear (T1/E1) , on page 1066	Configures the amount of time before a T1 or E1 path delay trigger alarm is cleared.

delay trigger (T3/E3)

To configure a time value for the T3 or E3 path delay trigger, use the **delay trigger** command in T3 or E3 configuration mode. To return the command to its default setting, use the **no** form of this command.

delay trigger *value*

no delay trigger

Syntax Description

<i>value</i>	Sets the T3 path delay trigger value, in milliseconds. The range is from 0 through 60000. The default is 2.5 seconds.

Command Default

The default is 2.5 seconds.

Command Modes

T3 configuration
E3 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 configuration was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the timer for the T3 or E3 path delay trigger expires, an alarm is declared.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to set the T3 path delay trigger to 8000 milliseconds:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/4/2/0/1
RP/0/RSP0/CPU0:router(config-t3)# delay trigger 8000
```

Related Commands

Command	Description
delay clear (T3/E3), on page 1068	Configures the amount of time before a T3 or E3 path delay trigger alarm is cleared.

description (T1/E1)

To configure a description for a T1 or E1 controller, use the **description** command in T1 or E1 configuration mode. To delete a T1 or E1 controller description, use the **no** form of this command.

description *text*

no description [*text*]

Syntax Description

<i>text</i>	A text string comprised of alphanumeric characters.

Command Default

No description is configured.

Command Modes

T1 configuration
E1 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E1 configuration was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sonet-sdh	read, write
interface	read, write

Examples

The following example shows how to configure a description for a T1 controller:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/2/0
RP/0/RSP0/CPU0:router(config-t1)# description This is a sample description for T1 controller
0/6/2/0
```


Related Commands

Command	Description
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

description (T3/E3)

To configure a description for a T3 or E3 controller, use the **description** command in T3 or E3 configuration mode. To delete a T3 controller description, use the **no** form of this command.

description *text*

no description [*text*]

Syntax Description

<i>text</i>	A text string comprised of alphanumeric characters.

Command Default

No description is configured.

Command Modes

T3 configuration
E3 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sonet-sdh	read, write
interface	read, write

Examples

The following example shows how to configure a description for a T3 controller:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/6/2/0
RP/0/RSP0/CPU0:router(config-t3)# description This is a sample description for T3 controller
0/6/2/0
```

Related Commands

Command	Description
show controllers e3, on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

down-when-looped (T1/E1)

To configure a T1 or E1 controller to inform the system that it is down when loopback is detected, use the **down-when-looped** command in T1 or E1 configuration mode.

down-when-looped

Syntax Description

This command has no keywords or arguments.

Command Default

By default, a T1 or E1 controller does not inform the system that it is down when loopback is detected.

Command Modes

T1 configuration
E1 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E1 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command does not have a **no** form.

Task ID

Task ID	Operations
sonet-sdh	read, write
interface	read, write

Examples

The following example shows how to configure a T1 controller to inform the system that the associated line is down if a loopback is detected:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/4/2/0/1
RP/0/RSP0/CPU0:router(config-t1)# down-when-looped
```

down-when-looped is a traffic-affecting operation if any loopback is present

Related Commands

Command	Description
loopback (T1/E1), on page 1111	Loops individual T1 or E1 channels on the channelized T3 controller.

down-when-looped (T3/E3)

To configure a T3 or E3 controller to inform the system that it is down when loopback is detected, use the **down-when-looped** command in T3 or E3 configuration mode.

down-when-looped

Syntax Description

This command has no keywords or arguments.

Command Default

By default, a T3 or E3 controller does not inform the system that it is down when loopback is detected.

Command Modes

T3 configuration
E3 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command does not have a **no** form.

Task ID

Task ID	Operations
sonet-sdh	read, write
interface	read, write

Examples

The following example shows how to configure a T3 controller to inform the system that the associated line is down if a loopback is detected:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/4/2/0
RP/0/RSP0/CPU0:router(config-t3)# down-when-looped
```

down-when-looped is a traffic-affecting operation if any loopback is present

Related Commands

Command	Description
loopback (T3/E3), on page 1113	Loops the entire T3 or E3 line on the T3 controller or E3 controller.

dsu bandwidth

To specify the maximum allowable bandwidth used by a T3 or an E3 controller, use the **dsu bandwidth** command in T3 or E3 configuration mode. To return to the default state, use the **no** form of this command.

dsu bandwidth kbps

no dsu bandwidth

Syntax Description

<i>kbps</i>	Maximum bandwidth, in kilobits per second (kbps). Range is from 75 to 44210. The default is 44210.

Command Default

The default bandwidth is 44210.

Command Modes

T3 configuration

E3 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The local interface configuration must match the remote interface configuration. For example, if you reduce the maximum bandwidth to 16,000 on the local port, you must also do the same on the remote port.

The **dsu bandwidth** command reduces the bandwidth by padding the E3 and T3 frame.

To verify the data service unit (DSU) bandwidth configured on the interface, use the **show controllers t3** or **show controllers e3** command in EXEC mode.

When G.751 framing is used on E3 links, DSU bandwidth can be used to select a payload subrate from 34,010 kbps down to 22 kbps. Before framing bypass can be used, a DSU bandwidth of 34,010 kbps must be configured.

Although software allows the user to configure a continuous range of bandwidths in subrate modes, vendors support bandwidths only in quantums (for example, in a ADC Kentrox T3 link, bandwidth must be in multiples of 500 kbps). Therefore, the software sets the user-configured bandwidth to the closest vendor-supported bandwidth. Use the **show controllers t3** or **show controllers e3** command to display the actual bandwidth that is configured.

The following table shows DSU modes and vendor-supported bandwidths.

Table 67: DSU Modes and Vendor-supported Bandwidths

Mode	Bandwidth (in kbps)	Bandwidth Multiples (in kbps)
Digital Link or Cisco	358–34010 for E3300–44210 for T3	358 300.746
ADC Kentrox T3 IDSU	1000–34010 for E31500–44210 for T3	500 500
Larscom Access T45	3100–44210 kbps	3158
Adtran T3SU 300	75–44210 kbps	75.186
Verilink HDM 2182	1500–44210 kbps	1579

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to set the maximum allowable DSU bandwidth to 16,000 kbps on a SIP in slot 6, on the SPA in subslot 2, for port 0, and T3 controller 1:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/6/2/0/1
RP/0/RSP0/CPU0:router(config-t3)# dsu bandwidth 16000
```

Related Commands

Command	Description
show controllers e3, on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

dsu mode

To specify the interoperability mode used by a T3 or an E3 controller, use the **dsu mode** command in T3 or E3 configuration mode. To return to the default state, use the **no** form of this command.

dsu mode mode

no dsu mode

Syntax Description

<i>mode</i>	DSU mode. Valid values are as follows:
	• (T3 only) adtran • cisco • digital-link • kentrox • (T3 only) larscom • (T3 only) verilink
	The default is cisco.

Command Default

The default is cisco.

Command Modes

T3 configuration
E3 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Refer to [Table 67: DSU Modes and Vendor-supported Bandwidths, on page 1083](#) for more information regarding the modes.

The local interface configuration must match the remote interface configuration. For example, if you define the data service unit (DSU) interoperability mode as **digital-link** on the local port, you must also do the same on the remote port.

You must know what type of DSU is connected to the remote port to determine if it interoperates with a T3 or an E3 controller. The **dsu mode** command enables and improves interoperability with other DSUs.

To verify the DSU mode configured on the interface, use the **show controllers t3** command in EXEC mode.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to set the DSU mode to **digital-link** for T3 controller 1 located in chassis 0, on a SIP in slot 6 and SPA in subslot 2, and port 0 with T3 controller 1:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/6/2/0/1
RP/0/RSP0/CPU0:router(config-t3)# dsu mode digital-link
```

Related Commands

Command	Description
show controllers e3, on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

dsu remote

To control the bandwidth usage with the remote port, use the **dsu remote** command in T3 or E3 configuration mode. To return to the default state, use the **no** form of this command.

dsu remote {disable| fullrate}

no dsu remote

Syntax Description

disable	Denies incoming remote requests to reset the bandwidth to the full rate.
fullrate	Requests that the remote port set its bandwidth to full rate.

Command Default

Remote accept is the default.

Command Modes

T3 configuration
E3 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To verify the DSU remote settings configured on the interface, use the **show controllers t3** command in EXEC mode.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to specify that the connected remote port set its bandwidth to full rate:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/6/2/0
```

```
RP/0/RSP0/CPU0:router(config-t3)# dsu remote fullrate
```

Related Commands

Command	Description
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

fdl

To enable or disable the transmission of performance reports through Facility Data Link (FDL) for a T1 channel on the channelized T3 interface, use the **fdl** command in T1 configuration mode. To return to the default state of performance reporting, use the **no** form of this command.

fdl {ansi| att} {enable| disable}

no fdl {ansi| att} {enable| disable}

Syntax Description

ansi	Specifies the transmission of ANSI T1.403 once-per-second performance reports.
att	Specifies the transmission of AT&T TR54016 once-per-second performance reports.
enable	Enables transmission of the specified performance reports.
disable	Disables transmission of the specified performance reports. The default is disable.

Command Default

The transmission of ANSI T1.403 and AT&T TR54016 performance reports through FDL are disabled.

Command Modes

T1 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **fdl** command applies only to T1 lines and can be used only if the T1 framing type is Extended Super Frame (ESF).

To display the performance report information, use the **show controllers t1** command.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to enable ANSI T1.403 performance reports for T1 channel 10:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/1/10  
RP/0/RSP0/CPU0:router(config-t1e1)# fdl ansi enable
```

Related Commands

Command	Description
show controllers t1 , on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

framing (E1)

To select the frame type for an E1 data line, use the **framing** command in E1 configuration mode. To disable E1 framing, use the **no** form of this command.

framing {crc4| no-crc4| unframed}

no framing {crc4| no-crc4| unframed}

Syntax Description

crc4	Specifies framing with CRC-4 error-monitoring capabilities. The default is crc4 .
no-crc4	Specifies framing without CRC-4 error-monitoring capabilities.
unframed	Specifies unframed E1.

Command Default

The default is **crc4**.

Command Modes

E1 configuration

Command History

Release	Modification
Release 4.0.0	This commnad was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **framing** command in configurations in which the router or access server is intended to communicate with E1 fractional data lines. The service provider determines the framing type required for your E1 circuit.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to select E1 framing without CRC-4 error-monitoring capabilities:

```
RP/0/RSP0/CPU0:router(config)# controller e1 0/6/0/0/10
RP/0/RSP0/CPU0:router(config-t1e1)# framing no-crc4
```


Related Commands

Command	Description
show controllers e1 , on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.

framing (E3)

To select the frame type for E3 data lines, use the **framing** command in E3 configuration mode. To disable E3 framing, use the **no** form of this command.

framing {g751| g832}

no framing {g751| g832}

Syntax Description

g751	Specifies that G.751 framing is used as the E3 framing type. The default is G.751.
g832	Specifies that G.832 framing is used as the E3 framing type.

Command Default

The default is G.751.

Command Modes

E3 configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you do not use the **framing** command, the default is used by the E3 controllers to automatically determine the framing type received from the far-end equipment. You can also set the framing for each T1/E1 channel by using the **framing** command in T1 or E1 configuration mode.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to select G751 as the E3 frame type:

```
RP/0/RSP0/CPU0:router(config)# controller e3 0/6/0/0
RP/0/RSP0/CPU0:router(config-e3)# framing g751
```

Related Commands

Command	Description
show controllers e3, on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.

framing (T1)

To select the frame type for a T1 data line, use the **framing** command in T1 configuration mode. To disable T1 framing, use the **no** form of this command.

framing {esf| sf}

no framing {esf| sf}

Syntax Description

esf	Specifies extended super frame as the T1 frame type. The default is esf .
sf	Specifies super frame as the T1 frame type.

Command Default

The default is **esf**.

Command Modes

T1 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **framing** command in configurations in which the router or access server is intended to communicate with T1 fractional data lines. The service provider determines the framing type required for your T1 circuit.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to select super frame as the T1 frame type:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/10
RP/0/RSP0/CPU0:router(config-t1)# framing sf
```

Related Commands

Command	Description
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

framing (T3)

To select the frame type for T3 data lines, use the **framing** command in T3 configuration mode. To disable T3 framing, use the **no** form of this command.

framing {c-bit| m23}

no framing {c-bit| m23}

Syntax Description

c-bit	Specifies that C-bit framing is used as the T3 framing type. The default is c-bit .
m23	Specifies that M23 framing is used as the T3 framing type.

Command Default

The default is **c-bit**.

Command Modes

T3 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you do not use the **framing** command, the default is used by the T3 controllers to automatically determine the framing type received from the far-end equipment. You can also set the framing for each T1 or E1 channel by using the **framing** command in T1 or E1 configuration mode.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to select M23 as the T3 frame type:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/6/0/0/1
RP/0/RSP0/CPU0:router(config-t3)# framing m23
```

Related Commands

Command	Description
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

linecode

To select the line-code type for T1 or E1 lines, use the **linecode** command in T1 or E1 configuration mode. To return the line to the default line-code type, use the **no** form of this command.

linecode {ami| b8zs| hdb3}

no linecode {ami| b8zs| hdb3}

Syntax Description

ami	Specifies alternate mark inversion (AMI) as the line-code type. This value is the default for E1 lines.
b8zs	(T1 only) Specifies B8ZS as the line-code type. This value is the default for T1 lines.
hdb3	(E1 only) Specifies high-density bipolar 3 (HDB3) as the line-code type.

Command Default

T1 lines: the default is B8ZS.

E1 lines: the default is AMI.

Command Modes

T1 configuration

E1 configuration

Command History

Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E1 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use this command in configurations where the router must communicate with T1 or E1 fractional data lines. The T1 or E1 service provider determines which line-code type is required for your T1 or E1 circuit.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to select AMI as the T1 line-code type:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/1/1
RP/0/RSP0/CPU0:router(config-t1)# linecode ami
```

The following example shows how to select HDB3 as the E1 line-code type:

```
RP/0/RSP0/CPU0:router(config)# controller e1 0/4/1/1
RP/0/RSP0/CPU0:router(config-e1)# linecode hdb3
```

Related Commands

Command	Description
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

Inm major-warning

To enable link noise monitoring and specify thresholds for noise errors on T1/E1 links that are used to signal major warning events and recovery from those events, use the **lnm major-warning** command in T1 or E1 controller configuration mode. To disable link noise monitoring major warnings, use the **no** form of this command.

lnm major-warning [{**clear**|**set**} [**line-code-violation** *lcv-value* [**path-code-violation** *pcv-value*]] [**duration** *seconds*]]

no lnm major-warning [{**clear**|**set**} [**line-code-violation** *lcv-value* [**path-code-violation** *pcv-value*]] [**duration** *seconds*]]

Syntax Description

clear	(Optional) Specifies threshold values for Line Code Violation (LCV) and Path Code Violation (PCV) errors that are used to determine when a recovery from a major warning has occurred and a “cleared” event is signalled. The clear threshold values cannot exceed the set threshold values.
set	(Optional) Specifies the high threshold values for LCV and PCV that are used to signal a major warning event on the link. When errors on the link are greater than or equal to these values, a major warning occurs and a “crossed” event is signalled.
line-code-violation <i>lcv-value</i>	(Optional) Specifies the threshold value for LCV errors (Bi-Polar Violation [BPV] or Excessive Zeroes [EXZ]), in the following possible ranges: • For T1 links, the range is 5 to 1544. The default is 1544. • For E1 links, the range is 7 to 2048. The default is 2048.
path-code-violation <i>pcv-value</i>	(Optional) Specifies the threshold value for PCV errors (CRC errors), in the following possible ranges: • For T1 links, the range is 3 to 320. The default is 320. • For E1 links, the range is 5 to 832. The default is 831.
duration <i>seconds</i>	(Optional) Specifies the period of time (in seconds) during which the number of link noise errors must continuously exceed the set threshold levels to signal a major warning, or remain below the clear threshold levels to signal a cleared event. The range is 4 to 600. The default is 10.

Command Default

Link noise monitoring is disabled.

If the **lnm major-warning** command is run without specifying **set** or **clear** options, then **set** is used as the default option with its default values. The **clear** option inherits the same threshold values as the default **set** threshold values.

If the **lnm major-warning** command is run and only the **set** option is configured, the threshold values defined for the **set** option are also used as the **clear** threshold values. Alternatively, if the **lnm major-warning** command is run and only the **clear** option is configured, the threshold values defined for the **clear** option are also used as the **set** threshold values.

Command Modes

T1 configuration
E1 configuration

Command History

Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command can only be configured on full T1 or E1 channel groups; it is not supported on fractional, or DS0 links.

The **lnm major-warning** command cannot be configured with the **lnm remove** command—they are mutually exclusive.

The major threshold values must be greater than the values configured in the **lnm minor-warning** command.

LNM supports hierarchical level alarm reporting as defined in the Telcordia (Bellcore) GR-253 standard. Hierarchical alarm reporting means that whenever a higher alarm is asserted, the lower alarm state is suppressed. When the high alarm is cleared, the lower alarm will re-assert if the condition still exists.

For LNM, this means that if a major warning threshold is exceeded resulting in a crossed event and alarm state reached, then a minor warning alarm state is suppressed and placed in stable state. The minor crossed event also is removed from the bistate log. Only a single crossed event for major warnings will appear in the bistate log for the controller. When the major warning is cleared, the minor warning alarm is asserted if the condition still exists.

Task ID

Task ID	Operation
sonet-sdh	read, write

Examples

The following example shows how to enable link noise monitoring on a T1 channel group using the default values for the set and clear threshold values of 1544 LCVs and 320 PCVs for a duration of 10 seconds:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/1/1
RP/0/RSP0/CPU0:router(config-t1)# lnm major-warning
```

The following example shows how to specify set and clear thresholds on an E1 channel group:

```
RP/0/RSP0/CPU0:router(config)# controller e1 0/3/0/0/0/1
RP/0/RSP0/CPU0:router(config-e1)# lnm major-warning set line-code-violation 1500
path-code-violation 100 duration 30
```

```
RP/0/RSP0/CPU0:router(config-e1)# lnm major-warning clear line-code-violation 1400
path-code-violation 95 duration 30
```

Related Commands

Command	Description
clear controller lnm, on page 1047	Clears link noise monitoring statistics or resets states.
controller e1, on page 1058	Configures an E1 controller and enters E1 configuration mode.
controller t1, on page 1062	
lnm minor-warning, on page 1103	Enables link noise monitoring and specifies thresholds for noise errors on T1/E1 links that are used to signal minor warning events and recovery from those events.
lnm syslog, on page 1109	Enables logging of link noise monitoring major, remove, and minor events and alarms.
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers lnm, on page 1130	Displays information about LNM on T1 or E1 links.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

lnm minor-warning

To enable link noise monitoring and specify thresholds for noise errors on T1/E1 links that are used to signal minor warning events and recovery from those events, use the **lnm minor-warning** command in T1 or E1 controller configuration mode. To disable link noise monitoring minor warnings, use the **no** form of this command.

lnm minor-warning [{clear|set} [line-code-violation *lcv-value* [path-code-violation *pcv-value*]] [duration *seconds*]]

no lnm minor-warning [{clear|set} [line-code-violation *lcv-value* [path-code-violation *pcv-value*]] [duration *seconds*]]

Syntax Description

clear	(Optional) Specifies threshold values for Line Code Violation (LCV) and Path Code Violation (PCV) errors that are used to determine when a recovery from a minor warning has occurred and a “cleared” event is signalled. The clear threshold values cannot exceed the set threshold values.
set	(Optional) Specifies the high threshold values for LCV and PCV that are used to signal a minor warning event on the link. When errors on the link are greater than or equal to these values, a minor warning occurs and a “crossed” event is signalled.
line-code-violation <i>lcv-value</i>	(Optional) Specifies the threshold value for LCV errors (Bi-Polar Violation [BPV] or Excessive Zeroes [EXZ]), in the following possible ranges: • For T1 links, the range is 5 to 1544. The default is 154. • For E1 links, the range is 7 to 2048. The default is 205.
path-code-violation <i>pcv-value</i>	(Optional) Specifies the threshold value for PCV errors (CRC errors), in the following possible ranges: • For T1 links, the range is 3 to 320. The default is 145. • For E1 links, the range is 5 to 832. The default is 205.
duration <i>seconds</i>	(Optional) Specifies the period of time (in seconds) during which the number of link noise errors must continuously exceed the set threshold levels to signal a minor warning, or remain below the clear threshold levels to signal a cleared event. The range is 4 to 600. The default is 10.

Command Default

Link noise monitoring is disabled.

If the **lnm minor-warning** command is run without specifying **set** or **clear** options, then **set** is used as the default option with its default values. The **clear** option inherits the same threshold values as the default **set** threshold values.

If the **lnm minor-warning** command is run and only the **set** option is configured, the threshold values defined for the **set** option are also used as the **clear** threshold values. Alternatively, if the **lnm minor-warning** command is run and only the **clear** option is configured, the threshold values defined for the **clear** option are also used as the **set** threshold values.

Command Modes

T1 configuration
E1 configuration

Command History

Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command can only be configured on full T1 or E1 channel groups; it is not supported on fractional, or DS0 links.

The minor threshold values cannot be greater than the values configured in the **lnm major-warning** command.

LNM supports hierarchical level alarm reporting as defined in the Telcordia (Bellcore) GR-253 standard. Hierarchical alarm reporting means that whenever a higher alarm is asserted, the lower alarm state is suppressed. When the high alarm is cleared, the lower alarm will re-assert if the condition still exists.

For LNM, this means that if a major warning threshold is exceeded resulting in a crossed event and alarm state reached, then a minor warning alarm state is suppressed and placed in stable state. The minor crossed event also is removed from the bistate log. Only a single crossed event for major warnings will appear in the bistate log for the controller. When the major warning is cleared, the minor warning alarm is asserted if the condition still exists.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to enable link noise monitoring on a T1 channel group using the default values for the set and clear threshold values of 154 LCVs and 145 PCVs for a duration of 10 seconds:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/1/1
RP/0/RSP0/CPU0:router(config-t1)# lnm minor-warning
```

The following example shows how to specify set and clear thresholds on an E1 channel group:

```
RP/0/RSP0/CPU0:router(config)# controller e1 0/3/0/0/0/1
RP/0/RSP0/CPU0:router(config-e1)# lnm minor-warning set line-code-violation 200
path-code-violation 80 duration 30
RP/0/RSP0/CPU0:router(config-e1)# lnm minor-warning clear line-code-violation 150
path-code-violation 75 duration 30
```

Related Commands

Command	Description
clear controller lnm, on page 1047	Clears link noise monitoring statistics or resets states.
controller e1, on page 1058	Configures an E1 controller and enters E1 configuration mode.
controller t1, on page 1062	
lnm major-warning, on page 1100	Enables link noise monitoring and specifies thresholds for noise errors on T1/E1 links that are used to signal major warning events and recovery from those events.
lnm remove, on page 1106	Enables link noise monitoring and specifies thresholds for noise errors on T1/E1 links that are used to signal the noise attribute to PPP for removal of an MLPPP bundle link.
lnm syslog, on page 1109	Enables logging of link noise monitoring major, remove, and minor events and alarms.
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers lnm, on page 1130	Displays information about LNM on T1 or E1 links.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

Inm remove

To enable link noise monitoring and specify thresholds for noise errors on T1/E1 links that are used to signal the noise attribute to the Point-to-Point Protocol (PPP) for removal of a Multilink PPP (MLPPP) bundle link, use the **Inm remove** command in T1 or E1 controller configuration mode. To disable link removal signaling based on LNM thresholds, use the **no** form of this command.

Inm remove [{**clear**|**set**} [**line-code-violation** *lcv-value* [**path-code-violation** *pcv-value*]] [**duration** *seconds*]]

no Inm remove [{**clear**|**set**} [**line-code-violation** *lcv-value* [**path-code-violation** *pcv-value*]] [**duration** *seconds*]]

Syntax Description

clear	(Optional) Specifies threshold values for Line Code Violation (LCV) and Path Code Violation (PCV) errors that are used to determine when a recovery from a set threshold has occurred and a “cleared” event is signalled. The clear threshold values cannot exceed the set threshold values.
set	(Optional) Specifies the high threshold values for LCV and PCV that are used to signal the noise attribute to PPP on the link. When errors on the link are greater than or equal to these values, the noise attribute is set and a “crossed” event is signalled.
line-code-violation <i>lcv-value</i>	(Optional) Specifies the threshold value for LCV errors (Bi-Polar Violation [BPV] or Excessive Zeroes [EXZ]), in the following possible ranges: • For T1 links, the range is 5 to 1544. The default is 1544. • For E1 links, the range is 7 to 2048. The default is 2048.
path-code-violation <i>pcv-value</i>	(Optional) Specifies the threshold value for PCV errors (CRC errors), in the following possible ranges: • For T1 links, the range is 3 to 320. The default is 320. • For E1 links, the range is 5 to 832. The default is 831.
duration <i>seconds</i>	(Optional) Specifies the period of time (in seconds) during which the number of link noise errors must continuously exceed the set threshold levels to signal the noise attribute, or remain below the clear threshold levels to signal a cleared event. The range is 4 to 600. The default is 10.

Command Default

Link noise monitoring is disabled.

If the **Inm remove** command is run without specifying **set** or **clear** options, then **set** is used as the default option with its default values. The **clear** option inherits the same threshold values as the default **set** threshold values.

If the **Inm remove** command is run and only the **set** option is configured, the threshold values defined for the **set** option are also used as the **clear** threshold values. Alternatively, if the **Inm remove** command is run and

only the **clear** option is configured, the threshold values defined for the **clear** option are also used as the **set** threshold values.

Command Modes

T1 configuration

E1 configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command can only be configured on full T1 or E1 channel groups; it is not supported on fractional, or DS0 links.

The **lnm remove** command cannot be configured with the **lnm major-warning** command—they are mutually exclusive.

The remove threshold values must be greater than the values configured in the **lnm minor-warning** command.

LNМ supports hierarchical level alarm reporting as defined in the Telcordia (Bellcore) GR-253 standard. Hierarchical alarm reporting means that whenever a higher alarm is asserted, the lower alarm state is suppressed. When the high alarm is cleared, the lower alarm will re-assert if the condition still exists.

For LNM, this means that if a remove threshold is exceeded resulting in a crossed event and alarm state reached, then a minor warning alarm state is suppressed and placed in stable state. The minor crossed event also is removed from the bistate log. Only a single crossed event for major warnings will appear in the bistate log for the controller. When the major warning is cleared, the minor warning alarm is asserted if the condition still exists.

Task ID

Task ID	Operation
sonet-sdh	read, write

Examples

The following example shows how to enable link noise monitoring to signal the noise attribute to PPP for link removal on a T1 channel group using the default values for the set and clear threshold values of 1544 LCVs and 320 PCVs for a duration of 10 seconds:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/1/1
RP/0/RSP0/CPU0:router(config-t1)# lnm remove
```

The following example shows how to specify set and clear thresholds for link noise monitoring on an E1 channel group to signal the noise attribute to PPP for link removal:

```
RP/0/RSP0/CPU0:router(config)# controller e1 0/3/0/0/0/1
```

```
RP/0/RSP0/CPU0:router(config-e1)# lnm remove set line-code-violation 1500 path-code-violation
100 duration 30
RP/0/RSP0/CPU0:router(config-e1)# lnm remove clear line-code-violation 1400
path-code-violation 95 duration 30
```

Related Commands

Command	Description
clear controller lnm, on page 1047	Clears link noise monitoring statistics or resets states.
controller e1, on page 1058	Configures an E1 Controller and enters E1 configuration mode.
controller t1, on page 1062	
lnm minor-warning, on page 1103	Enables link noise monitoring and specifies thresholds for noise errors on T1/E1 links that are used to signal minor warning events and recovery from those events.
lnm syslog, on page 1109	Enables logging of link noise monitoring major, remove, and minor events and alarms.
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers lnm, on page 1130	Displays information about LNM on T1 or E1 links.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

lnm syslog

To enable logging of link noise monitoring major, remove, and minor events and alarms, use the **lnm syslog** command in T1 or E1 controller configuration mode. To disable logging, use the **no lnm syslog** command.

lnm syslog

no lnm syslog

Syntax Description

This command has no keywords or arguments.

Command Default

Logging of link noise monitoring messages and events is disabled.

Command Modes

T1 configuration

E1 configuration

Command History

Release 4.0.0

This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Caution

Enabling LNM syslog messages can produce large amounts of console messages. If you want to avoid this and disable the LNM syslog, you can use the **show controllers lnm** command to view the most recent event messages and current LNM states.

When you enable syslog messages for LNM events using the **lnm syslog** command, LNM messages will appear in both the system log and in the log events buffer. You can display LNM events in the log events buffer using the **show logging events buffer bistate-alarms-set** command, and also using the **show logging** command, which are described in the *Cisco ASR 9000 Series Aggregation Services Router System Monitoring Command Reference*.

LNM supports hierarchical level alarm reporting as defined in the Telcordia (Bellcore) GR-253 standard. Hierarchical alarm reporting means that whenever a higher alarm is asserted, the lower alarm state is suppressed. When the high alarm is cleared, the lower alarm will re-assert if the condition still exists.

For LNM, this means that if a major warning threshold is continuously met or exceeded resulting in a crossed event and alarm state, then a minor warning alarm state is suppressed and returned to stable state. The minor crossed event also is removed from the bistate log. When the major warning is cleared, the minor warning alarm is asserted if the condition still exists.

Only a single crossed event for major warnings will appear in the bistate log for the controller. Therefore, you will see only a single log message for a controller if noise exists above configured threshold values.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to enable logging of link noise monitoring events:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/1/1
RP/0/RSP0/CPU0:router(config-t1)# lnm syslog
```

```
Wed May 12 15:42:54.679 PDT
WARNING: Enabling 'lnm syslog' could result in large amount of messages depending on the
number of links configured.
```

Related Commands

Command	Description
controller e1, on page 1058	Configures an E1 controller and enters E1 configuration mode.
controller t1, on page 1062	Configures a T1 controller and enters T1 configuration mode.
lnm major-warning, on page 1100	Enables link noise monitoring and specifies thresholds for noise errors on T1/E1 links that are used to signal major warning events and recovery from those events.
lnm minor-warning, on page 1103	Enables link noise monitoring and specifies thresholds for noise errors on T1/E1 links that are used to signal minor warning events and recovery from those events.
show logging	Displays the contents of the logging buffer.
show logging events buffer	Displays messages in the logging events buffer.

loopback (T1/E1)

To loop individual T1 or E1 channels on the channelized T3 controller, use the **loopback** command in T1 or E1 configuration mode. To remove the loop, use the **no** form of this command.

```
loopback {local| network {line| payload}}| remote {line {fdl {ansi| bellcore}}| inband}| payload fdl ansi} }
no loopback {local| network {line| payload}}| remote {line {fdl {ansi| bellcore}}| inband}| payload fdl
ansi} }
```

Syntax Description

local	Loops the router output data back toward the router at the T1 framer and sends an alarm indication signal (AIS) signal out toward the network.
network {line payload}	T1 loopback with encapsulation HDLC: Loops the data back toward the network before the T1 framer and automatically sets a local loopback at the High-Level Data Link Control (HDLC) controllers (line), or loops the payload data back toward the network at the T1 framer and automatically sets a local loopback at the HDLC controllers (payload). T1 loopback with encapsulation PPP: Loops the data back toward the network before the T1 framer and automatically sets a local loopback at the PPP serial interface (line), or loops the payload data back toward the network at the T1 framer and automatically sets a local loopback at the PPP serial interface (payload).
remote line fdl	(T1 only) Sends a repeating, 16-bit Extended Superframe (ESF) data link code word (00001110 11111111 for FDL ANSI and 00010010 11111111 for FDL Bellcore) to the remote end, requesting that it enter into a network line loopback.
remote line inband	(T1 only) Sends a repeating, 5-bit inband pattern (00001) to the remote end requesting that it enter into a network line loopback.
remote payload fdl	(T1 only) Sends a repeating, 16-bit ESF data link code word (00010100 11111111) to the remote end, requesting that it enter into a network payload loopback. Enables the remote payload FDL ANSI bit loopback on the T1 channel.
ansi	(T1 only) Enables the remote line Facility Data Link (FDL) ANSI bit loopback on the T1 channel, based on the ANSI T1.403 specification.
bellcore	(T1 only) Enables the remote SmartJack loopback on the T1 channel, based on the TR-TSY-000312 specification.

Command Default

No loops are configured.

Command Modes

T1 configuration

E1 configuration

Command History

Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E1 configuration mode was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **loopback** command for troubleshooting purposes. To verify that a loopback is configured on the interface, use the **show controllers t1** or **show controllers e1** command in EXEC mode.

For E1 lines, only the **local** and **network** options are valid. For T1 lines, all listed options are valid.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to configure the T1 for a local loopback:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/10
RP/0/RSP0/CPU0:router(config-t1)# loopback local
```

Related Commands

Command	Description
framing (E1), on page 1090	Selects the frame type for an E1 data line.
framing (T1), on page 1094	Selects the frame type for a T1 data line.
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

loopback (T3/E3)

To loop the entire T3 or E3 line (all 28 T1 channels or all 21 E1 channels) on the T3 controller or E3 controller, use the **loopback** command in T3 or E3 configuration mode. To remove the loop, use the **no** form of this command.

loopback {**local**| {**network**| **remote** {**line**| **payload**}}}

no loopback

Syntax Description

local	Loops the data back toward the router and sends an alarm indication signal (AIS) out toward the network.
network { line payload }	Sets the loopback toward the network before going through the framer (line) or after going through the framer (payload).
remote { line payload }	Sends a far-end alarm control (FEAC) request to the remote end requesting that it enter into a network line loopback. FEAC requests (and therefore remote loopbacks) are possible only when the T3 is configured for C-bit framing. The M23 format does not support remote loopbacks.

Command Default

No loops are configured on the T3 line.

Command Modes

T3 configuration
E3 configuration

Command History

Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 configuration was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **loopback** command for troubleshooting purposes. To verify that a loopback is configured on the interface, use the **show controllers t3** or **show controllers e3** command in EXEC mode. Note that remote loopback is valid only in C-bit parity mode.

You can also loopback each T1 or E1 channel by using the **loopback** command in T1 or E1 configuration mode.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to configure the T3 for a local loopback:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/3/0/0
RP/0/RSP0/CPU0:router(config-t3)# loopback local
```

Related Commands

Command	Description
framing (E1), on page 1090	Selects the frame type for an E1 data line.
framing (T1), on page 1094	Selects the frame type for a T1 data line.
loopback (T1/E1), on page 1111	Loops individual T1 or E1 channels on the channelized T3 controller.
show controllers e3, on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

mdl

To configure the Maintenance Data Link (MDL) message defined in the ANSI T1.107a-1990 specification, use the **mdl** command in T3 configuration mode. To remove the message, use the **no** form of this command.

```
{mdl string {eic| fi| fic| gen-number| lic| port-number| unit} string| transmit {idle-signal| path| test-signal}
{disable| enable}}
```

```
{no mdl string {eic| fi| fic| gen-number| lic| port-number| unit} string| transmit {idle-signal| path|
test-signal} {disable| enable}}
```

Syntax Description

string eic <i>string</i>	Specifies the Equipment Identification Code; can be up to 10 characters.
string fi <i>string</i>	Specifies the Facility Identification Code sent in the MDL Path message; can be up to 38 characters.
string fic <i>string</i>	Specifies the Frame Identification Code; can be up to 10 characters.
string gen-number <i>string</i>	Specifies the Generator number string sent in the MDL Test Signal message; can be up to 38 characters.
string lic <i>string</i>	Specifies the Location Identification Code; can be up to 11 characters.
string port-number <i>string</i>	Specifies the Port number string sent in the MDL Idle Signal message; can be up to 10 characters.
string unit <i>string</i>	Specifies the Unit Identification Code; can be up to 6 characters.
transmit idle-signal	Specifies the transmission of the MDL Idle Signal message.
transmit path	Specifies the transmission of the MDL Path message.
transmit test-signal	Specifies the transmission of the MDL Test Signal message.
disable enable	Disables or enables transmission of the specified message.

Command Default

No MDL message is configured.

Command Modes

T3 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show controllers t3** command to display MDL information (received strings). MDL information is displayed only when framing is set to C-bit.

**Note**

MDL is supported only when the DS3 framing is C-bit parity.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows the **mdl** commands on a T3 controller in slot 1, subslot 2, port 0:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/1/2/0
RP/0/RSP0/CPU0:router(config-t3)# clock source line
RP/0/RSP0/CPU0:router(config-t3)# mdl string eic ID
RP/0/RSP0/CPU0:router(config-t3)# mdl string fic Building B
RP/0/RSP0/CPU0:router(config-t3)# mdl string unit ABC
RP/0/RSP0/CPU0:router(config-t3)# mdl string fi Facility Z
RP/0/RSP0/CPU0:router(config-t3)# mdl string port-number Port 7
RP/0/RSP0/CPU0:router(config-t3)# mdl transmit path enable
RP/0/RSP0/CPU0:router(config-t3)# mdl transmit idle-signal enable
```

Related Commands

Command	Description
show controllers t3 , on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

mode

To set the mode of the T3/E3 or T1/E1 controller, use the **mode** command in T3, E3, T1, or E1 configuration mode. To disable the controller mode, use the **no** form of this command.

mode {**e1**| **serial**| **t1**}

no mode {**e1**| **serial**| **t1**}

Syntax Description

e1	(T3 and E3 only) Specifies the mode of the port to be channelized E1.
serial	(T3 and E3 only) Specifies the mode of the port to be clear channel serial. The default for the 2-Port and 4-Port Clear Channel T3/E3 SPAs is serial.
t1	(T3 and E3 only) Specifies the mode of the port to be channelized T1.

Command Default

There is no default for the 2-Port Channelized OC-12/DS0 SPA.

Command Modes

T3 configuration
E3 configuration
T1 configuration
E1 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Support for E3 and E1 configuration modes was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You can change the mode of a controller only when there are no subinterfaces defined for the controller. For example, if you previously defined channelized T1 subinterfaces on a T3 interface and now you want to change this to E1 subinterfaces or a clear channel interface, you must first clear the subinterfaces. To do this, use the **no controller t1** command for all defined T1/E1 subinterfaces. If you have defined serial parameters, you also need to use the **no interface serial** command.

For channelized SPAs, you must use the **mode** command before you can configure any channelized controllers.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to change the mode of a T3 port to channelized T1:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/6/0/0
RP/0/RSP0/CPU0:router(config-t3)# mode t1
```

Related Commands

Command	Description
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers e3, on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

national bits (E1)

To specify the national reserved bits for an E1 port, use the **national bits** command in E1 configuration mode. To revert to the default national bits, use the **no** form of this command.

national bits *bits*

no national bits *bits*

Syntax Description	<i>bits</i> Bit pattern. Values can be from 0 to 31. The default is 0.					
Command Default	The default is 0, which corresponds to 0x1f.					
Command Modes	E1 configuration					
Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 4.0.0</td><td>This command was introduced.</td></tr></table>		Release	Modification	Release 4.0.0	This command was introduced.
Release	Modification					
Release 4.0.0	This command was introduced.					
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.					
Task ID	<table><tr><th>Task ID</th><th>Operations</th></tr><tr><td>sonet-sdh</td><td>read, write</td></tr></table>		Task ID	Operations	sonet-sdh	read, write
Task ID	Operations					
sonet-sdh	read, write					
Examples	The following example shows how to specify the national bits for the E1 controller: RP/0/RSP0/CPU0:router(config)# controller e1 0/6/0/0/10 RP/0/RSP0/CPU0:router(config-t1e1)# national bits 3					
Related Commands	<table><tr><th>Command</th><th>Description</th></tr><tr><td>show controllers e1, on page 1122</td><td>Displays information about the E1 links and hardware and software drivers for the E1 controller.</td></tr></table>		Command	Description	show controllers e1 , on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
Command	Description					
show controllers e1 , on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.					

national bits (E3)

To enable or disable the national reserved bit pattern on an E3 port, use the **national bits** command in E3 configuration mode. To revert to the default value, use the **no** form of this command.

national bits {**disable**|**enable**}

no national bits {**disable**|**enable**}

Syntax Description

disable	Disables national reserved bits for an E3 port.
enable	Enables national reserved bits for an E3 port. The default is enable .

Command Default

The default is **enable**.

Command Modes

E3 configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to enable the national bits for an E3 controller:

```
RP/0/RSP0/CPU0:router(config)# controller e3 0/6/2/0
RP/0/RSP0/CPU0:router(config-e3)# national bits enable
```

Related Commands

Command	Description
show controllers e3, on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.

show controllers e1

To display information about the E1 links and hardware and software drivers for the E1 controller, use the **show controllers e1** command in EXEC mode.

show controllers e1 *interface-path-id* [**all**|**bert**|**brief**|**internal-state**|**tabular**]

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	Displays all information for the controllers.
bert	Displays internal E1 bit error rate test results.
brief	Displays summary information for the E1 controller.
internal-state	Displays internal E1 state information.
tabular	Displays E1 controller information in tabular format.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.

- *module*: Module number. A physical layer interface module (PLIM) is always 0.
- *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows sample output from the **show controllers e1** command for a single E1 channel:

```
RP/0/RSP0/CPU0:router# show controllers e1 0/1/0/0
```

```
E1 0/1/0/0 is down
timeslots:
Receiver has no alarms.
Framing is E1 CRC, Clock Source is internal
Data in current interval (0 seconds elapsed):
  0 Line Code Violations, 0 Path Code Violations
  0 Slip Secs, 0 Fr Loss Secs, 0 Line Err Secs, 0 Degraded Mins
  0 Errored Secs, 0 Bursty Err Secs, 0 Severely Err Secs
  0 Unavail Secs, 0 Stuffed Secs
  0 Near-end path failures, 0 Far-end path failures, 0 SEF/AIS Secs
```

Table 68: show controllers e1 Field Descriptions

Field	Description
E1 0/1/0/0 is down	E1 channel is not operating. The channel state can be up, down, or administratively down. Loopback conditions are shown by (Locally Looped) or (Remotely Looped).
timeslots	DS0 time slots assigned to the E1 channel.
Receiver has no alarms	Any alarms detected by the E1 controller are displayed here. Possible alarms are as follows: • Transmitter is sending remote alarm. • Transmitter is sending AIS. • Receiver has loss of signal. • Receiver is getting AIS. • Receiver has loss of frame. • Receiver has remote alarm. • Receiver has no alarms.

Field	Description
Framing	Framing type on the channelized controller.
Clock Source	Clock source controller. Values are internal and line.
Line Code Violations	Line Code Violations (LCVs) is a count of both Bipolar Violations (BPVs) and Excessive Zeros (EXZs) that occur over the accumulation period. An EXZ increments the LCV by one regardless of the length of the zero string.
P-bit Coding Violation	For all DS3 applications, a P-bit coding violation (PCV) error event is a P-bit parity error event. A P-bit parity error event is the occurrence of a received P-bit code on the DS3 M-frame that is not identical to the corresponding locally calculated code.
Slip Secs	Controlled slip second (CSS) is a 1-second interval that contains one or more controlled slips.
Fr Loss Secs	Frame loss seconds (SELS) is the number of seconds for which an out-of-frame error is detected.
Line Err Secs	Line errored seconds (LES) is a second in which one or more line code violation errors are detected.
Degraded Mins	Degraded minute (DM) is a minute in which the estimated error rate exceeds 1E-6 but does not exceed 1E-3. For more information, see RFC 1406, <i>Definitions of Managed Objects for DS1 and E1 Interface Types</i> .
Errored Secs	Errored seconds (ES) is a second with one or more path coding violations, one or more out-of-frame defects, or one or more controlled slip events or a detected AIS defect.
Bursty Err Secs	Bursty errored seconds (BES) is a second with fewer than 320 and more than one path coding violation error events, no severely errored frame defects, and no detected incoming AIS defects. Controlled slips are not included in this parameter.
Severely Err Secs	Severely errored seconds (SES) is a second with 320 or more path code violation errors events, one or more out-of-frame defects, or a detected AIS defect.
Unavailable Secs	Number of seconds during which the interface was not available in this interval, referred to as UAS.

Field	Description
Stuffed Secs	Stuffed seconds (SS) is a second in which one more bit stuffings take place. This happens when the Pulse Density Enforcer detects a potential violation in the output stream and inserts a 1 to prevent it. Such bit stuffings corrupt user data and indicate that the network is configured incorrectly. This counter can be used to help diagnose this situation.
Near-end path failures	Path failure (PFC)
Far-end path failures	(PFCFE)
SEF/AIS Secs	(SAS)

Related Commands

Command	Description
controller e1 , on page 1058	Configures an E1 controller and enters E1 configuration mode.

show controllers e3

To display information about the E3 links and hardware and software drivers for the E3 controller, use the **show controllers e3** command in EXEC mode.

show controllers e3 *interface-path-id* [**all**|**bert**|**brief**|**internal-state**|**tabular**]

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	Displays all information for the controllers.
bert	Displays internal E3 bit error rate test results.
brief	Displays summary information for the E3 controller.
internal-state	Displays internal E3 state information.
tabular	Displays E3 controller information in tabular format.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced on the .

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.

- *module*: Module number. A physical layer interface module (PLIM) is always 0.
- *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows sample output from the **show controllers e3** command for a single E3 port:

```
RP/0/RSP0/CPU0:router# show controllers e3 0/2/0/0
```

```
E3 0/2/0/0 is down
Transmitter is sending RAI.
Receiver has loss of frame.
Framing is G.751, Line Code is B3ZS, Clock Source is Internal
Subrate is enabled. Mode: Cisco(default), Bandwidth: 34010 kbps
Remote accept is enabled
Remote fullrate has no request outstanding
Data in current interval (360 seconds elapsed):
  0 Line Code Violations, 0 P-bit Coding Violation
  0 C-bit Coding Violation, 0 P-bit Err Secs
  0 P-bit Severely Err Secs, 0 Severely Err Framing Secs
  360 Unavailable Secs, 0 Line Error Secs
  0 C-bit Error Secs, 0 C-bit Severely Error Secs
```

The following example shows sample output from the **show controllers e3** command using the **tabular** keyword, for a single E3 port:

```
RP/0/RSP0/CPU0:router# show controllers e3 0/2/0/0 tabular
```

```
E3 0/2/0/0 is down
Transmitter is sending RAI.
Receiver has loss of frame.
Framing is G.751, Line Code is B3ZS, Clock Source is Internal
Subrate is enabled. Mode: Cisco(default), Bandwidth: 34010 kbps
Remote accept is enabled
Remote fullrate has no request outstanding
INTERVAL      LCV   PCV   CCV   PES   PSES  SEFS   UAS   LES   CES   CSES
07:49-07:56    0     0     0     0     0     0    380    0     0     0
Data in current interval (380 seconds elapsed):
  0 Line Code Violations, 0 P-bit Coding Violation
  0 C-bit Coding Violation, 0 P-bit Err Secs
  0 P-bit Severely Err Secs, 0 Severely Err Framing Secs
  380 Unavailable Secs, 0 Line Error Secs
  0 C-bit Error Secs, 0 C-bit Severely Error Secs
```

Table 69: show controllers e3 Field Descriptions

Field	Description
Transmitter is sending RAI	Any alarms detected by the controller are displayed here. Possible alarms are as follows: • Transmitter is sending remote alarm. • Transmitter is sending AIS. • Receiver has loss of signal. • Receiver is getting AIS. • Receiver has loss of frame. • Receiver has remote alarm. • Receiver has no alarms.
Framing	Framing type on the controller. Values are G.751 and G.832.
Line Code	Line coding format on the controller.
Clock Source	Clock source on the channelized controller. Values are internal and line.
Data in current interval (seconds elapsed)	Shows the current accumulation period, which rolls into the 24-hour accumulation every 15 minutes. The accumulation period is from 1 to 900 seconds. The oldest 15-minute period falls off the back of the 24-hour accumulation buffer.
Line Code Violations	Line Code Violations (LCVs) is a count of both Bipolar Violations (BPVs) and Excessive Zeros (EXZs) that occur over the accumulation period. An EXZ increments the LCV by one regardless of the length of the zero string.
P-bit Coding Violation	For all DS3 applications, a P-bit coding violation (PCV) error event is a P-bit parity error event. A P-bit parity error event is the occurrence of a received P-bit code on the DS3 M-frame that is not identical to the corresponding locally calculated code.
C-bit Coding Violation	For C-bit parity and SYNTRAN DS3 applications, the C-bit coding violation (CCV) is the count of coding violations reported by the C-bits. For C-bit parity, it is the count of CP-bit parity errors that occur during the accumulation interval. For SYNTRAN, it is a count of CRC-9 errors that occur during the accumulation interval.

Field	Description
P-bit Err Secs	P-bit errored seconds (PES) is a second with one or more PCVs, one or more out-of-frame defects, or a detected incoming AIS. This gauge does not increment when unavailable seconds are counted.
P-bit Severely Err Secs	P-bit severely errored seconds (PSES) is a second with 44 or more PCVs, one or more out-of-frame defects, or a detected incoming AIS. This gauge does not increment when unavailable seconds are counted.
Severely Err Framing Secs	Severely errored framing seconds (SEFS) is a second with one or more out-of-frame defects or a detected incoming AIS.
Unavailable Secs	The number of unavailable seconds (UAS) is calculated by counting the number of seconds for which the interface is unavailable. For more information, see RFC 1407, <i>DS3 MIB Variables</i> .
Line Errored Secs	Line errored seconds (LES) is a second in which one or more code violations or one or more LOS defects occurred.
C-bit Errored Secs	C-bit errored seconds (CES) is a second with one or more C-bit code violations (CCV), one or more out-of-frame defects, or a detected incoming AIS. This gauge is not incremented when UASs are counted.
C-bit Severely Errored Secs	C-bit severely errored seconds (CSES) is a second with 44 or more CCVs, one or more out-of-frame defects, or a detected incoming AIS. This gauge is not incremented when UASs are counted.
Total Data (last 24 hours)	Shows the last 15-minute accumulation period.

Related Commands

Command	Description
controller e3, on page 1060	Configures an E3 controller and enters E3 configuration mode.

show controllers lnm

To display information about link noise monitoring (LNM) on T1 or E1 links, use the **show controllers lnm** command in EXEC configuration mode.

show controllers {**t1**|**e1**} *interface-path-id* **lnm** [**all** | **configuration** | **event** | **statistics**]

Syntax Description

t1	Displays LNM information for a T1 controller.
e1	Displays LNM information for an E1 controller.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show controllers command to see a list of all controllers currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	(Optional) Displays LNM configuration, state, statistics, and event information.
configuration	(Optional) Displays LNM configuration and state information. This is the default.
event	(Optional) Displays LNM information about the last 5 events.
statistics	(Optional) Displays LNM statistics.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When specifying a channelized T1 controller, use the following guidelines for the *interface-path-id*:

- The naming notation is *rack/slot/module/port/T3Num/T1num*.
- The slash between values is required as part of the notation.

- The following list describes the components of the notation:
 - *rack*—Chassis number of the rack.
 - *slot*—Physical slot number of the line card.
 - *module*—Module number or subslot (for a SPA). A physical layer interface module (PLIM) is always 0.
 - *port*—Physical port number of the interface.
 - *T3num*—T3 controller number.
 - *T1num*—T1 controller number.

Task ID

Task ID	Operations
sonet-sdh	read

Examples

The following example shows sample output from the **show controllers t1 lnm** command with the **all** keyword for a single T1 channel:

```
RP/0/RSP0/CPU0:router# show controllers t1 0/1/1/0/1/1 lnm all
Thu May 13 10:28:26.474 PDT
Controller T1 0/1/1/0/1/1

Syslog   Monitoring type  State      Thresholds (lcv/pcv/duration)
-----
enabled  minor-warning    stable     Set( 15/ 15/ 4) Clear( 15/ 15/ 4)
          major-warning stable     Set( 154/ 145/ 4) Clear( 154/ 145/ 4)

Monitoring type      Minor-Warn      Major-Warn
-----
Create               1               1
Update               0               0
Delete               0               0
Clear                 0               0
Noise Crossed        1               1
Noise Cleared         1               1

Last Five Events
-----
MINWARNCROSS: Noise crossed minor-warn threshold at Thu May 13 09:54:10 2010
MAJWARNCROSS: Noise crossed major-warn threshold at Thu May 13 09:54:11 2010
MAJWARNCLEAR: Noise cleared major-warn threshold at Thu May 13 10:27:25 2010
MINWARNCLEAR: Noise cleared minor-warn threshold at Thu May 13 10:28:14 2010
```

The following example shows sample output from the **show controllers t1 lnm** command with the **configuration** keyword for a single T1 channel:

**Note**

This is also the default output that is displayed if you run the **show controllers lnm** command without specifying any keyword options.

```
RP/0/RSP0/CPU0:router# show controllers t1 0/1/1/0/1/1 lnm configuration
```

Thu May 13 10:28:26.474 PDT

Controller T1 0/1/1/0/1/1

Syslog	Monitoring type	State	Thresholds (lcv/pcv/duration)
enabled	minor-warning	stable	Set(15/ 15/ 4) Clear(15/ 15/ 4)
	major-warning	stable	Set(154/ 145/ 4) Clear(154/ 145/ 4)

The following example shows sample output from the **show controllers t1 lnm** command with the **event** keyword for a single T1 channel:

RP/0/RSP0/CPU0:router# **show controllers t1 0/1/1/0/1/1 lnm event**

Thu May 13 10:28:26.474 PDT

Controller T1 0/1/1/0/1/1

Last Five Events

```

-----
MINWARNCROSS: Noise crossed minor-warn threshold at Thu May 13 09:54:10 2010
MAJWARNCROSS: Noise crossed major-warn threshold at Thu May 13 09:54:11 2010
MAJWARNCLEAR: Noise cleared major-warn threshold at Thu May 13 10:27:25 2010
MINWARNCLEAR: Noise cleared minor-warn threshold at Thu May 13 10:28:14 2010

```

The following example shows sample output from the **show controllers t1 lnm** command with the **statistics** keyword for a single T1 channel:

RP/0/RSP0/CPU0:router# **show controllers t1 0/1/1/0/1/1 lnm statistics**

Thu May 13 10:28:26.474 PDT

Controller T1 0/1/1/0/1/1

Monitoring type	Minor-Warn	Major-Warn
-----	-----	-----
Create	1	1
Update	0	0
Delete	0	0
Clear	0	0
Noise Crossed	1	1
Noise Cleared	1	1

Related Commands

Command	Description
clear controller lnm , on page 1047	Clears link noise monitoring states or statistics.
lnm major-warning , on page 1100	Enables link noise monitoring and specifies thresholds for noise errors on T1/E1 links that are used to signal major warning events and recovery from those events.
lnm minor-warning , on page 1103	Enables link noise monitoring and specifies thresholds for noise errors on T1/E1 links that are used to signal minor warning events and recovery from those events.
show logging	Displays the contents of the logging buffer.
show logging events buffer	Displays messages in the logging events buffer.

show controllers t1

To display information about the T1 links and hardware and software drivers for the T1 controller, use the **show controllers t1** command in EXEC mode.

show controllers t1 *interface-path-id* [**all** | **bert** | **brief** | **internal-state** | **remote** {**performance brief** | **tabular**} | **tabular**]

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	Displays all information for the controllers.
bert	Displays internal T1 bit error rate test results.
brief	Displays summary information for the T1 controller.
internal-state	Displays internal T1 state information.
remote { performance brief tabular }	Displays remote performance information in a brief summary or table format.
tabular	Displays T1 controller information in table format.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When specifying a channelized T1 controller, use the following guidelines for the *interface-path-id*:

- The naming notation is *rack/slot/module/port/T3Num/T1num*.

- The slash between values is required as part of the notation.
- The following list describes the components of the notation:
 - *rack*—Chassis number of the rack.
 - *slot*—Physical slot number of the line card.
 - *module*—Module number or subslot (for a SPA). A physical layer interface module (PLIM) is always 0.
 - *port*—Physical port number of the interface.
 - *T3num*—T3 controller number.
 - *T1num*—T1 controller number.
- If specifying a virtual interface, the number range varies, depending on interface type.
- When specifying a virtual tributary group, the naming notation is *rack/slot/module/port/vtg/vt*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*—Chassis number of the rack.
 - *slot*—Physical slot number of the line card.
 - *module*—Module number or subslot (for a SPA). A physical layer interface module (PLIM) is always 0.
 - *port*—Physical port number of the interface.
 - *vtg*—Virtual tributary group.
 - *vt*—Virtual tributary instance.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows sample output from the **show controllers t1** command with the **brief** keyword for a single T1 channel:

```
RP/0/RSP0/CPU0:router# show controllers t1 0/4/2/0/1 brief

T1 0/4/2/0/1 is up
mode: ATM
timeslots: 1-24
FDL per AT&T 54016 spec.
Receiver has no alarms.
Framing is ESF, Line Code is B8ZS, Clock Source is internal
Alarm Soaking Interval:
    Alarm Declaring= 2500 msec
    Alarm clearing = 10000 msec

Bert Test on controller port : T1 0/4/2/0/1
BERT test result (not running)
```

```

Test Pattern : Not Configured, Status : not running, Sync Detected : 0
Interval : 1 minute(s), Time Remain : 0 (ms)
Bit Errors (since BERT started): 0 bits,
Bits Received (since BERT started): 0 Kbits
Bit Errors (since last sync): 0 bits
Bits Received (since last sync): 0 Kbits

```

Table 70: show controllers t1 brief Field Descriptions

Field	Description
T1 0/4/2/0/1 is up	T1 channel is operating. The channel state can be up, down, or administratively down. Loopback conditions are shown by (Locally Looped) or (Remotely Looped).
mode	Mode of the T1 controller, which can be ATM.
timeslots	DS0 time slots assigned to the T1 channel.
FDL per <i>spec-name</i> spec.	Performance monitoring is through Facility Data Link based on ANSI T1.403 specification or AT&T standard specification number 54016.
Receiver has no alarms.	Any alarms detected by the T1 controller are displayed here. Possible alarms are as follows: • Transmitter is sending remote alarm. • Transmitter is sending AIS. • Receiver has loss of signal. • Receiver is getting AIS. • Receiver has loss of frame. • Receiver has remote alarm. • Receiver has no alarms.
Framing	Framing type on the channelized controller. Values are ESF and SF.
Line Code	Line coding format on the channelized controller. Values are AMI or B8ZS.
Clock Source	Clock source on the T1 channel. Values are internal and line.

Field	Description
Alarm Soaking Interval	Values of the following alarm soaking intervals: • Alarm declarings: amount of time, in milliseconds, after which an alarm is declared. • Alarm clearing: amount of time, in milliseconds, after which an alarm is cleared.
Bert Test on controller port	Indicates controller port on which BERT test can be run.
BERT test result	Indicates the current state of the test. Can be one of the following: • running— BER test is still in progress. • done—BER test is complete. • not running—BER test is not running on the controller.
Test Pattern	Indicates the test pattern you selected for the test.
Status	Indicates the current synchronization state (sync).
Sync Detected	Indicates the number of times synchronization has been detected during this test.
Interval	Indicates the length of the test.
Time Remain	Indicates the time remaining for the test to run. Note If you terminate a BER test, you receive a message similar to the following: Time Remain : 2 minute(s) (unable to complete) "(Unable to complete)" signifies that you interrupted the test.
Bit Errors (since BERT started)	Bit errors that have been detected since the test started.
Bits Received (since BERT started)	Total number of test bits that have been received since the test started.
Bit Errors (since last sync)	Bit errors that have been detected since the synchronization started.
Bits Received (since last sync)	Total number of test bits that have been received since the synchronization started.

The following example shows sample output from the **show controllers t1** command for a single T1 channel:

```
RP/0/RSP0/CPU0:router# show controllers t1 0/4/2/0/1

T1 0/4/2/0/1 is up
mode: ATM
timeslots: 1-24
FDL per AT&T 54016 spec.
Receiver has no alarms.
Framing is ESF, Line Code is B8ZS, Clock Source is internal
Data in current interval (38 seconds elapsed):
  0 Line Code Violations, 0 Path Code Violations
  0 Slip Secs, 0 Fr Loss Secs, 0 Line Err Secs, 0 Degraded Mins
  0 Errored Secs, 0 Bursty Err Secs, 0 Severely Err Secs
  0 Unavail Secs, 0 Stuffed Secs
  0 Near-end path failures, 0 Far-end path failures, 0 SEF/AIS Secs
Data in Interval 1:
  0 Line Code Violations, 0 Path Code Violations
  0 Slip Secs, 0 Fr Loss Secs, 0 Line Err Secs, 0 Degraded Mins
  0 Errored Secs, 0 Bursty Err Secs, 0 Severely Err Secs
  0 Unavail Secs, 0 Stuffed Secs
  0 Near-end path failures, 0 Far-end path failures, 0 SEF/AIS Secs
Data in Interval 2:
  0 Line Code Violations, 0 Path Code Violations
  0 Slip Secs, 0 Fr Loss Secs, 0 Line Err Secs, 0 Degraded Mins
  0 Errored Secs, 0 Bursty Err Secs, 0 Severely Err Secs
  0 Unavail Secs, 0 Stuffed Secs
  0 Near-end path failures, 0 Far-end path failures, 0 SEF/AIS Secs
.
.
.
```

The following example shows sample output from the **show controllers t1** command with the **tabular** keyword for a single T1 channel:

```
RP/0/RSP0/CPU0:router# show controllers t1 0/4/2/0/1 tabular

T1 0/4/2/0/1 is up
mode: ATM
timeslots: 1-24
FDL per AT&T 54016 spec.
Receiver has no alarms.
Framing is ESF, Line Code is B8ZS, Clock Source is internal

```

INTERVAL	LCV	PCV	CSS	SEFS	LES	DM	ES	BES	SES	UAS	SSS
08:30-08:35	0	0	0	0	0	0	0	0	0	0	0
08:15-08:30	0	0	0	0	0	0	0	0	0	0	0
08:00-08:15	0	0	0	0	0	0	0	0	0	0	0
07:45-08:00	0	0	0	0	0	0	0	0	0	0	0
07:30-07:45	0	0	0	0	0	0	0	0	0	0	0
07:15-07:30	0	0	0	0	0	0	0	0	0	0	0
07:00-07:15	0	0	0	0	0	0	0	0	0	0	0
06:45-07:00	0	0	0	0	0	0	0	0	0	0	0
06:30-06:45	0	0	0	0	0	0	0	0	0	0	0
06:15-06:30	0	0	0	0	0	0	0	0	0	0	0
06:00-06:15	0	0	0	0	0	0	0	0	0	0	0
05:45-06:00	0	0	0	0	0	0	0	0	0	0	0
05:30-05:45	0	0	0	0	0	0	0	0	0	0	0
05:15-05:30	0	0	0	0	0	0	0	0	0	0	0

```

.
.
.
```


Table 71: show controllers t1 and show controllers t1 tabular Field Descriptions

Field	Description
T1 0/4/2/0/1 is up	T1 channel is operating. The channel state can be up, down, or administratively down. Loopback conditions are shown by (Locally Looped) or (Remotely Looped).
mode	Mode of the T1 controller, which can be ATM.
timeslots	DS0 time slots assigned to the T1 channel.
FDL per <i>spec-name</i> spec.	Performance monitoring is through Facility Data Link based on ANSI T1.403 specification or AT&T standard specification number 54016.
Receiver has no alarms.	Any alarms detected by the T1 controller are displayed here. Possible alarms are as follows: • Transmitter is sending remote alarm. • Transmitter is sending AIS. • Receiver has loss of signal. • Receiver is getting AIS. • Receiver has loss of frame. • Receiver has remote alarm. • Receiver has no alarms.
Framing	Framing type on the channelized controller. Values are ESF and SF.
Line Code	Line coding format on the channelized controller. Values are AMI or B8ZS.
Clock Source	Clock source on the T1 channel. Values are internal and line.
Data in current interval (seconds elapsed)	Shows the current accumulation period, which rolls into the 24-hour accumulation every 15 minutes. The accumulation period is from 1 to 900 seconds. The oldest 15-minute period falls off the back of the 24-hour accumulation buffer.
Line Code Violations	Line Code Violations (LCVs) is a count of both Bipolar Violations (BPVs) and Excessive Zeros (EXZs) that occur over the accumulation period. An EXZ increments the LCV by one regardless of the length of the zero string.

Field	Description
Slip Secs	Controlled slip second (CSS) is a 1-second interval that contains one or more controlled slips.
Fr Loss Secs	Frame loss seconds (SELS) is the number of seconds for which an out-of-frame error is detected.
Line Err Secs	Line errored seconds (LES) is a second in which one or more line code violation errors are detected.
Degraded Mins	Degraded minute (DM) is a minute in which the estimated error rate exceeds 1E-6 but does not exceed 1E-3. For more information, see RFC 1406, <i>Definitions of Managed Objects for DS1 and E1 Interface Types</i> .
Errored Secs	Errored seconds (ES) is a second with one or more path coding violations, one or more out-of-frame defects, or one or more controlled slip events or a detected AIS defect.
Bursty Err Secs	Bursty errored seconds (BES) is a second with fewer than 320 and more than one path coding violation error events, no severely errored frame defects, and no detected incoming AIS defects. Controlled slips are not included in this parameter.
Severely Err Secs	Severely errored seconds (SES) is a second with 320 or more path code violation errors events, one or more out-of-frame defects, or a detected AIS defect.
Unavailable Secs	Number of seconds during which the interface was not available in this interval, referred to as UAS.
Stuffed Secs	Stuffed seconds (SSS) is a second in which one more bit stuffings take place. This happens when the Pulse Density Enforcer detects a potential violation in the output stream and inserts a 1 to prevent it. Such bit stuffings corrupt user data and indicate that the network is configured incorrectly. This counter can be used to help diagnose this situation.
Near-end path failures	Total number of near-end path failures.
Far-end path failures	Total number of far-end path failures.
SEF/AIS Secs	Total number or Severely Errored Framing (SEF) and Alarm Indication Signal (AIS) errors.

Related Commands

Command	Description
controller t1 , on page 1062	

show controllers t3

To display information about the T3 links and hardware and software drivers for the T3 controller, use the **show controllers t3** command in EXEC mode.

show controllers t3 *interface-path-id* [**all** | **bert** | **brief** | **internal-state** | **tabular**]

Syntax Description

<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
all	Displays all information for the controllers.
bert	Displays internal T3 bit error rate test results.
brief	Displays summary information for the controller.
internal-state	Displays internal T3 state information.
tabular	Displays T3 controller information in tabular format.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- When specifying a T3 controller, the naming notation is *rack/slot/module/port/T3num*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - rack*—Chassis number of the rack.

- *slot*—Physical slot number of the line card or SIP.
 - *module*—Module number or subslot (for a SPA). A physical layer interface module (PLIM) is always 0.
 - *port*—Physical port number of the interface.
 - *T3num*—T3 controller number.
- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows sample output from the **show controllers t3** command using the **brief** keyword for a single T3 port:

```
RP/0/RSP0/CPU0:router# show controllers t3 0/4/2/0/1 brief

T3 0/4/2/0 is up
No alarms detected.
mode: serial
MDL transmission is disabled
  EIC: , LIC: , FIC: , UNIT:
  Path FI:
  Idle Signal PORT_NO:
  Test Signal GEN_NO:
FEAC code received: No code is being received
Framing is C-BIT Parity, Line Code is B3ZS, Clock Source is Internal
Alarm Soaking Interval:
  Alarm Declaring= 2500 msec
  Alarm clearing = 10000 msec
BERT test result (not running)
  Test Pattern : Not Configured, Status : not running, Sync Detected : 0
  Interval : 1 minute(s), Time Remain : 0 (ms)
  Bit Errors (since BERT started): 0 bits,
  Bits Received (since BERT started): 0 Kbits
  Bit Errors (since last sync): 0 bits
  Bits Received (since last sync): 0 Kbits
```

Table 72: show controllers t3 brief Field Descriptions

Field	Description
T3 0/4/2/0/1 is up	T3 channel is operating. The channel state can be up, down, or administratively down. Loopback conditions are shown by (Locally Looped) or (Remotely Looped).

Field	Description
No alarms detected	Any alarms detected by the controller are displayed here. Possible alarms are as follows: • Transmitter is sending remote alarm. • Transmitter is sending AIS. • Receiver has loss of signal. • Receiver is getting AIS. • Receiver has loss of frame. • Receiver has remote alarm. • Receiver has no alarms.
mode	Mode of the T3 controller, which can be ATM, serial, or T1serial or T1 .
MDL transmission	Status of the Maintenance Data Link (either enabled or disabled) and the values of the MDL message fields.
EIC	Equipment Identification Code.
LIC	Location Identification Code.
FIC	Frame Identification Code.
UNIT	Unit Identification Code.
Path FI	Path facility identifier.
Idle Signal PORT_NO	Identifies the port that initiates the idle signal message.
Test Signal GEN_NO	Generator number to send in test signal messages.

Field	Description
FEAC code received	Whether or not a far-end alarm code request is being received. Possible values are as follows: • DS3 Eqpt. Failure (SA) • DS3 LOS/HBER • DS3 Out-of-Frame • DS3 AIS Received • DS3 IDLE Received • DS3 Eqpt. Failure (NSA) • Common Eqpt. Failure (NSA) • Multiple DS1 LOS/HBER • DS1 Eqpt. Failure • Single DS1 LOS/HBER • DS1 Eqpt. Failure (NSA) • No code is being received
Framing	Framing type on the channelized controller. Values are auto-detect, M23, and C-Bit.
Line Code	Line coding format on the channelized controller. Values are AMI and B8ZS.
Clock Source	Clock source on the channelized controller. Values are internal and line.
Alarm Soaking Interval	Values of the following alarm soaking intervals: • Alarm declarings: amount of time, in milliseconds, after which an alarm is declared. • Alarm clearing: amount of time, in milliseconds, after which an alarm is cleared.
BERT test result	Indicates the current state of the test. Can be one of the following: • running—BER test is still in progress. • done—BER test is complete. • not running—BER test is not running on the controller.
Test Pattern	Indicates the test pattern you selected for the test.

Field	Description
Status	Indicates the current synchronization state (sync).
Sync Detected	Indicates the number of times synchronization has been detected during this test.
Interval	Indicates the length of the test.
Time Remain	Indicates the time remaining for the test to run. Note If you terminate a BER test, you receive a message similar to the following: Time Remain : 2 minute(s) (unable to complete) "(Unable to complete)" signifies that you interrupted the test.
Bit Errors (since BERT started)	Bit errors that have been detected since the test started.
Bits Received (since BERT started)	Total number of test bits that have been received since the test started.
Bit Errors (since last sync)	Bit errors that have been detected since the synchronization started.
Bits Received (since last sync)	Total number of test bits that have been received since the synchronization started.

The following example shows sample output from the **show controllers t3** command using the **tabular** keyword, for a single T3 port:

```
RP/0/RSP0/CPU0:router# show controllers 0/4/2/0/1 tabular
```

```
T3 0/4/2/0/1 is up
INTERVAL      LCV   PCV   CCV   PES   PSES  SEFS  UAS   LES   CES   CSES
09:00-09:02   0     0     0     0     0     0     0     0     0     0
08:45-09:00   0     0     0     0     0     0     0     0     0     0
08:30-08:45   0     0     0     0     0     0     0     0     0     0
08:15-08:30   0     0     0     0     0     0     0     0     0     0
08:00-08:15   0     0     0     0     0     0     0     0     0     0
07:45-08:00   0     0     0     0     0     0     0     0     0     0
07:30-07:45   0     0     0     0     0     0     0     0     0     0
.
.
.
```

The following example shows sample output from the **show controllers t3** command for a single T3 port:

```
RP/0/RSP0/CPU0:router# show controllers t3 0/4/2/0/1
```

```
T3 0/4/2/0/1 is up
No alarms detected.
mode: serial
MDL transmission is disabled
EIC: , LIC: , FIC: , UNIT:
Path FI:
```



```

Idle Signal PORT NO:
Test Signal GEN NO:
FEAC code received: No code is being received
Framing is C-BIT Parity, Line Code is B3ZS, Clock Source is Internal
Data in current interval (695 seconds elapsed):
  0 Line Code Violations, 0 P-bit Coding Violation
  0 C-bit Coding Violation, 0 P-bit Err Secs
  0 P-bit Severely Err Secs, 0 Severely Err Framing Secs
  0 Unavailable Secs, 0 Line Errored Secs
  0 C-bit Errored Secs, 0 C-bit Severely Errored Secs
Data in Interval 1:
  0 Line Code Violations, 0 P-bit Coding Violation
  0 C-bit Coding Violation, 0 P-bit Err Secs
  0 P-bit Severely Err Secs, 0 Severely Err Framing Secs
  0 Unavailable Secs, 0 Line Errored Secs
  0 C-bit Errored Secs, 0 C-bit Severely Errored Secs
Data in Interval 2:
  0 Line Code Violations, 0 P-bit Coding Violation
  0 C-bit Coding Violation, 0 P-bit Err Secs
  0 P-bit Severely Err Secs, 0 Severely Err Framing Secs
  0 Unavailable Secs, 0 Line Errored Secs
  0 C-bit Errored Secs, 0 C-bit Severely Errored Secs
Data in Interval 3:
  0 Line Code Violations, 0 P-bit Coding Violation
  0 C-bit Coding Violation, 0 P-bit Err Secs
  0 P-bit Severely Err Secs, 0 Severely Err Framing Secs
  0 Unavailable Secs, 0 Line Errored Secs
  0 C-bit Errored Secs, 0 C-bit Severely Errored Secs
.
.
.

```

Table 73: show controllers t3 and show controllers t3 tabular Field Descriptions

Field	Description
T3 0/4/2/0/1 is up	T3 channel is operating. The channel state can be up, down, or administratively down. Loopback conditions are shown by (Locally Looped) or (Remotely Looped).
No alarms detected	Any alarms detected by the controller are displayed here. Possible alarms are as follows: • Transmitter is sending remote alarm. • Transmitter is sending AIS. • Receiver has loss of signal. • Receiver is getting AIS. • Receiver has loss of frame. • Receiver has remote alarm. • Receiver has no alarms.
mode	Mode of the T3 controller, which can be ATM, serial, T1, or E1 serial or T1 ATM or serial .

Field	Description
MDL transmission	Status of the Maintenance Data Link (either enabled or disabled) and the values of the MDL message fields.
EIC	Equipment Identification code.
LIC	Location Identification code.
FIC	Frame Identification code.
UNIT	Unit Identification code.
Path FI	Path facility identifier.
Idle Signal PORT_NO	Identifies the port that initiates the idle signal message.
Test Signal GEN_NO	Generator number to send in test signal messages.
FEAC code received	Whether or not a far-end alarm code request is being received. Possible values are as follows: • DS3 Eqpt. Failure (SA) • DS3 LOS/HBER • DS3 Out-of-Frame • DS3 AIS Received • DS3 IDLE Received • DS3 Eqpt. Failure (NSA) • Common Eqpt. Failure (NSA) • Multiple DS1 LOS/HBER • DS1 Eqpt. Failure • Single DS1 LOS/HBER • DS1 Eqpt. Failure (NSA) • No code is being received
Framing	Framing type on the channelized controller. Values are M23 and C-Bit.
Line Code	Line coding format on the channelized controller. Values are AMI and B8ZS.
Clock Source	Clock source on the channelized controller. Values are internal and line.

Field	Description
Data in current interval (seconds elapsed)	Shows the current accumulation period, which rolls into the 24-hour accumulation every 15 minutes. The accumulation period is from 1 to 900 seconds. The oldest 15-minute period falls off the back of the 24-hour accumulation buffer.
Line Code Violations	Line Code Violations (LCVs) is a count of both Bipolar Violations (BPVs) and Excessive Zeros (EXZs) that occur over the accumulation period. An EXZ increments the LCV by one regardless of the length of the zero string.
P-bit Coding Violation	For all DS3 applications, a P-bit coding violation (PCV) error event is a P-bit parity error event. A P-bit parity error event is the occurrence of a received P-bit code on the DS3 M-frame that is not identical to the corresponding locally calculated code.
C-bit Coding Violation	For C-bit parity and SYNTRAN DS3 applications, the C-bit coding violation (CCV) is the count of coding violations reported by the C-bits. For C-bit parity, it is the count of CP-bit parity errors that occur during the accumulation interval. For SYNTRAN, it is a count of CRC-9 errors that occur during the accumulation interval.
P-bit Err Secs	P-bit errored seconds (PES) is a second with one or more PCVs, one or more out-of-frame defects, or a detected incoming AIS. This gauge does not increment when unavailable seconds are counted.
P-bit Severely Err Secs	P-bit severely errored seconds (PSES) is a second with 44 or more PCVs, one or more out-of-frame defects, or a detected incoming AIS. This gauge does not increment when unavailable seconds are counted.
Severely Err Framing Secs	Severely errored framing seconds (SEFS) is a second with one or more out-of-frame defects or a detected incoming AIS.
Unavailable Secs	The number of unavailable seconds (UAS) is calculated by counting the number of seconds for which the interface is unavailable. For more information, see RFC 1407, <i>DS3 MIB Variables</i> .
Line Errored Secs	Line errored seconds (LES) is a second in which one or more code violations or one or more LOS defects occurred.

Field	Description
C-bit Errored Secs	C-bit errored seconds (CES) is a second with one or more C-bit code violations (CCV), one or more out-of-frame defects, or a detected incoming AIS. This gauge is not incremented when UASs are counted.
C-bit Severely Errored Secs	C-bit severely errored seconds (CSES) is a second with 44 or more CCVs, one or more out-of-frame defects, or a detected incoming AIS. This gauge is not incremented when UASs are counted.

Related Commands

Command	Description
controller t3 , on page 1064	Configures a T3 controller and enters T3 configuration mode.

shutdown (T1/E1)

To disable the T1 or E1 controller, use the **shutdown** command in T1 or E1 configuration mode. To restart a disabled T1 or E1 controller, use the **no** form of this command.

shutdown

no shutdown

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes T1 configuration
E1 configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.
	Release 4.0.0	Support for E1 configuration mode was added.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Shutting down the T1 or E1 controller disables all functions on the interface and sends an AIS alarm to the network. The **shutdown** command marks the interface as unavailable. To check if the controller is disabled, use the **show controllers t1** or **show controllers e1** command.

Task ID	Task ID	Operations
	sonet-sdh	read, write

Examples The following example shows how to bring up a controller that was previously shut down:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/10
RP/0/RSP0/CPU0:router(config-t1e1)# no shutdown
```

Related Commands

Command	Description
show controllers e1, on page 1122	Displays information about the E1 links and hardware and software drivers for the E1 controller.
show controllers t1, on page 1134	Displays information about the T1 links and hardware and software drivers for the T1 controller.

shutdown (T3/E3)

To disable a T3 or E3 controller, use the **shutdown** command in T3 or E3 configuration mode. To restart a disabled T3 or E3 controller, use the **no** form of this command.

shutdown

no shutdown

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes T3 configuration
E3 configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.
	Release 4.0.0	Support for E3 configuration mode was added.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Shutting down the T3 or E3 controller disables all functions on the interface and sends an AIS alarm to the network. The **shutdown** command marks the interface as unavailable. To check if the controller is disabled, use the **show controllers t3** or **show controllers e3** command.

Task ID	Task ID	Operations
	sonet-sdh	read, write

Examples The following example shows how to bring up a controller that was previously shut down:

```
RP/0/RSP0/CPU0:router(config)# controller t3 0/6/0/0
RP/0/RSP0/CPU0:router(config-t3)# no shutdown
```

Related Commands

Command	Description
show controllers e3, on page 1126	Displays information about the E3 links and hardware and software drivers for the E3 controller.
show controllers t3, on page 1142	Displays information about the T3 links and hardware and software drivers for the T3 controller.

speed (DS0)

To specify the speed of the underlying DS0s in a channel group, use the **speed** command in channel group configuration mode. To revert to the default speed, use the **no** form of this command.

speed *kbps*

no speed *kbps*

Syntax Description	<i>kbps</i>	Speed of the underlying DS0s in kilobits per second (kbps). Valid values are 56 and 64. The default is 64 kbps.

Command Default	The default speed is 64 kbps.

Command Modes	Channel group configuration for T1

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. Before the channel group configuration is valid, you must define the associated DS0 time slots using the timeslots command.

Task ID	Task ID	Operations
	sonet-sdh	read, write

Examples	The following example shows how to define the speed for the underlying DS0 to be 56 kbps:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/10
RP/0/RSP0/CPU0:router(config-t1el)# channel-group 5
RP/0/RSP0/CPU0:router(config-t1el-channel_group)# speed 56
```

Related Commands

Command	Description
timeslots, on page 1157	Associates one or more DS0 time slots to a channel group and create an associated serial subinterface.
channel-group, on page 1045	Configures a DS0 channel group and enters channel group configuration mode.

timeslots

To associate one or more DS0 time slots to a channel group and create an associated serial subinterface, use the **timeslots** command in channel group configuration mode. To unassign the DS0 time slots and delete the associated serial interface, use the **no** form of this command.

timeslots *range*

no timeslots

Syntax Description

range

Command Default

No default behavior or values

Command Modes

Channel group configuration for T1 and E1

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The time slot range must match the DS0 time slots assigned to the channel group. The service provider defines the DS0 time slots that compose a channel group.

Before the channel group configuration is valid, you must define the associated DS0 time slots using the **timeslots** command.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to associate DS0 time slots 1, 6, 8, 9 and 10 to channel group 5:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/10
RP/0/RSP0/CPU0:router(config-t1e1)# channel-group 5
RP/0/RSP0/CPU0:router(config-t1e1-channel_group)# timeslots 1:6:8-10
```

The following example shows configuration of the full 24 timeslots on the 2-Port Channelized OC-12/DS0 SPA, which is required when configuring link noise monitoring:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/10
RP/0/RSP0/CPU0:router(config-t1e1)# channel-group 5
RP/0/RSP0/CPU0:router(config-t1e1-channel_group)# timeslots 1-24
```

Related Commands

Command	Description
framing (E1), on page 1090	Selects the frame type for an E1 data line.
framing (T1), on page 1094	Selects the frame type for a T1 data line.
speed (DS0), on page 1155	Specifies the speed of the underlying DS0s in a channel group.
channel-group, on page 1045	Configures a DS0 channel group and enters channel group configuration mode.

yellow

To enable detection and generation of T1 yellow alarms, use the **yellow** command in T1 configuration mode. To disable detection and generation of T1 yellow alarms, use the **no** form of this command.

yellow {**detection**| **generation**} {**disable**| **enable**}

no yellow {**detection**| **generation**} {**disable**| **enable**}

Syntax Description

detection	Detects yellow alarms.
generation	Generates yellow alarms.
disable	Disables detection or generation of T1 yellow alarms.
enable	Enables detection or generation of T1 yellow alarms. The default is enable.

Command Default

Yellow alarms are detected and generated on the T1 channel.

Command Modes

T1 configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the T1 framing type is super frame (SF), you should consider disabling yellow alarm detection as the yellow alarm can be incorrectly detected with SF framing.

Serial interface may flap and eventually, go down if yellow alarm detection is not disabled on its T1 controller configured with SF framing.

The default state of the **yellow** command is enabled. If you disable yellow alarm detection and want to reenale it, you can use the **no** form of the command. Alternatively, you can use the **enable** keyword.

The **yellow** command is only applicable to T1 lines.

Task ID

Task ID	Operations
sonet-sdh	read, write

Examples

The following example shows how to disable yellow alarm generation:

```
RP/0/RSP0/CPU0:router(config)# controller t1 0/6/0/0/10  
RP/0/RSP0/CPU0:router(config-t1e1)# yellow generation disable
```



Traffic Mirroring Commands on Cisco ASR 9000 Series Router

This module describes the commands used to configure and monitor traffic mirroring.

- [acl, page 1162](#)
- [clear monitor-session counters, page 1164](#)
- [destination interface, page 1166](#)
- [destination pseudowire, page 1168](#)
- [mirror first, page 1169](#)
- [monitor-session, page 1170](#)
- [monitor-session \(interface\), page 1171](#)
- [monitor-session \(l2vpn\), page 1173](#)
- [show monitor-session status, page 1175](#)
- [show monitor-session counters, page 1177](#)

acl

To configure ACL-based traffic mirroring, use the **acl** command in monitor session configuration mode. To stop ACL-based traffic mirroring, use the **no** form of this command.

acl

Syntax Description

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

Monitor session configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you use the **acl** command, traffic is mirrored according to the definition of the global interface access list (ACL) defined in one of the following commands: **ipv4 access-list**, **ipv6 access-list**, **ethernet-services access-list**.

Even when the **acl** command is configured on the source mirroring port, if the ACL configuration command does not use the **capture** keyword, no traffic gets mirrored.

If the ACL configuration uses the **capture** keyword, but the **acl** command is not configured on the source port, although traffic is mirrored, no access list configuration is applied.

Examples

The following example shows how to configure ACL-based traffic mirroring on the interface:

```
RP/0/RP0/CPU0:router(config)# monitor-session tm_example
RP/0/RP0/CPU0:router(config)# ethernet-services access-list tm_filter
RP/0/RP0/CPU0:router(config-es-acl)# 10 deny 0000.1234.5678 0000.abcd.abcd any capture
RP/0/RP0/CPU0:router(config-es-acl)# exit
RP/0/RP0/CPU0:router(config)# interface GigabitEthernet0/2/0/0
RP/0/RP0/CPU0:router(config-if)# monitor-session tm_example direction rx-only
RP/0/RP0/CPU0:router(config-if)# acl
RP/0/RP0/CPU0:router(config-if)# l2transport
RP/0/RP0/CPU0:router(config-if-l2)# exit
RP/0/RP0/CPU0:router(config-if)# ethernet-services access-group tm_filter ingress
RP/0/RP0/CPU0:router(config-if)# end
```


Related Commands

Command	Description
ethernet-services access-list	Defines an Ethernet services (Layer 2) access list by name.
ipv4 access-list	Defines an IPv4 access list by name.
ipv6 access-list	Defines an IPv6 access list by name.

clear monitor-session counters

To clear the traffic mirroring session statistics, use the **clear monitor-session counters** command in EXEC mode.

clear monitor-session counters [*interface type interface-path-id*]

Syntax Description

interface	Identifies the interface for which the counters are to be cleared.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

All stored statistics for all interfaces are cleared.

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
	read

Examples

The following example shows how to clear the traffic mirroring statistic counters:

```
RP/0/RSP0/CPU0:router# clear monitor-session counters
```

```
Sun Oct 31 05:39:25.169 DST
```

```
RP/0/RSP0/CPU0:PE44_ASR-9010#
```

destination interface

To associate a destination interface with a traffic mirroring session, use the **destination interface** command in monitor session configuration mode. To remove the designated destination, use the **no** form of this command.

destination interface *type interface-path-id*

no destination interface *type interface-path-id*

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

Monitor sessions configuration

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **destination interface** command to assign a traffic monitoring session to a specific destination interface. This is the port to which a network analyzer is connected. This is generally called the monitoring port.

A destination port has these characteristics:

- A destination port must reside on the same switch as the source port.
- A destination port can be any Ethernet physical port or EFP, but not a bundle interface.
- At any one time a destination port can participate in only one traffic mirroring session. A destination port in one traffic mirroring session cannot be a destination port for a second traffic mirroring session. In other words, no two monitor sessions can have the same destination port.
- A destination port cannot also be a source port.

Examples

The following example shows how to configure a monitoring port for a traffic mirroring session:

```
RP/0/RP0/CPU0:router(config)# monitor-session mon1
RP/0/RSP0/CPU0:router(config-mon)# destination interface gigabitethernet0/0/0/15
```

destination pseudowire

To direct mirrored traffic to a pseudowire, use the **destination pseudowire** command in monitor session configuration mode. To remove the pseudowire designation, use the **no** form of this command.

destination pseudowire

no destination pseudowire

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes Monitor session configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **destination pseudowire** command to direct the mirrored traffic to a pseudowire. A network analyzer in a central location can then be used to monitor the traffic. Use the [monitor-session \(l2vpn\), on page 1173](#) command to define the exact pseudowire to which the monitored traffic should be replicated.

Examples The following example shows how to configure a monitoring port for a traffic mirroring session:

```
RP/0/RP0/CPU0:router(config)# monitor-session mon1
RP/0/RSP0/CPU0:router(config-mon)# destination pseudowire
```

Related Commands	Command	Description
	monitor-session (l2vpn), on page 1173	Attaches a traffic monitoring session as one of the segments for a cross connect.

mirror first

To configure partial traffic mirroring, use the **mirror first** command in monitor session configuration mode. To stop mirroring a portion of the packet, use the **no** form of this command.

mirror first *bytes*

Syntax Description

<i>bytes</i>	Number of bytes mirrored. Values can range from 65 to 256.

Command Default

The entire packet is mirrored.

Command Modes

Monitor session configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **mirror first** command to mirror the first 64 to 256 bytes of the packet. The actual mirrored packet is the configured partial packet monitoring size plus the 4-byte trailing CRC.

Examples

The following example shows how to mirror the first 100 bytes of the packet:

```
RP/0/RP0/CPU0:router(config)# interface gigabitethernet0/0/0/11
RP/0/RP0/CPU0:router(config-if-l2)# monitor-session mon1
RP/0/RSP0/CPU0:router(config-if-mon)# mirror first 100
```

Related Commands

Command	Description
monitor-session , on page 1170	Defines a traffic mirroring session and enter monitor session configuration mode.

monitor-session

To define a traffic mirroring session and enter monitor session configuration mode, use the **monitor-session** command in global configuration mode. To remove the traffic mirroring session, use the **no** form of this command.

monitor-session *session-name*

no monitor-session *session-name*

Syntax Description

<i>session-name</i>	Name of the monitor session to configure.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Before you can assign a monitor session to a specific interface, you must configure it using the **monitor-session** command. The *session-name* should not be the same as any interface name.

In monitor session configuration mode, you should define the destination interface to be used in the traffic mirroring session using the **destination** command.

Examples

The following example shows how to enter monitor session configuration mode:

```
RP/0/RP0/CPU0:router(config)# monitor-session mon1
RP/0/RSP0/CPU0:router(config-mon)#
```

Related Commands

Command	Description
destination interface , on page 1166	Associates a destination interface with a traffic mirroring session.

monitor-session (interface)

To associate a traffic mirroring session with a specific interface, use the **monitor-session** command in interface configuration mode. To remove the association between a traffic mirroring session and an interface, use the **no** form of this command.

monitor-session *session-name* [**direction** {**rx-only**|**tx-only**}]

Syntax Description

<i>session-name</i>	Name of the monitor session to configure.
direction	Specifies that traffic replication is in only one direction.
rx-only	Specifies that only ingress traffic is replicated.
tx-only	Specifies that only egress traffic is replicated.

Command Default

Replicates both ingress and egress traffic.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.9.1	This command was introduced.
Release 4.0.0	The acl and mirror first keywords were added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Before you can associate a traffic mirroring session to a specific interface, you must define it using the **monitor-session** global configuration command. Once the traffic mirroring session is defined, use the **monitor-session** interface configuration command to associate this session with a specific source interface. Once associated, all specified traffic on the interface is then replicated to the destination location defined in the monitor session configuration.

The **monitor-session** interface configuration command also enters monitor session configuration mode for you to configure additional features of the mirroring session.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enter monitor session configuration mode:

```
RP/0/RP0/CPU0:router(config)# interface gigabitethernet0/0/0/11
RP/0/RP0/CPU0:router(config-if)# l2transport
RP/0/RP0/CPU0:router(config-if-l2)# monitor-session mon1
RP/0/RSP0/CPU0:router(config-if-mon)#
```

Related Commands

Command	Description
monitor-session , on page 1170	Defines a traffic mirroring session and enter monitor session configuration mode.

monitor-session (l2vpn)

To attach a traffic monitoring session as one of the segments for a cross connect, use the **monitor-session** command in point-to-point cross connect configuration mode. To remove the association between a traffic mirroring session and a cross connect, use the **no** form of this command.

monitor-session *session-name*

monitor-session *session-name*

Syntax Description

<i>session-name</i>	Name of the monitor session to configure.

Command Default

No default behavior or values

Command Modes

Point-to-point cross connect configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Before you can attach a traffic mirroring session to a cross connect, you must define it using the **monitor-session** global configuration command. Once the traffic mirroring session is defined, use the **monitor-session** point-to-point cross connect configuration command to attach this session as one of the segments for the cross connect. Once attached, all traffic replicated from the monitored interfaces (in other words, interfaces that are associated with the monitor-session) is replicated to the pseudowire that is attached to the other segment of the cross-connect.

The *session-name* argument should be different than any interface names currently used in the system.

Task ID

Task ID	Operations
l2vpn	read, write

Examples

The following example shows how to attach a traffic mirroring session as segment for the xconnect:

```
RP/0/RSP0/CPU0:router(config)# l2vpn
```

```
RP/0/RSP0/CPU0:router(config-l2vpn)# xconnect group g1
RP/0/RSP0/CPU0:router(config-l2vpn-xc)# p2p xcon1
RP/0/RSP0/CPU0:router(config-l2vpn-xc-p2p)# monitor-session mon1
```

Related Commands

Command	Description
monitor-session, on page 1170	Defines a traffic mirroring session and enter monitor session configuration mode.

show monitor-session status

To display status information about configured traffic mirroring sessions, use the **show monitor-session status** command in EXEC mode.

show monitor-session [*session-name*] **status** [**detail**] [**errors**]

Syntax Description

<i>session-name</i>	Name of the monitor session to configure.
detail	Displays the full error string for any errors.
errors	Displays all sessions, but only source interfaces with errors are displayed (if no source interfaces have errors, then 'No errors' is displayed).

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show monitor-sessions status** command displays the following information:

- Destination information for the session (including the name of the interface).
- Destination status (interface state).
- List of source interfaces.
- Any other status information that may be pertinent, such as a software or hardware error that would stop sessions operating correctly. If an error is returned from interactions with another component, then the full error string is only displayed in detail output; standard tabular output reports that there has been an error but refers the user to the detailed output.

Examples

The following example shows sample output from the **show monitor-session status** command:

```
RP/0/RSP0/CPU0:router# show monitor-session status
```

show monitor-session status

```
Monitor-session foo
Destination interface GigabitEthernet 0/0/0/0
=====
Source Interface      Dir    Status
-----
Gi0/1/0/0.10         Both   Operational
Gi0/1/0/0.11         Rx     Operational
Gi0/1/0/0.12         Tx     Operational
```

show monitor-session counters

To display statistics regarding traffic mirroring sessions, use the **show monitor-session counters** command in EXEC mode.

show monitor-session [*session-name*] **counters**

Syntax Description

<i>session-name</i>	Name of the monitor session to configure.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show monitor-sessions counters** command displays a list of all source interfaces, and the replicated packet statistics for each interface. The full set of statistics displayed for each interface is:

- Ingress replicated packets and octets
- Egress replicated packets and octets
- Non-replicated packets and octets

Examples

The following example shows sample output from the **show monitor-session counters** command:

```
RP/0/RSP0/CPU0:router# show monitor-session 2 counters

Monitor session 2
GigabitEthernet 0/3/0/0.100:
  Rx Replicated: 100 Packets 8000 Bytes
  Tx Replicated: 2 Packets 3000 Bytes
  Non Replicated: 0 Packets 0 Bytes
```

 **show monitor-session counters**



VLAN Subinterface Commands on the Cisco ASR 9000 Series Router

This module provides command line interface (CLI) commands for configuring IEEE 802.1Q VLANs on the Cisco ASR 9000 Series Router.

- [dot1q vlan](#), page 1180
- [interface \(VLAN\)](#), page 1182

dot1q vlan

To assign a VLAN ID to a subinterface (or to modify the VLAN ID that is currently assigned to a subinterface), use the **dot1q vlan** command in subinterface configuration mode. To remove the VLAN ID assigned to a subinterface, use the **no** form of this command.



Note

Effective with Cisco IOS XR Release 3.7.2, the **dot1q vlan** command is replaced by the **encapsulation dot1q** command. See the **encapsulation dot1q** command for more information.

dot1q vlan *vlan-id* [*vlan-id2*] **any**

no dot1q vlan *vlan-id*

Syntax Description

<i>vlan-id</i>	ID of the subinterface. Range is from 1 to 4094 (0 and 4095 are reserved).
<i>vlan-id2</i>	(Optional) Identifies the host VLAN of a Q-in-Q VLAN pair. Replace <i>vlan-id2</i> with a number that specifies the host VLAN. Range is from 1 to 4094.
any	(Optional) Identifies the host VLAN of a Q-in any VLAN pair.

Command Default

No default behavior or values

Command Modes

Subinterface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced and was also replaced by the encapsulation dot1q command.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The VLAN ID specifies where 802.1Q tagged packets are sent and received on a specified subinterface. An 802.1Q VLAN subinterface must have a configured VLAN ID to send and receive traffic; without a VLAN ID, the subinterface remains in the down state. All VLAN IDs must be unique among all subinterfaces configured on the same physical interface. To change a VLAN ID, the new VLAN must not already be in use on the same physical interface. To exchange VLAN IDs, you must remove the configuration information and reconfigure the ID for each device.

**Note**

The subinterface does not pass traffic without an assigned VLAN ID.

**Note**

The **dot1q vlan** command is replaced by the **encapsulation dot1q** command. It is still available for backward-compatibility, but only for Layer 3 interfaces. The **encapsulation dot1q** command must be used going forward.

Task ID

Task ID	Operations
vlan	read, write

Examples

The following example shows how to configure the VLAN ID and IP address on a subinterface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/2/0/4.1
RP/0/RSP0/CPU0:router(config-subif)# dot1q vlan 10
RP/0/RSP0/CPU0:router(config-subif)# ipv4 addr 10.0.0.1/24
```

The following example shows how to configure the VLAN IDs for both VLANs in a single Q-in-Q attachment circuit (AC). In this case, incoming traffic must match both of the VLAN IDs before it is accepted by the subinterface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/2/0/4.1
RP/0/RSP0/CPU0:router(config-subif)# dot1q vlan 10 20
```

The following example shows how to configure the VLAN IDs for a Q-in-any AC. In this case, all incoming traffic must have two VLAN tags, where the outer VLAN ID matches the configured value, while the inner VLAN ID can be any value.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/2/0/4.1 12transport
RP/0/RSP0/CPU0:router(config-subif)# dot1q vlan 10 any
```

Related Commands

Command	Description
dot1q native vlan	Assigns the native VLAN ID of a physical interface trunking 802.1Q VLAN traffic.
show interfaces , on page 608	Displays statistics for all interfaces configured on the router or for a specific node.

interface (VLAN)

To create a VLAN subinterface, use the **interface** command in global configuration mode. To delete a subinterface, use the **no** form of this command.

interface *type interface-path-id.subinterface* [**l2transport**]

no interface *type interface-path-id.subinterface* [**l2transport**]

Syntax Description

<i>type</i>	Type of Ethernet interface on which you want to create a VLAN. Enter GigabitEthernet , TenGigE , or Bundle-Ether .
<i>interface-path-id.subinterface</i>	Physical interface or virtual interface followed by the subinterface path ID. Naming notation is <i>interface-path-id.subinterface</i> . The period in front of the subinterface value is required as part of the notation. For more information about the syntax for the router, use the question mark (?) online help function.
l2transport	Enables Layer 2 transport port mode on the specified VLAN interface and enters Layer 2 transport configuration mode. The l2transport keyword creates the Vlan interface in L2 mode so that it can be used for L2VPNs and local switching.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.

- *module*: Module number. A physical layer interface module (PLIM) is always 0.
- *port*: Physical port number of the interface.
- If specifying an Ethernet bundle interface, the range is from 1 through 65535.

For the *subinterface* argument, the range is from 0 through 4095.

To configure a large number of subinterfaces, we recommend entering all configuration data before you commit the **interface** command.

To change an interface from Layer 2 to Layer 3 mode and back, you must delete the interface first and then re-configure it in the appropriate mode.

**Note**

A subinterface does not pass traffic without an assigned VLAN ID.

Task ID

Task ID	Operations
vlan	read, write

Examples

The following example shows how to configure a VLAN subinterface on a 10-Gigabit Ethernet interface:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/0/0/1.2
RP/0/RSP0/CPU0:router(config-subif)# dot1q vlan 1
RP/0/RSP0/CPU0:router(config-subif)# ipv4 address 50.0.0.1/24
```

The following example shows how to create a VLAN subinterface with Layer 2 transport port mode enabled, and enter Layer 2 transport configuration mode under that VLAN:

```
RP/0/RSP0/CPU0:router(config)# interface GigabitEthernet 0/4/0/1.1
RP/0/RSP0/CPU0:router(config-if-l2)#
```

Related Commands

Command	Description
dot1q native vlan	Assigns the native VLAN ID of a physical interface trunking 802.1Q VLAN traffic.
dot1q vlan, on page 1180	Assigns a VLAN ID to a subinterface (or modifies the VLAN ID that is currently assigned to a subinterface).

interface (VLAN)



10-Gigabit Ethernet WAN PHY Controller Commands on the Cisco ASR 9000 Series Router

This module describes the commands to configure a 10-Gigabit Ethernet WAN PHY physical controller on the Cisco ASR 9000 Series Router.

For information on 10-Gigabit Ethernet (GE) interface commands see the *Ethernet Interface Commands on the Cisco ASR 9000 Series Router* module.

- [clear controller wanphy, page 1186](#)
- [clear counters wanphy, page 1188](#)
- [controller wanphy, page 1190](#)
- [show controllers wanphy, page 1192](#)

clear controller wanphy

To clear the alarms counters for a specific 10-Gigabit Ethernet WAN PHY controller, use the **clear controller wanphy** command in EXEC mode.

clear controller wanphy interface-id stats

Syntax Description

<i>interface-id</i>	Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. • <i>rack</i>: Chassis number of the rack. • <i>slot</i>: Physical slot number of the line card. • <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. Shared port adapters (SPAs) are referenced by their subslot number. • <i>port</i>: Physical port number of the interface. For more information about the syntax for the router, use the question mark (?) online help function.
stats	Clears alarm counters for the specified 10-Gigabit Ethernet WAN PHY controller.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
interface	read, write, execute

Examples

The following example shows how to configure a 10-Gigabit Ethernet WAN PHY controller in Slot 6:

```
RP/0/RSP0/CPU0:router # clear controller wanphy 0/6/0/0 stats
```

Related Commands

Command	Description
show controllers wanphy, on page 1192	Displays alarms, registers, and module information for a 10-Gigabit Ethernet WAN PHY controller.
clear counters wanphy, on page 1188	Clears the alarms counters for a specific 10-Gigabit Ethernet WAN PHY interface.

clear counters wanphy

To clear the alarms counters for a specific 10-Gigabit Ethernet WAN PHY interface, use the **clear counters wanphy** command in EXEC mode.

clear counters wanphy interface-id stats

Syntax Description

<i>interface-id</i>	Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. • <i>rack</i>: Chassis number of the rack. • <i>slot</i>: Physical slot number of the line card. • <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. Shared port adapters (SPAs) are referenced by their subslot number. • <i>port</i>: Physical port number of the interface. For more information about the syntax for the router, use the question mark (?) online help function.
stats	Clears alarm counters for the specified 10-Gigabit Ethernet WAN interface.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
interface	read, write, execute

Examples

The following example shows how to clear the alarms counters for a 10-Gigabit Ethernet WAN interface:

```
RP/0/RSP0/CPU0:router # clear counters wanphy 0/6/0/0 stats
```

Related Commands

Command	Description
show controllers wanphy, on page 1192	Displays alarms, registers, and module information for a 10-Gigabit Ethernet WAN PHY controller.
clear controller wanphy, on page 1186	Clears the alarms counters for a specific 10-Gigabit Ethernet WAN PHY controller.

controller wanphy

To enter WAN physical controller configuration mode in which you can configure a 10-Gigabit Ethernet WAN PHY controller, use the **controller wanphy** command in global configuration mode. To return the 10-Gigabit Ethernet WAN PHY controller to its default WAN mode configuration, use the **no** form of this command.

controller wanphy interface-id

no controller wanphy interface-id

Syntax Description

<i>interface-id</i>	Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. • <i>rack</i>: Chassis number of the rack. • <i>slot</i>: Physical slot number of the line card. • <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. Shared port adapters (SPAs) are referenced by their subslot number. • <i>port</i>: Physical port number of the interface.

For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

After you use the **no controller wanphy** command to return a 10-Gigabit Ethernet WAN PHY controller to its default configuration, you need to cycle the power to the 10-Gigabit Ethernet SPA for the mode configuration changes to take effect.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enter WAN PHY controller configuration mode:

```
RP/0/RSP0/CPU0:router # configure  
RP/0/RSP0/CPU0:router(config) # controller wanphy 0/6/0/0  
RP/0/RSP0/CPU0:router(config-wanphy) #
```

Related Commands

Command	Description
show controllers wanphy, on page 1192	Displays alarms, registers, and module information for a 10-Gigabit Ethernet WAN PHY controller.

show controllers wanphy

To display alarms, registers, and module information for a 10-Gigabit Ethernet WAN PHY controller, use the **show controllers wanphy** command in EXEC mode.

show controller wanphy *interface-id* [**alarms**| **all**| **registers**]

Syntax Description

<i>interface-id</i>	Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. • <i>rack</i>: Chassis number of the rack. • <i>slot</i>: Physical slot number of the line card. • <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. Shared port adapters (SPAs) are referenced by their subslot number. • <i>port</i>: Physical port number of the interface. For more information about the syntax for the router, use the question mark (?) online help function.
alarms	Displays information about any alarms that are detected by the specified 10-Gigabit Ethernet WAN PHY controller.
all	Displays registers, alarms, and module information for the specified 10-Gigabit Ethernet WAN PHY controller.
registers	Displays registers for the specified 10-Gigabit Ethernet WAN PHY controller.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows sample output from the **show controllers wanphy** command with the **all** keyword:

```
RP/0/RSP0/CPU0:router# show controllers wanphy 0/3/4/0 all
```

```
Interface: wanphy0_3_4_0
Configuration Mode: WAN Mode
SECTION
  LOF = 1, LOS = 1, BIP(B1) = 2912
LINE
  AIS = 1, RDI = 0, FEBE = 949, BIP(B2) = 48562
PATH
  AIS = 1, RDI = 0, FEBE = 0, BIP(B2) = 0
  LOP = 0, NEWPTR = 0, PSE = 0, NSE = 0
WIS ALARMS
  SER = 9, FELCDP = 0, FEAISP = 0
  WLOS = 1, PLCD = 0
  LFEBIP = 47260, PBEC = 949

Active Alarms[All defects]: lof,
Active Alarms[Highest Alarms]: lof
  Rx(K1/K2): N/A, Tx(K1/K2): N/A
  S1S0 = N/A, C2 = N/A
PATH TRACE BUFFER
Remote IP addr: 000.000.000.000
BER thresholds: N/A
TCA thresholds: N/A
```

```
REGISTERS
P_FEBE : 949
L_FE_BIP: 47260
L_BIP : 48562
P_BEC : 949
S_BIP : 2912
J1-Rx0 : 0x3136
J1-Rx1 : 0x352e
J1-Rx2 : 0x3234
J1-Rx3 : 0x332e
J1-Rx4 : 0x3132
J1-Rx5 : 0x3900
J1-Rx6 : 0x3138
J1-Rx7 : 0x372e
Internal Information
Operational Mode : WAN Mode
Curent Alarms: 0x8
```

Table 74: show controllers wanphy Command Output Fields

Field	Description
Interface	Identifies the WAN physical interface, in the format <i>rack/slot/module/port</i>. • <i>rack</i>: Chassis number of the rack. • <i>slot</i>: Physical slot number of the line card. • <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. Shared port adapters (SPAs) are referenced by their subslot number. • <i>port</i>: Physical port number of the interface.
Configuration Mode	Current configuration mode running on this controller. Can be WAN mode or LAN mode.
SECTION	Displays the following section alarms: • LOF—Number of Loss of Framing (LOF) errors on this connection section. LOF alarms are critical because they indicate that the link associated with this section is down. • LOS—Number of loss of signal (LOS) errors on this connection section. LOS alarms are critical because they indicate that the link associated with this section is down. • BIP(B1)—Number of bit interleaved parity (BIP) B1 errors on this section that exceeded the specified threshold.

Field	Description
LINE	Displays the following line alarms: • AIS—Number of AIS errors on this line. AIS alarms are critical because they indicate that the line is down. • RDI—Remote defect indication. ◦ Line remote defect indication is reported by the downstream LTE when it detects LOF4, LOS5, or AIS6. ◦ Path remote defect indication is reported by the downstream PTE when it detects a defect on the incoming signal. • FEBE—Number of far-end block errors (FEBE) on this line. Line FEBE errors are accumulated from the M0 or M1 byte, and are reported when the downstream LTE detects BIP7 (B2) errors. • BIP(B2)—Number of bit interleaved parity (BIP) B2 errors on this line that exceeded the specified threshold.

Field	Description
PATH	Displays the following path alarms: • AIS—Number of AIS errors on this path. AIS alarms are critical because they indicate that the line associated with this path is down. • RDI—Number of RDI errors on this path. • FEBE—Number of FEBE errors on this path. Path FEBEs are accumulated from the G1 byte, and are reported when the downstream PTE detects BIP (B3) errors. • BIP(B2)—Number of bit interleaved parity (BIP) errors on this path that exceeded the specified threshold. • LOP—Number of loss of pointer (LOP) errors on this path. Path LOPs are reported as a result of an invalid pointer (H1, H2) or an excess number of new data flag enabled indications. • NEWPTR—Inexact count of the number of times the SONET framer has validated a new SONET pointer value (H1, H2). • PSE—Inexact count of the number of times the SONET framer has detected a positive stuff event (PSE) in the received pointer (H1, H2). • NSE—Inexact count of the number of times the SONET framer has detected a negative stuff event in the received pointer (H1, H2). Note For Cisco IOS XR software release 3.5.0, the following fields display no errors: RDIFEBEBIP(B2)NEWPTRPSENSE

Field	Description
WIS ALARMS	Displays the following WAN Interconnect Sublayer (WIS) layer alarms: • SER—Number of Severely Errored Seconds (SER) errors • FELCDP—Number of Far End - Loss of Code-group Delineation - Path (FELCDP) errors • FEAISP—Number of Far End - AIS - Path (FEAISP) errors • WLOS—Number of WIS LOS (WLOS) errors. • PLCD—Number of Path Loss of Code-group Delineation (PLCD) errors • LFEBIP—Number of Line - Far End - BIP (LFEBI) errors • PBEC—Number of Path - Block Error Counter (PBEC) errors Note Alarms are applicable only when the controller is configured in WAN-PHY mode.
Active Alarms[All defects]	Total number of currently active alarms on this interface. Note Alarms are applicable only when the controller is configured in WAN-PHY mode.
Active Alarms[Highest Alarms]	Total number of the most significant active alarms on this interface. These alarms are likely causing all other alarms on the interface. Note Alarms are applicable only when the controller is configured in WAN-PHY mode.
Rx(K1/K2)	Total number of errored K1/K2 bytes from the Line OverHead (LOH) of the SONET frame that were received by this interface.
Tx(K1/K2)	Total number of errored K1/K2 bytes from the Line OverHead (LOH) of the SONET frame that were transmitted by this interface.
S1S0	Number of errored payload pointer bytes on this interface.
C2	Number of errored STS identifier (C1) bytes on this interface.

Field	Description
PATH TRACE BUFFER	Rx J1 trace buffer received from the far end. If the received data is valid it will be shown below the PATH TRACE BUFFER field.
Remote IP addr	Byte string containing the IP address of the remote end of this connection. If the received data is invalid, this field displays no IP address.
BER thresholds	BER threshold values of the specified alarms for a the 10-Gigabit Ethernet controller.
TCA thresholds	TCA threshold values of the specified alarms for a the 10-Gigabit Ethernet controller.

Field	Description
REGISTERS	Displays output from the following registers in hexadecimal format: • P_FEFE—Total number of Far End Block Errors (FEBEs) that occurred on the path that is associated with this interface. • L_FE_BIP—Total number of far end BIP errors that occurred on this interface. • L_BIP—Total number of local BIP errors that occurred on this interface. • P_BEC—Total BIP error count (BEC) that occurred on the path that is associated with this interface. • S_BIP—Total number of far end BIP errors that occurred on the current section. • J1-Rx0—Characters from far end IPV4 address string. • J1-Rx1—Characters from far end IPV4 address string. • J1-Rx2—Characters from far end IPV4 address string. • J1-Rx3—Characters from far end IPV4 address string. • J1-Rx4—Characters from far end IPV4 address string. • J1-Rx5—Characters from far end IPV4 address string. • J1-Rx6—Characters from far end IPV4 address string. • J1-Rx7—Characters from far end IPV4 address string. Note The following Serdes-WIS HW registers are used to debug counters and can be cleared only by power cycling the hardware: P_FEBEL_FE_BIPL_BIPP_BECS_BIP. The J1-Rx registers (J1-Rx0 through J1-Rx7) comprise the raw 16 bytes of data received from the Rx J1 Path Trace Buffer, and are used to debug IPV4 address sent from far end.

Field	Description
Internal Information	Displays the following internal information for the interface: • Operational Mode—Current operation mode for this controller. Can be WAN mode or LAN mode. Use the Operational Mode field to detect whether the hardware was power cycled after a mode configuration change. If the Operational Mode field shows output that is different from the Configuration Mode field, then the hardware was not power cycled properly after a mode configuration change. • Current Alarms—Bit map of all currently active alarms on this controller. Use this information for debugging purposes. Note Alarms are applicable only when the controller is configured in WAN-PHY mode.

The following example shows sample output from the **show controllers wanphy** command with the **alarms** keyword:

RP/0/RSP0/CPU0:router# **show controllers wanphy 0/3/4/0 alarms**

```
Interface: wanphy0_3_4_0
Configuration Mode: WAN Mode
SECTION
  LOF = 1, LOS = 1, BIP(B1) = 2912
LINE
  AIS = 1, RDI = 0, FEBE = 949, BIP(B2) = 48562
PATH
  AIS = 1, RDI = 0, FEBE = 0, BIP(B2) = 0
  LOP = 0, NEWPTR = 0, PSE = 0, NSE = 0
WIS ALARMS
  SER = 9, FELCDP = 0, FEAISP = 0
  WLOS = 1, PLCD = 0
  LFEBIP = 47260, PBEC = 949

Active Alarms[All defects]:
Active Alarms[Highest Alarms]:
  Rx(K1/K2): N/A, Tx(K1/K2): N/A
  S1S0 = N/A, C2 = N/A
PATH TRACE BUFFER
Remote IP addr: 981.761.542.321
BER thresholds: N/A
TCA thresholds: N/A
```

The alarm information displayed in the **show controllers wanphy interface-id alarms** command output are described in [Table 74: show controllers wanphy Command Output Fields](#), on page 1194.

The following example shows sample output from the **show controllers wanphy** command with the **registers** keyword:

```
RP/0/RSP0/CPU0:router# show controllers wanphy 0/3/4/0 registers
Interface: wanphy0_3_4_0

Configuration Mode: WAN Mode
```

```
REGISTERS
P_FEBC : 949
L_FE_BIP: 47260
L_BIP : 48562
P_BEC : 949
S_BIP : 2912
J1-Rx0 : 0x3136
J1-Rx1 : 0x352e
J1-Rx2 : 0x3234
J1-Rx3 : 0x332e
J1-Rx4 : 0x3132
J1-Rx5 : 0x3900
J1-Rx6 : 0x3138
J1-Rx7 : 0x372e
Internal Information
Operational Mode : WAN Mode
Current Alarms: 0x0
```

The registers displayed in the **show controllers wanphy interface-id registers** command output are described in [Table 74: show controllers wanphy Command Output Fields, on page 1194](#).

Related Commands

Command	Description
clear controller wanphy, on page 1186	Clears the alarms counters for a specific 10-Gigabit Ethernet WAN PHY controller.

 `show controllers wanphy`



INDEX

A

acl command [1162](#)
action capabilities-conflict command [257](#)
action critical-event command [259](#)
action discovery-timeout command [261](#)
action dying-gasp command [263](#)
action high-threshold command [265](#)
action remote-loopback command [267](#)
action session-down command [269](#)
action session-up command [271](#)
action uni-directional link-fault command [273](#)
action wiring-conflict command [275](#)
address-family ipv4 unicast (BFD) command [3](#)
admin-state command [75](#)
aggregate command [277](#)
ais transmission command [279](#)
ais transmission up command [281](#)
ais-shut (SONET path) command [925](#)
ais-shut (SONET) command [923](#)
aps group (global) command [930](#)
aps group command [927](#)
au command [932](#)
authenticate (PGP) command [934](#)

B

b3-ber-prdi command [936](#)
backbone interface command [657](#)
bandwidth (global) command [586](#)
bert e1 command [1026](#)
bert e3 command [1029](#)
bert error command [1031](#)
bert interval command [1033](#)
bert pattern command [1035](#)
bert t1 command [1038](#)
bert t3 command [1041](#)
bfd address-family ipv4 destination command [7](#)
bfd address-family ipv4 fast-detect command [9](#)
bfd address-family ipv4 minimum-interval command [10](#)
bfd address-family ipv4 multiplier command [13](#)

bfd address-family ipv4 timers command [16](#)
bfd command [5](#)
bfd fast-detect command [18](#)
bfd minimum-interval command [21](#)
bfd multiplier command [27](#)
buckets archive command [283](#)
buckets size command [285](#)
bundle command [764](#)
bundle id command [664](#)
bundle load-balancing hash command [668](#)
bundle maximum-active links command [670](#)
bundle minimum-active bandwidth command [672](#)
bundle minimum-active links command [673](#)
bundle port-priority command [675](#)
bundle-hash command [659](#)

C

cablelength command [1043](#)
carrier-delay command [175](#)
channel local command [937](#)
channel remote command [939](#)
channel-group command [1045](#)
clear bfd counters command [30](#)
clear controller backplane ethernet location statistics command [622](#)
clear controller lnm command [1047](#)
clear controller t1 command [1050](#)
clear controller t3 command [1052](#)
clear controller wanphy command [1186](#)
clear counters sonet command [941](#)
clear counters wanphy command [1188](#)
clear ethernet cfm ccm-learning-database location command [287](#)
clear ethernet cfm interface statistics command [288](#)
clear ethernet cfm local meps command [290](#)
clear ethernet cfm peer meps command [292](#)
clear ethernet cfm traceroute-cache command [294](#)
clear ethernet oam statistics command [298](#)
clear ethernet sla statistics all command [300](#)
clear ethernet sla statistics on-demand command [302](#)
clear ethernet sla statistics profile command [305](#)
clear frame-relay lmi interface command [517](#)

clear frame-relay multilink interface command [515](#)
clear frequency synchronization esmc statistics command [177](#)
clear frequency synchronization wait-to-restore command [178](#)
clear interface command [589](#)
clear iphc ipv4 command [865](#)
clear lacp counters command [677](#)
clear mac-accounting (Ethernet) command [181](#)
clear monitor-session counters command [1164](#)
clear ppp sso state command [799](#)
clear ppp statistics command [801](#)
clock source (SONET) command [943](#)
clock source (T1/E1) command [1054](#)
clock source (T3/E3) command [1056](#)
clock-interface command [183](#)
clock-interface sync command [185](#)
connection timeout command [309](#)
continuity-check archive hold-time command [311](#)
continuity-check interval command [312](#)
continuity-check loss auto-traceroute command [314](#)
controller (SONET) command [945](#)
controller dwdm command [77](#)
controller e1 command [1058](#)
controller e3 command [1060](#)
controller MgmtMultilink command [766](#)
controller t1 command [1062](#)
controller t3 command [1064](#)
controller wanphy command [1190](#)
cos (CFM) command [315](#)
crc (POS) command [782](#)
crc (serial) command [867](#)

D

dampening (BFD) command [32](#)
dampening command [591](#)
debug ethernet cfm packets command [317](#)
debug ethernet cfm protocol-state command [320](#)
delay clear (T1/E1) command [1066](#)
delay clear (T3/E3) command [1068](#)
delay clear command [947](#)
delay trigger (T1/E1) command [1070](#)
delay trigger (T3/E3) command [1072](#)
delay trigger command [949](#)
description (IPHC profile) command [869](#)
description (T1/E1) command [1074](#)
description (T3/E3) command [1076](#)
destination interface command [1166](#)
destination pseudowire command [1168](#)
diagnostic monitor command [140](#)
diagnostic monitor interval command [142](#)
diagnostic monitor syslog command [144](#)
diagnostic monitor threshold command [145](#)

diagnostic ondemand action-on-failure command [147](#)
diagnostic ondemand iterations command [149](#)
diagnostic schedule command [150](#)
diagnostic start command [152](#)
diagnostic stop command [154](#)
domain command [322](#)
dot1q vlan command [1180](#)
down-when-looped (T1/E1) command [1078](#)
down-when-looped (T3/E3) command [1080](#)
down-when-looped command [951](#)
dsu bandwidth command [1082](#)
dsu mode command [1084](#)
dsu remote command [1086](#)
duplex (Management Ethernet) command [754](#)

E

echo disable command [35](#)
echo ipv4 source command [37](#)
echo latency detect command [39](#)
echo startup validate command [41](#)
efd command [324](#)
encap (PVC) command [519](#)
encapsulation (POS) command [784](#)
encapsulation (serial) command [870](#)
encapsulation frame-relay command [521](#)
encapsulation ppp command [802](#)
ethernet cfm (global) command [326](#)
ethernet cfm (interface) command [328](#)
ethernet oam command [331](#)
ethernet oam loopback command [332](#)
ethernet oam profile command [334](#)
ethernet sla command [335](#)
ethernet sla on-demand operation type cfm-delay-measurement probe command [336](#)
ethernet sla on-demand operation type cfm-loopback probe command [342](#)

F

fdl command [1088](#)
feedback disable command [872](#)
flow-control command [186](#)
fragment end-to-end command [873](#)
frame threshold command [360](#)
frame window command [362](#)
frame-period threshold command [353](#)
frame-period window command [355](#)
frame-relay intf-type command [523](#)
frame-relay lmi disable command [525](#)
frame-relay lmi-n391dte command [526](#)

frame-relay lmi-n392dce command [528](#)
 frame-relay lmi-n392dte command [530](#)
 frame-relay lmi-n393dce command [531](#)
 frame-relay lmi-n393dte command [533](#)
 frame-relay lmi-t391dte command [534](#)
 frame-relay lmi-t392dce command [536](#)
 frame-relay lmi-type command [538](#)
 frame-relay multilink ack command [540](#)
 frame-relay multilink bandwidth-class command [542](#)
 frame-relay multilink bid command [544](#)
 frame-relay multilink hello command [546](#)
 frame-relay multilink lid command [548](#)
 frame-relay multilink retry command [550](#)
 frame-seconds threshold command [356](#)
 frame-seconds window command [358](#)
 framing (E1) command [1090](#)
 framing (E3) command [1092](#)
 framing (SONET) command [952](#)
 framing (T1) command [1094](#)
 framing (T3) command [1096](#)
 frequency synchronization command [188](#)

G

g709 bdi-to-client-gais command [79](#)
 g709 fec command [80](#)
 g709 odu overhead tti command [82](#)
 g709 odu report disable command [84](#)
 g709 otu overhead tti command [86](#)
 g709 otu report disable command [88](#)
 g709 otu threshold command [90](#)
 g709 tim-to-client-gais command [92](#)
 g709 tti-processing command [93](#)
 group command [804](#)

H

hello-interval command [364](#)
 hw-module load-balance bundle l2-service l3-params
 command [679](#)

I

interface (BFD) command [43](#)
 interface (global) command [593](#)
 interface (VLAN) command [1182](#)
 interface MgmtEth command [756](#)
 interface multilink command [768](#)
 interface pos command [786](#)
 interface serial command [875](#)

invert command [878](#)
 iphc profile command [879](#)
 ipv4 iphc profile command [881](#)
 ipv6 checksum command [46](#)
 isolation recovery-delay command [682](#)

K

keepalive (POS) command [788](#)
 keepalive (serial) command [883](#)

L

lacp fast-switchover command [685](#)
 lacp packet-capture command [687](#)
 lacp period short command [690](#)
 lacp system priority command [693](#)
 line delay clear command [954](#)
 line delay trigger command [956](#)
 linecode command [1098](#)
 link-monitor command [366](#)
 lnm major-warning command [1100](#)
 lnm minor-warning command [1103](#)
 lnm syslog command [1109](#)
 lockout command [958](#)
 log ais command [368](#)
 log continuity-check errors command [369](#)
 log continuity-check mep changes command [371](#)
 log crosscheck errors command [373](#)
 log efd command [377](#)
 log selection command [201](#)
 log signal command [94](#)
 loopback (DWDM) command [96](#)
 loopback (Ethernet) command [202](#)
 loopback (SONET) command [960](#)
 loopback (T1/E1) command [1111](#)
 loopback (T3/E3) command [1113](#)

M

mac-accounting command [204](#)
 mac-address (Ethernet) command [206](#)
 mac-address (Management Ethernet) command [758](#)
 max-header command [885](#)
 maximum-meps command [379](#)
 mdl command [1115](#)
 member neighbor command [695](#)
 mep crosscheck command [381](#)
 mep domain command [384](#)
 mep-id command [382](#)

mib-retrieval command [386](#)
 mip auto-create command [388](#)
 mirror first command [1169](#)
 mlapc connect command [696](#)
 mlapc iccp-group command [698](#)
 mlapc node command [699](#)
 mlapc port-priority command [700](#)
 mlapc system mac command [701](#)
 mlapc system priority command [703](#)
 mode (Ethernet OAM) command [390](#)
 mode (SONET) command [962](#)
 mode command [1117](#)
 monitor-session (interface) command [1171](#)
 monitor-session (l2vpn) command [1173](#)
 monitor-session command [1170](#)
 monitoring command [392](#)
 mtu command [601](#)
 multi-router aps command [806](#)
 multilink command [770](#)
 multilink fragment command [771](#)
 multilink group command [773](#)

N

national bits (E1) command [1119](#)
 national bits (E3) command [1120](#)
 negotiation auto command [208](#)
 network connection id command [98](#)
 network port id command [100](#)
 non-tcp compression command [886](#)
 non-tcp context absolute command [887](#)

O

overhead (SONET path) command [966](#)
 overhead (SONET) command [964](#)

P

packet size command [394](#)
 packet-gap non-standard command [209](#)
 path (SONET) command [972](#)
 path delay clear command [968](#)
 path delay trigger command [970](#)
 peer ipv4 address command [807](#)
 ping ethernet cfm command [396](#)
 pm fec report enable command [102](#)
 pm fec threshold command [104](#)
 pm optics report enable command [106](#)
 pm optics threshold command [108](#)

pm otn report enable command [110](#)
 pm otn threshold command [113](#)
 pos command [790](#)
 ppp authentication command [808](#)
 ppp chap password command [811](#)
 ppp chap refuse command [813](#)
 ppp ipcp dns command [815](#)
 ppp ipcp neighbor-route disable command [816](#)
 ppp ipcp peer-address default command [817](#)
 ppp max-bad-auth command [818](#)
 ppp max-configure command [820](#)
 ppp max-failure command [822](#)
 ppp max-terminate command [824](#)
 ppp ms-chap hostname command [826](#)
 ppp ms-chap password command [827](#)
 ppp ms-chap refuse command [829](#)
 ppp multilink multiclass command [831](#)
 ppp multilink multiclass local command [832](#)
 ppp multilink multiclass remote apply command [834](#)
 ppp pap refuse command [836](#)
 ppp pap sent-username password command [838](#)
 ppp timeout authentication command [840](#)
 ppp timeout retry command [842](#)
 priority (frequency synchronization) command [211](#)
 priority (SLA) command [401](#)
 proactive command [116](#)
 proactive revert threshold command [117](#)
 proactive revert window command [119](#)
 proactive trigger threshold command [121](#)
 proactive trigger window command [123](#)
 probe command [403](#)
 profile (EOAM) command [404](#)
 profile (SLA) command [406](#)
 pvc (frame relay) command [552](#)

Q

quality itu-t command [213](#)
 quality receive command [214](#)
 quality transmit command [217](#)

R

redundancy command [843](#)
 redundancy iccp group command [705](#)
 redundancy one-way command [706](#)
 refresh max-period command [889](#)
 refresh max-time command [891](#)
 refresh rtp command [893](#)
 remote-loopback command [408](#)
 report (SONET path) command [976](#)

report (SONET) command [974](#)
 require-remote command [410](#)
 revert command [978](#)
 rtp command [894](#)

S

schedule (SLA) command [412](#)
 scramble command [895](#)
 scrambling disable (SONET path) command [980](#)
 security ttl command [844](#)
 selection input command [220](#)
 send (SLA) command [416](#)
 serial command [897](#)
 service command [419](#)
 show aps agents command [983](#)
 show aps command [981](#)
 show aps group command [985](#)
 show bfd client command [53](#)
 show bfd command [50](#)
 show bfd counters command [55](#)
 show bfd mib session command [58](#)
 show bfd session command [63](#)
 show bundle load-balancing command [725](#)
 show bundle replication bundle-ether command [729](#)
 show controller dwdm command [125](#)
 show controller dwdm pm command [132](#)
 show controllers (Ethernet) command [221](#)
 show controllers backplane ethernet local brief command [623](#)
 show controllers backplane ethernet local clients command [625](#)
 show controllers backplane ethernet local detail command [627](#)
 show controllers backplane ethernet local multicast groups command [629](#)
 show controllers backplane ethernet location brief command [631](#)
 show controllers backplane ethernet location clients command [634](#)
 show controllers backplane ethernet location detail command [636](#)
 show controllers backplane ethernet location multicast groups command [639](#)
 show controllers e1 command [1122](#)
 show controllers e3 command [1126](#)
 show controllers lnm command [1130](#)
 show controllers mgmtmultilink command [775](#)
 show controllers pos command [988](#)
 show controllers sonet command [994](#)
 show controllers switch ports command [641](#)
 show controllers switch stats command [643](#)
 show controllers t1 command [1134](#)
 show controllers t3 command [1142](#)
 show controllers wanphy command [1192](#)
 show diag command [156](#)
 show diagnostic bootup level command [160](#)
 show diagnostic content command [162](#)
 show diagnostic ondemand settings command [165](#)
 show diagnostic result command [166](#)
 show diagnostic schedule command [170](#)
 show diagnostic status command [172](#)
 show efd interface command [422](#)
 show ethernet cfm ccm-learning-database command [424](#)
 show ethernet cfm configuration-errors command [426](#)
 show ethernet cfm interfaces ais command [428](#)
 show ethernet cfm interfaces statistics command [431](#)
 show ethernet cfm local maintenance-points command [433](#)
 show ethernet cfm local meps command [436](#)
 show ethernet cfm peer meps command [442](#)
 show ethernet cfm traceroute-cache command [449](#)
 show ethernet oam configuration command [465](#)
 show ethernet oam discovery command [468](#)
 show ethernet oam interfaces command [471](#)
 show ethernet oam statistics command [474](#)
 show ethernet sla configuration-errors command [476](#)
 show ethernet sla operations command [478](#)
 show ethernet sla statistics command [481](#)
 show frame-relay lmi command [554](#)
 show frame-relay lmi-info command [557](#)
 show frame-relay multilink command [560](#)
 show frame-relay pvc command [572](#)
 show frame-relay vcm-info interface command [576](#)
 show frequency synchronization clock-interfaces command [223](#)
 show frequency synchronization configuration-errors command [225](#)
 show frequency synchronization interfaces command [227](#)
 show frequency synchronization selection command [229](#)
 show iccp group command [730](#)
 show im dampening command [604](#)
 show interfaces (frame relay) command [578](#)
 show interfaces command [608](#)
 show interfaces multilink command [778](#)
 show interfaces pos command [792](#)
 show iphc idb command [898](#)
 show iphc ipv4 rtp command [900](#)
 show iphc ipv4 tcp command [902](#)
 show iphc platform trace command [904](#)
 show iphc profile command [906](#)
 show iphc trace all command [909](#)
 show lacp bundle command [732](#)
 show lacp counters command [735](#)
 show lacp io command [737](#)
 show lacp packet-capture command [740](#)
 show lacp port command [743](#)
 show lacp system-id command [746](#)
 show mac-accounting (Ethernet) command [245](#)
 show mlac command [748](#)
 show mlac counters command [750](#)
 show monitor-session counters command [1177](#)
 show monitor-session status command [1175](#)
 show ppp interfaces command [845](#)

show ppp sso alerts command [853](#)
 show ppp sso state command [855](#)
 show ppp sso summary command [857](#)
 show sonet-local trace fir command [1002](#)
 show tech-support iphc command [911](#)
 shutdown (global) command [619](#)
 shutdown (SONET) command [1004](#)
 shutdown (T1/E1) command [1151](#)
 shutdown (T3/E3) command [1153](#)
 signalling command [1006](#)
 sla operation command [492](#)
 snmp-server traps ethernet cfm command [494](#)
 snmp-server traps ethernet oam events command [495](#)
 snmp-server traps frame-relay pvc command [583](#)
 speed (DS0) command [1155](#)
 speed (Management Ethernet) command [760](#)
 ssm disable command [247](#)
 ssrp group command [859](#)
 ssrp location command [861](#)
 ssrp profile command [862](#)
 statistics measure command [496](#)
 sts command [1008](#)
 symbol-period threshold command [500](#)
 symbol-period window command [502](#)

T

tags command [503](#)
 tcp compression command [914](#)

tcp context absolute command [916](#)
 threshold (SONET path) command [1013](#)
 threshold (SONET) command [1011](#)
 timers (APS) command [1009](#)
 timeslots command [1157](#)
 traceroute cache command [505](#)
 traceroute ethernet cfm command [507](#)
 transmit-delay (serial) command [918](#)
 transmit-delay command [795](#)
 transport-mode command [248](#)
 tug3 command [1015](#)

U

uneq-shut (SONET path) command [1017](#)
 uni-directional link-fault detection command [510](#)
 unidirectional command [1018](#)

W

wait-to-restore command [250](#)
 width command [1020](#)

Y

yellow command [1159](#)