



Cisco ASR 9000 Series Aggregation Services Router System Management Command Reference, Release 5.1.x

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Text Part Number: OL-30377-02

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <http://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2014 Cisco Systems, Inc. All rights reserved.



Preface

This reference describes the Cisco IOS XR System Management commands. The preface for *Cisco ASR 9000 Series Aggregation Services Router System Management Command Reference* contains the following sections:

- [Obtaining Documentation and Submitting a Service Request](#), page iii

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation*, at: <http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.



Boot Commands on the Cisco ASR 9000 Series Router

This module describes the commands used to boot or reset Cisco IOS XR software.

For more information about ROM Monitor (ROMMON) and boot tasks, see *Cisco ASR 9000 Series Aggregation Services Router ROM Monitor Guide* or *Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide*.

- [config-register, page 2](#)
- [mirror, page 5](#)
- [mirror pause, page 7](#)
- [mirror resume, page 9](#)
- [mirror verify, page 11](#)
- [reload, page 13](#)
- [reload \(administration EXEC\), page 15](#)
- [show epm trace boot, page 17](#)
- [show mirror, page 19](#)
- [show reboot, page 23](#)
- [show variables boot, page 27](#)
- [show variables system, page 29](#)
- [system boot-sequence, page 31](#)

config-register

To define the configuration register boot value, use the **config-register** command in the appropriate mode.

config-register {*value*| **boot-mode** {**exec-mode**| **rom-monitor**}| **console-baud** *baud-rate*| **console-break-key** {**disable**| **enable**}| **password-recovery** {**disable**| **enable**} } [**location** {*node-id*| **all**}]

Syntax Description

<i>value</i>	Hexadecimal or decimal value that represents the 16-bit configuration register value to be used the next time the router is reloaded. Range is from 0x0 to 0xFFFF (0 to 65535 in decimal). For information about common configuration register settings, see Table 1: Common Configuration Register Settings , on page 3.
boot-mode	Specifies what to do when the system is rebooted.
exec-mode	Specifies to load the Cisco IOS XR software and enter EXEC mode on next system reboot.
rom-monitor	Specifies to enter ROM Monitor mode on next system reboot.
console-baud <i>baud-rate</i>	Specifies the console baud rate.
console-break-key { disable enable }	Specifies to disable or enable the console break key on the next system reboot.
password-recovery { disable enable }	Specifies to enable or disable the password recovery mode on the next reboot.
location { <i>node-id</i> all }	(Optional) Specifies the RSP node for which to define the configuration register boot value. The all keyword specifies all RSP nodes.

Command Default

By default, the configuration register value is 0x102 after a Turboboot.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The *configuration register setting* is a 16-bit, user-configurable value that determines how the router switch processor (RSP) functions during initialization. The configuration register can cause the RSP to boot normally from the default configuration, or to enter ROMMON mode during a reload. Configuration register settings can also be used to perform tasks such as password recovery.

The **config-register** command is entered in administration EXEC mode, on the designated shelf controller (DSC) of the system. The DSC is the primary RSP of the owner secure domain router (owner SDR). When setting the configuration register value for the **config-register** command, note the following conditions:

- If both the primary and standby DSC are up and running when the configuration register value is set, the configuration register value applies to both the primary and standby DSC.
- By contrast, if only the primary DSC is up and running when the configuration register value is set and the standby DSC is introduced into the router at a later time, the router does *not* attempt to synchronize the configuration register value for the standby RSP to that of the active RSP; in this situation, the configuration register setting applied to the standby DSC is determined by the configuration register value set in ROMMON mode.



Note

To display the current configuration settings, use the **show variables boot** command .

This table describes the most commonly used configuration register settings.

Table 1: Common Configuration Register Settings

Value	Description
0x0	RSP enters ROMMON mode (rommon B1>) on the next system boot.
0x2	RSP loads the Cisco IOS XR software and default configuration on the next system boot. After logging in, the user can access EXEC mode.
0x102	Router loads the Cisco IOS XR software with the console Break key disabled on the next system boot.
0x40	Router enters the password recovery mode on the next system boot.

If you use the various keywords to set the configuration settings, note that the hexadecimal value is updated in an additive or subtractive manner to represent the keyword used. For example, if the current configuration setting is 0x102 and you use the **config-register** command with the **password-recovery enable** keywords, the value is updated to 0x142.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to set the configuration register on the DSC to 0x2. Setting the configuration registration to 0x2 causes the router to boot the Cisco IOS XR software and enter EXEC mode during a router reload.

```
RP/0/RSP0/CPU0:router(admin)# config-register boot-mode exec-mode
```

```
Sun May 31 12:10:36.037 PST Successfully set config-register to
0x2 on node 0/RSP0/CPU0
```

Related Commands

Command	Description
reload	Reloads the route switch processor (RSP).
show variables boot	Displays the configuration register setting and boot file setting for the RSPs in the system.
show version	Displays the configuration of the system hardware, the software version, the names and sources of configuration files, and the boot images.

mirror

To configure disk mirroring on a node, use the **mirror** command in global configuration mode. To disable disk mirroring, use the **no** form of this command.

mirror location [**preconfigure**] *node-id primary-device:secondary-device*:

no mirror location

Syntax Description

location <i>node-id</i>	Specifies the node of the RP. It can be a node that is not yet installed if the preconfigure keyword is used. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
preconfigure	(Optional) Enables you to specify a node that is not yet installed.
<i>primary-device</i> :	Specifies the primary boot device used to store installation packages and configuration files. Supported devices are: • disk0: • disk1: (if installed) • compactflash: (if installed)
<i>secondary-device</i> :	Storage device on the same RP as the <i>primary-device</i> , to where critical data is replicated. Supported devices are the same as for <i>primary-device</i> :, but <i>secondary-device</i> : must be different than the <i>primary-device</i> :.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **mirror** command replicates all critical data contained in the primary partition of the primary boot device, onto a second storage device on the same RSP. Therefore, if the primary boot device fails, applications continue to be serviced transparently by the secondary device, without having to switch control to a standby RSP.

Before the **mirror** command can be used, the secondary storage device must be partitioned using the [format, on page 325](#) command. If the primary boot device is not partitioned, once mirroring is enabled and all data on the primary boot device is replicated to the secondary device, the primary boot device is partitioned automatically. This guarantees that only critical data on the primary boot device is mirrored to the secondary device. Noncritical data, such as logging data, should not be mirrored and should, therefore, be saved to the secondary partition on the storage device.

To temporarily suspend disk mirroring without changing the configuration, use the **mirror pause** command in EXEC mode.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to configure disk mirroring from the primary boot device (disk0:) to the secondary storage device (disk1:):

```
RP/0/RSP0/CPU0:router(config)# mirror location 0/rp0/cpu0 disk0: disk1:
```

Related Commands

Command	Description
format	Formats a file system.
mirror pause	Temporarily pauses disk mirroring on a node.
mirror resume	Resumes disk mirroring on a node after it has been temporarily stopped.

mirror pause

To temporarily pause disk mirroring on a node, use the **mirror pause** command in EXEC or administration EXEC mode.

mirror pause [**location** {*node-id*| **all**}]

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies the node of the RSP. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. The all keyword specifies all RSP nodes.

Command Default

If no node is specified, disk mirroring is paused on the active RSP.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **mirror pause** command temporarily pauses the mirroring of the primary boot device. This command is primarily useful during an installation operation to prevent significant performance degradation on single CPU boards. The **mirror pause** command does not change the configured state of mirroring, but rather causes the mirroring to be suspended until the **mirror resume** command is used.

The **mirror pause** command has no affect if the **mirror** configuration command is not enabled.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to pause disk mirroring on the active RSP:

```
RP/0/RSP0/CPU0:router# mirror pause
```

Related Commands

Command	Description
mirror	Configures disk mirroring on a node.
mirror resume	Resumes disk mirroring on a node after it has been temporarily stopped.

mirror resume

To resume disk mirroring on a node after it has been temporarily stopped, use the **mirror resume** command in EXEC or administration EXEC mode.

mirror resume [**location** {*node-id* | **all**}]

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies the node of the RSP. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. The all keyword specifies all RSP nodes.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **mirror resume** command resumes the mirroring of the primary boot device after it has been temporarily paused with the **mirror pause** command.

The **mirror resume** command has no affect if the **mirror** configuration command is not enabled and the **mirror pause** command has not been used.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to resume disk mirroring on the active RSP:

```
RP/0/RSP0/CPU0:router# mirror resume
```

Related Commands

Command	Description
mirror	Configures disk mirroring on a node.

Command	Description
mirror pause	Temporarily pauses disk mirroring on a node.

mirror verify

To verify disk synchronization for disk mirroring on a node, use the **mirror verify** command in EXEC or administration EXEC mode.

mirror verify [**location** *node-id*]

Syntax Description

location <i>node-id</i>	(Optional) Specifies the node of the RSP. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

If no node is specified, the verification is done on the active RSP.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **mirror verify** command verifies the synchronization consistency between the primary and secondary media devices being used in mirroring. The command verifies that the full contents are identical between the mirrored devices and reports any inconsistencies found.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to verify the disk mirroring on the active RSP:

```
RP/0/RSP0/CPU0:router# mirror verify
```

```
Mirror Verify Information for 0/RSP0/CPU0.
```

mirror verify

```
=====
Primary device and secondary device are fully synchronized.
```

Related Commands

Command	Description
mirror	Configures disk mirroring on a node.

reload

To reload the route switch processor (RSP), use the **reload** command in EXEC mode.

reload

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes EXEC

Releases	Modifications
Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **reload** command to cause the RSP to reload the Cisco IOS XR software according to the configuration register setting (for example, 0x0 to enter ROMMON mode and 0x2 to reload the RSP to EXEC mode). If a standby RSP is in the ready redundancy state, the **reload** command also causes the router to fail over to the standby RSP. Use the **show redundancy** command in EXEC mode to display the status of the standby RSP.

When the **reload** command is used and a switchover occurs, the running (active) software configuration is automatically maintained during switchover.



Caution

If a standby RSP is not installed or is not in the ready state, then the router experiences a loss of service while the active RSP is reloading Cisco IOS XR software. To view the status of the standby RSP, issue the **show redundancy** command in EXEC mode.

If you use the **reload** command and there is no available standby node, you are prompted to continue with the reload:

```
RP/0/RSP0/CPU0:router# reload
```

```
Standby card not present or not Ready for failover. Proceed?[confirm]y
```

Task ID

Task ID	Operations
root-lr	execute

Examples

The following example shows how to reload the active RSP. If a standby RSP is in the ready state, then the router fails over to the standby RSP. If the standby RSP is not installed or is not in the ready state, then the router enters ROMMON mode and routing operations stop.

```
RP/0/RSP0/CPU0:router# reload

Updating Commit Database. Please wait...[OK]
Proceed with reload? [confirm] y

PCI0 device[7]: Vendor ID 0x10ee
PCI0 device[7]: Device ID 0x300e
PCI1 device[7]: Device ID 0x1100
PCI1 device[7]: Vendor ID 0x1013
PCI1 device[8]: Device ID 0x649
PCI1 device[8]: Vendor ID 0x1095
PCI1 device[9]: Device ID 0x5618
PCI1 device[9]: Vendor ID 0x14e4
PCI1 device[10]: Device ID 0x5618
PCI1 device[10]: Vendor ID 0x14e4
System Bootstrap, Version 1.15(20040120:002852) ,
Copyright (c) 1994-2004 by cisco Systems, Inc.
Board type is 0x100000 (1048576)
Enabling watchdog
Broadcom 5618 #0 Found on PCI
Broadcom 5618 #1 Found on PCI
No. of BCM 56xx switches found 2 .
BCM Switch #0 initialisation complete.
BCM Switch #1 initialisation complete
G4(7450-SMP-GT64260_A) platform with 2048 Mb of main memory

rommon B1 >
```

Related Commands

Command	Description
reload (administration EXEC)	Reloads a node or all nodes on a single chassis or multishelf system.
show redundancy	Displays the status of route processor redundancy.
config-register	Defines the configuration register boot values.

reload (administration EXEC)

To reload a node or all nodes on a single chassis or multishelf system, use the **reload** command in the appropriate mode.

reload [**location** {*node-id* | **all**}] **rack** *rack-number*]

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies the node to reload. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. The all keyword specifies all RP nodes.
rack	Reloads all the nodes on a specified chassis.
<i>rack-number</i>	Rack number of the line card chassis or fabric chassis.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

Before reloading nodes on the router, we recommend using the **cfs check** command to check the sanity of the configuration file system and attempt to recover from internal inconsistencies.

To reload a specific node on the router, specify the **reload** command with the **location** *node-id* keyword and argument. The *node-id* is expressed in the *rack/slot/module* notation.

Task ID

Task ID	Operations
root-system	execute

Examples

The following example shows how to reload all nodes on the router:

```
RP/0/RSP0/CPU0:router(admin)# reload location all

Graceful reload of all nodes not supported
Assuming 'force'
Operation may result in file corruptions or loss of config. Proceed [Y/N]? y
```



Note To ensure the sanity of the configuration file system, enter the **cfs check** command on the router.

Related Commands

Command	Description
cfs check	Performs a check of the Configuration File System (CFS).
reload	Reloads the route switch processor (RSP).
show redundancy	Displays the status of route processor redundancy.
config-register	Defines the configuration register boot values.

show epm trace boot

To display execution path monitoring traces, use the **show epm trace boot** command in administration EXEC

mode.

show epm trace boot [**hexdump**] [**last** *n*] [**reverse**] [**stats**] [**tailf**] [**unique**][**verbose**] [**wrapping**][**file** *filename original*] [**location** {*node-id* | **all**}]

Syntax Description

hexdump	(Optional) Displays traces in hexadecimal format.
last <i>n</i>	(Optional) Displays the last <i>n</i> number of traces only.
reverse	(Optional) Displays the most recent traces first.
stats	(Optional) Displays execution path statistics.
tailf	(Optional) Displays new traces as they are added.
unique	(Optional) Displays unique entries only, along with the count of the number of times this entry appears.
verbose	(Optional) Displays additional internal debugging information.
wrapping	(Optional) Displays wrapping entries.
file <i>filename original</i>	(Optional) Specifies the filename of the file to display. You can specify up to four trace files.
location { <i>node-id</i> all }	(Optional) Specifies the node of the RSP. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. You can specify up to four nodes. The all keyword specifies all RSP nodes.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show epm trace boot** command provides a simple way of tracking and time-stamping critical events to clearly understand their temporal relationship to one another and the amount of time spent performing critical operations.

Task ID

Task ID	Operations
basic services	read

Examples

The following example shows sample output from the **show epm trace boot** command:

```
RP/0/RSP0/CPU0:router(admin)# show epm trace boot

Mon Jun 1 03:16:36.946 PST
22 wrapping entries (1024 possible, 0 filtered, 22 total)
Oct 8 07:54:49.610 epm/boot 0/RSP0/CPU0 t1 @ 00:00:06 - [init] process-start
Oct 8 07:55:25.710 epm/boot 0/RSP0/CPU0 t1 @ 00:00:42 - [insthelper] process-start
Oct 8 07:57:08.992 epm/boot 0/RSP0/CPU0 t1 @ 00:02:25 - [sysmgr] process-start
Oct 8 07:57:09.785 epm/boot 0/RSP0/CPU0 t7 @ 00:02:26 - [sysmgr] start-level: start
Oct 8 07:57:10.722 epm/boot 0/RSP0/CPU0 t1 @ 00:02:27 - [sw_dwnld_svr] process-start
Oct 8 07:57:12.482 epm/boot 0/RSP0/CPU0 t11 @ 00:02:29 - [sysmgr] start-level: admin
Oct 8 07:57:13.385 epm/boot 0/RSP0/CPU0 t1 @ 00:02:30 - [instdir] process-start
Oct 8 07:57:19.638 epm/boot 0/RSP0/CPU0 t1 @ 00:02:36 - [instdir_lr] process-start
Oct 8 07:58:07.045 epm/boot 0/RSP0/CPU0 t9 @ 00:03:23 - [sysmgr] admin-plane-up
Oct 8 07:58:52.057 epm/boot 0/RSP0/CPU0 t4 @ 00:04:08 - [cfgmgr-rp] admin-config-start
Oct 8 07:58:59.973 epm/boot 0/RSP0/CPU0 t4 @ 00:04:16 - [cfgmgr-rp] admin-config-done
Oct 8 07:59:00.079 epm/boot 0/RSP0/CPU0 t9 @ 00:04:16 - [sysmgr] start-level: infra
Oct 8 07:59:00.615 epm/boot 0/RSP0/CPU0 t1 @ 00:04:17 - [devc-conaux] exec-available
Oct 8 07:59:02.288 epm/boot 0/RSP0/CPU0 t4 @ 00:04:18 - [cfgmgr-rp] admin-plane-mount-done
Oct 8 07:59:08.157 epm/boot 0/RSP0/CPU0 t6 @ 00:04:24 - [instdir] ready-for-requests
Oct 8 07:59:15.999 epm/boot 0/RSP0/CPU0 t6 @ 00:04:32 - [sysmgr] start-level: active
Oct 8 07:59:32.300 epm/boot 0/RSP0/CPU0 t13 @ 00:04:48 - [sysmgr] start-level: final
Oct 8 07:59:38.143 epm/boot 0/RSP0/CPU0 t9 @ 00:04:54 - [sysmgr] lr-plane-up
Oct 8 07:59:38.189 epm/boot 0/RSP0/CPU0 t4 @ 00:04:54 - [cfgmgr-rp] lr-config-start
Oct 8 07:59:49.898 epm/boot 0/RSP0/CPU0 t4 @ 00:05:06 - [cfgmgr-rp] lr-config-done
Oct 8 07:59:50.259 epm/boot 0/RSP0/CPU0 t4 @ 00:05:06 - [cfgmgr-rp]
bulk-interface-config-start
Oct 8 07:59:50.351 epm/boot 0/RSP0/CPU0 t7 @ 00:05:06 - [cfgmgr-rp] node-config-done
```

In this sample output, the time stamp following the @ sign is the elapsed time in the format hh:mm:ss since the execution phase started (for example, since node start, in the case of a boot).

show mirror

To display disk mirroring information, use the **show mirror** command in EXEC or administration EXEC mode.

show mirror [**location** {*node-id* | **all**}]

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies the node of the RSP for which to display the mirroring information. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. The all keyword specifies all RSP nodes.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
filesystem	read

Examples

The following is sample output from the **show mirror** command:

```
RP/0/RSP0/CPU0:router# show mirror
```

```
Mirror Information for 0/RSP0/CPU0.
```

```
=====
Mirroring Enabled
  Configured Primary:      disk0:
  Configured Secondary:    disk1:
```

```

Current Mirroring State:      Syncing Files
Current Physical Primary:    disk1:
Current Physical Secondary:  disk0:

```

```

Mirroring Logical Device:    disk0:

```

Physical Device	State	Flags
disk0:	Available	Enabled Formatted
disk1:	Available	Enabled Formatted
compactflash:	Not Present	
disk0a:	Available	Formatted
disk1a:	Available	Formatted
compactflasha:	Not Present	

```

Mirroring Rommon Variable
BOOT_DEV_SEQ_CONF = disk0::disk1:
BOOT_DEV_SEQ_OPER = disk1:
MIRROR_ENABLE = Y

```

Table 2: show mirror Field Descriptions

Field	Description
Mirroring Enabled	Indicates whether mirroring is enabled or disabled.
Configured Primary	If mirroring is enabled, the configured primary disk for mirroring.
Configured Secondary	If mirroring is enabled, the configured secondary disk for mirroring.
Current Mirroring State	Current status of mirroring. Possible values are as follows: Syncing files—Files are being synchronized between the primary and secondary disks. Not Configured—Mirroring is not configured. Mirroring Paused—In this state, no mirroring is being done to the secondary device and the disk redundancy has been removed. The values of the BOOT_DEV_SEQ_OPER and MIRROR_ENABLE variables reflect this. Redundant—The primary and secondary disks are totally in synchronization. Any read or write failure on the primary device results in disk redundancy switchover such that all operations are performed on the secondary device.
Current Physical Primary	Current primary disk.
Current Physical Secondary	Current secondary disk.

Field	Description
Mirroring Logical Device	Device name used by the mirroring process to intercept all application requests to that named device before passing them through to one of the mirrored physical devices.
Physical Device	Physical disk in router.
State	Status of the disk. Possible values are as follows: Available—Disk exists in router and is available. Not present—Disk does not exist in router. Partitioning of disks is available only after the disk has been formatted with the partition keyword.
Flags	Enabled—Disk mirroring has been enabled on this device and the device is part of the mirroring process. Repaired—During the boot, some minor inconsistencies were discovered on the disk and were repaired to make the file system consistent. Formatted—Disk was formatted before mirroring was enabled.
BOOT_DEV_SEQ_CONF=	ROM Monitor environmental variable for the boot disk sequence. This variable is set when mirroring is enabled through the mirror configuration command. The devices in this ROMMON variable declare the primary and the secondary devices of the mirroring process. The first device is the primary device and the second device is the secondary device in the mirroring process. Note This variable is also shared by the disk backup feature. This variable can also be set or unset using the system boot-sequence command of the disk backup feature. But the use of system boot-sequence and system backup commands is blocked, if mirroring is enabled.
BOOT_DEV_SEQ_OPER=	ROM Monitor environmental variable that reflects the state of the disk redundancy status. When mirroring is enabled and the state is redundant, this variable is set to the primary device followed by the secondary device. When mirroring is not in the redundancy state, then this variable is updated to contain only the primary device.

Field	Description
MIRROR_ENABLE	ROM Monitor environmental variable whose value reflects the mirroring status. If it is set to Y, then mirroring is enabled. If it is set to P, then mirroring is paused. If empty, mirroring is not enabled.

Related Commands

Command	Description
mirror	Configures disk mirroring on a node.
mirror verify	Verifies disk synchronization for disk mirroring on a node.

show reboot

To display reboot information for a node, use the **show reboot** command in EXEC or administration EXEC mode.

show reboot {**history** | [**reverse**] | {**first** | **last**} | {**crashinfo** | **syslog** | **trace**} | [**graceful**] **pcds**} **location** *node-id*

Syntax Description

first	(Optional) Displays information about the first ungraceful reboot.
last	(Optional) Displays information about the last ungraceful reboot.
crashinfo	Displays crash information for an ungraceful reboot.
syslog	Displays the syslogs related to an ungraceful reboot.
trace	Displays trace information for an ungraceful reboot.
graceful	Displays information about the last graceful reboot.
history	Displays the reboot history of a specific node.
reverse	(Optional) Displays the reboot history information in reverse chronological order.
pcds	Displays PCDS critical information about the last ungraceful reboot.
location <i>node-id</i>	Specifies which node to reload. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **history** keyword for the **show reboot** command displays all reboot causes stored for previous node resets.

Crash information (**crashinfo**), syslog, and kernel dumper ltrace (**trace**) can be displayed for the first or last reboot if it is an ungraceful reboot.

Task ID

Task ID	Operations
system	read

Examples

This example shows sample output from the **show reboot** command with the **history** keyword:

```
RP/0/RSP0/CPU0:router# show reboot history location 0/rp0/cpu0
```

No	Time	Cause Code	Reason
01	Thu Jul 19 00:25:03 2007	0x00000001	Cause: User Initiated reload Process: reload Traceback: fc1941a0 fc194290 fc042d90 48200624 48202120 0
02	Thu Jul 19 20:32:57 2007	0x21000010	Cause: Missed deadline, client: sc-reddrv-main, timeout: 5 Process: wd-critical-mon Traceback: fc1941a0 fc194290 48200738 482013cc 48201c04 fc1d4fb0
03	Thu Jul 19 22:21:05 2007	0x00000000	
04	Thu Jul 19 22:44:37 2007	0x00000045	Cause: Non-dSC node booted with composite image Process: insthelper Traceback: fc1941a0 fc194290 fc61e4a0 4820f928 48210654 48201cc0
05	Thu Jul 19 22:52:19 2007	0x00000045	Cause: Non-dSC node booted with composite image Process: insthelper Traceback: fc1941a0 fc194290 fc6204a0 4820f928 48210654 48201cc0
06	Fri Jul 20 02:10:51 2007	0x00000001	Cause: User Initiated reload Process: reload Traceback: fc15a1a0 fc15a290 fc045d90 48200624 48202120 0
07	Mon Jul 23 19:39:49 2007	0x00000045	Cause: RP cold booted with incorrect software Process: insthelper Traceback: fc1941a0 fc194290 fc61a4a0 4820f8b0 48210fc8 48201cc0
08	Mon Jul 23 19:54:45 2007	0x00000002	Cause: User Initiated Reboot Process: reboot Traceback: fc1941a0 fc194290 48200154 48201468 0 0

The following example shows sample output from the **show reboot** command with the **first crashinfo** keywords:

```
RP/0/RSP0/CPU0:router# show reboot first crashinfo location 0/rp0/cpu0
```


Crashinfo Timestamp: Thu Jul 19 20:32:57 2007

20070719 20:32:57

Crash Reason: Cause code 0x21000010 Cause: Missed deadline,
client: sc-reddrv-main, timeout: 5 Process: wd-critical-mon
Traceback: fc1941a0 fc194290 48200738 482013cc 48201c04 fc1d4fb0 Timezone UTC0

Exception at 0xfc1944c8 signal 5 c=1 f=3

Active process(s):
pkg/bin/wd-critical-mon Thread ID 1 on cpu 0
pkg/bin/l3test Thread ID 0 on cpu 1

```

REGISTER INFO
r0      r1      r2      r3
R0  01000000 4817e8c0 4820e208 000000de
      r4      r5      r6      r7
R4  fc1b4856 7fffffff 4817e738 fc1b4856
      r8      r9      r10     r11
R8  00000000 602cf522 00000000 00000000
      r12     r13     r14     r15
R12 602cf51c 4820e1a0 00000000 00000000
      r16     r17     r18     r19
R16 00000000 00000000 00000000 00000000
      r20     r21     r22     r23
R20 00000000 00000000 48200000 48200000
      r24     r25     r26     r27
R24 48200000 48200000 48200000 48200000
      r28     r29     r30     r31
R28 00000028 00000001 21000010 6029b000
      cnt     lr      msr     pc
R32 00000000 fc194290 0002d932 fc1944c8
      cnd     xer
R36 44000094 20000006

```

SUPERVISOR REGISTERS

Memory Management Registers

Instruction BAT Registers

Index #	Value
IBAT0U #	0x1ffe
IBAT0L #	0x12
IBAT1U #	0
IBAT1L #	0
IBAT2U #	0x30000ffe
IBAT2L #	0xf0000032
IBAT3U #	0xfffc0003
IBAT3L #	0x40011

Data BAT Registers

Index #	Value
DBAT0U #	0x1ffe
DBAT0L #	0x12
DBAT1U #	0
DBAT1L #	0x10000012
DBAT2U #	0x30000ffe
DBAT2L #	0xf000006a
DBAT3U #	0xfffc0003
DBAT3L #	0x40011

Segment Registers

Index #	SR-Value
0 #	0
1 #	0
2 #	0
3 #	0
4 #	0
5 #	0
6 #	0
7 #	0
8 #	0

show reboot

```

          9 #          0
         10 #          0
         11 #          0
         12 #          0
         13 #          0
         14 #          0
         15 #          0

      Exception Handling Registers
    Data Addr Reg #      DSISR
    0x602cf440 #      0x42000000
    SPRG0 #      SPRG1 #      SPRG2 #      SPRG3
    0x1 # 0x21000010 # 0x6029b000 #      0
    SaveNRestore SRR0 #      SaveNRestore SRR1
    0xfc1944c4 #      0x2d932

Miscellaneous Registers
  Processor Id Reg #      0
      HID0 #      0x8410c0bc
      HID1 #      0x9001ac80

      MSSCR0 #      0x88000
      MSSSR0 #      0

STACK TRACE
#0 0xfc194290
#1 0x48200738
#2 0x482013cc
#3 0x48201c04
#4 0xfc1d4fb0

```

Related Commands

Command	Description
reload	Reloads the route switch processor (RSP).

show variables boot

To display the configuration register setting and boot file setting for the route switch processors (RSPs) in the system, use the **show variables boot** command in administration

EXEC

mode.

show variables boot [**location** {**all** | *node-id*}]

Syntax Description

location {*node-id* | **all**}

(Optional) Specifies the node to reload. The *node-id* argument is expressed in the *rack/slot/module* notation. Use the **all** keyword to indicate all nodes.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release

Release 3.7.2

Modification

This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show variables boot** command to display system boot variables for the router. This command displays the configuration register setting and boot file setting for the RSPs in the system. Use the **location** *node-id* keyword and argument to display the configuration register setting for a specific card.

The configuration register setting is set with the **config-register** command. The boot variable is set in ROM Monitor mode. For more information about ROM Monitor mode, see *Cisco ASR 9000 Series Aggregation Services Router ROM Monitor Guide*.

Task ID

Task ID

root-lr

Operations

read

Examples

This example shows sample output from the **show variables boot** command:

```
RP/0/RSP0/CPU0:router# show variables boot

Mon Jun  1 05:21:56.791 PST
BOOT variable = disk0:asr9k-os-mbi-3.9.0.11I/mbiasr9k-rp.vm,1;
CONFREG variable = 0x102
```

Related Commands

Command	Description
show variables system	Displays internal system environmental variables.
show version	Displays the configuration of the system hardware, the software version, the names and sources of configuration files, and the boot images.
config-register	Defines the configuration register boot values.

show variables system

To display internal system environmental variables set on the router, use the **show variables system** command in EXEC mode.

show variables system

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show variables system** command to display system environmental variables for the router.

To display the configuration register setting, use the **show variables boot** command in administration EXEC mode.

Task ID	Task ID	Operations
	basic-services	read

Examples This example illustrates sample output from the **show variables system** command. The output is meant to be interpreted by Cisco personnel.

```
RP/0/RSP0/CPU0:router# show variables system
```

```
TERM=vt220
GDB_PDEBUG=-P1
TERM=vt100
DIR_PREFIX=.
LOADPATH=/pkg
LD_LIBRARY_PATH=/pkg/lib
```

show variables system

```

PATH=/pkg/bin
BFM_CONFIG_PATH=/pkg/bfm/config
BGP_PATH=/pkg/bgp
CONFIGS_PATH=/pkg/configs
CRAFT_PATH=/pkg/cwl
CTF_PATH=/pkg/ctf
DM_RULES_PATH=/pkg/dm/rules
ETC_PATH=/pkg/etc
FPD_PATH=/pkg/fpd
IM_RULES_PATH=/pkg/rules
INIT_STARTUP_PATH=/pkg/init.d
INSTHELPER_PATH=/pkg/other
MAN_PATH=/pkg/man
MIB_LIBRARY_PATH=/pkg/lib/mib
MIB_PATH=/pkg/mib
NETIO_SCRIPT_PATH=/pkg/script
PARSER_PATH=/pkg/parser
PARTITIONS_PATH=/pkg/partitions
QOS_PATH=/pkg/qos
SCHEMA_PATH=/pkg/schema
STARTUP_PATH=/pkg/startup
TCL_LIBRARY=/pkg/lib/tcl
UCODE_PATH=/pkg/gsr/ucode
UCODE_ROOT_PATH=/pkg/ucode
VCM_RULES_PATH=/pkg/vcmrules
JOB_ID=0
INSTANCE_ID=1
SYSMGR_TUPLE=
SYSMGR_NODE=node0_RSP0_CPU0
EXIT_STATUS=0
SYSMGR_RESTART_REASON=0
AAA_USER=labuser
EXEC_PID=18280619
TASKID_MAP_SIZE=72
HOME=/disk0:/usr
TMPDIR=/disk0:/var/tmp
PWD=/disk0:/usr

```

Related Commands

Command	Description
show variables boot	Displays the configuration register setting and boot file setting for the RSPs in the system.
show version	Displays the configuration of the system hardware, the software version, the names and sources of configuration files, and the boot images.
config-register	Defines the configuration register boot values.

system boot-sequence

To define the order of local storage devices used to boot a router, use the **system boot-sequence** command in EXEC or administration EXEC mode.

system boot-sequence {*primary-device* [*secondary-device*] **disable**} [**location** {*node-id*| **all**}]

Syntax Description

<i>primary-device</i>	Default device where software packages are installed and run. This device is also the default location for router configurations. The value of the <i>primary-device</i> argument is normally disk0: .
<i>secondary-device</i>	(Optional) Secondary (backup) boot device, used by the system backup command to back up system software and configurations. Supported storage devices are: • disk0: • disk1: (if installed) • compactflash: (if installed) Note The value of the <i>secondary-device</i> argument must be different from the value of the <i>primary-device</i> argument.
disable	Temporarily disables the automatic recovery mechanism.
location { <i>node-id</i> all }	(Optional) Specifies the node of the RSP for which to define the boot sequence. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. The all keyword specifies all RSP nodes.

Command Default

The primary device is **disk0:**. The (optional) secondary boot device is not defined.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **system boot-sequence** command to define the local storage devices used to boot a router. You can define two devices with this command.

- The value of the *primary-device* argument defines the default device where software packages are installed and run. This device is also the default location for router configurations.
- The value of the *secondary-device* argument defines the device used by the **system backup** command to back up system software and configurations. This field is optional.
- The secondary device can also be temporarily defined when the **system backup** command is executed with the *target-device* argument. Use the **system boot-sequence** command with the *secondary-device* argument to permanently define the secondary (backup) device.

**Note**

The **system backup** command is not supported on all platforms.

**Note**

The primary and secondary device definitions remain in effect until the **system boot-sequence** command is entered again.

General Guidelines

- The value of the *secondary-device* argument must be different from the value of the *primary-device* argument.
- We recommend disk0: as the primary boot device in the boot sequence, and disk1: as the secondary boot device.
- The boot device specified with the **system boot-sequence** command must be installed in the card or the command is rejected.

Command Mode Options

- Use the **system boot-sequence** command in administration EXEC mode to define the boot sequence for the system.
- Use the **system boot-sequence** command in EXEC mode to define the boot sequence for a specific SDR.

Location Node

- Use the **location** *node-id* keyword and argument to define the boot sequence for a specific route switch processor (RSP).
- Use the **location all** keywords to define the boot sequence for all RSPs in the router.

Disabling Automatic Recovery

Use the **system boot-sequence** command with the **disable** keyword to disable the automatic recovery.

Displaying the Current Boot Sequence Settings

Enter the **show system backup** command to display the currently configured boot sequence devices.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to define the primary and secondary boot device for the active RSP (DSC). In this example, the default location for software and configurations is disk0:. The location for backups of software and configurations is disk1:.

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# system boot-sequence disk0: disk1:

Info: node0_0_CPU0: command succeeded.
```

system boot-sequence



Bulk Content Downloader (BCDL) Commands on the Cisco ASR 9000 Series Router

This module describes the **show** commands that you can use to see the status of the Bulk Content Downloader (BCDL) process. The BCDL provides the Cisco IOS XR software with high-performance downloading capabilities. This capability is used by the following internal applications:

- IPv4 and IPv6 unicast routing protocols—To provide the ability to download forwarding information from the router Global Routing Information Base (GRIB) to the line cards.
- IPv4 and IPv6 multicast routing protocols—To download the Multicast Routing Information Base (MRIB) entries to consumers managing the Multicast Forwarding Information Base (MFIB) on the various line cards.
- MPLS—To download the Label Forwarding Information Base (LFIB) entries to the line card.
- Fabric Management—To update memberships for individual fabric group IDs (FGIDs) to selected portions of the fabric hardware.
- CDS—Context Distribution Service.

There is no configuration necessary for the BCDL.

- [show bcdl](#), page 36
- [show bcdl consumers](#), page 39
- [show bcdl queues](#), page 41
- [show bcdl tables](#), page 43
- [show bcdl trace](#), page 45

show bcdl

To display Bulk Content Downloader (BCDL) information, use the **show bcdl** command in EXEC mode.

show bcdl [*group_name*]

Syntax Description

<i>group_name</i>	(Optional) Displays information for a specific BCDL group.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sysmgr	read

Examples

The following example shows sample output from the **show bcdl** command:

```
RP/0/RSP0/CPU0:router# show bcdl ipv4_rib

Sun May 31 06:56:12.093 PST
grp ipv4_rib, gid 2040, sg cnt 1, agent jid 124, node 0/RSP0/CPU0, pulse 105,
new mbr 0
sg  lwg fd csmr hdlr-act dnld-act susp wait-lck seq pulse-tot pulse-out
0 2043 11 4      no      no      no      0 113      103      0
```

Table 3: show bcdl Field Descriptions

Field	Description
group	Type of download and the Group Services Protocol (GSP) group name.
gid	Heavyweight group (HWG) in the GSP. This is the group that a consumer initially joins. It is used by the BCDL agent to send control updates.
sg count	Number of subgroups for this particular download type.
agent jid	Job identifier of the BCDL agent. The JID is numerical identifier for a particular process and remains the same across process restarts.
node	Node, expressed in the <i>rack/slot/module</i> notation, in which the agent is running.
pulse	Pulse code used by the producer to pulse the BCDL agent.
new mbr	Number of new consumers that have not yet been assigned a subgroup.
sg	Subgroups number.
lwg	Lightweight group in GSP. This is a type of child group of the HWG. The BCDL agent tells the consumers to join this group to receive data.
fd	The connection handle between the producer and the BCDL agent.
csmr	Number of consumers.
hdlr-act	Specifies if there is a download in progress.
dnld-act	Indicates whether the convergence flag has been sent or not.
susp	Indicates whether the download is suspended due to the queue filling up.
wait-lck	If nonzero, some thread is waiting for other thread to take control of this subgroup.
seq	Sequence number of the last message sent on this subgroup.

Field	Description
pulse-tot	Total number of pulses sent by the producer to the BCDL agent.
pulse-out	Total number of outstanding pulses that have not yet been processed by the BCDL agent.

show bcdl consumers

To display Bulk Content Downloader (BCDL) consumer information, use the **show bcdl consumers** command in EXEC mode.

show bcdl consumers [*group_name*]

Syntax Description

group_name (Optional) Displays information for a specific BCDL group.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sysmgr	read

Examples

The following example shows sample output using the **show bcdl consumers** command:

```
RP/0/RSP0/CPU0:router# show bcdl consumers ipv4_rib

Sun May 31 06:17:38.209 PST
group ipv4_rib, gsp gid 2040, 4 consumers, agent jid 124, node 0/RSP0/CPU0
(expected 4 consumers to reply, received 4 replies)
  pid      node asg csg  lwg sus  messages    bytes  errs name
  ----      -
  323727 0/RSP0/CPU0  0   0 2043  N      113      54196    0 fib_mgr
  110686  0/6/CPU0    0   0 2043  N      111      54140    0 fib_mgr
  110686  0/4/CPU0    0   0 2043  N      112      54168    0 fib_mgr
  110686  0/1/CPU0    0   0 2043  N      111      54140    0 fib_mgr
```

This table describes the significant fields shown in the display that are not described in [Table 3: show bcdl Field Descriptions](#), on page 37.

Table 4: show bcdl consumers Field Descriptions

Field	Description
PID	Process identifier.
node	Consumer node, expressed in the <i>rack/slot/module</i> notation.
asg	Subgroup to which the BCDL agent thinks this consumer belongs.
csg	Subgroup to which the consumer thinks it belongs.
messages	Number of messages processed by this particular consumer.
bytes	Bytes processed by this particular consumer.
errors	Errors encountered by the consumer. This field indicates the number of times the connection was reset.
name	Name of the consumer process.

show bcdl queues

To display the Bulk Content Downloader (BCDL) queue information, use the **show bcdl queues** command in EXEC mode.

show bcdl queues [*group_name*]

Syntax Description

<i>group_name</i>	(Optional) Displays information for a specific BCDL group.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sysmgr	read

Examples

The following example shows sample output from the **show bcdl queues** command:

```
RP/0/RSP0/CPU0:router# show bcdl queues ipv4_rib

Sun May 31 07:13:28.665 PST
group ipv4_rib, gsp gid 2040, 4 consumers, agent jid 124, node 0/RSP0/CPU0
(expected 4 consumers to reply, received 4 replies)
  pid      node asg csg  lwg sus msgs_in_q  bytes_in_q  errs name
  ----      -
323727 0/RSP0/CPU0  0   0 2043   N         0           0      0 fib_mgr
110686  0/6/CPU0    0   0 2043   N         0           0      0 fib_mgr
110686  0/1/CPU0    0   0 2043   N         0           0      0 fib_mgr
110686  0/4/CPU0    0   0 2043   N         0           0      0 fib_mgr
```

Table 3: show bcdl Field Descriptions, on page 37 and Table 4: show bcdl consumers Field Descriptions, on page 40 describe the significant fields shown in the display.

show bcdl tables

To display Bulk Content Downloader (BCDL) table information, use the **show bcdl tables** command in EXEC

mode.

show bcdl tables [*group_name*]

Syntax Description	<i>group_name</i> Displays information for a specific BCDL group.					
Command Default	No default behavior or values					
Command Modes	EXEC					
Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 3.7.2</td><td>This command was introduced.</td></tr></table>		Release	Modification	Release 3.7.2	This command was introduced.
Release	Modification					
Release 3.7.2	This command was introduced.					
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.					
Task ID	<table><tr><th>Task ID</th><th>Operations</th></tr><tr><td>sysmgr</td><td>read</td></tr></table>		Task ID	Operations	sysmgr	read
Task ID	Operations					
sysmgr	read					

Examples

The following example shows sample output using the **show bcdl tables** command:

```
RP/0/RSP0/CPU0:router# show bcdl tables ipv4_rib

Sun May 31 07:19:29.878 PST
grp ipv4_rib, gid 2040, sg cnt 1, agent jid 124, node 0/RSP0/CPU0, pulse 105, ne
w mbr 0
  sg  lwg fd csmr hdlr-act dnld-act susp wait-lck   seq pulse-tot pulse-out
    0 2043 11   4      no      no   no         0  113      103         0
sgs: 1, table_cnt: 1, table_mid_cnt: 4, buf size: 100
Showing table info for 1 subgroups
sg 0: has 1 tables (messages: 0, bytes: 0)
  table 0xe0000000: 4 members, dnld act: 0, messages: 113, bytes: 54196
  csmr 0: pid 323727 on node 0/RSP0/CPU0
```

```

cnsmr 1: pid 110686 on node 0/6/CPU0
cnsmr 2: pid 110686 on node 0/1/CPU0
cnsmr 3: pid 110686 on node 0/4/CPU0

```

The significant fields shown in the display that are not described in [Table 3: show bcdl Field Descriptions, on page 37](#) or [Table 4: show bcdl consumers Field Descriptions, on page 40](#) are described in this table.

Table 5: show bcdl tables Field Descriptions

Field	Description
sgs	Number of subgroups.
table_cnt	Number of tables in this subgroup.
sg	Specific subgroup for which information is provided.
has 1 tables	Number of tables in this subgroup.
messages	Messages sent that are not associated with a particular table ID.
bytes	Bytes sent that are not associated with a particular table ID.
table	Specific table ID for which information is provided.
members	Number of consumers associated with this table.
dnld act	Indicates whether or not the convergence flag has been sent.
messages	Number of messages sent for a particular table.
bytes	Number of bytes sent for a particular table.
cnsmr 0: pid 419725 on node 0/RP0/CPU0	Process ID and node information for each consumer in the specified table.

show bcdl trace

To display Bulk Content Downloader (BCDL) trace information, use the **show bcdl trace** command in EXEC

mode.

show bcdl trace [*group_name*] [**event**] [**timing**] [**grpsnd**] [**wrapping**] [**unique**] [**hexdump**] [**last** *n*] [**reverse**] [**stats**] [**tailf**] [**verbose**] [**file** *filename* **original location** *node-id*] **location** {*node-id* | **all**}

Syntax Description

<i>group_name</i>	(Optional) Displays information for a specific BCDL group.
event	(Optional) Displays event trace entries.
timing	(Optional) Displays timing trace entries.
grpsnd	(Optional) Displays group send trace entries.
wrapping	(Optional) Displays wrapping entries.
unique	(Optional) Displays unique entries only, along with the count of the number of times this entry appears.
hexdump	(Optional) Displays traces in hexadecimal format.
last <i>n</i>	(Optional) Displays the last <i>n</i> number of traces only.
reverse	(Optional) Displays the most recent traces first.
stats	(Optional) Displays execution path statistics.
tailf	(Optional) Displays new traces as they are added.
verbose	(Optional) Displays additional internal debugging information.
file <i>filename</i> original location <i>node-id</i>	(Optional) Specifies a filename and original location of the file to display.
location { <i>node-id</i> all }	Specifies the RP node for which to display the execution path monitoring information. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. The all keyword specifies all RP nodes.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sysmgr	read

Examples

The following example shows sample output using the **show bcdl trace** command:

```
RP/0/RSP0/CPU0:router# show bcdl trace ipv4_rib location 0/1/cpu0
```

```
Sun May 31 08:21:07.933 PST
143 wrapping entries (4096 possible, 0 filtered, 143 total)
May 21 15:14:55.790 bcdl/c/ipv4_rib 0/1/CPU0 t4 LE
    bcdl_join_internal: timer create ret 0, id is 9
May 21 15:14:56.890 bcdl/c/ipv4_rib 0/1/CPU0 t7 LE
    bcdl_join_internal: group_lookup bcdl_ipv4_rib
    returned gid 2040
May 21 15:14:56.966 bcdl/c/ipv4_rib 0/1/CPU0 t7 LE
    join hwg 2040 returns 0
May 21 15:14:56.978 bcdl/c/ipv4_rib 0/1/CPU0 t7 LE
    bcdl_join_internal: joined group bcdl_ipv4_rib,
    member count 5
May 21 15:14:58.969 bcdl/c/ipv4_rib 0/1/CPU0 t7 LE
    rcv gsp mtype 3: connection init sg 1 cur_seq 0
    lwg_gid 2056 table tag 0x00000000 resend state yes
May 21 15:14:58.969 bcdl/c/ipv4_rib 0/1/CPU0 t7 LE
    pc ring high water 0 -> 1, 0 bytes
May 21 15:14:58.969 bcdl/c/ipv4_rib 0/1/CPU0 t4 LE
    c_h deliver msg id 7 connection init, table event
    0 table tag 0x00000000
May 21 15:14:58.969 bcdl/c/ipv4_rib 0/1/CPU0 t4 LE
    conn init, seq 64206 -> 0, sg 65534 -> 1, gid 2040,
    lwg gid -1 -> 2056
...
```



Call Home Commands on the Cisco ASR 9000 Series Router

This module describes the Cisco IOS XR software commands for configuring and sending Call Home messages.

For detailed information about Call Home concepts, configuration tasks, and examples, see the *Configuring Call Home on Cisco IOS XR Software* module in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

- [active](#), page 49
- [alert-group disable](#), page 51
- [call-home](#), page 53
- [call-home request](#), page 54
- [call-home send](#), page 56
- [call-home send alert-group inventory](#), page 58
- [call-home test](#), page 59
- [contact-email-addr](#), page 61
- [contract-id](#), page 62
- [customer-id](#), page 63
- [destination address](#), page 64
- [destination message-size-limit](#), page 66
- [destination preferred-msg-format](#), page 68
- [destination transport-method](#), page 70
- [mail-server](#), page 72
- [phone-number](#), page 74
- [profile \(call home\)](#), page 75
- [rate-limit](#), page 77

- [sender](#), page 78
- [service active](#), page 80
- [show call-home](#), page 81
- [show call-home alert-group](#), page 83
- [show call-home mail-server status](#), page 84
- [show call-home profile](#), page 85
- [show call-home statistics](#), page 87
- [show call-home trace](#), page 89
- [site-id](#), page 92
- [street-address](#), page 93
- [subscribe-to-alert-group environment](#), page 94
- [subscribe-to-alert-group inventory](#), page 96
- [subscribe-to-alert-group syslog](#), page 98

active

To enable a Call Home profile, use the **active** command in call home profile configuration mode. To disable a profile, use the **no** form of this command.

active

no active

Syntax Description This command has no keywords or arguments.

Command Default A profile is disabled by default.

Command Modes Call home configuration

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You must enable a profile using the **active** command so that call home messages can be triggered.

Task ID	Task ID	Operation
	call-home	read, write

Examples The following example shows how to activate a profile:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# profile my-profile
RP/0/RSP0/CPU0:router(config-call-home-profile)# active
```

Related Commands	Command	Description
	call-home	Enters call home configuration mode to configure the call home feature.

Command	Description
profile (call home)	Enters call home profile configuration mode to create or configure a Call Home profile.

alert-group disable

To disable an individual Call Home alert-group, use the **alert group disable** command in call home configuration mode. To enable an individual Call Home alert-group, use the **no** form of this command.

alert-group *alert-group-name* **disable**

no alert-group *alert-group-name* **disable**

Syntax Description

<i>alert-group-name</i>	A keyword that identifies an alert group. Valid values are: • syslog • environment • inventory

Command Default

Alert groups are enabled by default.

Command Modes

Call home configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

By default, alert groups are enabled. Use the **alert-group disable** command to disable alert groups.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to disable the inventory alert group:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# alert-group inventory disable
```

 alert-group disable**Related Commands**

Command	Description
call-home, on page 53	Enters call home configuration mode to configure the call home feature.

call-home

To enter call home configuration mode to configure Call Home, use the **call-home** command in global configuration mode. To remove all Call Home settings and set the technical assistance center (TAC) profile as the default, use the **no** form of this command.

call-home

no call-home

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	call-home	read, write

Examples The following example shows how to enter call home configuration mode:

```
RP/0/RSP0/CPU0:router(config)# call-home  
RP/0/RSP0/CPU0:router(config-call-home)#
```

Related Commands	Command	Description
	show call-home , on page 81	Displays information regarding the Call Home configuration.

call-home request

To send a customer request to Cisco, use the **call-home request** command in EXEC mode.

call-home request {bugs-list| command-reference| config-sanity| output-analysis "*show-command*"| product-advisory} {ccoid *ccoid*| profile *profile-name*}

Syntax Description

bugs-list	Sends output of the following commands: • show running-config sanitized • show version • show diag
command-reference	Sends output of the following commands: • show running-config sanitized • show version • show diag
config-sanity	Sends output of the following commands: • show running-config sanitized • show version
output-analysis <i>show-command</i>	Sends output from the specified show command. The <i>show-command</i> argument should be enclosed in quotes ("").
product-advisory	Sends output of all commands included in the enventory message in addition to the output from the show running-config sanitized command.
ccoid <i>ccoid</i>	Specifies the Smart Call Home user registered ID.
profile <i>profile-name</i>	Specifies the profile to which to send the message.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The message uses the specified profile or the CiscoTAC-1 profile if no profile name is specified to send out the request the the Cisco backend. This ensures that users who use a transport gateway can use a different profile than the CiscoTAC-1 profile to send the request to their email server first before forwarding to the Cisco backend. CiscoTAC-1 or any profile specified needs to be enabled before you can send out the request.

If the CCO ID is not specified, the contact email address of the device is used.

Each message sent includes the CLI command output specified for each subcommand. After the message is sent, a syslog message is displayed indicating whether the request was sent successfully or not.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to send a message with output from the **show version** command to engineer@cisco.com:

```
RP/0/RSP0/CPU0:router(config)# call-home request config-sanity ccoid
xyz
RP/0/RSP0/CPU0:router(config)# call-home request bugs-list
RP/0/RSP0/CPU0:router(config)# call-home request output-analysis "show log"
profile TG
RP/0/RSP0/CPU0:router(config)# call-home request output-analysis "show
running-config"
```

Related Commands

Command	Description
call-home, on page 53	Enters call home configuration mode to configure the call home feature.
show call-home, on page 81	Displays information regarding the Call Home configuration.

call-home send

To send the output from a specific command as a Call Home message, use the **call-home send** command in EXEC mode.

call-home send "*cli-command*" {**email** *email-address*|**tac-service-request** *service-number*}

Syntax Description

<i>cli-command</i>	Any CLI command that can be run at the prompt.
email <i>email-address</i>	Specifies the email address to which to send the call home message.
tac-service-request <i>service-number</i>	Specifies the Technical Assistance Center (TAC) service request number.

Command Default

If no email address is specified, attach@cisco.com is used.

Command Modes

EXEC

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The specified CLI command is generally a show command with output that is required by the TAC to analyze a specific issue. The CLI command must be enclosed in quotes. The CLI command output is sent to the specified email address in long text format with the service request number in the subject of the email. If no email address is specified, the TAC service request number must be specified. By default, messages are sent to attach@cisco.com. If no TAC service request number is specified, TAC email is rejected.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to send a message with output from the **show version** command to `engineer@cisco.com`:

```
RP/0/RSP0/CPU0:router(config)# call-home send "show version" engineer@cisco.com
```

Related Commands

Command	Description
call-home, on page 53	Enters call home configuration mode to configure the call home feature.
show call-home, on page 81	Displays information regarding the Call Home configuration.

call-home send alert-group inventory

To send an inventory Call Home message to all subscribed profiles or the specified profile, use the **call-home send alert-group inventory** command in EXEC mode.

call-home send alert-group inventory [*profile profile-name*]

Syntax Description

profile <i>profile-name</i>	Specifies the profile to which to send the inventory Call Home message.

Command Default

If no profile is specified, the message is sent to all subscribed profiles.

Command Modes

EXEC

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The profile specified by the *profile-name* argument does not need to be subscribed to the inventory alert-group.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to send an inventory message to the myprofile profile:

```
RP/0/RSP0/CPU0:router(config)# call-home send alert-group inventory profile myprofile
```

Related Commands

Command	Description
call-home , on page 53	Enters call home configuration mode to configure the call home feature.
show call-home , on page 81	Displays information regarding the Call Home configuration.

call-home test

To send a test Call Home message to the specified profile, use the **call-home test** command in EXEC mode.

call-home test [*test-message-text*] **profile** *profile-name*

Syntax Description

<i>test-message-text</i>	Text to be sent in the test message. If the message text is not specified, a default message is sent.
profile <i>profile-name</i>	Specifies the profile to which to send the test call home message.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to send a test Call Home message:

```
RP/0/RSP0/CPU0:router(config)# call-home test "this is a test message" profile myprofile
```

Related Commands

Command	Description
call-home , on page 53	Enters call home configuration mode to configure the call home feature.

Command	Description
show call-home, on page 81	Displays information regarding the Call Home configuration.

contact-email-addr

To specify a contract email address for the system, use the **contact-email-addr** command in call home configuration mode. To disable the contact email address, use the **no** form of this command.

contact-email-addr *email-addr*

no contact-email-addr *email-addr*

Syntax Description

<i>email-addr</i>	The email address of the system contact.

Command Default

No contact email address is defined.

Command Modes

Call home configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The contact email address is a mandatory user-configurable field that must be configured before Call Home messages are triggered.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the contact email address:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# contact-email-addr contact@cisco.com
```

contract-id

To specify a contract identifier for the system, use the **contract-id** command in call home configuration mode. To disable the contract identifier, use the **no** form of this command.

contract-id *contract-id-string*

no contract-id *contract-id-string*

Syntax Description

<i>contract-id-string</i>	A string that identifies a service contract.

Command Default

No contract ID is defined.

Command Modes

Call home configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The contract ID is an optional user-configurable field that can be used for contract information or any other identification information for the support service.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the contract ID:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home) # contract-id contract
```

customer-id

To specify a customer identifier for the system, use the **customer-id** command in call home configuration mode. To disable the customer identifier, use the **no** form of this command.

customer-id *contract-id-string*

no customer-id *contract-id-string*

Syntax Description

<i>customer-id-string</i>	A string that identifies the customer.

Command Default

No customer ID is defined.

Command Modes

Call home configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The customer ID is an optional user-configurable field that can be used for contract information or any other identification information of a support service.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the customer ID:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# customer-id cisco
```

destination address

To specify an email address to which Call Home messages are sent, use the **destination address** command in call home profile configuration mode. To disable the contract identifier, use the **no** form of this command.

destination address *email-address*

no destination address *email-address*

Syntax Description

<i>email-address</i>	Email address to which short-text and long-text Call Home messages and XML-based Call Home messages are to be sent.

Command Default

No destination email address is defined.

Command Modes

Call home profile configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You must define a destination email address to send out Call Home messages.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the destination email address:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# profile my-profile
RP/0/RSP0/CPU0:router(config-call-home-profile)# destination address user@cisco.com
```


Related Commands

Command	Description
profile (call home), on page 75	Enters call home profile configuration mode to create or configure a Call Home profile.

destination message-size-limit

To specify the message size limit for call home messages for a specific profile, use the **destination message-size-limit** command in Call Home profile configuration mode. To disable the message size limit, use the **no** form of this command.

destination message-size-limit *maximum-size*

no destination message-size-limit *maximum-size*

Syntax Description

<i>maximum-size</i>	Maximum message size in bytes.

Command Default

The default maximum message size is 3 Mbytes.

Command Modes

Call home profile configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The destination maximum message size can be optionally set to limit the size of Call Home messages.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the contract ID:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# profile my-profile
RP/0/RSP0/CPU0:router(config-call-home-profile)# destination maximum-message-size 2000
```

Related Commands

Command	Description
profile (call home), on page 75	Enters call home profile configuration mode to create or configure a Call Home profile.

destination preferred-msg-format

To specify the message format for a profile, use the **destination preferred-msg-format** command in call home profile configuration mode. To revert to the default message format, use the **no** form of this command.

destination preferred-msg-format {long-text| short-text| xml}

no destination preferred-msg-format {long-text| short-text| xml}

Syntax Description

long-text	Specifies to send clear text long Call Home messages, that contain formatting to enable easy readability.
short-text	Specifies to send clear text short Call Home messages, that are designed for use with text pagers.
xml	Specifies to send the same text as the long text messages, with the addition of XML tagging and Adaptive Messaging Language (AML) specific transport information to allow machine-readable parsing and correct routing of the message.

Command Default

The default message format is xml.

Command Modes

Call home profile configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the message format to short text:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
```

```
RP/0/RSP0/CPU0:router(config-call-home)# profile my-profile  
RP/0/RSP0/CPU0:router(config-call-home-profile)# destination preferred-msg-format short-text
```

Related Commands

Command	Description
profile (call home), on page 75	Enters call home profile configuration mode to create or configure a Call Home profile.

destination transport-method

To specify the transport method for Call Home messages for a specific profile, use the **destination transport-method** command in call home profile configuration mode. To disable the transport method, use the **no** form of this command.

destination transport-method email

no destination transport-method email

Syntax Description

email	Email is used to send call home messages.

Command Default

The default transport method is email.

Command Modes

Call home profile configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The only transport method supported in this release is email.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the transport method to be email:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# profile my-profile
RP/0/RSP0/CPU0:router(config-call-home-profile)# destination transport-method email
```

Related Commands

Command	Description
profile (call home), on page 75	Enters call home profile configuration mode to create or configure a Call Home profile.

mail-server

To specify and configure the various mail servers for sending Call Home messages, use the **mail-server** command in call home configuration mode. To remove the mail server configuration, use the **no** form of this command.

mail-server *{ip-address| name}* **priority** *priority*

no mail-server *{ip-address| name}* **priority** *priority*

Syntax Description

<i>ip-address</i>	An IPv4 address to use as the mail server.
<i>name</i>	Name of server to use as the mail server.
priority <i>priority</i>	Priority to be used to determine which of multiple configured servers to use as the mail server. Values can be from 1 to 100. A server with a lower priority is tried first.

Command Default

No mail server is defined.

Command Modes

Call home configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You must configure a mail server if the user profile is configured to send email messages only. Only IPv4 addresses are supported.

Up to five mail servers can be configured. Specify a priority for each mail server so the system knows which to try first.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure a mail server:

```
RP/0/RSP0/CPU0:router# configure  
RP/0/RSP0/CPU0:router(config) call-home  
RP/0/RSP0/CPU0:router(config-call-home) # email-server 209.165.200.225
```

Related Commands

Command	Description
call-home , on page 53	Enters call home configuration mode to configure the call home feature.

phone-number

To specify a phone number to contact regarding the system, use the **phone-number** command in call home configuration mode. To remove the configured phone number, use the **no** form of this command.

phone-number *phone-number-string*

no phone-number *phone-number-string*

Syntax Description

<i>phone-number-string</i>	Phone number of the contact for the system. The number should always begin with a plus sign (+).

Command Default

No phone number is defined.

Command Modes

Call home configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The phone number is an optional user-configurable field.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the phone number of the system contact:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home) # phone-number +15435432101
```

profile (call home)

To enter call home profile configuration mode to create a user-defined profile or configure an existing Call Home profile, use the **profile** command in call home configuration mode. To delete a user-defined profile, use the **no** form of this command.

profile *profile-name*

no profile *profile-name*

Syntax Description

<i>profile-name</i>	A string that identifies the name of profile to create or configure.

Command Default

The tac profile exists by default.

Command Modes

Call home configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the profile command to create a new profile or modify an existing profile. When you use the **no profile** command, the user-defined profile is deleted and the CiscoTAC-1 profile is set to default. A warning message is displayed when the CiscoTAC-1 profile is set to default.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to create a profile called new-profile:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# profile new-profile
RP/0/RSP0/CPU0:router(config-call-home-profile)#
```

Related Commands

Command	Description
active, on page 49	Enables a Call Home profile.
destination address, on page 64	Specifies an email address to which Call Home messages are sent.

rate-limit

To specify a Call Home event trigger rate limit, use the **rate-limit** command in call home configuration mode. To disable the configured rate limit, use the **no** form of this command.

rate-limit *events-count*

no rate-limit *events-count*

Syntax Description

<i>events-count</i>	Number of events that can be triggered per minute. The default is five events. The maximum is five events.

Command Default

5 events per minute

Command Modes

Call home configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the rate limit to be 3 events per minute:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# rate-limit 3
```

sender

To specify the from and reply-to email addresses for Call Home email messages, use the **sender** command in call-home configuration mode. To remove these email addresses from the configuration, use the **no** form of this command.

sender {from| reply-to} *email-address*

no sender {from| reply-to} *email-address*

Syntax Description

from	Specifies the email address to be used as the from field in Call Home email messages.
reply-to	Specifies the email address to be used as the reply-to field in Call Home email messages.
<i>email-address</i>	A string that identifies a valid email address.

Command Default

No sender email is configured.

Command Modes

Call-home configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the from and reply-to email addresses:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home) # sender from user1@cisco.com
```

```
RP/0/RSP0/CPU0:router(config-call-home)# sender reply-to user1@cisco.com
```

service active

To enable the Call Home capability, use the **service active** command in call home configuration mode. To disable the Call Home capability, use the **no** form of this command.

service active

no service active

Syntax Description This command has no keywords or arguments.

Command Default Call Home is disabled by default.

Command Modes Call home configuration

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

It is mandatory to enable the Call Home capability using the **service active** command to allow events to get triggered and send out Call Home messages.

Task ID	Task ID	Operation
	call-home	read, write

Examples The following example shows how to enable the Call Home capability:

```
RP/0/RSP0/CPU0:router(config-call-home) # service active
```


show call-home

To display information regarding the Call Home configuration, use the **show call-home** command in EXEC mode.

show call-home [detail]

Syntax Description	detail	Displays Call Home general settings, alert group settings, and all available profiles.

Command Default	None

Command Modes	EXEC

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	call-home	read

Examples	The following example shows how to display detailed call home configuration information:

```
RP/0/RSP0/CPU0:router# show call-home detail

Wed Apr  6 02:00:27.789 DST

Current call home settings:
  call home feature : disable
  call home message's from address: Not yet set up
  call home message's reply-to address: Not yet set up

  contact person's email address: Not yet set up

  contact person's phone number: Not yet set up
  street address: Not yet set up
  customer ID: Not yet set up
```

show call-home

```

contract ID: Not yet set up
site ID: Not yet set up

Mail-server: Not yet set up
Rate-limit: 5 event(s) per minute

```

Available alert groups:

Keyword	State	Description
environment	Enable	environmental info
inventory	Enable	inventory info
syslog	Enable	syslog info

Profiles:

```

Profile Name: CiscoTAC-1
Profile status: INACTIVE
Preferred Message Format: xml
Message Size Limit: 3145728 Bytes
Transport Method: email
Email address(es): callhome@cisco.com

```

Periodic inventory info message is scheduled every 24 day of the month at 16:35

Alert-group	Severity
environment	minor
inventory	normal

Syslog-Pattern	Severity
.*	major

Related Commands

Command	Description
call-home , on page 53	Enters call home configuration mode to configure the call home feature.

show call-home alert-group

To display available Call Home alert groups, use the **show call-home alert-group** command in EXEC mode.

show call-home alert-group

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	call-home	read, write

Examples The following example shows how to display Call Home alert group information:

```
RP/0/RSP0/CPU0:router# show call-home alert-group
```

```
Tue Apr 5 06:51:02.860 DST
```

```
Available alert groups:
```

Keyword	State	Description
environment	Enable	environmental info
inventory	Enable	inventory info
syslog	Enable	syslog info

show call-home mail-server status

To displays the status of the configured mail servers, use the **show call-home mail-server status** command in EXEC mode.

show call-home mail-server status

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	call-home	read

Examples The following example shows sample output from the **show call-home mail-server status** command:

```
RP/0/RSP0/CPU0:router# show call-home mail-server status
Please wait. Checking for mail server status ...
Mail-server[1]: Address: 64.102.124.15 Priority: 50 [Available]
```

Related Commands	Command	Description
	call-home , on page 53	Enters call home configuration mode to configure the call home feature.

show call-home profile

To display the Call Home profiles, use the **show call-home profile** command in EXEC mode.

show call-home profile {**all**| *profile-name*}

Syntax Description	all	Displays information for all profiles.
	<i>profile-name</i>	Name of the profile for which to display information.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	call-home	read

Examples The following example shows sample output from the **show call-home profile** command:

```
RP/0/RSP0/CPU0:router# show call-home profile CiscoTAC-1
```

```
Profile Name: CiscoTAC-1
Profile status: INACTIVE
Preferred Message Format: xml
Message Size Limit: 3145728 Bytes
Transport Method: email
Email address(es): callhome@cisco.com
```

Periodic inventory info message is scheduled every 4 day of the month at 12:19

```
Alert-group          Severity
-----
environment          minor
```

 show call-home profile

Syslog-Pattern	Severity
-----	-----
.*	major

Related Commands

Command	Description
call-home , on page 53	Enters call home configuration mode to configure the call home feature.

show call-home statistics

To display Call Home statistics, use the **show call-home statistics** command in EXEC mode.

show call-home statistics

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 4.1.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	call-home	read

Examples The following example shows sample output from the **show call-home statistics** command:

```
RP/0/RSP0/CPU0:router# show call-home statistics
```

Message Types	Total	Email
Total Success	2	2
Environment	0	0
Inventory	2	2
SysLog	0	0
Test	0	0
Request	0	0
Send-CLI	0	0
Total In-Queue	0	0
Environment	0	0
Inventory	0	0
SysLog	0	0
Test	0	0
Request	0	0
Send-CLI	0	0

show call-home statistics

```

Total Failed      0          0
  Environment    0          0
  Inventory      0          0
  SysLog         0          0
  Test           0          0
  Request        0          0
  Send-CLI       0          0

```

```

Total Ratelimit
  -dropped      0          0
  Environment    0          0
  Inventory      0          0
  SysLog         0          0
  Test           0          0
  Request        0          0
  Send-CLI       0          0

```

Last call-home message sent time: 2010-04-21 01:06:44 GMT+00:00

Related Commands

Command	Description
call-home , on page 53	Enters call home configuration mode to configure the call home feature.

show call-home trace

To display Call Home trace information, use the **show call-home trace** command in EXEC mode.

show call-home trace {**all**|**error**|**event**} {**file** *filename* **original location** *node-id*|**hexdump**|**last** *n*|**location** {*node-id*|**all**}|**reverse**|**stats**|**tailf**|**unique**|**verbose**|**wrapping**}

Syntax Description

all	(Optional) Displays both error and event traces.
error	(Optional) Displays error trace entries.
event	(Optional) Displays event trace entries.
file <i>filename</i> original location <i>node-id</i>	(Optional) Specifies a filename and original location of the file to display.
hexdump	(Optional) Displays traces in hexadecimal format.
last <i>n</i>	(Optional) Displays the last <i>n</i> number of traces only.
location { <i>node-id</i> all }	Specifies the RP node for which to display the execution path monitoring information. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. The all keyword specifies all RP nodes.
reverse	(Optional) Displays the most recent traces first.
stats	(Optional) Displays execution path statistics.
tailf	(Optional) Displays new traces as they are added.
unique	(Optional) Displays unique entries only, along with the count of the number of times this entry appears.
verbose	(Optional) Displays additional internal debugging information.
wrapping	(Optional) Displays wrapping entries.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
call-home	read

Examples

The following example shows how to display Call Home trace information:

```
RP/0/RSP0/CPU0:router# show call-home trace event last 15 stats
```

```
Wed Apr  6 05:11:59.984 DST
/dev/shmem/ltrace/call_home/trace wrapping: 28.672 Mbytes/sec for 512 entries
59 wrapping entries (512 possible, 0 filtered, 59 total)
Mar  3 13:26:20.281 call_home/trace 0/RSP0/CPU0 t14 Checking mail server access during
boot-up
Mar  3 13:26:20.281 call_home/trace 0/RSP0/CPU0 t9  processing mail server status checking
event: data1 0x5005784c, str1
Mar  3 13:27:20.283 call_home/trace 0/RSP0/CPU0 t9  Checking mail server access during
boot-up
Mar  3 13:27:20.283 call_home/trace 0/RSP0/CPU0 t14 processing mail server status checking
event: data1 0x5005784c, str1
Mar  3 13:28:20.285 call_home/trace 0/RSP0/CPU0 t14 Checking mail server access during
boot-up
Mar  3 13:28:20.285 call_home/trace 0/RSP0/CPU0 t9  processing mail server status checking
event: data1 0x5005784c, str1
Mar  3 13:29:20.287 call_home/trace 0/RSP0/CPU0 t9  Checking mail server access during
boot-up
Mar  3 13:29:20.287 call_home/trace 0/RSP0/CPU0 t14 processing mail server status checking
event: data1 0x5005784c, str1
Mar  3 13:30:20.289 call_home/trace 0/RSP0/CPU0 t14 Checking mail server access during
boot-up
Mar  3 13:30:20.289 call_home/trace 0/RSP0/CPU0 t9  processing mail server status checking
event: data1 0x5005784c, str1
Mar  3 13:31:20.290 call_home/trace 0/RSP0/CPU0 t9  Checking mail server access during
boot-up
Mar  3 13:31:20.290 call_home/trace 0/RSP0/CPU0 t14 processing mail server status checking
event: data1 0x5005784c, str1
Mar  3 13:32:21.067 call_home/trace 0/RSP0/CPU0 t14 Checking mail server access during
boot-up
Mar  3 13:32:21.067 call_home/trace 0/RSP0/CPU0 t9  processing mail server status checking
event: data1 0x5005784c, str1
Mar  3 13:33:21.069 call_home/trace 0/RSP0/CPU0 t9  Checking mail server access during
boot-up
```

Related Commands

Command	Description
call-home , on page 53	Enters call home configuration mode to configure the call home feature.

site-id

To specify a site identifier for the system, use the **site-id** command in call-home configuration mode. To disable the site identifier, use the **no** form of this command.

site-id *site-id-string*

no site-id *site-id-string*

Syntax Description

<i>site-id-string</i>	A string that identifies the site.

Command Default

No site ID is defined.

Command Modes

Call-home configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The site ID is an optional user-configurable field that can be used to specify a Cisco-supplied site ID or other data meaningful to the support service.

Task ID

Task ID	Operation
call-home	read, write

Examples

This example shows how to configure the site ID:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home) # site-id Cisco-site
```

street-address

To specify the street address of the system, use the **street-address** command in call home configuration mode. To remove the street address configuration, use the **no** form of this command.

street-address *street-address*

no street-address *street-address*

Syntax Description

<i>street address</i>	A string that identifies the street address of the system.

Command Default

No street address is defined.

Command Modes

Call home configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The street address is an optional user-configurable field that can be used to provide the address of the system to the support service.

Task ID

Task ID	Operation
call-home	read, write

Examples

This example shows how to configure the street address:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# street-address 170 West Tasman Dr.
San Jose, CA 95134 USA
```

subscribe-to-alert-group environment

To configure a destination profile to receive messages for the environment alert group, use the **subscribe-to-alert-group environment** command in call home profile configuration mode. To disable the subscription, use the **no** form of this command.

subscribe-to-alert-group environment severity *severity-level*

no subscribe-to-alert-group environment severity *severity-level*

Syntax Description

severity Specifies the the lowest level of severity events to include in an environment alert.

severity-level

- **catastrophic**—Includes network-wide catastrophic events in the alert. This is the highest severity.
- **critical**—Includes events requiring immediate attention (system log level 1).
- **debugging**—Includes debug events (system log level 7). This is the lowest severity.
- **disaster**—Includes events with significant network impact.
- **fatal**—Includes events where the system is unusable (system log level 0).
- **major**—Includes events classified as major conditions (system log level 2).
- **minor**—Includes events classified as minor conditions (system log level 3)
- **normal**—Specifies the normal state and includes events classified as informational (system log level 6). This is the default.
- **notification**—Includes events informational message events (system log level 5).
- **warning**—Includes events classified as warning conditions (system log level 4).

Command Default

The environment alert group is disabled by default. The default severity for the environment alert group is debugging.

Command Modes

Call home profile configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

At least one alert group subscription is mandatory for a profile so that a valid event can be triggered.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the environment alert group to include severity major:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# profile my-profile
RP/0/RSP0/CPU0:router(config-call-home-profile)# subscribe-to-alert-group environment major
```

Related Commands

Command	Description
profile (call home), on page 75	Enters call home profile configuration mode to create or configure a Call Home profile.
subscribe-to-alert-group syslog, on page 98	Configures a destination profile to receive messages for the syslog alert group.
subscribe-to-alert-group inventory, on page 96	Configures a destination profile to receive messages for the inventory alert group.

subscribe-to-alert-group inventory

To configure a destination profile to receive messages for the inventory alert group, use the **subscribe-to-alert-group inventory** command in call home profile configuration mode. To disable the subscription, use the **no** form of this command.

subscribe-to-alert-group inventory [**periodic** {**daily**| **monthly** *day-of-month*| **weekly** *day-of-week*} *time*]

no subscribe-to-alert-group inventory [**periodic** {**daily**| **monthly** *day-of-month*| **weekly** *day-of-week*} *time*]

Syntax Description

periodic	Specifies to send an inventory message periodically.
daily	Sends daily inventory messages.
monthly <i>day-of-month</i>	Sends monthly inventory messages on the day of the month specified.
weekly <i>day-of-week</i>	Sends weekly inventory messages on the day of the week specified.
<i>time</i>	Time to send the inventory message, in the format <i>hour:minutes</i> .

Command Default

The inventory alert group is disabled by default. The default severity for the inventory alert group is normal.

Command Modes

Call home profile configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

At least one alert group subscription is mandatory for a profile so that a valid event can be triggered.

There are two types of subscription for an inventory alert group. One is normal subscription, meaning that the severity is set to normal, and any (online insertion and removal) OIR event triggers the event. The second is periodic subscription, using the **periodic** keyword, meaning that an event is triggered only when the specified time arrives.

Task ID

Task ID	Operation
call-home	read, write

Examples

This example shows how to configure the sending of inventory messages every Monday:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# profile my-profile
RP/0/RSP0/CPU0:router(config-call-home-profile)# subscribe-to-alert-group inventory periodic
weekly monday
```

Related Commands

Command	Description
profile (call home), on page 75	Enters call home profile configuration mode to create or configure a Call Home profile.
subscribe-to-alert-group environment, on page 94	Configures a destination profile to receive messages for the environment alert group.
subscribe-to-alert-group syslog, on page 98	Configures a destination profile to receive messages for the syslog alert group.

subscribe-to-alert-group syslog

To configure a destination profile to receive messages for the syslog alert group, use the **subscribe-to-alert-group syslog** command in call home profile configuration mode. To disable the subscription, use the **no** form of this command.

subscribe-to-alert-group syslog severity *severity-level* **pattern** *match*

no subscribe-to-alert-group syslog severity *severity-level* **pattern** *match*

Syntax Description

severity	Specifies the the lowest level of severity events to include in a syslog alert.
<i>severity-level</i>	• catastrophic—Includes network-wide catastrophic events in the alert. This is the highest severity. • critical—Includes events requiring immediate attention (system log level 1). • debugging—Includes debug events (system log level 7). This is the lowest severity. • disaster—Includes events with significant network impact. • fatal—Includes events where the system is unusable (system log level 0). • major—Includes events classified as major conditions (system log level 2). • minor—Includes events classified as minor conditions (system log level 3) • normal—Specifies the normal state and includes events classified as informational (system log level 6). This is the default. • notification—Includes events informational message events (system log level 5). • warning—Includes events classified as warning conditions (system log level 4).
pattern	Specifies a syslog string pattern to match.
<i>match</i>	A string that when matched in the syslog message, is included in the alert notification. If the pattern contains spaces, you must enclose it in quotes (" ").

Command Default

The syslog alert group is disabled by default. The default severity for the syslog alert group is debugging.

Command Modes

Call home profile configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

At least one alert group subscription is mandatory for a profile so that a valid event can be triggered.

Task ID

Task ID	Operation
call-home	read, write

Examples

The following example shows how to configure the syslog alert group to include severity notification:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config) call-home
RP/0/RSP0/CPU0:router(config-call-home)# profile my-profile
RP/0/RSP0/CPU0:router(config-call-home-profile)# subscribe-to-alert-group syslog severity
notification pattern "UPDOWN"
```

Related Commands

Command	Description
profile (call home), on page 75	Enters call home profile configuration mode to create or configure a Call Home profile.
subscribe-to-alert-group environment, on page 94	Configures a destination profile to receive messages for the environment alert group.



CDP Commands on the Cisco ASR 9000 Series Router

This module describes the Cisco IOS XR software commands for monitoring the networking device and network using Cisco Discovery Protocol (CDP).

For detailed information about CDP concepts, configuration tasks, and examples, see the *Implementing CDP on Cisco IOS XR Software* module in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

- [cdp, page 102](#)
- [cdp advertise v1, page 104](#)
- [cdp holdtime, page 106](#)
- [cdp log adjacency changes, page 108](#)
- [cdp timer, page 110](#)
- [clear cdp counters, page 112](#)
- [clear cdp table, page 114](#)
- [show cdp, page 116](#)
- [show cdp entry, page 118](#)
- [show cdp interface, page 121](#)
- [show cdp neighbors, page 124](#)
- [show cdp traffic, page 128](#)

cdp

To enable the Cisco Discovery Protocol (CDP) globally or on an interface, use the **cdp** command in the appropriate configuration mode. To disable CDP globally or on an interface, use the **no** form of this command.

cdp

no cdp

Syntax Description

This command has no keywords or arguments.

Command Default

CDP is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

By default, CDP is disabled globally. To enable CDP, CDP must be enabled globally and then enabled for each interface.

To enable CDP globally, use the **cdp** command in global configuration mode. To disable CDP globally, use the **no** form of this command in global configuration mode.

To enable CDP on a specific interface, use the **cdp** command in interface configuration mode. To disable CDP on a specific interface, use the **no** form of this command in interface configuration mode.

Task ID

Task ID	Operations
cdp	read, write

Examples

The following example shows how to globally enable CDP:

```
RP/0/RSP0/CPU0:router(config)# cdp
```

The following example shows how to enable CDP on an interface:

```
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/0/0/1
```

```
RP/0/RSP0/CPU0:router(config-if)# cdp
```

The following example shows how to disable CDP on an interface:

```
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/0/0/1
RP/0/RSP0/CPU0:router(config-if)# no cdp
```

Related Commands

Command	Description
show cdp	Displays global Cisco Discovery Protocol information, including CDP version, timer, and holdtime information.

cdp advertise v1

To change the version of Cisco Discovery Protocol (CDP) that is used to communicate with neighboring devices to version 1 (CDPv1), use the **cdp advertise v1** command in the appropriate configuration mode. To remove the **cdp advertise v1** command from the configuration file and restore the system to its default condition with respect to this command, use the **no** form of this command.

cdp advertise v1

no cdp advertise [v1]

Syntax Description This command has no keywords or arguments.

Command Default Version 2 is enabled.

Command Modes Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

CDPv2 packets are sent by default. CDP also sends and receives CDPv1 packets if the device with which CDP is interacting does not process CDPv2 packets.

CDPv2 adds device information over CDPv1. The additional information that is contained in the CDPv2 messages relates to Native VLAN, VLAN Trunking Protocol (VTP) Management Domain, Ethernet Duplex, and other features.

Task ID	Task ID	Operations
	cdp	read, write

Examples The following example shows how to set a networking device to send and receive only CDPv1 advertisements:

```
RP/0/RSP0/CPU0:router(config)# cdp advertise v1
```


The following example shows how to restore the default condition (sending and receiving CDPv2 advertisements):

```
RP/0/RSP0/CPU0:router(config)# no cdp advertise
```

Related Commands

Command	Description
cdp	Enables the Cisco Discovery Protocol globally or on an interface.
show cdp	Displays global Cisco Discovery Protocol information, including CDP version, timer, and holdtime information.

cdp holdtime

To specify the time for which the receiving device should hold a Cisco Discovery Protocol (CDP) packet from your networking device before discarding it, use the **cdp holdtime** command in the appropriate configuration mode. To remove the **cdp holdtime** command from the configuration file and restore the system to its default condition with respect to this command, use the **no** form of this command.

cdp holdtime *seconds*

no cdp holdtime

Syntax Description

<i>seconds</i>	Holdtime to be sent in the CDP update packets, in seconds. Range is 10 to 255.

Command Default

seconds : 180

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

CDP packets are sent with a time-to-live value or holdtime, that is nonzero after an interface is enabled.

The CDP holdtime must be set to a higher number of seconds than the time between CDP transmissions, which is set using the **cdp time** command.

Task ID

Task ID	Operations
cdp	read, write

Examples

The following example shows how to specify that the CDP packets sent from the networking device are held by the receiving device for 60 seconds before being discarded. You might want to set the holdtime lower than

the default setting of 180 seconds if information about your networking device changes often and you want the receiving devices to purge this information more quickly.

```
RP/0/RSP0/CPU0:router(config)# cdp holdtime 60
```

Related Commands

Command	Description
cdp timer	Specifies how often the software sends Cisco Discovery Protocol updates.
show cdp	Displays global Cisco Discovery Protocol information, including CDP version, timer, and holdtime information.

cdp log adjacency changes

To log changes to the Cisco Discovery Protocol (CDP) adjacency table, use the **cdp log adjacency changes** command in the appropriate configuration mode. To disable the logging, use the **no** form of this command.

cdp log adjacency changes

no cdp log adjacency changes

Syntax Description This command has no keywords or arguments.

Command Default CDP adjacency table logging is disabled.

Command Modes Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When CDP adjacency table logging is enabled, a syslog is generated each time a CDP neighbor is added or removed.

Task ID	Task ID	Operations
	cdp	read, write

Examples The following example shows how to enable CDP adjacency table logging:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# cdp log adjacency changes
```

When CDP adjacency table logging is enabled, a syslog is generated each time a CDP neighbor is added or removed. The following is an example of the log entry:

```
LC/0/5/CPU0:Jun 5 10:51:18.081 : cdp[109]: %L2-CDP-6-DELETED_NEIGHBOR :
CDP Neighbour TBA04110127 on interface GigabitEthernet0/5/0/0
has been deleted, remote interface 3/2

LC/0/5/CPU0:Jun 5 10:51:33.120 : cdp[109]: %L2-CDP-6-NEW_NEIGHBOR :
```

```
New CDP neighbor TBA04110127 detected on interface GigabitEthernet0/5/0/0,  
remote interface 3/2
```

Related Commands

Command	Description
show cdp	Displays global Cisco Discovery Protocol information, including CDP version, timer, and holdtime information.

cdp timer

To specify how often the software sends Cisco Discovery Protocol (CDP) updates, use the **cdp timer** command in the appropriate configuration mode. To remove the **cdp timer** configuration command from the configuration file and restore the system to its default condition with respect to this command, use the **no** form of this command.

cdp timer *seconds*

no cdp timer

Syntax Description

<i>seconds</i>	Frequency with which the Cisco IOS XR software sends CDP updates, in seconds. Range is 5 to 254. The default is 60.

Command Default

seconds : 60

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A lower timer setting causes CDP updates to be sent more frequently.

Task ID

Task ID	Operations
cdp	read, write

Examples

The following example shows how to set the CDP timer to 80 seconds, which is less frequent than the default setting of 60 seconds:

```
RP/0/RSP0/CPU0:router(config)# cdp timer 80
```

Related Commands

Command	Description
cdp holdtime	Specifies the time for which the receiving device should hold a Cisco Discovery Protocol.
show cdp	Displays global Cisco Discovery Protocol information, including CDP version, timer, and holdtime information.

clear cdp counters

To reset Cisco Discovery Protocol (CDP) traffic counters to zero (0), use the **clear cdp counters** command in EXEC mode.

clear cdp counters location *node-id*

Syntax Description

location <i>node-id</i>	Clears CDP traffic counters for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

The counters are set to zero.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
cdp	read, write

Examples

The following example shows how to clear CDP counters. The **show cdp traffic** output shows that all traffic counters have been reset to zero (0).

```
RP/0/RSP0/CPU0:router# clear cdp counters
RP/0/RSP0/CPU0:router# show cdp traffic

CDP counters:
  Packets output: 0, Input: 0
  Hdr syntax: 0, Chksum error: 0, Encaps failed: 0
  No memory: 0, Invalid packet: 0, Truncated: 0
  CDP version 1 advertisements output: 0, Input: 0
  CDP version 2 advertisements output: 0, Input: 0
  Unrecognize Hdr version: 0, File open failed: 0
```


Related Commands

Command	Description
show cdp traffic	Displays information about the traffic gathered between devices using Cisco Discovery Protocol.
clear cdp table	Clears and automatically resizes the table that contains Cisco Discovery Protocol information about neighbors.

clear cdp table

To clear and automatically resize the table that contains Cisco Discovery Protocol (CDP) information about neighbors, use the **clear cdp table** command in EXEC mode.

clear cdp table location *node-id*

Syntax Description

location <i>node-id</i>	Clears and resizes the CDP table for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **clear cdp table** command to clear and resize the CDP table that contains the neighbor entries. The new table size is calculated according to the recommended hash table size, as seen in the **show cdp** command output.

Task ID

Task ID	Operations
cdp	read, write

Examples

The following example shows how to clear and resize the CDP table. The output of the **show cdp neighbors** command before and after use of the **clear cdp table** command shows that all information has been deleted from the table:

```
RP/0/RSP0/CPU0:router# show cdp neighbors
```

```
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                  S - Switch, H - Host, I - IGMP, r - Repeater
```

```
Device ID      Local Intrfce    Holdtme    Capability  Platform  Port ID
```

```

TBA04341195(151a Mg0/RP1/CPU0/0      171      T S      WS-C2924  0/1

RP/0/RSP0/CPU0:router# clear cdp table
RP/0/RSP0/CPU0:router# show cdp neighbors

Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                  S - Switch, H - Host, I - IGMP, r - Repeater
Device ID        Local Intrfce    Holdtme    Capability  Platform  Port ID

```

The **show cdp** command shows that the table has been resized:

```

RP/0/RSP0/CPU0:router# show cdp

Global CDP information:
  Sending CDP packets every 60 seconds
  Sending a holdtime value of 180 seconds
  Sending CDPv2 advertisements is enabled

```

Related Commands

Command	Description
show cdp	Displays global Cisco Discovery Protocol information, including CDP version, timer, and holdtime information.
show cdp neighbors	Displays detailed information about neighboring devices discovered using Cisco Discovery Protocol.

show cdp

To display global Cisco Discovery Protocol (CDP) information, including CDP version, timer, and holdtime information, use the **show cdp** command in EXEC mode.

show cdp

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes EXEC

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show cdp** command to display CDP version, timer, and holdtime information relative to CDP operations.

Task ID	Task ID	Operations
	cdp	read

Examples The following example shows how to use the **show cdp** command to verify the CDP global settings:

```
RP/0/RSP0/CPU0:router# show cdp
```

```
Global CDP information:
  Sending CDP packets every 20 seconds
  Sending a holdtime value of 30 seconds
  Sending CDPv2 advertisements is not enabled
```

Table 6: show cdp Field Descriptions

Field	Definition
Sending CDP packets every 20 seconds	Interval between transmissions of CDP advertisements. This field is controlled by the cdp timer command.
Sending a holdtime value of 30 seconds	Time for which the device directs the neighbor to hold a CDP advertisement before discarding it. This field is controlled by the cdp holdtime command.
Sending CDPv2 advertisements is not enabled	State of being enabled or disabled for the transmission of CDP version 2-type advertisements. This field is controlled by the cdp advertise v1 command.

Related Commands

Command	Description
cdp advertise v1	Changes the version of Cisco Discovery Protocol that is used to communicate with neighboring devices to version 1.
cdp holdtime	Specifies the time for which the receiving device should hold a Cisco Discovery Protocol.
cdp timer	Specifies how often the software sends Cisco Discovery Protocol updates.
show cdp entry	Displays information about a specific neighboring device or all neighboring devices discovered using Cisco Discovery Protocol.
show cdp interface	Displays information about the interfaces on which Cisco Discovery Protocol (CDP) is enabled.
show cdp neighbors	Displays detailed information about neighboring devices discovered using Cisco Discovery Protocol.
show cdp traffic	Displays information about the traffic gathered between devices using Cisco Discovery Protocol.
clear cdp table	Clears and automatically resizes the table that contains Cisco Discovery Protocol information about neighbors.

show cdp entry

To display information about a specific neighboring device or all neighboring devices discovered using Cisco Discovery Protocol (CDP), use the **show cdp entry** command in EXEC mode.

show cdp entry {***| *entry-name*} [**protocol**| **version**]

Syntax Description

*	Displays all CDP neighbors.
<i>entry-name</i>	Name of a neighbor about which you want information.
protocol	(Optional) Displays protocol information associated with CDP neighbor entries.
version	(Optional) Displays version information associated with CDP neighbor entries.

Command Default

This command displays information about a particular device that has been discovered by CDP.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
cdp	read, write

Examples

The following example shows sample output from the **show cdp entry** command. Information about device ID, address, platform, interface, holdtime, and version is displayed.

```
RP/0/RSP0/CPU0:router# show cdp entry TBA04341195
```

```

-----
Device ID: TBA04341195(sys-235)
SysName : sys-235
Entry address(es):
  IP address: 172.16.23.9
Platform: WS-C6006, Capabilities: Trans-Bridge Switch
Interface: MgmtEth0/RP1/CPU0/0
Port ID (outgoing port): 4/18
Holdtime : 157 sec

Version :
WS-C6006 Software, Version McpSW: 7.2(2) NmpSW: 7.2(2)
Copyright (c) 1995-2002 by Cisco Systems

advertisement version: 2
VTP Management Domain: 'sys'
Native VLAN: 125
Duplex: full

```

Table 7: show cdp entry Field Descriptions

Field	Description
Device ID	ID code assigned during installation of the router.
Entry address(es)	Addresses of the platform, selected interface, and port ID.
Platform	Platform name.
Capabilities	Special functions that the platform can perform (in this case the platform is a trans-bridge switch).
Interface	Interface location expressed in <i>rack / slot / module / port</i> notation.
Port ID (outgoing port)	Location of the port in use by the interface.
Holdtime	Time (in seconds) for which the device directs the neighbor to hold a CDP advertisement before discarding it. This field is controlled by the cdp holdtime command.
Version	Software version.
advertisement version	Version number of the advertising protocol.
VTP Management Domain	VLAN Trunking Protocol (VTP) domain name of neighbor device.
Native VLAN	VLAN ID.
Duplex	Duplex setting: half or full.

Related Commands

Command	Description
show cdp	Displays global Cisco Discovery Protocol information, including CDP version, timer, and holdtime information.
show cdp interface	Displays information about the interfaces on which Cisco Discovery Protocol (CDP) is enabled.
show cdp neighbors	Displays detailed information about neighboring devices discovered using Cisco Discovery Protocol.
show cdp traffic	Displays information about the traffic gathered between devices using Cisco Discovery Protocol.

show cdp interface

To display information about the interfaces on which Cisco Discovery Protocol (CDP) is enabled, use the **show cdp interface** command in EXEC mode.

show cdp interface [*type interface-path-id*] **location** *node-id*]

Syntax Description

<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>node-id</i>	(Optional) Displays detailed CDP information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

This command displays information about the interfaces on which CDP has been enabled.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show cdp interface** command to display information about any CDP interfaces. When an interface is specified in the command syntax, information is displayed about the specific interface. Not specifying the interface displays information about all interfaces.

Task ID

Task ID	Operations
cdp	read, write

Examples

The following example shows sample output from the **show cdp interface** command. Information about the status, CDP timer, and holdtime settings is displayed for all interfaces on which CDP is enabled.

```
RP/0/RSP0/CPU0:router# show cdp interface

POS0/2/0/0 is Up
  Encapsulation HDLC
  Sending CDP packets every 120 seconds
  Holdtime is 240 seconds
POS0/2/0/1 is Up
  Encapsulation HDLC
  Sending CDP packets every 120 seconds
  Holdtime is 240 seconds
POS0/2/0/2 is Up
  Encapsulation HDLC
  Sending CDP packets every 120 seconds
  Holdtime is 240 seconds
POS0/2/0/3 is Up
  Encapsulation HDLC
  Sending CDP packets every 120 seconds
  Holdtime is 240 seconds
MgmtEth0/RP1/CPU0/0 is Up
  Encapsulation ARPA
  Sending CDP packets every 120 seconds
  Holdtime is 240 seconds
```

The following example shows sample output from the **show cdp interface** command with an interface specified. Information about the status, CDP timer, and holdtime settings is displayed for Packet-over-SONET/SDH (POS) interface 0/2/0/1 only.

```
RP/0/RSP0/CPU0:router# show cdp interface pos 0/2/0/1

POS0/2/0/1 is Up
  Encapsulation HDLC
  Sending CDP packets every 60 seconds
  Holdtime is 180 seconds
```

Table 8: show cdp interface Field Descriptions

Field	Description
POS0/2/0/1 is Up	Current condition of POS interface 0/0/2/1.
Encapsulation HDLC	Interface is encoding packets using the Cisco HDLC Layer 2 encapsulation.
Sending CDP packets every 60 seconds	Interval between transmissions of CDP advertisements. This field is controlled by the cdp timer command.
Holdtime is 180 seconds	Time for which the device directs the neighbor to hold a CDP advertisement before discarding it. This field is controlled by the cdp holdtime command.

Related Commands

Command	Description
show cdp	Displays global Cisco Discovery Protocol information, including CDP version, timer, and holdtime information.
show cdp entry	Displays information about a specific neighboring device or all neighboring devices discovered using Cisco Discovery Protocol.
show cdp neighbors	Displays detailed information about neighboring devices discovered using Cisco Discovery Protocol.
show cdp traffic	Displays information about the traffic gathered between devices using Cisco Discovery Protocol.

show cdp neighbors

To display detailed information about neighboring devices discovered using Cisco Discovery Protocol (CDP), use the **show cdp neighbors** command in

EXEC

mode.

show cdp neighbors [*type interface-path-id*] **location** *node-id*] [**detail**]

Syntax Description

<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
location <i>node-id</i>	(Optional) Displays detailed CDP information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
detail	(Optional) Displays detailed information about a neighbor or neighbors, including network address, enabled protocols, holdtime, and software version. The output includes information about both IPv4 and IPv6 addresses.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show cdp neighbors** command to display information about any CDP neighbors. When a location is specified in the command syntax, information about the neighbor is displayed for the specified node. Not specifying the location displays information about the neighbor for all interfaces.

Use the command with the **detail** keyword to display additional information, including IPv6 neighbors.

Task ID

Task ID	Operations
cdp	read

Examples

The following example shows sample output from the **show cdp neighbors** command:

```
RP/0/RSP0/CPU0:router# show cdp neighbors
```

Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
S - Switch, H - Host, I - IGMP, r - Repeater

Device ID	Local Intrfce	Holdtme	Capability	Platform	Port ID
TBA04110127	Gi0/7/0/0	173	T S	WS-C6506	3/9
cisco_1	Gi0/7/0/2	171	R		
ASR9K	Gi0/4/0/2				

Table 9: show cdp neighbors Field Descriptions

Field	Description
Capability Codes	Type of device that can be discovered.
Device ID	Name of the neighbor device.
Local Intrfce	Protocol being used by the connectivity media and the interface number.
Holdtme	Remaining time, in seconds, for which the current device holds the CDP advertisement from a sending router before discarding it.
Capability	Type of the device listed in the CDP Neighbors table. Values are as follows: R—Router T—Transparent bridge B—Source-routing bridge S—Switch H—Host I—Internet Group Management Protocol (IGMP) device r—Repeater
Platform	Product number of the device.

Field	Description
Port ID	Protocol and port number of the device.

The following examples illustrates sample output for IPv4 and IPv6 neighbors from the **show cdp neighbors** command with the **detail** keyword:

```
RP/0/RSP0/CPU0:router# show cdp neighbor detail
```

```
-----
Device ID: uut-user
SysName : uut-user
Entry address(es):
IPv4 address: 1.1.1.1
IPv6 address: 1::1
IPv6 address: 2::2
Platform: cisco 12008/GRP, Capabilities: Router
Interface: Gi0/4/0/3
Port ID (outgoing port): Gi0/2/0/3
Holdtime : 177 sec

Version :
Cisco IOS XR Software, Version 0.0.0[Default]
Copyright (c) 2005 by cisco Systems, Inc.

advertisement version: 2
```

Table 10: show cdp neighbors detail Field Descriptions

Field	Definition
Device ID	Name of the neighbor device.
Entry address(es)	List of network addresses of neighbor devices. The address can be in IP or in Connectionless Network Service (CLNS) protocol conventions.
Platform	Product name and number of the neighbor device.
Capabilities	Device type of the neighbor. This device can be a router, a bridge, a transparent bridge, a source-routing bridge, a switch, a host, an IGMP device, or a repeater.
Interface	Interface being used by the connectivity medium.
Port ID	Port number of the port on the current device.
Holdtime	Remaining time (in seconds) for which the current device holds the CDP advertisement from a sending router before discarding it.
Version	Software version of the neighbor device.

Field	Definition
advertisement version	Version number of the advertising protocol.

Related Commands

Command	Description
show cdp	Displays global Cisco Discovery Protocol information, including CDP version, timer, and holdtime information.
show cdp entry	Displays information about a specific neighboring device or all neighboring devices discovered using Cisco Discovery Protocol.
show cdp interface	Displays information about the interfaces on which Cisco Discovery Protocol (CDP) is enabled.
show cdp traffic	Displays information about the traffic gathered between devices using Cisco Discovery Protocol.

show cdp traffic

To display information about the traffic gathered between devices using Cisco Discovery Protocol (CDP), use the **show cdp traffic** command in EXEC mode.

show cdp traffic [*location node-id*]

Syntax Description

location <i>node-id</i>	(Optional) Displays CDP information for the CDP packets sent and received on the designated node only. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

Displays CDP information aggregated across all nodes.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
cdp	read

Examples

The following example illustrates sample output from the **show cdp traffic** command:

```
RP/0/RSP0/CPU0:router# show cdp traffic
```

```
CDP counters :
  Packets output: 50662, Input: 40414
  Hdr syntax: 0, Chksum error: 0, Encaps failed: 0
  No memory: 0, Invalid packet: 0, Truncated: 0
  CDP version 1 advertisements output: 0, Input: 0
  CDP version 2 advertisements output: 50662, Input: 40414
```


Unrecognize Hdr version: 0, File open failed: 0

Table 11: show cdp traffic Field Descriptions

Field	Definition
Packets output	Number of CDP advertisements sent by the local device. Note that this value is the sum of the CDP version 1 advertisements output field and the CDP version 2 advertisements output field.
Input	Number of CDP advertisements received by the local device. Note that this value is the sum of the CDP version 1 advertisements input field and the CDP version 2 advertisements input field.
Hdr syntax	Number of CDP advertisements having bad headers that have been received by the local device.
Chksum error	Number of times the checksum (verifying) operation failed on incoming CDP advertisements.
Encaps failed	Number of times CDP failed to send advertisements on an interface because of a failure caused by the bridge port of the local device.
No memory	Number of times that the local device did not have enough memory to store the CDP advertisements in the advertisement cache table when the device was attempting to assemble advertisement packets for transmission and parse them when receiving them.
Invalid packet	Number of invalid CDP advertisements received and sent by the local device.
Truncated	Number of times truncated CDP advertisements were sent because there was not enough space in the CDP packet to hold all CDP type-length-values (TLVs).
CDP version 1 advertisements output	Number of CDP version 1 advertisements sent by the local device.
Input	Number of CDP version 1 advertisements received by the local device.
CDP version 2 advertisements output	Number of CDP version 2 advertisements sent by the local device.
Input	Number of CDP version 2 advertisements received by the local device.

Field	Definition
Unrecognize Hdr version	Number of packets received from a CDP version that was outside the current configuration.
File open failed	Number of times that CDP failed to connect to one of the underlying services it uses.

Related Commands

Command	Description
show cdp	Displays global Cisco Discovery Protocol information, including CDP version, timer, and holdtime information.
show cdp entry	Displays information about a specific neighboring device or all neighboring devices discovered using Cisco Discovery Protocol.
show cdp interface	Displays information about the interfaces on which Cisco Discovery Protocol (CDP) is enabled.
show cdp neighbors	Displays detailed information about neighboring devices discovered using Cisco Discovery Protocol.



Clock Commands on the Cisco ASR 9000 Series Router

This module describes the commands used to set and display the internal clock settings in Cisco IOS XR software.

For more information about manually setting the router clock, see *Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide*.

For more information about configuring the router to synchronize to Network Time Protocol (NTP), see the *Implementing NTP on Cisco IOS XR Software* module in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

- [clock read-calendar](#), page 132
- [clock set](#), page 134
- [clock summer-time](#), page 136
- [clock timezone](#), page 138
- [clock update-calendar](#), page 143
- [locale country](#), page 144
- [locale language](#), page 146
- [show clock](#), page 148

clock read-calendar

To manually copy the hardware clock (calendar) settings into the software clock, use the **clock read-calendar** command in EXEC mode.

clock read-calendar

Syntax Description This command has no keywords or arguments.

Command Default Read calendar is disabled.

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines The *calendar clock* is a hardware system clock that runs continuously, even if the router is powered off or rebooted. The hardware system clock is separate from the software clock settings, which are erased when the router is power cycled or rebooted.

Use the **clock read-calendar** command to manually copy the hardware clock setting into the software clock.

Task ID	Task ID	Operations
	host-services	execute

Examples In the following example, the hardware clock settings are copied to the software clock with the **clock read-calendar** command. The **show clock** command is then entered to display the new software clock settings.

```
RP/0/RSP0/CPU0:router# clock read-calendar
RP/0/RSP0/CPU0:router# show clock

14:31:57.089 PST Tue Feb 10 2008
```

Related Commands	Command	Description
	clock set	Changes the software clock settings.

Command	Description
clock update-calendar	Copies the software clock settings to the hardware clock (calendar).
show clock	Displays the system clock.
update-calendar	Updates the calendar periodically from NTP.

clock set

To change the software clock settings, use the **clock set** command in EXEC mode.

clock set *hh:mm:ss {day month| month day} year*

Syntax Description

<i>hh:mm:ss</i>	Current time in hours (24-hour format), minutes, and seconds. Colons are required between values.
<i>day</i>	Current day (by date) in the month.
<i>month</i>	Current month (by name).
<i>year</i>	Current year (no abbreviation). Enter a valid four-digit year.

Command Default

Clock is not set.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Generally, if the system is synchronized by a valid outside timing mechanism, such as a Network Time Protocol (NTP) clock source, or if you have a networking device with calendar capability, you need not set the software clock. Use the **clock set** command if no other time sources are available. The time specified in this command is relative to the configured time zone.

Task ID

Task ID	Operations
host-services	execute

Examples

Setting the Software Clock

This example shows how to set the software clock using the **clock set** command with the *day month* arguments first.

```
RP/0/RSP0/CPU0:router# clock set 14:12:00 10 feb 2005
14:12:00.114 JST Fri Feb 10 2009
```

This example shows how to set the software clock using the **clock set** command with the *month day* arguments first.

```
RP/0/RSP0/CPU0:router# clock set 14:38:00 feb 10 2005
14:38:00.069 PST Tue Feb 10 2009
```

Examples

This example shows how to display the settings of the software clock:

```
RP/0/RSP0/CPU0:router# show clock
14:38:11.292 PST Tue Feb 10 2009
```

Examples

This example shows how to display the available months using the online help (?) function:

```
RP/0/RSP0/CPU0:router# clock set 06:10:00 12 ?
    january      Month of the Year
    february
    march
    april
    may
    june
    july
    august
    september
    october
    november
    december
```

Related Commands

Command	Description
clock timezone	Sets the time zone for display.
show clock	Displays the system clock.
clock summer-time	Configures the system to switch automatically to daylight saving time.

clock summer-time

To configure the system to switch automatically to summer time (daylight saving time), use the **clock summer-time** command in global configuration mode. To remove the daylight saving time setting, use the **no** form of this command.

clock summer-time *zone* {**date** {*date month year hh:mm date month year hh:mm*| *month date year hh:mm month date year hh:mm*}| **recurring** *week day month hh:mm week day month hh:mm*} [*offset*]

no clock summer-time

Syntax Description

<i>zone</i>	Name of the time zone (for example, PDT) to be displayed when summer time is in effect. Table 12: Common Time Zone Acronyms, on page 138 lists common time zone acronyms used for the <i>zone</i> argument.
date	Indicates that summer time should start on the first specific date listed in the command and end on the second specific date in the command.
<i>date</i>	Date of the month.
<i>month</i>	Month.
<i>year</i>	Year (no abbreviation).
<i>hh:mm</i>	Time (24-hour format) in hours and minutes.
recurring	Indicates that summer time should start and end on the corresponding specified days every year.
<i>week</i>	Week of the month (values are 1 to 5, first or last).
<i>day</i>	Day of the week.
<i>offset</i>	(Optional) Number of minutes to add during summer time.

Command Default

Summer time is not configured.
offset: 60

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **clock summer-time** command if you want the system to switch automatically to summer time (for display only):

- Use the **recurring** keyword to apply the rules on the configured day each year. If **clock summer-time zone recurring** is specified without parameters, the summer time rules default to United States standards. The default for the *offset* argument is 60 minutes.
- Use the **date** keyword to specify a start and end date for summer time if you cannot use the first form.

In both forms of the command, the first part of the command specifies when summer time begins and the second part specifies when it ends. All times are relative to the local time zone. The start time is relative to standard time. The end time is relative to summer time. If the starting month is after the ending month, the system assumes that you are in the Southern Hemisphere.

Task ID

Task ID	Operations
host-services	read, write

Examples

The following example specifies that summer time starts on the first Sunday in April at 02:00 and ends on the last Sunday in October at 02:00. The **recurring** keyword indicates that the rules apply every year.

```
RP/0/RSP0/CPU0:router(config)# clock summer-time PDT recurring 1 Sunday April 2:00 last
Sunday October 2:00
```

If you live where summer time does not follow the pattern in the first example, you could set it to start on October 12, 2008 at 02:00 and end on April 26, 2009 at 02:00, with the following example. The **date** keyword indicates that the rules apply for the current year only.

```
RP/0/RSP0/CPU0:router(config)# clock summer-time PDT date 12 October 2008 2:00 26 April
2009 2:00
```

Related Commands

Command	Description
clock set	Changes the software clock settings.
clock timezone	Sets the time zone for display.

clock timezone

To set the time zone for display, use the **clock timezone** command in global configuration mode. To remove the time zone setting, use the **no** form of this command.

clock timezone *zone* *hours-offset* [*minutes-offset*]

no clock timezone

Syntax Description

<i>zone</i>	Name of the time zone to be displayed when standard time is in effect.
<i>hours-offset</i>	Hours offset from Coordinated Universal Time (UTC). Range is from -23 to +23.
<i>region</i>	Sets the offset according to the region specified.
<i>minutes-offset</i>	(Optional) Minutes offset from UTC.

Command Default

UTC

Command Modes

Global Configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Use the **clock timezone** command to display the time zone only when setting the time manually. The system keeps time internally in UTC.

This table lists common time zone acronyms used for the *zone* argument.

Table 12: Common Time Zone Acronyms

Acronym	Time Zone Name and UTC Offset
Europe	

Acronym	Time Zone Name and UTC Offset
GMT	Greenwich Mean Time, as UTC.
BST	British Summer Time, as UTC plus 1 hour.
IST	Irish Summer Time, as UTC plus 1 hour.
WET	Western Europe Time, as UTC.
WEST	Western Europe Summer Time, as UTC plus 1 hour.
CET	Central Europe Time, as UTC plus 1 hour.
CEST	Central Europe Summer Time, as UTC plus 2 hours.
EET	Eastern Europe Time, as UTC plus 2 hours.
EEST	Eastern Europe Summer Time, as UTC plus 3 hours.
MSK	Moscow Time, as UTC plus 3 hours.
MSD	Moscow Summer Time, as UTC plus 4 hours.
United States and Canada	
AST	Atlantic Standard Time, as UTC minus 4 hours.
ADT	Atlantic Daylight Time, as UTC minus 3 hours.
ET	Eastern Time, either as EST or EDT, depending on place and time of year.
EST	Eastern Standard Time, as UTC minus 5 hours.
EDT	Eastern Daylight Saving Time, as UTC minus 4 hours.
CT	Central Time, either as CST or CDT, depending on place and time of year.
CST	Central Standard Time, as UTC minus 6 hours.
CDT	Central Daylight Saving Time, as UTC minus 5 hours.
MT	Mountain Time, either as MST or MDT, depending on place and time of year.
MST	Mountain Standard Time, as UTC minus 7 hours.
MDT	Mountain Daylight Saving Time, as UTC minus 6 hours.

Acronym	Time Zone Name and UTC Offset
PT	Pacific Time, either as PST or PDT, depending on place and time of year.
PST	Pacific Standard Time, as UTC minus 8 hours.
PDT	Pacific Daylight Saving Time, as UTC minus 7 hours.
AKST	Alaska Standard Time, as UTC minus 9 hours.
AKDT	Alaska Standard Daylight Saving Time, as UTC minus 8 hours.
HST	Hawaiian Standard Time, as UTC minus 10 hours.
Australia	
WST	Western Standard Time, as UTC plus 8 hours.
CST	Central Standard Time, as UTC plus 9.5 hours.
EST	Eastern Standard/Summer Time, as UTC plus 10 hours (plus 11 hours during summer time).

This table lists an alternative method for referring to time zones, in which single letters are used to refer to the time zone difference from UTC. Using this method, the letter Z is used to indicate the zero meridian, equivalent to UTC, and the letter J (Juliet) is used to refer to the local time zone. Using this method, the International Date Line is between time zones M and Y.

Table 13: Single-Letter Time Zone Designators

Letter Designator	Word Designator	Difference from UTC
Y	Yankee	UTC minus 12 hours.
X	Xray	UTC minus 11 hours.
W	Whiskey	UTC minus 10 hours.
V	Victor	UTC minus 9 hours.
U	Uniform	UTC minus 8 hours.
T	Tango	UTC minus 7 hours.
S	Sierra	UTC minus 6 hours.
R	Romeo	UTC minus 5 hours.

Letter Designator	Word Designator	Difference from UTC
Q	Quebec	UTC minus 4 hours.
P	Papa	UTC minus 3 hours.
O	Oscar	UTC minus 2 hours.
N	November	UTC minus 1 hour.
Z	Zulu	Same as UTC.
A	Alpha	UTC plus 1 hour.
B	Bravo	UTC plus 2 hours.
C	Charlie	UTC plus 3 hours.
D	Delta	UTC plus 4 hours.
E	Echo	UTC plus 5 hours.
F	Foxtrot	UTC plus 6 hours.
G	Golf	UTC plus 7 hours.
H	Hotel	UTC plus 8 hours.
I	India	UTC plus 9 hours.
K	Kilo	UTC plus 10 hours.
L	Lima	UTC plus 11 hours.
M	Mike	UTC plus 12 hours.

Task ID

Task ID	Operations
host-services	read, write

Examples

The following example shows how to set the time zone to PST and offset 8 hours behind UTC:

```
RP/0/RSP0/CPU0:router(config)# clock timezone PST -8
```

The following example shows how to set the time zone to Newfoundland Standard Time (NST) for Newfoundland, Canada, which is 3.5 hours behind UTC:

```
RP/0/RSP0/CPU0:router(config)# clock timezone NST -3 30
```

Related Commands

Command	Description
clock set	Changes the software clock settings.
show clock	Displays the system clock.
clock summer-time	Configures the system to switch automatically to daylight saving time.

clock update-calendar

To copy the software clock settings to the hardware clock (calendar), use the **clock update-calendar** command in EXEC mode.

clock update-calendar

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The hardware clock (calendar) runs continuously, even if the router is powered off or rebooted. If the software clock and calendar are not synchronized and the software clock is more accurate, use this command to update the hardware calendar clock to the correct date and time.

Task ID	Task ID	Operations
	host-services	execute

Examples The following example shows how to copy the current time from the software clock to the hardware clock:

```
RP/0/RP0/CPU0:router# clock update-calendar
```

Related Commands	Command	Description
	clock read-calendar	Manually copies the hardware clock (calendar) settings into the software clock.

locale country

To set the default country of use, use the **locale country** command in global configuration

mode. To remove the country setting, use the **no** form of this command.

locale country *country*

no locale country

Syntax Description

<i>country</i>	Country, where <i>country</i> is a two-character country code. Case is not important.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

This command is not fully supported at this time.

To display a complete listing of the available country codes, use the online help (?) function:

```
RP/0/RSP0/CPU0:router(config)# locale country ?
```

```
AD      Andorra
AE      United Arab Emirates
AF      Afghanistan
AG      Antigua and Barbuda
AI      Anguilla
AL      Albania
AM      Armenia
AN      Netherlands Antilles
AO      Angola
AQ      Antarctica
AR      Argentina
AS      American Samoa
AT      Austria
AU      Australia
AW      Aruba
```



```
AZ    Azerbaijan
BA    Bosnia and Herzegovina
BB    Barbados
BD    Bangladesh
BE    Belgium
--More--
```

Task ID

Task ID	Operations
host-services	read, write

Examples

The following example shows how to set the country of use to Australia:

```
RP/0/RSP0/CPU0:router(config)# locale country au
```

Related Commands

Command	Description
locale language	Sets the default language of use.

locale language

To set the default language of use, use the **locale language** command in global configuration

mode. To remove the language setting, use the **no** form of this command.

locale language *language*

no locale language

Syntax Description

<i>language</i>	Two-character code that specifies the language. Case is not important.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

This command is not fully supported at this time.

To display a complete listing of the available language codes, use the online help (?) function:

```
RP/0/RSP0/CPU0:router(config)# locale language ?
aa      Afar
ab      Abkhazian
af      Afrikaans
am      Amharic
ar      Arabic
as      Assamese
ay      Aymara
--More--
```

Task ID

Task ID	Operations
host-services	read, write

Examples

The following example shows how to set the language of use to English:

```
RP/0/RSP0/CPU0:router(config)# locale language en
```

Related Commands

Command	Description
locale country	Sets the default country of use.

show clock

To display the system clock, use the **show clock** command in EXEC mode.

show clock [detail]

Syntax Description

detail	(Optional) Indicates the time zone, time source, and current summer time setting (if any).

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The system clock keeps an “authoritative” flag that indicates whether the time is authoritative (believed to be accurate). If the system clock has been set by a timing source, such as system calendar or Network Time Protocol (NTP), the flag is set. If the time is not authoritative, it is used only for display. Until the clock is authoritative and the “authoritative” flag is set, the flag prevents peers from synchronizing to the clock when the peers have invalid times.

The leading symbols that precede the **show clock** command display are shown in this table

Table 14: show clock Display Leading Symbol Descriptions

Symbol	Description
*	Time is not authoritative.
(blank)	Time is authoritative.
.	Time is authoritative, but NTP is not synchronized.

Task ID

Task ID	Operations
basic-services	read

Examples

The following sample output shows the current clock settings:

```
RP/0/RSP0/CPU0:router# show clock
16:18:28.927 PST Tue Feb 10 2009
```

The following sample output shows the current clock detail, including the time zone and time source:

```
RP/0/RSP0/CPU0:router# show clock detail
16:18:07.164 PST Tue Feb 10 2009
Timezone: PST8PST Timesource: User configured
```

Related Commands

Command	Description
clock set	Changes the software clock settings.

 show clock



Configuration Management Commands on the Cisco ASR 9000 Series Router

This module describes the Cisco IOS XR commands used to manage your basic configuration.

For detailed information about configuration management concepts, tasks, and examples, see *Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide*.

- [abort, page 154](#)
- [admin, page 156](#)
- [alias, page 158](#)
- [apply-group, page 161](#)
- [apply-template, page 163](#)
- [clear comment, page 165](#)
- [clear configuration commits, page 167](#)
- [clear configuration inconsistency, page 169](#)
- [clear configuration inconsistency replica, page 172](#)
- [clear configuration sessions, page 174](#)
- [commit, page 176](#)
- [configuration commit auto-save, page 180](#)
- [configure, page 182](#)
- [description \(interface\), page 185](#)
- [do, page 187](#)
- [end, page 189](#)
- [end-group, page 191](#)
- [end-template, page 193](#)
- [exclude-group, page 195](#)
- [exit, page 196](#)

- [group](#), page 198
- [hostname](#), page 203
- [load](#), page 204
- [load commit changes](#), page 206
- [load configuration failed](#), page 208
- [load configuration removed](#), page 210
- [load rollback changes](#), page 212
- [man](#), page 214
- [more](#), page 217
- [pwd \(config\)](#), page 222
- [rollback configuration](#), page 223
- [root](#), page 226
- [save configuration](#), page 228
- [save configuration changes](#), page 230
- [save configuration commit changes](#), page 232
- [save configuration failed](#), page 234
- [save configuration merge](#), page 236
- [save configuration removed](#), page 238
- [save rollback changes](#), page 240
- [set default-afi](#), page 242
- [set default-safi](#), page 244
- [set default-vrf](#), page 246
- [show](#), page 248
- [show aliases](#), page 251
- [show apply-group](#), page 253
- [show configuration \(config\)](#), page 254
- [show configuration changes](#), page 257
- [show configuration commit changes](#), page 259
- [show configuration commit list](#), page 262
- [show configuration failed](#), page 265
- [show configuration failed \(config\)](#), page 267
- [show configuration failed incompatible](#), page 269
- [show configuration failed remove](#), page 270

- [show configuration failed rollback, page 272](#)
- [show configuration failed startup, page 274](#)
- [show configuration history, page 276](#)
- [show configuration inconsistency replica, page 280](#)
- [show configuration persistent, page 282](#)
- [show configuration removed, page 284](#)
- [show configuration rollback changes, page 286](#)
- [show configuration running, page 289](#)
- [show configuration running-config, page 291](#)
- [show configuration sessions, page 294](#)
- [show default-afi-safi-vrf, page 296](#)
- [show history, page 298](#)
- [show running-config, page 300](#)
- [template, page 304](#)

abort

To terminate a configuration session and discard all uncommitted changes without system confirmations, use the **abort** command in any configuration mode.

abort

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Any configuration mode

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **abort** command to terminate a configuration session and return to EXEC mode from any configuration mode. This command discards all uncommitted configuration changes. You are prompted to commit the changes.

Task ID	Task ID	Operations
	Task ID for the feature or mode impacted by the command	Operation for the feature or mode impacted by the command

Examples The following example shows how to use the **abort** command to discard all changes made during a configuration session:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/2/0/0
RP/0/RSP0/CPU0:router(config-if)# ipv4 address 1.1.1.1 255.0.0.0
RP/0/RSP0/CPU0:router(config-if)# abort
RP/0/RSP0/CPU0:router#
```

Related Commands

Command	Description
end	Terminates a session and returns the router to EXEC mode from any configuration mode.
exit	Exits from the current configuration mode to the next higher command mode or logs out of the terminal session.

admin

To enter administration EXEC mode, use the **admin** command in EXEC mode.

admin

Syntax Description

This command has no keywords or arguments.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **admin** command to enter administration EXEC mode. Administration commands are used to execute various administration plane commands.



Note

Administration commands can be run only by entering administration mode and not by prefixing the **admin** command with the keyword in EXEC mode.

Task ID

Task ID	Operations
admin	read, write, execute

Examples

The following example shows how to enter administration EXEC mode:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)#
```

To use administration configuration mode, use the **configure** command in administration EXEC mode:

```
RP/0/RSP0/CPU0:router# admin
```

```
RP/0/RSP0/CPU0:router(admin)# configure  
RP/0/RSP0/CPU0:router(admin-config)#
```

Related Commands

Command	Description
configure	Enters global configuration mode.

alias

To create a command alias, use the **alias** command in global configuration mode. To delete an alias, use the **no** form of this command.

alias*alias-name* [(*param-list*)] *content*

no alias *alias-name*

Syntax Description

<i>alias-name</i>	Name of the command alias. Alias names can be a single word or multiple words joined by a hyphen (-) or an underscore (_).
<i>param-list</i>	(Optional) Parameters assigned to the alias. These parameters are filled in at execution time.
<i>content</i>	Original command syntax. Valid abbreviations of the original command syntax can be entered for the <i>content</i> argument.

Command Default

No command aliases are configured.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Cisco IOS XR software supports generic alias definitions for various entities. Any physical or logical entity can have an alias as a reference. For example, an alias can refer to a command, a partial command, a group of commands, a location, or an IP address.

An alias must first be defined. The alias can then be used in command lines in place of the defined entity.

Following is a list of properties for an alias:

- An alias can be used anywhere and in any mode.
- An alias can have zero, one, or many parameters.
- An alias can refer to those parameters with the \$ sign.
- If an alias refers to more than one command, the commands must be separated by a semicolon (;).

- The size of the **alias** command is limited to 1024 characters.

The alias command can be used anywhere. If the content referenced by the alias is invalid or inappropriate in that context or mode, the system issues a warning message containing the substituted content.

An alias name should not be a subset of the keywords that it represents as alias. Substitution is done only when the entered input match fails completely. For instance, the attempt to define an alias with “config?” as the alias name fails, as shown in the following example:

```
RP/0/RSP0/CPU0:router(config)# alias config set_host hostname router
RP/0/RSP0/CPU0:router(config)# show configuration

alias set_host hostname router
```

Use the **show aliases** command to display all command aliases or the command aliases in a specified mode.

Task ID

Task ID	Operations
logging	read, write

Examples

The following example shows how to create an alias named ipbr for the **show ipv4 interface brief** command, commit the configuration, enter EXEC mode, and then enter the configured alias:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# alias ipbr show ipv4 interface brief
RP/0/RSP0/CPU0:router(config)# show configuration

Building configuration...
alias ipbr show ipv4 interface brief
end
RP/0/RSP0/CPU0:router(config)# commit
RP/0/RSP0/CPU0:Feb 21 04:42:57.017 : config[65689]: %MGBL-LIBTARCFG-6-COMMIT :
Configuration committed by user 'lab'. Use 'show configuration commit changes 1000000022'
to view the changes.
RP/0/RSP0/CPU0:router(config)# end
RP/0/RSP0/CPU0:Mar 27 22:19:05 : config[65739]: %SYS-5-CONFIG_I : Configured from console
by lab
RP/0/RSP0/CPU0:router# ipbr
RP/0/RSP0/CPU0:router# show ipv4 interface brief

Interface                IP-Address      Status          Protocol
Loopback0                1.1.1.1         Up              Up
Loopback999              unassigned      Up              Up
MgmtEth0/0/CPU0/0        12.29.56.21     Up              Up
RP/0/RSP0/CPU0:router#
```

The following example shows how to define an alias, mycompany-10ge, for POS interface 1/0/2/3 and then how to use that alias to shut down the interface:

```
RP/0/RSP0/CPU0:router(config)# alias mycompany-10ge gigabitethernet1/0/2/3
RP/0/RSP0/CPU0:router(config)# interface mycompany-10ge
RP/0/RSP0/CPU0:router(config-if)# shutdown
RP/0/RSP0/CPU0:router(config-if)# exit
RP/0/RSP0/CPU0:router(config)#
```

The following example shows the use of a parameter name in an alias definition:

```
RP/0/RSP0/CPU0:router(config)# alias shint (intname) show interface $intname
```

The following example shows an alias defined with one parameter and two commands:

```
RP/0/RSP0/CPU0:router(config)# alias shint_both (intname) show interface $intname;show run
interface $intname
```

The following example shows the use of the alias shint_both inEXEC mode:

```
RP/0/RSP0/CPU0:router(exec)# shint_both(gigabitethernet1/2/3/4)
```

Two commands are issued, as follows:

```
RP/0/RSP0/CPU0:router(exec)# show interface gigabitethernet1/2/3/4; show run interface
gigabitethernet1/2/3/4
```

Related Commands

Command	Description
show aliases	Displays a summary of all command aliases.

apply-group

To cause the configuration commands contained in a group or multiple groups to be inherited by the router configuration within which it is applied, use the **apply-group** command in the appropriate configuration mode. To remove a group configuration, use the **no** form of this command.

apply-group *group-name* [*group-name*]

no apply-group

Syntax Description

<i>group-name</i>	Name of the configuration group to apply. The group must be previously defined. Up to eight group names can be specified at one time.

Command Default

None

Command Modes

Any configuration mode

Command History

Release	Modification
Release 4.3.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Configuration statements in configuration groups come into effect only when the configuration groups are applied in the system configuration, and the configuration statements have the correct context and inheritance priority in the mode in which the configuration groups are applied. The maximum number of configuration groups that can be specified in a single **apply-group** command is eight.

To change the composition of an **apply-group** command, you must specify all desired groups. For example, if you used the command `apply-group g10 g20 g30`, and now you want to add the group g15, use the command `apply-group g10 g15 g20 g30`. If you now want to delete group g20, use the command `apply-group g10 g15 g30`. If you use the **no apply-group** command, all groups are removed from the configuration.

Task ID

Task ID	Operation
config-services	read, write

Examples

This example applies a configuration group to a specific OSPF instance:

```
RP/0/RSP0/CPU0:router# configure  
RP/0/RSP0/CPU0:router(config)# router ospf 0  
RP/0/RSP0/CPU0:router(config-ospf)# apply-group G-OSPF-B
```

Related Commands

Command	Description
group	Defines a configuration group containing configuration statements that can be applied in the router configuration.

apply-template

To apply a template to the target configuration, use the **apply-template** command in global configuration mode.

apply-template *template-name* [(*param-list*)]

Syntax Description

<i>template-name</i>	Name of the template to be applied to the running configuration. Use the template command to define a template.
<i>param-list</i>	(Optional) Up to five template parameters.

Command Default

No templates are applied to the target configuration.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **apply-template** command to apply a template to the target configuration. Templates allow you to create a template name that represents a group of configuration commands.

Use the **template** command to define a template. Use the **end-template** command to exit template configuration mode and return to global configuration mode. Use the **show-running** command with the optional **template** *template-name* keyword and argument to display the contents of a template.

Task ID

Task ID	Operations
config-services	read, write

Examples

The following example shows how to define a template and then apply the template to the target configuration:

```
RP/0/RSP0/CPU0:router(config)# template hostname-template
RP/0/RSP0/CPU0:router(config-TPL)# hostname router1
RP/0/RSP0/CPU0:router(config-TPL)# end-template
```

apply-template

```
RP/0/RSP0/CPU0:router(config)# apply-template hostname-template
```

Related Commands

Command	Description
end-template	Exits template configuration mode.
show running-config	Displays the current running (active) configuration.
template	Defines a template.

clear comment

To discard a comment associated with a configuration, use the **clear comment** command in any configuration mode.

clear comment

Syntax Description

This command has no keywords or arguments.

Command Default

None

Command Modes

Any configuration mode

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **clear comment** command clears any comments that were added for a specific configuration in the configuration file. After you enter the **clear comment** command, enter the configuration for which you want to delete the comment on a separate line.

To enter configuration comments, enter **!** followed by the comment. The comment you enter is associated with the next configuration entered. For example:

```
RP/0/RSP0/CPU0:router#!router1 is located in xxx
RP/0/RSP0/CPU0:router# hostname router1
RP/0/RSP0/CPU0:router# commit
```

The comment is displayed in the output of the **show running-config** command:

```
RP/0/RSP0/CPU0:router# show running-config
...
!router1 is located in xxx
hostname router1
...
```

Task ID

Task ID	Operations
Task ID for the feature or configuration mode impacted by the command	Operation for the feature or configuration mode impacted by the command

Examples

The following example shows how to discard the comment associated with the configuration ipv4 address 1.1.1.1 255.0.0.0.

```
RP/0/RSP0/CPU0:router(config-if)# clear comment
RP/0/RSP0/CPU0:router(config-if)# ipv4 address 1.1.1.1 255.0.0.0
```

clear configuration commits

To delete old commit IDs from the commit database to free up disk space, use the **clear configuration commits** command in EXEC or administration EXEC mode.

clear configuration commits {**diskspace** *kilobytes*| **oldest** *number-of-commits*}

Syntax Description

diskspace <i>kilobytes</i>	Deletes as many commit IDs (beginning with the oldest available commit ID) from the commit database as required to free the number of kilobytes (KB) specified for the <i>kilobytes</i> argument. The range for the number of kilobytes of disk space to free is 1 to 4194304.
Note	The amount of disk space freed may vary depending on the size and number of commits present in the commit database.
oldest <i>number-of-commits</i>	Deletes the number of commit IDs specified for the <i>number-of-commits</i> argument.
Note	Use the online help (?) function to display the range of commit IDs available for deletion.

Command Default

None

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **clear configuration commits** command to delete the number of commit IDs available for rollback operations. The most recent 100 commits are retained by the system. As new commit IDs are added, the oldest commit IDs are discarded and are no longer available for rollback operations.



Note

The **clear configuration commits** command deletes commits from the commit database only. The running configuration, thus, is not changed.

**Note**

When a commit ID is deleted from the commit database, it is no longer available for rollback and can no longer be used to display commit changes (with the **show configuration rollback changes** command).

Use the **rollback configuration** command to roll back the current running configuration to a previous configuration. Use the **show configuration rollback changes** command to display a list of the commit IDs available for rollback operations or to display the changes that would be made by the **rollback configuration** command.

Task ID

Task ID	Operations
config-services	execute

Examples

The following example shows how to delete the oldest 16 commit IDs to free up disk space. After entering this command, you will be prompted to confirm the deletion.

```
RP/0/RSP0/CPU0:router# clear configuration commits oldest 16
Deleting 16 rollback points '1000000021' to '1000000036'
256 KB of disk space will be freed. Continue with deletion?[confirm] y
```

Related Commands

Command	Description
rollback configuration	Rolls back the configuration to a previous commit.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

clear configuration inconsistency

To clear an inconsistency alarm for a router configuration or admin plane configuration, use the **clear configuration inconsistency** command in EXEC or administration EXEC mode.

clear configuration inconsistency

Syntax Description This command has no keywords or arguments.

Command Default Administration EXEC mode: Clears the inconsistency alarms for the admin plane configuration.
EXEC mode: Clears the inconsistency alarms for an SDR configuration.

Command Modes EXEC
Administration EXEC

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

An inconsistency alarm is set when there is a failure to restore the configuration; this can occur during router startup, or when a line card or route switch processor (RSP) card is inserted or removed.

If an inconsistency alarm is set, a message similar to the following example is displayed:

```
RP/0/0/CPU0:May 26 11:58:40.662 : cfgmgr-rp[130]: %MGBL-CONFIGCLI-3
  BATCH_CONFIG_FAIL : 28 config(s) failed during startup. To view
  failed config(s) use the command - "show configuration failed startup"

RP/0/0/CPU0:May 26 11:58:41.731 : cfgmgr-rp[130]:
  %MGBL-CONFIG-3-ADMIN_INCONSISTENCY_ALARM : Admin plane configuration
  inconsistency alarm has been raised. Configuration commits will be
  blocked until an ADMIN plane 'clear configuration inconsistency' command
  has been run to synchronize persisted admin plane configuration with
  running admin configuration.
```

When the inconsistency alarm is set, all configuration commit operations fail until the alarm is cleared using the **clear configuration inconsistency** command. This command clears the alarm and removes the failed configuration.

For example, the following configuration commit fails to finish due to an existing inconsistency alarm:

```
RP/0/RSP0/CPU0:router# configure

ADMIN plane running configuration is inconsistent with persistent
configuration.
No configuration commits will be allowed until an admin plane
```

```
'clear configuration inconsistency' command is performed.
RP/0/RSP0/CPU0:router(config)# hostname router2
RP/0/RSP0/CPU0:router(config)#commit
```

ADMIN plane running configuration is inconsistent with persistent configuration.
No configuration commits will be allowed until an admin plane
'clear configuration inconsistency' command is performed.

Enter the **clear configuration inconsistency** command to clear the alarm and allow commit operations to continue.

**Note**

To reapply the failed configuration, you must reapply and recommit the configuration. Use the **load configuration failed** command with the **startup** keyword to populate the target configuration with the contents of the previous failed configuration from the startup configuration.

Use the **show configuration history** command with the **alarm** keyword to view the inconsistency alarm set and alarm clear events in the configuration history log.

Command Modes

To clear the inconsistency alarms for the admin plane configuration, enter the **clear configuration inconsistency** command in administration EXEC mode.

To clear the inconsistency alarms for the router, enter the **clear configuration inconsistency** command in EXEC mode.

Task ID

Task ID	Operations
config-services	execute

Examples

The following example shows how to clear the inconsistency alarms for the admin plane configuration by entering the **clear configuration inconsistency** command in administration EXEC mode:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# clear configuration inconsistency

Creating any missing directories in Configuration File system...OK
Initializing Configuration Version Manager...OK
Syncing ADMIN commit database with running configuration...OK
Re-initializing cache files...OK
Updating Commit Database. Please wait...[OK]
```

The following example shows how to clear the inconsistency alarms for a router configuration. The command is entered in EXEC mode.

```
RP/0/RSP0/CPU0:router# clear configuration inconsistency

Creating any missing directories in Configuration File system...OK
Initializing Configuration Version Manager...OK
Syncing commit database with running configuration...OK
Re-initializing cache files...OK
Updating Commit Database. Please wait...[OK]
```

In the following example, a history of the inconsistency alarms set and cleared for the router configuration are displayed using the **show configuration history** command with the **alarm** keyword:

```
RP/0/RSP0/CPU0:router# show configuration history alarm
```

Sno.	Event	Info	Time Stamp
~~	~~~~~	~~~~~	~~~~~
1	alarm	inconsistency alarm raised	Thu Jun 22 15:23:15 2009
2	alarm	inconsistency alarm cleared	Thu Jun 22 15:42:30 2009
3	alarm	inconsistency alarm raised	Sun Jul 9 13:39:57 2009
4	alarm	inconsistency alarm cleared	Sun Jul 9 14:15:48 2009
5	alarm	inconsistency alarm raised	Sat Jul 15 18:18:26 2009
6	alarm	inconsistency alarm cleared	Sat Jul 15 19:21:03 2009

Related Commands

Command	Description
load configuration failed	Populates the target configuration with the contents of the previous failed configuration from the startup configuration.
show configuration history	Displays history of configuration changes.
show configuration failed startup	Displays information about a configuration that failed at startup.

clear configuration inconsistency replica

To resolve configuration inconsistencies on a replica node, use the **clear configuration inconsistency replica** command in EXEC or administration EXEC mode.

clear configuration inconsistency replica location *node-id*

Syntax Description

location <i>node-id</i>	Resolves the configuration inconsistencies on the designated node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

Administration EXEC mode: Resolves any configuration inconsistencies for the admin plane configuration.
EXEC mode: Resolves any configuration inconsistencies for the router configuration.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

In administration EXEC mode, the replica node for the **clear configuration inconsistency replica** command is the standby designated system controller (DSC). In EXEC mode, the replica nodes are the route switch processors (RSPs) that can become the designated shelf controller (DSC).

Use the **clear configuration inconsistency replica** command if there is a configuration inconsistency between the standby DSC and the current active DSC; or alternatively, if the configuration on any nodes that could become the DSC is not the same as the configuration on the current DSC. To determine if you have a configuration inconsistency, use the **show configuration inconsistency replica** command.

To clear configuration inconsistencies for the admin plane configuration, enter the **clear configuration inconsistency replica** command in administration EXEC mode.

To clear configuration inconsistencies for an SDR configuration, enter the **clear configuration inconsistency replica** command in EXEC mode for that SDR.

Task ID

Task ID	Operations
config-services	execute

Examples

The following example shows how to clear any configuration inconsistencies for the DSC configuration by using the **clear configuration inconsistency replica** command in EXEC mode:

```
RP/0/RSP0/CPU0:router# clear configuration inconsistency replica location 0/rp1/cpu0  
The replica has been repaired.
```

Related Commands

Command	Description
show configuration inconsistency replica	Displays any configuration inconsistencies on a standby node.

clear configuration sessions

To clear (end) an active configuration session, use the **clear configuration sessions** command in EXEC or administration EXEC mode.

clear configuration sessions *session-id*

Syntax Description	<i>session-id</i>	Identifier for the configuration session to be terminated.

Command Default	None

Command Modes	EXEC Administration EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **clear configuration sessions** command to clear a configuration session. This command can be used to end the configuration sessions of another user. Any uncommitted changes to a user's target configuration are discarded.

Use the **show configuration sessions** command to identify active configuration sessions.

When a configuration session is cleared, a message is displayed on the terminal of the terminated user. For example:

```
RP/0/RSP0/CPU0:router(config)# This configuration session was terminated by user 'user_a'
from line 'aux0_0_CPU0'
```

Task ID	Task ID	Operations
	config-services	execute

Examples

The following example shows how to clear an active configuration session. In this example, the **show configuration sessions** command displays the active configuration session. The **clear configuration sessions** command clears the active configuration session.

```
RP/0/RSP0/CPU0:router# show configuration sessions

Current Configuration Session  Line          User          Date              Lock
00000211-002c409b-00000000    con0_RSPs1_CPU0  UNKNOWN      Mon Feb  2 01:02:09 2009

RP/0/RSP0/CPU0:router# clear configuration sessions 00000211-002c409b-00000000

session ID '00000211-002cb09b-00000000' terminated
```

Related Commands

Command	Description
show configuration sessions	Displays the active configuration sessions.

commit

To commit the target configuration to the active (running) configuration, use the **commit** command in any configuration mode.

commit [**best-effort**] [**comment** *line*] [**confirmed** [*seconds* | **minutes** *minutes*]] [**force**] [**label** *line*] [**replace**] [**save-running** **filename** *file_path*]

Syntax Description

best-effort	(Optional) Merges the target configuration with the running configuration and commits only valid changes (best effort). Some configuration changes might fail due to semantic errors.
comment <i>line</i>	(Optional) Assigns a comment to a commit. This text comment is displayed in the commit entry displayed in the output for the show configuration commit list command with the optional detail keyword.
confirmed [<i>seconds</i> minutes <i>minutes</i>]	(Optional) Commits the configuration on a trial basis for the time specified in seconds or minutes. Note The confirmed option is not available in administration configuration mode.
force	(Optional) Forces a commit operation in low-memory conditions.
label <i>line</i>	(Optional) Assigns a meaningful label. This label is displayed (instead of the autogenerated commit ID) in the output for the show configuration commit list .
replace	(Optional) Replaces the entire running configuration with the contents of the target configuration.
save-running filename <i>file_path</i>	(Optional) Saves the running configuration to a specified file.

Command Default

The default behavior is *pseudo-atomic*, meaning that all changes must succeed for the entire commit operation to succeed. If any errors are found, none of the configuration changes take effect.

Command Modes

Any configuration mode

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Changes made during a configuration session are inactive until the **commit** command is entered. By default, the commit operation is *pseudo-atomic*, meaning that all changes must succeed for the entire commit operation to succeed. If any errors are found, none of the configuration changes takes effect.

To replace the default numeric ID for the commit, use the optional **label** keyword. This label is displayed (instead of the autogenerated commit ID) in the output for the **show configuration commit list** command.

Enter an optional comment with the **comment** keyword to provide additional information about the commit action. This comment is displayed in the output for the **show configuration commit list** command with the **detail** keyword.

Use the optional **confirmed minutes** keyword and argument to commit a configuration on a trial basis for a minimum of 30 seconds and a maximum of 300 seconds (5 minutes). During the trial configuration period, enter the **commit** command to confirm the configuration. If the **commit** command is not entered, then the system reverts to the previous configuration when the trial time period expires. The confirmed option is not available in administration configuration mode.

You can use the **commit** command in conjunction with the **load** command. Load a new configuration with the **load** command, and use the **commit** command with the **replace** keyword to have the loaded configuration become the active (running) configuration.

Use the optional **save-running filename file_path** keywords and argument to save the running configuration to a specified file. To configure automatic saving of the configuration file on every commit, use the **configuration commit auto-save** command. If automatic saving of the configuration file is already enabled, specifying **save-running filename file_path** with the **commit** command has no additional effect.



Caution

Saving the running configuration to a file is CPU intensive.



Note

If you use the **commit** command without previously loading a target configuration, a blank configuration is committed.



Note

If you use the **commit** command with the **replace** keyword, it does not affect the mode of an 8-port E1/T1 SPA. If the mode is E1 before using the **commit replace** command, it remains E1. However, since the default mode is T1, the router does not recognize that the mode is E1. To change the mode to T1, you must first use the **hw-module subslot cardtype e1** command to add the E1 mode into the configuration so that it correlates with the system. Then manually reload the router and it boots in T1 mode.

For more information regarding the **hw-module subslot cardtype** command, refer to *Cisco ASR 9000 Series Aggregation Services Router Interface and Hardware Component Command Reference*.

Task ID

Task ID	Operations
Task ID for the feature or configuration mode impacted by the command	Operation for the feature or configuration mode impacted by the command

Examples

The following example shows how to commit the target configuration to the active running configuration. In this example, the **commit** command saves changes to the router hostname.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# hostname router1
RP/0/RSP0/CPU0:router(config)# commit

RP/0/RSP0/CPU0:Feb 21 04:42:57.017 : config[65689]: %MGBL-LIBTARCFG-6-COMMIT :
Configuration committed by user 'user_a'.
Use 'show configuration commit changes 1000000033' to view the changes.
```

Examples

The following example shows how to use the **commit** command with the optional **comment line** keyword and argument to assign a text description to the commit operation. The comment is then displayed in the output of the **show configuration commit list** command with the **detail** keyword.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# hostname router2
RP/0/RSP0/CPU0:router(config)# commit comment new name for router

RP/0/RP0/CPU0:Feb 21 04:42:57.017 : config[65689]: %MGBL-LIBTARCFG-6-COMMIT :
Configuration committed by user 'user_a'. Use 'show configuration commit
changes 1000000226' to view the changes.

RP/0/RSP0/CPU0:router2(config)# end
RP/0/RSP0/CPU0:router2# show configuration commit list detail

1) CommitId: 1000000226                Label: NONE
   UserId:   user_a                    Line:   con0 RP1_CPU0
   Client:   CLI                      Time:   12:59:26 UTC Wed Feb 04 2004
   Comment:  new name for router

2) CommitId: 1000000225                Label: NONE
   UserId:   user_a                    Line:   con0 RP1_CPU0
   Client:   CLI                      Time:   12:58:32 UTC Wed Feb 04 2004
   Comment:  NONE
```

Examples

The following example shows how to use the **commit** command with the optional **label line** keyword and argument to change the commit ID to a text label for easier identification. The label is then displayed in the output of the **show configuration commit list** command.

```
RP/0/RSP0/CPU0:router2# configure
RP/0/RSP0/CPU0:router2(config)# hostname router3
RP/0/RSP0/CPU0:router2(config)# commit label new_name

RP/0/RP0/CPU0:Feb 21 04:42:57.017 : config[65689]: %MGBL-LIBTARCFG-6-COMMIT :
Configuration committed by user 'user_a'.
Use 'show configuration commit changes 1000000227' to view the changes.

RP/0/RSP0/CPU0:router3(config)# end
```

```
RP/0/RSP0/CPU0:router3# show configuration commit list
```

SNo.	Label/ID	User	Line	Client	Time Stamp
1	new_name	user_a	con0_RSPs1_C	CLI	13:00:53 UTC Wed Feb 04 2004
2	1000000226	user_a	con0_RSPs1_C	CLI	12:59:26 UTC Wed Feb 04 2004
3	1000000225	user_a	con0_RSPs1_C	CLI	12:58:32 UTC Wed Feb 04 2004

Examples

The following example shows how to use the **commit** command with the optional **confirmed** keyword and number *argument*. The configuration changes are committed only for the specified number of seconds. You can then either confirm the commit operation or discard the changes.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# hostname router3
RP/0/RSP0/CPU0:router(config)# commit confirmed 30
RP/0/RSP0/CPU0:router3(config)# end
```

Related Commands

Command	Description
abort	Ends a configuration session without saving changes to the target configuration.
end	Terminates a session and returns the router to EXEC mode from any configuration mode.
exit	Exits from the current configuration mode to the next higher command mode or logs out of the terminal session.
configuration commit auto-save	Configures automatic saving of the running configuration to a specified file on every commit.
load	Populates the target configuration with the contents of a previously saved configuration file.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

configuration commit auto-save

To enable automatic saving of the running configuration to a specified file on every commit, use the **configuration commit auto-save** command in global configuration mode. To disable automatic saving of the running configuration to a specified file on every commit, use the **no** form of the command.



Caution

Saving the running configuration to a file is CPU intensive.

configuration commit auto-save filename *file_path*

no configuration commit auto-save

Syntax Description

filename <i>file_path</i>	Specifies the location to which to save the running configuration.

Command Default

None

Command Modes

Global configuration
Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **configuration commit auto-save** command configures the system to save the running configuration to the specified file and location every time a **commit** command is run. Alternatively, you can save the configuration on a one-time basis by specifying the **save-running** keyword when you run the **commit** command.

Task ID

Task ID	Operations
config-services	write

Examples

The following example shows how to configure the system to save the running configuration to the file `disk0:/usr` whenever the **commit** command is used:

```
RP/0/RSP0/CPU0:router(config)# configuration commit auto-save filename disk0:/usr
```

Related Commands

Command	Description
commit	Merges the target configuration to the running configuration.

configure

To enter global configuration mode or administration configuration mode, use the **configure** command in EXEC or administration mode.

configure [**exclusive**| **terminal**]

Syntax Description

exclusive	(Optional) Locks the router configuration. The system configuration can be made only from the login terminal.
terminal	(Optional) Configures the system from the login terminal. This is the default.

Command Default

If the **configure** command is entered without a keyword, the system is configured from the login terminal.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Configuration modes are used to enter changes to a target configuration session and commit those changes to the running configuration. A router running Cisco IOS XR software contains multiple configurations:

- The configuration for a router. This mode is used to configure router- specific features such as routing protocols.
- The administration configuration for system-wide resources and settings. Some features can be configured only in administration configuration mode.

Global Configuration mode

Use the **configure** command in EXEC mode to enter global configuration mode and create a new target configuration for an SDR. From global configuration mode, you can enter any configuration mode. Configuration changes entered in global configuration mode impact the SDR to which the user is currently logged in.

Administration Configuration mode

Use the **configure** command in administration EXEC mode to enter administration configuration mode and create a new target configuration. From administration configuration mode, you can enter any configuration mode. Configuration changes entered in administration configuration mode can impact resources for the entire router. See the command reference documentation for a specific command to determine the impact of commands entered in administration configuration mode.

Router Prompt

After you enter the **configure** command, the system appends “(config)” to the router prompt, indicating that the router is in a configuration mode. For example:

- The following prompt indicates that you are in global configuration mode for an SDR:
RP/0/RSP0/CPU0:router(config)#
- The following prompt indicates that you are in administration configuration mode:
RP/0/RSP0/CPU0:router(admin-config)#

Locking a Configuration Session

To lock the configuration so that no other user can commit changes to the running configuration during your configuration session, issue the **configure** command with the **exclusive** keyword.

Committing Changes and Returning to EXEC or Administration EXEC Mode

Changes to the target configuration remain inactive until the **commit** command is entered. To leave global configuration or administration configuration mode and return to the EXEC or administration prompt, issue the **end** or **exit** command; you are prompted to commit any uncommitted changes.

To leave configuration mode and return directly to EXEC or administration mode without being prompted to commit changes and without saving changes to the target configuration, enter the **abort** command in any configuration mode.

Examples

The following example shows how to enter global configuration mode from EXEC mode and then enter interface configuration mode to configure an IPv4 address for Gigabit Ethernet interface 0/1/0/0. In the example, the **configure** command commits the configuration, and the **end** command terminates the configuration session and return the router to EXEC or administration mode.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# ipv4 address 1.1.1.1 255.0.0.0
RP/0/RSP0/CPU0:router(config-if)# commit
RP/0/RSP0/CPU0:router(config-if)# end
RP/0/RSP0/CPU0:router#
```

Related Commands

Command	Description
abort	Ends a configuration session without saving changes to the target configuration.
end	Terminates a session and returns the router to EXEC mode from any configuration mode.

Command	Description
exit	Exits from the current configuration mode to the next higher command mode or logs out of the terminal session.
show configuration (config)	Displays the contents of the target configuration.
show running-config	Displays the current running (active) configuration.

description (interface)

To add a description to an interface configuration, use the **description** command in interface configuration mode. To remove the description, use the **no** form of this command.

description *comment*

no description

Syntax Description

<i>comment</i>	Comment or a description applied to the interface. The maximum number of characters is 1022.

Command Default

No description is configured.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **description** command to add a description to an interface configuration. The maximum number of characters is 1022.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to add a description to an interface configuration. In this example, the **description** command names a Management Ethernet interface.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface mgmteth 0/
RSP
1/CPU0/0
RP/0/RSP0/CPU0:router(config-if)# description Management Ethernet Interface
```

description (interface)

Related Commands

Command	Description
show interfaces	Displays statistics for all interfaces configured on the router or for a specific node.

do

To execute an EXEC mode command from a configuration mode, use the **do** command in any configuration mode.

do *exec-command*

Syntax Description

<i>exec-command</i>	EXEC mode command to be executed.

Command Default

None

Command Modes

Any configuration mode

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To display the various EXEC mode commands that are available to execute with the **do** command, use the online help (?) function at the configuration mode prompt.



Note

The **configure** and **describe** commands are not supported with the **do** command.

Task ID

Task ID	Operations
Task ID for the EXEC command that you are using	read

Examples

The following example shows how to execute an EXEC command from interface configuration mode. In this example, the **do** command displays output from the **show protocols** command within interface configuration mode:

```
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# do show protocols
```

 do

```
Routing Protocol "BGP 1"  
Address Family IPv4 Unicast:  
  Distance: external 20 internal 200 local 200
```

end

To terminate a configuration session and return directly to EXEC or administration EXEC mode, use the **end** command in any configuration mode.

end

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Any configuration mode

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **end** command to exit any configuration mode and return directly to EXEC or administration EXEC mode. If you enter this command without committing the changes to the target configuration, you are prompted to do so:

```
Uncommitted changes found, commit them before exiting(yes/no/cancel)?[cancel]:
```

- Entering **yes** saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC or administration EXEC mode.
If errors are found in the running configuration, the configuration session does not end. To view the errors, enter the **show configuration** (config) command with the **failed** keyword.
- Entering **no** exits the configuration session and returns the router to EXEC or administration EXEC mode without committing the configuration changes.
- Entering **cancel** leaves the router in the current configuration session without exiting or committing the configuration changes.

**Note**

Entering **Ctrl-Z** is functionally equivalent to entering the **end** command.

Use the **abort** command to exit the configuration session and return to EXEC or administration EXEC mode without being prompted to commit changes and without saving changes to the target configuration.

end**Task ID**

Task ID	Operations
config-services	read, write

Examples

The following example shows how to use the **end** command to end a configuration session. Changes stored in the target configuration are committed by answering **yes**.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/2/0/0
RP/0/RSP0/CPU0:router(config-if)# ipv4 address 1.1.1.1 255.0.0.0
RP/0/RSP0/CPU0:router(config-if)# end
```

```
Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]: yes
RP/0/RSP0/CPU0:router#
```

Related Commands

Command	Description
abort	Ends a configuration session without saving changes to the target configuration.
exit	Exits from the current configuration mode to the next higher command mode or logs out of the terminal session.
show configuration (config)	Displays the contents of the target configuration.
commit	Merges the target configuration to the running configuration.

end-group

To exit from configuration group submode and return to global configuration mode, use the **end-group** command in group configuration mode.

end-group

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Group configuration

Command History	Release	Modification
	Release 4.3.1	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

After you have included all configuration statements that you want in a particular configuration group, use the **end-group** command to exit group configuration mode.

Task ID	Task ID	Operation
	config-services	read, write

Examples This example shows how to complete the configuration of a configuration group and exit group configuration mode:

```
RP/0/RSP0/CPU0:router(config)# group g-int-gige
RP/0/RSP0/CPU0:router(config-GRP)# interface 'GigabitEthernet.*'
RP/0/RSP0/CPU0:router(config-GRP-if)# mtu 1514
RP/0/RSP0/CPU0:router(config-GRP-if)# end-group
RP/0/RSP0/CPU0:router(config)#
```

 end-group**Related Commands**

Command	Description
group	Defines a configuration group containing configuration statements that can be applied in the router configuration.

end-template

To exit template configuration mode and return to global configuration mode, use the **end-template** command in template configuration mode.

end-template

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values.

Command Modes Template configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **end-template** command to exit template configuration mode after you have completed the template definition.

To define a template, use the **template** command. To apply a template to the target configuration, use the **apply-template** command. To view the contents of a template, use the **show running-config** command with the optional **template** *template-name* keyword and argument.

Task ID	Task ID	Operations
	config-services	read, write

Examples The following example shows how to enter template configuration mode, define a template named "hostname-template" and then exit from template configuration mode:

```
RP/0/RSP0/CPU0:router(config)# template hostname-template
RP/0/RSP0/CPU0:router(config-TPL)# hostname router-cs1
RP/0/RSP0/CPU0:router(config-TPL)# end-template
RP/0/RSP0/CPU0:router(config)#
```

 end-template**Related Commands**

Command	Description
end	Terminates a session and returns the router to EXEC mode from any configuration mode.

exclude-group

To exclude (or override) a configuration group (or groups) to be inherited by the router configuration, use the **exclude-group** command in the appropriate configuration mode. To delete the set exclusion, use the **no** form of this command.

exclude-group *group-name*

noexclude-group *group-name*

Syntax Description

<i>group-name</i>	Configuration group name that needs to be excluded.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 5.1.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

More than one configuration group can be excluded simultaneously. A maximum of eight groups can be specified at one time.

Task ID

Task ID	Operation
config-services	read, write

Examples

This example shows how to delete the group G_interface using the **exclude-group** command:

```
RP/0/RSP0/CPU0:router (config) # exclude-group G_interface

exclude-group G_INTERFACE
ipv4 address 12.21.50.100 255.255.0.0
!
interface GigabitEthernet0/0/0/1
ipv4 address 12.21.51.100 255.255.0.0
```

exit

To close an active terminal session and log off the router, use the **exit** command in EXEC or administration EXEC mode.

To return the router to the next higher configuration mode, use the **exit** command in any configuration mode.

exit

Syntax Description

This command has no keywords or arguments.

Command Default

None

Command Modes

EXEC

Any configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To log off from a terminal session, enter the **exit** command in EXEC or administration EXEC mode.

When exiting from global or administration configuration mode to EXEC or administration EXEC mode, you are prompted to commit any uncommitted configuration changes.

```
Uncommitted changes found, commit them before exiting(yes/no/cancel)?[cancel]:
```

- Entering **yes** saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC or administration EXEC mode.
If errors are found in the running configuration, the configuration session does not end. To view the errors, enter the **show configuration** (config) command with the **failed** keyword.
- Entering **no** exits the configuration session and returns the router to EXEC or administration EXEC mode without committing the configuration changes.
- Entering **cancel** leaves the router in the current configuration session without exiting or committing the configuration changes.

**Note**

Entering the **exit** command from global configuration is functionally equivalent to entering the **end** command.

Task ID

Task ID	Operations
config-services	read, write

Examples

The following example shows how to return the router to the next higher command mode. In this example, the **exit** command exits from interface configuration mode and returns to global configuration mode. The **exit** command is entered a second time to exit from global configuration mode and return to EXEC mode. Because the configuration has not been committed explicitly (with the **commit** command), the system prompts to commit the configuration changes made during the session.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface tengige 0/2/0/0
RP/0/RSP0/CPU0:router(config-if)# ipv4 address 1.1.1.1 255.0.0.0
RP/0/RSP0/CPU0:router(config-if)# exit
RP/0/RSP0/CPU0:router(config)# exit
Uncommitted changes found, commit them before exiting(yes/no/cancel)?[cancel]: yes
```

The following example shows how to use the **exit** command from EXEC mode to log off from a terminal session:

```
RP/0/RSP0/CPU0:router# exit

router con0_RP1_CPU0 is now available

Press RETURN to get started.
```

Related Commands

Command	Description
abort	Ends a configuration session without saving changes to the target configuration.
end	Terminates a session and returns the router to EXEC mode from any configuration mode.
commit	Merges the target configuration to the running configuration.

group

To define a configuration group containing configuration statements that can be applied in the router configuration, use the **group** command in global configuration mode. To remove a configuration group from the running configuration, use the **no** form of this command.

group *group-name config-statements*

no group *group-name*

Syntax Description

<i>group-name</i>	Name of the configuration group.
<i>config-statements</i>	Series of configuration statements, starting in global configuration mode, that comprise this configuration group.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 4.3.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **group** command enters group configuration mode where you can list a series of configuration statements that can then be used elsewhere in the router configuration. Most configuration commands can be used in group configuration mode. You must be in a user group associated with a task group that includes the appropriate task IDs for each of the command statements that you list within a configuration group.

The *group-name* argument is limited to 32 characters and is case-sensitive. It must not contain any of these special characters:

- ` - grave
- ' - single quote
- " - double quote
- < - less than
- > - greater than
- (- open parenthesis

-) - close parenthesis
- [- open bracket
-] - close bracket
- { - open brace
- } - close brace
- / - slash
- \ - backslash
- & - ampersand
- ^ - caret
- ! - exclamation point
- ? - question mark
- ~ - tilde
- * - asterisk
- % - percent sign
- = - equal sign
- , - comma
- + - plus sign
- | - vertical bar
- - space

A configuration group can be removed from the running configuration, only if it is not used by a configured **apply-group** command.

To exit from configuration group submode and return to global configuration mode, use the **end-group** command.

Regular expressions are used within the configuration statements to make them widely applicable. POSIX 1003.2 regular expressions are supported in the names of configuration statements. Single quotes are used to delimit a regular expression. For example, to specify the regular expression `GigabitEthernet.*` that matches all GigabitEthernet interfaces, enter the regular expression within single quotes as `'GigabitEthernet.*'`.

To display a list of available interface types for your router configuration, enter **interface ?** at the configuration group prompt:

```
RP/0/RSP0/CPU0:router(config-GRP)# interface ?
```

ATM	'RegExp': ATM Network Interface(s)
BVI	'RegExp': Bridge-Group Virtual Interface
Bundle-Ether	'RegExp': Aggregated Ethernet interface(s)
Bundle-POS	'RegExp': Aggregated POS interface(s)
GigabitEthernet	'RegExp': GigabitEthernet/IEEE 802.3 interface(s)
IMA	'RegExp': ATM Network Interface(s)
Loopback	'RegExp': Loopback interface(s)
MgmtEth	'RegExp': Ethernet/IEEE 802.3 interface(s)
Multilink	'RegExp': Multilink network interface(s)
Null	'RegExp': Null interface
POS	'RegExp': Packet over SONET/SDH network interface(s)

```

PW-Ether      'RegExp': PWHE Ethernet Interface
PW-IW         'RegExp': PWHE VCll IP Interworking Interface
Serial        'RegExp': Serial network interface(s)
tunnel-ip     'RegExp': GRE/IPinIP Tunnel Interface(s)
tunnel-mte    'RegExp': MPLS Traffic Engineering P2MP Tunnel interface(s)
tunnel-te     'RegExp': MPLS Traffic Engineering Tunnel interface(s)
tunnel-tp     'RegExp': MPLS Transport Protocol Tunnel interface

```

**Note**

Although you are required to enter only enough characters for the interface type to be unique, it is recommended that you enter the entire phrase. All interface types used in regular expressions are case-sensitive.

For example, you can use the command `interface 'GigabitEthernet.*'`, but not `interface 'gigabite.*'`. To specify a subinterface, prefix the expression with the characters `\.` (backslash period), for example: `interface 'GigabitEthernet.*\.*'`. Refer to the *Configuring Flexible Command Line Interface Configuration Groups* module in the *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide* for more extensive examples.

Task ID

Task ID	Operation
config-services	read, write

Examples

This example shows the definition of a configuration group to configure Gigabit Ethernet interfaces with ISIS routing parameters:

```

RP/0/RSP0/CPU0:router(config)# group g-isis-gige
RP/0/RSP0/CPU0:router(config-GRP)# router isis '*'
RP/0/RSP0/CPU0:router(config-GRP-isis)# interface 'GigabitEthernet.*'
RP/0/RSP0/CPU0:router(config-GRP-isis-if)# lsp-interval 20
RP/0/RSP0/CPU0:router(config-GRP-isis-if)# hello-interval 40
RP/0/RSP0/CPU0:router(config-GRP-isis-if)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-GRP-isis-if-af)# metric 10
RP/0/RSP0/CPU0:router(config-GRP-isis-if-af)# end-group
RP/0/RSP0/CPU0:router(config)#

```

To illustrate the use of this configuration group, assume that you want to configure Gigabit Ethernet interfaces with ISIS routing parameters, as shown here:

```

router isis green
interface GigabitEthernet0/0/0/0
  lsp-interval 20
  hello-interval 40
  address-family ipv4 unicast
  metric 10
!
!
interface GigabitEthernet0/0/0/1
  lsp-interval 20
  hello-interval 40
  address-family ipv4 unicast
  metric 10
!
!
interface GigabitEthernet0/0/0/2
  lsp-interval 20
  hello-interval 40

```



```

    address-family ipv4 unicast
    metric 10
    !
!
interface GigabitEthernet0/0/0/3
    lsp-interval 20
    hello-interval 40
    address-family ipv4 unicast
    metric 10
    !
!
!

```

There are three possible ways to use the configuration group to configure these interfaces. The first is by applying the group within the interface configuration, as shown here:

```

router isis green
    interface GigabitEthernet0/0/0/0
        apply-group g-isis-gige
    !
    !
    interface GigabitEthernet0/0/0/1
        apply-group g-isis-gige
    !
    !
    interface GigabitEthernet0/0/0/2
        apply-group g-isis-gige
    !
    !
    interface GigabitEthernet0/0/0/3
        apply-group g-isis-gige
    !
!

```

The second way to configure these interfaces using the configuration group is to apply the configuration group within the **router isis** configuration, as shown here:

```

router isis green
    apply-group g-isis-gige
    interface GigabitEthernet0/0/0/0
    !
    interface GigabitEthernet0/0/0/1
    !
    interface GigabitEthernet0/0/0/2
    !
    interface GigabitEthernet0/0/0/3
    !
!

```

In this situation, any other Gigabit Ethernet interfaces that you configure in ISIS green configuration inherit the configuration group configurations.

The third way to configure these interfaces using the configuration group is to apply the group at the global level, as shown here:

```

apply-group g-isis-gige
router isis green
    interface GigabitEthernet0/0/0/0
    !
    interface GigabitEthernet0/0/0/1
    !
    interface GigabitEthernet0/0/0/2
    !
    interface GigabitEthernet0/0/0/3
    !
!

```

In this example, the configuration of the group is applied to all Gigabit Ethernet interfaces configured for ISIS.

Related Commands

Command	Description
end-group	Exits from configuration group submode.
apply-group	Causes the configuration commands contained in a group to be inherited by the router configuration within which it is applied.

hostname

To specify or modify the hostname for the router, use the **hostname** command in global configuration mode.

hostname *name*

Syntax Description

<i>name</i>	New hostname for the router.

Command Default

The factory-assigned default hostname is "ios."

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The hostname is used in prompts and default configuration filenames.

No blank or space characters are permitted as part of a name. Do not expect case to be preserved. Uppercase and lowercase characters look the same to many Internet software applications. It may seem appropriate to capitalize a name the same way you might do in English, but conventions dictate that computer names appear all lowercase. For more information, see RFC 1178, *Choosing a Name for Your Computer*.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to change the router hostname:

```
RP/0/RSP0/CPU0:router(config)# hostname router1
```

load

To populate the target configuration with the contents of a previously saved configuration file, use the **load** command in global configuration or administration configuration mode.

load *device:directory-path*

Syntax Description

<i>device: directory-path</i>	Storage device and directory path of the configuration file to be loaded into the target configuration.

Command Default

If the full path of the file is not specified, the present working directory is used.

Command Modes

Global configuration
Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **load** command to populate the target configuration with the contents of a previously saved configuration. When loading a file, you must specify the device, directory path, and filename of the configuration file.

Use the **commit** command in conjunction with the **load** command. Load a new configuration with the **load** command, and use the **commit** command with the **replace** keyword to have the loaded configuration become the active (running) configuration.

Use the **show configuration failed** (config) command with the optional **load** keyword to display syntax errors that occurred during the last load operation.

Task ID

Task ID	Operations
config-services	read, write

Examples

The following example shows how to load a target configuration file into the current configuration session. The current configuration session is then populated with the contents of the file.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# load disk1:myconfig.cfg
RP/0/RSP0/CPU0:router(config)# show config

Building configuration...
interface TenGigE 0/3/0/0
  description My 10 GE Interface
  ipv4 address 10.10.11.20 255.0.0.0
!
end
```

Related Commands

Command	Description
show configuration failed (config)	Displays information about a configuration that failed during the last commit.
commit	Merges the target configuration to the running configuration.

load commit changes

To populate the target configuration with changes from previous configuration commits, use the **load commit changes** command in global configuration or administration configuration mode.

load commit changes {*commit-id*| **since** *commit-id*| **last** *number-of-commits*}

Syntax Description

<i>commit-id</i>	Specific configuration commit.
since <i>commit-id</i>	Loads all configuration changes committed into the target buffer since (and including) a specific configuration commit, <i>commit-id</i> .
last <i>number-of-commits</i>	Loads the configuration changes into the target buffer that have been made during the last number of configuration commits specified with the <i>number-of-commits</i> argument.

Command Default

None

Command Modes

Global configuration
Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **load commit changes** command to populate the target configuration with changes from previous configuration commits. The changes are not applied until you enter the **commit** command.

Use the **show configuration** (config) command to display the target configuration.

Task ID

Task ID	Operations
config-services	read, write

Examples

The following example shows how to populate the target configuration with changes from a previous configuration commit:

```
RP/0/RSP0/CPU0:router(config)# load commit changes since 1000000006  
  
Building configuration...  
Loading.  
223 bytes parsed in 1 sec (222)bytes/sec
```

load configuration failed

To populate the target configuration with the contents of the previous failed configuration commit, use the **load configuration failed** command in global configuration or administration configuration mode.

load configuration failed {**commit**|**startup** [*previous number-of-reloads*] [**noerror**]}

Syntax Description

commit	Loads the failed configuration from the last commit.
startup	Loads the failed configuration from the startup configuration.
previous <i>number-of-reloads</i>	(Optional) Loads the failed configurations from a previous router reload. Valid <i>number-of-reloads</i> values are 1 to 4.
noerror	(Optional) Excludes the error reasons when the failed configurations are loaded.

Command Default

None

Command Modes

Global configuration
Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **load configuration failed** command to populate the target configuration with the contents of the previous failed configuration commit.

Task ID

Task ID	Operations
config-services	read, write

Examples

The following example shows how to populate the target configuration with the contents of the previous failed configuration commit:

```
RP/0/RSP0/CPU0:router(config)# load configuration failed startup
Loading.
32 bytes parsed in 1 sec (31)bytes/sec
```

Related Commands

Command	Description
show configuration (config)	Displays the contents of the target configuration.

load configuration removed

To populate the target configuration with the contents of the previous removed configuration, use the **load configuration removed** command in global configuration or administration configuration mode.

load configuration removed *config-id*

Syntax Description	<i>config-id</i>	Identifier of the removed configuration to load.

Command Default	None

Command Modes	Global configuration Administration configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. Use the load configuration removed command to populate the target configuration with the contents of the removed configuration during installation operations.

Task ID	Task ID	Operations
	config-services	read, write

Examples	The following example shows how to populate the target configuration with the contents of the removed configuration during installation:

```
RP/0/RSP0/CPU0:router(config)# load configuration removed 20070316021626.cfg
```

Related Commands

Command	Description
show configuration persistent	Displays the configuration removed during installation operations.

load rollback changes

To populate the target configuration with the contents of a previous configuration, use the **load rollback changes** command in global configuration or administration configuration mode.

load rollback changes {*commit-id*| **last** *number-of-commits*| **to** *commit-id*}

Syntax Description

<i>commit-id</i>	Rolls back the configuration changes for a specific configuration commit.
last <i>number-of-commits</i>	Rolls back to the configuration that existed before the last number of commits (specified with the <i>number-of-commits</i> argument) were made.
to <i>commit-id</i>	Rolls back to the running configuration that existed before the configuration specified with the <i>commit-id</i> argument.

Command Default

None

Command Modes

Global configuration
Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **load rollback changes** command to load rollback configuration changes to the target configuration. This command is similar to the **rollback configuration** command. The difference between the commands is that the **load rollback changes** command copies the rollback changes to the target configuration and does not commit the changes until the changes are explicitly committed with the **commit** command.

Use the **show configuration rollback changes** command to display rollback changes.

Task ID

Task ID	Operations
config-services	read, write

Examples

The following example shows how to populate the target configuration with the contents of a previous configuration:

```
RP/0/RSP0/CPU0:router(config)# load rollback changes 1000000004  
  
Building configuration...  
Loading.  
302 bytes parsed in 1 sec (301)bytes/sec
```

man

Cisco IOS XR software provides online help for standard command-line interface (CLI) commands using manual (man) pages. To display manual pages, use the **man** command in EXEC mode.

man {**command** *command-name*|**feature** [*feature-name*]|**keyword** *keywords*}

Syntax Description

command <i>command-name</i>	Displays the manual pages for a specific command. The <i>command-name</i> argument must include the complete command name.
feature [<i>feature-name</i>]	Displays all commands available in the feature. Use the man command with the feature keyword to list the available feature names.
keyword <i>keywords</i>	Displays a list of command names that match the keywords. Enter one or more keywords to match in a command. When entering multiple keywords, the keywords must be entered in the same sequential order as they are in the command.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You must have the documentation PIE installed before you can use the **man** command. If you attempt to run this command without the documentation PIE installed, an error is displayed as shown in the following example:

```
RP/0/RSP0/CPU0:router# man command show install

Building index table...
Warning. Unable to get directory info for '/pkg/man' :No such file or directory.
Discarding!
man [5521656]:Building index table failed. No entries found
```

For information about installing optional software PIEs, see the *Upgrading and Managing Cisco IOS XR Software* module in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

Use the **man** command to display the manual pages for a specific command on the basis of the command name, a feature, or a keyword. Each man page contains the command name, syntax, command mode, usage, examples, and related commands.

The **man** command queries and displays command information about the router. A query can be based on keywords or a feature. The **feature** *feature-name* keyword and argument display all commands that match the feature. For example, entering **man feature asr9k- base-1** displays all commands that match the asr9k-base-1 feature. The **keyword** *keywords* keyword and argument display all commands that contain the specified keyword. For example, **man keyword ipv4** displays all commands that contain ipv4.

Task ID

Task ID	Operations
basic-services	read

Examples

The following example shows how to display the manual page for the **arp timeout** command:

```
RP/0/RSP0/CPU0:router# man command arp timeout

COMMAND
arp timeout

DESCRIPTION

To specify how long dynamic entries learned on an interface remain in the
Address Resolution Protocol (ARP) cache, use the arp timeout command in
interface configuration mode. To remove the arp timeout command from the
configuration file and restore the system to its default condition with
respect to this command, use the no form of this command.

arp timeout seconds

no arp timeout<seconds>

SYNTAX DESCRIPTION

seconds
Time, in seconds, for which an entry remains in the ARP cache. The
range is from 0 to 4294967. A value of 0 means that entries are never
cleared from the cache. The default is 14400.

DEFAULTS

Entries remain in the ARP cache for 14400 seconds (4 hours).
```

COMMAND MODES

Interface configuration

COMMAND HISTORY

Release

Modification

Release 2.0

This command was introduced.

USAGE GUIDELINES

To use the arp timeout command, you must be a member of a user group associated with the cef task ID.

For detailed information about user groups and task IDs, refer to the Configuring AAA Services on Cisco IOS-XR Software module of the Cisco IOS-XR System Security Configuration Guide.

This command is ignored when issued on interfaces that do not use ARP. Also, ARP entries that correspond to the local interface or that are statically configured by the user never time out.

The show interfaces command displays the ARP timeout value in hours:minutes:seconds, as follows:

* * * * * START OF LISTING * * * * *

ARP type: ARPA, ARP Timeout 04:00:00

* * * * * END OF LISTING * * * * *

EXAMPLES

The following example shows how to set the ARP timeout to 3600 seconds to allow entries to time out more quickly than the default:

* * * * * START OF LISTING * * * * *

RP/0/RSP0/CPU0:router# configure

RP/0/RSP0/CPU0:router(config)# interface MgmtEth 0/RP1/CPU0/0

RP/0/RSP0/CPU0:router(config-if)# arp timeout 3600

* * * * * END OF LISTING * * * * *

RELATED COMMANDS

Command

Description

clear arp-cache

Deletes all dynamic entries from the ARP cache.

show arp (cache)

Displays the entries in the ARP table.

show interfaces

Displays statistics for all interfaces configured on the networking device.

more

To display the contents of a file, use the **more** command in EXEC or administration EXEC mode.

more [/ascii| /binary| /ebcdic] filesystem:directory-path **location** [node-id| all] { | **begin** regular-expression| **exclude** regular-expression| | **include** regular-expression }

Syntax Description

/ascii	(Optional) Displays a binary file in ASCII format.
/binary	(Optional) Displays a file in hexadecimal or text format.
/ebcdic	(Optional) Displays a binary file in ebcdic format.
filesystem:directory-path	File system location of the file to be displayed. Include the file system alias for the <i>filesystem</i> argument, followed by a colon, and the directory path of the file to be displayed.
location [node-id all]	(Optional) Displays the contents of a file on a designated node or all nodes.
regular-expression	(Optional) Regular expression found in the file.
	Vertical bar (the “pipe” symbol) indicates that an output processing specification follows.
begin	(Optional) Begins unfiltered output of the more command with the first line that contains the regular expression.
exclude	(Optional) Displays output lines that do not contain the regular expression.
include	(Optional) Displays output lines that contain the regular expression.

Command Default

None

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **more** command to display any text file, especially an ASCII file stored on the router or accessible through the network. The file can be a configuration file or any other text file.

Filtering Output

This table shows filter options for the output displayed by the **more** command.

Table 15: Filtering Options

Command	Purpose
more <i>filesystem:</i> begin <i>regular-expression</i>	Begins unfiltered output of the more command with the first line that contains the regular expression.
more <i>filesystem:</i> exclude <i>regular-expression</i>	Displays output lines that do not contain the regular expression.
more <i>filesystem:</i> include <i>regular-expression</i>	Displays output lines that contain the regular expression.

Adding a Filter at the --More-- Prompt

You can also specify a filter at the --More-- prompt of a **more** command output. To filter output from the --More-- prompt, enter a forward slash (/) followed by a regular expression. The filter remains active until the command output finishes or is interrupted (using **Ctrl-Z** or **Ctrl-C**).

- A second filter cannot be specified at a --More-- prompt if a filter has already been specified at the original command or at a previous --More-- prompt.
- The minus sign (–) preceding a regular expression displays output lines that do not contain the regular expression.
- The plus sign (+) preceding a regular expression displays output lines that contain the regular expression.



Note

After you specify a filter for a **more** command, you cannot specify another filter at the next --More-- prompt. The first specified filter remains until the **more begin** command output finishes or until you interrupt the output. The use of the keyword does not constitute a filter.

Task ID

Task ID	Operations
filesystem	execute

Examples

The following example shows partial sample output from the **more** command. The output displays a configuration file saved on the hard disk drive.

```
router# more harddisk:/user/alternate.cfg

!! Last configuration change at 15:52:55 UTC Fri Feb 13 2009 by UNKNOWN
!
line console
exec-timeout 0 0
!
interface MgmtEth0/RP1/CPU0/0
  ipv4 address 10.32.45.154 255.0.0.0
!
interface TenGigE0/1/0/0
  ipv4 address 10.32.45.155 255.0.0.0
  keepalive disable
!
interface TenGigE0/1/0/1
  ipv4 address 10.32.45.156 255.0.0.0
  keepalive disable
!
interface TenGigE0/1/0/2
  /ip
  ipv4 address 10.32.45.157 255.0.0.0
  keepalive disable
!
interface TenGigE0/1/0/3
  ipv4 address 10.32.45.158 255.0.0.0
  keepalive disable
!
interface TenGigE0/2/0/0
  ipv4 address 10.32.45.159 255.0.0.0
  keepalive disable
!
--More--
```

The following example shows partial sample output from the **more** command. The output begins with unfiltered output from the first line that contains the regular expression “ipv4.” In this example, a new search is specified that begins with output lines that contain the regular expression “ipv4.”

```
RP/0/RSP0/CPU0:router# more disk0:config.backup | begin ipv4

ipv4 address 2.2.2.2 255.255.255.255
!
interface TenGigE0/3/1/0
  shutdown
!
interface TenGigE0/3/1/2
  shutdown
!
interface TenGigE0/2/1/0
  ipv4 address 1.1.1.1 255.255.255.0
  keepalive disable
!
interface TenGigE0/2/1/1
  ipv4 address 1.1.1.1 255.255.255.0
  keepalive disable
!
interface TenGigE0/2/1/2
  ipv4 address 1.1.1.1 255.255.255.0
  keepalive disable
!
interface TenGigE0/2/1/3
  shutdown
!
  /ipv4
```

```

filtering...
ipv4 address 1.1.1.1 255.255.255.0
proxy-arp disable
shutdown
!
interface TenGigE 0/1/0/0
ipv4 address 1.1.1.1 255.255.255.0
proxy-arp disable
!
route ipv4 0.0.0.0/0 12.25.26.5
route ipv4 223.255.254.254/32 12.25.0.1
end

```

The following example shows partial sample output of the **more** command on the sample file config.backup in disk0:. The command usage is `more disk0:config.backup | include log`. At the --More-- prompt, a new search is specified that begins with output lines that contain the regular expression "aaa."

```

RP/0/RSP0/CPU0:router# more disk0:config.backup | include log

logging trap
logging trap informational
logging console debugging
logging history size 1
.
.
.

/aaa

filtering...
aaa authentication login default none

```

The following example shows partial sample output from the **more** command. The output excludes lines that contain the regular expression "alias." In this example, at the --More-- prompt, a new search is specified, beginning with output lines that contain the regular expression "ipv4 address."

```

RP/0/RSP0/CPU0:router# more disk0:myconfig/file | exclude alias

Building configuration...
!! Last configuration change at 18:17:00 UTC Thu May 16 2009 by lab
!
hostname router
line console
exec-timeout 0 0
width 132
length 0
session-timeout 0
/ipv4 address

filtering...
ipv4 address 10.10.1.1 255.255.255.255
!
interface Loopback200
ipv4 address 10.20.1.1 255.255.255.255
!
interface TenGigE0/0/0/0
ipv4 address 10.30.1.1 255.255.0.0
keepalive 100
!
interface preconfigure TenGigE0/1/0/1
shutdown
end

```

Related Commands

Command	Description
show	Displays system status and configuration.

pwd (config)

To display the current configuration submode from a configuration submode, use the **pwd** command in any supported configuration submode.

pwd

Syntax Description

This command has no keywords or arguments.

Command Default

None

Command Modes

Any subconfiguration mode

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Examples

The following example shows how to use the **pwd** command from an interface configuration submode:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface tengige 0/6/4/5
RP/0/RSP0/CPU0:router(config-if)# pwd

interface TenGigE0/6/4/5
RP/0/RSP0/CPU0:router(config-if)#
```

rollback configuration

To roll back the running configuration to a previous configuration, use the **rollback configuration** command in EXEC or administration EXEC mode.

rollback configuration {*last number-of-commits*| *to commit-id*} {*best-effort*| **force**} [*label label*] **comment** *comment*

Syntax Description

last <i>number-of-commits</i>	Rolls back to the configuration that existed before the last number of commits (specified with the <i>number-of-commits</i> argument) were made.
to <i>commit-id</i>	Rolls back to the running configuration that existed before the configuration specified with the <i>commit-id</i> argument.
best-effort	Rolls back to the configuration that existed before the last n commits, and commits only valid changes (best effort). Some configuration changes might fail due to semantic errors.
force	(Optional) Specifies to override any commit blocks.
label <i>label</i>	(Optional) Assigns a text label to this rollback. The <i>label</i> argument must begin with a letter.
comment <i>comment</i>	(Optional) Assigns a text comment to this rollback. The <i>comment</i> argument can be up to 60 characters long.

Command Default

None

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	The best-effort keyword was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Each time the **commit** command is entered, a commit ID is assigned to the new configuration. You can revert the system to the configuration of a previous commit ID with the **rollback configuration** command:

- Use the **to** keyword to revert to the configuration that existed *before* the configuration specified with the *commit-id* argument.
- Use the **last** keyword to revert to the configuration that existed *before* the last number of configuration commits (specified with the *number-of-commits* argument) were made.
- Use **show configuration commit list** to display a list of the commit IDs available for rollback operations.

**Note**

The most recent 100 commits are retained by the system. As new commit IDs are added, the oldest commit IDs are discarded and are no longer available for rollback operations.

Use the **force** keyword to override commits that would fail otherwise. This is useful in the event of a low-memory condition on the router, to revert to a commit that would remove a configuration that caused the low-memory condition.

**Note**

The rollback operation may fail if you try to rollback two (or more) commits where the individual commits involve the configuration and removing of the configuration of the same item, and there is a dependency of one item over another in any of the individual commit operations.

Task ID

Task ID	Operations
root-lr (EXEC)	read, write
root-system (administration EXEC)	read, write

Examples**Rolling Back to a Specific Commit ID**

The following example shows how to roll back to a specific commit ID. In this example, the **show configuration commit list** command displays the available rollback points. The configuration is then rolled back to a prior commit with the **rollback configuration** command.

```
RP/0/RSP0/CPU0:router# show configuration commit list
```

SNo.	Label/ID	User	Line	Client	Time Stamp
1	1000000009	lab	con0_RSPs0_C	Rollback	02:41:08 UTC Sun Sep 26 2009
2	1000000008	lab	con0_RSPs0_C	CLI	02:40:30 UTC Sun Sep 26 2009
3	1000000007	lab	con0_RSPs0_C	CLI	02:39:54 UTC Sun Sep 26 2009
4	1000000006	lab	con0_RSPs0_C	Rollback	02:38:40 UTC Sun Sep 26 2009
5	1000000005	lab	con0_RSPs0_C	CLI	02:37:35 UTC Sun Sep 26 2009
6	1000000004	lab	con0_RSPs0_C	CLI	02:37:04 UTC Sun Sep 26 2009

```
RP/0/RSP0/CPU0:router# rollback configuration to 1000000008
```

```
Loading Rollback Changes.
Loaded Rollback Changes in 1 sec
Committing.
1 items committed in 1 sec (0)items/sec
Updating.RP/0/RP0/CPU0:Sep 26 02:42:09.318 : config_rollback[65707]: %LIBTARCFG-
6-COMMIT : Configuration committed by user 'lab'. Use 'show commit changes 100
000010' to view the changes.
```

```
Updated Commit database in 1 sec
Configuration successfully rolled back to '1000000008'.
```

Examples

Rolling Back to a Span of Configuration Commits

The following example shows how to roll back to the configuration that existed prior to the last two configuration commits:

```
RP/0/RSP0/CPU0:router# rollback configuration last 2
```

```
Loading Rollback Changes.
Loaded Rollback Changes in 1 sec
Committing.
1 items committed in 1 sec (0)items/sec
Updating.
Updated Commit database in 1 sec
Configuration successfully rolled back 2 commits.
```

Related Commands

Command	Description
load rollback changes	Populates the target configuration with the contents of a previous configuration.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

root

To return to configuration mode from a configuration submode, use the **root** command in any supported configuration submode.

root

Syntax Description

This command has no keywords or arguments.

Command Default

None

Command Modes

Any subconfiguration mode except the following:

- The **root** command is not available under the route-policy submodes, because it requires the **end-policy** command to exit out of the configuration.
- The **root** command is not available in template submode, but is available in the submodes configurable under the template submode.

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
config-services	read

Examples

The following example shows how to use the **root** command to return to configuration mode from the interface configuration submode:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface tengige 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# root
RP/0/RSP0/CPU0:router(config)#
```

The following example shows how to use the **root** command from a submode configurable under the template submode. In this example, the **root** command is used to return to configuration mode from the username submode:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# template test
RP/0/RSP0/CPU0:router(config-TPL)# username xyz
RP/0/RSP0/CPU0:router(config-un)# root
RP/0/RSP0/CPU0:router(config)# show conf
```

```
Building configuration...
template test
username xyz
!
end-template
end
```

**Tip**

The **root** command is not available from the template submode, but is available in the submodes configurable under the template submode.

save configuration

To save the contents of a configuration to a file, use the **save configuration** command in global configuration or administration configuration mode.

save configuration [**running**] *device:directory-path*

Syntax Description		
running		(Optional) Saves the contents of the running configuration.
<i>device: directory-path</i>		Storage device and directory path of the configuration file to be loaded into the target configuration.

Command Default None

Command Modes Global configuration
Administration configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To save a configuration to a file, use the **save configuration** command.

To save a configuration that failed to a file, use the **save configuration failed** command.

Task ID	Task ID	Operations
	config-services	read

Examples The following example shows the configuration saved to disk0: from global configuration mode:

```
RP/0/RSP0/CPU0:router(config)# save configuration disk0:sample3
Destination file name (control-c to abort): [/sample3]?
Building configuration.
1 lines built in 1 second
```

[OK]

The following example shows the configuration saved to disk1 from administration EXEC mode:

```
RP/0/RSP0/CPU0:router(admin-config) # save configuration disk1:sample4
Destination file name (control-c to abort): [/sample4]?
Building configuration.
1 lines built in 1 second
[OK]
```

Related Commands

Command	Description
save configuration commit changes	Saves the changes for a commit, or a series of commits, to a file.
save configuration failed	Saves the contents of the failed configuration.
save configuration merge	Saves the changes for a merged configuration to a file.
save rollback changes	Saves rollback changes for a commit ID or a group of commits.
save configuration removed	Saves the contents of a removed configuration to a file.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

save configuration changes

To save the changes of a configuration to a file, use the **save configuration changes** command in global configuration or administration configuration mode.

save configuration changes *device:directory-path*

Syntax Description	<i>device: directory-path</i> Storage device and directory path of the configuration file to be loaded into the target configuration.					
Command Default	None					
Command Modes	Global configuration Administration configuration					
Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 3.7.2</td><td>This command was introduced.</td></tr></table>		Release	Modification	Release 3.7.2	This command was introduced.
Release	Modification					
Release 3.7.2	This command was introduced.					
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. To save the configuration changes to be made during a replace operation to a file, use the save configuration changes command.					
Task ID	<table><tr><th>Task ID</th><th>Operations</th></tr><tr><td>config-services</td><td>read</td></tr></table>		Task ID	Operations	config-services	read
Task ID	Operations					
config-services	read					

Examples

The following example shows the configuration saved to disk0: from global configuration mode:

```
RP/0/RSP0/CPU0:router(config)# save configuration changes disk0:sample3
Destination file name (control-c to abort): [/sample3]?
Building configuration.
1 lines built in 1 second
[OK]
```

Related Commands

Command	Description
save configuration commit changes	Saves the changes for a commit, or a series of commits, to a file.
save configuration failed	Saves the contents of the failed configuration.
save configuration merge	Saves the changes for a merged configuration to a file.
save rollback changes	Saves rollback changes for a commit ID or a group of commits.
save configuration removed	Saves the contents of a removed configuration to a file.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

save configuration commit changes

To save the changes for a commit, or a series of commits, to a file, use the **save configuration commit changes** command in global configuration or administration configuration mode.

save configuration commit changes {*commit-id*| **last** *number-of-commits*| **since** *commit-id*}
device:directory-path

Syntax Description

<i>commit-id</i>	Specific commit ID.
last <i>number-of-commits</i>	Saves changes made in the most recent <i>number-of-commits</i> .
since <i>commit-id</i>	Saves changes made since (and including) a specific <i>commit-id</i> .
<i>device: directory-path</i>	Storage device and directory path of the configuration file to be loaded into the target configuration.

Command Default

None

Command Modes

Global configuration
 Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	No modification.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **save configuration commit changes** command to save the changes made in a commit operation to a file. You can specify a specific commit ID, all the changes since a specified commit ID, or the changes that occurred during the last *n* commits.

Task ID

Task ID	Operations
config-services	read

Examples

The following example saves the changes from the last two commit operations to disk0:

```
RP/0/RSP0/CPU0:router(admin-config)# save configuration commit changes last 2 disk0:sample1

Destination file name (control-c to abort): [/sample1]?
Building configuration.
5 lines built in 1 second
[OK]
```

Related Commands

Command	Description
save configuration	Saves the contents of a configuration to a file.
save configuration changes	Saves the changes of a configuration to a file.
save configuration failed	Saves the contents of the failed configuration.
save configuration merge	Saves the changes for a merged configuration to a file.
save rollback changes	Saves rollback changes for a commit ID or a group of commits.
show configuration history	Displays history of configuration changes.
save configuration removed	Saves the contents of a removed configuration to a file.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

save configuration failed

To save the contents of the failed configuration, use the **save configuration failed** command in global configuration or administration configuration mode.

save configuration failed [**load**|**noerrors**] **startup** [**previous** *number*] [**noerror**] **device:directory-path**

Syntax Description

load	(Optional) Saves the failed configuration (syntax errors) in the last reload.
noerrors	(Optional) Excludes the error reasons from the saved configuration.
startup	(Optional) Saves the failed configuration during startup.
previous <i>number</i>	(Optional) Saves a failed startup configuration from the specified previous sessions. The <i>number</i> argument is a value between 1 and 4 that indicates how many failed startup configurations to save.
<i>device: directory-path</i>	Storage device and directory path of the configuration file to be saved.

Command Default

None

Command Modes

Global configuration
Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To save a configuration to a file, use the **save configuration** command.

To save a configuration that failed to a file, use the **save configuration failed** command.

To save a configuration that failed during startup to a file, use the **save configuration failed** command with the **startup** keyword.

Task ID

Task ID	Operations
config-services	read

Examples

The following example saves the failed configuration to disk0:

```
RP/0/RSP0/CPU0:router(admin-config)# save configuration failed disk1:/configs
```

Related Commands

Command	Description
save rollback changes	Saves rollback changes for a commit ID or a group of commits.
show configuration history	Displays history of configuration changes.
save configuration removed	Saves the contents of a removed configuration to a file.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

save configuration merge

To save the contents of a merged configuration to a file, use the **save configuration merge** command in global configuration or administration configuration mode.

save configuration merge *device:directory-path*

Syntax Description	<i>device : directory-path</i> Storage device and directory path of the configuration file to be loaded into the target configuration.					
Command Default	None					
Command Modes	Global configuration Administration configuration					
Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 3.7.2</td><td>This command was introduced.</td></tr></table>	Release	Modification	Release 3.7.2	This command was introduced.	
Release	Modification					
Release 3.7.2	This command was introduced.					
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.					
Task ID	<table><tr><th>Task ID</th><th>Operations</th></tr><tr><td>config-services</td><td>read</td></tr></table>	Task ID	Operations	config-services	read	
Task ID	Operations					
config-services	read					

Examples

The following example shows the configuration saved to disk0:

```
RP/0/RSP0/CPU0:router(admin-config)# save configuration merge disk0:sample3

Destination file name (control-c to abort): [/sample3]?
Building configuration.
1 lines built in 1 second
[OK]
```

Related Commands

Command	Description
save rollback changes	Saves rollback changes for a commit ID or a group of commits.
show configuration history	Displays history of configuration changes.
save configuration removed	Saves the contents of a removed configuration to a file.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

save configuration removed

To save the contents of a removed configuration to a file, use the **save configuration removed** command in global configuration or administration configuration mode.

save configuration removed *removed-configuration-file device:directory-path*

Syntax Description

<i>removed-configuration-file</i>	Specifies the name of the removed configuration file.
<i>device:directory-path</i>	Storage device and directory path of the configuration file to be loaded into the target configuration.

Command Default

None

Command Modes

Global configuration
Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When a package is deactivated, the configuration belonging to that package is removed from the running configuration and saved to a file. To save a copy of the removed configuration file, use the **save configuration removed** command.

Task ID

Task ID	Operations
config-services	read

Examples

To view a list of the available removed configuration files, use the **save configuration removed** command followed by a question mark:

```
RP/0/RSP0/CPU0:router(config)# save configuration removed ?
20051208042507.cfg  Removed configuration.
```

```
20051208044553.cfg  Removed configuration.
<cr>
```

In the following example, a removed configuration is saved to disk0: and assigned the filename "sample3:"

```
RP/0/RSP0/CPU0:router(config)# save configuration removed 20051208042507.cfg disk0:sample3
Destination file name (control-c to abort): [/sample3]?
Building configuration.
1 lines built in 1 second
[OK]
```

Related Commands

Command	Description
save configuration	Saves the contents of a configuration to a file.
save configuration commit changes	Saves the changes for a commit, or a series of commits, to a file.
save configuration failed	Saves the contents of the failed configuration.
save configuration merge	Saves the changes for a merged configuration to a file.
save rollback changes	Saves rollback changes for a commit ID or a group of commits.
show configuration history	Displays history of configuration changes.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

save rollback changes

To save the rollback changes, use the **save rollback changes** command in global configuration or administration configuration mode.

save rollback changes {*commit-id*| **last** *number-of-commits*| **to** *commit-id*} *device:directory-path*

Syntax Description

<i>commit-id</i>	Specific commit ID.
last <i>number-of-commits</i>	Saves the rollback changes for the last <i>n</i> commits
to <i>commit-id</i>	Saves rollback changes up to a specific <i>commit-id</i> .
<i>device: directory-path</i>	Storage device and directory path of the configuration file to be loaded into the target configuration.

Command Default

None

Command Modes

Global configuration
Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **save rollback changes** command to save the changes that would be made in a configuration rollback to a specific commit point or for a series of commits.

Task ID

Task ID	Operations
config-services	read

Examples

The following example shows that the rollback changes for the commit point 5 are saved to the file sample4 on disk0:

```
RP/0/RSP0/CPU0:router(admin-config)# save rollback changes last 1 disk0:sample4

Destination file name (control-c to abort): [/sample4]?
Building configuration.
6 lines built in 1 second
[OK]
```

Related Commands

Command	Description
save configuration	Saves the contents of a configuration to a file.
save configuration commit changes	Saves the changes for a commit, or a series of commits, to a file.
show configuration history	Displays history of configuration changes.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

set default-afi

To set the default address family identifier (AFI) for the current session, use the **set default-afi** command in EXEC mode.

set default-afi {all| ipv4| ipv6}

Syntax Description

all	Sets the default AFI to IPv4 and IPv6 for the current session.
ipv4	Sets the default AFI to IPv4 for the current session. This is the default setting.
ipv6	Sets the default AFI to IPv6 for the current session.

Command Default

The default AFI setting is set to IPv4 for all sessions.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **set default-afi** command to set the default AFI for the current session. This command acts as a keystroke shortcut for **show** commands. If the default AFI setting is set to IPv4, then you would not have to specify the **ipv4** keyword for **show** commands that support the **ipv4** keyword. For example, if the AFI setting is set to IPv4, you could issue the **show route** command without specifying the **ipv4** keyword to display IPv4 routes in the Routing Information Base (RIB).

Use the **show default-afi-safi-vrf** command to display the default AFI setting.

Task ID

Task ID	Operations
basic-services	read, write

Examples

The following example shows how to set the default AFI to IPv6:

```
RP/0/RSP0/CPU0:router# set default-afi ipv6
%% Default Address Family Identifier is set to 'ipv6'
```

Related Commands

Command	Description
set default-safi	Sets the default SAFI for the current session.
set default-vrf	Sets the default VRF instance for the current session.
show default-afi-safi-vrf	Displays the default AFI, SAFI, and VRF instance for the current session.

set default-safi

To set the default subaddress family identifier (SAFI) for the current session, use the **set default-safi** command in EXEC mode.

set default-safi {all| multicast| unicast}

Syntax Description

all	Sets the default SAFI to multicast and unicast for the current session.
multicast	Sets the default SAFI to multicast for the current session.
unicast	Sets the default SAFI to unicast for the current session. This is the default setting.

Command Default

The default SAFI setting is set to unicast for all sessions.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **set default-safi** command to set the default SAFI setting for the current session. This command acts as a keystroke shortcut for **show** commands. If the default SAFI setting is set to unicast, you would not have to specify the **unicast** keyword for **show** commands that support that keyword. For example, if the default SAFI setting is set to unicast, you could issue the **show router** command without specifying the **unicast** keyword to display information about unicast address prefixes in the Routing Information Base (RIB).

Use the **show default-afi-safi-vrf** command to display the default SAFI setting.

Task ID

Task ID	Operations
basic-services	read, write

Examples

The following example shows how to set the default SAFI to multicast:

```
RP/0/RSP0/CPU0:router# set default-safi multicast
%% Default Sub-Address Family Identifier is set to 'multicast'
```

Related Commands

Command	Description
set default-afi	Sets the default AFI for the current session.
set default-vrf	Sets the default VRF instance for the current session.
show default-afi-safi-vrf	Displays the default AFI, SAFI, and VRF instance for the current session.

set default-vrf

To set the default VPN routing and forwarding (VRF) instance for the current session, use the **set default-vrf** command in EXEC mode.

set default-vrf {*name*| **none**}

Syntax Description

<i>name</i>	Default VPN routing and forwarding name.
none	Sets the default VPN routing and forwarding name to empty.

Command Default

The default VRF setting is set to empty.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **set default-vrf** command to set the default VRF setting for the current session. This command acts as a keystroke shortcut for **show** commands. For example, if the default VRF is configured, you can issue the **show route** command without specifying the VRF name.

When the default VRF for the session is set to **none**, then IPv4 routes for the system default VRF are displayed.



Note

To override the default VRF setting, specify the VRF name in the **show** command.

Use the **show default-afi-safi-vrf** command to display the default VRF setting.

Task ID

Task ID	Operations
basic-services	read, write

Examples

In the following example, the default VRF is set to "dft_vrf."

```
RP/0/RSP0/CPU0:router# set default-vrf dft_vrf

%% Default Virtual Routing/Forwarding is set to 'dft_vrf'
```

In the following command, the **show route** command is entered without specifying a VRF name. The results for the "dft_vrf" VRF are displayed because the default VRF was set to "dft_vrf."

```
RP/0/RSP0/CPU0:router# show route ipv4

% No matching vrf found
```

When the default VRF for the session is set to **none**, the system default VRF routes are displayed. In the following example, the default VRF is set to (empty) and the **show route** command displays the system default VRF information:

```
RP/0/RSP0/CPU0:router# set default-vrf none

%% Default Virtual Routing/Forwarding is set to ''

RP/0/RSP0/CPU0:router# show route ipv4

Codes: C - connected, S - static, R - RIP, M - mobile, B - BGP
        D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
        N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
        E1 - OSPF external type 1, E2 - OSPF external type 2, E - EGP
        i - ISIS, L1 - IS-IS level-1, L2 - IS-IS level-2
        ia - IS-IS inter area, su - IS-IS summary null, * - candidate default
        U - per-user static route, o - ODR, L - local

Gateway of last resort is 12.29.0.1 to network 0.0.0.0

S*   0.0.0.0/0 [1/0] via 12.29.0.1, 00:31:30
L    10.10.10.10/32 is directly connected, 3d02h, Loopback1
C    12.29.0.0/16 is directly connected, 00:31:30, MgmtEth0/0/CPU0/0
L    12.29.56.21/32 is directly connected, 00:31:30, MgmtEth0/0/CPU0/0
```

Related Commands

Command	Description
set default-afi	Sets the default AFI for the current session.
set default-safi	Sets the default SAFI for the current session.
show default-afi-safi-vrf	Displays the default AFI, SAFI, and VRF instance for the current session.

show

To display information about the system configuration or operational state, use the **show** command in EXEC mode, administration EXEC mode, or any configuration mode.

show *command*[[**begin** *regular-expression* | **exclude** *regular-expression* | **file** *filesystem:* | **include** *regular-expression*]

Syntax Description

<i>command</i>	Supported show command.
	Vertical bar (the “pipe” symbol) indicates that an output processing specification follows.
<i>regular-expression</i>	(Optional) Regular expression found in show command output.
begin	(Optional) Begins unfiltered output of the show command with the first line that contains the regular expression.
exclude	(Optional) Displays output lines that do not contain the regular expression.
file <i>filesystem:</i>	(Optional) Writes the output lines that contain the regular expression to the specified file on the specified file system. Include the file system alias for the <i>filesystem</i> argument, followed by a colon, and the directory path and filename.
include	(Optional) Displays output lines that contain the regular expression.

Command Default

None

Command Modes

EXEC
Administration EXEC
Any configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show** commands display information about the system and its configuration. To display a list of the available **show** commands, use the question mark (?) online help function.

Filtering Output

Search options for the **show** command are shown in this table.

Table 16: Show Command Search Options

Command	Purpose
show command begin <i>regular-expression</i>	Begins unfiltered output of the show command with the first line that contains the regular expression.
show command exclude <i>regular-expression</i>	Displays output lines that do not contain the regular expression.
show command include <i>regular-expression</i>	Displays output lines that contain the regular expression.
show command file <i>filesystem:</i>	Writes the output lines that contain the regular expression to the specified file on the specified file system.

Adding a Filter at the --More-- Prompt

You can also specify a filter at the --More-- prompt of a **show** command output. To filter output from the --More-- prompt, enter a forward slash (/) followed by a regular expression. The filter remains active until the command output finishes or is interrupted (using **Ctrl-Z** or **Ctrl-C**).

- If a filter is specified at the original command or a previous --More-- prompt, a second filter cannot be applied.
- The use of the **begin** keyword does not constitute a filter.
- The minus sign (–) preceding a regular expression displays output lines that do not contain the regular expression.
- The plus sign (+) preceding a regular expression displays output lines that contain the regular expression.

Task ID

Task ID	Operations
Task ID for the feature used with the show command	read

For example, the **show interfaces** command requires read privileges in the interface task ID.

Examples

The following example shows output from the **show interface | include protocol** command. In this example, the **show** command includes only lines in which the regular expression “protocol” appears:

```
RP/0/RSP0/CPU0:router# show interface | include protocol
```

```
Null0 is up, line protocol is up
0 drops for unrecognized upper-level protocol
TenGigE0/2/0/0 is administratively down, line protocol is administratively down
0 drops for unrecognized upper-level protocol
TenGigE0/2/0/1 is administratively down, line protocol is administratively down
0 drops for unrecognized upper-level protocol
TenGigE0/2/0/2 is administratively down, line protocol is administratively down
0 drops for unrecognized upper-level protocol
TenGigE0/2/0/3 is administratively down, line protocol is administratively down
0 drops for unrecognized upper-level protocol
FastEthernet0/RP0/CPU0/0 is administratively down, line protocol is administratively
down
FastEthernet0/RP0/CPU0/0 is administratively down, line protocol is administratively
down
0 drops for unrecognized upper-level protocol
```

On most systems, the **Ctrl-Z** key combination can be entered at any time to interrupt the output and return to EXEC mode. For example, use the **show running-config | begin hostname** command to start the display of the running configuration file at the line containing the hostname setting, then use **Ctrl-Z** when you get to the end of the information you are interested in.

The following example shows sample output from the **show configuration running | begin line** command. The output begins with unfiltered output from the first line that contains the regular expression “line.” In this example, at the --More-- prompt, a new search is specified that begins with output lines that contain the regular expression “ipv4.”



Note

The use of the **begin** keyword does not constitute a filter.

```
RP/0/RSP0/CPU0:router# show configuration running | begin line
```

```
Building configuration...
line console
  exec-timeout 120 120
!
logging trap
--More--
/ipv4

filtering...
route ipv4 0.0.0.0 255.255.0.0 pos0/2/0/0
interface TenGigE0/2/0/0
  ipv4 address 172.19.73.215 255.255.0.0
end
```

Related Commands

Command	Description
more	Displays output from a text file.

show aliases

To display all defined aliases or the aliases defined in a specified mode, use the **show aliases** command in EXEC mode.

show aliases

Syntax Description This command has no keywords or arguments.

Command Default Displays all aliases currently configured on the system.

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show aliases** command to display all aliases currently configured on the system.

Task ID	Task ID	Operations
	basic-services	read

Examples The following example illustrates sample output from the **show aliases** command. The output displays a summary of all the command aliases configured.

```
RP/0/RSP0/CPU0:router# show aliases

exec mode aliases:
ipv4_brief          show ipv4 interface brief

interface mode aliases:
sample_int          tengige 0/2/0/0
```

 show aliases**Related Commands**

Command	Description
alias	Creates a command alias.

show apply-group

To display the configuration groups, use the **show apply-group** command in EXEC mode.

show apply group

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 5.1.1	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	config-services	read

Examples This example shows how to use the **show apply-group** command:

```
RP/0/RSP0/CPU0:router # show apply-group
                        Global      Non-Global
Groups Reference Count Reference Count
-----
B              1          0
C              1          0
```

Reference count can either be 0 or 1. 0 indicates that the group is not applied globally; 1 indicates that the group is globally applied.

show configuration (config)

To display information about the current configuration session (target configuration), use the **show configuration** command in any configuration mode.

show configuration [merge] [running]

Syntax Description

merge	(Optional) Displays the configuration that occurs if the contents of the uncommitted changed (target configuration) are committed to the running configuration.
running	(Optional) Displays the running (committed) configuration.

Command Default

When the **show configuration** command is entered without an argument, the uncommitted changes to the target configuration are displayed.

Command Modes

Any configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show configuration** command to display details on uncommitted configuration changes.

Use the **show configuration** command with the **running** keyword to display the running (active) configuration.

Prior to committing the target configuration, use the **show configuration** command with the **merge** keyword from any configuration mode to display the result of merging the target configuration with the running configuration.

Task ID

Task ID	Operations
basic-services	read

Examples

In this example, the **show configuration** command displays uncommitted changes made during a configuration session:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface tengig0/3/0/3
RP/0/RSP0/CPU0:router(config-if)# description faq
RP/0/RSP0/CPU0:router(config-if)# ipv4 address 10.10.11.20 255.0.0.0
RP/0/RSP0/CPU0:router(config-if)# show configuration
```

```
Building configuration...
interface TenGigE0/3/0/3
  description faq
  ipv4 address 10.10.11.20 255.0.0.0
end
```

The following example shows sample output from the **show configuration** command with the optional **merge** keyword. The command is entered during a configuration session. The output displays the result of merging the target and running configuration, without committing the changes.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# interface tengig0/3/0/3
RP/0/RSP0/CPU0:router(config-if)# description faq
RP/0/RSP0/CPU0:router(config-if)# ipv4 address 10.10.11.20 255.0.0.0
RP/0/RSP0/CPU0:router(config-if)# show configuration merge
```

```
Building configuration...
hostname router
interface TenGigE0/0/0/0
  ipv4 address 1.2.3.4 255.0.0.0
exit
interface TenGigE0/3/0/3
  description faq
  ipv4 address 1.1.1.1 255.0.0.0
  shutdown
end
```

Related Commands

Command	Description
show configuration failed (config)	Displays information about a configuration that failed during the last commit.
show configuration history	Displays history of configuration changes.
show configuration sessions	Displays the active configuration sessions.
show running-config	Displays the current running (active) configuration.
commit	Merges the target configuration to the running configuration.
load	Populates the target configuration with the contents of a previously saved configuration file.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.

Command	Description
show configuration failed startup	Displays information about a configuration that failed at startup.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.
show configuration running-config	Displays the contents of the committed configuration.

show configuration changes

To display the configuration changes to be made during a replace operation, use the **show configuration changes** command in global configuration or administration configuration mode.

show configuration changes [diff]

Syntax Description	diff (Optional) Displays the changes in UNIX-like format.							
Command Default	None							
Command Modes	Global configuration Administration configuration							
Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 3.7.2</td><td>This command was introduced.</td></tr></table>		Release	Modification	Release 3.7.2	This command was introduced.		
Release	Modification							
Release 3.7.2	This command was introduced.							
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.							
Task ID	<table><tr><th>Task ID</th><th>Operations</th></tr><tr><td>config-services</td><td>read</td></tr><tr><td>basic-services</td><td>read</td></tr></table>		Task ID	Operations	config-services	read	basic-services	read
Task ID	Operations							
config-services	read							
basic-services	read							

Examples

The following example shows the changes to be made during a replace operation:

```
RP/0/RSP0/CPU0:router(config)# show configuration changes diff

Building configuration...
# hostname router
# hostname bla
- logging console
- telnet vrf default ipv4 server disable
- domain ipv4 host xhu-u5
- domain ipv4 host coax-u10
- domain ipv4 host coax-u10.cisco.com
- domain name
```

```
- interface Loopback1
-   ipv4 address 10.0.0.2 255.255.255.224
-   !
- interface Loopback2
-   description
-   !
- interface Loopback5
-   description
-   !
- interface Loopback6
-   description
-   !
- interface MgmtEth0/0/CPU0/0
-   ipv4 address 10.0.0.1 255.255.255.224
-   !
- interface GigabitEthernet0/2/0/0
-   shutdown
-   !
- interface GigabitEthernet0/2/0/1
-   shutdown
-   !
- interface GigabitEthernet0/2/0/2
-   shutdown
-   !
- router static
-   address-family ipv4 unicast
-     0.0.0.0/0 255.255.255.224
-   !
-   !
end
```

show configuration commit changes

To display the changes made to the running configuration by previous configuration commits, a configuration commit, or for a range of configuration commits, use the **show configuration commit changes** command in EXEC, administration EXEC, administration configuration, or global configuration mode.

show configuration commit changes {*commit-id*| **since** *commit-id*| **last** *number-of-commits*} [**diff**]

Syntax Description

since	Displays all changes committed to the running configuration since (and including) a specific configuration commit.
<i>commit-id</i>	Displays configuration changes for a specific configuration commit.
last <i>number-of-commits</i>	Displays the changes made to the running configuration during the last number of configuration commits specified for the <i>number-of-commits</i> argument.
diff	(Optional) Displays added lines, changed lines, and deleted lines.

Command Default

None

Command Modes

EXEC
Administration EXEC
Administration configuration
Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Each time a configuration is committed with the **commit** command, the configuration commit operation is assigned a commit ID. The **show configuration commit changes** command displays the configuration changes made since the specified commit.

To display a list of the available commit IDs, enter the **show configuration commit list** command. You can also display the commit IDs by entering the **show configuration commit changes** command with the online help function (?).

Task ID

Task ID	Operations
config-services	read

Examples

The following example shows sample output from the **show configuration commit changes** command. The output displays commit IDs.

```
RP/0/RSP0/CPU0:router# show configuration commit list
```

SNo.	Label/ID	User	Line	Client	Time Stamp
1	1000000077	lab	con0_RSPs1_C	CLI	15:42:45 UTC Fri Jan 30 2009
2	1000000076	lab	con0_RSPs1_C	Rollback	15:30:39 UTC Fri Jan 30 2009
3	1000000075	lab	con0_RSPs1_C	Rollback	15:25:26 UTC Fri Jan 30 2009
4	1000000074	lab	con0_RSPs1_C	Rollback	15:04:29 UTC Fri Jan 30 2009
5	1000000073	lab	con0_RSPs1_C	CLI	14:49:07 UTC Fri Jan 30 2009
6	1000000072	lab	con0_RSPs1_C	CLI	14:48:35 UTC Fri Jan 30 2009

The following example shows sample output from the **show configuration commit changes** command with the *commit-id* argument. In this example, the output displays the changes made in the configuration commit assigned commit ID 1000000077.

```
RP/0/RSP0/CPU0:router# show configuration commit changes 1000000077
```

```
Building configuration...
alias exec shrun show configuration running
alias exec shver show version
end
```

The following example shows sample output from the **show configuration commit changes** command with the *since commit-id* keyword and argument. In this example, the output displays the configuration changes made since the configuration commit assigned commit ID 1000000077 was committed.

```
RP/0/RSP0/CPU0:router# show configuration commit changes since 1000000077
```

```
Building configuration...
no hw-module node 0/RP0/CPU0 shutdown
hostname router
logging trap
no logging console
logging history size 1
alias exec shrun show configuration running
alias exec shver show version
interface MgmtEth0/RP1/CPU0/0
  ipv4 address 12.25.34.10 255.255.0.0
  no shutdown
!
interface preconfigure MgmtEth0/RP0/CPU0/0
  no shutdown
!
no route ipv4 0.0.0.0/0 12.7.0.1
route ipv4 0.0.0.0/0 12.25.0.1
route ipv4 223.255.254.254/32 12.25.0.1
telnet ipv4 server enable
end
```

The following example shows sample output from the **show configuration commit changes** command with the *diff* keyword. In the display, the following symbols signify changes:

- + indicates an added line.
- indicates a deleted line.
- # indicates a modified line.

```
RP/0/RSP0/CPU0:router# show configuration commit changes last 1 diff
```

```
Building configuration...
+ interface Loopback1000
+ ipv4 address 190.190.180.1 255.255.255.255
!
end

+ interface Loopback1000
+ ipv4 address 190.190.180.1 255.255.255.255
!
end
```

Related Commands

Command	Description
rollback configuration	Rolls back the configuration to a previous commit.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

show configuration commit list

To display information about the configuration commits stored in the commit database, use the **show configuration commit list** command in EXEC, administration EXEC, administration configuration, or global configuration mode.

show configuration commit list [*number-of-commits*] [detail]

Syntax Description

<i>number-of-commits</i>	(Optional) Number of commits (beginning with the most recent commit) that are available for rollback.
detail	(Optional) Displays detailed commit information, including comments.

Command Default

If this command is entered without any optional arguments or keywords, the output displays information about all the configuration commits stored in the commit database.

Command Modes

EXEC
Administration EXEC
Administration configuration
Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show configuration commit list** command to list the commit IDs (up to 100) that are available for rollback.



Note

The most recent 100 commits are retained by the system. As new commit IDs are added, the oldest commit IDs are discarded and are no longer available for rollback operations.

Task ID

Task ID	Operations
config-services	read

Examples

The following example shows sample output from the **show configuration commit list** command. The output displays the commit IDs that are available for rollback.

```
RP/0/RSP0/CPU0:router# show configuration commit list
```

```

SNo. Label/ID      User      Line      Client      Time Stamp
~~~~ ~~~~~~
1    1000000010    UNKNOWN  con0_RSP0_C  Rollback    02:25:53 UTC Fri Feb 06 2009
2    1000000009    UNKNOWN  con0_RSP0_C  CLI         02:23:09 UTC Fri Feb 06 2009
3    1000000008    UNKNOWN  con0_RSP0_C  CLI         02:22:54 UTC Fri Feb 06 2009
4    1000000007    UNKNOWN  con0_RSP0_C  CLI         02:22:18 UTC Fri Feb 06 2009
5    1000000006    UNKNOWN  con0_RSP0_C  CLI         02:07:21 UTC Fri Feb 06 2009

```

[Table 17: show configuration commit list Field Descriptions, on page 263](#) describes the significant fields shown in the display.

Table 17: show configuration commit list Field Descriptions

Field	Description
SNo.	Serial number of the commit entry.
Label/ID	If a label was assigned to a commit, the first 10 characters of the label display; otherwise, the autogenerated commit ID displays.
User	User who executed the commit.
Line	Line in which the user session was established. In some cases, this field may display "UNKNOWN" or "SYSTEM". These fields indicate that an internal commit was made by the system.
Client	The management interface used to make the commit.
Time Stamp	Time and date when the commit was executed.

Related Commands

Command	Description
show configuration (config)	Displays the contents of the target configuration.
show configuration failed (config)	Displays information about a configuration that failed during the last commit.

Command	Description
show configuration history	Displays history of configuration changes.
show configuration running	Displays the contents of the committed configuration.
show configuration sessions	Displays the active configuration sessions.
show running-config	Displays the current running (active) configuration.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration failed startup	Displays information about a configuration that failed at startup.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.
show configuration running-config	Displays the contents of the committed configuration.

show configuration failed

To display information about a configuration that failed during the last commit , use the **show configuration failed** command in global configuration mode.

show configuration failed [**inheritance** | **load** | **noerrors**]

Syntax Description

inheritance	Displays the failed configuration details at the inheritance level.
load	Displays the failed configuration details in the last load.
noerrors	Displays the failed configuration details in the last commit.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 5.1.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
config-services	read

Examples

This example shows how to run the **show configuration failed** command:



Note

When there are two (or more) groups that have failed, the ordering of the failed groups is displayed in the same order as the apply-group statement.

```
RP/0/RSP0/CPU0:router (config) # show config failed
!! SEMANTIC ERRORS: This configuration was rejected by
!! the system due to semantic errors. The individual
!! errors with each failed configuration command can be
```

show configuration failed

```
!! found below.  
apply-group GROUP-1 GROUP-2 GROUP-3 GROUP-4 GROUP-5  
!% Please issue "show configuration failed inheritance" for details.  
Applying following groups failed: GROUP-2 GROUP-4 GROUP-5
```

show configuration failed (config)

To display information about a configuration that failed during the last commit, use the **show configuration failed** command in any configuration mode.

show configuration failed [**load**|**noerrors**]

Syntax Description

load	(Optional) Displays any syntax errors found in a configuration loaded with the load command.
noerrors	(Optional) Displays the configuration that failed in last commit without the error reasons.

Command Default

Displays the details of the failed configuration including error reasons.

Command Modes

Any configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
basic-services	read

Examples

The following example shows a failed commit operation:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# taskgroup bgp
RP/0/RSP0/CPU0:router(config-tg)# description this is an example of an invalid task group
RP/0/RSP0/CPU0:router(config-tg)# commit
% Failed to commit one or more configuration items.
Please use 'show configuration failed' to view the errors
```

show configuration failed (config)

The following example shows sample output from the **show configuration failed** command. The output displays the configuration items that failed during the last commit operation.

```
RP/0/RSP0/CPU0:router(config-tg)# show configuration failed

!! CONFIGURATION FAILED DUE TO SEMANTIC ERRORS
taskgroup bgp
!!% Usergroup/Taskgroup names cannot be taskid names
!
```

The following example shows sample output from the **show configuration failed** command with the optional **no errors** keyword. The output displays the configuration items that failed during the last commit operation without an error description.

```
RP/0/RSP0/CPU0:router(config-tg)# show configuration failed noerrors

!! CONFIGURATION FAILED DUE TO SEMANTIC ERRORS
taskgroup bgp
!
```

Related Commands

Command	Description
show configuration (config)	Displays the contents of the target configuration.
show configuration history	Displays history of configuration changes.
show configuration running	Displays the contents of the committed configuration.
show configuration sessions	Displays the active configuration sessions.
show running-config	Displays the current running (active) configuration.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration failed startup	Displays information about a configuration that failed at startup.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.
show configuration running-config	Displays the contents of the committed configuration.

show configuration failed incompatible

To display any configurations that were removed from the running configuration because they were not understood by the software being activated, use the **show configuration failed incompatible** command in EXEC or administration EXEC mode.

show configuration failed incompatible

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC
Administration EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Any configurations in the running configuration that are not understood by new software being installed are removed from the running configuration. To see which configurations were removed, use the **show configuration failed incompatible** command.

Task ID	Task ID	Operations
	config-services	read

Related Commands	Command	Description
	show running-config	Displays the current running (active) configuration.

show configuration failed remove

To display information about a configuration that failed while being removed during installation operations, use the **show configuration failed remove** command in EXEC or administration EXEC mode.

show configuration failed remove

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC
Administration EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	config-services	read

Examples The following example shows a failed commit operation:

```
RP/0/RSP0/CPU0:router# show configuration failed remove

!! SEMANTIC ERRORS: This configuration was rejected by
!! the system due to semantic errors. The individual
!! errors with each failed configuration command can be
!! found below.

multicast-routing
no address-family ipv4
!!% Process did not respond to sysmgr
address-family ipv4
no interface all enable
!!% Process did not respond to sysmgr
!
!
```

Because the configuration failed to be removed, it is still displayed in the output from the **show running-configuration** command as expected:

```
RP/0/RSP0/CPU0:router# show running-configuration
...
router pim vrf default address-family ipv4
  auto-rp candidate-rp GigabitEthernet0/2/0/3 scope 255 group-list 224/4 interval 10
!
multicast-routing
  address-family ipv4
    interface all enable
  !
!
```

Related Commands

Command	Description
show configuration (config)	Displays the contents of the target configuration.
show configuration failed (config)	Displays information about a configuration that failed during the last commit.
show configuration history	Displays history of configuration changes.
show configuration running	Displays the contents of the committed configuration.
show configuration sessions	Displays the active configuration sessions.
show running-config	Displays the current running (active) configuration.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.
show configuration running-config	Displays the contents of the committed configuration.

show configuration failed rollback

To display information about a configuration that failed in the last rollback operation, use the **show configuration failed rollback** command in EXEC or administration EXEC mode.

show configuration failed rollback

Syntax Description

This command has no keywords or arguments.

Command Default

None

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
config-services	read
root-lr	read

Related Commands

Command	Description
show configuration (config)	Displays the contents of the target configuration.
show configuration failed (config)	Displays information about a configuration that failed during the last commit.
show configuration running	Displays the contents of the committed configuration.
show configuration sessions	Displays the active configuration sessions.
show running-config	Displays the current running (active) configuration.

Command	Description
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration failed startup	Displays information about a configuration that failed at startup.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.
show configuration running-config	Displays the contents of the committed configuration.

show configuration failed startup

To display information about a configuration that failed at startup, use the **show configuration failed** command in EXEC or administration EXEC mode.

show configuration failed startup [**noerror**| **previous** *number*]

Syntax Description

noerror	(Optional) Displays the configuration that failed at startup without an error reason.
previous <i>number</i>	(Optional) Displays the previous failed startup configuration or configurations. The <i>number</i> argument is a value from 1 to 4, which displays the failed startup configurations in previous of sessions.

Command Default

If no keywords are specified, this command displays the details of the failed startup configuration including error reasons.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
config-services	read

Related Commands

Command	Description
show configuration (config)	Displays the contents of the target configuration.
show configuration failed (config)	Displays information about a configuration that failed during the last commit.

Command	Description
show configuration history	Displays history of configuration changes.
show configuration running	Displays the contents of the committed configuration.
show configuration sessions	Displays the active configuration sessions.
show running-config	Displays the current running (active) configuration.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.
show configuration running-config	Displays the contents of the committed configuration.

show configuration history

To display a history of configuration events, use the **show configuration history** command in EXEC, administration EXEC, administration configuration, or global configuration mode.

show configuration history [**alarm**|**backup**|**cfs-check**|**commit**|**rebase**|**shutdown**|**startup**] [**first** *number*|**last** *number*] [**reverse**] [**detail**]

Syntax Description

alarm	(Optional) Displays alarm events.
backup	(Optional) Displays configuration backup events.
cfs-check	(Optional) Displays CFS check events.
commit	(Optional) Displays commit events.
rebase	(Optional) Displays commit database consolidation events.
shutdown	(Optional) Displays shutdown events.
startup	(Optional) Displays startup events, including alternate configurations, failed configurations, and other events.
first <i>number</i>	(Optional) Displays the first x number of events, where x is the <i>number</i> argument.
last <i>number</i>	(Optional) Displays the last x <i>number</i> events. Replace with the number of events to display.
reverse	(Optional) Displays the most recent events first.
detail	(Optional) Displays detailed information, including comments.

Command Default

When entered without any optional arguments or keywords, this command displays all configuration events. The oldest events are displayed at the top of the list for each event type.

Command Modes

EXEC
Administration EXEC
Administration configuration
Global Configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show configuration history** command to display information about the last (up to) 1500 configuration events.

Use one of the available keywords to display the configuration event only for that event type. Use the **first number** and **last number** keywords and arguments to display a specified number of events. Use the **reverse** keyword to display the newest events at the top of the list.

Task ID

Task ID	Operations
config-services	read

Examples

In the following example, the **show configuration history** command is used to display the history of all configuration events for an SDR:

```
RP/0/RSP0/CPU0:router# show configuration history
```

```

Sno.   Event      Info                               Time Stamp
~~~~~ ~~~~~~ ~~~~~~ ~~~~~~
1      alarm      inconsistency alarm raised        Thu Jun 22 15:23:15 2009
2      startup    configuration applied             Thu Jun 22 15:23:32 2009
3      OIR config  restore                           Thu Jun 22 15:23:25 2009
4      OIR config  restore                           Thu Jun 22 15:23:33 2009
5      OIR config  restore                           Thu Jun 22 15:23:33 2009
6      OIR config  restore                           Thu Jun 22 15:23:34 2009
7      OIR config  restore                           Thu Jun 22 15:23:34 2009
8      OIR config  restore                           Thu Jun 22 15:23:35 2009
9      OIR config  restore                           Thu Jun 22 15:23:36 2009
10     OIR config  restore                           Thu Jun 22 15:23:37 2009
11     OIR config  restore                           Thu Jun 22 15:23:37 2009
12     OIR config  restore                           Thu Jun 22 15:23:38 2009
13     OIR config  restore                           Thu Jun 22 15:23:38 2009
14     OIR config  restore                           Thu Jun 22 15:23:39 2009
15     OIR config  restore                           Thu Jun 22 15:23:39 2009
16     OIR config  restore                           Thu Jun 22 15:23:40 2009
17     OIR config  restore                           Thu Jun 22 15:23:40 2009
18     OIR config  restore                           Thu Jun 22 15:23:42 2009
19     OIR config  restore                           Thu Jun 22 15:23:42 2009
20     OIR config  restore                           Thu Jun 22 15:23:42 2009
21     OIR config  restore                           Thu Jun 22 15:23:43 2009
--More--

```

In the following example, the **show configuration history** command is used to display only the startup configuration events:

```
RP/0/RSP0/CPU0:router# show configuration history startup
```

show configuration history

Sno.	Event	Info	Time Stamp
1	startup	configuration applied	Thu Jun 22 15:23:32 2009
2	startup	configuration applied	Sat Jul 1 15:02:24 2009
3	startup	configuration applied	Sat Jul 8 17:36:52 2009
4	startup	configuration applied	Sun Jul 9 13:40:27 2009
5	startup	configuration applied	Sat Jul 15 18:18:54 2009

In the following example, the **show configuration history** command with the **commit detail** keywords is used to display additional details regarding the commit events:

```
RP/0/RSP0/CPU0:router# show configuration history commit detail
```

```
1) Event: commit           Time: Thu Jun 22 15:44:33 2009
   Commit ID: 1000000001 Label:
   User: lab               Line: vty0
   Client: CLI             Comment:

2) Event: commit           Time: Thu Jun 22 16:58:18 2009
   Commit ID: 1000000002 Label:
   User: lab               Line: vty2
   Client: CLI             Comment:

3) Event: commit           Time: Thu Jun 22 16:58:39 2009
   Commit ID: 1000000003 Label:
   User: lab               Line: vty2
   Client: CLI             Comment:

4) Event: commit           Time: Sat Jul 1 15:29:31 2009
   Commit ID: 1000000001 Label:
   User: lab               Line: vty0
   Client: CLI             Comment:

5) Event: commit           Time: Sat Jul 1 15:32:25 2009
   Commit ID: 1000000002 Label:
   User: lab               Line: vty0
--More--
```

Table 18: show configuration history Field Descriptions

Field	Description
SNo.	Serial number of the entry.
Event	Type of configuration event.
Info	Summary of the configuration action.
Time Stamp	Time and date when the event was run.
Label/ID	If a label was assigned to a commit, the first 10 characters display; otherwise, the autogenerated commit ID displays.
User	User who issued the command.
Line	Line in which the user session was established. In some cases, this field may display "UNKNOWN" or "SYSTEM". These fields indicate that an internal action was made by the system.

Field	Description
Client	The management interface used to make the event.

Related Commands

Command	Description
show configuration (config)	Displays the contents of the target configuration.
show configuration failed (config)	Displays information about a configuration that failed during the last commit.
show configuration history	Displays history of configuration changes.
show configuration running	Displays the contents of the committed configuration.
show configuration sessions	Displays the active configuration sessions.
show running-config	Displays the current running (active) configuration.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.
show configuration running-config	Displays the contents of the committed configuration.

show configuration inconsistency replica

To display any configuration inconsistencies on a replica node, use the **show configuration inconsistency replica** command in EXEC or administration EXEC mode.

show configuration inconsistency replica location *node-id* [detail]

Syntax Description

location <i>node-id</i>	Displays any configuration inconsistencies on the designated node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.
detail	Displays a detailed list of inconsistencies.

Command Default

Administration EXEC mode: Displays configuration inconsistencies for the admin plane configuration.
EXEC mode: Displays configuration inconsistencies for an SDR configuration.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

In administration EXEC or EXEC mode, the replica node for the **show configuration inconsistency replica** command is the standby designated system controller (DSC).

Use the **show configuration inconsistency replica** command, before performing a manual switchover or DSC migration, to verify that the node in line to take over for the DSC is in good shape. If any problems are reported, use the **clear configuration inconsistency replica** command to correct them.

Task ID

Task ID	Operations
config-services	read

Examples

The following example shows a configuration with inconsistencies:

```
RP/0/RSP0/CPU0:router# show configuration inconsistency replica location 0/rsp1/cpu0
```

```
The replica at location 0/RSP1/CPU0 is inconsistent.  
Please run 'clear configuration inconsistency replica location 0/RP1/CPU0'.
```

The following example shows sample output after the inconsistencies have been resolved:

```
RP/0/RSP0/CPU0:Router# show configuration inconsistency replica location 0/rsp1/cpu0
```

```
Replica is consistent
```

Related Commands

Command	Description
clear configuration inconsistency replica	Resolves configuration inconsistencies on a standby node.

show configuration persistent

To display the persistent configuration, use the **show configuration persistent** command in EXEC mode.

show configuration persistent [diff]

Syntax Description

diff	(Optional) Displays the difference between the running configuration and persistent configuration. This option is available only on the DSC.

Command Default

If no argument is specified, the **show configuration persistent** command displays the entire contents of the persistent configuration file.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The persistent configuration is the configuration stored in nonvolatile memory, from which the running configuration is restored after the router is reloaded. The running configuration should be the same as the persistent configuration. Use the **show configuration persistent** command with the **diff** keyword to check if there is a difference between the running configuration and the persistent configuration.

Task ID

Task ID	Operations
config-services	read

Examples

The following example shows that there is no difference between the running configuration and the persistent configuration:

```
RP/0/RSP0/CPU0:router# show configuration persistent diff

Building configuration...
end
```

The following example shows a difference between the running configuration and the persistent configuration:

```
RP/0/RSP0/CPU0:router# show configuration persistent diff

Building configuration...
router vrrp
interface gigabitethernet0/1/0/1.1
vrrp 1 preempt delay 300
!
interface gigabitethernet0/1/0/1.2
vrrp 1 preempt delay 300
!
interface gigabitethernet0/1/0/1.3
vrrp 1 preempt delay 300
```

Related Commands

Command	Description
show running-config	Displays the current running (active) configuration.

show configuration removed

To display a configuration removed during installation operations, use the **show configuration removed** command in EXEC or administration EXEC mode.

show configuration removed *config-id*

Syntax Description

<i>config-id</i>	Name of removed configuration. Type (?) to see a list of the names of all removed configurations.

Command Default

None

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
config-services	read

Examples

The following example shows a removed configuration:

```
RP/0/RSP0/CPU0:router# show configuration removed 20060301112919.cfg

xml agent corba
http server
end
```

Related Commands

Command	Description
show configuration (config)	Displays the contents of the target configuration.
show configuration failed (config)	Displays information about a configuration that failed during the last commit.
show configuration history	Displays history of configuration changes.
show configuration running	Displays the contents of the committed configuration.
show configuration sessions	Displays the active configuration sessions.
show running-config	Displays the current running (active) configuration.
commit	Merges the target configuration to the running configuration.
load	Populates the target configuration with the contents of a previously saved configuration file.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration failed startup	Displays information about a configuration that failed at startup.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

show configuration rollback changes

To display changes that would be made by the **rollback configuration** command or to display the list of commit IDs, use the **show configuration rollback changes** command in EXEC, administration EXEC, administration configuration, or global configuration mode.

show configuration rollback changes {*commit-id*| **to** *commit-id*| **last** *number-of-commits*} [**diff**]

Syntax Description

<i>commit-id</i>	Name of configuration. When a specific <i>commit-id</i> is specified, only the changes that would occur if only the specified commit is rolled back are displayed.
to <i>commit-id</i>	Displays the changes that will occur to the running configuration if the system is rolled back to the configuration specified with the <i>commit-id</i> argument.
last <i>number-of-commits</i>	Displays the changes that will occur to the running configuration if the system is rolled back to the last number of commits specified with the <i>number-of-commits</i> argument.
diff	(Optional) Displays added lines, changed lines, and deleted lines.

Command Default

None

Command Modes

EXEC
Administration EXEC
Administration configuration
Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

The most recent 100 commits are retained by the system. As new commit IDs are added, the oldest commit IDs are discarded and are no longer available for rollback operations.

Use the *commit-id* argument without the **to** keyword to display the changes for a particular commit. This can be useful for troubleshooting actions of the **rollback configuration** command.

Task ID

Task ID	Operations
config-services	read

Examples

The following example shows sample output from the **show configuration rollback changes** command with the **to commit-id** keyword and argument. The output displays the configuration changes that would occur if the configuration were to be rolled back to the configuration commit specified for the argument.

```
RP/0/RSP0/CPU0:router# show configuration rollback changes to 1000000007
```

```
Building configuration...
hostname old-name
end
```

The following example shows sample output from the **show configuration rollback changes** command **last number-of-commits** keyword and argument. The output displays the configuration changes that would occur if the configuration were to be rolled back to the number of configuration commits specified for the argument.

```
RP/0/RSP0/CPU0:router# show configuration rollback changes last 2
```

```
Building configuration...
hostname orig_name
interface POS0/1/0/1
 shutdown
!
end
```

The following example shows sample output from the **show configuration rollback changes** command with the **diff** keyword.

In the display, the following symbols signify changes:

- + indicates an added line.
- – indicates a deleted line.
- # indicates a modified line.

```
RP/0/RSP0/CPU0:router
show configuration rollback changes last 1 diff
```

```
Building configuration...
 interface Loopback1000
#  ipv4 address 1.1.1.1 255.255.255.255
!
end
```

Related Commands

Command	Description
load rollback changes	Populates the target configuration with the contents of a previous configuration.

 show configuration rollback changes

Command	Description
rollback configuration	Rolls back the configuration to a previous commit.

show configuration running

To display the running configuration, use the **show configuration running** command in the appropriate mode.

show configuration running [*config-keyword*]

Syntax Description	<i>config-keyword</i> (Optional) Specific configuration to display.

Command Default	None

Command Modes	Administration EXEC Administration configuration Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show configuration running** command to display the currently active configuration.

Task ID	Task ID	Operations
	basic-services	read

Examples	This example shows the currently running (committed) configuration from administration mode.

```
RP/0/RSP0/CPU0:router(admin)# show configuration running

Building configuration...
username lab
  secret 5 $1$XNWt$j8RscNdncKSRoMSnqSpbj/
  group root-system
!
```

Related Commands

Command	Description
show configuration (config)	Displays the contents of the target configuration.
show configuration failed (config)	Displays information about a configuration that failed during the last commit.
show configuration history	Displays history of configuration changes.
show configuration sessions	Displays the active configuration sessions.
show running-config	Displays the current running (active) configuration.
commit	Merges the target configuration to the running configuration.
load	Populates the target configuration with the contents of a previously saved configuration file.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration failed startup	Displays information about a configuration that failed at startup.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.
show configuration running-config	Displays the contents of the committed configuration.

show configuration running-config

To display the running configuration, use the **show configuration running-config** command in EXEC mode.

show configuration running-config [**inheritance** [**no-annotation**]] [*config-keyword*]

Syntax Description

inheritance	(Optional) Displays the configuration inherited from any applied configuration group.
no-annotation	(Optional) Suppresses the display of inheritance messages, when the inheritance keyword is used.
<i>config-keyword</i>	(Optional) Specific configuration to display.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.3.1	The inheritance and no-annotation keywords were added to support the display of configuration group configurations.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the *config-keyword* argument to display the running configuration for a specific keyword only.

Display the Configuration from Configuration Groups

By default, if configuration groups are applied in the configuration, they are displayed as they are configured. For example:

```
RP/0/RSP0/CPU0:router# show configuration running-config
!
group G-INTERFACE-MTU
  interface 'GigabitEthernet.*'
    mtu 1500
end-group
!
interface GigabitEthernet1/0/0/7
  apply-group G-INTERFACE-MTU
```

show configuration running-config

!

To display the actual configuration as inherited from any applied configuration groups, use the **inheritance** keyword:

```
RP/0/RSP0/CPU0:router# show configuration running-config inheritance
!
interface GigabitEthernet1/0/0/7
  ## Inherited from group G-INTERFACE-MTU
  mtu 1500
!
```

Use the **no-annotation** keyword to suppress the display of the Inheritance messages, "## Inherited from group ...".

Task ID

Task ID	Operations
basic-services	read

Examples

This example shows the currently running (committed) configuration:

```
RP/0/RSP0/CPU0:router# show configuration running-config
Building configuration...

!! Last configuration change at 15:36:31 UTC Thu Nov 17 2009 by lab
sessions Users with active configuration sess
!n
hostname router
line consolestartup Sh
exec-timeout 0 0configuration
!
logging console debugging
| Ou
snmp-server community public RW
<cr>
RP/0/0/
ipv4 source-routeadmin)#show confi
key chain IPSLA ?
key 10
  key-string password 1
  ipv4 address 10.0.0.0 255.255.255.0
  encapsulation ppp
  keepalive disable
!
interface POS0/7/0/0
shutdown
!
interface POS0/7/0/1
shutdown
!
interface POS0/7/0/2
shutdown
!
interface POS0/7/0/3
shutdown
!
route ipv4 0.0.0.0/0 12.7.0.1
ipsla
  responder
!
!
```

end

Related Commands

Command	Description
show configuration (config)	Displays the contents of the target configuration.
show configuration failed (config)	Displays information about a configuration that failed during the last commit.
show configuration history	Displays history of configuration changes.
show configuration running	Displays the contents of the committed configuration.
show configuration sessions	Displays the active configuration sessions.
show running-config	Displays the current running (active) configuration.
commit	Merges the target configuration to the running configuration.
load	Populates the target configuration with the contents of a previously saved configuration file.
show configuration commit changes	Displays the changes made to the running configuration by previous configuration commits.
show configuration commit list	Displays information about the configuration commits stored in the commit database.
show configuration failed startup	Displays information about a configuration that failed at startup.
show configuration rollback changes	Displays changes that would be made by rolling back the configuration or displays the list of commit IDs.

show configuration sessions

To display the active configuration sessions, use the **show configuration sessions** command in EXEC or administration EXEC mode.

show configuration sessions [detail]

Syntax Description	detail	(Optional) Displays detailed information.

Command Default	None

Command Modes	EXEC Administration EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show configuration sessions** command to display the active configuration sessions. Use the **clear configuration sessions** command to clear a configuration session. The **show configuration sessions** command can be used with the **clear configuration sessions** command to verify that an active configuration session was cleared.

Task ID	Task ID	Operations
	config-services	read

Examples	The following example shows sample output from the show configuration sessions command:

```
RP/0/RSP0/CPU0:router# show configuration sessions
```

```
Current Configuration Session  Line      User      Date                               Lock
00000050-001200bb-00000000   con0_5_CPU cisco     Fri Feb 16 17:23:47 2007
```

Table 19: show configuration sessions Field Descriptions

Field	Description
Session	System-generated configuration session ID number.
Line	Line in which the user session was established. In some cases, this field may display “UNKNOWN” or “SYSTEM.” These fields indicate that an internal commit was made by the system.
User	User who initiated the configuration session.
Date	Time and date the configuration session was started.
Lock	Locked running-configuration. An asterisk (*) displayed in this field means the session has been locked. Only one session can lock the running configuration at a time.

Related Commands

Command	Description
clear configuration sessions	Clears an active configuration session.

show default-afi-safi-vrf

To display the default address family identifier (AFI), subaddress family identifier (SAFI), and VPN routing and forwarding (VRF) instance for the current session, use the **show default-afi-safi-vrf** command in EXEC mode.

show default-afi-safi-vrf

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show default-afi-safi-vrf** command to display the default AFI and SAFI settings for the current session. The AFI and SAFI settings are controlled by the following commands:

- [set default-afi](#), on page 242
- [set default-safi](#), on page 244
- [set default-vrf](#), on page 246

Task ID	Task ID	Operations
	basic-services	read

Examples The following example shows sample output from the **show default-afi-safi-vrf** command:

```
RP/0/RSP0/CPU0:router# show default-afi-safi-vrf

%% Default AFI/SAFI/VRF for this session is:
   Address Family Identifier:      'ipv4'
   Sub-Address Family Identifier:  'unicast'
```



```
Virtual Routing/Forwarding:  ''
```

Related Commands

Command	Description
set default-afi	Sets the default AFI for the current session.
set default-safi	Sets the default SAFI for the current session.
set default-vrf	Sets the default VRF instance for the current session.

show history

To display a history of commands executed in EXEC, administration EXEC, administration configuration, or global configuration mode use the **show history** command in one of the supported modes.

show history [detail]

Syntax Description	detail	(Optional) Displays detailed history information.

Command Default	None

Command Modes	EXEC Administration EXEC Administration configuration Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. The show history command displays a history of the command entered for the current command mode. For example, enter the show history command to display a history of commands entered in EXEC mode. Enter the show history command in global configuration mode to display a history of the commands entered in global configuration mode.

Task ID	Task ID	Operations
	config-services	read
	basic-services	read

Examples

In the following example, the **show history** command is run in EXEC mode to display a history of the command entered in EXEC mode:

```
RP/0/RSP0/CPU0:router# show history
configure
admin
show history
```

In the following example, the **show history** command is run in global configuration mode to display a history of the command entered in global configuration mode:

```
RP/0/RSP0/CPU0:router(config)# show history
interface pos 0/1/0/0
ipv4 address 10.0.0.0
root
end
describe line default autocommand config
line default autocommand configure
end
show history
```

show running-config

To display the contents of the currently running configuration or a subset of that configuration, use the **show running-config** command in the appropriate mode.

show running-config [[**exclude**] *command*] [**sanitized**] [**inheritance** [**no-annotation**]]

Syntax Description

inheritance	(Optional) Displays the configuration inherited from any applied configuration group.
no-annotation	(Optional) Suppresses the display of inheritance messages, when the inheritance keyword is used.
exclude	(Optional) Excludes a specific configuration from the display.
<i>command</i>	(Optional) Command for which to display the configuration.
sanitized	(Optional) Displays a sanitized configuration for safe distribution and analysis.

Command Default

The **show running-config** command without any arguments or keywords displays the entire contents of the running configuration file.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.3.1	The inheritance and no-annotations keywords were added to support the display of configuration group configurations.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You can display either the entire running configuration, or a subset of the running configuration. The subset may be all the commands within a specified command mode.

**Note**

In Cisco IOS XR software, the running configuration is automatically used at system startup, reset, or power cycle. The running configuration is the committed configuration.

Sanitized Output

Use the **show running-config** command with the **sanitized** keyword to display the contents of the active running configuration without installation-specific parameters. Some configuration details, such as IP addresses, are replaced with different addresses. The sanitized configuration can be used to share a configuration without exposing the configuration details.

Command Modes

When the **show running-config** command is entered in administration configuration mode, the configuration for the administration plane is displayed, including the configured logical routers for the system. When the **show running-config** command is entered in any global configuration mode, or in EXEC mode, the configuration for the specific secure domain router (SDR) is displayed.

The **inheritance** and **no-annotations** keywords are not supported in administration EXEC or configuration modes.

Excluding Parts of the Display

Use the **exclude** keyword followed by a *command* argument to exclude a specific configuration from the display.

Display the Configuration from Configuration Groups

By default, if configuration groups are applied in the configuration, they are displayed as they are configured. For example:

```
RP/0/RSP0/CPU0:router# show running-config

group G-INTERFACE-MTU
  interface 'POS.*'
    mtu 1500
  !
end-group

interface POS0/4/1/0
  apply-group G-INTERFACE-MTU
  !
interface POS0/4/1/1
  apply-group G-INTERFACE-MTU
  mtu 2000
  !
```

To display the actual configuration as inherited from any applied configuration groups, use the **inheritance** keyword:

```
RP/0/RSP0/CPU0:router# show running-config inheritance

group G-INTERFACE-MTU
  interface 'POS.*'
    mtu 1500
  !
end-group

interface POS0/4/1/0
  ## Inherited from group G-INTERFACE-MTU
```

show running-config

```

mtu 1500
!
interface POS0/4/1/1
mtu 2000
!

```

Use the **no-annotations** keyword to suppress the display of the Inheritance messages, "## Inherited from group ...".

Task ID

Task ID	Operations
config-services	read

Examples

This example shows how to enter the **show running-config** command with the question mark (?) online help function to display the available subsets of the running configuration that can be entered to display a subset of the running configuration:

```
RP/0/RSP0/CPU0:router# show running-config ?
```

```

aaa                Authentication, Authorization and Accounting
alias              Create an alias for entity
aps                Configure SONET Automatic Protection Switching (APS)
arp                Global ARP configuration subcommands
as-path            BGP autonomous system path filter
as-path-set        Define an AS-path set
banner             Define a login banner
cdp                Enable CDP, or configure global CDP subcommands
cef                CEF configuration commands
cinetd             Global Cisco inetd configuration commands
class-map          Configure QoS Class-map command
clock              Configure time-of-day clock
community-list     Add a community list entry
community-set      Define a community set
controller         Controller configuration subcommands
dhcp               Dynamic Host Configuration Protocol
domain             Domain service related commands
exception          Coredump configuration commands
exclude            Exclude a feature or configuration item from display
explicit-path      Explicit-path config commands
extcommunity-set   Define an extended community set
fault              Fault related commands
forward-protocol   Controls forwarding of physical and directed IP broadcasts
ftp                Global FTP configuration commands
--More--

```

In this example, the **show running-config** command is used to display the running configuration for Packet-over-SONET/SDH (POS) interface 0/2/0/1:

```

RP/0/RSP0/CPU0:router# show running-config interface pos 0/2/0/1

interface POS0/2/0/1
ipv4 address 10.0.0.0 255.0.0.0

```

This example shows sample output from the **show running-config** command with the **sanitized** keyword displays a sanitized version of the running configuration. The sanitized configuration can be used to share a configuration without exposing specific configuration details.

```
RP/0/RSP0/CPU0:router# show running-config sanitized
```

Building configuration...

```
!! Last configuration change at 05:26:50 UTC Thu Jan 19 2009 by <removed>
!
snmp-server traps fabric plane
snmp-server traps fabric bundle state
hostname <removed>
line console
exec-timeout 0 0
!
exception choice 1 compress off filepath <removed>
logging console debugging
telnet vrf <removed> ipv4 server max-servers no-limit
snmp-server ifindex persist
snmp-server host 10.0.0.1 traps version <removed> priv <removed> udp-port 2555
snmp-server view <removed> <removed> included
snmp-server community <removed> RO LROwner
snmp-server community <removed> RO LROwner
snmp-server group <removed> v3 priv read <removed> write <removed>
snmp-server traps snmp
snmp-server traps syslog
interface Loopback10
!
interface Loopback1000
!
--More--
```

Related Commands

Command	Description
show configuration (config)	Displays the contents of the target configuration.
show configuration running-config	Displays the contents of the committed configuration.

template

To create a template name and enter template configuration mode, use the **template** command in global configuration mode. To remove a template definition, use the **no** form of this command.

template *name*

no template *name*

Syntax Description

<i>name</i>	Unique name for the template to be created.

Command Default

No templates are defined.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **template** command to enter template configuration mode. From template configuration mode, you can group a subset of configuration commands in a named template. Commonly used sets of configuration commands can be grouped into a named template. Defining a template is similar to creating a C macro function. A template provides modularity and ease of use during user configuration.

Use the **end-template** command to exit template configuration mode. After defining a template, use the **apply-template** command to apply the template. Use the **show running-config** command with the optional **template** keyword and *template-name* argument to display the contents of a template.

Task ID

Task ID	Operations
config-services	read, write

Examples

The following example shows how to enter template configuration mode to create a template. In this example, a template named “pre-pos” is defined for the preconfigured Packet-over-SONET/SDH (POS) interface 0/1/0/1. The **end-template** command is used to exit from template configuration mode.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# template pre-pos
RP/0/RSP0/CPU0:router(config-TPL)# interface preconfigure pos0/1/0/0
RP/0/RSP0/CPU0:router(config-if-pre)# ipv4 address 10.3.32.154 255.0.0.0
RP/0/RSP0/CPU0:router(config-if-pre)# end-template
RP/0/RSP0/CPU0:router(config)#
```



Note

After configuring a template, you may want to display the contents of the configured template. To display a template configuration, use the **show running-config** command with the **template name** keyword and argument.

The following example shows sample output from the **show running-config** command with the **template name** keyword and argument. In this example, the output displays the contents of a template named “pre-pos.”

```
RP/0/RSP0/CPU0:router# show running-config template pre-pos

template pre-pos
  interface preconfigure POS0/1/0/0
    ipv4 address 10.3.32.154 255.0.0.0
  !
end-template
```

Related Commands

Command	Description
apply-template	Applies a template to the target configuration.
end-template	Exits template configuration mode.
show running-config	Displays the current running (active) configuration.



File System Commands on the Cisco ASR 9000 Series Router

This chapter describes the Cisco IOS XR software commands used to manage file systems on your router.



Note

The commands in this module should not be used to access or modify any Cisco IOS XR software or configuration files. Use only the documented commands for installing and configuring the router. Modifying, deleting, or moving configuration or software package files using the manual commands described in this module is not required and can result in router downtime, loss of service, and a corrupted database.

- [cd](#), [page 308](#)
- [cfs check](#), [page 310](#)
- [copy](#), [page 312](#)
- [delete](#), [page 318](#)
- [dir](#), [page 320](#)
- [erase nvram:](#), [page 322](#)
- [erase nvram-raw:](#), [page 323](#)
- [format](#), [page 325](#)
- [fsck](#), [page 328](#)
- [mkdir](#), [page 330](#)
- [pwd](#), [page 332](#)
- [rmdir](#), [page 333](#)
- [show filesystem](#), [page 335](#)
- [show media](#), [page 337](#)
- [unmount](#), [page 340](#)

cd

To change the present working directory, use the **cd** command in EXEC mode.

cd *filesystem*:

Syntax Description

filesystem : (Optional) Location of the new present working directory. Include the file system alias for the *filesystem* argument, followed by a colon and optionally, the name of a directory.

Command Default

The default file directory is disk0:/usr.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

filesystem

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The present working directory is the directory used when EXEC commands that have an optional argument are entered without that argument. Use the **cd** command to define the present working directory. For example, when the **dir** command is entered without specifying the *filesystem* argument, the files in the present working directory are displayed.

Use the **pwd** command to display the present working directory.

Use the **show filesystem** command to display the available storage devices.

Enter the **cd** command without an argument to return the present working directory to disk0:/usr.

Task ID

Task ID	Operations
filesystem	read

Examples

The following example shows how to change the present working directory to the root directory on the hard disk. In this example, the **pwd** command confirms that the present working directory has changed to the root directory on the hard disk.

```
RP/0/RSP0/CPU0:router# cd haddisk:
RP/0/RSP0/CPU0:router# pwd

haddisk:
```

The following example shows how to change the present working directory to the default file directory by specifying the **cd** command without a location. In this example, the **pwd** command confirms that the present working directory has changed to the default file directory.

```
RP/0/RSP0/CPU0:router# cd
RP/0/RSP0/CPU0:router# pwd

disk0:/usr
```

Related Commands

Command	Description
dir	Displays a list of files on a file system or in a specific directory.
pwd	Displays the present working directory.
show filesystem	Displays the layout and contents of file systems.

cfs check

To perform a check of the Configuration File System (CFS), use the **cfs check** command in EXEC or administration

EXEC

mode.

cfs check

Syntax Description

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

EXEC

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **cfs check** command to check the sanity of the configuration file system and attempt to recover from internal inconsistencies; one or more rollback points may be lost depending on the severity of the state of the file system.



Note

While this command runs, redundancy of the designated shelf controller (DSC) is disabled.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to perform a CFS check:

```
RP/0/RSP0/CPU0:router# cfs check
```

```
Creating any missing directories in Configuration File system...OK
Initializing Configuration Version Manager...OK
Syncing commit database with running configuration...OK
Re-initializing cache files...OK
Updating Commit Database. Please wait...[OK]
```

copy

To copy a file from a source (such as a network server) to a destination (such as a flash disk), use the **copy** command in EXEC or administration EXEC mode.

copy *source* {**location** *node-id* *destination* **location** {*node-id* | **all**} | **running-config**[**atomic**]}

Syntax Description

<i>source</i>	Filename including the directory path or network location of the file. The possible sources are: <i>directory-path</i> —Directory path of the file from which the file is copied. access-list { ipv4 ipv6 }—Copies an access list (EXEC mode only). bootflash: —Copies from the bootflash: file system. compactflash: —Copies from the compactflash: file system. compactflasha: —Copies from the compactflasha: file system partition. disk0: —Copies from disk0: file system. disk0a: —Copies from disk0a: file system partition. disk1: —Copies from disk1: file system. disk1a: —Copies from disk1a: file system partition. flash: —Copies from the flash: file system. The flash: keyword is an alias for bootflash:. ftp: —Copies from an FTP network server. The syntax is ftp:[[<i>//username</i> [<i>:password</i>]<i>@</i>]<i>location</i>]/<i>directory</i>]/<i>filename</i>. harddisk: —Copies from the hard disk drive file system (if present). harddiska: —Copies from the hard disk partition a. harddiskb: —Copies from the hard disk partition b. nvr: —Copies from the NVRAM file system. prefix-list {ipv4 ipv6}—Copies from a prefix list (EXEC mode only). rcp: —Copies from a remote copy protocol (rcp) network server. The syntax is rcp:[[<i>//username</i><i>@</i>]<i>location</i>]/<i>directory</i>]/<i>filename</i>. running-config —Copies from the current system configuration. tftp: —Copies from a TFTP network server. The syntax is tftp:[[<i>//location</i>]/<i>directory</i>]/<i>filename</i> xml-schema —Copies the XML schema files as a tar ball file (.tar.gz) [EXEC mode only].
<i>destination</i>	Filename including the directory path or network location of the file.
location <i>node-id</i>	Specifies a node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.
location all	Copies to all nodes.

running-config	Applies the source configuration file to the running configuration of the system.
atomic	(Optional) Applies the changes to the running configuration only if there are no errors

Command Default No default behavior or values

Command Modes EXEC
Administration EXEC

Command History	Releases	Modifications
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Source and destination can each be a configuration file, a text file, or a file system. Enter source and destination URL information, usernames, and passwords and issue the **copy** command. The networking device prompts for any missing information.

The exact format of the *source* and *destination* arguments vary according to the file or directory location. Enter the device or network location for the file system type.

Filenames can include the following characters:

! # \$ % & ' + 0 1 2 3 4 5 6 7 8 9 ; @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [] ^ _ a b c d e f g h i j k l m n o p q r s t u v w x y z { } ~

The following characters can be used with the stated limitations:

- ` needs backslash before this character
- – cannot be the first character
- . cannot be the last character
- = cannot be the filename without other characters

The following characters cannot be used in filenames:

" () * , / : < > ? \ |

The maximum length allowed for a filename is 254 characters including the path. If a filename longer than 254 characters is specified, the filename is truncated to 254 characters.

To copy a file from a source on the router to a destination on the router, specify a source **location** *node-id* and a destination **location** *node-id*. To copy the file to all nodes, use the **location all** keywords.

In the alias syntax for the **ftp:**, **rcp:**, and **tftp:** keywords, the location is either an IP address or a hostname. The filename is specified relative to the directory used for file transfers.

When no alias is specified, the networking device looks for a file in the current directory. To view the current directory, enter the **pwd** command.

**Note**

During processing of the **copy** command, you might see the “C” character. For all files being copied, “C” indicates that the copy process is taking place. The entire copying process might take several minutes and differs from protocol to protocol and from network to network.

[Table 20: Network Protocols Supported by Cisco IOS XR Software](#), on page 314 describes the network protocols supported by Cisco IOS XR software.

Table 20: Network Protocols Supported by Cisco IOS XR Software

Prefix	Name	Description
tftp:	Trivial File Transfer Protocol	<i>TFTP</i> is a simplified version of FTP that allows files to be transferred from one computer to another over a network, usually without the use of client authentication (for example, username and password).
ftp:	File Transfer Protocol	<i>FTP</i> is an application protocol, part of the TCP/IP protocol stack, and is used for transferring files between network nodes. FTP requires a username and password.
rcp:	Remote Copy Protocol	The rcp protocol allows users to copy files to and from a file system residing on a remote host or server on the network. The rcp protocol uses TCP to ensure the reliable delivery of data. The rcp protocol downloads require a username.

Additional usage guidelines are in the following sections.

Invalid Combinations of Source and Destination

Some combinations of source and destination are invalid. Specifically, you cannot copy the following:

- From a running configuration to a running configuration
- From a network device to a network device (for example, **copy ftp: rcp:**)

Using TFTP

TFTP is a simplified version of FTP that allows files to be transferred from one computer to another over a network, usually without the use of client authentication (for example, username and password).

The syntax is as follows:

copy tftp://hostname /ipaddress/directory-path pie name target-device [**location** {*node-id* | **all**}]

Example:

```
RP/0/RSP0/CPU0:router# copy tftp://1.1.1.1/images/software.pie disk1:
```



Note

Some Cisco IOS XR images may be larger than 32 MB, and the TFTP services provided by some vendors may not support a file this large. If you do not have access to a TFTP server that supports files larger than 32 MB, download the software image using FTP or rcp as described in the following sections.

Using FTP

FTP servers require a username and password for each client request. Cisco IOS XR software sends the first valid username in the following list:

- 1 The username and password specified in the **copy** command, if a username is specified.

The syntax is as follows:

copy ftp://username:password@hostname or ipaddress/directory-path/pie-name target-device [**location** {*node-id* | **all**}]

Example:

```
RP/0/RSP0/CPU0:router# copy ftp://john:secret@10.1.1.1/images/software.pie disk1:
```

- 2 An “anonymous” username and password. The anonymous password is “root@ip address,” where “ip address” is the IP address of the local networking device.
- 3 A password “username@iosname.domain” formed by the networking device. The variable “username” is the username associated with the current session, “iosname” is the configured hostname, and “domain” is the domain of the networking device.

The username and password must be associated with an account on the FTP server. If you are writing to the network server, the FTP server must be properly configured to accept the FTP write request from the user on the networking device.

If the network server has a directory structure, the configuration file or image is written to or copied from the directory associated with the username on the network server. For example, if the system image resides in the home directory of a user on the network server, specify the name of that user as the remote username.

Refer to the documentation for your FTP server for more details.

Using rcp

The rcp protocol requires a username upon each request. When you copy a configuration file or image between the networking device and an rcp server, the Cisco IOS XR software sends the first valid username in the following list:

- 1 The remote username specified in the **copy** command, if one is specified.
- 2 The username set by the **rcp client username** command, if the command is configured.
- 3 The networking device hostname.

For the rcp copy request to process successfully, an account must be defined on the network server for the remote username. If the network administrator of the destination server did not establish an account for the remote username, this command does not run successfully. If the network server has a directory structure, the configuration file or image is written to or copied from the directory associated with the remote username on the network server. For example, if the system image resides in the home directory of a user on the network server, specify the name of that user as the remote username.

If you are writing to the network server, the rcp server must be properly configured to accept the rcp write request from the user on the networking device. For UNIX systems, add an entry to the .rhosts file for the remote user on the rcp server. Suppose the networking device contains the following configuration lines:

```
hostname Rtr1
ip rcp remote-username User0
```

If the IP address of the networking device translates to company.com, then the .rhosts file for User0 on the rcp server should contain the following line:

```
company.com Rtr1
```

See the documentation for your rcp server for more details.

If you are using a personal computer as a file server, the computer must support remote shell (rsh) protocol.

Using xml-schema

Use the **xml-schema** keyword to obtain the most up-to-date XML schemas (.xsd files) from the router. Using this keyword is useful to prevent the use of outdated schemas in the event that router software updates include schema updates. The tar ball file includes all active schema files. It does not include schemas that are activated by specific package installation envelopes (PIEs) if those PIEs are not installed and activated on the router.

Copying to the Running Configuration

When you use the **copy** command to copy a configuration file to the **running-config** destination, the configuration in the file is applied to the running configuration of the system. This is a configuration operation. By default, the copy is carried out in a best-effort manner. This means that if some configuration lines from the file cannot be applied, the remaining configuration is still integrated into the system. In this case, a partial configuration is committed. When the **atomic** keyword is used, partial configurations are not committed. This means that even if one error occurs in the parsing or committing phase, no changes are made to the system. To view any errors when applying the configuration, use the **show configuration failed** command.

Task ID

Task ID	Operations
filesystem	execute

Examples

The following example shows how to copy a file from a FTP server to disk1:

```
RP/0/RSP0/CPU0:router#
copy ftp://john:secret@10.1.1.1/images/comp-asr9k-full.pie disk1:
```

The following example shows how to copy a file from an rcp server to disk1:

```
RP/0/RSP0/CPU0:router#  
copy rcp://john@10.1.1.1/images/comp-asr9k-full.pie disk1:
```

The following example shows how to copy a file from a TFTP server to disk1:

```
RP/0/RSP0/CPU0:router#  
copy tftp://10.1.1.1/images/comp-asr9k-full.pie disk1:
```

Related Commands

Command	Description
cd	Changes the present working directory.
dir	Displays a list of files on a file system or in a specific directory.
show configuration failed (config)	Displays information about a configuration that failed during the last commit.

delete

To delete files, use the **delete** command in the appropriate mode .

delete [/noprompt] [/ena] *filesystem: filename* **location** {*node-id* | **all**}

Syntax Description

/noprompt	(Optional) Causes no prompt for confirmation before deleting the specified files.
/ena	(Optional) Deletes all files from and below the current working directory.
<i>filesystem :</i>	(Optional) Location of the file to be deleted. Include the file system alias for the <i>filesystem</i> argument, followed by a colon, and, optionally, the name of a directory.
<i>filename</i>	Filename of the file to be deleted.
location { <i>node-id</i> all }	Deletes a file from a designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. The all keyword specifies to delete the file from all nodes.

Command Default

A filename must be specified. If a filename is entered without a file system or directory path, the present working directory is used.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When a file is deleted, it is removed from the system and cannot be restored (undeleted).

Use the **dir** command to display the list of files on a storage device.

Task ID

Task ID	Operations
filesystem	execute

Examples

The following example shows how to delete a file:

```
RP/0/RSP0/CPU0:router# delete rbtest
```

```
Delete disk1:/rbtest[confirm]y
```

Related Commands

Command	Description
cd	Changes the present working directory.
dir	Displays a list of files on a file system or in a specific directory.

dir

To display a list of files on a file system or in a specific directory, use the **dir** command in EXEC or administration EXEC mode

.

```
dir [/all| /ena| /recurse] [filesystem:] [filename ] location {node-id| all}
```

Syntax Description

/all	(Optional) Lists deleted files, undeleted files, and files with errors.
/ena	(Optional) Recognizes subdirectories.
/recurse	(Optional) Recursively lists subdirectories.
filesystem :	(Optional) Name of the directory containing the files to be displayed. Include the file system alias for the <i>filesystem</i> argument, followed by a colon, and, optionally, the name of a directory.
filename	(Optional) Name of the files to display. The files can be of any type. You can use wildcards in the filename. A wildcard character (*) matches all patterns. Strings following a wildcard are ignored.
location {node-id all}	(Optional) Specifies the node from which to display a list of files. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. The all keyword specifies to display files on all nodes.

Command Default

When the **dir** command is entered without keywords or arguments, the contents of the present working directory are displayed.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you enter the **dir** command without specifying a directory, the contents of the present working directory are displayed. The **all** keyword displays all files, including deleted files. The size associated with the directory name is the total size for all files in that directory.

Task ID

Task ID	Operations
filesystem	execute

Examples

The following example shows how to display the contents of a directory:

```
RP/0/RSP0/CPU0:router# dir harddisk:/log
```

```
Directory of harddisk:/log
```

```
5527      drwx  4096      Thu Aug 28 11:21:48 2008  boot_28_Aug_2008_11_21_49
5533      drwx  4096      Thu Aug 28 11:38:54 2008  boot_28_Aug_2008_11_38_54
5538      drwx  4096      Fri Sep  5 13:28:54 2008  boot_05_Sep_2008_13_28_54
5543      drwx  4096      Mon Sep  8 08:55:52 2008  boot_08_Sep_2008_06_59_08
--More--
```

Related Commands

Command	Description
cd	Changes the present working directory.
pwd	Displays the present working directory.
show filesystem	Displays the layout and contents of file systems.

erase nvram:

To erase the NVRAM file system, use the **erase nvram:** command in EXEC mode.

erase nvram: [**format**][**location** {*node-id*| **all**}]

Syntax Description

format	(Optional) Formats the entire NVRAM.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Caution

Using the **erase nvram:** command permanently removes the files.

Task ID

Task ID	Operations
filesystem	execute

Examples

The following example shows how to erase the NVRAM file system:

```
RP/0/RSP0/CPU0:router# erase nvram:
Erase operation will destroy IOS/ENA files in "nvram:". Continue? [confirm] y
```

Related Commands

Command	Description
delete	Deletes files.

erase nvram-raw:

To format the NVRAM raw data partition with a '0' value, use the **erase nvram-raw:** command in EXEC or administration EXEC mode.

erase nvram-raw: [**location** {*node-id*| **all**}]

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies the node where the file system is located. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Use the all keyword to indicate all nodes.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The NVRAM is divided into two partitions. The first partition, consisting of 1 megabyte (MB), is used by the existing NVRAM file-system partition. The second partition, consisting of 1 MB, is a raw data partition and is used by the Kernel Dumper to store reboot historical logs, critical crash information, syslog, and Kernel Dumper traces. The **erase nvram-raw:** command formats the raw data partition of the NVRAM.

Task ID

Task ID	Operations
filesystem	execute

Examples

The following example shows how to erase the raw data partition of the NVRAM file system:

```
RP/0/RSP0/CPU0:router# erase nvram-raw:
```

 erase nvram-raw:**Related Commands**

Command	Description
delete	Deletes files.

format

To format a file system, use the **format** command in EXEC or administration EXEC mode.

format *filesystem:* [**partition**] [*monlib-filename*] **location** {*node-id* | **all**} [**spare** *spare-number*] [**force**] [**recover**]

Syntax Description

<i>filesystem:</i>	Name of the file system to format, followed by a colon. Possible values are bootflash: , disk0: , disk0a: , disk1: , disk1a: , harddisk: , harddiska: , and harddiskb: .
partition	(Optional) Creates a partition on a filesystem. This option is not available when the bootflash: filesystem is specified.
<i>monlib-filename</i>	(Optional) Name of the ROM monitor library (monlib) file to use for formatting the file system. The default monlib file is the one bundled with the system software. Note The monlib is used by ROMMON for accessing the file system on the media. This option is available on the bootflash: only.
location { <i>node-id</i> all }	(Optional) Specifies the node where the file system is located. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Use the all keyword to indicate all nodes.
spare <i>spare-number</i>	(Optional) Reserves spare sectors as specified by the <i>spare-number</i> argument when formatting flash memory. Valid values are from 0 to 16. Note This option is available on the bootflash: only.
force	(Optional) Forces a monlib update, without verifying the monlib version on the device.
recover	(Optional) Recovers any sector read errors on a flash disk.

Command Default

The default monlib file is the one included with the Cisco IOS XR software.

spare-number : 0

Command Modes

EXEC

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Before you can use a new flash memory card, you must format it.

**Caution**

Formatting a storage device deletes all data on that device.

Use the online help (?) function to display the file systems available to be formatted on the router and the formatting options available for a file system.

Disk0: and disk1: can be partitioned into two partitions each: disk0: and disk0a:, disk1: and disk1a:. The harddisk: can be partitioned into three partitions: harddisk:, harddiska:, and harddiskb:. The primary partitions are used to store critical data. The secondary partitions are used to store noncritical data.

[Table 21: Size of Disk Partitions in Relation to Size of Disk](#), on page 326 shows the size of the partitions if you partition disk0: or disk1: :

Table 21: Size of Disk Partitions in Relation to Size of Disk

Size of Disk	Primary Partition Percentage	Secondary Partition Percentage
less than 900 MB	Partitioning not supported	Partitioning not supported
900 MB to 1.5 GB	80%	20%
1.5 GB to 3 GB	60%	40%
more than 3 GB	50%	50%

The size of the four hard disk partitions are as follows:

- Primary partition (harddiska:)—11%
- Secondary partition (harddiskb:)—11%
- Third partition (harddisk:)—48%
- Fourth partition (raw)—30%

Task ID

Task ID	Operations
root-lr (EXEC)	execute
root-system (administration EXEC)	execute

Examples

The following example shows how to format disk1:

```
RP/0/RSP0/CPU0:router# format disk1:
```

The following example shows how to format disk1: with instructions to recover any sectors on the device that have read errors:

```
RP/0/RSP0/CPU0:router# format disk1: recover
```

```
This format operation will try to recover sectors with read error
This operation may take a while. Continue? [confirm]
Format will destroy all data on "disk1:". Continue? [confirm]
```



Note

When the console returns to the EXEC prompt, the new flash disk has been formatted and is ready for use.

Related Commands

Command	Description
fsck	Checks a file system for damage.

fsck

To check a file system for damage, use the **fsck** command in EXEC or administration EXEC mode.

fsck *filesystem*: [**location** *node-id*]

Syntax Description

<i>filesystem</i> :	Name of the file system to check, followed by a colon. Possible values are disk0: , disk0a: , disk1: , disk1a: , harddisk: , harddiska: , harddiskb: .
location <i>node-id</i>	(Optional) Specifies the node where the file system is located. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
filesystem	execute

Examples

The following example shows how to check the file system on flash disk0: for damage:

```
RP/0/RSP0/CPU0:router# fsck disk0:
```

```
Phase 1 - Read and compare FATs
Phase 2 - Check cluster chains
Phase 3 - Check directories
Phase 4 - Check for lost files
```

```
157280 kb used, 843344 kb free, 2541 files, 190 directories
```



```
Filesystem is clean.
```

Related Commands

Command	Description
show filesystem	Displays the layout and contents of file systems.

mkdir

To create a new directory on a file system, use the **mkdir** command in the appropriate mode. .

mkdir *filesystem*:[**location** {*node-id*| **all**}]

Syntax Description

<i>filesystem</i> :	File system on which to create a new directory.
location { <i>node-id</i> all }	(Optional) Specifies the node where the file system is located. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Use the all keyword to indicate all nodes.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

After you issue the **mkdir** command, Cisco IOS XR software prompts you to specify the name of the directory to be created. When specifying the name of the new directory, include the directory path where you want the new directory to reside. If you do not specify a directory path, the new directory is created in the /usr directory of the file system specified for the *filesystem*: argument.

Task ID

Task ID	Operations
filesystem	execute

Examples

The following example shows how to create a directory named newdir. The **dir** command is used to verify that the directory has been added.

```
RP/0/RSP0/CPU0:router# mkdir harddisk:
```

```
Create directory filename []?newdir
Created dir harddisk:/newdir
RP/0/RP0/CPU0:router# dir harddisk:
```

```
Directory of harddisk:
```

```
11193      drwx  4096      Fri Feb 13 06:45:05 2009 newdir
37146      drwx  4096      Sun Dec 14 15:30:48 2008 malloc_dump
43030      drwx  4096      Wed Dec 24 11:20:52 2008 tracebacks
43035      drwx  4096      Thu Jan  8 18:59:18 2009 sau
51026      drwx  4096      Sat Dec 27 02:52:46 2008 tempA
51027      drwx  4096      Sat Dec 27 02:04:10 2008 dir.not.del
-430307552 -rwx   342      Fri Jan 16 10:47:38 2009 running-config
-430305504 -rwx  39790      Mon Jan 26 23:45:56 2009 cf.dat
```

```
39929724928 bytes total (39883231232 bytes free)
```

Related Commands

Command	Description
dir	Displays a list of files on a file system or in a specific directory.
rmdir	Removes an existing directory.

pwd

To display the present working directory, use the **pwd** command in EXEC mode

.

pwd

Syntax Description

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **pwd** command to show what directory or file system is specified as the default by the **cd** command.

Task ID

Task ID	Operations
filesystem	read

Examples

The following example shows how to display the present working directory:

```
RP/0/RSP0/CPU0:router# pwd
disk0:/usr
```

Related Commands

Command	Description
cd	Changes the present working directory.
dir	Displays a list of files on a file system or in a specific directory.

rmdir

To remove an existing directory, use the **rmdir** command in the appropriate mode.

rmdir *filesystem: location* {*node-id*| **all**}

Syntax Description

<i>filesystem</i>	Name of the file system from which to delete a directory, followed by a colon.
location { <i>node-id</i> all }	Specifies the node where the file system is located. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Use the all keyword to indicate all nodes.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **rmdir** command to remove directories (for example, to free up disk space) from a file system. After you issue the **rmdir** command, the Cisco IOS XR software prompts you to specify the name of the directory to be deleted.

When a directory contains files, you must remove the files before deleting the directory. Use the **delete** command to remove files.

Task ID

Task ID	Operations
filesystem	execute

Examples

The following example shows how to delete a subdirectory from the hard disk. The **dir** command is used to verify that the directory has been deleted.

```
RP/0/RSP0/CPU0:router# rmdir harddisk:

Remove directory filename []?newdir
Delete harddisk:/newdir[confirm]y
RP/0/RSP0/CPU0:router# dir harddisk:

Directory of harddisk:

 37146      drwx  4096      Sun Dec 14 15:30:48 2008  malloc_dump
 43030      drwx  4096      Wed Dec 24 11:20:52 2008  tracebacks
 43035      drwx  4096      Thu Jan  8 18:59:18 2009   sau
 51026      drwx  4096      Sat Dec 27 02:52:46 2008  tempA
 51027      drwx  4096      Sat Dec 27 02:04:10 2008  dir.not.del
-430307552  -rwx   342      Fri Jan 16 10:47:38 2009  running-config
-430305504  -rwx  39790      Mon Jan 26 23:45:56 2009  cf.dat

39929724928 bytes total (39883235328 bytes free)
```

Related Commands

Command	Description
delete	Deletes files.
dir	Displays a list of files on a file system or in a specific directory.
mkdir	Creates a new directory on a file system.

show filesystem

To display the layout and contents of file systems, use the **show filesystem** command in EXEC or administration EXEC mode.

show filesystem *filesystem*:[**firmware**|**stats**|**verbose level**] [**location** {*node-id*|**all**}]

Syntax Description

<i>filesystem</i> :	Name of the file system for which to display information, followed by a colon. Possible values are: disk0: , disk1: , harddisk: .
firmware	(Optional) Displays the firmware level.
stats	(Optional) Displays device statistics.
verbose level	(Optional) Changes the device driver verbose level.
location { <i>node-id</i> all }	(Optional) Specifies the node where the file system is located. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Use the all keyword to indicate all nodes.

Command Default

The file system for the active RP is displayed.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show filesystem** command to learn the alias names (prefixes) of the file systems supported by your networking device.

Task ID

Task ID	Operations
basic-services	read

Examples

The following example shows sample output from the **show filesystem** command:

```
RP/0/RSP0/CPU0:router# show filesystem
```

File Systems:

Size(b)	Free(b)	Type	Flags	Prefixes
-	-	network	rw	qsm/dev/fs/tftp: tftp:
-	-	network	rw	qsm/dev/fs/rcp: rcp:
-	-	network	rw	qsm/dev/fs/ftp: ftp:
39929724928	39852978176	harddisk	rw	harddisk:
1024606208	863584256	flash-disk	rw	disk0:
2092032	2059264	nvr	rw	nvr:
62390272	62381260	flash	rw	bootflash:

The following example shows sample output from the **show filesystem** command using the optional **location node-id** keyword and argument:

```
RP/0/RSP0/CPU0:router# show filesystem location 0/rp0/cpu0
```

File Systems:

Size(b)	Free(b)	Type	Flags	Prefixes
-	-	network	rw	qsm/dev/fs/tftp: tftp:
-	-	network	rw	qsm/dev/fs/rcp: rcp:
-	-	network	rw	qsm/dev/fs/ftp: ftp:
39929724928	39883235328	harddisk	rw	harddisk:
2092032	2019328	nvr	rw	nvr:
1024606208	847888384	flash-disk	rw	disk0:
62390272	62153616	flash	rw	bootflash:

Table 22: show filesystem Field Descriptions

Field	Description
Size(b)	Amount of memory in the file system, in bytes.
Free(b)	Amount of free memory in the file system, in bytes.
Type	Type of file system.
Flags	Permissions for file system.
Prefixes	Alias for the file system.

show media

To display the current state of the disk storage media, use the **show media** command in EXEC or administration EXEC mode.

show media location {*node-id* | **all**}

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies the node where the file system is located. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Use the all keyword to indicate all nodes.

Command Default

The disk storage media for the active RP is displayed.

Command Modes

Administration EXEC
EXEC

Command History

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Use the **show media** command to view the status of the storage media on your system.

Examples

The following sample output displays the disk storage media for the active RSP:

```
RP/0/RSP0/CPU0:router show media
```

```
Mon Jun  8 09:06:12.720 PST
```

```
Media Information for 0/RSP0/CPU0.
```

Mountpoint	Image FsType	Current FsType	State	DrvrPid	Mirror	Flags
/disk0:	QNX4	QNX4	Mounted	0073764	Enabled	
/disk0a:	QNX4	QNX4	Mounted	0073764		
/disk1:	QNX4	QNX4	Mounted	0073766	Enabled	
/disk1a:	QNX4	QNX4	Mounted	0073766		
/compactflash:	FAT32	FAT16	Mounted	0090166		
/harddiska:	QNX4	QNX4	Mounted	0053280		
/harddiskb:	QNX4	QNX4	Mounted	0053280		
/harddisk:	QNX4	QNX4	Mounted	0053280		
/lcdisk0:	QNX4	(?)	Not Present			
/lcdisk0a:	QNX4	(?)	Not Present			

The following sample output displays the disk storage media on all nodes:

```
RP/0/RSP0/CPU0:router show media location all

Mon Jun  8 09:09:55.437 PST

Media Information for 0/1/CPU0.
  Mountpoint      Image      Current
                  FsType     FsType     State      DrvrPid    Mirror    Flags
=====
  /lcdisk0:       QNX4       (?)       Not Present
  /lcdisk0a:      QNX4       (?)       Not Present

Media Information for 0/4/CPU0.
  Mountpoint      Image      Current
                  FsType     FsType     State      DrvrPid    Mirror    Flags
=====
  /lcdisk0:       QNX4       (?)       Not Present
  /lcdisk0a:      QNX4       (?)       Not Present

Media Information for 0/6/CPU0.
  Mountpoint      Image      Current
                  FsType     FsType     State      DrvrPid    Mirror    Flags
=====
  /lcdisk0:       QNX4       (?)       Not Present
  /lcdisk0a:      QNX4       (?)       Not Present

Media Information for 0/RSP0/CPU0.
  Mountpoint      Image      Current
                  FsType     FsType     State      DrvrPid    Mirror    Flags
=====
  /disk0:         QNX4       QNX4      Mounted    0073764    Enabled
  /disk0a:        QNX4       QNX4      Mounted    0073764
  /disk1:         QNX4       QNX4      Mounted    0073766    Enabled
  /disk1a:        QNX4       QNX4      Mounted    0073766
  /compactflash:  FAT32      FAT16     Mounted    0090166
  /harddiska:     QNX4       QNX4      Mounted    0053280
  /harddiskb:     QNX4       QNX4      Mounted    0053280
  /harddisk:      QNX4       QNX4      Mounted    0053280
  /lcdisk0:       QNX4       (?)       Not Present
  /lcdisk0a:      QNX4       (?)       Not Present
```

Table 23: show media Field Descriptions

Field	Description
Mountpoint	File system name.
FsType	File system type.
State	State of the storage media.
DrvrPid	Process ID of the media driver.
Mirror	Indicates if disk mirroring is enabled or not.
Flags	Where disk mirroring is enabled, indicates whether the partition has been repaired, formatted, or the driver has been restarted.

Related Commands

Command	Description
mirror	Configures disk mirroring on a node.
mirror pause	Temporarily pauses disk mirroring on a node.

unmount

To render a media device safe to be removed, use the **unmount** command in EXEC or administration EXEC mode.

unmount *filesystem:* [**location** *node-id*] [**undo**]

Syntax Description

<i>filesystem:</i>	File system to unmount, followed by a colon. Possible values are disk0: , disk1: , harddisk: .
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.
undo	(Optional) Remounts the device if it is not removed and reinserted.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **unmount** command before removing the media device. The command unmounts all partitions and ensures that no further access is made to the device. Use the **undo** option to remount the device if it is not removed and reinserted.

Task ID

Task ID	Operations
root-lr (EXEC)	execute
root-system (administration EXEC)	execute

Examples

This example unmounts the disk0: file system so that it can be safely removed:

```
RP/0/RSP0/CPU0:router# unmount disk0:
```

Related Commands

Command	Description
cd	Changes the present working directory.
delete	Deletes files.
dir	Displays a list of files on a file system or in a specific directory.
pwd	Displays the present working directory.



Frequency Synchronization Commands on the Cisco ASR 9000 Series Router

This chapter describes the Cisco IOS XR frequency synchronization commands that are used to distribute precision frequency around a network.

For detailed information about frequency synchronization concepts, configuration tasks, and examples, see the *Configuring Frequency Synchronization on Cisco IOS XR Software* configuration module in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

- [clear frequency synchronization esmc statistics, page 345](#)
- [clear frequency synchronization wait-to-restore, page 346](#)
- [clock-interface timing-mode, page 348](#)
- [clock-interface sync, page 350](#)
- [frequency synchronization, page 351](#)
- [gps-input, page 353](#)
- [log selection, page 355](#)
- [port-parameters, page 356](#)
- [priority \(frequency synchronization\), page 358](#)
- [quality itu-t option, page 360](#)
- [quality receive, page 362](#)
- [quality transmit, page 365](#)
- [selection input, page 368](#)
- [show frequency synchronization clock-interfaces, page 369](#)
- [show frequency synchronization configuration-errors, page 371](#)
- [show frequency synchronization interfaces, page 373](#)
- [show frequency synchronization ptp, page 375](#)
- [show frequency synchronization selection, page 377](#)

- [show frequency synchronization selection back-trace, page 380](#)
- [show frequency synchronization selection forward-trace, page 382](#)
- [ssm disable, page 384](#)
- [time-of-day-priority, page 386](#)
- [wait-to-restore, page 387](#)

clear frequency synchronization esmc statistics

To clear the Ethernet Synchronization Messaging Channel (ESMC) statistics, use the **clear frequency synchronization esmc statistics** command in EXEC mode.

clear frequency synchronization esmc statistics interface *{interface| all| summary location {node-id| all}}*

Syntax Description

<i>interface</i>	The command can be restricted to clear the ESMC statistics for a particular interface by specifying the interface.
<i>node-id</i>	The output can be restricted to clear the ESMC statistics for a particular node by specifying the location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to clear the ESMC statistics:

```
RP/0/RSP0/CPU0:router# clear frequency synchronization esmc statistics interface
gigabitethernet 0/1/0/1
```

clear frequency synchronization wait-to-restore

To clear the frequency synchronization wait-to-restore timer, use the **clear frequency synchronization wait-to-restore** command in EXEC mode.

clear frequency synchronization wait-to-restore {all| clock-interface {all| sync *port-num* location *node-id*}| interface {*type interface-path-id*| all}}

Syntax Description

all	Clears all wait-to-restore timers.
clock-interface {all sync <i>port-num</i> location <i>node-id</i>	Clears the wait-to-restore timers for all clock interfaces, or for a specific clock interface specified by the port number and node identifier. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
interface <i>type interface-path-id</i>	Clears the wait-to-restore timers for a specific interface or all interfaces.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to clear the frequency synchronization wait-to-restore timer on a specific interface:

```
RP/0/RSP0/CPU0:router# clear frequency synchronization wait-to-restore interface  
gigabitethernet 0/1/0/1
```

Related Commands

Command	Description
wait-to-restore	Configures the wait-to-restore time for frequency synchronization on an interface.

clock-interface timing-mode

To configure the type of timing sources that can be used to drive the output from the clock interfaces on the router, use the **clock-interface timing-mode** command in frequency synchronization configuration mode. To revert to the default timing mode, use the **no** form of this command.

clock-interface timing-mode {independent| system}

no clock-interface timing-mode

Syntax Description

independent	Specifies that the output of clock interfaces is driven only by the line interfaces (Ethernet and SONET). Each clock interface port on the router is completely independent. The same timing source cannot be used on more than one port and no loopbacks are allowed between clock interface ports.
system	Specifies that the output of a clock interface is driven by the system-selected timing source, which can be either the line interface or the clock interface.

Command Default

Clock interface output is driven only by input from line interfaces or the internal oscillator.

Command Modes

Frequency synchronization configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

In the default clock mode, clock interface loopback detection is turned on. This means that heuristic tests are run to detect if the signal being sent out of one clock interface can be looped back by some external box and sent back in via the same, or another, clock interface. In addition, output from the clock interface is driven only by input from line interfaces (and the internal oscillator). It is never driven by input from another clock interface.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following examples show how to configure the timing source for the clock interfaces on the router:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# frequency synchronization
RP/0/RSP0/CPU0:router(config-freqsync) #clock-interface independent

RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# frequency synchronization
RP/0/RSP0/CPU0:router(config-freqsync) #clock-interface system
```

clock-interface sync

To configure a clock interface for frequency synchronization on a specific node, use the **clock-interface sync** command in global configuration mode. To remove the clock interface from a node, use the **no** form of this command.

clock-interface sync *port-id* **location** *node-id*

no clock-interface sync *port-id* **location** *node-id*

Syntax Description

<i>port-id</i>	Clock interface port number.
location <i>node-id</i>	Specifies the node for clock interface frequency synchronization. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

This example shows how to configure a clock interface for frequency synchronization on a specific node:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# clock-interface sync 0 location 0/1/cpu0
RP/0/RSP0/CPU0:router(config-clock-if)# frequency synchronization
RP/0/RSP0/CPU0:router(config-clk-freqsync)#
```

frequency synchronization

To enable frequency synchronization globally on the router and to configure frequency synchronization options for a controller or interface, use the **frequency synchronization** command in the appropriate configuration mode. To disable frequency synchronization, use the **no** form of this command.

frequency synchronization

no frequency synchronization

Syntax Description This command has no keywords or arguments.

Command Default Disabled

Command Modes

- Global configuration (config)
- SONET configuration (config-sonet)
- Interface configuration (config-interface)
- Clock interface configuration (config-clock-if)

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Configuration of frequency synchronization on the router involves enabling it both in global configuration, and at the SONET, interface, or clock-interface, where you can configure additional commands.

When you configure frequency synchronization in global configuration mode, the default clocking is configured for line timing mode.

Task ID	Task ID	Operations
	ethernet-services	execute
	sonet-sdh	execute

Examples

The following example shows how to enable Frequency Synchronization in global configuration:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-freqsync)# commit
```

The following example shows how to enable Frequency Synchronization on a SONET controller:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# controller sonet 0/4/1/0  
RP/0/RSP0/CPU0:router(config-sonet)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-sonet-freqsync)#
```

The following example shows how to enable Frequency Synchronization on an Ethernet interface:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# interface gigabitEthernet 0/5/0/0  
RP/0/RSP0/CPU0:router(config-if)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-if-freqsync)#
```

The following example shows how to enable Frequency Synchronization on a clock interface:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# clock-interface sync 0 location 0/1/cpu0  
RP/0/RSP0/CPU0:router(config-clock-if)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-clk-freqsync)#
```


gps-input

To configure the GPS input parameters on an interface, use the **gps-input** command in clock interface port parameters configuration mode. To revert to the default parameters, use the **no** form of this command.

gps-input tod-format {cisco| ntp4} pps-input {rs422| ttl}

Syntax Description

tod-format	Specifies the format of the time-of-day messages.
cisco	Specifies that received time-of-day messages are in the Cisco ASCII format.
ntp4	Specifies that received time-of-day messages are in the NTP Type 4 format.
pps-input	Specifies the mode of one pulse-per-second signals.
rs422	Specifies that received 1PPS messages are in RS-422 mode.
ttl	Specifies that received 1PPS messages are in TTL mode.

Command Default

GPS parameters are not configured.

Command Modes

Clock interface port parameters configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **gps-input** command to specify input parameters for a clock interface that is configured for GPS timing.

Task ID

Task ID	Operation
drivers	read, write

Examples

This example shows how to specify sample input parameters for a clock interface:

```
RP/0/RSP0/CPU0:router# configure  
RP/0/RSP0/CPU0:router(config)# clock-interface sync 2 location 0/rsp0/cpu0  
RP/0/RSP0/CPU0:router(config-clock-if)# port-parameters  
RP/0/RSP0/CPU0:router(config-clk-parms)# gps-input tod-format cisco pps-input rs422
```

log selection

To enable logging of changes or errors to frequency synchronization, use the **log selection** command in frequency synchronization configuration mode. To disable logging, use the **no** form of this command.

log selection {**changes**|**errors**}

no log selection

Syntax Description

changes	Logs every time there is a change to the selected source, including any logs that the errors keyword logs.
errors	Logs only when there are no available frequency sources, or when the only available frequency source is the internal oscillator.

Command Default

No default behavior or values

Command Modes

Frequency synchronization configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

This example shows how to enable logging of changes to frequency synchronization:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# frequency synchronization
RP/0/RSP0/CPU0:router(config-freqsync)# log selection changes
```

port-parameters

To specify the type of external clock source for a clock interface, use the **port-parameters** command in clock interface configuration mode. To remove the clock source definition, use the **no** form of this command.

port-parameters {**bits-input** *mode*| **bits-output** *mode*| **dti**}

no port-parameters {**bits-input** *mode*| **bits-output** *mode*| **dti**}

Syntax Description

{bits-input bits-output}	Specifies a building integrated timing supply (BITS) input or output timing device.
<i>mode</i>	Type of BITS signal. Valid options are: • 2m • 6m-output-only • e1 • t1
dti	Specifies a DOCSIS® Timing Interface (DTI).

Command Default

No clocking type is defined.

Command Modes

Clock interface configuration mode

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
drivers	read, write

Examples

This example shows how to configure the external clock source to be DTI:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# clock-interface sync 1 location 0/RSP0/CPU0
RP/0/RSP0/CPU0:router(config-clock-if)# port-parameters dti
```

priority (frequency synchronization)

To configure the priority of the frequency source on a controller or an interface, use the **priority** command in the appropriate frequency synchronization configuration mode. To return the priority to the default value, use the no form of this command.

priority *priority-value*

no priority *priority-value*

Syntax Description

<i>priority-value</i>	Priority of the frequency source. The priority is used to select between sources with the same Quality Level (QL). The range is 1 (highest priority) to 254 (lowest priority).

Command Default

100

Command Modes

Controller frequency synchronization configuration
Interface frequency synchronization configuration
Clock interface frequency synchronization configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to configure the frequency synchronization priority on a SONET controller:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/1
```

```
RP/0/RSP0/CPU0:router(config-sonet)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-sonet-freqsync)# priority 150  
RP/0/RSP0/CPU0:router(config-sonet-freqsync)# commit
```

The following example shows how to configure the frequency synchronization priority on interface:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1  
RP/0/RSP0/CPU0:router(config-if)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-if-freqsync)# priority 150  
RP/0/RSP0/CPU0:router(config-if-freqsync)# commit
```

quality itu-t option

To configure the ITU-T quality level (QL) options, use the **quality itu-t option** command in frequency synchronization configuration mode. To return to the default levels, use the **no** form of this command.

quality itu-t option {1| 2 generation {1| 2}}

no quality

Syntax Description

{1 2 generation {1 2}}	Specifies the quality level for the router. Valid options are:
	• 1—ITU-T QL option 1, which uses the PRC, SSU-A, SSU-B, SEC and DNU quality levels. • 2 generation 1—ITU-T QL option 2 generation 1, which uses the PRS, STU, ST2, ST3, SMC, ST4, RES and DUS quality levels. • 2 generation 2—ITU-T QL option 2, generation 2, which uses the PRS, STU, ST2, ST3 TNC, ST3E, SMC, ST4, PROV and DUS quality levels.

Command Default

ITU-T option 1

Command Modes

Frequency synchronization configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The QL configured with the **quality itu-t option** command must match the QL specified in the **quality transmit** and **quality receive** commands configured in clock interface or interface frequency synchronization configuration mode.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to configure the ITU-T QL options:

```
RP/0/RSP0/CPU0:router# config  
RP/0/RSP0/CPU0:router(config)# frequency synchronization  
RP/0/RSP0/CPU0:router(config-sonet-freqsync)# quality itu-t option 1
```

Related Commands

Command	Description
quality receive	Configures all the Synchronization Status Message (SSM) quality levels (QLs) for the frequency source from the receive interface.
quality transmit	Configures all the SSM quality levels for the frequency source from the transmit interface.

quality receive

To configure all the Synchronization Status Message (SSM) quality levels (QLs) for the frequency source from the receive interface, use the **quality receive** command in the appropriate frequency synchronization mode. To return to the default levels, use the no form of this command.

quality receive *itu-t option* {**lowest** *ql-option ql* [**highest** *ql*] | **highest** *ql-option ql* | **exact** *ql-option ql*}
no quality receive *receive*

Syntax Description

ql-option Quality Level (QL) ITU-T options.

Valid values are:

- **1**—ITU-T Option 1
- **2 generation 1**—ITU-T Option 2 Generation 1
- **2 generation 2**—ITU-T Option 2 Generation 2

ql Quality Level (QL) value.

For line interfaces and clock interface with SSM support, any of the following combinations of QL values can be specified to modify the QL value received via SSM:

- If the **exact** keyword is used and the received or default QL is not DNU, then this value is used (rather than the received/default QL).
- If the **lowest** keyword is used and the received QL is a lower quality than this, then the received QL value is ignored and DNU is used instead.
- If the **highest** keyword is used and the received QL is higher quality than this, then the received QL value is ignored and this value is used instead.
- If the **lowest** and **highest** keywords are used, the behavior is as above. The maximum QL must be at least as high quality as the minimum QL.

Note For clock interfaces that do not support SSM, only the QL specified with the **exact** keyword can be used. This overrides the default QL for the source which is set by the platform.

Valid QL values for ITU-T Option 1 are:

- PRC
- SSU-A
- SSU-B
- SEC
- DNU

Valid QL values for ITU-T Option 2 Generation 1 are:

- PRS
- STU
- ST2
- ST3
- SMC
- ST4
- RES
- DUS

Valid QL values for ITU-T Option 2 Generation 2 are:

- PRS
 - STU
 - ST2
 - TNC
 - ST3E
 - ST3
 - SMC
 - ST4
 - PROV
 - DUS
-

Command Default

QL is unmodified.

Command Modes

SONET controller frequency synchronization
Clock interface frequency synchronization
Interface frequency synchronization

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

In cases where the clock interface supports SSM but it is not always enabled, all options are available. For clock interfaces where SSM is disabled or not being received, the QL used with the **exact** keyword specifies a precise QL to use for the interface. The QL specified with the **lowest** and **highest** keywords only acts on a received QL, which is only detected in cases where SSM is not running and a loopback has been detected. In this case the **lowest** and **highest** QL values modify the effective input QL (which in this loopback case is derived from the effective output clock-interface QL).

**Note**

If SSM is disabled, only the exact QL option is available.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to configure all the SSM quality levels for the frequency source from the receive interface:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# controller sonet 0/1/0/1
RP/0/RSP0/CPU0:router(config-sonet)# frequency synchronization
RP/0/RSP0/CPU0:router(config-sonet-freqsync)# quality receive itu-t
option 2 generation 2 ST3
```

Related Commands

Command	Description
quality itu-t option	Configures the ITU-T quality level options.

quality transmit

To configure all the Synchronization Status Message (SSM) quality levels for the frequency source from the transmit interface, use the **quality transmit** command in the appropriate frequency synchronization mode. To return to the default levels, use the **no** form of this command.

quality transmit *itu-t option* {**lowest** *ql-option ql* [**highest** *ql*] | **highest** *ql-option ql* | **exact** *ql-option ql*}
no quality transmit

Syntax Description

ql-option Quality Level (QL) ITU-T options.

Valid values are:

- **1**—ITU-T Option 1
- **2 generation 1**—ITU-T Option 2 Generation 1
- **2 generation 2**—ITU-T Option 2 Generation 2

ql Quality Level (QL) value.

For line interfaces and clock interfaces with SSM support, any of the following combinations of QL values can be specified to modify the QL value received via SSM:

- If the **exact** keyword is used and the received or default QL is not DNU, then this value is used (rather than the received/default QL).
- If the **lowest** keyword is used and the received QL is a lower quality than this, then the received QL value is ignored and DNU is used instead.
- If the **highest** keyword is used and the received QL is higher quality than this, then the received QL value is ignored and this value is used instead.
- If the **lowest** and **highest** keywords are used, the behavior is as above. The maximum QL must be at least as high quality as the minimum QL.

Note For clock interfaces that do not support SSM, only the QL specified with the **lowest** keyword can be used. In this case, rather than sending DNU, the output is squelched, and no signal is sent.

Valid QL values for ITU-T Option 1 are:

- PRC
- SSU-A
- SSU-B
- SEC
- DNU

Valid QL values for ITU-T Option 2 Generation 1 are:

- PRS
- STU
- ST2
- ST3
- SMC
- ST4
- RES
- DUS

Valid QL values for ITU-T Option 2 Generation 2 are:

- PRS
 - STU
 - ST2
 - TNC
 - ST3E
 - ST3
 - SMC
 - ST4
 - PROV
 - DUS
-

Command Default

The QL is unmodified

Command Modes

SONET controller frequency synchronization
 Clock interface frequency synchronization
 Interface frequency synchronization

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the interface is the selected source, DNU is always sent regardless of this configuration.

This configuration has no effect when SSM is disabled.

**Note**

For clock interfaces that do not support SSM, only the lowest QL can be specified. In this case, rather than sending DNU, the output is squelched, and no signal is sent.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example show how to configure all the SSM quality levels for the frequency source from the transmit interface:

```
RP/0/RSP0/CPU0:router(config)#controller sonet 0/1/0/1
RP/0/RSP0/CPU0:router(config-sonet)#frequency synchronization
RP/0/RSP0/CPU0:router(config-sonet-freqsync)quality transmit itu-t option 2 generation 2
RP/0/RSP0/CPU0:router(config-sonet-freqsync)#commit
```

Related Commands

Command	Description
quality itu-t option	Configures the ITU-T quality level options.

selection input

To configure an interface so that it is available as a timing source for selection by the system, use the **selection input** command in the appropriate frequency synchronization configuration mode. To remove the interface as an available timing source, use the **no** form of this command.

selection input

no selection input

Syntax Description This command has no keywords or arguments.

Command Default Disabled

Command Modes

- Controller frequency synchronization configuration
- Interface frequency synchronization configuration
- Clock interface frequency synchronization configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	ethernet-services	execute
	sonet-sdh	execute

Examples The following example shows how to configure an interface so that it is available as a timing source for selection by the system:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frequency synchronization
RP/0/RSP0/CPU0:router(config-if-freqsync)# selection input
RP/0/RSP0/CPU0:router(config-if-freqsync)# commit
```


show frequency synchronization clock-interfaces

To display the frequency synchronization information for all clock-interfaces or for a specific node, use the **show frequency synchronization clock-interfaces** command in EXEC mode.

show frequency synchronization clock-interfaces [**brief**] [**location** *node-id*]

Syntax Description

brief	Displays summary information for all clock interfaces.
location <i>node-id</i>	Displays information for a specific interface. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows the output for the **show frequency synchronization clock-interfaces** command:

```
RP/0/RSP0/CPU0:router# show frequency synchronization clock-interfaces
Node 0/0/CPU0:
=====
```

show frequency synchronization clock-interfaces

```

Clock interface Sync0 (Up):
  Assigned as input for selection
  SSM supported and enabled
  Input:
    Going down in 00:00:20
    Last received QL: OPT-II,1/PRC
    Effective QL: OPT-II,1/PRC, Priority: 200
  Output:
    Selected source: GigabitEthernet0/0/0/3
    Selected source QL: OPT-II,1/PRC
    Effective QL: DNU
  Next selection points: RP_SELECTOR

Clock interface Sync1 (Down: mode is not configured):
  Assigned as input for selection
  SSM supported and enabled
  Input:
    Restore in 00:02:00
    Last received QL: Opt-II,2/ST3
    Effective QL: Opt-II,2/ST3, Priority: 100
  Output:
    Selected source: GigabitEthernet0/0/0/3
    Selected source QL: Opt-II,2/PRC
    Effective QL: DNU
  Next selection points: RP_SYSTEM

Clock interface Internal0 (Up):
  Input:
    Default QL: OPT-II,2/ST3
    Effective QL: OPT-II,2/ST3, Priority 255
  Next selection points: RP_SELECTOR

```

**Note**

The last received QL and effective output QL are only shown if SSM is supported and enabled on the clock.

The output in brief mode is as follows:

```

RP/0/RSP0/CPU0:router# show frequency synchronization clock-interfaces brief

Flags:  > - Up           D - Down           S - Assigned for selection
        d - SSM Disabled  s - Output squelched  L - Looped back
Node 0/0/CPU0:
=====
Fl   Clock Interface   QLrcv  QLuse  Pri  QLsnd  Source
=====
>S   Sync0             PRC     PRC   100  DNU    GigabitEthernet0/0/0/3
DS   Sync1             FAILED  DNU   100  n/a    GigabitEthernet0/0/0/3
>S   Internal0         ST3     ST3   255  n/a

```

show frequency synchronization configuration-errors

To display information about any configuration inconsistencies that are detected, but that are not rejected by verification, use the **show frequency synchronization configuration-errors** command in EXEC mode.

show frequency synchronization configuration-errors [**location** *node-id*]

Syntax Description

location	Location of the card, specified by <i>node-id</i> .
<i>node-id</i>	The output can be restricted to a particular node by specifying the location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

This example shows the normal output for the **show frequency synchronization configuration-errors** command:

```
RP/0/RSP0/CPU0:router# show frequency synchronization configuration-errors
```

```
Node 0/0/CPU0:
```

```
=====
```

```
interface GigabitEthernet0/0/0/0 frequency synchronization
```

```
* Frequency synchronization is enabled on this interface, but isn't enabled globally.
```

show frequency synchronization configuration-errors

```
clock-interface Sync 0 location 0/0/CPU0 frequency synchronization quality transmit exact  
itu-t option 1 PRC  
  
* The QL that is configured is from a different QL option set than is configured globally.
```

show frequency synchronization interfaces

To show the frequency synchronization information for all interfaces or for a specific interface, use the **show frequency synchronization interfaces** command in EXEC mode.

show frequency synchronization interfaces {**brief**|**summary** [**location** *node-id*]| *type interface-path-id*}

Syntax Description

brief	Displays brief information for all interfaces.
summary [location <i>node-id</i>]	Displays summary information for all nodes or a specific node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<i>type interface-path-id</i>	Displays information for a specific interface.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows the display output for the **show frequency synchronization interfaces** command:

```
RP/0/RSP0/CPU0:router# show frequency synchronization interfaces
```

```
Interface GigabitEthernet0/0/0/0 (Up)
  Assigned as input for selection
  SSM Enabled
  Peer Up for 00:01:30, last SSM received 0.345s ago
```

show frequency synchronization interfaces

```

Peer has come up 4 times and timed out 3 times
ESMC SSMS      Total  Information      Event      DNU
Sent:          98765      98665      100      50
Received:      54321      54320      1      54300
13 malformed packets received
11 received packets were not handled
Input:
Restore in 00:03:30
Last received QL: Opt-II,2/PRC
Effective QL: DNU, Priority 100
Output:
Selected source: Sync0 [0/0/CPU0]
Selected source QL: OPT-II,2/SEC
Effective QL: OPT-II,2/SEC
Output is squelched
Next selection points: LC_INGRESS

Interface SONET0/2/0/0 (Up)
Assigned as input for selection
SSM Enabled
Input:
Restore in 00:03:30
Last received QL: Opt-II,2/PRC
Effective QL: DNU, Priority 100
Output:
Selected source: Sync0 [0/0/CPU0]
Selected source QL: OPT-II,2/SEC
Effective QL: OPT-II,2/SEC
Output is squelched
Next selection points: LC_INGRESS

```

The output in brief mode is as follows:

```

Flags:  > - Up           D - Down           S - Assigned for selection
         d - SSM Disabled x - Peer timed out  i - Init state
         s - Output squelched

Fl  Interface      Qlrcv Qluse Pri Qlsnd Source
====
>S  GigabitEthernet0/0/0/0  ST2  ST3  100 PRC  Sync0 [0/0/CPU0]
>S  GigabitEthernet0/0/0/1  PROV DNU  100 PRC  Sync0 [0/0/CPU0]
DdS GigabitEthernet0/1/0/0  n/a  ST3  50   Sync0 [0/0/CPU0]
D   SONET0/1/0/0          n/a  n/a  100 DNU  Sync0 [0/0/CPU0]
>   GigabitEthernet0/12/0/13 PRC  n/a  200 DNU  Sync0 [0/0/CPU0]

```

The output in summary mode is as follows, for each node:

```

Node 0/0/CPU0:
34 Ethernet interfaces in Synchronous mode, 10 assigned for selection, 23 with SSM enabled

ESMC SSMS      Total  Information      Event      DNU
Sent:          198765      189665      9100      650
Received:      654321      654320      91      54321

12 SONET interfaces in Synchronous mode, 5 assigned for selection, 11 with SSM enabled

```

show frequency synchronization ptp

To display whether a PTP clock is available to frequency synchronization, use the **show frequency synchronization ptp** command in EXEC mode.

show frequency synchronization ptp

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 4.2.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show frequency synchronization ptp** command shows whether a PTP clock is available to frequency synchronization or not. Options are “available” or “not available”.



Note

This is not to be confused with output from the **show frequency synchronization selection** command, which displays the status of the timing stream from the PTP source.

Task ID	Task ID	Operation
	ethernet-services	read

Examples This example shows sample output from the **show frequency synchronization ptp** command:

```
RP/0/RSP0/CPU0:router# show frequency synchronization ptp
Wed Feb 13 13:56:55.412 PST
Node 0/RSP0/CPU0
=====
PTP is available.
  Supports frequency and time-of-day
```

show frequency synchronization ptp

```
Input:
  Effective QL: Opt-II,2/PRS, Priority: 3, Time-of-day Priority 2
  Next selection points: T0-SEL-B CHASSIS-TOD-SEL

Node 0/RSP1/CPU0
=====
PTP is available.
  Supports frequency and time-of-day
  Input:
    Effective QL: Opt-II,2/PRS, Priority: 3, Time-of-day Priority 2
  Next selection points: T0-SEL-B CHASSIS-TOD-SEL
```


show frequency synchronization selection

To display the frequency synchronization selection information for all selection points or for a specific node, use the **show frequency synchronization selection** command in EXEC mode.

show frequency synchronization selection {*location node-id*}

Syntax Description

location <i>node-id</i>	Displays information for a specific node on the router. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show frequency synchronization selection** command shows the status of the timing stream from the timing source

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

This example shows the normal output for the **show frequency synchronization selection** command:

```
RP/0/RSP0/CPU0:router# show frequency synchronization selection

Node 0/0/CPU0:
=====
Selection point: LC_INGRESS (4 inputs, 2 selected)
  Last programmed 00:01:30 ago, and selection made 00:01:29 ago
  Next selection points:
    SPA scoped      : None
```

show frequency synchronization selection

```

Node scoped   : None
Chassis scoped: None
Router scoped : RP_SELECTOR RP_CLOCK_INTF_SELECTOR

S  Input                               Last Selection Point          QL  Pri  Status
== =====
1  GigabitEthernet0/0/0/3              n/a                            PRC  100 Unmonitored
2  GigabitEthernet0/0/0/0              n/a                            PRC  200 Down
   GigabitEthernet0/0/0/1              n/a                            ST2   50 Unmonitored
   GigabitEthernet0/0/0/2              n/a                            ST3  100 Unmonitored

Selection point: LC_EGRESS (2 inputs, 1 selected)
Last programmed 00:25:42 ago, and selection made 00:00:15 ago
Next selection points:
  SPA scoped   : None
  Node scoped  : None
  Chassis scoped: None
  Router scoped: None
Used for local line interface output
Used for local clock-interface output

S  Input                               Last Selection Point          QL  Pri  Status
== =====
1  GigabitEthernet0/0/0/3              0/1/CPU0 RP_SELECTOR 1        PRC  100 Ok
   GigabitEthernet0/0/0/3              0/2/CPU0 RP_SELECTOR 1        PRC  100 Ok

Node 0/1/CPU0:
=====
Selection point: RP_SELECTOR (5 inputs, 1 selected)
Last programmed 00:01:32 ago, and selection made 00:01:28 ago
Next selection points:
  SPA scoped   : None
  Node scoped  : None
  Chassis scoped: None
  Router scoped: LC_EGRESS

S  Input                               Last Selection Point          QL  Pri  Status
== =====
1  GigabitEthernet0/0/0/3              0/0/CPU0 LC_INGRESS 1        PRC  100 Ok
   Sync0 [0/1/CPU0]                   n/a                            PRC   50 LOS
   GigabitEthernet0/0/0/3              0/2/CPU0 RP_SELECTOR 1        PRC  100 Ok
   GigabitEthernet0/0/0/0              0/0/CPU0 LC_INGRESS 2        PRC  200 Ok
   Internal0 [0/1/CPU0]                n/a                            ST3  255 Ok

Selection point: RP_CLOCK_INTF_SELECTOR (4 inputs, 1 selected)
Last programmed 00:01:32 ago, and selection made 00:01:28 ago
Next selection points:
  SPA scoped   : None
  Node scoped  : None
  Chassis scoped: None
  Router scoped: None
Used for local clock-interface output

S  Input                               Last Selection Point          QL  Pri  Status
== =====
1  GigabitEthernet0/0/0/3              0/0/CPU0 LC_INGRESS 1        PRC  100 Ok
   GigabitEthernet0/0/0/3              0/2/CPU0 RP_SELECTOR 1        PRC  100 Ok
   GigabitEthernet0/0/0/0              0/0/CPU0 LC_INGRESS 2        PRC  200 Ok
   Internal0 [0/1/CPU0]                n/a                            ST3  255 Ok

Node 0/2/CPU0:
=====
Selection point: RP_SELECTOR (4 inputs, 1 selected)
Last programmed 00:28:55 ago, and selection made 00:00:20 ago
Next selection points:
  SPA scoped   : None
  Node scoped  : None
  Chassis scoped: None
  Router scoped: LC_EGRESS

S  Input                               Last Selection Point          QL  Pri  Status
== =====
1  GigabitEthernet0/0/0/3              0/1/CPU0 RP_SELECTOR 1        PRC  100 Ok
   GigabitEthernet0/0/0/3              0/0/CPU0 LC_INGRESS 1        PRC  100 Ok
   GigabitEthernet0/0/0/0              0/0/CPU0 LC_INGRESS 2        PRC  200 Ok
   Internal0 [0/2/CPU0]                n/a                            ST3  255 Ok

Selection point: RP_CLOCK_INTF_SELECTOR (4 inputs, 1 selected)

```

```

Last programmed 00:28:55 ago, and selection made 00:00:20 ago
Next selection points:
  SPA scoped      : None
  Node scoped     : None
  Router scoped   : None
  Chassis scoped  : None
Used for local clock-interface output
S  Input                               Last Selection Point          QL  Pri  Status
== =====
1  GigabitEthernet0/0/0/3              0/1/CPU0 RP_SELECTOR 1        PRC  100  Ok
   GigabitEthernet0/0/0/3              0/0/CPU0 LC_INGRESS 1        PRC  100  Ok
   GigabitEthernet0/0/0/0              0/0/CPU0 LC_INGRESS 2        PRC  200  Ok
   Internal0 [0/2/CPU0]                n/a                          ST3  255  Ok

```

This example shows output from the **show frequency synchronization selection summary** command. The timing sources which are selected in the system are displayed and are clocking one or more outputs:

```

RP/0/RSP0/CPU0:router# show frequency synchronization selection summary

GigabitEthernet0/0/0/3 is selected for 2 outputs
Sync0 [0/0/CPU0] is selected for 25 outputs

```

show frequency synchronization selection back-trace

To display the path that was followed by the clock source that is being used to drive a particular interface use the **show frequency synchronization selection back-trace** command in EXEC mode.

show frequency synchronization selection back-trace {**clock-interface sync** *port-nu*| **interface type** *interface-path-id*| **ptp location** *node-id*}

Syntax Description

clock-interface sync <i>port-nu</i>	Displays the path to the specified clock interface.
interface type <i>interface-path-id</i>	Displays the path to the specified interface.
ptp location <i>node-id</i>	Displays the path to the specified PTP clock location.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show frequency synchronization selection back-trace** command displays the trace from the specified target interface, back to the clock source being used to drive it. The display includes the selection points that are being hit along the way.

Task ID

Task ID	Operation
ethernet-services	read

Examples

This example shows sample output from the **show frequency synchronization selection back-trace** command:

```
RP/0/RSP0/CPU0:router# show frequency synchronization selection back-trace interface
GigabitEthernet0/2/0/0
```

```
Selected Source: GigabitEthernet0/3/0/0
Selection Points:
  0/2/CPU0 LC_TX_SELECT 1
  0/RSP0/CPU0 T0_SEL_B 1
  0/RSP0/CPU0 T4_SEL_A 1
  0/3/CPU0 ETH_RXMUX 1
  0/3/CPU0 EZ_RX_0_9 1
```

show frequency synchronization selection forward-trace

To display the path that was recovered from a particular interface, use the **show frequency synchronization selection forward-trace**

show frequency synchronization selection forward-trace {**clock-interface sync** *port-nu*| **interface** *type interface-path-id*| **ptp location** *node-id*}

Syntax Description

clock-interface sync <i>port- nu</i>	Displays the path to the specified clock interface.
interface <i>type interface-path-id</i>	Displays the path to the specified interface.
ptp location <i>node-id</i>	Displays the path to the specified PTP clock location.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show frequency synchronization selection forward-trace** command displays the trace from the specified interface, out to all selection points that receive the clock from the interface, and from any interfaces that are potentially being driven by this clock source.

Task ID

Task ID	Operation
ethernet-services	read

Examples

This example shows sample output from the **show frequency synchronization selection forward-trace** command:

```
RP/0/RSP0/CPU0:router# show frequency synchronization selection forward-trace interface
GigabitEthernet0/2/0/0
```

```
0/2/CPU0 EZ_RX_0_9
0/2/CPU0 ETH_RXMUX
0/RSP0/CPU0 T4_SEL_A
0/RSP0/CPU0 T0_SEL_B
0/RSP0/CPU0 CHASSIS_TOD_SEL

0/RSP0/CPU0 T4_SEL_C
Sync0 [0/0/CPU0]
Sync1 [0/0/CPU0]

0/2/CPU0 LC_TX_SELECT
GigabitEthernet 0/2/0/3

0/3/CPU0 LC_TX_SELECT
GigabitEthernet 0/3/0/0
GigabitEthernet 0/3/0/1

0/RSP0/CPU0 T4_SEL_A
0/RSP1/CPU0 T0_SEL_B
0/RSP1/CPU0 CHASSIS_TOD_SEL

0/RSP1/CPU0 T4_SEL_C
0/2/CPU0 LC_TX_SELECT
0/3/CPU0 LC_TX_SELECT
```

ssm disable

To disable Synchronization Status Messaging (SSM) on an interface, use the **ssm disable** command in the appropriate frequency synchronization configuration mode. To return SSM to the default value of enabled, use the **no** form of this command.

ssm disable

no ssm disable

Command Default

Enabled

Command Modes

Interface frequency synchronization configuration
Clock interface frequency synchronization configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For SyncE interfaces, the **ssm disable** command disables sending ESMC packets, and ignores any received ESMC packets. For SONET and clock interfaces, this command causes DNUs to be sent, and ignores any received QL value.

The received QL value that is used if SSM is disabled depends on the option:

- Option 1: DNU
- Option 2: STU



Note

If a clock interface does not support SSM, you are advised to disable SSM on the clock interface. This ensures that the clock interface output is squelched if the output QL from the clock interface would otherwise be DNU.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to disable SSM on an interface:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frequency synchronization
RP/0/RSP0/CPU0:router(config-if-freqsync)# ssm disable
RP/0/RSP0/CPU0:router(config-if-freqsync)# commit
```

time-of-day-priority

To control the order for which sources are selected for time-of-day (ToD), use the **time-of-day-priority** command in the appropriate frequency synchronization configuration mode. To revert to the default time-of-day priority, use the **no** form of this command.

time-of-day-priority *priority*

no time-of-day-priority

Syntax Description

<i>priority</i>	Priority that is used for frequency synchronization as the source for the ToD. Values can range from 1 (highest priority) to 254 (lowest priority).

Command Default

The default priority is 100.

Command Modes

SONET controller frequency synchronization
Interface frequency synchronization
Clock interface frequency synchronization

Command History

Release	Modification
Release 4.3.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **time-of-day-priority** to prioritize between different sources of the ToD source.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

This example shows how to configure the ToD priority for frequency synchronization:

```
RP/0/RSP0/CPU0:router(config)# interface Gig 0/1/0/0
RP/0/RSP0/CPU0:router(config-if)# frequency synchronization
RP/0/RSP0/CPU0:router(config-if-freqsync)# time-of-day-priority 200
```

wait-to-restore

To configure the wait-to-restore time for frequency synchronization on an interface, use the **wait-to-restore** command in the appropriate frequency synchronization configuration mode. To return the wait-to-restore time to the default value, use the **no** form of this command.

wait-to-restore *minutes*

no wait-to-restore *minutes*

Syntax Description

<i>minutes</i>	The delay time (in minutes) between when an interface comes up and when it is used for synchronization. The range is 0 to 12.

Command Default

There is a 5-minute delay for frequency synchronization after an interface comes up.

Command Modes

SONET controller frequency synchronization (config-sonet-freqsync)

Interface frequency synchronization (config-if-freqsync)

Clock interface frequency synchronization (config-clk-freqsync)

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The wait-to-restore time is in minutes. When the configuration is changed, it does not affect any timers that are currently running. Any currently running wait-to-restore timers can be cleared using the **clear frequency synchronization wait-to-restore** command.

Task ID

Task ID	Operations
ethernet-services	execute
sonet-sdh	execute

Examples

The following example shows how to configure the wait-to-restore time for frequency synchronization on an interface:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# interface gigabitethernet 0/1/0/1
RP/0/RSP0/CPU0:router(config-if)# frequency synchronization
RP/0/RSP0/CPU0:router(config-if-freqsync)# wait-to-restore 0
RP/0/RSP0/CPU0:router(config-if-freqsync)# selection input
RP/0/RSP0/CPU0:router(config-sonet-freqsync)# commit
```

Related Commands

Command	Description
clear frequency synchronization wait-to-restore	Clears the frequency synchronization wait-to-restore timer.



Hardware Redundancy and Node Administration Commands on the Cisco ASR 9000 Series Router

This module describes the commands used to manage the hardware redundancy, power, and administrative status of the nodes on a router running Cisco IOS XR software.

- [clear canbus, page 391](#)
- [clear plugin slot counts, page 393](#)
- [environment altitude, page 395](#)
- [fpd auto-upgrade, page 396](#)
- [hw-module location reload, page 398](#)
- [hw-module power location, page 400](#)
- [hw-module power disable, page 402](#)
- [hw-module profile feature, page 404](#)
- [hw-module profile scale, page 407](#)
- [hw-module reset auto, page 409](#)
- [hw-module subslot reload, page 411](#)
- [hw-module subslot shutdown, page 412](#)
- [led mode, page 414](#)
- [power budget enforcement disable, page 416](#)
- [power budget reservation, page 418](#)
- [redundancy switchover, page 420](#)
- [show canbus, page 422](#)
- [show dsc, page 424](#)
- [show environment, page 425](#)
- [show fpd package, page 430](#)
- [show hw-module fpd, page 453](#)

- [show hw-module profile, page 457](#)
- [show hw-module subslot brief, page 460](#)
- [show hw-module subslot config, page 463](#)
- [show hw-module subslot counters, page 466](#)
- [show hw-module subslot errors, page 469](#)
- [show hw-module subslot plim-subblock, page 472](#)
- [show hw-module subslot registers, page 474](#)
- [show hw-module subslot status, page 477](#)
- [show inventory, page 480](#)
- [show led, page 483](#)
- [show operational, page 485](#)
- [show platform, page 488](#)
- [show plugin slot counts, page 491](#)
- [show redundancy, page 493](#)
- [show version, page 496](#)
- [upgrade hw-module fpd, page 499](#)

clear canbus

To clear the counters used for statistics regarding the CAN bus, use the **clear canbus** command in administration EXEC mode.

clear canbus {**client-stats**| **controller-stats**| **server-stats**} **location** {**all**| *node-id*}

Syntax Description

client-stats	Clears CAN bus client statistics.
controller-stats	Clears CAN bus controller statistics.
server-stats	Clears CAN bus server statistics.
location { all <i>node-id</i> }	Clears the CAN bus statistics for a specific node or all nodes.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
sysmgr	read

Examples

The following example illustrates how to use the **clear canbus** command:

```
RP/0/RSP0/CPU0:router(admin)# clear canbus server-stats location all
```

clear canbus

Related Commands

Command	Description
show canbus	Displays the statistics regarding the CAN bus.

clear plugin slot counts

To clear the running counts of the backplane connector slot plugins, use the **clear plugin slot counts** command in administration EXEC mode.

clear plugin slot counts location *node-id*

Syntax Description

location <i>node-id</i>	Clears plugin slot counts on the designated node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **clear plugin slot counts** command can be used only if the revised backplane ID card (BPID-02) is installed. If the BPID-02 card is not installed, the following error message is displayed:

```
0/1/CPU0 slot counts 'current' ...Response error: 'ENVMON' detected the 'warning' condition
'Hardware not available'
```

Task ID

Task ID	Operation
sysmgr	execute

Examples

The following example illustrates how to use the **clear plugin slot counts** command:

```
RP/0/RSP0/CPU0:router(admin)# clear plugin slot counts location 0/FT1/SP
Fri Jan 15 10:15:55.388 pst
0/FT1/SP slot counts 'current' ... cleared
RP/0/RSP0/CPU0:router(admin)# show plugin slot counts location 0/FT1/SP
```

clear plugin slot counts

```
Fri Jan 15 10:16:15.503 pst
```

```
Backplane connector slot plugin counters
```

	Current	Cumulative
0/FT1/SP	0	14

Related Commands

Command	Description
show plugin slot counts	Displays cumulative and running counts of card insertions per slot.
show canbus	Displays the statistics regarding the CAN bus.

environment altitude

To specify the chassis altitude, so the system can adjust the fan speed to compensate for lower cooling capability at higher altitudes, use the `environment altitude` command in administration configuration mode. To remove the altitude setting, use the `no` form of this command.

environment altitude *altitude* **rack** *rack-no*

no environment altitude *altitude* **rack** *rack-no*

Syntax Description

<i>altitude</i>	Chassis location altitude in meters. Values can range from 0 to 4000.
rack <i>rack-no</i>	Specifies the rack number of the chassis.

Command Default

1800 meters

Command Modes

Administration configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
root-system	read, write

Examples

This example specifies that the chassis is located at sea level:

```
RP/0/RSP0/CPU0:router(admin-config)#environment altitude 0 rack 0
```

fpd auto-upgrade

To enable the automatic upgrade of FPD images during a software upgrade, use the **fpd auto-upgrade** command in administration configuration mode. To disable automatic FPD upgrades, use the **no** form of this command.

fpd auto-upgrade

Syntax Description This command has no keywords or arguments.

Command Default FPD images are not automatically upgraded.

Command Modes Administration configuration

Command History	Release	Modification
	Release 4.0.1	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

By default automatic upgrades of the FPD images are not performed during a software upgrade. Once the **fpd auto-upgrade** command is enabled, when you upgrade the software and an FPD upgrade is required, the FPD upgrade is done automatically before the router is rebooted. The automatic FPD upgrade works only if the FPD image is upgraded together with the mini installation PIE. For example, use the **install add** and **install activate** commands as shown here:

```
(admin)# install add comp-hfr-mini.pie hfr-fpd.pie hfr-mpls-p.pie
(admin)# install activate disk0:/comp-hfr-mini.pie disk0:/hfr-fpd.pie disk0:/hfr-mpls-p.pie
```

Task ID	Task ID	Operation
	system	read, write

Examples The following example shows how to enable automatic FPD upgrades:

```
RP/0/RSP0/CPU0:router(admin-config)# fpd auto-upgrade
```

Related Commands

Command	Description
upgrade hw-module fpd	Manually upgrades the current field-programmable device (FPD) image package on a module.
install add	Adds the contents of a PIE file to a storage device .

hw-module location reload

To reset the power-cycle or reload the hardware for a specific node, or for all nodes installed in the router, use the **hw-module location reload** command in EXEC or administration EXEC mode.

hw-module location *node-id* **reload** [*path*] **warm**

Syntax Description

<i>node-id</i>	Node whose hardware attributes you want to configure. The <i>node-id</i> is expressed in the <i>rack/slot/module</i> notation. Note Enter the show platform command to see the location of all nodes installed in the router.
<i>path</i>	TFTP or disk path to the image you want to download onto the specific node or nodes.
warm	Specifies a warm reload of the node.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To reset a specific node, use the **hw-module location reload** command in EXEC mode.

To reset a specific node or all nodes, use the **hw-module location reload** command in administration EXEC mode.



Note

Before reloading nodes, we recommend using the **cfs check** command to check the sanity of the configuration file system and attempt to recover from internal inconsistencies.

Task ID

Task ID	Operations
root-lr	execute (in EXEC mode)
sysmgr	execute (in EXEC mode and administration EXEC mode)

Examples

This example shows how to reset the hardware on a specific node from EXEC mode:

```
RP/0/RSP0/CPU0:router # hw-module location 0/1/CPU0 reload
```

This example shows how to reset the hardware on a specific node from administration EXEC mode:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin) # hw-module location 0/3/CPU0 reload
```

This example shows how to reset the hardware on a specific fabric card node:

```
RP/0/RSP0/CPU0: router (admin) # hw module location 0/fc0/SP reload
```

Related Commands

Command	Description
cfs check	Performs a check of the Configuration File System (CFS).

hw-module power location

To power on a specified line card, use the **hw-module power location** command in administration configuration mode. To power off a line card, use the **no** form of this command.

hw-module power location *node-id*

no hw-module power location *node-id*

Syntax Description

location <i>node-id</i>	Identifies the node to power on. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

Power is on for all nodes.

Command Modes

Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	The override option was removed.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **hw-module power location** command is available for line cards only; it is not available for route switch processor (RSP) cards.

Use the **show platform** command to view a summary of the nodes in the router, including status information.

By default, cards that do not have a power consumption value programmed on the manufacturing EEPROM cannot be powered up or booted. To correct an issue with such cards, that possibly is because of an incorrectly programmed EEPROM, you can use the **hw-module power** command with the **override** option.

Task ID

Task ID	Operations
root-system	read, write
root-lr	read, write

Examples

The following example shows how to power on a line card:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# configure
RP/0/RSP0/CPU0:router(admin-config)# hw-module power location 0/1/0
```

The following example shows how to disable the power-on feature for a line card:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# configure
RP/0/RSP0/CPU0:router(admin-config)# hw-module power disable location 0/SM3/SP
```

Related Commands

Command	Description
show platform	Displays information and status for each node in the system.

hw-module power disable

To disable the node power-on feature on a specific line card, use the **hw-module power disable** command in administration configuration mode. To reenable the node power-on feature on a line card, use the **no** form of this command.

hw-module power disable location *node-id*

no hw-module power disable location *node-id*

Syntax Description

location <i>node-id</i>	Identifies the node whose power-on feature you want to disable. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

Power is on for all nodes.

Command Modes

Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	The override keyword was removed.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show platform** command to view a summary of the nodes in the router, including status information.

The **hw-module power disable** command is available for line cards only; it is not available for RP cards.

Task ID

Task ID	Operations
sysmgr	read, write
root-lr	read, write

Examples

The following example shows how to disable the node power-on feature on a line card:

```
RP/0/RSP0/CPU0:router# admin
```

```
RP/0/RSP0/CPU0:router(admin)# configure
RP/0/RSP0/CPU0:router(admin-config)# hw-module power disable location 0/0/CPU0
```

The following example shows how to disable the node power-on feature on a fabric card:

```
RP/0/RSP0/CPU0:router (admin-config) # hw-module power disable location 0/fc0/SP
```

Related Commands

Command	Description
show platform	Displays information and status for each node in the system.

hw-module profile feature

To enable a feature bundle on the router, use the **hw-module profile feature** command in administration configuration mode. To disable a feature bundle, use the **no** form of this command.

hw-module profile feature {default| l2| imsg}

no hw-module profile feature {default| l2| imsg}

Syntax Description

default	Feature profile that supports all features except provider backbone bridge (PBB) except iMSG Layer 2 aggregation..
l2	Feature profile that supports PBB, but does not support IPv6, reverse-path forwarding (RPF) and netflow.
imsg	Feature profile that does not support Layer 3 VPN over IP core.

Command Default

The default feature profile is **default**.

Command Modes

Administration configuration

Command History

Release	Modification
Release 4.0.1	This command was introduced.
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you do not configure the feature profile, the default profile is active. The default feature profile does not support provider backbone bridge (PBB). If you need support for PBB, configure the L2 feature profile.

If you do not reload the line cards after configuring the feature profile, the configured profile is not active and this warning message is displayed. You must reload the affected line card so that the configured profile matches the active profile.

```
LC/0/1/CPU0:Nov 5 02:50:42.732 : prm_server[236]: Configured
'hw-module profile feature l2' does not match active 'hw-module
profile feature default'. You must reload this line card in order
to activate the configured profile on this card or you must change
the configured profile.
```

If you have configured features that are not supported in your active feature profile, this warning is displayed. You should either change the feature profile configuration, or remove the non-supported features.

```
LC/0/1/CPU0:Nov 5 02:50:42.732 : prm_server[236]: Active 'hw-module
profile feature l2' does not support IPv6, RPF, or Netflow
features. Please remove all unsupported feature configurations.
```

If you do not configure the feature profile, the default profile is active. The default profile does not support iMSG Layer 2 aggregation. If you need to configure iMSG Layer 2 aggregation, use the iMSG profile.

**Note**

When you change the profile, all Modular Multirate IP Services Engine cards in the router are reloaded.

Any configurations that existed before you change the profile that are not supported by the new profile, are disabled. You should manually remove all such configurations.

If you attempt to remove an existing feature profile configuration by using the **no** form of this command, this warning message is displayed and no action is taken. In other words, the configuration is not removed from the running configuration.

This is an invalid operation. Use 'hw-module profile feature default' to revert to a base configuration.

Task ID

Task ID	Operation
system	read, write
root-lr	read, write

Examples

This example shows how to set the feature profile to L2:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# configure
RP/0/RSP0/CPU0:router(admin-config)# hw-module profile
feature l2

Wed Dec 8 08:29:54.053 PST
L2 feature profile does NOT support the following features:
IPv6, RPF, Netflow.
In order to activate this new memory resource profile,
you must manually reboot the line cards.
RP/0/RSP0/CPU0:router(admin-config)# commit
```

Examples

This example shows how to set the feature profile to iMSG:

```
RP/0/RSP0/CPU0:router(admin-config)# hw-module profile feature imsg

Thu Sep 8 22:17:39.739 DST
iMSG feature profile does NOT support the following features: Biscuit.
Upon commit, all E5 LCs will be reloaded
```

Related Commands

Command	Description
show hw-module profile	Displays the active profiles.

hw-module profile scale

To specify a scale profile for the router, use the **hw-module profile scale** command in administration configuration mode.

hw-module profile scale {**default**|**l3**|**l3xl**}

Syntax Description

default	Scale profile applicable for deployments that require large Layer 2 MAC tables (up to 512,000 entries) and a relatively small number of Layer 3 routes (less than 512,000).
l3	Scale profile applicable for deployments that require more Layer 3 routes (up to 1 million) and smaller Layer 2 MAC tables (less than 128,000 entries).
l3xl	Scale profile applicable for deployments that require a very large number of Layer 3 routes (up to 1.3 million) and minimal Layer 2 functionality.

Command Default

default is the default scale profile

Command Modes

Administration configuration

Command History

Release	Modification
Release 3.9.1	This command was introduced.
Release 4.0.1	The l3xl keyword was introduced. This command was moved to administration configuration mode.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **hw-module profile scale** command to configure the router to perform more efficiently depending on the use of the router.

- Specify the scale profile to be **default** in situations where the router is used as a Layer 2 transport device that requires the router to support high Layer 2 scale numbers.
- Specify the scale profile to be **l3xl** in situations where the router is used primarily as a Layer 3 box to provide Layer 3 VPN services. In this case, the router needs to support a high number of Layer 3 routes.

**Note**

When you upgrade to a release that supports the **hw-module profile scale** command in administration configuration mode, the non-administration configured settings are retained and used. Once you configure the scale profile in the administration plane, it has higher priority than the non-administration plane, and it replaces the non-administration scale profile configuration.

Task ID

Task ID	Operation
system	read, write
root-lr	read, write

Examples

The following example shows how to set the scale profile to Layer 3:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# configure
RP/0/RSP0/CPU0:router(admin-config)# hw-module profile
scale 13
```

```
Tue Aug 24 23:52:51.828 UTC
In order to activate this new memory resource profile,
you must manually reboot the system.
RP/0/RSP0/CPU0:router(admin-config)# commit
```

Related Commands

Command	Description
show hw-module profile	Displays the active profiles.

hw-module reset auto

To reset a specific node, use the **hw-module reset auto** command in administration configuration mode. To disable the reset feature on a specific node, use the **no** form of this command.

hw-module reset auto [**disable**] **location** *node-id*

no hw-module reset auto [**disable**] **location** *node-id*

Syntax Description

disable	Disables the node reset feature on the specified node.
location <i>node-id</i>	Identifies the node you want to reload. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

The node reset feature is enabled for all nodes.

Command Modes

Administration configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **hw-module reset auto** command is used to reload Cisco IOS XR software on a specific node. The node reloads with the current running configuration and active software set for that node.

Task ID

Task ID	Operations
root-system	read, write
root-lr	read, write

Examples

The following example shows how to reload a node:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# configure
RP/0/RSP0/CPU0:router(admin-config)# hw-module reset auto location 0/2/CPU0
```

```
RP/0/RP0/CPU0:router# RP/0/RP0/CPU0:Apr  2 22:04:43.659 : shelfmgr[294]:  
%S HELFMGR-3-USER_RESET : Node 0/2/CPU0 is reset due to user reload request
```

hw-module subslot reload

To reload Cisco IOS XR software on a specific subslot, use the **hw-module subslot reload** command in EXEC mode.

hw-module subslot *subslot-id* **reload**

Syntax Description

<i>subslot-id</i>	Specifies the subslot to be restarted. The <i>subslot-id</i> argument is entered in the <i>rack/slot/subslot</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command reloads Cisco IOS XR software on the specified shared port adapter (SPA) and restarts the SPA interfaces. The SPA reloads with the current running configuration and active software set for the SPA.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to restart the SPA in slot 2, subslot 1:

```
RP/0/RSP0/CPU0:router# hw-module subslot 0/2/1 reload
```

Related Commands

Command	Description
hw-module subslot shutdown	Administratively shuts down a specific shared port adapter.

hw-module subslot shutdown

To administratively shut down a specific shared port adapter (SPA), use the **hw-module subslot shutdown** command in global configuration

mode. To return a SPA to the up state, use the **no** form of this command.

hw-module subslot *subslot-id* **shutdown** [**powered**| **unpowered**]

no hw-module subslot *subslot-id* **shutdown**

Syntax Description

<i>subslot-id</i>	Specifies the subslot to be shut down. The <i>subslot-id</i> argument is entered in the <i>rack/slot/subslot</i> notation.
powered	(Optional) Retains power to the specified subslot.
unpowered	(Optional) Powers down completely the specified subslot.

Command Default

Shutdown is powered if no option is specified.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command administratively shuts down the SPA in the specified subslot. Subslots that are shut down still have power but cannot load or operate Cisco IOS XR software.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows how to shut down the SPA in subslot 1 of the SPA interface processor (SIP) in slot 2:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# hw-module subslot 0/2/1 shutdown powered
```

Related Commands

Command	Description
shutdown (global)	Disables an interface (forces an interface to be administratively down).

led mode

To change the message, mode or status of a router card LED display, use the **led mode** command in administration configuration mode. To revert to the default message, mode or status, use the **no** form of this command.

led mode {default| scroll} {lock| unlock} *message* **location** *node-id*

Syntax Description

{default scroll}	Specifies the mode of the card LED display.
{lock unlock}	Specifies the status of the card LED display.
<i>message</i>	Specifies the message to display on the card LED.
location <i>node-id</i>	Specifies the node for which to configure the LED information. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

Mode: default; status: unlocked; message: according to the state of the software

Command Modes

Administration configuration

Command History

Release	Modification
Release 3.8.0	This command was introduced.

Usage Guidelines

You must be in a user group associated with a task group that includes the proper task IDs. The command reference guides include the task IDs required for each command. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show led** command to display the LED settings for a card or all cards.

Task ID

Task ID	Operation
system	read, write

Examples

This example shows how to change the message displayed on the card LED and the subsequent display in the **show led** command output:

```
RP/0/RSP0/CPU0:router# admin
```

```
RP/0/RSP0/CPU0:router(admin)# configure
RP/0/RSP0/CPU0:router(admin-config)# led mode default unlock STBY_RP location 0/rp0/cpu0
RP/0/RSP0/CPU0:router(admin-config)# end
```

Uncommitted changes found, commit them? [yes]:

```
RP/0/RSP0/CPU0:router(admin)# show led location all | i 0/RP0/CPU0
```

LOCATION	MESSAGE	MODE	STATUS
0/0/SP	IOX-RUN	DEFAULT	UNLOCKED
0/1/SP	IOX-RUN	DEFAULT	UNLOCKED
0/RP0/CPU0	STBY_RP	DEFAULT	UNLOCKED
0/RP1/CPU0	ACTV_RP	DEFAULT	UNLOCKED

Related Commands

Command	Description
show led	Displays LED information for the router, or for a specific LED location.

power budget enforcement disable

To disable the power budget calculation and allow line cards to boot in an over-budget condition, use the **power budget enforcement disable** command in administration configuration mode. To enable the power budget calculation once again, use the **no** form of this command.

power budget enforcement disable

no power budget enforcement disable

Syntax Description	This command has no keywords or arguments.

Command Default	Power budget is enforced.

Command Modes	Administration configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	root-system	read, write

Examples

The following example shows how to disable the power management calculations:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# config
RP/0/RSP0/CPU0:router(admin-config)# power budget enforcement disable
```

Related Commands

Command	Description
show environment, on page 425	Displays environmental monitor parameters for the system.

power budget reservation

To release the standby route switch processor (RSP) power budget reservation, use the **power budget reservation** command in administration configuration mode. To re-reserve the standby RSP power budget reservation, use the **no** form of this command.

power budget reservation standby-rsp disable

no power budget reservation standby-rsp disable

Syntax Description	standby-rsp disable	Disables the power budget reservation for the standby RSP.

Command Default	Power is reserved for the standby RSP.

Command Modes	Administration configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. Use the power budget reservation command to disable the power budget reservation for the standby RSP if you only have one RSP installed in the router and you need additional power for other cards. Use the show environment command with the power-supply keyword to view the available power budget on the system.

Task ID	Task ID	Operation
	root-system	read, write

Examples	The following example shows how to disable the power budget for the standby RSP:

```
RP/0/RSP1/CPU0:router(admin-config)# power budget reservation standby-rsp disable
```

Related Commands

Command	Description
show environment , on page 425	Displays environmental monitor parameters for the system.

redundancy switchover

To cause the primary (active) route processor (RP) to fail over to the redundant standby RP, use the **redundancy switchover** command in EXEC or administration EXEC mode. To disable the forced switchover, use the **no** form of this command.

redundancy switchover [*location node-id*]
no redundancy switchover [*location node-id*]

Syntax Description

location <i>node-id</i>	(Optional) Specifies the primary RP on which to force a switchover. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC
 Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **redundancy switchover** command to trigger a switchover from the primary RP to the standby RP. When the **redundancy switchover** command is issued, the running (committed) configuration is automatically saved and loaded during switchover, and the standby RP becomes the active primary RP, while the original primary RP becomes the standby RP.



Note

The **redundancy switchover** command can be used only if the standby RP is in the ready state. Use the **show redundancy** command to view the status of the RPs.

Task ID

Task ID	Operations
root-lr	read, write

Examples

The following example shows partial output for a successful redundancy switchover operation:

```
RP/0/RSP0/CPU0:router# show redundancy

Redundancy information for node 0/RP0/CPU0:
=====
Node 0/RP0/CPU0 is in ACTIVE role
Partner node (0/RP1/CPU0) is in STANDBY role
Standby node in 0/RP1/CPU0 is ready

Reload and boot info
-----
RP reloaded Tue Mar 28 09:02:26 2006: 5 hours, 41 minutes ago
Active node booted Tue Mar 28 09:02:56 2006: 5 hours, 41 minutes ago
Last switch-over Tue Mar 28 09:09:26 2006: 5 hours, 34 minutes ago
Standby node boot Tue Mar 28 09:10:37 2006: 5 hours, 33 minutes ago
Standby node last went not ready Tue Mar 28 09:25:49 2006: 5 hours, 18 minutes
go
Standby node last went ready Tue Mar 28 09:25:51 2006: 5 hours, 18 minutes ago
There has been 1 switch-over since reload
....
RP/0/RSP0/CPU0:router# redundancy switchover

Initializing DDR SDRAM...found 2048 MB
Initializing ECC on bank 0
...
Turning off data cache, using DDR for first time

Initializing NVRAM...
Testing a portion of DDR SDRAM ...done
Reading ID EEPROMs ...
Initializing SQUID ...
Initializing PCI ...

PCI0 device[1]: Vendor ID 0x10ee

Configuring MPPs ...
Configuring PCMCIA slots ...
--More--
```

If the standby RP is not in the ready state, the switchover operation is not allowed. The following example shows output for a failed redundancy switchover attempt:

```
RP/0/RSP0/CPU0:router# show redundancy

This node (0/RP0/CPU0) is in ACTIVE role
Partner node (0/RP1/CPU0) is in UNKNOWN role

RP/0/RSP0/CPU0:router# redundancy switchover

Standby card not running; failover disallowed.
```

Related Commands

Command	Description
show redundancy	Displays the status of route processor redundancy.

show canbus

To display statistics regarding the CAN bus, use the **show canbus** command in administration EXEC mode.

show canbus {**client-stats**|**controller-stats**|**server-stats**} **location** {**all**|*node-id*}

Syntax Description

client-stats	Displays CAN bus client statistics.
controller-stats	Displays CAN bus controller statistics.
server-stats	Displays CAN bus server statistics.
location { all <i>node-id</i> }	Displays the status of the CAN bus for a specific node or all nodes.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show canbus** command with the **server-stats** keyword to determine if the revised backplane ID board (BPID-02) is installed in the router.

Task ID

Task ID	Operation
sysmgr	read

Examples

The following example illustrates sample output from the **show canbus** command with the **server-stats** keyword:

```
RP/0/RSP0/CPU0:router (admin) # show canbus server-stats location all
```

```

      Slot   State Partition-A Rev Partition-B Rev Active-Partition
0/0/CPU0 Online           2.01           2.02           Partition B
0/1/CPU0 Online           2.01           2.02           Partition B
0/2/CPU0 Offline -----
0/3/CPU0 Offline -----
0/RSP0/CPU0 Online           1.01           1.02           Partition B
0/RSP1/CPU0 Online           1.01           1.02           Partition B
... snip ...
0/FT0/SP Online           4.00           4.00           Partition A
0/FT1/SP Online           4.00           4.00           Partition B
0/BPID0/SP Online          7.00           7.00           Partition B

```

Related Commands

Command	Description
clear plugin slot counts	Clears the running counts of the backplane connector slot plugins.
show plugin slot counts	Displays cumulative and running counts of card insertions per slot.

show dsc

To display the current designated shelf controller (DSC) configuration for the shelf or for the system, enter the **show dsc** command in administration EXEC mode.

show dsc

Command Default

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For more information about identifying and selecting a DSC on your router, see *Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide*.

Task ID

Task ID	Operations
system	read

Examples

The following example shows sample output from the **show dsc** command:

```
RP/0/RSP0/CPU0:PE44_ASR-9010(admin)# show dsc

Thu Jul 30 02:51:59.628 DST
NODE          ROLE
=====
0/RSP0/CPU0   DSC
```


show environment

To display environmental monitor parameters for the system, use the **show environment** command in the appropriate mode.

EXEC Mode:

show environment [**all**|**last**|**leds**|**table**|**temperatures**|**voltages**] [*node-id*]

Administration EXEC Mode:

show environment [**all**|**fans**|**last**|**leds**|**power-supply**|**table**|**temperatures**|**trace**|**voltages**] [*node-id*]

Syntax Description

all	(Optional) Displays information for all environmental monitor parameters.
fans	(Optional) Displays information about the fans.
last	(Optional) Displays the environmental statistics at the time of the last shutdown.
leds	(Optional) Displays monitor parameters for LEDs on all cards in the node.
power	(Optional) Displays power supply voltage and current information.
table	(Optional) Displays environmental parameter ranges.
temperatures	(Optional) Displays system temperature information.
voltages	(Optional) Displays system voltage information.
<i>node-id</i>	(Optional) Node whose information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

All environmental monitor parameters are displayed.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show environment** command displays information about the hardware that is installed in the system, including fans, LEDs, power supply voltage, and current information and temperatures.

Task ID

Task ID	Operations
system	read

Examples

The following example shows sample output from the **show environment** command with the **temperatures** keyword:

```
RP/0/RSP0/CPU0:router# show env temperatures

Sun Aug  8 23:18:15.153 ABC

R/S/I   Modules           Inlet
          Temperature
          (deg C)       Hotspot
                          Temperature
                          (deg C)

0/RSP0/*
  host           21.2         30.8
0/RSP1/*
  host           20.5         30.3
0/5/*
  host           23.2         30.9
```

[Table 24: show environment temperatures Field Descriptions](#), on page 426 describes the significant fields shown in the display.

Table 24: show environment temperatures Field Descriptions

Field	Description
R/S/I	Rack number, slot number, and interface for which information is displayed, in the format <i>rack/slot/module</i> .

Field	Description
Modules	Module for which temperature information is displayed.
Inlet Temperature (deg C)	Current temperature of the inlet sensor, in degrees Celsius. Note The inlet temperature corresponds to the room air temperature entering the router.
Exhaust Temperature (deg C)	Current temperature of the exhaust sensor, in degrees Celsius. Note The exhaust temperature corresponds to the air being exhausted from the router.
Hotspot Temperature (deg C)	Current temperature of the hotspot, in degrees Celsius.

```
RP/0/RSP0/CPU0:router# show env leds

Sun Aug  8 23:18:19.416 ABC
R/S/I  Modules LED          Status
0/RSP0/*
    host    Critical-Alarm  Off
    host    Major-Alarm    Off
    host    Minor-Alarm    Off
    host    ACO             Off
    host    Fail            Off
0/RSP1/*
    host    Critical-Alarm  On
    host    Major-Alarm    Off
    host    Minor-Alarm    Off
    host    ACO             Off
    host    Fail            Off
```

Table 25: [show environment leds Field Descriptions](#), on page 427 describes the significant fields shown in the display.

Table 25: show environment leds Field Descriptions

Field	Description
<i>rack_num/slot_num/*:</i>	Rack number and slot number where the node resides.
Module (host) LED status says:	Current LED status of the specified node.

The following example shows sample output from the **show environment** command the with the **power-supply** keyword:

```
RP/0/RSP0/CPU0:router(admin)# show environment power-supply

Wed Aug  4 23:38:25.033 DST
R/S/I  Modules          Capacity      Status
              (W)
0/PM0/*
    host    PM          3000          Ok
```

show environment

```

0/PM1/*      host      PM      3000      Ok
0/PM2/*      host      PM      3000      Ok

R/S/I   Power Draw      Voltage      Current
        (W)              (V)              (A)
0/PM0/* 494.9           53.8             9.2
0/PM1/* 581.0           53.8            10.8
0/PM2/*  0.0            54.1             0.0
-----
Total:  1075.9

Power Shelves Type: AC

Total Power Capacity:          9000W
Usable Power Capacity:         9000W
Supply Failure Protected Capacity: 6000W
Feed Failure Protected Capacity:  3000W
Worst Case Power Used:         2720W

Slot                                     Max Watts
----                                     -
0/1/CPU0                                350
0/RSP0/CPU0                             235
0/RSP1/CPU0                             235 (default)
0/4/CPU0                                 350
0/6/CPU0                                 350
0/FT0/SP                                 600
0/FT1/SP                                 600

Worst Case Power Available:  6280W
Supply Protected Capacity Available: 3280W
Feed Protected Capacity Available:  280W

```

This table describes the significant fields shown in the display.

Table 26: show environment power-supply Field Descriptions

Field	Description
R/S/I	Rack number, slot number, and interface for which information is displayed, in the format PEM/Power Module/* (for example 0/PM0/*).
Modules	Module for which power information is displayed.
Capacity	Power capacity of each power module in Watts.
Status	Operational status of power modules.
Power Draw	Real (measured) power drawn from each power module.
Voltage	Real (measured) power module voltage.
Current	Real (measured) power module current draw.
Power Shelves Type	AC or DC.
Total Power Capacity	Sum of the power capacity of each of the modules installed in the chassis.

Field	Description
Usable Power Capacity	Sum of the power capacity of each of the powered and operational power modules installed in the chassis.
Supply Failure Protected Capacity	Protected power capacity of the chassis with power module redundancy (ASR 9010 AC 3+3, ASR 9010 DC 5+1, ASR 9006 AC 2+1, ASR 9010 DC 2+1).
Feed Failure Protected Capacity	Feed protected power capacity. This value applies to the ASR 9010 AC system only.
Worst Case Power Used	Sum of the estimated power draw of each of the load modules in the chassis. Load modules can be fan trays, RSPs and line cards.
Worst Case Power Available	Usable power capacity minus the worst case power used.
Supply Protected Capacity Available	Supply failure protected capacity minus the worst case power used.
Feed Protected Capacity Available	Feed failure protected capacity minus the worst case power used.

show fpd package

To display which shared port adapters (SPA) and SPA interface processors (SIPs) are supported with your current Cisco IOS XR software release, which field-programmable device (FPD) image you need for each SPA and SIP, and what the minimum hardware requirements are for the SPA and SIP modules, use the **show fpd package** command in administration EXEC mode.

show fpd package

Syntax Description

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If there are multiple FPD images for your card, use the **show fpd package** command to determine which FPD image to use if you only want to upgrade a specific FPD type.

Task ID

Task ID	Operations
sysmgr	read

Examples

The following example shows sample output from the **show fpd package** command:

```
RP/0/RP1/CPU0:router(admin)# show fpd package
```

```
Thu Jul 7 04:34:48.351 DST
```

```
=====
                          Field Programmable Device Package
=====
Card Type          FPD Description          Type Subtype    SW Version    Min Req    Min Req
=====          =====          =====
A9K-40GE-B         Can Bus Ctrl (CBC) LC2         lc cbc         2.02         0.0         0.1
```

	CPUCtrl LC2	lc	cpld1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cpld2	0.06	0.0	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONA LC2	lc	rommonA	1.05	0.0	0.1
	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-4T-B	Can Bus Ctrl (CBC) LC2	lc	cbc	2.02	0.0	0.1
	CPUCtrl LC2	lc	cpld1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cpld2	0.08	0.0	0.1
	LCClkCtrl LC2	lc	cpld3	0.03	0.0	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.0	0.1
	PHY LC2	lc	fpga3	14.44	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-8T/4-B	Can Bus Ctrl (CBC) LC2	lc	cbc	2.02	0.0	0.1
	CPUCtrl LC2	lc	cpld1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cpld2	0.08	0.0	0.1
	LCClkCtrl LC2	lc	cpld3	0.03	0.0	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.0	0.1
	PHY LC2	lc	fpga3	14.44	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-2T20GE-B	Can Bus Ctrl (CBC) LC2	lc	cbc	2.02	0.0	0.1
	CPUCtrl LC2	lc	cpld1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cpld2	0.11	0.0	0.1
	LCClkCtrl LC2	lc	cpld3	0.09	0.0	0.1
	PortCtrl LC2	lc	fpga2	0.16	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-40GE-E	Can Bus Ctrl (CBC) LC2	lc	cbc	2.02	0.0	0.1
	CPUCtrl LC2	lc	cpld1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cpld2	0.06	0.0	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONA LC2	lc	rommonA	1.05	0.0	0.1

show fpd package

	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-4T-E	Can Bus Ctrl1 (CBC) LC2	lc	cbc	2.02	0.0	0.1
	CPUCtrl LC2	lc	cp1d1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cp1d2	0.08	0.0	0.1
	LCCLKCtrl LC2	lc	cp1d3	0.03	0.0	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.0	0.1
	PHY LC2	lc	fpga3	14.44	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-8T/4-E	Can Bus Ctrl1 (CBC) LC2	lc	cbc	2.02	0.0	0.1
	CPUCtrl LC2	lc	cp1d1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cp1d2	0.08	0.0	0.1
	LCCLKCtrl LC2	lc	cp1d3	0.03	0.0	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.0	0.1
	PHY LC2	lc	fpga3	14.44	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-2T20GE-E	Can Bus Ctrl1 (CBC) LC2	lc	cbc	2.02	0.0	0.1
	CPUCtrl LC2	lc	cp1d1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cp1d2	0.11	0.0	0.1
	LCCLKCtrl LC2	lc	cp1d3	0.09	0.0	0.1
	PortCtrl LC2	lc	fpga2	0.16	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-8T-B	Can Bus Ctrl1 (CBC) LC3	lc	cbc	6.02	0.0	0.1
	CPUCtrl LC3	lc	cp1d1	1.02	0.0	0.1
	PHYCtrl LC3	lc	cp1d2	0.08	0.0	0.1
	LCCLKCtrl LC3	lc	cp1d3	0.03	0.0	0.1
	DB CPUCtrl LC3	lc	cp1d4	1.03	0.0	0.1
	PortCtrl LC3	lc	fpga2	0.11	0.0	0.1
	Raven LC3	lc	fpga1	1.02	0.0	0.1
	ROMMONB LC3	lc	rommon	1.03	0.0	0.1

A9K-16T/8-B	Can Bus Ctrl1 (CBC) LC3	lc	cbc	6.02	0.0	0.1
	CPUCtrl LC3	lc	cp1d1	1.02	0.0	0.1

	PHYCtrl LC3	lc	cpld2	0.04	0.0	0.1
	LCCLKCtrl LC3	lc	cpld3	0.01	0.0	0.1
	DB CPUCtrl LC3	lc	cpld4	1.03	0.0	0.1
	PortCtrl LC3	lc	fpga2	0.01	0.0	0.1
	Raven LC3	lc	fpga1	1.02	0.0	0.1
	ROMMONB LC3	lc	rommon	1.03	0.0	0.1

A9K-16T/8-B	Can Bus Ctrl (CBC) LC3	lc	cbc	6.02	0.0	0.1
	CPUCtrl LC3	lc	cpld1	1.02	0.0	0.1
	PHYCtrl LC3	lc	cpld2	0.04	0.0	0.1
	LCCLKCtrl LC3	lc	cpld3	0.01	0.0	0.1
	DB CPUCtrl LC3	lc	cpld4	1.03	0.0	0.1
	PortCtrl LC3	lc	fpga2	0.01	0.0	0.1
	Raven LC3	lc	fpga1	1.02	0.0	0.1
	ROMMONB LC3	lc	rommon	1.03	0.0	0.1

A9K-8T-E	Can Bus Ctrl (CBC) LC3	lc	cbc	6.02	0.0	0.1
	CPUCtrl LC3	lc	cpld1	1.02	0.0	0.1
	PHYCtrl LC3	lc	cpld2	0.08	0.0	0.1
	LCCLKCtrl LC3	lc	cpld3	0.03	0.0	0.1
	CPUCtrl LC3	lc	cpld4	1.03	0.0	0.1
	PortCtrl LC3	lc	fpga2	0.11	0.0	0.1
	Raven LC3	lc	fpga1	1.02	0.0	0.1
	ROMMONB LC3	lc	rommon	1.03	0.0	0.1

A9K-16T/8-E	Can Bus Ctrl (CBC) LC3	lc	cbc	6.02	0.0	0.1
	CPUCtrl LC3	lc	cpld1	1.02	0.0	0.1
	PHYCtrl LC3	lc	cpld2	0.04	0.0	0.1
	LCCLKCtrl LC3	lc	cpld3	0.01	0.0	0.1
	DB CPUCtrl LC3	lc	cpld4	1.03	0.0	0.1
	PortCtrl LC3	lc	fpga2	0.01	0.0	0.1
	Raven LC3	lc	fpga1	1.02	0.0	0.1
	ROMMONB LC3	lc	rommon	1.03	0.0	0.1

A9K-16T/8-E	Can Bus Ctrl (CBC) LC3	lc	cbc	6.02	0.0	0.1
	CPUCtrl LC3	lc	cpld1	1.02	0.0	0.1
	PHYCtrl LC3	lc	cpld2	0.04	0.0	0.1
	LCCLKCtrl LC3	lc	cpld3	0.01	0.0	0.1

show fpd package

	DB CPUCtrl LC3	lc	cpld4	1.03	0.0	0.1
	PortCtrl LC3	lc	fpga2	0.01	0.0	0.1
	Raven LC3	lc	fpga1	1.02	0.0	0.1
	ROMMONB LC3	lc	rommon	1.03	0.0	0.1

A9K-40GE-L	Can Bus Ctrl (CBC) LC2	lc	cbc	2.02	0.0	0.1
	CPUCtrl LC2	lc	cpld1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cpld2	0.06	0.0	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-4T-L	Can Bus Ctrl (CBC) LC2	lc	cbc	2.02	0.0	0.1
	CPUCtrl LC2	lc	cpld1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cpld2	0.08	0.0	0.1
	LCCLKCtrl LC2	lc	cpld3	0.03	0.0	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.0	0.1
	Serdes Upgrade LC2	lc	fpga3	14.44	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-8T/4-L	Can Bus Ctrl (CBC) LC2	lc	cbc	2.02	0.0	0.1
	CPUCtrl LC2	lc	cpld1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cpld2	0.08	0.0	0.1
	LCCLKCtrl LC2	lc	cpld3	0.03	0.0	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.0	0.1
	Serdes Upgrade LC2	lc	fpga3	14.44	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-2T20GE-L	Can Bus Ctrl (CBC) LC2	lc	cbc	2.02	0.0	0.1
	CPUCtrl LC2	lc	cpld1	1.00	0.0	0.1
	PHYCtrl LC2	lc	cpld2	0.11	0.0	0.1
	LCCLKCtrl LC2	lc	cpld3	0.09	0.0	0.1
	Tomcat LC2	lc	fpga2	0.16	0.0	0.1
	Bridge LC2	lc	fpga1	0.43	0.0	0.1
	ROMMONB LC2	lc	rommon	1.05	0.0	0.1

A9K-8T-L	Can Bus Ctrl (CBC) LC3	lc	cbc	6.02	0.0	0.1

	CPUCtrl LC3	1c	cp1d1	1.02	0.0	0.1
	PHYCtrl LC3	1c	cp1d2	0.08	0.0	0.1
	LCC1kCtrl LC3	1c	cp1d3	0.03	0.0	0.1
	CPUCtrl LC3	1c	cp1d4	1.03	0.0	0.1
	PortCtrl LC3	1c	fpga2	0.11	0.0	0.1
	Raven LC3	1c	fpga1	1.02	0.0	0.1
	ROMMONB LC3	1c	rommon	1.03	0.0	0.1

A9K-16T/8-L	Can Bus Ctrl (CBC) LC3	1c	cbc	6.02	0.0	0.1
	CPUCtrl LC3	1c	cp1d1	1.02	0.0	0.1
	PHYCtrl LC3	1c	cp1d2	0.04	0.0	0.1
	LCC1kCtrl LC3	1c	cp1d3	0.01	0.0	0.1
	DB CPUCtrl LC3	1c	cp1d4	1.03	0.0	0.1
	PortCtrl LC3	1c	fpga2	0.01	0.0	0.1
	Raven LC3	1c	fpga1	1.02	0.0	0.1
	ROMMONB LC3	1c	rommon	1.03	0.0	0.1

A9K-SIP-700	Can Bus Ctrl (CBC) LC5	1c	cbc	3.05	0.0	0.1
	CPUCtrl LC5	1c	cp1d1	0.15	0.0	0.1
	QFPCPUBridge LC5	1c	fpga2	5.14	0.0	0.1
	NPUXBarBridge LC5	1c	fpga1	0.22	0.0	0.1
	ROMMONA LC5	1c	rommonA	1.03	0.0	0.1
	ROMMONB LC5	1c	rommon	1.03	0.0	0.1

A9K-SIP-500	Can Bus Ctrl (CBC) LC5	1c	cbc	3.05	0.0	0.1
	CPUCtrl LC5	1c	cp1d1	0.15	0.0	0.1
	QFPCPUBridge LC5	1c	fpga2	5.14	0.0	0.1
	NPUXBarBridge LC5	1c	fpga1	0.22	0.0	0.1
	ROMMONA LC5	1c	rommonA	1.03	0.0	0.1
	ROMMONB LC5	1c	rommon	1.03	0.0	0.1

A9K-RSP-2G	Can Bus Ctrl (CBC) RSP2	1c	cbc	1.02	0.0	0.1
	CPUCtrl RSP2	1c	cp1d2	1.17	0.0	0.1
	IntCtrl RSP2	1c	fpga2	1.15	0.0	0.1
	ClkCtrl RSP2	1c	fpga3	1.23	0.0	0.1
	UTI RSP2	1c	fpga4	3.08	0.0	0.1
	PUNT RSP2	1c	fpga1	1.05	0.0	0.1
	HSBI RSP2	1c	hsbi	4.00	0.0	0.1
	ROMMONA RSP2	1c	rommonA	1.05	0.0	0.1

show fpd package

	ROMMONB RSP2	lc	rommon	1.05	0.0	0.1

A9K-RSP-4G	Can Bus Ctrl (CBC) RSP2	lc	cbc	1.02	0.0	0.1
	CPUCtrl RSP2	lc	cp1d2	1.17	0.0	0.1
	IntCtrl RSP2	lc	fpga2	1.15	0.0	0.1
	ClkCtrl RSP2	lc	fpga3	1.23	0.0	0.1
	UTI RSP2	lc	fpga4	3.08	0.0	0.1
	PUNT RSP2	lc	fpga1	1.05	0.0	0.1
	HSBI RSP2	lc	hsbi	4.00	0.0	0.1
	ROMMONA RSP2	lc	rommonA	1.05	0.0	0.1
	ROMMONB RSP2	lc	rommon	1.05	0.0	0.1

A9K-RSP-8G	Can Bus Ctrl (CBC) RSP2	lc	cbc	1.02	0.0	0.1
	CPUCtrl RSP2	lc	cp1d2	1.17	0.0	0.1
	IntCtrl RSP2	lc	fpga2	1.15	0.0	0.1
	ClkCtrl RSP2	lc	fpga3	1.23	0.0	0.1
	UTI RSP2	lc	fpga4	3.08	0.0	0.1
	PUNT RSP2	lc	fpga1	1.05	0.0	0.1
	HSBI RSP2	lc	hsbi	4.00	0.0	0.1
	ROMMONA RSP2	lc	rommonA	1.05	0.0	0.1
	ROMMONB RSP2	lc	rommon	1.05	0.0	0.1

ASR-9010-FAN	Can Bus Ctrl (CBC) FAN	lc	cbc	4.00	0.0	0.1

ASR-9006-FAN	Can Bus Ctrl (CBC) FAN	lc	cbc	5.00	0.0	0.1

A9K-BPID2-10-SLOT	Can Bus Ctrl (CBC) BP2	lc	cbc	7.103	0.0	0.1

A9K-BPID2-6-SLOT	Can Bus Ctrl (CBC) BP2	lc	cbc	7.103	0.0	0.1

A9K-ISM-100	Can Bus Ctrl (CBC) LC6	lc	cbc	18.05	0.0	0.1
	CPUCtrl LC6	lc	cp1d1	0.01	0.0	0.1
	Maintenance LC6	lc	fpga2	1.00	0.0	0.1
	Amistad LC6	lc	fpga1	0.25	0.0	0.20
	ROMMONA LC6	lc	rommonA	1.02	0.0	0.1
	ROMMONB LC6	lc	rommon	1.02	0.0	0.1

A9K-8T-B	CPUCtrl LC3	lc	cp1d1	1.02	0.0	0.1
	PHYCtrl LC3	lc	cp1d2	0.08	0.0	0.1
	DB CPUCtrl LC3	lc	cp1d4	1.03	0.0	0.1

	PortCtrl LC3	lc	fpga2	0.11	0.0	0.1
	Raven LC3	lc	fpga1	1.02	0.0	0.1

A9K-8T-E	CPUCtrl LC3	lc	cp1d1	1.02	0.0	0.1
	DB CPUCtrl LC3	lc	cp1d4	1.03	0.0	0.1
	PortCtrl LC3	lc	fpga2	0.11	0.0	0.1
	Raven LC3	lc	fpga1	1.02	0.0	0.1

SPA-4XT3/E3	SPA E3 Subrate FPGA	spa	fpga2	1.04	0.0	0.0
	SPA T3 Subrate FPGA	spa	fpga3	1.04	0.0	0.0
	SPA I/O FPGA	spa	fpga1	1.01	0.0	0.0
	SPA ROMMON	spa	rommon	2.12	0.0	0.0

SPA-2XT3/E3	SPA E3 Subrate FPGA	spa	fpga2	1.04	0.0	0.0
	SPA T3 Subrate FPGA	spa	fpga3	1.04	0.0	0.0
	SPA I/O FPGA	spa	fpga1	1.01	0.0	0.0
	SPA ROMMON	spa	rommon	2.12	0.0	0.0

SPA-4XT3/DS0	SPA T3 Subrate FPGA	spa	fpga2	0.11	0.0	0.100
	SPA T3 Subrate FPGA	spa	fpga2	1.04	0.0	0.200
	SPA I/O FPGA	spa	fpga1	2.08	0.0	0.100
	SPA ROMMON	spa	rommon	2.12	0.0	0.100

SPA-2XT3/DS0	SPA T3 Subrate FPGA	spa	fpga2	0.11	0.0	0.100
	SPA T3 Subrate FPGA	spa	fpga2	1.04	0.0	0.200
	SPA I/O FPGA	spa	fpga1	2.08	0.0	0.100
	SPA ROMMON	spa	rommon	2.12	0.0	0.100

SPA-1XCHSTM1/OC3	SPA T3 Subrate FPGA	spa	fpga2	1.04	0.0	0.0
	SPA I/O FPGA	spa	fpga1	1.08	0.0	0.0
	SPA ROMMON	spa	rommon	2.12	0.0	0.0

SPA-1XCHOC48/DS3	SPA I/O FPGA	spa	fpga2	1.00	0.0	0.49
	SPA I/O FPGA	spa	fpga3	1.00	0.0	0.52
	SPA I/O FPGA	spa	fpga1	1.36	0.0	0.49
	SPA ROMMON	spa	rommon	2.02	0.0	0.49

SPA-2XCHOC12/DS0	SPA FPGA2 swv1.00	spa	fpga2	1.00	0.0	0.0
	SPA FPGA swv1.36	spa	fpga1	1.36	0.0	0.49
	SPA ROMMON swv2.2	spa	rommon	2.02	0.0	0.49

SPA-8XOC12-POS	SPA FPGA swv1.0	spa	fpga1	1.00	0.0	0.5

show fpd package

SPA-8XCHT1/E1	SPA I/O FPGA	spa fpga1	2.08	0.0	0.0
	SPA ROMMON	spa rommon	2.12	0.0	0.140
SPA-OC192POS-XFP	SPA FPGA swv1.2 hmv2	spa fpga1	1.02	0.0	2.0
SPA-2XOC48POS/RPR	SPA FPGA swv1.0	spa fpga1	1.00	0.0	0.0
SPA-8XOC3-POS	SPA FPGA swv1.0	spa fpga1	1.00	0.0	0.5
SPA-10X1GE-V2	SPA FPGA swv1.10	spa fpga1	1.10	0.0	0.0
SPA-5X1GE-V2	SPA FPGA swv1.10	spa fpga1	1.10	0.0	0.0
SPA-1X10GE-L-V2	SPA FPGA swv1.9	spa fpga1	1.09	0.0	0.0
SPA-4XOC3-POS-V2	SPA FPGA swv1.0	spa fpga1	1.00	0.0	0.5
SPA-1X10GE-WL-V2	SPA FPGA swv1.9	spa fpga1	1.09	0.0	0.0

This table describes the significant fields shown in the display:

Table 27: show fpd package Field Descriptions

Field	Description
Card Type	Module part number.
FPD Description	Description of all FPD images available for the SPA.
Type	Hardware type. Possible types can be: • spa—Shared port adapter • lc—Line card
Subtype	FPD subtype. These values are used in the upgrade hw-module fpd command to indicate a specific FPD image type to upgrade.
SW Version	FPD software version recommended for the associated module running the current Cisco IOS XR software.
Min Req SW Vers	Minimum required FPD image software version to operate the card. Version 0.0 indicates that a minimum required image was not programmed into the card.

Field	Description
Min Req HW Vers	Minimum required hardware version for the associated FPD image. A minimum hardware requirement of version 0.0 indicates that all hardware can support this FPD image version.

This example shows the output display for ASR9912 and ASR9922:

RP/0/RSP0/CPU0:router # **show fpd package**

Field Programmable Device Package								
Card Type	FPD Description	Type	Subtype	SW Version	Min Req SW Ver	Min Req HW Vers		
ASR-9912-BPID2	Can Bus Ctrl (CBC) BP2	bp	cbc	7.104	0.00	0.1		
	Can Bus Ctrl (CBC) BP2	lc	cbc	7.104	0.00	0.1		
ASR-9922-BPID2	Can Bus Ctrl (CBC) BP2	bp	cbc	7.104	0.00	0.1		
	Can Bus Ctrl (CBC) BP2	lc	cbc	7.104	0.00	0.1		
A9K-BPID2-10-SLOT	Can Bus Ctrl (CBC) BP2	bp	cbc	7.104	0.00	0.1		
	Can Bus Ctrl (CBC) BP2	lc	cbc	7.104	0.00	0.1		
A9K-BPID2-6-SLOT	Can Bus Ctrl (CBC) BP2	bp	cbc	7.104	0.00	0.1		
	Can Bus Ctrl (CBC) BP2	lc	cbc	7.104	0.00	0.1		
ASR-9922-SFC110	Can Bus Ctrl (CBC) MTFC	fc	cbc	28.03	0.00	0.1		
	Fabric Ctrl0 MTFC	fc	fpga7	1.01	0.00	0.1		
	Can Bus Ctrl (CBC) MTFC	lc	cbc	28.03	0.00	0.1		
ASR-9912-SFC110	Can Bus Ctrl (CBC) SSFC	fc	cbc	32.02	0.00	0.1		
	Fabric Ctrl0 MTFC	fc	fpga7	1.01	0.00	0.1		
ASR-9010-FAN	Can Bus Ctrl (CBC) FAN	ft	cbc	4.02	0.00	0.1		
	Can Bus Ctrl (CBC) FAN	lc	cbc	4.02	0.00	0.1		
ASR-9006-FAN	Can Bus Ctrl (CBC) FAN	ft	cbc	5.02	0.00	0.1		
	Can Bus Ctrl (CBC) FAN	lc	cbc	5.02	0.00	0.1		
ASR-9922-FAN	Can Bus Ctrl (CBC) MFAN	ft	cbc	29.10	0.00	0.1		
	Can Bus Ctrl (CBC) MFAN	lc	cbc	29.10	0.00	0.1		
ASR-9912-FAN	Can Bus Ctrl (CBC) SFAN	ft	cbc	31.03	0.00	0.1		
ASR-9010-FAN-V2	Can Bus Ctrl (CBC) FAN	ft	cbc	29.10	0.00	0.1		

show fpd package

	Can Bus Ctrl1 (CBC) FAN	lc	cbc	29.10	0.00	0.1

ASR-9001-FAN	Can Bus Ctrl1 (CBC) FAN	ft	cbc	24.114	0.00	0.1
	Can Bus Ctrl1 (CBC) FAN	lc	cbc	24.114	0.00	0.1

A9K-40GE-B	Can Bus Ctrl1 (CBC) LC2	lc	cbc	2.03	0.00	0.1
	CPUCtrl LC2	lc	cp1d1	1.00	0.00	0.1
	PHYCtrl LC2	lc	cp1d2	0.06	0.00	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.00	0.1
	Bridge LC2	lc	fpga1	0.44	0.00	0.1
	ROMMONB LC2	lc	rommon	1.05	0.00	0.1

A9K-4T-B	Can Bus Ctrl1 (CBC) LC2	lc	cbc	2.03	0.00	0.1
	CPUCtrl LC2	lc	cp1d1	1.00	0.00	0.1
	PHYCtrl LC2	lc	cp1d2	0.08	0.00	0.1
	LCCLKCtrl LC2	lc	cp1d3	0.03	0.00	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.00	0.1
	PHY LC2	lc	fpga3	14.44	0.00	0.1
	Bridge LC2	lc	fpga1	0.44	0.00	0.1
	ROMMONB LC2	lc	rommon	1.05	0.00	0.1

A9K-8T/4-B	Can Bus Ctrl1 (CBC) LC2	lc	cbc	2.03	0.00	0.1
	CPUCtrl LC2	lc	cp1d1	1.00	0.00	0.1
	PHYCtrl LC2	lc	cp1d2	0.08	0.00	0.1
	LCCLKCtrl LC2	lc	cp1d3	0.03	0.00	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.00	0.1
	PHY LC2	lc	fpga3	14.44	0.00	0.1
	Bridge LC2	lc	fpga1	0.44	0.00	0.1
	ROMMONB LC2	lc	rommon	1.05	0.00	0.1

A9K-2T20GE-B	Can Bus Ctrl1 (CBC) LC2	lc	cbc	2.03	0.00	0.1
	CPUCtrl LC2	lc	cp1d1	1.00	0.00	0.1
	PHYCtrl LC2	lc	cp1d2	0.11	0.00	0.1
	LCCLKCtrl LC2	lc	cp1d3	0.10	0.00	0.1
	PortCtrl LC2	lc	fpga2	0.16	0.00	0.1
	Bridge LC2	lc	fpga1	0.44	0.00	0.1
	ROMMONB LC2	lc	rommon	1.05	0.00	0.1

A9K-40GE-E	Can Bus Ctrl1 (CBC) LC2	lc	cbc	2.03	0.00	0.1
	CPUCtrl LC2	lc	cp1d1	1.00	0.00	0.1

	PHYCtrl LC2	1c	cp1d2	0.06	0.00	0.1
	PortCtrl LC2	1c	fpga2	0.10	0.00	0.1
	Bridge LC2	1c	fpga1	0.44	0.00	0.1
	ROMMONB LC2	1c	rommon	1.05	0.00	0.1

A9K-4T-E	Can Bus Ctrl (CBC) LC2	1c	cbc	2.03	0.00	0.1
	CPUCtrl LC2	1c	cp1d1	1.00	0.00	0.1
	PHYCtrl LC2	1c	cp1d2	0.08	0.00	0.1
	LCC1kCtrl LC2	1c	cp1d3	0.03	0.00	0.1
	PortCtrl LC2	1c	fpga2	0.10	0.00	0.1
	PHY LC2	1c	fpga3	14.44	0.00	0.1
	Bridge LC2	1c	fpga1	0.44	0.00	0.1
	ROMMONB LC2	1c	rommon	1.05	0.00	0.1

A9K-8T/4-E	Can Bus Ctrl (CBC) LC2	1c	cbc	2.03	0.00	0.1
	CPUCtrl LC2	1c	cp1d1	1.00	0.00	0.1
	PHYCtrl LC2	1c	cp1d2	0.08	0.00	0.1
	LCC1kCtrl LC2	1c	cp1d3	0.03	0.00	0.1
	PortCtrl LC2	1c	fpga2	0.10	0.00	0.1
	PHY LC2	1c	fpga3	14.44	0.00	0.1
	Bridge LC2	1c	fpga1	0.44	0.00	0.1
	ROMMONB LC2	1c	rommon	1.05	0.00	0.1

A9K-2T20GE-E	Can Bus Ctrl (CBC) LC2	1c	cbc	2.03	0.00	0.1
	CPUCtrl LC2	1c	cp1d1	1.00	0.00	0.1
	PHYCtrl LC2	1c	cp1d2	0.11	0.00	0.1
	LCC1kCtrl LC2	1c	cp1d3	0.10	0.00	0.1
	PortCtrl LC2	1c	fpga2	0.16	0.00	0.1
	Bridge LC2	1c	fpga1	0.44	0.00	0.1
	ROMMONB LC2	1c	rommon	1.05	0.00	0.1

A9K-8T-B	Can Bus Ctrl (CBC) LC3	1c	cbc	6.07	0.00	0.1
	CPUCtrl LC3	1c	cp1d1	1.02	0.00	0.1
	PHYCtrl LC3	1c	cp1d2	0.08	0.00	0.1
	LCC1kCtrl LC3	1c	cp1d3	0.03	0.00	0.1
	DB CPUCtrl LC3	1c	cp1d4	1.03	0.00	0.1
	PortCtrl LC3	1c	fpga2	0.11	0.00	0.1
	Raven LC3	1c	fpga1	1.03	0.00	0.1

show fpd package

	ROMMONB LC3	lc	rommon	1.03	0.00	0.1

A9K-16T/8-B	Can Bus Ctrl (CBC) LC3	lc	cbc	6.08	0.00	0.1
	CPUCtrl LC3	lc	cp1d1	1.02	0.00	0.1
	PHYCtrl LC3	lc	cp1d2	0.04	0.00	0.1
	LCCLkCtrl LC3	lc	cp1d3	0.01	0.00	0.1
	DB CPUCtrl LC3	lc	cp1d4	1.03	0.00	0.1
	PortCtrl LC3	lc	fpga2	0.01	0.00	0.1
	Raven LC3	lc	fpga1	1.03	0.00	0.1
	ROMMONB LC3	lc	rommon	1.03	0.00	0.1

A9K-8T-E	Can Bus Ctrl (CBC) LC3	lc	cbc	6.07	0.00	0.1
	CPUCtrl LC3	lc	cp1d1	1.02	0.00	0.1
	PHYCtrl LC3	lc	cp1d2	0.08	0.00	0.1
	LCCLkCtrl LC3	lc	cp1d3	0.03	0.00	0.1
	CPUCtrl LC3	lc	cp1d4	1.03	0.00	0.1
	PortCtrl LC3	lc	fpga2	0.11	0.00	0.1
	Raven LC3	lc	fpga1	1.03	0.00	0.1
	ROMMONB LC3	lc	rommon	1.03	0.00	0.1

A9K-16T/8-E	Can Bus Ctrl (CBC) LC3	lc	cbc	6.08	0.00	0.1
	CPUCtrl LC3	lc	cp1d1	1.02	0.00	0.1
	PHYCtrl LC3	lc	cp1d2	0.04	0.00	0.1
	LCCLkCtrl LC3	lc	cp1d3	0.01	0.00	0.1
	DB CPUCtrl LC3	lc	cp1d4	1.03	0.00	0.1
	PortCtrl LC3	lc	fpga2	0.01	0.00	0.1
	Raven LC3	lc	fpga1	1.03	0.00	0.1
	ROMMONB LC3	lc	rommon	1.03	0.00	0.1

A9K-40GE-L	Can Bus Ctrl (CBC) LC2	lc	cbc	2.03	0.00	0.1
	CPUCtrl LC2	lc	cp1d1	1.00	0.00	0.1
	PHYCtrl LC2	lc	cp1d2	0.06	0.00	0.1
	PortCtrl LC2	lc	fpga2	0.10	0.00	0.1
	Bridge LC2	lc	fpga1	0.44	0.00	0.1
	ROMMONB LC2	lc	rommon	1.05	0.00	0.1

A9K-4T-L	Can Bus Ctrl (CBC) LC2	lc	cbc	2.03	0.00	0.1
	CPUCtrl LC2	lc	cp1d1	1.00	0.00	0.1
	PHYCtrl LC2	lc	cp1d2	0.08	0.00	0.1

	LCClkCtrl LC2	1c	cp1d3	0.03	0.00	0.1
	PortCtrl LC2	1c	fpga2	0.10	0.00	0.1
	Serdes Upgrade LC2	1c	fpga3	14.44	0.00	0.1
	Bridge LC2	1c	fpga1	0.44	0.00	0.1
	ROMMONB LC2	1c	rommon	1.05	0.00	0.1

A9K-8T/4-L	Can Bus Ctrl (CBC) LC2	1c	cbc	2.03	0.00	0.1
	CPUCtrl LC2	1c	cp1d1	1.00	0.00	0.1
	PHYCtrl LC2	1c	cp1d2	0.08	0.00	0.1
	LCClkCtrl LC2	1c	cp1d3	0.03	0.00	0.1
	PortCtrl LC2	1c	fpga2	0.10	0.00	0.1
	Serdes Upgrade LC2	1c	fpga3	14.44	0.00	0.1
	Bridge LC2	1c	fpga1	0.44	0.00	0.1
	ROMMONB LC2	1c	rommon	1.05	0.00	0.1

A9K-2T20GE-L	Can Bus Ctrl (CBC) LC2	1c	cbc	2.03	0.00	0.1
	CPUCtrl LC2	1c	cp1d1	1.00	0.00	0.1
	PHYCtrl LC2	1c	cp1d2	0.11	0.00	0.1
	LCClkCtrl LC2	1c	cp1d3	0.10	0.00	0.1
	Tomcat LC2	1c	fpga2	0.16	0.00	0.1
	Bridge LC2	1c	fpga1	0.44	0.00	0.1
	ROMMONB LC2	1c	rommon	1.05	0.00	0.1

A9K-8T-L	Can Bus Ctrl (CBC) LC3	1c	cbc	6.07	0.00	0.1
	CPUCtrl LC3	1c	cp1d1	1.02	0.00	0.1
	PHYCtrl LC3	1c	cp1d2	0.08	0.00	0.1
	LCClkCtrl LC3	1c	cp1d3	0.03	0.00	0.1
	CPUCtrl LC3	1c	cp1d4	1.03	0.00	0.1
	PortCtrl LC3	1c	fpga2	0.11	0.00	0.1
	Raven LC3	1c	fpga1	1.03	0.00	0.1
	ROMMONB LC3	1c	rommon	1.03	0.00	0.1

A9K-16T/8-L	Can Bus Ctrl (CBC) LC3	1c	cbc	6.08	0.00	0.1
	CPUCtrl LC3	1c	cp1d1	1.02	0.00	0.1
	PHYCtrl LC3	1c	cp1d2	0.04	0.00	0.1
	LCClkCtrl LC3	1c	cp1d3	0.01	0.00	0.1
	DB CPUCtrl LC3	1c	cp1d4	1.03	0.00	0.1
	PortCtrl LC3	1c	fpga2	0.01	0.00	0.1
	Raven LC3	1c	fpga1	1.03	0.00	0.1

show fpd package

	ROMMONB LC3	lc	rommon	1.03	0.00	0.1

A9K-SIP-700	Can Bus Ctrl1 (CBC) LC5	lc	cbc	3.06	0.00	0.1
	CPUCtrl1 LC5	lc	cp1d1	0.15	0.00	0.1
	QFPCPUBridge LC5	lc	fpga2	5.14	0.00	0.1
	NPUXBarBridge LC5	lc	fpga1	0.23	0.00	0.1
	ROMMONB LC5	lc	rommon	1.04	0.00	0.1

A9K-SIP-500	Can Bus Ctrl1 (CBC) LC5	lc	cbc	3.06	0.00	0.1
	CPUCtrl1 LC5	lc	cp1d1	0.15	0.00	0.1
	QFPCPUBridge LC5	lc	fpga2	5.14	0.00	0.1
	NPUXBarBridge LC5	lc	fpga1	0.23	0.00	0.1
	ROMMONB LC5	lc	rommon	1.04	0.00	0.1

A9K-SIP-700-8G	Can Bus Ctrl1 (CBC) LC5	lc	cbc	3.06	0.00	0.1
	CPUCtrl1 LC5	lc	cp1d1	0.15	0.00	0.1
	QFPCPUBridge LC5	lc	fpga2	5.14	0.00	0.1
	NPUXBarBridge LC5	lc	fpga1	0.23	0.00	0.1
	ROMMONB LC5	lc	rommon	1.35	0.00	0.1

A9K-RSP-2G	Can Bus Ctrl1 (CBC) RSP2	lc	cbc	1.03	0.00	0.1
	CPUCtrl1 RSP2	lc	cp1d2	1.18	0.00	0.1
	IntCtrl1 RSP2	lc	fpga2	1.15	0.00	0.1
	ClkCtrl1 RSP2	lc	fpga3	1.23	0.00	0.1
	UTI RSP2	lc	fpga4	3.08	0.00	0.1
	PUNT RSP2	lc	fpga1	1.05	0.00	0.1
	ROMMONB RSP2	lc	rommon	1.06	0.00	0.1

A9K-RSP-4G	Can Bus Ctrl1 (CBC) RSP2	lc	cbc	1.03	0.00	0.1
	CPUCtrl1 RSP2	lc	cp1d2	1.18	0.00	0.1
	IntCtrl1 RSP2	lc	fpga2	1.15	0.00	0.1
	ClkCtrl1 RSP2	lc	fpga3	1.23	0.00	0.1
	UTI RSP2	lc	fpga4	3.08	0.00	0.1
	PUNT RSP2	lc	fpga1	1.05	0.00	0.1
	ROMMONB RSP2	lc	rommon	1.06	0.00	0.1

A9K-RSP-8G	Can Bus Ctrl1 (CBC) RSP2	lc	cbc	1.03	0.00	0.1
	CPUCtrl1 RSP2	lc	cp1d2	1.18	0.00	0.1
	IntCtrl1 RSP2	lc	fpga2	1.15	0.00	0.1

	ClkCtrl RSP2	1c	fpga3	1.23	0.00	0.1
	UTI RSP2	1c	fpga4	3.08	0.00	0.1
	PUNT RSP2	1c	fpga1	1.05	0.00	0.1
	ROMMONB RSP2	1c	rommon	1.06	0.00	0.1

A9K-RSP440-TR	Can Bus Ctrl (CBC) RSP3	1c	cbc	16.115	0.00	0.1
	ClockCtrl0 RSP3	1c	fpga2	1.06	0.00	0.1
	UTI RSP3	1c	fpga3	4.09	0.00	0.1
	CPUCtrl RSP3	1c	fpga1	0.09	0.00	0.1
	ROMMONB RSP3	1c	rommon	0.70	0.00	0.1

A9K-RSP440-SE	Can Bus Ctrl (CBC) RSP3	1c	cbc	16.115	0.00	0.1
	ClockCtrl0 RSP3	1c	fpga2	1.06	0.00	0.1
	UTI RSP3	1c	fpga3	4.09	0.00	0.1
	CPUCtrl RSP3	1c	fpga1	0.09	0.00	0.1
	ROMMONB RSP3	1c	rommon	0.70	0.00	0.1

ASR-9922-RP-TR	Can Bus Ctrl (CBC) MTRP	1c	cbc	25.02	0.00	0.1
	Fabric Ctrl3 MTFC	1c	fpga10	1.01	0.00	0.1
	Fabric Ctrl4 MTFC	1c	fpga11	1.01	0.00	0.1
	Fabric Ctrl5 MTFC	1c	fpga12	1.01	0.00	0.1
	Fabric Ctrl6 MTFC	1c	fpga13	1.01	0.00	0.1
	CPUCtrl1	1c	fpga2	1.03	0.00	0.1
	ClkCtrl	1c	fpga3	1.03	0.00	0.1
	IntCtrl	1c	fpga4	1.03	0.00	0.1
	UTI	1c	fpga5	4.09	0.00	0.1
	Timex	1c	fpga6	0.02	0.00	0.1
	Fabric Ctrl10 MTFC	1c	fpga7	1.01	0.00	0.1
	Fabric Ctrl11 MTFC	1c	fpga8	1.01	0.00	0.1
	Fabric Ctrl12 MTFC	1c	fpga9	1.01	0.00	0.1
	CPUCtrl0	1c	fpga1	1.04	0.00	0.1
	ROMMONB MTRP	1c	rommon	5.10	0.00	0.1

ASR-9922-RP-SE	Can Bus Ctrl (CBC) MTRP	1c	cbc	25.02	0.00	0.1
	Fabric Ctrl3 MTFC	1c	fpga10	1.01	0.00	0.1
	Fabric Ctrl4 MTFC	1c	fpga11	1.01	0.00	0.1
	Fabric Ctrl5 MTFC	1c	fpga12	1.01	0.00	0.1
	Fabric Ctrl6 MTFC	1c	fpga13	1.01	0.00	0.1
	CPUCtrl1	1c	fpga2	1.03	0.00	0.1

show fpd package

	ClkCtrl	lc	fpga3	1.03	0.00	0.1
	IntCtrl	lc	fpga4	1.03	0.00	0.1
	UTI	lc	fpga5	4.09	0.00	0.1
	Timex	lc	fpga6	0.02	0.00	0.1
	Fabric Ctrl10 MTFC	lc	fpga7	1.01	0.00	0.1
	Fabric Ctrl11 MTFC	lc	fpga8	1.01	0.00	0.1
	Fabric Ctrl12 MTFC	lc	fpga9	1.01	0.00	0.1
	CPUCtrl0	lc	fpga1	1.04	0.00	0.1
	ROMMONB MTRP	lc	rommon	5.10	0.00	0.1

ASR-9900-RP-TR	Can Bus Ctrl1 (CBC) MTRP	lc	cbc	25.02	0.00	0.1
	Fabric Ctrl13 MTFC	lc	fpga10	1.01	0.00	0.1
	Fabric Ctrl14 MTFC	lc	fpga11	1.01	0.00	0.1
	Fabric Ctrl15 MTFC	lc	fpga12	1.01	0.00	0.1
	Fabric Ctrl16 MTFC	lc	fpga13	1.01	0.00	0.1
	CPUCtrl1	lc	fpga2	1.03	0.00	0.1
	ClkCtrl	lc	fpga3	1.03	0.00	0.1
	IntCtrl	lc	fpga4	1.03	0.00	0.1
	UTI	lc	fpga5	4.09	0.00	0.1
	Timex	lc	fpga6	0.02	0.00	0.1
	Fabric Ctrl10 MTFC	lc	fpga7	1.01	0.00	0.1
	Fabric Ctrl11 MTFC	lc	fpga8	1.01	0.00	0.1
	Fabric Ctrl12 MTFC	lc	fpga9	1.01	0.00	0.1
	CPUCtrl0	lc	fpga1	1.04	0.00	0.1
	ROMMONB MTRP	lc	rommon	5.10	0.00	0.1

ASR-9900-RP-SE	Can Bus Ctrl1 (CBC) MTRP	lc	cbc	25.02	0.00	0.1
	Fabric Ctrl13 MTFC	lc	fpga10	1.01	0.00	0.1
	Fabric Ctrl14 MTFC	lc	fpga11	1.01	0.00	0.1
	Fabric Ctrl15 MTFC	lc	fpga12	1.01	0.00	0.1
	Fabric Ctrl16 MTFC	lc	fpga13	1.01	0.00	0.1
	CPUCtrl1	lc	fpga2	1.03	0.00	0.1
	ClkCtrl	lc	fpga3	1.03	0.00	0.1
	IntCtrl	lc	fpga4	1.03	0.00	0.1
	UTI	lc	fpga5	4.09	0.00	0.1
	Timex	lc	fpga6	0.02	0.00	0.1
	Fabric Ctrl10 MTFC	lc	fpga7	1.01	0.00	0.1

	Fabric Ctrl11 MTFC	1c	fpga8	1.01	0.00	0.1
	Fabric Ctrl12 MTFC	1c	fpga9	1.01	0.00	0.1
	CPUCtrl0	1c	fpga1	1.04	0.00	0.1
	ROMMONB MTRP	1c	rommon	5.10	0.00	0.1

ASR9001-RP	Can Bus Ctrl (CBC) IMRP	1c	cbc	22.114	0.00	0.1
	MB CPUCtrl	1c	fpga2	1.14	0.00	0.0
	ROMMONB IM RP	1c	rommon	1.36	0.00	0.1

A9K-24x10GE-SE	Can Bus Ctrl (CBC) LC6	1c	cbc	19.109	0.00	0.0
	DBCtrl LC6	1c	fpga2	1.03	0.00	0.0
	LinkCtrl LC6	1c	fpga3	1.01	0.00	0.0
	LCCPUCtrl LC6	1c	fpga4	1.07	0.00	0.0
	ROMMONB LC6	1c	rommon	1.29	0.00	0.0

A9K-2x100GE-SE	Can Bus Ctrl (CBC) LC4	1c	cbc	21.108	0.00	0.1
	DB IO FPGA1	1c	cp1d1	1.03	0.00	0.0
	MB CPUCtrl	1c	fpga2	1.08	0.00	0.0
	PortCtrl	1c	fpga3	1.05	0.00	0.0
	Imux	1c	fpga4	1.01	0.00	0.0
	Emux	1c	fpga5	1.03	0.00	0.0
	100GIGMAC	1c	fpga6	38.00	0.00	0.0
	ROMMONB LC4	1c	rommon	1.29	0.00	0.0

A9K-MOD80-SE	Can Bus Ctrl (CBC) LC4	1c	cbc	20.115	0.00	0.1
	DB Ctrl	1c	fpga2	1.04	0.00	0.0
	MB CPUCtrl	1c	fpga4	1.05	0.00	0.0
	ROMMONB LC4	1c	rommon	1.29	0.00	0.1

A9K-MOD160-SE	Can Bus Ctrl (CBC) LC4	1c	cbc	20.115	0.00	0.1
	DB Ctrl	1c	fpga2	1.04	0.00	0.0
	MB CPUCtrl	1c	fpga4	1.05	0.00	0.0
	ROMMONB LC4	1c	rommon	1.29	0.00	0.1

A9K-24x10GE-TR	Can Bus Ctrl (CBC) LC6	1c	cbc	19.109	0.00	0.0
	DBCtrl LC6	1c	fpga2	1.03	0.00	0.0
	LinkCtrl LC6	1c	fpga3	1.01	0.00	0.0
	LCCPUCtrl LC6	1c	fpga4	1.07	0.00	0.0
	ROMMONB LC6	1c	rommon	1.29	0.00	0.0

show fpd package

A9K-2x100GE-TR	Can Bus Ctrl (CBC) LC4	lc	cbc	21.108	0.00	0.1
	DB IO FPGA1	lc	cp1d1	1.03	0.00	0.0
	MB CPUCtrl	lc	fpga2	1.08	0.00	0.0
	PortCtrl	lc	fpga3	1.05	0.00	0.0
	Imux	lc	fpga4	1.01	0.00	0.0
	Emux	lc	fpga5	1.03	0.00	0.0
	100GIGMAC	lc	fpga6	38.00	0.00	0.0
	ROMMONB LC4	lc	rommon	1.29	0.00	0.0

A9K-MOD80-TR	Can Bus Ctrl (CBC) LC4	lc	cbc	20.115	0.00	0.1
	DB Ctrl	lc	fpga2	1.04	0.00	0.0
	MB CPUCtrl	lc	fpga4	1.05	0.00	0.0
	ROMMONB LC4	lc	rommon	1.29	0.00	0.1

A9K-MOD160-TR	Can Bus Ctrl (CBC) LC4	lc	cbc	20.115	0.00	0.1
	DB Ctrl	lc	fpga2	1.04	0.00	0.0
	MB CPUCtrl	lc	fpga4	1.05	0.00	0.0
	ROMMONB LC4	lc	rommon	1.29	0.00	0.1

A9K-8T-TEST	Can Bus Ctrl (CBC) LC17	lc	cbc	17.214	0.00	0.0
	LCCPUCtrl LC6	lc	fpga4	0.03	0.00	0.0
	ROMMONB LC6	lc	rommon	1.04	0.00	0.0

A9K-36x10GE-SE	Can Bus Ctrl (CBC) LC6	lc	cbc	15.101	0.00	0.0
	DBCtrl LC6	lc	fpga2	1.01	0.00	0.0
	LinkCtrl LC6	lc	fpga3	1.00	0.00	0.0
	LCCPUCtrl LC6	lc	fpga4	1.03	0.00	0.0
	ROMMONB LC6	lc	rommon	1.29	0.00	0.0

A9K-36x10GE-TR	Can Bus Ctrl (CBC) LC6	lc	cbc	15.101	0.00	0.0
	DBCtrl LC6	lc	fpga2	1.01	0.00	0.0
	LinkCtrl LC6	lc	fpga3	1.00	0.00	0.0
	LCCPUCtrl LC6	lc	fpga4	1.03	0.00	0.0
	ROMMONB LC6	lc	rommon	1.29	0.00	0.0

A9K-1x100GE-SE	Can Bus Ctrl (CBC) LC4	lc	cbc	21.108	0.00	0.1
	DB IO FPGA1	lc	cp1d1	1.03	0.00	0.0
	MB CPUCtrl	lc	fpga2	1.08	0.00	0.0
	PortCtrl	lc	fpga3	1.05	0.00	0.0
	Imux	lc	fpga4	1.01	0.00	0.0

	Emux	1c	fpga5	1.03	0.00	0.0
	100GIGMAC	1c	fpga6	38.00	0.00	0.0
	ROMMONB LC4	1c	rommon	1.29	0.00	0.0

A9K-1x100GE-TR	Can Bus Ctrl (CBC) LC4	1c	cbc	21.108	0.00	0.1
	DB IO FPGA1	1c	cp1d1	1.03	0.00	0.0
	MB CPUCtrl	1c	fpga2	1.08	0.00	0.0
	PortCtrl	1c	fpga3	1.05	0.00	0.0
	Imux	1c	fpga4	1.01	0.00	0.0
	Emux	1c	fpga5	1.03	0.00	0.0
	100GIGMAC	1c	fpga6	38.00	0.00	0.0
	ROMMONB LC4	1c	rommon	1.29	0.00	0.0

ASR9001-LC	Can Bus Ctrl (CBC) IMLC	1c	cbc	23.114	0.00	0.1
	DB CPUCtrl	1c	fpga2	1.17	0.00	0.0
	EP Gambit	1c	fpga3	0.08	0.00	0.0
	MB CPUCtrl	1c	fpga4	2.07	0.00	0.0
	EP Rogue	1c	fpga6	1.06	0.00	0.0
	EP Sage	1c	fpga7	1.02	0.00	0.0
	ROMMONB IM LC	1c	rommon	1.36	0.00	0.1

ASR9001-LC-S	Can Bus Ctrl (CBC) IMLC	1c	cbc	23.114	0.00	0.1
	DB CPUCtrl	1c	fpga2	1.17	0.00	0.0
	EP Gambit	1c	fpga3	0.08	0.00	0.0
	MB CPUCtrl	1c	fpga4	2.07	0.00	0.0
	EP Rogue	1c	fpga6	1.06	0.00	0.0
	EP Sage	1c	fpga7	1.02	0.00	0.0
	ROMMONB IM LC	1c	rommon	1.36	0.00	0.1

A9K-ISM-100	Can Bus Ctrl (CBC) LC6	1c	cbc	18.06	0.00	0.1
	CPUCtrl LC6	1c	cp1d1	0.01	0.00	0.1
	Maintenance LC6	1c	fpga2	2.13	0.00	0.1
	Amistad LC6	1c	fpga1	0.33	0.00	0.20
	ROMMONB LC6	1c	rommon	1.02	0.00	0.1

A9K-RSP-3G	ClockCtrl0 RSP3	1c	fpga2	1.06	0.00	0.1
	UTI RSP3	1c	fpga3	4.09	0.00	0.1
	CPUCtrl RSP3	1c	fpga1	0.09	0.00	0.1
	ROMMONB RSP3	1c	rommon	0.70	0.00	0.1

show fpd package

A9K-RSP-24G	ClockCtrl0 RSP3	lc	fpga2	1.06	0.00	0.1
	UTI RSP3	lc	fpga3	4.09	0.00	0.1
	CPUCtrl RSP3	lc	fpga1	0.09	0.00	0.1
	ROMMONB RSP3	lc	rommon	0.70	0.00	0.1
SPA-4XT3/E3	SPA E3 Subrate FPGA	spa	fpga2	1.04	0.00	0.0
	SPA T3 Subrate FPGA	spa	fpga3	1.04	0.00	0.0
	SPA I/O FPGA	spa	fpga1	1.01	0.00	0.0
	SPA ROMMON	spa	rommon	2.12	0.00	0.0
SPA-4XCT3/DS0	SPA T3 Subrate FPGA	spa	fpga2	0.11	0.00	0.100
	SPA T3 Subrate FPGA	spa	fpga2	1.04	0.00	0.200
	SPA I/O FPGA	spa	fpga1	2.08	0.00	0.100
	SPA ROMMON	spa	rommon	2.12	0.00	0.100
SPA-1XCHSTM1/OC3	SPA T3 Subrate FPGA	spa	fpga2	1.04	0.00	0.0
	SPA I/O FPGA	spa	fpga1	1.08	0.00	0.0
	SPA ROMMON	spa	rommon	2.12	0.00	0.0
SPA-24CHT1-CE-ATM	SPA T3 Subrate FPGA	spa	fpga2	1.10	0.00	1.0
	SPA I/O FPGA	spa	fpga1	2.32	0.00	1.0
	SPA ROMMON	spa	rommon	1.03	0.00	1.0
SPA-2CHT3-CE-ATM	SPA T3 Subrate FPGA	spa	fpga2	1.11	0.00	1.0
	SPA I/O FPGA	spa	fpga1	2.22	0.00	1.0
	SPA ROMMON	spa	rommon	1.04	0.00	1.0
SPA-1CHOC3-CE-ATM	SPA OC3 Subrate FPGA	spa	fpga2	2.23	0.00	0.0
	SPA I/O FPGA	spa	fpga1	2.23	0.00	2.0
	SPA ROMMON	spa	rommon	1.04	0.00	0.0
SPA-1XCHOC48/DS3	SPA I/O FPGA	spa	fpga2	1.00	0.00	0.49
	SPA I/O FPGA	spa	fpga3	1.00	0.00	0.52
	SPA I/O FPGA	spa	fpga1	1.36	0.00	0.49
	SPA ROMMON	spa	rommon	2.02	0.00	0.49
SPA-2XCHOC12/DS0	SPA FPGA2 swv1.00	spa	fpga2	1.00	0.00	0.0
	SPA FPGA swv1.36	spa	fpga1	1.36	0.00	0.49
	SPA ROMMON swv2.2	spa	rommon	2.02	0.00	0.49
A9K-MPA-20X1GE	EP I/O FPGA	spa	fpga3	0.08	0.00	0.0

A9K-MPA-2X10GE	EP I/O FPGA	spa fpga6	1.06	0.00	0.0
A9K-MPA-4X10GE	EP I/O FPGA	spa fpga6	1.06	0.00	0.0
A9K-MPA-2X40GE	EP Sage	spa fpga7	1.03	0.00	0.0
A9K-MPA-1X40GE	EP Sage	spa fpga7	1.03	0.00	0.0
A9K-MPA-8X10GE	EP I/O FPGA	spa fpga8	0.07	0.00	0.0
SPA-8XOC12-POS	SPA FPGA swv1.0	spa fpga1	1.00	0.00	0.5
SPA-8XCHT1/E1	SPA I/O FPGA	spa fpga1	2.08	0.00	0.0
	SPA ROMMON	spa rommon	2.12	0.00	0.140
SPA-OC192POS-XFP	SPA FPGA swv1.2 hmv2	spa fpga1	1.02	0.00	2.0
SPA-2XOC48POS/RPR	SPA FPGA swv1.0	spa fpga1	1.00	0.00	0.0
SPA-4XOC48POS/RPR	SPA FPGA swv1.0	spa fpga1	1.00	0.00	0.0
SPA-8XOC3-POS	SPA FPGA swv1.0	spa fpga1	1.00	0.00	0.5
SPA-2XOC12-POS	SPA FPGA swv1.0	spa fpga1	1.00	0.00	0.5
SPA-4XOC12-POS	SPA FPGA swv1.0	spa fpga1	1.00	0.00	0.5
SPA-10X1GE-V2	SPA FPGA swv1.10	spa fpga1	1.10	0.00	0.0
SPA-5X1GE-V2	SPA FPGA swv1.10	spa fpga1	1.10	0.00	0.0
SPA-1X10GE-L-V2	SPA FPGA swv1.9	spa fpga1	1.09	0.00	0.0
SPA-4XOC3-POS-V2	SPA FPGA swv1.0	spa fpga1	1.00	0.00	0.5
SPA-1X10GE-WL-V2	SPA FPGA swv1.9	spa fpga1	1.09	0.00	0.0
SPA-1XOC3-ATM-V2	SPA FPGA swv1.2	spa fpga1	2.02	0.00	0.0
SPA-2XOC3-ATM-V2	SPA FPGA swv1.2	spa fpga1	2.02	0.00	0.0
SPA-3XOC3-ATM-V2	SPA FPGA swv1.2	spa fpga1	2.02	0.00	0.0
SPA-1XOC12-ATM-V2	SPA FPGA swv1.2	spa fpga1	2.02	0.00	0.0

**Note**

In the **show fpd package** command output, the “subtype” column shows the FPDs that correspond with each SPA image. To upgrade a specific FPD with the **upgrade hw-module fpd** command, replace the *fpga-type* argument with the appropriate FPD from the “subtype” column, as shown in the following example:

```
RP/0/RSP0/CPU0:router(admin)# upgrade hw-module fpd fpga2 location 0/3/1 reload
```

Related Commands

Command	Description
show hw-module fpd	Displays field-programmable device (FPD) compatibility for all modules or a specific module.
upgrade hw-module fpd	Manually upgrades the current field-programmable device (FPD) image package on a module.

show hw-module fpd

To display field-programmable device (FPD) compatibility for all modules or a specific module, use the **show hw-module fpd** command in the EXEC or administration EXE mode.

show hw-module fpd location {*node-id* | **all**}

Syntax Description

location { <i>node-id</i> all }	Specifies the location of the module. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Use the all keyword to indicate all nodes.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	Support was added for the 2-port channelized OC-12/DS0 SPA.
Release 4.3.2	Support for Back-plane identification (BPID) nodes.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sysmgr	read
root-lr	read

Examples

The following example shows how to display FPD compatibility for all modules in the router:

```
RP/0/RSP1/CPU0:router# show hw-module fpd location all
Mon Jun 29 05:38:50.332 PST
```

```
show hw-module fpd
```

		Existing Field Programmable Devices					
Location	Card Type	HW Version	Type	Subtype	Inst	Current SW Version	Upg/Dng?
0/RSP0/CPU0	A9K-RSP-4G	4.8	lc	fpga3	0	1.13	No
			lc	fpga1	0	1.5	No
			lc	fpga2	0	1.14	No
			lc	cbc	0	1.2	No
			lc	fpga4	0	1.6	No
			lc	rommon	0	1.0	No
0/RSP0/CPU0	ASR-9010-FAN	1.0	lc	cbc	1	4.0	No
0/RSP0/CPU0	ASR-9010-FAN	1.0	lc	cbc	2	4.0	No
0/1/CPU0	A9K-40GE-B	1.0	lc	fpga1	0	0.38	No
			lc	fpga2	0	0.8	No
			lc	cbc	0	2.2	No
			lc	cp1d1	0	0.15	No
			lc	rommon	0	1.0	No
0/1/CPU0	A9K-40GE-B	1.0	lc	fpga1	1	0.38	No
0/4/CPU0	A9K-8T/4-B	1.0	lc	fpga1	0	0.38	No
			lc	fpga2	0	0.10	No
			lc	cbc	0	2.2	No
			lc	cp1d2	0	0.7	No
			lc	cp1d1	0	0.15	No
			lc	cp1d3	0	0.3	No
			lc	rommon	0	1.0	No
0/4/CPU0	A9K-8T/4-B	1.0	lc	fpga3	0	14.42	No
			lc	fpga1	1	0.38	No
			lc	fpga2	0	0.10	No
			lc	cbc	0	2.2	No
			lc	cp1d2	0	0.7	No
0/6/CPU0	A9K-4T-B	1.0	lc	fpga1	0	0.38	No
			lc	fpga2	0	0.10	No
			lc	cbc	0	2.2	No
			lc	cp1d2	0	0.7	No
			lc	cp1d1	0	0.15	No
			lc	cp1d3	0	0.3	No
			lc	rommon	0	1.0	No
0/6/CPU0	A9K-4T-B	1.0	lc	fpga3	0	14.42	No
			lc	fpga1	1	0.38	No
			lc	fpga2	0	0.10	No
			lc	cbc	0	2.2	No
			lc	cp1d2	0	0.7	No

BPID nodes can be used as location to display the BPID image information:

```
RP/0/RSP0/CPU0:router# sh hw-module fpd location 0/bpid0/sp
```

		Existing Field Programmable Devices					
Location	Card Type	HW Version	Type	Subtype	Inst	Current SW Version	Upg/Dng?
0/BPID0/SP	ASR-9912-BPID2	1.0	bp	cbc	11	7.104	No

The following example shows how to display FPD compatibility for a specific module in the router:

```
RP/0/RSP1/CPU0:router# show hw-module fpd location 0/4/cpu0
```

```
Thu Nov 19 21:43:49.599 UTC
```

		Existing Field Programmable Devices					
Location	Card Type	HW Version	Type	Subtype	Inst	Current SW Version	Upg/Dng?
0/4/CPU0	A9K-SIP-700	1.13	lc	fpga1	0	0.22	No

```

lc    cbc      0      3.03    No
lc    hsbi     0      3.00    No
lc    rommon   0      1.02    No
lc    fpga2    0      5.14    No
lc    cp1d1    0      0.14    No

```

Table 28: show hw-module fpd Field Descriptions

Field	Description
Location	Location of the module in the <i>rack/slot/module</i> notation.
Card Type	Module part number.
HW Version	Hardware model version for the module.
Type	Hardware type. Can be one of the following types: • spa—Shared port adapter • lc—Line card
Subtype	FPD type. Can be one of the following types: • fabldr—Fabric downloader • fpga1—Field-programmable gate array • fpga2—Field-programmable gate array 2 • fpga3—Field-programmable gate array 3 • fpga4—Field-programmable gate array 4 • fpga5—Field-programmable gate array 5 • rommonA—Read-only memory monitor A • rommon—Read-only memory monitor B
Inst	FPD instance. The FPD instance uniquely identifies an FPD and is used by the FPD process to register an FPD.
Current SW Version	Currently running FPD image version.
Upg/Dng?	Specifies whether an FPD upgrade or downgrade is required. A downgrade is required in rare cases when the version of the FPD image has a higher major revision than the version of the FPD image in the current Cisco IOS XR software package.

 show hw-module fpd**Related Commands**

Command	Description
show fpd package	Displays which SPAs and SIPs are supported with your current Cisco IOS XR software release, which FPD image you need for each card, and what the minimum hardware requirements are for the various modules.
upgrade hw-module fpd	Manually upgrades the current field-programmable device (FPD) image package on a module.

show hw-module profile

To display the active profiles on the router, use the **show hw-module profile** command in EXEC mode.

show hw-module profile feature {all| location *node-id*}

show hw-module profile {all| feature| scale} [**location** *node-id*]

Syntax Description

all	Displays information regarding all active profiles.
feature	Displays information regarding active feature profiles.
scale	Displays information regarding active scale profiles.
location <i>node-id</i>	Displays the active profile for a particular node.

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.1	This command was introduced.
Release 4.0.1	The feature keyword was added.
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show hw-module profile** command displays only active profiles. If a profile has been configured and the line card has not be reloaded since the configuration, the profile is not active. Use the **show running-config hw-module profile** command to view configured profiles.

Task ID

Task ID	Operation
root-lr	read

Examples

This example shows sample output from the **show hw-module profiles** command with the **feature** keyword:

```
RP/0/RSP0/CPU0router0# show hw-module profile feature
```

```
Thu Dec 9 03:30:42.633 PST
```

```
Node: 0/0/CPU0:
```

```
-----  
Memory Resources for All NPs
```

```
-----  
Feature Profile: Default
```

```
Node: 0/1/CPU0:
```

```
-----  
Memory Resources for All NPs
```

```
-----  
Feature Profile: Default
```

```
Node: 0/4/CPU0:
```

```
-----  
Memory Resources for All NPs
```

```
-----  
Feature Profile: Default
```

```
Node: 0/6/CPU0:
```

```
-----  
Memory Resources for All NPs
```

```
-----  
Feature Profile: Default
```

```
RP/0/RSP0/CPU0:router# show hw-module profile feature all
```

```
Thu Sep 8 22:38:50.973 DST
```

```
-----  
BundleName      Features Not Supported
```

```
-----  
Default         iMSG  
iMsg            Biscuit
```

```
-----  
Nodeno          Active Bundle Name
```

```
-----  
0               Not Supported  
1               Default  
2               Default  
3               Default  
4               Default
```

Related Commands

Command	Description
hw-module profile feature, on page 404	Enables a feature bundle on the router.
hw-module profile scale, on page 407	Specifies a scale profile for the router.

Related Commands

Command	Description
hw-module profile feature	Enables a feature bundle on the router.
hw-module profile scale	Specifies a scale profile for the router.

show hw-module subslot brief

To display summary information related to a specified internal hardware device on a shared port adapter (SPA), use the **show hw-module subslot brief** command in EXEC mode.

show hw-module subslot [*node-id*] **brief** [*device* [*device-index* [*device-subindex*]]]

Syntax Description

<i>node-id</i>	(Optional) Location for which to display the specified information. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<i>device</i>	(Optional) Internal hardware device for which to display the specified information. Valid devices include: • analog-digital-converter—Displays analog-to-digital converter information. • c2w—Displays Cisco-to-wire bus device information. • fpga—Displays SPA field-programmable gate array information. • framer—Displays SONET framer information. (Not applicable to Ethernet SPAs.) • hdlc—Displays SPA hdlc information, where applicable. • l2-tcam—Displays SPA Layer 2 ternary content addressable memory information. (Not applicable to POS SPAs.) • mac—Displays SPA MAC information. (Not applicable to POS SPAs.) • pluggable-optics—Displays pluggable-optics module information. • power-margining—Displays power-margining device information. • sar—Displays SPA ATM SAR information. • sdcc—Displays section data communications channel device information. (Not applicable to Ethernet SPAs.) • serdes—Displays SPA serializer/deserializer information. • spi4—Displays system packet interface level 4.2 bus device information. • temperature-sensor—Displays temperature sensor information.
<i>device-index</i>	(Optional) Index of the specific device if there are multiple devices of the same type.
<i>device-subindex</i>	(Optional) Subindex of the specific device if there are multiple devices of the same device index.

Command Default

No default behavior or values

Command Modes EXEC

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You can also enter a partially qualified location specifier by using the wildcard (*) character. For example, 0/1/* would display information for all modules on slot 1 in rack 0.

Use the **show hw-module subslot brief** command to obtain summary diagnostic information about a device on an interface on the SPA.

Task ID	Task ID	Operations
	root-lr	read

Examples The following example shows sample output for the **show hw-module subslot brief** command:

```
RP/0/RSP0/CPU0:router# show hw-module subslot 0/1/0 brief

Subslot 0/1/0 brief info:
-----
SPA inserted: YES
SPA type:      4xOC3 POS SPA
SPA operational state: READY
SPA cfg admin up: YES
```

Table 29: show hw-module subslot config Field Descriptions

Field	Description
SPA inserted	Indicates if a SPA is currently detected in the subslot.
SPA type	Description of SPA including the technology type, number of ports, height of SPA (HHSPA—single height, FHSPA—double height), and optics type.
SPA operational state	Current state of the SPA module.
SPA cfg admin up	Configured state of the SPA: YES—the SPA is not shut down; NO—the SPA is shut down.

show hw-module subslot brief

show hw-module subslot config

To display information related to configuration of the specified internal hardware device on a shared port adapter (SPA), use the **show hw-module subslot config** command in EXEC mode.

show hw-module subslot [*node-id*] **config** [*device* [*device-index* [*device-subindex*]]]

Syntax Description

<i>node-id</i>	(Optional) Location for which to display the specified information. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<i>device</i>	(Optional) Internal hardware device for which to display the specified information. Valid devices include: • analog-digital-converter—Displays analog-to-digital converter information. • c2w—Displays Cisco-to-wire bus device information. • fpga—Displays SPA field-programmable gate array information. • framer—Displays SONET framer information. (Not applicable to Ethernet SPAs.) • hdlc—Displays SPA hdlc information, where applicable. • l2-tcam—Displays SPA Layer 2 ternary content addressable memory information. (Not applicable to POS SPAs.) • mac—Displays SPA MAC information. (Not applicable to POS SPAs.) • pluggable-optics—Displays pluggable-optics module information. • power-margining—Displays power-margining device information. • sar—Displays SPA ATM SAR information. • sdcc—Displays section data communications channel device information. (Not applicable to Ethernet SPAs.) • serdes—Displays SPA serializer/deserializer information. • spi4—Displays system packet interface level 4.2 bus device information. • temperature-sensor—Displays temperature sensor information.
<i>device-index</i>	(Optional) Index of the specific device if there are multiple devices of the same type.
<i>device-subindex</i>	(Optional) Subindex of the specific device if there are multiple devices of the same device index.

Command Default

No default behavior or values

Command Modes

EXEC

Release 5.0.0

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You can also enter a partially qualified location specifier by using the wildcard (*) character. For example, 0/1/* would display information for all modules on slot 1 in rack 0.

Use the **show hw-module subslot config** command to obtain diagnostic information about the configuration of an interface on the SPA.

Task ID

Task ID	Operations
root-lr	read

Examples

The following example shows sample output for the **show hw-module subslot config** command:

```
RP/0/RSP0/CPU0:router# show hw-module subslot 0/6/cpu0 config

Thu Feb 19 00:33:02.921 PST

Subslot 0/6/0 config info:
-----
SPA inserted: YES
SPA cfg admin up: YES
SPA cfg power up: YES

Subslot 0/6/1 config info:
-----
SPA inserted: YES
SPA cfg admin up: YES
SPA cfg power up: YES

Subslot 0/6/2 config info:
-----
SPA inserted: NO
SPA cfg admin up: YES
SPA cfg power up: NO

Subslot 0/6/3 config info:
-----
SPA inserted: NO
SPA cfg admin up: YES
SPA cfg power up: NO

Subslot 0/6/4 config info:
```

```
-----  
SPA inserted: NO  
SPA cfg admin up: YES  
SPA cfg power up: NO  
  
Subslot 0/6/5 config info:  
-----  
SPA inserted: NO  
SPA cfg admin up: YES  
SPA cfg power up: NO
```

Table 30: show hw-module subslot config Field Descriptions

Field	Description
SPA inserted	Indicates if a SPA is currently detected in the subslot.
SPA cfg admin up	Configured state of the SPA: YES—the SPA is not shut down; NO—the SPA is shut down.
SPA cfg power up	Indicates whether the subslot is currently configured as powered or not.

Related Commands

Command	Description
show controllers	Displays the controller type and other information.

show hw-module subslot counters

To display statistics related to the processing of internal hardware devices for a shared port adapter (SPA), use the **show hw-module subslot counters** command in EXEC mode.

show hw-module subslot [*node-id*] **counters** [*device* [*device-index* [*device-subindex*]]]

Syntax Description

<i>node-id</i>	(Optional) Location for which to display the specified information. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<i>device</i>	(Optional) Internal hardware device for which to display the specified information. Valid devices include: • analog-digital-converter—Displays analog-to-digital converter information. • c2w—Displays Cisco-to-wire bus device information. • fpga—Displays SPA field-programmable gate array information. • framer—Displays SONET framer information. (Not applicable to Ethernet SPAs.) • hdlc—Displays SPA hdlc information, where applicable. • l2-team—Displays SPA Layer 2 ternary content addressable memory information. (Not applicable to POS SPAs.) • mac—Displays SPA MAC information. (Not applicable to POS SPAs.) • pluggable-optics—Displays pluggable-optics module information. • power-margining—Displays power-margining device information. • sar—Displays SPA ATM SAR information. • sdcc—Displays section data communications channel device information. (Not applicable to Ethernet SPAs.) • serdes—Displays SPA serializer/deserializer information. • spi4—Displays system packet interface level 4.2 bus device information. • temperature-sensor—Displays temperature sensor information.
<i>device-index</i>	(Optional) Index of the specific device if there are multiple devices of the same type.
<i>device-subindex</i>	(Optional) Subindex of the specific device if there are multiple devices of the same device index.

Command Default

No default behavior or values

Command Modes EXEC

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You can also enter a partially qualified location specifier by using the wildcard (*) character. For example, 0/1/* would display information for all modules on slot 1 in rack 0.

Use the **show hw-module subslot counters** command to display statistics related to the processing by the specified internal hardware device.

Task ID	Task ID	Operations
	root-lr	read

Examples The following example shows sample output for the **show hw-module subslot counters** command:

```
RP/0/RSP0/CPU0:router# show hw-module subslot 0/1/cpu0 counters

Subslot 0/1/0 counts info:
-----
SPA inserted: YES
SPA type:      8xGE SPA
SPA operational state: READY
SPA insertion time: Wed Jan 14 11:33:24 2009
SPA last time ready: Wed Jan 14 11:33:37 2009
SPA uptime [HH:MM:SS]: 852:54:24

Subslot 0/1/1 counts info:
-----
SPA inserted: YES
SPA type:      5xGE SPA
SPA operational state: READY
SPA insertion time: Wed Jan 14 11:33:24 2009
SPA last time ready: Wed Jan 14 11:33:38 2009
SPA uptime [HH:MM:SS]: 852:54:23
--More--
```

Table 31: show hw-module subslot counters Field Descriptions

Field	Description
SPA inserted	Indicates if a SPA is currently detected in the subslot.

Field	Description
SPA type	Description of SPA including the technology type, number of ports, height of SPA (HHSPA—single height, FHSPA—double height), and optics type.
SPA operational state	Current state of the SPA module.
SPA insertion time	Time the SPA module was last physically inserted or power-cycled.
SPA last time ready	Time the SPA module last changed state to up or ready (the last time the module was loaded or reloaded).
SPA uptime	The time in service or amount of time since the module was last out of service due to a reload, power cycle, or configuration event.

The following example shows sample output for the **show hw-module subslot counters** command with the **framer** keyword:

```
RP/0/RSP0/CPU0:router# show hw-module subslot counters framer

SPA device framer index 0 subindex 0 info:

Milan Framer counters:
STREAM 0
Rx Bytes (48-bit) (#0x381fa078-0x883c): 163857232569448
Rx Good Bytes (48-bit) (#0x381fa080-0x8840): 1964924
Rx Good Packets (48-bit) (#0x381fa040-0x8820): 26234
Tx Byte Cnt Reg (48-bit) (#0x381fe070-0xa838): 9375380
Tx Good Bytes Cnt Reg (48-bit) (#0x381fe068-0xa834): 8909442
Tx Transmitted Packet Cnt Reg (48-bit) (#0x381fe040-0xa820): 114692
```


show hw-module subslot errors

To display error information about internal hardware devices for a shared port adapter (SPA), use the **show hw-module subslot errors** command in EXEC mode.

show hw-module subslot [*node-id*] **errors** [*device* [*device-index* [*device-subindex*]]]

Syntax Description

<i>node-id</i>	(Optional) Location for which to display the specified information. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<i>device</i>	(Optional) Internal hardware device for which to display the specified information. Valid devices include: • analog-digital-converter—Displays analog-to-digital converter information. • c2w—Displays Cisco-to-wire bus device information. • fpga—Displays SPA field-programmable gate array information. • framer—Displays SONET framer information. (Not applicable to Ethernet SPAs.) • hdlc—Displays SPA hdlc information, where applicable. • l2-tcam—Displays SPA Layer 2 ternary content addressable memory information. (Not applicable to POS SPAs.) • mac—Displays SPA MAC information. (Not applicable to POS SPAs.) • pluggable-optics—Displays pluggable-optics module information. • power-margining—Displays power-margining device information. • sar—Displays SPA ATM SAR information. • sdcc—Displays section data communications channel device information. (Not applicable to Ethernet SPAs.) • serdes—Displays SPA serializer/deserializer information. • spi4—Displays system packet interface level 4.2 bus device information. • temperature-sensor—Displays temperature sensor information.
<i>device-index</i>	(Optional) Index of the specific device if there are multiple devices of the same type.
<i>device-subindex</i>	(Optional) Subindex of the specific device if there are multiple devices of the same device index.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You can also enter a partially qualified location specifier by using the wildcard (*) character. For example, 0/1/* would display information for all modules on slot 1 in rack 0.

Use the **show hw-module subslot errors** command to display error information related to the specified internal hardware device on a SPA.

Task ID

Task ID	Operations
root-lr	read

Examples

The following example shows partial sample output for the **show hw-module subslot errors** command:

```
RP/0/RSP0/CPU0:router# show hw-module subslot 0/1/0 errors
```

```
Subslot 0/1/0 errors info:
```

```
-----
SPA inserted: YES
SPA type:      4xOC3 POS SPA
SPA operational state: READY
SPA last reset reason: UNKNOWN
SPA last failure reason: UNKNOWN
```

```
Subslot 0/1/1 errors info:
```

```
-----
SPA inserted: YES
SPA type:      1x10GE XFP SPA
SPA operational state: READY
SPA last reset reason: UNKNOWN
SPA last failure reason: UNKNOWN
```

```
Subslot 0/1/2 errors info:
```

```
-----
SPA inserted: NO
```

```
Subslot 0/1/3 errors info:
```

```
-----
SPA inserted: NO
```

```
Subslot 0/1/4 errors info:
```

```
-----
SPA inserted: YES
SPA type:      4xOC48 POS/RPR HHSPA
SPA operational state: READY
```

```

SPA last reset reason: UNKNOWN
SPA last failure reason: UNKNOWN

Subslot 0/1/5 errors info:
-----
SPA inserted: YES
SPA type:      8xGE SPA
SPA operational state: READY
SPA last reset reason: UNKNOWN
SPA last failure reason: UNKNOWN

--More--

```

Table 32: show hw-module subslot errors Field Descriptions

Field	Description
Subslot */*/ errors info	SPA for which error information is being displayed. The location of the SPA is expressed in the <i>rack/slot/module</i> notation.
SPA inserted	Indication if a SPA is currently detected in the subslot.
SPA type	Description of SPA including the technology type, number of ports, height of SPA (HHSPA—single-height, FHSPA—double-height), and optics type.
SPA operational state	Current operational state of the SPA module.
SPA last reset reason	Reason for the most recent reset of this SPA.
SPA last failure reason	Reason for the last failure on this SPA.

Related Commands

Command	Description
show controllers	Displays the controller type and other information.

show hw-module subslot plim-subblock

To display SPA firmware information for a shared port adapter (SPA), use the **show hw-module subslot plim-subblock** command in

EXEC

mode.

show hw-module subslot [*node-id*] **plim-subblock**

Syntax Description

<i>node-id</i>	(Optional) Location for which to display the specified information. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show hw-module subslot plim-subblock** command to display SPA firmware information, both kernel and application information, as well as heartbeat and keepalive information. The **show hw-module subslot plim-subblock** command is mainly used for debugging purposes.

Task ID

Task ID	Operations
root-lr	read

Examples

The following example shows sample output for the **show hw-module subslot plim-subblock** command:

```
RP/0/0/CPU0:router# show hw-module subslot 0/5/0 plim-subblock
```

```
Subslot 0/5/0 Plim Subblock Info:
```

```
-----
```

```
Firmware information:
```

```
SPA v4.10.1, ifs-spa_ppc_iox.elf
Application v3.44.0, spa_ct3_pat_apps_iox.tar.gz

SPA keepalive information:
Heartbeat check disabled : FALSE
Keepalive seq 372638, seen 372637, Time since last ipc keep 1s
```

Related Commands

Command	Description
show controllers	Displays the controller type and other information.

show hw-module subslot registers

To display register information about internal hardware devices for a shared port adapter (SPA), use the **show hw-module subslot registers** command in EXEC mode.

show hw-module subslot [*node-id*] **registers** [*device* [*device-index* [*device-subindex*]]]

Syntax Description

<i>node-id</i>	(Optional) Location for which to display the specified information. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<i>device</i>	(Optional) Internal hardware device for which to display the specified information. Valid devices include: • analog-digital-converter—Displays analog-to-digital converter information. • c2w—Displays Cisco-to-wire bus device information. • fpga—Displays SPA field-programmable gate array information. • framer—Displays SONET framer information. (Not applicable to Ethernet SPAs.) • hdlc—Displays SPA hdlc information, where applicable. • l2-tcam—Displays SPA Layer 2 ternary content addressable memory information. (Not applicable to POS SPAs.) • mac—Displays SPA MAC information. (Not applicable to POS SPAs.) • pluggable-optics—Displays pluggable-optics module information. • power-margining—Displays power-margining device information. • sar—Displays SPA ATM SAR information. • sdcc—Displays section data communications channel device information. (Not applicable to Ethernet SPAs.) • serdes—Displays SPA serializer/deserializer information. • spi4—Displays system packet interface level 4.2 bus device information. • temperature-sensor—Displays temperature sensor information.
<i>device-index</i>	(Optional) Index of the specific device if there are multiple devices of the same type.
<i>device-subindex</i>	(Optional) Subindex of the specific device if there are multiple devices of the same device index.

Command Default

No default behavior or values

Command Modes EXEC

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the command to display the nodes on the router.

You can also enter a partially qualified location specifier by using the wildcard (*) character. For example, 0/1/* would display information for all modules on slot 1 in rack 0.

Use the **show hw-module subslot registers** command to display register information for the specified internal hardware device on the SPA.

Task ID	Task ID	Operations
	root-lr	read

Examples The following example shows sample output for the **show hw-module subslot registers** command:

```
RP/0/RSP0/CPU0:router# show hw-module subslot 0/1/cpu0 registers

Thu Feb 19 00:38:32.908 PST

Subslot 0/1/0 registers info:
-----
SPA hardware ID : 0x0
SPA SW FPGA rev.: 0x1000A

Subslot 0/1/1 registers info:
-----
SPA hardware ID : 0x0
SPA SW FPGA rev.: 0x1000A

Subslot 0/1/2 registers info:
-----
SPA hardware ID : 0x0
SPA SW FPGA rev.: 0x1000A

Subslot 0/1/3 registers info:
-----
SPA hardware ID : 0x0
SPA SW FPGA rev.: 0x1000A

Subslot 0/1/4 registers info:
-----
SPA hardware ID : 0x0
SPA SW FPGA rev.: 0x1000A
```

show hw-module subslot registers

```
Subslot 0/1/5 registers info:
```

```
-----
```

```
SPA hardware ID : 0x0
```

```
SPA SW FPGA rev.: 0x1000A
```

Table 33: show hw-module subslot registers Field Descriptions

Field	Description
SPA hardware ID	SPA hardware identifier in hexadecimal format.
SPA SW FPGA rev.	SPA software field-programmable gate array (FPGA) revision number in hexadecimal format.

Related Commands

Command	Description
show controllers	Displays the controller type and other information.

show hw-module subslot status

To display status information about internal hardware devices for a shared port adapter (SPA), use the **show hw-module subslot status** command in EXEC mode.

show hw-module subslot [*node-id*] **status** [*device* [*device-index* [*device-subindex*]]]

Syntax Description

<i>node-id</i>	(Optional) Location for which to display the specified information. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<i>device</i>	(Optional) Internal hardware device for which to display the specified information. Valid devices include: • analog-digital-converter—Displays analog-to-digital converter information. • c2w—Displays Cisco-to-wire bus device information. • fpga—Displays SPA field-programmable gate array information. • framer—Displays SONET framer information. (Not applicable to Ethernet SPAs.) • hdlc—Displays SPA hdlc information, where applicable. • l2-tcam—Displays SPA Layer 2 ternary content addressable memory information. (Not applicable to POS SPAs.) • mac—Displays SPA MAC information. (Not applicable to POS SPAs.) • pluggable-optics—Displays pluggable-optics module information. • power-margining—Displays power-margining device information. • sar—Displays SPA ATM SAR information. • sdcc—Displays section data communications channel device information. (Not applicable to Ethernet SPAs.) • serdes—Displays SPA serializer/deserializer information. • spi4—Displays system packet interface level 4.2 bus device information. • temperature-sensor—Displays temperature sensor information.
<i>device-index</i>	(Optional) Index of the specific device if there are multiple devices of the same type.
<i>device-subindex</i>	(Optional) Subindex of the specific device if there are multiple devices of the same device index.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You can also enter a partially qualified location specifier by using the wildcard (*) character. For example, 0/1/* would display information for all modules on slot 1 in rack 0.

Use the **show hw-module subslot status** command to obtain status information about an interface on the SPA.

Task ID

Task ID	Operations
root-lr	read

Examples

The following example shows sample output for the **show hw-module subslot status** command with the **temperature-sensor** option:

```
RP/0/RSP0/CPU0:router# show hw-module subslot 0/2/CPU0 status temperature-sensor

SPA device temperature-sensor index 0 subindex 0 info:

DS1631 (0x0803c2e4) device status:
temperature = 0x1c80 (28.5 degree C)

SPA device temperature-sensor index 0 subindex 0 info:

DS1631 (0x08063bec) device status:
temperature = 0x1e00 (30.0 degree C)
```

Table 34: show hw-module subslot status Field Descriptions

Field	Description
DS1631 (0x0803c2e4) device status	Device for which the temperature status is displayed.
temperature = 0x1c80 (28.5 degree C)	Current temperature of the specified device, in hexadecimal format and degrees Celsius.

Related Commands

Command	Description
show controllers	Displays the controller type and other information.

show inventory

To retrieve and display information about all the Cisco products that are installed in the router, use the **show inventory** command in EXEC or administration EXEC mode.

EXEC Mode

show inventory [*node-id*] **all** | **location** {*node-id* | **all**} | **raw**

Administration EXEC Mode

show inventory [*node-id*] **all** | **chassis** | **fans** | **location** {*node-id* | **all**} | **power-supply** | **raw**

Syntax Description

<i>node-id</i>	(Optional) Location for which to display the specified information. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
all	(Optional) Displays inventory information for all the physical entities in the chassis.
location { <i>node-id</i> all }	(Optional) Displays inventory information for a specific node, or for all nodes in the chassis.
raw	(Optional) Displays raw information about the chassis for diagnostic purposes.
chassis	(Optional) Displays inventory information for the entire chassis.
fans	(Optional) Displays inventory information for the fans.
power-supply	(Optional) Displays inventory information for the power supply.

Command Default

All inventory information for the entire chassis is displayed.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	Support was added for the 2-port channelized OC-12/DS0 SPA.

Usage Guidelines

If a Cisco entity is not assigned a product ID (PID), that entity is not retrieved or displayed.

Enter the **show inventory** command with the **raw** keyword to display every RFC 2737 entity installed in the router, including those without a PID, unique device identifier (UDI), or other physical identification.

**Note**

The **raw** keyword is primarily intended for troubleshooting problems with the **show inventory** command itself.

If any of the Cisco products do not have an assigned PID, the output displays incorrect PIDs, and version ID (VID) and serial number (SN) elements may be missing.

For UDI compliance products, the PID, VID, and SN are stored in EEPROM and NVRAM. Use the **show inventory** command to display this information.

Task ID

Task ID	Operations
sysmgr	read

Examples

The following example shows partial sample output from the **show inventory** command with the **raw** keyword:

```
RP/0/RSP0/CPU0:router# show inventory raw

Tue Jul 28 08:49:14.080 DST
NAME: "module 0/RSP0/CPU0", DESCR: "A2K-RSP-4G-HDD="
PID: A2K-RSP-4G-HDD= , VID: VP4, SN: FOC1230803H

NAME: "module 0/RSP0/CPU0", DESCR: "RSP Card host "
PID: , VID: N/A, SN:

NAME: "temperature 0/RSP0/CPU0", DESCR: "Inlet Temperature Sensor"
PID: , VID: N/A, SN:

NAME: "temperature 0/RSP0/CPU0", DESCR: "Hot Temperature Sensor"
PID: , VID: N/A, SN:

NAME: "voltage 0/RSP0/CPU0", DESCR: "Voltage Sensor - 0.75VTT"
PID: , VID: N/A, SN:

NAME: "voltage 0/RSP0/CPU0", DESCR: "Voltage Sensor - 0.9VTT_A"
PID: , VID: N/A, SN:

NAME: "voltage 0/RSP0/CPU0", DESCR: "Voltage Sensor - 0.9VTT_B"
PID: , VID: N/A, SN:

NAME: "voltage 0/RSP0/CPU0", DESCR: "Voltage Sensor - IBV"
PID: , VID: N/A, SN:

NAME: "voltage 0/RSP0/CPU0", DESCR: "Voltage Sensor - 5.0V"
PID: , VID: N/A, SN:

NAME: "module 0/1/CPU0", DESCR: "Cisco ASR 9000 Series SPA Interface Processor-700"
PID: A9K-SIP-700 , VID: P3A, SN: FHH132800F6

NAME: "module 0/1/0" , DESCR: "10-port 1 GbE Shared Port Adapter V2"
PID: SPA-2XOC12C , VID: V02, SN: JAE1239W2AI
--More--
```

[Table 35: show inventory Field Descriptions, on page 482](#) describes the significant fields shown in the display.

Table 35: show inventory Field Descriptions

Field	Description
NAME	Hardware for which the inventory information is displayed. If you are displaying the chassis inventory, this field shows "chassis." If you are displaying raw inventory, or all inventory information for all nodes in the chassis, this field shows the node name in partially qualified format. For a node, the NAME is expressed in <i>rack/slot/module</i> notation.
DESCR	Describes the chassis or the node. Chassis descriptions provide the name of the chassis and its Gbps. Node descriptions provide the type of node and its software version.
PID	Physical model name of the chassis or node.
VID	Physical hardware revision of the chassis or node.
SN	Physical serial number for the chassis or node.

show led

To display LED information for the router, or for a specific LED location, use the **show led** command in EXEC or administration EXEC mode.

show led [**location** {*node-id* | **all**}]

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies the node for which to display LED information. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Use the all keyword to indicate all nodes.

Command Default

If no node is specified, information about all LEDs on the router is displayed.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Enter the **show platform** command to see the location of all nodes installed in the router.

Task ID

Task ID	Operations
system	read

Examples

The following example sample output from the **show led** command with the **all** keyword:

```
RP/0/RP0/CPU0:router# show led location all

Thu Jul 30 05:26:24.896 DST
  Location      Message      Mode      Status
=====
  0/RSP0/*      ACTV        DEFAULT   UNLOCKED
```

Table 36: show led location Field Descriptions

Field	Description
LOCATION	Location of the node. LOCATION is expressed in the <i>rack/slot/module</i> notation.
MESSAGE	Current message displayed by the LED.
MODE	Current operating mode of the specified node.
STATUS	Current status of the specified node.

Related Commands

Command	Description
led mode	Changes the message, mode or status of a router card LED display.

show operational

To display all operational data provided as XML schema, use the **show operational** command in EXEC or administration EXEC

mode.

show operational *mda-class* [*mda-class*] [*mda-class/naming=value*] [**descriptive**]

Syntax Description

<i>mda-class</i>	Name of the management data API (MDA) class to output. To specify a class name in hierarchy, all classes must be specified from the top of the class to the specific class name that you are interested in. MDA classes are case-sensitive. To view all available MDA classes, use the question mark (?) online help function.
descriptive	Displays more descriptive information.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	Support was added for the 2-Port Channelized OC-12/DS0 SPA.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Although the **show operational** command uses the schema database, the command displays the information in a string format like the other **show** commands. No XML related setups or knowledge is required to use the command.

Task ID

Task ID	Operations
Depends on the MDA class for which you are displaying the information	read

Examples

The following example shows sample output from the **show operational** command. Not all the output is shown.

```
RP/0/RSP0/CPU0:router# show operational BGP DefaultVRF GlobalProcessInfo descriptive
[BGP DefaultVRF GlobalProcessInfo]
InStandaloneMode: true[Standalone or Distributed mode]
RouterID: 0.0.0.0[Router ID for the local system]
ConfiguredRouterID: 0.0.0.0[Configured router ID]
LocalAS: 10[Local autonomous system #]
RestartCount: 1[No of times BGP has started]
ISRedistributeIBGPToIGPsEnabled: false[Redistribute iBGP into IGPs enabled]
IsFastExternalFalloverEnabled: true[Fast external fallover enabled]
IsBestpathMissingMEDIsWorstEnabled: false[Bestpath: Treat missing MED as worst]
.
.
.
DefaultLocalPreference: 100[Default local preference]
KeepAliveTime: 60[Default keepalive timer (seconds)]
HoldTime: 180[Default hold timer (seconds)]
GenericScanPeriod: 60[Period (in seconds) of generic scanner runs]
.
.
.
VrfIsActive: true[VRF state ]
VrfName: "default"[Name of the VRF ]
```

This example shows sample output from the **show operational** command where only the top-level MDA class is specified. Not all of the output is shown.

```
RP/0/RSP0/CPU0:router# show operational Inventory

Thu Feb 19 00:54:41.251 PST
[Inventory]
RackTable
  Rack/Number=0
  SlotTable
    Slot/Number=0
    CardTable
      Card/Number=0
      PortSlotTable
        PortSlot/Number=0
        Port
          BasicAttributes
            BasicInfo
              Description: CPU_PORT_0
              VendorType: 1.3.6.1.4.1.9.12.3.1.10
              Name: 0/0/SP/0
              IsFieldReplaceableUnit: false
              CompositeClassCode: 983040
            BasicAttributes
              BasicInfo
                Description: CE Port Slot
                VendorType: 1.3.6.1.4.1.9.12.3.1.5.115
                Name: portslot 0/0/SP/0
                IsFieldReplaceableUnit: false
                CompositeClassCode: 0
          SensorTable
            Sensor/Number=0
            BasicAttributes
              BasicInfo
                Description: Temperature Sensor
                VendorType: 1.3.6.1.4.1.9.12.3.1.8.42
                Name: 0/0/* - host - Inlet0
                CompositeClassCode: 720898
                EnvironmentalMonitorPath: /admin/oper/inventory/
                  rack/0/entity/0/entity/0/entity/0/entity/0/attrib/
            Sensor/Number=1
```

```
BasicAttributes
  BasicInfo
    Description: Temperature Sensor
    VendorType: 1.3.6.1.4.1.9.12.3.1.8.42
    Name: 0/0/* - host - Inlet1
    CompositeClassCode: 720898
    EnvironmentalMonitorPath: /admin/oper/inventory/
      rack/0/entity/0/entity/0/entity/0/entity/1/attrib/
Sensor/Number=2
BasicAttributes
  BasicInfo
    Description: Temperature Sensor
    VendorType: 1.3.6.1.4.1.9.12.3.1.8.42
    Name: 0/0/* - host - Exhaust0
    CompositeClassCode: 720898
--More--
```

show platform

To display information and status for each node in the system, use the **show platform** command in EXEC or administration EXEC mode.

show platform [*node-id*]

Syntax Description

<i>node-id</i>	(Optional) Node for which to display information. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

Status and information are displayed for all nodes in the system.

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	Support was added for the 2-Port Channelized OC-12/DS0 SPA.

Usage Guidelines

The **show platform** command provides a summary of the nodes in the system, including node type and status. Enter the **show platform** command in administration EXEC mode to display output for the entire system. Enter the **show platform** command in EXEC mode to display output for only those nodes that belong to the SDR on which the command is executed.

Task ID

Task ID	Operations
system	read (in EXEC mode)
root-system	read (in administration EXEC mode)

Examples

This example shows the sample display output for ASR9912 and ASR9922:

```
RP/0/RSP0/CPU0:router:router(admin) # show platform
Wed Jul  3 11:34:18.487 UTC
Node                               Type                               State                               Config State
-----
0/RP0/CPU0                         ASR-9922-RP-SE(Active)           IOS XR RUN                         PWR, NSHUT, MON
```

```

0/RP1/CPU0      ASR-9922-RP-TR (Standby)  IOS XR RUN      PWR, NSHUT, MON
0/FT0/SP        FAN TRAY                  READY
0/FT1/SP        FAN TRAY                  READY
0/0/CPU0        A9K-36x10GE-TR           IOS XR RUN      PWR, NSHUT, MON
0/1/CPU0        A9K-36x10GE-SE           IOS XR RUN      PWR, NSHUT, MON
0/2/CPU0        A9K-36x10GE-TR           IOS XR RUN      PWR, NSHUT, MON
0/3/CPU0        A9K-36x10GE-SE           IOS XR RUN      PWR, NSHUT, MON
0/4/CPU0        A9K-36x10GE-SE           IOS XR RUN      PWR, NSHUT, MON
0/5/CPU0        A9K-36x10GE-SE           IOS XR RUN      PWR, NSHUT, MON
0/6/CPU0        A9K-36x10GE-SE           IOS XR RUN      PWR, NSHUT, MON
0/7/CPU0        A9K-36x10GE-TR           IOS XR RUN      PWR, NSHUT, MON
0/8/CPU0        A9K-24x10GE-SE           IOS XR RUN      PWR, NSHUT, MON
0/9/CPU0        A9K-24x10GE-TR           IOS XR RUN      PWR, NSHUT, MON
0/PM0/SP        PWR-3KW-AC-V2            READY           PWR, NSHUT, MON
0/PM1/SP        PWR-3KW-AC-V2            READY           PWR, NSHUT, MON
0/PM2/SP        PWR-3KW-AC-V2            READY           PWR, NSHUT, MON
0/PM3/SP        PWR-3KW-AC-V2            READY           PWR, NSHUT, MON
0/PM4/SP        PWR-3KW-AC-V2            READY           PWR, NSHUT, MON
0/PM5/SP        PWR-3KW-AC-V2            READY           PWR, NSHUT, MON
0/FC0/SP        ASR-9912-SFC110          OK              PWR, NSHUT, MON
0/FC1/SP        ASR-9912-SFC110          OK              PWR, NSHUT, MON
0/FC2/SP        ASR-9912-SFC110          OK              PWR, NSHUT, MON
0/FC3/SP        ASR-9912-SFC110          OK              PWR, NSHUT, MON
0/FC4/SP        ASR-9912-SFC110          OK              PWR, NSHUT, MON
0/FC5/SP        ASR-9912-SFC110          OK              PWR, NSHUT, MON
0/FC6/SP        ASR-9912-SFC110          OK              PWR, NSHUT, MON

```

The following example shows sample output from the **show platform** command:

```
RP/0/RP0/CPU0:router# show platform
```

```

Thu Nov 19 21:44:49.274 UTC
Node          Type                               State          Config State
-----
0/RSP0/CPU0   A9K-RSP-4G (Active)              IOS XR RUN      PWR, NSHUT, MON
0/RSP1/CPU0   A9K-RSP-4G (Standby)            IN-RESET
0/1/CPU0      A9K-SIP-700                      IOS XR RUN      PWR, NSHUT, NMON
0/1/0         SPA-10X1GE-V2                    OK              PWR, NSHUT, MON
0/1/1         SPA-1X10GE-L-V2                  OK              PWR, NSHUT, MON
0/3/CPU0      A9K-40GE-B                       IOS XR RUN      PWR, NSHUT, MON
0/4/CPU0      A9K-SIP-700                      IOS XR RUN      PWR, NSHUT, MON
0/4/1         SPA-2XCHOC12/DS0                 OK              PWR, NSHUT, MON

```

The following is sample output for the **show platform** command with the *node-id* argument:

```
RP/0/RSP0/CPU0:router# show platform 0/1/cpu0
```

```

Mon Jul 27 22:30:04.752 DST
Node          Type                               State          Config State
-----
0/1/CPU0      A9K-40GE-B                       IOS XR RUN      PWR, NSHUT, MON

```

This table describes the significant fields shown in the display.

Table 37: show platform Field Descriptions

Field	Description
Node	Identifier of the node in the <i>rack/slot/module</i> notation.
Type	Type of node.
State	Current state of the specified node.
Config State	Current status of the specified node.

show platform

Related Commands

Command	Description
show environment	Displays environmental monitor parameters for the system.

show plugin slot counts

To display cumulative and running counts of card inserts per slot, use the **show plugin slot counts** command in administration EXEC mode.

show plugin slot counts location {all| *node-id*}

Syntax Description

location {all <i>node-id</i> }	Displays plugin slot counts on the designated node or all nodes. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show plugin slot counts** command to display the number of insertions that have been made to the router backplane for a specific line card or RSP. This command can be used only if the BPID-02 card is installed. If the BPID-02 card is not installed, the following error message is displayed:

Response error: 'ENVMON' detected the 'warning' condition 'Hardware not available'

Task ID

Task ID	Operation
sysmgr	read

Examples

This example illustrates sample output from the **show plugin slot counts** command:

```
RP/0/RSP0/CPU0:router(admin)# show plugin slot counts location all
Tue Oct  6 13:37:15.706 pst
Backplane connector slot plugin counters

0/0/CPU0      Current      Cumulative
              176          176
```

show plugin slot counts

0/1/CPU0	11	11
0/2/CPU0	0	0
0/3/CPU0	0	0
0/RSP0/CPU0	0	0
0/RSP1/CPU0	1	1
0/4/CPU0	9	9
0/5/CPU0	0	0
0/6/CPU0	12	12
0/7/CPU0	0	0
0/FT0/SP	4	4
0/FT1/SP	14	14

Related Commands

Command	Description
clear plugin slot counts	Clears the running counts of the backplane connector slot plugins.
show canbus	Displays the statistics regarding the CAN bus.

show redundancy

To display the status of route processor redundancy, use the **show redundancy** command in EXEC mode.

show redundancy [**location** {*node-id* | **all**}] [**statistics** | **summary**]

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies the node for which to display LED information. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Use the all keyword to indicate all nodes.
statistics	(Optional) Displays redundancy statistics information.
summary	(Optional) Displays a summary of all redundant node pairs in the router.

Command Default

Route processor redundancy information is displayed for all nodes in the system.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show redundancy** command to display the redundancy status of the route switch processors (RSPs). The **show redundancy** command also displays the boot and switchover history for the RSPs. To view the nonstop routing (NSR) status of the standby RSPs in the system, use the **summary** keyword.

Task ID

Task ID	Operations
system	read
basic-services	read (for statistics keyword)

Examples

The following example shows sample output from the **show redundancy** command:

```
RP/0/RSP0/CPU0:router# show redundancy location 0/rsp0/cpu0
Thu Jul 30 05:47:12.155 DST
Node 0/RSP0/CPU0 is in ACTIVE role
Node 0/RSP0/CPU0 has no valid partner

Reload and boot info
-----
A9K-RSP-4G reloaded Tue Jul 14 15:21:30 2009: 2 weeks, 1 day,
14 hours, 25 minutes ago
Active node booted Tue Jul 14 15:21:30 2009: 2 weeks, 1 day,
14 hours, 25 minutes ago

Active node reload "Cause: User initiated forced reload all"
```

Table 38: show redundancy Field Descriptions

Field	Description
Node */*/* is in XXX role	Current role of the primary route processor, where (*/*/*) is the route processor ID in the format <i>rack/slot/module</i> , and XXX is the role of the route processor (active or standby). In the example, this field shows that the node with the ID 0/RP0/CPU0 is in active role.
Partner node (*/*/*) is in XXX role	Current role of the secondary (or partner) route processor, where (*/*/*) is the route processor ID in the <i>rack/slot/module</i> format, and XXX is the role of the route processor (active or standby). In the example, this field shows that the node with the ID 0/RP1/CPU0 is in standby role.
Standby node in (*/*/*) is ready	Current state of the standby node, where (*/*/*) is the standby route processor ID. In the example, the standby node is ready.
Standby node in (*/*/*) is NSR-ready	Current state of the standby node regarding nonstop routing (NSR), where (*/*/*) is the standby route processor ID. In the example, the standby node is NSR-ready.
Reload and boot info	General overview of the active and standby route processors' reload and boot history.

Related Commands

Command	Description
redundancy switchover	Causes the primary (active) route processor (RP) to fail over to the redundant standby RP.

show version

To display the configuration of the system hardware, the software version, the names and sources of configuration files, and the boot images, use the **show version** command in EXEC mode.

show version

Syntax Description

This command has no keywords or arguments.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show version** command displays a variety of system information, including hardware and software version, router uptime, boot settings (configuration register), and active software.

Task ID

Task ID	Operations
basic-services	read

Examples

This example shows partial output from the **show version** command:

```
RP/0/RSP0/CPU0:router# show version

Tue Jul 28 05:14:13.670 DST

Cisco IOS XR Software, Version 3.9.0.14I
Copyright (c) 2009 by Cisco Systems, Inc.

ROM: System Bootstrap, Version 1.1(20090521:183759) [ASR9K ROMMON],

PE44_ASR-9010 uptime is 1 week, 6 days, 13 hours, 52 minutes
System image file is "bootflash:disk0/asr9k-os-mbi-3.9.0.14I/mbiasr9k-rp.vm"

cisco ASR9K Series (MPC8641D) processor with 4194304K bytes of memory.
MPC8641D processor at 1333MHz, Revision 2.2
```

```

2 Management Ethernet
12 TenGigE
40 GigabitEthernet
219k bytes of non-volatile configuration memory.
975M bytes of compact flash card.
33994M bytes of hard disk.
1605616k bytes of disk0: (Sector size 512 bytes).
1605616k bytes of disk1: (Sector size 512 bytes).

Configuration register on node 0/RSP0/CPU0 is 0x102
Boot device on node 0/RSP0/CPU0 is disk0:
Package active on node 0/RSP0/CPU0:
asr9k-scfclient, V 3.9.0.14I, Cisco Systems, at disk0:asr9k-scfclient-3.9.0.14I
    Built on Mon Jul 13 08:28:45 DST 2009
    By sjc-lds-208 in /auto/ioxbuild7/production/3.9.0.14I/asr9k/workspace for c4.2.1-p0

asr9k-adv-video, V 3.9.0.14I, Cisco Systems, at disk0:asr9k-adv-video-3.9.0.14I
    Built on Mon Jul 13 10:13:23 DST 2009
    By sjc-lds-208 in /auto/ioxbuild7/production/3.9.0.14I/asr9k/workspace for c4.2.1-p0

asr9k-fpd, V 3.9.0.14I, Cisco Systems, at disk0:asr9k-fpd-3.9.0.14I
    Built on Mon Jul 13 08:44:47 DST 2009
    By sjc-lds-208 in /auto/ioxbuild7/production/3.9.0.14I/asr9k/workspace for c4.2.1-p0

asr9k-diags, V 3.9.0.14I, Cisco Systems, at disk0:asr9k-diags-3.9.0.14I
    Built on Mon Jul 13 08:28:48 DST 2009
    By sjc-lds-208 in /auto/ioxbuild7/production/3.9.0.14I/asr9k/workspace for c4.2.1-p0

asr9k-k9sec, V 3.9.0.14I, Cisco Systems, at disk0:asr9k-k9sec-3.9.0.14I
    Built on Mon Jul 13 08:43:40 DST 2009
    By sjc-lds-208 in /auto/ioxbuild7/production/3.9.0.14I/asr9k/workspace for c4.2.1-p0

asr9k-mgbl, V 3.9.0.14I, Cisco Systems, at disk0:asr9k-mgbl-3.9.0.14I
    Built on Mon Jul 13 10:11:41 DST 2009
    By sjc-lds-208 in /auto/ioxbuild7/production/3.9.0.14I/asr9k/workspace for c4.2.1-p0

asr9k-mcast, V 3.9.0.14I, Cisco Systems, at disk0:asr9k-mcast-3.9.0.14I
    Built on Mon Jul 13 08:40:57 DST 2009
    By sjc-lds-208 in /auto/ioxbuild7/production/3.9.0.14I/asr9k/workspace for c4.2.1-p0

--More--

```

Table 39: show version Field Descriptions

Field	Description
Cisco IOS XR Software, Version #	Cisco IOS XR software version number currently running on the router.
ROM	System bootstrap version number currently running on the router.
router uptime	Number of uninterrupted days, hours, minutes, and seconds the system has been up and running.
System image file is	Location and name of the system image file currently running on the router.
Packet over SONET/SDH network interface(s)	Number of Packet-over-SONET/SDH interfaces available on the current router.
SONET/SDH Port controller(s)	Number of SONET or SDH ¹ interfaces available on the current router.

Field	Description
Ethernet/IEEE 802.3 interface(s)	Number of Ethernet or IEEE 802.3 interfaces available on the current router.
GigabitEthernet/IEEE interface(s)	Number of Gigabit Ethernet or IEEE 802.3 interfaces available on the current router.
bytes of non-volatile configuration memory	Available volatile configuration memory, in bytes.
bytes of ATA PCMCIA card at disk 0	ATA PCMCIA ² available on the card in disk 0, in bytes.
Package active on node 0/1/SP	Details about the current software package that is running on the SP node in slot 1.

¹ SDH = Synchronous Digital Hierarchy

² ATA PCMCIA = AT Attachment Personal Computer Memory Card Industry Association

upgrade hw-module fpd

To manually upgrade the current field-programmable device (FPD) image package on a module, use the **upgrade hw-module fpd** command in administration EXEC mode.

upgrade hw-module fpd {**all**|**fabldr**|*fpga-type*|**rommon**} [**force**] **location** [*node-id*|**all**]

Syntax Description

all	Upgrades all FPD images on the selected module.
fabldr	Upgrades the fabric-downloader FPD image on the module.
<i>fpga-type</i>	Upgrades a specific field-programmable gate array (FPGA) image on the module. Use the show fpd package command to view all available FPGA images available for a specific module.
rommon	Upgrades the ROMMON image on the module.
force	(Optional) Forces the update of the indicated FPD image package on a shared port adapter (SPA) that meets the minimum version requirements. Without this option, the manual upgrade upgrades only incompatible FPD images.
location { <i>node-id</i> all }	Specifies the node for which to upgrade the FPD image. The <i>node-id</i> argument is expressed in the <i>rack/slot/subslot</i> notation. Use the all keyword to indicate all nodes.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Note

The use of the force option when doing a fpd upgrade is not recommended except under explicit direction from Cisco engineering or TAC.

During the upgrade procedure, the module must be offline (shut down but powered).

Naming notation for the *node-id* argument is *rack/slot/subslot*; a slash between values is required as part of the notation.

- *rack* —Chassis number of the rack.
- *slot* —Physical slot number of the SPA interface processor (SIP).
- *subslot* —Subslot number of the SPA.

For more information about the syntax for the router, use the question mark (?) online help function.

When you start the FPD upgrade procedure or log into a router that is running the FPD upgrade procedure, the following message is displayed to the screen on TTY, console and AUX ports:

```
FPD upgrade in progress on some hardware, reload/configuration change on those
is not recommended as it might cause HW programming failure and result in RMA
of the hardware.
```

If you enter administration mode while the FPD upgrade procedure is running, the following message is displayed to the screen on TTY, console and AUX ports:

```
FPD upgrade in progress on some hardware, reload/configuration change on those
is not recommended as it might cause HW programming failure and result in RMA
of the hardware. Do you want to continue? [Confirm (y/n)]
```

If you enter global configuration mode while the FPD upgrade procedure is running, the following message is displayed to the screen on TTY, console and AUX ports:

```
FPD upgrade in progress on some hardware, configuration change on those is not
recommended as it might cause HW programming failure and result in RMA of the
hardware. Do you want to continue? [Confirm (y/n)]
```

When the FPD upgrade global timer expires, the following warning message displayed to the screen.

```
FPD upgrade has exceeded the maximum time window, the process will terminate now.
Please check the status of the hardware and reissue the upgrade command if required.
```

Task ID

Task ID	Operations
sysmgr	read, write

Examples

The following example shows how to upgrade the default FPGA on a SPA:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# upgrade hw-module fpd fpga location 0/1/4

% RELOAD REMINDER:
- The upgrade operation of the target module will not interrupt its normal
  operation. However, for the changes to take effect, the target module
  will need to be manually reloaded after the upgrade operation. This can
  be accomplished with the use of "hw-module <target> reload" command.
- If automatic reload operation is desired after the upgrade, please use
  the "reload" option at the end of the upgrade command.
- The output of "show hw-module fpd location" command will not display
  correct version information after the upgrade if the target module is
  not reloaded.
```


Continue? [confirm] **y**

```
SP/0/1/SP:Dec 22 05:41:17.920 : upgrade_daemon[125]: programming...with file
/net/node0_RP1_CPU0/asr9k-lc-3.3.83/fpd/ucode/fpga_gladiator_sw0.6.xsvf
SP/0/1/SP:Dec 22 05:41:28.900 : upgrade_daemon[125]: ...programming...
SP/0/1/SP:Dec 22 05:41:28.906 : upgrade_daemon[125]: ...it will take a while...
SP/0/1/SP:Dec 22 05:41:29.004 : upgrade_daemon[125]: ...it will take a while...
SP/0/1/SP:Dec 22 05:43:03.432 : upgrade_daemon[125]: ...programming...
SP/0/1/SP:Dec 22 05:43:03.438 : upgrade_daemon[125]: ...it will take a while...
Successfully upgraded spa fpga instance 4 on location 0/1/4.
```

Related Commands

Command	Description
show fpd package	Displays which SPAs and SIPs are supported with your current Cisco IOS XR software release, which FPD image you need for each card, and what the minimum hardware requirements are for the various modules.
show hw-module fpd	Displays field-programmable device (FPD) compatibility for all modules or a specific module.

upgrade hw-module fpd



Manageability Commands on the Cisco ASR 9000 Series Router

This chapter describes the Cisco IOS XR software commands used to enable the HTTP server, enable router management through Extensible Markup Language (XML) agent services, and support the Common Object Request Broker Architecture (CORBA) infrastructure.

The XML Parser Infrastructure provides parsing and generation of XML documents with Document Object Model (DOM), Simple API for XML (SAX), and Document Type Definition (DTD) validation capabilities:

- DOM allows customers to programmatically create, manipulate, and generate XML documents.
 - SAX supports user-defined functions for XML tags.
 - DTD allows for validation of defined document types.
-
- [http server](#), [page 504](#)
 - [ipv4 disable](#), [page 506](#)
 - [ipv6 enable \(XML\)](#), [page 507](#)
 - [iteration](#), [page 508](#)
 - [session timeout](#), [page 510](#)
 - [show xml schema](#), [page 512](#)
 - [show xml sessions](#), [page 514](#)
 - [shutdown \(VRF\)](#), [page 516](#)
 - [streaming](#), [page 518](#)
 - [throttle](#), [page 519](#)
 - [vrf \(XML\)](#), [page 521](#)
 - [xml agent](#), [page 523](#)
 - [xml agent ssl](#), [page 525](#)
 - [xml agent tty](#), [page 526](#)

http server

To enable the HTTP server on the router and enable access to the Craft Works Interface (CWI), use the **http server** command in global configuration mode. To disable the HTTP server, use the **no** form of this command.

```
http server [ssl] [access-group name]
no http server
```

Syntax Description

ssl	(Optional) Enables Secure Socket Layer (SSL).
access-group name	(Optional) Enables access to the CWI from IP addresses that meet the conditions of the access control list (ACL) specified for the <i>name</i> argument.

Command Default

The HTTP server is disabled.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **http server** command to enable the HTTP server on your router.

To display the home page of the router, use a Web browser pointed to `http://x.x.x.x`, where `x.x.x.x` is the router IP address. If a name has been set, use `http://router-name`.

Use the **ssl** keyword to run HTTP over a secure socket. This command enables the HTTP server to run SSL when accessing web pages or files provided by the HTTP server of the router and disables access through the regular HTTP port.

Enabling the HTTP server enables authentication by default. After the HTTP server has been enabled, you then are prompted to provide a username and password to access web pages on the HTTP server.

**Note**

The **http server** command enables the HTTP server process on Management Ethernet interfaces by default. For information about how to enable HTTP server on other inband interfaces, see the *Implementing Management Plane Protection on Cisco IOS XR Software* module in *Cisco ASR 9000 Series Aggregation Services Router System Security Configuration Guide*.

Task ID

Task ID	Operations
config-services	read, write

Examples

The following example shows how to enable the HTTP server on the router:

```
RP/0/RSP0/CPU0:router(config)# http server
```

The following example shows how to enable SSL to run HTTP over a secure socket:

```
RP/0/RSP0/CPU0:router(config)# http server ssl
```

The following example shows how to enable SSL to run HTTP over a secure socket and to enable access to the CWI from only IP addresses that meet the conditions of the access group named test:

```
RP/0/RSP0/CPU0:router(config)# http server ssl access-group test
```

The following sample output from the **show ipv4 access-lists** commands displays the IPv4 access list named test:

```
RP/0/RSP0/CPU0:router# show ipv4 access-lists test

ipv4 access-list test
 10 deny ip host 171.71.163.96 any
 20 permit ip host 64.102.48.34 any
```

ipv4 disable

To disable IPv4 XML transport, use the **ipv4 disable** command in XML agent configuration mode. To enable IPv4 XML transport, use the **no** form of this command.

ipv4 disable

no ipv4 disable

Syntax Description This command has no keywords or arguments.

Command Default IPv4 XML transport is enabled by default.

Command Modes XML agent configuration

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Operation
config-services	read, write

Examples This example illustrates how to disable IPv4 XML transport:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# xml agent
RP/0/RSP0/CPU0:router(config-xml-agent) ipv4 disable
```

Command	Description
ipv6 enable (XML)	Enables IPv6 XML transport.

ipv6 enable (XML)

To enable IPv6 XML transport, use the **ipv6 enable** command in XML agent configuration mode. To disable IPv6 XML transport, use the **no** form of this command.

ipv6 enable

no ipv6 enable

Syntax Description This command has no keywords or arguments.

Command Default IPv6 XML transport is disabled by default.

Command Modes XML agent configuration

Command History	Release	Modification
	Release 4.1.0	This command was introduced.
	Release 5.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	config-services	read, write

Examples This example illustrates how to enable IPv6 XML transport:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# xml agent
RP/0/RSP0/CPU0:router(config-xml-agent) ipv6 enable
```

Related Commands	Command	Description
	ipv4 disable	Disables IPv4 XML transport.

iteration

To configure the iteration size for large XML agent responses, use the `iteration` command in `xml agent` configuration mode. To revert to the default iteration settings, use the `no` form of this command.

```
iteration {off | on size iteration-size}
no iteration
```

Syntax Description

off	Disables iteration, meaning that the entire XML response is returned, regardless of its size. Use of this option is not recommended.
on	Enables iteration, meaning that large XML responses are broken into chunks according to the iteration chunk size.
size iteration-size	Specifies the size of the iteration chunk, in Kbytes. Values can range from 1 to 100,000.

Command Default

Iteration is enabled; the `iteration-size` is 48.

Command Modes

XML agent
TTY XML agent
SSL XML agent

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When the XML agent returns a large response, it splits the response into chunks and returns one chunk at a time. External clients then need to send a `GetNext` request to obtain the next chunk. Use the **iteration** command to control the size of iteration chunks. A larger chunk value allows larger chunks to be received in a shorter period of time, possibly making the router system busier. A smaller chunk value allows smaller chunks to be received over a longer period of time, but does not make the router busy. You can also specify to disable iteration completely using the **iteration off** command.

**Note**

It is not recommended to disable iteration, since this could result in large transient memory usage.

To specify the TTY or SSL iteration size specifically, use the **iteration** command from the appropriate command mode.

Task ID

Task ID	Operations
config-services	read, write

Examples

The following example shows how to configure the iteration chunk size to 100 Kbytes.

```
RP/0/RSP0/CPU0:router(config)# xml agent
RP/0/RSP0/CPU0:router(config-xml)# iteration on size 100
```

The following example shows how to disable iteration:

```
RP/0/RSP0/CPU0:router(config)# xml agent
RP/0/RSP0/CPU0:router(config-xml)# iteration off
```

The following example shows how to turn on iteration with the default iteration size:

```
RP/0/RSP0/CPU0:router(config)# xml agent
RP/0/RSP0/CPU0:router(config-xml)# no iteration off
```

The following example shows how to change the iteration size to the default iteration size.

```
RP/0/RSP0/CPU0:router(config)# xml agent
RP/0/RSP0/CPU0:router(config-xml)# no iteration on size 100
```

The following example shows how to change the iteration size of the TTY agent to 3 Kbytes:

```
RP/0/RSP0/CPU0:router(config)# xml agent tty
RP/0/RSP0/CPU0:router(config-xml-tty)# iteration on size 3
```

The following example shows how to turn off the iteration of the SSL agent:

```
RP/0/RSP0/CPU0:router(config)# xml agent ssl
RP/0/RSP0/CPU0:router(config-xml-ssl)# iteration off
```

Related Commands

Command	Description
xml agent	Enables Extensible Markup Language (XML) requests over a dedicated TCP connection and enters XML agent configuration mode.
xml agent ssl	Enables XML requests over Secure Socket Layer (SSL) and enters SSL XML agent configuration mode.
xml agent tty	Enables XML requests over SSH and Telnet and enters TTY XML agent configuration mode.

session timeout

To configure an idle timeout for the XML agent, use the **session timeout** command in xml agent configuration mode. To remove the session timeout, use the **no** form of this command.

session timeout *timeout*

Syntax Description

<i>timeout</i>	Amount of idle time in minutes that must pass before the XML agent closes the session. Values can range from 1 to 1440.

Command Default

There is no session timeout.

Command Modes

xml agent
xml agent ssl
xml agent tty

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
config-services	read, write

Examples

The following example illustrates how to configure the dedicated agent to close the session after 5 minutes of idle time:

```
RP/0/RSP0/CPU0:router(config)# xml agent  
RP/0/RSP0/CPU0:router(config-xml-agent)# session timeout 5
```

The following example illustrates how to configure the XML TTY agent to close the session after 60 minutes of idle time:

```
RP/0/RSP0/CPU0:router(config)# xml agent tty
```

```
RP/0/RSP0/CPU0:router(config-xml-agent-tty)# session timeout 60
```

The following example illustrates how to configure the XML TTY agent to have no timeout (the default):

```
RP/0/RSP0/CPU0:router(config)# xml agent tty
RP/0/RSP0/CPU0:router(config-xml-agent)# no session timeout
```

Related Commands

Command	Description
xml agent	Enables Extensible Markup Language (XML) requests over a dedicated TCP connection and enters XML agent configuration mode.

show xml schema

To browse the XML schema and data, use the **show xml schema** command in EXEC mode.

show xml schema

Syntax Description	This command has no keywords or arguments.	
Command Default	None	
Command Modes	EXEC	
Command History	Release	Modification
	Release 3.7.2	This command was introduced.
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. The show xml schema command runs the XML schema browser so that you can browse the XML schema and data.	
Task ID	Task ID	Operations
	config-services	read

Examples

This example shows how to enter the XML schema browser and the available commands:

```
RP/0/RSP0/CPU0:router# show xml schema

Username: xxxx
Password:
Enter 'help' or '?' for help
xml-schema[config]> ?

config          oper          action
adminoper      adminaction  cd
pwd            classinfo   list
ls             datalist    walk
walkdata       get         hierarchy
quit           exit        help
```

```
xml-schema[config]:>
```

Related Commands

Command	Description
copy	Copies a file from a source (such as a network server) to a destination (such as a flash disk).

show xml sessions

To display the status of an Extensible Markup Language (XML) session, use the **show xml sessions** command in EXEC mode.

show xml sessions [**default**| **ssl**| **tty**] [**detail**]

Syntax Description

default	Displays the status of the default XML agent.
ssl	Displays the status of the XML agents over secure socket layer (SSL).
tty	Displays the status of XML agents over telnet.
detail	Displays details regarding the XML sessions.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
config-services	read

Examples

This example illustrates sample output of the **show xml sessions** command with no optional keywords specified:

RP/0/RSP0/CPU0:router# **show xml sessions**

```

Session Client Agent User Date State
00000001 192.168.10.85 (default) tty cisco Fri Jun 19 22:42:29 2009 idle
10000001 10.12.24.15 (VRF1) default lab Fri Jun 19 22:32:12 2009 busy

```

This example illustrates sample output of the **show xml sessions** command with the **tty** keyword:

```
RP/0/RSP0/CPU0:router# show xml sessions tty
```

```

Session Client Agent User Date State
00000001 192.168.10.85 (default) tty cisco Fri Jun 19 22:42:29 2009 idle
00000002 10.12.24.15 (VRF1) tty lab Fri Jun 19 22:32:12 2009 busy

```

This example illustrates sample output of the **show xml sessions** command with the **detail** keyword:

```
RP/0/RSP0/CPU0:router#
```

```
show xml sessions detail
```

```

Session: 00000001
  Client: 192.168.10.85 (default)
  Agent type: tty
  User: cisco
  State: idle
  Config session: -
  Alarm notification: Registered
  Start Date: Tue Aug 24 18:21:29 2010
  Elapsed Time: 00:00:27
  Last State Changed: 00:00:27
Session: 10000001
  Client: 10.12.24.15 (VRF1)
  Agent type: default
  User: lab
  State: busy
  Config session: 00000010-0005b105-00000000
  Alarm notification: Not registered
  Start date: Tue Aug 24 18:21:29 2010
  Elapsed Time: 00:01:10
  Last State Changed: 00:01:10

```

Related Commands

Command	Description
xml agent	Enables Extensible Markup Language (XML) requests over a dedicated TCP connection and enters XML agent configuration mode.

shutdown (VRF)

To configure the dedicated XML agent to not receive or send messages via the default VRF, use the **shutdown** command in xml agent vrf configuration mode. To enable the dedicated XML agent to receive or send messages via the default VRF, use the **no** form of this command.

shutdown

no shutdown

This command has no keywords or arguments.

Command Default

The default VRF instance is enabled by default.

Command Modes

xml agent vrf configuration
xml agent ssl vrf configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
config-services	read, write

Examples

The following example illustrates how to configure the XML dedicated agent to send and receive messages via VRF1 only:

```
RP/0/RSP0/CPU0:router(config)# xml agent
RP/0/RSP0/CPU0:router(config-xml-agent)# vrf VRF1
RP/0/RSP0/CPU0:router(config-xml-agent)# vrf default
RP/0/RSP0/CPU0:router(config-xml-agent-vrf)# shutdown
```

The following example illustrates how to configure the XML SSL agent to send and receive messages via VRF1 only:

```
RP/0/RSP0/CPU0:router(config)# xml agent ssl
RP/0/RSP0/CPU0:router(config-xml-agent-ssl)# vrf VRF1
RP/0/RSP0/CPU0:router(config-xml-agent-ssl)# vrf default
```



```
RP/0/RSP0/CPU0:router(config-xml-agent-ssl-vrf)# shutdown
```

The following example illustrates how to enable the default VRF after it has been disabled:

```
RP/0/RSP0/CPU0:router(config)# xml agent
RP/0/RSP0/CPU0:router(config-xml-agent)# vrf default
RP/0/RSP0/CPU0:router(config-xml-agent-vrf)# no shutdown
```

Related Commands

Command	Description
vrf (XML)	Configures a dedicated agent to receive and send messages via the specified VPN routing and forwarding (VRF) instance.

streaming

To configure XML response streaming, use the **streaming** command in one of the XML agent configuration modes. To disable XML response streaming, use the **no** form of this command.

streaming on size *size*

Syntax Description

on	Turns on XML streaming.
size <i>size</i>	Specifies the size of the stream in Kbytes.

Command Default

XML streaming is disabled.

Command Modes

XML agent
XML agent ssl
XML agent tty

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
config-services	read, write

Examples

This example illustrates how to set the XML response streaming size to 5000 Kbytes.

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# xml agent
RP/0/RSP0/CPU0:router(config-xml-agent)# streaming on size 5000
```

throttle

To configure the XML agent processing capabilities, use the **throttle** command in XML agent configuration mode.

throttle {*memory size*| *process-rate tags*}

Syntax Description

memory	Specifies the XML agent memory size.
<i>size</i>	Size of the XML agent memory in MB. Values can range from 100 to 600. The default is 300.
process-rate	Specifies the XML agent processing rate.
<i>tags</i>	Number of tags that the XML agent can process per second. Values can range from 1000 to 30000.

Command Default

The process rate is not throttled; memory size is 300 MB.

Command Modes

XML agent configuration

Command History

Release	Modification
Release 3.8.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **throttle** command to control CPU time used by the XML agent when it handles large data.

Task ID

Task ID	Operation
config-services	read, write

Examples

This example illustrates how to configure the number of tags that the XML agent can process to 1000:

```
RP/0/RSP0/CPU0:router(config)# xml agent
```

```
RP/0/RSP0/CPU0:router(config-xml-agent)# throttle process-rate 1000
```

vrf (XML)

To configure a dedicated agent to receive and send messages via the specified VPN routing and forwarding (VRF) instance, use the `vrf` command in one of the `xml` agent configuration mode. To disable the receiving and sending of messages via a specific VRF instance, use the **no** form of this command.

vrf {**default**| *vrf-name*}

Syntax Description

default	Configures the default VRF instance.
<i>vrf-name</i>	Configures the specified VRF instance.

Command Default

The default VRF is enabled by default.

Command Modes

XML agent configuration
XML agent SSL configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The default VRF is enabled by default. To disable the default VRF, use the **shutdown** command.

Task ID

Task ID	Operation
config-services	read, write

Examples

This example shows how to configure the dedicated XML agent to receive and send messages via VRF1, VRF2 and the default VRF:

```
RP/0/RSP0/CPU0:router(config)# xml agent
RP/0/RSP0/CPU0:router(config-xml-agent)# vrf VRF1
RP/0/RSP0/CPU0:router(config-xml-agent)# vrf VRF2
```

This example shows how to remove access to VRF2 from the dedicated agent:

```
RP/0/RSP0/CPU0:router(config)# xml agent  
RP/0/RSP0/CPU0:router(config-xml-agent)# no vrf VRF2
```

Related Commands

Command	Description
xml agent	Enables Extensible Markup Language (XML) requests over a dedicated TCP connection and enters XML agent configuration mode.
xml agent ssl	Enables XML requests over Secure Socket Layer (SSL) and enters SSL XML agent configuration mode.
shutdown (VRF)	Configures the dedicated agent to not receive or send messages via the default VRF.

xml agent

To enable Extensible Markup Language (XML) requests over a dedicated TCP connection and enter XML agent configuration mode, use the **xml agent** command in global configuration

mode. To disable XML requests over the dedicated TCP connection, use the **no** form of this command.



Note

This command enables a new, enhanced-performance XML agent. The **xml agent tty** command enables the legacy XML agent and is supported for backward compatibility.

xml agent

no xml agent

Command Default

XML requests are disabled.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.8.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

There are two XML agents: a legacy XML agent and an enhanced-performance XML agent. We recommend that you use the enhanced-performance agent. The legacy agent is supported for backward compatibility. Use the **xml agent** command to enable the enhanced-performance XML agent. Use the **xml agent tty** command to enable the legacy XML agent.

Use the **no** form of the **xml agent** command to disable the enhanced-performance XML agent.

Task ID

Task ID	Operations
config-services	read, write

Examples

This example shows how to enable XML requests over a dedicated TCP connection:

```
RP/0/RSP0/CPU0:router(config)# xml agent
```


xml agent ssl

To enable Extensible Markup Language (XML) requests over Secure Socket Layer (SSL) and enter SSL XML agent configuration mode, use the **xml agent ssl** command in global configuration

mode. To disable XML requests over SSL, use the **no** form of this command.

xml agent ssl

no xml agent ssl

Command Default SSL agent is disabled by default.

Command Modes Global configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The k9sec package is required to use the SSL agent. The configuration is rejected during commit when the security software package is not active on the system. When the security software package is deactivated after configuring SSL agent, the following syslog message is displayed to report that the SSL agent is no longer available.

```
xml_dedicated_ssl_agent[420]:
%MGBL-XML_TTY-7-SSLINIT : K9sec pie is not active, XML service over
SSL is not available.
```

Task ID	Task ID	Operations
	config-services	read, write

Examples This example shows how to enable XML requests over SSL:

```
RP/0/RSP0/CPU0:router(config)# xml agent ssl
```

xml agent tty

To enable Extensible Markup Language (XML) requests over Secure Shell (SSH) and Telnet and enter TTY XML agent configuration mode, use the **xml agent tty** command in global configuration mode. To disable XML requests over SSH and Telnet, use the **no** form of this command.



Note

This command enables a legacy XML agent that has been superceded by an enhanced performance XML agent and is supported only for backward compatibility. To enable the enhanced-performance XML agent, use the **xml agent** command.

xml agent tty
no xml agent tty

Command Default

XML requests over SSH and Telnet are disabled.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

There are two XML agents: a legacy XML agent and an enhanced-performance XML agent. We recommend that you use the enhanced-performance agent. The legacy agent is supported for backward compatibility. The **xml agent tty** command enables the legacy XML agent. Use the **xml agent** command to enable the enhanced-performance XML agent.

Use the **no** form of the **xml agent tty** command to disable the legacy XML agent.

Task ID

Task ID	Operations
config-services	read, write

Examples

This example shows how to enable XML requests over Secure Shell (SSH) and Telnet:

```
RP/0/RSP0/CPU0:router(config)# xml agent tty
```

 xml agent tty



NTP Commands on the Cisco ASR 9000 Series Router

This chapter describes the Cisco IOS XR Network Time Protocol (NTP) commands used to perform basic network time management tasks, including synchronizing time settings and coordinating time distribution over the network.

When an NTP server or client is configured, NTP features are available on all router interfaces. NTP features can be disabled for any specified interface, local or remote, to the route processor (RP).

For detailed information about NTP concepts, configuration tasks, and examples, see the *Implementing NTP on Cisco IOS XR Software* configuration module in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

- [access-group \(NTP\), page 531](#)
- [authenticate \(NTP\), page 534](#)
- [authentication-key \(NTP\), page 536](#)
- [broadcast, page 538](#)
- [broadcast client, page 540](#)
- [broadcastdelay, page 542](#)
- [interface \(NTP\), page 543](#)
- [master, page 545](#)
- [master primary-reference-clock, page 547](#)
- [max-associations, page 549](#)
- [multicast client, page 550](#)
- [multicast destination, page 552](#)
- [ntp, page 554](#)
- [ntp clear, page 556](#)
- [ntp reset drift, page 557](#)
- [peer \(NTP\), page 559](#)

- [server \(NTP\), page 562](#)
- [show calendar, page 565](#)
- [show ntp associations, page 566](#)
- [show ntp status, page 570](#)
- [source \(NTP\), page 573](#)
- [trusted-key, page 575](#)
- [update-calendar, page 577](#)

access-group (NTP)

To control access to Network Time Protocol (NTP) services for an IPv4 or IPv6 access list, use the **access-group** command in one of the NTP configuration modes. To remove the **access-group** command from the configuration file and restore the system to its default condition with respect to this command, use the **no** form of this command.

access-group [*vrf vrf-name*] [*ipv4| ipv6*] {*peer| query-only| serve| serve-only*} *access-list-name*

no access-group [*vrf vrf-name*] [*ipv4| ipv6*] {*peer| query-only| serve| serve-only*}

Syntax Description

vrf <i>vrf-name</i>	(Optional) Applies the access control configuration to a specified nondefault VRF. If not specified, the configuration is applied to the default VRF.
ipv4	(Optional) Specifies an IPv4 access list (default).
ipv6	(Optional) Specifies an IPv6 access list.
peer	Allows time requests and NTP control queries and allows a networking device to synchronize to the remote system.
query-only	Allows only NTP control queries. Cisco IOS XR software uses NTP Version 4, but the RFC for Version 3 (RFC 1305: <i>Network Time Protocol (Version 3)—Specification, Implementation and Analysis</i>) still applies.
serve	Allows time requests and NTP control queries, but does not allow the networking device to synchronize to the remote system.
serve-only	Allows only time requests.
<i>access-list-name</i>	Name of an IPv4 or IPv6 access list.

Command Default

No NTP access control is configured.

Command Modes

NTP configuration
VRF-specific NTP configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The access group options are scanned in the following order from least restrictive to most restrictive:

- 1 **peer**—Allows time requests and NTP control queries and allows the router to synchronize itself to a system whose address passes the access list criteria.
- 2 **serve**—Allows time requests and NTP control queries, but does not allow the router to synchronize itself to a system whose address passes the access list criteria.
- 3 **serve-only**—Allows only time requests from a system whose address passes the access list criteria.
- 4 **query-only**—Allows only NTP control queries from a system whose address passes the access list criteria.

Access is granted for the first match that is found. If no access groups are specified, all access is granted to all sources. If any access groups are specified, only the specified access is granted. This facility provides minimal security for the time services of the system. However, it can be circumvented by a determined programmer. If tighter security is desired, use the NTP authentication facility.

If you use the **access-group** command in a VRF-specific NTP configuration mode, the command is applied to the specific VRF. If you are not in a VRF-specific NTP configuration mode, the command is applied to the default VRF unless you use the **vrf vrf-name** keyword and argument to specify a VRF.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to configure the router to allow itself to be synchronized by a peer from an IPv4 access list named access1 and to restrict access to allow only time requests from an IPv4 access list named access2:

```
RP/0/RSP0/CPU0:router(config-ntp) # access-group peer access1
RP/0/RSP0/CPU0:router(config-ntp) # access-group serve-only access2
```

The following example shows how to configure the router to allow itself to be synchronized by peers from the IPv6 access list named access20 that route through the vrf10 VRF:

```
RP/0/RSP0/CPU0:router(config-ntp) # access-group vrf vrf10 ipv6 peer access20
```

Related Commands

Command	Description
ipv4 access-list	Defines an IPv4 access list by name.
ipv6 access-list	Defines an IPv6 access list by name.

Command	Description
vrf	Configures a VRF instance for a routing protocol.

authenticate (NTP)

To enable Network Time Protocol (NTP) authentication, use the **authenticate** command in NTP configuration mode. To restore the system to its default condition, use the **no** form of this command.

authenticate

no authenticate

Syntax Description This command has no keywords or arguments.

Command Default No NTP authentication is configured.

Command Modes NTP configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **authenticate** command to enable NTP authentication. When NTP authentication is enabled, the system does not synchronize to a time source unless it carries one of the authentication keys specified by the **trusted-key** command. Packets failing the authentication check are dropped.

Task ID	Task ID	Operations
	ip-services	read, write

Examples The following example shows how to configure the system to synchronize only to a system that provides an authentication key 42 in its NTP packets:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# authenticate
RP/0/RSP0/CPU0:router(config-ntp)# authentication-key 42 md5 clear key1
RP/0/RSP0/CPU0:router(config-ntp)# trusted-key 42
```

Related Commands

Command	Description
authentication-key (NTP)	Defines an authentication key for a trusted Network Time Protocol (NTP) time source.
trusted-key	Designates a Network Time Protocol (NTP) trusted key.

authentication-key (NTP)

To define an authentication key for a trusted Network Time Protocol (NTP) time source, use the **authentication-key** command in NTP configuration mode. To restore the system to its default condition, use the **no** form of this command.

authentication-key *key-number* **md5** [**clear**|**encrypted**] *key-name*

no authentication-key *key-number*

Syntax Description

<i>key-number</i>	Authentication key. A number in the range from 1 to 65535.
md5	Provides message authentication support using the Message Digest 5 (MD5) algorithm.
clear	(Optional) Specifies that the key value entered after this keyword is unencrypted.
encrypted	(Optional) Specifies that the key value entered after this keyword is encrypted.
<i>key-name</i>	Key value. The maximum length is 32 characters.

Command Default

No authentication key is defined for NTP.

Command Modes

NTP configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **authentication-key** command to define authentication keys for use with trusted NTP time sources.



Note

When this command is written to NVRAM, the key is encrypted so that it is not displayed when the configuration is displayed.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to configure the system to synchronize only to systems providing authentication key 42 in their NTP packets:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# authenticate
RP/0/RSP0/CPU0:router(config-ntp)# authentication-key 42 md5 clear key1
RP/0/RSP0/CPU0:router(config-ntp)# trusted-key 42
```

Related Commands

Command	Description
authenticate (NTP)	Enables Network Time Protocol (NTP) authentication.
peer (NTP)	Configures the system clock to synchronize a peer or to be synchronized by a peer.
server (NTP)	Allows the system clock to be synchronized by a time server.
trusted-key	Designates a Network Time Protocol (NTP) trusted key.

broadcast

To create a Network Time Protocol (NTP) broadcast server on a specified NTP interface, use the **broadcast** command in NTP interface configuration mode. To remove the command from the configuration file and restore the system to its default condition, use the **no** form of this command.

broadcast [**destination** *ip-address*] [**key** *key-id*] [**version** *number*]

no broadcast [**destination** *ip-address*] [**key** *key-id*] [**version** *number*]

Syntax Description

destination <i>ip-address</i>	(Optional) Specifies the host IPv4 address.
key <i>key-id</i>	(Optional) Defines the authentication key, where <i>key-id</i> is the authentication key to use when sending packets to this peer. The key identified by the <i>key-id</i> value is also used for packets received from the peer.
version <i>number</i>	(Optional) Specifies a number from 1 to 4, indicating the NTP version.

Command Default

No NTP broadcast servers are configured.

Command Modes

NTP interface configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **broadcast** command to create an NTP broadcast server on an NTP interface to send NTP broadcast packets.

Use the **broadcast client** command to set a specific interface to receive NTP broadcast packets.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to configure Packet-over-SONET/SDH (POS) interface 0/0/0/1 to send NTP packets to destination host IP address 10.0.0.0:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# interface POS 0/0/0/1
RP/0/RSP0/CPU0:router(config-ntp-int)# broadcast destination 10.0.0.0
```

Related Commands

Command	Description
broadcast client	Allows a networking device to receive Network Time Protocol (NTP) broadcast packets on an interface.
broadcastdelay	Sets the estimated round-trip delay between a Network Time Protocol (NTP) client and an NTP broadcast server.

broadcast client

To allow a networking device to receive Network Time Protocol (NTP) broadcast packets on an interface, use the **broadcast client** command in NTP interface configuration mode. To remove the configuration and restore the system to its default condition, use the **no** form of this command.

broadcast client

no broadcast client

Syntax Description This command has no keywords or arguments.

Command Default No NTP broadcast clients are configured.

Command Modes NTP interface configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **broadcast client** command to configure and create an NTP broadcast client and to associate the client with an interface to receive and handle NTP broadcast packets. If no NTP client has been created for an interface, the received NTP broadcast packets are dropped. Use this command to allow the system to listen to broadcast packets on an interface-by-interface basis.

Task ID	Task ID	Operations
	ip-services	read, write

Examples The following example shows how to configure Packet-over-SONET/SDH (POS) interface 0/0/0/1 to send NTP packets:

```
RP/0/RSP0/CPU0:router(config)# ntp interface POS 0/0/0/1
RP/0/RSP0/CPU0:router(config-ntp-int)# broadcast client
```


Related Commands

Command	Description
broadcast	Creates a Network Time Protocol (NTP) broadcast server on a specified NTP interface.
broadcastdelay	Sets the estimated round-trip delay between a Network Time Protocol (NTP) client and an NTP broadcast server.

broadcastdelay

To set the estimated round-trip delay between a Network Time Protocol (NTP) client and an NTP broadcast server, use the **broadcastdelay** command in NTP configuration mode. To restore the system to its default condition, use the **no** form of this command.

broadcastdelay *microseconds*

no broadcastdelay *microseconds*

Syntax Description

<i>microseconds</i>	Estimated round-trip time for NTP broadcasts, in microseconds. The range is from 1 to 999999. The default is 3000.

Command Default

microseconds: 3000

Command Modes

NTP configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **broadcastdelay** command to change the default round-trip delay time on a networking device that is configured as a broadcast client.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to set the estimated round-trip delay between a networking device and the broadcast client to 5000 microseconds:

```
RP/0/RSP0/CPU0:router(config-ntp) # broadcastdelay 5000
```

interface (NTP)

To enter a Network Time Protocol (NTP) interface mode and run NTP interface configuration commands, use the **interface** command in one of the NTP configuration modes. To remove an NTP interface configuration, use the **no** form of this command.

interface *type interface-path-id* [**vrf** *vrf-name*] [**disable**]

no interface *type interface-path-id* [**disable**]

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
vrf <i>vrf-name</i>	(Optional) Applies the interface configuration to a specific nondefault VRF.
disable	(Optional) Disables NTP on the specified interface.

Command Default

No NTP interfaces are configured.

Command Modes

NTP configuration mode
VRF-specific NTP configuration mode

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	Support was added for the vrf keyword and the <i>vrf-name</i> argument.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **interface** command to place the router in NTP interface configuration mode, from which NTP broadcast and multicast servers and clients can be configured. By default, after the NTP process is started, NTP features become available for all interfaces. To exit NTP interface configuration mode, use the **exit** command.

If you use the **interface** command in a VRF-specific NTP configuration mode, the command is applied to the specific VRF. If you are not in a VRF-specific NTP configuration mode, the command is applied to the default VRF unless you use the **vrf vrf-name** keyword and argument to specify a VRF.

By default, NTP is enabled on every interface. To disable NTP on a specific interface, use the **interface** command with the **disable** keyword. To reenabling NTP on an interface, use the **no** form of the **interface** command with the **disable** keyword.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to enter NTP configuration mode, specify an NTP interface to be configured, and enter NTP interface configuration mode:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# interface POS 0/1/0/0
RP/0/RSP0/CPU0:router(config-ntp-int)#
```

The following example shows how to enter a VRF-specific NTP interface configuration mode:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# interface TenGigE 0/1/1/0 vrf vrf_10
RP/0/RSP0/CPU0:router(config-ntp-int)#
```

The following example shows a different way to enter a VRF-specific NTP interface configuration mode:

```
RP/0/RSP0/CPU0:router(config)# ntp vrf vrf_10
RP/0/RSP0/CPU0:router(config-ntp-vrf)# interface TenGigE 0/1/1/0
RP/0/RSP0/CPU0:router(config-ntp-int)#
```

master

To configure the router to use its own Network Time Protocol (NTP) master clock to synchronize with peers when an external NTP source becomes unavailable, use the **master** command in NTP configuration mode. To restore the system to its default condition, use the **no** form of this command.

master [*stratum*]

no master [*stratum*]

Syntax Description

<i>stratum</i>	(Optional) NTP stratum number that the system claims. Range is from 1 to 15. The default is 8.

Command Default

By default, the master clock function is disabled. When the function is enabled, the default stratum is 8.

Command Modes

NTP configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

NTP uses the concept of a “stratum” to describe how many NTP “hops” away a machine is from an authoritative time source. A stratum 1 time server has a radio or atomic clock attached directly. A stratum 2 time server receives its time through NTP from a stratum 1 time server, a stratum 3 from a stratum 2, and so on.



Caution

Use the **master** command with extreme caution. It is easy to override other valid time sources using this command, especially if a low-stratum number is configured. Configuring multiple machines in the same network with the **master** command can lead to instability in time-keeping if the machines do not agree on the time.

The networking device is normally synchronized, directly or indirectly, with an external system that has a clock. Cisco IOS XR software does not support directly attached radio or atomic clocks. The **master** command should be used only when there is a temporary disruption in a reliable time service. It should not be employed as an alternative source by itself in the absence of a real-time service.

If the system has the **master** command configured and it cannot reach any clock that has a lower stratum number, the system claims to be synchronized at the configured stratum number. Other systems synchronize with it through NTP.

**Note**

The system clock must have been manually set from some source before the **master** command has an effect. This precaution protects against the distribution of erroneous time after the system is restarted.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to configure a networking device as an NTP master clock to which peers may synchronize:

```
RP/0/RSP0/CPU0:router(config)# ntp  
RP/0/RSP0/CPU0:router(config-ntp)# master 9
```

master primary-reference-clock

To configure the router to use PTP and external timing sources, such as PTP grandmaster, Data over Cable Service Interface Specification (DOCSIS) Timing Interface [DTI] or global positioning system (GPS) clock, as the time-of-day source for NTP and operating system time, use the **master primary-reference-clock** command in NTP configuration mode. To remove the PTP configuration, use the **no** form of this command.

master primary-reference-clock

no master primary-reference-clock

Syntax Description This command has no keywords or arguments.

Command Default PTP is not used as the time-of-day source for NTP.

Command Modes NTP configuration

Command History	Release	Modification
	Release 4.3.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

PTP must be enabled on the router before this command can be used. If PTP is not enabled, you receive an error message similar to the following when you try to commit the configuration:

```
RP/0/RSP0/CPU0:router(config)# ntp master primary-reference-clock
RP/0/RSP0/CPU0:router(config)# commit

% Failed to commit one or more configuration items. Please issue
'show configuration failed' from this session to view the errors

RP/0/RSP0/CPU0:router(config)# show configuration failed
[:::]
ntp
 master primary-reference-clock
!!% 'ip-ntp' detected the 'fatal' condition 'PTP is not supported on this platform'
!
end
```

To verify that PTP is used as the reference clock, use the **show ntp association** command.

```
RP/0/RSP0/CPU0:router# show ntp association

address          ref clock      st  when  poll reach  delay  offset  disp
*~127.127.45.1    .PTP.         0   54    64   377    0.00   6.533   1.905

* sys_peer, # selected, + candidate, - outlayer, x falseticker, ~ configured
```

Task ID

Task ID	Operation
ip-services	read, write

Examples

This example shows how to configure PTP as the reference clock for NTP:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# master primary-reference-clock
```

Related Commands

Command	Description
master	Configures the router to use its own Network Time Protocol (NTP) master clock to synchronize with peers when an external NTP source becomes unavailable.

max-associations

To set the maximum number of Network Time Protocol (NTP) associations, use the **max-associations** command in NTP configuration mode. To restore the default setting, use the **no** form of this command.

max-associations *number*

no max-associations *number*

Syntax Description

<i>number</i>	Maximum number of NTP associations. Range is from 0 to 4294967295. The default is 100.

Command Default

The default setting for the maximum number of NTP associations is 100.

Command Modes

NTP configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **max-associations** command to specify the maximum number of associations for an NTP server.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to set the maximum number of associations to 200:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# max-associations 200
```

Related Commands

Command	Description
show ntp associations	Displays the status of Network Time Protocol associations.

multicast client

To configure an NTP interface as an NTP multicast client, use the **multicast client** command in NTP interface configuration mode. To remove the NTP multicast client configuration from an interface, use the **no** form of this command.

multicast client [*ip-address*]

no multicast client [*ip-address*]

Syntax Description

<i>ip-address</i>	IPv4 or IPv6 IP address of the multicast group to join. The default is the IPv4 address 224.0.1.1.

Command Default

The interface is not configured as an NTP multicast client.

Command Modes

NTP interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **multicast client** command to configure an NTP interface to receive multicast packets that are sent to an IPv4 or IPv6 multicast group IP address. If you do not specify an IP address, the interface is configured to receive multicast packets sent to the IPv4 multicast group address 224.0.1.1. You can configure multiple multicast groups on the same interface.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to configure the router to receive NTP multicast packets to the multicast group address of 224.0.1.1 through 10-Gigabit Ethernet interface 0/1/1/0:

```
RP/0/RSP0/CPU0:router(config)# ntp interface TenGigE 0/1/1/0
RP/0/RSP0/CPU0:router(config-ntp-int)# multicast client
```

Related Commands

Command	Description
multicast destination	Configures an NTP interface as an NTP multicast server.

multicast destination

To configure an NTP interface as an NTP multicast server, use the **multicast destination** command in NTP interface configuration mode. To remove the NTP multicast server configuration from an interface, use the **no** form of this command.

multicast destination *ip-address* [**key** *key-id*] [**ttl** *ttl*] [**version** *number*]

no multicast destination *ip-address* [**key** *key-id*] [**ttl** *ttl*] [**version** *number*]

Syntax Description

<i>ip-address</i>	The IPv4 or IPv6 multicast group IP address to which to send NTP multicast packets.
key <i>key-id</i>	(Optional) Specifies an authentication key, where the value of the <i>key-id</i> argument is the authentication key to use when sending multicast packets to the specified multicast group.
ttl <i>ttl</i>	(Optional) Specifies the time to live (TTL) of a multicast packet.
version <i>number</i>	(Optional) Specifies the NTP version number.

Command Default

The interface is not configured as an NTP multicast server.

Command Modes

NTP interface configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to configure the router to send NTP multicast packets to the multicast group address of 224.0.1.1 through 10-Gigabit Ethernet interface 0/1/1/0:

```
RP/0/RSP0/CPU0:router(config)# ntp interface TenGigE 0/1/1/0
RP/0/RSP0/CPU0:router(config-ntp-int)# multicast destination 224.0.1.1
```

Related Commands

Command	Description
multicast client	Configures an NTP interface as an NTP multicast client.

ntp

To enter Network Time Protocol (NTP) configuration mode and run NTP configuration commands, use the **ntp** command in global configuration mode.

ntp [**vrf** *vrf-name*]

Syntax Description	
vrf <i>vrf-name</i>	(Optional) Enters a VRF-specific NTP configuration mode.

Command Default No defaults behavior or values

Command Modes Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	Support was added for the vrf <i>vrf-name</i> <i>ip-address</i> keyword and arguments.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

NTP configuration commands can also be run from global configuration mode by preceding the command string with the **ntp** keyword. From NTP configuration mode, the following NTP configuration commands are available:

RP/0/RSP0/CPU0:router(config-ntp)# ?

access-group	Control NTP access
authenticate	Authenticate time sources
authentication-key	Authentication key for trusted time sources
broadcastdelay	Estimated round-trip delay
commit	Commit the configuration changes to running
default	Set a command to its defaults
describe	Describe a command without taking real actions
do	Run an exec command
exit	Exit from this submode
interface	Configure NTP on an interface
master	Act as NTP master clock
max-associations	Set maximum number of associations
no	Negate a command or set its defaults
peer	Configure NTP peer

port	Enable NTP port
server	Configure NTP server
show	Show contents of configuration
source	Configure interface for source address
trusted-key	Key numbers for trusted time sources
update-calendar	Periodically update calendar with NTP time

Use the **ntp** command with the **vrf vrf-name** keyword and argument to enter an NTP configuration mode specific to the specified VRF.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to enter NTP configuration mode:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)#
```

The following example shows how to enter an NTP configuration mode for a VRF called VRF1:

```
RP/0/RSP0/CPU0:router(config)# ntp vrf vrf1
RP/0/RSP0/CPU0:router(config-ntp-vrf)#
```

ntp clear

To clear all Network Time Protocol (NTP) peers or a specific NTP peer, use the **ntp clear** command in EXEC mode.

ntp clear *{peer| all| vrf vrf-name ip-address}*

Syntax Description

<i>peer</i>	IPv4 address or hostname of the NTP peer to be cleared.
all	Clears all NTP peers.
vrf <i>vrf-name</i>	Clears a peer on the specified nondefault VRF.
<i>ip-address</i>	IPv4 or IPv6 IP address of the peer.

Command Default

No defaults behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	Support was added for the vrf vrf-name ip-address keyword and arguments.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to clear all NTP peers:

```
RP/0/RSP0/CPU0:router# ntp clear all
```


ntp reset drift

To reset the NTP drift and loopfilter state, use the **ntp reset drift** command in EXEC mode.

ntp reset drift

Syntax Description This command has no keywords or arguments.

Command Default No defaults behavior or values

Command Modes EXEC

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **ntp reset drift** command to set the loopfilter state to NSET (never set) and reset the drift. Resetting the loopfilter state and drift enables the router to relearn the frequency of the NTP server clock. This is necessary if there is a synchronization error caused by a large frequency error. This can arise, for example, if the router switches from synchronizing with one NTP server to synchronizing with another NTP server with a different frequency.

Task ID	Task ID	Operations
	ip-services	read, write

Examples The following example shows how to reset the NTP drift and loopfilter state:

```
RP/0/RSP0/CPU0:router# ntp reset drift
```

```
Thu Nov 13 11:21:04.381 JST
```

The following example shows NTP status before and after resetting NTP drift and loopfilter state:

```
RP/0/RSP0/CPU0:router# show ntp status
```

Thu Nov 13 11:20:53.122 JST

Clock is synchronized, stratum 3, reference is 192.168.128.5
 nominal freq is 1000.0000 Hz, actual freq is 1000.2787 Hz, precision is 2**24
 reference time is CCC60CBE.9F836478 (11:17:34.623 JST Thu Nov 13 2008)
 clock offset is -3.172 msec, root delay is 189.289 msec
 root dispersion is 70.03 msec, peer dispersion is 0.11 msec
 loopfilter state is 'CTRL' (Normal Controlled Loop), drift is -0.0002785891 s/s
 system poll interval is 128, last update was 199 sec ago

RP/0/RSP0/CPU0:router# **ntp reset drift**
 Thu Nov 13 11:21:04.381 JST

RP/0/RSP0/CPU0:router# **show ntp status**
 Thu Nov 13 11:21:10.595 JST

Clock is unsynchronized, stratum 16, no reference clock
 nominal freq is 1000.0000 Hz, actual freq is 1000.0000 Hz, precision is 2**24
 reference time is CCC60CBE.9F836478 (11:17:34.623 JST Thu Nov 13 2008)
 clock offset is -3.172 msec, root delay is 0.000 msec
 root dispersion is 0.09 msec, peer dispersion is 0.00 msec
 loopfilter state is 'NSET' (Never set), drift is 0.0000000000 s/s
 system poll interval is 64, last update was 216 sec ago

Related Commands

Command	Description
show ntp status	Displays the status of NTP.

peer (NTP)

To configure the system clock to synchronize a peer or to be synchronized by a peer, use the **peer** command in one of the NTP configuration modes. To remove the **peer** command from the configuration file and restore the system to its default condition with respect to the command, use the **no** form of this command.

peer [*vrf vrf-name*] [**ipv4**|**ipv6**] *ip-address* [*version number*] [**key** *key-id*] [**minpoll** *interval*] [**maxpoll** *interval*] [**source** *type interface-path-id*] [**prefer**] [**burst**] [**iburst**]

no peer [*vrf vrf-name*] [**ipv4**|**ipv6**] *ip-address*

Syntax Description

vrf <i>vrf-name</i>	(Optional) Applies the peer configuration to the specified nondefault VRF.
ipv4	(Optional) Specifies an IPv4 IP address.
ipv6	(Optional) Specifies an IPv6 IP address.
<i>ip-address</i>	IPv4 or IPv6 address of the peer providing or being provided with the clock synchronization.
version <i>number</i>	(Optional) Defines the Network Time Protocol (NTP) version number, where the <i>number</i> argument is a value from 1 to 4. The default is 4.
key <i>key-id</i>	(Optional) Defines the authentication key, where the <i>key-id</i> argument is the authentication key to use when packets are sent to this peer. The authentication key is also used for packets received from the peer. By default, no authentication key is used.
minpoll <i>interval</i>	(Optional) Defines the shortest polling interval, where the <i>interval</i> argument is specified in powers of two seconds. Range is from 4 to 17. The default value is 6.
maxpoll <i>interval</i>	(Optional) Defines the longest polling interval, where the <i>interval</i> argument is specified in powers of two seconds. Range is from 4 to 17. The default value is 10.
source	(Optional) IP source address. The default is the outgoing interface.
<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
prefer	(Optional) Makes this peer the preferred peer that provides synchronization.

burst	(Optional) Sends a series of packets instead of a single packet within each synchronization interval to achieve faster synchronization.
iburst	(Optional) Sends a series of packets instead of a single packet within the initial synchronization interval to achieve faster initial synchronization.

Command Default

No peers are configured by default.

Command Modes

NTP configuration
VRF-specific NTP configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	Support was added for the following keywords and arguments: • vrf <i>vrf-name</i> • ipv4 • ipv6 • burst • iburst

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **peer** command to allow this machine to synchronize with the peer, or conversely.

**Caution**

Although using the **prefer** keyword can help reduce the switching among peers, you should avoid using the keyword because it interferes with the source selection mechanism of NTP and can result in a degradation in performance.

The value for the **minpoll** keyword must be less than or equal to the value for the **maxpoll** keyword. If this is not the case, the system issues an error message.

To provide peer-level service (as opposed to client/server-level service), it may be necessary to explicitly specify the NTP version for the peer if it is not version 4.

If you use the **peer** command in a VRF-specific NTP configuration mode, the command is applied to the specific VRF. If you are not in a VRF-specific NTP configuration mode, the command is applied to the default VRF unless you use the **vrf** *vrf-name* keyword and argument to specify a VRF.

**Note**

To change the configuration of a specific IP address from peer to server or from server to peer, use the **no** form of the **peer** or **server** command to remove the current configuration before you perform the new configuration. If you do not remove the old configuration before performing the new configuration, the new configuration does not overwrite the old configuration.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to configure a networking device to allow its system clock to be synchronized with the clock of the peer (or conversely) at IP address 10.0.0.0 using NTP. The source IP address is the address of Packet-over-SONET/SDH (POS) interface 0/0/0/1.

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# peer 10.0.0.0 minpoll 8 maxpoll 12 source POS 0/0/0/1
```

Related Commands

Command	Description
authentication-key (NTP)	Defines an authentication key for a trusted Network Time Protocol (NTP) time source.
server (NTP)	Allows the system clock to be synchronized by a time server.
source (NTP)	Specifies a particular source address to use in Network Time Protocol (NTP) packets.

server (NTP)

To allow the system clock to be synchronized by a time server, use the **server** command in one of the NTP configuration modes. To remove the **server** command from the configuration file and restore the system to its default condition with respect to this command, use the **no** form of this command.

server [*vrf vrf-name*] [*ipv4|ipv6*] *ip-address* [*version number*] [*key key-id*] [*minpoll interval*] [*maxpoll interval*] [*source type interface-path-id*] [*prefer*] [*burst*] [*iburst*]

no server [*vrf vrf-name*] [*ipv4|ipv6*] *ip-address*

Syntax Description

vrf <i>vrf-name</i>	(Optional) Applies the server configuration to the specified nondefault VRF.
ipv4	(Optional) Specifies an IPv4 IP address.
ipv6	(Optional) Specifies an IPv6 IP address.
<i>ip-address</i>	IPv4 or IPv6 address of the time server providing the clock synchronization.
version <i>number</i>	(Optional) Defines the Network Time Protocol (NTP) version number, where the <i>number</i> argument is a value from 1 to 4. The default is 4.
key <i>key-id</i>	(Optional) Defines the authentication key, where the <i>key-id</i> argument is the authentication key to use when packets are sent to this peer. By default, no authentication key is used.
minpoll <i>interval</i>	(Optional) Defines the shortest polling interval, where the <i>interval</i> argument is specified in powers of two seconds. Range is from 4 to 17. The default value is 6.
maxpoll <i>interval</i>	(Optional) Defines the longest polling interval, where the <i>interval</i> argument is specified in powers of two seconds. Range is from 4 to 17. The default value is 10.
source	(Optional) Specifies the IP source address. The default is the outgoing interface.
<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
prefer	(Optional) Makes this peer the preferred server that provides synchronization.
burst	(Optional) Sends a series of packets instead of a single packet within each synchronization interval to achieve faster synchronization.

iburst	(Optional) Sends a series of packets instead of a single packet within the initial synchronization interval to achieve faster initial synchronization.

Command Default No servers are configured by default.

Command Modes NTP configuration
VRF-specific NTP configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	Support was added for the following keywords and arguments:
		• vrf <i>vrf-name</i> • ipv4 • ipv6 • burst • iburst

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The value for the **minpoll** keyword must be less than or equal to the value for the **maxpoll** keyword. If this is not the case, the system issues an error message.

Using the **prefer** keyword reduces switching back and forth among servers.

If you use the **server** command in a VRF-specific NTP configuration mode, the command is applied to the specific VRF. If you are not in a VRF-specific NTP configuration mode, the command is applied to the default VRF unless you use the **vrf vrf-name** keyword and argument to specify a VRF.

**Note**

To change the configuration of a specific IP address from peer to server or from server to peer, use the **no** form of the **peer** or **server** command to remove the current configuration before you perform the new configuration. If you do not remove the old configuration before performing the new configuration, the new configuration does not overwrite the old configuration.

Task ID

Task ID	Operations
ip-services	read, write

Examples

The following example shows how to configure a router to allow its system clock to be synchronized with the clock of the peer at IP address 209.165.201.1 using NTP:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# server 209.165.201.1 minpoll 8 maxpoll 12
```

Related Commands

Command	Description
authentication-key (NTP)	Defines an authentication key for a trusted Network Time Protocol (NTP) time source.
peer (NTP)	Configures the system clock to synchronize a peer or to be synchronized by a peer.
source (NTP)	Specifies a particular source address to use in Network Time Protocol (NTP) packets.

show calendar

To display the system time and date, use the **show calendar** command in the EXEC .

show calendar

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines The time format of the **show calendar** output depends on the time format set using the **clock timezone** command.

Task ID	Task ID	Operations
	basic-services	read

Examples The following example shows sample output from the **show calendar** command:

```
RP/0/RSP0/CPU0:router# show calendar
01:29:28 UTC Thu Apr 01 2004
```

Related Commands	Command	Description
	show clock	Displays the system clock.

show ntp associations

To display the status of Network Time Protocol (NTP) associations, use the **show ntp associations** command in privileged EXEC mode.

show ntp associations [**detail**] [**location** *node-id*]

Syntax Description

detail	(Optional) Displays detailed information about each NTP association.
location <i>node-id</i>	(Optional) Displays the status of NTP associations from the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	The output was modified to display nondefault VRF instances and to accommodate IPv6 addresses.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Output for the **show ntp associations** command is displayed only if NTP is configured on the router.

Task ID

Task ID	Operations
ip-services	read

Examples

This example shows sample output from the **show ntp associations** command:

```
RP/0/RSP0/CPU0:router# show ntp associations
Wed Jul 30 04:03:13.471 PST DST
      address          ref clock      st  when  poll reach  delay  offset  disp
```

```

~172.19.69.1      172.24.114.33      3      25      64      3      2.89  57550122  39377
~2001:db8::feed  .INIT.                16      -      64      0      0.00   0.000   15937
~2001:db8::beef  vrf vrf_1             .INIT.                16      -      64      0      0.00   0.000   16000
* sys_peer, # selected, + candidate, - outlier, x falseticker, ~ configured

```

Table 40: show ntp associations Field Descriptions

Field	Description
*	Peer has been declared the system peer and lends its variables to the system variables.
#	Peer is a survivor, but not among the first six peers sorted by synchronization distance. If the association is ephemeral, it may be demobilized to conserve resources.
+	Peer is a survivor and a candidate for the combining algorithm.
-	Peer is discarded by the clustering algorithm as an outlier.
x	Peer is discarded by the intersection algorithm as a falseticker.
~	Indicates peer is statically configured.
address	IPv4 or IPv6 address of the peer. If a nondefault VRF is configured for the peer, the VRF follows the address.
ref clock	Reference clock type or address for the peer.
st	Stratum setting for the peer.
when	Time since last NTP packet was received from peer, in milliseconds.
poll	Polling interval, in seconds.
reach	Peer reachability (bit string, in octal).
delay	Round-trip delay to peer, in milliseconds.
offset	Relative time difference between a peer clock and a local clock, in milliseconds.
disp	Dispersion.

This example shows sample output from the **show ntp associations** command with the **detail** keyword:

```
RP/0/RSP0/CPU0:router# show ntp associations detail

172.19.69.1 configured, our_master, sane, valid, stratum 2
ref ID 171.68.10.150, time C4143AAE.00FCF396 (18:27:58.003 UTC Tue Mar 30 2004)
our mode client, peer mode server, our poll intvl 64, peer poll intvl 64
root delay 5.23 msec, root disp 4.07, reach 3, sync dist 0.0077
delay 1.9829 msec, offset -3.7899 msec, dispersion 0.0358
precision 2**18, version 4
org time C4143B8D.7EBD5FEF (18:31:41.495 UTC Tue Mar 30 2004)
rcv time C4143B8D.801DFA44 (18:31:41.500 UTC Tue Mar 30 2004)
xmt time C4143B8D.7F595E44 (18:31:41.497 UTC Tue Mar 30 2004)
filtdelay =      2.99      1.98      1.98      1.99      1.99      1.99      2.98      1.98
filtoffset =    -3.89    -3.74    -3.78    -3.81    -3.76    -3.73    -4.08    -3.64
filtererror =      0.00      0.02      0.03      0.05      0.06      0.08      0.09      0.32

2001:ODB8::FEED vrf xxx configured, candidate, sane, valid, stratum 2
ref ID 64.103.34.14, time CB0C8C66.38285D84 (14:00:22.219 JST Fri Dec 14 2007)
our mode client, peer mode server, our poll intvl 64, peer poll intvl 64
root delay 181.17 msec, root disp 3.19, reach 377, sync dist 0.1463
delay 104.9158 msec, offset -15.4552 msec, dispersion 0.0439
precision 2**16, version 4
org time CB0C8D0A.70282853 (14:03:06.438 JST Fri Dec 14 2007)
rcv time CB0C8D0A.81CA0E2B (14:03:06.506 JST Fri Dec 14 2007)
xmt time CB0C8D0A.66AAB677 (14:03:06.401 JST Fri Dec 14 2007)
filtdelay =    105.90    104.92    104.91    104.91    105.90    105.85    105.90    104.91
filtoffset =  -15.92   -15.67   -15.54   -15.59   -15.58   -15.54   -15.41   -14.36
filtererror =      0.02      0.03      0.05      0.06      0.08      0.09      0.11      1.05

2001:ODB8::BEEF vrf yyy configured, our_master, sane, valid, stratum 2
ref ID 64.104.193.12, time CB0C8CC1.2C14CED1 (14:01:53.172 JST Fri Dec 14 2007)
our mode client, peer mode server, our poll intvl 64, peer poll intvl 64
root delay 160.83 msec, root disp 4.35, reach 377, sync dist 0.1372
delay 104.9302 msec, offset -14.6327 msec, dispersion 0.0183
precision 2**18, version 4
org time CB0C8CCB.684619D8 (14:02:03.407 JST Fri Dec 14 2007)
rcv time CB0C8CCB.79782B09 (14:02:03.474 JST Fri Dec 14 2007)
xmt time CB0C8CCB.5E9A5429 (14:02:03.369 JST Fri Dec 14 2007)
filtdelay =    104.93    104.93    104.93    104.93    104.93    104.93    104.93    104.93
filtoffset =  -14.71   -14.53   -14.78   -14.73   -14.70   -14.52   -14.59   -14.50
filtererror =      0.00      0.02      0.03      0.05      0.06      0.08      0.09      0.11
```

Table 41: show ntp associations detail Field Descriptions

Field	Descriptions
vrf	Nondefault VRF, if specified for this peer.
configured	Statically configured peer.
dynamic	Dynamically discovered peer.
our_master	Synchronization of the local machine to this peer.
sane	Passing of basic sanity checks by this peer.
ref ID	Address of machine to which the peer is synchronized.
time	Last time stamp that the peer received from its master.

Field	Descriptions
our mode	Mode relative to peer (active/passive/client/server/bdcast/bdcast client).
peer mode	Mode of peer relative.
our poll intvl	Poll interval to peer.
peer poll intvl	Poll interval of interval.
root delay	Delay along path to root (ultimate stratum 1 time source).
root disp	Dispersion of path to root.
reach	Peer reachability (bit string in octal).
sync dist	Peer synchronization distance.
delay	Round-trip delay to peer.
offset	Offset of peer clock relative to this clock.
dispersion	Dispersion of peer clock.
precision	Precision of peer clock in (Hertz) Hz.
version	NTP version number that peer is using.
org time	Originate time stamp.
rcv time	Receive time stamp.
xmt time	Transmit time stamp.
filtdelay	Round-trip delay of each sample, in milliseconds.
filtoffset	Clock offset of each sample, in milliseconds.
filtererror	Approximate error of each sample.

Related Commands

Command	Description
show ntp status	Displays the status of NTP.

show ntp status

To display the status of Network Time Protocol (NTP), use the **show ntp status** command in EXEC mode.

show ntp status [**location** *node-id*]

Syntax Description

location <i>node-id</i>	(Optional) Displays the status of NTP from the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No defaults behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	The output was modified to display nondefault VRF instances and IPv6 addresses. The loopfilter state, drift, system poll interval, and last update display fields were added to the output.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
ip-services	read

Examples

This example shows sample output from the **show ntp status** command:

```
RP/0/RSP0/CPU0:router# show ntp status
```

```
Clock is synchronized, stratum 3, reference is 192.168.128.5
nominal freq is 1000.0000 Hz, actual freq is 1000.0021 Hz, precision is 2**24
```

```
reference time is CC38EC6A.8FCCA1C4 (10:10:02.561 JST Tue Jul 29 2008)
clock offset is -124.051 msec, root delay is 174.060 msec
root dispersion is 172.37 msec, peer dispersion is 0.10 msec
loopfilter state is 'CTRL' (Normal Controlled Loop), drift is -0.0000021106 s/s
system poll interval is 32, last update was 19 sec ago
```

Table 42: show ntp status Field Descriptions

Field	Description
synchronized	Synchronized system to an NTP peer.
stratum	NTP stratum of this system.
reference	IPv4 address or first 32 bits of the MD5 hash of the IPv6 address of the peer to which clock is synchronized.
vrf	VRF through which the peer routes.
nominal freq	Nominal frequency in Hertz (Hz) of the system hardware clock.
actual freq	Measured frequency in Hz of the system hardware clock.
precision	Precision of the clock of this system in Hz.
reference time	Reference time stamp.
clock offset	Offset of clock to synchronized peer, in milliseconds.
root delay	Total delay along path to root clock, in milliseconds.
root dispersion	Dispersion of root path.
peer dispersion	Dispersion of synchronized peer.
loopfilter state	The state of the clock state machine transition function.
drift	Drift of the hardware clock.
system poll interval	Poll interval of the peer.
last update	Time the router last updated its NTP information.

 show ntp status**Related Commands**

Command	Description
show ntp associations	Displays the status of Network Time Protocol associations.

source (NTP)

To use a particular source address in Network Time Protocol (NTP) packets, use the **source** command in one of the NTP configuration modes. To remove the **source** command from the configuration file and restore the system to its default condition, use the **no** form of this command.

source [**vrf** *vrf-name*] *type interface-path-id*

no source

Syntax Description

vrf <i>vrf-name</i>	(Optional) Applies the source address configuration to the specified nondefault VRF.
<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

The source address is determined by the outgoing interface.

Command Modes

NTP configuration
VRF-specific NTP configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	Support was added for the vrf <i>vrf-name</i> keyword and argument.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **source** command to use a particular source IP address for all NTP packets. The address is taken from the named interface. This command is useful if the address on an interface cannot be used as the destination for reply packets. If the **source** keyword has been configured with the **server** (NTP) or **peer** (NTP) command, that value overrides the global value.

Use the **source** command in a VRF-specific NTP configuration mode or use the **vrf** *vrf-name* keyword and argument to configure the source address for a specific nondefault VRF. Otherwise, the configuration is applied to the default VRF.

Task ID

Task ID	Operations
ip-services	read, write

Examples

This example shows how to configure the router to use the IP address of Packet-over-SONET/SDH (POS) interface 0/0/0/1 as the source address of all outgoing NTP packets:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# source POS 0/0/0/1
```

Related Commands

Command	Description
peer (NTP)	Configures the system clock to synchronize a peer or to be synchronized by a peer.
server (NTP)	Allows the system clock to be synchronized by a time server.

trusted-key

To designate a Network Time Protocol (NTP) trusted key, use the **trusted-key** command in NTP configuration mode. To remove the **trusted-key** command from the configuration file and restore the system to its default condition with respect to this command, use the **no** form of this command.

trusted-key *key-number*

no trusted-key *key-number*

Syntax Description	<i>key-number</i>	Authentication key number to be trusted. Range is from 1 to 65535.

Command Default	No NTP trusted key is designated.

Command Modes	NTP configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. If authentication is enabled, use the trusted-key command to define one or more key numbers (corresponding to the keys defined with the authentication-key [NTP] command) that a NTP system must provide in its NTP packets for this system to synchronize to it. Because the other system must know the correct authentication key, this precaution provides protection against accidentally synchronizing the system to a system that is not trusted.

Task ID	Task ID	Operations
	ip-services	read, write

Examples	The following example shows how to configure the system to synchronize only to systems providing authentication key 42 in its NTP packets:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# authenticate
RP/0/RSP0/CPU0:router(config-ntp)# authentication-key 42 md5 clear key1
```

 trusted-key

```
RP/0/RSP0/CPU0:router(config-ntp)# trusted-key 42
```

Related Commands

Command	Description
authenticate (NTP)	Enables Network Time Protocol (NTP) authentication.
authentication-key (NTP)	Defines an authentication key for a trusted Network Time Protocol (NTP) time source.

update-calendar

To update the calendar periodically from Network Time Protocol (NTP), use the **update-calendar** command in NTP configuration mode. To remove the **update-calendar** command from the configuration file and restore the system to its default condition with respect to the command, use the **no** form of this command.

update-calendar

no update-calendar

Syntax Description This command has no keywords or arguments.

Command Default This command is disabled.

Command Modes NTP configuration

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Your router has a calendar that is separate from the software clock. This calendar runs continuously, even if the router is powered off or rebooted.

If a router is synchronized to an outside time source through NTP, it is a good idea to update the router's calendar with the time learned from NTP. Otherwise, the calendar may gradually lose or gain time.

After you configure the **update-calendar** command, NTP updates the calendar with the software clock every hour.

Task ID	Operations
ip-services	read, write

Examples This example shows how to configure the router to update the calendar periodically from the software clock:

```
RP/0/RSP0/CPU0:router(config)# ntp
RP/0/RSP0/CPU0:router(config-ntp)# update-calendar
```

Related Commands

Command	Description
clock read-calendar	Manually copies the hardware clock (calendar) settings into the software clock.
clock update-calendar	Copies the software clock settings to the hardware clock (calendar).



Object Tracking Commands in the Cisco ASR 9000 Series Router

This chapter describes the Cisco IOS XR software commands used to track objects. For information about how to use these commands to configure object tracking, see *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

- [delay](#), page 580
- [interface \(track\)](#), page 582
- [line-protocol track](#), page 584
- [object](#), page 586
- [route ipv4](#), page 588
- [show track](#), page 590
- [track](#), page 592
- [threshold percentage](#), page 594
- [threshold weight](#), page 596
- [type line-protocol state](#), page 598
- [type list boolean](#), page 600
- [type list threshold percentage](#), page 602
- [type list threshold weight](#), page 604
- [type route reachability](#), page 606
- [type rtr](#), page 608
- [vrf \(track\)](#), page 610

delay

To configure the delay, in seconds, before the track or interface state should be polled for a change in status, use the **delay** command in track configuration mode. To delete the configuration of delay tracking, use the **no** form of this command.

delay {**up**|**down**} *seconds*

no delay {**up**|**down**} [*seconds*]

Syntax Description

delay up <i>seconds</i>	Sets delay of from 1 to 180 seconds before communication of up status of the tracked object or list of objects.
delay down <i>seconds</i>	Sets delay of from 1 to 180 seconds before communication of down status of the tracked object or list of objects.

Command Default

No default behavior or values

Command Modes

Track configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **delay** command can be used in conjunction with all track types:

- [type line-protocol state, on page 598](#)
- [type list boolean, on page 600](#)
- [type route reachability, on page 606](#)

When using the **no** form of the command, the use of the *seconds* argument is optional.

Task ID

Task ID	Operations
sysmgr	read, write

Examples

The following example shows that the tracking process is configured to notify the network administrator that the interface should be polled for its up state in five-second intervals:

```
RP/0/RSP0/CPU0:router# configuration
RP/0/RSP0/CPU0:router(config)# track name1
RP/0/RSP0/CPU0:router(config-track)# delay up 5
```

Related Commands

Command	Description
track	Initiates or identifies a tracking process used to track the status of an object or list of objects.

interface (track)

To select an interface object type for tracking purposes, use the **interface** command in interface configuration mode. To delete the configuration of a track based on a particular interface object type, use the **no** form of this command.

interface *type interface-path-id*

no interface *type interface-path-id*

Syntax Description

<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To access the **interface** command, you must be in line protocol tracking configuration submode.

For information about interface keywords, see *Cisco ASR 9000 Series Aggregation Services Router Interface and Hardware Component Command Reference*.

Task ID

Task ID	Operations
sysmgr	read, write

Examples

The following example shows the **interface** command in the context of object tracking:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# track track12
RP/0/RSP0/CPU0:router(config-track)# type line-protocol state
RP/0/RSP0/CPU0:router(config-track-line-prot)# interface atm 0/2/0/0.1
```

Related Commands

Command	Description
track	Initiates or identifies a tracking process used to track the status of an object or list of objects.
type line-protocol state	Configures tracking of the line protocol state of an interface object.
type list boolean	Configures a tracked list of objects based on a Boolean calculation.
type route reachability	Configures the routing process to notify the tracking process when the route state changes due to a routing update.

line-protocol track

To associate a specific track with an IPsec or GRE interface object, use the **line-protocol track** command in interface configuration mode. To delete the association between the track and the IPsec or GRE interface object, use the **no** form of this command.

line-protocol track *object-name*

no line-protocol track *object-name*

Syntax Description

<i>object-name</i>	Name of object being tracked.

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sysmgr	read, write

Examples

The following example shows how the **line-protocol track** command is used:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# track PREFIX1
RP/0/RSP0/CPU0:router(config-track)# type route reachability
RP/0/RSP0/CPU0:router(config-track-route)# route ipv4 7.0.0.0/24
RP/0/RSP0/CPU0:router(config-track-route)# interface service-ipsec 1
RP/0/RSP0/CPU0:router(config-if)# vrf 1
RP/0/RSP0/CPU0:router(config-if)# ipv4 address 70.0.0.2 255.25.255.0
RP/0/RSP0/CPU0:router(config-if)# line-protocol track PREFIX1
```

Related Commands

Command	Description
interface (track)	Selects an interface object type for tracking purposes.
track	Initiates or identifies a tracking process used to track the status of an object or list of objects.

object

To configure an object for tracking, use the **object** command in list tracking configuration mode. To delete a previously configured track based on an object, use the **no** form of this command.

object *object-name* [**not**]

no object *object-name*

Syntax Description

<i>object-name</i>	Name of the object to be tracked.
not	(Optional) Deletes a previously configured track based on whether an interface object is not up or down.

Command Default

No default behavior or values

Command Modes

List tracking configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To delete a previously configured track based on whether an interface object is *not* up or down, use the **not** keyword together with the **object** command in a list of tracked objects based on a Boolean expression.

The **object** command can be used only for a track based on a Boolean expression.

Task ID

Task ID	Operations
sysmgr	read, write

Examples

The following example shows how to configure an object, using the optional **not** keyword, in a tracked list of objects based on a Boolean calculation:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# track connection100
```

```
RP/0/RSP0/CPU0:router(config-track-list)# type list boolean and  
RP/0/RSP0/CPU0:router(config-track-list)# object obj3 no
```

Related Commands

Command	Description
track	Initiates or identifies a tracking process used to track the status of an object or list of objects.
type list boolean	Configures a tracked list of objects based on a Boolean calculation.

route ipv4

To configure that an IP prefix and subnet mask should be used as the basis to track route reachability, use the **route ipv4** command in route tracking configuration mode. To remove this configuration, use the **no** form of the command.

route ipv4 *IP prefix and subnet mask*

no route ipv4

Syntax Description

IP prefix and subnet mask

Network and subnet mask; for example, 10.56.8.10/16.

Command Default

No default behavior or values

Command Modes

Route tracking configuration

Command History

Release

Release 4.0.0

Modification

This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The *IP prefix* and *subnet mask* arguments are optional for the **no** form of this command.

Task ID

Task ID

sysmgr

Operations

read, write

Examples

The following example displays use of the **route ipv4** command:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# track track22
RP/0/RSP0/CPU0:router(config-track)# type route reachability
RP/0/RSP0/CPU0:router(config-track-route)# route ipv4 10.56.8.10/16
```


Related Commands

Command	Description
type route reachability	Configures the routing process to notify the tracking process when the route state changes due to a routing update.
vrf (track)	Configures a VRF table to be used as the basis to track route reachability.

show track

To display information about objects that were tracked and to specify the format of the report, use the **show track** command in EXEC mode.

show track [*track-name*] **interface** | **ipv4 route**] [**brief**]

Syntax Description

<i>track-name</i>	(Optional) Name of track used for tracking objects; for example, track1.
brief	(Optional) Displays a single line of information related to the preceding argument or keyword.
interface	(Optional) Displays tracked interface objects.
ipv4 route	(Optional) Displays the tracked IPv4 route objects.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show track** command to display information about objects that are tracked by the tracking process. When no arguments or keywords are specified, information for all objects is displayed.

Task ID

Task ID	Operations
sysmgr	read

Examples

The following sample output illustrates use of the **show track** command:

```
RP/0/RSP0/CPU0:router# show track Track_name3
```

```
Track_name3
  List boolean and is DOWN
  1 change, last change 10:26:20 SJC Sun Aug 05 2007
    object name2 not UP
    object name1 UP
```

Related Commands

Command	Description
track	Initiates or identifies a tracking process used to track the status of an object or list of objects.

track

To initiate or identify a tracking process used to track the status of an object or list of objects, use the **track** command in global configuration mode. To remove the tracking process, use the **no** form of this command.

track *track-name*

no track *track-name*

Syntax Description

track <i>track-name</i>	Name of track used for tracking objects; for example, track1.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you use the **track** command, you enter track configuration mode.

Task ID

Task ID	Operations
sysmgr	read, write

Examples

This example shows that the tracking process is configured to notify the network administrator about the up state of the tracked object list every five seconds:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# track LIST2
RP/0/RSP0/CPU0:router# track LIST2 delay up 5
```

Related Commands

Command	Description
delay	Configures the delay, in seconds, before the track or interface state should be polled for a change in status.
show track	Displays information about objects that were tracked and specifies the format of the report.
type line-protocol state	Configures tracking of the line protocol state of an interface object.
type list boolean	Configures a tracked list of objects based on a Boolean calculation.
type route reachability	Configures the routing process to notify the tracking process when the route state changes due to a routing update.

threshold percentage

To configure tracking threshold values based on percentages, use the **threshold percentage** command in track list threshold configuration mode. To remove a threshold percentage, use the **no** form of the command.

threshold percentage up *weight* [**down** *weight*]

Syntax Description

up	Specifies the threshold for the UP state.
<i>weight</i>	Percentage limit at which a track is set to the UP state.
down	Specifies the threshold for the DOWN state.
<i>weight</i>	Percentage limit at which a track is set to the DOWN state.

Command Default

None

Command Modes

Track list threshold configuration

Command History

Release	Modification
Release 4.2.1	This command was introduced.

Usage Guidelines

Use the **threshold percentage** command to specify the tracking threshold value used to determine the state of a percentage threshold-weighted list. A percentage threshold-weighted list is set to the UP state when the percentage of objects in the UP state is greater than or equal to the UP threshold value. A percentage threshold-weighted list is set to the DOWN state when the percentage of objects in UP state is less than or equal to the DOWN threshold value.

Task ID

Task ID	Operation
sysmgr	read, write

Examples

This example shows how to specify the weight thresholds for a threshold-weighted list:

```
RP/0/RSP0/CPU0:router(config)# track 4
RP/0/RSP0/CPU0:router(config-track)# type list threshold weight
RP/0/RSP0/CPU0:router(config-track-list-threshold)# threshold percentage up 50 down 33
```

Related Commands

Command	Description
type list threshold percentage	Configures a tracked list of objects based on a percentage threshold.

threshold weight

To configure tracking threshold values based on weights, use the **threshold weight** command in track list threshold configuration mode. To remove a threshold weight, use the **no** form of the command.

threshold weight up *weight* [**down** *weight*]

Syntax Description

up	Specifies the threshold for the UP state.
<i>weight</i>	Weight limit at which a track is set to the UP state.
down	Specifies the threshold for the DOWN state.
<i>weight</i>	Weight limit at which a track is set to the DOWN state.

Command Default

None

Command Modes

Track list threshold configuration

Command History

Release	Modification
Release 4.2.1	This command was introduced.

Usage Guidelines

Use the **threshold weight** command to specify the threshold value used to determine the state of a threshold-weighted list. When the cumulative sum of the weight of objects in the UP state is greater than or equal to the UP threshold value, the threshold-weighted list is set to the UP state. A threshold-weighted list is set to the DOWN state when the cumulative sum of the weight of objects in the UP state is less than or equal to the DOWN threshold value.

Task ID

Task ID	Operation
sysmgr	read, write

Examples

This example shows how to specify the weight thresholds for a threshold-weighted list:

```
RP/0/RSP0/CPU0:router(config)# track 4
RP/0/RSP0/CPU0:router(config-track)# type list threshold weight
RP/0/RSP0/CPU0:router(config-track-list-threshold)# threshold weight up 18 down 5
```


Related Commands

Command	Description
type list threshold weight	Configures a tracked list of objects based on a weight threshold.

type line-protocol state

To configure tracking of the line protocol state of an interface object, use the **type line-protocol** command in track configuration mode. To delete the configuration of line-protocol tracking, use the **no** form of this command.

type line-protocol state

no type line-protocol state

Command Default No default behavior or values

Command Modes Track configuration

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **type line-protocol state** command can be used in conjunction with the **delay** command to configure the delay, in seconds, before the track or interface state should be polled for a change in its status.

The **type line-protocol state** command enters line-protocol tracking configuration mode.

Task ID	Task ID	Operations
	sysmgr	read, write

Examples This example shows how to use the **type line-protocol state** command:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# track track12
RP/0/RSP0/CPU0:router(config-track)# type line-protocol state
```

Related Commands	Command	Description
	delay	Configures the delay, in seconds, before the track or interface state should be polled for a change in status.

Command	Description
interface (track)	Selects an interface object type for tracking purposes.
show track	Displays information about objects that were tracked and specifies the format of the report.
track	Initiates or identifies a tracking process used to track the status of an object or list of objects.

type list boolean

To configure a tracked list of objects based on a Boolean calculation, use the **type list boolean** command in track configuration mode. To remove an object tracking list based on a Boolean calculation, use the **no** form of the command.

type list boolean {and| or}

no type list boolean {and| or}

Syntax Description

and	Specifies that the list is up if all objects are up, or down if one or more objects are down. For example, when tracking two interfaces, up means that both interfaces are up, and down means that either interface is down.
or	Specifies that the list is up if at least one object is up. For example, when tracking two interfaces, up means that either interface is up, and down means that both interfaces are down.

Command Default

No default behavior or values

Command Modes

Track configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **type list boolean** command enters the list tracking configuration mode, and can be used in conjunction with the **delay** command to configure the delay, in seconds, before the track or interface state should be polled for a change in its status.

To remove a track based on whether an interface object is *not* up or down, use the **not** keyword together with the **object** command as shown in the example that follows.

Task ID

Task ID	Operations
sysmgr	read, write

Examples

This example shows how to use the **type list boolean** command in creating a list of objects to be tracked:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# track LIST2
RP/0/RSP0/CPU0:router(config-track)# type list boolean and
RP/0/RSP0/CPU0:router(config-track-list)# object IPSec1 not
RP/0/RSP0/CPU0:router(config-track-list)# object IPSec2
RP/0/RSP0/CPU0:router(config-track-list)# object PREFIX1
RP/0/RSP0/CPU0:router(config-track-list)# exit
RP/0/RSP0/CPU0:router(config)# track IPSec1
RP/0/RSP0/CPU0:router(config-track)# type line-protocol state
RP/0/RSP0/CPU0:router(config-track-line-prot)# interface GigabitEthernet 0/0/0/3
RP/0/RSP0/CPU0:router(config-track-line-prot)# exit
RP/0/RSP0/CPU0:router(config-track)# track IPSec2
RP/0/RSP0/CPU0:router(config-track)# type line-protocol state
RP/0/RSP0/CPU0:router(config-track-line-prot)# interface ATM0/2/0.1
RP/0/RSP0/CPU0:router(config-track-line-prot)# exit
RP/0/RSP0/CPU0:router(config)# track PREFIX1
RP/0/RSP0/CPU0:router(config-track)# type route reachability
RP/0/RSP0/CPU0:router(config-track-route)# route ipv4 7.0.0.0/24
RP/0/RSP0/CPU0:router(config-track-route)# exit
RP/0/RSP0/CPU0:router(config-track)# interface service-ipsec 1
RP/0/RSP0/CPU0:router(config-if)# vrf 1
RP/0/RSP0/CPU0:router(config-if)# ipv4 address 70.0.0.2 255.255.255.0
RP/0/RSP0/CPU0:router(config-if)# profile vrf_1_ipsec
RP/0/RSP0/CPU0:router(config-if)# line-protocol track LIST2
RP/0/RSP0/CPU0:router(config-if)# tunnel source 80.0.0.2
RP/0/RSP0/CPU0:router(config-if)# tunnel destination 80.0.0.1
RP/0/RSP0/CPU0:router(config-if)# service-location preferred-active 0/2/0
RP/0/RSP0/CPU0:router(config-if)# commit
```

Related Commands

Command	Description
delay	Configures the delay, in seconds, before the track or interface state should be polled for a change in status.
line-protocol track	Associates a specific track with an IPsec or GRE interface object.
object	Configures an object for tracking.
show track	Displays information about objects that were tracked and specifies the format of the report.
track	Initiates or identifies a tracking process used to track the status of an object or list of objects.
type line-protocol state	Configures tracking of the line protocol state of an interface object.
type route reachability	Configures the routing process to notify the tracking process when the route state changes due to a routing update.

type list threshold percentage

To configure a tracked list of objects based on a percentage threshold, use the **type list threshold percentage** command in track configuration mode. To remove an object tracking list based on a percentage threshold, use the **no** form of the command.

type list threshold percentage

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Track configuration

Release	Modification
Release 4.2.1	This command was introduced.

Usage Guidelines Use the **type list threshold percentage** command to create a weighted list of objects to be tracked. A percentage threshold-weighted list is set to the UP state when the percentage of objects in the UP state is greater than or equal to the UP threshold value as set in the **threshold percentage** command. A percentage threshold-weighted list is set to the DOWN state when the percentage of objects in UP state is less than or equal to the DOWN threshold value as set in the **threshold percentage** command.

Use the **object** command to add tracked objects to the threshold-weighted list. A maximum of 200 track objects are allowed.

Task ID	Operation
sysmgr	read, write

Examples This example shows how to add objects to a percentage threshold-weighted list:

```
RP/0/RSP0/CPU0:router(config)# track 4
RP/0/RSP0/CPU0:router(config-track)# type list threshold percentage
RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 1
RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 2
RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 3
```

Related Commands

Command	Description
object	Configures an object for tracking.
threshold percentage	Configures tracking threshold values based on percentages.

type list threshold weight

To configure a tracked list of objects based on a weight threshold, use the **type list threshold weight** command in track configuration mode. To remove an object tracking list based on a weight threshold, use the **no** form of the command.

type list threshold weight

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Track configuration

Command History	Release	Modification
	Release 4.2.1	This command was introduced.

Usage Guidelines Use the **type list threshold weight** command to create a weighted list of objects to be tracked. A threshold-weighted list is set to the UP state when the cumulative sum of the weight of objects in the UP state is greater than or equal to the UP threshold value as set in the **threshold weight** command. A threshold-weighted list is set to the DOWN state when the cumulative sum of the weight of objects in the UP state is less than or equal to the DOWN threshold value as set in the **threshold weight** command.

Use the **object** command to add tracked objects to the threshold-weighted list. A maximum of 200 track objects are allowed.

Task ID	Task ID	Operation
	sysmgr	read, write

Examples This example illustrates how to add objects to a threshold-weighted list:

```
RP/0/RSP0/CPU0:router(config)# track t4
RP/0/RSP0/CPU0:router(config-track)# type list threshold weight
RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 1
RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 1 weight 10
RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 2 weight 5
RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 3 weight 3
```


Related Commands

Command	Description
object	Configures an object for tracking.
threshold weight	Configures tracking threshold values based on weights.

type route reachability

To configure the routing process to notify the tracking process when the route state changes due to a routing update, use the **type route reachability** command in track configuration mode. To remove a track based on route reachability, use the **no** form of this command.

type route reachability

no type route reachability

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes Track configuration

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A tracked IP-route object is considered up and reachable when a routing-table entry exists for the route and the route is not inaccessible.

The **type route reachability** command can be used in conjunction with the **delay** command to configure the delay, in seconds, before the track or interface state should be polled for a change in its status.

The route reachability tracking process is based on either of the following, depending on your router type:

- **vrf**—A VRF table name.
- **route**—An IPv4 prefix consisting of the network and subnet mask (for example, 10.56.8.10/16).

Task ID	Operations
sysmgr	read, write

Examples This example shows how to track for route reachability:

```
RP/0/RSP0/CPU0:router# configure
```

```
RP/0/RSP0/CPU0:router(config)# track track22
RP/0/RSP0/CPU0:router(config-track)# type route reachability
```

Related Commands

Command	Description
delay	Configures the delay, in seconds, before the track or interface state should be polled for a change in status.
show track	Displays information about objects that were tracked and specifies the format of the report.
track	Initiates or identifies a tracking process used to track the status of an object or list of objects.

type rtr

To configure the router to track the return code of IP service level agreement (SLA) operations, use the **type rtr** command in track configuration mode. To remove a track based on IP SLA return code, use the **no** form of this command.

type rtr *ipsla-no* **reachability**

no type rtr

Syntax Description

<i>ipsla-no</i>	IP SLA operation number. Values can range from 1 to 2048.
reachability	Tracks whether the route is reachable or not.

Command Default

None

Command Modes

Track configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **type rtr** command in conjunction with a configuration that uses:

- The **track** keyword in the **permit** command within an ACL definition. For example:

```
ipv4 access-list abf-track
  10 permit any any nexthop track track1 1.2.3.4
```

- An IP service level agreement configuration.

Task ID

Task ID	Operation
sysmgr	read, write

Examples

This example shows how to configure IPSLA object tracking:

```
RP/0/RSP0/CPU0:router# configure  
RP/0/RSP0/CPU0:router(config)# track track22  
RP/0/RSP0/CPU0:router(config-track)# type rtr 1 reachability
```

vrf (track)

To configure a VRF table to be used as the basis to track route reachability, use the **vrf** command in route tracking configuration mode. To delete the configuration of a VRF table for the purpose of IP route tracking purposes, use the **no** form of the command.

vrf *vrf-table-name*

no vrf [*vrf-table-name*]

Syntax Description

<i>vrf-table-name</i>	Network and subnet; for example, 10.56.8.10/16.

Command Default

No default behavior or values

Command Modes

Route tracking configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
sysmgr	read, write

Examples

The following example displays the use of the **vrf** command:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# track track22
RP/0/RSP0/CPU0:router(config-track)# type route reachability
RP/0/RSP0/CPU0:router(config-track-route)# vrf vrf1
```

Related Commands

Command	Description
delay	Configures the delay, in seconds, before the track or interface state should be polled for a change in status.
route ipv4	Configures an IP prefix and subnet mask to be used as the basis to track route reachability.
type route reachability	Configures the routing process to notify the tracking process when the route state changes due to a routing update.



PTP Commands on the Cisco ASR 9000 Series Router

This module describes the commands used to configure the Precision Time Protocol (PTP) in Cisco IOS XR software. PTP is a protocol that provides the ability to distribute time around the network and is based on the IEEE 1588-2008 standard.

For more information about manually setting the router clock, see *Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide*.

For more information about configuring the router to use PTP see the *Configuring PTP on the Cisco ASR 9000 Series Router* module in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

- [announce](#), page 615
- [clock \(PTP\)](#), page 617
- [clock operation](#), page 619
- [clock-advertisement telecom-profile](#), page 621
- [clock-class](#), page 623
- [clock-selection telecom-profile](#), page 625
- [cos \(PTP\)](#), page 626
- [delay-request](#), page 628
- [domain \(PTP\)](#), page 630
- [delay-response](#), page 632
- [dscp \(PTP\)](#), page 634
- [identity](#), page 636
- [log best-master-clock changes](#), page 638
- [master \(PTP\)](#), page 639
- [multicast \(PTP\)](#), page 641
- [priority1](#), page 642

- [priority2, page 644](#)
- [profile \(interface\), page 646](#)
- [profile \(PTP\), page 648](#)
- [port state slave-only, page 650](#)
- [ptp, page 651](#)
- [show ptp advertised-clock, page 653](#)
- [show ptp foreign-masters, page 654](#)
- [show ptp interfaces, page 657](#)
- [show ptp local-clock, page 660](#)
- [show ptp packet-counters, page 661](#)
- [show ptp unicast-peers, page 664](#)
- [source ipv4 address, page 666](#)
- [sync, page 668](#)
- [timescale, page 670](#)
- [time-of-day, page 672](#)
- [time-source, page 673](#)
- [transport \(PTP\), page 675](#)
- [unicast-grant invalid-request, page 677](#)

announce

To configure options for configuring PTP profile announcement messages, use the **announce** command in PTP profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

announce{**frequency** *frequency* | **interval** *interval* | **grant-duration** *duration* | **timeout** *timeout*}

no announce{**frequency**| **interval**| **grant-duration**| **timeout**}

Syntax Description

frequency <i>frequency</i>	Use to specify multiple announce messages per second (2, 4, 8, 16, 32, 64, or 128). Frequency of 4 means that four messages are sent per second.
interval <i>interval</i>	Use to specify one or fewer announce messages per second (every 1, 2, 4, 8, or 16 seconds). Interval of 2 means that an announce message is sent every two seconds.
grant-duration <i>duration</i>	Specifies the length of time that permission to send unicast messages is granted (60-1000 seconds).
timeout <i>timeout</i>	Specifies the number of announce intervals that PTP ports will wait in the Listen state before transitioning to the Master state (2-10).

Command Default

Defaults: grant-duration 600, interval 2, timeout 3.

Command Modes

PTP profile configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.
Release 4.3.0	The grant duration option was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **announce** command can be used configure the global PTP configuration profile which can then be associated with many interfaces. Similarly it can be used in interface PTP configuration mode to set the announce message settings for a specific interface. Any values set in interface PTP configuration mode override the settings in the PTP configuration profile associated with the interface.

The **grant-duration** keyword is used for the ITU-T Telecom Profile.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following sets the announcement interval to 8 seconds in the PTP configuration profile.

```
RP/0/RSP0/CPU0:router(config)# ptp  
RP/0/RSP0/CPU0:router(config-ptp)# profile p1  
RP/0/RSP0/CPU0:router(config-ptp-profile)# announce interval 8
```

clock (PTP)

To enter Precision Time Protocol (PTP) clock configuration mode and run PTP clock configuration command, use the **clock** command in PTP configuration mode.

clock

no clock

Syntax Description This command has no keywords or arguments.

Command Default This command has no default values or behavior.

Command Modes Global PTP configuration

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

PTP clock configuration commands can also be run from global configuration mode by preceding the command string with the **ptp clock** keywords. From PTP clock configuration mode, the various PTP clock settings can be configured.

Task ID	Operation
ethernet-services	read, write

Examples The following example shows how to enter PTP clock configuration mode from global configuration mode.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# clock
RP/0/RSP0/CPU0:router(config-ptp-clock)#
```

Command	Description
ptp , on page 651	Enters PTP configuration mode

clock operation

To configure the type of PTP clock operation, use the **clock operation** command in PTP interface or profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

clock operation {**one-step**|**two-step**}

no clock operation

Syntax Description

one-step	Specifies that the timestamp for the time synchronization message is directly in the synchronization message itself.
two-step	Specifies that the timestamp for the time synchronization message is sent in a message that follows the synchronization message.

Command Default

The default is two-step.

Command Modes

PTP profile configuration
Interface PTP configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **clock operation** command can be used to configure the global PTP configuration profile which can then be associated with many interfaces. Similarly it can be used in interface PTP configuration mode to set the clock operation for a specific interface. Any values set in interface PTP configuration mode override the settings in the PTP configuration profile associated with the interface.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets PTP clock operation to two-step.

```
RP/0/RSP0/CPU0:router(config)# ptp  
RP/0/RSP0/CPU0:router(config-ptp)# profile p1  
RP/0/RSP0/CPU0:router(config-ptp-profile)# clock operation two-step
```


clock-advertisement telecom-profile

To specify that the clock-advertisement behavior (the parameters used in announce messages) will follow the Telecom Profile for frequency (ITU-T G.8265.1), use the **clock-advertisement telecom-profile** command in PTP configuration mode. To remove the setting, use the **no** form of this command.

clock-advertisement telecom-profile

no clock-advertisement

Syntax Description This command has no keywords or arguments.

Command Default The default clock advertisement is compliant with the PTP 1588 standard.

Command Modes PTP configuration

Release	Modification
Release 4.3.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The clock advertisement mode configuration controls the content of announce packets and the port numbers advertised by the router. Use this command to specify that clock advertisement is compliant with Telecom Profile mode instead of the PTP 1588 standard.

Task ID	Operation
ethernet-services	read, write

Examples The following example shows how to set the clock advertisement profile.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# clock-advertisement telecom-profile
```

Command	Description
ptp, on page 651	Enters PTP configuration mode.

 clock-advertisement telecom-profile

clock-class

To configure the clock class to use when advertising a PTP clock, use the **clock-class** command in PTP clock configuration mode. To remove the setting, use the **no** form of this command.

clock-class *class*

no clock-class

Syntax Description

<i>class</i>	Specifies the clock class to use when advertising this clock. Values can range from 0 to 255.

Command Default

The default is that the clock class is derived from platform properties.

Command Modes

PTP clock configuration

Command History

Release	Modification
Release 4.3.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use this command to override the platform value, if needed.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the clock class to 100.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# clock
RP/0/RSP0/CPU0:router(config-ptp-clock)# clock-class 100
```

Related Commands

Command	Description
ptp, on page 651	Enters PTP configuration mode.

clock-selection telecom-profile

To specify that clock-selection behavior (the best-master-clock-algorithm in use) follows the telecom profile for frequency (ITU-T G.8265.1), use the **clock-selection telecom-profile** command in PTP configuration mode. To remove the setting, use the **no** form of this command.

clock-selection telecom-profile

no clock-selection

Syntax Description This command has no keywords or arguments.

Command Default By default, the clock selection algorithm is compliant with the PTP 1588 standard.

Command Modes PTP configuration

Command History	Release	Modification
	Release 4.3.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The clock selection mode configuration controls which best master clock algorithm is used. Use this command to specify that the algorithm is compliant with Telecom Profile mode.

Task ID	Task ID	Operation
	ethernet-services	read, write

Examples The following example shows how to set the clock advertisement profile.

```
RP/0/RSP0/CPU0:router(config-ptp)# clock-selection telecom-profile
```

Related Commands	Command	Description
	ptp , on page 651	Enters PTP configuration mode.

cos (PTP)

To specify the CoS value to use for Precision Time Protocol (PTP) packets sent by the router, use the **cos** command in PTP profile configuration mode or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

cos *number*

no cos

Syntax Description

<i>number</i>	Specifies the CoS value to use (0-7).

Command Default

The default CoS value is 6.

Command Modes

PTP profile configuration
Interface PTP configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **cos** command can be used to configure the global PTP configuration profile which can then be associated with many interfaces. Similarly it can be used in interface PTP configuration mode to set the CoS value for a specific interface. Any values set in interface PTP configuration mode override the settings in the PTP configuration profile associated with the interface.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the CoS value to 3 in the PTP configuration profile p1.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# profile p1
RP/0/RSP0/CPU0:router(config-ptp-profile)# cos 3
```

The following example overrides the CoS value in the profile and sets it to be 2 for the interface:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/0/0/10  
RP/0/RSP0/CPU0:router(config-if) ptp  
RP/0/RSP0/CPU0:router(config-if-ptp)# profile p1  
RP/0/RSP0/CPU0:router(config-if-ptp)# cos 2
```

delay-request

To configure settings for the PTP delay request message, use the **delay-request** command in PTP profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

delay-request {*frequency number* | *interval number*}

no delay-request

Syntax Description

<i>frequency</i>	Specifies multiple announce messages per second (2, 4, 8, 16, 32, 64, or 128). Frequency of 4 means that four messages are sent per second.
<i>interval</i>	Specifies one or fewer announce messages per second (every 1, 2, 4, 8, or 16 seconds). Interval of 2 means that an announce message is sent every two seconds.

Command Default

The default is one second between messages.

Command Modes

PTP configuration mode
Interface PTP configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **delay-request** command can be used to configure the global PTP configuration profile which can then be associated with many interfaces. Similarly it can be used in interface PTP configuration mode to set the delay-request message settings for a specific interface. Any values set in interface PTP configuration mode override the settings in the PTP configuration profile associated with the interface.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the delay request interval in the PTP configuration profile to 8 seconds.

```
RP/0/RSP0/CPU0:router(config)# ptp  
RP/0/RSP0/CPU0:router(config-ptp)# profile p1  
RP/0/RSP0/CPU0:router(config-ptp-profile)# delay-request interval 8
```

domain (PTP)

To specify the domain number for the PTP clock, use the **domain** command in PTP clock configuration mode. To remove the setting, use the **no** form of this command.

domain *number*

no domain

Syntax Description

<i>number</i>	Specifies the domain number to use for this clock (0-255).

Command Default

Default is 0.

Command Modes

PTP clock configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

PTP uses the specified domain number in all its PTP messages and ignores all PTP messages received from a different domain.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the domain to 200.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# clock
RP/0/RSP0/CPU0:router(config-ptp-clock)# domain 200
```

Related Commands

Command	Description
ptp , on page 651	Enters PTP configuration mode.

delay-response

To configure settings for the PTP delay response message, use the **delay-response** command in PTP profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

delay-response {**grant-duration** *duration* | **timeout** *value*}

no delay-response {**grant-duration** | **timeout**}

Syntax Description

<i>duration</i>	Specifies the announce grant duration (60-1000 seconds). If port is in slave state, this is the length of grant which is requested. If the port is in master state, this is the maximum grant which will be allowed.
<i>value</i>	Specifies delay response message timeout value (100-10000 milliseconds). If delay-response messages are not received from a master clock for longer than this timeout, the master is no longer qualified for selection. This setting applies only applies if the clock-selection telecom-profile is specified.

Command Default

Default is grant-duration 600, timeout 5000.

Command Modes

PTP profile configuration
Interface PTP configuration

Command History

Release	Modification
Release 4.3.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **delay-response** command can be used configure the global PTP configuration profile which can then be associated with many interfaces. Similarly it can be used in interface PTP configuration mode to set the delay response value for a specific interface. Any values set in interface PTP configuration mode override the settings in the PTP configuration profile associated with the interface.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the PTP delay response timeout to 200 milliseconds in the PTP configuration profile:

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# profile p1
RP/0/RSP0/CPU0:router(config-ptp-profile)# delay-response timeout 200
```

The following example overrides the delay response timeout value in the profile and sets it to be 150 milliseconds for the interface:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/0/0/10
RP/0/RSP0/CPU0:router(config-if) ptp
RP/0/RSP0/CPU0:router(config-if-ptp)# profile p1
RP/0/RSP0/CPU0:router(config-if-ptp)# delay-response timeout 150
```

dscp (PTP)

To set the DSCP value for use in Precision Time Protocol (PTP) packets sent by the router, use the **dscp** command in PTP profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

dscp *number*

no dscp

Syntax Description

<i>number</i>	Specifies the DSCP value to use (0-63).

Command Default

The default DSCP value is 46.

Command Modes

PTP profile configuration
Interface PTP configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **dscp** command can be used configure the global PTP configuration profile which can then be associated with many interfaces. Similarly it can be used in interface PTP configuration mode to set the DSCP value for a specific interface. Any values set in interface PTP configuration mode override the settings in the PTP configuration profile associated with the interface.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the DSCP value to 20 for PTP operation.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# profile p1
RP/0/RSP0/CPU0:router(config-ptp-profile)# dscp 20
```

The following example overrides the DSCP value in the profile and sets it to be 42 for the interface:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/0/0/10  
RP/0/RSP0/CPU0:router(config-if) ptp  
RP/0/RSP0/CPU0:router(config-if-ptp)# profile p1  
RP/0/RSP0/CPU0:router(config-if-ptp)# dscp 42
```

identity

To configure the PTP clock identity, use the **identity** command in PTP clock configuration mode. To remove the setting, use the **no** form of this command.

identity {**eui-64** *number* | **mac-address** *address*}

no identity {**eui-64** *number* | **mac-address** *address*}

Syntax Description

eui-64 <i>number</i>	Specifies the full EUI-64 number to determine the clock identity.
mac-address <i>address</i>	Specifies the router to determine the clock identity. Use one of the following addressing options to identify the router: • router. Use the router's built-in MAC address as the clock identity • address. Enter a MAC address (H.H.H format).

Command Default

The router for clock identity is derived from the router MAC address.

Command Modes

PTP clock configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You can specify a MAC address or a complete EUI-64 value to derive the clock identity. If you do not use this command, the clock identify is derived from the router's MAC address.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the clock identity to MAC address A.B.C.

```
RP/0/RSP0/CPU0:router(config)# ptp  
RP/0/RSP0/CPU0:router(config-ptp)# clock  
RP/0/RSP0/CPU0:router(config-ptp-clock)# identity mac-address A.B.C
```

Related Commands

Command	Description
ptp , on page 651	Enters PTP configuration mode.

log best-master-clock changes

To enable logging of changes to the best master clock for Precision Time Protocol (PTP), use the **log best-master-clock changes** command in PTP configuration mode. To remove the setting, use the **no** form of this command.

log best-master-clock changes

no log best-master-clock changes

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes PTP configuration

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Operation
logging	read, write

Examples The following example sets up PTP to log the best master clock changes.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# log best-master-clock changes
```

Command	Description
ptp , on page 651	Enters PTP configuration mode.

master (PTP)

To add a master to the list of acceptable Precision Time Protocol (PTP) masters for an interface or profile, use the **master** command in PTP profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

master {*ethernet mac-address*| *ipv4 address*}[**multicast**| *priority number*]

no master {*ethernet mac-address*| *ipv4 address*}[**multicast**| *priority number*]

Syntax Description

ethernet mac-address	Specifies the MAC address of a master (H.H.H format).
ipv4 address	Specifies the IPv4 address of a master.
multicast	Indicates that the master sends multicast message.
priority number	Indicates the priority for selecting between multiple masters (lower numbers are high priority).

Command Default

This command has no default values or behavior.

Command Modes

PTP profile configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The address type used to configure the master must match the PTP transport type configured on the interface. If multiple masters are configured, the router attempts to communicate with all configured masters and selects between the available ones based on priority.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example assigns two masters to the profile and gives higher priority to the master with IPv4 address 10.10.4.5.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# profile p1
RP/0/RSP0/CPU0:router(config-ptp-profile)# master ipv4 10.10.4.5 priority 1
RP/0/RSP0/CPU0:router(config-ptp-profile)# master ipv4 10.10.4.7 priority 2
```

multicast (PTP)

To allow PTP multicast messages to be sent, use the **multicast** command in PTP profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

multicast

no multicast

Syntax Description This command has no keywords or arguments.

Command Default By default, multicast messaging is not enabled for PTP.

Command Modes PTP profile configuration

Command History	Release	Modification
	Release 4.2.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command applies only to ports in the master state. If multicast is configured, announce and sync messages are sent multicast, but delay-response messages are sent unicast.

Task ID	Task ID	Operation
	ethernet-services	read, write

Examples The following example enables PTP multicast messages in the configuration profile:

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# profile p1
RP/0/RSP0/CPU0:router(config-ptp-profile)# multicast
```

The following example overrides the multicast setting in the profile and removes it for the interface:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/0/0/10
RP/0/RSP0/CPU0:router(config-if) ptp
RP/0/RSP0/CPU0:router(config-if-ptp)# profile p1
RP/0/RSP0/CPU0:router(config-if-ptp)# no multicast
```

priority1

To specify the priority 1 number to use when advertising a PTP clock, use the **priority1** command in PTP clock configuration mode. To remove the setting, use the **no** form of this command.

priority1 *number*

no priority1

Syntax Description

<i>number</i>	Specifies the priority 1 number to use for this clock (0-255).

Command Default

Default is 128.

Command Modes

PTP clock configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the priority 1 number to 50

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# clock
RP/0/RSP0/CPU0:router(config-ptp-clock)# priority1 50
```

Related Commands

Command	Description
ptp , on page 651	Enters PTP configuration mode.

Command	Description
priority2 , on page 644	Specifies the priority 2 number to use when advertising a PTP clock.

priority2

To specify the priority 2 number to use when advertising a PTP clock, use the **priority2** command in PTP clock configuration mode. To remove the setting, use the **no** form of this command.

priority2 *number*

no priority2

Syntax Description

<i>number</i>	Specifies the priority 2 number to use for this clock (0-255).

Command Default

Default is 128.

Command Modes

PTP clock configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the priority 2 number to 50

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# clock
RP/0/RSP0/CPU0:router(config-ptp-clock)# priority2 50
```

Related Commands

Command	Description
ptp , on page 651	Enters PTP configuration mode

Command	Description
priority1 , on page 642	Specifies the priority 1 number to use when advertising a PTP clock.

profile (interface)

To assign a Precision Time Protocol (PTP) configuration profile to an interface, use the **profile** command in interface PTP configuration mode. To remove the configuration profile from the interface, use the **no** form of this command.

profile *profile-name*

no profile *profile-name*

Syntax Description

<i>profile-name</i>	Name of profile to associate with the Interface.

Command Default

No configuration profile is associated with the interface.

Command Modes

Interface PTP configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A PTP profile is a configuration template that can be applied to multiple interfaces. Define the profile using the **profile** command in PTP configuration mode.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to assign a configuration profile to a specific interface.

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/0/0/10
RP/0/RSP0/CPU0:router(config-if)# ptp
RP/0/RSP0/CPU0:router(config-if-ptp)# profile tp128
```

Related Commands

Command	Description
profile (PTP) , on page 648	Enters Precision Time Protocol (PTP) profile configuration mode.

profile (PTP)

To enter Precision Time Protocol (PTP) profile configuration mode and run PTP profile configuration commands, use the **profile** command in PTP configuration mode or interface PTP configuration mode.

profile *name*

Syntax Description

<i>name</i>	Enters PTP profile configuration mode for the specified profile name.

Command Default

No default behavior or values

Command Modes

PTP configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A Precision Time Protocol (PTP) profile is a configuration template that can be applied to multiple interfaces. From PTP profile configuration mode, the following PTP profile configuration commands are available:

```
RP/0/RSP0/CPU0:router(config-ptp-profile)# ?
```

```

announce      Announce message options
clear          Clear the uncommitted configuration
clock          PTP clock-operation to use
commit         Commit the configuration changes to running
cos            Specify the CoS-bits value to use
delay-request  Configure the sending of delay-request messages
delay-response Delay-Response message options
describe       Describe a command without taking real actions
do             Run an exec command
dscp           Specify the DSCP value to use
exit           Exit from this submode
master         Add a master to listen to on interfaces using this profile
multicast      Allow multicast messages to be sent
no             Negate a command or set its defaults
port           PTP port options
pwd            Commands used to reach current submode
root           Exit to the global configuration mode
show           Show contents of configuration
source         PTP source address options
sync           Configure how often Sync messages are sent
sync           Sync message options
transport      PTP transport type to use on this interface
unicast-grant  Unicast grant options
```

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to configure the profile tp128:

```
RP/0/RSP0/CPU0:router(config)# ptp  
RP/0/RSP0/CPU0:router(config-ptp)# profile tp128  
RP/0/RSP0/CPU0:router(config-ptp-profile)#
```

Related Commands

Command	Description
profile (interface), on page 646	Assigns a PTP configuration profile to an interface.

port state slave-only

To restrict the interface port state to be slave-only for PTP, use the **port state slave-only** command in PTP profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

port state slave-only

no port state

Syntax Description

This command has no keywords or arguments.

Command Default

Dynamic port state changes are based on the peers with which the port communicates.

Command Modes

PTP profile configuration

Interface PTP configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use this command to force the behavior required by a Telecom Profile slave.

The **port state slave-only** command can be used configure the global PTP configuration profile which can then be associated with many interfaces. Similarly it can be used in interface PTP configuration mode to set the value for a specific interface. Any values set in interface PTP configuration mode override the settings in the PTP configuration profile associated with the interface.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example restricts the PTP port state to be slave-only:

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# profile p1
RP/0/RSP0/CPU0:router(config-ptp)# port state slave-only
```

ptp

To enter Precision Time Protocol (PTP) configuration mode and run PTP configuration commands, use the **ptp** command. Using the command from global configuration mode enters PTP configuration mode. Using the command from interface configuration mode enters interface PTP configuration mode. To remove PTP settings, use the **no** form of this command.

ptp

no ptp

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values.

Command Modes
Global configuration
Interface configuration

Command History	Release	Modification
	Release 4.3.1	Support was added for this command in Bundle Ethernet interface configuration mode.
	Release 4.3.1	Support was added for this command in Bundle Ethernet interface configuration mode.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

PTP configuration commands can also be run from global configuration mode by preceding the command string with the **ptp** keyword. From PTP configuration mode, the following PTP configuration commands are available:

```
RP/0/RSP0/CPU0:router(config-ptp)# ?
clear          Clear the uncommitted configuration
clock          PTP Clock Configuration
clock-advertisement Clock advertisement configuration
clock-selection Clock selection configuration
commit         Commit the configuration changes to running
describe       Describe a command without taking real actions
do             Run an exec command
exit           Exit from this submode
log            Precision Time Protocol logging configuration
no             Negate a command or set its defaults
profile        PTP Profile Configuration
pwd            Commands used to reach current submode
root           Exit to the global configuration mode
```

show Show contents of configuration
time-of-day Precision Time Protocol time-of-day configuration
PTP commands can be run on Gigabit Ethernet interfaces or Bundle Ethernet interfaces.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example shows how to enter PTP configuration mode from global configuration mode.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)#
```

The following example shows how to enter interface PTP configuration mode.

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/0/0/10
RP/0/RSP0/CPU0:router(config-if)# ptp
RP/0/RSP0/CPU0:router(config-if-ptp)#
```

Related Commands

Command	Description
profile (PTP), on page 648	Enters PTP profile configuration mode.

show ptp advertised-clock

To display properties of the clock that the system advertises over Precision Time Protocol (PTP), use the **show ptp advertised-clock** command in EXEC mode.

show ptp advertised-clock

Syntax Description	This command has no keywords or arguments.

Command Default	None

Command Modes	EXEC

Command History	Release	Modification
	Release 4.2.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	ethernet-services	read

Examples	The following shows information about the PTP advertised clock.

```
RP/0/RSP0/CPU0:router# show ptp advertised-clock
Fri Jan  9 04:54:33.345 PST
Clock ID: Local Clock (2651ffffec41c26)
Clock properties:
  Priority1: 128, Priority2: 128, Class: 6, Accuracy: 0xfe
  Offset scaled log variance: 0xffff
  Domain: 0, Time Source: GPS, Timescale: PTP
  Frequency-traceable, Time-traceable
  Current UTC offset: 34 seconds
```

show ptp foreign-masters

To display the Precision Time Protocol (PTP) foreign master clocks that are available to the router, use the **show ptp foreign-masters** command in EXEC mode.

show ptp foreign-masters [*brief*] { **interface** *name* | **location** *node* }

show ptp foreign-masters best

Syntax Description

<i>brief</i>	Lists all foreign-masters known on the router, ordered by the interface on which they were discovered. If this option is omitted, the output also includes detailed clock properties, unicast messages that are granted from the master, length of time the master has been qualified, and information about the clock peer.
<i>name</i>	Displays foreign masters that were discovered the specified interface. For more information, use the question mark (?) online help function
<i>node</i>	Displays foreign masters that were discovered the specified node
best	Displays the state of the best foreign master found in the network

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	read

Examples

The following shows output with the brief option.

```
RP/0/RSP0/CPU0:router# show ptp foreign-masters brief

M=Multicast,Q=Qualified,GM=Grandmaster

Interface      Transport Address          Priority1 State
Gi0/2/0/0      IPv4      192.168.172.122    13      M,Q
                IPv4      192.168.172.123    17      M
Gi0/2/0/1      IPv6      fe80::2b0:4aff:fe6b:f4fc 1      Q,GM
                IPv6      fe80::2b0:4aff:fe6b:1234 18      Q
Gi0/3/0/0      Ethernet  00b0.4a6b.f4fc
```

Examples

The following example shows output for the location 0/2/CPU0, including the brief option.

```
RP/0/RSP0/CPU0:router# show ptp foreign-masters brief location 0/2/CPU0

M=Multicast,Q=Qualified,GM=Grandmaster

Interface      Transport Address          Priority1 State
Gi0/2/0/0      IPv4      192.168.172.122    13      M,Q
                IPv4      192.168.172.123    17      M
Gi0/2/0/1      IPv6      fe80::2b0:4aff:fe6b:f4fc 1      Q,GM
                IPv6      fe80::2b0:4aff:fe6b:1234 18      Q
```

Examples

The following example shows output for the interface GigabitEthernet0/2/0/0, without the brief option.

```
RP/0/RSP0/CPU0:router# show ptp foreign-masters brief interface GigabitEthernet0/2/0/0

Interface GigabitEthernet0/2/0/3 (PTP port number 27):

IPv4, Address 172.108.11.25
  Configured priority: None
  Announce granted: every 2 seconds, 600 seconds
  Sync granted: 16 per-second, 400 seconds
  Delay-Resp granted: 16 per-second, 600 seconds
  Qualified for 6 days, 2 hours, 11 minutes
  Clock ID: ACDE48FFFE234567
  Clock properties:
    Priority1: 1, Priority2: 83, Class: 6, Accuracy: 0x2B
    Offset scaled log variance: 0x27FF, Steps-removed: 5
    Domain: 0, Time Source: GPS, Timescale: PTP
    Frequency-traceable, Time-traceable
    Current UTC offset: 25 seconds
  Parent properties:
    Clock-ID: BADE48FFFE234367
    Port number: 3, Steps Removed: 2

IPv4, Address 172.108.11.23, Multicast
  Configured priority: 27
  Announce granted: every 2 seconds, 600 seconds
  Qualified for 5 days, 4 hours, 27 minutes
  Clock ID: ACDE48FFFE234567
  Clock properties:
    Priority1: 7, Priority2: 83, Class: 6, Accuracy: 0x2B
    Offset scaled log variance: 0x27FF, Steps-removed: 5
    Domain: 0, Time Source: GPS, Timescale: PTP
    Frequency-traceable, Time-traceable
    Current UTC offset: 25 seconds
  Parent properties:
    Clock-ID: BADE48FFFE234367
```

```
Port number: 5, Steps Removed: 1
IPv4, Address 172.108.11.18, Multicast
Configured priority: 11
Not qualified
```

Examples

The following example shows state information for the best foreign master in the network.

```
RP/0/RSP0/CPU0:router# show ptp foreign-masters best

Used to set system frequency and time
IPv4, Address 1.2.3.4
Received on interface GigabitEthernet0/2/0/3 (port number 0x1007)
Clock ID: ACDE48FFFE234567
Best foreign-master for 5 days, 4 hours, 27 minutes
Advertised for 5 days, 4 hours, 20 minutes
Clock properties:
  Priority1: 7, Priority2: 83, Class: 6, Accuracy: 0x2B
  Offset scaled log variance: 0x27FF, Steps-removed: 5
  Domain: 0, Time Source: GPS, Timescale: PTP
  Frequency-traceable, Time-traceable
  Current UTC offset: 25 seconds
Parent properties:
  Clock-ID: BADE48FFFE234367
  Port number: 0x0005
```

show ptp interfaces

To display a summary of the Precision Time Protocol (PTP) port state for the specified interface, use the **show ptp interfaces** command in EXEC mode.

show ptp interfaces [brief] {interface| all}

show ptp interfaces summary location node

Syntax Description

<i>interface</i>	Specifies the interface. For more information, use the question mark (?) online help function.
all	Displays information for all interfaces.
brief	Displays a one-line summary of the functional state of the interface (or all interfaces).
location node	Displays information for the specified node

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	read

Examples

The following shows that the GigabitEthernet0/2/0/3 interface is in the master state.

```
RP/0/RSP0/CPU0:router# show ptp interfaces GigabitEthernet0/2/0/3
```

show ptp interfaces

```
GigabitEthernet0/2/0/3 is in MASTER state
PTP port number: 1
IPv4 transport: IPv4 address 1.2.3.4
Linestate: Up
Mechanism: Two-step delay-request-response
  Sync rate: every 2 seconds
  Announce rate: every 8 seconds, timeout 5
  Delay-Req rate: every 4 seconds
CoS: 6, DSCP: 46
Platform capabilities:
  Supported:      One-step, Ethernet
  Not-Supported: IPv6, Multicast, Slave
  Max-Sync-rate: 4 per second
Master state only
23 Unicast peers
```

Examples

The following shows that the GigabitEthernet0/1/0/3 interface is in the uncalibrated state.

```
RP/0/RSP0/CPU0:router# show ptp interfaces GigabitEthernet0/1/0/3
```

```
GigabitEthernet0/1/0/3 is in UNCALIBRATED state
PTP port number: 4
IPv4 transport: IPv4 address 5.4.3.2
Linestate: Up
Mechanism: Two-step delay-request-response, Slave-only
  Sync rate: 2 per second
  Announce rate: 2 per second, timeout 4
  Delay-Req interval: 4 per second
CoS: 5, DSCP: 23
Platform capabilities:
  Supported:      One-step, Ethernet, Multicast, Slave
  Not-Supported: IPv6
  Max-Sync-rate: 2 per second
Master table:
(K = Known, Q = Qualified, GM = Grandmaster)
  IPv4 address 5.4.3.3: priority 5, multicast, K,Q,GM
  IPv4 address 5.4.3.4: priority not set
  MAC-address 12ab.7431.327c: priority 3, K
Slave state only
```

Examples

The following shows output with the **brief** keyword specified.

```
RP/0/RSP0/CPU0:router# show ptp interfaces brief
```

Intf Name	Port Number	Port State	Transport	Line State	Mechanism
Gi0/2/0/0	1	MASTER	IPv4	Up	2-step DRRM
Gi0/2/0/1	5	PASSIVE	Ethernet	Up	1-step DRRM
Gi0/2/0/2	23	MASTER	Ethernet	Up	2-step DRRM
Gi0/2/0/0	6	INIT	IPv4	Down	2-step DRRM

Examples

The following shows summary output for the location 0/2/cpu0.

```
RP/0/RSP0/CPU0:router# show ptp interfaces summary location 0/2/cpu0
```

```
=====
Interface port states
=====
INIT                11
LISTENING           27
PASSIVE             12
PRE-MASTER          2
MASTER              50
```

UNCALIBRATED	0
SLAVE	1
FAULTY	0

Total	103

show ptp local-clock

To display properties of the local Precision Time Protocol (PTP) clock, use the **show ptp local-clock** command in EXEC mode.

show ptp local-clock

Syntax Description	This command has no keywords or arguments.

Command Default	None

Command Modes	EXEC

Command History	Release	Modification
	Release 4.2.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	ethernet-services	read

Examples	The following shows information about the local PTP clock.

```
RP/0/RSP0/CPU0:router# show ptp local-clock
```

```
Sat Jul 28 14:15:54.357 UTC
Clock ID: 2651ffffec4496e
Clock properties:
  Priority1: 128, Priority2: 128, Class: 248, Accuracy: 0xfe
  Offset scaled log variance: 0xffff
  Domain: 0, Time Source: Internal, Timescale: ARB
  No frequency or time traceability
  Current UTC offset: 34 seconds
```


show ptp packet-counters

To display counters for packets received and send by Precision Time Protocol (PTP), use the **show ptp packet-counters** command in EXEC mode.

show ptp packet-counters *location node*

show ptp packet-counters *interface detail*

show ptp packet-counters *interface master* {**ipv4** *ipv4-address* | **ethernet** *ethernet-address*}

Syntax Description

location node	Displays information for the specified node
<i>interface</i>	Specifies the interface.
detail	Displays detailed information.
master	Displays information regarding the PTP master.
<i>ipv4-address</i>	Specifies an IPv4 address.
<i>ethernet-address</i>	Specifies an Ethernet address.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
ethernet-services	read

Examples

The following displays the packet counters for the GigabitEthernet0/2/0/1 interface.

```
RP/0/RSP0/CPU0:router# show ptp packet-counters GigabitEthernet0/2/0/1
```

Packets	Sent	Received	Dropped
Announce	3	83	11
Sync	0	32	5
Follow-Up	0	31	0
Delay-Req	22	0	0
Delay-Resp	0	21	7
Pdelay-Req	0	7	0
Pdelay-Resp	0	0	0
Pdelay-Resp-Follow-Up	0	0	0
Signaling	2	1	0
Management	0	0	0
Other	0	3	12
TOTAL	27	178	35

Examples

The following displays the packet counters with additional details for the GigabitEthernet0/2/0/1 interface.

```
RP/0/RSP0/CPU0:router# show ptp packet-counters GigabitEthernet0/2/0/1 details
```

Packets	Sent	Received	Dropped
Announce	3	83	11
Sync	0	32	5
Follow-Up	0	31	0
Delay-Req	22	0	0
Delay-Resp	0	21	7
Pdelay-Req	0	7	0
Pdelay-Resp	0	0	0
Pdelay-Resp-Follow-Up	0	0	0
Signaling	2	1	0
Management	0	0	0
Other	0	3	12
TOTAL	27	178	35

Master IPv4 5.4.3.4:

Packets	Sent	Received	Dropped
Announce	1	40	1
Sync	0	23	4
Follow-Up	0	14	0
Delay-Req	12	0	0
Delay-Resp	0	10	7
Pdelay-Req	0	7	0
Pdelay-Resp	0	0	0
Pdelay-Resp-Follow-Up	0	0	0
Signaling	2	1	0
Management	0	0	0
Other	0	3	12
TOTAL	15	98	24

Master Ethernet 12ab.7431.327c:

Packets	Sent	Received	Dropped
Announce	2	43	10
Sync	0	9	1
Follow-Up	0	17	0
Delay-Req	10	0	0
Delay-Resp	0	11	0
Pdelay-Req	0	0	0

Pdelay-Resp	0	0	0
Pdelay-Resp-Follow-Up	0	0	0
Signaling	0	0	0
Management	0	0	0
Other	0	0	0
	----	----	----
TOTAL	12	80	11

Examples

The following displays the packet counters for the master with IPv4 address 5.4.3.4 for the GigabitEthernet0/2/0/1 interface.

```
RP/0/RSP0/CPU0:router# show ptp packet-counters GigabitEthernet0/2/0/1 master ipv4 5.4.3.4
```

Master IPv4 5.4.3.4:			
Packets	Sent	Received	Dropped
-----	-----	-----	-----
Announce	1	40	1
Sync	0	23	4
Follow-Up	0	14	0
Delay-Req	12	0	0
Delay-Resp	0	10	7
Pdelay-Req	0	7	0
Pdelay-Resp	0	0	0
Pdelay-Resp-Follow-Up	0	0	0
Signaling	2	1	0
Management	0	0	0
Other	0	3	12
	----	----	----
TOTAL	15	98	24

Examples

The following displays the packet counters for the location 0/2/cpu0 for the GigabitEthernet0/2/0/1 interface.

```
RP/0/RSP0/CPU0:router# show ptp packet-counters location 0/2/cpu0
```

Packets	Sent	Received	Dropped
-----	-----	-----	-----
Announce	1735	101	52
Sync	3753	32	5
Follow-Up	3751	32	7
Delay-Req	0	4073	108
Delay-Resp	4073	0	0
Pdelay-Req	0	7	0
Pdelay-Resp	0	0	0
Pdelay-Resp-Follow-Up	0	0	0
Signaling	73	18	0
Management	0	0	0
Other	0	3	218
	----	----	----
TOTAL	13385	4266	390

Drop Reason	Drop Count
-----	-----
Not ready for packets	289
Wrong domain number	71
Packet too short	1
Local packet received, same port number	7
Local packet received, higher port number	11
Local packet received, lower port number	11
No timestamp received with packet	0
Zero timestamp received with packet	0

TOTAL	

show ptp unicast-peers

To display information on the peers to which Precision Time Protocol (PTP) is sending unicast messages, use the **show ptp unicast-peers** command in EXEC mode.

show ptp unicast-peers *interface*

Syntax Description	<i>interface</i>	Displays information for the specified interface.
Command Default	None	
Command Modes	EXEC	
Command History	Release	Modification
	Release 4.2.0	This command was introduced.
Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.	
Task ID	Task ID	Operation
	ethernet-services	read

Examples The following example shows PTP unicast peer information for the GigabitEthernet0/2/0/1 interface.

```
RP/0/RSP0/CPU0:router# show ptp unicast-peers GigabitEthernet0/2/0/1
Interface GigabitEthernet0/2/0/1:
  IPv4-address 1.2.3.4
    Announce granted: every 2 seconds, 600 seconds
    Sync granted:    16 per second, 600 seconds
    Delay-Resp granted: 16 per second, 600 seconds
  IPv4-address 1.2.3.5
    Announce granted: every 1 second, 400 seconds
  IPv4-address 1.2.3.6
    Delay-Resp granted: 16 per second, 600 seconds
```

Examples

The following example shows PTP unicast peer information for all interfaces.

```
RP/0/RSP0/CPU0:router# show ptp unicast-peers

Interface GigabitEthernet0/2/0/1:
  IPv4-address 1.2.3.4
    Announce granted: every 2 seconds, 600 seconds
    Sync granted: 16 per second, 600 seconds
    Delay-Resp granted: 16 per second, 600 seconds
  IPv4-address 1.2.3.5
    Announce granted: every 1 second, 400 seconds
  IPv4-address 1.2.3.6
    Delay-Resp granted: 16 per second, 600 seconds

Interface GigabitEthernet0/3/0/2:
  Mac-address 00b0.4a6b.f4fc
    Announce granted: every 2 seconds, 600 seconds
    Sync granted: 16 per second, 600 seconds
    Delay-Resp granted: 16 per second, 600 seconds
  Mac-address 00b0.4a6b.f4fd
    Announce granted: every 1 second, 400 seconds

Interface GigabitEthernet0/3/0/3:
  No known peers
```

source ipv4 address

To specify the source IPv4 address to use when sending IPv4 packets, use the **source ipv4 address** command in PTP profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

source ipv4 address *address*

no source ipv4 address

Syntax Description

<i>address</i>	Specifies an IPv4 address.

Command Default

This command has no default values or behavior.

Command Modes

PTP profile configuration
Interface PTP configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **source ipv4 address** command can be used configure the global PTP configuration profile which can then be associated with many interfaces. Similarly it can be used in interface PTP configuration mode to set the source IPv4 address for a specific interface. Any values set in interface PTP configuration mode override the settings in the PTP configuration profile associated with the interface.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example specifies the source IPv4 address 10.10.10.4 for PTP packets.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# profile p1
RP/0/RSP0/CPU0:router(config-ptp-profile)# source ipv4 address 10.10.10.4
```

The following example overrides the source IPv4 address in the profile and sets it to be 10.10.10.6 for the interface:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/0/0/10  
RP/0/RSP0/CPU0:router(config-if) ptp  
RP/0/RSP0/CPU0:router(config-if-ptp)# profile p1  
RP/0/RSP0/CPU0:router(config-if-ptp)# source ipv4 address 10.10.10.6
```

sync

To configure settings for PTP sync messages, use the **sync** command in PTP profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

sync {**frequency** *frequency* | **grant-duration** *duration* | **interval** *interval* | **timeout** *timeout*}

no sync {**frequency**| **grant-duration**| **interval**| **timeout**}

Syntax Description

frequency <i>frequency</i>	Use to specify multiple sync messages per second (2, 4, 8, 16, 32, 64, or 128). Frequency of 4 means that four messages are sent per second.
grant-duration <i>duration</i>	Specifies the announce grant duration (60-1000 seconds). If the port is in the slave state, this is the grant that is requested. If the port is in the master state, this is the maximum grant that is allowed.
interval <i>interval</i>	Use to specify one or fewer sync messages per second (every 1, 2, 4, 8, or 16 seconds). Interval of 2 means that a sync message is sent every two seconds.
timeout <i>timeout</i>	Specifies the time after which the sync message times out (100-10000 milliseconds).

Command Default

Defaults: grant-duration 600, interval 1, timeout 5000.

Command Modes

PTP profile configuration
Interface PTP configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.
Release 4.3.0	The grant-duration and timeout keywords were added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **sync** command can be used configure the global PTP configuration profile which can then be associated with many interfaces. Similarly it can be used in interface PTP configuration mode to set the sync value for

a specific interface. Any values set in interface PTP configuration mode override the settings in the PTP configuration profile associated with the interface.

The **grant-duration** and **timeout** keywords are used for the ITU-T Telecom Profile. A frequency value of 128 messages per second is valid for the ITU-T Telecom Profile only.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the PTP sync timeout to 2000 milliseconds.

```
RP/0/RSP0/CPU0:router(config)# ptp  
RP/0/RSP0/CPU0:router(config-ptp)# profile p1  
RP/0/RSP0/CPU0:router(config-ptp-profile)# sync frequency 2000
```

The following example overrides the sync frequency value in the profile and sets it to be 1500 milliseconds for the interface:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/0/0/10  
RP/0/RSP0/CPU0:router(config-if) ptp  
RP/0/RSP0/CPU0:router(config-if-ptp)# profile p1  
RP/0/RSP0/CPU0:router(config-if-ptp)# sync frequency 1500
```

timescale

To set the time scale to use when advertising time for Precision Time Protocol (PTP), use the **timescale** command in PTP clock configuration mode. To remove the setting, use the **no** form of this command.

timescale {ARB| PTP}

no timescale

Syntax Description

ARB	Specifies ARB (arbitrary) time.
PTP	Specifies PTP time.

Command Default

The default value is derived from platform properties.

Command Modes

PTP clock configuration

Command History

Release	Modification
Release 4.2.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use this command to override the platform value, if needed.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the time scale to ARB.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# clock
RP/0/RSP0/CPU0:router(config-ptp-clock)# timescale ARB
```

Related Commands

Command	Description
ptp , on page 651	Enters PTP configuration mode.

time-of-day

To set the priority used by Precision Time Protocol (PTP) when selecting between PTP and other sources for time-of-day on the router (for example GPS), use the **time-of-day** command in PTP configuration mode. To remove the setting, use the **no** form of this command.

time-of-day *priority number*

no time-of-day *priority*

Syntax Description	priority <i>number</i>	Specifies the time of day priority to rank a foreign PTP grand master against other time sources, such as GPS (1-255).

Command Default	The default is priority 100.

Command Modes	PTP configuration

Command History	Release	Modification
	Release 4.2.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	ethernet-services	read, write

Examples	The following example sets the time of day priority to 200.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# time-of-day priority 200
```

time-source

To set the time source advertised in announcement messages by the local clock for Precision Time Protocol (PTP), use the **clock time-source** command in PTP clock configuration mode. To remove the setting, use the **no** form of this command.

time-source *source*

no time-source

Syntax Description

<i>source</i>	Specifies the type of time source: GPS, NTP, PTP, atomic-clock, hand-set, internal oscillator, other, or terrestrial radio.

Command Default

The default is the value specified by the platform.

Command Modes

PTP clock configuration

Command History

Release	Modification
Release 4.2.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use this command to override the platform value, if needed, using any of the time-source values specified in the IEEE 1588-2008 standard.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the time source to PTP.

```
RP/0/RSP0/CPU0:router(config)# ptp  
RP/0/RSP0/CPU0:router(config-ptp)# clock  
RP/0/RSP0/CPU0:router(config-ptp-clock)# time-source ptp
```

Related Commands

Command	Description
ptp, on page 651	Enters PTP configuration mode.

transport (PTP)

To specify the PTP transport type, use the **transport** command in PTP profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

transport {ethernet| ipv4}

no transport

Syntax Description

ethernet	Specifies that Ethernet is used as the transport type on the interface.
ipv4	Specifies IPv4 is used as the transport type on the interface

Command Default

This command has no default values or behavior.

Command Modes

PTP profile configuration
Interface PTP configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **transport** command can be used configure the global PTP configuration profile which can then be associated with many interfaces. Similarly it can be used in interface PTP configuration mode to set the transport type for a specific interface. Any values set in interface PTP configuration mode override the settings in the PTP configuration profile associated with the interface.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example sets the transport type to be Ethernet.

```
RP/0/RSP0/CPU0:router(config)# ptp  
RP/0/RSP0/CPU0:router(config-ptp)# profile p1
```

```
RP/0/RSP0/CPU0:router(config-ptp-profile)# transport ethernet
```

The following example overrides the transport type in the profile and sets it to be ipv4 for the interface:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/0/0/10  
RP/0/RSP0/CPU0:router(config-if) ptp  
RP/0/RSP0/CPU0:router(config-if-ptp)# profile p1  
RP/0/RSP0/CPU0:router(config-if-ptp)# transport ipv4
```


unicast-grant invalid-request

To specify whether unicast grant requests with unacceptable parameters are denied or granted with reduced parameters, use the **unicast-grant invalid-request** command in PTP profile configuration or interface PTP configuration mode. To remove the setting, use the **no** form of this command.

unicast-grant invalid-request {deny| reduce}

no unicast-grant invalid-request

Syntax Description

deny	Indicates that unicast grant requests with unacceptable parameters are denied. For example, assume that a request for a grant is received with a packet interval of 1 per second and duration of 600 seconds, and that the maximum packet interval is 2 per second and duration is 500 seconds. If deny is configured, the grant will be denied.
reduce	Indicates that unicast grant requests with unacceptable parameters are granted with reduced parameters. For example, assume that a request for a grant is received with a packet interval of 1 per second and duration of 600 seconds, and that the maximum packet interval is 2 per second and duration is 500 seconds. If reduce is configured, a grant with packet interval of 2-per-second and duration of 500 seconds will be granted.

Command Default

The default is **reduce**.

Command Modes

PTP profile configuration
Interface PTP configuration

Command History

Release	Modification
Release 4.2.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **unicast-grant invalid-request** command can be used to configure the global PTP configuration profile which can then be associated with many interfaces. Similarly it can be used in interface PTP configuration mode to set the unicast-grant invalid-request value for a specific interface. Any values set in interface PTP configuration mode override the settings in the PTP configuration profile associated with the interface.

Task ID

Task ID	Operation
ethernet-services	read, write

Examples

The following example determines that unicast grant requests with unacceptable parameters are granted with reduced parameters.

```
RP/0/RSP0/CPU0:router(config)# ptp
RP/0/RSP0/CPU0:router(config-ptp)# profile p1
RP/0/RSP0/CPU0:router(config-ptp-profile)# unicast-grant invalid-request reduce
```

The following example overrides the unicast grant value in the profile and sets it to be deny for the interface:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE 0/0/0/10
RP/0/RSP0/CPU0:router(config-if) ptp
RP/0/RSP0/CPU0:router(config-if-ptp)# profile p1
RP/0/RSP0/CPU0:router(config-if-ptp)# unicast-grant invalid-request deny
```



Process and Memory Management Commands on the Cisco ASR 9000 Series Router

This chapter describes the Cisco IOS XR software commands used to manage processes and memory.

For more information about using the process and memory management commands to perform troubleshooting tasks, see *Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide*.

- [clear context, page 680](#)
- [dumpcore, page 682](#)
- [exception filepath, page 685](#)
- [exception pakmem, page 689](#)
- [exception sparse, page 691](#)
- [exception sprsize, page 693](#)
- [follow, page 695](#)
- [monitor threads, page 702](#)
- [process, page 706](#)
- [process core, page 709](#)
- [process mandatory, page 711](#)
- [show context, page 713](#)
- [show dll, page 716](#)
- [show exception, page 719](#)
- [show memory, page 722](#)
- [show memory compare, page 726](#)
- [show memory heap, page 729](#)
- [show processes, page 734](#)

clear context

To clear core dump context information, use the **clear context** command in the appropriate mode.

clear context location {*node-id*| **all**}

Syntax Description

location { <i>node-id</i> all }	(Optional) Clears core dump context information for a specified node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Use the all keyword to indicate all nodes.

Command Default

No default behavior or values

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **clear context** command to clear core dump context information. If you do not specify a node with the **location node-id** keyword and argument, this command clears core dump context information for all nodes.

Use the **show context** command to display core dump context information.

Task ID

Task ID	Operations
diag	execute

Examples

The following example shows how to clear core dump context information:

```
RP/0/RSP0/CPU0:router# clear context
```

Related Commands

Command	Description
show context	Displays core dump context information.

dumpcore

To manually generate a core dump, use the **dumpcore** command in administration EXEC mode or in EXEC mode.

dumpcore {**running**|**suspended**} *job-id* **location** *node-id*

Syntax Description

running	Generates a core dump for a running process.
suspended	Suspends a process, generates a core dump for the process, and resumes the process.
<i>job-id</i>	Process instance identifier.
location <i>node-id</i>	Generates a core dump for a process running on the specified node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC, Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When a process crashes on the Cisco IOS XR software, a core dump file of the event is written to a designated destination without bringing down the router. Upon receiving notification that a process has terminated abnormally, the Cisco IOS XR software then respawns the crashed process. Core dump files are used by Cisco Technical Support Center engineers and development engineers to debug the Cisco IOS XR software.

Core dumps can be generated manually for a process, even when a process has not crashed. Two modes exist to generate a core dump manually:

- **running** —Generates a core dump for a running process. This mode can be used to generate a core dump on a critical process (a process whose suspension could have a negative impact on the performance of the router) because the core dump file is generated independently, that is, the process continues to run as the core dump file is being generated.

- **suspended** —Suspends a process, generates a core dump for the process, and resumes the process. Whenever the process is suspended, this mode ensures data consistency in the core dump file.

Core dump files contain the following information about a crashed process:

- Register information
- Thread status information
- Process status information
- Selected memory segments

Task ID

Task ID	Operations
diag	read, write

Examples

The following example shows how to generate a core dump in suspended mode for the process instance 52:

```
RP/0/RSP0/CPU0:router# dumpcore suspended 52
```

```
RP/0/RP0/CPU0:Sep 22 01:40:26.982 : sysmgr[71]: process in stop/continue state 4104
RP/0/RP0/CPU0:Sep 22 01:40:26.989 : dumper[54]: %DUMPER-4-CORE_INFO : Core for pid = 4104
(pkg/bin/devc-conaux) requested by pkg/bin/dumper_gen@node0 RP0 CPU0
RP/0/RP0/CPU0:Sep 22 01:40:26.993 : dumper[54]: %DUMPER-6-SPARSE_CORE_DUMP :
Sparse core dump as configured dump sparse for all
RP/0/RP0/CPU0:Sep 22 01:40:26.995 : dumper[54]: %DUMPER-7-DLL_INFO_HEAD : DLL path
Text addr. Text size Data addr. Data size Version
RP/0/RP0/CPU0:Sep 22 01:40:26.996 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libplatform.dll 0xfc0d5000 0x0000a914 0xfc0e0000 0x00002000 0
RP/0/RP0/CPU0:Sep 22 01:40:26.996 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libsysmgr.dll 0xfc0e2000 0x0000ab48 0xfc0c295c 0x00000368 0
RP/0/RP0/CPU0:Sep 22 01:40:26.997 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libinfra.dll 0xfc0ed000 0x00032de0 0xfc120000 0x00000c90 0
RP/0/RP0/CPU0:Sep 22 01:40:26.997 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libbios.dll 0xfc121000 0x0002c4bc 0xfc14e000 0x00002000 0
RP/0/RP0/CPU0:Sep 22 01:40:26.997 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libc.dll 0xfc150000 0x00077ae0 0xfc1c8000 0x00002000 0
RP/0/RP0/CPU0:Sep 22 01:40:26.998 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libsyslog.dll 0xfc1d2000 0x0000530c 0xfc120c90 0x00000308 0
RP/0/RP0/CPU0:Sep 22 01:40:26.998 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libbackplane.dll 0xfc1d8000 0x0000134c 0xfc0c2e4c 0x000000a8 0
RP/0/RP0/CPU0:Sep 22 01:40:26.999 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libnodeid.dll 0xfc1e5000 0x00009114 0xfc1e41a8 0x00000208 0
RP/0/RP0/CPU0:Sep 22 01:40:26.999 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libttyserver.dll 0xfc1f1000 0x0003dfcc 0xfc22f000 0x00002000 0
RP/0/RP0/CPU0:Sep 22 01:40:27.000 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libttytrace.dll 0xfc236000 0x00004024 0xfc1e44b8 0x000001c8 0
RP/0/RP0/CPU0:Sep 22 01:40:27.000 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libdebug.dll 0xfc23b000 0x0000ef64 0xfc1e4680 0x00000550 0
RP/0/RP0/CPU0:Sep 22 01:40:27.001 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libprocfs_util.dll 0xfc24a000 0x00004e2c 0xfc1e4bd0 0x000002a8 0
RP/0/RP0/CPU0:Sep 22 01:40:27.001 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libsysdb.dll 0xfc24f000 0x000452e0 0xfc295000 0x00000758 0
RP/0/RP0/CPU0:Sep 22 01:40:27.001 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libsysdbutils.dll 0xfc296000 0x0000ae08 0xfc295758 0x000003ec 0
RP/0/RP0/CPU0:Sep 22 01:40:27.002 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libtty_svr_error.dll 0xfc2a1000 0x0000172c 0xfc1e4e78 0x00000088 0
RP/0/RP0/CPU0:Sep 22 01:40:27.002 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libtty_error.dll 0xfc2a3000 0x00001610 0xfc1e4f00 0x00000088 0
RP/0/RP0/CPU0:Sep 22 01:40:27.003 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libwd_evm.dll 0xfc2a5000 0x0000481c 0xfc295b44 0x00000188 0
```

dumpcore

```

RP/0/RP0/CPU0Sep 22 01:40:27.003 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libttydb.dll 0xfc2aa000 0x000051dc 0xfc295ccc 0x00000188      0
RP/0/RP0/CPU0Sep 22 01:40:27.004 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libttydb_error.dll 0xfc23a024 0x00000f0c 0xfc295e54 0x00000088      0
RP/0/RP0/CPU0Sep 22 01:40:27.004 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/librs232.dll 0xfc2b0000 0x00009c28 0xfc2ba000 0x00000470      0
RP/0/RP0/CPU0Sep 22 01:40:27.005 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/lib_rs232_error.dll 0xfc2bb000 0x00000f8c 0xfc295edc 0x00000088      0
RP/0/RP0/CPU0Sep 22 01:40:27.005 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libst16550.dll 0xfc2bc000 0x00008ed4 0xfc2ba470 0x00000430      0
RP/0/RP0/CPU0Sep 22 01:40:27.006 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libconaux.dll 0xfc2c5000 0x00001dc0 0xfc2ba8a0 0x000001a8      0
RP/0/RP0/CPU0Sep 22 01:40:27.006 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/lib_conaux_error.dll 0xfc1ee114 0x00000e78 0xfc295f64 0x00000088      0
RP/0/RP0/CPU0Sep 22 01:40:27.007 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libttyutil.dll 0xfc2c7000 0x00003078 0xfc2baa48 0x00000168      0
RP/0/RP0/CPU0Sep 22 01:40:27.007 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libbag.dll 0xfc431000 0x0000ee98 0xfc40cc94 0x00000368      0
RP/0/RP0/CPU0Sep 22 01:40:27.008 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libchkpt.dll 0xfc474000 0x0002ecf8 0xfc4a3000 0x00000950      0
RP/0/RP0/CPU0Sep 22 01:40:27.008 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libsysdbbackend.dll 0xfc8ed000 0x0000997c 0xfc8d3aa8 0x0000028c      0
RP/0/RP0/CPU0Sep 22 01:40:27.008 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libttygmtconnection.dll 0xfc85000 0x00004208 0xfc8ea000 0x00000468      0
RP/0/RP0/CPU0Sep 22 01:40:27.009 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libttygmt.dll 0xfcea4000 0x0000e944 0xfc8abf0 0x000003c8      0
RP/0/RP0/CPU0Sep 22 01:40:27.009 : dumper[54]: %DUMPER-7-DLL_INFO :
/pkg/lib/libttnmspc.dll 0xfcec7000 0x00004a70 0xfcec6644 0x000002c8      0
RP/0/RP0/CPU0Sep 22 01:40:28.396 : dumper[54]: %DUMPER-5-CORE_FILE_NAME :
Core for process pkg/bin/devc-conaux at harddisk:/coredump/devc-conaux.by.
dumper_gen.sparse.20040922-014027.node0 RP0 CPU0.ppc.Z
RP/0/RP0/CPU0Sep 22 01:40:32.309 : dumper[54]: %DUMPER-5-DUMP_SUCCESS : Core dump success

```


exception filepath

To modify core dump settings, use the **exception filepath** command in the appropriate configuration mode. To remove the configuration, use the **no** form of this command.

exception [**choice preference**] [**compress** {**on** | **off**}] **filename** *filename lower-limit-higher-limit* **filepath** *filepath-name*

no exception [**choice preference**] [**compress** {**on** | **off**}] **filename** *filename lower-limit-higher-limit* **filepath** *filepath-name*

Syntax Description

choice preference	(Optional) Configures the order of preference for the destination of core dump files. Up to the three destinations can be defined. Valid values are 1 to 3.
compress { on off }	(Optional) Specifies whether or not the core dump file should be sent compressed. By default, core dump files are sent compressed. If you specify the compress keyword, you must specify one of the following required keywords: • on —Compresses the core dump file before sending it. • off —Does not compress the core dump file before sending it.
filename <i>filename lower-limit-higher-limit</i>	(Optional) Specifies the filename to be appended to core dump files and the lower and higher limit range of core dump files to be sent to a specified destination before being recycled by the circular buffer. filename <i>filename lower-limit-higher-limit</i> See Table 43: Default Core Dump File Naming Convention Description, on page 687 for a description of the default core dump file naming convention. Valid filename <i>filename lower-limit-higher-limit</i> values for the <i>lower-limit</i> argument are 0 to 4. Valid values for the <i>higher-limit</i> argument are 5 to 64. A hyphen (-) must immediately follow the <i>lower-limit</i> argument. Note To uniquely identify each core dump file, a value is appended to each core dump file, beginning with the lower limit value configured for the <i>lower-limit</i> argument and continuing until the higher limit value configured for the <i>higher-limit</i> argument has been reached. After the higher limit value has been reached, the Cisco IOS XR software begins to recycle the values appended to core dump files, beginning with the lower limit value.
<i>filepath-name</i>	Local file system or network protocol, followed by the directory path. All local file systems are supported. The following network protocols are supported: TFTP and FTP.

Command Default

If you do not specify the order of preference for the destination of core dump files using the **choice preference** keyword and argument, the default preference is the primary location or 1.

Core dump files are sent compressed.

The default file naming convention used for core dump files is described in [Table 43: Default Core Dump File Naming Convention Description](#), on page 687.

Command Modes

Administration configuration
Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **exception filepath** command to modify core dump settings, such as the destination file path to store core dump files, file compression, and the filename appended to core dumps.

Up to three user-defined locations may be configured as the preferred destinations for core dump files:

- Primary location—The primary destination for core dump files. Enter the **choice** keyword and a value of **1** (that is, **choice 1**) for the *preference* argument to specify a destination as the primary location for core dump files.
- Secondary location—The secondary fallback choice for the destination for core dump files, if the primary location is unavailable (for example, if the hard disk is set as the primary location and the hard disk fails). Enter the **choice** keyword and a value of **2** (that is, **choice 2**) for the *preference* argument to specify a destination as the secondary location for core dump files.
- Tertiary location—The tertiary fallback choice as the destination for core dump files, if the primary and secondary locations fail. Enter the **choice** keyword and a value of 3 (that is, **choice 3**) for the *preference* argument to specify a destination as the tertiary location for core dump files.

When specifying a destination for a core dump file, you can specify an absolute file path on a local file system or on a network server. The following network protocols are supported: TFTP and FTP.



Note

We recommend that you specify a location on the hard disk as the primary location.

In addition to the three preferred destinations that can be configured, Cisco IOS XR software provides three default fallback destinations for core dump files in the event that user-defined locations are unavailable.

The default fallback destinations are:

- harddisk:/dumper
- disk1:/dumper
- disk0:/dumper

**Note**

If a default destination is a boot device, the core dump file is not sent to that destination.

We recommend that you configure at least one preferred destination for core dump files as a preventive measure if the default fallback paths are unavailable. Configuring at least one preferred destination also ensures that core dump files are archived because the default fallback destinations store only the first and last core dump files for a crashed process.

**Note**

Cisco IOS XR software does not save a core file on a local storage device if the size of the core dump file creates a low-memory condition.

By default, Cisco IOS XR software assigns filenames to core dump files according to the following format:

process [.by. *requester* |.abort][.sparse]. *date-time* . *node* . *processor-type* [.Z]

For example:

```
packet.by.dumper_gen.20040921-024800.node0_RP0_CPU0.ppc.Z
```

[Table 43: Default Core Dump File Naming Convention Description, on page 687](#) describes the default core dump file naming convention.

Table 43: Default Core Dump File Naming Convention Description

Field	Description
<i>process</i>	Name of the process that generated the core dump.
.by. <i>requester</i> .abort	If the core dump was generated because of a request by a process (requester), the core filename contains the string “.by. <i>requester</i> ” where the <i>requester</i> variable is the name or process ID (PID) of the process that requested the core dump. If the core dump was due to a self-generated abort call request, the core filename contains the string “.abort” instead of the name of the requester.
.sparse	If a sparse core dump was generated instead of a full core dump, “sparse” appears in the core dump filename.
. <i>date-time</i>	Date and time the dumper process was called by the process manager to generate the core dump. The <i>.date-time</i> time-stamp variable is expressed in the <i>yyyy.mm.dd-hh.mm.ss</i> format. Including the time stamp in the filename uniquely identifies the core dump filename.
. <i>node</i>	Node ID, expressed in the <i>rack/slot/module</i> notation, where the process that generated the core dump was running.

exception filepath

Field	Description
<i>.processor-type</i>	Type of processor (mips or ppc).
<i>.Z</i>	If the core dump was sent compressed, the filename contains the <i>.Z</i> suffix.

You can modify the default naming convention by specifying a filename to be appended to core dump files with the optional **filename** keyword and argument and by specifying a lower and higher limit ranges of values to be appended to core dump filenames with the *lower-limit* and *higher-limit* arguments, respectively. The filename that you specify for the *filename* argument is appended to the core dump file and the lower and higher limit ranges of core dump files to be sent to a specified destination before the filenames are recycled. Valid values for the *lower-limit* argument are 0 to 4. Valid values for the *higher-limit* argument are 5 to 64. A hyphen (-) must immediately follow the *lower-limit* argument. In addition, to uniquely identify each core dump file, a value is appended to each core dump file, beginning with the lower-limit value specified with the *lower-limit* argument and continuing until the higher-limit value specified with the *higher-limit* argument has been reached. When the configured higher-limit value has been reached, Cisco IOS XR software begins to recycle the values appended to core dump files, beginning with the lower-limit value.

Task ID

Task ID	Operations
diag	read, write

Examples

The following example shows how to configure the core dump setting for the primary user-defined preferred location. In this example, core files are configured to be sent uncompressed; the filename of core dump files is set to "core" (that is, all core filenames will be named core); the range value is set from 0 to 5 (that is, the values 0 to 5 are appended to the filename for the first five generated core dump files, respectively, before being recycled); and the destination is set to a directory on the hard disk.

```
RP/0/RP0/CPU0:router(config)# exception choice 1 compress off
filename core 0-5 filepath /harddisk:/corefile
```

Related Commands

Command	Description
exception pakmem	Configures the collection of packet memory information in core dump files.
exception sparse	Enables or disables sparse core dumps.
exception sprsize	Specifies the maximum file size for core dumps.
show exception	Displays the configured core dump settings.

exception pakmem

To configure the collection of packet memory information in core dump files, use the **exception pakmem** command in administration configuration mode or in global configuration mode. To remove the configuration, use the **no** form of this command.

exception pakmem {on| off}

no exception pakmem {on| off}

Syntax Description

on	Enables the collection of packet memory information in core dump files.
off	Disables the collection of packet memory information in core dump files.

Command Default

Packet memory information is not included in core dump files.

Command Modes

Administration configuration

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **exception pakmem** command with the **on** keyword to configure the collection of packet memory information in core dump files. Cisco Technical Support Center engineers and development engineers use packet memory information to debug packet memory issues related to a process.



Caution

Including packet memory information in core dump files significantly increases the amount of data generated in the core dump file, which may delay the restart time for the process.

Task ID

Task ID	Operations
diag	read, write

Examples

The following example shows how to configure core dumps to include packet memory information:

```
RP/0/RSP0/CPU0:router(config)# exception pakmem on
```

Related Commands

Command	Description
exception filepath	Modifies core dump settings.
exception sparse	Enables or disables sparse core dumps.
exception sprsize	Specifies the maximum file size for core dumps.
show exception	Displays the configured core dump settings.

exception sparse

To enable or disable sparse core dumps, use the **exception sparse** command in administration configuration mode or in global configuration mode. To remove the configuration, use the **no** form of this command.

exception sparse {on| off}

no exception sparse

Syntax Description

on	Enables sparse core dumps.
off	Disables sparse core dumps

Command Default

Sparse core dumps are disabled.

Command Modes

Administration configuration
Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **exception sparse** command to reduce the amount of data generated in the core dump file. Sparse core dumps reduce the amount of time required to generate the core dump file because only referenced data is generated in the core file (at the cost of lost information in the core file). Reducing the time required to generate core dump files corresponds to faster process restart times.

Sparse core dumps contain the following information about crashed processes:

- Register information for all threads, and any memory pages referenced in these register values
- Stack information for all threads, and any memory pages referenced in these threads
- All memory pages referenced by a loaded dynamic loadable library (DLL) data section, if the final program counter falls in a DLL data section
- Any user-specified marker pages from the lib_dumper_marker DLL

The **exception sparse** command dumps memory pages based on trigger addresses found in the previously listed dump information, according to the following criteria:

- If the trigger address in the memory page is in the beginning 128 bytes of the memory page, the previous memory page in the continuous address region is dumped also.
- If the trigger address in the memory page is in the final 128 bytes of the memory page, the next memory page in the continuous address region is dumped also.
- In all other instances, only the memory page that includes the trigger address is dumped.

**Note**

Use the **exception sparse off** command in administration configuration mode to get a complete coredump of the transient processes on the RP.

Task ID

Task ID	Operations
diag	read, write

Examples

The following example shows how to enable sparse core dumps:

```
RP/0/RSP0/CPU0:router(config)# exception sparse on
```

Related Commands

Command	Description
exception filepath	Modifies core dump settings.
exception pakmem	Configures the collection of packet memory information in core dump files.
exception sprsize	Specifies the maximum file size for core dumps.
show exception	Displays the configured core dump settings.

exception sprsize

To specify the maximum file size for core dumps, use the **exception sprsize** command in administration configuration mode or in global configuration mode. To remove the configuration, use the **no** form of this command.

exception sprsize *megabytes*

no exception sprsize

Syntax Description

megabytes

Size in megabytes (MB).

Command Default

megabytes : 192

Command Modes

Administration configuration

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **exception sprsize** command to specify the maximum file size for core dumps. The maximum file size configured for the *megabytes* argument is used with the configuration set for the [exception sparse, on page 691](#) command to determine whether or not to generate a sparse core dump file. If sparse core dumps are disabled and a core dump file is predicted to exceed the default value (192 MB) uncompressed or the value specified for the *megabytes* argument uncompressed, a sparse core dump file is generated. If sparse core dumps are enabled, a sparse core dump file is generated, regardless of the size of the core dump file.

Task ID

Task ID	Operations
diag	read, write

Examples

The following example shows how to set the file size of sparse core dumps to 300 MB:

```
RP/0/RSP0/CPU0:router(config)# exception sprsize 300
```

Related Commands

Command	Description
exception sparse	Enables or disables sparse core dumps.

follow

To unobtrusively debug a live process or a live thread in a process, use the **follow** command in EXEC mode.

follow [*job job-id*] **process** *pid* [**location** *node-id*] [**all**] [**blocked**] [**debug** *level*] [**delay** *seconds*] [**dump** *address size*] [**iteration** *count*] [**priority** *level*] [**stackonly**] [**thread** *tid*] [**verbose**]

Syntax Description

job <i>job-id</i>	Follows a process by job ID.
process <i>pid</i>	Follows the process with the process ID (PID) specified for the <i>pid</i> argument.
location <i>node-id</i>	Follows the target process on the designated node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.
all	(Optional) Follows all threads.
blocked	(Optional) Follows the chain of thread IDs (TIDs) or PIDs that are blocking the target process.
debug <i>level</i>	(Optional) Sets the debug level for the following operation. Valid values for the <i>level</i> argument are 0 to 10.
delay <i>seconds</i>	(Optional) Sets the delay interval between each iteration. Valid values for the <i>seconds</i> argument are 0 to 255 seconds.
dump <i>address size</i>	(Optional) Dumps the memory segment starting with the specified memory address and size specified for the <i>address</i> and <i>size</i> arguments.
iteration <i>count</i>	(Optional) Specifies the number of times to display information. Valid values for the <i>count</i> argument are 0 to 255 iterations.
priority <i>level</i>	(Optional) Sets the priority level for the following operation. Valid values for the <i>level</i> argument are 1 to 63.
stackonly	(Optional) Displays only stack trace information.
thread <i>tid</i>	(Optional) Follows the TID of a process or job ID specified for the <i>tid</i> argument.
verbose	(Optional) Displays register and status information pertaining to the target process.

Command Default

Entering the **follow** command without any optional keywords or arguments performs the operation for five iterations from the local node with a delay of 5 seconds between each iteration. The output includes information about all live threads. This command uses the default scheduling priority from where the command is being run.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Use this command to unintrusively debug a live process or a live thread in a process. This command is particularly useful for debugging deadlock and livelock conditions, for examining the contents of a memory location or a variable in a process to determine the cause of a corruption issue, or in investigating issues where a thread is stuck spinning in a loop. A livelock condition is one that occurs when two or more processes continually change their state in response to changes in the other processes.

The following actions can be specified with this command:

- Follow all live threads of a given process or a given thread of a process and print stack trace in a format similar to core dump output.
- Follow a process in a loop for a given number of iterations.
- Set a delay between two iterations while invoking the command.
- Set the priority at which this process should run while this command is being run.
- Dump memory from a given virtual memory location for a given size.
- Display register values and status information of the target process.

Take a snapshot of the execution path of a thread asynchronously to investigate performance-related issues by specifying a high number of iterations with a zero delay.

Task ID

Task ID	Operations
basic-services	read

Examples

The following example shows how to use the **follow** command to debug the process associated with job ID 257 for one iteration:

```
RP/0/RSP0/CPU0:router# follow job 257 iteration 1
```

```
Attaching to process pid = 28703 (pkg/bin/packet)
No tid specified, following all threads
```

```
DLL Loaded by this process
```

```
-----
DLL path      Text addr. Text size Data addr. Data size Version
/pkg/lib/libovl.dll      0xfc0c9000 0x0000c398 0xfc0c31f0 0x0000076c 0
/pkg/lib/libplatform.dll 0xfc0d6000 0x0000aa88 0xfc0e1000 0x00002000 0
/pkg/lib/libsysmgr.dll   0xfc0e3000 0x0000aeac 0xfc0c395c 0x00000388 0
/pkg/lib/libinfra.dll    0xfc0ee000 0x000332ec 0xfc122000 0x00000c70 0
```

```

/pkg/lib/libios.dll      0xfc123000 0x0002c4bc 0xfc150000 0x00002000      0
/pkg/lib/libc.dll       0xfc152000 0x00077ae0 0xfc1ca000 0x00002000      0
/pkg/lib/libsyslog.dll  0xfc1d4000 0x0000530c 0xfc122c70 0x00000308      0
/pkg/lib/libbackplane.dll 0xfc1da000 0x0000134c 0xfc0c3e6c 0x000000a8      0
/pkg/lib/libnodeid.dll  0xfc1e7000 0x000091fc 0xfc1e61a8 0x00000208      0
/pkg/lib/libdebug.dll   0xfc23e000 0x0000ef64 0xfc1e6680 0x00000550      0
/pkg/lib/lib_procfs_util.dll 0xfc24d000 0x00004e2c 0xfc1e6bd0 0x000002a8      0
/pkg/lib/libsysdb.dll   0xfc252000 0x00046224 0xfc299000 0x0000079c      0
/pkg/lib/libsysdbutils.dll 0xfc29a000 0x0000ae04 0xfc29979c 0x000003ec      0
/pkg/lib/libwd_evm.dll  0xfc2a9000 0x0000481c 0xfc299b88 0x00000188      0
/pkg/lib/lib_mutex_monitor.dll 0xfc35e000 0x00002414 0xfc340850 0x00000128      0
/pkg/lib/libchkpt.dll   0xfc477000 0x0002ee04 0xfc474388 0x00000950      0
/pkg/lib/libpacket_common.dll 0xfc617000 0x000130f0 0xfc6056a0 0x000007b0      0

```

Iteration 1 of 1

Current process = "pkg/bin/packet", PID = 28703 TID = 1

```

trace_back: #0 0xfc1106dc [MsgReceivev]
trace_back: #1 0xfc0fc840 [msg_receivev]
trace_back: #2 0xfc0fc64c [msg_receive]
trace_back: #3 0xfc0ffa70 [event_dispatch]
trace_back: #4 0xfc0ffc2c [event_block]
trace_back: #5 0x48204410 [<N/A>]

```

ENDOFSTACKTRACE

Current process = "pkg/bin/packet", PID = 28703 TID = 2

```

trace_back: #0 0xfc1106dc [MsgReceivev]
trace_back: #1 0xfc0fc840 [msg_receivev]
trace_back: #2 0xfc0fc64c [msg_receive]
trace_back: #3 0xfc0ffa70 [event_dispatch]
trace_back: #4 0xfc0ffc2c [event_block]
trace_back: #5 0xfc48d848 [chk_evm_thread]

```

ENDOFSTACKTRACE

Current process = "pkg/bin/packet", PID = 28703 TID = 3

```

trace_back: #0 0xfc17d54c [SignalWaitinfo]
trace_back: #1 0xfc161c64 [sigwaitinfo]
trace_back: #2 0xfc10302c [event_signal_thread]

```

ENDOFSTACKTRACE

Current process = "pkg/bin/packet", PID = 28703 TID = 4

```

trace_back: #0 0xfc1106c4 [MsgReceivePulse]
trace_back: #1 0xfc0fc604 [msg_receive_async]
trace_back: #2 0xfc0ffa70 [event_dispatch]
trace_back: #3 0xfc0ffc5c [event_block_async]
trace_back: #4 0xfc35e36c [receive_events]

```

ENDOFSTACKTRACE

Current process = "pkg/bin/packet", PID = 28703 TID = 5

```

trace_back: #0 0xfc17d564 [SignalWaitinfo_r]
trace_back: #1 0xfc161c28 [sigwait]
trace_back: #2 0x48203928 [<N/A>]

```

ENDOFSTACKTRACE

The following example shows how to use the **follow** command to debug TID 5 of the process associated with job ID 257 for one iteration:

```
RP/0/RSP0/CPU0:router# follow job 257 iteration 1 thread 5
```

Attaching to process pid = 28703 (pkg/bin/packet)

follow

DLL Loaded by this process

DLL path	Text addr.	Text size	Data addr.	Data size	Version
/pkg/lib/libovl.dll	0xfc0c9000	0x0000c398	0xfc0c31f0	0x0000076c	0
/pkg/lib/libplatform.dll	0xfc0d6000	0x0000aa88	0xfc0e1000	0x00002000	0
/pkg/lib/libsysmgr.dll	0xfc0e3000	0x0000aeac	0xfc0c395c	0x00000388	0
/pkg/lib/libinfra.dll	0xfc0ee000	0x000332ec	0xfc122000	0x00000c70	0
/pkg/lib/libbios.dll	0xfc123000	0x0002c4bc	0xfc150000	0x00002000	0
/pkg/lib/libc.dll	0xfc152000	0x00077ae0	0xfc1ca000	0x00002000	0
/pkg/lib/libsyslog.dll	0xfc1d4000	0x0000530c	0xfc122c70	0x00000308	0
/pkg/lib/libbackplane.dll	0xfc1da000	0x0000134c	0xfc0c3e6c	0x000000a8	0
/pkg/lib/libnodeid.dll	0xfc1e7000	0x000091fc	0xfc1e61a8	0x00000208	0
/pkg/lib/libdebug.dll	0xfc23e000	0x0000ef64	0xfc1e6680	0x00000550	0
/pkg/lib/lib_procfs_util.dll	0xfc24d000	0x00004e2c	0xfc1e6bd0	0x000002a8	0
/pkg/lib/libsysdb.dll	0xfc252000	0x00046224	0xfc299000	0x0000079c	0
/pkg/lib/libsysdbutils.dll	0xfc29a000	0x0000ae04	0xfc29979c	0x000003ec	0
/pkg/lib/libwd_evm.dll	0xfc2a9000	0x0000481c	0xfc299b88	0x00000188	0
/pkg/lib/lib_mutex_monitor.dll	0xfc35e000	0x00002414	0xfc340850	0x00000128	0
/pkg/lib/libchkpt.dll	0xfc477000	0x0002ee04	0xfc474388	0x00000950	0
/pkg/lib/libpacket_common.dll	0xfc617000	0x000130f0	0xfc6056a0	0x000007b0	0

Iteration 1 of 1

Current process = "pkg/bin/packet", PID = 28703 TID = 5

trace_back: #0 0xfc17d564 [SignalWaitinfo_r]

trace_back: #1 0xfc161c28 [sigwait]

trace_back: #2 0x48203928 [<N/A>]

ENDOFSTACKTRACE

The following example shows how to use the **follow** command to debug the chain of threads blocking thread 2 associated with the process assigned PID 139406:

RP/0/RSP0/CPU0:router# **follow process 139406 blocked iteration 1 thread 2**

Attaching to process pid = 139406 (pkg/bin/lpts_fm)

DLL Loaded by this process

DLL path	Text addr.	Text size	Data addr.	Data size	Version
/pkg/lib/libplatform.dll	0xfc0d6000	0x0000aa88	0xfc0e1000	0x00002000	0
/pkg/lib/libsysmgr.dll	0xfc0e3000	0x0000aeac	0xfc0c395c	0x00000388	0
/pkg/lib/libinfra.dll	0xfc0ee000	0x000332ec	0xfc122000	0x00000c70	0
/pkg/lib/libbios.dll	0xfc123000	0x0002c4bc	0xfc150000	0x00002000	0
/pkg/lib/libc.dll	0xfc152000	0x00077ae0	0xfc1ca000	0x00002000	0
/pkg/lib/libltrace.dll	0xfc1cc000	0x00007f5c	0xfc0c3ce4	0x00000188	0
/pkg/lib/libsyslog.dll	0xfc1d4000	0x0000530c	0xfc122c70	0x00000308	0
/pkg/lib/libbackplane.dll	0xfc1da000	0x0000134c	0xfc0c3e6c	0x000000a8	0
/pkg/lib/libnodeid.dll	0xfc1e7000	0x000091fc	0xfc1e61a8	0x00000208	0
/pkg/lib/libdebug.dll	0xfc23e000	0x0000ef64	0xfc1e6680	0x00000550	0
/pkg/lib/lib_procfs_util.dll	0xfc24d000	0x00004e2c	0xfc1e6bd0	0x000002a8	0
/pkg/lib/libsysdb.dll	0xfc252000	0x00046224	0xfc299000	0x0000079c	0
/pkg/lib/libsysdbutils.dll	0xfc29a000	0x0000ae04	0xfc29979c	0x000003ec	0
/pkg/lib/libwd_evm.dll	0xfc2a9000	0x0000481c	0xfc299b88	0x00000188	0
/pkg/lib/libbag.dll	0xfc40c000	0x0000ee98	0xfc41b000	0x00000368	0
/pkg/lib/libwd_notif.dll	0xfc4f8000	0x00005000	0xfc4fd000	0x00001000	0
/pkg/lib/libifmgr.dll	0xfc665000	0x00029780	0xfc68f000	0x00003000	0
/pkg/lib/libnetio_client.dll	0xfca6a000	0x000065c8	0xfca2c4f8	0x000001b4	0
/pkg/lib/libpa_client.dll	0xfcec5000	0x00006e9c	0xfcecc000	0x00003000	0
/pkg/lib/libltime.dll	0xfcecf000	0x00002964	0xfcdc4f20	0x000000a8	0

Iteration 1 of 1

Current process = "pkg/bin/lpts_fm", PID = 139406 TID = 2

```

trace_back: #0 0xfc110744 [MsgSendv]
trace_back: #1 0xfc0fbf04 [msg_sendv]
trace_back: #2 0xfc0fbbd8 [msg_send]
trace_back: #3 0xfcec7580 [pa_fm_close]
trace_back: #4 0xfcec78b0 [pa_fm_process_0]

```

ENDOFSTACKTRACE

REPLY (node node0_RP1_CPU0, pid 57433)

No specific TID, following all threads of 57433 (pkg/bin/lpts_pa)

DLL Loaded by this process

DLL path	Text addr.	Text size	Data addr.	Data size	Version
/pkg/lib/libplatform.dll	0xfc0d6000	0x0000aa88	0xfc0e1000	0x00002000	0
/pkg/lib/libsysmgr.dll	0xfc0e3000	0x0000aeac	0xfc0c395c	0x00000388	0
/pkg/lib/libinfra.dll	0xfc0ee000	0x000332ec	0xfc122000	0x00000c70	0
/pkg/lib/libios.dll	0xfc123000	0x0002c4bc	0xfc150000	0x00002000	0
/pkg/lib/libc.dll	0xfc152000	0x00077ae0	0xfc1ca000	0x00002000	0
/pkg/lib/libltrace.dll	0xfc1cc000	0x00007f5c	0xfc0c3ce4	0x00000188	0
/pkg/lib/libsyslog.dll	0xfc1d4000	0x0000530c	0xfc122c70	0x00000308	0
/pkg/lib/libbackplane.dll	0xfc1da000	0x0000134c	0xfc0c3e6c	0x000000a8	0
/pkg/lib/libnodeid.dll	0xfc1e7000	0x000091fc	0xfc1e61a8	0x00000208	0
/pkg/lib/libdebug.dll	0xfc23e000	0x0000ef64	0xfc1e6680	0x00000550	0
/pkg/lib/lib_procfs_util.dll	0xfc24d000	0x00004e2c	0xfc1e6bd0	0x000002a8	0
/pkg/lib/libsysdb.dll	0xfc252000	0x00046224	0xfc299000	0x0000079c	0
/pkg/lib/libsysdbutils.dll	0xfc29a000	0x0000ae04	0xfc29979c	0x000003ec	0
/pkg/lib/libwd_evms.dll	0xfc2a9000	0x0000481c	0xfc299b88	0x00000188	0
/pkg/lib/lrdlib.dll	0xfc2f6000	0x0000a900	0xfc2f551c	0x00000610	0
/pkg/lib/liblrfuncs.dll	0xfc30e000	0x00001998	0xfc2ebd80	0x000001ec	0
/pkg/lib/libdscapi.dll	0xfc310000	0x0000457c	0xfc2f5b2c	0x0000035c	0
/pkg/lib/liblrdshared.dll	0xfc315000	0x00005fec	0xfc31b000	0x00002000	0
/pkg/lib/libbag.dll	0xfc40c000	0x0000ee98	0xfc41b000	0x00000368	0
/pkg/lib/libchkpt.dll	0xfc477000	0x0002ee04	0xfc474388	0x00000950	0
/pkg/lib/libwd_notif.dll	0xfc4f8000	0x00005000	0xfc4fd000	0x00001000	0
/pkg/lib/libltrace_sdt.dll	0xfc65c000	0x000034fc	0xfc65b73c	0x00000568	0
/pkg/lib/libfabhandle.dll	0xfc6be000	0x00003354	0xfc65bca4	0x00000248	0
/pkg/lib/libfsdb_ltrace_util_rt.dll	0xfc6ea000	0x00001b74	0xfc605e50	0x00000108	0
/pkg/lib/libbcdl.dll	0xfc6fb000	0x0000f220	0xfc6fa6e8	0x0000045c	0
/pkg/lib/liblpts_pa_fgid.dll	0xfc8d7000	0x00006640	0xfc7acd5c	0x00000208	0
/pkg/lib/libfgid.dll	0xfc910000	0x0001529c	0xfc926000	0x00002000	0
/pkg/lib/libltimes.dll	0xfcecf000	0x00002964	0xfcdcd4f20	0x000000a8	0

Current process = "pkg/bin/lpts_pa", PID = 57433 TID = 1

```

trace_back: #0 0xfc1106dc [MsgReceivev]
trace_back: #1 0xfc0fc840 [msg_receivev]
trace_back: #2 0xfc0fc64c [msg_receive]
trace_back: #3 0xfc0ffa70 [event_dispatch]
trace_back: #4 0xfc0ffc2c [event_block]
trace_back: #5 0x48201904 [<N/A>]
trace_back: #6 0x48201e3c [<N/A>]

```

ENDOFSTACKTRACE

Current process = "pkg/bin/lpts_pa", PID = 57433 TID = 2

```

trace_back: #0 0xfc1106dc [MsgReceivev]
trace_back: #1 0xfc0fc840 [msg_receivev]
trace_back: #2 0xfc0fc64c [msg_receive]
trace_back: #3 0xfc0ffa70 [event_dispatch]
trace_back: #4 0xfc0ffc2c [event_block]
trace_back: #5 0x4821e978 [<N/A>]

```

ENDOFSTACKTRACE

Current process = "pkg/bin/lpts_pa", PID = 57433 TID = 3

```

trace_back: #0 0xfc1106dc [MsgReceivev]
trace_back: #1 0xfc0fc840 [msg_receivev]

```

```

trace_back: #2 0xfc0fc64c [msg_receive]
trace_back: #3 0xfc0ffa70 [event_dispatch]
trace_back: #4 0xfc0ffc2c [event_block]
trace_back: #5 0x482064c4 [<N/A>]

```

```

ENDOFSTACKTRACE

```

The following example shows how to use the **follow** command to debug the chain of threads blocking thread 2 associated with the process assigned PID 139406:

```

RP/0/RSP0/CPU0:router# follow process 139406 blocked iteration 1 stackonly thread 2

```

```

Attaching to process pid = 139406 (pkg/bin/lpts_fm)

```

```

Iteration 1 of 1
-----

```

```

Current process = "pkg/bin/lpts_fm", PID = 139406 TID = 2

```

```

trace_back: #0 0xfc110744 [MsgSendv]
trace_back: #1 0xfc0fbf04 [msg_sendv]
trace_back: #2 0xfc0fbbd8 [msg_send]
trace_back: #3 0xfcec7580 [pa_fm_close]
trace_back: #4 0xfcec78b0 [pa_fm_process_0]

```

```

ENDOFSTACKTRACE

```

```

REPLY (node node0_RP1_CPU0, pid 57433)

```

```

No specific TID, following all threads of 57433 (pkg/bin/lpts_pa)
-----

```

```

Current process = "pkg/bin/lpts_pa", PID = 57433 TID = 1

```

```

trace_back: #0 0xfc1106dc [MsgReceivev]
trace_back: #1 0xfc0fc840 [msg_receivev]
trace_back: #2 0xfc0fc64c [msg_receive]
trace_back: #3 0xfc0ffa70 [event_dispatch]
trace_back: #4 0xfc0ffc2c [event_block]
trace_back: #5 0x48201904 [<N/A>]
trace_back: #6 0x48201e3c [<N/A>]

```

```

ENDOFSTACKTRACE

```

```

Current process = "pkg/bin/lpts_pa", PID = 57433 TID = 2

```

```

trace_back: #0 0xfc1106dc [MsgReceivev]
trace_back: #1 0xfc0fc840 [msg_receivev]
trace_back: #2 0xfc0fc64c [msg_receive]
trace_back: #3 0xfc0ffa70 [event_dispatch]
trace_back: #4 0xfc0ffc2c [event_block]
trace_back: #5 0x4821e978 [<N/A>]

```

```

ENDOFSTACKTRACE

```

```

Current process = "pkg/bin/lpts_pa", PID = 57433 TID = 3

```

```

trace_back: #0 0xfc1106dc [MsgReceivev]
trace_back: #1 0xfc0fc840 [msg_receivev]
trace_back: #2 0xfc0fc64c [msg_receive]
trace_back: #3 0xfc0ffa70 [event_dispatch]
trace_back: #4 0xfc0ffc2c [event_block]
trace_back: #5 0x482064c4 [<N/A>]

```

```

ENDOFSTACKTRACE

```


Related Commands

Command	Description
monitor threads	Displays auto-updating statistics on threads in a full-screen mode.
show processes	Displays information about active processes.

monitor threads

To display auto-updating statistics on threads in a full-screen mode, use the **monitor threads** command in administration EXEC mode or in EXEC mode.

monitor threads [**dumbtty**] [**iteration** *number*] [**location** *node-id*]

Syntax Description

dumbtty	(Optional) Displays the output of the command as if on a dumb terminal (the screen is not refreshed).
iteration <i>number</i>	(Optional) Number of times the statistics display is to be updated, in the range from 0 to 4294967295.
location <i>node-id</i>	(Optional) Displays the output from the command from the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

When all keywords are omitted, the **monitor threads** command displays the first ten threads for the local node, sorted in descending order by the time used. The display is cleared and updated every 5 seconds until you quit the command.

Command Modes

EXEC, Admin EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **monitor threads** command to show the top ten threads based on CPU usage. The display refreshes every 10 seconds.

- To change the parameters displayed by the **monitor threads** command, enter one of the key commands described in [Table 44: Interactive Display Commands for the monitor threads Command, on page 703](#).
- To terminate the display and return to the system prompt, enter the **q** key.
- To list the interactive commands, type **?** during the display.

[Table 44: Interactive Display Commands for the monitor threads Command, on page 703](#) describes the available interactive display commands.

Table 44: Interactive Display Commands for the monitor threads Command

Command	Description
?	Displays the available interactive commands.
d	Changes the delay interval between updates.
k	Kills a process.
l	Refreshes the screen.
n	Changes the number of threads to be displayed.
q	Quits the interactive display and returns the prompt to EXEC mode.

Task ID

Task ID	Operations
basic-services	execute

Examples

The following example shows sample output from the **monitor threads** command:

```
RP/0/RSP0/CPU0:router# monitor threads
```

```
195 processes; 628 threads;
CPU states: 98.2% idle, 0.9% user, 0.7% kernel
Memory: 2048M total, 1576M avail, page size 4K
```

JID	TID	LAST_CPU	PRI	STATE	HH:MM:SS	CPU	COMMAND
1	12	1	10	Rcv	0:00:09	0.42%	procnto-600-smp-cisco-instr
1	25	1	10	Run	0:00:30	0.36%	procnto-600-smp-cisco-instr
342	1	1	19	Rcv	0:00:07	0.20%	wdsysmon
52	5	0	21	Rcv	0:00:03	0.15%	devc-conaux
52	3	1	18	Rcv	0:00:02	0.07%	devc-conaux
532670	1	0	10	Rply	0:00:00	0.07%	top
293	6	0	55	Rcv	0:00:06	0.03%	shelfmgr
55	8	0	10	Rcv	0:00:02	0.03%	eth_server
315	3	0	10	Rcv	0:00:11	0.03%	sysdb_svr_local
55	7	0	55	Rcv	0:00:11	0.02%	eth_server

The following example shows sample output from the **monitor threads** command using the optional **location** keyword:

```
RP/0/RSP0/CPU0:router# monitor threads location 0/RP0/CPU0
```

```
Computing times...195 processes; 628 threads;
CPU states: 95.1% idle, 2.7% user, 2.0% kernel
Memory: 2048M total, 1576M avail, page size 4K
```

JID	TID	LAST_CPU	PRI	STATE	HH:MM:SS	CPU	COMMAND
1	25	0	10	Run	0:00:32	2.08%	procnto-600-smp-cisco-instr
265	5	0	10	SigW	0:00:09	0.89%	packet
279	1	1	10	Rcv	0:00:00	0.65%	qsm

```

557246      1      0      10 Rply      0:00:00      0.51% top
293         5      1      55 Rcv       0:00:01      0.07% shelfmgr
180        13      1      10 Rcv       0:00:02      0.07% gsp
315         3      0      10 Rcv       0:00:12      0.07% sysdb_svr_local
55          7      1      55 Rcv       0:00:12      0.04% eth_server
180         1      0      10 Rcv       0:00:01      0.04% gsp
298         9      0      10 Rcv       0:00:01      0.04% snmpd

```

[Table 45: monitor threads Field Descriptions](#), on page 704 describes the significant fields shown in the display.

Table 45: monitor threads Field Descriptions

Field	Description
JID	Job ID.
TIDS	Thread ID.
LAST_CPU	Number of open channels.
PRI	Priority level of the thread.
STATE	State of the thread.
HH:MM:SS	Run time of process since last restart.
CPU	Percentage of CPU used by process thread.
COMMAND	Process name.

Examples

When the **n** or **d** interactive command is used, the **monitor threads** command prompts for a number appropriate to the specific interactive command. The following example shows sample output from the **monitor threads** command using the interactive **n** command after the first display cycle to change the number of threads:

```

RP/0/RSP0/CPU0:router# monitor threads

Computing times... 87 processes; 249 threads;
CPU states: 84.8% idle, 4.2% user, 10.9% kernel
Memory: 256M total, 175M avail, page size 4K

  JID   TID  PRI  STATE  HH:MM:SS      CPU  COMMAND
    1     6   10   Run    0:00:10    10.92% kernel
553049   1   10  Rply    0:00:00     4.20% top
    58    3   10   Rcv    0:00:24     0.00% sysdbsvr
    1     3   10   Rcv    0:00:21     0.00% kernel
    69    1   10   Rcv    0:00:20     0.00% wdsysmon
    1     5   10   Rcv    0:00:20     0.00% kernel
   159    2   10   Rcv    0:00:05     0.00% qnet
   160    1   10   Rcv    0:00:05     0.00% netio
   157    1   10  NSlp    0:00:04     0.00% envmon_periodic
   160    9   10  Intr    0:00:04     0.00% netio

n

Enter number of threads to display: 3
Please enter a number between 5 and 40
Enter number of threads to display: 8
87 processes; 249 threads;
CPU states: 95.3% idle, 2.9% user, 1.7% kernel

```

Memory: 256M total, 175M avail, page size 4K

JID	TID	PRI	STATE	HH:MM:SS	CPU	COMMAND
1	6	10	Run	0:00:11	1.76%	kernel
69	1	10	Rcv	0:00:20	1.11%	wdsysmon
58	3	10	Rcv	0:00:24	0.40%	sysdbsvr
157	1	10	NSlp	0:00:04	0.23%	envmon_periodic
159	19	10	Rcv	0:00:02	0.20%	qnet
553049	1	10	Rply	0:00:00	0.20%	top
159	12	10	Rcv	0:00:03	0.13%	qnet
160	1	10	Rcv	0:00:05	0.10%	netio

When a number outside the acceptable range is entered, the acceptable range is displayed:

Please enter a number between 5 and 40
Enter number of threads to display:

Related Commands

Command	Description
monitor processes	Displays auto-updating statistics on processes in a full-screen mode.

process

To start, terminate, or restart a process, use the **process** command in admin EXEC mode.

process {**crash**|**restart**|**shutdown**|**start**} {*executable-name*|*job-id*} **location** {*node-id*|**all**}

Syntax Description

crash	Crashes a process.
restart	Restarts a process.
shutdown	Stops a process. The process is not restarted (even if considered “mandatory□?”).
start	Starts a process.
<i>executable-name</i>	Executable name of the process to be started, terminated, or restarted. Supplying an executable name for the executable-name argument performs the action for all the simultaneously running instances of the process, if applicable.
<i>job-id</i>	Job ID of the process instance to be started, terminated, or restarted. Supplying a job ID for the <i>job-id</i> argument performs the action for only the process instance associated with the job ID.
location { <i>node-id</i> all }	Starts, terminates, or restarts a process on the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. The all keyword specifies all nodes.

Command Default

None

Command Modes

Admin EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Under normal circumstances, processes are started and restarted automatically by the operating system as required. If a process crashes, it is automatically restarted.

Use this command to manually start, stop, or restart individual processes.

**Caution**

Manually stopping or restarting a process can seriously impact the operation of a router. Use these commands only under the direction of a Cisco Technical Support representative.

process shutdown

The **process shutdown** command shuts down (terminates) the specified process and copies associated with the specified process. The process is not restarted, even if considered “mandatory.” Use the **show processes** command to display a list of executable processes running on the system.

**Caution**

Stopping a process can result in an RP switchover, system failure or both. This command is intended for use only under the direct supervision of a Cisco Technical Support representative.

process restart

The **process restart** command restarts a process, such as a process that is not functioning optimally.

process start

The **process start** command starts a process that is not currently running, such as a process that was terminated using the **process kill** command. If multiple copies are on the system, all instances of the process are started simultaneously.

Task ID

Task ID	Operations
root-lr	execute

Examples

The following example shows how to restart a process. In this example, the IS-IS process is restarted:

```
RP/0/RSP0/CPU0:router# process restart isis
RP/0/RSP0/CPU0:router#RP/0/RSP0/CPU0:Mar 30 15:24:41 : isis[343]: %ISIS-6-INFO_ST
RTUP_START : Cisco NSF controlled start beginning
RP/0/RSP0/CPU0:router#RP/0/RSP0/CPU0:Mar 30 15:24:52 : isis[352]: %ISIS-6-INFO_ST
RTUP_FINISH : Cold controlled start completed
```

The following example shows how to terminate a process. In this example, the IS-IS process is stopped:

```
RP/0/RSP0/CPU0:router# process shutdown isis
RP/0/RSP0/CPU0:router#
```

The following example shows how to start a process. In this example, the IS-IS process is started:

```
RP/0/RSP0/CPU0:router# process start isis
RP/0/RSP0/CPU0:router#RP/0/RSP0/CPU0:Mar 30 15:27:19 : isis[227]:
%ISIS-6-INFO_STARTUP_START : Cold controlled start beginning
RP/0/RSP0/CPU0:Mar 30 15:27:31 : isis[352]: %ISIS-6-INFO_STARTUP_FINISH :
```

```
Cold controlled start completed
```

This example shows how to restart a process:

Related Commands

Command	Description
process mandatory	Sets the mandatory reboot options for a process.
show processes	Displays information about active processes.

process core

To modify the core dump options for a process, use the **process core** command in administration EXEC mode.

process {*executable-name*|*job-id*} **core** {**context**|**copy**|**fallback**|**iomem**|**mainmem**|**off**|**sharedmem**|**sparse**|**sync**|**text**} [**maxcore** *value*] **location** *node-id*

Syntax Description

<i>executable-name</i>	Executable name of the process for which you want to change core dump options. Specifying a value for the <i>executable-name</i> argument changes the core dump option for multiple instances of a running process.
<i>job-id</i>	Job ID associated with the process instance. Specifying a <i>job-id</i> value changes the core dump option for only a single instance of a running process.
context	Dumps only context information for a process.
copy	Copies a core dump locally before performing the core dump.
fallback	Sets the core dump options to use the fallback options (if needed).
iomem	Dumps the I/O memory of a process.
mainmem	Dumps the main memory of a process.
off	Indicates that a core dump is not taken on the termination of the specified process.
sharedmem	Dumps the shared memory of a process.
sparse	Enables sparse core dumps of a process.
sync	Enables only synchronous core dumping.
text	Dumps the text of a process.
maxcore <i>value</i>	(Optional) Specifies the maximum number of core dumps allowed for the specified process on its creation.
location <i>node-id</i>	Sets the core dump options for a process on a designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

By default, processes are configured to dump shared memory, text area, stack, data section, and heap information.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The modular architecture of Cisco IOS XR software allows core dumps for individual processes. By default, processes are configured to dump shared memory, text area, stack, data section, and heap information.

Specifying an executable name for the *executable-name job-id* argument changes the core dump option for all instances of the process. Specifying a job ID for the value changes the core dump option for a single instance of a running process.

Task ID

Task ID	Operations
root-lr	execute

Examples

The following example shows how to enable the collection of shared memory of a process:

```
RP/0/RSP0/CPU0:router# process ospf core sharedmem
```

The following example shows how to turn off core dumping for a process:

```
RP/0/RSP0/CPU0:router# process media_ether_config_di core off
```

Related Commands

Command	Description
show processes	Displays information about active processes.

process mandatory

To set the mandatory reboot options for a process, use the **process mandatory** command in the appropriate mode.

process mandatory

process mandatory {on| off} {*executable-name*|*job-id*} **location** *node-id*

process mandatory reboot

process mandatory reboot {enable| disable}

process mandatory toggle

process mandatory toggle {*executable-name*|*job-id*} **location** *node-id*

Syntax Description

on	Turns on mandatory process attribute.
off	Turns off the mandatory process attribute. The process is not considered mandatory.
reboot { enable disable }	Enables or disables the reboot action when a mandatory process fails.
toggle	Toggles a mandatory process attribute.
<i>executable-name</i>	Executable name of the process to be terminated. Specifying an executable name for the <i>executable-name</i> argument terminates the process and all the simultaneously running copies, if applicable.
<i>job-id</i>	Job ID associated with the process to be terminated. Terminates only the process associated with the job ID.
location <i>node-id</i>	Sets the mandatory settings for a process on a designated node. The node-id argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If a process unexpectedly goes down, the following action occurs based on whether the process is considered mandatory.

- If the process is mandatory and the process cannot be restarted, the node automatically reboots.
- If the process is not mandatory and cannot be restarted, it stays down and the node does not reboot.

Task ID

Task ID	Operations
root-lr	execute

Examples

The following example shows how to turn on a mandatory attribute. In this example, the mandatory attribute is turned on for the media_ether_config_di process.

```
RP/0/RSP0/CPU0:router# process mandatory on media_ether_config_di
```

The following example shows how to turn the reboot option on. In this example, the router is set to reboot the node if a mandatory process goes down and cannot be restarted.

```
RP/0/RSP0/CPU0:router# process mandatory reboot enable
```

```
RP/0/RSP00/CPU0:Mar 19 19:28:10 : sysmgr[71]: %SYSMGR-4-MANDATORY_REBOOT_ENABLE :
mandatory reboot option enabled by request
```

The following example shows how to turn off the reboot option. In this example, the router is set *not* to reboot the node if a mandatory process goes down and cannot be restarted. In this case, the mandatory process is restarted, but the node is not rebooted.

```
RP/0/RSP0/CPU0:router# process mandatory reboot disable
```

```
RP/0/RSP00/CPU0:Mar 19 19:31:20 : sysmgr[71]: %SYSMGR-4-MANDATORY_REBOOT_OVERRIDE
: mandatory reboot option overridden by request
```

Related Commands

Command	Description
show processes	Displays information about active processes.

show context

To display core dump context information, use the **show context** command in administration EXEC mode or in EXEC mode.

show context [*coredump-occurrence*] **clear** [**location** {*node-id* | **all**}]

Syntax Description

<i>coredump-occurrence</i>	(Optional) Core dump context information to be displayed based on the occurrence of the core dump. Valid values are 1 to 10.
clear	(Optional) Clears the current context information.
location { <i>node-id</i> all }	Displays core dump information that occurred on the designated node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. The all keyword specifies to display information for all nodes.

Command Default

If no *coredump-occurrence* value is specified, core dump context information for all core dumps is displayed.

Command Modes

EXEC, Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show context** command to display core dump context information. This command displays context information for the last ten core dumps. Cisco Technical Support Center engineers and development engineers use this command for post-analysis in the debugging of processes.

Use the [clear context, on page 680](#) command to clear core dump context information.

Task ID

Task ID	Operations
diag	read

Examples

The following example shows sample output from the **show context** command:

```
RP/0/RSP0/CPU0:router# show context

Crashed pid = 20502 (pkg/bin/mbi-hello)
Crash time: Thu Mar 25, 2004: 19:34:14
Core for process at disk0:/mbi-hello.20040325-193414.node0_RP0_CPU0

    Stack Trace
#0 0xfc117c9c
#1 0xfc104348
#2 0xfc104154
#3 0xfc107578
#4 0xfc107734
#5 0x482009e4

    Registers info
      r0      r1      r2      r3
R0  0000000e 481ffa80 4820c0b8 00000003
      r4      r5      r6      r7
R4  481ffb18 00000001 481ffa88 48200434
      r8      r9      r10     r11
R8  00000000 00000001 00000000 fc17ac58
      r12     r13     r14     r15
R12 481ffb08 4820c080 481ffc10 00000001
      r16     r17     r18     r19
R16 481ffc24 481ffc2c 481ffcb4 00000000
      r20     r21     r22     r23
R20 00398020 00000000 481ffb6c 4820a484
      r24     r25     r26     r27
R24 00000000 00000001 4820efe0 481ffb88
      r28     r29     r30     r31
R28 00000001 481ffb18 4820ef08 00000001
      cnt     lr      msr      pc
R32 fc168d58 fc104348 0000d932 fc117c9c
      cnd     xer
R36 24000022 00000004

    DLL Info
DLL path   Text addr. Text size  Data addr. Data size  Version
/pkg/lib/libinfra.dll 0xfc0f6000 0x00032698 0xfc0f5268 0x00000cb4
```

The following example shows sample output from the **show context** command. The output displays information about a core dump from a process that has not crashed.

```
RP/0/RSP0/CPU0:router# show context

node:      node0_RP0_CPU0
-----

Crashed pid = 28703 (pkg/bin/packet)
Crash time: Tue Sep 21, 2004: 02:48:00
Core for process at harddisk:/packet.by.dumper_gen.20040921-024800.node0_RP0_CPU0.ppc.Z
```

[Table 46: show context Field Descriptions](#), on page 714 describes the significant fields shown in the display.

Table 46: show context Field Descriptions

Field	Description
Crashed pid	Process ID (PID) of the crashed process followed by the executable path.
Crash time	Time and date the crash occurred.

Field	Description
Core for process at	File path to the core dump file.
Stack Trace	Stack trace information.
Registers Info	Register information related to crashed threads.
DLL Info	Dynamically loadable library (DLL) information used to decode the stack trace.

Related Commands

Command	Description
clear context	Clears core dump context information.

show dll

To display dynamically loadable library (DLL) information, use the **show dll** command in administration EXEC mode or in EXEC mode.

show dll [**jobid** *job-id* [**virtual**]] [**symbol**] **address** *virtual-address* [**dllname** *dll-virtual-path*] [**memory**] [**virtual**] [**location** *node-id*]

Syntax Description

jobid <i>job-id</i>	(Optional) Displays DLL information for the specified job identifier.
virtual	(Optional) Displays the virtual path of DLLs. The virtual path is expressed in the /pkg/lib/library-name.dll format where the library name is the name of the DLL followed by the .dll suffix.
symbol	(Optional) Displays the symbol at the virtual address specified for the <i>virtual-address</i> argument.
address <i>virtual-address</i>	(Optional) Displays the DLL that is mapped at the virtual address specified for the <i>virtual-address</i> argument.
dllname <i>dll-virtual-path</i>	(Optional) Displays the process IDs (PIDs) of the process that have downloaded the DLL specified for the <i>dll-virtual-path</i> argument.
memory	(Optional) Displays a summary of DLL memory usage.
location <i>node-id</i>	(Optional) Displays DLLs for the specified node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC, Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
basic-services	read

Examples

The following example shows sample output from the **show dll** command. In this example, the output displays all the DLLs loaded on the router.

```
RP/0/RSP0/CPU0:router# show dll
```

DLL path	Text VA	Text Sz	Data VA	Data Sz	Refcount
/lib/libui.dll	0xfc000000	0x00007000	0xfc007000	0x00001000	1
/disk0/asr9k-base-0.48.0/lib/liblogin.dll	0xfc008000	0x00006000	0xfc00e000	0x00001000	1
/mbi/lib/libbanner.dll	0xfc00f000	0x00003000	0xfc012000	0x00001000	1
/disk0/asr9k-base-0.48.0/lib/libaaav2.dll	0xfc013000	0x0000f000	0xfc022000	0x00001000	1
/disk0/asr9k-base-0.48.0/lib/libaaatty.dll	0xfc023000	0x00004000	0xfc027000	0x00001000	1
/mbi/lib/libtermcap.dll	0xfc028000	0x00003000	0xfc02b000	0x00001000	1
/mbi/lib/lib_show_dll.dll	0xfc02c000	0x00004000	0xfc030000	0x00001000	1
/mbi/lib/libihplatform.dll	0xfc0bf2d4	0x00000c18	0xfc1e4f88	0x00000068	1
/lib/libbovl.dll	0xfc0c8000	0x0000c3b0	0xfc0c21f0	0x0000076c	23
/disk0/asr9k-admin-0.48.0/lib/libfqm_ltrace_util_common.dll	0xfc0d43b0	0x00000bfc	0xfc391f7c	0x00000068	1
/lib/libplatform.dll	0xfc0d5000	0x0000aa88	0xfc0e0000	0x00002000	165
/lib/libsysmgr.dll	0xfc0e2000	0x0000ab48	0xfc0c295c	0x00000368	166
/lib/libinfra.dll	0xfc0ed000	0x0003284c	0xfc120000	0x00000c70	169
/lib/libbios.dll	0xfc121000	0x0002c4bc	0xfc14e000	0x00002000	166
/lib/libc.dll	0xfc150000	0x00077ae0	0xfc1c8000	0x00002000	175
/mbi/lib/libltrace.dll	0xfc1ca000	0x00007f5c	0xfc0c2cc4	0x00000188	96
/lib/libsyslog.dll	0xfc1d2000	0x0000530c	0xfc120c70	0x00000308	129
/disk0/asr9k-base-0.48.0/lib/liblpts_ifib_platform.dll	0xfc1d730c	0x00000cc8	0xfccef4000	0x00000068	1
/lib/libbackplane.dll	0xfc1d8000	0x0000134c	0xfc0c2e4c	0x000000a8	163
/disk0/asr9k-base-0.48.0/lib/libipv6_platform_client.dll	0xfc1d934c	0x00000c48	0xfccef4f8c	0x00000068	1
/mbi/lib/libpkgfs_node.dll	0xfc1da000	0x000092d4	0xfc1e4000	0x000001a8	3

The following example shows sample output from the **show dll** command with the optional **jobid job-id** keyword and argument:

```
RP/0/RSP0/CPU0:router# show dll jobid 186
```

DLLs mapped by PID 86111

DLL path	Text VA	Text Sz	Data VA	Data Sz	Refcount
/lib/libbovl.dll	0xfc0c8000	0x0000c3b0	0xfc0c21f0	0x0000076c	23
/lib/libplatform.dll	0xfc0d5000	0x0000aa88	0xfc0e0000	0x00002000	165
/lib/libsysmgr.dll	0xfc0e2000	0x0000ab48	0xfc0c295c	0x00000368	167
/lib/libinfra.dll	0xfc0ed000	0x0003284c	0xfc120000	0x00000c70	169
/lib/libbios.dll	0xfc121000	0x0002c4bc	0xfc14e000	0x00002000	166
/lib/libc.dll	0xfc150000	0x00077ae0	0xfc1c8000	0x00002000	175
/mbi/lib/libltrace.dll	0xfc1ca000	0x00007f5c	0xfc0c2cc4	0x00000188	96
/lib/libsyslog.dll	0xfc1d2000	0x0000530c	0xfc120c70	0x00000308	129
/lib/libbackplane.dll	0xfc1d8000	0x0000134c	0xfc0c2e4c	0x000000a8	163
/lib/libnodeid.dll	0xfc1e5000	0x000091fc	0xfc1e41a8	0x00000208	163

```

/mbi/lib/libinst_mem.dll          0xfc232000 0x000044f8 0xfc1e43b0 0x00000108      4
/lib/libdebug.dll                 0xfc23c000 0x0000ef64 0xfc1e4680 0x00000550    159

```

Table 47: [show dll Field Descriptions, on page 718](#) describes the significant fields shown in the display.

Table 47: show dll Field Descriptions

Field	Description
DLL path	Physical path of the DLL on the router.
Text VA	Virtual address of the text segment of the DLL.
Text Sz	Size of the text segment of the DLL.
Data VA	Virtual address of the data segment of the DLL.
Data Sz	Size of the data segment of the DLL.
Refcount	Number of clients using the DLL.

The following example shows sample output from the **show dll** command with the optional **dllname** *dll-virtual-path* keyword and optional argument:

```

RP/0/RSP0/CPU0:router# show dll dllname /pkg/lib/libinst_mem.dll

PID:      4102  Refcount: 1
PID:      4105  Refcount: 1
PID:     24600  Refcount: 1
PID:     86111  Refcount: 1

```

Table 48: [show dll dllname Field Descriptions, on page 718](#) describes the significant fields shown in the display.

Table 48: show dll dllname Field Descriptions

Field	Description
PID:	Process ID of the process.
Refcount	Number of references to the DLL by the process.

The following example shows sample **show dll** output from the command with the optional **memory** keyword:

```

RP/0/RSP0/CPU0:router# show dll memory
-----
Total DLL Text - 14778896 bytes  Total DLL Data - 12688500 bytes
Total DLL Memory - 27467396 bytes

```

show exception

To display the configured core dump settings, use the **show exception** command in administration EXEC mode or in EXEC mode.

show exception [**core-options** [**process** *process-name*] **location** *node-id*]

Syntax Description

core-options	(Optional) Displays process core option values.
process <i>process-name</i>	(Optional) Specifies the process for which to display the information.
location <i>node-id</i>	(Optional) Displays configured settings for a specified node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

EXEC, Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	Support for the core-options keyword was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show exception** command to display the configured core dump settings. The output from this command displays the core dump settings configured with the following commands:

- [exception filepath](#), on page 685
- [exception pakmem](#), on page 689
- [exception sparse](#), on page 691
- [exception sprsize](#), on page 693

Task ID

Task ID	Operations
diag	read

Examples

The following example shows sample output from the **show exception** command with the **location** keyword. All processes for the specified node are displayed.

```
RP/0/RSP0/CPU0:router# show excep core-options location 0/rp0/cpu0
```

```
Mon Nov 30 01:31:31.391 PST
Process
      Options
attach_server:
      TEXT SHAREDMEM MAINMEM
attachd:
      TEXT SHAREDMEM MAINMEM
ksh-aux:
      TEXT SHAREDMEM MAINMEM
bcm_logger:
      TEXT SHAREDMEM MAINMEM
devf-scrp:
      TEXT SHAREDMEM MAINMEM
bfm_server:
      TEXT SHAREDMEM MAINMEM
ksh:
      TEXT SHAREDMEM MAINMEM
dllmgr:
      COPY
dumper:
      TEXT SHAREDMEM MAINMEM
eth_server:
      COPY SPARSE
inflator:
      TEXT SHAREDMEM MAINMEM
insthelper:
      TEXT SHAREDMEM MAINMEM
mbi-hello:
      TEXT SHAREDMEM MAINMEM
cat:
      TEXT SHAREDMEM MAINMEM
mq:
      COPY
mqueue:
      TEXT SHAREDMEM MAINMEM
nname:
      TEXT SHAREDMEM MAINMEM
nvram:
      TEXT SHAREDMEM MAINMEM
--More--
```

The following example shows sample output from the **show exception** command for a specific process:

```
RP/0/RSP0/CPU0:router# show excep core-options process upgrade_daemon location 0/6/cpu0
```

```
Mon Nov 30 01:32:20.207 PST
Process
      Options
upgrade_daemon:
      TEXT SHAREDMEM MAINMEM
```

Related Commands

Command	Description
exception filepath	Modifies core dump settings.
exception pakmem	Configures the collection of packet memory information in core dump files.
exception sparse	Enables or disables sparse core dumps.
exception sprsize	Specifies the maximum file size for core dumps.

show memory

To display the available physical memory and memory usage information of processes on the router, use the **show memory** command in EXEC or administration EXEC mode.

show memory [*jobid*] **summary** [**bytes** | **detail**]] **location** *node-id*

Syntax Description

<i>job id</i>	(Optional) Job ID associated with a process instance. Specifying a job ID for the <i>job-id</i> argument displays the memory available and memory usage information for only the process associated with the specified job ID. If the <i>job-id</i> argument is not specified, this command displays information for all running processes.
summary	(Optional) Displays a summary of the physical memory and memory usage information.
bytes	(Optional) Displays numbers in bytes for an exact count.
detail	(Optional) Displays numbers in the format “nnn.dddM” for more detail.
location <i>node-id</i>	Displays the available physical memory from the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To display detailed memory information for the entire router, enter the **show memory** command without any parameters.

Task ID

Task ID	Operations
basic-services	read

Examples

This example shows partial sample output from the **show memory** command entered without keywords or arguments. This command displays details for the entire router.

```
RP/0/RSP0/CPU0:router# show memory

Physical Memory:2048M total
Application Memory :1802M (1636M available)
Image:116M (bootram:116M)
Reserved:128M, IOMem:0, flashfsys:0
Total shared window:0

kernel:jid 1
Address      Bytes      What
0008f000     12288     Program Stack
000b2000     12288     Program Stack
Total Allocated Memory:0
Total Shared Memory:0

sbin/devc-pty:jid 68
Address      Bytes      What
4817f000     4096      Program Stack (pages not allocated)
48180000     516096    Program Stack (pages not allocated)
481fe000     8192      Program Stack
48200000     28672     Physical Mapped Memory
48207000     4096      ANON FIXED ELF SYSRAM
48208000     4096      ANON FIXED ELF SYSRAM
```

This example shows sample output from the **show memory** command entered with the job ID 7 to show the memory usage information for the process associated with this job identifier:

```
RP/0/RSP0/CPU0:router# show memory 7

Physical Memory: 256M total
Application Memory : 249M (217M available)
Image: 2M (bootram: 2M)
Reserved: 4M, IOMem: 0, flashfsys: 0

sbin/pipe: jid 7
Address      Bytes      What
07f7c000     126976    Program Stack (pages not allocated)
07f9b000     4096      Program Stack
07f9d000     126976    Program Stack (pages not allocated)
07fbc000     4096      Program Stack
07fbe000     126976    Program Stack (pages not allocated)
07fdd000     4096      Program Stack
07fdf000     126976    Program Stack (pages not allocated)
07ffe000     4096      Program Stack
08000000     122880    Program Stack (pages not allocated)
0801e000     8192      Program Stack
08020000     12288     Physical Mapped Memory
08023000     4096      Program Text or Data
08024000     4096      Program Text or Data
08025000     16384     Allocated Memory
08029000     16384     Allocated Memory
7c001000     319488    DLL Text libc.dll
7e000000     8192      DLL Data libc.dll
```

This example shows how to display a detailed summary of memory information for the router:

```
RP/0/RSP0/CPU0:router# show memory summary detail

Physical Memory: 256.000M total
Application Memory : 140.178M (15.003M available)
Image: 95.739M (bootram: 95.739M)
Reserved: 20.000M, IOMem: 0, flashfsys: 0
Shared window fibv6: 257.980K
```

```

Shared window PFI_IFH: 207.925K
Shared window aib: 8.972M
Shared window infra_statsd: 3.980K
Shared window ipv4_fib: 1.300M
Shared window atc_cache: 35.937K
Shared window qad: 39.621K
Total shared window: 10.805M
Allocated Memory: 49.933M
Program Text: 6.578M
Program Data: 636.000K
Program Stack: 4.781M

```

Table 49: show memory summary Field Descriptions

Field	Description
Physical Memory	Available physical memory on the router.
Application Memory	Current memory usage of all the processes on the router.
Image	Memory that is currently used by the image and available memory.
Reserved	Total reserved memory.
IOMem	Available I/O memory.
flashfsys	Total flash memory.
Shared window fibv6	Internal shared window information.
Shared window PFI_IFH	Internal shared window information.
Shared window aib	Internal shared window information.
Shared window infra_statsd	Internal shared window information.
Shared window ipv4_fib	Internal shared window information.
Shared window atc_cache	Internal shared window information.
Shared window qad	Internal shared window information.
Total shared window	Internal shared window information.
Allocated Memory	Amount of memory allocated for the specified node.
Program Text	Internal program test information.
Program Data	Internal program data information.
Program Stack	Internal program stack information.

Related Commands

Command	Description
show memory heap	Displays information about the heap space for a process.
show processes	Displays information about active processes.

show memory compare

To display details about heap memory usage for all processes on the router at different moments in time and compare the results, use the **show memory compare** command in EXEC or administration EXEC mode.

show memory compare {start| end| report}

Syntax Description

start	Takes the initial snapshot of heap memory usage for all processes on the router and sends the report to a temporary file named /tmp/memcmp_start.out.
end	Takes the second snapshot of heap memory usage for all processes on the router and sends the report to a temporary file named /tmp/memcmp_end.out. This snapshot is compared with the initial snapshot when displaying the heap memory usage comparison report.
report	Displays the heap memory comparison report, comparing heap memory usage between the two snapshots of heap memory usage.

Command Default

None

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Use the **show memory compare** command to display details about the heap memory usage of all processes on the router at different moments in time and compare the results. This command is useful for detecting patterns of memory usage during events such as restarting processes or configuring interfaces.

Use the following steps to create and compare memory snapshots:

- 1 Enter the **show memory compare** command with the **start** keyword to take the initial snapshot of heap memory usage for all processes on the router.



Note

The snapshot is similar to that resulting from entry of the [show memory heap, on page 729](#) command with the optional **summary** keyword.

- 2 Perform the test you want to analyze.

- 3 Enter the **show memory compare** command with the **end** keyword to take the snapshot of heap memory usage to be compared with the initial snapshot.
- 4 Enter the **show memory compare** command with the **report** keyword to display the heap memory usage comparison report.

Task ID

Task ID	Operations
basic-services	read

Examples

This example shows sample output from the **show memory compare** command with the **report** keyword:

```
RP/0/RSP0/CPU0:router# show memory compare report
```

JID	name	mem before	mem after	difference	mallocs	restarted
---	----	-----	-----	-----	-----	-----
84	driver_infra_partner	577828	661492	83664	65	
279	gsp	268092	335060	66968	396	
236	snap_transport	39816	80816	41000	5	
237	mpls_lsd_agent	36340	77340	41000	5	
268	fint_partner	24704	65704	41000	5	
90	null_caps_partner	25676	66676	41000	5	
208	aib	55320	96320	41000	5	
209	ipv4_io	119724	160724	41000	5	
103	loopback_caps_partne	33000	74000	41000	5	
190	ipv4_arm	41432	82432	41000	5	
191	ipv6_arm	33452	74452	41000	5	
104	sysldr	152164	193164	41000	5	
85	nd_partner	37200	78200	41000	5	
221	clns	61520	102520	41000	5	
196	parser_server	1295440	1336440	41000	5	
75	bundlemgr_distrib	57424	98424	41000	5	
200	arp	83720	124720	41000	5	
201	cdp	56524	97524	41000	5	
204	ether_caps_partner	39620	80620	41000	5	
206	qosmgr	55624	96624	41000	5	
240	imd_server	92880	104680	11800	28	
260	improxy	77508	88644	11136	10	
111	nrssvr	29152	37232	8080	60	
275	sysdb_svr_local	1575532	1579056	3524	30	
205	cfgmgr	31724	33548	1824	25	
99	sysdb_svr_shared	1131188	1132868	1680	14	
51	mbus-rp	26712	27864	1152	4	
66	wdsysmon	298068	299216	1148	15	
168	netio	1010912	1012060	1148	6	
283	itrace_manager	17408	17928	520	3	
59	devc-conaux	109868	110300	432	4	
67	syslogd_helper	289200	289416	216	2	
117	fctl	41596	41656	60	2	
54	sysmgr	171772	171076	-696	-5	
269	ifmgr	539308	530652	-8656	-196	*

Table 50: show memory compare report Field Descriptions

Field	Description
JID	Process job ID.
name	Process name.

show memory compare

Field	Description
mem before	Heap memory usage at start (in bytes).
mem after	Heap memory usage at end (in bytes).
difference	Difference in heap memory usage (in bytes).
mallocs	Number of unfreed allocations made during the test period.
restarted	Indicates if the process was restarted during the test period.

Related Commands

Command	Description
show memory heap	Displays information about the heap space for a process.
show processes	Displays information about active processes.

show memory heap

To display information about the heap space for a process, use the **show memory heap** command in EXEC or administration EXEC mode.

show memory heap [**allocated**] [**dllname**] [**failure**] [**free**] [*jobid*] **all**

Syntax Description

allocated	(Optional) Displays a list of all allocated heap blocks.
dllname	(Optional) Displays heaps with dynamic link library (DLL) names.
failure	(Optional) Displays a summary of heap failures.
free	(Optional) Displays a list of all free heap blocks.
summary	(Optional) Displays a summary of the information about the heap space.
<i>job-id</i>	Job ID associated with the process instance.
all	(Optional) Displays information about the heap space for all processes. The all keyword is only available when the failure or summary keywords are used.

Command Default

None

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
basic-services	read

Examples

This example shows sample output from the **show memory heap** command, specifying a job ID for the *job-id* argument:

```
RP/0/RSP0/CPU0:router# show memory heap 111
```

```

Malloc summary for pid 16433:
  Heapsize 16384: allocd 6328, free 8820, overhead 1236
  Calls: mallocs 144; reallocs 73; frees 5; [core-allocs 1; core-frees 0]
Block Allocated List
Total      Total      Block      Name/ID/Caller
Usizes     Sizes     Counts
0x000008c1 0x000008cc 0x00000001 0x7c018a10
0x000005ac 0x00000974 0x00000079 0x7c02b9e0
0x000004f0 0x000004f8 0x00000001 0x7c02b6fc
0x00000080 0x00000088 0x00000001 0x7c01936c
0x00000034 0x00000048 0x00000001 0x7c018954
0x00000024 0x00000030 0x00000001 0x7c019278
0x00000018 0x00000020 0x00000001 0x7c019b2c
0x00000008 0x00000010 0x00000001 0x7c017178
0x00000008 0x00000010 0x00000001 0x7c00fb54
0x00000008 0x00000010 0x00000001 0x7c00fb80
0x00000008 0x00000010 0x00000001 0x7c00fbb8

```

Table 51: show memory heap Field Descriptions

Field	Description
Malloc summary for pid	System-defined process ID (PID).
Heapsize	Size of the heap as allocated from the system by the malloc library.
allocd	Bytes allocated to the process.
free	Bytes available in the heap.
overhead	Malloc library overhead in bytes.
mallocs	Number of malloc calls.
reallocs	Number of realloc calls.
frees	Number of invocations to the caller interface provided in the malloc library for deallocating the memory.

Field	Description
[core-allocs 1; core-frees 0]	Number of core memory units, the memory units in the malloc library allocated by the system for the heap, allocated, and freed.

The following example shows sample output from the **show memory heap** command, specifying the **summary** *job-id* keyword and argument:

```
RP/0/RSP0/CPU0:router# show memory heap summary 65

Malloc summary for pid 20495 process pcmciad:
  Heapsize 65536: allocd 40332, free 16568, overhead 8636
  Calls: mallocs 883; reallocs 3; frees 671; [core-allocs 4; core-frees 0]
Band size 16, element per block 48, nbuint 1
  Completely free blocks: 0
  Block allocated: 2, Block freed: 0
  allocs: 85, frees: 20
  allocmem: 1040, freemem: 496, overhead: 448
  blocks: 2, blknodes: 96
Band size 24, element per block 34, nbuint 1
  Completely free blocks: 0
  Block allocated: 1, Block freed: 0
  allocs: 243, frees: 223
  allocmem: 480, freemem: 336, overhead: 168
  blocks: 1, blknodes: 34
Band size 32, element per block 26, nbuint 1
  Completely free blocks: 0
  Block allocated: 1, Block freed: 0
  allocs: 107, frees: 97
  allocmem: 320, freemem: 512, overhead: 136
  blocks: 1, blknodes: 26
Band size 40, element per block 22, nbuint 1
  Completely free blocks: 0
  Block allocated: 2, Block freed: 0
  allocs: 98, frees: 74
  allocmem: 960, freemem: 800, overhead: 240
  blocks: 2, blknodes: 44
Band size 48, element per block 18, nbuint 1
  Completely free blocks: 0
  Block allocated: 1, Block freed: 0
  allocs: 53, frees: 42
  allocmem: 528, freemem: 336, overhead: 104
  blocks: 1, blknodes: 18
Band size 56, element per block 16, nbuint 1
  Completely free blocks: 0
  Block allocated: 1, Block freed: 0
  allocs: 8, frees: 4
  allocmem: 224, freemem: 672, overhead: 96
  blocks: 1, blknodes: 16
Band size 64, element per block 14, nbuint 1
  Completely free blocks: 0
  Block allocated: 1, Block freed: 0
  allocs: 6, frees: 2
  allocmem: 256, freemem: 640, overhead: 88
  blocks: 1, blknodes: 14
Band size 72, element per block 12, nbuint 1
  Completely free blocks: 0
  Block allocated: 1, Block freed: 0
  allocs: 1, frees: 0
  allocmem: 72, freemem: 792, overhead: 80
  blocks: 1, blknodes: 12
```

Table 52: show memory heap summary Field Descriptions

Field	Description
Malloc summary for pid	System-defined process ID (pid).
Heapsize	Size of the heap as allocated from the system by the malloc library.
allocd	Bytes allocated to the process.
free	Bytes available in the heap.
overhead	Malloc library overhead in bytes.
mallocs	Number of malloc calls.
reallocs	Number of realloc calls.
frees	Number of invocations to the caller interface provided in the malloc library for deallocating the memory.
[core-allocs 1; core-frees 0]	Number of core memory units, the memory units in the malloc library allocated by the system for the heap, allocated and freed.
Band size	Small memory elements are arranged in bands. The band size specifies the size of elements within the band.
element per block	Number of elements per block in the band.
nbunit	Number of memory unit one block consists of. Any block in any band should be of a size that is an integer multiple of this basic unit.
Completely free blocks	Number of blocks in the band completely free (available for allocation).
Block allocated	Number of blocks currently allocated for the band.
allocs	Number of allocations currently performed from the band.
frees	Number of free calls that resulted in memory being returned to the band.
allocmem	Amount of memory currently allocated from the band.
overhead	Amount of memory in bytes as overhead for managing the band.

Field	Description
blocks	Number of blocks currently in the band.
blknodes	Number of nodes (elements) in all the blocks in the band.

Related Commands

Command	Description
show memory	Displays the available physical memory and memory usage information of processes on the router.

show processes

To display information about active processes, use the **show processes** command in EXEC or administration EXEC mode.

show processes {*job-id*|*process-name*| **aborts**| **all**| **blocked**| **boot**| **cpu**| **distribution** *process-name*| **dynamic**| **failover**| **family**| **files**| **location** *node-id*| **log**| **mandatory**| **memory**| **pidin**| **searchpath**| **signal**| **startup**| **threadname**} [**location** *node-id*] [**detail**] [**run**]

Syntax Description

<i>job-id</i>	Job identifier for which information for only the process instance associated with the <i>job-id</i> argument is displayed.
<i>process-name</i>	Process name for which all simultaneously running instances are displayed, if applicable.
aborts	Displays process abort information.
all	Displays summary process information for all processes.
blocked	Displays details about reply, send, and mutex blocked processes.
boot	Displays process boot information.
cpu	Displays CPU usage for each process.
distribution	Displays the distribution of processes.
dynamic	Displays process data for dynamically created processes.
failover	Displays process switchover information.
family	Displays the process session and family information.
files	Displays information about open files and open communication channels.
location <i>node-id</i>	Displays information about the active processes from a designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
log	Displays process log.
mandatory	Displays process data for mandatory processes.
memory	Displays information about the text, data, and stack usage for processes.
pidin	Displays all processes using the QNX command.
searchpath	Displays the search path.
signal	Displays the signal options for blocked, pending, ignored, and queued signals.

startup	Displays process data for processes created at startup.
threadname	Displays thread names.
detail	(Optional) Displays more detail. This option is available only with the <i>process-name</i> argument.
run	(Optional) Displays information for only running processes. This option is available only with the <i>process-name</i> argument.

Command Default

None

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Use the **show processes** command to display general information about the active processes. To display more detailed information for a process, specify a job ID or process for the *job-id* argument or *process-name* argument, respectively.

You can also use the [monitor processes](#) command to determine the top processes and threads based on CPU usage.

Task ID

Task ID	Operations
basic-services	read

Examples

The **show processes** command with the *process-name* argument displays detailed information about a process:

```
RP/0/RSP0/CPU0:router# show processes ospf

Tue Jul 28 09:23:17.212 DST
      Job Id: 338
      PID: 336152
      Executable path: /disk0/asr9k-rout-3.9.0.14I/bin/ospf
      Instance #: 1
      Version ID: 00.00.0000
      Respawn: ON
      Respawn count: 1
      Max. spawns per minute: 12
      Last started: Tue Jul 14 15:26:26 2009
      Process state: Run
```

show processes

```

Package state: Normal
Started on config: cfg/gl/ipv4-ospf/proc/100/ord_z/config
  core: MAINMEM
  Max. core: 0
  Placement: Placeable
  startup_path: /pkg/startup/ospf.startup
  Ready: 1.312s
  Available: 1.334s
Process cpu time: 93.382 user, 13.902 kernel, 107.284 total
JID  TID CPU Stack pri state      TimeInState  HR:MM:SS:MSEC  NAME
338  1  0  116K  10 Receive      0:00:00:0375  0:00:47:0139  ospf
338  2  0  116K  10 Receive      0:00:05:0734  0:00:00:0029  ospf
338  3  1  116K  10 Receive      0:00:06:0765  0:00:00:0056  ospf
338  4  1  116K  10 Receive      0:00:00:0096  0:00:00:0698  ospf
338  5  1  116K  10 Receive      0:49:33:0609  0:00:00:0129  ospf
338  6  1  116K  10 Sigwaitinfo  329:56:49:0531  0:00:00:0000  ospf
338  7  0  116K  10 Receive      0:00:00:0816  0:00:58:0676  ospf
338  8  1  116K  10 Receive      0:00:06:0765  0:00:00:0043  ospf
338  9  1  116K  10 Condvar      82:30:01:0311  0:00:00:0029  ospf
338  10 1  116K  10 Receive      82:30:05:0188  0:00:00:0478  ospf
338  11 0  116K  10 Receive      329:54:49:0318  0:00:00:0005  ospf
-----

```

Table 53: show processes Field Descriptions

Field	Description
Job id	Job ID. This field remains constant over process restarts.
PID	Process ID. This field changes when process is restarted.
Executable path	Path for the process executable.
Instance	There may be more than one instance of a process running at a given time (each instance may have more than one thread).
Version ID	API version.
Respawn	ON or OFF. The field indicates if this process restarts automatically in case of failure.
Respawn count	Number of times this process has been started or restarted (that is, the first start makes this count 1).
Max. spawns per minute	Number of respawns not to be exceeded in 1 minute. If this number is exceeded, the process stops restarting.
Last started	Date and time the process was last started.
Process state	Current state of the process.
Started on config	Configuration command that started (or would start) this process.

Field	Description
core	Memory segments to include in core file.
Max. core	Number of times to dump a core file. 0 = infinity.

The **show processes** command with the **memory** keyword displays details of memory usage for a given process or for all processes, as shown in the following example:

```
RP/0/RSP0/CPU0:router# show processes memory
```

```

JID      Text      Data      Stack      Dynamic  Process
55       28672     4096     69632     17072128 eth_server
317      167936    4096     45056     10526720 syslogd
122      512000    4096     77824     9797632  bgp
265      57344     4096     57344     5877760  parser_server
254      40960     4096     143360    3084288  netio
63       8192      4096     24576     2314240  nvram
314      4096      4096     36864     1699840  sysdb_svr_local
341      495616    4096     40960     1576960  wdsysmon
259      53248     4096     28672     1490944  nvgen_server
189      32768     4096     32768     1425408  hd_drv
69       77824     4096     110592    1421312  qnet
348      323584    4096     40960     1392640  ospf
347      323584    4096     40960     1392640  ospf
346      323584    4096     40960     1392640  ospf
345      323584    4096     40960     1392640  ospf
344      323584    4096     40960     1392640  ospf
261      323584    4096     40960     1392640  ospf
--More--

```

Table 54: show processes memory Field Descriptions

Field	Description
JID	Job ID.
Text	Size of text region (process executable).
Data	Size of data region (initialized and uninitialized variables).
Stack	Size of process stack.
Dynamic	Size of dynamically allocated memory.
Process	Process name.

The **show processes** command with the **all** keyword displays summary information for all processes, as shown in the following example:

```
RP/0/RSP0/CPU0:router# show processes all
```

```

JID      LAST STARTED          STATE      RE-    PLACE-  MANDA-  MAINT-  NAME (IID)  ARGS
          START              START      START   MENT    TORY    MODE

```

show processes

```

-----
 82      03/16/2007 14:54:52.488 Run      1      M      Y      wd-mpi(1)
 58      03/16/2007 14:54:52.488 Run      1      M      Y      dllmgr(1)-r 60 -u
30
 74      03/16/2007 14:54:52.488 Run      1      M      Y      pkgfs(1)
 57      03/16/2007 14:54:52.488 Run      1      Y      devc-conaux(1) -h
-d
                                     librs232.dll -m
                                     libconaux.dll -u
                                     libst16550.dll
 76      03/16/2007 14:54:52.488 Run      1      Y      devc-pty(1) -n 32
 56      Not configured      None      0      Y      clock_chip(1) -r
-b
--More--

```

Table 55: show processes all Field Description

Field	Description
JID	Job ID.
Last Started	Date when the process was last started.
State	State of the process.
Restart	Number of times the process has restarted since the node was booted. If a node is reloaded, the restart count for all processes is reset. Normally, this value is 1, because usually processes do not restart. However, if you restart a process using the process restart command, the restart count for the process increases by one.
Placement	Indicates whether the process is a placeable process or not. Most processes are not placeable, so the value is blank. ISIS, OSPF, and BGP are examples of placeable processes.
Mandatory	M indicates that the process is mandatory. A mandatory process must be running. If a mandatory process cannot be started (for example, sysmgr starts it but it keeps crashing), after five attempts the sysmgr causes the node to reload in an attempt to correct the problem. A node cannot function properly if a mandatory process is not running.
Maint Mode	Indicates processes that should be running when a node is in maintenance mode. Maintenance mode is intended to run as few processes as possible to perform diagnostics on a card when a problem is suspected. However, even the diagnostics require some services running.

Field	Description
Name (IID)	Name of the process followed by the instance ID. A process can have multiple instances running, so the IID is the instance ID.
Args	Command-line arguments to the process.

Related Commands

Command	Description
monitor processes	Displays auto-updating statistics on processes in a full-screen mode.
monitor threads	Displays auto-updating statistics on threads in a full-screen mode.

 **show processes**



Secure Domain Router Commands on the Cisco ASR 9000 Series Router

Secure domain routers (SDRs) are a means of dividing a single physical system into multiple logically separated routers. Cisco ASR 9000 Series Routers are single-shelf routers that only support one SDR—the Owner SDR.

For detailed information about secure domain router concepts, configuration tasks, and examples, see the *Configuring Secure Domain Routers on Cisco IOS XR Software* module in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

- [show sdr, page 742](#)

show sdr

To display information about the currently defined secure domain routers (SDRs), use the **show sdr** command in the appropriate configuration mode.

Administration EXEC Mode

show sdr [**name** *sdr-name* [**detail**]| **summary**]

EXEC Mode

show sdr [**detail**]

Syntax Description

name <i>sdr-name</i>	Specifies a specific SDR.
detail	Displays more detailed information for a specific SDR.
summary	Displays summary information about all SDRs in the system.

Command Default

Administration EXEC mode:

- Displays information for the Owner SDR.
- If you are logged into a specific SDR as the admin user, then information about the local SDR is displayed.

EXEC mode:

- Displays information about the local SDR.

Command Modes

EXEC

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show sdr** command in administration EXEC mode to display the inventory of nodes in the Owner SDR or in a specific named SDR. The **show sdr** command in EXEC mode displays the inventory of nodes in the current SDR.

Task ID

Task ID	Operations
system	read

Examples

This example shows sample output from the **show sdr** command in EXEC

mode:

```
RP/0/RSP0/CPU0:router# show sdr
Thu Feb 15 04:09:06.179 PST
```

```
SDR Inventory
-----
```

Type	NodeName	NodeState	RedState	PartnerName
RP (0)	0/RSP0/CPU0	IOS XR RUN	Active	0/RSP1/CPU0
RP (0)	0/RSP1/CPU0	NOT PRESENT	Standby	0/RSP0/CPU0
LC (2)	0/1/CPU0	IOS XR RUN	NONE	NONE
LC (2)	0/4/CPU0	IOS XR RUN	NONE	NONE
LC (2)	0/6/CPU0	IOS XR RUN	NONE	NONE

Table 56: show sdr Field Descriptions

Field	Description
Type	Type of card, which can be Linecard, RP, or DRP.
NodeName	Name of the node, expressed in the <i>rack/slot/module</i> notation.
NodeState	Run state of the card, which can be failure, present, booting, running, and so on.
RedState	Redundancy state of the card, which can be active, standby, or none.
PartnerName	Partner of the card, expressed in the <i>rack/slot/module</i> notation.

This example shows sample output from the **show sdr** command in administration EXEC mode with the **summary** keyword:

```
RP/0/RSP0/CPU0:router(admin)# show sdr summary
Thu Feb 15 04:13:27.508 PST
```

```
SDRs Configured:
SDR-Names  SDRid dSDRSC      StbydSDRSC  Primary1    Primary2    MacAddr
-----
```

show sdr

```
Owner          0          0/RSP0/CPU0 NONE          0/RSP0/CPU0 0/RSP1/CPU0 001d.e5eb.c0ae
```

Table 57: show sdr summary Field Descriptions

Field	Description
SDRid	Identifier of the SDR.
dSDRSC	Designated secure domain router shelf controller. This refers to the controller of the SDR.
StbydSDRSC	Standby DSDRSC. This refers to the standby controller of the SDR.
Primary1	Configured primary node.
Primary2	Configured primary node pair.
MacAddr	MAC address associated with the SDR.



SNMP Server Commands on the Cisco ASR 9000 Series Router

This chapter describes the Cisco IOS XR software commands used to configure and monitor the Simple Network Management Protocol (SNMP) for network monitoring and management.

For detailed information about SNMP concepts, configuration tasks, and examples, see the *Implementing SNMP on Cisco IOS XR Software* configuration module in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.



Note

The **snmp-server** commands enable SNMP on Management Ethernet interfaces by default. For information about how to enable SNMP server support on other inband interfaces, see the *Implementing Management Plane Protection on Cisco IOS XR Software* module in *Cisco ASR 9000 Series Aggregation Services Router System Security Configuration Guide*.

- [add \(bulkstat object\), page 749](#)
- [buffer-size, page 751](#)
- [clear snmp counters, page 752](#)
- [enable \(bulkstat\), page 753](#)
- [format \(bulkstat\), page 755](#)
- [index persistence, page 757](#)
- [instance \(bulkstat schema\), page 759](#)
- [instance range, page 761](#)
- [instance repetition, page 763](#)
- [notification linkupdown, page 765](#)
- [object-list, page 767](#)
- [poll-interval, page 769](#)
- [retain, page 771](#)
- [retry, page 773](#)

- [schema, page 775](#)
- [show snmp, page 777](#)
- [show snmp context, page 780](#)
- [show snmp context-mapping, page 782](#)
- [show snmp engineid, page 784](#)
- [show snmp entity, page 785](#)
- [show snmp group, page 788](#)
- [show snmp host, page 790](#)
- [show snmp interface, page 792](#)
- [show snmp interface notification, page 794](#)
- [show snmp interface regular-expression, page 796](#)
- [show snmp mib, page 798](#)
- [show snmp mib bulkstat transfer, page 801](#)
- [show snmp request duplicates, page 803](#)
- [show snmp users, page 804](#)
- [show snmp view, page 806](#)
- [snmp-server chassis-id, page 808](#)
- [snmp-server community, page 810](#)
- [snmp-server community-map, page 813](#)
- [snmp-server contact, page 815](#)
- [snmp-server context, page 817](#)
- [snmp-server context mapping, page 819](#)
- [snmp-server engineid local, page 821](#)
- [snmp-server engineid remote, page 823](#)
- [snmp-server entityindex persist, page 825](#)
- [snmp-server group, page 826](#)
- [snmp-server host, page 829](#)
- [snmp-server ifindex persist, page 833](#)
- [snmp-server ifmib ifalias long, page 835](#)
- [snmp-server ifmib internal cache max-duration, page 836](#)
- [snmp-server ifmib ipsubscriber, page 838](#)
- [snmp-server ifmib stats cache, page 839](#)
- [snmp-server inform, page 841](#)

- [snmp-server interface](#), page 843
- [snmp-server interface subset](#), page 845
- [snmp-server ipv4 dscp](#), page 847
- [snmp-server ipv4 precedence](#), page 848
- [snmp-server location](#), page 850
- [snmp-server mib bulkstat max-procmem-size](#), page 852
- [snmp-server mib bulkstat object-list](#), page 853
- [snmp-server mib bulkstat schema](#), page 855
- [snmp-server mib bulkstat transfer-id](#), page 857
- [snmp-server mibs cbqosmib cache](#), page 859
- [snmp-server mibs cbqosmib persist](#), page 861
- [snmp-server mibs eventmib congestion-control](#), page 862
- [snmp-server mibs eventmib packet-loss](#), page 864
- [snmp-server mibs subscriber threshold](#), page 866
- [snmp-server mibs subscriber threshold access-if](#), page 868
- [snmp-server notification-log-mib](#), page 870
- [snmp-server packetsize](#), page 872
- [snmp-server queue-length](#), page 873
- [snmp-server target list](#), page 874
- [snmp-server throttle-time](#), page 876
- [snmp-server timeouts subagent](#), page 878
- [snmp-server trap authentication vrf disable](#), page 879
- [snmp-server trap link ietf](#), page 880
- [snmp-server trap throttle-time](#), page 882
- [snmp-server traps](#), page 883
- [snmp-server traps bgp](#), page 890
- [snmp-server traps frequency synchronization](#), page 892
- [snmp-server traps mpls l3vpn](#), page 893
- [snmp-server traps ospf errors](#), page 895
- [snmp-server traps ospf lsa](#), page 897
- [snmp-server traps ospf retransmit](#), page 899
- [snmp-server traps ospf state-change](#), page 901
- [snmp-server traps ospfv3 errors](#), page 903

- [snmp-server traps ospfv3 state-change, page 905](#)
- [snmp-server traps pim interface-state-change, page 907](#)
- [snmp-server traps pim invalid-message-received, page 909](#)
- [snmp-server traps pim neighbor-change, page 911](#)
- [snmp-server traps pim rp-mapping-change, page 913](#)
- [snmp-server traps rsvp, page 915](#)
- [snmp-server traps selective-vrf-download role-change, page 916](#)
- [snmp-server traps snmp, page 917](#)
- [snmp-server traps syslog, page 920](#)
- [snmp-server trap-source, page 922](#)
- [snmp-server traps subscriber session-aggregation, page 924](#)
- [snmp-server trap-timeout, page 925](#)
- [snmp-server user, page 927](#)
- [snmp-server view, page 930](#)
- [snmp-server vrf, page 932](#)
- [snmp test trap all, page 935](#)
- [snmp test trap entity, page 937](#)
- [snmp test trap infra, page 939](#)
- [snmp test trap interface, page 941](#)
- [snmp test trap snmp, page 942](#)
- [transfer-interval, page 943](#)
- [url, page 945](#)

add (bulkstat object)

To add a MIB object to a Simple Network Management Protocol (SNMP) bulk statistics object list, use the **add** command in bulk statistics object list configuration mode. To remove a MIB object from an SNMP bulk statistics object list, use the **no** form of this command.

add {*object-name*| *OID*}

no add {*object-name*| *OID*}

Syntax Description

<i>object-name</i>	Name of the MIB object to add to the list. Object names are limited to those with mappings shown in the show snmp mib object-name command.
<i>OID</i>	Object identifier (OID) of the MIB object to add to the list.

Command Default

No MIB objects are configured for an object list.

Command Modes

Bulk statistics object list configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

All object names and OIDs in a single object list should belong to the same MIB index, but the objects need not belong to the same MIB table. For example, it is possible to group ifInoctets and a CISCO-IF-EXTENSION-MIB object in the same schema because the containing tables are indexed by the ifIndex (in the IF-MIB).

The **add** command should be repeated as necessary until all MIB objects have been added to the object list.

Task ID

Task ID	Operation
snmp	read, write

Examples

The following example shows how to add various MIB objects to an object list.

```
RP/0/RSP0/CPU0:router(config-bulk-objects)# add 1.3.6.1.2.1.2.2.1.11
RP/0/RSP0/CPU0:router(config-bulk-objects)# add ifAdminStatus
RP/0/RSP0/CPU0:router(config-bulk-objects)# add ifDescr
```

Related Commands

Command	Description
show snmp mib	Displays a list of MIB module object identifiers registered on the system.

buffer-size

To configure a maximum buffer size for the transfer of bulk statistics files, use the **buffer-size** command in bulk statistics transfer configuration mode. To remove a previously configured buffer size from the configuration, use the **no** form of this command.

buffer-size *bytes*

no buffer-size [*bytes*]

Syntax Description

<i>bytes</i>	Size of the bulk statistics transfer buffer, in bytes. The valid range is from 1024 to 2147483647. The default is 2048.

Command Default

The default bulk statistics transfer buffer is 2048 bytes.

Command Modes

Bulk statistics transfer configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A configured buffer size limit is available primarily as a safety feature. Normal bulk statistics files should not generally meet or exceed the default value while being transferred.

Task ID

Task ID	Operation
snmp	read, write

Examples

This example shows how to set the buffer size to 1024 bytes:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat transfer bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# buffer-size 1024
```

clear snmp counters

To clear the Simple Network Management Protocol (SNMP) packet statistics shown by the **show snmp** command, use the **clear snmp counters** command in

EXEC

mode.

clear snmp counters

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **clear snmp counters** command provides the ability to clear all SNMP counters used in the **show snmp** command without restarting any processes.

Task ID	Task ID	Operations
	snmp	read, write

Examples The following example shows how to clear the SNMP counters:

```
RP/0/RSP0/CPU0:router# clear snmp counters
```

Related Commands	Command	Description
	show snmp	Displays the status of SNMP communications

enable (bulkstat)

To begin the bulk statistics data collection and transfer process for a specific bulk statistics configuration, use the **enable** command in bulk statistics transfer configuration mode. To disable the bulk statistics data collection and transfer process for a specific bulk statistics configuration, use the **no** form of this command.

enable

no enable

Syntax Description This command has no keywords or arguments.

Command Default Bulk statistics transfer is disabled.

Command Modes Bulk statistics transfer configuration

Command History	Release	Modification
	Release 4.2.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Specific bulk statistics configurations are identified with a name, as specified in the **snmp-server mib bulkstat transfer-id** command. The **enable** command begins the periodic MIB data collection and transfer process.

Collection (and subsequent file transfer) starts only if this command is used. Conversely, the **no enable** command stops the collection process. Subsequently, issuing the **enable** command starts the operations again.

Each time the collection process is started using the **enable** command, data is collected into a new bulk statistics file. When the **no enable** command is used, the transfer process for any collected data immediately begins (in other words, the existing bulk statistics file are transferred to the specified management station).

To successfully enable a bulk statistics configuration, at least one schema with a non-zero number of objects must be configured.

Task ID	Task ID	Operation
	snmp	read, write

Examples

The following example shows the bulk statistics transfer configuration named bulkstat1 as enabled:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat transfer bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# schema ATM2/0-IFMIB
RP/0/RSP0/CPU0:router(config-bulk-tr)# url primary ftp://user:pswr@host/folder/bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# enable
RP/0/RSP0/CPU0:router(config-bulk-tr)# exit
```

Related Commands

Command	Description
show snmp mib bulkstat transfer	Displays completed local bulk statistics files.
snmp-server mib bulkstat transfer-id	Identifies the bulk statistics transfer configuration and enters bulk statistics transfer configuration mode.

format (bulkstat)

To specify the format to be used for the bulk statistics data file, use the **format** command in bulk statistics transfer configuration mode. To disable a previously configured format specification and return to the default, use the **no** form of this command.

format {bulkBinary| bulkASCII| schemaASCII}

no format [bulkBinary| bulkASCII| schemaASCII]

Syntax Description

bulkBinary	Binary format.
bulkASCII	ASCII format.
schemaASCII	A human-readable ASCII format that contains additional bulk statistics schema tags. This is the default.

Command Default

The default bulk statistics transfer format is schemaASCII

Command Modes

Bulk statistics transfer configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The bulk statistics data file (VFile) contains two types of fields: tags and data. Tags are used to set off data to distinguish fields of the file. All other information is in data fields.

Transfers can only be performed using schemaASCII format.

For each transfer/schema pair there is a header with tags for each object collected, followed by the collected data. For example, if the transfer name is T1 and the schemas in it are S1 (which collects ifInOctets and ifOutOctets) and S2 (which collects ifInUcastPkts and ifInDiscards). Then the output file looks like this:

```
Schema-def cempt1.cempWild "%u, %s, %s, %d" Epochtime instanceoid
1.3.6.1.4.1.9.9.221.1.1.1.1.3 1.3.6.1.4.1.9.9.221.1.1.1.1.2
cempt1.cempWild: 1339491515, 8695772.1, processor, 2
cempt1.cempWild: 1339491515, 8695772.2, reserved, 11
cempt1.cempWild: 1339491515, 8695772.3, image, 12
cempt1.cempWild: 1339491575, 8695772.1, processor, 2
cempt1.cempWild: 1339491575, 8695772.2, reserved, 11
cempt1.cempWild: 1339491575, 8695772.3, image, 12
```

format (bulkstat)

```

Schema-def cempt1.cempRepeat "%u, %s, %s, %d" Epochtime instanceoid
1.3.6.1.4.1.9.9.221.1.1.1.1.3 1.3.6.1.4.1.9.9.221.1.1.1.1.2
cempt1.cempRepeat: 1339491515, 8695772.1, processor, 2
cempt1.cempRepeat: 1339491515, 8695772.2, reserved, 11
cempt1.cempRepeat: 1339491515, 8695772.3, image, 12
cempt1.cempRepeat: 1339491515, 26932192.1, processor, 2
cempt1.cempRepeat: 1339491515, 26932192.2, reserved, 11
cempt1.cempRepeat: 1339491515, 26932192.3, image, 12
cempt1.cempRepeat: 1339491515, 35271015.1, processor, 2
cempt1.cempRepeat: 1339491515, 35271015.2, reserved, 11
cempt1.cempRepeat: 1339491515, 35271015.3, image, 12
cempt1.cempRepeat: 1339491515, 36631989.1, processor, 2
cempt1.cempRepeat: 1339491515, 36631989.2, reserved, 11
cempt1.cempRepeat: 1339491515, 36631989.3, image, 12
cempt1.cempRepeat: 1339491515, 52690955.1, processor, 2
cempt1.cempRepeat: 1339491515, 52690955.2, reserved, 11
cempt1.cempRepeat: 1339491515, 52690955.3, image, 12

```

Task ID

Task ID	Operation
snmp	read, write

Examples

This example shows how to specify the data format:

```

RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat transfer bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# format schemaASCII

```

Related Commands

Command	Description
show snmp mib bulkstat transfer	Displays completed local bulk statistics files.
snmp-server mib bulkstat transfer-id	Identifies the bulk statistics transfer configuration and enters bulk statistics transfer configuration mode.

index persistence

To enable index persistence on an Simple Network Management Protocol (SNMP) interface, use the **index persistence** command in SNMP interface configuration mode. To restore the default conditions with respect to this command, use the **no** form of this command.

index persistence

no index persistence

Syntax Description This command has no keywords or arguments.

Command Default Index persistence is disabled.

Command Modes SNMP interface configuration

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **index persistence** command to enable ifIndex persistence for individual entries (corresponding to individual interfaces) in the ifIndex table of the IF-MIB. IfIndex persistence retains the mapping between the ifName object values and the ifIndex object values (generated from the IF-MIB) across reboots, allowing for consistent identification of specific interfaces using SNMP.

Task ID	Operations
snmp	read, write

Examples The following example shows how to assign ifIndex persistence on Packet-over-SONET/SDH (POS) interface 0/0/1/0:

```
RP/0/RSP0/CPU0:router(config)# snmp-server interface pos 0/0/1/0
RP/0/RSP0/CPU0:router(config-snmp-if)# index persistence
```

Related Commands

Command	Description
show snmp interface	Displays the interface index identification numbers (ifIndex values) for all the interfaces or a specified interface.
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server ifindex persist	Enables ifIndex persistence globally on all SNMP interfaces.
snmp-server interface	Enables an interface to send SNMP trap notifications and enters SNMP interface configuration mode.

instance (bulkstat schema)

To configure the MIB object instances to be used in a Simple Network Management Protocol (SNMP) bulk statistics schema, use the **instance** command in bulk statistics configuration mode. To remove the instance definition, use the **no** form of this command.

```
instance {exact | wild } {interface interface-id [sub-if] oid oid}  
no instance
```

Syntax Description

exact	Specifies that the specified interface or object identifier (OID), when appended to the object list, is the complete OID to be used in this schema.
wild	Specifies that all instances that fall within the the specified OID or interface are included in this schema.
interface <i>interface-id</i>	Specifies an interface to be used to define the schema instance.
[sub-if]	(Optional) Specifies that the object instances are polled for all subinterfaces of the specified interface in addition to the object instances for the main interface.
oid <i>oid</i>	Specifies an OID to be used to define the schema instance.

Command Default

No instances are configured.

Command Modes

Bulk statistics schema configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **instance** command specifies the instance information for objects in the schema being configured. The specific instances of MIB objects for which data is collected are determined by appending the value of the instance command to the objects specified in the associated object list. In other words, the schema object-list when combined with the schema instance specifies a complete MIB object identifier.

The **instance exact** command indicates that the specified instance, when appended to the object list, is the complete OID.

The **instance wild** command indicates that all subindices of the specified OID belong to this schema. For example, the command `instance wild oid 1` includes all subindices of the instance, such as 1.1, 1.2 and so on. It does not include other instances that start with the number 1, such as 10 and 11.

Instead of specifying an OID, you can specify a specific interface. The **interface** *interface-id* keyword and argument allow you to specify an interface name and number (for example, gigabitethernet 0/6/5/0) instead of specifying the ifIndex OID for the interface.

The optional **sub-if** keyword, when added after specifying an interface, includes the ifIndexes for all subinterfaces of the interface you specified.

Only one **instance** command can be configured per schema. If multiple **instance** commands are used, the later commands overwrite the earlier ones.

Task ID

Task ID	Operation
snmp	read, write

Examples

The following examples show two different ways to configure an instance.

```
RP/0/RSP0/CPU0:router(config-bulk-sc)# instance wild oid 1
```

```
RP/0/RSP0/CPU0:router(config-bulk-sc)# instance exact interface FastEthernet 0/1.25
```

Related Commands

Command	Description
instance range	Specifies a range of instances for objects in a schema.
instance repetition	Configures bulk statistics data collection to begin at a particular instance of a MIB object and to repeat for a given number of instances.
snmp-server mib bulkstat schema	Configures an SNMP bulk statistics schema and enters bulk statistics schema configuration mode.

instance range

To specify a range of instances for objects in a schema, use the **instance** command in bulk statistics schema configuration mode. To remove the configured instance information, use the **no** form of this command.

instance range start *start-oid* **end** *end-oid*

no instance

Syntax Description

start <i>start-oid</i>	Specifies the first OID value of a range of values.
end <i>end-oid</i>	Specifies the last OID value of a range of values.

Command Default

No instances are configured.

Command Modes

Bulk statistics schema configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Only one **instance** command can be configured per schema. If multiple **instance** commands are used, the later commands overwrite the earlier ones.

Task ID

Task ID	Operation
snmp	read, write

Examples

The following example shows how to configure a range of instances.

```
RP/0/RSP0/CPU0:router(config-bulk-sc)# instance range start 1 end 2
```

instance range

Related Commands

Command	Description
instance (bulkstat schema)	Configures the MIB object instances to be used in a bulk statistics schema.
snmp-server mib bulkstat schema	Configures an SNMP bulk statistics schema and enters bulk statistics schema configuration mode.

instance repetition

To configure bulk statistics data collection to begin at a particular instance of a MIB object and to repeat for a given number of instances, use the **instance repetition** command in bulk statistics schema configuration mode. To delete a previously configured repetition of instances, use the **no** form of this command.

instance repetition *oid-instance* **max** *repeat-number*
no instance

Syntax Description

<i>oid-instance</i>	Object ID of the instance to be monitored.
max <i>repeat-number</i>	Specifies the number of times the instance should repeat.

Command Default

No instance repetition is configured.

Command Modes

Bulk statistics schema configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **instance repetition** command is used to configure data collection to repeat for a certain number of instances of a MIB object.

Only one **instance** command can be configured per schema. If multiple **instance** commands are used, the later commands overwrite the earlier ones.

Task ID

Task ID	Operation
snmp	read, write

Examples

The following example configures 4 repetitions of the OID of value 1.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat object-list ifmib
```

```

RP/0/RSP0/CPU0:router(config-bulk-objects)# add ifOutOctets
RP/0/RSP0/CPU0:router(config-bulk-objects)# add ifInOctets

RP/0/RSP0/CPU0:router(config-bulk-objects)# exit
RP/0/RSP0/CPU0:router(config)# snmp mib-server bulkstat schema IFMIB

RP/0/RSP0/CPU0:router(config-bulk-sc)# object-list ifmib
RP/0/RSP0/CPU0:router(config-bulk-sc)# poll-interval 1
RP/0/RSP0/CPU0:router(config-bulk-sc)# instance repetition 1 max 4

```

Related Commands

Command	Description
instance (bulkstat schema)	Configures the MIB object instances to be used in a bulk statistics schema.
instance range	Specifies a range of instances for objects in a schema.
snmp-server mib bulkstat schema	Configures an SNMP bulk statistics schema and enters bulk statistics schema configuration mode.

notification linkupdown

To enable or disable linkUp and linkDown trap notifications on a Simple Network Management Protocol (SNMP) interface, use the **notification linkupdown** command in SNMP interface configuration mode. To revert to the default setting, use the **no** form of this command.

notification linkupdown disable

no notification linkupdown disable

Syntax Description	disable	Disables linkUp and linkDown trap notifications on an SNMP interface.

Syntax Description	This command has no keywords or arguments.

Command Default	By default, for all main interfaces the linkUp and linkDown trap notifications are enabled; for all subinterfaces they are disabled.

Command Modes	SNMP interface configuration SNMP interface subset configuration

Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 3.7.2</td><td>This command was introduced.</td></tr><tr><td>Release 3.9.0</td><td>This command was supported in the SNMP interface subset configuration mode.</td></tr></table>	Release	Modification	Release 3.7.2	This command was introduced.	Release 3.9.0	This command was supported in the SNMP interface subset configuration mode.
Release	Modification						
Release 3.7.2	This command was introduced.						
Release 3.9.0	This command was supported in the SNMP interface subset configuration mode.						

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. Enabling of linkUp and linkDown notifications is performed globally using the snmp-server traps snmp command. Issue the notification linkupdown command to disable linkUp and linkDown notifications on an interface. Use the no form of this command to enable linkUp and linkDown notifications on an interface, if linkUp and linkDown notifications have been disabled. You can also use the snmp-server interface subset command to enable or disable groups of interfaces.

Task ID

Task ID	Operations
snmp	read, write

Examples

The following example shows how to disable linkUp and linkDown trap notifications on Packet-over-SONET/SDH (POS) interface 0/0/1/0:

```
RP/0/RSP0/CPU0:router(config)# snmp-server interface pos 0/0/1/0
RP/0/RSP0/CPU0:router(config-snmp-if)# notification linkupdown disable
```

Related Commands

Command	Description
show snmp interface	Displays the interface index identification numbers (ifIndex values) for all the interfaces or a specified interface.
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server ifindex persist	Enables ifIndex persistence globally on all SNMP interfaces.
snmp-server interface	Enables an interface to send SNMP trap notifications and enters SNMP interface configuration mode.
snmp-server interface subset	Enters snmp-server interface mode for a subset of interfaces.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.

object-list

To specify the bulk statistics object list to be used in the bulk statistics schema, use the **object-list** command in bulk statistics schema configuration mode. To remove an object list from the schema, use the **no** form of this command.

object-list *list-name*

no object-list [*list-name*]

Syntax Description

<i>list-name</i>	Name of a previously configured bulk statistics object list.

Command Default

No bulk statistics object list is specified.

Command Modes

Bulk statistics schema configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This command associates a bulk statistics object list with the schema being configured. The object list should contain a list of MIB objects to be monitored. Only one object list can be specified for each schema. Use the **snmp-server mib bulkstat object-list** command to create an object list.

Task ID

Task ID	Operation
snmp	read, write

Examples

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat schema schema1
RP/0/RSP0/CPU0:router(config-bulk-sc)# object-list obj1
```

Related Commands

Command	Description
show snmp mib bulkstat transfer	Displays completed local bulk statistics files.
snmp-server mib bulkstat schema	Configures an SNMP bulk statistics schema and enters bulk statistics schema configuration mode.
snmp-server mib bulkstat object-list	Configures an SNMP bulk statistics object list and enters bulk statistics objects configuration mode.

poll-interval

To configure the polling interval for a bulk statistics schema, use the **poll-interval** command in bulk statistics schema configuration mode. To remove a previously configured polling interval, use the **no** form of this command.

poll-interval *minutes*

no poll-interval

Syntax Description

<i>minutes</i>	Integer in the range from 1 to 20000 that specifies, in minutes, the polling interval of data for this schema. The default is 5.

Command Default

Object instances are polled once every five minutes.

Command Modes

Bulk statistics schema configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **poll-interval** command sets how often the MIB instances specified by the schema and associated object list are to be polled. Collected data is stored in the local bulk statistics file for later transfer.

Task ID

Task ID	Operation
snmp	read, write

Examples

In this example, the polling interval for bulk statistics collection is set to once every 3 minutes in the schema called GigE2/1-CAR:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulk schema GigE2/1-CAR
RP/0/RSP0/CPU0:router(config-bulk-sc)# poll-interval 3
```

 poll-interval**Related Commands**

Command	Description
snmp-server mib bulkstat schema	Configures an SNMP bulk statistics schema and enters bulk statistics schema configuration mode.

retain

To configure the retention interval for bulk statistics files, use the **retain** command in bulk statistics transfer configuration mode. To remove a previously configured retention interval from the configuration, use the **no** form of this command.

retain *minutes*

no retain [*minutes*]

Syntax Description

<i>minutes</i>	Length of time, in minutes, that the local bulk statistics file should be kept in system memory (the retention interval). The valid range is 0 to 20000. The default is 0.

Command Default

The bulk statistics file retention interval is 0 minutes.

Command Modes

Bulk statistics transfer configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **retain** command specifies how long the bulk statistics file should be kept in system memory, in minutes, after the completion of the collection interval and a transmission attempt is made. The default value of zero (0) indicates that the file is deleted immediately from local memory after a successful transfer.

If the **retry** command is used, you should configure a retention interval greater than 0. The interval between retries is the retention interval divided by the retry number. For example, if **retain 10** and **retry 2** are configured, retries are attempted once every 5 minutes. Therefore, if the **retain** command is not configured (retain default is 0), no retries are attempted.



Note

Once a successful transmission has occurred the bulk file is not retained regardless of the retain time.

Task ID

Task ID	Operation
snmp	read, write

Examples

In the following example, the bulk statistics transfer retention interval is set to 10 minutes:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat transfer bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# schema ATM2/0-IFMIB
RP/0/RSP0/CPU0:router(config-bulk-tr)# url primary ftp://user:pswr@host/folder/bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# retry 2
RP/0/RSP0/CPU0:router(config-bulk-tr)# retain 10
RP/0/RSP0/CPU0:router(config-bulk-tr)# exit
```

Related Commands

Command	Description
retry	Configures the number of retries that should be attempted for a bulk statistics file transfer.
show snmp mib bulkstat transfer	Displays completed local bulk statistics files.
snmp-server mib bulkstat transfer-id	Identifies the bulk statistics transfer configuration and enters bulk statistics transfer configuration mode.

retry

To configure the number of retries that should be attempted for a bulk statistics file transfer, use the **retry** command in bulk statistics transfer configuration mode. To return the number of bulk statistics retries to the default, use the **no** form of this command.

retry *number*

no retry [*number*]

Syntax Description

<i>number</i>	Number of transmission retries. The valid range is from 0 to 100.

Command Default

No retry attempts are made.

Command Modes

Bulk statistics transfer configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If an attempt to send the bulk statistics file fails, the system can be configured to attempt to send the file again using the **retry** command. One retry includes an attempt first to the primary destination and then, if the transmission fails, to the secondary location; for example, if the retry value is 1, an attempt will be made first to the primary URL, then to the secondary URL, then to the primary URL again, and then to the secondary URL again.

If the **retry** command is used, you should also use the **retain** command to configure a retention interval greater than 0. The interval between retries is the retention interval divided by the retry number. For example, if **retain 10** and **retry 2** are configured, retries are attempted once every 5 minutes. Therefore, if the **retain** command is not configured (or the **retain 0** command is used) no retries are attempted.

Task ID

Task ID	Operation
snmp	read, write

Examples

In the following example, the number of retries for the bulk statistics transfer is set to 2:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat transfer bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# schema ATM2/0-IFMIB
RP/0/RSP0/CPU0:router(config-bulk-tr)# url primary ftp://user:pswr@host/folder/bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# retry 2
RP/0/RSP0/CPU0:router(config-bulk-tr)# retain 10
RP/0/RSP0/CPU0:router(config-bulk-tr)# exit
```

Related Commands

Command	Description
retain	Configures the retention interval for bulk statistics files.
show snmp mib bulkstat transfer	Displays completed local bulk statistics files.
snmp-server mib bulkstat transfer-id	Identifies the bulk statistics transfer configuration and enters bulk statistics transfer configuration mode.

schema

To specify the bulk statistics schema to be used in a specific bulk statistics transfer configuration, use the **schema** command in bulk statistics transfer configuration mode. To remove a previously configured schema from a specific bulk statistics transfer configuration, use the **no** form of this command.

schema *schema-name*

no schema [*schema-name*]

Syntax Description

<i>schema-name</i>	Name of a previously configured bulk statistics schema.

Command Default

No bulk statistics schema is specified.

Command Modes

Bulk statistics transfer configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The schema must be previously defined using the **snmp-server mib bulkstat schema** command.

Repeat the **schema** command as desired for a specific bulk statistics transfer configuration. Multiple schemas can be associated with a single transfer configuration; all collected data will be in a single bulk statistics data file (VFile).

Task ID

Task ID	Operation
snmp	read, write

Examples

This example adds three different schemas to a bulk statistics transfer configuration:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat transfer-id bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# schema ATM2/0-IFMIB
RP/0/RSP0/CPU0:router(config-bulk-tr)# schema ATM2/0-CAR
```

```
RP/0/RSP0/CPU0:router(config-bulk-tr)# schema Ethernet2/1-IFMIB
```

Related Commands

Command	Description
show snmp mib bulkstat transfer	Displays completed local bulk statistics files.
snmp-server mib bulkstat schema	Configures an SNMP bulk statistics schema and enters bulk statistics schema configuration mode.

show snmp

To display the status of Simple Network Management Protocol (SNMP) communications, use the **show snmp** command in

EXEC

mode.

show snmp

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the show snmp command to show counter information for SNMP operations. It also displays the chassis ID string defined with the **snmp-server chassis-id** command.

Task ID	Task ID	Operations
	snmp	read

Examples This example shows sample output from the show snmp command:

```
RP/0/RSP0/CPU0:router# show snmp

Chassis: 01506199
37 SNMP packets input
0 Bad SNMP version errors
4 Unknown community name
0 Illegal operation for community name supplied
0 Encoding errors
24 Number of requested variables
0 Number of altered variables
0 Get-request PDUs
```

```

28 Get-next PDUs
0 Set-request PDUs
78 SNMP packets output
0 Too big errors (Maximum packet size 1500)
0 No such name errors
0 Bad values errors
0 General errors
24 Response PDUs
13 Trap PDUs
SNMP logging: enabled
Logging to 172.25.58.33.162, 0/10, 13 sent, 0 dropped.

```

Table 58: [show snmp Field Descriptions](#), on page 778 describes the significant fields shown in the display.

Table 58: show snmp Field Descriptions

Field	Description
Chassis	Chassis ID string.
SNMP packets input	Total number of SNMP packets input.
Bad SNMP version errors	Number of packets with an invalid SNMP version.
Unknown community name	Number of SNMP packets with an unknown community name.
Illegal operation for community name supplied	Number of packets requesting an operation not allowed for that community.
Encoding errors	Number of SNMP packets that were improperly encoded.
Number of requested variables	Number of variables requested by SNMP managers.
Number of altered variables	Number of variables altered by SNMP managers.
Get-request PDUs	Number of get requests received
Get-next PDUs	Number of get-next requests received.
Set-request PDUs	Number of set requests received.
SNMP packets output	Total number of SNMP packets sent by the device.
Too big errors	Number of SNMP packets that were larger than the maximum packet size.
Maximum packet size	Maximum size of SNMP packets.
No such name errors	Number of SNMP requests that specified a MIB object that does not exist.

Field	Description
Bad values errors	Number of SNMP set requests that specified an invalid value for a MIB object.
General errors	Number of SNMP set requests that failed due to some other error. (It is not a noSuchName error, badValue error, or any of the other specific errors.)
Response PDUs	Number of responses sent in reply to requests.
Trap PDUs	Number of SNMP traps sent.
SNMP logging	Enabled or disabled logging.
sent	Number of traps sent.
dropped	Number of traps dropped. Traps are dropped when the trap queue for a destination exceeds the maximum length of the queue, as set by the snmp-server queue-length command.

Related Commands

Command	Description
show snmp mib	Displays a list of MIB module object identifiers registered on the system.
snmp-server chassis-id	Provides a message line identifying the SNMP server serial number.
snmp-server queue-length	Establishes the message queue length for each trap host for SNMP.

show snmp context

To display the enhanced SNMP context mappings, use the **show snmp context** command in EXEC mode.

show snmp context

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show snmp context** command to display the protocol instance, topology and VRF mappings associated with an SNMP context.

Task ID	Operation
snmp	read

Examples This example illustrates sample output from the **show snmp context** command:

```
RP/0/RSP0/CPU0:router# show snmp context
```

```
Tue Dec 21 03:41:08.065 PST
Context-name      Vrf-name      Topology-Name  Instance-Name  Feature
con5              vf5           tp5            in5            OSPF
con6              vf6           tp6            in6            OSPF
con7              vf7           tp7            in7            OSPF
con8              vf8           tp8            in8            OSPF
```


Related Commands

Command	Description
snmp-server context mapping	Maps an SNMP context with a protocol instance, topology or VRF entity.

show snmp context-mapping

To display the SNMP context mapping table, use the **show snmp context-mapping** command in EXEC

mode.

show snmp context-mapping

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.8.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The SNMP agent handles queries based on SNMP contexts created by client features. Use the **show snmp context-mapping** command to display the SNMP context mapping table. Each entry in the table includes the name of an SNMP context created by a client instance and the name of the client that created the context.

Task ID	Task ID	Operations
	snmp	read

Examples The following example shows sample output from the **show snmp context-mapping** command:

```
RP/0/RSP0/CPU0:router# show snmp context-mapping
```

```
Wed Aug 6 01:42:35.227 UTC
Context-name      Feature-name      Feature
ControlEthernet0_RP0_CPU0_S0  ControlEthernet0_RP0_CPU0_S0  BRIDGEINST
ControlEthernet0_RP1_CPU0_S0   ControlEthernet0_RP1_CPU0_S0   BRIDGEINST
```

Table 59: show snmp context-mapping Field Descriptions

Field	Definition
Context-name	Name of an SNMP context.
Feature-name	Name of the instance that created the context.
Feature	Name of the client whose instance created the context.

show snmp engineid

To display the identification of the local Simple Network Management Protocol (SNMP) engine and all remote engines that have been configured on the router, use the **show snmp engineid** command in EXEC mode.

show snmp engineid

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

An *SNMP engine* is a copy of SNMP that can reside on a local device.

Task ID	Task ID	Operations
	snmp	read

Examples The following example shows sample output from the **show snmp engineid** command:

```
RP/0/RSP0/CPU0:router# show snmp engineid
Local SNMP engineID: 0000000902000000C025808
```

Related Commands	Command	Description
	snmp-server engineid local	Specifies an SNMP engine ID on the local device.

show snmp entity

To display the entPhysicalName and entPhysicalIndex mappings, use the **show snmp entity** command in EXEC

mode.

show snmp entity

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.9.1	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show snmp entity** command to view the entity index to use in the **snmp test trap entity** command. To use the **show snmp entity** command, SNMP must be configured on the router.

Task ID	Task ID	Operation
	snmp	read

Examples This example illustrates sample output from the **show snmp entity** command:

```
RP/0/RSP0/CPU0:router# show snmp entity
```

```
Thu Aug 13 02:10:06.741 UTC
entPhysicalIndex:      22001 entPhysicalName: portslot 0/0/CPU0/7
entPhysicalIndex:      23006 entPhysicalName: portslot 0/0/CPU0/129
entPhysicalIndex:      23557 entPhysicalName: portslot 0/0/CPU0/3
entPhysicalIndex:      47719 entPhysicalName: 0/0/* - ingresspse - 1.2V
entPhysicalIndex:      320862 entPhysicalName: 0/0/* - host - 5V_C
entPhysicalIndex:      322450 entPhysicalName: 0/0/* - host - 1.5V
entPhysicalIndex:      428209 entPhysicalName: 0/PL2/*
entPhysicalIndex:      1038801 entPhysicalName: 0/0/* - ingressq - 2.5V
entPhysicalIndex:      1040485 entPhysicalName: 0/0/* - ingressq - 1.25V_0123
entPhysicalIndex:      1152042 entPhysicalName: 0/2/CPU0/7
```

show snmp entity

```

entPhysicalIndex: 2031334 entPhysicalName: 0/SM0/* - host - Inlet1
entPhysicalIndex: 2032954 entPhysicalName: 0/SM0/* - host - 1.8V_L
entPhysicalIndex: 2034510 entPhysicalName: 0/SM0/* - host - brd-ok-led
entPhysicalIndex: 2110001 entPhysicalName: 0/PL2/* - plimasic - Exhaust0
entPhysicalIndex: 2111557 entPhysicalName: 0/PL2/* - plimasic - 1.8V
entPhysicalIndex: 2358084 entPhysicalName: 0/0/* - egressq
entPhysicalIndex: 2359704 entPhysicalName: 0/0/* - cpu
entPhysicalIndex: 2469162 entPhysicalName: 0/2/* - egressq - Hotspot0
entPhysicalIndex: 2559937 entPhysicalName: 0/0/* - egressq - 1.2V
entPhysicalIndex: 2577533 entPhysicalName: 0/2/CPU0/0
entPhysicalIndex: 2853020 entPhysicalName: 0/0/* - egresspse - 5V
entPhysicalIndex: 3497583 entPhysicalName: 0/SM1/* - host - brd-ok-led
entPhysicalIndex: 3500791 entPhysicalName: 0/SM1/* - host - Inlet1
--More--

```

RP/0/RSP0/CPU0:router# show snmp entity

```

Mon Nov 15 11:19:23.609 UTC
entPhysicalIndex: 172193 entPhysicalName: portslot 0/0/CPU0/1
entPhysicalIndex: 322450 entPhysicalName: voltages 0/0/CPU0
entPhysicalIndex: 345071 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 346659 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 349835 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 546880 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 845998 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 847586 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 1192623 entPhysicalName: 0/25/CPU0
entPhysicalIndex: 1227530 entPhysicalName: voltages 0/21/CPU0
entPhysicalIndex: 1460256 entPhysicalName: temperatures 0/18/CPU0
entPhysicalIndex: 1795138 entPhysicalName: temperatures 0/20/CPU0
entPhysicalIndex: 3079213 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 3080801 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 3082421 entPhysicalName: slot 7/0
entPhysicalIndex: 5037675 entPhysicalName: 0/21/CPU0
entPhysicalIndex: 5509481 entPhysicalName: voltages 0/9/CPU0
entPhysicalIndex: 6182130 entPhysicalName: voltages 0/9/CPU0
entPhysicalIndex: 6369487 entPhysicalName: portslot 0/9/CPU0/2
entPhysicalIndex: 8392407 entPhysicalName: temperatures 0/17/CPU0
entPhysicalIndex: 8548798 entPhysicalName: 0/21/CPU0 - host
entPhysicalIndex: 10735504 entPhysicalName: voltages 0/1/CPU0
entPhysicalIndex: 10737188 entPhysicalName: voltages 0/1/CPU0
entPhysicalIndex: 10738808 entPhysicalName: slot 1/1
entPhysicalIndex: 11312388 entPhysicalName: slot 7
entPhysicalIndex: 11314008 entPhysicalName: slot 3
entPhysicalIndex: 12644344 entPhysicalName: voltages 0/19/CPU0
entPhysicalIndex: 12761695 entPhysicalName: slot 24
entPhysicalIndex: 12763283 entPhysicalName: slot 20
entPhysicalIndex: 12907576 entPhysicalName: voltages 0/0/CPU0
entPhysicalIndex: 13262622 entPhysicalName: slot 16
entPhysicalIndex: 13290941 entPhysicalName: temperatures 0/16/CPU0
entPhysicalIndex: 13404457 entPhysicalName: voltages 0/2/CPU0
entPhysicalIndex: 13406077 entPhysicalName: voltages 0/2/CPU0
entPhysicalIndex: 13701859 entPhysicalName: voltages 0/2/CPU0
entPhysicalIndex: 13900492 entPhysicalName: voltages 0/2/CPU0
entPhysicalIndex: 13903700 entPhysicalName: voltages 0/2/CPU0
entPhysicalIndex: 13905384 entPhysicalName: voltages 0/2/CPU0
entPhysicalIndex: 14106204 entPhysicalName: portslot 0/8/CPU0/2
entPhysicalIndex: 14256525 entPhysicalName: voltages 0/8/CPU0
entPhysicalIndex: 14979942 entPhysicalName: slot 2/2
entPhysicalIndex: 14981562 entPhysicalName: voltages 0/2/CPU0
entPhysicalIndex: 15141782 entPhysicalName: 0/19/CPU0
entPhysicalIndex: 15873651 entPhysicalName: temperatures 0/22/CPU0
entPhysicalIndex: 15986678 entPhysicalName: voltages 0/1/CPU0
entPhysicalIndex: 15988234 entPhysicalName: voltages 0/1/CPU0
entPhysicalIndex: 15991442 entPhysicalName: voltages 0/1/CPU0
entPhysicalIndex: 16136999 entPhysicalName: voltages 0/1/CPU0
entPhysicalIndex: 16138619 entPhysicalName: voltages 0/1/CPU0
entPhysicalIndex: 16285636 entPhysicalName: temperatures 0/1/CPU0
entPhysicalIndex: 16287256 entPhysicalName: voltages 0/1/CPU0
entPhysicalIndex: 16606045 entPhysicalName: voltages 0/8/CPU0
entPhysicalIndex: 16607633 entPhysicalName: voltages 0/8/CPU0
entPhysicalIndex: 16733769 entPhysicalName: 0/2/CPU0 - host

```

```
entPhysicalIndex: 16949774 entPhysicalName: portslot 0/0/CPU0/0
entPhysicalIndex: 17098539 entPhysicalName: temperatures 0/0/CPU0
entPhysicalIndex: 17122684 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 17124272 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 17127448 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 17205790 entPhysicalName: 0/2/CPU0
entPhysicalIndex: 17322905 entPhysicalName: temperatures 0/7/CPU0
entPhysicalIndex: 17324589 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 17595466 entPhysicalName: 0/25/CPU0 - host
entPhysicalIndex: 17620307 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 17621991 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 17623611 entPhysicalName: voltages 0/7/CPU0
entPhysicalIndex: 18003523 entPhysicalName: temperatures 0/21/CPU0
entPhysicalIndex: 18237837 entPhysicalName: voltages 0/18/CPU0
entPhysicalIndex: 18571163 entPhysicalName: voltages 0/20/CPU0
---More---
```

show snmp group

To display the names of groups on the router, security model, status of the different views, and storage type of each group, use the **show snmp group** command in

EXEC

mode.

show snmp group

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	snmp	read

Examples This example shows sample output from the **show snmp group** command:

```
RP/0/RSP0/CPU0:router# show snmp group

groupname: public security model:snmpv1
readview : vldefault writeview: -
notifyview: vldefault
row status: nonVolatile

groupname: public security model:snmpv2c
readview : vldefault writeview: -
notifyview: vldefault
row status: nonVolatile
```


Table 60: show snmp group Field Descriptions

Field	Definition
groupname	Name of the Simple Network Management Protocol (SNMP) group or collection of users that have a common access policy.
readview	String identifying the read view of the group.
security model	Security model used by the group, either v1, v2c, or v3.
writeview	String identifying the write view of the group.
notifyview	String identifying the notify view of the group.
row status	Settings that are set in volatile or temporary memory on the device, or in nonvolatile or persistent memory where settings remain after the device is turned off and on again.

Related Commands

Command	Description
snmp-server group	Configures a new SNMP group, or a table that maps SNMP users to SNMP views.

show snmp host

To display the configured Simple Network Management Protocol (SNMP) notification recipient host, User Datagram Protocol (UDP) port number, user, and security model, use the **show snmp host** command in EXEC

mode.

show snmp host

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	snmp	read

Examples The following example shows sample output from the **show snmp host** command:

```
RP/0/RSP0/CPU0:router# show snmp host

Notification host: 10.50.32.170 udp-port: 2345 type: trap
user: userV3auth security model: v3 auth

Notification host: 10.50.32.170 udp-port: 2345 type: trap
user: userV3noauth security model: v3 noauth

Notification host: 10.50.32.170 udp-port: 2345 type: trap
user: userV3priv security model: v3 priv

Notification host: 10.50.32.170 udp-port: 2345 type: trap
user: userv2c security model: v2c
```

Table 61: show snmp host Field Descriptions

Field	Definition
Notification host	Name or IP address of target host.
udp-port	UDP port number to which notifications are sent.
type	Type of notification configured.
user	Security level of the user.
security model	Version of SNMP used to send the trap, either v1, v2c, or v3.

show snmp interface

To display the interface index identification numbers (ifIndex values) for all the interfaces or a specified interface, use the **show snmp interface** command in EXEC mode.

show snmp interface [*type interface-path-id ifindex*]

Syntax Description

<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
ifindex	(Optional) Displays the ifIndex value for the specified interface.

Command Default

Enter the **show snmp interface** command without keywords or arguments to display the ifIndex value for all interfaces.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
snmp	read

Examples

This example displays the ifIndex value for a specific interface:

```
RP/0/RSP0/CPU0:router# show snmp interface pos 0/1/0/1 ifindex
ifName : POS0/1/0/1          ifIndex : 12
```

The following example displays the ifIndex value for all interfaces:

```
RP/0/RSP0/CPU0:router# show snmp interface

ifName : Loopback0          ifIndex : 1
ifName : POS0/1/0/1         ifIndex : 12
ifName : POS0/1/4/2         ifIndex : 14
ifName : POS0/1/4/3         ifIndex : 15
ifName : POS0/6/0/1         ifIndex : 2
ifName : POS0/6/4/4         ifIndex : 18
ifName : POS0/6/4/5         ifIndex : 19
ifName : POS0/6/4/6         ifIndex : 20
ifName : Bundle-POS24       ifIndex : 4
ifName : Bundle-Ether28     ifIndex : 5
ifName : Bundle-Ether28.1   ifIndex : 7
ifName : Bundle-Ether28.2   ifIndex : 8
ifName : Bundle-Ether28.3   ifIndex : 9
ifName : MgmtEth0/RP0/CPU0/0 ifIndex : 6
ifName : MgmtEth0/RP1/CPU0/0 ifIndex : 10
ifName : GigabitEthernet0/1/5/0 ifIndex : 11
ifName : GigabitEthernet0/1/5/1 ifIndex : 13
ifName : GigabitEthernet0/1/5/2 ifIndex : 3
ifName : GigabitEthernet0/6/5/1 ifIndex : 16
ifName : GigabitEthernet0/6/5/2 ifIndex : 17
ifName : GigabitEthernet0/6/5/7 ifIndex : 21
```

Table 62: show snmp interface Field Descriptions

Field	Definition
ifName	Interface name.
ifIndex	ifIndex value.

Related Commands

Command	Description
snmp-server ifindex persist	Enables ifIndex persistence globally on all SNMP interfaces.
snmp-server interface	Enables an interface to send SNMP trap notifications and enters SNMP interface configuration mode.

show snmp interface notification

To display the linkUp and linkDown notification status for a subset of interfaces, use the **show snmp interface notification** command in EXEC mode.

show snmp interface notification {**subset** *subset-number*| **regular-expression** *expression*| [*type* *interface-path-id*]}

Syntax Description

subset <i>subset-number</i>	Specifies the identifier of the interface subset. The subset-number argument is configured using the snmp-server interface subset command.
regular-expression <i>expression</i>	Specifies a subset of interfaces matching a regular expression, for which to display information.
<i>type</i>	(Optional) Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Regular expressions have two constraints:

- Regular expressions must always be entered within double quotes to ensure that the CLI interprets each character correctly.
- All characters that are part of a regular expression are considered regular characters with no special meaning. In order to enter special characters, such as "\" or "?," they must be preceded by the backslash

character "\". For example, to enter the regular expression `([A-Z][A-Z0-9]*)b[^>]*>(.*)</1`, you would enter `([A-Z][A-Z0-9]*)\\b[^>]*>(.*)</1`.

Refer to the *Understanding Regular Expressions, Special Characters, and Patterns* module in *Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide* for more information regarding regular expressions.

When using the **subset** or **regular-expression** keywords, the actual display might not match the configuration if there are higher priority *subset-number* values that actually apply to the interface. This can happen for a set of interfaces that are included in two or more configured regular expressions or where an individual interface configuration is enabled.

Task ID

Task ID	Operation
snmp	read

Examples

The following example illustrates how to display linkUp and linkDown notification status for a subset of interfaces identified by a specific *subset-number*:

```
RP/0/RSP0/CPU0:router# show snmp interface notification subset 3
```

This example illustrates how to display linkUp and linkDown notification status for a subset of interfaces identified by a regular expression:

```
RP/0/RSP0/CPU0:router# show snmp interface notification regular-expression
"^Gig[a-zA-Z]+[0-9/]+\."
```

show snmp interface regular-expression

To display interface names and indices assigned to interfaces that match a regular expression, use the **show snmp interface regular-expression** command in EXEC mode.

show snmp interface regular-expression *expression*

Syntax Description

<i>expression</i>	Specifies a subset of interfaces matching a regular expression, for which to display information.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

All characters that are part of a regular expression are considered regular characters with no special meaning. In order to enter special characters, such as "\" or "?," they must be preceded by the backslash character "\". For example, to enter the regular expression ([A-Z][A-Z0-9]*)\b[^>]*>(.*)<\1, you would enter ([A-Z][A-Z0-9]*)\b[^>]*>(.*)<\1.

Refer to the *Understanding Regular Expressions, Special Characters, and Patterns* module in *Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide* for more information regarding regular expressions.

Task ID

Task ID	Operation
snmp	read

Examples

This example illustrates how to display information for interfaces that match the given regular expression:

```
RP/0/RSP0/CPU0:router# show snmp interface regular-expression "^Gig[a-zA-Z]+[0-9/]+\."
```


Related Commands

Command	Description
snmp-server interface subset	Enters snmp-server interface mode for a subset of interfaces.

show snmp mib

To display a list of MIB module object identifiers (OIDs) registered on the system, use the **show snmp mib** command in

EXEC

mode.

show snmp mib [*object-name*| **dll**]

Syntax Description

<i>object-name</i>	(Optional) Specific MIB object identifier or object name.
dll	(Optional) Displays a list of all MIB DLL filenames and the OID supported by each DLL filename on the system.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	The detailed keyword was not supported.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show snmp mib** command to display a list of the MIB module instance identifiers registered on the system.

Although the **show snmp mib** command can be used to display a list of MIB OIDs registered on the system, the use of a Network Management System (NMS) application is the recommended alternative for gathering this information.

The **show snmp mib** command is intended only for network managers who are familiar with Abstract Syntax Notation One (ASN.1) syntax and the Structure of Management Information (SMI) of Open Systems Interconnection (OSI) Reference Model.

SNMP management information is viewed as a collection of managed objects residing in a virtual information store termed the *MIB*. Collections of related objects are defined in MIB modules. These modules are written using a subset of ASN.1 termed the *SMI*.

The definitions for the OIDs displayed by this command can be found in the relevant RFCs and MIB modules. For example, RFC 1907 defines the system.x, sysOREntry.x, snmp.x, and snmpTrap.x OIDs, and this information is supplemented by the extensions defined in the CISCO-SYSTEM-MIB.

Use the **detailed** keyword to display a list of the MIB module instance identifiers registered on the system. The output displays additional details, such as DLL and configuration information.

Use the **dll** keyword to display a list of the MIB modules loaded into the agent. This command can be used to find the supported MIBs.

**Note**

This command produces a high volume of output if SNMP is enabled on the system. To exit from a --More-- prompt, press **Ctrl-Z**.

Task ID

Task ID	Operations
snmp	read

Examples

The following example shows sample output from the **show snmp mib** command:

```
RP/0/RSP0/CPU0:router# show snmp mib
```

```
1.3.6.1.2.1.47.1.1.1.1.2
1.3.6.1.2.1.47.1.1.1.1.3
1.3.6.1.2.1.47.1.1.1.1.4
1.3.6.1.2.1.47.1.1.1.1.5
1.3.6.1.2.1.47.1.1.1.1.6
1.3.6.1.2.1.47.1.1.1.1.7
1.3.6.1.2.1.47.1.1.1.1.8
1.3.6.1.2.1.47.1.1.1.1.9
1.3.6.1.2.1.47.1.1.1.1.10
1.3.6.1.2.1.47.1.1.1.1.11
1.3.6.1.2.1.47.1.1.1.1.12
1.3.6.1.2.1.47.1.1.1.1.13
1.3.6.1.2.1.47.1.1.1.1.14
1.3.6.1.2.1.47.1.1.1.1.15
1.3.6.1.2.1.47.1.1.1.1.16
1.3.6.1.2.1.47.1.2.1.1.2
1.3.6.1.2.1.47.1.2.1.1.3
1.3.6.1.2.1.47.1.2.1.1.4
1.3.6.1.2.1.47.1.2.1.1.5
1.3.6.1.2.1.47.1.2.1.1.6
1.3.6.1.2.1.47.1.2.1.1.7
1.3.6.1.2.1.47.1.2.1.1.8
1.3.6.1.2.1.47.1.3.1.1.1
--More--
```

This example shows sample output from the **show snmp mib** command with the **detailed** keyword:

```
RP/0/RSP0/CPU0:router# show snmp mib detailed
```

```
Entitymib:dll=/pkg/lib/mib/libEntitymib.dll, config=Entity.mib, loaded
1.3.6.1.2.1.47.1.1.1.1.2
1.3.6.1.2.1.47.1.1.1.1.3
1.3.6.1.2.1.47.1.1.1.1.4
1.3.6.1.2.1.47.1.1.1.1.5
1.3.6.1.2.1.47.1.1.1.1.6
1.3.6.1.2.1.47.1.1.1.1.7
```

show snmp mib

```

1.3.6.1.2.1.47.1.1.1.1.8
1.3.6.1.2.1.47.1.1.1.1.9
1.3.6.1.2.1.47.1.1.1.1.10
1.3.6.1.2.1.47.1.1.1.1.11
1.3.6.1.2.1.47.1.1.1.1.12
1.3.6.1.2.1.47.1.1.1.1.13
1.3.6.1.2.1.47.1.1.1.1.14
1.3.6.1.2.1.47.1.1.1.1.15
1.3.6.1.2.1.47.1.1.1.1.16
1.3.6.1.2.1.47.1.2.1.1.2
1.3.6.1.2.1.47.1.2.1.1.3
1.3.6.1.2.1.47.1.2.1.1.4
1.3.6.1.2.1.47.1.2.1.1.5
1.3.6.1.2.1.47.1.2.1.1.6
1.3.6.1.2.1.47.1.2.1.1.7
1.3.6.1.2.1.47.1.2.1.1.8
--More--

```

This example shows sample output from the **show snmp mib** command with the **dll** keyword:

```

RP/0/RSP0/CPU0:router# show snmp mib dll

Entitymib:dll=/pkg/lib/mib/libEntitymib.dll, config=Entity.mib, loaded
bgp4mib:dll=/pkg/lib/mib/libbgp4mib.dll, config=bgp4.mib, loaded
cdpmib:dll=/pkg/lib/mib/libcdpmib.dll, config=cdp.mib, loaded
ciscoprocessmib:dll=/pkg/lib/mib/libciscoprocessmib.dll,
  config=ciscoprocess.mib, loaded
ciscosyslogmib:dll=/pkg/lib/mib/libciscosyslogmib.dll,
  config=ciscosyslog.mib, loaded
ciscosystemmib:dll=/pkg/lib/mib/libciscosystemmib.dll,
  config=ciscosystem.mib, loaded
confcopymib:dll=/pkg/lib/mib/libconfcopymib.dll, config=confcopy.mib,
  loaded
configmanmib:dll=/pkg/lib/mib/libconfigmanmib.dll, config=configman.mib,
  loaded
dot3admib:dll=/pkg/lib/mib/libdot3admib.dll, config=dot3ad.mib,
  loaded
fabhfrmib:dll=/pkg/lib/mib/libfabhfrmib.dll, config=fabhfr.mib,
  loaded
fabmcastapplmib:dll=/pkg/lib/mib/libfabmcastapplmib.dll,
  config=fabmcastappl.mib, loaded
fabmcastmib:dll=/pkg/lib/mib/libfabmcastmib.dll, config=fabmcast.mib,
  loaded
flashmib:dll=/pkg/lib/mib/libflashmib.dll, config=flash.mib,
  loaded
hsrpmib:dll=/pkg/lib/mib/libhsrpmib.dll, config=hsrp.mib, loaded
icmpmib:dll=/pkg/lib/mib/libicmpmib.dll, config=icmp.mib, loaded
ifmib:dll=/pkg/lib/mib/libifmib.dll, config=if.mib, loaded
ipmib:dll=/pkg/lib/mib/libipmib.dll, config=ip.mib, loaded
mempoolmib:dll=/pkg/lib/mib/libmempoolmib.dll, config=mempool.mib,
  loaded
mplslpdmib:dll=/pkg/lib/mib/libmplslpdmib.dll, config=mplslpd.mib,
  loaded
.
.
.

```

Related Commands

Command	Description
show snmp	Displays the status of SNMP communications

show snmp mib bulkstat transfer

To display completed local bulk statistics files, use the **show snmp mib bulkstat transfer** command in EXEC mode.

show snmp mib bulkstat transfer [*transfer-name*]

Syntax Description	<i>transfer-name</i> Specifies a named transfer file to display.

Syntax Description	This command has no keywords or arguments.

Command Default	None

Command Modes	EXEC

Command History	Release	Modification
	Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show snmp mib bulkstat transfer** command lists all bulk statistics virtual files (VFiles) on the system that have finished collecting data. (Data files that are not complete are not displayed.)

The output lists all of the completed local bulk statistics files, the remaining time left before the bulk statistics file is deleted (remaining retention period), and the state of the bulk statistics file. The state of the bulk statistics file should be Retry. Retry indicates that one or more transfer attempts have failed and that the file transfer will be attempted again. The number of retry attempts remaining is displayed in parenthesis. After the successful retry or retry attempts, the local files created by the MIB process in the router are deleted and data collection begins again.

To display only the status of a named transfer (as opposed to all configured transfers), specify the name of the transfer in the *transfer-name* argument. The *transfer-name* argument names a file which is supposed to be created even before the retries.

Task ID	Task ID	Operation
	snmp	read

Examples

```
RP/0/RSP0/CPU0:router# show snmp mib bulkstat transfer
```

```
Transfer Name : ifmib  
Retained files
```

```
File Name      : Time Left (in seconds)  :STATE  
-----
```

```
ifmib_Router_020421_100554683 : 173 : Retry (2 Retry attempt(s) Left)
```

show snmp request duplicates

To display the number of duplicate protocol data unit (PDU) requests dropped by the SNMP agent, use the **show snmp request duplicates** command in EXEC mode.

show snmp request duplicates

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	snmp	read

Examples This example illustrates sample output from the **show snmp request duplicates** command:

```
RP/0/RSP0/CPU0:router# show snmp request duplicates
No of Duplicate request received/Dropped : 0
```

show snmp users

To display information about the configured characteristics of Simple Network Management Protocol (SNMP) users, use the **show snmp users** command in

EXEC

mode.

show snmp users

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

An SNMP user must be part of an SNMP group, as configured using the **snmp-server user** command.

Use the **show snmp users** command to display information about all configured users.

When configuring SNMP, you may see the logging message “Configuring snmpv3 USM user.” USM stands for the User-Based Security Model (USM) for SNMP Version 3 (SNMPv3). For further information about USM, see RFC 3414, *User-based Security Model (USM) for version 3 of the Simple Network Management Protocol (SNMPv3)*.

Task ID

Task ID	Operations
snmp	read

Examples

This example shows sample output from the **show snmp users** command:

```
RP/0/RSP0/CPU0:router# show snmp users
User name:user1
Engine ID:localSnmpID
```



```
storage-type:nonvolatile active
```

Table 63: show snmp users Field Descriptions

Field	Definition
User name	String identifying the name of the SNMP user.
Engine ID	String identifying the name of the copy of SNMP on the device.
storage-type	Settings that are set in volatile or temporary memory on the device, or in nonvolatile or persistent memory where settings remain after the device is turned off and on again.

Related Commands

Command	Description
snmp-server group	Configures a new SNMP group, or a table that maps SNMP users to SNMP views.
snmp-server user	Configures a new user to an SNMP group.

show snmp view

To display the configured views and the associated MIB view family name, storage type, and status, use the **show snmp view** command in

EXEC

mode.

show snmp view

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	snmp	read

Examples This example shows sample output from the **show snmp view** command:

```
RP/0/RSP0/CPU0:router# show snmp view
view1 1.3 - included nonVolatile active
vldefault 1.3.6.1 - included nonVolatile active
```

Related Commands	Command	Description
	snmp-server group	Configures a new SNMP group, or a table that maps SNMP users to SNMP views.

Command	Description
snmp-server user	Configures a new user to an SNMP group.

snmp-server chassis-id

To provide a message line identifying the Simple Network Management Protocol (SNMP) server serial number, use the **snmp-server chassis-id** command in global configuration

mode. To restore the default value, if any, use the **no** form of this command.

snmp-server chassis-id *serial-number*

no snmp-server chassis-id

Syntax Description

<i>serial-number</i>	Unique identification string to identify the chassis serial number.

Command Default

On hardware platforms, where the serial number can be read by the device, the default is the serial number. For example, some Cisco devices have default chassis ID values of their serial numbers.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server chassis-id** command to provide a message line identifying the SNMP server serial number.

The chassis ID message can be displayed with the **show snmp** command.

Task ID

Task ID	Operations
snmp	read, write

Examples

The following example shows how to specify the chassis serial number 1234456:

```
RP/0/RSP0/CPU0:router# snmp-server chassis-id 1234456
```

Related Commands

Command	Description
show snmp	Displays the status of SNMP communications

snmp-server community

To configure the community access string to permit access to the Simple Network Management Protocol (SNMP), use the **snmp-server community** command in global configuration

mode. To remove the specified community string, use the **no** form of this command.

snmp-server community [**clear**| **encrypted**] *community-string* [**view** *view-name*] [**RO**| **RW**] [**SDROwner**| **SystemOwner**] [*access-list-name*]

no snmp-server community *community-string*

Syntax Description

clear	(Optional) Specifies that the entered <i>community-string</i> is clear text and should be encrypted when displayed by the show running command.
encrypted	(Optional) Specifies that the entered <i>community-string</i> is encrypted text and should be displayed as such by the show running command.
<i>community-string</i>	Community string that acts like a password and permits access to the SNMP protocol. The maximum length of the <i>community-string</i> argument is 32 alphabetic characters. If the clear keyword was used, <i>community-string</i> is assumed to be clear text. If the encrypted keyword was used, <i>community-string</i> is assumed to be encrypted. If neither was used, <i>community-string</i> is assumed to be clear text.
view <i>view-name</i>	(Optional) Specifies the name of a previously defined view. The view defines the objects available to the community.
RO	(Optional) Specifies read-only access. Authorized management stations are able only to retrieve MIB objects.
RW	(Optional) Specifies read-write access. Authorized management stations are able both to retrieve and to modify MIB objects.
SDROwner	(Optional) Limits access to the owner service domain router (SDR).
SystemOwner	(Optional) Provides system-wide access.
<i>access-list-name</i>	(Optional) Name of an access list of IP addresses allowed to use the community string to gain access to the SNMP agent.

Command Default

By default, an SNMP community string permits read-only access to all MIB objects.

By default, a community string is assigned to the SDR owner.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.2.0	IPv6 was supported.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server community** command to configure the community access string to permit access to SNMP.

To remove the specified community string, use the **no** form of this command.

Use the **clear** keyword to specify that the clear text community string you enter is displayed encrypted in the **show running** command output. To enter an encrypted string, use the **encrypted** keyword. To enter a clear text community string that is not encrypted by the system, use neither of these keywords.

When the **snmp-server community** command is entered with the **SDROwner** keyword, SNMP access is granted only to the MIB object instances in the owner SDR.

When the **snmp-server community** command is entered with the **SystemOwner** keyword, SNMP access is granted to the entire system.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to assign the string comaccess to SNMP, allowing read-only access, and to specify that IP access list 4 can use the community string:

```
RP/0/RSP0/CPU0:router(config)# snmp-server community comaccess ro 4
```

The following example shows how to assign the string mgr to SNMP, allowing read-write access to the objects in the restricted view:

```
RP/0/RSP0/CPU0:router(config)# snmp-server community mgr view restricted rw
```

This example shows how to remove the community comaccess:

```
RP/0/RSP0/CPU0:router(config)#no snmp-server community comaccess
```

Related Commands

Command	Description
snmp-server view	Creates or updates an SNMP view entry.

snmp-server community-map

To associate a Simple Network Management Protocol (SNMP) community with an SNMP context, security name, or a target-list use the **snmp-server community-map** command in global configuration

mode. To change an SNMP community mapping to its default mapping, use the **no** form of this command.

snmp-server community-map [**clear**|**encrypted**] *community-string* [**context** *context-name*] [**security-name** *security-name*] [**target-list** *target*]

no snmp-server community-map [**clear**|**encrypted**] *community-string*

Syntax Description

clear	(Optional) Specifies that the <i>community-string</i> argument is clear text.
encrypted	(Optional) Specifies that the <i>community-string</i> argument is encrypted text.
<i>community-string</i>	Name of the community.
context <i>context-name</i>	(Optional) Name of the SNMP context to which this community name is to be mapped.
security-name <i>security-name</i>	(Optional) Security name for this community. By default, the <i>string</i> is the security name.
target-list <i>target</i>	(Optional) Name of the target list for this community.

Command Default

The value of the *community-string* argument is also the security name.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server community-map** command to map an SNMPv1 or SNMPv2c community name to one or more of the following:

- **context name**—Maps a community name to a specific SNMP context name. This allows MIB instances in an SNMP context to be accessed through SNMPv1 or SNMPv2c using this community name.
- **security name**—By default, the community name is used to authenticate SNMPv1 and SNMPv2c. Configure a security name for a community name to override the default and authenticate SNMP with the security name.
- **target**—Target list identifies a list of valid hosts from which SNMP access can be made using a specific security name. When such mapping is done for a particular community name, SNMP access is allowed only from hosts included in the target list.

Use the **clear** keyword to specify that the clear text community string you enter is displayed encrypted in the **show running** command output. To enter an encrypted string, use the **encrypted** keyword. To enter a clear text community string that is not encrypted by the system, use neither of these keywords.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example maps the community name “sample 2” to the SNMP context name “sample1”:

```
RP/0/RSP0/CPU0:router(config)# snmp-server community-map sample2 context sample1
```

Related Commands

Command	Description
snmp-server context	Creates a Simple Network Management Protocol (SNMP) context.
snmp-server target list	Creates an SNMP target list.

snmp-server contact

To set the Simple Network Management Protocol (SNMP) system contact, use the **snmp-server contact** command in global configuration mode. To remove the system contact information, use the **no** form of this command.

snmp-server contact *system-contact-string*
no snmp-server contact

Syntax Description

<i>system-contact-string</i>	String that describes the system contact information. The maximum string length is 255 alphanumeric characters.

Command Default

No system contact is set.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server contact** command to set the system contact string. Use the **no** form of this command to remove the system contact information.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to specify a system contact string:

```
RP/0/RSP0/CPU0:router(config)# snmp-server contact Dial System Operator at beeper # 27345
```

Related Commands

Command	Description
snmp-server location	Specifies the system location for SNMP.

snmp-server context

To create a Simple Network Management Protocol (SNMP) context, use the **snmp-server context** command in global configuration mode. To remove an SNMP context, use the **no** form of this command.

snmp-server context *context-name*

no snmp-server context *context-name*

Syntax Description	<i>context-name</i>	Name of the SNMP context.

Command Default	None

Command Modes	Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. This command creates an SNMP context. By default, all the SNMP MIB instances are in a default context. Create an SNMP context and map it to a particular feature to enable similar instances of the same object to co-exist in different SNMP contexts.

Task ID	Task ID	Operations
	snmp	read, write

Examples	This example creates a new SNMP context named "sample1."

```
RP/0/RSP0/CPU0:router(config)# snmp-server context sample1
```

Related Commands

Command	Description
snmp-server community-map	Associates an SNMP community with an SNMP context, security name, or a target-list.
snmp-server vrf	Configures the VPN routing and forwarding (VRF) properties of SNMP.

snmp-server context mapping

To map an SNMP context with a protocol instance, topology or VRF entity, use the **snmp-server context mapping** command in global configuration mode.

snmp-server context mapping *context-name* [**feature** *feature-name*] [**instance** *instance-name*] [**topology** *topology-name*] [**vrf** *vrf-name*]

Syntax Description

<i>context-name</i>	Name of the SNMP context.
feature <i>feature-name</i>	Specifies the protocol for which to map the context. Available options are: • bridge—Layer 2 VPN bridge • vrf—Virtual Routing and Forwarding
instance <i>instance-name</i>	Maps the context to the specified protocol instance.
topology <i>topology-name</i>	Maps the context to the specified protocol topology.
vrf <i>vrf-name</i>	Maps the context to the specified VRF logical entity.

Command Default

No context mappings exist by default.

Command Modes

Global configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A device can support multiple instances of a logical network entity, such as protocol instances or VRFs. Most existing MIBs cannot distinguish between these multiple logical network entities. For example, the original OSPF-MIB assumes a single protocol instance on a device, but you can now configure multiple OSPF instances on a device.

The **snmp-server context mapping** command maps a context to a protocol instance, topology or VRF logical entity.

**Note**

The snmp-server context mapping command does not work for OSPF and OSPFv3. Refer to the **snmp context** commands.

Task ID

Task ID	Operation
snmp	read, write

Examples

This example illustrates how to map an snmp context to an OSPF instance:

```
RP/0/RSP0/CPU0:router(config)# snmp-server context mapping con5 feature ospf instance in1
```

Related Commands

Command	Description
snmp context (OSPF)	Specifies SNMP context for an OSPF instance.
snmp context (OSPFv3)	Specifies SNMP context for an OSPFv3 instance.
show snmp context	Displays the enhanced SNMP context mappings.

snmp-server engineid local

To specify Simple Network Management Protocol (SNMP) engine ID on the local device, use the **snmp-server engineid local** command in global configuration

mode. To return the engine ID to the default, use the **no** form of this command.

snmp-server engineid local *engine-id*

no snmp-server engineid local *engine-id*

Syntax Description

<i>engine-id</i>	Character string that identifies the engine ID. Consists of up to 24 characters in hexadecimal format. Each hexadecimal number is separated by a colon (:).

Command Default

An SNMP engine ID is generated automatically.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to configure the SNMP engine ID on the local device:

```
RP/0/RSP0/CPU0:router(config)# snmp-server engineID local 00:00:00:09:00:00:00:a1:61:6c:20:61
```

Related Commands

Command	Description
show snmp engineid	Displays the identification of the local Simple Network Management Protocol (SNMP) engine and all remote engines that have been configured on the router.

snmp-server engineid remote

To specify a Simple Network Management Protocol (SNMP) engine ID on a remote device, use the **snmp-server engineid remote** command in global configuration

mode. To return the engine ID to the default, use the **no** form of this command.

snmp-server engineid remote *ip-address engine-id udp-port port*

no snmp-server engineid remote *ip-address engine-id udp-port port*

Syntax Description

<i>ip-address</i>	IP address of remote SNMP notification host
<i>engine-id</i>	Character string that identifies the engine ID. Consists of up to 24 characters in hexadecimal format. Each hexadecimal number is separated by a colon (:).
udp-port <i>port</i>	(Optional) Specifies the User Datagram Protocol (UDP) port of the host to use. Range is from 1 to 65535. The default UDP port is 161.

Command Default

An SNMP engine ID is generated automatically.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.2.0	Support for IPv6 was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The IP address of the remote host can be in either IPv4 or IPv6 format.

Task ID

Task ID	Operation
snmp	read, write

Examples

This example shows how to configure the SNMP engine ID on the local device:

```
RP/0/RP0/CPU0:Router(config)# snmp-server engineID remote 172.16.4.1  
00:00:00:09:00:00:00:a1:61:6c:20:61
```

Related Commands

Command	Description
show snmp engineid	Displays the identification of the local Simple Network Management Protocol (SNMP) engine and all remote engines that have been configured on the router.
snmp-server engineid local	Specifies an SNMP engine ID on the local device.

snmp-server entityindex persist

To enable the persistent storage of ENTITY-MIB data across process restarts, switchovers, and device reloads, use the **snmp-server entityindex persist** command in global configuration

mode. To disable the persistent storage of ENTITY-MIB data, use the **no** form of this command.

snmp-server entityindex persist

no snmp-server entityindex persist

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Global configuration

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	snmp	read, write

Examples This example illustrates how to enable persistent storage of ENTITY-MIB indices:

```
RP/0/RSP0/CPU0:router(config)# snmp-server entityindex persist
```

Related Commands	Command	Description
	snmp-server mibs cbqosmib persist	Enables persistent storage of CISCO-CLASS-BASED-QOS-MIB data.

snmp-server group

To configure a new Simple Network Management Protocol (SNMP) group, or a table that maps SNMP users to SNMP views, use the **snmp-server group** command in global configuration

mode. To remove a specified SNMP group, use the **no** form of this command.

snmp-server group *name* {**v1**|**v2c**|**v3** {**auth**|**noauth**|**priv**}} [**read** *view*] [**write** *view*] [**notify** *view*] [**context** *context-name*] [*access-list-name*]

no snmp-server group *name*

Syntax Description

<i>name</i>	Name of the group.
v1	Specifies a group that uses the SNMPv1 security model. The SNMP v1 security model is the least secure of the possible security models.
v2c	Specifies a group that uses the SNMPv2c security model. The SNMPv2c security model is the second least secure of the possible security models.
v3	Specifies a group that uses the SNMPv3 security model. The SNMP v3 security is the most secure of the possible security models.
auth	Specifies authentication of a packet without encrypting it.
noauth	Specifies no authentication of a packet.
priv	Specifies authentication of a packet with encryption.
read <i>view</i>	(Optional) Specifies a read view string (not to exceed 64 characters) that is the name of the view that allows only the contents of the agent to be viewed.
write <i>view</i>	(Optional) Specifies a write view string (not to exceed 64 characters) that is the name of the view used to enter data and configure the contents of the agent.
notify <i>view</i>	(Optional) Specifies a notify view string (not to exceed 64 characters) that is the name of the view used to specify a notify or trap.
context <i>context-name</i>	(Optional) Specifies the SNMP context to associate with this SNMP group and associated views.
<i>access-list-name</i>	(Optional) Access list string (not to exceed 64 characters) that is the name of the access list.

Command Default

See [Table 64: snmp-server group Default Descriptions](#), on page 827.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

This table describes the default values for the different views:

Table 64: snmp-server group Default Descriptions

Default	Definition
read <i>view</i>	Assumed to be every object belonging to the Internet (1.3.6.1) object identifier (OID) space, unless the user uses the read option to override this state.
write <i>view</i>	Nothing is defined for the write view (that is, the null OID). You must configure write access.
notify <i>view</i>	Nothing is defined for the notify view (that is, the null OID). If a view is specified, any notifications in that view that are generated are sent to all users associated with the group (provided an SNMP server host configuration exists for the user).

Configuring Notify Views

Do not specify a notify view when configuring an SNMP group for the following reasons:

- The **snmp-server host** command autogenerates a notify view for the user, and then adds it to the group associated with that user.
- Modifying the notify view of the group affects all users associated with that group.

The notify view option is available for two reasons:

- If a group has a notify view that is set using SNMP, you may need to change the notify view.
- The **snmp-server host** command may have been configured before the **snmp-server group** command. In this case, reconfigure the **snmp-server host** command or specify the appropriate notify view.

Instead of specifying the notify view for a group as part of the **snmp-server group** command, use the following commands in global configuration mode:

- **snmp-server user**—Configures an SNMP user.
- **snmp-server group**—Configures an SNMP group, without adding a notify view.
- **snmp-server host**—Autogenerates the notify view by specifying the recipient of a trap operation.

Working with Passwords and Digests

No default values exist for authentication or privacy algorithms when this command is configured. In addition, no default passwords exist. The minimum length for a password is one character, although we recommend using eight characters for security. A plain-text password or localized Message Digest 5 (MD5) password can be specified. Forgotten passwords cannot be recovered, and the user must be reconfigured.

SNMP Contexts

SNMP contexts provide Virtual Private Network (VPN) users with a secure way of accessing MIB data. When a VPN is associated with a context, that VPN's specific MIB data exists in that context. Associating a VPN with a context enables service providers to manage networks with multiple VPNs. Creating and associating a context with a VPN enables a provider to prevent the users of one VPN from accessing information about users of other VPNs on the same networking device.

Task ID

Task ID	Operations
snmp	read, write

Examples

The following example shows how to configure an SNMP version 3 group named group1 that requires the authentication of packets with encryption:

```
RP/0/RSP0/CPU0:router(config)# snmp-server group group1 v3 priv
```

Related Commands

Command	Description
show snmp	Displays the status of SNMP communications
show snmp group	Displays the names of groups on the router, security model, status of the different views, and storage type of each group.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server view	Creates or updates an SNMP view entry.

snmp-server host

To specify the recipient of a Simple Network Management Protocol (SNMP) notification operation, use the **snmp-server host** command in global configuration

mode. To remove the specified host, use the **no** form of this command.

snmp-server host *address* [**clear**|**encrypted**] [**informs**] [**traps**] [**version** {**1**|**2c**|**3** {**auth**|**noauth**|**priv**}}] *community-string* [**udp-port** *port*] [*notification-type*]

nosnmp-server host *address* [**clear**|**encrypted**] [**informs**] [**traps**] [**version** {**1**|**2c**|**3** {**auth**|**noauth**|**priv**}}] *community-string* [**udp-port** *port*] [*notification-type*]

Syntax Description

<i>address</i>	Name or IP address of the host (the targeted recipient).
clear	(Optional) Specifies that the <i>community-string</i> argument is clear text.
encrypted	(Optional) Specifies that the <i>community-string</i> argument is encrypted text.
informs	(Optional) Specifies to send inform messages to this host.
traps	(Optional) Specifies that notifications should be sent as traps. This is the default.
version	(Optional) Specifies the version of the SNMP used to send the traps.
1	Specifies SNMPv1, the default.
2c	Specifies SNMPv2C.
3	Specifies SNMPv3. Version 3 is the most secure model because it allows packet encryption. If you specify the SNMPv3 keyword, you must specify the security level.
auth	Enables Message Digest 5 (MD5) algorithm and Secure Hash Algorithm (SHA) packet authentication.
noauth	Specifies that the noAuthNoPriv security level applies to this host. This is the default security level for SNMPv3.
priv	Enables Data Encryption Standard (DES) packet encryption (also called "privacy").
<i>community-string</i>	Password-like community string sent with the notification operation. We recommend defining this string using the snmp-server community command prior to using the snmp-server host command.
udp-port <i>port</i>	(Optional) Specifies the User Datagram Protocol (UDP) port of the host to use. Range is from 1 to 65535. The default UDP port is 161.

notification-type

(Optional) Type of notification to be sent to the host. If no type is specified, all available notifications are sent. The notification type can be one or more of these keywords:

- **bgp** —Enables SNMP Border Gateway Protocol Version 4 (BGPv4) traps.
- **config** —Controls configuration notifications, as defined in the CISCO-CONFIG-MAN-MIB (enterprise 1.3.6.1.4.1.9.9.43.2). The notification type is (1) ciscoConfigManEvent.
- **copy-complete** —Enables CISCO-CONFIG-COPY-MIB ccCopyCompletion traps.
- **entity** —Controls Entity MIB modification notifications. This notification type is defined in the ENTITY-MIB (enterprise 1.3.6.1.2.1.47.2) as: (1) entConfigChange.
- **fabric** —Enables SNMP fabric traps.
- **fru-ctrl** —Enables SNMP entity field-replaceable unit (FRU) control traps.
- **mpls** —Enables SNMP Multiprotocol Label Switching (MPLS) traps.
- **sensor** —Enables SNMP entity sensor traps.
- **snmp** —Enables SNMP traps.
- **syslog** —Controls error message notifications (Cisco-syslog-MIB). Specify the level of messages to be sent with the **logging history** command.

Command Default

This command is disabled by default. No notifications are sent.

The default UDP port is 161.

When this command is entered without keywords, the default is to send all trap types to the host.

If no version keyword is entered, the default is version 1.

If version 3 is specified, but the security level is not specified, the default security level is noauth.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.1.0	The informs keyword was added.
Release 4.2.0	Support for IPv6 was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

SNMP notifications can be sent as traps. Traps are unreliable because the receiver does not send acknowledgments when it receives traps. The sender cannot determine if the traps were received. Traps are discarded as soon as they are sent. Traps are also sent only once.

When the **snmp-server host** command is not entered, no notifications are sent. To configure the device to send SNMP notifications, configure at least one **snmp-server host** command. When the command is entered without keywords, all trap types are enabled for the host.

To enable multiple hosts, issue a separate **snmp-server host** command for each host. You can specify multiple notification types in the command for each host.

When multiple **snmp-server host** commands are given for the same host and kind of notification (trap), each succeeding **snmp-server host** command overwrites the previous command. Only the last **snmp-server host** command is in effect. For example, if an **snmp-server host** command with the **traps** keyword is entered for a host and then another command with the **traps** keyword is entered for the same host, the second command replaces the first.

Either a host name or IP address can be used to specify the host. Both IPv4 and IPv6 IP address formats are supported.

The **snmp-server host** command is used with the **snmp-server engineid** command. Use the **snmp-server traps** command to specify which SNMP notifications are sent globally. For a host to receive most notifications, at least one **snmp-server traps** command and the **snmp-server host** command for that host must be enabled.

However, some notification types cannot be controlled with the **snmp-server traps** command. For example, some notification types are always enabled. Other notification types are enabled by a different command.

The availability of a notification-type depends on the device type and Cisco software features supported on the device.

To display which notification types are available on the system, use the question mark (?) online help function at the end of the **snmp-server host** command.

The **no snmp-server host** command used with no keywords disables traps.

Use the **clear** keyword to specify that the clear text community string you enter is displayed encrypted in the **show running** command output. To enter an encrypted string, use the **encrypted** keyword. To enter a clear text community string that is not encrypted by the system, use neither of these keywords.

If the **informs** keyword is used, the SNMP version can be only SNMPv2C or SNMPv3.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to send RFC 1157 SNMP traps to the host specified by the name myhost.cisco.com. Other traps are enabled, but only SNMP traps are sent because only the **snmp** keyword is specified in the **snmp-server host** command. The community string is defined as comaccess.

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com comaccess snmp
```

This example shows how to send the SNMP traps to address 172.30.2.160:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps snmp
RP/0/RSP0/CPU0:router(config)# snmp-server host 172.30.2.160 public snmp
```

This example shows how to enable the router to send all traps to the host, myhost.cisco.com, using the community string public:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com public
```

This example shows how to prevent traps from being sent to any host. The BGP traps are enabled for all hosts, but only the configuration traps are enabled to be sent to a host.

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps bgp
RP/0/RSP0/CPU0:router(config)# snmp-server host hostabc public config
```

This example shows how to send SNMPv3 informs to a host:

```
RP/0/RSP0/CPU0:router(config)# snmp-server host 172.30.2.160 informs version 3
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server traps bgp	Enables BGP state-change SNMP notifications.
snmp-server inform	Configures SNMP inform message options.

snmp-server ifindex persist

To enable ifIndex persistence globally on all Simple Network Management Protocol (SNMP) interfaces, use the **snmp-server ifindex persist** command in global configuration mode. To disable global interface persistence, use the **no** form of this command.

snmp-server ifindex persist

no snmp-server ifindex persist

Syntax Description This command has no keywords or arguments.

Command Default Global interface persistence is disabled.

Command Modes Global configuration

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server ifindex persist** command to enable ifIndex persistence on all interfaces that have entries in the ifIndex table of the IF-MIB. When enabled, this command retains the mapping between the ifName object values and the ifIndex object values (generated from the IF-MIB) persistent during reloads, allowing for consistent identification of specific interfaces using SNMP. Applications such as device inventory, billing, and fault detection depend on this feature.

Task ID	Operations
snmp	read, write

Examples This example shows how to enable ifIndex persistence globally:

```
RP/0/RSP0/CPU0:router(config)# snmp-server ifindex persist
```

Related Commands

Command	Description
index persistence	Enables index persistence on an SNMP interface.
notification linkupdown	Enables or disables linkUp and linkDown trap notifications on an SNMP interface.
show snmp interface	Displays the interface index identification numbers (ifIndex values) for all the interfaces or a specified interface.

snmp-server ifmib ifalias long

To enable the ifAlias IF-MIB object to accept an interface alias name that exceeds the 64-byte default, use the **snmp-server ifmib ifalias long** command. Use the **no** form of this command to revert to the default length.

snmp-server ifmib ifalias long

no snmp-server ifmib ifalias long

Syntax Description This command has no keywords or arguments.

Command Default Global interface persistence is disabled.
The alias name is 64 bytes in length.

Command Modes Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server ifmib ifalias long** command to enable the IF-MIB object ifAlias to accept an interface alias name that is greater than 64 bytes in length. The default length for the alias name is 64 bytes.

Task ID	Task ID	Operations
	snmp	read, write

Examples This example shows how to enable the IF-MIB object ifAlias:

```
RP/0/RSP0/CPU0:router(config)# snmp-server ifmib ifalias long
RP/0/RSP0/CPU0:router(config)# exit
```

```
Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:yes
RP/0/RSP0/CPU0:router#
```

snmp-server ifmib internal cache max-duration

To configure the refresh interval for the IF-MIB statistics cache, use the **snmp-server ifmib internal cache max-duration** command in global configuration mode. To revert to the default cache interval, use the **no** form of this command.

snmp-server ifmib internal cache max-duration *timeout*

Syntax Description	<i>timeout</i>	Length of time before the cache is refreshed. Values can range from 0 to 60 seconds. The default is 15.

Command Default	<i>timeout</i> : 15 seconds

Command Modes	Global configuration

Command History	Release	Modification
	Release 4.2.3	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **snmp-server ifmib internal cache max-duration** command controls the refresh interval of the cache that is enabled using the **snmp-server ifmib stats cache** command. When the **snmp-server ifmib stats cache** command is enabled, the refresh interval of the cache is by default set to 15 seconds. If the *timeout* value in the **snmp-server ifmib internal cache max-duration** command is set to zero, the cache is disabled. This is the same as not configuring the **snmp-server ifmib stats cache** command.

Task ID	Task ID	Operation
	snmp	read, write

Examples	This example shows how to change the refresh interval for the IF-MIB statistics cache.

```
RP/0/RSP0/CPU0:routerrouter(config)# snmp-server ifmib internal cache max-duration 60
```


Related Commands

Command	Description
snmp-server ifmib stats cache	Enables retrieval of cached statistics instead of real-time statistics.

snmp-server ifmib ipsubscriber

To enable IP subscriber interfaces in the interfaces MIB (IF-MIB), use the **snmp-server ifmib ipsubscriber** command in global configuration mode. To disable IP subscriber interfaces, use the **no** form of this command.

snmp-server ifmib ipsubscriber

no snmp-server ifmib ipsubscriber

Syntax Description This command has no keywords or arguments.

Command Default Ip subscriber interfaces are not enabled.

Command Modes Global configuration

Command History	Release	Modification
	Release 4.2.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	snmp	read, write

Examples This example shows how to enable IP subscriber interfaces in the IF-MIB:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server ifmib ipsubscriber
```

snmp-server ifmib stats cache

To enable retrieval of cached statistics instead of real-time statistics, use the **snmp-server ifmib stats cache** command. To revert to the default, use the **no** form of this command.

snmp-server ifmib stats cache

no snmp-server ifmib stats cache

Syntax Description This command has no keywords or arguments.

Command Default Cached statistics are not enabled.

Command Modes Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Cisco IOS XR statistics infrastructure maintains a cache of statistics for all interfaces. This cache is updated every 30 seconds. Use the **snmp-server ifmib stats cache** command to enable the IF-MIB to retrieve these cached statistics rather than real-time statistics. Accessing cached statistics is less CPU-intensive than accessing real-time statistics.

Task ID	Task ID	Operations
	snmp	read, write

Examples This example shows how to enable the IF-MIB caches statistics:

```
RP/0/RSP0/CPU0:router(config)# snmp-server ifmib stats cache
RP/0/RSP0/CPU0:router(config)# exit
```

```
Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:yes
RP/0/RSP0/CPU0:router#
```

Related Commands

Command	Description
snmp-server ifmib internal cache max-duration	Configures the refresh interval for the IF-MIB statistics cache.

snmp-server inform

To configure Simple Network Management Protocol (SNMP) inform message options, use the **snmp-server inform** command in global configuration mode. To revert to the default informs options, use the **no** form of this command.

snmp-server inform {**pending** *max-no*| **retries** *no-retries*| **timeout** *seconds*}

no snmp-server inform {**pending** *max-no*| **retries** *no-retries*| **timeout** *seconds*}

Syntax Description

pending <i>max-no</i>	Specifies the maximum number of inform messages to hold in the queue. The default is 25.
retries <i>no-retries</i>	Specifies the retry count for inform messages. Values can be from 1 to 100. The default is three.
timeout <i>seconds</i>	Specifies the inform message timeout value in seconds. The default is 15.

Command Default

max-no: 25; *no-retries*: 3; *seconds*: 15

Command Modes

Global configuration

Command History

Release	Modification
Release 4.1.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To enable the sending of SNMP inform messages, use the **snmp-server host** command with the **informs** keyword. When SNMP server informs are enabled, the SNMP version can be only SNMPv2C or SNMPv3.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to configure SNMP inform messages:

```
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com informs comaccess
RP/0/RSP0/CPU0:router(config)# snmp-server inform pending 40
RP/0/RSP0/CPU0:router(config)# snmp-server inform retries 10
```

Related Commands

Command	Description
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.

snmp-server interface

To enable an interface to send Simple Network Management Protocol (SNMP) trap notifications and enter SNMP interface configuration mode, use the **snmp-server interface** command in global configuration mode. To disable the sending of SNMP trap notifications on an interface, use the **no** form of this command.

snmp-server interface *type interface-path-id*

no snmp-server interface *type interface-path-id*

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

Ethernet interfaces are enabled to send SNMP trap notifications. SNMP trap notifications are disabled on all other physical and logical interfaces.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **snmp-server interface** command enters SNMP interface configuration mode for you to configure the available SNMP options.



Note

In references to a Management Ethernet interface located on a route switch processor card, the physical slot number is numeric (0 through n-1 where n is the number of line card slots in the chassis) and the module is CPU0. Example: interface MgmtEth0/1/CPU0/0.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to assign ifIndex persistence on Packet-over-SONET/SDH (POS) interface 0/0/1/0:

```
RP/0/RSP0/CPU0:router(config)# snmp-server interface pos 0/0/1/0
RP/0/RSP0/CPU0:router(config-snmp-if)#
```

Related Commands

Command	Description
show snmp interface	Displays the interface index identification numbers (ifIndex values) for all the interfaces or a specified interface.
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server ifindex persist	Enables ifIndex persistence globally on all SNMP interfaces.

snmp-server interface subset

To enter snmp-server interface subset configuration mode for a set of interfaces, use the **snmp-server interface subset** command in global configuration mode. To revert to the default interface settings, use the **no** form of this command.

snmp-server interface subset *subset-number* **regular-expression** *expression*

no snmp-server interface subset *subset-number*

Syntax Description

<i>subset-number</i>	Identifying number of the interface subset, which also indicates its relative priority.
regular-expression <i>expression</i>	Specifies for which subset of interfaces to enter snmp-server interface subset configuration mode. The <i>expression</i> argument must be entered surrounded by double quotes.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The *subset-number* argument is used to set the priority for an interface that matches more than one configured regular expressions. Lower values of the *subset-number* have a higher priority. If a single interface becomes part of a multiple-interface configured regular expression, the configuration with the lower *subset-number* value is applied.

Regular expressions have two constraints:

- Regular expressions must always be entered within double quotes to ensure that the CLI interprets each character correctly.
- All characters that are part of a regular expression are considered regular characters with no special meaning. In order to enter special characters, such as "\" or "?," they must be preceded by the backslash character "\." For example, to enter the regular expression ([A-Z][A-Z0-9]*)b[^>]*>(.*)</1, you would enter ([A-Z][A-Z0-9]*)\b[^\>]*>(.*)</1.

Refer to the *Understanding Regular Expressions, Special Characters, and Patterns* module in *Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide* for more information regarding regular expressions.

From the snmp-server interface mode of a subset of interfaces, SNMP linkUp and linkDown notifications can be enabled or disabled using the **notification linkupdown disable** command.

Task ID

Task ID	Operation
snmp	read, write

Examples

This example illustrates how to configure all Gigabit Ethernet interfaces:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# snmp-server int subset 2
      regular-expression "^Gig[a-zA-Z]+[0-9/]+\."
```

Related Commands

Command	Description
notification linkupdown	Enables or disables linkUp and linkDown trap notifications on an SNMP interface.
show snmp interface notification	Displays the linkUp and linkDown notification status for the specified interfaces.
show snmp interface regular-expression	Displays interface names and indices assigned to interfaces that match a regular expression.

snmp-server ipv4 dscp

To mark packets with a specific differentiated services code point (DSCP) value, use the **snmp-server ipv4 dscp** command in global configuration mode. To remove matching criteria, use the **no** form of this command.

snmp-server ipv4 dscp *value*

no snmp-server ipv4 dscp [*value*]

Syntax Description

<i>value</i>	Value of the DSCP. The DSCP value can be a number from 0 to 63, or it can be one of the following keywords: default , ef , af11 , af12 , af13 , af21 , af22 , af23 , af31 , af32 , af33 , af41 , af42 , af43 , cs1 , cs2 , cs3 , cs4 , cs5 , cs6 , cs7 .

Command Default

The IP DSCP default value for SNMP traffic is 0.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server ipv4 dscp** command to specify an IP DSCP value to give SNMP traffic higher or lower priority in your network.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to configure the DSCP value to af32:

```
RP/0/RSP0/CPU0:router(config)# snmp-server ipv4 dscp af32
```

snmp-server ipv4 precedence

To mark packets with a specific precedence level to use for packet matching, use the **snmp-server ipv4 precedence** command in global configuration mode. To restore the system to its default interval values, use the **no** form of this command.

snmp-server ipv4 precedence *value*

no snmp-server ipv4 precedence [*value*]

Syntax Description

value Value of the precedence. The precedence value can be a number from 0 to 7, or it can be one of the following keywords:

critical

Set packets with critical precedence (5)

flash

Set packets with flash precedence (3)

flash-override

Set packets with flash override precedence (4)

immediate

Set packets with immediate precedence (2)

internet

Set packets with internetwork control precedence (6)

network

Set packets with network control precedence (7)

priority

Set packets with priority precedence (1)

routine

Set packets with routine precedence (0)

Command Default

The IP Precedence default value for SNMP traffic is 0.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server ipv4 precedence** command to specify an IP Precedence value to give SNMP traffic higher or lower priority in your network.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to set the precedence to 2:

```
RP/0/RSP0/CPU0:router(config)# snmp-server ipv4 precedence 2
```

snmp-server location

To specify the system location for Simple Network Management Protocol (SNMP), use the **snmp-server location** command in global configuration

mode. To remove the location string, use the **no** form of this command.

snmp-server location *system-location*

no snmp-server location

Syntax Description

<i>system-location</i>	String indicating the physical location of this device. The maximum string length is 255 alphanumeric characters.

Command Default

No system location string is set.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to specify a system location string:

```
RP/0/RSP0/CPU0:router(config)# snmp-server location Building 3/Room 214
```

Related Commands

Command	Description
snmp-server contact	Sets the SNMP system contact.

snmp-server mib bulkstat max-procmem-size

To configure the overall per-process memory size limit used by all bulk statistics files in the process, use the **snmp-server mib bulkstat max-procmem-size** command in global configuration

mode. To remove the overall per-process memory size, use the **no** form of this command.

snmp mib bulkstat max-procmem-size *size*

no snmp mib bulkstat max-procmem-size [*size*]

Syntax Description

<i>size</i>	Overall per-process memory size limit in kilobytes. The valid range is from 100 to 200000. The default is 200000.

Command Default

The maximum process memory size is 200000 KB.

Command Modes

Global configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Currently 300 MB is the maximum process memory available for MIB and SNMP processes.

Task ID

Task ID	Operation
snmp	read, write

Examples

This example sets the maximum process memory size to 100000 KB.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat max-procmem-size 100000
```


snmp-server mib bulkstat object-list

To configure a Simple Network Management Protocol (SNMP) bulk statistics object list and enter bulk statistics objects configuration mode, use the **snmp-server mib bulkstat object-list** in global configuration

mode. To remove an SNMP object list configuration, use the **no** form of this command.

snmp-server mib bulkstat object-list *object-list-name*

no snmp-server mib bulkstat object-list *object-list-name*

Syntax Description

<i>object-list-name</i>	Name or object identifier (OID) of the bulk statistics object list to configure.

Command Default

No SNMP bulk statistics object list is configured.

Command Modes

Global configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **snmp-server mib bulkstat object-list** command allows you to name an object list. Bulk statistics object lists are used for the Periodic MIB Data Collection and Transfer Mechanism. Use the **add** command to add objects to the object list configured with the **snmp-server mib bulkstat object-list** command. Bulk statistics object lists can be reused in multiple schemas.

Task ID

Task ID	Operation
snmp	read, write

Examples

In this example, a bulk statistics object list called ifmib is configured to include two objects:

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat object-list ifmib
```

```
RP/0/RSP0/CPU0:router(config-bulk-objects)# add ifOutOctets
RP/0/RSP0/CPU0:router(config-bulk-objects)# add ifInOctets
```

Related Commands

Command	Description
add (bulkstat object)	Adds a MIB object to an SNMP bulk statistics object list.
show snmp mib bulkstat transfer	Displays completed local bulk statistics files.

snmp-server mib bulkstat schema

To configure a Simple Network Management Protocol (SNMP) bulk statistics schema and enter bulk statistics schema configuration mode, use the **snmp-server mib bulkstat schema** command in global configuration

mode. To remove the SNMP bulk statistics schema, use the **no** form of this command.

snmp-server mib bulkstat schema *schema-name*

no snmp-server mib bulkstat schema *schema-name*

Syntax Description

<i>schema-name</i>	Specifies the name of the schema to configure.

Command Default

No schemas are configured.

Command Modes

Global configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **snmp-server mib bulkstat schema** command names the schema and enters bulk statistics schema configuration mode. Bulk statistics schema configuration mode is used to configure the object list, instance, and polling interval to be used in the schema.

The specific instances of MIB objects for which data should be collected are determined by appending the value of the **instance** command to the objects specified in the object list.

Multiple schemas can be associated with a single bulk statistics file when configuring the bulk statistics transfer options.

Task ID

Task ID	Operation
snmp	read, write

Examples

The following example shows how to configure a bulk statistics schema called GigE0/6/5/0:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat schema GigE0/6/5/0
RP/0/RSP0/CPU0:router(config-bulk-sc)# object-list ifmib
RP/0/RSP0/CPU0:router(config-bulk-sc)# poll-interval 3
RP/0/RSP0/CPU0:router(config-bulk-sc)# instance exact interface gigabitethernet 0/6/5/0
subif
RP/0/RSP0/CPU0:router(config-bulk-sc)# exit
```

Related Commands

Command	Description
instance (bulkstat schema)	Configures the MIB object instances to be used in a bulk statistics schema.
poll-interval	Configures the polling interval for a bulk statistics schema.


```

ftp://user1:pswr@cbin2-host/users/user1/bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# url secondary
tftp://user1@10.1.0.1/tftpboot/user1/bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# format schemaASCII
RP/0/RSP0/CPU0:router(config-bulk-tr)# transfer-interval 30
RP/0/RSP0/CPU0:router(config-bulk-tr)# retry 5
RP/0/RSP0/CPU0:router(config-bulk-tr)# buffer-size 1024
RP/0/RSP0/CPU0:router(config-bulk-tr)# retain 30
RP/0/RSP0/CPU0:router(config-bulk-tr)# end

```

Related Commands

Command	Description
buffer-size	Configures a maximum buffer size for the transfer of bulk statistics files.
format (bulkstat)	Specifies the format to be used for the bulk statistics data file.
retain	Configures the retention interval for bulk statistics files.
retry	Configures the number of retries that should be attempted for a bulk statistics file transfer.
schema	Specifies the bulk statistics schema to be used in a specific bulk statistics transfer configuration.
show snmp mib bulkstat transfer	Displays completed local bulk statistics files.
transfer-interval	Configures how long bulk statistics should be collected before a bulk statistics transfer is initiated.
url	Specifies the host to which bulk statistics files should be transferred.

snmp-server mibs cbqosmib cache

To enable and configure caching of the QoS MIB statistics, use the **snmp-server mibs cbqosmib cache** command in global configuration mode. To disable caching, use the **no** form of this command.

snmp-server mibs cbqosmib cache {refresh time *time*| service-policy count *count*}

no snmp-server mibs cbqosmib cache [refresh time *time*| service-policy count *count*]

Syntax Description

refresh	Enables QoS MIB caching with a specified cache refresh time.
time <i>time</i>	Specifies the cache refresh time, in seconds. The <i>time</i> argument can be between 5 and 60. The default is 30.
service-policy	Enables QoS MIB caching with a limited number of service policies to cache.
count <i>count</i>	Specifies the maximum number of service policies to cache. The count argument can be between 1 and 5000.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
snmp	read, write

Examples

This example illustrates how to enable QoS MIB caching with a refresh time:

```
RP/0/RSP0/CPU0:router(config)# snmp-server mibs cbqosmib cache refresh time 45
```

This example illustrates how to enable QoS MIB caching with a service policy count limitation:

```
RP/0/RSP0/CPU0:router(config)# snmp-server mibs cbqosmib cache service-policy count 10
```

Related Commands

Command	Description
snmp-server entityindex persist	Enables the persistent storage of ENTITY-MIB data.
snmp-server mibs cbqosmib persist	Enables persistent storage of CISCO-CLASS-BASED-QOS-MIB data.

snmp-server mibs cbqosmib persist

To enable persistent storage of the CISCO-CLASS-BASED-QOS-MIB data across process restarts, switchovers, and device reloads, use the **snmp-server mibs cbqosmib persist** command in global configuration mode. To disable persistent storage of the MIB data, use the **no** form of this command.

snmp-server mibs cbqosmib persist

no snmp-server mibs cbqosmib persist

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Global configuration

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Operation
snmp	read, write

Examples This example illustrates how to enable persistent storage of CISCO-CLASS-BASED-QOS-MIB data:

```
RP/0/RSP0/CPU0:router(config)# snmp-server mibs cbqosmib persist
```

Command	Description
snmp-server entityindex persist	Enables the persistent storage of ENTITY-MIB data.

snmp-server mibs eventmib congestion-control

To configure the generation of SNMP traps when congestion exceeds configured thresholds, use the **snmp-server mibs eventmib congestion-control** command in global configuration mode. To restore the default values, use the **no** form of this command.

snmp-server mibs eventmib congestion-control *type interface-path-id* **falling** *lower-threshold interval sampling-interval* **rising** *upper-threshold*

no snmp-server mibs eventmib congestion-control *type interface-path-id*

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
falling <i>lower-threshold</i>	Specifies the lower threshold for which to determine whether an mteTriggerFalling SNMP Trap is generated.
interval <i>sampling-interval</i>	Specifies how often the congestion statistics are polled. The <i>interval</i> argument, in minutes, can be between 5 and 1440; it must be a multiple of 5.
rising <i>upper-threshold</i>	Specifies the upper threshold for which to determine whether an mteTriggerRising SNMP Trap is generated.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

**Note**

A maximum of 100 interfaces can be monitored for congestion.

Congestion configurations using the **snmp-server mibs eventmib congestion-control** command cannot be modified using SNMP SET and vice versa.

When the congestion between two intervals increases above the *upper-threshold* argument, an mteTriggerRising SNMP trap is generated. This trap is not generated until the congestion drops below the lower threshold and then rises above the upper threshold.

When the congestion between two intervals falls below the *lower-threshold* argument, and an SNMP mteTriggerRising trap was generated previously, an SNMP mteTriggerFalling trap is generated. The mteTriggerRising trap is not generated until the congestion goes above the upper threshold and then falls back below the lower threshold.

The *lower-threshold* value (falling) should be set to a value less than or equal to the *upper-threshold* value (rising).

The **snmp-server mibs eventmib congestion-control** command is configured on a specific interface and is supported on the following cards:

- 8-port 10 Gigabit Ethernet PLIM
- 16-port OC-48c/STM-16 POS/DPT PLIM
- 1-port OC-768c/STM-256 POS PLIM
- 4-port OC-192c/STM-64 POS/DPT PLIM
- All Ethernet SPAs
- 2-port and 4-port OC-3c/STM-1 POS SPAs
- 2-port, 4-port, and 8-port OC-12c/STM-4 POS SPAs
- 2-port and 4-port OC-48c/STM-16 POS/RPR SPAs
- 1-port OC-192c/STM-64 POS/RPR SPA

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to configure the generation of SNMP traps in response to congestion:

```
RP/0/RSP0/CPU0:router(config)# snmp-server mibs eventmib congestion-control pos 0/1/0/0
falling 1 interval 5 rising 2
```

snmp-server mibs eventmib packet-loss

To configure the generation of SNMP traps when packet loss exceeds configured thresholds, use the **snmp-server mibs eventmib packet-loss** command in global configuration mode. To restore the default values, use the **no** form of this command.

snmp-server mibs eventmib packet-loss *type interface-path-id* **falling** *lower-threshold* **interval** *sampling-interval* **rising** *upper-threshold*

no snmp-server mibs eventmib packet-loss *type interface-path-id*

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
falling <i>lower-threshold</i>	Specifies the lower threshold for which to determine whether an mteTriggerFalling SNMP Trap is generated.
interval <i>sampling-interval</i>	Specifies how often the packet loss statistics are polled. The <i>interval</i> argument, in minutes, can be between 5 and 1440; it must be a multiple of 5.
rising <i>upper-threshold</i>	Specifies the upper threshold for which to determine whether an mteTriggerRising SNMP Trap is generated.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

**Note**

A maximum of 100 interfaces can be monitored for packet loss.

Packet loss configurations using the **snmp-server mibs eventmib packet-loss** command cannot be modified using SNMP SET and vice versa.

When the packet loss between two intervals increases above the *upper-threshold* argument, an mteTriggerRising SNMP trap is generated. This trap is not generated until the packet loss drops below the lower threshold and then rises above the upper threshold.

When the packet loss between two intervals falls below the *lower-threshold* argument, and an SNMP mteTriggerRising trap was generated previously, an SNMP mteTriggerFalling trap is generated. The mteTriggerRising trap is not generated until the packet loss goes above the upper threshold and then falls back below the lower threshold.

The *lower-threshold* value (falling) should be set to a value less than or equal to the *upper-threshold* value (rising).

The **snmp-server mibs eventmib packet-loss** command is configured on a specific interface and is supported on the following cards:

- 8-port 10 Gigabit Ethernet PLIM
- 16-port OC-48c/STM-16 POS/DPT PLIM
- 1-port OC-768c/STM-256 POS PLIM
- 4-port OC-192c/STM-64 POS/DPT PLIM
- All Ethernet SPAs
- 2-port and 4-port OC-3c/STM-1 POS SPAs
- 2-port, 4-port, and 8-port OC-12c/STM-4 POS SPAs
- 2-port and 4-port OC-48c/STM-16 POS/RPR SPAs
- 1-port OC-192c/STM-64 POS/RPR SPA

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to configure the generation of SNMP traps in response to packet loss:

```
RP/0/RSP0/CPU0:router(config)# snmp-server mibs eventmib packet-loss pos 0/1/0/0
falling 1 interval 5 rising 2
```

snmp-server mibs subscriber threshold

To set the snmp-server mibs server threshold parameters, use the **snmp-server mibs subscriber threshold** command in the global configuration mode. To delete any of the set parameters, use the **no** form of the command.

snmp-server mibs subscriber threshold [**rising** | **falling** | **delta-loss percent** | **delta-loss evaluation**]
[**access-if location** *interface-path-id* **interval seconds**][**session-count**]

nosnmp-server mibs subscriber threshold

Syntax Description

rising	Rising threshold value. The set value triggers the traps. Traps are generated when the number of sessions exceed the rising threshold value.
falling	Falling threshold value. The set value triggers the traps. Traps are generated when the number of sessions are lesser than the falling threshold value.
delta-loss percent	Delta-loss percentage.
delta-loss evaluation	The actual subscriber sessions (after delta-loss) . This is based on the set delta-loss percentage. If the number of sessions exceed the loss percentage, traps are generated.
access-if	Access-interface.
location <i>name</i>	Location name.
interval <i>seconds</i>	Interval between the rising and the falling thresholds (in seconds).
session-count	Subscriber-session count.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 5.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The minimum delta loss interval is 30 seconds and can be incremented by 10 seconds till the time period reaches 5 minutes.

Task ID

Task ID	Operation
snmp	read, write

Examples

```
RP/0/RSP0/CPU0:router (config) # snmp-server mibs subscriber threshold delta-loss evaluation  
access-if tengige 0/4/0/0 interval 100
```

snmp-server mibs subscriber threshold access-if

To disable the per-session access notifications by the session monitoring process, use the **snmp-server mibs subscriber threshold access-if** in the global configuration mode. To enable notifications, use the **no** form of the command.

snmp-server mibs subscriber threshold access-if *subsetnumber* **regular expression** *word* **notification**
rising-falling **disable**

nosnmp-server mibs subscriber threshold access-if

Syntax Description

subset <i>number</i>	Subset number of the subscriber threshold. Lower the subset value, higher is the priority. Range is 1 to 255.
regular expression <i>word</i>	Regular expression to match the interface name. Traps on the corresponding access interface(s) are disabled.
notification	Name of the notification.
rising-falling	The rising and falling thresholds.
disable	Disables the access interface notifications.

Command Default

Session monitoring is enabled by default

Command Modes

Global configuration

Command History

Release	Modification
Release 5.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **regular expression** keyword disables notifications of the access-interface.

Task ID

Task ID	Operation
snmp	read, write

Examples

```
RP/0/RSP0/CPU0:router (config) # snmp-server mibs subscriber threshold access-if subset 100  
regular expression notification rising-falling disable
```

snmp-server notification-log-mib

To configure the NOTIFICATION-LOG-MIB, use the **snmp-server notification-log-mib** command in global configuration

mode. To remove the specified configuration, use the **no** form of this command.

snmp-server notification-log-mib {**globalAgeOut** *time*| **globalSize** *size*| **default**| **disable**| **size** *size*}

no snmp-server notification-log-mib {**globalAgeOut**| **globalSize**| **default**| **disable**| **size**}

Syntax Description

globalAgeOut <i>time</i>	Specifies how much time, in minutes, a notification remains in the log. Values for the <i>time</i> argument can range from 0 to 4294967295; the default is 15.
globalSize <i>size</i>	Specifies the maximum number of notifications that can be logged in all logs. The default is 500.
default	Specifies to create a default log.
disable	Specifies to disable logging to the default log.
size <i>size</i>	Specifies the maximum number of notifications that the default log can hold. The default is 500.

Command Default

NOTIFICATION-LOG-MIB notifications are not logged.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Logging of NOTIFICATION-LOG-MIB notifications begins when the default log is created. Named logs are not supported, therefore only the default log can be created.

Task ID

Task ID	Operations
snmp	read, write

Examples

The following example creates a default log for notifications:

```
RP/0/RSP0/CPU0:router(config)# snmp-server notification-log-mib default
```

This example removes the default log:

```
RP/0/RSP0/CPU0:router(config)# no snmp-server notification-log-mib default
```

This example configures the size of all logs to be 1500:

```
RP/0/RSP0/CPU0:router(config)# snmp-server notification-log-mib globalSize 1500
```

Related Commands

Command	Description
snmp-server community-map	Associates an SNMP community with an SNMP context, security name, or a target-list.

snmp-server packetsize

To establish control over the largest Simple Network Management Protocol (SNMP) packet size permitted when the SNMP server is receiving a request or generating a reply, use the **snmp-server packetsize** command in global configuration mode. To restore the default value, use the **no** form of this command.

snmp-server packetsize *size*

no snmp-server packetsize

Syntax Description

<i>size</i>	Packet size, in bytes. Range is from 484 to 65500. The default is 1500.

Command Default

size: 1500

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server packetsize** command to establish control over the largest SNMP packet size permitted when the SNMP server is receiving a request or generating a reply.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to set the maximum size of SNMP packets to 1024 bytes:

```
RP/0/RSP0/CPU0:router (config) # snmp-server packetsize 1024
```

snmp-server queue-length

To establish the message queue length for each trap host for Simple Network Management Protocol (SNMP), use the **snmp-server queue-length** command in global configuration

mode. To restore the default value, use the **no** form of this command.

snmp-server queue-length *length*

no snmp-server queue-length

Syntax Description

length	Integer that specifies the number of trap events that can be held before the queue must be emptied. Range is from 1 to 5000.

Command Default

length : 100

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server queue-length** command to define the length of the message queue for each trap host. After a trap message is successfully sent, Cisco IOS XR software continues to empty the queue at a throttled rate to prevent trap flooding.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to set the SNMP notification queue to 20 events:

```
RP/0/RSP0/CPU0:router(config)# snmp-server queue-length 20
```

snmp-server target list

To create a Simple Network Management Protocol (SNMP) target list, use the **snmp-server target list** command in global configuration mode. To remove an SNMP target list, use the **no** form of this command.

snmp-server target list *target-list* {**vrf** *vrf-name*|**host** *hostname*}

no snmp-server target list *target-list*

Syntax Description

<i>target-list</i>	Name of the target list.
vrf <i>vrf-name</i>	Specifies the name of the VRF hosts included in the target list.
host <i>hostname</i>	Assigns a hostname to the target list. The <i>hostname</i> variable is a name or IP address.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.2.0	Support for IPv6 was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use this command to create an SNMP target list and assign hosts to the list. When a target list is mapped to a community name using the **snmp-server community-map** command, SNMP access is restricted to the hosts in the target list (for that community name).

The host IP address can be in either IPv4 or IPv6 format.

Task ID

Task ID	Operations
snmp	read, write

Examples

In this example, a new target list “sample3” is created and assigned to the vrf server “server2.”

```
RP/0/RSP0/CPU0:router(config)# snmp-server target list sample3 vrf server2
```

Related Commands

Command	Description
snmp-server community-map	Associates an SNMP community with an SNMP context, security name, or a target-list.

snmp-server throttle-time

To specify the throttle time for handling incoming Simple Network Management Protocol (SNMP) messages, use the **snmp-server throttle-time** command in

global configuration

mode. To restore the throttle time to its default value, use the **no** form of this command.

snmp-server throttle-time *time*

no snmp-server throttle-time

Syntax Description

<i>time</i>	Throttle time for the incoming queue, in milliseconds. Values can be from 50 to 1000.

Command Default

time : 0

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
snmp	read, write

Examples

In the following example, the throttle time is set to 500 milliseconds:

```
RP/0/RSP0/CPU0:router(config)# snmp-server throttle-time 500
```


Related Commands

Command	Description
snmp-server community-map	Associates an SNMP community with an SNMP context, security name, or a target-list.

snmp-server timeouts subagent

To change the timeout used by the SNMP agent while it waits for a response from a subagent, use the **snmp-server timeouts subagent** command in global configuration

mode. SNMP subagents are feature-specific entities that register with the SNMP agent and implement sets of MIB objects.

snmp-server timeouts subagent *timeout*

no snmp-server timeouts subagent *timeout*

Syntax Description

<i>timeout</i>	The timeout used by the SNMP agent when waiting for a response from a MIB module, in seconds. The default is 10.

Command Default

timeout : 10

Command Modes

Global configuration

Command History

Release	Modification
Release 3.8.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
snmp	read, write

Examples

In the following example, the timeout is set to 8 seconds:

```
RP/0/RSP0/CPU0:router(config)# snmp-server timeouts subagent 8
```

snmp-server trap authentication vrf disable

To disable authentication traps on VPNs, use the **snmp-server trap authentication vrf disable** command in global configuration

mode.

snmp-server trap authentication vrf disable

Syntax Description This command has no keywords or arguments.

Command Default Authentication traps are enabled on VPNs by default.

Command Modes Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	snmp	read, write

Examples This example illustrates how to disable authentication traps on VPNs:

```
RP/0/RSP0/CPU0:router(config)# snmp-server trap authentication vrf disable
```

Related Commands	Command	Description
	snmp-server vrf	Configures the VPN routing and forwarding (VRF) properties of SNMP.

snmp-server trap link ietf

To enable the varbind used for linkUp and linkDown SNMP traps to utilize the RFC 2863 standard varbind, use the **snmp-server trap link ietf** command in global configuration

mode. To restore the default value, use the **no** form of this command..

snmp-server trap link ietf

nosnmp-server trap link ietf

Syntax Description

This command has no keywords or arguments.

Command Default

The default varbind used is cisco.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For more information about linkUP and linkDown notifications, see RFC 2863, *The Interface Group MIB*, and RFC 3418, *Management Information Base (MIB) for the Simple Network Management Protocol (SNMP)*.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to enable the RFC 2863 standard varbind:

```
RP/0/RSP0/CPU0:router# snmp-server trap link ietf
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.

Command	Description
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps bgp	Enables BGP state-change SNMP notifications.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server trap throttle-time

To specify the throttle time for handling more Simple Network Management Protocol (SNMP) traps, use the **snmp-server trap throttle-time** command in global configuration mode. To restore the throttle time to its default value, use the **no** form of this command.

snmp-server trap throttle-time *time*

no snmp-server trap throttle-time

Syntax Description	<i>time</i>	Throttle time in milliseconds. Values can be from 10 to 500.

Command Default	250

Command Modes	Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	snmp	read, write

Examples	In the following example, the trap throttle time is set to 500 milliseconds:

```
RP/0/RSP0/CPU0:router(config)# snmp-server trap throttle-time 500
```

Related Commands	Command	Description
	snmp-server throttle-time	Specifies the throttle time for handling incoming SNMP messages.

snmp-server traps

To enable Simple Network Management Protocol (SNMP) trap notifications, use the **snmp-server traps** command in global configuration

mode. To disable SNMP notifications, use the **no** form of this command.

snmp-server traps *notification-type*

no snmp-server traps [*notification-type*]

Syntax Description*notification-type*

(Optional) Type of notification (trap) to enable or disable. If no type is specified, all notifications available on the device are enabled or disabled.

The notification type can be one or more of the following keywords:

bfd

Enables Bidirectional Forwarding Detection (BFD) traps.

bgp

Enables BGP4-MIB and CISCO-BGP4-MIB traps.

bridgemib

Enables SNMP traps for the Bridge MIB.

config

Controls configuration notifications, as defined in the CISCO-CONFIG-MAN-MIB (enterprise 1.3.6.1.4.1.9.9.43.2). The notification type is: (1) ciscoConfigManEvent.

copy-complete

Enables CISCO-CONFIG-COPY-MIB ccCopyCompletion traps.

ds1

Enables SNMP Cisco DS1 traps.

ds2

Enables SNMP Cisco DS2 traps.

entity

Controls Entity MIB modification notifications. This notification type is defined in the ENTITY-MIB (enterprise 1.3.6.1.2.1.47.2) as: (1) entConfigChange.

ethernet

Enables Ethernet link OAM and 802.1ag connectivity fault management traps.

flash insertion

Enables ciscoFlashDeviceInsertedNotif.

flash removal

Enables ciscoFlashDeviceRemovedNotif.

fru-ctrl

Enables SNMP entity field-replaceable unit (FRU) control traps.

hsrp

Enables SNMP HSRP traps.

ipsec tunnel start

Enables SNMP IPsec tunnel start traps.

ipsec tunnel stop

Enables SNMP IPsec tunnel stop traps.

isakmp

Enables ISAKMP traps.

l2vpn all

Enables all Layer 2 VPN traps.

l2vpn vc-down

Enables Layer 2 VPN VC down traps.

l2vpn vc-up

Enables Layer 2 VPN VC up traps.

mpls frr all

Enables all MPLS fast reroute MIB traps.

mpls frr protected

Enables MPLS fast reroute tunnel protected traps.

mpls ldp

Enables SNMP Multiprotocol Label Switching (MPLS) Label Distribution Protocol (LDP) traps.

mpls traffic-eng

Enables SNMP MPLS traffic engineering traps.

msdp peer-state-change

Enables SNMP MSDP Peer state change traps.

ntp

Enables SNMP Cisco NTP traps.

otn

Enables SNMP Cisco optical transport network (OTN) traps.

pim

Enables SNMP PIM traps.

rf

Enables RF-MIB traps.

sensor

Enables SNMP entity sensor traps.

snmp

Enables SNMP traps.

sonet

Enables SONET traps.

syslog

Controls error message notifications (Cisco-syslog-MIB). Specify the level of messages to be sent with the **logging history** command.

system

Enables SNMP SYSTEMMIB-MIB traps.

vpls

Enables virtual private LAN service (VPLS) traps.

vrrp events

Enables Virtual Router Redundancy Protocol (VRRP) traps.

Note To display the trap notifications supported on a platform, use the online help (?) function.

Command Default SNMP notifications are disabled by default.

Command Modes Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.
	Release 3.9.0	The bridgemib , ds1 , ds3 , otn , , system , and vrrp events keywords were introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server traps** command to enable trap requests for the specified notification types. To configure the router to send SNMP notifications, specify at least one **snmp-server traps** command. When the command is entered with no keyword, all notification types are enabled. When a notification type keyword is specified, only the notification type related to that keyword is enabled. To enable multiple types of notifications, issue a separate **snmp-server traps** command for each notification type.

More information about individual MIBs can be found in the SNMP Object Navigator, available through cisco.com at <http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2>.

The **snmp-server traps** command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

Task ID

Task ID	Operations
snmp	read, write

Some SNMP trap notifications require additional Task IDs as indicated in the following table:

Notification Type	Task ID	Operations
bfd	bgp	read, write
	ospf	read, write
	isis	read, write
	mpls-te	read, write
	snmp	read, write
bgp	bgp	read, write
copy-complete	config-services	read, write
ipsec	crypto	read, write
isakmp	crypto	read, write
l2vpn	l2vpn	read, write
mpls fr	mpls-ldp	read, write
	mpls-te	read, write
mpls l3vpn	ipv4	read, write
	mpls-ldp	read, write
	mpls-te	read, write

Notification Type	Task ID	Operations
mpls ldp	mpls-ldp	read, write
	mpls-te	read, write
mpls traffic-eng	mpls-ldp	read, write
	mpls-te	read, write
ospf	ospf	read, write
syslog	sysmgr	read, write
vpls	l2vpn	read, write

Examples

This example shows how to enable the router to send all traps to the host specified by the name myhost.cisco.com, using the community string defined as public:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com public
```

Related Commands

Command	Description
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps bgp	Enables BGP state-change SNMP notifications.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps bgp

To enable Border Gateway Protocol (BGP) state-change Simple Network Management Protocol (SNMP) notifications, use the **snmp-server traps bgp** command in global configuration mode. To disable BGP state-change SNMP notifications, use the **no** form of this command.

snmp-server traps bgp

no snmp-server traps bgp

Syntax Description This command has no keywords or arguments.

Command Default SNMP notifications are disabled by default.

Command Modes Global configuration

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

SNMP notifications can be sent as traps.

Use the **snmp-server traps bgp** command to enable or disable BGP server state-change notifications, as defined in the BGP4-MIB (enterprise 1.3.6.1.2.1.15.7). The notifications types are:

- bgpEstablished
- bgpBackwardTransition

The BGP notifications are defined in the BGP-4 MIB as follows:

```

bgpTraps                      OBJECT IDENTIFIER ::= { bgp 7 }

bgpEstablished NOTIFICATION-TYPE
OBJECTS { bgpPeerLastError,
          bgpPeerState      }
STATUS current
DESCRIPTION
"The BGP Established event is generated when the BGP FSM enters the ESTABLISHED
state."
::= { bgpTraps 1 }

bgpBackwardTransition NOTIFICATION-TYPE
OBJECTS { bgpPeerLastError,
          bgpPeerState      }
STATUS current

```

DESCRIPTION

"The BGPBackwardTransition Event is generated when the BGP FSM moves from a higher numbered state to a lower numbered state."
 ::= {bgpTraps 2}

For a complete description of these notifications and additional MIB functions, see the BGP4-MIB in the SNMP Object Navigator, available through cisco.com at <http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2>.

The **snmp-server traps bgp** command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

Task ID

Task ID	Operations
snmp	read, write
bgp	read, write

Examples

The following example shows how to enable the router to send BGP state-change notifications to the host at the address myhost.cisco.com using the community string defined as public:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps bgp
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps frequency synchronization

To enable frequency synchronization MIB traps, use the **snmp-server traps frequency synchronization** command in global configuration mode. To disable frequency synchronization MIB traps, use the **no** form of this command.

snmp-server traps frequency synchronization

no snmp-server traps frequency synchronization

Syntax Description	This command has no keywords or arguments.

Command Default	Frequency synchronization MIB traps are disabled.

Command Modes	Global configuration

Command History	Release	Modification
	Release 4.3.1	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	snmp	read, write

Examples	This example shows how to enable frequency synchronization MIB traps: <pre>RP/0/RSP0/CPU0:router(config)# snmp-server traps frequency synchronization</pre>

snmp-server traps mpls l3vpn

To enable the sending of MPLS Layer 3 VPN Simple Network Management Protocol (SNMP) notifications, use the **snmp-server traps mpls l3vpn** command in global configuration mode. To disable MPLS Layer 3 VPN SNMP notifications, use the **no** form of this command.

```
snmp-server traps mpls l3vpn {all| max-threshold-cleared| max-threshold-exceeded|  
max-threshold-reissue-notif-time seconds| mid-threshold-exceeded| vrf-down| vrf-up}  
no snmp-server traps mpls l3vpn
```

Syntax Description

all	Enables all MPLS Layer 3 VPN traps.
max-threshold-cleared	Enables maximum threshold cleared traps.
max-threshold-exceeded	Enables maximum threshold exceeded traps.
max-threshold-reissue-notif-time <i>seconds</i>	Specifies the time interval for reissuing a maximum threshold notification, in seconds.
mid-threshold-exceeded	Enables mid-threshold exceeded traps.
vrf-down	Enables VRF down traps.
vrf-up	Enables VRF up traps.

Command Default

SNMP notifications are disabled by default.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
snmp	read, write

Examples

The following example shows how to enable the device to send MPLS Layer 3 VPN traps:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps mpls l3vpn all
```

Related Commands

Command	Description
snmp-server traps	Enables SNMP trap notifications.

snmp-server traps ospf errors

To enable Open Shortest Path First (OSPF) error Simple Network Management Protocol (SNMP) notifications, use the **snmp-server traps ospf errors** command in global configuration mode. To disable OSPF error SNMP notifications, use the **no** form of this command.

snmp-server traps ospf errors {authentication-failure| bad-packet| config-error|
virt-authentication-failure| virt-bad-packet| virt-config-error}

no snmp-server traps ospf errors {authentication-failure| bad-packet| config-error|
virt-authentication-failure| virt-bad-packet| virt-config-error}

Syntax Description

authentication-failure	Enables SNMP traps for authentication failure errors on physical interfaces.
bad-packet	Enables SNMP traps for bad packet errors on physical interfaces.
config-error	Enables SNMP traps for configuration errors on physical interfaces.
virt-authentication-failure	Enables SNMP traps for authentication failure errors on virtual interfaces.
virt-bad-packet	Enables SNMP traps for bad packet errors on virtual interfaces.
virt-config-error	Enables SNMP traps for configuration errors on virtual interfaces.

Command Default

SNMP notifications are disabled by default.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

SNMP notifications can be sent as traps.

For a complete description of OSPF error notifications and additional MIB functions, see the OSPF-TRAP-MIB in the SNMP Object Navigator, available through cisco.com at <http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2>.

The **snmp-server traps ospf errors** command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to enable the router to send OSPF error notifications to the host at the address myhost.cisco.com using the community string defined as public:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps ospf errors
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps ospf lsa

To enable Open Shortest Path First (OSPF) link-state advertisement Simple Network Management Protocol (SNMP) notifications, use the **snmp-server traps ospf lsa** command in global configuration mode. To disable OSPF link state SNMP notifications, use the **no** form of this command.

snmp-server traps ospf lsa {lsa-maxage| lsa-originate}

no snmp-server traps ospf lsa {lsa-maxage| lsa-originate}

Syntax Description

lsa-maxage	Enables SNMP traps for link-state advertisement maxage.
lsa-originate	Enables SNMP traps for new link-state advertisement origination.

Command Default

SNMP notifications are disabled by default.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

SNMP notifications can be sent as traps.

For a complete description of OSPF link-state advertisement notifications and additional MIB functions, see the OSPF-TRAP-MIB in the SNMP Object Navigator, available through cisco.com at <http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2>.

The **snmp-server traps ospf lsa** command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to enable the router to send OSPF link-state advertisement notifications to the host at the address myhost.cisco.com using the community string defined as public:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps ospf lsa lsa-maxage  
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps ospf retransmit

To enable Open Shortest Path First (OSPF) retransmission Simple Network Management Protocol (SNMP) notifications, use the **snmp-server traps ospf retransmit** command in global configuration mode. To disable OSPF retransmission SNMP notifications, use the **no** form of this command.

snmp-server traps ospf retransmit {packets| virt-packets}

no snmp-server traps ospf retransmit {packets| virt-packets}

Syntax Description

packets	Enables SNMP traps for packet retransmissions on physical interfaces.
virt-packets	Enables SNMP traps for packet retransmissions on virtual interfaces.

Command Default

SNMP notifications are disabled by default.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

SNMP notifications can be sent as traps.

For a complete description of OSPF retransmission notifications and additional MIB functions, see the OSPF-TRAP-MIB in the SNMP Object Navigator, available through cisco.com at <http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2>.

The **snmp-server traps ospf retransmit** command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to enable the router to send OSPF retransmission notifications to the host at the address myhost.cisco.com using the community string defined as public:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps ospf retransmit packets
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps ospf state-change

To enable Simple Network Management Protocol (SNMP) notifications for Open Shortest Path First (OSPF) neighbor state change, use the **snmp-server traps ospf state-change** command in global configuration mode. To disable OSPF state-change SNMP notifications, use the **no** form of this command.

snmp-server traps ospf state-change {if-state-change| neighbor-state-change| virtif-state-change| virtneighbor-state-change}

no snmp-server traps ospf state-change {if-state-change| neighbor-state-change| virtif-state-change| virtneighbor-state-change}

Syntax Description

if-state-change	Enables SNMP traps for OSPF non-virtual interface state changes.
neighbor-state-change	Enables SNMP traps for OSPF neighbor state changes
virtif-state-change	Enables SNMP traps for OSPF virtual interface state changes.
virtneighbor-state-change	Enables SNMP traps for OSPF virtual neighbor state changes.

Command Default

SNMP notifications are disabled by default.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

SNMP notifications can be sent as traps.

Use the **snmp-server traps ospf state-change** command to enable or disable OSPF server state-change notifications, as defined in the MIB. One notification type is ospfNbrStateChange.

For example, the OSPF ospfNbrStateChange notification is defined in the OSPF MIB as follows:

```
!      ospfNbrStateChange NOTIFICATION-TYPE
!      OBJECTS {
!          ospfRouterId, -- The originator of the trap
!          ospfNbrIpAddress,
!          ospfNbrAddressLessIndex,
```

```

!               ospfNbrRtrId,
!               ospfNbrState  -- The new state
!           }
!   STATUS          current

```

For a complete description of these notifications and additional MIB functions, see the OSPF-TRAP-MIB in the SNMP Object Navigator, available through cisco.com at <http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2>.

The **snmp-server traps ospf state-change** command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

Task ID

Task ID	Operations
snmp	read, write

Examples

The following example shows how to enable the router to send OSPF state-change notifications to the host at the address myhost.cisco.com using the community string defined as public:

```

RP/0/RSP0/CPU0:router(config)# snmp-server traps ospf state-change neighbor-state-change
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public

```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps ospfv3 errors

To enable Open Shortest Path First (OSPF) Version 3 error Simple Network Management Protocol (SNMP) notifications, use the **snmp-server traps ospfv3 errors** command in global configuration mode. To disable OSPFv3 error SNMP notifications, use the **no** form of this command.

snmp-server traps ospfv3 errors [**bad-packet**| **config-error**| **virt-bad-packet**| **virt-config-error**]

no snmp-server traps ospfv3 errors [**bad-packet**| **config-error**| **virt-bad-packet**| **virt-config-error**]

Syntax Description

bad-packet	Enables SNMP traps for bad packet errors on physical interfaces.
config-error	Enables SNMP traps for configuration errors on physical interfaces.
virt-bad-packet	Enables SNMP traps for bad packet errors on virtual interfaces.
virt-config-error	Enables SNMP traps for configuration errors on virtual interfaces.

Command Default

SNMP notifications are disabled by default.

Command Modes

Global configuration

Command History

Release	Modification
Release 4.2.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

SNMP notifications can be sent as traps.

For a complete description of OSPFv3 error notifications and additional MIB functions, see the OSPFV3-MIB in the SNMP Object Navigator, available through cisco.com at <http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2>.

The **snmp-server traps ospfv3 errors** command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to enable the router to send OSPF error notifications to the host at the address myhost.cisco.com using the community string defined as public:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps ospfv3 errors
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps ospfv3 state-change

To enable Simple Network Management Protocol (SNMP) notifications for Open Shortest Path First (OSPF) Version 3 state changes, use the **snmp-server traps ospfv3 state-change** command in global configuration mode. To disable OSPFv3 state-change SNMP notifications, use the **no** form of this command.

snmp-server traps ospfv3 state-change [**if-state-change**| **neighbor-state-change**| **nssa-state-change**| **restart-helper-status-change**| **restart-status-change**| **restart-virtual-helper-status-change**| **virtif-state-change**| **virtneighbor-state-change**]

no snmp-server traps ospfv3 state-change [**if-state-change**| **neighbor-state-change**| **nssa-state-change**| **restart-helper-status-change**| **restart-status-change**| **restart-virtual-helper-status-change**| **virtif-state-change**| **virtneighbor-state-change**]

Syntax Description

if-state-change	Enables SNMP traps for OSPFv3 non-virtual interface state changes.
neighbor-state-change	Enables SNMP traps for OSPFv3 neighbor state changes
nssa-state-change	Enables SNMP traps for OSPFv3 not so stubby area (NSSA) status changes.
restart-helper-status-change	Enables SNMP traps for OSPFv3 restart helper status changes.
restart-status-change	Enables SNMP traps for OSPFv3 restart status changes.
restart-virtual-helper-status-change	Enables SNMP traps for OSPFv3 virtual helper restart status changes.
virtif-state-change	Enables SNMP traps for OSPFv3 virtual interface state changes.
virtneighbor-state-change	Enables SNMP traps for OSPFv3 virtual neighbor state changes.

Command Default

SNMP notifications are disabled by default.

Command Modes

Global configuration

Command History

Release	Modification
Release 4.2.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

SNMP notifications can be sent as traps.

Use the **snmp-server traps ospfv3 state-change** command to enable or disable the various OSPFv3 server state-change notifications, as defined in the MIB.

The **snmp-server traps ospfv3 state-change** command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

Task ID

Task ID	Operations
snmp	read, write

Examples

The following example shows how to enable the router to send OSPFv3 NSSA state-change notifications to the host at the address myhost.cisco.com using the community string defined as public:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps ospfv3 state-change nssa-state-change
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps pim interface-state-change

To enable Protocol Independent Multicast (PIM) interface status notification, use the **snmp-server traps pim interface-state-change** command in global configuration mode. To disable this command so no notification is sent, use the **no** form of this command.

snmp-server traps pim interface-state-change

no snmp-server traps pim interface-state-change

Syntax Description

This command has no keywords or arguments.

Command Default

Simple Network Management Protocol (SNMP) notifications are disabled by default.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

Use the **snmp-server traps pim interface-state-change** command to send notifications when a PIM interface changes status from up to down. When the status is up, the notification signifies the restoration of a PIM interface. When the status is down, the notification signifies the loss of a PIM interface.

PIM notifications are defined in the CISCO-PIM-MIB.my and PIM-MIB.my files that can be accessed from the SNMP Object Navigator, available through cisco.com at <http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2>.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to use the **snmp-server traps pim interface-state-change** command:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps pim interface-state-change
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps pim invalid-message-received	Enables notifications for monitoring invalid PIM protocol operations.
snmp-server traps pim neighbor-change	Enables Protocol Independent Multicast (PIM) neighbor status down notifications.
snmp-server traps pim rp-mapping-change	Enables notifications indicating a change in the rendezvous point (RP) mapping information due to either Auto-RP or bootstrap router (BSR) messages.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps pim invalid-message-received

To enable notifications for monitoring invalid Protocol Independent Multicast (PIM) protocol operations, such as invalid register received and invalid join or prune received, use the **snmp-server traps pim invalid-message-received** command in global configuration mode. To disable this command so that no notification is sent, use the **no** form of this command.

snmp-server traps pim invalid-message-received

no snmp-server traps pim invalid-message-received

Syntax Description

This command has no keywords or arguments.

Command Default

Simple Network Management Protocol (SNMP) notifications are disabled by default.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

A router can receive a join or prune message in which the RP specified in the packet is not the RP for the multicast group. Or a router can receive a register message from a multicast group in which it is not the RP.

PIM notifications are defined in the CISCO-PIM-MIB.my and PIM-MIB.my files that can be accessed from the SNMP Object Navigator, available through cisco.com at <http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2>.

Task ID

Task ID	Operations
snmp	read, write

Examples

The following example shows how to use the **snmp-server traps pim invalid-message-received** command:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps pim invalid-message-received
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps pim interface-state-change	Enables PIM interface status notification.
snmp-server traps pim neighbor-change	Enables Protocol Independent Multicast (PIM) neighbor status down notifications.
snmp-server traps pim rp-mapping-change	Enables notifications indicating a change in the rendezvous point (RP) mapping information due to either Auto-RP or bootstrap router (BSR) messages.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps pim neighbor-change

To enable Protocol Independent Multicast (PIM) neighbor status down notifications, use the **snmp-server traps pim neighbor-change** command in global configuration mode. To disable PIM neighbor down notifications, use the **no** form of this command.

snmp-server traps pim neighbor-change

no snmp-server traps pim neighbor-change

Syntax Description This command has no keywords or arguments.

Command Default PIM Simple Network Management Protocol (SNMP) notifications are disabled by default.

Command Modes Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server traps pim neighbor-change** command to send notifications when a PIM neighbor changes status from up to down on an interface. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

PIM notifications are defined in the CISCO-PIM-MIB.my and PIM-MIB.my files that can be accessed from the SNMP Object Navigator, available through cisco.com at <http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2>.

Task ID	Task ID	Operations
	snmp	read, write

Examples This example shows how to enable the router to send PIM neighbor status down notifications to the host at the address myhost.cisco.com using the community string defined as public:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps pim neighbor-change
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps pim interface-state-change	Enables PIM interface status notification.
snmp-server traps pim invalid-message-received	Enables notifications for monitoring invalid PIM protocol operations.
snmp-server traps pim rp-mapping-change	Enables notifications indicating a change in the rendezvous point (RP) mapping information due to either Auto-RP or bootstrap router (BSR) messages.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps pim rp-mapping-change

To enable notifications indicating a change in the rendezvous point (RP) mapping information due to either Auto-RP or bootstrap router (BSR) messages, use the **snmp-server traps pim rp-mapping-change** command in global configuration mode. To disable this command so no notification is sent, use the **no** form of this command.

snmp-server traps pim rp-mapping-change

no snmp-server traps pim rp-mapping-change

Syntax Description This command has no keywords or arguments.

Command Default PIM SNMP notifications are disabled by default.

Command Modes Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

PIM notifications are defined in the CISCO-PIM-MIB.my and PIM-MIB.my files that can be accessed from the SNMP Object Navigator, available through cisco.com at <http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2>.

Task ID	Task ID	Operations
	snmp	read, write

Examples This example shows how to use the **snmp-server traps pim rp-mapping-change** command:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps pim rp-mapping-change
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps pim interface-state-change	Enables PIM interface status notification.
snmp-server traps pim neighbor-change	Enables Protocol Independent Multicast (PIM) neighbor status down notifications.
snmp-server traps pim invalid-message-received	Enables notifications for monitoring invalid PIM protocol operations.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps rsvp

To enable the sending of Resource Reservation Protocol (RSVP) notifications, use the **snmp-server traps rsvp** command in global configuration mode. To disable RSVP notifications, use the **no** form of this command.

snmp-server traps rsvp {all| lost-flow| new-flow}

Syntax Description

all	Enables the sending of both new flow lost flow traps.
lost-flow	Enables the sending of traps when a flow is deleted.
new-flow	Enables the sending of traps when a flow is created.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
mpls-te	read, write
ouni	read, write
snmp	read, write

Examples

This example illustrates how to enable all SNMP RSVP MIB traps.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server traps rsvp all
```

snmp-server traps selective-vrf-download role-change

To attempt to download only those prefixes and labels to a physical entity required to forward traffic through the physical entity, use the **snmp-server trap selective-vrf-download role-change** command in global configuration mode.

snmp-server trap selective-vrf-download role-change

This command has no keywords or arguments.

Command Default

Selective VRF downloads are disabled.

Command Modes

Global configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

The selective VRF download feature makes a best effort to download only those prefixes and labels to a physical entity required to forward traffic through the physical entity. This is accomplished by characterizing roles for physical entities based on their configuration.

From a network management point of view the CISCO-SELECTIVE-VRF-DOWNLOAD-MIB:

- Lists the state relating to the selective VRF download feature for each physical entity capable of forwarding packets.
- Lists the role change history per address family (ipv4 and ipv6) for each physical entity capable of forwarding packets.
- Lists the VRF tables selectively downloaded to each physical entity capable of forwarding packets.

Task ID

Task ID	Operation
snmp	read, write
basic-services	read, write

Examples

This example shows how to enable the selective VRF downloads:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps selective-vrf-download role-change
```


snmp-server traps snmp

To enable the sending of RFC 1157 Simple Network Management Protocol (SNMP) notifications, use the **snmp-server traps snmp** command in the appropriate configuration mode. To disable RFC 1157 SNMP notifications, use the **no** form of this command.

snmp-server traps snmp [authentication| coldstart| linkdown| linkup| warmstart]
no snmp-server traps snmp [authentication| coldstart| linkdown| linkup| warmstart]

Syntax Description

authentication	(Optional) Controls the sending of SNMP authentication failure notifications.
linkup	(Optional) Controls the sending of SNMP linkUp notifications
linkdown	(Optional) Controls the sending of SNMP linkDown notifications
coldstart	(Optional) Controls the sending of SNMP coldStart notifications.
warmstart	(Optional) Controls the sending of SNMP warmStart notifications.

Command Default

SNMP notifications are disabled by default.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	The authentication , linkup , linkdown , coldstart , and warmstart keywords were added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **snmp-server traps snmp** command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

The optional **authentication** keyword controls the sending of SNMP authentication failure notifications. In order to send notifications, you must configure at least one **snmp-server host** command. An authentication Failure (4) trap signifies that the sending device is the addressee of a protocol message that is not properly authenticated. The authentication method depends on the version of SNMP being used. For SNMPv1 or SNMPv2c, authentication failure occurs for packets with an incorrect community string. For SNMPv3, authentication failure occurs for packets with an incorrect Secure Hash Algorithm (SHA) or Message Digest 5 (MD5) authentication key or for a packet that is outside the window of the authoritative SNMP engine.

The optional **linkup** keyword controls the sending of SNMP linkUp notifications. The linkUp(3) trap signifies that the sending device recognizes one of the communication links represented in the agent's configuration coming up.

The optional **linkdown** keyword controls the sending of SNMP linkDown notifications. The linkDown(2) trap signifies that the sending device recognizes a failure in one of the communication links represented in the agent's configuration.

The **snmp-server traps snmp** command with the **linkup** or **linkdown** keywords globally enables or disables SNMP linkUp and linkDown traps. After enabling either of these traps globally, you can enable or disable these traps on specific interfaces using the **no notification linkupdown disable** command in interface configuration mode. According to RFC 2863, linkUp and linkDown traps are enabled for interfaces that do not operate on top of any other interface (as defined in the ifStackTable), and are disabled otherwise. This means that you do not have to enable linkUp and linkdown notifications on such interfaces. However, linkUp and linkDown notifications will not be sent unless you enable them globally using the **snmp-server traps snmp** command.

The optional **coldstart** keyword controls the sending of SNMP coldStart notifications. The coldStart(0) trap signifies that the sending device is reinitializing itself such that the agent's configuration or the protocol entity implementation may be altered.

The optional **warmstart** keyword controls the sending of SNMP coldStart notifications. The warmStart(1) trap signifies that the sending device is reinitializing itself such that neither the agent configuration nor the protocol entity implementation is altered.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to enable the device to send all traps to the host myhost.cisco.com using the community string defined as public:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps snmp
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com public snmp
```

The following example shows how to enable only linkUp and linkDown traps:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps snmp linkup
RP/0/RSP0/CPU0:router(config)# snmp-server traps snmp linkdown
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps bgp	Enables BGP state-change SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps syslog

To enable Simple Network Management Protocol (SNMP) notifications of Cisco-syslog-MIB error messages, use the **snmp-server traps syslog** command in the appropriate configuration mode. To disable these types of notifications, use the **no** form of this command.

snmp-server traps syslog

no snmp-server traps syslog

Syntax Description This command has no keywords or arguments.

Command Default SNMP notifications are disabled by default.

Command Modes Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **snmp-server traps syslog** command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications.

Task ID	Task ID	Operations
	snmp	read, write

Examples The following example shows how to enable Cisco-syslog-MIB error message notifications to the host at the address myhost.cisco.com, using the community string defined as public:

```
RP/0/RSP0/CPU0:router(config)# snmp-server traps syslog
RP/0/RSP0/CPU0:router(config)# snmp-server host myhost.cisco.com version 2c public
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps bgp	Enables BGP state-change SNMP notifications.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.

snmp-server trap-source

To specify the interface (and hence the corresponding IP address) from which a Simple Network Management Protocol (SNMP) trap should originate, use the **snmp-server trap-source** command in global configuration

mode. To remove the source designation, use the **no** form of this command.

snmp-server trap-source *type interface-path-id*

no snmp-server trap-source

Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

Command Default

No interface is specified.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When an SNMP trap is sent from a Cisco SNMP device, it has a notification address of the interface it happened to exit at that time. Use the **snmp-server trap-source** command to monitor notifications from a particular interface.



Note

In references to a Management Ethernet interface located on a route switch processor card, the physical slot number is numeric (0 through n-1 where n is the number of line card slots in the chassis) and the module is CPU0. Example: interface MgmtEth0/1/CPU0/0.

Task ID

Task ID	Operations
snmp	read, write

Examples

The following example shows how to specify that the IP address for Packet-over-SONET/SDH (POS) interface 0/0/1/0 is the source for all SNMP notifications:

```
RP/0/RSP0/CPU0:router(config)# snmp-server trap-source POS 0/0/1/0
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps bgp	Enables BGP state-change SNMP notifications.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server traps subscriber session-aggregation

To set the session aggregation parameters, use the **snmp-server traps subscriber session** command in global configuration mode. To delete the set parameters, use the no form of the command.

snmp-server traps subscriber session-aggregation [**access-interface** | **node**]

no snmp-server traps subscriber session-aggregation [**access-interface** | **node**]

Syntax Description

access-interface	Subscriber notification at access interface level.
node	Subscriber notification at node level.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 5.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **snmp-server traps subscriber session-aggregation** command to enable CISCO-SUBSCRIBER-SESSION-MIB notifications (traps). Notifications will include MIB's asynchronous events.

Task ID

Task ID	Operation
snmp	read, write

Examples

```
RP/0/RSP0/CPU0:router (config)# snmp-server traps subscriber session-aggregation node
```


snmp-server trap-timeout

To define how often to try resending trap messages on the retransmission queue, use the **snmp-server trap-timeout** command in global configuration mode. To restore the default value, use the **no** form of this command.

snmp-server trap-timeout *seconds*
no snmp-server trap-timeout *seconds*

Syntax Description	<i>seconds</i>	Integer that sets the interval for resending the messages, in seconds). Value can be from 1 to 1000.

Command Default	<i>seconds</i> : 30

Command Modes	Global configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. Before Cisco IOS XR software tries to send a trap, it looks for a route to the destination address. If there is no known route, the trap is saved in a retransmission queue. Use the snmp-server trap-timeout command to determine the number of seconds between retransmission attempts.

Task ID	Task ID	Operations
	snmp	read, write

Examples	The following example shows how to set an interval of 20 seconds to try resending trap messages on the retransmission queue:

```
RP/0/RSP0/CPU0:router(config)# snmp-server trap-timeout 20
```

Related Commands

Command	Description
snmp-server engineid local	Specifies an SNMP engine ID on the local device.
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.
snmp-server traps bgp	Enables BGP state-change SNMP notifications.
snmp-server traps snmp	Enables the sending of RFC 1157 SNMP notifications.
snmp-server traps syslog	Enables SNMP notifications of Cisco-syslog-MIB error messages.

snmp-server user

To configure a new user to a Simple Network Management Protocol (SNMP) group, use the **snmp-server user** command in global configuration

mode. To remove a user from an SNMP group, use the **no** form of this command.

snmp-server user *username groupname* {**v1**| **v2c**| **v3** [**auth** {**md5**| **sha**} {**clear**| **encrypted**} *auth-password* [**priv** {**3des**| **aes aes-bit-encryption**| **des56**} {**clear**| **encrypted**} *priv-password*]} [**SDROwner**| **SystemOwner**] [*access-list-name*]

no snmp-server user *username groupname*

Syntax Description

<i>username</i>	Name of the user on the host that connects to the agent.
<i>groupname</i>	Name of the group to which the user belongs.
v1	Specifies that the SNMPv1 security model should be used.
v2c	Specifies that the SNMPv2c security model should be used.
v3	Specifies that the SNMPv3 security model should be used.
auth	(Optional) Specifies which authentication level should be used. If this keyword is used, you must specify an authentication level and an authorization password.
md5	Specifies the HMAC-MD5-96 authentication level.
sha	Specifies the HMAC-SHA-96 authentication level.
clear	Specifies that an unencrypted password follows.
encrypted	Specifies that an encrypted password follows.
<i>auth-password</i>	Authentication password, which is a string (not to exceed 64 characters) that enables the agent to receive packets from the host.
priv	(Optional) Specifies that encryption parameters follow.
3des	Specifies the 168-bit Triple Data Encryption Standard (3DES) level of encryption for the user.
aes aes-bit-encryption	Specifies the Advanced Encryption Standard (AES) level of encryption for the user. Supported options are 128, 192 and 256 bit encryption.
des56	Specifies the 56-bit Data Encryption Standard (DES) level of encryption for the user.

<i>priv-password</i>	Privacy password, which can be clear or encrypted text, according to what is specified.
SDROwner	(Optional) Limits access to the agents for the owner secure domain router (SDR) only.
SystemOwner	(Optional) Provides system-wide access to the agents for all SDRs.
<i>access-list-name</i>	(Optional) Access list to be associated with this SNMP user. The <i>access-list-name</i> argument represents a value from 1 to 99, that is, the identifier of the standard IP access list.

Command Default

By default, access is limited to agents on the owner SDR only.

See also [Table 65: snmp-server user Default Descriptions, on page 928](#).

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 3.9.0	AES and 3DES encryption formats were supported.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To use 3DES and AES encryption standards, you must have installed the security package (k9sec). For information on installing software packages, see *Upgrading and Managing Cisco IOS XR Software* in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

Table 65: snmp-server user Default Descriptions

Characteristic	Default
passwords	Text strings are assumed.
access lists	Access from all IP access lists is permitted.

SDR and System-wide Access

When the **snmp-server user** command is entered with the **SDROwner** keyword, SNMP access is granted only to the MIB object instances in the owner SDR.

When the **snmp-server user** command is entered with the **SystemOwner** keyword, SNMP access is granted to the entire system.

Task ID

Task ID	Operations
snmp	read, write

Examples

The following example shows how to enter a plain-text password for the string *abcd* for user2 in group2:

```
RP/0/RSP0/CPU0:router(config)# snmp-server user user2 group2 v3 auth md5 clear abcd
```

To learn if this user has been added to the configuration, use the **show snmp user** command.

If the localized Message Digest 5 (MD5) or Secure Hash Algorithm (SHA) digest is known, specify that string instead of the plain-text password. The digest should be formatted as AA:BB:CC:DD where AA, BB, CC, and DD are hexadecimal values. The digest should also be exactly 16 octets long.

This example shows how to specify the command with a digest name of
00:11:22:33:44:55:66:77:88:99:AA:BB:CC:DD:EE:FF:

```
RP/0/RSP0/CPU0:router(config)# snmp-server user user2 group2 v3 auth md5 encrypted  
00:11:22:33:44:55:66:77:88:99:AA:BB:CC:DD:EE:FF
```

Related Commands

Command	Description
snmp-server group	Configures a new SNMP group, or a table that maps SNMP users to SNMP views.

snmp-server view

To create or update a Simple Network Management Protocol (SNMP) view entry, use the **snmp-server view** command in

global configuration

mode. To remove the specified server view entry, use the **no** form of this command.

snmp-server view *view-name oid-tree* {**excluded**|**included**}

no snmp-server view *view-name oid-tree* {**excluded**|**included**}

Syntax Description

<i>view-name</i>	Label for the view record being updated or created. The name is used to reference the record.
<i>oid-tree</i>	Object identifier (OID) of the ASN.1 subtree to be included or excluded from the view. To identify the subtree, specify a text string consisting of numbers, such as 1.3.6.2.4, or a word, such as <i>system</i> . Replace a single subidentifier with the asterisk (*) wildcard to specify a subtree family; for example 1.3.*.4.
excluded	Excludes the MIB family from the view.
included	Includes the MIB family in the view.

Command Default

No view entry exists.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Other SNMP commands require a view as a keyword. Use the **snmp-server view** command to create a view to be used as keywords for other commands that create records including a view.

Instead of defining a view explicitly, you can rely on the following predefined views, which are supported by the SNMP agent:

all

Predefined view indicating that a user can see all objects.

CfgProt

Predefined view indicating that a user can see all objects except the SNMPv3 configuration tables.

vacmViewTreeFamilyEntry

Predefined view indicating that a user can see the default configuration of vacmViewTreeFamilyEntry.

The predefined views supported on Cisco IOS XR software, however, do not match the predefined views specified in RFC 3415.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example creates a view that includes all objects in the MIB-II subtree:

```
RP/0/RSP0/CPU0:router(config)# snmp-server view mib2 1.3.6.1.2.1 included
```

This example shows how to create a view that includes all objects in the MIB-II system group and all objects in the Cisco enterprise MIB:

```
RP/0/RSP0/CPU0:router(config)# snmp-server view view1 1.3.6.1.2.1.1 included
RP/0/RSP0/CPU0:router(config)# snmp-server view view1 1.3.6.1.4.1.9 included
```

This example shows how to create a view that includes all objects in the MIB-II system group except for sysServices (System 7) and all objects for interface 1 in the MIB-II interfaces group:

```
RP/0/RSP0/CPU0:router(config)# snmp-server view view1 1.3.6.1.2.1.1 included
RP/0/RSP0/CPU0:router(config)# snmp-server view view1 1.3.6.1.2.1.1.7 excluded
RP/0/RSP0/CPU0:router(config)# snmp-server view view1 1.3.6.1.2.1.2.2.1.*.1 included
```

Related Commands

Command	Description
show snmp view	Displays the configured views and the associated MIB view family name, storage type, and status.
snmp-server group	Configures a new SNMP group, or a table that maps SNMP users to SNMP views.

snmp-server vrf

To configure the VPN routing and forwarding (VRF) properties of Simple Network Management Protocol (SNMP), use the **snmp-server vrf** command in global configuration

mode. To remove the configuration, use the **no** form of this command.

snmp-server vrf *vrf-name* [**host** *address* [**clear**| **encrypted**]][**traps**][**version** {**1**| **2c**| **3** *security-level*}] [*community-string* [**udp-port** *port*]][**context** *context-name*]

no snmp-server vrf *vrf-name*

Syntax Description

<i>vrf-name</i>	Name of the VRF.
host <i>address</i>	(Optional) Specifies the name or IP address of the host (the targeted recipient).
clear	(Optional) Specifies that the <i>community-string</i> argument is clear text.
encrypted	(Optional) Specifies that the <i>community-string</i> argument is encrypted text.
traps	(Optional) Specifies that notifications should be sent as traps. This is the default.
version { 1 2c 3 }	(Optional) Specifies the version of the SNMP used to send the traps. The default is SNMPv1. When the version keyword is used, one of these keywords must be specified: • 1—SNMPv1 • 2c—SNMPv2C • 3—SNMPv3
<i>security-level</i>	(Optional) Security level for SNMPv3. Options are: • auth—authNoPriv • noauth—noAuthNoPriv • priv—authPriv
<i>community-string</i>	Specifies the community string for SNMPv1 and SNMPv2, or the SNMPv3 user.
udp-port <i>port</i>	(Optional) Specifies the UDP port to which notifications should be sent.
context <i>context-name</i>	(Optional) Name of the context that must be mapped to VRF identified by value of the <i>vrf-name</i> argument.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.2.0	Support for IPv6 was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use this command to enter SNMP VRF configuration mode and configure an SNMP notification recipient on a VRF. You can also map a VRF to an SNMP context.

SNMP notification recipient that is reachable by way of a VRF can be configured. Notification is forwarded to the recipient represented by its address using the routing table instance identified by the VRF name.

The *address* argument can be either a host name or an IP address. Both IPv4 and IPv6 formats are supported.

Use the **clear** keyword to specify that the clear text community string you enter is displayed encrypted in the **show running** command output. To enter an encrypted string, use the **encrypted** keyword. To enter a clear text community string that is not encrypted by the system, use neither of these keywords.

An SNMP context identified by the value of the *context-name* argument can be mapped to a VRF in this mode. This context must be created using **snmp-server context** command.

Task ID

Task ID	Operations
snmp	read, write

Examples

This example shows how to configure a host IP address for a VRF name:

```
RP/0/RSP0/CPU0:router(config)# snmp-server vrf vrfa
RP/0/RSP0/CPU0:router(config-snmp-vrf)# host 12.21.0.1 traps version
2c public udp-port 2525
```

Related Commands

Command	Description
snmp-server context	Creates a Simple Network Management Protocol (SNMP) context.

Command	Description
snmp-server host	Specifies the recipient of a Simple Network Management Protocol (SNMP) notification operation.

snmp test trap all

To send a Simple Network Management Protocol (SNMP) trap message to the trap receivers for all supported traps, use the **snmp test trap all** command in EXEC mode.

snmp test trap all

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.9.1	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To use the **snmp test trap** command, SNMP must be configured on the router. This command is not intended for testing scalability, performance, or high availability scenarios.

Use the **snmp test trap all** command to generate test traps for all supported traps. The following traps are supported:

- coldStart—SNMP agent Initializing and its configuration may have changed.
- warmStart—SNMP agent Initializing and its configuration is unaltered.
- linkUp—Interface ifOperStatus is Up.
- linkDown—Interface ifOperStatus is Down.
- clogMessage Generated—Syslog message generated.
- ciscoFlashDeviceInsertedNotif—Flash device inserted.
- ciscoFlashDeviceRemovedNotif—Flash device removed.
- ciscoRFProgressionNotif—RF state change.
- ciscoRFSwactNotif—Switchover.
- ciscoConfigManEvent—Command-line interface (CLI) configuration management event.

- newRoot—SNMP agent is a new root of the spanning tree.
- topologyChange—Bridge port has transitioned to the Forwarding state.
- cefcFanTrayOperStatus—Fan tray cefcFanTrayOperStatus is Up.
- cefcModuleStatusChange—Module cefcModuleOperStatus is OK (module up) or module cefcModuleOperStatus is Failed (module down).
- entSensorThresholdNotification—entSensorValue crossed the entSensorthresholdValue.
- cefcPowerStatusChange—Redundant PowerSupply fails.

Task ID

Task ID	Operation
snmp	read

Examples

This example illustrates how to use the **snmp test trap all** command:

```
RP/0/RSP0/CPU0:router# snmp test trap all
```

Related Commands

Command	Description
show snmp entity	Displays the entPhysicalName and entPhysicalIndex mappings.

snmp test trap entity

To send a test SNMP Entity trap message to the trap receivers, use the **snmp test trap entity** command in EXEC

mode.

snmp test trap entity {fru {power status-change failed| module status-change {up| down}| fan-tray oper-status up}| sensor threshold-notification}[entity-index *index*]

Syntax Description

fru	Sends a field replacement unit trap.
power status-change failed	Sends a cefcPowerStatusChange trap for the CISCO-ENTITY-FRU-CONTROL-MIB.
module status-change {up down}	Sends a cefcModuleStatusChange trap for the CISCO-ENTITY-FRU-CONTROL-MIB.
fan-tray oper-status up	Sends a cefcFanTrayOperStatus trap for the CISCO-ENTITY-FRU-CONTROL-MIB.
sensor	Sends a sensor trap.
threshold-notification	Sends a entSensorThresholdNotification trap for the CISCO-ENTITY-SENSOR-MIB.
entity-index <i>index</i>	Specifies the physical index for which to generate the trap.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **snmp test trap entity** command tests the sending of Entity MIB traps. It is not intended for testing scalability, performance, or high availability scenarios. To use the **snmp test trap** command, SNMP must be configured on the router.

Task ID

Task ID	Operation
snmp	read

Examples

This example illustrates how to use the **snmp test trap entity** command:

```
RP/0/RSP0/CPU0:router# snmp test trap entity sensor threshold index
```

Related Commands

Command	Description
show snmp entity	Displays the entPhysicalName and entPhysicalIndex mappings.

snmp test trap infra

To send a test Simple Network Management Protocol (SNMP) Infra trap message to the trap receivers, use the **snmp test trap infra** command in

EXEC

mode.

snmp test trap infra {bridge {new-root| topology-change}| config event| flash {device-inserted| device-removed}| redundancy {progression| switch}| syslog message-generated}

Syntax Description

bridge	Sends a bridge trap.
new-root	Sends a newRoot trap for the BRIDGE-MIB.
topology-change	Sends a topologyChange trap for the BRIDGE-PORT.
config event	Sends a ciscoConfigManEvent trap for the CISCO-CONFIG-MAN-MIB.
flash	Sends a flash trap.
device-inserted	Sends a ciscoFlashDeviceInsertedNotif trap for the CISCO-FLASH-MIB.
device-removed	Sends a ciscoFlashDeviceRemovedNotif trap for the CISCO-FLASH-MIB.
redundancy	Sends an RF trap.
progression	Sends a ciscoRFProgressionNotif trap for the CISCO-RF-MIB.
switch	Sends a ciscoRFSwactNotif trap for the CISCO-RF-MIB.
syslog message-generated	Sends a clogMessageGenerated for the CISCO-SYSLOG-MIB.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **snmp test trap infra** command tests the sending of Infra MIB traps. It is not intended for testing scalability, performance, or high availability scenarios. To use this command, SNMP must be configured on the router.

Task ID

Task ID	Operation
snmp	read

Examples

This example illustrates how to use the **snmp test trap infra** command:

```
RP/0/RSP0/CPU0:router# snmp test trap infra syslog message-generated
```


snmp test trap interface

To send a test Simple Network Management Protocol (SNMP) interface trap message to the trap receivers, use the **snmp test trap interface** command in EXEC mode.

snmp test trap interface {**link-down**| **link-up**} **ifindex** *index*

Syntax Description

link-down	Sends a linkDown trap for the IF-MIB.
link-up	Sends a linkUp trap for the IF-MIB.
ifindex <i>index</i>	Specifies the interface index for which to send the IF-MIB trap.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **snmp test trap interface** command tests the sending of IF-MIB traps. It is not intended for testing scalability, performance, or high availability scenarios. To use this command, SNMP must be configured on the router.

Task ID

Task ID	Operation
snmp	read

Examples

This example illustrates how to use the **snmp test trap interface** command:

```
RP/0/RSP0/CPU0:router# snmp test trap interface link-down
```

snmp test trap snmp

To send a test Simple Network Management Protocol (SNMP) trap message to the trap receivers, use the **snmp test trap snmp** command in EXEC mode.

snmp test trap snmp {cold-start| warm-start}

Syntax Description

cold-start	Sends a coldStart trap for the SNMPv2-MIB.
warm-start	Sends a warmStart trap for the SNMPv2-MIB.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **snmp test trap snmp** command tests the sending of MIB traps. It is not intended for testing scalability, performance, or high availability scenarios. To use this command, SNMP must be configured on the router.

Task ID

Task ID	Operation
snmp	read

Examples

The following example illustrates how to use the **snmp test trap snmp** command:

```
RP/0/RSP0/CPU0:router# snmp test trap snmp cold-start
```

transfer-interval

To configure how long bulk statistics should be collected before a bulk statistics transfer is initiated, use the **transfer-interval** command in bulk statistics transfer configuration mode. To remove a previously configured interval from a bulk statistics configuration, use the **no** form of this command.

transfer-interval *minutes*

no transfer-interval *minutes*

Syntax Description

<i>minutes</i>	Length of time, in minutes, that the system should collect MIB data before attempting the transfer operation. The valid range is from 1 to 2147483647. The default is 30.

Command Default

Bulk statistics file transfer operations start 30 minutes after the **enable (bulkstat)** command is used.

Command Modes

Bulk statistics transfer configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Bulk statistics data is collected into a new file when a transfer attempt begins, which means that this command also configures the collection interval.

If the maximum buffer size for a bulk statistics file is reached before the transfer interval time expires, the transfer operation is still initiated, and bulk statistics MIB data are collected into a new file in the system buffer.

Task ID

Task ID	Operation
snmp	read, write

Examples

The following example shows how to configure a transfer interval of 20 minutes for the bulk statistics configuration bulkstat1:

```
RP/0/RSP0/CPU0:router# configure
```

```
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat transfer-id bulkstat1
RP/0/RSP0/CPU0:router(config-bulk-tr)# transfer-interval 20
```

Related Commands

Command	Description
enable (bulkstat)	Begins the bulk statistics data collection and transfer process for a specific bulk statistics configuration.
show snmp mib bulkstat transfer	Displays completed local bulk statistics files.
snmp-server mib bulkstat transfer-id	Identifies the bulk statistics transfer configuration and enters bulk statistics transfer configuration mode.

url

To specify the host to which bulk statistics files should be transferred, use the **url** command in bulk statistics transfer configuration mode. To remove a previously configured destination host, use the **no** form of this command.

url [**primary**| **secondary**] *url*

no url [**primary**| **secondary**] *url*

Syntax Description

primary	Specifies the URL to be used first for bulk statistics transfer attempts.
secondary	Specifies the URL to be used for bulk statistics transfer attempts if the transfer to the primary URL is not successful.
<i>url</i>	Destination URL address for the bulk statistics file transfer. Use FTP or TFTP. The syntax for these URLs is as follows: • ftp:<i>[[[/username [:password]@]location]/directory]/filename</i> • tftp:<i>[/location]/directory]/filename</i> The location argument is typically an IP address.

Command Default

No host is specified.

Command Modes

Bulk statistics transfer configuration

Command History

Release	Modification
Release 4.2.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For bulk statistics transfer retry attempts, a single retry consists of an attempt to send first to the primary URL, and then to the secondary URL.

Task ID

Task ID	Operation
snmp	read, write

url

Examples

In the following example, an FTP server is used as the primary destination for the bulk statistics file. If a transfer to that address fails, an attempt is made to send the file to the TFTP server at 192.168.10.5. No retry command is specified, which means that only one attempt to each destination will be made.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# snmp-server mib bulkstat transfer ifMibTesting
RP/0/RSP0/CPU0:router(config-bulk-tr)# schema carMibTesting1
RP/0/RSP0/CPU0:router(config-bulk-tr)# schema carMibTesting2
RP/0/RSP0/CPU0:router(config-bulk-tr)# url primary
ftp://user2:pswd@192.168.10.5/functionality/
RP/0/RSP0/CPU0:router(config-bulk-tr)# url secondary tftp://user2@192.168.10.8/tftpboot/
RP/0/RSP0/CPU0:router(config-bulk-tr)# enable
RP/0/RSP0/CPU0:router(config-bulk-tr)# exit
```

Related Commands

Command	Description
show snmp mib bulkstat transfer	Displays completed local bulk statistics files.



Software Entitlement Commands on the Cisco ASR 9000 Series Router

For detailed information about software entitlement concepts, configuration tasks, and examples, see the *Software Entitlement on Cisco IOS XR Software* module in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

- [clear license, page 949](#)
- [clear license log, page 950](#)
- [license, page 952](#)
- [license add, page 954](#)
- [license backup, page 956](#)
- [license move, page 958](#)
- [license move slot, page 960](#)
- [license remove, page 962](#)
- [license restore, page 964](#)
- [license save credential, page 966](#)
- [show license, page 968](#)
- [show license active, page 972](#)
- [show license allocated, page 974](#)
- [show license available, page 976](#)
- [show license backup, page 978](#)
- [show license chassis, page 980](#)
- [show license evaluation, page 981](#)
- [show license expired, page 983](#)
- [show license features, page 985](#)
- [show license file, page 986](#)

- [show license log, page 988](#)
- [show license pools, page 990](#)
- [show license udi, page 992](#)
- [show license status, page 994](#)

clear license

To delete all licenses from the router persistent storage, use the **clear license** command in administration EXEC mode.

clear license

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **clear license** command removes all licenses from the router persistent storage.

Task ID

Task ID	Operations
pkg-mgmt	execute

Examples

In the following example, all licenses are removed from the router:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# clear license
```

clear license log

To clear the operational or administrative logs for the license system, use the **clear license log** command in administration EXEC mode.

clear license log {operational| administration}

Syntax Description

operational	Clears the operational logs for the license system.
administration	Clears the administration logs for the license system.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **clear license log** command to clear either the operational or administrative logs for the license system. To view the logs, use the **show license log** command. The license log does not persist between reloads.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example illustrates how to use the **clear license log** command to clear the operational logs:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# clear license log operational
```

Related Commands

Command	Description
show license log	Displays the operational or administrative logs for the license system.

license

To configure a license to be used for specific slots or for any slots, use the **license** command in administration configuration mode. To remove the configuration of the license, use the **no** form of this command.

license *feature-id* [**type** [**evaluation**| **permanent**]] [**location** *node-id*]

no license *feature-id* [**type** [**evaluation**| **permanent**]] [**location** *node-id*]

Syntax Description

<i>feature-id</i>	Identifier for the feature.
type [evaluation permanent]	(Optional) Specifies whether the license is evaluation or permanent.
location <i>node-id</i>	(Optional) Specifies the location of the card. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

Licenses are not configured.

Command Modes

Administration configuration

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the **license** command is not configured during a license acquisition, the acquisition fails. This command is required to be configured for every licensed feature starting in Cisco IOS XR Release 4.0.0.

Licenses can be optionally configured as either permanent or evaluation. If no location is specified, the license is considered a flexible license available for any location. When a specific location is configured, the feature allowed by the license is considered slot-specific and bound to specific slots only.

Task ID

Task ID	Operation
pkg-mgmt	read, write

Examples

The following example shows how to configure a license to a specific slot:

```
RP/0/RSP0/CPU0:router(admin-config)# license A9K-ADV-VIDEO-LIC type permanent
location 0/1/cpu0
```

Related Commands

Command	Description
show license	Displays all license information.

license add

To add a license to a secure domain router (SDR) license pool, use the **license add** command in administration EXEC mode.

license add [**tar**] *license-name* [**sdr** *sdr-name*]

Syntax Description

tar	(Optional) Indicates that the license file is contained in a tar file.
<i>license-name</i>	Name and location of the license file to be added. The license file can be local to the system or a remote file on a TFTP server.
sdr <i>sdr-name</i>	(Optional) Adds the license to the specified SDR license pool. The default is owner. The <i>sdr-name</i> argument is the name assigned to the SDR.

Command Default

License is added to the owner SDR.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	The tar keyword was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **license add** command to add a license to an SDR license pool. The license file can be local to the system or a remote file on a TFTP server. The license file is stored in persistent storage on the router.

To acquire a license file, you must provide a manufacturing supplied product authorization key (PAK) and the license unique device identifier (UDI) of the chassis to the license registration tool at: <https://tools.cisco.com/SWIFT/Licensing/RegistrationServlet>. To obtain the UDI of your chassis, use the **show license udi** command.

By default, there is one license pool available.

Task ID

Task ID	Operations
pkg-mgmt	execute

Examples

The following example shows how to add a software license to the owner SDR:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# license add disk1:/P1-LIC-8_TBA09370035_20070207195224661.lic
```

```
License command "license add disk1:/P1-LIC-8_TBA09370035_20070207195224661.lic
sdr Owner" completed successfully.
```

Related Commands

Command	Description
license move	Moves a license from one secure domain router license pool to another.
show license udi	Displays UDI information for the router.

license backup

To back up all licenses contained on the persistent storage of the router, use the **license backup** command in administration EXEC mode.

license backup *backup-file*

Syntax Description

<i>backup-file</i>	Name and location of the backup file to be created or modified. This can be a local file, or a remote file on a TFTP or rcp server.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **license backup** command to back up the licenses stored in the persistent storage on the router. We recommend this so that you can restore the licenses at one time while recovering from a failed disk situation. The destination location can be local to the system; in other words, a flash disk or hard disk. Alternatively, it can be a remote file on a TFTP or rcp server. The license information includes the licenses as well as the operational information, such as the slot the licenses are allocated to and the current license operation identifier.

If the backup file already exists, you are prompted to confirm before the file is overwritten.

When licenses are backed up, they can be restored as required using the **license restore** command.

Task ID

Task ID	Operations
pkg-mgmt	execute

Examples

The following example shows how to back up the licenses on a router:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# license backup disk1:/license_back
```


License command "license backup disk1:/license_back" completed successfully.

Related Commands

Command	Description
license restore	Restores the licenses on a router using an earlier backup copy.
show license backup	Displays the backup license file.

license move

To move a license from one secure domain router (SDR) license pool to another, use the **license move** command in administration EXEC mode.

license move *feature-id* {**all**| *count*} **sdr** *source-sdr-name* **sdr** *dest-sdr-name*[**evaluation**| **permanent**]

Syntax Description

<i>feature-id</i>	Identifier for the feature entitled in the licenses to be moved. You can display available licenses using the show license command.
all	Specifies to move all available licenses with the specific feature identifier.
<i>count</i>	Number of licenses to move.
sdr <i>source-sdr-name</i>	Specifies the SDR license pool from which to move the specified licenses. The <i>source-sdr-name</i> argument is the name assigned to the SDR.
sdr <i>dest-sdr-name</i>	Specifies the SDR license pool to which the license should be moved. The <i>source-sdr-name</i> argument is the name assigned to the SDR.
evaluation	Specifies to move an evaluation license.
permanent	Specifies to move a permanent license.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

By default, there is only one license pool available. If you have created multiple license pools, you can use the **license move** command to move the license to a different SDR license pool.

The **license move** command is used only to move licenses between SDR license pools on the same router. To move licenses between routers, you must first remove the license from the original router using the **license remove** command, and then add it to the new router using the **license add** command. To move licenses

between routers, you also need to generate a new license key on Cisco.com. The license registration tool is located at <https://tools.cisco.com/SWIFT/Licensing/RegistrationServlet>.

Licenses can be moved only if they are in the available state. In other words, you have to clear the feature configuration before a license can be released back to the appropriate license pool.

Task ID

Task ID	Operations
pkg-mgmt	execute

Examples

The following example shows how to move a license from one license pool to another:

```
RP/0/RSP0/CPU0:router# admin
```

```
RP/0/RSP0/CPU0:router(admin)# license move a9k-adv-optic-lic sdr owner sdr mysdr
```

Related Commands

Command	Description
license add	Adds a license to a secure domain router (SDR) license pool.
show license	Displays all license information.

license move slot

To move a license from one slot to another, use the **license move slot** command in EXEC or administration EXEC mode.

license move *feature-id* **slot** [*count*] **from** {*node-id*} **allocated** } **to** {*node-id*} **available** } [**evaluation** | **permanent**]

Syntax Description

<i>feature-id</i>	Identifier for the feature entitled in the licenses to be moved. You can display available licenses using the show license, on page 968 command.
<i>count</i>	Number of licenses to move. This argument cannot be used in conjunction with the allocated and available keywords.
from	Specifies from where to move the specified licenses.
<i>node-id</i>	Specific node from which to move the license.
allocated	Specifies to move all allocated licenses with the specific feature identifier. This keyword must be used in conjunction with the available keyword.
to	Specifies to where to move the specified licenses.
<i>node-id</i>	Specific node to which to move the license.
available	Specifies to move the specified allocated licenses into the available state. This keyword must be used in conjunction with the allocated keyword.
evaluation	Specifies to move an evaluation license.
permanent	Specifies to move a permanent license.

Command Default

One license is moved.

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **license move slot** command moves slot-based licenses from one slot to another slot on the same router.

Use the **allocated** keyword to move all allocated licenses into the available state. The **allocated** keyword must be used in conjunction with the **available** keyword. If no allocated licenses are available that match the feature identifier, the **license move slot** command revokes used licenses on the given slot.

If licenses are going to be revoked on the source card, a warning prompt is displayed.

Licenses can be moved only if they are in the available state. In other words, you have to clear the feature configuration before a license can be released back to the appropriate license pool.

Task ID

Task ID	Operations
pkg-mgmt	execute

Examples

The following example shows how to move a license from one slot to another:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# license move a9k-adv-optic-lic slot 1 from 0/1/cpu0 to 0/4/cpu0
```

The following example shows how to move all licenses to the available state:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# license move a9k-adv-optic-lic from allocated to available
```

Related Commands

Command	Description
license add	Adds a license to a secure domain router (SDR) license pool.
show license	Displays all license information.

license remove

To remove a license permanently from a router, use the **license remove** command in administration EXEC mode.

license remove *feature-id* {**id** | **ticket** *permission-ticket rehost-ticket*} [**sdr** *sdr-name*] {**evaluation** | **permanent**}

Syntax Description

<i>feature-id</i>	Identifier for the feature entitled in the licenses to be removed. You can display available features using the show license command.
id	Specifies to remove licenses using a unique identifier of the license.
sdr <i>sdr-name</i>	Removes the license from the specified SDR license pool.
evaluation	Specifies to move an evaluation license.
permanent	Specifies to move a permanent license.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **license remove** command permanently removes a license from the router and outputs a key or rehost ticket that can be used to prove that the license has been removed. This command accepts a permission ticket, obtained from CCO, that includes the UDI, feature ID and count of licenses to remove. Refer to the license registration tool on CCO for more information: <https://tools.cisco.com/SWIFT/Licensing/RegistrationServlet>.

If you use a permission ticket that was previously used, the same rehost ticket is created, but no licenses are removed.

Licenses can be removed only if they are in the available state. In other words, you have to clear the feature configuration before that the license can be released back to the appropriate license pool.

Task ID

Task ID	Operation
pkg-mgmt	execute

Examples

The following example shows how to remove a license from a license pool:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# license remove a9k-adv-optic-lic
ticket disk1:/my_permission disk1:/optic_lic
```

Related Commands

Command	Description
show license	Displays all license information.

license restore

To restore the licenses on a router using an earlier backup copy, use the **license restore** command in administration EXEC mode.

license restore *backup-file*

Syntax Description

<i>backup-file</i>	Name and location of the backup file to be used for the license restore. This can be a local file, or a remote file on a TFTP or rcp server.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **license restore** command restores the licenses on the router using an earlier backup copy that was created using the **license backup** command. The source location can be local to the system, in other words, a flash disk or hard disk. Alternatively, it can be a remote file on a TFTP or rcp server.

Before the licenses are restored, the license manager verifies the following:

- The backup format is valid.
- The licenses are issued for the chassis where the CLI is being run.
- The license operation identifier in the backup file matches the one on the router EEPROM.

Task ID

Task ID	Operations
pkg-mgmt	execute

Examples

The following example shows how to move a license from one license pool to another:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# license restore disk1:/license_back

Info: This command will erase all existing licenses.
Info: It is strongly recommended to backup existing licenses first. Do you wish to
proceed? [yes/no]: y

License command "license restore disk1:/license_back" completed successfully.
```

Related Commands

Command	Description
license backup	Backs up all licenses contained on the persistent storage of the router.

license save credential

To retrieve the router credentials and save them to a specified location, use the **license save credential** command in administration EXEC mode.

license save credential *file-name*

Syntax Description

<i>file-name</i>	Name and location of file where the credentials are saved.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The following device credentials are saved:

- OPID
- SN—Serial number attached to the chassis.
- UDI—Universal device identifier; the Cisco wide identifier that contains the product ID, serial number, and version.

Task ID

Task ID	Operation
pkg-mgmt	execute

Examples

The following example shows how to save the credentials to a file:

```
RP/0/RSP0/CPU0:router:router(admin)# license save credential disk1:/cred_file
```

The following example shows the typical information saved to the credential file:

```
Wed Aug  4 12:20:19.544 DST
Device credentials:
  OPID :5
  SN   :FOX1232H67M
  PID  :ASR-9010-AC
```

Related Commands

Command	Description
show license chassis	Displays all licenses with their serial number information.
show license udi	Displays UDI information for the router.

show license

To display all license information, use the **show license** command in EXEC or administration EXEC mode.

show license [*feature-id*] **location** *node-id* **sdr** *sdr-name*

Syntax Description

<i>feature-id</i>	(Optional) Identifier for the feature entitled in the licenses to be displayed.
location <i>node-id</i>	(Optional) Specifies the location of the card. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
sdr <i>sdr-name</i>	(Optional) Displays the licenses in the specified SDR license pool. The <i>sdr-name</i> argument is the name assigned to the SDR.

Command Default

No default behavior or values

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show license** command displays all license information. Alternatively, you can display license information for a specific feature identifier, slot location, or SDR by using the available options.

If the feature process has supplied an opaque string while checking out the license, that string is displayed next to the feature identifier in the command output.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example shows sample output from the **show license** command:

```
RP/0/RSP0/CPU0:router(admin)# show license

Wed Aug  4 09:52:24.352 DST

FeatureID: A9K-ADV-OPTIC-LIC (Slot based, Permanent)
  Total licenses 1
  Available for use      1
  Allocated to location  0
  Active                0
  Store name            Permanent
  Store index           1
  Pool: Owner
    Total licenses in pool: 1
    Status: Available    1    Operational:    0

FeatureID: A9K-ADV-VIDEO-LIC (Slot based, Permanent)
  Total licenses 1
  Available for use      1
  Allocated to location  0
  Active                0
  Store name            Permanent
  Store index           2
  Pool: Owner
    Total licenses in pool: 1
    Status: Available    1    Operational:    0

FeatureID: A9K-AIP-LIC-B (Slot based, Permanent)
  Total licenses 1
  Available for use      1
  Allocated to location  0
  Active                0
  Store name            Permanent
  Store index           3
  Pool: Owner
    Total licenses in pool: 1
    Status: Available    1    Operational:    0

FeatureID: A9K-AIP-LIC-E (Slot based, Permanent)
  Total licenses 1
  Available for use      1
  Allocated to location  0
  Active                0
  Store name            Permanent
  Store index           4
  Pool: Owner
    Total licenses in pool: 1
    Status: Available    1    Operational:    0

FeatureID: A9K-iVRF-LIC (Slot based, Permanent)
  Total licenses 1
  Available for use      1
  Allocated to location  0
  Active                0
  Store name            Permanent
  Store index           5
  Pool: Owner
    Total licenses in pool: 1
    Status: Available    1    Operational:    0
```

Table 66: show license Field Descriptions

Field	Description
FeatureID	Feature to which the licenses apply. The type of license is designated as one of the following: • Permanent licenses—Enable a designated feature permanently as long as the license resides on the router. • Evaluation or metered licenses—Enable a feature for a limited period of time. • Implicit licenses—Metered licenses that are included with the software image (upgrade or initial installation).
Total licenses	Number of licenses on the router.
Available for use	Number of licenses that are not currently active.
Allocated to location	Number of licenses allocated to a slot but not used.
Active	Number of licenses currently checked out or being used by applications.
Pool	License pool to which the licenses belong.
Total licenses in pool	Number of licenses in the specific pool.

Field	Description
Status	Indicates the number of licenses in each state. Licenses can have the following states: Available—License is available in the pool and can be assigned to a slot/feature process. For example, a recently added 40-Gbps license to the router is available before it gets checked out by a card. Allocated—License is assigned to a slot but is unused. In other words, the feature process is not using the license. For example, a 40-Gbps license is allocated to slot 5 if the license was previously used but the card is currently in the shutdown state. Active—Feature process has checked out a license. Generally this happens when the feature is actively using the license. For example, if a card is in IOS XR RUN state and is passing traffic at 40 Gbps, a 40-Gbps license is in the used state in that slot. Operational—All licenses that are either active or allocated. Expired—License has expired. This is applicable only for evaluation licenses or licenses granted by Cisco.
Locations with licenses	Slot where the licenses are being used, followed by an indication of whether the license is active or allocated, and to which license pool it belongs.

show license active

To display license information for all licenses that are currently checked out or being used by an application, use the **show license active** command in EXEC or administration EXEC mode.

show license active [*feature-id*] **location** *node-id* **sdr** *sdr-name*

Syntax Description

<i>feature-id</i>	(Optional) Identifier for the feature entitled in the licenses to be displayed.
location <i>node-id</i>	(Optional) Specifies the location of the card. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
sdr <i>sdr-name</i>	(Optional) Displays the licenses in the specified secure domain router (SDR) license pool. The <i>sdr-name</i> argument is the name assigned to the SDR.

Command Default

No default behavior or values

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show license active** command displays all license information regarding licenses that are currently checked out or being used by an application. You can display the information for a specific feature identifier, slot location, or SDR by using the available options.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example displays sample output from the **show license active** command:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show license active

FeatureID:
a9k-adv-optic-lic
  (Slot based, Implicit[Remaining time: 90 days])
  Status: Active                2
    SDR: Owner
      Operational:              2

Location: 0/1/CPU0              1
          0/6/CPU0              1
```

See [Table 66: show license Field Descriptions](#), on page 970 for a description of the significant fields shown in the display.

show license allocated

To display license information for all licenses allocated to a slot but not used, use the **show license allocated** command in EXEC or administration EXEC mode.

show license allocated [*feature-id*] **location** *node-id* **sdr** *sdr-name*

Syntax Description

<i>feature-id</i>	(Optional) Identifier for the feature entitled in the licenses to be displayed.
location <i>node-id</i>	(Optional) Specifies the location of the card. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
sdr <i>sdr-name</i>	(Optional) Displays the licenses in the specified secure domain router (SDR) license pool. The <i>sdr-name</i> argument is the name assigned to the SDR.

Command Default

No default behavior or values

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show license allocated** command displays all license information regarding licenses that are allocated to a slot but are not currently being used. You can display the information for a specific feature identifier, slot location, or SDR by using the available options.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example displays sample output from the **show license allocated** command:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show license allocated

FeatureID:
A9K-ADV-OPTIC-LIC
(Slot based, Permanent)
Status: Allocated 1
SDR: Owner
      Status: Operational:      1
      Locations with licenses: (Active/Allocated)
                             0/1/CPU0          (0/1)
```

See [Table 66: show license Field Descriptions, on page 970](#) for a description of the significant fields shown in the display.

show license available

To display all licenses that are not currently in use or allocated to specific slots, use the **show license available** command in EXEC or administration EXEC mode.

show license available *{feature-id| location node-id| sdr sdr-name}*

Syntax Description

<i>feature-id</i>	Identifier for the feature entitled in the licenses to be displayed.
location <i>node-id</i>	Specifies the location of the card. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
sdr <i>sdr-name</i>	Displays the licenses in the specified secure domain router (SDR) license pool. The <i>sdr-name</i> argument is the name assigned to the SDR.

Command Default

No default behavior or values

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show license available** command displays all licenses that currently are not being used or allocated to a specific slot. You can display only licenses with a specific feature identifier, slot location, or SDR by using the available options.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example displays sample output from the **show license available** command with only implicit licenses available:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show license available

FeatureID:
A9K-ADV-OPTIC-LIC
  (Slot based, Implicit[Remaining time: 90
days]) Status: Available 0 SDR: Owner Status: Available 0 Location: 0/1/CPU0 1 0/6/CPU0 1
```

The following example displays sample output from the **show license available** command with permanent licenses installed:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show license available

FeatureID:
A9K-ADV-OPTIC-LIC
  (Slot based, Permanent)
    Status: Available      7
      SDR: Owner Status:
        Available         7
```

See [Table 66: show license Field Descriptions, on page 970](#) for a description of the significant fields shown in the display.

show license backup

To display the backup license file, use the **show license backup** command in administration EXEC mode.

show license backup *file-name*

Syntax Description

<i>file-name</i>	Name of the backup license file.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.
Release 4.0.0	Command output was changed.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show license backup** command displays the UDI information and license summary of a backup database, so that you can confirm the contents of a particular backup file before restoring it. Create the backup license file using the **license backup** command. Restore licenses from a backup using the **license restore** command.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example shows sample output from the **show license backup** command:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show license backup disk0:/lic_backup.pkg

Tue Jul 27 17:12:44.982 pst

Local Chassis UDI Information:
  S/N          : FOX1316G5TL
  Operation ID: 9
```

```

FeatureID: A9K-ADV-OPTIC-LIC (Slot based, Permanent)
Total licenses 1
  Pool: Owner 1
    Allocated Node(s):
      0/0/CPU0 1 [Owner]

FeatureID: A9K-ADV-VIDEO-LIC (Slot based, Evaluation)
Total licenses 1
  Pool: Owner 1
    Allocated Node(s):
      0/RSP0/CPU0 1 [Owner]

FeatureID: A9K-AIP-LIC-B (Slot based, Permanent)
Total licenses 2
  Pool: Owner 2
    Allocated Node(s):
      0/6/CPU0 1 [Owner]
      0/1/CPU0 1 [Owner]

FeatureID: A9K-AIP-LIC-E (Slot based, Permanent)
Total licenses 2
  Pool: Owner 2
    Allocated Node(s):
      0/4/CPU0 1 [Owner]

FeatureID: A9K-iVRF-LIC (Slot based, Permanent)
Total licenses 1
  Pool: Owner 1

FeatureID: A9K-iVRF-LIC (Slot based, Evaluation)
Total licenses 3
  Pool: Owner 3
    Allocated Node(s):
      0/1/CPU0 1 [Owner]

```

Table 67: show license backup Field Descriptions

Field	Description
S/N	Chassis serial number.
Operation ID	License operation ID number. The license operation ID is incremented by the license manager every time there is a successful license add or remove operation.
FeatureID	Feature to which the licenses apply.
Type	Type of license: slot-based or chassis-based; permanent, evaluation, or implicit.
#installed	Number of such licenses installed.

Related Commands

Command	Description
license backup	Backs up all licenses contained on the persistent storage of the router.
license restore	Restores the licenses on a router using an earlier backup copy.

show license chassis

To display all licenses with their serial number information, use the **show license chassis** command in administration EXEC mode.

show license chassis

Syntax Description

This command has no keywords or arguments.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
pkg-mgmt	read

show license evaluation

To display information about any evaluation licenses currently allocated, available, or in use, use the **show license evaluation** command in EXEC or administration EXEC mode.

show license evaluation [*feature-id*] **location** *node-id* **sdr** *sdr-name*]

Syntax Description

<i>feature-id</i>	(Optional) Identifier for the feature entitled in the licenses to be displayed.
location <i>node-id</i>	(Optional) Specifies the location of the card. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
sdr <i>sdr-name</i>	(Optional) Displays the licenses in the specified secure domain router (SDR) license pool. The <i>sdr-name</i> argument is the name assigned to the SDR.

Command Default

No default behavior or values

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show license evaluation** command displays information regarding any evaluation licenses that are currently allocated, available, or in use, including the number of days left until they expire. You can display the information for a specific feature identifier, slot location, or SDR by using the available options.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example displays sample output from the **show license evaluation** command:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show license evaluation

FeatureID: XC-L3VPN (Non slot based, Evaluation[Valid])
Valid for 2day(s) from 15:13:16 Nov 17 2006
Remaining time: 1 day(s) 21:07:46
Status: Available      6      Allocated      0      Active      0
   SDR: Owner
      Status: Available      6      Operational:      0
```

See [Table 66: show license Field Descriptions](#), on page 970 for a description of the significant fields shown in the display.

show license expired

To display information regarding evaluation licenses that have expired, use the **show license expired** command in EXEC or administration EXEC mode.

show license expired [*feature-id*] **location** *node-id* **sdr** *sdr-name*]

Syntax Description

<i>feature-id</i>	(Optional) Identifier for the feature entitled in the licenses to be displayed.
location <i>node-id</i>	(Optional) Specifies the location of the card. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
sdr <i>sdr-name</i>	(Optional) Displays the licenses in the specified secure domain router (SDR) license pool. The <i>sdr-name</i> argument is the name assigned to the SDR.

Command Default

No default behavior or values

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show license expired** command displays information regarding evaluation licenses that have expired. You can display the information for a specific feature identifier, slot location, or SDR by using the available options.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example displays sample output from the **show license expired** command:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show license expired

FeatureID: XC-L3VPN (Non slot based, Evaluation[Expired])

Status: Available 6 Allocated 0 Active 0

SDR: Owner

Status: Available 6 Operational: 0
```

See [Table 66: show license Field Descriptions](#), on page 970 for a description of the significant fields shown in the display.

show license features

To display all features that can be licensed on the router, use the **show license features** command in administration EXEC mode.

show license features

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Administration EXEC

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	pkg-mgmt	read

Examples The following example illustrates sample output from the **show license features** command.

```
RP/0/RSP0/CPU0:router(admin)# show license features
Tue Aug 18 06:36:09.180 DST

Platform Feature ID:
  A9K-G709-LIC
  A9K-VidMon-LIC
  A9K-iVRF-LIC
  A9K-AIP-LIC-B
  A9K-AIP-LIC-E
```

show license file

To display all the XML license files that have been added to a router, use the **show license file** command in administration EXEC mode.

show license file

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Administration EXEC

Command History	Release	Modification
	Release 4.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	pkg-mgmt	read

Examples The following example shows sample output from the **show license file** command:

```
RP/0/RSP0/CPU0:router(admin)# show license file
```

```
Wed Aug  4 03:01:53.506 DST
License File Info:
```

```
Store Name: Permanent
Store Index: 1
License Line:11 A9K-ADV-OPTIC-LIC 3.9 LONG NORMAL STANDALONE EXCL 1_KEYS INFINITE_KEYS
NEVER NEVER NiL SLM_CODE CL ND LCK NiL *14BFZ88N4WTJ7GU400 NiL NiL NiL 5_MINS
<UDI><PID>ASR-9010-AC</PID><SN>FOX1232H67M</SN></UDI><SEQ>0</SEQ>
q:1jK6WAO14od1xDXWnQ3J6xDiU1o1aCgQLgCXrnqsLmnGFo78DkiH9E0GWQzabIVe4jB9EUAe5u:
N8eDRPXcfZjGwcgBECfKU40PobqbfQVkeVa:LRYQG2poKwPPHYaRVym0MMluk7n46Awe6GZJcBLX
Store Name: Permanent
Store Index: 2
License Line:11 A9K-ADV-VIDEO-LIC 3.9 LONG NORMAL STANDALONE EXCL 1_KEYS INFINITE_KEYS
NEVER NEVER NiL SLM_CODE CL ND LCK NiL *14BFZ88N4WTJ7GU400 NiL NiL NiL 5_MINS
<UDI><PID>ASR-9010-AC</PID><SN>FOX1232H67M</SN></UDI><SEQ>1</SEQ>
,WGrW73h2JqIhAwAt6dQVhKICQaivZh:eW4ZYJ2c6wLlE1ln0f9eEsU2hwv6V1KKLRo0S2AeLSrBp85nJLO
```

```

8yCvmzUnQrCYojSFHAcpu2aRmfFVxR1BNBMUf7Ik,Urcg16fMaLQc58X0JFUpwM86Hkz2LV

Store Name: Permanent
Store Index: 3
License Line:11 A9K-AIP-LIC-B 3.9 LONG NORMAL STANDALONE EXCL 1 KEYS INFINITE KEYS
  NEVER NEVER NiL SLM_CODE CL ND LCK NiL *14BFZ88N4WTJ7GU400 NiL NiL NiL 5_MINS
  <UDI><PID>ASR-9010-AC</PID><SN>FOX1232H67M</SN></UDI><SEQ>2</SEQ>
7:Pr2QJwiHdoYnhjRPs13i09kpWOj:
  ,sNex7JziswOf7A9IDCzuZ48e4qRl4QSFELQHLwT6rfWUbKt4Yt,OoXV876r1M:3APZS4pPxzNQd03NwVak0HP,

  YZq7jRh8H,HEVwf2FrNcwqEpVdEpkS4tiufs

Store Name: Permanent
Store Index: 4
License Line:11 A9K-AIP-LIC-E 3.9 LONG NORMAL STANDALONE EXCL 1 KEYS INFINITE KEYS
  NEVER NEVER NiL SLM_CODE CL ND LCK NiL *14BFZ88N4WTJ7GU400 NiL NiL NiL 5_MINS
  <UDI><PID>ASR-9010-AC</PID><SN>FOX1232H67M</SN></UDI><SEQ>3</SEQ> F44b2Phw6KdqjSnFPU,
  QL7oJjk9qlsyjp1XuD3wZBGfDb0TsUx:QPKx5ee:xrbOf7ib,OxtDNojwpFbdGMQt8Vo02sAkpak7ezSyVD:I:

  46VvFYd4:WsO87aa8kVgRJGM3RsixQ1tiKk7deWfIygtlofr

Store Name: Permanent
Store Index: 5
License Line:11 A9K-iVRF-LIC 3.9 LONG NORMAL STANDALONE EXCL 1 KEYS INFINITE KEYS NEVER
  NEVER NiL SLM_CODE CL ND LCK NiL *14BFZ88N4WTJ7GU400 NiL NiL NiL 5_MINS
  <UDI><PID>ASR-9010-AC</PID><SN>FOX1232H67M</SN></UDI><SEQ>4</SEQ> oYkxhBsT:bmcqh3CU9EbLb,

1LKltOknjPwjf7k83X7f0Xy:DZf1BXjgnTozUn7FCf0Jaya9L8lhhhS73k4AtrtVOsKvDmh7EdGWAu2WI78E3VnEfZka:

  uSHTBxhNpQ1Blpf0qj5UTH8QxLz6psFsi,KwVd

```

show license log

To display the operational or administrative logs for the license system, use the **show license log** command in EXEC or administration EXEC mode.

show license log {**operational**|**administration**} [*request-id*][*feature-id*] **sdr** *sdr-name*}

Syntax Description

operational	Displays the operational logs for the license system.
administration	Displays the administration logs for the license system.
<i>request-id</i>	Identifier of a particular log entry.
<i>feature-id</i>	Identifier for the feature entitled in the licenses to be displayed.
sdr <i>sdr-name</i>	Displays the licenses in the specified secure domain router (SDR) license pool. The <i>sdr-name</i> argument is the name assigned to the SDR.

Command Default

No default behavior or values

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.9.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show license log** command displays the operational or administrative logs for the license system. The administrative log displays all licenses that are added, removed, or moved along with a timestamp and username of the person who initiated the request. This log persists across reloads. The operation log displays when a license was checked out or released by a feature. The license release can be done by the license manager if it detects that the feature is not responding. This log does not persist between reloads.

You can display license information for a specific feature identifier or SDR by using the available options.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example displays sample output from the **show license log** command:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show license log operational
#ID   :SDR      :FeatureID   :NodeID   :Time:    Log
1     :Owner   :
A9K-ADV-OPTIC-LIC
      :0/6/CPU0  :Tue Feb  6 21:33:16 2007:
      license_acquire: opaque_string , result(No error)
2     :Owner   :
A9K-ADV-OPTIC-LIC
      :0/1/CPU0  :Tue Feb  6 21:33:16 2007:
      license_acquire: opaque_string , result(No error)
```

See [Table 66: show license Field Descriptions, on page 970](#) for a description of the significant fields shown in the display.

show license pools

To display the currently configured set of license pools, use the **show license pools** command in administration EXEC mode.

show license pools [detail]

Syntax Description	detail	(Optional) Displays the locations of the licenses in each pool.

Command Default No default behavior or values

Command Modes Administration EXEC

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show license pools** command displays all license pools, and the features that are enabled with the licenses in each pool. By default, all licenses are contained in the owner SDR pool. If you have created SDR license pools with the **license pool create** command, you can place licenses in separate pools.

Task ID	Task ID	Operations
	pkg-mgmt	read

Examples The following example displays sample output from the **show license pools** command. In this example, the owner SDR has both 40-Gbps and Layer_3 VPN licenses, while the SDR sdr2 has only 40-Gbps licenses.

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show license pools

Pool Name      Feature
=====
Owner
A9K-ADV-OPTIC-LIC
```

Table 68: show license pools Field Descriptions

Field	Description
Owner	SDR license pool.
Feature	Feature that is enabled in the specified license pool.

show license udi

To display unique device identifier (UDI) information for the router, use the **show license udi** command in administration EXEC mode.

show license udi

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes Administration EXEC

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show license udi** command displays the complete UDI of the router to which any license is associated. The UDI comprises the chassis serial number, along with a license operation ID number. The UDI is used to acquire a license file using the license registration tool on CCO. The license tool is located at <https://tools.cisco.com/SWIFT/Licensing/RegistrationServlet?>

Task ID	Task ID	Operations
	pkg-mgmt	read

Examples The following example displays sample output from the **show license udi** command:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show license udi
Mon Apr 26 06:40:06.234 DST

Local Chassis UDI Information:
  PID       : ASR-9010-AC
  S/N       : FOX1232H67M
  Operation ID: 5
```

Table 69: show license udi Field Descriptions

Field	Description
PID	Product ID number.
S/N	Chassis serial number.
Operation ID	License operation ID number. The license operation ID is incremented by the license manager every time there is a successful license add or remove operation.

show license status

To display the status of all relevant licenses, use the **show license status** command in administration EXEC mode.

show license status

Usage Guidelines

This command has no keywords or arguments.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 4.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operation
pkg-mgmt	read

Examples

The following example shows output from the **show license status** command:

```
RP/0/RSP0/CPU0:router(admin)# show license status

Sun Jul 18 05:25:09.855 DST
License Type Supported
  permanent   Non-expiring node-locked licenses
  evaluation   Expiring node-locked licenses

License Operation Supported
  add          Add license file to the system
  backup       Backup License
  move         Move licenses
  pool         License pool creation
  remove       Remove license file
  restore      Restore backedup licenses

Device Status
  Device Credential type: IMAGE
  Device Credential Verification: PASS
```

```
Rehost Type: Hardware
```

 `show license status`



Software Package Management Commands on the Cisco ASR 9000 Series Router

This chapter describes the Cisco IOS XR commands used to add packages to a router storage device, activate or deactivate packages, upgrade or downgrade existing packages, and display information about packages.

For detailed information about the concepts and tasks necessary to manage Cisco IOS XR software see *Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide*.

- [clear install boot-options, page 999](#)
- [clear install label, page 1001](#)
- [clear install log-history oldest, page 1003](#)
- [clear install rollback oldest, page 1005](#)
- [install abort, page 1007](#)
- [install activate, page 1009](#)
- [install add, page 1017](#)
- [install attach, page 1023](#)
- [install auto-abort-timer stop, page 1026](#)
- [install boot-options, page 1028](#)
- [install commit, page 1030](#)
- [install deactivate, page 1032](#)
- [install label, page 1038](#)
- [install remove, page 1041](#)
- [install rollback to, page 1044](#)
- [install verify healthcheck, page 1048](#)
- [show install, page 1051](#)
- [show install active, page 1054](#)
- [show install audit, page 1057](#)

- [show install auto-abort-timer, page 1061](#)
- [show install boot-options, page 1063](#)
- [show install committed, page 1065](#)
- [show install inactive, page 1069](#)
- [show install issu inventory, page 1073](#)
- [show install issu stage, page 1075](#)
- [show install log, page 1076](#)
- [show install package, page 1081](#)
- [show install pie-info, page 1085](#)
- [show install request, page 1088](#)
- [show install rollback, page 1090](#)
- [show install which, page 1094](#)
- [show issu-warm-reload control-protocol trace, page 1098](#)

clear install boot-options

To clear the boot options for a specified location or for all locations, use the **clear install boot-options** command in administration EXEC mode.

clear install boot-options [**location** {*node-id* | **all**}]

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies a node. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. The all keyword specifies all nodes.

Command Default

If no location is specified, the **clear install boot-options** command prompts you for confirmation and clears boot options for all locations.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **clear install boot-options** command to clear boot options that were set using the **install boot-options** command.

Task ID

Task ID	Operations
pkg-mgmt	read, write

Examples

The following example shows how to clear the boot options for all locations:

```
RP/0/RSP0/CPU0:router(admin)#clear install boot-options
Install operation 4 '(admin) clear install boot-options location all' started
by user 'salevy' via CLI at 14:03:34 DST Sat Mar 15 2008.
Proceed with clearing boot options for all nodes? [confirm]
Install operation 4 completed successfully at 14:03:49 DST Sat Mar 15 2008.
```

 clear install boot-options**Related Commands**

Command	Description
install boot-options	Sets the boot options for a specified node.
show install boot-options	Displays the boot options set for a specified location or for all locations.

clear install label

To clear a label from an installation rollback point, use the **clear install label** command in EXEC or administration EXEC mode.

clear install label *label*

Syntax Description

<i>label</i>	Label defined for an installation rollback point.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **clear install label** command to remove a label associated with an installation rollback point. Labels are assigned using the **install label** command.

Task ID

Task ID	Operations
pkg-mgmt	read, write

Examples

In the following example, the label `brians_smu` is removed from the associated installation rollback point.

```
RP/0/RSP0/CPU0:router# clear install label brians_smu
```

```
Install operation 6 'clear install label brians_smu' started by user 'usr'  
on SDR Owner via CLI at 09:28:04 DST Thu Aug 09 2007.  
Install operation 6 completed successfully at 09:28:04 DST Thu Aug 09 2007.
```

 clear install label**Related Commands**

Command	Description
install label	Adds a label or description to a state associated with a rollback point.

clear install log-history oldest

To clear the oldest log items from the installation history log, use the **clear install log-history oldest** command in EXEC or administration EXEC mode.

clear install log-history oldest *number*

Syntax Description	<i>number</i> Specifies the number of log entries to clear. The oldest log entries are cleared.

Command Default	No default behavior or values

Command Modes	EXEC Administration EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. Enter the clear install log-history oldest command in EXEC mode to clear the oldest installation history log entries only for the current secure domain router (SDR) user. (The log entries for the admin user are not cleared.) Enter the clear install log-history oldest command in administration EXEC mode to clear the oldest installation history log entries for all users. (This command impacts all users when entered in administration EXEC mode.) Use the <i>number</i> argument to specify the number of the old log entries to be deleted.

Task ID	Task ID	Operations
	pkg-mgmt	read, write

Examples	In the following example, the two oldest installation log history entries are cleared. Because this command is entered in EXEC mode, only the log entries for the current SDR user are deleted:

```
RP/0/RSP0/CPU0:router# clear install log-history oldest 2
```

clear install log-history oldest

```

Install operation 5 'clear install log-history oldest 2' started by user
'user_b' at 13:28:27 UTC Sat Aug 26 2006.
Info:      Successfully deleted the following historylog points:
Info:      1, 2
Install operation 5 completed successfully at 13:28:29 UTC Sat Aug 26 2006.

```

In the following example, the five oldest installation log history entries are cleared for all users in the system. Because this command is entered in administration EXEC mode, the log entries for all SDR users are deleted:

```

RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# clear install log-history oldest 5

Install operation 6 '(admin) clear install log-history oldest 5' started by
user 'user_b' at 13:35:50 UTC Sat Aug 26 2006.
Info:      Successfully deleted the following historylog points:
Info:      1, 2, 3, 4, 5
Install operation 6 completed successfully at 13:35:50 UTC Sat Aug 26 2006.

```

Related Commands

Command	Description
show install log	Displays the entries stored in the logging installation buffer.
clear install rollback oldest	Deletes saved installation points from the installation buffer.

clear install rollback oldest

To delete saved installation points from the installation buffer, use the **clear install rollback oldest** command in EXEC or administration EXEC mode.

clear install rollback oldest *points*

Syntax Description

<i>points</i>	Number of saved installation points to delete, beginning with the oldest saved installation point.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Command Modes

Enter the **clear install rollback oldest** command in administration EXEC or EXEC mode.

Task ID

Task ID	Operations
pkg-mgmt	read, write

Examples

In the following example, the **show install rollback ?** command is used to display the available rollback points. The **clear install rollback oldest 2** command is then used to delete the two oldest rollback points. The **show install rollback ?** command is used again to display the remaining rollback points.

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show install rollback ?

 0  ID of the rollback point to show package information for
```

clear install rollback oldest

```

2  ID of the rollback point to show package information for
4  ID of the rollback point to show package information for
9  ID of the rollback point to show package information for
10 ID of the rollback point to show package information for

```

RP/0/RSP0/CPU0:router(admin)# **clear install rollback oldest 2**

Install operation 11 'clear install rollback oldest 2' started by user 'user_b' at 18:11:19 UTC Sat Apr 08 2006.

Info: Successfully deleted the following rollback points:

Info: 0, 2

Install operation 11 completed successfully at 18:11:21 UTC Sat Apr 08 2006.

RP/0/RSP0/CPU0:router(admin)# **show install rollback ?**

```

4  ID of the rollback point to show package information for
9  ID of the rollback point to show package information for
10 ID of the rollback point to show package information for

```

Related Commands

Command	Description
install rollback to	Rolls back the software set to a saved installation point or to the last committed installation point.
show install log	Displays the entries stored in the logging installation buffer.
show install rollback	Displays the software set associated with a saved installation point.

install abort

To abort an installation transaction, use the **install abort** command in administration EXEC mode.

install abort [*request-id*]

Syntax Description

<i>request-id</i>	(Optional) Request ID assigned to an installation operation.

Command Default

Abort the current installation operation.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	This command was removed from EXEC mode.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **install abort** command to halt a software installation operation that is in process or that has been suspended.

Only activation, deactivation, and rollback operations can be aborted. Specifically, the **install abort** command cannot be aborted, but the **install add** command with the **activate** keyword can be aborted.

Use the **install abort** command with the *request-id* argument to halt a specific installation operation if the *request-id* is currently in process.

Task ID

Task ID	Operations
pkg-mgmt	read, write

Examples

The following example shows how to halt an installation operation:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install abort
```

Info: Please confirm your 'install abort' request by pressing Enter or y, or pressing n to

```
cancel it.  
Do you really want to abort install operation 15? [confirm] <enter>  
Abort confirmed.  
Please check console to verify the operation is aborted.
```

Related Commands

Command	Description
install activate	Adds software functionality to the active software set.
install add	Adds the contents of a PIE file to a storage device .
install deactivate	Removes a package from the active software set.

install activate

To add software functionality to the active software set, use the **install activate** command in administration EXEC mode.

install activate {*device:package*| **id** *add-id*} [**auto-abort-timer** *time*] [**location** *node-id*] [**issu**] [**if-active**] [**asynchronous**| **synchronous**] [**parallel-reload**] [**prompt-level** {**default**| **none**}] [**test**] [**pause sw-change**]

Syntax Description

<i>device:package</i>	Device and package, expressed in concatenated form (for example, disk0:asr9k-mgbl-4.0.0). For the <i>device</i> argument, the value is a specified storage device, typically disk0:. This is the local storage device where the package was added with the install add command. Press ? after a partial package name to display all possible matches available for activation. If there is only one match, press the Tab key to fill in the rest of the package name. Up to 16 device–package pairs can be specified. Note Multiple packages can be activated at one time. Up to 16 packages can be specified in a single install activate command. Multiple packages can be specified using the wildcard syntax, for example, harddisk:*4.0*. If multiple Software Maintenance Upgrades (SMUs) are activated, some SMUs may require a reload. If the operation requires a node reload, the user is prompted before the installation operation occurs.
id <i>add-id</i>	Specifies the ID number of an install add operation. The command activates all packages that were added in the specified install add operation. The ID number of an install add operation is indicated in the syslog displayed during the operation and in the output of the show install log command. Up to 16 install add operations can be specified.
auto-abort-timer <i>time</i>	(Optional) Specifies an abort timer value, in minutes, which when expired loads the last committed loadpath.
location <i>node-id</i>	(Optional) Activates a package on the designated node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation. Note A package cannot be activated on a single node unless some version of the package being activated is already active on all nodes. For example, a Multiprotocol Label Switching (MPLS) package cannot be active on only one node. If a version of the MPLS package is already active on all nodes, an MPLS package then could be upgraded or downgraded on a single node. Note To activate a package on all supported nodes, do not specify a location.

issu	Performs an in-service software upgrade.
if-active	(Optional. Administration EXEC mode only) Activates an optional package or SMU for an optional package only if an earlier version of the package is already active.
asynchronous	(Optional) Performs the command in asynchronous mode. In asynchronous mode, the command runs in the background, and the EXEC prompt is returned as soon as possible. This is the default mode.
synchronous	(Optional) Performs the command in synchronous mode. This mode allows the installation process to finish before the prompt is returned.
parallel-reload	(Optional) Forces all cards on the router to reload at the same time and then come up with the new software, rather than proceeding according to the option encoded in the install package.
prompt-level {default none}	(Optional) Specifies when you are prompted for input during the procedure. • default—You are prompted only when input is required by the operation. • none—You are never prompted.
test	(Optional) Verifies the effects of proposed operations without making changes to the Cisco IOS XR software.
pause sw-change	(Optional) Pauses the operation after the preparatory stage and before locking the configuration for the actual software change. While the operation is paused, you can perform configuration changes. You control the resumption of the operation from the command-line interface (CLI) prompt.

Command Default

Administration EXEC

- Package is activated for all supported nodes in the system.
- Operation is performed in asynchronous mode: The **install activate** command runs in the background, and the EXEC prompt is returned as soon as possible.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Release	Modification
Release 4.0.0	This command was removed from EXEC mode. Support for the sdr keyword was removed.
Release 4.1.0	The auto-abort timer was changed to enabled by default. The off keyword was added to disable the auto-abort timer. The issu keyword was added.

Usage Guidelines

Use the **install activate** command to activate software packages or SMUs for all valid cards. Information within the package is used to verify compatibility with the target cards and with the other active software. Actual activation is performed only after the package compatibility and application program interface (API) compatibility checks have passed.

Specifying Packages to Activate

You can either use the **id add-id** keyword and argument to activate all packages that were added in one or more specific **install add** operations, or specify packages by name. The operation ID of an **install add** operation is indicated in the syslog displayed during the operation and in the output of the **show install log** command. If you specify packages according to operation ID, all the packages that were added by the specified operation must still be on the router.

Upgrading and Downgrading Packages

- To upgrade a package, activate the later version of the package; the earlier version is automatically deactivated.
- To downgrade a package, activate the earlier version of the package; the later version is automatically deactivated.



Caution

Downgrading to Cisco IOS XR Software Release 3.7.0 or earlier is not supported if you are using a FAT32 flash disk. If you are using a FAT32 flash disk, and you must downgrade, convert the flash disk to FAT16 before downgrading. If you do not convert the flash disk to FAT16 before the downgrade, the disk becomes unreadable and the router does not boot. Converting from FAT32 to FAT16 is a complex procedure.



Note

Activating a Software Maintenance Update (SMU) does not cause any earlier SMUs, or the package to which the SMU applies, to be automatically deactivated.

Activating New Versions of the Currently Active Packages

Use the **install activate** command with the **if-active** keyword to activate the package only on SDRs where an earlier version of the package is already active. This command is available only in administration EXEC mode.

The **if-active** keyword is used only for optional packages or SMUs for optional packages.

Router Reloads Following Package Activation

If the activation requires a reload of the SDR, a confirmation prompt appears. Use the **install activate** command with the **prompt-level none** keywords to automatically ignore any reload confirmation prompts and proceed with the package activation. The router reloads if required.

Node Reloads Following Package Activation

If the software activation requires a router reload, a confirmation prompt appears.

Node Reloads Following Package Activation

If a software operation requires a node reload, the config-register for that node should be set to autoboot. If the config-register for the node is not set to autoboot, the system automatically changes the setting and the node reloads. A message describing the change is displayed.

Synchronous Mode

Use the **install activate** command with the **synchronous** keyword to complete the operation before the prompt is returned. A progress bar indicates the status of the operation. For example:

```
- 1% complete: The operation can still be aborted (ctrl-c for options)
\ 10% complete: The operation can still be aborted (ctrl-c for options)
```

When the **install activate** command is run in asynchronous mode, the system may stay in synchronous mode for a short period of time while the system checks for questions to ask the user.

Press **Ctrl-C** during a synchronous operation to abort the operation or make the operation asynchronous.

Test Option

Use the **test** keyword to verify the effects of the proposed operations and determine whether the installation can be completed. After previewing the effects of the proposed operations, use the **show install log** command for more details about the effects of the proposed operations.

Auto-abort Option

Use the **auto-abort-timer** keyword to provide a safety mechanism for the instance that a package is activated and access to the router is lost. This option automatically rolls back to the current committed loadpath, thereby undoing any changes that are activated with the **install activate** command. After the installation, if the activated software is working correctly, use the **install commit** command to cancel the timer and commit the new loadpath. The auto-abort timer is enabled to 60 minutes by default.



Note

The changes made to the active software set are not persistent during route processor (RP) reloads. Use the **install commit** command to make changes persistent.

Parallel Reload

Install operations are activated according to the method encoded in the package being activated. Generally, this method has the least impact for routing and forwarding purposes, but it may not be the fastest method from start to finish and can require user interaction by default. To perform the installation procedure as quickly as possible, you can specify the **parallel-reload** keyword. This action forces the installation to perform a

parallel reload, so that all cards on the router reload simultaneously and then come up with the new software. This impacts routing and forwarding, but it ensures that the installation is performed without other issues.

Pausing Before Configuration Lock

Use the **pause sw-change** keywords to pause the operation before locking the configuration. An **install activate** operation begins with preparatory steps, such as software checks, and then proceeds with the actual activation of the new software. The configuration is locked for the activation. If you specify the **pause sw-change** keywords, the operation pauses before locking the configuration and provides you with the option to hold the operation while you perform configuration changes, and you can proceed with the activation whenever you choose. This action is useful, for example, if your workflow involves configuring a router out of the network during software installation and you want to minimize the time that the router is out of the network. You can specify these keywords for both asynchronous and synchronous operations. In both cases, follow the onscreen instructions to control the pausing and completion of the operation.

ISSU

Note the following prerequisites before activating software packages using ISSU:

- You must have a sufficient amount of free memory available on the line cards being upgraded.

Line Card	Part Numbers	Required Memory ³
Cisco ASR 9000 Series 24-Port 10 Gigabit Ethernet Line Cards Cisco ASR 9000 Series 36-Port 10 Gigabit Ethernet Line Cards	A9K-24X10GE-xx A9K-36X10GE-xx	1099 MB
Cisco ASR 9000 Series 2-Port 100 Gigabit Ethernet Line Cards	A9K-2X100GE-xx	1091 MB
Cisco ASR 9000 Series Modular Line Cards	A9K-MOD80-xx A9K-MOD160-xx	1087 MB
SIP 700 for the ASR 9000 router	A9K-SIP-700	1563 MB
4-Port 10GE Medium Queue Line Card	A9K-4T-B	1071 MB
40-Port GE Medium Queue Line Card	A9K-40G-B	1071 MB
8-Port 10GE Medium Queue Oversubscribed Line Card	A9K-8T/4-B	1071 MB
2-Port 10GE, 20-Port GE Medium Queue Combo Line Card	A9K-2T20GE-B	1071 MB
8-Port 10GE Medium Queue Line Card	A9K-8T-B	711 MB
16-Port 10GE Medium Queue Oversubscribed Line Card	A9K-16/8T-B	711 MB
4-Port 10GE High Queue Line Card	A9K-4T-E	711 MB

Line Card	Part Numbers	Required Memory ³
40-Port GE High Queue Line Card	A9K-40G-E	711 MB
8-Port 10GE High Queue Oversubscribed Line Card	A9K-8T/4-E	711 MB
2-Port 10GE, 20-Port GE High Queue Combo Line Card	A9K-2T20GE-E	711 MB
8-Port 10GE High Queue Line Card	A9K-8T-E	711 MB

³ Approximate value for low to medium scale.

- You must have enough disk space for V1 and V2 images, PIEs and SMUs. This prerequisite is no different than that of a non-ISSU upgrade.
- All software packages currently running on the system must be included in the software upgrade image.
- Cisco recommends that you do a backup of the ASCII configuration before each upgrade.

Note the following restrictions regarding ISSU:

- Refer to your release notes for a complete list of hardware that cannot be upgraded during the ISSU process. If you have any non-supported hardware running in your system, the upgrade process automatically shuts them down and reloads them after the upgrade is complete.
- Ethernet OAM flaps after an ISSU upgrade.
- ISSU downgrade is not supported.

Task ID

Task ID	Operations
pkg-mgmt	execute

Examples

The following example shows how to display the packages available for activation using the online help system. In this example, ? is entered after a partial package name to display all possible matches:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install activate disk0:?
disk0:asr9k-mini-p-4.0.0   disk0:asr9k-mps-p-4.0.0   disk0:asr9k-mcast-p-4.0.0
disk0:asr9k-diags-p-4.0.0  disk0:asr9k-k9sec-p-4.0.0  disk0:asr9k-fpd-p-4.0.0
disk0:asr9k-mgbl-p-4.0.0
```

The following example shows how to activate a package that was installed in an **install add** operation that was assigned install operation id 2:

```
RP/0/RSP0/CPU0:router(admin)# install activate id 2

Install operation 3 '(admin) install activate id 2' started by user 'lab' via
CLI at 01:10:21 UTC Thu Jan 03 2010.
Info:      This operation will activate the following package:
```

```

Info:          disk0:asr9k-mcast-p-4.0.0
Info:          Install Method: Parallel Process Restart
The install operation will continue asynchronously.
Info:          The changes made to software configurations will not be persistent
Info:          across system reloads. Use the command '(admin) install commit' to
Info:          make changes persistent.
Info:          Please verify that the system is consistent following the software
Info:          change using the following commands:
Info:          show system verify
Info:          install verify packages
Install operation 3 completed successfully at 01:11:30 UTC Thu Jan 03 2008.

```

The following example shows how to activate a package on all nodes. Use the **install commit** command to make the changes persistent across DSDRSC reloads.

```

RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install activate disk0:asr9k-mpls-4.0.0 synchronous

Install operation 15 'install activate disk0:asr9k-mpls-p-4.0.0 synchronous'
started by user 'user_b' at 19:15:33 UTC Sat Apr 08 2010.
Info:          The changes made to software configurations will not be persistent
Info:          across system reloads. Use the command 'admin install commit' to make
Info:          changes persistent.
Info:          Please verify that the system is consistent following the software
Info:          change using the following commands:
Info:          show system verify
Info:          install verify
Install operation 15 completed successfully at 19:16:18 UTC Sat Apr 08 2010.

RP/0/RSP0/CPU0:router(admin)# install commit

Install operation 16 'install commit' started by user 'user_b' at 19:18:58 UTC
Sat Apr 08 2006.
Install operation 16 completed successfully at 19:19:01 UTC Sat Apr 08 2010.

```

The following example shows how to activate multiple software packages using the wildcard syntax:

```

RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install activate disk0:*4.0*

Install operation 2 '(admin) install activate disk0:*4.0*' started
by user 'user_a' via CLI at 04:30:01 PST Fri Dec 28 2009.
Info:          This operation will activate the following packages:
Info:          disk0:asr9k-fwgdg-4.0.0
Info:          disk0:asr9k-admin-4.0.0
Info:          disk0:asr9k-fpd-4.0.0
Info:          disk0:asr9k-diags-4.0.0
Info:          disk0:asr9k-mgbl-4.0.0
Info:          disk0:asr9k-mpls-4.0.0
Info:          disk0:asr9k-mcast-4.0.0
Info:          disk0:asr9k-k9sec-4.0.0
Warning:       The following packages are already active on the specified nodes:
Warning:       asr9k-admin-4.0.0
Warning:       asr9k-fwgdg-4.0.0
Warning:       Please check:
Warning:       - check the name of the packages being activated.
Warning:       - check the set of active packages using 'show install active'.
Info:          Install Method: Parallel Process Restart
Info:          The changes made to software configurations will not be
Info:          persistent across system reloads. Use the command '(admin)
Info:          install commit' to make changes persistent.
Info:          Please verify that the system is consistent following the
Info:          software change using the following commands:
Info:          show system verify
Info:          install verify packages
Install operation 2 completed successfully at 04:32:01 PST Fri Dec 28 2009.

```

Related Commands

Command	Description
install add	Adds the contents of a PIE file to a storage device .
install commit	Makes the current active software set persistent across RP reloads.
install deactivate	Removes a package from the active software set.

install add

To copy the contents of a package installation envelope (PIE) file to a storage device, use the **install add** command in administration EXEC mode.

install add [**source** *source-path*] **tar**] *file* [**activate** [**pause sw-change**] [**auto-abort-timer** *time*] [**location** *node-id*] [**issu**] [**asynchronous**|**synchronous**] [**parallel-reload**] [**prompt-level** {**default**|**none**}] [**if-active**]

Syntax Description

source <i>source-path</i>	(Optional) Specifies the source location of the PIE files to be appended to the PIE filenames. Location options are as follows: • disk0: • disk1: • compactflash: • harddisk: • ftp://username :password@hostname or ip-address/directory-path • rcp://username@hostname or ip-address/directory-path • tftp://hostname or ip-address/directory-path
tar	(Optional) Indicates that the PIE file is contained in a tar file.
<i>file</i>	Name and location of the PIE file (composite package) to install. If a source path location is specified using the source keyword, the <i>file</i> argument can be either a fully specified PIE file path, or a path to the PIE file relative to the source path. Note Up to 32 PIE files can be added to a device in a single install add operation. If the tar keyword is used, the <i>file</i> argument is a tar file that contains one or more PIE files, or directories containing PIE files. Up to 16 tar files can be added, out of the possible 32 install files.
activate	(Optional) Activates the package or packages. This option is run only if the install add operation is successful.
pause sw-change	(Optional) Pauses the operation before locking the configuration for the software activation. While the operation is paused, you can perform configuration changes. You control the resumption of the operation at the CLI prompt.
auto-abort-timer <i>time</i>	(Optional) Specifies an abort timer value, <i>time</i> , in minutes, which when expired loads the last committed loadpath.

location <i>node-id</i>	(Optional) Activates a package on the designated node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation. Note A package cannot be activated on a single node unless some version of the package being activated is already active on all nodes. For example, a Multiprotocol Label Switching (MPLS) package cannot be active on only one node. If a version of the MPLS package is already active on all nodes, an MPLS package then could be upgraded or downgraded on a single node.
issu	Performs an in-service software upgrade. Refer to the install activate command for more detailed information.
asynchronous	(Optional) Performs the command in asynchronous mode. In asynchronous mode, this command runs in the background, and the EXEC prompt is returned as soon as possible. This is the default mode.
synchronous	(Optional) Performs the command in synchronous mode. This mode allows the installation process to finish before the prompt is returned.
parallel-reload	(Optional) Forces all cards on the router to reload at the same time and then come up with the new software, rather than proceeding according to the option encoded in the install package.
prompt-level { default none }	(Optional) Specifies when you are prompted for input during the procedure. • default—You are prompted only when input is required by the operation. • none—You are never prompted.
if-active	(Optional. Administration EXEC mode only.) Activates the optional packages only if a version is already active.

Command Default

Packages are added to the storage device, but are not activated.

The operation is performed in asynchronous mode. The **install add** command runs in the background, and the EXEC prompt is returned as soon as possible.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	This command was removed from EXEC mode. The sdr keyword was removed.
Release 4.1.0	The issu keyword was added.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **install add** command to unpack the package software files from a PIE file and copy them to the boot device (usually disk0:).

The package software files are added to the boot device of the designated secure domain router system controller (SDRSC) for all SDRs on the router, as well as all active and standby Route Processors (RPs) and fabric shelf controllers (SCs) installed on the router.

Adding and Activating a Package

Software packages remain inactive until activated with the [install activate, on page 1009](#) command.

To add and activate a package at the same time, use the **install add** command with the **activate** keyword. When this command is used, the keywords and rules for package activation apply. See [install activate, on page 1009](#) for more information.

**Note**

SDR-specific activation is supported for specific packages and upgrades, such as optional packages and Software Maintenance Upgrades (SMUs). Packages that do not support SDR-specific activation can be activated for all SDRs simultaneously only from administration EXEC mode. For detailed instructions, see the *Managing Cisco IOS XR Software Packages* module of *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

**Note**

If a software activation requires a node reload, the config-register for that node should be set to autoboot. If the config-register for the node is not set to autoboot, then the system automatically changes the setting and the node reloads. A message describing the change is displayed.

Synchronous Mode

Use the **install add** command with the **synchronous** keyword to complete the operation before the prompt is returned. A progress bar indicates the status of the operation. For example:

```
- 1% complete: The operation can still be aborted (ctrl-c for options)
```

\ 10% complete: The operation can still be aborted (ctrl-c for options)

TFTP Services and Image Size

Some Cisco IOS XR images may be larger than 32 MB, and the TFTP services provided by some vendors may not support a file this large. If you do not have access to a TFTP server that supports files larger than 32 MB:

- Download the software image using FTP or rcp.
- Use a third-party or freeware TFTP server that supports file sizes larger than 32 MB.

Adding tar Files

Use the **tar** keyword to add one or more PIE files in the tar file format. If the **tar** keyword is used, only a single tar file can be added.



Note

Multiple tar files or a combination of PIE and tar files is not supported.

Note the following regarding tar files:

- The *file* argument must include the complete location of the tar file.
- The tar file can contain only PIE files and directories containing PIE files. For example:
 - The tar file pies.tar containing the files x.tar and y.pie fails because x.tar is not a PIE file.
 - The tar file pies.tar containing the file x.pie and the directory dir_a, where dir_a contains a PIE file y.pie succeeds.
 - The tar file pies.tar containing the file x.pie and the directory dir_a, where dir_a contains a tar file y.tar fails because y.tar is not a PIE file.
 - The tar file pies.tar containing the PIE files x.pie, y.pie, ...*.pie succeeds.
- The **source** keyword is not supported with the **tar** keyword.

Following is a valid example of using the **tar** keyword:

```
RP/0/RSP0/CPU0:router(admin)# install add tar
tftp://223.255.254.254/install/files/pies.tar
```

You can add and activate tar files at the same time. In other words, the **install add** command is supported using the **tar** and the **activate** keywords simultaneously.

Adding Multiple Packages

To add multiple PIE files, use the **source** keyword to specify the directory path location of the PIE files. Then list all the PIE filenames, as necessary. This alleviates the need to repeat the directory location for each PIE file. Up to 32 files can be added, of which 16 can be tar files.

Following is an example of the **install add** command using the **source** keyword:

```
RP/0/0/CPU0:router(admin)# install add source
tftp://192.168.201.1/images/myimages/comp-asr9k-mini.pie
```



```
asr9k-mgbl-p.pie asr9k-mpls-p.pie
asr9k-mcast-p.pie
```

The following example also illustrates a valid use of the **install add** command with the **source** keyword:

```
RP/0/RSP0/CPU0:router(admin)# install add source
tftp://192.168.254.254/images/user/asr9k-mcast-p.pie
pies/asr9k-mpls-p.pie
ftp://1.2.3.4/other_location/asr9k-mgbl-p.pie
```

In the previous example, three PIE files are added from the following locations:

- tftp://192.168.254.254/images/user/asr9k-mcast-p.pie
- tftp://192.168.254.254/images/user/pies/asr9k-mpls-p.pie
- ftp://1.2.3.4/other_location/asr9k-mgbl-p.pie

Parallel Reload

Installation operations are activated according to the method encoded in the package being activated. Generally, this method has the least impact for routing and forwarding purposes, but it may not be the fastest method from start to finish and can require user interaction by default. To perform the installation procedure as quickly as possible, you can specify the **parallel-reload** keyword. This forces the installation to perform a parallel reload, so that all cards on the router reload simultaneously, and then come up with the new software. This impacts routing and forwarding, but it ensures that the installation is performed without other issues.

Pausing Activation Before Configuration Lock

If you specify the **activate** keyword, use the **pause sw-change** keywords to pause the software activation operation before locking the configuration. A software activation operation begins with preparatory steps, such as software checks, and then proceeds with the actual activation of the new software. The configuration is locked for the activation. If you specify the **pause sw-change** keywords, the operation pauses before locking the configuration and provides you with the option to hold the operation while you perform configuration changes, and proceed with the activation whenever you choose. This is useful, for example, if your workflow involves configuring a router out of the network during software installation and you want to minimize the time that the router is out of the network. You can specify these keywords for both asynchronous and synchronous operations. In both cases, follow the onscreen instructions to control the pausing and completion of the operation.

Task ID

Task ID	Operations
pkg-mgmt	execute

Examples

The following example shows how to add a PIE file for all SDRs in the system. In the following example, a Multiprotocol Label Switching (MPLS) package is added in synchronous mode. This operation copies the files required for the package to the storage device. This package remains inactive until it is activated with the **install activate** command.

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install add
tftp://209.165.201.1/asr9k-mpls.pie synchronous
```

```
Install operation 4 'install add /tftp://209.165.201.1/asr9k-mpls.pie synchronous'
```

```

    started by user
'user_b' at 03:17:05 UTC Mon Nov 14 2005.
Info:      The following package is now available to be activated:
Info:
Info:      disk0:asr9k-mpls-3.3.80
Info:
Install operation 4 completed successfully at 03:18:30 UTC Mon Nov 14 2005.

```

In the following example, a package is added and activated with a single command:

```

RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install add disk1:asr9k-mgbl-p.pie-3.8.0 activate
Install operation 4 'install add /disk1:asr9k-mgbl-p.pie-3.8.0 activate' started
by user 'user_b' at 07:58:56 UTC Wed Mar 01 2006.
The install operation will continue asynchronously.
:router(admin)#Part 1 of 2 (add software): Started
Info:      The following package is now available to be activated:
Info:
Info:      disk0:asr9k-mgbl-3.8.0
Info:
Part 1 of 2 (add software): Completed successfully
Part 2 of 2 (activate software): Started
Info:      The changes made to software configurations will not be persistent across
system reloads. Use the command 'admin install
Info:      commit' to make changes persistent.
Info:      Please verify that the system is consistent following the software change
using the following commands:
Info:      show system verify
Info:      install verify
Part 2 of 2 (activate software): Completed successfully
Part 1 of 2 (add software): Completed successfully
Part 2 of 2 (activate software): Completed successfully
Install operation 4 completed successfully at 08:00:24 UTC Wed Mar 01 2006.

```

Related Commands

Command	Description
install activate	Adds software functionality to the active software set.
install commit	Makes the current active software set persistent across RP reloads.
show install log	Displays the entries stored in the logging installation buffer.
show install request	Displays the list of incomplete installation manager requests.

install attach

To attach a terminal to an installation operation, use the **install attach** command in administration EXEC configuration mode.

install attach [*request-id*] [**asynchronous**|**synchronous**]

Syntax Description

<i>request-id</i>	(Optional) Request ID assigned to an installation operation.
asynchronous	(Optional) Performs the command in asynchronous mode. In asynchronous mode, this command runs in the background, and the EXEC prompt is returned as soon as possible. This is the default mode.
synchronous	(Optional) Performs the command in synchronous mode. This mode allows the installation process to finish before the prompt is returned.

Command Default

The command operates in synchronous mode.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	This command was removed from EXEC mode.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **install attach** command to attach a terminal to an installation operation. This is similar to making the installation operation synchronous, and is used for the following reasons:

- To change an asynchronous installation operation to a synchronous installation operation.
- The installation operation is asynchronous but the terminal that ran the command has been lost (due to a switchover or terminal timeout).

**Note**

An asynchronous operation runs in the background, and the EXEC prompt is returned as soon as possible. This is the default mode. A synchronous operation allows the installation process to finish before the prompt is returned.

Task ID

Task ID	Operations
pkg-mgmt	read, write

Examples

The following example, a software package is activated in asynchronous mode. In asynchronous mode, the command runs in the background, and the CLI prompt is returned as soon as possible.

Use the **install attach** command to attach the terminal to an installation operation. This switches the operation to synchronous mode, which allows the installation process to finish before the prompt is returned.

In the following example, the **install activate** command is entered in asynchronous mode. The CLI prompt returns before the operation is complete.

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install activate
disk0:asr9k-mcast-3.7.6
```

```
Install operation 14 'install activate
disk0:RP/0/RSP0/CPU0:router-mcast-3.7.6'
started by user 'user_b' at 08:04:31 UTC Mon Nov 14 2005.
The install operation will continue asynchronously.
```

```
RP/0/RSP0/CPU0:router(admin)#
Info: SDR Owner: Checking running configuration version compatibility with
Info: newly activated software ...
Info: SDR Owner: No incompatibilities found between the activated software
Info: and router running configuration.
```

In the following example, the **install attach** command is used to attach the terminal to the installation operation and complete the operation in synchronous mode. The CLI prompt is returned only after the installation operation is complete.

```
RP/0/RSP0/CPU0:router(admin)# install attach
```

```
Install operation 14 'install activate
disk0:asr9k-mcast-3.7.6'
started by user 'user_b' at 08:04:31 UTC Mon Nov 14 2005.
Info: SDR Owner: Checking running configuration version compatibility with
Info: newly activated software ...
Info: SDR Owner: No incompatibilities found between the activated software
Info: and router running configuration.
Info: The changes made to software configurations will not be persistent
Info: across system reloads. Use the command 'admin install commit' to make
Info: changes persistent.
Info: Please verify that the system is consistent following the software
Info: change using the following commands:
Info: show system verify
Info: install verify
```

```
The currently active software is not committed. If the system reboots
then the committed software will be used. Use 'install commit' to commit
the active software.
```

```
Install operation 14 completed successfully at 08:06:12 UTC Mon Nov 14 2005.
```

Related Commands

Command	Description
install activate	Adds software functionality to the active software set.
install add	Adds the contents of a PIE file to a storage device .
install deactivate	Removes a package from the active software set.

install auto-abort-timer stop

To deactivate the auto-abort-timer that is set in the **install activate** or **install deactivate** commands, use the **install auto-abort-timer stop** command in administration EXEC mode.

install auto-abort-timer stop

Syntax Description

This command has no keywords or arguments.

Command Default

When activated, the auto-abort-timer runs to expiration and then loads the last committed loadpath.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	This command was removed from EXEC mode.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **install auto-abort-timer stop** command to halt the auto-abort-timer that was activated with the **install activate** or **install deactivate** command. Alternatively, you can use the **install commit** command to halt the timer.

If you do not halt the auto-abort-timer, the software loads to the last committed loadpath when the timer expires. If the software has installed successfully, and you intend to continue using the new software, you should disable the auto-abort-timer.

Task ID

Task ID	Operations
pkg-mgmt	read, write

Examples

The following example shows how to halt the auto-abort-timer:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install auto-abort-timer stop
```

Related Commands

Command	Description
install activate	Adds software functionality to the active software set.
install commit	Makes the current active software set persistent across RP reloads.
install deactivate	Removes a package from the active software set.

install boot-options

To set boot options for a specified node, use the **install boot-options** command. Boot options include formatting and cleaning the disk in the specified node during the boot process.

install boot-options {**clean**|**format**} **location** *node-id*

Syntax Description

clean	Cleans the card installed in the specified node during the next reboot.
format	Formats the card installed in the specified node during the next reboot.
location <i>node-id</i>	Specifies a node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **install boot-options** command to clean or format a card during the next reboot. This command affects only the next reboot that a user initiates. To initiate a reboot during which the boot option you set are applied, reboot the card from a disk in another node. You can use the **hw-module location reload** command with the *path* argument to download a boot image using TFTP from a remote node. When the reboot is complete, the boot options are reset.

Task ID

Task ID	Operations
pkg-mgmt	read, write

Examples

The following example shows how to set the card located in node 0/0/CPU0 to be cleaned during the next reboot:

```
RP/0/RSP0/CPU0:router(admin)# install boot-options clean location 0/0/CPU0

Install operation 7 '(admin) install boot-options clean location 0/
RSP0/CPU0'
started by user '' via CLI at 09:15:46 GMT Mon Mar 10 2008.
Info:      The boot option will be in effect when the node is reloaded and will
Info:      be cleared when the node preparation is complete.
Install operation 7 completed successfully at 09:15:46 GMT Mon Mar 10 2008.
RP/0/RSP0/CPU0:router(admin)#
```

The following example shows how to set the card located in node 0/0/CPU0 to be formatted during the next reboot:

```
RP/0/RSP0/CPU0:router(admin)# install boot-options format location 0/0/CPU0

Install operation 8 '(admin) install boot-options format location 0/
RSP0/CPU0'
started by user '' via CLI at 09:15:52 GMT Mon Mar 10 2008.
Info:      The boot option will be in effect when the node is reloaded and will
Info:      be cleared when the node preparation is complete.
Install operation 8 completed successfully at 09:15:52 GMT Mon Mar 10 2008.
RP/0/RSP0/CPU0:router(admin)#
```

install commit

To save the active software set to be persistent across designated system controller (DSC) reloads, use the **install commit** command in administration EXEC mode.

install commit [**location** *node-id*]

Syntax Description

location <i>node-id</i>	(Optional. Administration EXEC mode only.) Specifies a node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation.

Command Default

Administration EXEC Mode: Commits the active software set for all SDRs.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	This command was removed from EXEC mode. Support for the sdr keyword was removed.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When a package is activated, it becomes part of the current running configuration. To make the package activation persistent across designated secure domain router shelf controller (DSDRSC) reloads, enter the **install commit** command. On startup, the DSDRSC of the SDR loads this committed software set.

If the system is restarted before the active software set is saved with the **install commit** command, the previously committed software set is used.

Task ID

Task ID	Operations
pkg-mgmt	read, write

Examples

The following example shows how to make the current active software set persistent across DSDRSC reloads for all SDRs in the system:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install commit

Install operation 16 'install commit' started by user 'user_b' at 19:18:58 UTC
Sat Apr 08 2006.
Install operation 16 completed successfully at 19:19:01 UTC Sat Apr 08 2006.
```

Related Commands

Command	Description
show install log	Displays the entries stored in the logging installation buffer.
show install committed	Displays committed active packages.

install deactivate

To remove a package from the active software set, use the **install deactivate** command in administration EXEC mode.

install deactivate {*id add-id*| *device:package* } [**auto-abort-timer** *time*] [**location** *node-id*] [**asynchronous**| **synchronous**] [**parallel-reload**] [**prompt-level** {**default**| **none**}] [**test**] [**pause sw-change**]

Syntax Description

id <i>add-id</i>	Specifies the ID number of an install add operation. The command deactivates all packages that were added in the specified install add operation. The ID number of an install add operation is indicated in the syslog displayed during the operation and in the output of the show install log command. Up to 16 install add operations can be specified.
device : <i>package</i>	Device and package, expressed in concatenated form (for example, disk0:asr9k-mgbl-3.8.0). For the <i>device</i> argument, the value is a specified storage device, typically disk0 . Press ? after a partial package name to display all possible matches available for activation. If there is only one match, press [TAB] to fill in the rest of the package name. Up to 32 <i>device : package</i> pairs can be specified.
auto-abort-timer <i>time</i>	(Optional) Specifies an abort timer value, <i>time</i> , in minutes, which when expired loads the last committed loadpath.
location <i>node-id</i>	(Optional) Deactivates a package from the designated node. The <i>node-id</i> argument is entered in <i>rack/slot/module</i> notation. Note In most cases, a package cannot be deactivated from a node, because some version of that package must be running on all supported nodes after the deactivation operation finishes.
asynchronous	(Optional) Performs the command in asynchronous mode. In asynchronous mode, this command runs in the background, and the EXEC prompt is returned as soon as possible. This is the default mode.
synchronous	(Optional) Performs the command in synchronous mode. This mode allows the installation process to finish before the prompt is returned.
parallel-reload	(Optional) Forces all cards on the router to reload at the same time and then come up with the new software, rather than proceeding according to the option encoded in the install package.
prompt-level { default none }	(Optional) Specifies when you are prompted for input during the procedure. • default—You are prompted only when input is required by the operation. • none—You are never prompted.

test	(Optional) Verifies the effects of proposed operations without making changes to the Cisco IOS XR software.
pause sw-change	(Optional) Pauses the operation after the preparatory stage and before locking the configuration for the actual deactivation. While the operation is paused, you can perform configuration changes. You control the resumption of the operation at the CLI prompt.

Command Default

The **install deactivate** operation is performed in asynchronous mode: The command runs in the background, and the router prompt is returned as soon as possible.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	This command was removed from EXEC mode. Support was removed for the sdr keyword.

Usage Guidelines

Deactivating a package removes the activated package from the active software set from all nodes or from a single node. When a deactivation is attempted, the system runs an automatic check to ensure that the package is not required by other active packages. The deactivation is permitted only after all compatibility checks have passed.

The following conditions apply to software deactivation:

- A feature package cannot be deactivated if active packages need it to operate.
- To downgrade a package, activate the earlier version. The later package version is deactivated automatically.

Specifying Packages to Deactivate

You can either use the **id add-id** keyword and argument to deactivate all packages that were added in one or more specific **install add** operations, or specify packages by name. The operation ID of an **install add** operation is indicated in the syslog displayed during the operation and in the output of the **show install log** command. If you specify packages according to operation ID, all the packages that were added by the specified operation must still be on the router.

Router Reloads

If the deactivation requires a router reload, a confirmation prompt appears. Use the **install deactivate** command with the **prompt-level none** keywords to automatically ignore any reload confirmation prompts and proceed with the package deactivation. The router reloads if required.

Node Reloads

If a software operation requires a node reload, the config-register for that node should be set to autoboot. If the config-register for the node is not set to autoboot, then the system automatically changes the setting and the node reloads. A message describing the change is displayed.

Synchronous Operation

Use the **install deactivate** command with the **synchronous** keyword to complete the operation before the prompt is returned. A progress bar indicates the status of the operation. For example:

```
- 1% complete: The operation can still be aborted (ctrl-c for options)
\ 10% complete: The operation can still be aborted (ctrl-c for options)
```

Test Option

Use the **test** keyword to verify the effects of the deactivation without making changes to the system. Use this option to determine if the deactivation can be completed. After previewing the effects of the proposed operations, use the [show install log, on page 1076](#) command for more details about the effects of the proposed operations.

Auto Abort Option

Use the **auto-abort-timer** keyword to provide a safety mechanism for the instance that a package is deactivated and for some reason access to the router is lost. This option automatically rolls back to the current committed loadpath, thereby undoing any changes that are deactivated with the **install deactivate** command. After the installation, if the activated software is working correctly, use the **install commit** command to cancel the timer and commit the new loadpath.

Use the [install commit, on page 1030](#) command to make changes persistent across route processor (RP) reloads.

Pausing Before Configuration Lock

Use the **pause sw-change** keywords to pause the operation before locking the configuration. The deactivation operation begins with preparatory steps, such as software checks, and then proceeds with the actual deactivation. The configuration is locked for the actual deactivation. If you specify the **pause sw-change** keywords, the operation pauses before locking the configuration and provides you with the option to hold the operation while you perform configuration changes, and proceed with the deactivation whenever you choose. This is useful, for example, if your workflow involves configuring a router out of the network during software changes and you want to minimize the time that the router is out of the network. You can specify these keywords for both asynchronous and synchronous operations. In both cases, follow the onscreen instructions to control the pausing and completion of the operation.

Task ID

Task ID	Operations
pkg-mgmt	execute

Examples

The following example shows how to display the packages available for deactivation using the online help system. In this example, **?** is entered after a partial package name to display all possible matches.

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install deactivate disk0:?

disk0:comp-asr9k-mini-3.8.0  disk0:asr9k-admin-3.8.0  disk0:asr9k-base-3.8.0
      disk0:asr9k-diags-3.8.0
disk0:asr9k-fwgdg-3.8.0      disk0:asr9k-k9sec-3.8.0  disk0:asr9k-lc-3.8.0
      disk0:asr9k-mcast-3.8.0
disk0:asr9k-mgbl-3.8.0      disk0:asr9k-mpis-3.8.0  disk0:asr9k-os-mbi-3.8.0.1
I  disk0:asr9k-rout-3.8.0
```

The following example shows how to deactivate a package on all supported nodes. The operation is performed in synchronous mode.

```
RP/0/RSP0/CPU0:router(admin)# install deactivate
disk0:asr9k-mpis-3.8.0 synchronous

Install operation 14 'install deactivate disk0:asr9k-mpis-3.8.0 synchronous'
started by user 'user_b' at 18:38:37 UTC Sat Apr 08 2006.
Info:      The changes made to software configurations will not be persistent
Info:      across system reloads. Use the command 'admin install commit' to make
Info:      changes persistent.
Info:      Please verify that the system is consistent following the software
Info:      change using the following commands:
Info:          show system verify
Info:          install verify
Install operation 14 completed successfully at 18:39:20 UTC Sat Apr 08 2006.
```

You cannot deactivate a package if other packages or nodes require that package. In the following example, an attempt to deactivate a package is rejected:

```
RP/0/RP0/CPU0:router(admin)# install deactivate disk0:asr9k-diags-3.7.90 location 0/6/cpu0

Install operation 25 'install deactivate disk0:asr9k-diags-3.7.90 on node
0/6/CPU0' started by user 'user_b' at 23:01:38 UTC Sat Apr 15 2009.
Error:      Cannot proceed with the deactivation because of the following package
Error:      incompatibilities:
Error:      asr9k-diags-3.7.90 on nodes of type RP needs asr9k-diags-3.7.90, or
Error:      equivalent, to be active on node 0/6/CPU0 on secure domain router
Error:      Owner.
Error:      asr9k-diags-3.7.90 on nodes of type SP needs asr9k-diags-3.7.90, or
Error:      equivalent, to be active on node 0/6/CPU0 on secure domain router
Error:      Owner.
Error:      asr9k-diags-3.7.90 on nodes of type LC needs asr9k-diags-3.7.90, or
Error:      equivalent, to be active on node 0/6/CPU0 on secure domain router
Error:      Owner.
Error:      Suggested steps to resolve this:
Error:          - check the installation instructions.
Error:          - activate or deactivate the specified packages on the specified
Error:      nodes.
Install operation 25 failed at 23:01:44 UTC Sat Apr 15 2009.
```

The following example shows how to deactivate a package, pausing the operation before locking the configuration for the actual software deactivation. While the operation is paused, you can enter a configuration mode and perform configurations. When you want to complete the operation, you enter the **install operation id complete** command or the **install operation id attach synchronous** command.

```
RP/0/RSP0/CPU0:router(admin)# install deactivate
disk0:comp-asr9k-3.8.0.07I.CSCsr09575-1.0.0
pause sw-change
```

```

Install operation 12 '(admin) install deactivate disk0:comp-asr9k-3.8.0.07I.CSCsr09575-1.0.0
    pause sw-change' started by user 'admin' via CLI at 09:06:26 BST Mon Jul 07 2008.
Info: This operation will reload the following nodes in parallel:
Info: 0/0/CPU0 (RP) (SDR: Owner)
Info: 0/1/CPU0 (LC(E3-GE-4)) (SDR: Owner)
Info: 0/5/CPU0 (LC(E3-OC3-POS-4)) (SDR: Owner)
Proceed with this install operation (y/n)? [y]
The install operation will continue asynchronously.
RP/0/RSP0/CPU0:ensoft-gsr13(admin)#
Info: Install Method: Parallel Reload
Info: Install operation 12 is pausing before the config lock is applied
    for the software change as requested by the user.
Info: No further install operations will be allowed until the operation
    is resumed.
Info: Please continue the operation using one of the following steps:
Info: - run the command '(admin) install operation 12 complete'.
Info: - run the command '(admin) install operation 12 attach synchronous'
    and then answer the query.

```

In the following example, the operation is synchronous and the **pause sw-change** keywords are used to pause the operation before configuration lock. In this case, you are prompted to enter one of three options at the pause stage: **abort**/**complete**/**cli**. If you enter **abort**, the operation is aborted. If you enter **complete**, the operation is immediately resumed. If you enter **cli**, the CLI prompt returns, enabling you to perform configurations before resuming the operation. Alternatively, you can leave the prompt open while you open a separate CLI session to perform configurations. Then, you can return to the prompt and enter **complete** when you are ready to resume the operation.

```

RP/0/RSP0/CPU0:router# install deactivate
disk0:asr9k-mpls-3.8.0.10I
sync pause sw-change
Wed Jul 23 14:42:11.273 UTC
Install operation 8 'install deactivate disk0:asr9k-mpls-3.8.0.10I
    synchronous pause sw-change' started by user 'salevy' on SDR
Owner via CLI at 14:42:12 UTC Wed Jul 23 2008.
Info:      Install Method: Parallel Process Restart
The install operation has paused before the configuration is locked as
    requested by user 'salevy'.
Please perform any changes to the configuration that are required before
    the operation is to continue.
How should the operation continue?
Abort the operation (abort)
Lock the config and complete the operation (complete)
Suspend the operation and return to the Command Line Interface (cli)
Please confirm an option (abort/complete/cli): [complete] cli
Use the command 'install operation 8 ?' to find how to continue the operation.

RP/0/RSP0/CPU0:router# install operation 8 ?

    abort      Abort the operation
    attach     Attach to the operation
    complete   Phase to run to end of

RP/0/RSP0/CPU0:router# install operation 8 complete

Wed Jul 23 14:43:04.562 UTC
RP/0/RSP0/CPU0:router# Info:      Install operation 8 has been resumed.
Info:      The changes made to software configurations will not be persistent
    across system reloads. Use the command '(admin)
Info:      install commit' to make changes persistent.
Info:      Please verify that the system is consistent following the
    software change using the following commands:
Info:      show system verify
Info:      install verify packages
Install operation 8 completed successfully at 14:43:53 UTC Wed Jul 23 2008.

```


Related Commands

Command	Description
install activate	Adds software functionality to the active software set.
install commit	Makes the current active software set persistent across RP reloads.
install remove	Deletes inactive packages from a storage device.
show install inactive	Displays inactive packages in the active software set.
show install log	Displays the entries stored in the logging installation buffer.
show install request	Displays the list of incomplete installation manager requests.

install label

To add a label or description to a state associated with a rollback point, use the **install label** command in administration EXEC mode.

install label *point-id* {**description** *description*| **label-name** *label*}

Syntax Description

<i>point-id</i>	Installation point ID number.
description <i>description</i>	Specifies a description for the specified rollback point.
label-name <i>label</i>	Specifies a label for the specified rollback point.

Command Default

No default behavior or values

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	This command was removed from EXEC mode.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **install label** command to put a label and description on an installation rollback point that can be used to identify the rollback point in other commands. Commands that support the rollback label include:

- **clear install rollback**
- **install rollback**
- **show install rollback**

The label can be a maximum of 15 characters which must adhere to the following rules:

- No white-space
- Cannot include any of the following CLI keywords:
 - **active**
 - **all**

- **asynchronous**
 - **brief**
 - **committed**
 - **description**
 - **detail**
 - **differences**
 - **from**
 - **force**
 - **inactive**
 - **install**
 - **label**
 - **label-name**
 - **location**
 - **noprompt**
 - **rollback**
 - **sdr**
 - **summary**
 - **synchronous**
 - **test**
 - **to**
 - **verbose**
- Cannot contain any of the following characters:
 - Comma (,)
 - Semi-colon (;)
 - Colon (:)
 - Single-quote (')
 - Double-quote ("")
 - Cannot contain uppercase alphabetic characters
 - Cannot contain numeric characters only

Task ID

Task ID	Operations
pkg-mgmt	read, write

Examples

The following example shows how to define a label for an installation operation:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install label 0 label-name brians-smu

Install operation 5 'install label 0 label-name brians_smu' started by user
'user' on SDR Owner via CLI at 09:26:43 DST Thu Aug 09 2007.
Install operation 5 completed successfully at 09:26:44 DST Thu Aug 09 2007.
```

Related Commands

Command	Description
install activate	Adds software functionality to the active software set.

install remove

To delete inactive packages from a storage device, use the **install remove** command in mode.

install remove {**id** *add-id*| *device:package*| **inactive**} [**prompt-level** {**default**| **none**}] [**asynchronous**| **synchronous**] [**test**]

Syntax Description

id <i>add-id</i>	Specifies the ID number of an install add operation. The command deletes all packages that were added in the specified install add operation. The ID number of an install add operation is indicated in the syslog displayed during the operation and in the output of the show install log command. Up to 16 install add operations can be specified
<i>device : package</i>	Device and package, expressed in concatenated form (for example, disk0:asr9k-mgbl-3.8.0). For the <i>device</i> argument, the value is a specified storage device, typically disk0: . Note Multiple packages can be removed at the same time. Up to 32 <i>device : package</i> pairs can be specified.
inactive	Removes all inactive, noncommitted packages from the boot device (usually disk0:).
prompt-level { default none }	(Optional) Specifies when you are prompted for input during the procedure. • default —You are prompted only when input is required by the operation. • none —You are never prompted.
asynchronous	(Optional) Performs the command in asynchronous mode. In asynchronous mode, this command runs in the background, and the EXEC prompt is returned as soon as possible. This is the default mode.
synchronous	(Optional) Performs the command in synchronous mode. This mode allows the installation process to finish before the prompt is returned.
test	(Optional) Verifies the effects of proposed operations without making changes to the Cisco IOS XR software.

Command Default

The operation is performed in asynchronous mode: The **install remove** command runs in the background, and the EXEC prompt is returned as soon as possible.

Command Modes

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Release	Modification
Release 4.0.0	This command was removed from EXEC mode. Support was removed for the sdr keyword.

Usage Guidelines

Note

Only inactive packages can be removed. (Packages cannot be in the active or committed software set.)

- To remove all inactive packages from the boot device (usually **disk0:**), use the **install remove** command with the **inactive** keyword.
- To remove a specific inactive package from a storage device, use the **install remove** command with the *device: package* arguments.



Note

When removing all inactive packages from the boot device, use the **show version**, **show install active**, or **show install committed** command to determine the device used as the boot device.

- To remove all packages that were added in one or more specific **install add** operations, use the **id add-id** keyword and argument. The operation ID of an **install add** operation is indicated in the syslog displayed during the operation and in the output of the **show install log** command. If you specify packages according to operation ID, all the packages that were added by the specified operation must still be on the router.

User Prompts

Use the **install remove** command with the **prompt-level none** keywords to automatically ignore any confirmation prompts and proceed with the package removal.

Test Operation

Use the **test** keyword to verify the effects of the package removal operation and determine whether the operation can be completed. After previewing the effects of the proposed operations, use the [show install log](#), on page 1076 command for more details about the effects of the proposed operations.



Note

When removing a package, note that the **install remove** command ignores secure domain router (SDR) boundaries and performs the operation in global scope.

Task ID

Task ID	Operations
pkg-mgmt	execute

Examples

The following example shows how to remove a specific inactive package. In this example, the operation is run in test mode. The operation is then confirmed and the package is removed.

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install remove
disk0:asr9k-diags-3.7.90 test

Install operation 30 'install remove disk0:asr9k-diags-3.7.90 test' started by user 'user_b'
at 23:40:22 UTC Sat Apr 15 2006.
Warning: No changes will occur due to 'test' option being specified. The
Warning: following is the predicted output for this install command.
Info: This operation will remove the following package:
Info: disk0:asr9k-diags-3.7.90
Info: After this install remove the following install rollback points will
Info: no longer be reachable, as the required packages will not be present:
Info: 4, 9, 10, 14, 15, 17, 18
Proceed with removing these packages? [confirm] y

The install operation will continue asynchronously.
Install operation 30 completed successfully at 23.
```

The following example shows how to remove all inactive packages from the boot device:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install remove inactive synchronous

RP/0/RSP0/CPU0:Aug 15 09:25:41.020 :
instdir[198]: %INSTALL-INSTMGR-6-INSTALL_OPERATION_STARTED :
Install operation 8 '(admin) install remove_inactive' started by user 'user_b'
Install operation 8 '(admin) install remove inactive' started by user 'user_b' at
09:25:41 UTC Tue Aug 15 2006.
Info: This operation will remove the following package:
Info: disk0:asr9k-compmgmt__installmgr-0.0.5
Proceed with removing these packages? [confirm]
The install operation will continue asynchronously.
```

Related Commands

Command	Description
install add	Adds the contents of a PIE file to a storage device .
show install log	Displays the entries stored in the logging installation buffer.
show install inactive	Displays inactive packages in the active software set.
show install request	Displays the list of incomplete installation manager requests.

install rollback to

To roll back the software set to a saved installation point or to the last committed installation point, use the **install rollback to** command in administration EXEC mode.

Administration EXEC Mode:

install rollback to {*point-id* | *label*} **committed** } [**auto-abort-timer** *time*] **location** *node-id* [**asynchronous** | **synchronous**] [**parallel-reload**] [**prompt-level** {**default** | **none**}] [**test**] [**pause sw-change**]

Syntax Description

<i>point-id</i>	Installation point ID number.
<i>label</i>	Label associated with an installation point.
committed	Rolls the Cisco IOS XR software back to the last committed installation point.
auto-abort-timer <i>time</i>	(Optional) Specifies an abort timer value, <i>time</i> , in minutes, which when expired loads the last committed loadpath.
location <i>node-id</i>	Specifies a node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation.
asynchronous	(Optional) Performs the command in asynchronous mode. In asynchronous mode, this command runs in the background, and the EXEC prompt is returned as soon as possible. This is the default mode.
synchronous	(Optional) Performs the command in synchronous mode. This mode allows the installation process to finish before the prompt is returned.
parallel-reload	(Optional) Forces all cards on the router to reload at the same time and then come up with the new software, rather than proceeding according to the option encoded in the install package.
prompt-level { default none }	(Optional) Specifies when you are prompted for input during the procedure. • default —You are prompted only when input is required by the operation. • none —You are never prompted.
test	(Optional) Verifies the effects of proposed operations without making changes to the Cisco IOS XR software.
pause sw-change	(Optional) Pauses the operation after the preparatory stage and before locking the configuration for the actual software change. While the operation is paused, you can perform configuration changes. You control the resumption of the operation at the CLI prompt.

Command Default

The operation is performed in asynchronous mode. The **install rollback to** command runs in the background, and the EXEC prompt is returned as soon as possible.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	This command was removed from EXEC mode. Support was removed for the sdr keyword.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **install rollback to** command to roll back the configuration to a saved installation point or to the last committed installation point. Rollback points are created when the router is booted and when packages are activated, deactivated, or committed. When an installation point is created, Cisco IOS XR software assigns an ID number to that rollback point. To roll back to a saved installation point, enter the installation point ID number assigned to it for the *point-id* argument. When a software configuration is committed with the **install commit** command, that configuration is also saved as the last committed installation point. Use the **committed** keyword to roll back to the last committed installation point.

Labels can be assigned to installation points using the **install label** command. Then these labels can be used to identify a specific installation point that you want to roll back to.

To display the saved rollback points available, use the online help function:

```
RP/0/RSP0/CPU0:router(admin)# install rollback to ?
0          Specify the id for the install point to rollback to
1          Specify the id for the install point to rollback to
12         Specify the id for the install point to rollback to
15         Specify the id for the install point to rollback to
2          Specify the id for the install point to rollback to
4          Specify the id for the install point to rollback to
6          Specify the id for the install point to rollback to
7          Specify the id for the install point to rollback to
8          Specify the id for the install point to rollback to
9          Specify the id for the install point to rollback to
committed Rollback to the last committed installation point
```

If a rollback operation is beyond two saved installation points, a router reload is required to avoid system instability. If a reload is required, a confirmation prompt appears before the reload occurs. Use the **install rollback to** command with the **prompt-level none** keywords to automatically ignore any reload confirmation prompts and proceed with the rollback operation.

If a software operation requires a node reload, the config-register for that node should be set to autoboot. If the config-register for the node is not set to autoboot, then the system automatically changes the setting and the node reloads. A message describing the change is displayed.

If a rollback operation requires that a package be activated that is no longer on the system (because the package had been removed), a message appears in the output of the **install rollback to** command indicating that the specified installation point is unavailable and that the required package must be added to roll back the software set to the specified installation point.

Use the **test** keyword to verify the effects of the proposed operations and determine whether the rollback operation can be completed. After previewing the effects of the proposed operations, use the **show install log** command for more details about the effects of the proposed operations.

Use the **clear install rollback oldest** command to delete saved installation points from the installation buffer.

Use the **show install rollback** command to display the software set associated with a saved installation point.

Pausing Before Configuration Lock

Use the **pause sw-change** keywords to pause the operation before locking the configuration. A rollback operation begins with preparatory steps, such as software checks, and then proceeds with the actual software change. The configuration is locked for the actual software change. If you specify the **pause sw-change** keywords, the operation pauses before locking the configuration and provides you with the option to hold the operation while you perform configuration changes, and proceed with the software change whenever you choose. This is useful, for example, if your workflow involves configuring a router out of the network during software change and you want to minimize the time that the router is out of the network. You can specify these keywords for both asynchronous and synchronous operations. In both cases, follow the onscreen instructions to control the pausing and completion of the operation.

Task ID

Task ID	Operations
pkg-mgmt	read, write

Examples

The following example shows how to roll back to a saved installation point:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# install rollback to 8

Install operation 10 'install rollback to 8' started by user
'user_b' at 07:49:26
UTC Mon Nov 14 2005.
The install operation will continue asynchronously.
RP/0/RSP0/CPU0:router(admin)#Info:
The changes made to software configurations will not be persistent
Info: across system reloads. Use the command
'admin install commit' to make
Info: changes persistent.
Info: Please verify that the system is consistent following
the software
Info: change using the following commands:
Info: show system verify
Info: install verify

The currently active software is the same as the committed
software.

Install operation 10 completed successfully at 07:51:24 UTC Mon
Nov 14 2005.
```

In the following example, the software is rolled back to the last committed installation point and the rollback is paused before configuration lock and then completed when the user enters the **install operation complete** command:

```
RP/0/RSP0/CPU0:router# install rollback to committed pause sw-change

Wed Jul 23 15:37:53.377 UTC
Install operation 16 'install rollback to committed pause sw-change'
  started by user 'userb' on SDR Owner via CLI at 15:37:54 UTC
Wed Jul 23 2008.
The install operation will continue asynchronously.
RP/0/RSP0/CPU0:router#Info: Install Method: Parallel Process Restart
Info: Install operation 16 is pausing before the config lock is
  applied for the software change as requested by the user.
Info: No further install operations will be allowed until the
  operation is resumed.
Info: Please continue the operation using one of the following
  steps:
Info: - run the command 'install operation 16 complete'.
Info: - run the command 'install operation 16 attach synchronous'
  and then answer the query.
RP/0/RSP0/CPU0:router# install operation 16 complete

Wed Jul 23 15:38:35.197 UTC
RP/0/RSP0/CPU0:router#Info: Install operation 16 has been resumed.
Info: The changes made to software configurations will not be persistent
  across system reloads. Use the command '(admin)
  install commit' to make changes persistent.
Info: Please verify that the system is consistent following the
  software change using the following commands:
Info:  show system verify
Info:  install verify packages
Install operation 16 completed successfully at 15:39:18 UTC Wed
  Jul 23 2008.

RP/0/RSP0/CPU0:router#
```

Related Commands

Command	Description
install commit	Makes the current active software set persistent across RP reloads.
install label	Adds a label or description to a state associated with a rollback point.
show install log	Displays the entries stored in the logging installation buffer.
show install request	Displays the list of incomplete installation manager requests.
clear install rollback oldest	Deletes saved installation points from the installation buffer.
show install rollback	Displays the software set associated with a saved installation point.

install verify healthcheck

To verify that processes and dynamic link libraries (DLLs) running on a node are correct, use the **install verify healthcheck** command in administration EXEC mode.

install verify healthcheck [**asynchronous**| **synchronous**] [**admin-profile**] [**location** *node-id*] [**repair**]

Syntax Description

asynchronous	(Optional) Performs the command in asynchronous mode. In asynchronous mode, this command runs in the background, and the EXEC prompt is returned as soon as possible. This is the default mode.
synchronous	(Optional) Performs the command in synchronous mode. This mode allows the installation process to finish before the prompt is returned.
admin-profile	(Optional. Administration EXEC mode only) Verifies the processes and DLLs in the administration profile only.
location <i>node-id</i>	(Optional) Verifies the consistency of previously installed software from the designated node with the package file from which it originated. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation.
repair	(Optional) Repairs anomalies found by the install verify healthcheck process.

Command Default

The operation is performed in asynchronous mode: The **install verify healthcheck** command runs in the background, and the EXEC prompt is returned as soon as possible.

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	This command was removed from EXEC mode. Support was removed for the sdr keyword.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **install verify healthcheck** command is responsible for verifying that processes and DLLs in use by the system are correct and are executing from the correct location.

**Note**

The **install verify healthcheck** command can take up to two minutes per package to process.

Task ID

Task ID	Operations
pkg-mgmt	execute

Examples

The following example shows how to use the **install verify healthcheck** command. This command is run in asynchronous mode:

```
RP/0/RSP0/CPU0:router# install verify healthcheck
```

```
Install operation 10 'install verify healthcheck' started by user
'userb' on SDR Owner via CLI at 04:56:49 UTC Thu Feb 22 2007.
The install operation will continue asynchronously.
```

```
Info:      This operation can take 1 minute to completion. Please be patient.
Info:      0/RP0/CPU0 [RP] [SDR: Owner]
Info:      DLLs and processes have right version.
Info:      0/RP1/CPU0 [RP] [SDR: Owner]
Info:      DLLs and processes have right version.
Info:      0/1/CPU0 [LC] [SDR: Owner]
Info:      /pkg/md5/f322c8dff20af6b765c8e8423899401a has wrong version.
Info:      0/6/CPU0 [LC] [SDR: Owner]
Info:      /pkg/md5/f322c8dff20af6b765c8e8423899401a has wrong version.
Info:      Health Check Summary:
Info:      0/RP0/CPU0 DLLs and processes have right version.
Info:      0/RP1/CPU0 DLLs and processes have right version.
Info:      0/1/CPU0 Process(es) with wrong version found.
Info:      0/6/CPU0 Process(es) with wrong version found.
Install operation 10 completed successfully at 04:56:50 UTC Thu Feb 22 2007.
```

The following example shows sample output from the **install verify healthcheck** command when there are problems that are repaired:

```
RP/0/RSP0/CPU0:router# admin
```

```
RP/0/RSP0/CPU0:router(admin)# install verify healthcheck repair
```

```
Info:      Node: 0/0/CPU0
Info:      process [ERROR] Anomalies Found.
Info:      process insthelper has version: 3.7.7
Info:      dll [SUCCESS] Health-check Successful.
Info:      Node: 0/3/CPU0
Info:      process [SUCCESS] Health-check Successful.
Info:      dll [ERROR] Anomalies Found.
Info:      dll verify has version 3.7.2.
Info:      Node: 0/RP0/CPU0
Info:      process [SUCCESS] Health-check Successful.
Info:      dll [SUCCESS] Health-check Successful.
Info:      Health Check Summary:
Info:      0/0/CPU0: ERROR.
Info:      0/3/CPU0: ERROR.
Info:      0/RP0/CPU0: SUCCESSFUL.
Info:      The processes can be repaired.
Info:      Repair begins
Info:      Restart insthelper on 0/0/CPU0...
Info:      Repair successful.
```

 install verify healthcheck

```
Info:      Repair ends..
```

Related Commands

Command	Description
show install log	Displays the entries stored in the logging installation buffer.
show install request	Displays the list of incomplete installation manager requests.

show install

To display active packages, use the **show install** command in EXEC or administration EXEC mode.

Administration EXEC Mode

show install [**detail**| **summary**| **verbose**] [**sdr** *sdr-name*| **location** *node-id*]

EXEC Mode

show install [**detail**| **summary**| **verbose**] [**location** *node-id*]

Syntax Description

detail	(Optional) Displays a detailed summary of the active packages for a system, secure domain router (SDR), or node.
summary	(Optional) Displays a summary of the active packages in a system or SDR. Use this command to display the default software profile for SDRs
verbose	(Optional) Displays a detailed summary of the active packages for a system, SDR, or node, including component and file information for each package.
sdr <i>sdr-name</i>	(Optional. Administration EXEC mode only.) Displays the active packages for a specific SDR. The <i>sdr-name</i> argument is the name assigned to the SDR. The only SDR available is Owner, which refers to the entire router.
location <i>node-id</i>	(Optional) Displays the active packages for a designated node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

**Note**

This command displays output that is similar to the **show install active** command.

Use the **show install** command to display the active software set for all nodes, or for specific nodes. Enter the command in administration EXEC mode to display information for all nodes in all SDRs.

Displaying Information for a Specific SDR

- To display information for a specific SDR from administration EXEC mode, use the **sdr sdr-name** keyword and argument.
- To display information for an SDR when logged into that SDR, enter the command in EXEC mode.

Displaying Information for a Specific Node

Use the **location node-id** keyword and argument to display information for a specific node. If you do not specify a location with the **location node-id** keyword and argument, this command displays information from all nodes.

Summary, Detailed, and Verbose Information

Use the **summary** keyword to display a summary of the active packages in a system or SDR. Use the **detail** keyword to display the active packages for each node in an SDR, or in all SDRs. Use the **verbose** keyword to display additional information, including component and file information for each package.

**Note**

This command displays output that is similar to the **show install active** command.

Displaying the Default SDR Software Profile

When an SDR is created, the nodes assigned to that SDR are configured with the default software profile. To view a summary of the default SDR software configuration, enter the **show install summary** command in administration EXEC mode. Any new nodes that are configured to become a part of an SDR boot with the default software profile listed in the output of this command.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

Use the **location node-id** keyword and argument to display the active packages for a designated node:

```
RP/0/RSP0/CPU0:router# show install location 0/rp0/cpu0

Mon May 31 06:49:47.768 DST
Node 0/RP0/CPU0 [HRP] [SDR: Owner]
  Boot Device: disk0:
  Boot Image: /disk0/asr9k-os-mbi-4.0.0.15I/mbihfr-rp.vm
  Active Packages:
```



```

disk0:asr9k-upgrade-p-4.0.0.15I
disk0:asr9k-k9sec-p-4.0.0.15I
disk0:asr9k-mpls-p-4.0.0.15I
disk0:asr9k-mgbl-p-4.0.0.15I
disk0:asr9k-mcast-p-4.0.0.15I
disk0:asr9k-doc-p-4.0.0.15I
disk0:comp-
asr9k-mini-4.0.0.15I
disk0:asr9k-fpd-4.0.0.15I
disk0:asr9k-diags-p-4.0.0.15I

```

Use the **summary** keyword to display a summary of the active packages in the system. This command also shows the default software profile used for new SDRs.

```
RP/0/RSP0/CPU0:router# show install summary
```

```

Mon May 31 06:53:46.777 DST
Active Packages:
  disk0:asr9k-upgrade-p-4.0.0.15I
  disk0:asr9k-k9sec-p-4.0.0.15I
  disk0:asr9k-mpls-p-4.0.0.15I
  disk0:asr9k-mgbl-p-4.0.0.15I
  disk0:asr9k-mcast-p-4.0.0.15I
  disk0:asr9k-doc-p-4.0.0.15I
  disk0:comp-
asr9k-mini-4.0.0.15I
  disk0:asr9k-fpd-4.0.0.15I
  disk0:asr9k-diags-p-4.0.0.15I

```

Table 70: show install Field Descriptions

Field	Description
Boot Device	Device where the node stores the active software.
Boot Image	Location on the DSC of the active minimum boot image (MBI) used to boot the node.
Active Packages	Active packages loaded on the node.

Related Commands

Command	Description
install activate	Adds software functionality to the active software set.
show install active	Displays active software packages.
show install package	Displays information about a package.
show install pie-info	Displays information about the packages contained in a PIE file.
show install which	Displays the origin of a component, package, or file.

show install active

To display active packages, use the **show install active** command in EXEC or administration EXEC mode.

Administration EXEC Mode

show install active [**detail**| **summary**| **verbose**] [**location** *node-id*]

EXEC Mode

show install active [**detail**| **summary**| **verbose**] [**location** *node-id*]

Syntax Description

detail	(Optional) Displays a detailed summary of the active packages for a system, secure domain router (SDR), or node.
summary	(Optional) Displays a summary of the active packages in a system or SDR.
verbose	(Optional) Displays a detailed summary of the active packages for a system, SDR, or node, including component information for each package.
sdr <i>sdr-name</i>	(Optional. Administration EXEC mode only.) Displays the active packages for a specific SDR. The <i>sdr-name</i> argument is the name assigned to the SDR.
location <i>node-id</i>	(Optional) Displays the active packages for a designated node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Note

This command displays output that is similar to the **show install** command.

Use the **show install active** command to display the active software set for all nodes, or for specific nodes.

Displaying Information for a Specific Node

Use the **location** *node-id* keyword and argument to display information for a specific node. If you do not specify a location with the **location** *node-id* keyword and argument, this command displays information from all nodes.

Summary, Detailed, and Verbose Information

Use the **summary** keyword to display a summary of the active packages in a system or SDR. Use the **detail** keyword to display the active packages for each node in an SDR, or in all SDRs. Use the **verbose** keyword to display additional information, including component and file information for each package.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example illustrates sample output from the **show install active** command with the **location** *node-id* keyword and argument specified:

```
RP/0/RSP0/CPU0:router# show install active location 0/6/cpu0

Wed May 26 04:26:42.446 DST
Node 0/6/CPU0 [LC] [SDR: Owner]
  Boot Device: mem:
  Boot Image: /disk0/asr9k-os-mbi-4.0.0.15I/lc/mbiasr9k-lc.vm
  Active Packages:
    disk0:asr9k-upgrade-p-4.0.0.15I
    disk0:asr9k-mpls-p-4.0.0.15I
    disk0:asr9k-mcast-p-4.0.0.15I
    disk0:asr9k-optic-4.0.0.15I
    disk0:asr9k-video-p-4.0.0.15I
    disk0:comp-
asr9k-mini-4.0.0.15I
  disk0:asr9k-fpd-4.0.0.15I
  disk0:asr9k-diags-p-4.0.0.15I
```

The following example illustrates sample output from the **show install active** command with the **summary** keyword specified:

```
RP/0/RSP0/CPU0:router# show install active summary

Wed May 26 04:33:06.791 DST
Active Packages:
  disk0:asr9k-upgrade-p-4.0.0.15I
  disk0:asr9k-k9sec-p-4.0.0.15I
  disk0:asr9k-mpls-p-4.0.0.15I
  disk0:asr9k-mgbl-p-4.0.0.15I
  disk0:asr9k-mcast-p-4.0.0.15I
  disk0:asr9k-doc-p-4.0.0.15I
  disk0:comp-
asr9k-mini-4.0.0.15I
  disk0:asr9k-fpd-4.0.0.15I
  disk0:asr9k-diags-p-4.0.0.15I
```

Table 71: show install active Field Descriptions

Field	Description
Boot Device	Device where the node stores the active software.
Boot Image	Location on the DSC of the active minimum boot image (MBI) used to boot the node.
Active Packages	Active packages loaded on the node.

Related Commands

Command	Description
install activate	Adds software functionality to the active software set.
show install package	Displays information about a package.
show install pie-info	Displays information about the packages contained in a PIE file.
show install which	Displays the origin of a component, package, or file.

show install audit

To compare the current active packages and software maintenance upgrades (SMUs) on the router with a list of packages and SMUs that should be active, use the **show install audit** command in EXEC or administration EXEC mode.

Administration EXEC Mode

show install audit file *file-name* [**sdr** *sdr-name*] [**location** *node-id*] [**verbose**]

EXEC Mode

show install audit file *file-name* [**location** *node-id*] [**verbose**]

Syntax Description

file <i>file-name</i>	Specifies the location and name of the installation audit file.
sdr <i>sdr-name</i>	(Optional. Administration EXEC mode only.) Audits the active packages on a specific secure domain router (SDR). The <i>sdr-name</i> argument is the name assigned to the SDR. The only SDR available is Owner, which refers to the entire router.
location <i>node-id</i>	(Optional) Audits the active packages on a designated node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation.
verbose	(Optional) Displays a detailed summary of the audit and can be used for troubleshooting.

Command Default

No default behavior or values

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show install audit** command to compare the currently active packages and SMUs on the router with a list of packages and SMUs that should be active. The file should be a simple text file with a flat list of packages that should be active on the router. It should be placed in a location accessible from the router.

Note the following about the audit file:

- Each package or SMU name must be on a separate line.



Note

For accurate results, make sure that every line in the audit file, including the last line, is terminated with a line break.

- Comments are allowed and must begin with the pound character: #
- SMUs can be specified with a package name only; regular packages should be specified as “package-version”. For SMUs, if a version is not specified, the default version of “1.0.0” is used.
- Composite package names are allowed.
- PIE extensions are allowed at the end of the package name, and they are stripped off.
- Maximum number of lines in a file is limited to 100; the maximum length of each line is limited to 256 characters.

Following are the contents of a valid audit file:

```
# R4.0.0
# some comments
#
comp-
asr9k-mini-4.0.0
asr9k-mgbl-p-4.0.0
asr9k-mcast-p-4.0.0
asr9k-mpls-p-4.0.0
asr9k-mpls-4.0.0.CSCse00294
comp-
asr9k-4.0.0.CSCsd07147
```

Displaying Information for a Specific SDR

- To display information for a specific SDR from administration EXEC mode, use the **sdr sdr-name** keyword and argument.
- To display information for an SDR when logged into that SDR, enter the **show install audit** command in EXEC mode.

Displaying Information for a Specific Node

Use the **location node-id** keyword and argument to display information for a specific node. If you do not specify a location with the **location node-id** keyword and argument, this command displays information for all nodes.

Verbose Information

Use the **verbose** keyword to display additional information, including component and file information for each package.

Command Output

Output from the **show install audit** command provides the following information about the audit:

- Command completes successfully, and the result of the audit is success. This means that all packages listed in the audit file are active, and there are no extra packages active on all nodes where the audit was requested. This can refer to the entire router, a particular SDR, or a particular node.
- Command completes successfully, and the result of the audit is failure. Audit failure means that there are discrepancies between the set of packages listed in the audit file and the packages active on the nodes where audit is done.

The following additional messages indicate the type of discrepancy found in the audit:

- Package specified in the audit file is not present at all. In other words, there was no **install add** performed for this package.
- Package specified in the audit file is present, but is not active on all nodes where it should be active. For example, a package that goes only to route processors (RPs) is not active on all RPs audited (either the entire router or a specific SDR, depending on the scope of command).
- Package specified in the audit file is present, but is not active on some nodes where it should be active. In this case, a list is provided of the nodes where the package is not active.
- Extra package that is not present in the audit file is active on all nodes being audited.
- Extra package that is not present in the audit file is active on some nodes being audited. In this case, a list is provided of the nodes where the package is active.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following sample output indicates that the audit is successful:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show install audit file tftp://10.2.2.2/install_list.txt

Install audit operation completed.
Install audit result: SUCCESS
```

The following sample output indicates that there are discrepancies between the packages installed on the router and the supplied audit file:

```
RP/0/RSP0/CPU0:router(admin)# show install audit file tftp://10.2.2.2/install_list.txt

Info: Package (asr9k-base-3.2.4.CSCxx12345) is not active only on node(s)
Info: 0/5/CPU0, 0/3/CPU0.
Install audit operation completed.
```

```
Install audit result: FAILED (discrepancies found)
```

Related Commands

Command	Description
install activate	Adds software functionality to the active software set.
show install active	Displays active software packages.
show install package	Displays information about a package.
show install pie-info	Displays information about the packages contained in a PIE file.
show install which	Displays the origin of a component, package, or file.

show install auto-abort-timer

To display the current auto-abort-timer, use the **show install auto-abort-timer** command in EXEC or administration EXEC mode.

show install auto-abort-timer

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC
Administration EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show install auto-abort-timer** command displays the timer value configured with the **install activate** and **install deactivate** commands.

Task ID	Task ID	Operations
	pkg-mgmt	read

Examples The following sample output displays the current auto-abort-timer value:

```
RP/0/RSP0/CPU0:router# show install auto-abort-timer
No Auto Abort Timer(s) present
```

Related Commands	Command	Description
	install activate	Adds software functionality to the active software set.

Command	Description
install deactivate	Removes a package from the active software set.

show install boot-options

To display the boot options set for a specified location or for all locations, use the **show install boot-options** command in administration EXEC mode or EXEC mode.

show install boot-options [*location node-id*] **all**

Syntax Description

location { <i>node-id</i> all }	(Optional) Specifies a node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation. The all keyword specifies all nodes.

Command Default

If no location is specified, the **show install boot-options** command displays boot options for all locations.

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show install boot-options** command to display boot options that were set using the **install boot-options** command.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example shows how to display the boot options for all locations:

```
RP/0/RSP0/CPU0:router# show install boot-options
```

```
Thu Jul 30 05:00:30.652 DST
```

Node	Boot Options
0/RSP0/CPU0	no boot options set.
0/1/CPU0	no boot options set.

show install boot-options

```

0/4/CPU0          no boot options set.
0/6/CPU0          no boot options set.

```

Related Commands

Command	Description
reload (administration EXEC)	Reloads a node or all nodes on a single chassis or multishelf system.
hw-module location reload	Resets the power-cycle or reloads the hardware for a node.
clear install boot-options	Clears the boot options for a specified location or for all locations.
show install boot-options	Displays the boot options set for a specified location or for all locations.
install boot-options	Sets the boot options for a specified node.

show install committed

To display committed software packages, use the **show install committed** command in EXEC or administration EXEC mode.

Administration EXEC Mode

show install committed [**detail**| **summary**| **verbose**] [**sdr** *sdr-name*| **location** *node-id*]

EXEC Mode

show install committed [**detail**| **summary**| **verbose**] [**location** *node-id*]

Syntax Description

detail	(Optional) Displays a detailed summary of the committed packages for a system, secure domain router (SDR), or node.
summary	(Optional) Displays a summary of the committed packages in a system or SDR.
verbose	(Optional) Displays a detailed summary of the committed packages for a system, SDR, or node, including component and file information for each package.
sdr <i>sdr-name</i>	(Optional. Administration EXEC mode only.) Displays the committed packages for a specific SDR. The <i>sdr-name</i> argument is the name assigned to the SDR. The only SDR available is Owner, which refers to the entire router.
location <i>node-id</i>	(Optional) Displays the committed packages for a designated node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation.

Command Default

Displays detailed information for all nodes in the SDR or system.

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When a software package is activated, it remains active only until the next router reload. To save the active software to be persistent across router reloads, use the **install commit** command.

Use the **show install committed** command to display the packages included in the committed software set. This is useful for verifying that the desired set of packages is committed.

Use the **show install** command to display the committed software packages for all nodes, or for specific nodes.

Displaying Information for a Specific SDR

- To display information for a specific SDR from administration EXEC mode, use the **sdr sdr-name** keyword and argument.
- To display information for an SDR when logged into that SDR, enter the **show install committed** command in EXEC mode.

Displaying Information for a Specific Node

Use the **location node-id** keyword and argument to display information for a specific node. If you do not specify a location with the **location node-id** keyword and argument, this command displays information from all nodes.

Summary, Detailed, and Verbose Information

Use the **summary** keyword to display summary of packages in a system or SDR. Use the **detail** keyword to display the packages for each node in an SDR, or in all SDRs. Use the **verbose** keyword to display additional information, including component and file information for each package.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following shows sample output from the command. Enter the **show install committed** command without keywords or arguments to display detailed information for all nodes in the SDR or system:

```
RP/0/RSP0/CPU0:router(admin)# show install committed

Wed May 26 08:17:11.970 DST
Node 0/RSP0/CPU0 [RP] [SDR: Owner]
  Boot Device: disk0:
  Boot Image: /disk0/asr9k-os-mpi-4.0.0.15I/mbiasr9k-rp.vm
  Committed Packages:
    disk0:comp-asr9k-mini-4.0.0.15I
    disk0:asr9k-optic-4.0.0.15I
    disk0:asr9k-k9sec-p-4.0.0.15I
    disk0:asr9k-video-p-4.0.0.15I
    disk0:asr9k-mps-p-4.0.0.15I
```

```

disk0:asr9k-mgbl-p-4.0.0.15I
disk0:asr9k-mcast-p-4.0.0.15I
disk0:asr9k-doc-p-4.0.0.15I
disk0:comp-asr9k-4.0.0.15I.CSCTg60895-1.0.0

Node 0/1/CPU0 [LC] [SDR: Owner]
Boot Device: mem:
Boot Image: /disk0/asr9k-os-mbi-4.0.0.15I/lc/mbiasr9k-lc.vm
Committed Packages:
  disk0:comp-asr9k-mini-4.0.0.15I
  disk0:asr9k-optic-4.0.0.15I
  disk0:asr9k-video-p-4.0.0.15I
  disk0:asr9k-mpls-p-4.0.0.15I
  disk0:asr9k-mcast-p-4.0.0.15I
  disk0:comp-asr9k-4.0.0.15I.CSCTg60895-1.0.0

Node 0/4/CPU0 [LC] [SDR: Owner]
Boot Device: mem:
Boot Image: /disk0/asr9k-os-mbi-4.0.0.15I/lc/mbiasr9k-lc.vm
Committed Packages:
  disk0:comp-asr9k-mini-4.0.0.15I
  disk0:asr9k-optic-4.0.0.15I
  disk0:asr9k-video-p-4.0.0.15I
  disk0:asr9k-mpls-p-4.0.0.15I
  disk0:asr9k-mcast-p-4.0.0.15I
  disk0:comp-asr9k-4.0.0.15I.CSCTg60895-1.0.0

Node 0/6/CPU0 [LC] [SDR: Owner]
Boot Device: mem:
Boot Image: /disk0/asr9k-os-mbi-4.0.0.15I/lc/mbiasr9k-lc.vm
Committed Packages:
  disk0:comp-asr9k-mini-4.0.0.15I
  disk0:asr9k-optic-4.0.0.15I
  disk0:asr9k-video-p-4.0.0.15I
  disk0:asr9k-mpls-p-4.0.0.15I
  disk0:asr9k-mcast-p-4.0.0.15I
  disk0:comp-asr9k-4.0.0.15I.CSCTg60895-1.0.0

```

Table 72: show install committed Field Descriptions

Field	Description
Boot Image	Location on the DSC of the active minimum boot image (MBI) used to boot the node.
Committed Packages	Active packages committed on the node.

Related Commands

Command	Description
install activate	Adds software functionality to the active software set.
install commit	Makes the current active software set persistent across RP reloads.
show install active	Displays active software packages.
show install package	Displays information about a package.
show install	Displays active packages.

Command	Description
show install pie-info	Displays information about the packages contained in a PIE file.
show install which	Displays the origin of a component, package, or file.

show install inactive

To display the inactive packages on the designated shelf controller (DSC) for one or more secure domain routers (SDRs), use the **show install inactive** command in EXEC or administration EXEC mode.

Administration EXEC Mode

show install inactive [**detail**| **summary**| **verbose**] [**sdr** *sdr-name*| **location** *node-id*]

EXEC Mode

show install inactive [**detail**| **summary**| **verbose**] [**location** *node-id*]

Syntax Description

detail	(Optional) Displays summary and component information for inactive packages.
summary	(Optional) Displays a summary of inactive packages.
verbose	(Optional) Displays summary, component, and file information for inactive packages.
sdr <i>sdr-name</i>	(Optional. Administration EXEC mode only.) Displays the inactive packages for a the boot device in a specific secure domain router (SDR). The <i>sdr-name</i> argument is the name assigned to the SDR. The only SDR available is Owner, which refers to the entire router.
location <i>node-id</i>	(Optional) Displays the inactive software set from a designated node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Use the **show install inactive** command to display the inactive packages for the DSC.

**Note**

Use the **show version**, **show install active**, or **show install committed** command to determine the device used as the boot device.

Enter the command in administration EXEC mode to display information for the DSDRSC in all SDRs.

Displaying Information for a Specific SDR

- To display information for a specific SDR from administration EXEC mode, use the **sdr sdr-name** keyword and argument.
- To display information for an SDR when logged into that SDR, enter the command in EXEC mode.

Displaying Information for a Specific Node

Use the **location node-id** keyword and argument to display information for a specific node. If you do not specify a location with the **location node-id** keyword and argument, this command displays information from all nodes.

Summary, Detailed, and Verbose Information

Use the **summary** keyword to display summary of inactive packages in a system or SDR. Use the **detail** keyword to display the packages for each node in an SDR, or in all SDRs. Use the **verbose** keyword to display additional information, including component and file information for each package.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example shows sample output from the **show install inactive** command:

```
RP/0/RP0/CPU0:router# show install inactive
```

```
Node 0/1/CPU0 [LC] [SDR: Owner]
Boot Device: bootflash:
Inactive Packages:
  disk0:comp-asr9k-mini-3.7.2
  disk0:asr9k-infra-test-3.7.2
  disk0:asr9k-fpd-3.7.2
  disk0:asr9k-diags-3.7.2
  disk0:asr9k-mcast-3.7.2
  disk0:asr9k-mpls-3.7.2
  disk0:asr9k-base-3.7.2
  disk0:asr9k-os-mpi-3.7.2
```

```
Node 0/4/CPU0 [LC] [SDR: Owner]
Boot Device: bootflash:
Inactive Packages:
  disk0:comp-asr9k-mini-3.7.2
  disk0:asr9k-infra-test-3.7.2
  disk0:asr9k-fpd-3.7.2
  disk0:asr9k-diags-3.7.2
  disk0:asr9k-mcast-3.7.2
  disk0:asr9k-mpls-3.7.2
```

```

disk0:asr9k-base-3.7.2
disk0:asr9k-os-mpi-3.7.2

Node 0/6/CPU0 [LC] [SDR: Owner]
Boot Device: bootflash:
Inactive Packages:
  disk0:comp-asr9k-mini-3.7.2
  disk0:asr9k-infra-test-3.7.2
  disk0:asr9k-fpd-3.7.2
  disk0:asr9k-diags-3.7.2
  disk0:asr9k-mcast-3.7.2
  disk0:asr9k-mppls-3.7.2
  disk0:asr9k-base-3.7.2
  disk0:asr9k-os-mpi-3.7.2

Node 0/RSP0/CPU0 [HRP] [SDR: Owner]
Boot Device: disk0:
Inactive Packages:
  disk0:comp-asr9k-mini-3.7.2
  disk0:asr9k-infra-test-3.7.2
  disk0:asr9k-fpd-3.7.2
  disk0:asr9k-doc-3.7.2
  disk0:asr9k-diags-3.7.2
  disk0:asr9k-mgbl-3.7.2
  disk0:asr9k-mcast-3.7.2
  disk0:asr9k-mppls-3.7.2
  disk0:asr9k-rout-3.7.2
  disk0:asr9k-base-3.7.2
  disk0:asr9k-os-mpi-3.7.2

```

The following example shows sample output from the **show install inactive** command with the **summary** keyword:

```

RP/0/RSP0/CPU0:router# show install inactive summary

Wed May 26 08:51:00.490 DST
Inactive Packages:
  disk0:asr9k-mini-4.0.0.15I
  disk0:asr9k-k9sec-p-4.0.0.15I
  disk0:asr9k-mppls-p-4.0.0.15I
  disk0:asr9k-mgbl-p-4.0.0.15I
  disk0:asr9k-mcast-p-4.0.0.15I
  disk0:asr9k-doc-p-4.0.0.15I
  disk0:asr9k-fpd-p-4.0.0.15I

```

The following example shows sample output from the **show install inactive** command with the **detail** and **location** keywords:

```

RP/0/RSP0/CPU0:router# show install inactive detail location 0/1/cpu0

Tue Feb  3 02:14:31.299 PST
Node 0/1/CPU0 [LC] [SDR: Owner]
Boot Device: bootflash:
Inactive Packages:
  disk0:comp-asr9k-mini-3.7.2
  disk0:asr9k-lc-3.7.2
  disk0:asr9k-fwdg-3.7.2
  disk0:asr9k-admin-3.7.2
  disk0:asr9k-base-3.7.2
  disk0:asr9k-os-mpi-3.7.2
  disk0:asr9k-infra-test-3.7.2
  disk0:asr9k-fpd-3.7.2
  disk0:asr9k-diags-3.7.2
  disk0:asr9k-mcast-3.7.2
  disk0:asr9k-mppls-3.7.2

```

Table 73: show install inactive Field Descriptions

Field	Description
disk0:asr9k-mgbl-3.8.0	Storage device and the name of the package that is inactive.
asr9k-mgbl V3.8.0 Manageability Package	Name of the package that is inactive.
Vendor	Name of the manufacturer.
Desc	Name of the package.
Build	The date and time when the inactive package was built.
Source	The source directory where the inactive package was built.

Related Commands

Command	Description
install deactivate	Removes a package from the active software set.
show install package	Displays information about a package.
show install pie-info	Displays information about the packages contained in a PIE file.
show install which	Displays the origin of a component, package, or file.

show install issu inventory

To display the status of each node and the current status of ISSU, use the **show install issu inventory** command in administration EXEC mode.

show install issu inventory[**detail**| **type** *ism-card-type*]

Syntax Description

detail	Displays detailed information about the status of each card.
type <i>ism-card-type</i>	displays information regarding a specific card type. <i>ism-card-type</i> values can be of the following: 1—Show inventory of all Active RPs in ndsc Racks 2—Show inventory of all Standby RPs in ndsc Racks 3—Show inventory of all Active DRPs (any rack) 4—Show inventory of all Standby DRPs (any rack) 5—Show inventory of the dSC node 6—Show inventory of the Standby dSC node 7—Show inventory of all Active Non-root SCs 8—Show inventory of all Standby Non-root SCs 9—Show inventory of the Root SC 10—Show inventory of the Root SC backup 11—Show inventory of all LCs (any rack) 12—Show inventory of all Non-Fabric SPs. Eg:LC, Alarm, Fan Controller SPs 13—Show inventory of all Fabric SPs

Command Default

Summary information is displayed

Command Modes

Administration EXEC

Command History

Release	Modification
Release 4.2.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show install issu inventory** command displays output only when the ISSU process is running.

Task ID

Task ID	Operation
pkg-mgmt	read

show install issu stage

To display the current stage of the running ISSU process, use the **show install issu stage** command in administration EXEC mode.

show install issu stage [detail]

Syntax Description	detail	Displays more information regarding the stage of the process.

Command Default Displays summary information about the ISSU stage on the router.

Command Modes Administration EXEC

Command History	Release	Modification
	Release 4.2.1	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show install issu stage** command displays output only when the ISSU process is running.

Task ID	Task ID	Operation
	pkg-mgmt	read

Examples This example displays output from the **show install issu stage** command during the load phase:

```
RP/0/RSP0/CPU0:router(admin)# show install issu stage
```

```
Thu Dec 8 16:09:48.397 UTC
Current State : LOAD phase done (Load phase done)
Status : 31% Completed
Participating nodes : 0
Nodes in progress : 0
```

show install log

To display the details of installation requests, use the **show install log** command in EXEC or administration EXEC mode.

show install log [*install-id*] **from** *install-id*] [**detail**] **verbose**] [**reverse**]

Syntax Description

<i>install-id</i>	(Optional) Identifier assigned to an installation operation.
from <i>install-id</i>	(Optional) Displays information for logs from the specified installation identifier and forward.
detail	(Optional) Displays details including impact to processes and nodes.
verbose	(Optional) Displays the information from the keyword, plus additional information about impacts to files, processes, and dynamic link libraries (DLLs).
reverse	(Optional) Displays the logs in reverse order.

Command Default

None

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Enter the **show install log** command with no arguments to display a summary of all installation operations, including the changes to files and the processes impacted by each request. Specify the *install-id* argument to display details for a specific operation.

The *install-id* argument is listed beside each operation in the **show install log** summary and is attached to messages from that operation. For example, the third installation operation has “Install 3:” attached to all its status messages.

The **reverse** keyword displays the information from the latest install log to the oldest install log. Use the **from** keyword to limit the output to be from the specified installation identifier and later.

Displaying Information for a Specific SDR

- To display information for a specific SDR from administration EXEC mode, use the **sdr sdr-name** keyword and argument.
- To display information for an SDR when logged into that SDR, enter the command in EXEC mode.

Detailed and Verbose Information

Use the **detail** keyword to display detailed information for all previous installations, including impact to processes and nodes impacted. The detailed information is a subset of the information displayed with the **verbose** keyword.

Use the **verbose** keyword to display detailed information for all previous installations, information including files changes, impact to processes, and impact to dynamic link libraries (DLLs).

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example shows a summary of all installation requests:

```
RP/0/RSP0/CPU0:router# show install log
```

```
Thu May 27 11:19:18.177 DST
```

```
Install operation 1 started by user 'userx' via CLI at 03:46:56 DST Tue May 11 2010.
```

```
(admin) install add
/tftp://172.23.16.140/auto/tftpboot-users/usera/asr9k-doc.pie-4.0.0.15I.DT_IMAGE
/tftp://172.23.16.140/auto/tftpboot-users/usera/asr9k-fpd.pie-4.0.0.15I.DT_IMAGE
/tftp://172.23.16.140/auto/tftpboot-users/usera/asr9k-k9sec.pie-4.0.0.15I.DT_IMAGE
/tftp://172.23.16.140/auto/tftpboot-users/usera/asr9k-mcast.pie-4.0.0.15I.DT_IMAGE
/tftp://172.23.16.140/auto/tftpboot-users/usera/asr9k-mgbl.pie-4.0.0.15I.DT_IMAGE
/tftp://172.23.16.140/auto/tftpboot-users/usera/asr9k-mpls.pie-4.0.0.15I.DT_IMAGE
/tftp://172.23.16.140/auto/tftpboot-users/usera/asr9k-upgrade.pie-4.0.0.15I.DT_IMAGE
activate
Install operation 1 completed successfully at 04:09:19 DST Tue May 11 2010.
```

```
-----
Install operation 2 started by user 'userx' via CLI at 05:37:25 DST Tue May 11 2010.
```

```
(admin) install commit
Install operation 2 completed successfully at 05:37:36 DST Tue May 11 2010.
```

```
-----
2 entries shown
```

The following example shows the details for a specific installation request. The **detail** keyword is used to display additional information about the impact of the operation to processes and nodes:

```
RP/0/RSP0/CPU0:router(admin)# show install log 2 detail
```

```
Tue Jul 28 02:09:08.628 DST
```

```

Install operation 2 started by user 'user_b' via CLI at 14:28:16 DST Tue Jul14 2009.
(admin) install commit
Install operation 2 completed successfully at 14:28:18 DST Tue Jul 14 2009.

```

Install logs:

```

  Install operation 2 '(admin) install commit' started by user 'user_b' via
  CLI at 14:28:16 DST Tue Jul 14 2009.
  Install operation 2 completed successfully at 14:28:18 DST Tue Jul 14 2009.

```

The following example shows information for the installation requests. The **verbose** keyword is used to display detailed information including file changes, impact to processes, and impact to DLLs.

```
RP/0/RSP0/CPU0:router(admin)# show install log 2 verbose
```

```
Tue Jul 28 02:21:49.011 DST
```

```

Install operation 1 started by user 'user_b' via CLI at 14:14:19 DST Tue Jul
14 2009.
(admin) install add /compactflash:asr9k-k9sec-p.pie-3.9.0.14I
/compactflash:asr9k-mcast-p.pie-3.9.0.14I
/compactflash:asr9k-mgbl-p.pie-3.9.0.14I
/compactflash:asr9k-mpls-p.pie-3.9.0.14I
/compactflash:asr9k-fpd.pie-3.9.0.14I
/compactflash:asr9k-diags-p.pie-3.9.0.14I
/compactflash:asr9k-adv-video-p.pie-3.9.0.14I activate
Install operation 1 completed successfully at 14:27:50 DST Tue Jul 14 2009.

```

Install logs:

```

  Install operation 1 '(admin) install add
  /compactflash:asr9k-k9sec-p.pie-3.9.0.14I
  /compactflash:asr9k-mcast-p.pie-3.9.0.14I
  /compactflash:asr9k-mgbl-p.pie-3.9.0.14I
  /compactflash:asr9k-mpls-p.pie-3.9.0.14I
  /compactflash:asr9k-fpd.pie-3.9.0.14I
  /compactflash:asr9k-diags-p.pie-3.9.0.14I
  /compactflash:asr9k-adv-video-p.pie-3.9.0.14I activate' started by
  user 'user_b' via CLI at 14:14:19 DST Tue Jul 14 2009.
  Part 1 of 2 (add software): Started
  Warning: Skipped adding the following package as it was already present:
  Warning: disk0:asr9k-diags-3.9.0.14I
  Warning: Please check:
  Warning: - the set of active packages using '(admin) show install
  Warning: active'.
  Warning: - the set of inactive packages using '(admin) show install
  Warning: inactive'.
  Info: The following packages are now available to be activated:
  Info:
  Info: disk0:asr9k-k9sec-3.9.0.14I
  Info: disk0:asr9k-mcast-3.9.0.14I
  Info: disk0:asr9k-mgbl-3.9.0.14I
  Info: disk0:asr9k-mpls-3.9.0.14I
  Info: disk0:asr9k-fpd-3.9.0.14I
  Info: disk0:asr9k-diags-3.9.0.14I
  Info: disk0:asr9k-adv-video-3.9.0.14I
  Info:
  Info: The packages can be activated across the entire router.
  Info:
  Part 1 of 2 (add software): Completed successfully (skipped adding one or
  more packages because they were already present on the boot device)
  Part 2 of 2 (activate software): Started
  Info: Cannot activate the following package as it is already active on
  Info: the router:
  Info:
  Info: disk0:asr9k-diags-3.9.0.14I
  Info:
  Info: The following sequence of sub-operations has been determined to
  Info: minimize any impact:
  Info:

```

```

Info:      Sub-operation 1:
Info:      Install Method: Parallel Process Restart
Info:      asr9k-mpls-3.9.0.14I
Info:
Info:      Sub-operation 2:
Info:      Install Method: Parallel Process Restart
Info:      asr9k-mcast-3.9.0.14I
Info:
Info:      Sub-operation 3:
Info:      Install Method: Parallel Process Restart
Info:      asr9k-k9sec-3.9.0.14I
Info:
Info:      Sub-operation 4:
Info:      Install Method: Parallel Process Restart
Info:      asr9k-fpd-3.9.0.14I
Info:
Info:      Sub-operation 5:
Info:      Install Method: Parallel Process Restart
Info:      asr9k-mgbl-3.9.0.14I
Info:
Info:      Sub-operation 6:
Info:      Install Method: Parallel Process Restart
Info:      asr9k-adv-video-3.9.0.14I
Info:
Info:      The changes made to software configurations will not be
Info:      persistent across system reloads. Use the command '(admin)
Info:      install commit' to make changes persistent.
Info:      Please verify that the system is consistent following the
Info:      software change using the following commands:
Info:      show system verify
Info:      install verify packages
Part 2 of 2 (activate software): Completed successfully
Part 1 of 2 (add software): Completed successfully (skipped adding one or
more packages because they were already present on the boot device)
Part 2 of 2 (activate software): Completed successfully
Install operation 1 completed successfully at 14:27:50 DST Tue Jul 14 2009.

```

Summary:

```

Sub-operation 1:
Install method: Parallel Process Restart
Summary of changes on node 0/RSP0/CPU0:
  Activated:    asr9k-mpls-3.9.0.14I
               6 asr9k-mpls processes affected (0 updated, 6 added, 0 removed, 0 impacted)

Summary of changes on node 0/1/CPU0:
  Activated:    asr9k-mpls-3.9.0.14I
               1 asr9k-mpls processes affected (0 updated, 1 added, 0 removed, 0 impacted)

Summary of changes on node 0/4/CPU0:
  Activated:    asr9k-mpls-3.9.0.14I
               1 asr9k-mpls processes affected (0 updated, 1 added, 0 removed, 0 impacted)

Summary of changes on node 0/6/CPU0:
  Activated:    asr9k-mpls-3.9.0.14I
               1 asr9k-mpls processes affected (0 updated, 1 added, 0 removed, 0 impacted)

Sub-operation 2:
Install method: Parallel Process Restart
Summary of changes on node 0/RSP0/CPU0:
  Activated:    asr9k-mcast-3.9.0.14I
               16 asr9k-mcast processes affected (0 updated, 16 added, 0 removed, 0 impacted)

Summary of changes on node 0/1/CPU0:
  Activated:    asr9k-mcast-3.9.0.14I
               1 asr9k-base processes affected (1 updated, 0 added, 0 removed, 0 impacted)
               2 asr9k-mcast processes affected (0 updated, 2 added, 0 removed, 0 impacted)

Summary of changes on node 0/4/CPU0:
  Activated:    asr9k-mcast-3.9.0.14I
               1 asr9k-base processes affected (1 updated, 0 added, 0 removed, 0 impacted)
               2 asr9k-mcast processes affected (0 updated, 2 added, 0 removed, 0 impacted)

Summary of changes on node 0/6/CPU0:

```

```

Activated:      asr9k-mcast-3.9.0.14I
               1 asr9k-base processes affected (1 updated, 0 added, 0 removed, 0 impacted)
--More--

```

The following example shows all installation requests in reverse order, such that the most recent requests are displayed first:

```

RP/0/RSP0/CPU0:router(admin)# show install log reverse

Install operation 2 started by user 'user a' via CLI at 12:33:10 GMT Mon Oct 29 2008.
(admin) install add /tftp://xx-tftp/user_a/asr9k-fpd.pie
Install operation 2 completed successfully at 12:35:19 GMT Mon Oct 29 2008.
-----

Install operation 1 started by user 'user a' via CLI at 12:31:07 GMT Mon Oct 29 2007.
(admin) install add /tftp://xx-tftp/user_a/asr9k-mgbl.pie
Install operation 1 completed successfully at 12:32:12 GMT Mon Oct 29 2008.

```

Related Commands

Command	Description
install activate	Adds software functionality to the active software set.
install add	Adds the contents of a PIE file to a storage device .
install commit	Makes the current active software set persistent across RP reloads.
install deactivate	Removes a package from the active software set.
install remove	Deletes inactive packages from a storage device.
install rollback to	Rolls back the software set to a saved installation point or to the last committed installation point.

show install package

To display information about a package, use the **show install package** command in EXEC or administration EXEC mode.

show install package {*device:package*| **all**} [**brief**| **detail**| **verbose**]

Syntax Description

<i>device : package</i>	Device and package, expressed in concatenated form (for example, disk0:asr9k-mgbl-3.8.0). For the <i>device:</i> argument, the value is a specified storage device, typically disk0: .
all	Displays all installed packages on the system or SDR.
brief	(Optional) Displays only the name and version of packages.
detail	(Optional) Displays detailed information including impact to processes and nodes, vendor information, card support, and component information.
verbose	(Optional) Displays the information included in the keyword, plus information about dynamic link libraries (DLLs).

Command Default

None

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

Use the **show install package** command with the **all** keyword to display a list of the packages on the router or SDR.

Use the **show install package** command with the **detail** keyword to display the version of the package, name of the manufacturer, name of the package, date and time when the package was built, and source directory where the package was built.

Use the **show install package** command with the **verbose** keyword to display the same information as the **detail** keyword, plus additional information about DLLs.

**Note**

This command returns the same data in EXEC mode and administration EXEC mode. In EXEC mode, only the information for the current SDR is displayed.

For additional information about the status of installed software packages, use the **show install active** and **show install inactive** commands.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following sample output from the **show install package** command lists all packages that are available on the router:

```
RP/0/RSP0/CPU0:router# show install package all
```

```
Thu May 27 04:20:35.273 DST
disk0:asr9k-fpd-4.0.0.15I

disk0:asr9k-doc-p-4.0.0.15I
  disk0:iosxr-docs-4.0.0.15I

disk0:asr9k-mgbl-p-4.0.0.15I
  disk0:asr9k-mgbl-sup-4.0.0.15I
  disk0:iosxr-mgbl-4.0.0.15I

disk0:asr9k-mpis-p-4.0.0.15I
  disk0:iosxr-mpis-4.0.0.15I

disk0:asr9k-diags-p-4.0.0.15I
  disk0:asr9k-diags-sup-4.0.0.15I

disk0:asr9k-k9sec-p-4.0.0.15I
  disk0:asr9k-k9sec-sup-4.0.0.15I
  disk0:iosxr-security-4.0.0.15I

disk0:asr9k-mcast-p-4.0.0.15I
  disk0:asr9k-mcast-sup-4.0.0.15I
  disk0:iosxr-mcast-4.0.0.15I

disk0:comp-asr9k-mini-4.0.0.15I
  disk0:asr9k-fwding-4.0.0.15I
  disk0:asr9k-base-4.0.0.15I
  disk0:asr9k-os-mbi-4.0.0.15I
  disk0:iosxr-routing-4.0.0.15I
  disk0:iosxr-fwding-4.0.0.15I
  disk0:iosxr-infra-4.0.0.15I
  disk0:iosxr-diags-4.0.0.15I

disk0:asr9k-upgrade-p-4.0.0.15I
  disk0:asr9k-doc-4.0.0.15I
  disk0:asr9k-k9sec-4.0.0.15I
  disk0:asr9k-sbc-4.0.0.15I
  disk0:asr9k-diags-4.0.0.15I
  disk0:asr9k-mgbl-4.0.0.15I
  disk0:asr9k-mcast-4.0.0.15I
  disk0:asr9k-mpis-4.0.0.15I
  disk0:asr9k-rout-4.0.0.15I
  disk0:asr9k-fwdg-4.0.0.15I
  disk0:asr9k-lc-4.0.0.15I
```

```
disk0:asr9k-admin-4.0.0.15I
```

The following sample output from the **show install package** command lists all the packages contained in a composite package:

```
RP/0/RSP0/CPU0:router# show install package disk0:comp-  
asr9k  
-mini-4.0.0.15I
```

```
Thu May 27 04:26:37.095 DST  
disk0:comp-  
asr9k-mini-4.0.0.15I  
  disk0:asr9k-fwding-4.0.0.15I  
  disk0:asr9k-base-4.0.0.15I  
  disk0:asr9k-os-mpi-4.0.0.15I  
  disk0:iosxr-routing-4.0.0.15I  
  disk0:iosxr-fwding-4.0.0.15I  
  disk0:iosxr-infra-4.0.0.15I  
  disk0:iosxr-diags-4.0.0.15I
```

Table 74: show install package Field Descriptions

Field	Description
disk0:asr9k-rout-3.8.0	Storage device and the name of the package that has been installed.
asr9k-rout V3.8.0 Routing Package	Name of the package.
Vendor	Name of the manufacturer.
Desc	Name of the package.
Build	Date and time the package was built.
Source	Source directory where the package was built.
Card(s)	Card types supported by the package.
Restart information	Restart impact on processes or nodes.
Components in package	Components included in the package.

Related Commands

Command	Description
show install active	Displays active software packages.
show install inactive	Displays inactive packages in the active software set.
show install log	Displays the entries stored in the logging installation buffer.
show install	Displays active packages.

Command	Description
show install committed	Displays committed active packages.
show install pie-info	Displays information about the packages contained in a PIE file.
show install which	Displays the origin of a component, package, or file.

show install pie-info

To display information about a package installation envelope (PIE) installation file, use the **show install pie-info** command in EXEC or administration EXEC mode.

show install pie-info *device:package* [**brief**] [**detail**] [**verbose**]

Syntax Description

<i>device : package</i>	Device, directory path, and package, expressed in concatenated form.
brief	(Optional) Displays summary information.
detail	(Optional) Displays detailed information.
verbose	(Optional) Displays comprehensive information.

Command Default

Displays summary information.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **install pie-info** command to display information about a specified PIE installation file.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example illustrates sample output from the **install pie-info** command. The default display shows the package name, expiration date, and file size:

```
RP/0/RP0/CPU0:router(admin)# show install pie-info
tftp://223.255.254.254/auto/tftpboot/users/usera/hfr-mcast-p.pie
```

Thu May 27 17:05:19.888 UTC

```
Contents of pie file '/tftp://223.255.254.254/auto/tftpboot/users/usera/hfr-mcast-p.pie':
  Expiry date       : Oct 17, 2015 01:51:47 UTC
  Uncompressed size : 17694945
  Compressed size   : 7022792
```

```
hfr-mcast-p-4.0.0.18C
  hfr-mcast-sup-4.0.0.18C
  iosxr-mcast-4.0.0.18C
```

The following example illustrates sample output from the **install pie-info** command with the **detail** keyword. This command displays additional information including vendor, build date supported cards, and component information:

```
RP/0/RSP0/CPU0:router(admin)# show install pie-info disk1:/
asr9k
-mgbl-p.pie-3.8.0 detail
Contents of pie file '/disk1:/asr9k-mgbl-p.pie-3.8.0':
  Expiry date       : Jan 19, 2007 02:55:56 UTC
  Uncompressed size : 17892613
  asr9k-mgbl-3.8.0
  asr9k-mgbl V3.8.0[00] Manageability Package
  Vendor : Cisco Systems
  Desc   : Manageability Package
  Build  : Built on Wed May 10 08:04:58 UTC 2006
  Source : By edde-bld1 in /vws/aga/production/3.8.0/asr9k/workspace for c28
  Card(s): RP
  Restart information:
    Default:
      parallel impacted processes restart
      Components in package asr9k-mgbl-3.8.0, package
asr9k-mgbl:
manageability-cwi V[r33x/2] Craft Web Interface related binaries ae
asr9k-feature-ipsla V[r33x/1] IPSLA time stamping feature
      doc-asr9k-mgbl V[r33x/2] Contains the
man page documentation for asr9ksemweb V[r33x/1]
Agranat/Virata Emweb embedded web server
generic-xmlagent V[r33x/1] Generic XML Agent
ipsla V[r33x/1] IP SLA Agent (formerly known as Service Assurance )
manageability-perf V[r33x/1] Performance Management Component for y
man-xml-alarm-ops V[r33x/1] The XML Operations Provider for alarms.
man-xml-cfgmgr-ops V[r33x/1] Handler for XML which contains CfgMgrs
man-xml-cli-ops V[r33x/1] Handler for XML which contains CLI reques
man-xml-infra V[r33x/1] Generic infrastructure for XML support
man-xml-mda-ops V[r33x/1] Handler for XML which contains MDA reques
man-xml-ttyagent V[r33x/1] XML Telnet/SSH agent
cfg-sh-mgbl V[r33x/1] LR shared plane manageability config
package-compatible V[r33x/1] This is to collect package^Mcompatibilitys
package-manage V[r33x/3] This is to collect package^Mcompatibilitye
snmp-assetmib V[r33x/1] CISCO ASSET Management Information Base (M)
snmp-bulkfilemib V[r33x/1] Bulk File Management Information Base ()
snmp-assetmib-enhi V[r33x/1] CISCO ENHANCED IMAGE MIB
snmp-disman-mib V[r33x/1] Event MIB Implementation
snmp--disman-mib V[r33x/1] EXPRESSION-MIB implementation
snmp-frucontrolmib V[r33x/1] CISCO-FRU-CONTROL MIB Implementation A
snmp-ftpclientmib V[r33x/1] FTP Client Management Information Base)
snmp-pingmib V[r33x/1] Ping Management Information Base (MIB)
snmp-sensormib V[r33x/1] Sensor Management Information Base (MIB)
```

Table 75: show install pie-info Field Descriptions

Field	Description
Contents of pie file	Storage device, directory, and name of the package.

Field	Description
Expiry date	Date when the package expires and can no longer be added to a router.
Uncompressed size	File size of the package after it is added to a local storage device.
asr9k-mgbl-3.4.0	Name of the package.
Vendor	Name of the manufacturer.
Desc	Name of the package.
Build	Date and time the package was built.
Source	Source directory where the package was built.
Card(s)	Card types supported by the package.
Restart information	Restart impact on processes or nodes.
Components in package	Components included in the package.

Related Commands

Command	Description
show install active	Displays active software packages.
show install inactive	Displays inactive packages in the active software set.
show install log	Displays the entries stored in the logging installation buffer.
show install package	Displays information about a package.
show install request	Displays the list of incomplete installation manager requests.
show install committed	Displays committed active packages.
show install which	Displays the origin of a component, package, or file.

show install request

To display the list of incomplete installation requests, running and queued, use the **show install request** command in EXEC or administration EXEC mode.

show install request [detail]

Syntax Description	detail	(Optional) Displays detailed information.

Command Default	None

Command Modes	Administration EXEC EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	Cisco IOS XR software processes only one installation request per secure domain router (SDR) at a time. The show install request command displays any incomplete request that is currently running. Use the show install request command in administration EXEC or EXEC mode to display installation operations for the Owner SDR.



Note	The default of installation commands is asynchronous mode, meaning that the command runs in the background and the EXEC prompt is returned as soon as possible. Performing a command in synchronous mode allows the installation process to finish before the prompt is returned.



Tip	These requests cannot be stopped by pressing Ctrl-C . To stop a request, use the install attach command to attach to the operation, then press Ctrl-C and select the “abort” option.

Task ID	Task ID	Operations
	pkg-mgmt	read

Examples

The following example shows sample output from the **show install request** command:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show install request

Install operation 17 'install add /tftp://172.31.255.255/dir/19mcast' started by user
'user_b' at 14:38:45 UTC Thu Mar 30 2006. The operation is 1% complete 2,017KB
downloaded The operation can still be aborted.
```

The following example shows sample output from the **show install request** command when no installation operations are running:

```
RP/0/RSP0/CPU0:router(admin)# show install request

There are no install requests in operation.
```

Related Commands

Command	Description
install activate	Adds software functionality to the active software set.
install add	Adds the contents of a PIE file to a storage device .
install deactivate	Removes a package from the active software set.
install remove	Deletes inactive packages from a storage device.
install rollback to	Rolls back the software set to a saved installation point or to the last committed installation point.

show install rollback

To display the software set associated with a saved installation point, use the **show install rollback** command in EXEC or administration EXEC mode.

Administration EXEC Mode

show install rollback {*point-id* | *label*} [**detail** | **summary**] [**sdr** *sdr-name* | **location** *node-id*]

EXEC Mode

show install rollback {*point-id* | *label*} [**detail** | **summary**] [**location** *node-id*]

Syntax Description

<i>point-id</i>	Installation point ID number.
<i>label</i>	Label associated with an installation point ID.
detail	(Optional) Displays a detailed summary of information for a system, SDR, or node, including the packages contained in a composite package.
summary	(Optional) Displays a summary of information in a system or SDR.
sdr <i>sdr-name</i>	(Optional) Displays information for a specific secure domain router (SDR). The <i>sdr-name</i> argument is the name assigned to the SDR. This option is in administration EXEC mode only.
location <i>node-id</i>	(Optional) Displays information for a designated node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show install rollback** command to display the software set associated with a saved installation point. To display the available rollback points, use the online help system. For example: **show install rollback ?**.

**Tip**

This command can be used with the **install rollback to** command to verify the software set associated with a saved installation point before rolling back to the saved installation point.

Displaying Information for a Specific SDR or All Nodes

- To display information for a specific SDR from administration EXEC mode, use the **sdr sdr-name** keyword and argument.
- To display information for an SDR when logged into that SDR, enter the command in EXEC mode.

Displaying Information for a Specific Node

Use the **location node-id** keyword and argument to display information for a specific node. If you do not specify a location with the **location node-id** keyword and argument, this command displays information from all nodes.

Summary, Detailed, and Verbose Information

Use the **summary** keyword to display a summary of the packages that are used by the **install rollback to** command. Use the **detail** keyword to display additional information, including the individual packages included in the composite packages.

**Tip**

Use the **clear install rollback oldest** command to delete saved installation points from the installation buffer.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

In the following example, the **show install rollback** command with the **?** option displays the available rollback points:

```
RP/0/RSP0/CPU0:router# admin
RP/0/RSP0/CPU0:router(admin)# show install rollback ?

 0  ID of the rollback point to show package information for
 2  ID of the rollback point to show package information for
```

In the following example, the **show install rollback** command displays the packages for a specific rollback point. This display summarizes the packages that are used by the **install rollback to** command:

```
RP/0/RSP0/CPU0:router# show install rollback 0

Thu May 27 05:53:01.283 DST
```

show install rollback

```

ID: 0, Label:
Timestamp: 06:11:39 UTC Mon May 10 2010

Node 0/RSP0/CPU0 [RP] [SDR: Owner]
  Boot Device: disk0:
  Boot Image: /disk0/asr9k-os-mpi-4.0.0.15I/mbiasr9k-rp.vm
  Rollback Packages:
    disk0:comp-asr9k-mini-4.0.0.15I

Node 0/1/CPU0 [LC] [SDR: Owner]
  Boot Device: mem:
  Boot Image: /disk0/asr9k-os-mpi-4.0.0.15I/lc/mbiasr9k-lc.vm
  Rollback Packages:
    disk0:comp-asr9k-mini-4.0.0.15I

Node 0/4/CPU0 [LC] [SDR: Owner]
  Boot Device: mem:
  Boot Image: /disk0/asr9k-os-mpi-4.0.0.15I/lc/mbiasr9k-lc.vm
  Rollback Packages:
    disk0:comp-asr9k-mini-4.0.0.15I

Node 0/6/CPU0 [LC] [SDR: Owner]
  Boot Device: mem:
  Boot Image: /disk0/asr9k-os-mpi-4.0.0.15I/lc/mbiasr9k-lc.vm
  Rollback Packages:
    disk0:comp-asr9k-mini-4.0.0.15I

```

In the following example, the **show install rollback** command with the **detail** keyword displays additional information for the packages, including the individual packages included in the composite packages:

```

RP/0/RSP0/CPU0:router# show install rollback 0 detail

Thu May 27 06:06:10.479 DST
ID: 0, Label:
Timestamp: 06:11:39 UTC Mon May 10 2010

Node 0/RSP0/CPU0 [RP] [SDR: Owner]
  Boot Device: disk0:
  Boot Image: /disk0/asr9k-os-mpi-4.0.0.15I/mbiasr9k-rp.vm
  Rollback Packages:
    disk0:comp-asr9k-mini-4.0.0.15I
      disk0:asr9k-fpd-4.0.0.15I
      disk0:asr9k-cpp-4.0.0.15I
      disk0:asr9k-scfclient-4.0.0.15I
      disk0:asr9k-diags-supp-4.0.0.15I
      disk0:asr9k-fwding-4.0.0.15I
      disk0:asr9k-base-4.0.0.15I
      disk0:asr9k-os-mpi-4.0.0.15I
      disk0:iosxr-diags-4.0.0.15I
      disk0:iosxr-routing-4.0.0.15I
      disk0:iosxr-fwding-4.0.0.15I
      disk0:iosxr-infra-4.0.0.15I

Node 0/1/CPU0 [LC] [SDR: Owner]
  Boot Device: mem:
  Boot Image: /disk0/asr9k-os-mpi-4.0.0.15I/lc/mbiasr9k-lc.vm
  Rollback Packages:
    disk0:comp-asr9k-mini-4.0.0.15I
      disk0:asr9k-cpp-4.0.0.15I
      disk0:asr9k-scfclient-4.0.0.15I
      disk0:asr9k-diags-supp-4.0.0.15I
      disk0:asr9k-fwding-4.0.0.15I
      disk0:asr9k-base-4.0.0.15I
      disk0:asr9k-os-mpi-4.0.0.15I
      disk0:iosxr-diags-4.0.0.15I
      disk0:iosxr-routing-4.0.0.15I
      disk0:iosxr-fwding-4.0.0.15I
      disk0:iosxr-infra-4.0.0.15I

Node 0/4/CPU0 [LC] [SDR: Owner]
  Boot Device: mem:

```



```

Boot Image: /disk0/asr9k-os-mpi-4.0.0.15I/lc/mbiasr9k-lc.vm
Rollback Packages:
  disk0:comp-asr9k-mini-4.0.0.15I
  disk0:asr9k-cpp-4.0.0.15I
  disk0:asr9k-scfclient-4.0.0.15I
  disk0:asr9k-diags-supp-4.0.0.15I
  disk0:asr9k-fwding-4.0.0.15I
  disk0:asr9k-base-4.0.0.15I
  disk0:asr9k-os-mpi-4.0.0.15I
  disk0:iosxr-diags-4.0.0.15I
  disk0:iosxr-routing-4.0.0.15I
  disk0:iosxr-fwding-4.0.0.15I
  disk0:iosxr-infra-4.0.0.15I

Node 0/6/CPU0 [LC] [SDR: Owner]
Boot Device: mem:
Boot Image: /disk0/asr9k-os-mpi-4.0.0.15I/lc/mbiasr9k-lc.vm
Rollback Packages:
  disk0:comp-asr9k-mini-4.0.0.15I
  disk0:asr9k-cpp-4.0.0.15I
  disk0:asr9k-scfclient-4.0.0.15I
  disk0:asr9k-diags-supp-4.0.0.15I
  disk0:asr9k-fwding-4.0.0.15I
  disk0:asr9k-base-4.0.0.15I
  disk0:asr9k-os-mpi-4.0.0.15I
  disk0:iosxr-diags-4.0.0.15I
  disk0:iosxr-routing-4.0.0.15I
  disk0:iosxr-fwding-4.0.0.15I
  disk0:iosxr-infra-4.0.0.15I

```

Table 76: show install rollback Field Descriptions

Field	Description
Boot Image	Minimum boot image (MBI) used to boot the node.
Rollback Packages	Packages that are rolled back.

Related Commands

Command	Description
install rollback to	Rolls back the software set to a saved installation point or to the last committed installation point.
clear install rollback oldest	Deletes saved installation points from the installation buffer.

show install which

To display the origin of a named process, component, or package, use the **show install which** command in EXEC or administration EXEC mode.

show install which {**component** *name* [**verbose**] | **file** *filename*} [**sdr** *sdr-name*] **location** *node-id*

Syntax Description

component <i>name</i>	Displays the package information for the component specified in the <i>name</i> argument.
verbose	(Optional) Displays summary, component, and file information for each component.
file <i>filename</i>	Displays the package information for the file specified in the <i>filename</i> argument.
sdr <i>sdr-name</i>	(Optional. Administration EXEC mode only.) Displays information for a specific secure domain router (SDR). The <i>sdr-name</i> argument is the name assigned to the SDR.
location <i>node-id</i>	(Optional) Displays information for the designated node. The <i>node-id</i> argument is expressed in <i>rack/slot/module</i> notation.

Command Default

The default search is performed for the active software set.

Command Modes

Administration EXEC
EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show install which** command to display information about a named process, component, or package. Information is shown for each node where the process, component, or package is located.

This command returns the same data in EXEC mode and administration EXEC mode.

Displaying Information for a Specific SDR or All SDRs

- To display information for a specific SDR from administration EXEC mode, use the **sdr** *sdr-name* keyword and argument.
- To display information for an SDR when logged into that SDR, enter the command in EXEC mode.

Displaying Information for a Specific Node

Use the **location** *node-id* keyword and argument to display information for a specific node. If you do not specify a location with the **location** *node-id* keyword and argument, this command displays information from all nodes.



Note

If the process, component, or package is not located on that node, an error message is displayed.

Verbose Information

Use the **verbose** keyword to display additional information, including component and file information for each package.

Task ID

Task ID	Operations
pkg-mgmt	read

Examples

The following example shows cisco discovery protocol (CDP) information for a single node. The **show install which** command is entered with the **file** and **location** keywords specified:

```
RP/0/RSP0/CPU0:router# show install which file cdp location 0/1/cpu0

Wed Jul 14 06:05:58.793 DST
Node 0/1/CPU0 has file cdp for boot package /disk0/asr9k-os-mpi-4.0.0.24I/lc/mbiasr9k-lc.vm
from iosxr-fwding
Package:
  iosxr-fwding
    iosxr-fwding V4.0.0.24I[Default] IOS-XR Forwarding Package Definition
    Vendor : Cisco Systems
    Desc   : IOS-XR Forwarding Package Definition
    Build  : Built on Thu Jul  8 09:57:13 DST 2010
    Source : By sjc-lds-836 in
/auto/ioxbuild6/production/4.0.0.24I.SIT_IMAGE/asr9k/workspace for pie
Card(s): RP, NP24-4x10GE, NP24-40x1GE, NP40-40x1GE, NP40-4x10GE, NP40-8x10GE,
NP40-2_20_COMBO,
NP80-8x10GE, NP80-16x10GE, A9K-SIP-700
Restart information:
  Default:
    parallel impacted processes restart
Size Compressed/Uncompressed: 30MB/76MB (39%)

Component:
  cdp V[ci-40-bugfix/9] Cisco Discovery Protocol (CDP)

File:
  cdp
    Card(s)                : RP, LC, SC
```

```

File type           : Server
Remotely-hosted     : No
Local view          : /pkg/bin/cdp
Local install path  : /disk0/iosxr-fwding-4.0.0.24I/bin/cdp  (Uncompressed)
Central install path : /disk0/iosxr-fwding-4.0.0.24I/bin/cdp  (Compressed)
Uncompressed size   : 118KB
Compressed size     : 50KB
Uncompressed MD5    : 72a7bcd591b3d0022796b169ce9f612e
Compressed MD5      : 232144071cc7a9416f731fac0d835ba8

```

The following example shows the message displayed if the specified process, component, or package is not active on a node:

```

RP/0/RSP0/CPU0:router# show install which file cdp location 0/1/CPU0
File cdp not active on node 0/6/CPU0

```

Table 77: show install which Field Descriptions

Field	Description
Package:	Name of the package that contains the file or component being described.
asr9k-base V3.8.0	Name and release number of the package.
Vendor	Name of the manufacturer.
Desc	Name of the package.
Build	Date and time the package was built.
Source	Source directory where the package was built.
Card(s)	Card types supported by the package.
Restart information	Restart impact on processes or nodes.
Component:	Component name and version number.
File:	Name of the of the process or DLL file that information is being specified for.
Card(s)	Supported card types on which the file can be used.
Local view	Generic directory path used to access the file on the nodes where it is used.
Local install path	Local directory path where the file is stored.
Central install path	Directory path where the file is stored on RP and SC nodes.

Related Commands

Command	Description
show install active	Displays active software packages.
show install inactive	Displays inactive packages in the active software set.
show install log	Displays the entries stored in the logging installation buffer.
show install package	Displays information about a package.
show install request	Displays the list of incomplete installation manager requests.
show install	Displays active packages.
show install committed	Displays committed active packages.

show issu-warm-reload control-protocol trace

To display control protocol trace data about the ongoing process of an in-service software upgrade (ISSU), use the **show issu-warm-reload control-protocol trace** command in EXEC mode.

show issu-warm-reload control-protocol trace *data-type* **type** {**all**|**error**|**information**|**packet**} [**hexdump**] [**last** *n*] [**reverse**] [**stats**] [**tailf**] [**unique**][**verbose**] [**wrapping**][**file** *filename* **original**]

Syntax Description

<i>data-type</i>	The type of data to display. Valid options are: • all—Displays all trace data. • chdlc—Displays Cisco High-Level Data Link Control (cHDLC) Serial Line Address Resolution Protocol (SLARP) data. • control-io—Displays control input-output (I/O) data. • ipv6nd—Displays IPv6 ND data. • lACP—Displays Link Aggregation Control Protocol (LACP) data. • platform—Displays platform data. • ppp—Displays PPP data. all, chdlc, control-io, ipv6nd, lACP,
type	Specifies the format of trace data to display.
all	Displays error, information and packet traces.
error	Displays error traces.
information	Displays information traces.
packet	Displays packet traces.
hexdump	(Optional) Displays traces in hexadecimal format.
last <i>n</i>	(Optional) Displays the last <i>n</i> number of traces only.
reverse	(Optional) Displays the most recent traces first.
stats	(Optional) Displays execution path statistics.
tailf	(Optional) Displays new traces as they are added.
unique	(Optional) Displays unique entries only, along with the count of the number of times this entry appears.

verbose	(Optional) Displays additional internal debugging information.
wrapping	(Optional) Displays wrapping entries.
file <i>filename</i> original	(Optional) Specifies the filename of the file to display. You can specify up to four trace files.

Command Default

None.

Command Modes

EXEC

Command History

Release	Modification
Release 4.2.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show issu-warm-reload control-protocol trace** command only provides information while the ISSU process is running. After the installation is complete, no information is provided.

Task ID

Task ID	Operation
system	read

```
show issu-warm-reload control-protocol trace
```




Terminal Services Commands on the Cisco ASR 9000 Series Router

This chapter describes the Cisco IOS XR commands used for setting up physical and virtual terminal connections, managing terminals, and configuring virtual terminal line (vty) pools.

For detailed information about configuring physical and virtual terminals, see the *Implementing Physical and Virtual Terminals on Cisco IOS XR Software* module in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

- [absolute-timeout, page 1103](#)
- [access-class, page 1105](#)
- [autocommand, page 1107](#)
- [banner exec, page 1110](#)
- [banner incoming, page 1112](#)
- [banner login, page 1114](#)
- [banner motd, page 1116](#)
- [banner prompt-timeout, page 1118](#)
- [clear line, page 1120](#)
- [clear line vty, page 1122](#)
- [cli interactive syntax check, page 1124](#)
- [cli whitespace completion, page 1126](#)
- [databits, page 1128](#)
- [disconnect, page 1130](#)
- [disconnect-character, page 1132](#)
- [escape-character, page 1134](#)
- [exec-timeout, page 1136](#)
- [flowcontrol hardware, page 1138](#)

- [length, page 1140](#)
- [line, page 1142](#)
- [parity, page 1144](#)
- [resume, page 1146](#)
- [send, page 1148](#)
- [session-limit, page 1150](#)
- [session-timeout, page 1151](#)
- [show line, page 1153](#)
- [show sessions, page 1157](#)
- [show terminal, page 1159](#)
- [show users, page 1161](#)
- [stopbits, page 1163](#)
- [terminal exec prompt, page 1165](#)
- [terminal exec utility pager, page 1167](#)
- [terminal length, page 1168](#)
- [terminal width, page 1170](#)
- [timestamp disable, page 1172](#)
- [transport input, page 1173](#)
- [transport output, page 1175](#)
- [transport preferred, page 1177](#)
- [vty-pool, page 1179](#)
- [width \(display\), page 1182](#)

absolute-timeout

To set the absolute timeout for line disconnection, use the **absolute-timeout** command in line template configuration mode. To remove the **absolute-timeout** command from the configuration file and restore the system to its default condition, use the **no** form of this command.

absolute-timeout *minutes*

no absolute-timeout *minutes*

Syntax Description

<i>minutes</i>	Absolute timeout interval, in minutes. Range is from 10 to 10000.

Command Default

minutes: 1440

Command Modes

Line template configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 5.0.0	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **absolute-timeout** command to terminate the connection after the specified time has elapsed, regardless of whether the connection is being used at the time of termination. You can specify an absolute-timeout value for each port. The user is notified 20 seconds before the session is terminated.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set the session timeout value to 2880 minutes (2 days) for the default line template:

```
RP/0/RSP0/CPU0:router(config)# line default
RP/0/RSP0/CPU0:router(config-line)# absolute-timeout 2880
```

Related Commands

Command	Description
banner incoming , on page 1112	Sets the idle wait timeout interval for user input over a physical terminal connection.
session-timeout , on page 1151	Sets the idle wait timeout interval for user input over a virtual terminal connection.

access-class

To restrict incoming and outgoing connections using an IPv4 or IPv6 access list, use the **access-class** command in line template configuration mode. To remove the restriction, use the **no** form of this command.

access-class *list-name* {**in**|**out**}

no accessclass *list-name* {**in**|**out**}

Syntax Description

<i>list-name</i>	IPv4 or IPv6 access list name.
in	Filters incoming connections.
out	Filters outgoing connections.

Command Default

No access class is set.

Command Modes

Line template configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **access-class** command to restrict incoming or outgoing connections to addresses defined in an access list. Use the **ipv4 access-list** or **ipv6 access-list** command to define an access list by name.



Note

To restrict access of incoming or outgoing connections over IPv4 and IPv6, the IPv4 access list and IPv6 access list must share the same name.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to specify an access class assigned to outgoing connections for the default line template:

```
RP/0/RSP0/CPU0:router(config)# line default
RP/0/RSP0/CPU0:router(config-line)# access-class vtyacl out
```

The following sample output from the **show ipv4 access-lists** command displays the IPv4 access list named vtyacl:

```
RP/0/RSP0/CPU0:router# show ipv4 access-lists vtyacl

ipv4 access-list vtyacl
 10 permit ip host 10.32.162.48 any
 20 permit ip host 10.20.49.170 any
 30 permit ip host 10.60.3.5 any
```

The following sample output from the **show ipv6 access-lists** command displays the IPv6 access list name vtyacl:

```
RP/0/RSP0/CPU0:router# show ipv6 access-lists vtyacl

ipv6 access-list vtyacl
 10 permit ipv6 host 2001:db8:2222:: any
 20 permit ipv6 host 2001:db8:0:4::2 any
```

Related Commands

Command	Description
ipv4 access-list	Defines an IPv4 access list by name.
ipv6 access-list	Defines an IPv6 access list by name.

autocommand

To automatically run one or more commands after a user logs in to a vty terminal session, use the **autocommand** command in line default or line template configuration mode. To remove the **autocommand** command from the configuration file and restore the system to its default condition, use the **no** form of this command.

autocommand *command*

no autocommand *command*

Syntax Description

<i>command</i>	Command or command alias to be executed on user login to a vty session.

Command Default

No default behavior or values

Command Modes

Line template configuration

Line default configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **autocommand** command to automatically run a command or command alias when a user logs in to a vty session. To run multiple commands, use a command alias for the *command* argument. When the user logs in, the commands included in the alias are run sequentially.



Note

The **autocommand** command is supported on vty connections only; it is not supported on console or aux line connections. Use this command to automatically run a command after user login.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to use the **autocommand** command to automatically run the **show ip interface brief** command when a user logs in to a default vty session:

```
RP/0/RSP0/CPU0:router# configure terminal
RP/0/RSP0/CPU0:router(config)# line default
RP/0/RSP0/CPU0:router(config-line)# autocommand show ip interface brief
RP/0/RSP0/CPU0:router(config-line)# end

Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:yes

RP/0/RSP0/CPU0:router# exit

<Your 'TELNET' connection has terminated>
```

The following example shows how the **show ip interface brief** command is automatically run when the user logs on to a vty session:

```
User Access Verification

Username: lab
Password:

Executing Autocommand 'show ip interface brief'
RP/0/RSP0/CPU0:router# show ip interface brief

Interface                               IP-Address      Status           Protocol
MgmtEth0/RP0/CPU0/0                    172.16.0.0      Up               Up
POS0/0/0/0                              unassigned      Up               Up
POS0/0/0/1                              unassigned      Up               Up
POS0/0/0/2                              unassigned      Up               Up
POS0/0/0/3                              unassigned      Up               Up
POS0/3/0/0                              unassigned      Up               Up
POS0/3/0/1                              unassigned      Up               Up
POS0/3/0/2                              unassigned      Up               Up
POS0/3/0/3                              unassigned      Up               Up
```

The following example shows how to disable the feature using the **no** form of the **autocommand** command. In this example, the autocommand for the **show ip interface brief** command is disabled. When the user logs out, and logs back in, the **autocommand** command does not run.

```
RP/0/RSP0/CPU0:router# configure terminal
RP/0/RSP0/CPU0:router(config)# line default
RP/0/RSP0/CPU0:router(config-line)# no autocommand ?

LINE   Appropriate EXEC command

RP/0/RSP0/CPU0:router(config-line)# no autocommand show ip interface brief
RP/0/RSP0/CPU0:router(config-line)# end

Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:yes

RP/0/RSP0/CPU0:router# exit

<Your 'TELNET' connection has terminated>

User Access Verification

Username: lab
Password:
RP/0/RSP0/CPU0:router#
```

The following example shows how to use a command alias with the **autocommand** command to run more than one command when a user logs in to a default vty session. In this example, the alias “test” is created to

include the **show ip interface brief** command and the **show users** command. The autocommand feature is then used to run the “test” alias when a user logs in to the vty terminal:

```
RP/0/RSP0/CPU0:router# configure terminal
RP/0/RSP0/CPU0:router(config)# alias test show ip interface brief; show users
RP/0/RSP0/CPU0:router(config)# line default
RP/0/RSP0/CPU0:router(config-line)# autocommand test
RP/0/RSP0/CPU0:router(config-line)# end

Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:yes

RP/0/RSP0/CPU0:router# exit

<Your 'TELNET' connection has terminated>

User Access Verification

Username: lab
Password:

Executing Autocommand 'test'
RP/0/RSP0/CPU0:router# test

RP/0/RSP0/CPU0:router# show ip interface brief
```

Interface	IP-Address	Status	Protocol
MgmtEth0/RP0/CPU0/0	172.16.0.0	Up	Up
POS0/0/0/0	unassigned	Up	Up
POS0/0/0/1	unassigned	Up	Up
POS0/0/0/2	unassigned	Up	Up
POS0/0/0/3	unassigned	Up	Up
POS0/3/0/0	unassigned	Up	Up
POS0/3/0/1	unassigned	Up	Up
POS0/3/0/2	unassigned	Up	Up
POS0/3/0/3	unassigned	Up	Up

```
RP/0/RSP0/CPU0:router# show users
```

Line	User	Service	Conns	Idle	Location
* vty0	lab	telnet	0	00:00:00	172.16.0.0

banner exec

To create a message that is displayed when an EXEC process is created (an EXEC banner), use the **banner exec** command in global configuration mode. To delete the EXEC banner, use the **no** form of this command.

```
banner exec delimiter message delimiter
no banner exec
```

Syntax Description

<i>delimiter</i>	Delimiting character is (c).
<i>message</i>	Message text. Text may include tokens in the form \$(<i>token</i>) in the message text. Tokens are replaced with the corresponding configuration variable. Tokens are described in Table 78: banner exec Tokens, on page 1110 .

Command Default

No EXEC banner is displayed.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **banner exec** command to specify a message that is displayed when an EXEC process is created (a line is activated or an incoming connection is made to a vty). Follow this command with one or more blank spaces and the delimiting character (c). After entering one or more lines of text, terminate the message with the delimiting character (c).

When a user connects to a router, the message-of-the-day (MOTD) banner appears first, followed by the login banner and prompts. After the user logs in to the router, the EXEC banner or incoming banner is displayed, depending on the type of connection. For a reverse Telnet login, the incoming banner is displayed. For all other connections, the router displays the EXEC banner.

Use tokens in the form \$(*token*) in the message text to customize the banner. Tokens display current configuration variables, such as the router hostname and IP address.

The tokens are described in this table.

Table 78: banner exec Tokens

Token	Information Displayed in the Banner
\$hostname	Displays the hostname for the router.
\$domain	Displays the domain name for the router.
\$line	Displays the vty or tty (asynchronous) line number.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set an EXEC banner that uses tokens:

```
RP/0/RSP0/CPU0:router(config)# banner exec c
Enter TEXT message. End with the character 'c'.
THIS IS AN EXEC BANNER
c
```

Related Commands

Command	Description
banner incoming, on page 1112	Defines and enables a customized message that is displayed when there is an incoming connection to a terminal line from a host on the network.
banner login, on page 1114	Defines and enables a customized banner that is displayed before the username and password login prompts.
banner motd, on page 1116	Defines a customized MOTD banner.
banner prompt-timeout, on page 1118	Defines a customized banner that is displayed when there is a login timeout.

banner incoming

To create a banner that is displayed when there is an incoming connection to a terminal line from a host on the network, use the **banner incoming** command in global configuration mode. To delete the incoming connection banner, use the **no** form of this command.

banner incoming *delimiter message delimiter*
no banner incoming

Syntax Description

<i>delimiter</i>	Delimiting character is (c).
<i>message</i>	Message text. You can include tokens in the form \$(<i>token</i>) in the message text. Tokens are replaced with the corresponding configuration variable. Tokens are described in Table 79: banner incoming Tokens, on page 1113 .

Command Default

No incoming banner is displayed.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Follow the **banner incoming** command with one or more blank spaces and the delimiting character (c). After entering one or more lines of text, terminate the message with the second occurrence of the delimiting character (c).

An *incoming connection* is one initiated from the network side of the router. Incoming connections are also called reverse Telnet sessions. These sessions can display message-of-the-day (MOTD) banners and incoming banners, but they do not display EXEC banners.

When a user connects to a router, the MOTD banner (if configured) appears first, followed by the login banner and prompts. After the user logs in to the router, the EXEC banner or incoming banner is displayed, depending on the type of connection. For a reverse Telnet login, the incoming banner is displayed. For all other connections, the router displays the EXEC banner.

Incoming banners cannot be suppressed. If you do not want the incoming banner to appear, you must delete it with the **no banner incoming** command.

To customize the banner, use tokens in the form $\$(token)$ in the message text. Tokens display current variables, such as the router hostname and IP address.

This table describes the tokens.

Table 79: banner incoming Tokens

Token	Information Displayed in the Banner
$\$(hostname)$	Displays the hostname for the router.
$\$(domain)$	Displays the domain name for the router.
$\$(line)$	Displays the vty or tty (asynchronous) line number.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to create an incoming connection banner:

```
RP/0/RSP0/CPU0:router(config)# banner incoming c
Enter TEXT message. End with the character 'c'
THIS IS AN INCOMING BANNER.
c
```

Related Commands

Command	Description
banner exec, on page 1110	Defines a customized banner that is displayed whenever the EXEC process is initiated.
banner login, on page 1114	Defines and enables a customized banner that is displayed before the username and password login prompts.
banner motd, on page 1116	Defines a customized MOTD banner.
banner prompt-timeout, on page 1118	Defines a customized banner that is displayed when there is a login timeout.

banner login

To create a customized banner that is displayed before the username and password login prompts, use the **banner login** command in global configuration mode. To disable the login banner, use **no** form of this command.

banner login *delimiter message delimiter*
no banner login

Syntax Description

<i>delimiter</i>	Delimiting character is (c).
<i>message</i>	Message text. You can include tokens in the form \$(<i>token</i>) in the message text. Tokens are replaced with the corresponding configuration variable. Tokens are described in Table 80: banner login Tokens, on page 1114 .

Command Default

No login banner is displayed.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Follow the **banner login** command with one or more blank spaces and the delimiting character (c). Then enter one or more lines of text, terminating the message with the second occurrence of the delimiting character (c).

When a user connects to the router, the message-of-the-day (MOTD) banner (if configured) appears first, followed by the login banner and prompts. After the user successfully logs in to the router, the EXEC banner or incoming banner is displayed, depending on the type of connection. For a reverse Telnet login, the incoming banner is displayed. For all other connections, the router displays the EXEC banner.

To customize the banner, use tokens in the form \$(*token*) in the message text. Tokens display current configuration variables, such as the router hostname and IP address.

Tokens are described in the this table.

Table 80: banner login Tokens

Token	Information Displayed in the Banner
\$hostname	Displays the hostname for the router.
\$domain	Displays the domain name for the router.
\$line	Displays the vty or tty (asynchronous) line number.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set a login banner:

```
RP/0/RSP0/CPU0:router(config)# banner login c
Enter TEXT message. End with the character 'c'.
THIS IS A LOGIN BANNER
c
```

Related Commands

Command	Description
banner exec, on page 1110	Defines a customized banner that is displayed whenever the EXEC process is initiated.
banner incoming, on page 1112	Defines and enables a customized message that is displayed when there is an incoming connection to a terminal line from a host on the network.
banner motd, on page 1116	Defines a customized MOTD banner.
banner prompt-timeout, on page 1118	Defines a customized banner that is displayed when there is a login timeout.

banner motd

To create a message-of-the-day (MOTD) banner, use the **banner motd** command in global configuration

mode. To delete the MOTD banner, use the **no** form of this command.

banner motd *delimiter message delimiter*

no banner motd

Syntax Description

<i>delimiter</i>	Delimiting character is (c).
<i>message</i>	Message text. You can include tokens in the form \$(<i>token</i>) in the message text. Tokens are replaced with the corresponding configuration variable.

Command Default

No MOTD banner is displayed.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Follow this command with one or more blank spaces and the delimiting character (c). Then enter one or more lines of text, terminating the message with the second occurrence of the delimiting character (c).

This MOTD banner is displayed to all terminals connected and is useful for sending messages that affect all users (such as impending system shutdowns). Use the **no banner motd** command to disable the MOTD banner on a line.

When a user connects to the router, the MOTD banner (if configured) appears first, followed by the login banner and prompts. After the user successfully logs in to the router, the EXEC banner or incoming banner is displayed, depending on the type of connection. For a reverse Telnet login, the incoming banner is displayed. For all other connections, the router displays the EXEC banner.

To customize the banner, use tokens in the form \$(token) in the message text. Tokens display current configuration variables, such as the router hostname and IP address.

Tokens are described in this table.

Table 81: banner motd Tokens

Token	Information Displayed in the Banner
\$(hostname)	Displays the hostname for the router.
\$(domain)	Displays the domain name for the router.
\$(line)	Displays the vty or tty (asynchronous) line number.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to configure an MOTD banner with a token:

```
RP/0/RSP0/CPU0:router(config)# banner motd c
```

```
Enter TEXT message. End with the character 'c'.
```

```
Notice: all routers in $(domain) will be upgraded beginning April 20
c
```

Related Commands

Command	Description
banner exec, on page 1110	Defines and enables a customized banner that is displayed whenever the EXEC process is initiated.
banner incoming, on page 1112	Defines and enables a customized message that is displayed when there is an incoming connection to a terminal line from a host on the network.
banner login, on page 1114	Defines and enables a customized banner that is displayed before the username and password login prompts.
banner prompt-timeout, on page 1118	Defines a customized banner that is displayed when there is a login timeout.

banner prompt-timeout

To create a banner that is displayed when there is a login authentication timeout, use the **banner prompt-timeout** command in global configuration mode. To delete the prompt timeout banner, use the **no** form of this command.

banner prompt-timeout *delimiter message delimiter*
no banner prompt-timeout

Syntax Description

<i>delimiter</i>	Delimiting character is (c).
<i>message</i>	Message text. You can include tokens in the form \$(<i>token</i>) in the message text. Tokens are replaced with the corresponding configuration variable.

Command Default

No banner is displayed when there is a login authentication timeout.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Follow this command with one or more blank spaces and the delimiting character (c). Then enter one or more lines of text, terminating the message with the second occurrence of the delimiting character (c).

This prompt-timeout banner is displayed when there is a login authentication timeout at the username and password prompt.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to configure a prompt-timeout banner:

```
RP/0/RSP0/CPU0:router(config)# banner prompt-timeout c
Enter TEXT message. End with the character 'c'.
THIS IS A PROMPT TIMEOUT BANNER
c
```

Related Commands

Command	Description
banner exec, on page 1110	Defines and enables a customized banner that is displayed whenever the EXEC process is initiated.
banner incoming, on page 1112	Defines and enables a customized message that is displayed when there is an incoming connection to a terminal line from a host on the network.
banner login, on page 1114	Defines and enables a customized banner that is displayed before the username and password login prompts.
banner motd, on page 1116	Defines a customized MOTD banner.

clear line

To clear an auxiliary or console line to an idle state, use the **clear line** command in EXEC mode.

clear line {aux| console} location *node-id*

Syntax Description

aux	Clears the auxiliary line.
console	Clears the console line.
location <i>node-id</i>	Specifies the location of a route processor (RP) where the auxiliary or console line to be cleared resides. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
tty-access	execute

Examples

The following example shows how to clear the console line, putting it in an idle state:

```
RP/0/RSP0/CPU0:router# clear line console location 0/RP1/CPU0
```

Related Commands

Command	Description
show users , on page 1161	Displays information about the active lines on the networking device.

clear line vty

To clear a virtual terminal line (vty) to an idle state, use the **clear line vty** command in EXEC mode.

clear line vty *line-number*

Syntax Description

<i>line-number</i>	Line number in the range from 0 to 99.

Command Default

No default behavior or values

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show users** command to determine the origin of the connection and which lines to clear. When a line is cleared to an idle state, the user on the other end of the connection receives notice that the connection was closed by a foreign host.

Task ID

Task ID	Operations
tty-access	execute

Examples

The following example shows how to reset vty 3 to the idle state:

```
RP/0/RSP0/CPU0:router# clear line vty 3
```

Related Commands

Command	Description
show users , on page 1161	Displays information about the active lines on the networking device.

cli interactive syntax check

To enable interactive syntax checking, use the **cli interactive syntax check** command in the appropriate line configuration mode. To disable interactive syntax checking, use the **no** form of this command.

cli interactive syntax check

no cli interactive syntax check

Syntax Description This command has no keywords or arguments.

Command Default Interactive syntax checking is disabled.

Command Modes

- Line console configuration
- Line default configuration
- Line template configuration

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **cli interactive syntax check** command to check command syntax as you type. You are not allowed to enter incorrect syntax.

Task ID	Operations
tty-access	read, write

Examples The following example shows how to enable interactive syntax checking:

```
RP/0/RSP0/CPU0:router(config)# line console
RP/0/RSP0/CPU0:router(config-line)# cli interactive syntax check
```


Related Commands

Command	Description
cli whitespace completion, on page 1126	Enables completion of a command when you type the space key.

cli whitespace completion

To enable completion of a command when you type the space key, use the **cli whitespace completion** command in the appropriate line configuration mode. To disable whitespace completion, use the **no** form of this command.

cli whitespace completion
no cli whitespace completion

Syntax Description This command has no keywords or arguments.

Command Default Whitespace completion is disabled.

Command Modes

- Line console configuration
- Line default configuration
- Line template configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **cli whitespace completion** command to complete the next word of the command syntax if you type the space key before completing the word. If more than one option is valid, all options are displayed for you to choose one.

Task ID	Task ID	Operations
	tty-access	read, write

Examples The following example shows how to enable whitespace completion:

```
RP/0/RSP0/CPU0:router(config)# line console
RP/0/RSP0/CPU0:router(config-line)# cli whitespace completion
```

Related Commands

Command	Description
cli interactive syntax check, on page 1124	Enables interactive syntax checking.

databits

To set the data bits per character for physical terminal connections, use the **databits** command in line console configuration mode. To restore the default value, use the **no** form of this command.

```
databits {5| 6| 7| 8}
no databits
```

Syntax Description

5	Sets the data bits per character to 5.
6	Sets the data bits per character to 6.
7	Sets the data bits per character to 7.
8	Sets the data bits per character to 8.

Command Default

Eight databits per character.

Command Modes

Line console configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **databits** command to set the data bits attributes for physical terminal connections. Physical terminal connections use either the console or auxiliary line template.

The **databits** command masks the high bit on input from devices that generate 7 data bits with parity. If parity is being generated, specify 7 data bits per character. If no parity generation is in effect, specify 8 data bits per character. The keywords **5** and **6** are supplied for compatibility with older devices and generally are not used.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set the data bits per character for the console terminal template to 7:

```
RP/0/RSP0/CPU0:router(config)# line console
RP/0/RSP0/CPU0:router(config-line)# databits 7
```

Related Commands

Command	Description
show users, on page 1161	Displays information about the active lines on the networking device.
stopbits, on page 1163	Sets the number of stop bits.

disconnect

To disconnect a network connection, use the **disconnect** command in EXEC mode.

disconnect [*connection-number*|*network-name*]

Syntax Description

<i>connection-number</i>	(Optional) Number of the line of the active network connection to be disconnected. Range is from 1 to 20.
<i>network-name</i>	(Optional) Name of the active network connection to be disconnected.

Command Modes

EXEC

Command Default

Disconnects the existing network connection if no arguments are provided.

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Do not disconnect a line to end a session. Instead, log off the host before ending the session to clear the connection. If you cannot log out of an active session, disconnect the line.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to disconnect from a device (in this example "User1") to return to the router:

```
User1% disconnect
Connection closed by remote host

RP/0/RSP0/CPU0:router#
```


disconnect-character

To define a character to disconnect a session, use the **disconnect-character** command in line template configuration mode. To remove the **disconnect-character** command from the configuration file and restore the system to its default condition, use the **no** form of this command.

disconnect-character [*number*| *character*]

no disconnect-character

Syntax Description

<i>number</i>	(Optional) ASCII decimal equivalent of the disconnect character. Range is from 0 through 255.
<i>character</i>	(Optional) Disconnect character.

Command Default

No disconnect character is defined.

Command Modes

Line template configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The break character is represented by 0; null cannot be represented.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set the disconnect character for the default line template to the Esc character, which is the ASCII decimal equivalent 27:

```
RP/0/RSP0/CPU0:router(config)# line default
RP/0/RSP0/CPU0:router(config-line)# disconnect-character 27
```


Related Commands

Command	Description
escape-character , on page 1134	Defines an escape character.

escape-character

To define a character to escape a session, use the **escape-character** command in line template configuration mode. To remove the **escape-character** command from the configuration file and restore the system to its default condition, use the **no** form of this command.

escape-character {**break**| *number*| *character*| **default**| **none**}

no escape-character

Syntax Description

break	Sets the escape character to the Break key.
<i>number</i>	ASCII decimal equivalent of the escape character. Range is from 0 through 255.
<i>character</i>	Escape character.
default	Specifies the default escape character (^X).
none	Disables the escape function.

Command Default

The default escape character is ^X.

Command Modes

Line template configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **escape-character** command to define an escape character sequence that is different from the default. Use the escape character to exit from an existing connection and return to the EXEC prompt.

The default escape key sequence is Ctrl-Shift-6, X (^X). The **escape-character** command with the **default** keyword sets the escape character to the Break key (the default setting for the Break key is Ctrl-C).

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set the escape character for the default line template to Ctrl-P, which is the ASCII decimal character 16:

```
RP/0/RSP0/CPU0:router(config)# line default
RP/0/RSP0/CPU0:router(config-line)# escape-character 16
```

Related Commands

Command	Description
disconnect-character , on page 1132	Defines a disconnect character.

exec-timeout

To set the interval that the EXEC command interpreter waits until user input is detected, use the **exec-timeout** command in the appropriate line configuration mode. To remove the **exec-timeout** command from the running configuration and restore the system to its default condition, use the **no** form of this command.

exec-timeout *minutes seconds*

no exec-timeout *minutes seconds*

Syntax Description

<i>minutes</i>	Minutes for the wait interval. Range is from 0 to 35791.
<i>seconds</i>	Seconds for the wait interval. Range is from 0 to 2147483.

Command Default

minutes: 10

seconds: 0

Command Modes

Line console configuration
Line default configuration
Line template configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If no input is detected during the interval, the EXEC facility resumes the current connection. If no connections exist, the EXEC facility returns the terminal to the idle state and disconnects the incoming session. To disable the EXEC timeout function so that the EXEC session never timeouts, enter the following command:

```
exec-timeout 00
```

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set the timeout interval for the console line template to 60 minutes, 0 seconds:

```
RP/0/RSP0/CPU0:router(config)# line console
RP/0/RSP0/CPU0:router(config-line)# exec-timeout 60 0
```

Related Commands

Command	Description
absolute-timeout, on page 1103	Sets the absolute timeout for line disconnection.
session-timeout, on page 1151	Sets the idle wait timeout interval for user input over a virtual terminal connection.

flowcontrol hardware

To configure the hardware flow control setting for physical terminal connections, use the **flowcontrol hardware** command in line console configuration mode. To remove the attribute from the configuration file and restore the system to its default condition, use the **no** form of this command.

flowcontrol hardware {in| out| none}

no flowcontrol hardware {in| out| none}

Syntax Description

in	Specifies inbound flow control.
out	Specifies outbound flow control.
none	Specifies no flow control.

Command Default

None

Command Modes

Line console configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **flowcontrol hardware** command to set the flow control attribute for physical line connections. Physical line connections use either the console or auxiliary line template.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to restrict the hardware flow control to inbound for the console line template:

```
RP/0/RSP0/CPU0:router (config) # line console
```

RP/0/RSP0/CPU0:router(config-line)# **flowcontrol hardware in**

Related Commands

Command	Description
show users, on page 1161	Displays information about the active lines on the networking device.

length

To set the number of lines that display at one time on the screen, use the **length** command in line template configuration mode. To remove the **length** command from the configuration file and restore the system to its default condition, use the **no** form of this command.

length *lines*

no length *lines*

Syntax Description

<i>lines</i>	Number of lines that displays on a screen. Range is from 0 through 512. 0 specifies no pausing. The default is 24.

Command Default

lines : 24

Command Modes

Line template configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **length** command to modify the default length setting for the specified line template. The length setting determines when the screen pauses during the display of multiple-screen output. Specifying a value of 0 for the *lines* argument prevents the router from pausing between screens of output.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set the length of the default line template to 33 lines:

```
RP/0/RSP0/CPU0:router(config)# line default
RP/0/RSP0/CPU0:router(config-line)# length 33
```


Related Commands

Command	Description
terminal length , on page 1168	Sets the length of the display terminal for the current terminal session.

line

To specify the console, the default, or a user-defined line template and enter line template configuration mode, use the **line** command in global configuration mode.

line {console| default| template *template-name*}

Syntax Description

console	Specifies the line template for the console line.
default	Specifies the default line template.
template <i>template-name</i>	Specifies a user-defined line template to be applied to a vty pool.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **line** command to specify a line template type and enter into line template configuration mode. Line templates are a collection of attributes used to configure and manage physical terminal line connections (the console and auxiliary ports) and vty connections. The following templates are available in Cisco IOS XR software:

- Default line template—The default line template that applies to a physical and virtual terminal lines.
- Console line template—The line template that applies to the console line.
- User-defined line templates—User-defined line templates that can be applied to a range of virtual terminal lines.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to enter line template configuration mode to allow configuration changes to be made to the default line template:

```
RP/0/RSP0/CPU0:router(config)# line default  
RP/0/RSP0/CPU0:router(config-line)#
```

Related Commands

Command	Description
vty-pool, on page 1179	Creates or modifies a vty pool.

parity

To set the parity bit for physical terminal connections, use the **parity** command in line console configuration mode. To specify no parity, use the **no** form of this command.

parity {even| none| odd}

no parity {even| none| odd}

Syntax Description

even	Specifies even parity.
none	Specifies no parity.
odd	Specifies odd parity.

Command Default

No parity is set.

Command Modes

Line console configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Communication protocols provided by devices such as terminals and modems often require a specific parity bit setting.

Use the **parity** command for setting the parity attribute for physical terminal connections. Physical terminal connections use either the console or auxiliary line template.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set the line parity configuration to even for the console line template:

```
RP/0/RSP0/CPU0:router(config)# line console
```

```
RP/0/RSP0/CPU0:router(config-line)# parity even
```

Related Commands

Command	Description
show users, on page 1161	Displays information about the active lines on the networking device.

resume

To switch to another active Secure Shell (SSH) or Telnet session, use the **resume** command in EXEC mode.

resume [*connection*]

Syntax Description	<i>connection</i>	(Optional) Name or number of the active network connection; the default is the most recent connection. Number range is from 1 to 20.

Command Default	The most recent connection.

Command Modes	EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

SSH and Telnet sessions can be established to another router or server.

When the network session is being established and without disconnecting the network session, you can resume the router console session by typing a special sequence of characters as shown. After switching back to the router console, the network connection can be resumed by specifying the number of the connection or the name of the connection.

You can have several concurrent sessions open and switch back and forth between them. The number of sessions that can be open is defined using the **session-limit** command.

You can switch between sessions by escaping one session and resuming a previously opened session, as follows:

- 1 Escape from the current session by pressing the escape sequence (Ctrl Shift-6, x [^^X]) to return to the EXEC prompt.
- 2 Enter the **show sessions** command to list the open sessions. All open sessions associated with the current terminal line are displayed.
- 3 Enter the **resume** command and the session number to make the connection.

You can also resume the previous session by pressing the **Return** key.

The **^^X** and commands are available for all supported connection protocols.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to escape from one connection and resume another. You can omit the connection name and simply enter the connection number to resume that connection.

```
host1% ^^X
RP/0/RSP0/CPU0:router# resume 1
blg_router#
```

Related Commands

Command	Description
session-limit, on page 1150	Sets the maximum number of outgoing terminal sessions from the current terminal.
show sessions, on page 1157	Displays information about SSH and Telnet connections.
telnet	Logs in to a host that supports Telnet.

send

To send messages to one or all terminal lines, use the **send** command in EXEC mode.

```
send {*| line-number| aux 0| console 0| vty number}
```

Syntax Description

*	Sends a message to all tty lines.
line-number	Line number to which the message is sent. A number from 0 to 101.
aux 0	Sends a message to the auxiliary line.
console 0	Sends a message to the console line.
vtty number	Sends a message to a virtual terminal line (vty). Range is 0 to 99.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The system prompts for the message, which can be up to 500 characters long. Enter **Ctrl-Z** to end the message. Enter **Ctrl-C** to abort this command.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to send a message to all lines:

```
RP/0/RSP0/CPU0:router# send *

Enter message, end with CTRL/Z; abort with CTRL/C:
The system will be shut down in 10 minutes for repairs.^Z
Send message? [confirm]
RP/0/RSP0/CPU0:router#

***
***
*** Message from tty to all terminals:
***
The system will be shut down in 10 minutes for repairs.
```

session-limit

To set the maximum number of outgoing terminal sessions from the current terminal, use the **session-limit** command in the appropriate line configuration mode. To remove any specified session limit, use the **no** form of this command.

session-limit *connections*
no session-limit

Syntax Description	<i>connections</i>	Maximum number of outgoing connections. Range is from 0 through 20.

Command Default	<i>connections</i> : 6

Command Modes	Line console configuration Line default configuration Line template configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	tty-access	read, write

Examples	The following example shows how to limit the number of active outgoing connections for the default line template to eight: RP/0/RSP0/CPU0:router(config)# line default RP/0/RSP0/CPU0:router(config-line)# session-limit 8

session-timeout

To set the timeout interval for all outgoing connections from the current terminal, use the **session-timeout** command in the appropriate line configuration mode. To remove the **session-timeout** command from the configuration file and restore the system to its default condition, use the **no** form of this command.

session-timeout *minutes* [**output**]

no session-timeout *minutes*

Syntax Description

<i>minutes</i>	Timeout interval, in minutes. Range is 0 to 35791. The default is 10.
output	(Optional) Specifies that when traffic is sent to an asynchronous line from the router (within the specified interval), the connection is retained.

Command Default

minutes : 10

Command Modes

Line console configuration
Line default configuration
Line template configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **session-timeout** command to set the interval that Cisco IOS XR software waits for traffic before closing the connection to a remote device and returning the terminal to an idle state. If the **output** keyword is not specified, the session timeout interval is based solely on detected input from the user. If the keyword is specified, the interval is based on input and output traffic.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set the session timeout value for the default line template to 120 minutes (2 hours):

```
RP/0/RSP0/CPU0:router(config)# line default  
RP/0/RSP0/CPU0:router(config-line)# session-timeout 120
```

show line

To display the parameters of terminal lines, use the **show line** command in EXEC mode.

show line [**aux location** *node-id*] [**console location** *node-id*] **vty number**]

Syntax Description

aux	(Optional) Displays the terminal line parameters for the auxiliary line.
location <i>node-id</i>	(Optional) Specifies the location for the route processor (RP) on which the auxiliary or console port resides. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
console	(Optional) Displays the terminal line parameters for the console line.
vty number	(Optional) Specifies a virtual terminal line (vty) number. Range is from 0 through 99.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
tty-access	read

Examples

The following example shows sample output from the **show line** command. The asterisk (*) indicates the current terminal session.

```
RP/0/RSP0/CPU0:router# show line
```

Tty	Speed	Modem	Uses	Noise	Overruns	Acc I/O
aux0_0_0	9600	-	-	-	0/0	-/-
* con0_0_0	9600	-	-	-	0/0	-/-
vtty0	0/0	-	-	-	0/0	-/-
vtty1	0/0	-	-	-	0/0	-/-
vtty2	0/0	-	-	-	0/0	-/-
vtty3	0/0	-	-	-	0/0	-/-
vtty4	0/0	-	-	-	0/0	-/-
vtty100	0/0	-	-	-	0/0	-/-
vtty101	0/0	-	-	-	0/0	-/-
vtty102	0/0	-	-	-	0/0	-/-
vtty103	0/0	-	-	-	0/0	-/-
vtty104	0/0	-	-	-	0/0	-/-
vtty105	0/0	-	-	-	0/0	-/-

Table 82: show line Field Descriptions

Field	Description
Tty	Available ttys and vtys.
Speed	Baud rate that the inbound serial connection is using, in bps.
Modem	Not implemented.
Uses	Not implemented.
Noise	Not implemented.
Overruns	Hardware Universal Asynchronous Receiver/Transmitter (UART) overruns or software buffer overflows, both defined as the number of overruns or overflows that have occurred on the specified line since the system was restarted. Hardware overruns are buffer overruns; the UART chip has received bits from the software faster than it can process them. A software overflow occurs when the software has received bits from the hardware faster than it can process them.
Acc I/O	Not implemented.

The following example shows sample output from the **show line** command with the console line specified:

```
RP/0/RSP0/CPU0:router# show line console location 0/rp0/cpu0
```

Tty	Speed	Overruns	Acc I/O

```

con0/RP0/CPU0      9600      0/0      -/-

Line con0 RP0_CPU0, Location "0/RP0/CPU0", Type "Console"
Length: 24 lines, Width: 80 columns
Baud rate (TX/RX) is 9600, 1 parity, 2 stopbits, 8 databits
Template: console
Capabilities: Timestamp Disabled
Allowed transports are none.

```

Table 83: show line location Field Descriptions

Field	Description
Tty	Unique identifier of the tty; it contains the type of tty and, for physical ttys, it indicates the physical location of the tty.
Speed	Baud rate that the inbound serial connection is using in bps.
Overruns	Hardware UART overruns or software buffer overflows, both defined as the number of overruns or overflows that have occurred on the specified line since the system was restarted. Hardware overruns are buffer overruns; the UART chip has received bits from the software faster than it can process them. A software overflow occurs when the software has received bits from the hardware faster than it can process them.
Acc I/O	Not implemented.
Line	Unique identifier of the TTY. This field displays the type of TTY and the physical location of physical TTYs.
Location	Location of the line.
Type	Line type.
Length	Length of the terminal or screen display, in rows.
Width	Width of the terminal or screen display, in columns.
Baud rate (TX/RX)	Transmit rate/receive rate of the line, in bps.
parity	Parity bits value used for physical terminal connections.
stopbits	Stop bits value used for physical terminal connections.
databits	Data bits value used for physical terminal connections.

Field	Description
Template	Line template being sourced by the particular connection.
Config	Configuration applied to the tty. This field indicates the allowed incoming transports that can be used to access the router from this tty.
Allowed transports are	Incoming transport protocols that can be used by this tty to access the router.

show sessions

To display information about suspended Secure Shell (SSH) and Telnet connections launched from the terminal session, use the **show sessions** command in

EXEC

mode.

show sessions

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show sessions** command to display the hostname, remote connection service used by the router to access the host, idle time, and connection name.

Task ID	Task ID	Operations
	tty-access	read

Examples The following example shows sample output from the **show sessions** command:

```
RP/0/RSP0/CPU0:router# show sessions
```

```
Conn Host          Address           Service Idle Conn Name
*  1 10.26.25.40    10.26.25.40      telnet    15 10.26.25.40
```

The asterisk (*) indicates the current terminal session.

Table 84: show sessions Field Descriptions

Field	Description
Conn	Identifier for the connection used for resuming and disconnecting suspended sessions. An asterisk (*) indicates the current terminal session.
Host	Remote host to which the router is connected. This field displays either the IP address or hostname of the remote host. If the IP address of the remote host is mapped to the hostname (that is, if Domain Name System [DNS] services are enabled) and the session is initiated with the hostname, the output for this field displays the hostname of the host rather than the IP address of the host.
Address	IP address of the remote host.
Service	Remote connection service used.
Idle	Interval (in seconds) since data was last sent on the line.
Conn Name	Equivalent to the "Host" field in Cisco IOS XR software.

Related Commands

Command	Description
disconnect , on page 1130	Disconnects a network connection.
resume , on page 1146	Switches to another active Telnet session.

show terminal

To obtain information about the terminal configuration attribute settings for the current terminal line, use the **show terminal** command in

EXEC

mode.

show terminal

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	tty-access	read

Examples This example shows sample output from the **show terminal** command:

```
RP/0/RSP0/CPU0:router# show terminal
```

```
Line vty0, Location "10.56.249.67", Type "VTY"  
Length: 24 lines, Width: 80 columns  
Baud rate (TX/RX) is 0, 0 parity, 0 stopbits, 0 databits  
Template: default  
Capabilities: Timestamp Disabled  
Allowed transports are telnet ssh.
```

Table 85: show terminal Field Descriptions

Field	Description
Line	Line that is currently being used.
Location	Location of the terminal accessing the router.
Type	Type of line.
Length	Length of the terminal or screen display, in rows.
Width	Width of the terminal or screen display, in columns.
Baud rate (TX/RX)	Transmit or receive rate of the line, in bps.
parity	Parity bits value used for physical terminal connections.
stopbits	Stop bits value used for physical terminal connections.
databits	Data bits value used for physical terminal connections.
Template	Line template being sourced by the particular connection.
Config	Configuration applied to the tty. This field indicates the allowed incoming transports that can be used to access the router from this tty.
Allowed transports are	Incoming transport protocols that can be used by this tty to access the router.

show users

To display information about the active lines on the router, use the **show users** command in EXEC mode.

show users

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **show users** command to display the line number, connection name, idle time, hosts, and terminal location. An asterisk (*) indicates the current terminal session.



Note

To display all user groups and task IDs associated with the currently logged-in user, use the **show user** command in EXEC mode. See the *Authentication, Authorization, and Accounting Commands on Cisco IOS XR Software* module in *Cisco ASR 9000 Series Aggregation Services Router System Security Command Reference*.

Task ID	Task ID	Operations
	tty-access	read

Examples The following example shows sample output identifying an active vty terminal session:

RP/0/RSP0/CPU0:router# **show users**

Line	User	Service	Conns	Idle	Location
con0_RP0_CPU0	cisco	hardware	0	18:33:48	
vty0	cisco	telnet	0	00:30:36	10.33.54.132

```
* vty1          cisco          telnet          0 00:00:00      10.33.54.132
```

Table 86: show users Command Output Field Descriptions

Field	Description
Line	All current connections. An asterisk (*) indicates the active connection.
User	Username of the user logged into the line.
Service	Physical or remote login service used.
Conns	Number of outgoing connections.
Idle	Interval (in hours:minutes:seconds) since last keystroke.
Location	IP address of remote login host. For local (physical) terminal connections, this field is blank.

Related Commands

Command	Description
show line, on page 1153	Displays the parameters of a terminal line.
show user	Displays all user groups and task IDs associated with the currently logged-in user.

stopbits

To set the stop bits used for physical terminal connections, use the **stopbits** command in line console configuration mode. To restore the default, use the **no** form of this command.

stopbits {1| 2}

no stopbits

Syntax Description

1	Specifies one stop bit.
2	Specifies two stop bits. This is the default.

Command Default

Two stop bits.

Command Modes

Line console configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **stopbits** command to set the data bits attributes for physical terminal connections. Physical terminal connections use either the console or auxiliary terminal templates.

Communication protocols provided by devices such as terminals and modems often require a specific stop-bit setting.



Note

The number of stop bits configured on the router and a terminal server should be same. The default number of stop bits on the router is two stop-bits.

Task ID

Task ID	Operations
tty-access	read, write

Examples

This example shows how to change the default from two stop bits to one for the console line template:

```
RP/0/RSP0/CPU0:router(config)# line console
RP/0/RSP0/CPU0:router(config-line)# stopbits 1
```

Related Commands

Command	Description
databits , on page 1128	Sets the number of data bits.

terminal exec prompt

To specify prompt attributes for the current terminal session, use the **terminal exec prompt** command in the appropriate mode.

terminal exec prompt {no-timestamp| timestamp}

Syntax Description

no-timestamp	Disables the time-stamp printing before each command.
timestamp	Enables the time-stamp printing before each command.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **terminal exec prompt** command with the **timestamp** keyword to show the time-stamp display after each command is entered. Use the **terminal exec** command with the **no-timestamp** keyword to disable the time-stamp display.



Note

The **terminal** commands are active for the current terminal session only. To apply a setting to all sessions, use the **line** commands.

Task ID

Task ID	Operations
tty-access	read

Examples

This example shows how to enable the time-stamp prompt. When enabled, the date and time are displayed after each command. In this example, the **show version** command is entered, and the date and time is displayed.

```
RP/0/RSP0/CPU0:router# terminal exec prompt timestamp
RP/0/RSP0/CPU0:router# show version

Thu Jan 14 06:39:50.926 PST

Cisco IOS XR Software, Version 3.9.1.15I[DT_IMAGE]
Copyright (c) 2010 by Cisco Systems, Inc.

ROM: System Bootstrap, Version 1.2(20090903:202931) [ASR9K ROMMON],

router uptime is 6 days, 14 hours, 47 minutes
System image file is "bootflash:disk0/asr9k-os-mpi-3.9.1.15I/mbiasr9k-rp.vm"

cisco ASR9K Series (MPC8641D) processor with 4194304K bytes of memory.
MPC8641D processor at 1333MHz, Revision 2.2

2 Management Ethernet
40 GigabitEthernet
12 TenGigE
219k bytes of non-volatile configuration memory.
975M bytes of compact flash card.
33994M bytes of hard disk.
1605616k bytes of disk0: (Sector size 512 bytes).
1605616k bytes of disk1: (Sector size 512 bytes).

Configuration register on node 0/RSP0/CPU0 is 0x102
Boot device on node 0/RSP0/CPU0 is disk0:
--More--
```

The following example shows how to disable the time-stamp prompt:

```
RP/0/RSP0/CPU0:router# terminal exec prompt no-timestamp
```

Related Commands

Command	Description
line , on page 1142	Specifies the console, the default, or a user-defined line template and enters line template configuration mode.
show terminal , on page 1159	Display the terminal configuration settings for the current terminal line.

terminal exec utility pager

To configure the terminal page display options, use the **terminal exec utility pager** command in the appropriate mode.

terminal exec utility pager {less| more| none}

Syntax Description

less	Specifies to use unix-like "less" bidirectional paging for the terminal display.
more	Specifies to use unix-like "more" unidirectional paging for the terminal display.
none	Specifies that the display is not paginated.

Command Default

No pagination is configured by default.

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **terminal exec utility pager** command with the **more** keyword to scroll forward through command display one screen at a time. "--More--" is displayed at the end of each screen. Press the Space key to advance one screen. Press the Enter key to advance one line. Press the Esc key to exit the command display.

Task ID

Task ID	Operation
tty-access	Read

Examples

This example shows how to limit command display to one screen at a time such that you can move forward through the display:

```
RP/0/RSP0/CPU0:router#terminal exec utility pager more
```

terminal length

To set the number of lines that display at one time on the screen for the current terminal session, use the **terminal length** command in EXEC mode.

terminal length *lines*

Syntax Description	<i>lines</i>	Number of lines that display on a screen. Range is from 0 through 512.

Command Default	None

Command Modes	EXEC

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **terminal length** command to set the terminal length value for only the current terminal session and not save it to the running configuration. Exiting from the terminal session returns the terminal length value to the value configured with the **length** command.

Specifying a value of 0 for the *lines* argument prevents the router from pausing between screens of output.



Note The **terminal** commands are active for the current terminal session only. To apply a setting to all sessions, use the **line** commands.

Task ID	Task ID	Operations
	tty-access	read, write

Examples

This example shows how to set the length for the current terminal session to 120 lines:

```
RP/0/RSP0/CPU0:router# terminal length 120
```

Related Commands

Command	Description
length , on page 1140	Sets the length of the display terminal.

terminal width

To set the width of the display terminal for the current terminal session, use the **terminal width** command in EXEC

mode.

terminal width *characters*

Syntax Description

<i>characters</i>	Number of characters to display on a screen. Range is from 0 to 512.

Command Default

None

Command Modes

EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **terminal width** command to set the terminal width value for only the current terminal session and not save it to the running configuration. Exiting from the terminal session returns the terminal width value to the value configured with the **width** (display) command.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set the terminal width for the current terminal session to 120 characters:

```
RP/0/RSP0/CPU0:router# terminal width 120
```

Related Commands

Command	Description
width (display), on page 1182	Sets the width of the display terminal.

timestamp disable

To disable time-stamp recording at the top of each command output, use the **timestamp disable** command in the appropriate line configuration mode. To reenable time-stamp recording if disabled, use the **no** form of this command.

timestamp disable

no timestamp disable

Syntax Description

This command has no keywords or arguments.

Command Default

Time-stamp recording at the top of each command output is enabled.

Command Modes

Line console configuration
Line default configuration
Line template configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

By default, the time stamp is displayed at the top of any command output. The time stamp records the time at which the command was issued. You can use the **snmp-server view** command to disable this setting so that the time stamp does not appear at the top of the command output. This setting applies to all command outputs on any terminal line to which the current line template applies.

Task ID

Task ID	Operations
tty-access	read, write

Examples

This example shows how to disable time-stamp recording for the console line template:

```
RP/0/RSP0/CPU0:router(config)# line console
RP/0/RSP0/CPU0:router(config-line)# timestamp disable
```


transport input

To define the transport protocols that can be used to access the router, use the **transport input** command in the appropriate line configuration mode. To change or remove the protocol, use the **no** form of this command.

transport input {all| none| ssh| telnet}

no transport input {all| none| ssh| telnet}

Syntax Description

all	Specifies the Secure Shell (SSH) and Telnet protocols.
none	Specifies that the router rejects incoming SSH and Telnet transport protocol connections.
ssh	Specifies the SSH transport protocol.
telnet	Specifies the Telnet transport protocol.

Command Default

All protocols are allowed on the line.

Command Modes

Line console configuration
Line default configuration
Line template configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To be accepted, incoming network connections to an asynchronous port (terminal line) must use a transport protocol specified with the **transport input** command. This command can be useful in limiting the acceptable transport protocols to include or exclude those used by different types of users, or to restrict a line to secure connections (SSH connections).

Task ID

Task ID	Operations
tty-access	read, write

Examples

This example shows how to set the transport input setting for the default line template to SSH connections:

```
RP/0/RSP0/CPU0:router(config)# line default
RP/0/RSP0/CPU0:router(config-line)# transport input ssh
```

Related Commands

Command	Description
transport output, on page 1175	Determines the protocols that can be used for outgoing connections from a line.
transport preferred, on page 1177	Specifies the transport protocol that Cisco IOS XR software uses if the user does not specify one when initiating a connection.

transport output

To specify the transport protocols that can be used for outgoing connections from a line, use the **transport output** command in the appropriate line configuration mode. To change or remove the protocol, use the **no** form of this command.

transport output {all| none| ssh| telnet}

no transport output {all| none| ssh| telnet}

Syntax Description

all	Specifies the Secure Shell (SSH) and Telnet transport protocols.
none	Specifies that the router rejects outgoing SSH and Telnet transport protocol connections.
ssh	Specifies the SSH transport protocol.
telnet	Specifies the Telnet transport protocol.

Command Default

All protocols are allowed on the line.

Command Modes

Line console configuration
Line default configuration
Line template configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Any settings made with the **transport output** command override settings made with the **transport preferred** command.

Task ID

Task ID	Operations
tty-access	read, write

Examples

This example shows how to set the default line template to prevent any outgoing transport protocol connections:

```
RP/0/RSP0/CPU0:router(config)# line default
RP/0/RSP0/CPU0:router(config-line)# transport output none
```

Related Commands

Command	Description
transport input, on page 1173	Defines which protocols to use to connect to a specific line of the router.
transport preferred, on page 1177	Specifies the transport protocol that Cisco IOS XR software uses if the user does not specify one when initiating a connection.

transport preferred

To specify the default outgoing transport protocol to be used for initiating network connections, use the **transport preferred** command in the appropriate line configuration mode. To change or remove the protocol, use the **no** form of this command.

transport preferred {none|ssh|telnet}

no transport preferred {none|ssh|telnet}

Syntax Description

none	Disables the feature.
ssh	Specifies the Secure Shell (SSH) transport protocol.
telnet	Specifies the Telnet transport protocol.

Command Default

No transport protocol is set as the default outgoing protocol.

Command Modes

Line console configuration
Line default configuration
Line template configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **transport preferred** command to provide a default transport protocol to use when initiating outgoing connections. The preferred outgoing transport protocol specified with the **transport preferred** command enables you to initiate an outgoing connection without explicitly specifying the transport protocol.

Cisco IOS XR software assumes that any unrecognized command is a hostname and the software attempts a connection. When the protocol is set to **none**, the system ignores unrecognized commands entered at the EXEC prompt, and does not attempt a connection.

The default setting, the same as using the **transport preferred** command with the **none** keyword, prevents errant connection attempts.

Task ID

Task ID	Operations
tty-access	read, write

Examples

The following example shows how to set the preferred transport setting for the default line template to SSH:

```
RP/0/RSP0/CPU0:router(config)# line default
RP/0/RSP0/CPU0:router(config-line)# transport preferred ssh
```

Related Commands

Command	Description
transport input, on page 1173	Defines which protocols to use to connect to a specific line of the router.
transport output, on page 1175	Determines the protocols that can be used for outgoing connections from a line.

vty-pool

To create or modify a virtual terminal line (vty) pool, use the **vty-pool** command in global configuration

mode. To delete a vty pool, use the **no** form of this command.

vty-pool {**default**|**eem**| *pool-name*} *first-vty last-vty* [**line-template** {**default**| *template-name*}]
no vty-pool {**default**|**eem**| *pool-name*} *first-vty last-vty* [**line-template** {**default**| *template-name*}]

Syntax Description

default	Specifies the default vty pool.
eem	Specifies the embedded event manager vty pool.
<i>pool-name</i>	User-defined vty pool.
<i>first-vty</i>	First vty line in the pool. • For the default vty pool, you must specify 0 for the first vty line. • For a user-defined vty pool, the range is 5 to 99. • For the embedded event manager vty pool, you must specify 100 for the first vty line.
<i>last-vty</i>	Last vty line in the pool. • The default vty pool must contain at least five vtys. Range is 4 to 99. • For a user-defined vty pool, the range is 5 to 99. • The embedded event manager vty pool must contain at least six vtys. Range is 105 to 199.
line-template	(Optional) Specifies the terminal template to be used in the configuration of virtual terminals in the vty pool.
default	Specifies that the vty pool should reference the default template.
<i>template-name</i>	User-defined template to be applied to the vtys in the vty pool.

Command Default

default *vty-pool* : 5 vtys (vty 0 through 4) referencing the default line template.

eem *vty pool* : 6 vtys (vty 100 through 105) referencing the default line template.

Command Modes

Global configuration

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When creating or modifying vty pools, follow these usage guidelines:

- Before creating or modifying the vty pools, enable the Telnet server using the **telnet server** command in global configuration mode. See *Cisco ASR 9000 Series Aggregation Services Router IP Addresses and Services Configuration Guide* and *Cisco ASR 9000 Series Aggregation Services Router IP Addresses and Services Command Reference* for more information.
- The vty range for the default vty pool must start at vty 0 and must contain a minimum of five vtys.
- The vty range from 0 through 99 can reference the default vty pool.
- The vty range from 5 through 99 can reference a user-defined vty pool.
- The vty range from 100 is reserved for the embedded event manager vty pool.
- The vty range for embedded event manager vty pools must start at vty 100 and must contain a minimum of six vtys.
- A vty can be a member of only one vty pool. A vty pool configuration fails if the vty pool includes a vty that is already in another pool.

If you attempt to remove an active vty from the active vty pool when configuring a vty pool, the configuration for that vty pool fails.

Task ID

Task ID	Operations
tty-access	read, write

Examples

This example shows how to configure a user-defined vty pool (test1) that contains vtys 10 through 14 and references the user-defined line template test2:

```
RP/0/RSP0/CPU0:router(config)# vty-pool test1 10 14 line-template test2
```

Related Commands

Command	Description
line , on page 1142	Enters line template configuration mode for the specified line template.

width (display)

To set the width of the display terminal, use the **width** command in the appropriate line configuration mode. To remove the **width** command from the configuration file and restore the system to its default condition, use the **no** form of this command.

width *characters*
no width *characters*

Syntax Description	<i>characters</i>	Number of characters to display on a screen. Range is from 0 to 512.

Command Default	<i>characters</i> : 80

Command Modes	Line console configuration Line default configuration Line template configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. Use the width command to modify the default width setting for the specified line template.

Task ID	Task ID	Operations
	tty-access	read, write

Examples	This example shows how to set the terminal width for the default line template to 99 characters: RP/0/RSP0/CPU0:router(config)# line default RP/0/RSP0/CPU0:router(config-line)# width 99

Related Commands

Command	Description
terminal width , on page 1170	Sets the width of the display terminal for the current terminal session.

width (display)



Utility Commands on the Cisco ASR 9000 Series Router

This module describes the utility commands for Cisco IOS XR software. Utility commands provide CLI equivalents to common UNIX commands.



Note

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. For example, the **universal** keyword can also be entered using the UNIX-equivalent (**-u**). To display the UNIX-equivalent syntax online, enter the **usage** keyword.

- [utility bc, page 1187](#)
- [utility cut, page 1192](#)
- [utility date, page 1197](#)
- [utility date set, page 1200](#)
- [utility df, page 1202](#)
- [utility du, page 1206](#)
- [utility egrep, page 1209](#)
- [utility fgrep, page 1212](#)
- [utility find, page 1214](#)
- [utility head, page 1217](#)
- [utility less, page 1220](#)
- [utility mv, page 1222](#)
- [utility sort, page 1224](#)
- [utility tail, page 1227](#)
- [utility uniq, page 1230](#)
- [utility wc, page 1233](#)

- [utility which, page 1235](#)
- [utility xargs, page 1237](#)

utility bc

To implement an arbitrary precision calculator, use the **utility bc** command in EXEC mode or administration EXEC mode.

utility bc [*file input-file*]

Syntax Description

file
input-file

(Optional) Specifies the text file containing commands and function definitions to be interpreted by the bc utility.

After all files have been read, the bc utility reads input from the standard input (keyboard). If no files are specified, then only the standard input (keyboard) is used.

The syntax of the *input-file* argument is as follows: *device* :[/ *directory-path*]/ *filename*

Possible values of the *device*: argument are:

disk0:

Uses a file from disk0: file system.

disk0a:

Uses a file from disk0a: file system partition.

disk1:

Uses a file from disk1: file system.

disk1a:

Uses a file from disk1a: file system partition.

ftp:

Uses a file from an FTP network server. The syntax is

ftp:[[/*username*[:*password*]@]*location*]/*directory*]/*filename*

harddisk:

Uses a file from the hard disk drive file system (if present).

harddiska:

Uses a file from the hard disk partition (if present).

nvrn:

Uses a file from the nvrn: file system.

ip4

Uses a file from an IPv4 access list or prefix list.

ip6

Uses a file from an IPv6 access list or prefix list.

rcp:

Uses a file from a remote copy protocol (rcp) network server. The syntax is

rcp:[[/*username*@]*location*]/*directory*]/*filename*

tftp:

Uses a file from a TFTP network server. The syntax is **tftp**:[[/*location*]/*directory*]/*filename*

Use the online help (?) function to display the available devices and network protocols.

Command Default

If an input file is not specified, the standard input (keyboard) is used.

Command Modes

EXEC

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **utility bc** command to use the interactive, programmable calculator that supports a complete set of control structures, including functions. The utility first processes any specified files, and then reads input from the keyboard (standard input).

Input files (and standard input) are ASCII text files containing sequences of bc statements to be executed.

**Note**

The bc utility uses the bc programming language, an arbitrary precision calculator language with syntax similar to the C programming language. The bc utility does not support character or string manipulation.

The bc utility supports:

- 26 functions
- 26 simple variables
- 26 array variables (up to 2048 elements per array).

The bc utility supports the following common programming language constructs:

- “if”, “while”, and “for” statements
- User-defined functions with parameters
- Local variables

Information About Supported Network Protocols

In the syntax for the **ftp:**, **rcp:**, and **tftp:** network protocols, the location is either an IP address or a hostname. The filename is specified relative to the directory used for file transfers.

When no device is specified, the current directory is used. To view the current directory, enter the **pwd** command.

Table 87: Network Protocols Supported by Cisco IOS XR Software

Prefix	Name	Description
tftp:	Trivial File Transfer Protocol	<i>TFTP</i> is a simplified version of FTP that allows files to be transferred from one computer to another over a network, usually without the use of client authentication (for example, username and password).
ftp:	File Transfer Protocol	<i>FTP</i> is an application protocol, part of the TCP/IP protocol stack, and is used for transferring files between network nodes. FTP requires a username and password.
rcp:	remote copy protocol	<i>Rcp</i> is a protocol that allows users to copy files to and from a file system residing on a remote host or server on the network. Rcp uses TCP to ensure the reliable delivery of data. Rcp downloads require a username.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility bc** command is used to execute the bc statements contained in the ASCII text file exp.txt:

```
RP/0/RSP0/CPU0:router# utility bc file disk0:/usr/exp.txt
```

```
50
15
25
3
17
```

utility cut

To extract selected characters or fields from standard input or from a file, use the **utility cut** command in EXEC mode or administration EXEC

mode.

utility cut { **{list** *character-list* | **fields** *field-list* [**nodelim**] [**delimiter** *delimiter-character*] *WORD* } [**file** *input-file*] **usage** }

Syntax Description

list <i>character-list</i>	(-c) Cuts out the characters that are located on each line as specified with the <i>character-list</i> argument. The <i>character-list</i> argument specifies the character positions or range of the characters to be cut. • Use a comma (,) to indicate more than one character. For example, utility list 1,2,5 outputs the first, second, and fifth characters. • Use a dash (-) to indicate a range. For example, utility list 1-64 outputs the first 64 characters of each line, utility list 5- outputs the fifth character to the end of the line. Note Lines are separated by a delimiter. The default delimiter is tab.
fields <i>field-list</i>	(-f) Cuts out the fields (lines) as indicated with the <i>field-list</i> argument. The <i>field-list</i> argument specifies the field numbers or ranges. For example, utility field 2,9 outputs the second and ninth fields, utility field 1-3 outputs the first three fields, utility field -6 outputs the first six fields. Note The fields indicated by the <i>field-list</i> argument are assumed to be separated in the file by a delimiter character. The default delimiter is tab. Use the delimiter option to specify a delimiter character. Lines without field delimiters are processed unless the nodelim keyword is specified.
nodelim	(Optional) (-s) Ignores lines with no delimiter. Use this optional keyword when the fields <i>field-list</i> keyword and argument is specified.
delimiter <i>delimiter-character</i>	(Optional) (-d) Specifies an alternative delimiter to indicate the end of each field. Replace the <i>delimiter-character</i> argument with the character used as the delimiter.
<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.

file <i>input-file</i>	(Optional) Storage device and directory path of the text file used instead of the standard input (keyboard input). The syntax of the <i>input-file</i> argument is: <i>device</i> :[/ <i>directory-path</i>]/ <i>filename</i> The <i>device</i> argument, followed by a colon, indicates the name of the device where the file is located. Use the online help (?) function to display the available storage devices and network protocols.
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

If no file is specified, the keyboard input (standard input) is used.
The delimiter is tab.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **utility cut** command cuts out columns, fields, or characters displayed from standard input or from a file.

Use the **fields** *field-list* keyword and argument if the fields vary in length from line to line. (The lines must be separated by a delimiter character.) By default, the field delimiter character is the Tab key. Use the **delimiter** *delimiter-character* keyword and argument to specify a different delimiter.

Use the **list** *character-list* keyword and argument only if the fields are of a fixed length. Replace the *character-list* argument with the character positions to be extracted.

For the *character-list* argument, use a comma (,) to indicate more than one character, or use a dash (-) to indicate a range. For example, **utility list 1,2,5** outputs the first, second, and fifth characters, **utility list 1-64** outputs the first 64 characters of each line, **utility list 5-** outputs the fifth character to the end of the line.

You can also use the cut utility as a filter. If no files are specified, the keyboard input (standard input) is used.

**Note**

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. For example, the **fields** keyword can also be entered using the UNIX-equivalent (-f). To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility cut** command is entered with the **list** *character-list* keyword and argument to display the first 10 characters in each line. The output is from the results of the **show version** command, which is entered with the pipe (|) character:

```
RP/0/RP0/CPU0:router# show version | utility cut list 1-10
```

```
Thu Jul 30 06:25:35.854 DST
```

```
Cisco IOS  
Copyright
```

```
ROM: Syste
```

```
PE44 ASR-9  
System ima
```

```
cisco ASR9  
MPC8641D p
```

```
2 Manageme  
12 TenGigE  
40 Gigabit  
219k bytes  
975M bytes  
33994M byt  
1605616k b  
1605616k b
```

```
Configurat  
Boot devic  
Package ac  
asr9k-scfc  
Built  
By sjc
```

```
asr9k-adv-  
Built  
By sjc
```

```
asr9k-fpd,  
Built  
By sjc
```

```
asr9k-diag  
Built  
By sjc
```

```
asr9k-k9se  
Built  
By sjc
```

```
asr9k-mgbl  
Built  
--More--
```

In the following example, the **utility cut** command is used to extract fields from a file:

```
RP/0/RP0/CPU0:router# utility cut fields 1,5 delimiter : file disk0:/usr/passwd
```

```

root:Super-User
daemon:
bin:
sys:
adm:Admin
lp:Line Printer Admin
uucp:uucp Admin
nuucp:uucp Admin
listen:Network Admin
nobody:Nobody

```

In the following example, the **utility cut** command is used with the **delimiter** keyword to specify an alternative field delimiter:

```
RP/0/RSP0/CPU0:router# utility cut fields 1,4,5 delimiter : file disk0:/usr/passwd
```

```

root:1:Super-User
daemon:1:
bin:2:
sys:3:
adm:4:Admin
lp:8:Line Printer Admin
uucp:5:uucp Admin
nuucp:9:uucp Admin
listen:4:Network Admin

```

In the following example, a range of fields is specified:

```
RP/0/RSP0/CPU0:router# utility cut fields 1-4 delimiter : file disk0:/usr/passwd
```

```

root:x:0:1
daemon:x:1:1
bin:x:2:2
sys:x:3:3
adm:x:4:4
lp:x:71:8
uucp:x:5:5
nuucp:x:9:9
listen:x:37:4

```

In the following example, the **list character-list** keyword and argument are used to specify the character positions to be extracted:

```
RP/0/RSP0/CPU0:router# utility cut list 1-30 file disk0:/usr/passwd
```

```

root:x:0:1:Super-User:/:sbin/
daemon:x:1:1:/:
bin:x:2:2:/:usr/bin:
sys:x:3:3:/:
adm:x:4:4:Admin:/var/adm:
lp:x:71:8:Line Printer Admin:/
uucp:x:5:5:uucp Admin:/usr/lib
nuucp:x:9:9:uucp Admin:/var/sp
listen:x:37:4:Network Admin:/u
nobody:x:60001:60001:Nobody:/:
noaccess:x:60002:60002:No Acce
nobody4:x:65534:65534:SunOS 4.

```

```
=====
```

In the following example, the UNIX equivalent options are used directly. First, the **utility cut** command is entered with the **usage** keyword to display the possible options. Next, the **utility cut** command is entered with the options to extract the desired data.

```
RP/0/RSP0/CPU0:router# utility cut usage
```

```
cut -c list [file], cut -f list [-d delim] [-s] [file]
```

```
RP/0/RSP0/CPU0:router# utility cut -f 1,4 -d : disk0:/usr/passwd
```

```
root:1
daemon:1
bin:2
sys:3
adm:4
lp:8
```

Related Commands

Command	Description
utility head, on page 1217	Copies bytes or lines at the beginning of the output displayed from standard input or a file.
utility sort, on page 1224	Sorts, merges, or sequence-checks the output displayed from standard input or a file.
utility tail, on page 1227	Copies the end portion of the output displayed from standard input or a file.

utility date

To display the date and time, use the **utility date** command in EXEC mode or administration EXEC mode.

utility date {**format** *word*| **universal**| **usage**| *WORD*}

Syntax Description

format <i>word</i>	(Optional) (+) Specifies the format for the date display. Use the online help system to display the available format syntax for the <i>word</i> argument.
universal	(Optional) (-u) Displays the date in Coordinated Universal Time (UTC) instead of local time. UTC is the standard term for Greenwich Mean Time (GMT).
usage	(Optional) Displays the UNIX options supported by this command.
<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.

Command Default

The date is displayed in local time.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **utility date** command displays the internal time and date for the router.

Date Format

Use the **format** *word* option to specify the format and content of the displayed date and time. The format is composed of ASCII characters and field descriptors prefaced with %, in a manner similar to a C-language printf() format specifier. In the output, each field descriptor is replaced by its corresponding value; all other characters are copied to the output without change. The format is specified using the following characters:

%C
Century in 'CC' form. For example: 20

%y
Year in 'YY' form. For example: 06

%m
Month in 'MM' form. For example: 08

%d
Date in 'DD' form. For example: 28

%H
Hour in 'hh (24 hr.)' form. For example: 18

%M
Minutes in 'mm' form. For example: 55

%S
seconds in 'ss' form. For example: 24



Note

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. For example, the **universal** keyword can also be entered using the UNIX-equivalent (**-u**). To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

This example shows how to display the router date and time using the **utility date** command:

```
RP/0/RSP0/CPU0:router# utility date
Fri Aug 04 11:53:38 UTC 2006
```

This example shows how to display the router date and time using a variety of options with the **format** keyword:

```
RP/0/RSP0/CPU0:router# utility date format "%y%m%d"
060828
RP/0/RSP0/CPU0:router# utility date format "%y-%m-%d"
```

```
06-08-28
RP/0/RSP0/CPU0:router# utility date format "%C%y-%m-%d"
2006-08-28
RP/0/RSP0/CPU0:router# utility date format "%C%y-%m-%d:%H:%M:%S"
2006-08-28:02:09:58
RP/0/RSP0/CPU0:router# utility date format "DATE: %y-%m-%d %nTIME: %H:%M:%S"
DATE: 06-09-17
TIME: 12:42:24
```

Related Commands

Command	Description
utility date set, on page 1200	Sets the internal date and time of the router.

utility date set

To set the router time, use the **utility date set** command in administration EXEC mode.

utility date set *hh:mm:ss*

Syntax Description

<i>hh</i>	Specifies the hour in 2-digit numerical format. Range is 00 to 23.
<i>mm</i>	Specifies the minutes in 2-digit numerical format. Range is 0 to 59.
<i>ss</i>	Specifies the seconds in 2-digit numerical format. Range is 0 to 59.

Command Default

None

Command Modes

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A colon (:) is required between the entry for hour, minutes, and seconds.



Note

Generally, if the system is synchronized by a valid outside timing mechanism, such as a Network Time Protocol (NTP) clock source, or if you have a networking device with calendar capability, you need not set the software clock. Use the **date** command or the **clock set** command if no other time sources are available.



Note

To manually copy the hardware clock (calendar) settings into the software clock, use the **clock read-calendar** command in EXEC mode.

By default, the system makes a “slow adjustment” if the new time is in the range of the following:

- –2.5 minutes + old time

- 5 minutes + old time

In a slow adjustment, the clock speed increases by less than 100 percent or decreases by less than 50 percent over a period of time from 1 second to 5 minutes until the clock catches up with the new time. This slow adjustment does not cause major discontinuities in the time flow. Use the **-S0** option to disable the slow adjustment.

Task ID

Task ID	Operations
universal	execute

Examples

The following example shows how to set the time using the **utility date set** command:

```
RP/0/RSP0/CPU0:router(admin)# utility date set 13:07:00
```

```
Fri Sep 15 13:07:00 UTC 2006
```

Related Commands

Command	Description
utility date , on page 1197	Displays the internal date and time of the router.

utility df

To display the amount of disk space available for a directory or file, use the **utility df** command in EXEC mode or administration EXEC mode.

utility df [[*WORD*] [kbytes] [mountinfo] [vsfStats] [file *input-file*]] **usage**

Syntax Description

<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.
kbytes	(Optional) (-k) Displays the sizes in 1-K blocks (1024-byte units) instead of the default of 512 byte blocks.
mountinfo	(Optional) (-n) Displays the file-system mountpoints and types only.
vsfStats	(Optional) (-g) Displays all statvfs() information.
file <i>input-file</i>	(Optional) Specifies the storage device and directory path of the device, directory, or file. When a directory or file is specified, the df utility displays the amount of space on the file system that contains the directory or file. If no files are specified, then only the standard input (keyboard) is used. The syntax of the <i>input-file</i> argument is as follows: <i>device</i> :[/ <i>directory-path</i>]/ <i>filename</i> The <i>device</i> argument, followed by a colon, indicates the name of the device where the file is located. Use the online help (?) function to display the available storage devices and network protocols.
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

Information is displayed for all file systems.
The results are displayed in 512-byte blocks.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the (disk free) **utility df** command to display the amount of disk space available for a device, directory, or file. Enter the command without keywords or arguments to display information for all mounted file systems.

Use the **vsfStats** keyword to invoke the statvfs() function, which provides additional details for all mounted file systems.

**Note**

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. For example, the **kbytes** keyword can also be entered using the UNIX-equivalent (**-k**). To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the (disk free) **utility df** command is entered without keywords or arguments to display information for all file systems:

```
RP/0/RSP0/CPU0:router(admin)# utility df

/dev/hd0t6          77987744      61592  77926152      1%  /harddisk:/
/nvram:             4086         60    4026          2%
/dev/disk1t6        2001280      382720  1618560        20%  /disk1:/
/dev/disk0t6        2001184      533568  1467616        27%  /disk0:/
/dev/fs0p1          121856         68    121787         1%  /bootflash:
```

See [Table 89: utility df Column Descriptions \(left to right\), on page 1205](#) for column descriptions.

In the following example, the **kbytes** keyword is used to display information in 1-K blocks (1024-byte units) instead of the default of 512-byte blocks:

```
RP/0/RSP0/CPU0:router(admin)# utility df kbytes

/dev/hd0t6          38993872      30796  38963076      1%  /harddisk:/
/nvram:             2043         30    2013          2%
/dev/disk1t6        1000640      191360  809280        20%  /disk1:/
/dev/disk0t6        1000592      266784  733808        27%  /disk0:/
/dev/fs0p1          60928         34    60893         1%  /bootflash:
```

See [Table 89: utility df Column Descriptions \(left to right\), on page 1205](#) for column descriptions.

In the following example, the **mountinfo** keyword is used to display file-system mountpoints and types only:

```
RP/0/RSP0/CPU0:router(admin)# utility df mountinfo

Filesystem          Mounted on          Type
```

```

/dev/hd0t6          /harddisk:/      dos (fat32)
/nvram:
/dev/disk1t6        /disk1:/        dos (fat16)
/dev/disk0t6        /disk0:/        dos (fat16)
/dev/fs0p1          /bootflash:     flash

```

In the following example, the **vfsStats** keyword is used to invoke the `statvfs()` function, which provides additional details for all mounted file systems:

```

RP/0/RSP0/CPU0:router(admin)# utility df vfsStats

/dev/hd0t6  /harddisk:/
  Blocks:  9748468 total    9740769 avail    [4096-byte blocks]
  Files :           0 total          0 avail
  Type  : dos (fat32)
  Flags : 00000120 [32bit, noatime]

/nvram:
  Blocks:    2043 total      2013 avail    [1024-byte blocks]
  Files :           0 total          0 avail
  Type  :
  Flags : 00000000 []

/dev/disk1t6 /disk1:/
  Blocks:  62540 total      50580 avail    [16384-byte blocks]
  Files :           0 total          0 avail
  Type  : dos (fat16)
  Flags : 00000120 [32bit, noatime]

/dev/disk0t6 /disk0:/
  Blocks:  62537 total      45863 avail    [16384-byte blocks]
  Files :           0 total          0 avail
  Type  : dos (fat16)
  Flags : 00000120 [32bit, noatime]

/dev/fs0p1  /bootflash:
  Blocks: 62390272 total    62355240 avail    [1-byte blocks]
  Files :           2 total          0 avail
  Type  : flash
  Flags : 00000000 []

```

This table describes the significant fields shown in the display.

Table 88: utility df Field Descriptions

Field	Description
Files	Number of files in the file system.
Blocks	Amount of space available on the file system in 1-K blocks.
Total	Amount of disk space used by the directory or file.
Avail	Amount of space available for use by the directory or file on the file system.
Type	Type of file system.
Flags	Displays the file system properties.

In the following example, the **file source** keyword and argument are used to specify a directory:

```
RP/0/RSP0/CPU0:router(admin)# utility df file disk0:/usr
/dev/disk0t6          2001184    533568    1467616    27% /disk0:/
```

This table describes the significant fields shown in the display.

Table 89: utility df Column Descriptions (left to right)

Field	Description
Filesystem	File system for the displayed information.
1k-blocks	Amount of space available on the file system in 1-K blocks.
Used	Amount of disk space used by the directory or file.
Available	Amount of space available for use by the directory or file on the file system.
Use%	Percentage of space used on the file system.
Mounted on	Storage device where the file system is mounted.

Related Commands

Command	Description
utility du, on page 1206	Displays the amount of disk space used by one or more directories or files.

utility du

To display the amount of disk space used in a device, directory, or file, use the **utility du** command in EXEC mode or administration EXEC mode.

utility du [[**all**| **specified**] [**kbytes**| **bytes**| **local**] [*WORD*] [**file** *source*]| **usage**

Syntax Description

all	(Optional) (-a) Displays the disk space used for each file in the directory. By default, information is displayed only for the directory. Use the all keyword to display the total disk space used by all files in the directory, including the directory itself.
specified	(Optional) (-s) Displays the total disk space used for each specified file, rather than the totals for any subdirectories.
kbytes	(Optional) (-k) Displays the disk space used in 1-K blocks (1024-byte units) instead of the default of 512-byte blocks.
bytes	(Optional) (-p) Displays the disk space used in bytes (the default is 512-byte blocks). Also generates error messages for exiting files that cannot be displayed.
local	(Optional) (-x) Displays information for the local device only.
<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.
file source	(Optional) Displays the disk space used for a device, directory, or file. The syntax for the <i>source</i> argument is <i>device</i> : / <i>directory-path</i> [/ <i>filename</i>] The <i>device</i> argument, followed by a colon, indicates the name of the device where the file is located. Use the online help (?) function to display the available storage devices and network protocols. Enter the utility du command without specifying a device, directory, or file to display information for the current directory, and subdirectories. (The command behaves as if the filename dot (.) is entered.)
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

Information for the current directory is displayed.

Command Modes

EXEC

Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Enter the **utility du** command without specifying a file to display information for the current directory. The command behaves as if the filename dot (.) is entered.

**Note**

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. For example, the **kbytes** keyword can also be entered using the UNIX-equivalent (**-k**). To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility du** command is used to display the disk space used for the subdirectories in the MPLS package directory:

```
RP/0/RSP0/CPU0:router# utility du file disk1:/asr9k-mpls-3.9.0.14I
```

```
Tue Jul 28 03:20:34.059 DST
1607 /disk1:/asr9k-mpls-3.9.0.14I/schema
 83 /disk1:/asr9k-mpls-3.9.0.14I/lib/cerrno
 944 /disk1:/asr9k-mpls-3.9.0.14I/lib/mib
3434 /disk1:/asr9k-mpls-3.9.0.14I/lib
15974 /disk1:/asr9k-mpls-3.9.0.14I/bin
 14 /disk1:/asr9k-mpls-3.9.0.14I/mib
 14 /disk1:/asr9k-mpls-3.9.0.14I/placement
 14 /disk1:/asr9k-mpls-3.9.0.14I/startup
1099 /disk1:/asr9k-mpls-3.9.0.14I/parser
 18 /disk1:/asr9k-mpls-3.9.0.14I/configs
 11 /disk1:/asr9k-mpls-3.9.0.14I/rules
 14 /disk1:/asr9k-mpls-3.9.0.14I/partitions
156 /disk1:/asr9k-mpls-3.9.0.14I/etc/compat
164 /disk1:/asr9k-mpls-3.9.0.14I/etc
 59 /disk1:/asr9k-mpls-3.9.0.14I/instdb_v
147 /disk1:/asr9k-mpls-3.9.0.14I/lc/bin_
 9 /disk1:/asr9k-mpls-3.9.0.14I/lc/startup
164 /disk1:/asr9k-mpls-3.9.0.14I/lc
103 /disk1:/asr9k-mpls-3.9.0.14I/instdb
22697 /disk1:/asr9k-mpls-3.9.0.14I
```

In the following example, the **utility du** command is used to display the disk space used for a subdirectories:

```
RP/0/RSP0/CPU0:router# utility du file disk0:/
asr9k
-mpls-3.8.0/configs37 /disk0:/asr9k-mpls-3.8.0/configs
```

In the following example, the **utility du** command is used to display the disk space used for the current working directory:

```
RP/0/RSP0/CPU0:router# cd disk0:/
asr9k
-mpls-3.8.0
RP/0/RSP0/CPU0:router# utility du

160 ./schema
104 ./lib/cerrno
625 ./lib/mib
2545 ./lib
9658 ./bin
39 ./startup
840 ./parser
37 ./configs
35 ./mib
35 ./rules
34 ./partitions
135 ./etc/compat
167 ./etc
66 ./instdb_v
181 ./lc/bin
33 ./lc/startup
246 ./lc
112 ./instdb
14006 .
```

Related Commands

Command	Description
utility df, on page 1202	Displays the amount of disk space available for a directory or file.

utility egrep

To search a file or the results of standard input using full regular expressions, use the **utility egrep** command in EXEC mode or administration EXEC mode.

utility egrep {**expr** *expression*|**script** *expression-file*} [*WORD*] [**count**] [**linenum**] [**matchfile**] [**matchline**] [**nocase**] [**nofile**] [**reverse**] [**file** *search-file*]

utility egrep *expression* [*WORD*] [**count**] [**linenum**] [**matchfile**] [**matchline**] [**nocase**] [**nofile**] [**reverse**] [**file** *search-file*]

utility egrep usage

Syntax Description

expr <i>expression</i>	(-e) A regular expression. This form is used when only one expression is specified on the command line. Any names specified after this option are treated as input files.
script <i>expression-file</i>	(-f) A file containing a set of regular expressions, each separated by a new line. The type of the expressions is determined by the -e and -f options. This form is used when more than one expression is specified. You can specify more than one -f option. The syntax of the <i>expression-file</i> argument is: [<i>device</i> :]/ <i>filename</i>
<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 20.
count	(Optional) (-c) Displays a count of selected lines.
linenum	(Optional) (-n) Before each output line, displays the line's line number.
matchfile	(Optional) (-l) ("el") Displays only the names of files containing the selected lines.
matchline	(Optional) (-x) Includes only input lines selected against an entire fixed string or regular expression.
nocase	(Optional) (-i) Ignores uppercase and lowercase distinctions during comparisons.
nofile	(Optional) (-h) Displays results without a filename prefix attached to the matched lines. This option applies only when more than one file is searched.
reverse	(Optional) (-v) Selects only those lines that don't match the specified patterns.
file <i>search-file</i>	(Optional) The file used for the search. Replace the <i>search-file</i> argument with the device and directory path of the file. The syntax for the <i>search-file</i> argument is: [<i>device</i> :]/ <i>filename</i> .

usage	(Optional) Displays the UNIX options supported by this command.

Command Default

If no files are specified, the keyboard input (standard input) is used.

If more than one input file is specified, then the filename is displayed before each line.

Command Modes

EXEC, Admin EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The grep utility searches files for character patterns using regular expressions and returns all lines that contain that pattern. The **utility egrep** command uses full regular expressions (expressions using the full set of alphanumeric and special characters) to match the patterns.

The results are displayed to the standard output (terminal screen).

**Note**

The egrep utility options are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. For example, the **count** keyword can also be entered using the UNIX-equivalent (**-c**). To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility egrep** command is used to locate the regular expression “uptime”. The **linenum** keyword is also entered to display the line number before each line of output.

```
RP/0/RSP0/CPU0:router# show version | utility egrep expr uptime linenum
7:router uptime is 5 days, 19 hours, 27 minutes
```

In the following example, the **utility egrep** command is used to locate a regular expression in a file. In this example, all lines with “adm” are displayed. The * character is used as a wildcard.

```
RP/0/RSP0/CPU0:router# utility egrep expr Adm* nofile file disk0:/usr/passwd

adm:x:4:4:Admin:/var/adm:
lp:x:71:8:Line Printer Admin:/usr/spool/lp:
uucp:x:5:5:uucp Admin:/usr/lib/uucp:
nuucp:x:9:9:uucp Admin:/var/spool/uucppublic:/usr/lib/uucp/uucico
listen:x:37:4:Network Admin:/usr/net/nls:
ssadmin:x:901218:60001:Sun StorEdge(tm) Configuration Service Agent Admin:/:bin/false
```

In the following example, the **nocase** keyword is used to ignore the character case:

```
RP/0/RSP0/CPU0:router# utility egrep expr Adm* nocase file disk0:/usr/passwd

adm:x:4:4:Admin:/var/adm:
lp:x:71:8:Line Printer Admin:/usr/spool/lp:
uucp:x:5:5:uucp Admin:/usr/lib/uucp:
nuucp:x:9:9:uucp Admin:/var/spool/uucppublic:/usr/lib/uucp/uucico
listen:x:37:4:Network Admin:/usr/net/nls:
ssadmin:x:901218:60001:Sun StorEdge(tm) Configuration Service Agent Admin:/:bin/false
```

In the following example, the **linenum** keyword is used to append the line number to the beginning of each output line:

```
RP/0/RSP0/CPU0:router# utility egrep expr Adm* linenum file disk0:/usr/passwd

5:adm:x:4:4:Admin:/var/adm:
6:lp:x:71:8:Line Printer Admin:/usr/spool/lp:
7:uucp:x:5:5:uucp Admin:/usr/lib/uucp:
8:nuucp:x:9:9:uucp Admin:/var/spool/uucppublic:/usr/lib/uucp/uucico
9:listen:x:37:4:Network Admin:/usr/net/nls:
15:ssadmin:x:901218:60001:Sun StorEdge(tm) Configuration Service Agent Admin:/:bin/false
```

Related Commands

Command	Description
utility fgrep , on page 1212	Searches a file for a fixed character string.

utility fgrep

To search a file for a fixed character string, use the **utility fgrep** command in EXEC mode or administration EXEC mode.

utility fgrep {**expr** *expression*|**script** *expression-file*} [*WORD*] [**count**] [**linenum**] [**matchfile**] [**matchline**] [**nocase**] [**nofile**] [**reverse**] [**file** *search-file*]

utility fgrep *expression* [*WORD*] [**count**] [**linenum**] [**matchfile**] [**matchline**] [**nocase**] [**nofile**] [**reverse**] [**file** *search-file*]

utility fgrep usage

Syntax Description

expr <i>expression</i>	(-e) A regular expression, whose type is determined by the -e and -f options. This form is used when only one expression is specified on the command line. Any names specified after this option are treated as input files.
script <i>expression-file</i>	(-f) A file containing a set of regular expressions, each separated by a new line. The type of the expressions is determined by the -e and -f options. This form is used when more than one expression is specified. You can specify more than one -f option. The syntax of the <i>expression-file</i> argument is: <i>device</i> :[/ <i>directory-path</i>]/ <i>filename</i>
<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 20.
count	(Optional) (-c) Displays a count of selected lines.
linenum	(Optional) (-n) Before each output line, displays the line's line number.
matchfile	(Optional) (-l) ("el") Displays only the names of files containing the selected lines.
matchline	(Optional) (-x) Includes only input lines selected against an entire fixed string or regular expression.
nocase	(Optional) (-i) Ignores uppercase and lowercase distinctions during comparisons.
nofile	(Optional) (-h) Displays results without a filename prefix attached to the matched lines. This option applies only when more than one file is searched.
reverse	(Optional) (-v) Selects only those lines that don't match the specified patterns.
file <i>search-file</i>	(Optional) The file used for the search. Replace the <i>search-file</i> argument with the device and directory path of the file. The syntax for the <i>search-file</i> argument is: <i>device</i> :[/ <i>directory-path</i>]/ <i>filename</i>
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

The keyboard input (standard input) is used if no files are specified.

If more than one input file is specified, then the filename is displayed before each line.

Command Modes

EXEC, Admin EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **utility fgrep** command searches files for a fixed character string (as opposed to **grep** and **egrep**, which search for a pattern that matches an expression).

The results are displayed to the standard output (terminal screen).

**Note**

The **fgrep** utility options are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. For example, the **count** keyword can also be entered using the UNIX-equivalent (**-c**). To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

The following example, the **utility fgrep** command is used with the **nocase** and **linenum** keywords:

```
RP/0/RSP0/CPU0:router# show version | utility fgrep expr uptime nocase linenum
7:router uptime is 5 days, 20 hours, 10 minutes
```

Related Commands

Command	Description
utility egrep, on page 1209	Searches a file using full regular expressions.

utility find

To locate files within one or more directories, use the **utility find** command in EXEC mode or administration EXEC mode.

utility find {**path** *directory-path* [*LINE*] **name** *filename-pattern*| **user** *user-id*}| **usage**}

Syntax Description

path <i>directory-path</i>	Specifies the storage device and directory for the file search. The search is performed for the specified directory and all subdirectories in that directory tree. If a directory path is not specified, then the search is performed in the current directory (a path of . [dot] is assumed).
<i>LINE</i>	(Optional) UNIX command-line expressions provided as a string.
name <i>filename-pattern</i>	(Optional) Searches for the name of the file. The <i>filename-pattern</i> argument is a regular expression string.
user <i>user-id</i>	(Optional) Searches for files belonging to a specific user. The <i>user-id</i> argument is the username of the file owner.
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

If a directory path is not specified, then the search is performed in the current directory.
If a **name** *filename-pattern* is not specified, then the search return all files in the specified directory.
If a user is not specified, then the search is performed for all users.

Command Modes

EXEC, Admin EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **utility find** command to locate files within one or more directories. You can perform the search for a specific directory (and its subdirectories). If a directory is not specified, then the search is performed for the current directory.

To search for a regular expression string, use the **name filename-pattern** keyword and argument. Replace the *filename-pattern* argument with the regular expression string. If this option is not used, then all files within the specified directory are displayed.

To search for files belonging to a specific user, use the **user-id** argument. If this option is not used, then files belonging to all users are displayed.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility find** command is used to locate the file named "asr9k-fwdg-3.8.0". The path is the root directory of disk0:

```
RP/0/RP0/CPU0:router# utility find path disk0: name asr9k-fwdg-3.8.0
disk0:/instdb/admin_pkgs_mdata/asr9k-fwdg-3.8.0
disk0:/asr9k-fwdg-3.8.0
```

In the following example, the **utility find** command is used to locate files matching a pattern. In this example, all files ending in ".txt" are displayed:

```
RP/0/RSP0/CPU0:router# utility find path disk0:/usr name *.txt
disk0:/usr/test2.txt
```

In the following example, the UNIX equivalent option is used to locate files matching a pattern. In this example, all files ending in ".txt" are displayed:

```
RP/0/RSP0/CPU0:router# utility find path disk0: -name *.txt
disk0:/asr9k-base-3.8.0/etc/vim/doc/editing.txt
disk0:/asr9k-base-3.8.0/etc/vim/doc/help.txt
disk0:/asr9k-base-3.8.0/etc/vim/doc/intro.txt
disk0:/asr9k-base-3.8.0/etc/vim/doc/uganda.txt
disk0:/usr/test2.txt
```

In the following example, the files belonging to a specific user are displayed:

```
RP/0/RSP0/CPU0:router# utility find path disk0:/usr user 0
disk0:/usr
disk0:/usr/passwd
disk0:/usr/test2.txt
```

In the following example, the UNIX equivalent option is used to display files belonging to a specific user:

```
RP/0/RSP0/CPU0:router# utility find path disk0:/usr -user 0
disk0:/usr
disk0:/usr/passwd
disk0:/usr/test2.txt
```

Related Commands

Command	Description
utility which, on page 1235	Locates a program file.

utility head

To copy bytes or lines at the beginning of a file or from the standard input, use the **utility head** command in EXEC mode or administration EXEC

mode.

utilityhead[*WORD*| [**bytes**] [**count number**][**file source**]] **usage**]

Syntax Description

<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.
bytes	(Optional) (-c) Copies the data in bytes from the beginning of each specified file. The default setting is to copy lines of data.
count number	(Optional) (-n) Specifies the number of lines (default) or bytes to be copied. The <i>number</i> argument is an unsigned decimal integer. By default, the utility head command copies the first ten units (lines or bytes) of the file. Use the count number option to change the default.
file source	(Optional) Specifies the storage device, directory, and filename for the files. If a file is not specified, the standard input is used.
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

If the **utility head** command is entered without keywords or arguments, the first ten lines of the file or standard output are copied.

If no file is specified, then the standard input is used.

Command Modes

EXEC, Admin EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **utility head** command copies the beginning bytes (default) or lines of one or more files to the standard output (usually the user interface display). Use the **bytes** or **lines** keywords to copy the data based on lines

or bytes. Use the **count** *number* option to specify the number of bytes or lines to copy. By default, the **utility head** command copies the first 10 lines of each file.

If more than one file is selected, an identifying header is added before the output for each file. If no file is specified, then the standard input (keyboard) is used.

**Note**

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility head** command is used to display the first 15 lines from the output of the **show version** command:

```
RP/0/RSP0/CPU0:router# show version | utility head count 15

Tue Jul 28 06:15:44.736 DST

Cisco IOS XR Software, Version 3.9.0.14I[DT_IMAGE]
Copyright (c) 2009 by Cisco Systems, Inc.

ROM: System Bootstrap, Version 1.1(20090521:183759) [ASR9K ROMMON],

PE44 ASR-9010 uptime is 1 week, 6 days, 14 hours, 54 minutes
System image file is "bootflash:disk0/asr9k-os-mbi-3.9.0.14I/mbiasr9k-rp.vm"

cisco ASR9K Series (MPC8641D) processor with 4194304K bytes of memory.
MPC8641D processor at 1333MHz, Revision 2.2

2 Management Ethernet
12 TenGigE
40 GigabitEthernet
```

In the following example, the **utility head** command is entered with the **bytes** keyword. Only the first 15 bytes of output are displayed.

```
RP/0/RSP0/CPU0:router# show version | utility head count 15 bytes

Cisco IOS XR S

RP/0/RSP0/CPU0:router#
```

Related Commands

Command	Description
utility cut , on page 1192	Cuts characters or lines from the output displayed from standard input or a file.

Command	Description
utility sort , on page 1224	Sorts, merges, or sequence-checks the output displayed from standard input or a file.
utility tail , on page 1227	Copies the end portion of the output displayed from standard input or a file.

utility less

To display a file page-by-page, use the **utility less** command in EXEC mode or administration EXEC mode.

utility less {[**exitEOF**] [*WORD*] [**nocase**] [**position** *line-number*] [**startat** *string*]} [**file** *source-file*]

Syntax Description

exitEOF	(Optional) (-E) Automatically exits the utility the first time an end-of-file is encountered.
<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.
nocase	(Optional) (-i) Ignores uppercase and lowercase distinctions during comparisons.
position <i>line-number</i>	(Optional) (-j) Uses the line at <i>line-number</i> on the screen to position matched lines during a patter search.
startat <i>string</i>	(Optional) (-p) Starts at the first occurrence of the pattern specified by the <i>string</i> argument in the file.
file <i>source-file</i>	(Optional) Specifies the storage device and directory path for the text file to be displayed. The default is standard input. The syntax for the <i>source-file</i> argument is: <i>device</i> :[/ <i>directory-path</i>]/ <i>filename</i>

Command Default

If no text file is specified, standard input is assumed.

Command Modes

EXEC
Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **utility less** command to display files page by page. You can specify regular expressions for pattern matching using the **startat** keyword. You can scroll up as well as down. When you enter the less mode, commands are similar to the “vi” editor.

**Note**

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

The following example, the **utility less** command is used to display the file “config_store”. Only part of the file is shown here.

```
RP/0/RSP0/CPU0:router# utility less file disk0:/usr/config_store
```

```
Last configuration change at Tue Feb 20 18:34:02 2007 by xxx
!
hostname H1
line console
  exec-timeout 600 0
  session-timeout 600
!
line default
  exec-timeout 600 0
  session-timeout 600
!
.
.
.
```

utility mv

To rename or move a file from one directory to another, use the **utility mv** command in EXEC mode or administration EXEC mode.

utility mv {[*WORD*] **force**| **interactive**] **source** *source-file* **target** *target-file* [**usage**]

Syntax Description

<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.
force	(Optional) (-f) Forces an overwrite if the target file already exists. There is no confirmation prompt.
interactive	(Optional) (-i) Specifies to prompt for confirmation before renaming a file.
source <i>source-file</i>	Specifies the storage device, directory, and filename for the file to be moved.
target <i>target-file</i>	Specifies the new storage device, directory, and filename for the file.
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

No default behavior or values

Command Modes

EXEC, Admin EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility mv** command is used to move the file “aaa” from disk0a: to disk1a:

```
RP/0/RSP0/CPU0:router# utility mv source disk0a:/aaa target disk1a:/aaa
```

Related Commands

Command	Description
utility cut, on page 1192	Cuts characters or lines from the output displayed from standard input or a file.
utility sort, on page 1224	Sorts, merges, or sequence-checks the output displayed from standard input or a file.
utility tail, on page 1227	Copies the end portion of the output displayed from standard input or a file.

utility sort

To sort, merge, or sequence-check the lines in one or more files, or from the standard input, use the **utility sort** command in EXEC mode or administration EXEC mode.

utility sort {*[[WORD]]* *[[dict]* *[fieldSep character]* *[ignoreblank]* *[key key-definition]* *[lowercase]* *[merge]* *[numeric]* *[outfile filename]* *[printable]* *[reverse]* *[unique]]]* *[file filename]* *usage*}

Syntax Description

<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.
dict	(Optional) (-d) Sorts in dictionary order. Uses only alphanumeric and blank characters in the sort operation.
fieldSep character	(Optional) (-t) Specifies a character as the field separator.
ignoreblank	(Optional) (-b) Ignores leading blank characters in field comparisons.
key key-definition	(Optional) (-k) Defines a key to be the sort key. The <i>key-definition</i> argument field is defined using the following syntax: <i>field_start</i> [<i>type_string</i>] [<i>field_end</i>] [<i>type_string</i>] <i>field_start</i> and <i>field_end</i>—Specifies the beginning and end of the key field. <i>type_string</i>—Specifies attributes specific to the key. The <i>field_start</i> and <i>field_end</i> arguments are each specified by a pair of digits of the form m.n, where the m refers to the field starting after the mth field separator in a line. For <i>field_start</i>, the .n refers to the nth character of the specified field, and is taken as zero if not specified. For <i>field_end</i>, the .n refers to the nth character after the last character of the specified field, and is taken as zero if not specified. The <i>type_string</i> argument may be formed from the characters bdfnr, which apply their defined attributes to the determination of the key. Note When ordering options appear independent of key field specifications, the requested field ordering rules are applied globally to all sort keys. When attached to a specific key, the specified ordering options override all global ordering options for that key.
lowercase	(Optional) (-f) Folds uppercase letters into lowercase (ignores case and treats upper case characters the same as lowercase characters).
merge	(Optional) (-m) Merges sorted files. Assumes that the files are already sorted and so does not sort the files.

numeric	(Optional) (-n) Interprets the field as numeric and sorts in numeric order. Includes the sign and optional thousands separator. This keyword also ignores leading blank characters in field comparisons (implies the ignoreblank keyword).
outfile <i>filename</i>	(Optional) (-o) Writes the results to a file. The <i>filename</i> argument is the destination disk, directory, and filename. The <i>filename</i> argument can be the same as the source file.
printable	(Optional) (-i) Ignores all nonprintable characters.
reverse	(Optional) (-r) Reverses the sort order. The sort is ascending by default.
unique	(Optional) (-u) Suppresses all but one line in each set of lines having equal keys.
file <i>filename</i>	(Optional) Specifies a file to be sorted.
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

If no file is specified, then the standard input (keyboard) is used.

If an **outfile** *filename* keyword and argument is not specified, then the standard output (display) is used.

The file is sorted in ascending order.

Command Modes

EXEC, Admin EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

**Note**

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility sort** command is used to sort the contents of the file “words.txt”:

```
RP/0/RSP0/CPU0:router# utility sort file disk0:/usr/words.txt

The
few
inquires
A
Code.
Date
Done
This
best-selling
bestseller
book
come
concerning
fiction,
have
its
list
muscle
of
onto
our
the
way
way
work
```

In the following example, only the unique characters in the file “words.txt” are displayed:

```
RP/0/RSP0/CPU0:router# utility sort unique file disk0:/usr/words.txt

Code.
Date
best-selling
book
concerning
have
list
of
our
way
work
```

Related Commands

Command	Description
utility cut, on page 1192	Cuts characters or lines from the output displayed from standard input or a file.
utility head, on page 1217	Copies bytes or lines at the beginning of the output displayed from standard input or a file.
utility tail, on page 1227	Copies the end portion of the output displayed from standard input or a file.
utility uniq, on page 1230	Displays or removes repeated lines in a file.

utility tail

To copy the end portion of a file or the standard input, use the **utility tail** command in EXEC mode or administration EXEC mode.

utility tail {[[*WORD*]| [**bytes**] [**continuous**] [**count number**]] [**file input-file**]| **usage**}

Syntax Description

<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.
bytes	(Optional) (-c) Copies the end of the file measured in bytes. The default is lines.
continuous	(Optional) (-f) Continues to copy data from the end of the file after the last line is reached. The operation pauses for 1 second, and then resumes in a continuous loop. The input file must be a regular file, not a terminal or a FIFO special file (a named pipe).
count number	(Optional) (-n) Copies the number of lines (default) or bytes specified with the <i>number</i> argument. The range is 0 to 4294967295. By default, the last 10 lines are copied. The <i>number</i> argument is a decimal integer that defines the location in the file to begin copying: • Include the plus (+) character to copy from the beginning of the file. • Include the minus (-) character to copy from the end of the file. • Do not include a character to copy from the end of the file. Note Select the bytes keyword to copy the information measured in a count of bytes.
file input-file	(Optional) Directory path and filename for the input file. If no file is specified, then the standard input is used. The syntax for the <i>input-file</i> argument is: <i>device</i> :[/ <i>directory-path</i>]/ <i>filename</i> The <i>device</i> argument, followed by a colon, indicates the name of the device where the file is located. Use the online help (?) function to display the available storage devices and network protocols.
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

If the **utility tail** command is entered without keywords or arguments, the last 10 lines of the standard input are copied.

Command Modes

EXEC, Admin EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **utility tail** command to copy data from the end of a file. By default, the last 10 lines are copied. Use the **bytes** keyword to copy the data measured in bytes. Use the **count** *number* option to define the number of lines or bytes to copy. Use the **file** *filename* option to specify an input file.

**Note**

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility tail** command is used to display the last 10 lines of the output from the **show version** command:

```
RP/0/RSP0/CPU0:router# show version | utility tail count 10

Wed Feb 11 11:18:34.396 PST
  By sjc5-gf-016.cisco.com in /auto/ioxbuild5/production/3.8.0.25I.SIT_IMAGE/asr9k/workspace
  for c4.2.1-p0

asr9k-base, V 3.8.0.25I[SIT_IMAGE], Cisco Systems, at disk0:asr9k-base-3.8.0.25I
  Built on Thu Nov 27 05:50:08 PST 2008
  By sjc5-gf-016.cisco.com in /auto/ioxbuild5/production/3.8.0.25I.SIT_IMAGE/asr9k/workspace
  for c4.2.1-p0

asr9k-os-mpi, V 3.8.0.25I[SIT_IMAGE], Cisco Systems, at disk0:asr9k-os-mpi-3.8.0.25I
  Built on Thu Nov 27 05:26:17 PST 2008
  By sjc5-gf-016.cisco.com in /auto/ioxbuild5/production/3.8.0.25I.SIT_IMAGE/asr9k/workspace
  for c4.2.1-p0
```

In the following example, the **utility tail** command is used with the **bytes** keyword to display the last 10 bytes in the output:

```
RP/0/RSP0/CPU0:router# show version | utility tail count 10 bytes

.95.3-p8

RP/0/RSP0/CPU0:router#
```


Related Commands

Command	Description
utility cut, on page 1192	Cuts characters or lines from the output displayed from standard input or a file.
utility head, on page 1217	Copies bytes or lines at the beginning of the output displayed from standard input or a file.
utility sort, on page 1224	Sorts, merges, or sequence-checks the output displayed from standard input or a file.

utility uniq

To display or remove repeated lines in a file, use the **utility uniq** command in EXEC mode or administration EXEC mode.

utility uniq [[[*WORD*]] [*afterChars number*] [*afterField number*] [*count*] [*nonrepeating| repeating*]] [*infile input-file outfile output-file*]] *usage*

Syntax Description

<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.
afterChars <i>number</i>	(Optional) (-s) Ignores the first characters on each line of the input file. Use the <i>number</i> argument to specify the number of characters. The range is 0 to 4294967295.
afterField <i>number</i>	(Optional) (-f) Ignores the first fields on each line of the input file. Use the <i>number</i> argument to specify the number of fields. The range is 0 to 4294967295.
count	(Optional) (-c) Displays the number of times the line appeared in the input file at the beginning of each output line.
nonrepeating	(Optional) (-u) Displays only the nonrepeating lines from the input file (repeating lines are not displayed).
repeating	(Optional) (-d) Displays only the repeating lines from the input file (nonrepeating lines are not displayed).
infile <i>input-file</i>	(Optional) Specifies an input file for processing. The <i>input-file</i> argument specifies the device, directory, and filename of the input file. If no input file is specified, then the standard input (keyboard) is used. The syntax of the <i>input-file</i> argument is: <i>device</i> :[/ <i>directory-path</i>]/ <i>filename</i>. The <i>device</i> argument, followed by a colon, indicates the name of the device where the file is located. Use the online help (?) function to display the available storage devices and network protocols.
outfile <i>output-file</i>	(Optional) Specifies an output file. The <i>output-file</i> argument specifies the device, directory, and filename of the output file. If no file is specified, then the standard output (display) is used. The syntax of the <i>output-file</i> argument is: <i>device</i> :[/ <i>directory-path</i>]/ <i>filename</i>. The <i>device</i> argument, followed by a colon, indicates the name of the device where the file is located. Use the online help (?) function to display the available storage devices and network protocols.
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

If no input file is specified, then the standard input is used.

If no output file is specified, then the standard output is used.

Command Modes

EXEC, Admin EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **utility uniq** command to display only lines that are repeated in a file, or to display only lines that appear once. This utility compares only adjacent lines, so the file or standard input must be sorted.

**Note**

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility uniq** command is used to display the repeating lines in the output of the **show environment** command:

```
RP/0/RSP0/CPU0:router# show environment | utility uniq repeating
host      5V      4500,5500      4250,5750      4000,6000
fabricq 1.25V    1125,1375     1063,1438     1000,1500
fabricq 1.25V    1125,1375     1063,1438     1000,1500
ingress 1.25V    1125,1375     1063,1438     1000,1500
spa5      1.5V      1500,0        1575,1425      0,0
host      5V      4500,5500      4250,5750      4000,6000
fabricq 1.25V    1125,1375     1063,1438     1000,1500
fabricq 1.25V    1125,1375     1063,1438     1000,1500
ingress 1.25V    1125,1375     1063,1438     1000,1500
spa5      1.5V      1500,0        1575,1425      0,0
```

Related Commands

Command	Description
utility sort , on page 1224	Sorts, merges, or sequence-checks the output displayed from standard input or a file.

utility wc

To count words, lines, or bytes in a file, use the **utility wc** command in EXEC mode or administration EXEC mode.

utility wc [[[*WORD*]] [**bytes**] [**lines**] [**words**]] [**file** *input-file*]] **usage**

Syntax Description

<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.
bytes	(Optional) (-c) Displays the number of bytes in each input file.
lines	(Optional) (-l) (-œel-?) Displays the number of lines in each input file.
words	(Optional) (-w) Displays the number of words in each input file.
file <i>input-file</i>	(Optional) Specifies the input file. The <i>input-file</i> argument specifies the device, directory, and filename of the input file. If no input file is specified, then the standard input (keyboard) is used. The syntax of the <i>input-file</i> argument is: <i>device</i> :[/ <i>directory-path</i>]/ <i>filename</i>. The <i>device</i> argument, followed by a colon, indicates the name of the device where the file is located. Use the online help (?) function to display the available storage devices and network protocols.
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

Output is displayed in the order bytes, words, and lines, even if the options are entered in a different order.

Command Modes

EXEC, Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Output is displayed in the following order:

- When keywords are entered, the output appears in the order bytes, words, and lines.
- When no keyword is entered, the output appears in the order lines, words, and bytes.
- When any UNIX equivalent options are entered, the output appears in the order specified by the options. For example, if the command **utility wc -w -l -c** is entered, the output appears in the order words, lines, and bytes.

**Note**

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility wc** command is issued to display the number of lines, words, and bytes in the output of the **show version** command:

```
RP/0/RSP0/CPU0:router# show version | utility wc
      221      1160      10820
```

The output displays the following:

- 221 lines
- 1160 words
- 10820 bytes

In the following example, the **utility wc** command is entered with the **words** keyword to display the number of words in the output of the **show version** command:

```
RP/0/RSP0/CPU0:router# show version | utility wc words
      1160
```

utility which

To locate a program file, use the **utility which** command in EXEC mode or administration EXEC mode.

utility which {[[*WORD*]] [all] [fullname] [long [*link*]]] **program** *program-name* | **usage**}

Syntax Description

<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.
all	(Optional) (-a) Displays all occurrences of the program specified by the program <i>pathname</i> keyword and argument.
fullname	(Optional) (-f) Displays the full pathname of the program file.
long [<i>link</i>]	(Optional) (-l) ("el") Displays the long format for each program found, and also displays link information if the file is a symlink.
program <i>program-name</i>	Specifies the name of the program file.
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

None

Command Modes

EXEC, Admin EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility which** command is entered without keywords or arguments to display the location of the perl program:

```
RP/0/RSP0/CPU0:router# utility which program perl
/pkg/bin/perl
```

In the following example, the **utility which** command is entered with the **fullname** keyword to display the full directory path of the perl program:

```
RP/0/RSP0/CPU0:router# utility which fullname program perl
/disk0:/asr9k-base-3.8.0.1I/sbin/perl
```

In the following example, the **utility which** command is entered with the **long** keyword to display additional details about the perl program file:

```
RP/0/RSP0/CPU0:router# utility which long program perl
-rwxrwxrwx 1 0 0 19245 Jul 28 14:31 /pkg/bin/perl
```

Related Commands

Command	Description
utility find , on page 1214	Locates a file.

utility xargs

To run a program from one or more argument lists, use the **utility xargs** command in EXEC mode or administration EXEC mode.

utility xargs [[*WORD*| **trace**] [**program** [*program-name*] [*initial-arguments*]]] **usage**

Syntax Description

<i>WORD</i>	(Optional) UNIX command-line option string. The maximum number of characters is 80.
trace	(Optional) (-t) Prints each program on standard error before executing.
program	(Optional) Specifies the name of the program and initial arguments. If a program name is not specified, then the echo utility is used.
<i>program-name</i>	(Optional) Specifies the name of the program. If a program name is not specified, then the echo utility is used.
<i>initial-arguments</i>	(Optional) Specifies the initial arguments.
usage	(Optional) Displays the UNIX options supported by this command.

Command Default

If no program is specified, then the echo utility is used (the input lines are displayed).

Command Modes

EXEC, Administration EXEC

Command History

Release	Modification
Release 3.7.2	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

Keywords are entered using the displayed syntax, or with UNIX-equivalent syntax. The UNIX-equivalent syntax is displayed in parentheses () in the syntax description. To display the UNIX-equivalent syntax online, enter the **usage** keyword.

Task ID

Task ID	Operations
universal	execute

Examples

In the following example, the **utility xargs** command is used to display the egress lines:

```
RP/0/RSP0/CPU0:router# more disk0:/usr/files | utility xargs program grep EGRESS
```

```
disk0:/usr/atm.cfg:service-policy output EGRESS-GigabitEthernet0-0-0-0-101
disk0:/usr/atm.cfg:service-policy output EGRESS-GigabitEthernet0-0-0-0-102
disk0:/usr/atm.cfg:service-policy output EGRESS-GigabitEthernet0-0-0-0-103
disk0:/usr/atm.cfg:service-policy output EGRESS-GigabitEthernet0-0-0-0-104
disk0:/usr/atm.cfg:service-policy output EGRESS-GigabitEthernet0-0-0-0-105
disk0:/usr/atm.cfg:service-policy output EGRESS-GigabitEthernet0-0-0-0-106
disk0:/usr/atm.cfg:service-policy output EGRESS-GigabitEthernet0-0-0-0-107
disk0:/usr/atm.cfg:service-policy output EGRESS-GigabitEthernet0-0-0-0-108
disk0:/usr/atm.cfg:service-policy output EGRESS-common
disk0:/usr/atm.cfg:service-policy output EGRESS-common
disk0:/usr/atm.cfg:service-policy output EGRESS-common
disk0:/usr/atm.cfg:service-policy output EGRESS-common
disk0:/usr/atm.cfg:service-policy output EGRESS-common
.....
```



INDEX

A

abort command [154](#)
 absolute-timeout command [1103](#)
 access-class command [1105](#)
 access-group (NTP) command [531](#)
 active command [49](#)
 add (bulkstat object) command [749](#)
 admin command [156](#)
 alert-group disable command [51](#)
 alias command [158](#)
 announce command [615](#)
 apply-group command [161](#)
 apply-template command [163](#)
 authenticate (NTP) command [534](#)
 authentication-key (NTP) command [536](#)
 autocommand command [1107](#)

B

banner exec command [1110](#)
 banner incoming command [1112](#)
 banner login command [1114](#)
 banner motd command [1116](#)
 banner prompt-timeout command [1118](#)
 broadcast client command [540](#)
 broadcast command [538](#)
 broadcastdelay command [542](#)
 buffer-size command [751](#)

C

call-home command [53](#)
 call-home request command [54](#)
 call-home send alert-group inventory command [58](#)
 call-home send command [56](#)
 call-home test command [59](#)
 cd command [308](#)
 cdp advertise v1 command [104](#)
 cdp command [102](#)

cdp holdtime command [106](#)
 cdp log adjacency changes command [108](#)
 cdp timer command [110](#)
 cfs check command [310](#)
 clear cdp counters command [112](#)
 clear cdp table command [114](#)
 clear comment command [165](#)
 clear configuration commits command [167](#)
 clear configuration inconsistency command [169](#)
 clear configuration inconsistency replica command [172](#)
 clear configuration sessions command [174](#)
 clear context command [680](#)
 clear frequency synchronization esmc statistics command [345](#)
 clear frequency synchronization wait-to-restore command [346](#)
 clear install boot-options command [999](#)
 clear install label command [1001](#)
 clear install log-history oldest command [1003](#)
 clear install rollback oldest command [1005](#)
 clear license command [949](#)
 clear license log command [950](#)
 clear line command [1120](#)
 clear line vty command [1122](#)
 clear snmp counters command [752](#)
 cli interactive syntax check command [1124](#)
 cli whitespace completion command [1126](#)
 clock (PTP) [617](#)
 clock operation command [619](#)
 clock read-calendar command [132](#)
 clock set command [134](#)
 clock summer-time command [136](#)
 clock timezone command [138](#)
 clock update-calendar command [143](#)
 clock-advertisement telecom-profile [621, 625](#)
 clock-class command) [623](#)
 clock-interface command [348](#)
 clock-interface sync command [350](#)
 commit command [176](#)
 config-register command [2](#)
 configuration commit auto-save command [180](#)
 configure command [182](#)
 contact-email-addr command [61](#)
 contract-id command [62](#)

copy command [312](#)
 cos (PTP) [626](#)
 customer-id command [63](#)

D

databits command [1128](#)
 delay command [580](#)
 delay-request command [628](#)
 delay-response command [632](#)
 delete command [318](#)
 description (interface) command [185](#)
 destination address command [64](#)
 destination message-size-limit command [66](#)
 destination preferred-msg-format command [68](#)
 destination transport-method command [70](#)
 dir command [320](#)
 disconnect command [1130](#)
 disconnect-character command [1132](#)
 do command [187](#)
 domain (PTP) command [630](#)
 dscp (PTP) command [634](#)
 dumpcore command [682](#)

E

enable [753](#)
 end command [189](#)
 end-group command [191](#)
 end-template command [193](#)
 environment altitude command [395](#)
 erase nvram [322](#)
 command [322](#)
 erase nvram-raw [323](#)
 command [323](#)
 escape-character command [1134](#)
 exception filepath command [685](#)
 exception pakmem command [689](#)
 exception sparse command [691](#)
 exception sprsize command [693](#)
 exec-timeout command [1136](#)
 exit command [196](#)

F

flowcontrol hardware command [1138](#)
 follow command [695](#)
 format (bulkstat) command [755](#)
 format command [325](#)
 frequency synchronization command [351](#)

fsck command [328](#)

G

group command [198](#)

H

hostname command [203](#)
 http server command [504](#)
 hw-module location command [398](#)
 hw-module power command [400](#)
 hw-module power disable command [402](#)
 hw-module reset auto command [409](#)
 hw-module subslot reload command [411](#)
 hw-module subslot shutdown command [412](#)

I

identity command) [636](#)
 index persistence command [757](#)
 install abort command [1007](#)
 install activate command [1009](#)
 install add command [1017](#)
 install attach command [1023](#)
 install auto-abort-timer stop command [1026](#)
 install boot-options command [1028](#)
 install commit command [1030](#)
 install deactivate command [1032](#)
 install label command [1038](#)
 install remove command [1041](#)
 install rollback to command [1044](#)
 install verify healthcheck command [1048](#)
 instance (bulstat schema) command [759](#)
 instance range [761](#)
 instance repetition command [763](#)
 interface (NTP) command [543](#)
 interface (track) command [582](#)
 ipv4 disable command [506](#)
 ipv6 enable [507](#)

L

length command [1140](#)
 license add command [954](#)
 license backup command [956](#)
 license move command [958](#)
 license move slot command [960](#)
 license restore command [964](#)

line command [1142](#)
 line-protocol track command [584](#)
 load command [204](#)
 load commit changes command [206](#)
 load configuration failed command [208](#)
 load configuration removed command [210](#)
 load rollback changes command [212](#)
 locale country command [144](#)
 locale language command [146](#)
 log (PTP) [638](#)
 log selection command [355](#)

M

mail-server [72](#)
 man command [214](#)
 master (PTP) command [639](#)
 master command [545](#)
 master primary-reference-clock command [547](#)
 max-associations command [549](#)
 mirror command [5](#)
 mirror pause command [7](#)
 mirror resume command [9](#)
 mirror verify command [11](#)
 mkdir command [330](#)
 monitor threads command [702](#)
 more command [217](#)
 multicast (PTP) command [641](#)
 multicast client command [550](#)
 multicast destination command [552](#)

N

notification linkupdown command [765](#)
 ntp clear command [556](#)
 ntp command [554](#)
 ntp reset drift command [557](#)

O

object command [586](#)
 object-list command [767](#)

P

parity command [1144](#)
 peer (NTP) command [559](#)
 phone-number command [74](#)
 poll-interval command [769](#)

port state slave-only command [650](#)
 port-parameters command [356](#)
 priority (frequency synchronization) command [358](#)
 priority1 command [642](#)
 priority2 command [644](#)
 process command [706](#)
 process core command [709](#)
 process mandatory command [711](#)
 profile (interface) command [646](#)
 profile (PTP) command [648](#)
 profile command [75](#)
 ptp) [651](#)
 pwd (config) command [222](#)
 pwd command [332](#)

Q

quality itu-t command [360](#)
 quality receive command [362](#)
 quality transmit command [365](#)

R

rate-limit command [77](#)
 redundancy switchover command [420](#)
 reload (administration EXEC) command [15](#)
 reload command [13](#)
 resume command [1146](#)
 retain command [771](#)
 retry command [773](#)
 rmdir command [333](#)
 rollback configuration command [223](#)
 root command [226](#)
 route ipv4 command [588](#)

S

save configuration changes command [230](#)
 save configuration command [228](#)
 save configuration commit changes command [232](#)
 save configuration failed command [234](#)
 save configuration merge command [236](#)
 save configuration removed command [238](#)
 save rollback changes command [240](#)
 schema command [775](#)
 selection input command [368](#)
 send command [1148](#)
 sender command [78](#)
 server (NTP) command [562](#)
 service active command [80](#)

- session-limit command [1150](#)
- session-timeout command [1151](#)
- set default-afi command [242](#)
- set default-safi command [244](#)
- set default-vrf command [246](#)
- show aliases command [251](#)
- show bcdl command [36](#)
- show bcdl consumers command [39](#)
- show bcdl queues command [41](#)
- show bcdl tables command [43](#)
- show bcdl trace command [45](#)
- show calendar command [565](#)
- show call-home alert-group command [83](#)
- show call-home command [81](#)
- show call-home mail-server status command [84](#)
- show call-home profile command [85](#)
- show call-home statistics command [87](#)
- show call-home trace command [89](#)
- show cdp command [116](#)
- show cdp entry command [118](#)
- show cdp interface command [121](#)
- show cdp neighbors command [124](#)
- show cdp traffic command [128](#)
- show clock command [148](#)
- show command [248](#)
- show configuration (config) command [254](#)
- show configuration changes command [257](#)
- show configuration commit changes command [259](#)
- show configuration commit list command [262](#)
- show configuration failed (config) command [267](#)
- show configuration failed incompatible command [269](#)
- show configuration failed remove command [270](#)
- show configuration failed rollback command [272](#)
- show configuration failed startup command [274](#)
- show configuration history command [276](#)
- show configuration inconsistency replica command [280](#)
- show configuration persistent command [282](#)
- show configuration removed command [284](#)
- show configuration rollback changes command [286](#)
- show configuration running command [289](#)
- show configuration running-config command [291](#)
- show configuration sessions command [294](#)
- show context command [713](#)
- show default-afi-safi-vrf command [296](#)
- show dll command [716](#)
- show dsc command [424](#)
- show environment command [425](#)
- show epm trace boot command [17](#)
- show exception command [719](#)
- show filesystem command [335](#)
- show fpd package command [430](#)
- show frequency synchronization clock-interfaces command [369](#)
- show frequency synchronization configuration-errors command [371](#)
- show frequency synchronization interfaces command [373](#)
- show frequency synchronization selection back-trace command [380](#)
- show frequency synchronization selection command [377](#)
- show frequency synchronization selection forward-trace command [382](#)
- show history command [298](#)
- show hw-module fpd command [453](#)
- show hw-module subslot brief command [460](#)
- show hw-module subslot config command [463](#)
- show hw-module subslot counters command [466](#)
- show hw-module subslot errors command [469](#)
- show hw-module subslot plim-subblock command [472](#)
- show hw-module subslot registers command [474](#)
- show hw-module subslot status command [477](#)
- show install active command [1054](#)
- show install audit command [1057](#)
- show install auto-abort-timer command [1061](#)
- show install boot-options command [1063](#)
- show install command [1051](#)
- show install committed command [1065](#)
- show install inactive command [1069](#)
- show install log command [1076](#)
- show install package command [1081](#)
- show install pie-info command [1085](#)
- show install request command [1088](#)
- show install rollback command [1090](#)
- show install which command [1094](#)
- show inventory command [480](#)
- show led command [483](#)
- show license active command [972](#)
- show license allocated command [974](#)
- show license available command [976](#)
- show license backup command [978](#)
- show license chassis command [980](#)
- show license command [968](#)
- show license evaluation command [981](#)
- show license expired command [983](#)
- show license log command [988](#)
- show license pools command [990](#)
- show license udi command [992](#)
- show line command [1153](#)
- show media command [337](#)
- show memory command [722](#)
- show memory compare command [726](#)
- show memory heap command [729](#)
- show mirror command [19](#)
- show ntp associations command [566](#)
- show ntp status command [570](#)
- show operational command [485](#)
- show platform command [488](#)
- show processes command [734](#)
- show ptp advertised-clock command [653](#)
- show ptp foreign-masters command [654](#)

- show ptp interfaces [657](#)
- show ptp local-clock command [660](#)
- show ptp packet-counters command [661](#)
- show ptp unicast-peers [664](#)
- show reboot command [23](#)
- show redundancy command [493](#)
- show running-config command [300](#)
- show sdr command [742](#)
- show sessions command [1157](#)
- show snmp command [777](#)
- show snmp context command [780](#)
- show snmp context-mapping command [782](#)
- show snmp engineid command [784](#)
- show snmp entity command [785](#)
- show snmp group command [788](#)
- show snmp host command [790](#)
- show snmp interface command [792](#)
- show snmp interface notification command [794](#)
- show snmp mib command [798](#)
- show snmp users command [804](#)
- show snmp view command [806](#)
- show terminal command [1159](#)
- show track command [590](#)
- show users command [1161](#)
- show variables boot command [27](#)
- show variables system command [29](#)
- show version command [496](#)
- show xml schema command [512](#)
- site-id command [92](#)
- snmp test trap all command [935](#)
- snmp test trap infra command [939](#)
- snmp test trap interface command [941](#)
- snmp test trap snmp command [942](#)
- snmp-server chassis-id command [808](#)
- snmp-server community command [810](#)
- snmp-server community-map command [813](#)
- snmp-server contact command [815](#)
- snmp-server context command [817](#)
- snmp-server engineid command [821](#)
- snmp-server engineid remote command [823](#)
- snmp-server group command [826](#)
- snmp-server host command [829](#)
- snmp-server ifindex persist command [833](#)
- snmp-server ifmib ifalias long command [835](#)
- snmp-server ifmib ipsubscriber command [838](#)
- snmp-server ifmib stats cache command [839](#)
- snmp-server inform command [841](#)
- snmp-server interface command [843](#)
- snmp-server interface subset command [845](#)
- snmp-server ipv4 dscp command [847](#)
- snmp-server ipv4 precedence command [848](#)
- snmp-server location command [850](#)
- snmp-server mib bulkstat max-procmem-size command [852](#)
- snmp-server mib bulkstat object-list command [853](#)
- snmp-server mib bulkstat schema command [855](#)
- snmp-server mib bulkstat transfer-id command [857](#)
- snmp-server notification-log-mib command [870](#)
- snmp-server packet-size command [872](#)
- snmp-server queue-length command [873](#)
- snmp-server target list command [874](#)
- snmp-server throttle-time command [876](#)
- snmp-server timeouts subagent command [878](#)
- snmp-server trap authentication vrf disable command [879](#)
- snmp-server trap link ietf command [880](#)
- snmp-server trap selective-vrf-download role-change command [916](#)
- snmp-server trap throttle-time command [882](#)
- snmp-server trap-source command [922](#)
- snmp-server trap-timeout command [925](#)
- snmp-server traps bgp command [890](#)
- snmp-server traps command [883](#)
- snmp-server traps mpls l3vpn command [893](#)
- snmp-server traps ospf errors command [895](#)
- snmp-server traps ospf lsa command [897](#)
- snmp-server traps ospf retransmit command [899](#)
- snmp-server traps ospf state-change command [901](#)
- snmp-server traps ospfv3 errors command [903](#)
- snmp-server traps ospfv3 state-change command [905](#)
- snmp-server traps pim interface-state-change command [907](#)
- snmp-server traps pim invalid-message-received command [909](#)
- snmp-server traps pim neighbor-change command [911](#)
- snmp-server traps pim rp-mapping-change command [913](#)
- snmp-server traps rsvp command [915](#)
- snmp-server traps snmp command [917](#)
- snmp-server traps syslog command [920](#)
- snmp-server user command [927](#)
- snmp-server view command [930](#)
- snmp-server vrf command [932](#)
- source command [573](#)
- source ipv4 address command [666](#)
- ssm disable command [384](#)
- stopbits command [1163](#)
- streaming command [518](#)
- street-address command [93](#)
- subscribe-to-alert-group environment command [94](#)
- subscribe-to-alert-group inventory command [96](#)
- subscribe-to-alert-group syslog command [98](#)
- sync command [668](#)
- system boot-sequence command [31](#)

T

- template command [304](#)
- terminal exec command [1165](#)
- terminal length command [1168](#)
- terminal width command [1170](#)

threshold percentage command [594](#)
threshold weight command [596](#)
time-of-day command [672](#)
time-of-day-priority command [386](#)
time-source command [673](#)
timescale command [670](#)
timestamp disable command [1172](#)
track command [592](#)
transfer-interval command [943](#)
transport (PTP) command [675](#)
transport input command [1173](#)
transport output command [1175](#)
transport preferred command [1177](#)
trusted-key command [575](#)
type line-protocol state command [598](#)
type list boolean command [600](#)
type list threshold percentage command [602](#)
type list threshold weight command [604](#)
type route reachability command [606](#)
type rtr command [608](#)

U

unicast-grant invalid-request command [677](#)
unmount command [340](#)
update-calendar command [577](#)
upgrade hw-module fpd command [499](#)
url command [945](#)
utility bc command [1187](#)
utility cut command [1192](#)
utility date command [1197](#)
utility date set command [1200](#)

utility df command [1202](#)
utility du command [1206](#)
utility egrep command [1209](#)
utility fgrep command [1212](#)
utility find command [1214](#)
utility head command [1217](#)
utility less command [1220](#)
utility mv command [1222](#)
utility sort command [1224](#)
utility tail command [1227](#)
utility uniq command [1230](#)
utility wc command [1233](#)
utility which command [1235](#)
utility xargs command [1237](#)

V

vrf (track) command [610](#)
vty-pool command [1179](#)

W

wait-to-restore command [387](#)
width (display) command [1182](#)

X

xml agent command [523](#)
xml agent tty command [526](#)