

VLAN Subinterface Commands

This module provides command line interface (CLI) commands for configuring 802.1Q VLANs on the Cisco NCS 6000 Series Router.

- dot1q vlan, page 2
- interface (VLAN), page 4

dot1q vlan

To assign a VLAN ID to a subinterface (or to modify the VLAN ID that is currently assigned to a subinterface), use the **dot1q vlan** command in subinterface configuration mode. To remove the VLAN ID assigned to a subinterface, use the **no** form of this command.

dot1q vlan vlan-id [vlan-id2] any]

no dot1q vlan vlan-id

Syntax Description	vlan-id	ID of the subinterface. Range is from 1 to 4094 (0 and 4095 are reserved).
	vlan-id2	(Optional) Identifies the host VLAN of a Q-in-Q VLAN pair. Replace <i>vlan-id2</i> with a number that specifies the host VLAN. Range is from 1 to 4094.
	any	(Optional) Identifies the host VLAN of a Q-in any VLAN pair.

Command Default No default behavior or values

Command Modes Subinterface configuration

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The VLAN ID specifies where 802.1Q tagged packets are sent and received on a specified subinterface. An 802.1Q VLAN subinterface must have a configured VLAN ID to send and receive traffic; without a VLAN ID, the subinterface remains in the down state. All VLAN IDs must be unique among all subinterfaces configured on the same physical interface. To change a VLAN ID, the new VLAN must not already be in use on the same physical interface. To exchange VLAN IDs, you must remove the configuration information and reconfigure the ID for each device.



The subinterface does not pass traffic without an assigned VLAN ID.

Task ID	Task ID	Operations		
	vlan	read, write		
Examples	The following example sho	ws how to configure the VLAN ID and IP address on a subinterface:		
	RP/0/RP0/CPU0:router(co	configure onfig)# interface TenGigE 0/2/0/4.1 onfig-subif)# dotlq vlan 10 onfig-subif)# ipv4 addr 10.0.0.1/24		
	The following example shows how to configure the VLAN IDs for both VLANS in a single Q-in-Q attachment circuit (AC). In this case, incoming traffic must match both of the VLAN IDs before it is accepted by the subinterface:			
		configure Dnfig)# interface TenGigE 0/2/0/4.1 Dnfig-subif)# dotlq vlan 10 20		
	The following example shows how to configure the VLAN IDs for a Q-in-any AC. In this case, all incoming traffic must have two VLAN tags, where the outer VLAN ID matches the configured value, while the inner VLAN ID can be any value.			
		configure Dnfig)# interface TenGigE 0/2/0/4.1 l2transport Dnfig-subif)# dotlq vlan 10 any		

Related Commands	Command	Description
	dot1q native vlan	Assigns the native VLAN ID of a physical interface trunking 802.1Q VLAN traffic.
	show interfaces	Displays statistics for all interfaces configured on the router or for a specific node.

interface (VLAN)

To create a VLAN subinterface, use the **interface** command in XR config mode. To delete a subinterface, use the **no** form of this command.

interface type interface-path-id.subinterface [l2transport]

no interface *type interface-path-id.subinterface* **[l2transport]**

Syntax Description	type	Type of Ethernet interface on which you want to create a VLAN. Enter GigabitEthernet , TenGigE ,, or Bundle-Ether .
	interface-path-id_subinterface	Physical interface or virtual interface followed by the subinterface path ID. Naming notation is <i>interface-path-id.subinterface</i> . The period in front of the subinterface value is required as part of the notation.
		For more information about the syntax for the router, use the question mark (?) online help function.
	l2transport	Enables Layer 2 transport port mode on the specified VLAN interface and enters Layer 2 transport configuration mode. The l2transport keyword creates the Vlan interface in L2 mode so that it can be used for L2VPNs and local switching.
Command Default Command Modes	No default behavior or values XR config	
Command History		
Command mistory	Release	Modification
ooniniana mistory	Release 5.0.0	Modification This command was introduced.
Usage Guidelines	Release 5.0.0	
	Release 5.0.0 To use this command, you mu IDs. If the user group assignment for assistance.	This command was introduced. st be in a user group associated with a task group that includes appropriate task
	Release 5.0.0 To use this command, you mu IDs. If the user group assignme for assistance. For the <i>interface-path-id</i> argu • If specifying a physical in	This command was introduced. st be in a user group associated with a task group that includes appropriate task tent is preventing you from using a command, contact your AAA administrator
	Release 5.0.0 To use this command, you mu IDs. If the user group assignme for assistance. For the <i>interface-path-id</i> argu • If specifying a physical in	This command was introduced. st be in a user group associated with a task group that includes appropriate task nent is preventing you from using a command, contact your AAA administrator ment, use the following guidelines: nterface, the naming notation is <i>rack/slot/module/port</i> . The slash between values notation. An explanation of each component of the naming notation is as follows:

• module: Module number. A physical layer interface module (PLIM) is always 0.

• port: Physical port number of the interface.

• If specifying an Ethernet bundle interface, the range is from 1 through 65535.

For the *subinterface* argument, the range is from 0 through 4095.

To configure a large number of subinterfaces, we recommend entering all configuration data before you commit the **interface** command.

To change an interface from Layer 2 to Layer 3 mode and back, you must delete the interface first and then re-configure it in the appropriate mode.



A subinterface does not pass traffic without an assigned VLAN ID.

Task IDOperationsvlanread, write

Examples

Task ID

This example shows how to configure a VLAN subinterface on a 10-Gigabit Ethernet interface:

```
RP/0/RP0/CPU0:router(config)# interface TenGigE 0/0/0/1.2
RP/0/RP0/CPU0:router(config-subif)# dotlq vlan 1
RP/0/RP0/CPU0:router(config-subif)# ipv4 address 50.0.0.1/24
```

This example shows how to create a VLAN subinterface with Layer 2 transport port mode enabled, and enter Layer 2 transport configuration mode under that VLAN:

RP/0/RP0/CPU0:router(config)# interface GigabitEthernet 0/4/0/1.1 RP/0/RP0/CPU0:router(config-if-l2)#

Related Commands	Command	Description
	dot1q native vlan	Assigns the native VLAN ID of a physical interface trunking 802.1Q VLAN traffic.
	dot1q vlan, on page 2	Assigns a VLAN ID to a subinterface (or modifies the VLAN ID that is currently assigned to a subinterface).