



## IP Service Level Agreement Commands

---

This module describes the Cisco IOS XR software commands to configure IP Service Level Agreements (IP SLAs) on your router.

For detailed information about IP SLA concepts, configuration tasks, and examples, see the *Implementing IP Service Level Agreements* module in the *System Monitoring Configuration Guide for Cisco NCS 6000 Series Routers*.

- [access-list](#), page 5
- [action \(IP SLA\)](#), page 7
- [ageout](#), page 9
- [buckets \(history\)](#), page 11
- [buckets \(statistics hourly\)](#), page 13
- [buckets \(statistics interval\)](#), page 15
- [control disable](#), page 17
- [datasize request](#), page 19
- [destination address \(IP SLA\)](#), page 21
- [destination port](#), page 23
- [distribution count](#), page 25
- [distribution interval](#), page 27
- [exp](#), page 29
- [filter](#), page 31
- [force explicit-null](#), page 33
- [frequency \(IP SLA\)](#), page 35
- [history](#), page 37
- [interval](#), page 39
- [ipsla](#), page 41
- [key-chain](#), page 43

- [life](#), page 45
- [lives](#), page 47
- [low-memory](#), page 49
- [lsp selector ipv4](#), page 51
- [lsr-path](#), page 53
- [maximum hops](#), page 55
- [maximum paths \(IP SLA\)](#), page 57
- [monitor](#), page 59
- [mpls discovery vpn](#), page 61
- [mpls lsp-monitor](#), page 63
- [operation](#), page 64
- [output interface](#), page 65
- [output nexthop](#), page 67
- [packet count](#), page 69
- [packet interval](#), page 71
- [path discover](#), page 73
- [path discover echo](#), page 74
- [path discover path](#), page 76
- [path discover scan](#), page 78
- [path discover session](#), page 80
- [react](#), page 82
- [react lpd](#), page 85
- [reaction monitor](#), page 87
- [reaction operation](#), page 89
- [reaction trigger](#), page 91
- [responder](#), page 93
- [recurring](#), page 95
- [reply dscp](#), page 97
- [reply mode](#), page 99
- [samples](#), page 101
- [scan delete-factor](#), page 103
- [scan interval](#), page 105
- [schedule monitor](#), page 107

- [schedule operation, page 109](#)
- [schedule period, page 111](#)
- [show ipsla application, page 113](#)
- [show ipsla history, page 115](#)
- [show ipsla mpls discovery vpn, page 118](#)
- [show ipsla mpls lsp-monitor lpd, page 120](#)
- [show ipsla mpls lsp-monitor scan-queue, page 122](#)
- [show ipsla mpls lsp-monitor summary, page 124](#)
- [show ipsla responder statistics ports, page 127](#)
- [show ipsla statistics, page 129](#)
- [show ipsla statistics aggregated, page 132](#)
- [show ipsla statistics enhanced aggregated, page 141](#)
- [source address , page 144](#)
- [source port , page 146](#)
- [start-time , page 148](#)
- [statistics, page 151](#)
- [tag \(IP SLA\), page 154](#)
- [target ipv4, page 156](#)
- [target pseudowire, page 158](#)
- [target traffic-eng , page 160](#)
- [threshold, page 162](#)
- [threshold type average, page 164](#)
- [threshold type consecutive, page 166](#)
- [threshold type immediate, page 168](#)
- [threshold type xofy, page 170](#)
- [timeout \(IP SLA\), page 172](#)
- [tos, page 174](#)
- [ttl, page 176](#)
- [type icmp echo, page 178](#)
- [type icmp path-echo, page 180](#)
- [type icmp path-jitter, page 182](#)
- [type mpls lsp ping, page 184](#)
- [type mpls lsp trace, page 186](#)

- [type udp echo](#), page 188
- [type udp jitter](#), page 190
- [type udp ipv4 address](#), page 192
- [verify-data](#), page 194
- [vrf \(IP SLA\)](#), page 196
- [vrf \(IP SLA MPLS LSP monitor\)](#), page 198

## access-list

To specify an access-list name to filter provider edge (PE) addresses to restrict operations that are automatically created by MPLS LSP monitor (MPLSLM) instance, use the **access-list** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

**access-list** *acl-name*

**no access-list**

### Syntax Description

<i>acl-name</i>	Filters an access-list name.
-----------------	------------------------------

### Command Default

No access list is configured by default.

### Command Modes

IP SLA MPLS LSP monitor ping configuration  
IP SLA MPLS LSP monitor trace configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Access-list changes are processed before the scan interval expires to display a planned list of changes in the scan-queue.



#### Note

There is no verification check between the access list and the IPSLA configuration.

### Task ID

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **access-list** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplsml)# monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplsml-def)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mplsml-lsp-ping)# access-list ipsla
```

**Related Commands**

Command	Description
<a href="#">scan interval, on page 105</a>	Specifies the frequency at which the MPLS LSP monitor instance checks the scan queue for updates
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace, on page 186</a>	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

## action (IP SLA)

To specify what action or combination of actions the operation performs when you configure the **react** command or when threshold events occur, use the **action** command in the appropriate configuration mode. To clear action or combination of actions (no action can happen), use the **no** form of this command.

**action** {**logging**| **trigger**}

**no action** {**logging**| **trigger**}

### Syntax Description

<b>logging</b>	Sends a logging message when the specified violation type occurs for the monitored element. The IP SLA agent generates a syslog and informs SNMP. Then, it is up to the SNMP agent to generate a trap or not.
<b>trigger</b>	Determines that the operation state of one or more target operations makes the transition from pending to active when the violation conditions are met. The target operations to be triggered are specified using the <b>ipsla reaction trigger</b> command. A target operation continues until its life expires, as specified by the lifetime value of the target operation. A triggered target operation must finish its life before it can be triggered again.

### Command Default

None

### Command Modes

IP SLA reaction condition configuration  
IP SLA MPLS LSP monitor reaction configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the **action** command to occur for threshold events, the threshold type must be defined. Absence of threshold type configuration is considered if the threshold check is not activated.

When the **action** command is used from IP SLA MPLS LSP monitor reaction configuration mode, only the **logging** keyword is available.

If the **action** command is used in IP SLA operation mode, the action defined applies to the specific operation being configured. If the **action** command is used in IP SLA MPLS LSP monitor mode, the action defined applies to all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **action** command with the **logging** keyword:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react connection-loss
RP/0/RP0/CPU0:router(config-ipsla-react-cond)# action logging
```

The following example shows how to use the **action** command from the IP SLA MPLS LSP monitor reaction configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplsml)# reaction monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplsml-react)# react connection-loss
RP/0/RP0/CPU0:router(config-ipsla-mplsml-react-cond)# action logging
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">reaction monitor, on page 87</a>	Configures MPLS LSP monitoring reactions.
<a href="#">reaction operation, on page 89</a>	Configures certain actions that are based on events under the control of the IP SLA agent.
<a href="#">react, on page 82</a>	Specifies an element to be monitored for a reaction.
<a href="#">threshold, on page 162</a>	Sets the lower-limit and upper-limit values.
<a href="#">threshold type average, on page 164</a>	Takes action on average values to violate a threshold.
<a href="#">threshold type consecutive, on page 166</a>	Takes action after a number of consecutive violations.
<a href="#">threshold type immediate, on page 168</a>	Takes action immediately upon a threshold violation.
<a href="#">threshold type xofy, on page 170</a>	Takes action upon X violations in Y probe operations.



# ageout

To specify the number of seconds to keep the operation in memory when it is not actively collecting information, use the **ageout** command in IP SLA schedule configuration mode. To use the default value so that the operation will never age out, use the **no** form of this command.

**ageout** *seconds*

**no ageout**

## Syntax Description

<i>seconds</i>	Age-out interval in seconds. The value 0 seconds means that the collected data is not aged out. Range is 0 to 2073600.
----------------	--

## Command Default

The default value is 0 seconds (never aged out).

## Command Modes

IP SLA schedule configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **ageout** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# schedule operation 1
RP/0/RP0/CPU0:router(config-ipsla-sched)# ageout 3600
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

## buckets (history)

To set the number of history buckets that are kept during the lifetime of the IP SLA operation, use the **buckets** command in IP SLA operation history configuration mode. To use the default value, use the **no** form of this command.

**buckets** *buckets*

**no buckets**

### Syntax Description

<i>buckets</i>	Number of history buckets that are kept during the lifetime of an IP SLA operation. Range is 1 to 60.
----------------	---

### Command Default

The default value is 15 buckets.

### Command Modes

IP SLA operation history configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **buckets** command is supported only to configure the following operations:

- IP SLA ICMP path-echo
- IP SLA ICMP echo
- IP SLA UDP echo

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to use the **buckets** command in IP SLA UDP echo configuration mode:

```
RP/0/RP0/CPU0:router# configure
```

```

RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp echo
RP/0/RP0/CPU0:router(config-ipsla-udp-echo)# history
RP/0/RP0/CPU0:router(config-ipsla-op-hist)# buckets 30

```

**Related Commands**

Command	Description
<a href="#">history, on page 37</a>	Configures the history parameters for the IP SLA operation.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

## buckets (statistics hourly)

To set the number of hours for which statistics are kept, use the **bucket** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

**buckets** *hours*

**no buckets**

### Syntax Description

<i>hours</i>	Number of hours for which statistics are maintained for the IP SLA operations. Range is 0 to 25 in IP SLA operation statistics configuration mode, and 0 to 2 in IP SLA MPLS LSP monitor statistics configuration mode.
--------------	---

### Command Default

The default value is 2.

### Command Modes

IP SLA operation statistics configuration  
IP SLA MPLS LSP monitor statistics configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **buckets** command with the *hours* argument is valid only for the **statistics** command with the **hourly** keyword.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to set the number of hours in which statistics are maintained for the IP SLA UDP jitter operation for the **buckets** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
```

**buckets (statistics hourly)**

```
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter  
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# statistics hourly  
RP/0/RP0/CPU0:router(config-ipsla-op-stats)# buckets 10
```

**Related Commands**

Command	Description
<a href="#">statistics, on page 151</a>	Sets the statistics collection parameters for the operation.

## buckets (statistics interval)

To specify the maximum number of buckets in which the enhanced history statistics are kept, use the **buckets** command in IP SLA operation statistics configuration mode. To remove the statistics collection of the specified interval, use the **no** form of this command.

**buckets** *bucket-size*

**no buckets**

### Syntax Description

*bucket-size*

The bucket size is when the configured bucket limit is reached. Therefore, statistics gathering for the operation ends. Range is 1 to 100. Default is 100.

### Command Default

The default value is 100.

### Command Modes

IP SLA operation statistics configuration

### Command History

#### Release

#### Modification

Release 5.0.0

This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **buckets** command with the *bucket-size* argument is valid only for the **statistics** command with the **interval** keyword.

### Examples

The following example shows how to collect statistics for a given time interval for the IP SLA UDP jitter operation for the **buckets** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# statistics interval 60
RP/0/RP0/CPU0:router(config-ipsla-op-stats)# buckets 50
```

### Related Commands

Command	Description
<a href="#">statistics, on page 151</a>	Sets the statistics collection parameters for the operation.

**buckets (statistics interval)**



# control disable

To disable the control packets, use the **control disable** command in the appropriate configuration mode. To use the control packets again, use the **no** form of this command.

**control disable**

**no control disable**

**Syntax Description** This command has no keywords or arguments.

**Command Default** Control packets are enabled by default.

**Command Modes** IP SLA UDP echo configuration  
IP SLA UDP jitter configuration

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you configure the **control disable** command on the agent side, you need to configure a permanent port on the responder side or the operation returns a timeout error. If you configure the **control disable** command, a permanent port of the IP SLA Responder or some other functionality, such as the UDP echo server, is required on the remote device.

The **control disable** command is valid for operations that require a responder.

The IP SLA control protocol is disabled, which is used to send a control message to the IP SLA Responder prior to sending an operation packet. By default, IP SLA control messages are sent to the destination device to establish a connection with the IP SLA Responder.

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **control disable** command in IP SLA UDP jitter configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# control disable
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

## datasize request

To set the protocol data size in the request packet in the payload of an operation, use the **datasize request** command in the appropriate configuration mode. To reset the default data size, use the **no** form of this command.

**datasize request** *size*

**no datasize request**

### Syntax Description

*size* Specifies the following ranges and default values that are protocol dependent:

- For a UDP jitter operation, range is 16 to 1500 B.
- For a UDP echo operation, range is 4 to 1500 B.
- For an ICMP echo operation, range is 0 to 16384 B.
- For an ICMP path-echo operation, range is 0 to 16384 B.
- For an ICMP path-jitter operation, range is 0 to 16384 B.
- For an MPLS LSP ping operation, range is 100 to 17986 B.

### Command Default

For a UDP jitter operation, the default value is 32 B.

For a UDP echo operation, the default value is 16 B.

For an ICMP echo operation, the default value is 36 B.

For an ICMP path-echo operation, the default value is 36 B.

For an ICMP path-jitter operation, the default value is 36 B.

For an MPLS LSP ping operation, the default value is 100 B.

### Command Modes

IP SLA UDP echo configuration

IP SLA UDP jitter configuration

IP SLA ICMP path-jitter configuration

IP SLA ICMP path-echo configuration

IP SLA ICMP echo configuration

IP SLA MPLS LSP ping configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines**

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **datasize request** command in IP SLA UDP jitter configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# datasize request 512
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type icmp echo, on page 178</a>	Configures an IP SLA ICMP echo operation.
<a href="#">type icmp path-echo, on page 180</a>	Configures an IP SLA ICMP path-echo operation.
<a href="#">type icmp path-jitter, on page 182</a>	Configures an IP SLA ICMP path-jitter operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type udp echo, on page 188</a>	Configures an IP SLA UDP echo operation.
<a href="#">type udp jitter, on page 190</a>	Configures an IP SLA UDP jitter operation.

## destination address (IP SLA)

To identify the address of the target device, use the **destination address** command in the appropriate configuration mode. To unset the destination address, use the **no** form of this command.

**destination address** *ipv4-address*

**no destination address**

<b>Syntax Description</b>	<div><i>ipv4-address</i></div> <div>IP address of the target device.</div>					
<b>Command Default</b>	None					
<b>Command Modes</b>	IP SLA UDP echo configuration IP SLA UDP jitter configuration IP SLA ICMP path-jitter configuration IP SLA ICMP path-echo configuration IP SLA ICMP echo configuration					
<b>Command History</b>	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 5.0.0</td><td>This command was introduced.</td></tr></table>		Release	Modification	Release 5.0.0	This command was introduced.
Release	Modification					
Release 5.0.0	This command was introduced.					
<b>Usage Guidelines</b>	<p>To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.</p> <p>You must specify the address of the target device. The configuration for the <b>destination address</b> command is mandatory for all operations.</p>					
<b>Task ID</b>	<table><tr><th>Task ID</th><th>Operations</th></tr><tr><td>monitor</td><td>read, write</td></tr></table>		Task ID	Operations	monitor	read, write
Task ID	Operations					
monitor	read, write					

## Examples

The following example shows how to designate an IP address for the **destination address** command in IP SLA UDP jitter configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# destination address 192.0.2.12
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

# destination port

To identify the port of the target device, use the **destination port** command in the appropriate configuration mode. To unset the destination port, use the **no** form of this command.

**destination port** *port*

**no destination port**

## Syntax Description

<i>port</i>	Port number of the target device. Range is 1 to 65355.
-------------	--

## Command Default

None

## Command Modes

IP SLA UDP echo configuration  
IP SLA UDP jitter configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **destination port** command is not supported when you configure an ICMP operation; it is supported only to configure UDP operations.

You must specify the port of the target device. The configuration for the **destination port** command is mandatory for both IP SLA UDP echo and IP SLA UDP jitter configurations.


## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to designate a port for the **destination port** command in IP SLA UDP jitter configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
```

 destination port

```
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter  
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# destination port 11111
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.



# distribution count

To set the number of statistics distributions that are kept for each hop during the lifetime of the IP SLA operation, use the **distribution count** command in IP SLA operation statistics configuration mode. To use the default value, use the **no** form of this command.

**distribution count** *slot*

**no distribution count**

## Syntax Description

slot	Number of statistics distributions that are kept. Range is 1 to 20. Default is 1.
------	---

## Command Default

The default value is 1.

## Command Modes

IP SLA operation statistics configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

In most situations, you do not need to change the number of statistics distributions kept or the time interval for each distribution. Only change these parameters when distributions are needed, for example, when performing statistical modeling of your network. To set the statistics distributions interval, use the **distribution interval** command in IP SLA operation statistics configuration mode. The total number of statistics distributions captured is the value set by the **distribution count** command times the value set by the **maximum hops** command times the value set by the **maximum path** command times the value set by the **buckets** command.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to set the number of statistics distribution for the **distribution count** command:

```
RP/0/RP0/CPU0:router# configure
```

```

RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# statistics hourly
RP/0/RP0/CPU0:router(config-ipsla-op-stats)# distribution count 15

```

## Related Commands

Command	Description
<a href="#">buckets (statistics hourly), on page 13</a>	Sets the number of hours in which statistics are kept.
<a href="#">distribution interval, on page 27</a>	Sets the time interval (in milliseconds) for each statistical distribution.
<a href="#">maximum hops, on page 55</a>	Sets the number of hops in which statistics are maintained for each path for the IP SLA operation.
<a href="#">maximum paths (IP SLA), on page 57</a>	Sets the number of paths in which statistics are maintained for each hour for an IP SLA operation.
<a href="#">statistics, on page 151</a>	Sets the statistics collection parameters for the operation.

# distribution interval

To set the time interval (in milliseconds) for each statistical distribution, use the **distribution interval** command in IP SLA operation statistics configuration mode. To use the default value, use the **no** form of this command.

**distribution interval** *interval*

**no distribution interval**

## Syntax Description

<i>interval</i>	Number of milliseconds used for each statistics distribution that is kept. Range is 1 to 100. Default is 20.
-----------------	--

## Command Default

The default value is 20.

## Command Modes

IP SLA operation statistics configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

In most situations, you do not need to change the number of statistics distributions kept or the time interval for each distribution. Only change these parameters when distributions are needed, for example, when performing statistical modeling of your network. To set the statistics distributions count, use the **distribution count** command in IP SLA operation statistics configuration mode. The total number of statistics distributions captured is the value set by the **distribution count** command times the value set by the **maximum hops** command times the value set by the **maximum path** command times the value set by the **buckets** command.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to set the time interval for the **distribution interval** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
```

```
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# statistics hourly
RP/0/RP0/CPU0:router(config-ipsla-op-stats)# distribution interval 50
```

**Related Commands**

Command	Description
<a href="#">buckets (statistics hourly), on page 13</a>	Sets the number of hours in which statistics are kept.
<a href="#">distribution count, on page 25</a>	Sets the number of statistics distributions that are kept for each hop during the lifetime of the IP SLA operation.
<a href="#">maximum hops, on page 55</a>	Sets the number of hops in which statistics are maintained for each path for the IP SLA operation.
<a href="#">maximum paths (IP SLA), on page 57</a>	Sets the number of paths in which statistics are maintained for each hour for an IP SLA operation.
<a href="#">statistics, on page 151</a>	Sets the statistics collection parameters for the operation.

## exp

To specify the MPLS experimental field (EXP) value in the header of echo request packets, use the **exp** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

**exp** *exp-bits*

**no exp**

### Syntax Description

<i>exp-bits</i>	Experimental field value in the header of an echo request packet. Valid values are from 0 to 7. Default is 0.
-----------------	---

### Command Default

The experimental field value is set to 0.

### Command Modes

IP SLA MPLS LSP ping configuration  
IP SLA MPLS LSP trace configuration  
IP SLA MPLS LSP monitor ping configuration  
IP SLA MPLS LSP monitor trace configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **exp** command to set the MPLS experimental field in the headers of echo request packets in an MPLS LSP ping or MPLS LSP trace operation. The experimental (EXP) field allows for eight different quality-of-service (QoS) markings that determine the treatment (per-hop behavior) that a transit LSR node gives to a request packet. You can configure different MPLS EXP levels for different operations to create differentiated levels of response.

If the **exp** command is used in IP SLA operation mode, it acts on the headers of echo request packets for the specific operation being configured. If the **exp** command is used in IP SLA MPLS LSP monitor mode, it acts on the headers of echo request packets for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **exp** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp trace
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-trace)# exp 5
```

The following example shows how to use the **exp** command in MPLS LSP monitor mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplslm)# monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplslm-def)# type mpls lsp trace
RP/0/RP0/CPU0:router(config-ipsla-mplslm-lsp-trace)# exp 5
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace, on page 186</a>	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

# filter

To define the type of information that are kept in the history table for the IP SLA operation, use the **filter** command in IP SLA operation history configuration mode. To unset the history filter, use the **no** form of this command.

**filter** {all| failures}

**no filter**

## Syntax Description

<b>all</b>	Stores history data for all operations, if set.
<b>failures</b>	Stores data for operations that failed, if set.

## Command Default

The default is not to collect the history unless the **filter** command is enabled.

## Command Modes

IP SLA operation history configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **filter** command is supported only to configure the following operations:

- IP SLA ICMP path-echo
- IP SLA ICMP echo
- IP SLA UDP echo

If you use the **no** form of the **filter** command, the history statistics are not collected.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **filter** command in IP SLA UDP echo configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp echo
RP/0/RP0/CPU0:router(config-ipsla-udp-echo)# history
RP/0/RP0/CPU0:router(config-ipsla-op-hist)# filter all
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.



# force explicit-null

To add an explicit null label to the label stack of an LSP when an echo request is sent, use the **force explicit-null** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

**force explicit-null**

**no force explicit-null**

## Syntax Description

This command has no keywords or arguments.

## Command Default

An explicit null label is not added.

## Command Modes

IP SLA MPLS LSP ping configuration  
IP SLA MPLS LSP trace configuration  
IP SLA MPLS LSP monitor ping configuration  
IP SLA MPLS LSP monitor trace configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **force explicit-null** command to force an unsolicited explicit null label to be added to the MPLS label stack of the LSP when an echo request packet is sent in an MPLS LSP ping or MPLS LSP trace operation.

If the **force explicit-null** command is used in IP SLA operation mode, it acts on the label stack of the LSP for the specific operation being configured. If the **force explicit-null** command is used in IP SLA MPLS LSP monitor mode, it acts on the label stack of all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

You cannot use the **force explicit-null** command if pseudowire is specified as the target to be used in an MPLS LSP ping operation.

## Task ID

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **force explicit-null** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp trace
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-trace)# force explicit-null
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace, on page 186</a>	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

## frequency (IP SLA)

To set the frequency for probing, use the **frequency** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

**frequency** *seconds*

**no frequency**

### Syntax Description

<i>seconds</i>	Rate at which the specific IP SLA operation is sent into the network. Range is 1 to 604800.
----------------	---

### Command Default

If the **frequency** command is not used, the default value is 60 seconds.

In IP SLA MPLS LSP monitor schedule configuration mode, the default value is equal to the schedule period that is set using the **schedule period** command.

### Command Modes

IP SLA UDP echo configuration  
IP SLA UDP jitter configuration  
IP SLA ICMP path-jitter configuration  
IP SLA ICMP path-echo configuration  
IP SLA ICMP echo configuration  
IP SLA MPLS LSP ping configuration  
IP SLA MPLS LSP trace configuration  
IP SLA MPLS LSP monitor schedule configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If this command is used in IP SLA MPLS LSP monitor schedule configuration mode, it represents the frequency for the schedule period. In other words, if the frequency is set to 1000 seconds and the schedule period is set to 600 seconds, every 1000 seconds the LSP operations are run. Each run takes 600 seconds. Use the **schedule period** command to specify the schedule period.

The frequency value must be greater than or equal to the schedule period.

This configuration is inherited automatically by all LSP operations that are created.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **frequency** command in IP SLA UDP jitter configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# frequency 300
```

The following example shows how to use the **frequency** command in IP SLA MPLS LSP monitor schedule configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplslm)# schedule monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplslm-sched)# frequency 1200
RP/0/RP0/CPU0:router(config-ipsla-mplslm-sched)# schedule period 600
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">schedule period, on page 111</a>	Configures the amount of time during which all LSP operations are scheduled to start or run.

# history

To configure the history parameters for the IP SLA operation, use the **history** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

**history** [**buckets** *buckets*] **filter** {**all**|**failures**}| **lives** *lives*]

**no history**

## Syntax Description

<b>buckets</b>	Sets the number of history buckets that are kept during the lifetime of the IP SLA operation.
<i>buckets</i>	Number of history buckets that are kept during the lifetime of an IP SLA operation. Range is 1 to 60.
<b>filter</b>	Defines the type of information that is kept in the history table for the IP SLA operation.
<b>all</b>	Stores history data for all operations, if set.
<b>failures</b>	Stores data for operations that failed, if set.
<b>lives</b>	Sets the number of lives that are maintained in the history table for an IP SLA operation.
<i>lives</i>	Number of lives that are maintained in the history table for an IP SLA operation. Range is 0 to 2.

## Command Default

None

## Command Modes

IP SLA UDP echo configuration  
 IP SLA UDP jitter configuration  
 IP SLA ICMP path-jitter configuration  
 IP SLA ICMP path-echo configuration  
 IP SLA ICMP echo configuration  
 IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines**

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **history** command enters IP SLA operation history configuration mode in which you can configure more history configuration parameters.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **history** command in IP SLA UDP echo configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp echo
RP/0/RP0/CPU0:router(config-ipsla-udp-echo)# history
RP/0/RP0/CPU0:router(config-ipsla-op-hist)#
```

**Related Commands**

Command	Description
<a href="#">buckets (history), on page 11</a>	Sets the number of history buckets that are kept during the lifetime of the IP SLA operation.
<a href="#">filter, on page 31</a>	Defines the type of information that are kept in the history table for the IP SLA operation.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">lives, on page 47</a>	Sets the number of lives that are maintained in the history table for an IP SLA operation.

# interval

To configure the refresh interval for MPLS label switched path (LSP) monitoring, use the **interval** command in IP SLA MPLS discovery VPN configuration mode. To use the default value, use the **no** form of this command.

**interval** *refresh-interval*

**no interval**

## Syntax Description

<i>refresh-interval</i>	Specifies the time interval, in minutes, after which routing entries that are no longer valid are removed from the Layer 3 VPN discovery database. Range is 30 to 70560.
-------------------------	--

## Command Default

The default refresh interval is 60 minutes.

## Command Modes

IP SLA MPLS discovery VPN configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



### Note

If the total number of routes is large, there is a negative impact on the performance during the refresh of the discovery database. Therefore, the value of the *refresh-interval* argument should be large enough that router performance is not affected. If there are a very large number of routes, we recommend that you set the value of the *refresh-interval* argument to be several hours.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **interval** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls discovery vpn
RP/0/RP0/CPU0:router(config-ipsla-mpls-discovery-vpn)# interval 120
```

## Related Commands

Command	Description
<a href="#">mpls discovery vpn, on page 61</a>	Configures MPLS label switched path (LSP) provider edge (PE) router discovery.



# ipsla

To enter IP SLA configuration mode and configure IP Service Level Agreements, use the **ipsla** command in XR Config mode. To return to the default setting, use the **no** form of this command.

**ipsla**

**no ipsla**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR Config

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **ipsla** command enters IP SLA configuration mode where you can configure the various IP service level agreement options.

Task ID	Operations
monitor	read, write

**Examples** The following example shows how to enter IP SLA configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)#
```

Command	Description
<a href="#">key-chain</a> , on page 43	Configures MD5 authentication for IP SLA control messages.

Command	Description
<a href="#">low-memory, on page 49</a>	Configures a low-water memory mark.
<a href="#">mpls discovery vpn, on page 61</a>	Configures MPLS label switched path (LSP) provider edge (PE) router discovery.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">reaction operation, on page 89</a>	Configures certain actions that are based on events under the control of the IP SLA agent.
<a href="#">reaction trigger, on page 91</a>	Defines a second IP SLA operation to make the transition from a pending state to an active state when one of the trigger-type options is defined with the <b>reaction operation</b> command.
<a href="#">responder, on page 93</a>	Enables the IP SLA responder for UDP echo or jitter operations.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

# key-chain

To configure the MD5 authentication for the IP SLA control message, use the **key-chain** command in IP SLA configuration mode. To unset the keychain name and not use MD5 authentication, use the **no** form of this command.

**key-chain** *key-chain-name*

**no key-chain**

## Syntax Description

<i>key-chain-name</i>	Name of the keychain.
-----------------------	-----------------------

## Command Default

No default values are defined. No authentication is used.

## Command Modes

IP SLA configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you configure the **key-chain** command, you must also configure the **key chain** command in XR Config mode to provide MD5 authentication.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **ipsla key-chain** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# key-chain ipsla-keys
```

**Related Commands**

Command	Description
key chain	Creates or modifies a key chain.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

# life

To specify the length of time to execute, use the **life** command in IP SLA schedule configuration mode. To use the default value, use the **no** form of this command.

**life {forever}**

**no life**

## Syntax Description

<b>forever</b>	Schedules the operation to run indefinitely.
----------------	--

## Command Default

None

## Command Modes

IP SLA schedule configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **life** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# schedule operation 1
RP/0/RP0/CPU0:router(config-ipsla-sched)# life forever
```

## Related Commands

Command	Description
<a href="#">operation</a> , <a href="#">on page 64</a>	Configures an IP SLA operation.

Command	Description
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

# lives

To set the number of lives that are maintained in the history table for an IP SLA operation, use the **lives** command in IP SLA operation history configuration mode. To use the default value, use the **no** form of this command.

**lives** *lives*

**no lives**

## Syntax Description

<i>lives</i>	Number of lives that are maintained in the history table for an IP SLA operation. Range is 0 to 2.
--------------	--

## Command Default

The default value is 0 lives.

## Command Modes

IP SLA operation history configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **lives** command is supported only to configure the following operations:

- IP SLA ICMP path-echo
- IP SLA ICMP echo
- IP SLA UDP echo

If you use the **no** form of the **lives** command, the history statistics are not collected.

## Task ID

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **lives** command in IP SLA UDP echo configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp echo
RP/0/RP0/CPU0:router(config-ipsla-udp-echo)# history
RP/0/RP0/CPU0:router(config-ipsla-op-hist)# lives 2
```

**Related Commands**

Command	Description
<a href="#">buckets (history), on page 11</a>	Sets the number of history buckets that are kept during the lifetime of the IP SLA operation.
<a href="#">filter, on page 31</a>	Defines the type of information that are kept in the history table for the IP SLA operation.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.



# low-memory

**low-memory** *value*

**no low-memory**

## Syntax Description

<i>value</i>	Low-memory watermark value. Range is 0 to 4294967295.
--------------	---

## Command Default

The default value is 20 MB (free memory).

## Command Modes

IP SLA configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

IP SLA ensures that the system provides the specified memory before adding new operations or scheduling the pending operation.

When the 0 value is used, no memory limitation is enforced.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **low-memory** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# low-memory 102400
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.

Command	Description
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">show ipsla application, on page 113</a>	Displays the information for the IP SLA application.

## lsp selector ipv4

To specify the local host IPv4 address used to select an LSP, use the **lsp selector ipv4** command in the appropriate configuration mode. To clear the host address, use the **no** form of this command.

**lsp selector ipv4** *ip-address*

**no lsp selector ipv4**

### Syntax Description

<i>ip-address</i>	A local host IPv4 address used to select the LSP.
-------------------	---

### Command Default

The local host IP address used to select the LSP is 127.0.0.1.

### Command Modes

IP SLA MPLS LSP ping configuration  
IP SLA MPLS LSP trace configuration  
IP SLA MPLS LSP monitor ping configuration  
IP SLA MPLS LSP monitor trace configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **lsp selector ipv4** command to force an MPLS LSP ping or MPLS LSP trace operation to use a specific LSP when there are multiple equal cost paths between provider edge (PE) routers. This situation occurs when transit label switching routers (LSRs) use the destination address in IP packet headers for load balancing.

The IPv4 address configured with the **lsp selector ipv4** command is the destination address in the User Datagram Protocol (UDP) packet sent as the MPLS echo request. Valid IPv4 addresses are defined in the subnet 127.0.0.0/8 and used to:

- Force the packet to be consumed by the router where an LSP breakage occurs.
- Force processing of the packet at the terminal point of the LSP if the LSP is intact.
- Influence load balancing during forwarding when the transit routers use the destination address in the IP header for load balancing.

If the **lsp selector ipv4** command is used in IP SLA operation mode, it acts on the MPLS echo requests for the specific operation being configured. If the **lsp selector ipv4** command is used in IP SLA MPLS LSP

monitor mode, it acts on the MPLS echo requests for all operations associated with the monitored provider edge (PE) routers.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **lsp selector ipv4** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp trace
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-trace)# lsp selector ipv4 127.10.10.1
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace, on page 186</a>	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

# lsr-path

To specify a loose source routing path in which to measure the ICMP, use the **lsr-path** command in the appropriate configuration mode. To use a path other than the specified one, use the **no** form of this command.

**lsr-path** *ipaddress1* [*ipaddress2* [... [*ipaddress8*]]]

**no** **lsr-path**

## Syntax Description

<i>ip address</i>	IPv4 address of the intermediate node. Up to eight addresses can be entered.
-------------------	--

## Command Default

No path is configured.

## Command Modes

IP SLA ICMP path-jitter configuration  
IP SLA ICMP path-echo configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **lsr-path** command applies only to ICMP path-echo and ICMP path-jitter operation types.

You can configure up to a maximum of eight hop addresses by using the **lsr-path** command, as shown in the following example:

```
lsr-path ipaddress1 [ipaddress2 [... [ipaddress8]]]
```

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **lsr-path** command in IP SLA ICMP Path-echo configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
```

```
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type icmp path-echo
RP/0/RP0/CPU0:router(config-ipsla-icmp-path-echo)# lsr-path 192.0.2.40
```

**Related Commands**

Command	Description
<a href="#">operation</a> , on page 64	Configures an IP SLA operation.
<a href="#">schedule operation</a> , on page 109	Schedules an IP SLA operation.

## maximum hops

To set the number of hops in which statistics are maintained for each path for the IP SLA operation, use the **maximum hops** command in IP SLA operation statistics configuration mode. To use the default value, use the **no** form of this command.

**maximum hops** *hops*

**no maximum hops**

### Syntax Description

<i>hops</i>	Number of hops for which statistics are maintained for each path. Range is 1 to 30. Default value is 16 for path operations; for example, <i>pathecho</i> .
-------------	---

### Command Default

The default value is 16 hops.

### Command Modes

IP SLA operation statistics configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **maximum hops** command is supported only when you configure path operations and the IP SLA ICMP path-echo operation.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to set the number of hops for the statistics for the **maximum** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type icmp path-echo
RP/0/RP0/CPU0:router(config-ipsla-icmp-path-echo)# statistics hourly
RP/0/RP0/CPU0:router(config-ipsla-op-stats)# maximum hops 20
```

**Related Commands**

Command	Description
<a href="#">buckets (statistics hourly), on page 13</a>	Sets the number of hours in which statistics are kept.
<a href="#">distribution count, on page 25</a>	Sets the number of statistics distributions that are kept for each hop during the lifetime of the IP SLA operation.
<a href="#">distribution interval, on page 27</a>	Sets the time interval (in milliseconds) for each statistical distribution.
<a href="#">maximum paths (IP SLA), on page 57</a>	Sets the number of paths in which statistics are maintained for each hour for an IP SLA operation.
<a href="#">statistics, on page 151</a>	Sets the statistics collection parameters for the operation.



## maximum paths (IP SLA)

To set the number of paths in which statistics are maintained for each hour for an IP SLA operation, use the **maximum paths** command in IP SLA operation statistics configuration mode. To use the default value, use the **no** form of this command.

**maximum paths** *paths*

**no maximum paths**

### Syntax Description

<i>paths</i>	Number of paths for which statistics are maintained for each hour. Range is 1 to 128. Default value is 5 for path operations; for example, <i>pathecho</i> .
--------------	--

### Command Default

The default value is 5 paths.

### Command Modes

IP SLA operation statistics configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **maximum paths** command is supported only when you configure path operations and the IP SLA ICMP path-echo operation.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to set the number of paths for the statistics for the **maximum paths** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type icmp path-echo
```

```
RP/0/RP0/CPU0:router(config-ipsla-icmp-path-echo)# statistics hourly
RP/0/RP0/CPU0:router(config-ipsla-op-stats)# maximum paths 20
```

**Related Commands**

Command	Description
<a href="#">buckets (statistics hourly), on page 13</a>	Sets the number of hours in which statistics are kept.
<a href="#">distribution count, on page 25</a>	Sets the number of statistics distributions that are kept for each hop during the lifetime of the IP SLA operation.
<a href="#">distribution interval, on page 27</a>	Sets the time interval (in milliseconds) for each statistical distribution.
<a href="#">maximum hops, on page 55</a>	Sets the number of hops in which statistics are maintained for each path for the IP SLA operation.
<a href="#">statistics, on page 151</a>	Sets the statistics collection parameters for the operation.

# monitor

To configure an MPLS LSP monitor instance, use the **monitor** command in IP SLA LSP monitor configuration mode. To remove the monitor instance, use the **no** form of this command.

**monitor** *monitor-id*

**no monitor** [ *monitor-id* ]

## Syntax Description

<i>monitor-id</i>	Number of the IP SLA LSP monitor instance to be configured. Range is 1 to 2048.
-------------------	---

## Command Default

No monitor instance is configured.

## Command Modes

IP SLA LSP monitor configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **monitor** command enters IP SLA MPLS LSP monitor configuration mode so that you can set the desired monitor type for all operations associated with the monitored provider edge (PE) routers.

To remove all monitor instances, use the **no monitor** command with no argument.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **monitor** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-monitor)# monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-monitor)#
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

## mpls discovery vpn

To configure MPLS label switched path (LSP) provider edge (PE) router discovery, use the **mpls discovery vpn** command in IP SLA configuration mode. To use the default value, use the **no** form of this command.

**mpls discovery vpn** [*interval interval*]

**no mpls discovery vpn**

<b>Syntax Description</b>	<table><tr><td><b>interval</b></td><td>Configures the refresh interval for MPLS label switched path (LSP) monitoring.</td></tr></table>	<b>interval</b>	Configures the refresh interval for MPLS label switched path (LSP) monitoring.		
<b>interval</b>	Configures the refresh interval for MPLS label switched path (LSP) monitoring.				
<b>Command Default</b>	None				
<b>Command Modes</b>	IP SLA configuration				
<b>Command History</b>	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>Release 5.0.0</td><td>This command was introduced.</td></tr></table>	Release	Modification	Release 5.0.0	This command was introduced.
Release	Modification				
Release 5.0.0	This command was introduced.				
<b>Usage Guidelines</b>	<p>To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.</p> <p>Use the <b>mpls discovery vpn</b> command to configure provider edge (PE) router discovery. PE Discovery discovers the LSPs used to reach every routing next hop. Routing entities are stored in a Layer 3 VPN discover database.</p>				
<b>Task ID</b>	<table><tr><th>Task ID</th><th>Operations</th></tr><tr><td>monitor</td><td>read, write</td></tr></table>	Task ID	Operations	monitor	read, write
Task ID	Operations				
monitor	read, write				

### Examples

The following example shows how to enter IP SLA MPLS discovery VPN mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls discovery vpn
RP/0/RP0/CPU0:router(config-ipsla-mpls-discovery-vpn)#
```

**Related Commands**

Command	Description
<a href="#">interval</a> , <a href="#">on page 39</a>	Configures the refresh interval for MPLS label switched path (LSP) monitoring.

# mpls lsp-monitor

To configure MPLS label switched path (LSP) monitoring, use the **mpls lsp-monitor** command in IP SLA configuration mode. To use the default value, use the **no** form of this command.

**mpls lsp-monitor**

**no mpls lsp-monitor**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** IP SLA configuration

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **mpls lsp-monitor** command to configure MPLS LSP PE monitoring on the router. This provides a means to configure all operations associated with the monitored provider edge (PE) routers. The configuration is inherited by all LSP operations that are created automatically by the PE discovery.

Task ID	Task ID	Operations
	monitor	read, write

**Examples** The following example shows how to enter IP SLA MPLS LSP monitor mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplsml)#
```

**Related Commands**

# operation

To configure an IP SLA operation, use the **operation** command in IP SLA configuration mode. To remove the operation, use the **no** form of this command.

**operation** *operation-number*

**no operation** *operation-number*

## Syntax Description

<i>operation-number</i>	Operation number. Range is 1 to 2048.
-------------------------	---------------------------------------

## Command Default

None

## Command Modes

IP SLA configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the IP SLA **operation** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)#
```

## Related Commands

Command	Description
<a href="#">schedule operation</a> , <a href="#">on page 109</a>	Schedules an IP SLA operation.



# output interface

To specify the echo request output interface to be used for LSP ping or LSP trace operations, use the **output interface** command in IP SLA MPLS LSP ping or IP SLA MPLS LSP trace configuration mode. To return the output interface to the default, use the **no** form of this command.

**output interface** *type interface-path-id*

**no output interface**

## Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface.  <b>Note</b> Use the <b>show interfaces</b> command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.

## Command Default

No default behavior or values.

## Command Modes

IP SLA MPLS LSP ping configuration  
IP SLA MPLS LSP trace configuration  
IP SLA MPLS LSP monitor ping configuration  
IP SLA MPLS LSP monitor trace configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **output interface** command to help monitor path-to-target over the path if there are some ECMP routes in a topology.

You cannot use the **output interface** command if pseudowire is specified as the target to be used in an MPLS LSP ping operation.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **output interface** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls ls output interface pos 0/1/0/0
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">output nexthop, on page 67</a>	Configures the next-hop address to be used for LSP ping or LSP trace operations.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace, on page 186</a>	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

## output nexthop

To specify the next-hop address to be used for a Label Switched Path (LSP) ping or LSP trace operations, use the **output nexthop** command in the appropriate configuration mode. To return the output next hop to the default, use the **no** form of this command.

**output nexthop** *ip-address*

**no output nexthop**

Syntax Description	<i>ip-address</i>	IP address of the next hop.
--------------------	-------------------	-----------------------------

Command Default	No default behavior or values
-----------------	-------------------------------

Command Modes	IP SLA MPLS LSP ping configuration IP SLA MPLS LSP trace configuration IP SLA MPLS LSP monitor ping configuration IP SLA MPLS LSP monitor trace configuration
---------------	--

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

Usage Guidelines	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.
------------------	---

When LSP Path Discovery (LPD) is enabled, the next-hop IP address is also used to filter out the paths that are not associated with the specified next-hop address.

**Note**

After you configure the output next hop, you must also configure the output interface.

Task ID	Task ID	Operations
	monitor	read, write

## Examples

The following example shows how to use the **output nexthop** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp trace
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-trace)# output nexthop 10.1.1.1
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">output interface, on page 65</a>	Configures the echo request output interface to be used for LSP ping or LSP trace operations.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace, on page 186</a>	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

# packet count

To specify the number of packets that are to be transmitted during a probe, such as a sequence of packets being transmitted for a jitter probe, use the **packet count** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

**packet count** *count*

**no packet count**

## Syntax Description

<i>count</i>	Number of packets to be transmitted in each operation. Range for a UDP jitter operation is 1 to 60000. Range for an ICMP path-jitter operation is 1 to 100.
--------------	---

## Command Default

The default packet count is 10.

## Command Modes

IP SLA UDP jitter configuration  
IP SLA ICMP path-jitter configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **packet count** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# packet count 30
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">packet interval, on page 71</a>	Specifies the interval between packets.

# packet interval

To specify the interval between packets, use the **packet interval** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

**packet interval** *interval*

**no packet interval**

<b>Syntax Description</b>	<i>interval</i>	Interpacket interval in milliseconds. Range is 1 to 60000 (in milliseconds).
---------------------------	-----------------	--

**Command Default** The default packet interval is 20 ms.

**Command Modes** IP SLA UDP jitter configuration  
IP SLA ICMP path-jitter configuration

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write

**Examples** The following example shows how to use the **packet interval** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# packet interval 30
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">packet count, on page 69</a>	Specifies the number of packets that are to be transmitted during a probe.



# path discover

To enable path discovery and enter MPLS LSP monitor (MPLSLM) LPD submode, use the **path discover** command in IP SLA MPLS LSP monitor ping configuration mode. To use the default value, use the **no** form of this command.

**path discover**  
**no path discover**

## Syntax Description

None

## Command Default

No default behavior or values

## Command Modes

IP SLA MPLS LSP monitor ping configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to enter path discover submode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplslm)# monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplslm-def)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mplslm-lsp-ping)# path discover
RP/0/RP0/CPU0:router(config-ipsla-mplslm-lpd)#
```

## path discover echo

To configure MPLS LSP echo parameters, use the **path discover** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

**path discover echo** {*interval time*| **maximum lsp selector ipv4** *host address*| **multipath bitmap size** *size*| **retry count**| **timeout value**}

**no path discover echo** {*interval time*| **maximum lsp selector ipv4** *host address*| **multipath bitmap size** *size*| **retry count**| **timeout value**}

### Syntax Description

<b>interval</b> <i>time</i>	Configures the interval (in milliseconds) between MPLS LSP echo requests sent during path discovery. Range is 0 to 3600000. Default is 0.
<b>maximum lsp selector ipv4</b> <i>host-address</i>	Configures a local host IP address (127.x.x.x) that is the maximum selector value to be used during path discovery. Default is 127.255.255.255.
<b>multipath bitmap size</b> <i>size</i>	Configures the maximum number of selectors sent in the downstream mapping of an MPLS LSP echo request during path discovery. Range is 1 to 256. Default is 32.
<b>retry</b> <i>count</i>	Configures the number of timeout retry attempts for MPLS LSP echo requests sent during path discovery. Range is 0 to 10. Default is 3.
<b>timeout</b> <i>value</i>	Configures the timeout value (in seconds) for MPLS LSP echo requests sent during path discovery. Range is 1 to 3600. Default is 5.

### Command Default

**interval** *time*: 0  
**maximum lsp selector ipv4** *host address*: 127.255.255.255  
**multipath bitmap size** *size* : 32  
**retry** *count*: 3  
**timeout** *value*: 5

### Command Modes

Path discover configuration  
MPLS LSP ping configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines**

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A retry occurs when either an echo reply was not received on time for an outstanding echo request, or when no selectors are found for a given path by a transit router.

When a selector value is configured in MPLSLM configuration mode, the maximum selector specified must be larger than that value. In such a scenario, the range of selectors used for path discovery is set by the two values.

When the **interval time** is zero, a new echo request is sent after the previous echo retry was received.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to configure the path discover echo interval:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplsml)# monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplsml-def)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mplsml-lsp-ping)# path discover
RP/0/RP0/CPU0:router(config-ipsla-mplsml-lsp-lpd)# echo interval 777
```

**Related Commands**

Command	Description
<a href="#">path discover path, on page 76</a>	Configures MPLS LSP path parameters.
<a href="#">path discover scan, on page 78</a>	Configures MPLS LSP scan parameters.
<a href="#">path discover session, on page 80</a>	Configures MPLS LSP session parameters.

## path discover path

To configure MPLS LSP path parameters, use the **path discover path** command in MPLS LSP monitor (MPLSLM) LPD configuration submode. To use the default value, use the **no** form of this command.

**path discover path** {**retry** *range*| **secondary frequency** {**both**| **connection-loss**| **timeout**} *value*}

**no path-discover path**

### Syntax Description

<b>retry</b> <i>range</i>	Configures the number of attempts to be performed before declaring a path as down. Default is 1 (LSP group will not retry to perform the echo request if the previous attempt fails). Range is 1 to 16.
<b>secondary frequency</b>	Configures a secondary frequency to use after a failure condition (that is, a connection-loss or timeout) occurs.
<b>both</b>	Enable secondary frequency for a timeout and connection loss.
<b>connection-loss</b>	Enable secondary frequency for only a connection loss.
<b>timeout</b>	Enable secondary frequency for only a timeout.
<i>value</i>	Frequency value range is 1 to 604800.

### Command Default

None

### Command Modes

MPLSLM LPD configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

In the event of a path failure, the secondary frequency value is used instead of the normal frequency value. The normal frequency value is determined by a frequency value or schedule period value, and the LSP operations are scheduled to start periodically at this interval. By default, the secondary frequency value is disabled. When failure condition disappears, probing resumes at the regular frequency.

**Note**

The **secondary** command works in tandem with the **retry** keyword. Both must be configured.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to configure MPLS LSP path parameters:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplsmlm)# monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplsmlm-def)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mplsmlm-lsp-ping)# path discover
RP/0/RP0/CPU0:router(config-ipsla-mplsmlm-lsp-lpd)# path retry 12
RP/0/RP0/CPU0:router(config-ipsla-mplsmlm-lsp-lpd)# path secondary frequency both 10
```

**Related Commands**

Command	Description
<a href="#">path discover echo, on page 74</a>	Configures MPLS LSP echo parameters.
<a href="#">path discover scan, on page 78</a>	Configures MPLS LSP scan parameters.
<a href="#">path discover session, on page 80</a>	Configures MPLS LSP session parameters.

## path discover scan

To configure MPLS LSP scan parameters, use the **path discover scan** command in MPLS LSP monitor (MPLSLM) LPD configuration submode. To use the default value, use the **no** form of this command.

**path discover scan period** *value*

**no path discover scan period** *value*

### Syntax Description

<b>period</b> <i>value</i>	Configures the time (in minutes) between consecutive cycles of path discovery requests per MPLSLM instance. Range is 0 to 7200. Default is 5.
----------------------------	---

### Command Default

**period** *value* : 5

### Command Modes

MPLSLM LPD configuration submode

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

MPLSLM instances periodically trigger path discovery requests for LSP groups. At certain intervals, an MPLSLM instance begins triggering path discovery requests for each group in ascending order (determined by group ID). By default, the path discovery requests are triggered sequentially, although some concurrency may occur if the session limit value is greater than 1. The cycle concludes when the last LSP group finishes path discovery.

If the duration of the discovery cycle is larger than the scan period, a new cycle starts as soon as the previous one completes.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to configure the path discovery scan period value:

```
RP/0/RP0/CPU0:router# configure
```

```
RP/0/RP0/CPU0:router(config)# ipsla  
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor  
RP/0/RP0/CPU0:router(config-ipsla-mplsml)# monitor 1  
RP/0/RP0/CPU0:router(config-ipsla-mplsml-def)# type mpls lsp ping  
RP/0/RP0/CPU0:router(config-ipsla-mplsml-lsp-ping)# path discover  
RP/0/RP0/CPU0:router(config-ipsla-mplsml-lsp-lpd)# scan period 2
```

**Related Commands**

Command	Description
<a href="#">path discover echo, on page 74</a>	Configures MPLS LSP echo parameters.
<a href="#">path discover path, on page 76</a>	Configures MPLS LSP path parameters.
<a href="#">path discover session, on page 80</a>	Configures MPLS LSP session parameters.

## path discover session

To configure MPLS LSP session parameters, use the **path discover session** command in MPLS LSP monitor (MPLSLM) LPD configuration submode. To use the default value, use the **no** form of this command.

**path discover session** {*limit value*| *timeout value*}

**no path discover session** {*limit value*| *timeout value*}

### Syntax Description

<b>limit</b> <i>value</i>	Configures the number of concurrent active path discovery requests the MPLSLM instance submits to the LSPV server. Range is 1 to 15. Default is 1.
<b>timeout</b> <i>value</i>	Configures the time (in seconds) the MPLSLM instance will wait for the result of a path discovery request submitted to the LSPV server. Range is 1 to 900. Default is 120.

### Command Default

**limit** *value* : 1

**timeout** *value* : 120

### Command Modes

MPLSLM LPD configuration submode

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

An MPLSLM instance considers the path discovery as a failure when it receives no response within the configured timeout configuration value.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to configure the path discovery session timeout value:

```
RP/0/RP0/CPU0:router# configure
```



```
RP/0/RP0/CPU0:router(config)# ipsla  
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor  
RP/0/RP0/CPU0:router(config-ipsla-mplsmlm)# monitor 1  
RP/0/RP0/CPU0:router(config-ipsla-mplsmlm-def)# type mpls lsp ping  
RP/0/RP0/CPU0:router(config-ipsla-mplsmlm-lsp-ping)# path discover  
RP/0/RP0/CPU0:router(config-ipsla-mplsmlm-lsp-lpd)# session timeout 22
```

**Related Commands**

Command	Description
<a href="#">path discover echo, on page 74</a>	Configures MPLS LSP echo parameters.
<a href="#">path discover path, on page 76</a>	Configures MPLS LSP path parameters.
<a href="#">path discover scan, on page 78</a>	Configures MPLS LSP scan parameters.

## react

To specify an element to be monitored for a reaction, use the **react** command in the appropriate configuration mode. To remove the specified reaction type, use the **no** form of this command.

**react** {**connection-loss**| **jitter-average** [**dest-to-source**| **source-to-dest**]| **packet-loss** {**dest-to-source**| **source-to-dest**}| **rtt**| **timeout**| **verify-error**}

**no react** {**connection-loss**| **jitter-average** [**dest-to-source**| **source-to-dest**]| **packet-loss** {**dest-to-source**| **source-to-dest**}| **rtt**| **timeout**| **verify-error**}

### Syntax Description

<b>connection-loss</b>	Specifies that a reaction occurs if there is a connection-loss for the monitored operation.
<b>jitter-average</b> [ <b>dest-to-source</b>   <b>source-to-dest</b> ]	Specifies that a reaction occurs if the average round-trip jitter value violates the upper threshold or lower threshold. The following options are listed for the <b>jitter-average</b> keyword: <ul style="list-style-type: none"> <li>• <b>dest-to-source</b>—(Optional) Specifies the jitter average destination to source (DS).</li> <li>• <b>source-to-dest</b>—(Optional) Specifies the jitter average source to destination (SD).</li> </ul>
<b>packet-loss</b> { <b>dest-to-source</b>   <b>source-to-dest</b> }	Specifies the reaction on packet loss value violation. The following options are listed for the <b>packet-loss</b> keyword: <ul style="list-style-type: none"> <li>• <b>dest-to-source</b>—(Optional) Specifies the packet loss destination to source (DS) violation.</li> <li>• <b>source-to-dest</b>—(Optional) Specifies the packet loss source to destination (SD) violation.</li> </ul>
<b>rtt</b>	Specifies that a reaction occurs if the round-trip value violates the upper threshold or lower threshold.
<b>timeout</b>	Specifies that a reaction occurs if there is a timeout for the monitored operation.
<b>verify-error</b>	Specifies that a reaction occurs if there is an error verification violation.

### Command Default

If there is no default value, no reaction is configured.

### Command Modes

IP SLA reaction configuration  
IP SLA MPLS LSP monitor reaction configuration

**Command History**

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines**

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the **connection-loss** keyword, **jitter-average** keyword, and **rtt** keyword, the reaction does not occur when the value violates the upper or the lower threshold. The reaction condition is set when the upper threshold is passed, and it is cleared when values go below the lower threshold.

For the **connection-loss** keyword and **verify-error** keyword, thresholds do not apply to the monitored element.

For the **jitter-average** keyword, **packet-loss** keyword, and **rtt** keyword, if the upper threshold for react threshold type average 3 is configured as 5000 ms and the last three results of the operation are 6000, 6000, and 5000 ms, the average is  $6000 + 6000 + 5000 = 17000 / 3 = 5667$ —therefore violating the 5000-ms upper threshold. The threshold type average must be configured when setting the type. These keywords are not available if connection-loss, timeout, or verify-error is specified as the monitored element, because upper and lower thresholds do not apply to these options.

In IP SLA MPLS LSP monitor reaction configuration mode, only the **connection-loss** and **timeout** keywords are available. If the **react** command is used in IP SLA MPLS LSP monitor reaction configuration mode, it configures all operations associated with the monitored provider edge (PE) routers. The configuration is inherited by all LSP operations that are created automatically by the PE discovery.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **react** command with the **connection-loss** keyword:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react connection-loss
RP/0/RP0/CPU0:router(config-ipsla-react-cond)#
```

The following example shows how to use the **react** command with the **jitter-average** keyword:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react jitter-average
RP/0/RP0/CPU0:router(config-ipsla-react-cond)#
```

The following example shows how to use the **react** command with the **packet-loss** keyword:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
```

```
RP/0/RP0/CPU0:router(config-ipsla-react)# react packet-loss dest-to-source
RP/0/RP0/CPU0:router(config-ipsla-react-cond)#
```

The following example shows how to use the **react** command with the **rtt** keyword:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react rtt
RP/0/RP0/CPU0:router(config-ipsla-react-cond)#
```

The following example shows how to use the **react** command with the **timeout** keyword:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react timeout
RP/0/RP0/CPU0:router(config-ipsla-react-cond)#
```

The following example shows how to use the **react** command with the **verify-error** keyword:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react verify-error
RP/0/RP0/CPU0:router(config-ipsla-react-cond)#
```

## Related Commands

Command	Description
<a href="#">action (IP SLA), on page 7</a>	Specifies what action or combination of actions the operation performs when you configure the <b>react</b> command or when threshold events occur.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">threshold, on page 162</a>	Sets the lower-limit and upper-limit values.
<a href="#">threshold type average, on page 164</a>	Takes action on average values to violate a threshold.
<a href="#">threshold type consecutive, on page 166</a>	Takes action after a number of consecutive violations.
<a href="#">threshold type immediate, on page 168</a>	Takes action immediately upon a threshold violation.
<a href="#">threshold type xofy, on page 170</a>	Takes action upon X violations in Y probe operations.

# react lpd

To specify that a reaction should occur if there is an LSP Path Discovery (LPD) violation, use the **react lpd** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

**react lpd {lpd-group| tree-trace} action logging**

**no react lpd {lpd-group| tree-trace}**

## Syntax Description

<b>lpd-group</b>	Specifies that a reaction should occur if there is a status violation for the monitored LPD group.
<b>tree-trace</b>	Specifies that a reaction should occur if there is a path discovery violation for the monitored LPD group.
<b>action</b>	Configures the action to be taken on threshold violation.
<b>logging</b>	Specifies the generation of a syslog alarm on threshold violation.

## Command Default

None

## Command Modes

IP SLA MPLS LSP monitor configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

A status violation for a monitored LPD group happens when the Label Switched Path (LSP) group status changes (with the exception of the status change from the initial state).

A path discovery violation for the monitored LPD group happens when path discovery to the target PE fails, or successful path discovery clears such a failure condition.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to specify that a reaction should occur if there is a status violation for the monitored LPD group:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplsml)# reaction monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplsml-react)# react lpd lpd-group action logging
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

# reaction monitor

To configure MPLS label switched path (LSP) monitoring reactions, use the **reaction monitor** command in IP SLA MPLS LSP monitor configuration mode. To remove the reaction so that no reaction occurs, use the **no** form of this command.

**reaction monitor** *monitor-id*

**no reaction monitor** [*monitor-id*]

## Syntax Description

<i>monitor-id</i>	Number of the IP SLA MPLS LSP monitor instance for the reactions to be configured. Range is 1 to 2048.
-------------------	--

## Command Default

No reaction is configured.

## Command Modes

IP SLA MPLS LSP monitor configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **reaction monitor** command enters IP SLA LSP monitor reaction configuration mode so that you can set the desired threshold and action in the event of a connection loss or timeout.

To remove all reactions, use the **no reaction monitor** command with no *monitor-id* argument.

The **reaction monitor** command configures reactions for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **reaction operation** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
```

```
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplsml)# reaction monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplsml-react)#
```

**Related Commands**

Command	Description
<a href="#">action (IP SLA), on page 7</a>	Specifies what action or combination of actions the operation performs when you configure the <b>react</b> command or when threshold events occur
<a href="#">monitor, on page 59</a>	Configures an IP SLA MPLS LSP monitor instance.
<a href="#">react, on page 82</a>	Specifies an element to be monitored for a reaction.
<a href="#">schedule monitor, on page 107</a>	Schedules an IP SLA MPLS LSP monitor instance.
<a href="#">threshold type consecutive, on page 166</a>	Specifies to take action after a number of consecutive violations.
<a href="#">threshold type immediate, on page 168</a>	Specifies to take action immediately upon a threshold violation.



# reaction operation

To configure certain actions that are based on events under the control of the IP SLA agent, use the **reaction operation** command in IP SLA configuration mode. To remove the reaction so that no reaction occurs, use the **no** form of this command.

**reaction operation** *operation-id*

**no reaction operation** *operation-id*

## Syntax Description

<i>operation-id</i>	Number of the IP SLA operation for the reactions to be configured. Range is 1 to 2048.
---------------------	--

## Command Default

No reaction is configured.

## Command Modes

IP SLA configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **reaction operation** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 1
RP/0/RP0/CPU0:router(config-ipsla-react)#
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

## reaction trigger

To define a second IP SLA operation to make the transition from a pending state to an active state when one of the trigger-type options is defined with the **reaction operation** command, use the **reaction trigger** command in IP SLA configuration mode. To remove the reaction trigger when the *triggering-operation* argument does not trigger any other operation, use the **no** form of this command.

**reaction trigger** *triggering-operation* *triggered-operation*

**no reaction trigger** *triggering-operation* *triggered-operation*

### Syntax Description

<i>triggering-operation</i>	Operation that contains a configured action-type trigger and can generate reaction events. Range is 1 to 2048.
<i>triggered-operation</i>	Operation that is started when the <i>triggering-operation</i> argument generates a trigger reaction event. Range is 1 to 2048.

### Command Default

No triggered operation is configured.

### Command Modes

IP SLA configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Both the *triggering-operation* and *triggered-operation* arguments must be configured. The triggered operation must be in the pending state.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to use the **ipsla reaction trigger** command:

```
RP/0/RP0/CPU0:router# configure
```

```
RP/0/RP0/CPU0:router(config)# ipsla  
RP/0/RP0/CPU0:router(config-ipsla)# reaction trigger 1 2
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

# responder

To enable the IP SLA responder for UDP echo or jitter operations, use the **responder** command in IP SLA configuration mode. To disable the responder, use the **no** form of this command.

**responder**

**no responder**

**Syntax Description** This command has no keywords or arguments.

**Command Default** The IP SLA **responder** command is disabled.

**Command Modes** IP SLA configuration

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

An IP address and port are configured and identified as a permanent port (for example, a port to which the responder is permanently listening). If no IP address and port are configured, the responder handles only dynamic ports (for example, ports that are listened to when requested by a remote operation).

Task ID	Task ID	Operations
	monitor	read, write

**Examples** The following example shows how to enable the IP SLA responder:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# responder
RP/0/RP0/CPU0:router(config-ipsla-resp)#
```

**Related Commands**

Command	Description
<a href="#">type udp ipv4 address, on page 192</a>	Configures a permanent port in the IP SLA Responder for UDP echo or jitter operations.

# recurring

To indicate that the operation starts automatically at the specified time and for the specified duration every day, use the **recurring** command in IP SLA schedule configuration mode. To not start the operation everyday, use the **no** form of this command.

**recurring**

**no recurring**

**Syntax Description** This command has no keywords or arguments.

**Command Default** Recurring is disabled.

**Command Modes** IP SLA schedule configuration

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Operations
monitor	read, write

**Examples** The following example shows how to use the **recurring** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# schedule operation 1
RP/0/RP0/CPU0:router(config-ipsla-sched)# recurring
```

Command	Description
<a href="#">operation</a> , on page 64	Configures an IP SLA operation.
<a href="#">schedule operation</a> , on page 109	Schedules an IP SLA operation.

 recurring



# reply dscp

To specify the differentiated services codepoint (DSCP) value used in echo reply packets, use the **reply dscp** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

**reply dscp** *dscp-bits*

**no reply dscp**

## Syntax Description

<i>dscp-bits</i>	Differentiated services codepoint (DSCP) value for an echo reply packet. Valid values are from 0 to 63.  Reserved keywords such as EF (expedited forwarding) and AF11 (assured forwarding class AF11) can be specified instead of numeric values.
------------------	---

## Command Default

No default behavior or values

## Command Modes

IP SLA MPLS LSP ping configuration  
IP SLA MPLS LSP trace configuration  
IP SLA MPLS LSP monitor ping configuration  
IP SLA MPLS LSP monitor trace configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **reply dscp** command to set the DSCP value used in the headers of IPv4 UDP packets sent as echo replies in an MPLS LSP ping or MPLS LSP trace operation.

The DSCP value consists of the six most significant bits of the 1-byte IP type of service (ToS) field. These bits determine the quality-of-service (QoS) treatment (per-hop behavior) that a transit LSR node gives to an echo reply packet. For information about how packets are classified and processed depending on the value you assign to the 6-bit DSCP field, refer to “The Differentiated Services Model (DiffServ)” at the following URL:

[http://www.cisco.com/en/US/products/ps6610/products\\_data\\_sheet09186a00800a3e30.html](http://www.cisco.com/en/US/products/ps6610/products_data_sheet09186a00800a3e30.html)

If the **reply dscp** command is used in IP SLA operation mode, it acts on the headers of echo replies for the specific operation being configured. If the **reply dscp** command is used in IP SLA MPLS LSP monitor mode, it acts on the headers of echo replies for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **reply dscp** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-ping)# reply dscp 5
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace, on page 186</a>	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

# reply mode

To specify how to reply to echo requests, use the **reply mode** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

**reply mode** {**control-channel**| **router-alert**}

**no reply mode**

## Syntax Description

<b>control-channel</b>	Sets echo requests to reply by way of a control channel.
<b>Note</b>	This option is available only in IP SLA MPLS LSP ping configuration mode.
<b>router-alert</b>	Sets echo requests to reply as an IPv4 UDP packet with IP router alert.

## Command Default

The default reply mode for an echo request packet is an IPv4 UDP packet without IP router alert set.

## Command Modes

IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor ping configuration  
 IP SLA MPLS LSP monitor trace configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **reply mode** command with the **control-channel** keyword to send echo reply packets by way of a control channel in an MPLS LSP ping operation. If the target is not set to pseudowire, the configuration of the **control-channel** keyword is rejected. Refer to the **target pseudowire** command for information about setting the target.

Use the **reply mode** command with the **router-alert** keyword to set the reply mode of echo reply packets in an MPLS LSP ping or MPLS LSP trace operation. After you enter this command, echo reply packets are set to reply as an IPv4 UDP packet with the IP router alert option in the UDP packet header.

If the **reply mode** command is used in IP SLA operation mode, it sets the reply mode of echo reply packets for the specific operation being configured. If the **reply mode** command is used in IP SLA MPLS LSP monitor

mode, it sets the reply mode of echo reply packets for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

The router-alert reply mode forces an echo reply packet to be specially handled by the transit LSR router at each intermediate hop as it moves back to the destination. Because this reply mode is more expensive, it is recommended only if the headend router does not receive echo replies using the default reply mode.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **reply mode** command with the **router-alert** keyword:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp trace
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-trace)# reply mode router-alert
```

The following example shows how to use the **reply mode** command with the **control-channel** keyword:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-ping)# target pseudowire 192.168.1.4 4211
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-ping)# reply mode control-channel
```

## Related Commands

Command	Description
<a href="#">operation</a> , on page 64	Configures an IP SLA operation.
<a href="#">schedule operation</a> , on page 109	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping</a> , on page 184	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace</a> , on page 186	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

# samples

To set the number of hop entries that are kept in the history table for an IP SLA ICMP path-echo operation, use the **samples** command in IP SLA operation ICMP path-echo history configuration mode. To use the default value, use the **no** form of this command.

**samples** *sample-count*

**no samples**

## Syntax Description

<i>sample-count</i>	Number of history samples that are kept in the history table for an IP SLA ICMP path-echo operation. Range is 1 to 30.
---------------------	--

## Command Default

The default value is 16.

## Command Modes

IP SLA operation ICMP path-echo history configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **samples** command is supported only when you configure an IP SLA ICMP path-echo operation.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **samples** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type icmp path-echo
RP/0/RP0/CPU0:router(config-ipsla-icmp-path-echo)# history
RP/0/RP0/CPU0:router(config-ipsla-op-hist)# samples 30
```

**Related Commands**

Command	Description
<a href="#">buckets (history), on page 11</a>	Sets the number of history buckets that are kept during the lifetime of the IP SLA operation.
<a href="#">filter, on page 31</a>	Defines the type of information that are kept in the history table for the IP SLA operation.
<a href="#">history, on page 37</a>	Configures the history parameters for the IP SLA operation.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

# scan delete-factor

To specify the frequency with which the MPLS LSP monitor (MPLSLM) instance searches for provider edge (PE) routers to delete, use the **scan delete-factor** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

**scan delete-factor** *factor-value*

**no scan delete-factor**

## Syntax Description

<i>factor-value</i>	Specifies a factor that is multiplied by the scan interval to determine the frequency at which the MPLS LSP monitor instance deletes the provider edge (PE) routers that are no longer valid. Range is 0 to 2147483647.
---------------------	---

## Command Default

*factor-value*: 1

## Command Modes

IP SLA MPLS LSP monitor ping configuration  
IP SLA MPLS LSP monitor trace configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **scan delete-factor** command specifies a factor value for automatic PE deletion. The specified *factor-value* is multiplied by the scan interval to acquire the frequency at which the MPLS LSP monitoring instance deletes not-found PEs. A scan delete factor of zero (0) means that provider edge (PE) routers that are no longer valid are never removed.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **scan delete-factor** command:

```
RP/0/RP0/CPU0:router# configure
```

```

RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplslm)# monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplslm-def)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mplslm-lsp-ping)# scan delete-factor 214

```

## Related Commands

Command	Description
<a href="#">monitor, on page 59</a>	Configures an IP SLA MPLS LSP monitor instance.
<a href="#">scan interval, on page 105</a>	Specifies the frequency at which the MPLSLM instance checks the scan queue for updates
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace, on page 186</a>	Traces the hop-by-hop route of an LSP path in an MPLS VPN.



# scan interval

To specify the frequency at which the MPLS LSP monitor (MPLSLM) instance checks the scan queue for updates, use the **scan interval** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

**scan interval** *scan-interval*

**no scan interval**

## Syntax Description

<i>scan-interval</i>	Time interval between provider edge (PE) router updates. Range is 1 to 70560.
----------------------	---

## Command Default

*interval*: 240 minutes

## Command Modes

IP SLA MPLS LSP monitor ping configuration  
IP SLA MPLS LSP monitor trace configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **scan interval** command to specify a frequency value in minutes at which the MPLS LSP monitoring instance checks the scan queue for PE updates. Updates from PE discovery are not processed immediately, but rather stored in a scan queue for batched processing at periodic intervals, specified by this value.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **scan** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
```

```
RP/0/RP0/CPU0:router(config-ipsla-mplslm)# monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplslm-def)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mplslm-lsp-ping)# scan interval 120
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">scan delete-factor, on page 103</a>	Specifies the frequency with which the MPLSLM instance searches for PE routers to delete.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace, on page 186</a>	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

# schedule monitor

To schedule MPLS LSP monitoring instances, use the **schedule monitor** command in IP SLA LSP monitor configuration mode. To unschedule the monitoring instances, use the **no** form of this command.

**schedule monitor** *monitor-id*

**no schedule monitor** [*monitor-id*]

## Syntax Description

<i>monitor-id</i>	Number of the monitoring instance to schedule. Range is 1 to 2048.
-------------------	--

## Command Default

No schedule is configured.

## Command Modes

IP SLA MPLS LSP monitor configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **schedule monitor** command enters IP SLA MPLS LSP monitor schedule configuration mode so that you can set the desired schedule parameters for the MPLS LSP monitor instance. This schedules the running of all operations created for the specified monitor instance.

To remove all configured schedulers, use the **no schedule monitor** command with no *monitor-id* argument.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to access and use the **schedule monitor** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplsml)# schedule monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplsml-sched)#
```

**Related Commands**

Command	Description
<a href="#">frequency (IP SLA), on page 35</a>	Configures the frequency interval during which LSP groups and operations are scheduled to start.
<a href="#">schedule period, on page 111</a>	Configures the amount of time during which all LSP operations are scheduled to start or run.
<a href="#">start-time , on page 148</a>	Determines the time when an operation starts.

# schedule operation

To enter schedule configuration mode, use the **schedule operation** command in IP SLA configuration mode. To remove the scheduler, use the **no** form of this command.

**schedule operation** *operation-number*

**no schedule operation** *operation-number*

## Syntax Description

operation-number	Configuration number or schedule number that is used to schedule an IP SLA operation. Range is 1 to 2048.
------------------	---

## Command Default

None

## Command Modes

IP SLA configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **schedule operation** command enters the IP SLA schedule configuration mode. You can configure more schedule configuration parameters to schedule the operation. When an operation is scheduled, it continues collecting information until the configured life expires.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **ipsla schedule operation** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# schedule operation 1
RP/0/RP0/CPU0:router(config-ipsla-sched)#
```

**Related Commands**

Command	Description
<a href="#">ageout</a> , on page 9	Specifies the number of seconds to keep the operation in memory when it is not actively collecting information.
<a href="#">operation</a> , on page 64	Configures an IP SLA operation.
<a href="#">life</a> , on page 45	Specifies the length of time to execute.
<a href="#">recurring</a> , on page 95	Indicates that the operation starts automatically at the specified time and for the specified duration every day.
<a href="#">start-time</a> , on page 148	Determines the time when the operation starts.

# schedule period

To configure the amount of time during which all LSP operations are scheduled to start or run, use the **schedule period** command in IP SLA MPLS LSP monitor schedule configuration mode. To remove the scheduler, use the **no** form of this command.

**schedule period** *seconds*

**no schedule period**

## Syntax Description

<i>seconds</i>	Amount of time in seconds for which label switched path (LSP) operations are scheduled to run. Range is 1 to 604800.
----------------	--

## Command Default

None

## Command Modes

IP SLA MPLS LSP monitor schedule configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **schedule period** command to specify the amount of time in seconds during which all LSP operations are scheduled to start running. All LSP operations are scheduled equally spaced throughout the schedule period.

For example, if the schedule period is 600 seconds and there are 60 operations to be scheduled, they are scheduled at 10-second intervals.

Use the **frequency** command to specify how often the entire set of operations is performed. The frequency value must be greater than or equal to the schedule period.

You must configure the schedule period before you can start MPLS LSP monitoring. Start MPLS LSP monitoring using the **start-time** command.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **schedule period** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplslm)# schedule monitor 20
RP/0/RP0/CPU0:router(config-ipsla-mplslm-sched)# schedule period 6000
```

## Related Commands

Command	Description
<a href="#">frequency (IP SLA), on page 35</a>	Configures the frequency interval during which LSP groups and operations are scheduled to start.
<a href="#">start-time , on page 148</a>	Determines the time when the operation starts.



# show ipsla application

To display the information for the IP SLA application, use the **show ipsla application** command in XR EXEC mode.

**show ipsla application**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR EXEC

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	monitor	read

**Examples** The following sample output is from the **show ipsla application** command:

```
RP/0/RP0/CPU0:router# show ipsla application

Estimated system max number of entries: 2048
Number of Entries configured: 1
Number of active Entries      : 0
Number of pending Entries     : 0
Number of inactive Entries    : 1

Supported Operation Types: 7

  Type of Operation: ICMP ECHO
  Type of Operation: ICMP PATH JITTER
  Type of Operation: ICMP PATH ECHO
  Type of Operation: UDP JITTER
  Type of Operation: UDP ECHO
  Type of Operation: MPLS LSP PING
  Type of Operation: MPLS LSP TRACE
```

**show ipsla application**

Number of configurable probes : 2047  
 SA Agent low memory water mark: 20480 (KB)

This table describes the significant fields shown in the display.

**Table 1: show ipsla application Field Descriptions**

Field	Description
Estimated system max number of entries	Maximum number of operations that are configured in the system. The low-memory configured parameter and the available memory in the system are given.
Number of Entries configured	Total number of entries that are configured, such as active state, pending state, and inactive state.
Number of active Entries	Number of entries that are in the active state. The active entries are scheduled and have already started a life period.
Number of pending Entries	Number of entries that are in pending state. The pending entries have a start-time scheduled in the future. These entries either have not started the first life, or the entries are configured as recurring and completed one of its life.
Number of inactive Entries	Number of entries that are in the inactive state. The inactive entries do not have a start-time scheduled. Either the start-time has never been scheduled or life has expired. In addition, the entries are not configured as recurring.
Supported Operation Types	Types of operations that are supported by the system.
Number of configurable probes	Number of remaining entries that can be configured. The number is just an estimated value and it may vary over time according to the available resources.
SA Agent low memory water mark	Available memory for the minimum system below which the IP SLA feature does not configure any more operations.

**Related Commands**

Command	Description
<a href="#">low-memory, on page 49</a>	Configures a low-water memory mark.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.

# show ipsla history

To display the history collected for all IP SLA operations or for a specified operation, use the **show ipsla history** command in XR EXEC mode.

**show ipsla history** [ *operation-number* ]

<b>Syntax Description</b>	<i>operation-number</i> (Optional) Number of the IP SLA operation.
---------------------------	--

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	XR EXEC
----------------------	---------

<b>Command History</b>	Release	Modification
	Release 5.0.0	This command was introduced.

**Usage Guidelines**

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

By default, history statistics are not collected. To have any data displayed by using the **show ipsla history** command, you must configure the history collection.

This table lists the response return values that are used in the **show ipsla history** command.

**Table 2: Response Return Values for the show ipsla history Command**

Code	Description
1	Okay
2	Disconnected
3	Over Threshold
4	Timeout
5	Busy
6	Not Connected

Code	Description
7	Dropped
8	Sequence Error
9	Verify Error
10	Application Specific

If the default tabular format is used, the response return description is displayed as code in the Sense column. The Sense field is always used as a return code.

**Task ID**

Task ID	Operations
monitor	read

**Examples**

The following sample output is from the **show ipsla history** command:

```
RP/0/RP0/CPU0:router# show ipsla history 1
```

```
Point by point History
Multiple Lines per Entry
Line 1:
Entry      = Entry number
LifeI      = Life index
BucketI    = Bucket index
SampleI    = Sample index
SampleT    = Sample start time
CompT      = RTT (milliseconds)
Sense      = Response return code
Line 2 has the Target Address
Entry LifeI      BucketI    SampleI    SampleT      CompT      Sense      TargetAddr
1      0          0          0          1134419252539  9          1          192.0.2.6
1      0          1          0          1134419312509  6          1          192.0.2.6
1      0          2          0          1134419372510  6          1          192.0.2.6
1      0          3          0          1134419432510  5          1          192.0.2.6
```

This table describes the significant fields shown in the display.

**Table 3: show ipsla history Field Descriptions**

Field	Description
Entry number	Entry number.
LifeI	Life index.
BucketI	Bucket index.
SampleI	Sample index.

Field	Description
SampleT	Sample start time.
CompT	Completion time in milliseconds.
Sense	Response return code.
TargetAddr	IP address of intermediate hop device or destination device.

**Related Commands**

Command	Description
<a href="#">show ipsla statistics aggregated, on page 132</a>	Displays the statistical errors for all the IP SLA operations or for a specified operation.

# show ipsla mpls discovery vpn

To display routing information relating to the BGP next-hop discovery database in the MPLS VPN network, use the **show ipsla mpls discovery vpn** command in XR EXEC mode.

**show ipsla mpls discovery vpn**

**Syntax Description** This command has no keywords or arguments.

**Command Default** No default behavior or values

**Command Modes** XR EXEC

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	monitor	read

**Examples** The following sample output is from the **show ipsla mpls discovery vpn** command:

```
RP/0/RP0/CPU0:router# show ipsla mpls discovery vpn
```

```
Next refresh after: 46 seconds
```

BGP next hop	Prefix	VRF	PfxCount
192.255.0.4	192.255.0.4/32	red	10
		blue	5
		green	7
192.255.0.5	192.255.0.5/32	red	5
		green	3
192.254.1.6	192.254.1.0/24	yellow	4

This table describes the significant fields shown in the display.

**Table 4: show ipsla mpls discovery vpn Field Descriptions**

Field	Description
BGP next hop	Identifier for the BGP next-hop neighbor.
Prefix	IPv4 Forward Equivalence Class (FEC) of the BGP next-hop neighbor to be used by the MPLS LSP ping or trace operation.
VRF	Names of the virtual routing and forwarding instances (VRFs) that contain routing entries for the specified BGP next-hop neighbor.
PfxCount	Count of the routing entries that participate in the VRF for the specified BGP next-hop neighbor.

# show ipsla mpls lsp-monitor lpd

To display LSP Path Discovery (LPD) operational status, use the **show ipsla mpls lsp-monitor lpd** command in XR EXEC mode.

**show ipsla mpls lsp-monitor lpd** {**statistics** [*group-ID*] **aggregated** *group-ID*|| **summary** *group*}

<b>statistics</b> <i>group-ID</i>	Displays statistics for the specified LPD group, including the latest LPD start time, return code, completion time, and paths.
<b>aggregated</b> <i>group-ID</i>	Displays the aggregated statistics of the LPD group.
<b>summary</b> <i>group-ID</i>	Displays the current LPD operational status, which includes LPD start time, return code, completion time, and all ECMP path information.

## Command Default

None

## Command Modes

XR EXEC

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For the aggregated group ID, a maximum of two buckets are allowed.

## Task ID

Task ID	Operations
monitor	read

## Examples

The following sample output is from the **show ipsla mpls lsp-monitor lpd statistics** command:

```
RP/0/RP0/CPU0:router# show ipsla mpls lsp-monitor lpd statistics 10001
```

```
Group ID: 100001
```



```

Latest path discovery start time      : 00:41:01.129 UTC Sat Dec 10 2005
Latest path discovery return code    : OK
Latest path discovery completion time (ms): 3450
Completion Time Values:
  NumOfCompT: 1      CompTMin: 3450    CompTMax : 3450    CompTAvg: 3450
Number of Paths Values:
  NumOfPaths: 10    MinNumOfPaths: 10  MaxNumOfPaths: 10

```

This table describes the significant fields shown in the display.

**Table 5: show ipsla mpls lsp-monitor lpd statistics Field Descriptions**

Field	Description
Group ID	LPD group ID number.
Latest path discovery start time	LPD start time.
Latest path discovery return code	LPD return code.
Latest path discovery completion time	LPD completion time.
Completion Time Values	Completion time values, consisting of Number of Completion Time samples and Minimum Completion Time.
Number of Paths Values	Number of paths values, consisting of Minimum number of paths and Maximum number of paths.

# show ipsla mpls lsp-monitor scan-queue

To display information about BGP next-hop addresses that are waiting to be added to or deleted from the MPLS label switched path (LSP) monitor instance, use the **show ipsla mpls lsp-monitor scan-queue** command in XR EXEC mode.

**show ipsla mpls lsp-monitor scan-queue** [ *monitor-id* ]

Syntax Description	<i>monitor-id</i>	(Optional) Number of the IP SLA MPLS LSP monitor instance.
--------------------	-------------------	--

**Command Default** None

**Command Modes** XR EXEC

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the *monitor-id* argument is not specified, the scan-queue is displayed for all MPLS LSP monitor instances.

Task ID	Task ID	Operations
	monitor	read

**Examples** The following sample output is from the **show ipsla mpls lsp-monitor scan-queue** command:

```
RP/0/RP0/CPU0:router# show ipsla mpls lsp-monitor scan-queue 1
```

```
IPSLA MPLS LSP Monitor : 1
```

```
Next scan Time after      : 23 seconds
Next Delete scan Time after: 83 seconds
```

BGP Next hop	Prefix	Add/Delete?
192.255.0.2	192.255.0.2/32	Add
192.255.0.3	192.255.0.5/32	Delete

This table describes the significant fields shown in the display.

**Table 6: show ipsla responder statistics port Field Descriptions**

Field	Description
IPSLA MPLS LSP Monitor	Monitor identifier.
Next scan Time after	Amount of time before the MPLS LSP monitor instance checks the scan queue for adding BGP next-hop neighbors. At the start of each scan time, IP SLA operations are created for all newly discovered neighbors.
Next delete Time after	Amount of time left before the MPLS LSP monitor instance checks the scan queue for deleting BGP next-hop neighbors. At the start of each delete scan time, IP SLAs operations are deleted for neighbors that are no longer valid.
BGP next hop	Identifier for the BGP next-hop neighbor.
Prefix	IPv4 Forward Equivalence Class (FEC) of the BGP next-hop neighbor to be used.
Add/Delete	Indicates that the specified BGP next-hop neighbor will be added or removed.

## show ipsla mpls lsp-monitor summary

To display the list of operations that have been created automatically by the specified MPLS LSP monitor (MPLSLM) instance, use the **show ipsla mpls lsp-monitor summary** command in XR EXEC mode.

**show ipsla mpls lsp-monitor summary** [*monitor-id* [**group** [*group id*]]]

### Syntax Description

<i>monitor-id</i>	(Optional) Displays a list of LSP group, ping, and trace operations created automatically by the specified MPLSLM instance.
<b>group</b> <i>group-id</i>	(Optional) Displays the ECMP LSPs found through ECMP path discovery within the specified LSP group.

### Command Default

None

### Command Modes

XR EXEC

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show ipsla mpls lsp-monitor summary** command shows the list of LSP operations that were created automatically by the specified MPLS LSP monitor instance. It also shows the current status and the latest operation time of each operation.

If the *monitor-id* argument is not specified, the list of operations is displayed for all MPLS LSP monitor instances.

The **show ipsla mpls lsp-monitor summary** command with the **group** option shows the list of ECMP paths that are found automatically by the specified LSP path discovery (LPD). In addition, this command with option shows the current status; the number of successes, failures; the most recent round trip time (RTT); and the latest operation time of each path.

If the *group-id* argument is not specified, the list of paths is displayed for all operations created by the MPLS LSP monitor instance.

### Task ID

Task ID	Operations
monitor	read

## Examples

The following sample output is from the **show ipsla mpls lsp-monitor summary** command. This output shows a pending status when an MPLS LSP ping operation is waiting to receive the timeout response from the LSP Verification (LSPV) process.

```
RP/0/RP0/CPU0:router# show ipsla mpls lsp-monitor summary 1
```

MonID	Op/GrpID	TargetAddress	Status	Latest Operation Time
1	100001	192.255.0.4/32	up	19:33:37.915 EST Mon Feb 28 2005
1	100002	192.255.0.5/32	down	19:33:47.915 EST Mon Feb 28 2005
1	100003	192.255.0.6/32	pending	19:33:35.915 EST Mon Feb 28 2005

The following sample output shows that a down status is displayed after a timeout response is received.

```
RP/0/RP0/CPU0:router# show ipsla mpls lsp-monitor summary 1
```

MonID	Op/GrpID	TargetAddress	Status	Latest Operation Time
1	100001	193.100.0.1/32	down	12:47:16.417 PST Tue Oct 23 2007
1	100002	193.100.0.2/32	partial	12:47:22.418 PST Tue Oct 23 2007
1	100003	193.100.0.3/32	partial	12:47:22.429 PST Tue Oct 23 2007
1	100004	193.100.0.4/32	down	12:47:16.429 PST Tue Oct 23 2007
1	100005	193.100.0.5/32	down	12:47:21.428 PST Tue Oct 23 2007

This table describes the significant fields shown in the display.

**Table 7: show ipsla mpls lsp-monitor summary Field Descriptions**

Field	Description
MonID	Monitor identifier.
Op/GrpID	Operation identifiers that have been created by this MPLS LSP monitor instance.
TargetAddress	IPv4 Forward Equivalence Class (FEC) to be used by this operation.
Status	Status of the paths. Values can be as follows: <ul style="list-style-type: none"> <li>• up—Indicates that the latest operation cycle was successful.</li> <li>• down—Indicates that the latest operation cycle was not successful.</li> <li>• pending—Indicates that the latest operation cycle is waiting for an LSP ping or trace response.</li> </ul>
Latest Operation Time	Time the latest operation cycle was issued.

The following sample output is from the **show ipsla mpls lsp-monitor summary group** command:

```
RP/0/RP0/CPU0:router# show ipsla mpls lsp-monitor summary 1 group 100001
```

```

GrpID  LSP-Selector      Status Failure Success RTT   Latest Operation Time
100001 127.0.0.13          up      0      78     32   20:11:37.895 EST Feb 28 2005
100001 127.0.0.15          retry   1      77     0    20:11:37.995 EST Feb 28 2005
100001 127.0.0.16          up      0      78     32   20:11:38.067 EST Feb 28 2005
100001 127.0.0.26          up      0      78     32   20:11:38.175 EST Feb 28 2005

```

This table describes the significant fields shown in the display.

**Table 8: show ipsla mpls lsp-monitor summary group Field Descriptions**

Field	Description
GrpID	Group identifier that has been created by this MPLS LSP monitor instance.
LSP-Selector	LSP selector address.
Status	Status of the paths. Values can be as follows: <ul style="list-style-type: none"> <li>• up—Indicates that all the paths were successful.</li> <li>• down—Indicates that all the paths were not successful.</li> <li>• partial—Indicates that only some paths were successful.</li> <li>• unknown—Indicates that some (or all) of the paths did not complete a single LSP echo request so the group status could not be identified.</li> </ul>
Failure	Number of failures.
Success	Number of successes.
RTT	Round Trip Time (RTT) in milliseconds of the latest LSP echo request for the path.
Latest Operation Time	Time the latest operation cycle was issued for the path.

## show ipsla responder statistics ports

To display the number of probes that are received or handled by the currently active ports on the responder, use the **show ipsla responder statistics ports** command in XR EXEC mode.

**show ipsla responder statistics ports**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR EXEC

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The output of the **show ipsla responder statistics port** command is available only for specific intervals of time in which only nonpermanent ports are being used at the responder. The reason is that the responder closes the nonpermanent ports after each operation cycle. However, if both permanent and nonpermanent ports are used, the output always contains rows for the permanent ports. The rows for the nonpermanent ports are displayed only if those nonpermanent ports are enabled at the instant the command is issued.

Task ID	Task ID	Operations
	monitor	read

**Examples** The following sample output is from the **show ipsla responder statistics port** command:

```
RP/0/RP0/CPU0:router# show ipsla responder statistics port
```

```
Port 12709          Local Address ...  NumberOfProbes  2
Port 12213          Local Address ...  NumberOfProbes  1
Port 55690          Local Address ...  NumberOfProbes  376
```

This table describes the significant fields shown in the display.

**Table 9: show ipsla responder statistics port Field Descriptions**

Field	Description
Port	Port number at which the responder is waiting for probe packets.
Local Address	IP address at which the responder is waiting for probe packets.
NumberOfProbes	Number of packets at which the responder has received for both control packets and probe packets.



# show ipsla statistics

To display the operational data and the latest statistics for the IP SLA operation in tabular format, use the **show ipsla statistics** command in XR EXEC mode.

**show ipsla statistics** [ *operation-number* ]

<b>Syntax Description</b>	<i>operation-number</i>	(Optional) Operation for which the latest statistics are to be displayed. Range is 1 to 2048.
---------------------------	-------------------------	---

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	XR EXEC
----------------------	---------

<b>Command History</b>	Release	Modification
	Release 5.0.0	This command was introduced.

<b>Usage Guidelines</b>	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.
-------------------------	---

<b>Task ID</b>	Task ID	Operations
	monitor	read

<b>Examples</b>	The output of the <b>show ipsla statistics</b> command varies depending on the operation type. The following sample output is from the <b>show ipsla statistics</b> command for an ICMP echo operation:
-----------------	---

```
RP/0/RP0/CPU0:router# show ipsla statistics 100025

Entry number: 100025
  Modification time: 00:36:58.602 UTC Sat Dec 10 2007
    Start time      : 00:36:58.605 UTC Sat Dec 10 2007
  Number of operations attempted: 5
  Number of operations skipped   : 0
  Current seconds left in Life   : Forever
  Operational state of entry     : Active
  Connection loss occurred      : FALSE
  Timeout occurred              : FALSE
  Latest RTT (milliseconds)     : 3
```

```

Latest operation start time : 00:41:01.129 UTC Sat Dec 10 2007
Latest operation return code : OK

```

## RTT Values:

```

RTTAvg : 71          RTTMin: 71          RTTMax : 71
NumOfRTT: 1         RTTSum: 71          RTTSum2: 729

```

## Path Information:

Path Idx	Path Sense	LSP Selector	Outgoing Interface	Nexthop Address	Downstream Label Stack
1	1	127.0.0.13	PO0/2/5/0	192.12.1.2	38
2	1	127.0.0.6	PO0/2/5/0	192.12.1.2	38
3	1	127.0.0.1	PO0/2/5/0	192.12.1.2	38
4	1	127.0.0.2	PO0/2/5/0	192.12.1.2	38
5	1	127.0.0.13	PO0/2/5/1	192.12.2.2	38
6	1	127.0.0.6	PO0/2/5/1	192.12.2.2	38
7	1	127.0.0.1	PO0/2/5/1	192.12.2.2	38
8	1	127.0.0.2	PO0/2/5/1	192.12.2.2	38
9	1	127.0.0.4	Gi0/2/0/0	192.15.1.2	38
10	1	127.0.0.5	Gi0/2/0/0	192.15.1.2	38

This table describes the significant fields shown in the display.

**Table 10: show ipsla statistics Field Descriptions**

Field	Description
Entry number	Entry number.
Modification time	Latest time the operation was modified.
Start time	Time the operation was started.
Number of operations attempted	Number of operation cycles that were issued.
Number of operations skipped	Number of operation cycles that were not issued because one of the cycles extended over the configured time interval.
Current seconds left in Life	Time remaining until the operation stops execution.
Operational state of entry	State of the operation, such as active state, pending state, or inactive state.
Connection loss occurred	Whether or not a connection-loss error happened.
Timeout occurred	Whether or not a timeout error happened.
Latest RTT (milliseconds)	Value of the latest RTT sample.
Latest operation start time	Time the latest operation cycle was issued.
Latest operation return code	Return code of the latest operation cycle
RTTAvg	Average RTT value that is observed in the last cycle.
RTTMin	Minimum RTT value that is observed in the last cycle.

Field	Description
RTTMax	Maximum RTT value that is observed in the last cycle.
NumOfRTT	Number of successful round trips.
RTTSum	Sum of all successful round-trip values in milliseconds.
RTTSum2	Sum of squares of the round-trip values in milliseconds.
Path Idx	Path index number.
Path Sense	Response return code for the path. (See <a href="#">Table 2: Response Return Values for the show ipsla history Command, on page 115</a> , in <b>show ipsla history</b> command.)
LSP Selector	LSP selector address of the path.
Outgoing Interface	Outgoing interface of the path.
Nexthop Address	Next hop address of the path.
Downstream Label Stack	MPLS label stacks of the path.

**Related Commands**

Command	Description
<a href="#">show ipsla statistics aggregated, on page 132</a>	Displays the statistical errors for all the IP SLA operations or for a specified operation.

# show ipsla statistics aggregated

To display the hourly statistics for all the IP SLA operations or specified operation, use the **show ipsla statistics aggregated** command in XR EXEC mode.

**show ipsla statistics aggregated** [**detail**] [ *operation-number* ]

## Syntax Description

<b>detail</b>	Displays detailed information.
<i>operation-number</i>	(Optional) Number of IP SLA operations. Range is 1 to 2048.

## Command Default

None

## Command Modes

XR EXEC

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show ipsla statistics aggregated** command displays information such as the number of failed operations and the reason for failure. Unless you configured a different amount of time for the **buckets** command (**statistics** command with **hourly** keyword), the **show ipsla statistics aggregated** command displays the information collected over the past two hours.

For one-way delay and jitter operations to be computed for UDP jitter operations, the clocks on local and target devices must be synchronized using NTP or GPS systems. If the clocks are not synchronized, one-way measurements are discarded. If the sum of the source to destination (SD) and the destination to source (DS) values is not within 10 percent of the round-trip time, the one-way measurement values are assumed to be faulty, and are discarded.

## Task ID

Task ID	Operations
monitor	read

## Examples

The output of the **show ipsla statistics aggregated** command varies depending on operation type. The following sample output shows the aggregated statistics for UDP echo operation from the **show ipsla statistics aggregated** command:

```
RP/0/RP0/CPU0:router# show ipsla statistics aggregated 1
```

```
Entry number: 1
Hour Index: 0
  Start Time Index: 21:02:32.510 UTC Mon Dec 12 2005
  Number of Failed Operations due to a Disconnect      : 0
  Number of Failed Operations due to a Timeout        : 0
  Number of Failed Operations due to a Busy           : 0
  Number of Failed Operations due to a No Connection  : 0
  Number of Failed Operations due to an Internal Error: 0
  Number of Failed Operations due to a Sequence Error : 0
  Number of Failed Operations due to a Verify Error   : 0
  RTT Values:
    RTTAvg : 6          RTTMin: 4          RTTMax : 38
    NumOfRTT: 36        RTTSum: 229        RTTSum2: 2563
```

The following sample output is from the **show ipsla statistics aggregated** command in which operation 10 is a UDP jitter operation:

```
RP/0/RP0/CPU0:router# show ipsla statistics aggregated 10
```

```
Entry number: 10
Hour Index: 0
  Start Time Index: 00:35:07.895 UTC Thu Mar 16 2006
  Number of Failed Operations due to a Disconnect      : 0
  Number of Failed Operations due to a Timeout        : 0
  Number of Failed Operations due to a Busy           : 0
  Number of Failed Operations due to a No Connection  : 0
  Number of Failed Operations due to an Internal Error: 0
  Number of Failed Operations due to a Sequence Error : 0
  Number of Failed Operations due to a Verify Error   : 0
  RTT Values:
    RTTAvg : 14          RTTMin: 2          RTTMax : 99
    NumOfRTT: 70         RTTSum: 1034        RTTSum2: 60610
  Packet Loss Values:
    PacketLossSD : 0          PacketLossDS: 0
    PacketOutOfSequence: 0    PacketMIA : 0
    PacketLateArrival : 0
    Errors : 0          Busies : 0
  Jitter Values :
    MinOfPositivesSD: 1          MaxOfPositivesSD: 19
    NumOfPositivesSD: 17         SumOfPositivesSD: 65
    Sum2PositivesSD : 629
    MinOfNegativesSD: 1          MaxOfNegativesSD: 16
    NumOfNegativesSD: 24         SumOfNegativesSD: 106
    Sum2NegativesSD : 914
    MinOfPositivesDS: 1          MaxOfPositivesDS: 7
    NumOfPositivesDS: 17         SumOfPositivesDS: 44
    Sum2PositivesDS : 174
    MinOfNegativesDS: 1          MaxOfNegativesDS: 8
    NumOfNegativesDS: 24         SumOfNegativesDS: 63
    Sum2NegativesDS : 267
    Interarrival jitterout: 0          Interarrival jitterin: 0
  One Way Values :
    NumOfOW: 0
    OWMinSD : 0          OWMaxSD: 0          OWSumSD: 0
    OWSum2SD: 0
    OWMinDS : 0          OWMaxDS: 0          OWSumDS: 0
```

This table describes the significant fields shown in the display.

**Table 11: show ipsla statistics aggregated Field Descriptions**

Field	Description
Busies	Number of times that the operation cannot be started because the previously scheduled run was not finished.
Entry Number	Entry number.
Hop in Path Index	Hop in path index.
Errors	Number of internal errors.
Jitter Values	Jitter statistics appear on the specified lines. Jitter is defined as interpacket delay variance.
NumOfJitterSamples	Number of jitter samples that are collected. The number of samples are used to calculate the jitter statistics.
Number of Failed Operations due to a Disconnect	Number of failed operations due to a disconnect.
Number of Failed Operations due to a Timeout	Number of failed operations due to a timeout.
Number of Failed Operations due to a Busy	Number of failed operations due to a busy error.
Number of Failed Operations due to a No Connection	Error that refers to the case in which the control connection cannot be established.
Number of Failed Operations due to an Internal Error	Number of failed operations due to an internal error.
Number of Failed Operations due to a Sequence Error	Number of failed operations due to a sequence error.
Number of Failed Operations due to a Verify Error	Number of failed operations due to a verify error.
MaxOfNegativesSD	Maximum negative jitter values from the source to the destination. The absolute value is given.
MaxOfPositivesSD	Maximum jitter values from the source to the destination in milliseconds.
MaxOfPositivesDS	Maximum jitter values from the destination to the source in milliseconds.
MaxOfNegativesDS	Maximum negative jitter values from destination-to-source. The absolute value is given.
MinOfPositivesDS	Minimum jitter values from the destination to the source in milliseconds.

Field	Description
MinOfNegativesSD	Minimum negative jitter values from the source to the destination. The absolute value is given.
MinOfPositivesSD	Minimum jitter values from the source to the destination in milliseconds.
MinOfNegativesDS	Minimum negative jitter values from the destination to the source. The absolute value is given.
NumOfOW	Number of successful one-way time measurements.
NumOfNegativesDS	Number of jitter values from the destination to the source that are negative; for example, network latency decreases for two consecutive test packets.
NumOfNegativesSD	Number of jitter values from the source to the destination that are negative; for example, network latency decreases for two consecutive test packets.
NumOfPositivesDS	Number of jitter values from the destination to the source that are positive; for example, network latency increases for two consecutive test packets.
NumOfPositivesSD	Number of jitter values from the source to the destination that are positive; for example, network latency increases for two consecutive test packets.
NumOfRTT	Number of successful round trips.
One Way Values	One-way measurement statistics appear on the specified lines. One Way (OW) values are the amount of time that it took the packet to travel from the source router to the target router or from the target router to the source router.
OWMaxDS	Maximum time from the destination to the source.
OWMaxSD	Maximum time from the source to the destination.
OWMinDS	Minimum time from the destination to the source.
OWMinSD	Minimum time from the source to the destination.
OWSumDS	Sum of one-way delay values from the destination to the source.
OWSumSD	Sum of one-way delay values from the source to the destination.

Field	Description
OWSum2DS	Sum of squares of one-way delay values from the destination to the source.
OWSum2SD	Sum of squares of one-way delay values from the source to the destination.
PacketLateArrival	Number of packets that arrived after the timeout.
PacketLossDS	Number of packets lost from the destination to the source (DS).
PacketLossSD	Number of packets lost from the source to the destination (SD).
PacketMIA	Number of packets lost in which the SD direction or DS direction cannot be determined.
PacketOutOfSequence	Number of packets that are returned out of order.
Path Index	Path index.
Port Number	Target port number.
RTTSum	Sum of all successful round-trip values in milliseconds.
RTTSum2	Sum of squares of the round-trip values in milliseconds.
RTT Values	Round-trip time statistics appear on the specified lines.
Start Time	Start time, in milliseconds.
Start Time Index	Statistics that are aggregated for over 1-hour intervals. The value indicates the start time for the 1-hour interval that is displayed.
SumOfPositivesDS	Sum of the positive jitter values from the destination to the source.
SumOfPositivesSD	Sum of the positive jitter values from the source to the destination.
SumOfNegativesDS	Sum of the negative jitter values from the destination to the source.
SumOfNegativesSD	Sum of the negative jitter values from the source to the destination.



Field	Description
Sum2PositivesDS	Sum of squares of the positive jitter values from the destination to the source.
Sum2PositivesSD	Sum of squares of the positive jitter values from the source to the destination.
Sum2NegativesDS	Sum of squares of the negative jitter values from the destination to the source.
Sum2NegativesSD	Sum of squares of the negative jitter values from the source to the destination.
Target Address	Target IP address.

The output of the **show ipsla statistics aggregated detail** command varies depending on operation type. The following sample output is from the **show ipsla statistics aggregated detail** command in tabular format, when the output is split over multiple lines:

```
RP/0/RP0/CPU0:router# show ipsla statistics aggregated detail 2
```

```
Captured Statistics
    Multiple Lines per Entry
Line1:
Entry      = Entry number
StartT     = Start time of entry (hundredths of seconds)
Pth        = Path index
Hop        = Hop in path index
Dst        = Time distribution index
Comps      = Operations completed
SumCmp     = Sum of RTT (milliseconds)

Line2:
SumCmp2H   = Sum of RTT squared high 32 bits (milliseconds)
SumCmp2L   = Sum of RTT squared low 32 bits (milliseconds)
TMax       = RTT maximum (milliseconds)
TMin       = RTT minimum (milliseconds)

Entry StartT      Pth Hop Dst Comps      SumCmp
      SumCmp2H    SumCmp2L  TMax  TMin
2      1134423910701 1 1 0 12      367
0      1231        6
2      1134423851116 1 1 1 2      129
0      2419        41
2      1134423070733 1 1 2 1      101
0      1119        16
2      0           1 1 3 0      0
0      0           0      0
```

This table describes the significant fields shown in the display.

**Table 12: show ipsla statistics aggregated detail Field Descriptions**

Field	Description
Entry	Entry number.
StartT	Start time of entry, in hundredths of seconds.

Field	Description
Pth	Path index.
Hop	Hop in path index.
Dst	Time distribution index.
Comps	Operations completed.
SumCmp	Sum of completion times, in milliseconds.
SumCmp2L	Sum of completion times squared low 32 bits, in milliseconds.
SumCmp2H	Sum of completion times squared high 32 bits, in milliseconds.
TMax	Completion time maximum, in milliseconds.
TMin	Completion time minimum, in milliseconds.

The following sample output is from the **show ipsla statistics aggregated** command when a path discovery operation is enabled.

Data following the hourly index is aggregated for all paths in the group during the given hourly interval.

```
RP/0/RP0/CPU0:router# show ipsla statistics aggregated 100041
```

```
Entry number: 100041
```

```
Hour Index: 13
```

```
<The following data after the given hourly index is aggregated for all paths in the group during the given hourly interval.>
```

```
Start Time Index: 12:20:57.323 UTC Tue Nov 27 2007
Number of Failed Operations due to a Disconnect      : 0
Number of Failed Operations due to a Timeout         : 249
Number of Failed Operations due to a Busy            : 0
Number of Failed Operations due to a No Connection   : 0
Number of Failed Operations due to an Internal Error: 0
Number of Failed Operations due to a Sequence Error  : 0
Number of Failed Operations due to a Verify Error    : 0
```

```
<end>
```

```
RTT Values:
```

```
RTTAvg  : 21      RTTMin: 19      RTTMax : 73
NumOfRTT: 2780    RTTSum: 59191    RTTSum2: 1290993
```

```
<The following data for LSP path information is available after path discovery is enabled.>
```

```
Path Information:
```

Path Idx	Path Sense	LSP Selector	Outgoing Interface	Nexthop Address	Downstream Label Stack
1	1	127.0.0.1	Gi0/4/0/0	192.39.1.1	677
2	1	127.0.0.1	Gi0/4/0/0.1	192.39.2.1	677
3	1	127.0.0.1	Gi0/4/0/0.2	192.39.3.1	677
4	1	127.0.0.1	Gi0/4/0/0.3	192.39.4.1	677
5	1	127.0.0.8	Gi0/4/0/0	192.39.1.1	677

```

6      1      127.0.0.8      Gi0/4/0/0.1      192.39.2.1      677
7      1      127.0.0.8      Gi0/4/0/0.2      192.39.3.1      677
8      1      127.0.0.8      Gi0/4/0/0.3      192.39.4.1      677
<end>
Hour Index: 14
Start Time Index: 13:20:57.323 UTC Tue Nov 27 2007
Number of Failed Operations due to a Disconnect : 0
Number of Failed Operations due to a Timeout : 122
Number of Failed Operations due to a Busy : 0
Number of Failed Operations due to a No Connection : 0
Number of Failed Operations due to an Internal Error: 0
Number of Failed Operations due to a Sequence Error : 0
Number of Failed Operations due to a Verify Error : 0
RTT Values:
RTTAvg : 21      RTTMin: 19      RTTMax : 212
NumOfRTT: 3059      RTTSum: 65272      RTTSum2: 1457612
Path Information:
Path Path LSP      Outgoing      Nexthop      Downstream
Idx Sense Selector Interface Address Label Stack
1 1 127.0.0.1 Gi0/4/0/0 192.39.1.1 677
2 1 127.0.0.1 Gi0/4/0/0.1 192.39.2.1 677
3 1 127.0.0.1 Gi0/4/0/0.2 192.39.3.1 677
4 1 127.0.0.1 Gi0/4/0/0.3 192.39.4.1 677
5 1 127.0.0.8 Gi0/4/0/0 192.39.1.1 677
6 1 127.0.0.8 Gi0/4/0/0.1 192.39.2.1 677
7 1 127.0.0.8 Gi0/4/0/0.2 192.39.3.1 677
8 1 127.0.0.8 Gi0/4/0/0.3 192.39.4.1 677

```

This table describes the significant fields shown in the display.

**Table 13: show ipsla statistics aggregated (with Path Discovery enabled) Field Descriptions**

Field	Description
Entry Number	Entry number.
Start Time Index	Start time.
Number of Failed Operations due to a Disconnect	Number of failed operations due to a disconnect.
Number of Failed Operations due to a Timeout	Number of failed operations due to a timeout.
Number of Failed Operations due to a Busy	Number of failed operations due to a busy error.
Number of Failed Operations due to a No Connection	Error that refers to the case in which the control connection cannot be established.
Number of Failed Operations due to an Internal Error	Number of failed operations due to an internal error.
Number of Failed Operations due to a Sequence Error	Number of failed operations due to a sequence error.
Number of Failed Operations due to a Verify Error	Number of failed operations due to a verify error.
RTT Values	Round-trip time statistics appear on the specified lines.
RTT Min/Avg/Max	Maximum values of the RTT that are observed in the latest cycle (*).
NumOfRTT	Number of successful round trips.

**show ipsla statistics aggregated**

Field	Description
RTT Sum	Sum of all successful round-trip values, in milliseconds.
RTT Sum2	Sum of squares of the round-trip values, in milliseconds.
RTT Min/Avg/Max	Maximum values of the RTT that are observed in the latest cycle (*).
NumOfRTT	Number of successful round trips.
Path Idx	Path index number.
Path Sense	Response return code for the path. (See <a href="#">Table 2: Response Return Values for the show ipsla history Command</a> , on page 115, in <b>show ipsla history</b> command.)
LSP Selector	LSP selector address of the path.
Outgoing Interface	Outgoing interface name of the path.
Nexthop Address	Next hop address of the path.
Downstream Label Stack	MPLS label stacks of the path.

**Related Commands**

Command	Description
<a href="#">show ipsla statistics</a> , on page 129	Displays the operational data for the IP SLA operation.
<a href="#">show ipsla statistics enhanced aggregated</a> , on page 141	Displays the statistical errors for all the IP SLA operations or for a specified operation.

# show ipsla statistics enhanced aggregated

To display the enhanced history statistics for all collected enhanced history buckets for the specified IP SLA operation, use the **show ipsla statistics enhanced aggregated** command in XR EXEC mode.

**show ipsla statistics enhanced aggregated** [ *operation-number* ] [ **interval** *seconds* ]

## Syntax Description

<i>operation-number</i>	(Optional) Operation number for which to display the enhanced history distribution statistics.
<b>interval</b> <i>seconds</i>	(Optional) Specifies the aggregation interval in seconds for which to display the enhanced history distribution statistics.

## Command Default

None

## Command Modes

XR EXEC

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show ipsla statistics enhanced aggregated** command displays data for each bucket of enhanced history data shown individually; for example, one after the other. The number of buckets and the collection interval is set using the **interval** keyword, *seconds* argument, **buckets** keyword, and *number-of-buckets* argument.

## Task ID

Task ID	Operations
monitor	read

## Examples

The output of the **show ipsla statistics enhanced aggregated** command varies depending on the operation type. The following sample output is from the **show ipsla statistics enhanced aggregated** command for the UDP echo operation:

```
RP/0/RP0/CPU0:router# show ipsla statistics enhanced aggregated 20
```

```

Entry number: 20
Interval : 300 seconds
  Bucket : 1    (0 - 300 seconds)
    Start Time Index: 00:38:14.286 UTC Thu Mar 16 2006
    Number of Failed Operations due to a Disconnect      : 0
    Number of Failed Operations due to a Timeout        : 0
    Number of Failed Operations due to a Busy           : 0
    Number of Failed Operations due to a No Connection  : 0
    Number of Failed Operations due to an Internal Error: 0
    Number of Failed Operations due to a Sequence Error : 0
    Number of Failed Operations due to a Verify Error   : 0
    RTT Values:
      RTTAvg : 2          RTTMin: 2          RTTMax : 5
      NumOfRTT: 5        RTTSum: 13         RTTSum2: 41
  Bucket : 2    (300 - 600 seconds)
    Start Time Index: 00:43:12.747 UTC Thu Mar 16 2006
    Number of Failed Operations due to a Disconnect      : 0
    Number of Failed Operations due to a Timeout        : 0
    Number of Failed Operations due to a Busy           : 0
    Number of Failed Operations due to a No Connection  : 0
    Number of Failed Operations due to an Internal Error: 0
    Number of Failed Operations due to a Sequence Error : 0
    Number of Failed Operations due to a Verify Error   : 0
    RTT Values:
      RTTAvg : 2          RTTMin: 2          RTTMax : 2
      NumOfRTT: 1        RTTSum: 2          RTTSum2: 4

```

This table describes the significant fields shown in the display.

**Table 14: show ipsla statistics enhanced aggregated Field Descriptions**

Field	Description
Entry Number	Entry number.
Interval	Multiple of the frequency of the operation. The Enhanced interval field defines the interval in which statistics displayed by the <b>show ipsla statistics enhanced aggregated</b> command are aggregated. This field must be configured so that the enhanced aggregated statistics are displayed.
Bucket	Bucket index.
Start Time Index	Statistics that are aggregated depend on the interval configuration mode. The value depends on the interval configuration that is displayed.
RTT Values	Round-trip time statistics appear on the specified lines.
RTT Min/Avg/Max	Maximum values of the RTT that are observed in the latest cycle (*).
NumOfRTT	Number of successful round trips.
RTT Sum	Sum of all successful round-trip values, in milliseconds.

Field	Description
RTT Sum2	Sum of squares of the round-trip values, in milliseconds.
Number of Failed Operations due to a Disconnect	Number of failed operations due to a disconnect.
Number of Failed Operations due to a Timeout	Number of failed operations due to a timeout.
Number of Failed Operations due to a Busy	Number of failed operations due to a busy error.
Number of Failed Operations due to a No Connection	Error that refers to the case in which the control connection cannot be established.
Number of Failed Operations due to an Internal Error	Number of failed operations due to an internal error.
Number of Failed Operations due to a Sequence Error	Number of failed operations due to a sequence error.
Number of Failed Operations due to a Verify Error	Number of failed operations due to a verify error.

**Related Commands**

Command	Description
<a href="#">show ipsla statistics, on page 129</a>	Displays the operational data for the IP SLA operation.
<a href="#">show ipsla statistics aggregated, on page 132</a>	Displays the statistical errors for all the IP SLA operations or for a specified operation.

## source address

To identify the address of the source device, use the **source address** command in the appropriate configuration mode. To use the best local address, use the **no** form of this command.

**source address** *ipv4-address*

**no source address**

### Syntax Description

<i>ipv4-address</i>	IP address or hostname of the source device.
---------------------	--

### Command Default

IP SLA finds the best local address to the destination and uses it as the source address.

### Command Modes

IP SLA UDP echo configuration  
 IP SLA UDP jitter configuration  
 IP SLA ICMP path-jitter configuration  
 IP SLA ICMP path-echo configuration  
 IP SLA ICMP echo configuration  
 IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

### Task ID

Task ID	Operations
monitor	read, write



## Examples

The following example shows how to designate an IP address for the **source address** command in IP SLA UDP jitter configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# source address 192.0.2.9
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

## source port

To identify the port of the source device, use the **source port** command in the appropriate configuration mode. To use the unused port number, use the **no** form of this command.

**source port** *port*

**no source port**

### Syntax Description

<b>port</b> <i>port</i>	Identifies the port number of the source device. Range is 1 to 65535.
-------------------------	---

### Command Default

IP SLA uses an unused port that is allocated by system.

### Command History

Releas	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **source port** command is not supported to configure ICMP operations; it is supported only to configure UDP operations.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to designate a port for the **source port** command in IP SLA UDP jitter configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# source port 11111
```

### Related Commands

Command	Description
<a href="#">operation</a> , <a href="#">on page 64</a>	Configures an IP SLA operation.

Command	Description
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

## start-time

To determine the time when the operation or MPLS LSP monitor instance starts, use the **start-time** command in the appropriate configuration mode. To stop the operation and place it in the default state, use the **no** form of this command.

**start-time** {*hh:mm:ss* [*day* | *month* *day* *year*] | **after** *hh:mm:ss* | **now** | **pending**}

**no start-time**

### Syntax Description

<i>hh:mm:ss</i>	Absolute start time in hours, minutes, and seconds. You can use the 24-hour clock notation. For example, the <b>start-time</b> <i>01:02</i> is defined as 1:02 am, or <b>start-time</b> <i>13:01:30</i> is defined as start at 1:01 pm. and 30 seconds. The current day is used; unless, you specify a <i>month</i> and <i>day</i> .
<i>month</i>	(Optional) Name of the month to start the operation. When you use the <i>month</i> argument, you are required to specify a day. You can specify the month by using the full English name or the first three letters of the month.
<i>day</i>	(Optional) Number of the day, in the range of 1 to 31, to start the operation. In addition, you must specify a month.
<i>year</i>	(Optional) Year in the range of 1993 to 2035.
<b>after</b> <i>hh:mm:ss</i>	Specifies that the operation starts at <i>hh</i> hours, <i>mm</i> minutes, and <i>ss</i> seconds after the <b>start-time</b> command is used.
<b>now</b>	Specifies that the operation should start immediately.
<b>pending</b>	Specifies that no information is collected. The default value is the <b>pending</b> keyword.

### Command Default

If a month and day are not specified, the current month and day are used.

### Command Modes

IP SLA schedule configuration  
IP SLA MPLS LSP monitor schedule configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines**

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the **start-time** command is used in IP SLA operation mode, it configures the start time for the specific operation being configured. If the **start-time** command is used in IP SLA MPLS LSP monitor mode, it configures the start time for all monitor instances associated with the monitored provider edge (PE) routers.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **start-time** command option for the schedule operation:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# schedule operation 1
RP/0/RP0/CPU0:router(config-ipsla-sched)# start-time after 01:00:00
```

The following example shows how to use the **start-time** command in IP SLA MPLS LSP monitor schedule configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplslm)# schedule monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplslm-sched)# start-time after 01:00:00
```

The following example shows how to use the **start-time** command and specify a year for a scheduled operation:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla operation 2
RP/0/RP0/CPU0:router(config-ipsla-op)# type icmp echo
RP/0/RP0/CPU0:router(config-ipsla-icmp-echo)# destination address 192.0.2.9
RP/0/RP0/CPU0:router(config-ipsla-icmp-echo)# exit
RP/0/RP0/CPU0:router(config-ipsla-op)# exit

RP/0/RP0/CPU0:router(config-ipsla)# schedule operation 2
RP/0/RP0/CPU0:router(config-ipsla-sched)# start 20:0:0 february 7 2008
RP/0/RP0/CPU0:router(config-ipsla-sched)#
```

**Related Commands**

Command	Description
<a href="#">life, on page 45</a>	Specifies the length of time to execute.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">recurring, on page 95</a>	Indicates that the operation starts automatically at the specified time and for the specified duration every day.

Command	Description
<a href="#">schedule monitor, on page 107</a>	Schedules an IP SLA MPLS LSP monitoring instance.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

# statistics

To set the statistics collection parameters for the operation, use the **statistics** command in the appropriate configuration mode. To remove the statistics collection or use the default value, use the **no** form of this command.

**statistics** {**hourly**| **interval** *seconds*}

**no statistics** {**hourly**| **interval** *seconds*}

## Syntax Description

<b>hourly</b>	Sets the distribution for statistics configuration that is aggregated for over an hour.
<b>interval</b> <i>seconds</i>	Collects statistics over a specified time interval. Interval (in seconds) over which to collect statistics. Range is 1 to 3600 seconds.

## Command Default

None

## Command Modes

IP SLA operation UDP jitter configuration  
 IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor ping configuration  
 IP SLA MPLS LSP monitor trace configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **statistics interval** command is not supported for the configuration of ICMP path-echo and ICMP path-jitter operations, nor for the configuration of MPLS LSP monitor instances.

If the **statistics** command is used in IP SLA operation mode, it configures the statistics collection for the specific operation being configured. If the **statistics** command is used in IP SLA MPLS LSP monitor mode, it configures the statistics collection for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to set the number of hours in which statistics are maintained for the IP SLA UDP jitter operation for the **statistics** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# statistics hourly
RP/0/RP0/CPU0:router(config-ipsla-op-stats)#
```

The following example shows how to collect statistics for a specified time interval, using the **statistics** command in an IP SLA UDP jitter operation:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# statistics interval 60
RP/0/RP0/CPU0:router(config-ipsla-op-stats)#
```

The following example shows how to set the number of hours in which statistics are maintained for the IP SLA MPLS LSP monitor ping operation, using the **statistics** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplslm)# monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplslm-def)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mplslm-lsp-ping)# statistics hourly
RP/0/RP0/CPU0:router(config-ipsla-mplslm-stats)#
```

## Related Commands

Command	Description
<a href="#">buckets (statistics hourly), on page 13</a>	Sets the number of hours in which statistics are kept.
<a href="#">buckets (statistics interval), on page 15</a>	Refers to the data buckets in which the enhanced history statistics are kept.
<a href="#">distribution count, on page 25</a>	Sets the number of statistics distributions that are kept for each hop during the lifetime of the IP SLA operation.
<a href="#">distribution interval, on page 27</a>	Sets the time interval (in milliseconds) for each statistical distribution.
<a href="#">monitor, on page 59</a>	Configures an IP SLA MPLS LSP monitor instance.
<a href="#">mpls lsp-monitor, on page 63</a>	Configures MPLS label switched path (LSP) monitoring.



Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">maximum hops, on page 55</a>	Sets the number of hops in which statistics are maintained for each path for the IP SLA operation.
<a href="#">maximum paths (IP SLA), on page 57</a>	Sets the number of paths in which statistics are maintained for each hour for an IP SLA operation.

## tag (IP SLA)

To create a user-specified identifier for an IP SLA operation, use the **tag** command in the appropriate configuration mode. To unset the tag string, use the **no** form of this command.

**tag** [ *text* ]

**no tag**

### Syntax Description

<i>text</i>	(Optional) Specifies a string label for the IP SLA operation.
-------------	---

### Command Default

No tag string is configured.

### Command Modes

IP SLA UDP echo configuration  
 IP SLA UDP jitter configuration  
 IP SLA ICMP path-jitter configuration  
 IP SLA ICMP path-echo configuration  
 IP SLA ICMP echo configuration  
 IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor ping configuration  
 IP SLA MPLS LSP monitor trace configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the **tag** command is used in IP SLA operation mode, it configures the user-defined tag string for the specific operation being configured. If the **tag** command is used in IP SLA MPLS LSP monitor mode, it configures the user-defined tag string for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **tag** command in IP SLA UDP jitter configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# tag ipsla
```

The following example shows how to use the **tag** command in IP SLA MPLS LSP monitor ping configuration mode:

```
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplslm)# monitor 1
RP/0/RP0/CPU0:router(config-ipsla-mplslm-def)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mplslm-lsp-ping)# tag mplslm-tag
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

## target ipv4

To specify the IPv4 address of the target router to be used in an MPLS LSP ping or MPLS LSP trace operation, use the **target ipv4** command in the appropriate configuration mode. To unset the address, use the **no** form of this command.

**target ipv4** *destination-address destination-mask*

**no target ipv4**

### Syntax Description

<i>destination-address</i>	IPv4 address of the target device to be tested.
<i>destination-mask</i>	Number of bits in the network mask of the target address. The network mask can be specified in either of two ways: <ul style="list-style-type: none"> <li>• The network mask can be a four-part dotted decimal address. For example, 255.0.0.0 indicates that each bit equal to 1 means the corresponding address bit belongs to the network address.</li> <li>• The network mask can be indicated as a slash (/) and number. For example, /8 indicates that the first 8 bits of the mask are ones, and the corresponding bits of the address are network address.</li> </ul>

### Command Default

None

### Command Modes

IP SLA MPLS LSP ping configuration

IP SLA MPLS LSP trace configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **target ipv4** command to specify the IPv4 address of the target router at the end of the LSP to be tested or traced and to indicate the destination as an Label Distribution Protocol (LDP) IPv4 address. The target IPv4 address identifies the appropriate label stack associated with the LSP.

**Note**

Using the **target ipv4** command, you can configure only one LDP IPv4 address as the target in an MPLS LSP ping or trace operation. If you enter the command a second time and configure a different IPv4 target address, you overwrite the first IPv4 address.

An MPLS LSP ping operation tests connectivity in the LSP using verification on the specified Forwarding Equivalence Class (FEC)— in this case, LDP IPv4 prefix—between the ping origin and the egress node identified with the **target ipv4** command. This test is carried out by sending an MPLS echo request along the same data path as other packets belonging to the FEC. When the ping packet reaches the end of the path, it is sent to the control plane of the egress label switching router (LSR), which then verifies that it is indeed an egress for the LSP. The MPLS echo request contains information about the LSP that is being verified.

In an MPLS network, an MPLS LSP trace operation traces LSP paths to the target router identified with the **target ipv4** command. In the verification of LSP routes, a packet is sent to the control plane of each transit LSR, which performs various checks, including one that determines if it is a transit LSR for the LSP path. Each transit LSR also returns information related to the LSP being tested (that is, the label bound to the LDP IPv4 prefix).

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **target ipv4** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-ping)# target ipv4 192.168.1.4 255.255.255.255
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace, on page 186</a>	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

## target pseudowire

To specify the pseudowire as the target to be used in an MPLS LSP ping operation, use the **target pseudowire** command in IP SLA MPLS LSP ping configuration mode. To unset the target, use the **no** form of this command.

**target pseudowire** *destination-address circuit-id*

**no target pseudowire**

### Syntax Description

<i>destination-address</i>	IPv4 address of the target device to be tested.
<i>circuit-id</i>	Virtual circuit identifier. Range is 1 to 4294967295.

### Command Default

No default behavior or values

### Command Modes

IP SLA MPLS LSP ping configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **target pseudowire** command to specify a target router and to indicate the destination as a Layer 2 VPN pseudowire in an MPLS LSP ping operation. The **target pseudowire** command identifies the target address and the virtual circuit (VC) identifier.



#### Note

Using the **target pseudowire** command, you can configure only one pseudowire address as the target in an MPLS LSP ping operation. If you use the command a second time and configure a different pseudowire target address, the first pseudowire address is overwritten.

A pseudowire target of the LSP ping operation allows active monitoring of statistics on Pseudowire Edge-to-Edge (PWE3) services across an MPLS network. PWE3 connectivity verification uses the Virtual Circuit Connectivity Verification (VCCV).

For more information on VCCV, refer to the VCCV draft, "Pseudowire Virtual Circuit Connectivity Verification (VCCV)" on the IETF web page.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **target pseudowire** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-trace)# target pseudowire 192.168.1.4 4211
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.

## target traffic-eng

To specify the target MPLS traffic engineering tunnel to be used in an MPLS LSP ping or MPLS LSP trace operation, use the **target traffic-eng** command in the appropriate configuration mode. To unset the tunnel, use the **no** form of this command.

**target traffic-eng tunnel** *tunnel-interface*

**no target traffic-eng**

### Syntax Description

<b>tunnel</b> <i>tunnel-interface</i>	Tunnel ID of an MPLS traffic-engineering tunnel (for example, tunnel 10) configured on the router. Range is 0 to 65535.
---------------------------------------	---

### Command Default

No default behavior or values

### Command Modes

IP SLA MPLS LSP ping configuration

IP SLA MPLS LSP trace configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **target traffic-eng** command to specify a target router and to indicate the destination as an MPLS traffic-engineering (TE) tunnel in an MPLS LSP ping or MPLS LSP trace operation. The **target traffic-eng** command identifies the tunnel interface and the appropriate label stack associated with the LSP to be pinged or traced. An LSP tunnel interface is the head-end of a unidirectional virtual link to a tunnel destination.



#### Note

Using the **target traffic-eng** command, you can configure only one MPLS TE tunnel as the target in an MPLS LSP ping or trace operation. If you enter the command a second time and configure a different tunnel interfaces, you overwrite the first tunnel ID.

An IP SLA ping operation tests connectivity in the LSP using verification on the specified Forwarding Equivalence Class (FEC)—in this case, MPLS TE tunnel—between the ping origin and the egress node identified with the **target traffic-eng** command. This test is carried out by sending an MPLS echo request along the same data path as other packets belonging to the tunnel. When the ping packet reaches the end of the path, it is sent to the control plane of the egress label switching router (LSR), which then verifies that it



is indeed an egress for the MPLS TE tunnel. The MPLS echo request contains information about the tunnel whose LSP path is being verified.

In an MPLS network, an IP SLA trace operation traces the LSP paths to a target router identified with the **target traffic-eng** command. In the verification of LSP routes, a packet is sent to the control plane of each transit LSR, which performs various checks, including one that determines if it is a transit LSR for the LSP path. Each transit LSR also returns information related to the MPLS TE tunnel to see if the local forwarding information matches what the routing protocols determine as the LSP path.

MPLS traffic engineering automatically establishes and maintains LSPs across the backbone. The path that an LSP uses is determined by the LSP resource requirements and network resources, such as bandwidth.

For more information on MPLS traffic-engineering tunnels, refer to *MPLS Traffic Engineering and Enhancements*.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **target traffic-eng tunnel** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp trace
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-trace)# target traffic-eng tunnel 101
```

## Related Commands

Command	Description
<a href="#">operation</a> , on page 64	Configures an IP SLA operation.
<a href="#">schedule operation</a> , on page 109	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping</a> , on page 184	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace</a> , on page 186	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

# threshold

To set the lower-limit and upper-limit values, use the **threshold** command in IP SLA reaction condition configuration mode. To use the default value, use the **no** form of this command.

**threshold lower-limit** *value* **upper-limit** *value*

**no threshold lower-limit** *value* **upper-limit** *value*

## Syntax Description

<b>lower-limit</b> <i>value</i>	Specifies the threshold lower-limit value. Range is 1 to 4294967295 ms. Default <b>lower-limit</b> value is 3000 ms.
<b>upper-limit</b> <i>value</i>	Specifies the threshold upper-limit value. Range is 5000 to 4294967295 ms. Default <b>upper-limit</b> value is 5000 ms.

## Command Default

**lower-limit** *value*: 3000 ms

**upper-limit** *value*: 5000 ms

## Command Modes

IP SLA reaction condition configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **threshold** command is supported only when used with the **react** command and **jitter-average** and **packet-loss** keywords.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to set the lower-limit and upper-limit values for the **react** command with the **jitter-average** keyword for the **threshold** command:

```
RP/0/RP0/CPU0:router# configure
```

```
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react jitter-average
RP/0/RP0/CPU0:router(config-ipsla-react-cond)# threshold lower-limit 8000 upper-limit 10000
```

The following example shows how to set the lower-limit and upper-limit values for the **react** command with the **packet-loss** keyword for the **threshold** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react packet-loss dest-to-source
RP/0/RP0/CPU0:router(config-ipsla-react-cond)# threshold lower-limit 8000 upper-limit 10000
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">reaction operation, on page 89</a>	Configures certain actions that are based on events under the control of the IP SLA agent.
<a href="#">react, on page 82</a>	Specifies an element to be monitored for a reaction.
<a href="#">threshold type average, on page 164</a>	Takes action on average values to violate a threshold.
<a href="#">threshold type consecutive, on page 166</a>	Takes action after a number of consecutive violations.
<a href="#">threshold type immediate, on page 168</a>	Takes action immediately upon a threshold violation.
<a href="#">threshold type xofy, on page 170</a>	Takes action upon X violations in Y probe operations.

## threshold type average

To take action on average values to violate a threshold, use the **threshold type average** command in IP SLA reaction condition configuration mode. To clear the threshold type (reaction will never happen), use the **no** form of this command.

**threshold type average** *number-of-probes*

**no threshold type**

### Syntax Description

<i>number-of-probes</i>	When the average of the last five values for the monitored element exceeds the upper threshold or the average of the last five values for the monitored element drops below the lower threshold, the action is performed as defined by the <b>action</b> command. Range is 1 to 16.
-------------------------	---

### Command Default

If there is no default value, no threshold type is configured.

### Command Modes

IP SLA reaction condition configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **threshold type average** command is supported only when used with the **react** command and **jitter-average**, **packet-loss**, and **rtt** keywords.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to set the number of probes for the **react** command with the **jitter-average** keyword for the **threshold type average** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
```

```
RP/0/RP0/CPU0:router(config-ipsla-react)# react jitter-average
RP/0/RP0/CPU0:router(config-ipsla-react-cond)# threshold type average 8
```

The following example shows how to set the number of probes for the **react** command with the **packet-loss** keyword for the **threshold type average** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react packet-loss dest-to-source
RP/0/RP0/CPU0:router(config-ipsla-react-cond)# threshold type average 8
```

## Related Commands

Command	Description
<a href="#">action (IP SLA), on page 7</a>	Specifies what action or combination of actions the operation performs.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">reaction operation, on page 89</a>	Configures certain actions that are based on events under the control of the IP SLA agent.
<a href="#">react, on page 82</a>	Specifies an element to be monitored for a reaction.
<a href="#">threshold, on page 162</a>	Sets the lower-limit and upper-limit values.
<a href="#">threshold type consecutive, on page 166</a>	Takes action after a number of consecutive violations.
<a href="#">threshold type immediate, on page 168</a>	Takes action immediately upon a threshold violation.
<a href="#">threshold type xofy, on page 170</a>	Takes action upon X violations in Y probe operations.

## threshold type consecutive

To take action after a number of consecutive violations, use the **threshold type consecutive** command in the appropriate configuration mode. To clear the threshold type (reaction will never happen), use the **no** form of this command.

**threshold type consecutive** *occurrences*

**no threshold type**

### Syntax Description

<i>occurrences</i>	When the reaction condition is set for a consecutive number of occurrences, there is no default value. The number of occurrences is set when specifying the threshold type. The number of consecutive violations is 1 to 16.
--------------------	--

### Command Default

No default behavior or values

### Command Modes

IP SLA reaction condition configuration

IP SLA MPLS LSP monitor reaction condition configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the **threshold type consecutive** command is used in IP SLA reaction condition mode, it configures the threshold for the specific operation being configured. If the **threshold type consecutive** command is used in IP SLA MPLS LSP monitor reaction condition configuration mode, it configures the threshold for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

### Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **threshold type consecutive** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react connection-loss
RP/0/RP0/CPU0:router(config-ipsla-react-cond)# threshold type consecutive 8
```

The following example shows how to use the **threshold type consecutive** command in IP SLA MPLS LSP monitor reaction condition configuration mode:

```
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplsml)# reaction monitor 2
RP/0/RP0/CPU0:router(config-ipsla-mplsml-react)# react connection-loss
RP/0/RP0/CPU0:router(config-ipsla-mplsml-react-cond)# threshold type consecutive 2
```

## Related Commands

Command	Description
<a href="#">action (IP SLA), on page 7</a>	Specifies what action or combination of actions the operation performs.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">reaction monitor, on page 87</a>	Configures MPLS LSP monitoring reactions.
<a href="#">reaction operation, on page 89</a>	Configures certain actions that are based on events under the control of the IP SLA agent.
<a href="#">react, on page 82</a>	Specifies an element to be monitored for a reaction.
<a href="#">threshold, on page 162</a>	Sets the lower-limit and upper-limit values.
<a href="#">threshold type average, on page 164</a>	Takes action on average values to violate a threshold.
<a href="#">threshold type immediate, on page 168</a>	Takes action immediately upon a threshold violation.
<a href="#">threshold type xofy, on page 170</a>	Takes action upon X violations in Y probe operations.

# threshold type immediate

To take action immediately upon a threshold violation, use the **threshold type immediate** command in the appropriate configuration mode. To clear the threshold type (reaction will never happen), use the **no** form of this command.

**threshold type immediate**

**no threshold type**

## Syntax Description

This command has no keywords or arguments.

## Command Default

If there is no default value, no threshold type is configured.

## Command Modes

IP SLA reaction condition configuration

IP SLA MPLS LSP monitor reaction condition configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When the reaction conditions, such as threshold violations, are met for the monitored element, the action is immediately performed as defined by the **action** command.

If the **threshold type immediate** command is used in IP SLA reaction condition mode, it configures the threshold for the specific operation being configured. If the **threshold type immediate** command is used in IP SLA MPLS LSP monitor reaction condition configuration mode, it configures the threshold for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **threshold type immediate** command:

```
RP/0/RP0/CPU0:router# configure
```



```
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react timeout
RP/0/RP0/CPU0:router(config-ipsla-react-cond)# threshold type immediate
```

The following example shows how to use the **threshold type immediate** command in IP SLA MPLS LSP monitor reaction condition configuration mode:

```
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplsml)# reaction monitor 2
RP/0/RP0/CPU0:router(config-ipsla-mplsml-react)# react connection-loss
RP/0/RP0/CPU0:router(config-ipsla-mplsml-react-cond)# threshold type immediate
```

## Related Commands

Command	Description
<a href="#">action (IP SLA), on page 7</a>	Specifies what action or combination of actions the operation performs.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">reaction monitor, on page 87</a>	Configures MPLS LSP monitoring reactions.
<a href="#">reaction operation, on page 89</a>	Configures certain actions that are based on events under the control of the IP SLA agent.
<a href="#">react, on page 82</a>	Specifies an element to be monitored for a reaction.
<a href="#">threshold, on page 162</a>	Sets the lower-limit and upper-limit values.
<a href="#">threshold type average, on page 164</a>	Takes action on average values to violate a threshold.
<a href="#">threshold type consecutive, on page 166</a>	Takes action after a number of consecutive violations.
<a href="#">threshold type xofy, on page 170</a>	Takes action upon X violations in Y probe operations.

## threshold type xofy

To take action upon X violations in Y probe operations, use the **threshold type xofy** command in IP SLA reaction condition configuration mode. To clear the threshold type (reaction will never happen), use the **no** form of this command.

**threshold type xofy** *x-value y-value*

**no threshold type**

### Syntax Description

<i>x-value y-value</i>	When the reaction conditions, such as threshold violations, are met for the monitored element after some <i>x</i> number of violations within some other <i>y</i> number of probe operations (for example, <i>x</i> of <i>y</i> ), the action is performed as defined by the <b>action</b> command. Default is 5 for both <i>x-value</i> and <i>y-value</i> ; for example, <b>xofy 5 5</b> . Range is 1 to 16.
------------------------	--

### Command Default

If there is no default value, no threshold type is configured.

### Command Modes

IP SLA reaction condition configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to use the **threshold type xofy** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# reaction operation 432
RP/0/RP0/CPU0:router(config-ipsla-react)# react verify-error
RP/0/RP0/CPU0:router(config-ipsla-react-cond)# threshold type xofy 1 5
```

**Related Commands**

Command	Description
<a href="#">action (IP SLA), on page 7</a>	Specifies what action or combination of actions the operation performs.
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">reaction operation, on page 89</a>	Configures certain actions that are based on events under the control of the IP SLA agent.
<a href="#">react, on page 82</a>	Specifies an element to be monitored for a reaction.
<a href="#">threshold, on page 162</a>	Sets the lower-limit and upper-limit values.
<a href="#">threshold type average, on page 164</a>	Takes action on average values to violate a threshold.
<a href="#">threshold type consecutive, on page 166</a>	Takes action after a number of consecutive violations.
<a href="#">threshold type immediate, on page 168</a>	Takes action immediately upon a threshold violation.

## timeout (IP SLA)

To set the probe or control timeout interval, use the **timeout** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

**timeout** *milliseconds*

**no timeout**

### Syntax Description

<i>milliseconds</i>	Sets the amount of time (in milliseconds) that the IP SLA operation waits for a response from the request packet. Range is 1 to 604800000.
---------------------	--

### Command Default

None.

### Command Modes

IP SLA UDP echo configuration  
 IP SLA UDP jitter configuration  
 IP SLA ICMP path-jitter configuration  
 IP SLA ICMP path-echo configuration  
 IP SLA ICMP echo configuration  
 IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor ping configuration  
 IP SLA MPLS LSP monitor trace configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If the **timeout** command is used in IP SLA operation mode, it configures the amount of time that a specific IP SLA operation waits for a response from the request packet. If the **timeout** command is used in IP SLA MPLS LSP monitor mode, it configures the amount of time that all operations associated with the monitored provider edge (PE) routers wait for a response from the request packet. This configuration is inherited by all LSP operations that are created automatically.

**Note**

The IP SLA responder needs at least one second to open a socket and program Local Packet Transport Services (LPTS). Therefore, configure the IP SLA timeout to at least 2000 milli seconds.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **timeout** command in IP SLA UDP jitter configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# timeout 10000
```

The following example shows how to use the **timeout** command in IP SLA MPLS LSP monitor configuration mode:

```
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplslm)# monitor 2
RP/0/RP0/CPU0:router(config-ipsla-mplslm-def)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mplslm-lsp-ping)# timeout 10000
```

**Related Commands**

Command	Description
<a href="#">operation</a> , on page 64	Configures an IP SLA operation.
<a href="#">schedule operation</a> , on page 109	Schedules an IP SLA operation.

# tos

To set the type of service (ToS) in a probe packet, use the **tos** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

**tos** *number*

**no tos**

## Syntax Description

<i>number</i>	Type of service number. Range is 0 to 255.
---------------	--

## Command Default

The type of service number is 0.

## Command Modes

IP SLA UDP echo configuration  
 IP SLA UDP jitter configuration  
 IP SLA ICMP path-jitter configuration  
 IP SLA ICMP path-echo configuration  
 IP SLA ICMP echo configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The ToS value is an 8-bit field in IP headers. The field contains information, such as precedence and ToS. The information is useful for policy routing and for features like Committed Access Rate (CAR) in which routers examine ToS values. When the type of service is defined for an operation, the IP SLA probe packet contains the configured tos value in the IP header.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **tos** command in IP SLA UDP jitter configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# tos 60
```

## Related Commands

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

# ttl

To specify the time-to-live (TTL) value in the MPLS label of echo request packets, use the **ttl** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

**ttl** *time-to-live*

**no ttl**

## Syntax Description

<i>time-to-live</i>	Maximum hop count for an echo request packet. Valid values are from 1 to 255.
---------------------	---

## Command Default

For an MPLS LSP ping operation, the default time-to-live value is 255.

For an MPLS LSP trace operations, the default time-to-live value is 30.

## Command Modes

IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor ping configuration  
 IP SLA MPLS LSP monitor trace configuration

## Command History

Release	Modification
Release 5.0.0	This command was introduced.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **ttl** command to set the maximum number of hops allowed for echo request packets in an MPLS LSP ping or MPLS LSP trace operation. Note that the number of possible hops differs depending the type of IP SLA operation:

- For MPLS LSP ping operations, valid values are from 1 to 255 and the default is 255.
- For MPLS LSP trace operations, valid values are from 1 to 30 and the default is 30.

If the **ttl** command is used in IP SLA operation mode, it configures the time-to-live value for the specific operation being configured. If the **ttl** command is used in IP SLA MPLS LSP monitor mode, it configures the time-to-live value for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.



**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **ttl** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-ping)# ttl 200
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace, on page 186</a>	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

# type icmp echo

To use the ICMP echo operation type, use the **type icmp echo** command in IP SLA operation configuration mode. To remove the operation, use the **no** form of this command.

**type icmp echo**

**no type icmp echo**

**Syntax Description** This command has no keywords or arguments.

**Command Default** No default behavior or values

**Command Modes** IP SLA operation configuration

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Operations
monitor	read, write

**Examples** The following example shows how to use the **type icmp echo** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type icmp echo
RP/0/RP0/CPU0:router(config-ipsla-icmp-echo)#
```

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.



# type icmp path-echo

To use the ICMP path-echo operation type, use the **type icmp path-echo** command in IP SLA operation configuration mode. To remove the operation, use the **no** form of this command.

**type icmp path-echo**

**no type icmp path-echo**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** IP SLA operation configuration

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	monitor	read, write

**Examples** The following example shows how to use the **type icmp path-echo** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type icmp path-echo
RP/0/RP0/CPU0:router(config-ipsla-icmp-path-echo)#
```

Related Commands	Command	Description
	<a href="#">operation</a> , on page 64	Configures an IP SLA operation.
	<a href="#">schedule operation</a> , on page 109	Schedules an IP SLA operation.



## type icmp path-jitter

To use the ICMP path-jitter operation type, use the **type icmp path-jitter** command in IP SLA operation configuration mode. To remove the operation, use the **no** form of this command.

**type icmp path-jitter**

**no type icmp path-jitter**

**Syntax Description** This command has no keywords or arguments.

**Command Default** No default behavior or values

**Command Modes** IP SLA operation configuration

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	monitor	read, write

**Examples** The following example shows how to use the **type icmp path-jitter** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type icmp path-jitter
RP/0/RP0/CPU0:router(config-ipsla-icmp-path-jitter)#
```

Related Commands	Command	Description
	<a href="#">operation</a> , on page 64	Configures an IP SLA operation.
	<a href="#">schedule operation</a> , on page 109	Schedules an IP SLA operation.



## type mpls lsp ping

To verify the end-to-end connectivity of a label switched path (LSP) and the integrity of an MPLS network, use the **type mpls lsp ping** command in the appropriate configuration mode. To remove the operation, use the **no** form of this command.

**type mpls lsp ping**

**no type mpls lsp ping**

**Syntax Description** This command has no keywords or arguments.

**Command Default** No default behavior or values

**Command Modes**

- IP SLA operation configuration
- IP SLA MPLS LSP monitor definition configuration

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

**Usage Guidelines**

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **type mpls lsp ping** command to configure parameters for an IP SLA LSP ping operation. After you enter the command, you enter IP SLA MPLS LSP Ping configuration mode.

An MPLS LSP ping operation tests connectivity between routers along an LSP path in an MPLS network and measures round-trip delay of the LSP by using an echo request and echo reply.

The MPLS LSP ping operation verifies LSP connectivity by using one of the supported Forwarding Equivalence Class (FEC) entities between the ping origin and egress node of each FEC. The following FEC types are supported for an MPLS LSP ping operation:

- IPv4 LDP prefixes (configured with the [target ipv4](#), on page 156 command)
- MPLS TE tunnels (configured with the [target traffic-eng](#), on page 160 command)
- Pseudowire (configured with the [target pseudowire](#), on page 158 command)

For MPLS LSP monitor ping operations, only IPv4 LDP prefixes are supported.

If the **type mpls lsp ping** command is used in IP SLA operation configuration mode, it configures the parameters for the specific operation being configured. If the **type mpls lsp ping** command is used in IP SLA MPLS LSP monitor configuration mode, it configures the parameters for all operations associated with the



monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **type mpls lsp ping** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-ping)#
```

The following example shows how to use the **type mpls lsp ping** command in IP SLA MPLS LSP monitor configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-monitor)# monitor 2
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-monitor-def)# type mpls lsp ping
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-monitor-lsp-ping)#
```

## Related Commands

Command	Description
<a href="#">monitor</a> , on page 59	Configures an IP SLA MPLS LSP monitor instance.
<a href="#">operation</a> , on page 64	Configures an IP SLA operation.
<a href="#">schedule monitor</a> , on page 107	Schedules an IP SLA MPLS LSP monitoring instance.
<a href="#">schedule operation</a> , on page 109	Schedules an IP SLA operation.
<a href="#">type mpls lsp trace</a> , on page 186	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

## type mpls lsp trace

To trace LSP paths and localize network faults in an MPLS network, use the **type mpls lsp trace** command in the appropriate configuration mode. To remove the operation, use the **no** form of this command.

**type mpls lsp trace**

**no type mpls lsp trace**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes**

IP SLA operation configuration

IP SLA MPLS LSP monitor definition configuration

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines**

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **type mpls lsp trace** command to configure parameters for an IP SLA LSP trace operation. After you enter the command, you enter IP SLA MPLS LSP Trace configuration mode.

An MPLS LSP trace operation traces the hop-by-hop route of LSP paths to a target router and measures the hop-by-hop round-trip delay for IPv4 LDP prefixes and TE tunnel FECs in an MPLS network. Echo request packets are sent to the control plane of each transit label switching router (LSR). A transit LSR performs various checks to determine if it is a transit LSR for the LSP path. A trace operation allows you to troubleshoot network connectivity and localize faults hop-by-hop.

In an MPLS LSP trace operation, each transit LSR returns information related to the type of Forwarding Equivalence Class (FEC) entity that is being traced. This information allows the trace operation to check if the local forwarding information matches what the routing protocols determine as the LSP path.

An MPLS label is bound to a packet according to the type of FEC used for the LSP. The following FEC types are supported for an MPLS LSP trace operation:

- LDP IPv4 prefixes (configured with the [target ipv4](#), on page 156 command)
- MPLS TE tunnels (configured with the [target traffic-eng](#), on page 160 command)

For MPLS LSP monitor trace operations, only IPv4 LDP prefixes are supported.

If the **type mpls lsp trace** command is used in IP SLA operation configuration mode, it configures the parameters for the specific operation being configured. If the **type mpls lsp trace** command is used in IP SLA MPLS LSP monitor configuration mode, it configures the parameters for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **type mpls lsp trace** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type mpls lsp trace
RP/0/RP0/CPU0:router(config-ipsla-mpls-lsp-trace)#
```

The following example shows how to use the **type mpls lsp trace** command in IP SLA MPLS LSP monitor configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplslm)# monitor 2
RP/0/RP0/CPU0:router(config-ipsla-mplslm-def)# type mpls lsp trace
RP/0/RP0/CPU0:router(config-ipsla-mplslm-lsp-trace)#
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule monitor, on page 107</a>	Schedules an IP SLA MPLS LSP monitoring instance.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type mpls lsp ping, on page 184</a>	Tests connectivity in an LSP path in an MPLS VPN.

# type udp echo

To use the UDP echo operation type, use the **type udp echo** command in IP SLA operation configuration mode. To remove the operation, use the **no** form of this command.

**type udp echo**

**no type udp echo**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** IP SLA operation configuration

Command History	Release	Modification
	Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	monitor	read, write

**Examples** The following example shows how to use the **type udp echo** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp echo
RP/0/RP0/CPU0:router(config-ipsla-udp-echo)#
```

Related Commands	Command	Description
	<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
	<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.



# type udp jitter

To use the UDP jitter operation type, use the **type udp jitter** command in IP SLA operation configuration mode. To remove the operation, use the **no** form of this command.

**type udp jitter**

**no type udp jitter**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** IP SLA operation configuration

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Operations
monitor	read, write

**Examples** The following example shows how to use the **type udp jitter** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)#
```

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.



## type udp ipv4 address

To configure a permanent port in the IP SLA responder for UDP echo or jitter operations, use the **type udp ipv4 address** command in IP SLA responder configuration mode. To remove the specified permanent port, use the **no** form of this command.

**type udp ipv4 address** *ip-address* **port** *port*

**no type udp ipv4 address** *ip-address* **port** *port*

### Syntax Description

<i>ip-address</i>	Specifies the IPv4 address at which the operation is received.
<b>port</b> <i>port</i>	Specifies the port number at which the operation is received. Range is identical to the one used for the subagent that is, 1 to 65355.

### Command Default

If there is no default value, no permanent port is configured.

### Command Modes

IP SLA responder configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to configure a permanent port for the **type udp ipv4 address** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# responder
RP/0/RP0/CPU0:router(config-ipsla-resp)# type udp ipv4 address 192.0.2.11 port 10001
```



**Related Commands**

Command	Description
<a href="#">responder</a> , on page 93	Enables the IP SLA responder for a UDP echo or UDP jitter operation.

# verify-data

To check each IP SLA response for corruption, use the **verify-data** command in the appropriate configuration mode. To disable data corruption checking, use the **no** form of this command.

**verify-data**

**no verify-data**

**Syntax Description** This command has no keywords or arguments.

**Command Default** The **verify-data** command is disabled.

**Command Modes** IP SLA UDP echo configuration  
IP SLA UDP jitter configuration

Release	Modification
Release 5.0.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Operations
monitor	read, write

**Examples** The following example shows how to use the **verify-data** command in IP SLA UDP jitter configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp jitter
RP/0/RP0/CPU0:router(config-ipsla-udp-jitter)# verify-data
```

Command	Description
<a href="#">operation</a> , <a href="#">on page 64</a>	Configures an IP SLA operation.

Command	Description
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.

## vrf (IP SLA)

To enable the monitoring of a Virtual Private Network (VPN) in an ICMP echo, ICMP path-echo, ICMP path-jitter, UDP echo, or UDP jitter operation, use the **vrf** command in the appropriate configuration mode. To disable VPN monitoring, use the **no** form of this command.

**vrf** *vrf-name*

**no vrf**

### Syntax Description

<i>vrf-name</i>	Name of the VPN. Maximum length is 32 alphanumeric characters.
-----------------	--

### Command Default

VPN monitoring is not configured for an IP SLA operation.

### Command Modes

IP SLA ICMP echo configuration  
 IP SLA ICMP path-echo configuration  
 IP SLA ICMP path-jitter configuration  
 IP SLA UDP echo configuration  
 IP SLA UDP jitter configuration  
 IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **vrf** command to configure a non-default VPN routing and forwarding (VRF) table for an IP SLA operation. A VPN is commonly identified using the name of a VRF table. If you use the **vrf** command in the configuration of an IP SLA operation, the *vrf-name* value is used to identify the VPN for the particular operation.

The default VRF table is used if no value is specified with the **vrf** command. If you enter a VPN name for an unconfigured VRF, the IP SLA operation fails and the following information is displayed in the results for the [show ipsla statistics](#), [on page 129](#) command:

```
Latest operation return code : VrfNameError
```

The **vrf** command is supported only to configure the following IP SLA operations:

- IP SLA ICMP echo
- IP SLA ICMP path-echo
- IP SLA ICMP path-jitter
- IP SLA UDP echo
- IP SLA UDP jitter
- IP SLA MPLS LSP ping
- IP SLA MPLS LSP trace

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **vrf** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# operation 1
RP/0/RP0/CPU0:router(config-ipsla-op)# type udp echo
RP/0/RP0/CPU0:router(config-ipsla-udp-echo)# vrf vpn2
```

**Related Commands**

Command	Description
<a href="#">operation, on page 64</a>	Configures an IP SLA operation.
<a href="#">schedule operation, on page 109</a>	Schedules an IP SLA operation.
<a href="#">type icmp echo, on page 178</a>	Configures an IP SLA ICMP echo operation.
<a href="#">type icmp path-echo, on page 180</a>	Configures an IP SLA ICMP path-echo operation.
<a href="#">type icmp path-jitter, on page 182</a>	Configures an IP SLA ICMP path-jitter operation.
<a href="#">type udp echo, on page 188</a>	Configures an IP SLA UDP echo operation.
<a href="#">type udp jitter, on page 190</a>	Configures an IP SLA UDP jitter operation.

## vrf (IP SLA MPLS LSP monitor)

To specify which virtual routing and forwarding instance (VRF) is monitored in an IP SLA MPLS LSP monitor ping or trace, use the **vrf** command in the appropriate configuration mode. To revert to the monitoring of all VRFs, use the **no** form of this command.

**vrf** *vrf-name*

**no vrf**

### Syntax Description

<i>vrf-name</i>	Name of the VRF. Maximum length is 32 alphanumeric characters.
-----------------	--

### Command Default

All VRFs are monitored.

### Command Modes

IP SLA MPLS LSP monitor ping configuration

IP SLA MPLS LSP monitor trace configuration

### Command History

Release	Modification
Release 5.0.0	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **vrf** command in IP SLA MPLS LSP monitor configuration mode specifies to monitor a specific VRF in ping and trace operations. The default is that all VRFs are monitored.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to use the **vrf** command in IP SLA MPLS LSP monitor configuration mode:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# ipsla
RP/0/RP0/CPU0:router(config-ipsla)# mpls lsp-monitor
RP/0/RP0/CPU0:router(config-ipsla-mplsml)# monitor 2
```

```
RP/0/RP0/CPU0:router(config-ipsla-mpls-lm-def)# type mpls lsp trace  
RP/0/RP0/CPU0:router(config-ipsla-mpls-lm-lsp-trace)# vrf vpn-lsp
```

**Related Commands**

Command	Description
<a href="#">monitor</a> , on page 59	Configures an IP SLA MPLS LSP monitor instance.
<a href="#">type mpls lsp ping</a> , on page 184	Tests connectivity in an LSP path in an MPLS VPN.
<a href="#">type mpls lsp trace</a> , on page 186	Traces the hop-by-hop route of an LSP path in an MPLS VPN.

