

# A

accessing client settings 4-1 configuration options 5-1 encoder RTSP player 2-2 web browser 2-2 access list, general settings 5-16 account deleting user account 5-4 modifying user account 5-4 adding user 5-4 administrator IP address **5-18** Application window managing event settings 5-37 overview 5-34 assigning functions, joystick buttons 4-4 audio settings 5-25 two way settings 5-13 audio and video audio and video window 5-19 settings overview **5-19** audio control buttons 3-4 authentication, enabling 1-10 available FPS 5-25 available frame rate **5-25** 

## В

buffer time, streaming 4-3

### С

camera Camera tampering detection window 5-27 configuring preset positions 5-30 ID settings 5-29 patrol settings 5-30 camera control area 3-2 Camera control window 5-28 RS485 settings 5-28 camera patrol settings 5-30 certificate creating a certificate request and install 5-7 creating a self-signed certificate automatically **5-6** creating a self-signed certificate manually **5-6** removing signed certificate **5-8** CIVS-SENC-4P, front and back view 1-2 CIVS-SENC-8P, front and back view 1-3 client settings accessing 4-1 managing 4-1 configuration area 3-3 options 5-1 configuring camera patrol settings 5-30 camera preset positions 5-30 custom commands 5-31 connection information, current streaming 5-17 control buttons, video and audio 3-4 COS 5-11 create certificate **5-5** 

current log 5-43 current streaming, connection information 5-17 custom commands, configuring 5-31 customization camera settings 5-29 Homepage layout window theme options 5-32 using preset themes 5-33 customizing, home window 5-33 custom language file, uploading 5-46

### D

daylight savings time exporting file configuration 5-45 uploading rules 5-46 DCHP server, obtaining IP address 2-1 DI/DO control area 3-3 diagram 1-6 window 5-19 diffserv model 5-11 digital input settings 5-19 digital output settings 5-19

## Е

email, server settings 5-38 enabling authentication 1-10 enabling HTTPS authentication 5-5 encoder accessing using web browser 2-2 determining IP address 2-1 physical description 1-2 pin definitions 1-5 rebooting 5-43 restoring 5-44 setting up behind a router 1-9 setting up on the network 1-8 setting up using a static IP address 1-10 event action 5-36 schedule 5-36 selecting a media type 5-41 selecting a server 5-41 settings 5-35 trigger 5-35 event settings, managing 5-37 exporting daylight savings time file configuration 5-45 files 5-44 language file 5-45 settings backup file 5-45

## F

files exporting 5-44 uploading 5-44 filter 5-18 filter type settings 5-18 firmware, upgrading 5-47 fixed IP address settings, using 5-9 FPS 5-25 frame rate status 5-25 front and back view CIVS-SENC-4P 1-2 CIVS-SENC-4P 1-3 FTP send media files 5-39 server settings 5-13

## Η

H.264 media options 4-1 protocol options 4-2

**Cisco Video Surveillance Standalone Encoder Series User Guide** 

#### hardware

CIVS-SENC-4P, front and back view 1-2 CIVS-SENC-8P, front and back view 1-3 physical description 1-2 pin definitions 1-5 rebooting the encoder 5-43 reset 1-8 restoring the encoder 5-44 Homepage layout window, theme options 5-32 home window customization 5-33 features 3-2 overview 3-1 using a preset theme 5-33 HTTP network settings 5-12 server settings for media files 5-39 HTTPS cancel settings 5-7 enabling HTTPS authentication settings 5-5 network settings 5-13 window 5-5

### 

I/O

pin definitions 1-5 terminal blocks 1-5 ID settings, camera 5-29 IEEE 802.1x 5-10 image settings 5-21 install certificate 5-5 IP address administrator 5-18 assigning using link-local address scheme 2-1 determining the encoder IP address 2-1 manually set up address settings 5-10 obtaining with DCHP server 2-1 setting up an encoder 1-10 using fixed address settings **5-9** 

### J

joystick buttons, assigning functions **4-4** joystick settings **4-3** 

## L

LAN, settings 5-9 language file, exporting 5-45 LED, status 1-7 link-local address scheme, assigning an IP address 2-1 list settings, access 5-16 live streaming, buffer time 4-3 live video, window 3-3 Local storage window 5-42 log current log 5-43 remote log 5-42 system log 5-41

### Μ

Maintenance window 5-43 managing client settings 4-1 privilege settings 5-3 user settings 5-4 manual trigger area 3-2 show 5-32 media options H.264 4-1 MPEG-4 4-1 media settings 5-40 motion detection how it works 5-27 window 5-26 MP4 saving options 4-2 MPEG-4 media options 4-1 protocol options 4-2

### Ν

network deployment 1-8 network type settings 5-9 Network window 5-8 setting up an encoder 1-8 storage 5-40 notifications, server settings 5-38

### Ρ

package contents 1-2 password, root password settings 5-3 pin definitions, I/O terminal blocks 1-5 preset theme 5-33 preview area 5-32 privacy mask, adding 5-22 protocol options H.264 4-2 MPEG-4 4-2

## Q

QOS, quality of service settings 5-10 QOS/DSCP, diffserv model 5-11 quadview settings 4-3 quality of service, QOS settings 5-10 quality settings, video 5-22

## R

rebooting, encoder 5-43 Recording window 5-42 remote log 5-42 removing a signed certificate 5-8 reset, encoder 1-8 restoring, encoder 5-44 root password settings 5-3 router, setting up an encoder 1-9 RS485 settings 5-28 RTSP player, accessing encoder 2-2 RTSP streaming settings 5-13

## S

saving options, MP4 4-2 Security window managing, user settings 5-4 managing privilege settings 5-3 overview 5-3 server settings email 5-38 notifications 5-38 trigger activation 5-38 settings accessing client 4-1 access list 5-16 settings backup file exporting 5-45 uploading 5-46 show manual trigger 5-32 snapshot 5-40 SNMP window 5-8 status, LED 1-7 storage local **5-42** network storage 5-40 stream 1, video quality settings 5-22 streaming buffer time 4-3 RTSP 5-13 system log 5-41 log window 5-42 parameters, View parameters window 5-43 settings 5-2 time settings 5-2 System window 5-2

# Т

theme options 5-32 time settings, system 5-2 trigger email settings 5-38 event 5-35 manual trigger area 3-2 server settings 5-38 show manual trigger 5-32 two way audio settings 5-13

## U

upgrading firmware 5-47 uploading custom language file 5-46 daylight saving time rules 5-46 files 5-44 settings backup file 5-46 user, adding 5-4 user account deleting 5-4 modifying 5-4 user privileges, managing 5-3 user settings, managing 5-4

## V

video
adding a privacy mask 5-22
live video window 3-3
quality settings for stream 1 5-22
settings 5-20
video control buttons 3-4
video stream, quadview settings 4-3
View parameters window 5-43
VLAN 802.1p model 5-11

### W

web browser, accessing encoder 2-2 window Application 5-34 Audio and video 5-19 Camera control 5-28 Camera tampering detection 5-27 DI/DO 5-19 HTTPS 5-5 Live video 3-3 Local storage 5-42 Maintenance 5-43 Recording 5-42 Security 5-3 SNMP 5-8 System 5-2 System log 5-42 View parameters 5-43

Index