



## INDEX

---

### A

aaa accounting **8**  
aaa authorization **9**  
act-count **273**  
action **11**  
action command **11**  
addr-option command **12**  
admin-connection-type **352**  
admin-duplex **345**  
admin-speed  
    show interface fc command **352**  
    show interface ib command **363**  
admin-status  
    show interface fc command **352**  
    show interface gateway command **358**  
    show interface ib command **363**  
alarm-temp **393**  
alignment-errors **348**  
Audience **13**  
Authentication, overview **3**  
authentication command **14**  
auto-negotiate  
    show interface ethernet command **344**  
    show interface fc command **352**  
auto-negotiate command  
    Ethernet interface configuration submode **17**  
    Fibre Channel interface configuration submode **18**  
    InfiniBand interface configuration submode **20**  
auto-negotiate supported **363**  
auto-negotiate-supported **352**

---

### B

bad checksums **345**  
base-version  
    show ib-agent channel-adapter command **330**  
    show ib sm node command **287**  
bcast-addr format  
    show interface ethernet command **345**  
boot-config command **22**  
bridge-group broadcast-forwarding command **28, 29**  
bridge-group command  
    Ethernet interface configuration submode **24**  
    gateway interface configuration submode **25**  
    global configuration mode **26**  
    trunk interface configuration submode **27**  
bridge-group eth-next-hop command **30**  
bridge-group gratuitous igmp command **32**  
bridge-group ib-next-hop command **33**  
bridge-group igmp command **35**  
bridge-group ip-addr command **36**  
bridge-group loop-protection command **37**  
bridge-group multicast command **38**  
bridge-group name command **39**  
bridge-group redundancy group command **40**  
bridge-group subnet-prefix command **41**  
broadcast command **42**  
broadcast-forwarding **389**

---

### C

capability mask **292**  
    show ib-agent switch command **336**  
    show interface ib command **365**

- capability-mask **366**  
 cap-mask **292**  
 card command **43**  
 card configuration mode **10**  
 carrier-sense-errors **349**  
 cdp holdtime command **44**  
 cdp run command **45**  
 cdp timer command **47**  
 certificates **381**  
 chassis-GUID **319**  
 class-version  
   show ib-agent channel-adapter command **330**  
   show ib sm node command **287**  
 clear counters command **48**  
 CLI  
   editing **9**  
   exiting **10**  
 CLI modes  
   entering **6**  
   exiting **7**  
 CLI session, starting **2**  
 clock set command **50**  
 clock summer-time command **51**  
 clock timezone command **53**  
 cold-sync-limit **276**  
 cold-sync-period **276**  
 cold-sync-timeout **276**  
 command abbreviation **8**  
 commands  
   action **11**  
   addr-option **12**  
   authentication **14**  
   auto-negotiate  
     Ethernet interface configuration submode **17**  
     Fibre Channel interface configuration  
     submode **18**  
     InfiniBand interface configuration submode **20**  
   boot-config **22**  
   bridge-group
- Ethernet interface configuration submode **24**  
 gateway interface configuration submode **25**  
 global configuration mode **26**  
 trunk interface configuration submode **27**  
 bridge-group broadcast-forwarding **28, 29**  
 bridge-group eth-next-hop **30**  
 bridge-group gratuitous-igmp **32**  
 bridge-group ib-next-hop **33**  
 bridge-group igmp command **35**  
 bridge-group ip-addr **36**  
 bridge-group loop-protection **37**  
 bridge-group multicast **38**  
 bridge-group name **39**  
 bridge-group redundancy group **40**  
 bridge-group subnet-prefix **41**  
 broadcast **42**  
 card **43**  
 cdp holdtime **44**  
 cdp run **45**  
 cdp timer **47**  
 clear counters **48**  
 clock set **50**  
 clock-summertime **51**  
 clock timezone **53**  
 configure system **14**  
 configure terminal **54**  
 copy **55**  
 correcting **9**  
 delete **60**  
 dir **64**  
 disable  
   privileged EXEC mode **67**  
   trunk interface configuration submode **68**  
 distribution-type **69**  
 enable  
   trunk interface configuration submode **72**  
   user EXEC mode **71**  
 exec **73**  
 exit **74**

fc srp-global gateway-portmask-policy restricted **91**  
 fc srp-global itl **92**  
 fc srp-global lun-policy restricted **96**  
 fc srp initiator **75**  
 fc srp initiator-wwpn **78**  
 fc srp it **80**  
 fc srp itl **82**  
 fc srp lu **86**  
 fc srp target **90**  
 ftp-server enable **97**  
 gateway **98**  
 half-duplex **99**  
 help **100**  
 history **101**  
 hostname **102**  
 ib-agent **125**  
 ib pm **103**  
 ib sm **107**  
 ib sm db-sync **112**  
 ib sm multicast ipoib **115**  
 ib sm multicast mgid **117**  
 install **127**  
 interface **129**  
 ip address  
     Ethernet interface configuration submode **131**,  
     **133**  
     Ethernet management interface **132**  
     InfiniBand management interface **134**  
 ip backup-address **135**  
 ip domain-name **137**  
 ip http **138**  
 ip name-server-one **140**  
 ip name-server-two **141**  
 ip route **142**  
 link-trap **144**  
 location **148**  
 logging **149**  
 login **150**  
 logout **151**  
 more **152**  
 mtu **154**  
 name **155**  
 ntp **156**  
 ping **157**  
 power-supply **159, 161**  
 radius-server **162**  
 redundancy-group **164**  
 redundancy-group broadcast-forwarding **165, 166**  
 redundancy-group gratuitous-igmp **167**  
 redundancy-group igmp **168**  
 redundancy-group load-balancing **169**  
 redundancy-group multicast **170**  
 redundancy-group name **171**  
 redundancy-group new-member-force-reelection **172**  
 reload **173**  
 save-log **175**  
 show authentication **180**  
 show backplane **182**  
 show boot-config **184**  
 show bridge-forwarding **186**  
 show bridge-group **188**  
 show bridge-subnets **191**  
 show card **192**  
 show card-inventory **198**  
 show cdp **202**  
 show cdp entry **204**  
 show cdp neighbors **205**  
 show clock **206**  
 show config **207**  
 show diagnostic **209**  
 show diagnostic card **211**  
 show diagnostic chassis **213**  
 show diagnostic fan **214**  
 show diagnostic fru-error **216**  
 show diagnostic interface ethernet **218**  
 show diagnostic interface fc **220**  
 show diagnostic interface ib **222**  
 show diagnostic post **224**

show diagnostic power-supply **226**  
 show fan **228**  
 show fc srp-global **249**  
 show fc srp initiator **230**  
 show fc srp initiator-wwpn-view **233**  
 show fc srp it **235**  
 show fc srp itl **237**  
 show fc srp itl-statistics **240**  
 show fc srp lu **242**  
 show fc srp statistics **245**  
 show fc srp target **247**  
 show host **250**  
 show ib-agent channel-adapter **330**  
 show ib-agent summary **332**  
 show ib-agent switch **334**  
 show ib dm ioc **252**  
 show ib dm iou **255**  
 show ib pm config **257**  
 show ib pm connection counter **259**  
 show ib pm connection monitor **262**  
 show ib pm port counter **265**  
 show ib pm port counter config **264**  
 show ib pm port monitor **267**  
 show ib pm threshold **270**  
 show ib sm configuration **272**  
 show ib sm db-sync **275**  
 show ib sm multicast **281**  
 show ib sm neighbor **284**  
 show ib sm node **286**  
 show ib sm partition **289**  
 show ib sm port **291**  
 show ib sm route-around **299**  
 show ib sm service **301**  
 show ib sm sm-info **312**  
 show ib sm subscription **313**  
 show ib sm switch **316**  
 show ib sm switch-element-route **319**  
 show ib sm switch-route **321**  
 show interface ethernet **344**  
 show interface fc **351**  
 show interface gateway **357**  
 show interface ib **362**  
 show interface mgmt-ethernet **372**  
 show interface mgmt-ib **374**  
 show interface mgmt-serial **375**  
 show inventory **376**  
 show ip **378**  
 show ip http **379**  
 show ip http server secure **381**  
 show location **383**  
 show logging **384**  
 show ntp **386**  
 show power-supply **387**  
 show redundancy-group **389**  
 show running-status **391**  
 show sensor **393**  
 show snmp **395**  
 show system **397**  
 show system mode **398**  
 show system-services **399**  
 show terminal **401**  
 show trace **402**  
 show trunk **403**  
 show user **404**  
 show version **406**  
 shutdown **410**  
 snmp-server **412**  
 speed  
     Ethernet interface configuration submode **416**  
     Fibre Channel interface configuration submode **417**  
     InfiniBand interface configuration submode **418**  
 system-mode **422**  
 tacacs-server **424**  
 telnet **427**  
 terminal **428**  
 trace **432**  
 trunk-group **434**

type **435**  
 username **437**  
 who **443**  
 write **444**

configure system command **14**  
 configure terminal command **54**

connection-type **354, 358**

Conventions **14**

copy command **55, 391**

correcting commands **9**

**D**

data-pattern command **58**  
 data-size command **59**  
 daylight savings time, setting **51**  
 default-port **317**  
 default-pri-mcast-port **317**  
 default-ttl **345**  
 deferred-transmissions **348**  
 def-mcast-NP-port **340**  
 def-mcast-pri-port **340**  
 def-non-pri-mcast-port **317**  
 delete command **60**  
 device vendor ID **335**  
 diag-code **292**

- show ib-agent switch command **336**
- show interface ib command **366**

diagnostic command **62**  
 diagnostic test, ending **421**  
 dir command **64**  
 disable command

- privileged EXEC mode **67**
- trunk interface configuration submode **68**

distribution-type command **69**

documentation

- additional publications **15**
- conventions **14**
- how to use **11**

organization **13**  
 dongle-type **364**  
 duplex type **345**

**E**

egress **340**  
 enable command

- trunk interface configuration submode **72**
- user EXEC mode **71**

errors **345**  
 ethernet **391**

Ethernet interface configuration submode **6**  
 Ethernet management configuration submode **9**

exceeded time-to-live values **345**  
 excessive-collisions **349**  
 exec command **73**  
 exit command **74**

**F**

fc **391**  
 fc-initiator-IO **354**  
 fcp-bytes-read **360**  
 fcp-bytes-written **360**  
 fcp-cmds-completed

- show interface fc command **354**
- show interface gateway command **360**

fcp-cmds-outstanding

- show interface fc command **354**
- show interface gateway command **359**

FCP commands **354**

fcp-errors

- show interface fc command **354**
- show interface gateway command **360**

fcp-initiated-ios, show interface gateway command **360**

fcs-errors **348**  
 fc srp-global gateway-portmask-policy restricted command **91**

fc srp-global it **92**  
 fc srp-global itl command **92**  
 fc srp-global lun-policy restricted command **96**  
 fc srp initiator command **75**  
 fc srp initiator-wwpn command **78**  
 fc srp it command **80**  
 fc srp itl **83**  
 fc srp itl command **82**  
 fc srp lu command **86**  
 fc srp target command **90**  
 Fibre Channel interface configuration submode **8**  
 filter-raw-pkt-in  
   show ib-agent switch command **339**  
   show interface ib command **368**  
 filter-raw-pkt-in-cap **340**  
 filter-raw-pkt-out  
   show ib-agent switch command **339**  
   show interface ib command **368**  
 filter-raw-pkt-out-cap **340**  
 format errors **345**  
 forw-datagrams **346**  
 frag-creates **346**  
 frag-fails **346**  
 frag-OKs **346**  
 frame-too-longs **349**  
 FRU **387**  
 fru number **387**  
 ftp-server enable command **97**

---

**G**

gateway **358**  
 gateway command **98**  
 gateway interface configuration mode **9**  
 GID **301**  
 GID prefix **366**  
 gid-prefix **292**  
   show ib-agent switch command **336**  
 global configuration mode

commands **3**  
 entering **6**  
 group-p\_key **389**  
 GUID **366**  
 guid-cap **295**  
   show ib-agent switch command **339**  
   show interface ib command **369**

---

**H**

half-duplex command **99**  
 help **7**  
 help command **100**  
 history command **101**  
 HOQ-life **295**  
   show ib-agent switch command **338**  
 hoq-life **368**  
 host-hoq-life-time **273**  
 hostname command **102**  
 HTTP server  
   show ip http command **379**  
   show ip http server secure command **381**

---

**I**

ib **391**  
 ib-agent **125**  
 ib-agent command **125**  
 ib pm command **103**  
 ib sm command **107**  
   ib sm db-sync command **112**  
   ib sm max-operational-vl **114**  
   ib sm multicast ipoib command **115**  
   ib sm multicast mgid command **117**  
   ib sm sl-vl-mapping **119**  
   ib sm vl-arbitration **123**  
 IEEE standard **335**  
 if-index **291**

show interface ethernet command **346**  
 show interface gateway command **359**  
**in-addr-errors** **346**  
**inbound-enf-cap** **340**  
**in-broadcast-pkts**  
     clear counters command **48**  
     show interface ethernet command **347**  
     show interface fc command **353**  
     show interface ib command **369**  
**in-delivers** **346**  
**in-discards**  
     clear counters command **48**  
     show interface ethernet command **346, 347**  
     show interface fc command **353**  
     show interface ib command **369**  
**in-enf-cap** **317**  
**in-errors**  
     show clear counters command **48**  
     show interface ethernet command **347**  
     show interface fc command **353**  
     show interface ib command **369**  
**in-filter-raw-pkt-cap** **317**  
**in-filter-raw-pkt-enforce** **295**  
**InfiniBand interface configuration submode** **7**  
**InfiniBand management configuration submode** **10**  
**ingress** **340**  
**in-hdr-errors** **345**  
**in-ib-port** **340**  
**in-multicast-pkts**  
     clear counters command **48**  
     show interface ethernet command **347**  
     show interface fc command **353**  
     show interface ib command **369**  
**in-octets**  
     clear counters command **48**  
     show interface ethernet command **347**  
     show interface fc command **353**  
     show interface ib command **369**  
**in-part-enforce** **295**  
     input-port **320**  
     in-receives **345**  
     install command **127**  
     interface command **129**  
     internal-mac-receive-errors **349**  
     internal-mac-transmit-errors **349**  
     in-ucast-pkts  
         clear counters command **48**  
         show interface ethernet command **347**  
         show interface fc command **353**  
         show interface ib command **369**  
**in-unknown-protos**  
     clear counters command **49**  
     show interface ethernet command **346, 347**  
     show interface fc command **353**  
     show interface ib command **370**  
**inventory** **376**  
**ioc-guid**  
     show interface fc command **354**  
     show interface gateway command **358**  
**ip address command**  
     Ethernet interface configuration submode **131, 133**  
     Ethernet management interface **132**  
     InfiniBand management interface **134**  
**ip backup-address command** **135**  
**IP broadcast address format** **345**  
**IP datagram** **345**  
**ip domain-name command** **137**  
**ip http command** **138**  
**ip http server command** **381**  
**ip name-server-one command** **140**  
**ip name-server-two command** **141**  
**IP option processing errors** **345**  
**ip route command** **142**  
**iterations command** **143**

---

**L**

**late-collisions** **349**

- lease **302**  
 LED test **430**  
 lft-cap **340**  
 lft-top **340**  
 LID  
   show ib-agent switch command **334**  
   show interface ib command **366**  
 lid **292**  
 LID-mask-control **273**  
 lid-per-port **317**  
 lid show ib-agent channel-adapter command **330**  
 lids-per-port **340**  
 life-time-value  
   show ib-agent switch command **340**  
   show ib sm switch command **317**  
 linear-fdb-cap **316**  
 linear-fdb-top **317**  
 linear forwarding table **340**  
 linear-frd-info **334**  
 linear unicast forwarding table **316**  
 link-down-def  
   show ib-agent switch command **338**  
   show interface ib command **367**  
 link-down-def-state **294**  
 link-events  
   show interface fc command **354**  
   show interface gateway command **359**  
 link-speed-active **293**  
   show ib-agent switch command **337**  
   show interface ib command **367**  
 link-speed-enabled **293**  
   show ib-agent switch command **337**  
   show interface ib command **367**  
 link-speed-supported  
   show ib-agent switch command **337**  
   show interface ib command **367**  
 link-state **284**  
 link-trap  
   show interface ethernet command **345**  
   show interface fc command **352**  
   show interface ib command **364**  
   link-trap command **144**  
   link-width active **337**  
   link-width-active **293**  
     show ib sm neighbor command **284**  
     show interface ib command **367**  
   link-width-enabled **293, 337, 367**  
   link-width-supported **292**  
     show ib-agent switch command **337**  
     show interface ib command **366**  
 lmc **294**  
   show interface ib command **367**  
 load-balancing **389**  
 local-node-guid **284**  
 local-node-type **284**  
 local-overrun-error **296**  
 local-phy-error **296**  
 local-phys-err  
   show ib-agent switch command **339**  
   show interface ib command **369**  
 local-port-id **284**  
 local-port-num  
   show ib-agent channel-adapter command **330**  
   show ib-agent switch command **336**  
 local-portnum **287**  
 location command **148**  
 logging **384**  
 logging command **149**  
 logging in **3**  
 login command **150**  
 logout command **151**
- 
- M**
- MAC address **344**  
 mad-retries **273**  
 MAD version **287**  
 management key **292**

- show interface ib command **366**
- master-poll-interval **273**
- master-poll-retries **273**
- master-SML-id **336**
- master-sm-lid **292**
- show interface ib command **366**
- master-sm-SL **294**
- master-sm-sl
- show ib-agent switch **338**
  - show interface ib command **368**
- max-active-sms **273**
- max-backup-sms **275**
- mcast-fdb-cap **316**
- mcast-info **334**
- member-join-state **282**
- mft-cap **340**
- MGID **281**
- mkey **292**
- show interface ib command **366**
- mkey-lease-period **292**
- show ib-agent switch command **336**
  - show interface ib command **366**
- mkey-prot-bits **294**
- mkey-protect-bits
- show ib-agent switch **338**
  - show interface ib command **367**
- mkey-violations
- show ib-agent switch **339**
  - show interface ib command **368**
- modules, specifying **10**
- more command **152**
- mtu
- show interface ethernet command **344**
  - show interface fc command **354**
  - show interface gateway command **358**
  - show interface ib command **363**
- MTU-cap **338**
- mtu-cap **295**
- show interface ib command **368**
- mtu command **154**
- multicast **389**
- Multicast Forwarding Table **340**
- multicast forwarding table **316**
- multicast group
- clear counters command **48**
  - show interface ib command **369**
- multiple-collision-frames **348**
- 
- N**
- name **155**
- name command **155**
- neighbor-MTU **338**
- neighbor-mtu **294**
- show interface ib command **367**
- new-member-force-reelection **389**
- new-session-delay **276**
- node-guid **291**
- show ib-agent switch command **340**
  - show ib sm node command **286**
  - show ib sm partition command **290**
  - show ib sm switch command **316**
- node-info **334**
- node membership **290**
- node-timeout **273**
- ntp command **156**
- num-members **389**
- num-ports
- show ib-agent channel-adapter command **331**
  - show ib sm node command **287**
- 
- O**
- octets
- clear counters command **48**
  - show interface ethernet command **347**
  - show interface fc command **353**

show interface ib command **369**  
**oper-code** **393**  
 oper-connection-type **352**  
 oper-duplex **345**  
 oper-speed  
   show interface ethernet command **345**  
   show interface fc command **352**  
   show interface ib command **364**  
**oper-status**  
   show interface ethernet command **344**  
   show interface fc command **352**  
   show interface gateway command **358**  
   show interface ib command **363**  
   show interface sm configuration command **273**  
   show power-supply command **387**  
   show sensor command **393**  
**oper-VL** **295**  
**op-VLs** **338**  
**op-vls** **368**  
**Organization** **13**  
**our-errors** **347**  
**outbound-enf-cap** **340**  
**out-broadcast-pkts**  
   clear counters command **49**  
   show interface ethernet command **347**  
   show interface fc command **354**  
   show interface ib command **370**  
**out-discards**  
   clear counters command **49**  
   show interface ethernet command **346, 347**  
   show interface fc command **354**  
   show interface ib command **370**  
**out-enf-cap** **317**  
**out-errors**  
   clear counters command **49**  
   show interface fc command **354**  
   show interface ib command **370**  
**out-filter-raw-pkt-cap** **317**  
**out-filter-raw-pkt-enforce** **295**  
**out-ib-port** **340**  
**out-multicast-pkts**  
   clear counters command **49**  
   show interface ethernet command **347**  
   show interface fc command **353**  
   show interface ib command **370**  
**out-no-routes** **346**  
**out-octets**  
   clear counters command **49**  
   show interface ethernet command **347**  
   show interface fc command **353**  
   show interface ib command **370**  
**out-part-enforce** **295**  
**output-port** **320**  
**out-requests** **346**  
**out-ucast-pkts**  
   clear counters command **49**  
   show interface ethernet command **347**  
   show interface fc command **353**  
   show interface ib command **370**  
**overrun-err**  
   show ib-agent switch command **339**  
   show interface ib command **369**

---

**P**

**p\_key**  
   show ib sm partition command **289**  
   show ib sm service command **302**  
**partition, show sm** **289**  
**partition-cap**  
   show ib-agent channel-adapter command **330**  
   show ib sm node command **287**  
**partition-enf-cap**  
   show ib-agent switch command **340**  
   show ib sm switch command **317**  
**partition key**  
   show ib sm partition command **289**  
   show ib sm service command **302**

partitions, creating and changing **107**  
 partitions node supports **335**  
 payload size **59**  
 pca number **387**  
 pca serial-number **387**  
 physical-access  
     show interface fc command **354**  
     show interface gateway command **358**  
 PhyState **365**  
 phy-state **294**  
 ping command **157**  
 pkey-enf-in  
     show ib-agent switch command **339**  
     show interface ib command **368**  
 pkey-enf-out  
     show ib-agent switch command **339**  
     show interface ib command **368**  
 pkey-info **334**  
 pkey-violations  
     show ib-agent switch command **339**  
     show interface ib command **369**  
 polling **379**  
 poll-interval **276**  
 port-GID **282**  
 port-guid  
     show ib-agent channel-adapter command **330**  
     show ib sm mode command **287**  
 port-info **334**  
 port-phys  
     show ib-agent switch command **337**  
     show interface ib command **367**  
 ports, specifying **10**  
 port-state-change  
     ib sm switch command **317**  
     show ib-agent switch command **340**  
 power supplies **387**  
 power-supply command **159, 161**  
 priority **346**  
 privileged EXEC mode **6, 2**

product serial-number **387**  
 prompt  
     changing **6**  
     customizing **5**  
 protocol-ids  
     show interface fc command **354**  
     show interface gateway command **358**  
 proxy-join-status **282**

**Q**

qkey-violation **295**  
 qkey-violations  
     show ib-agent switch command **339**  
     show interface ib command **369**

**R**

RADIUS server **180**  
 radius-server command **162**  
 random-fdb-cap **316**  
 random forwarding table **340**  
 random unicast forwarding table **316**  
 reasm max-size  
     show interface ethernet command **345**  
     show interface gateway command **359**  
 redundancy-group broadcast-forwarding command **165, 166**  
 redundancy-group command **164**  
 redundancy-group gratuitous-igmp command **167**  
 redundancy-group igmp command **168**  
 redundancy-group load-balancing command **169**  
 redundancy-group multicast command **170**  
 redundancy-group name command **171**  
 redundancy-group new-member-force-reelection command **172**  
 redundancy groups **389**  
 reload command **173**  
 remote-node-guid **284**

remote-node-type **284**  
 remote-port-id **284**  
 resp-time **296**  
 resp-timeout **369**  
 resp-time-value **339**  
 resync-interval **276**  
 revision **330**  
 rft-cap **340**  
 rlb-id **389**

**S**

sa-mad-queue-depth **273**  
 save-log command **175**  
 secure-cert-common-name **381**  
 secure-port **381**  
 secure-server **381**  
 sensor **393**  
 serial-number **387**  
 service-data **302**  
 service-id **302**  
 service-key **302**  
 service-name **302, 354**  
 session-timeout **276**  
 setting up the switch **1**  
 show aaa accounting **176**  
 show aaa authorization **178**  
 show authentication command **180**  
 show backplane command **182**  
 show boot-config command **184**  
 show bridge-forwarding command **186**  
 show bridge-group command **188**  
 show bridge-subnets command **191**  
 show card command **192**  
 show card-inventory command **198**  
 show cdp command **202**  
 show cdp entry command **204**  
 show cdp neighbors command **205**  
 show clock command **206**

show config **207**  
 show config command **207**  
 show diagnostic card command **211**  
 show diagnostic chassis command **213**  
 show diagnostic command **209**  
 show diagnostic fan command **214**  
 show diagnostic fru-error command **216**  
 show diagnostic interface ethernet command **218**  
 show diagnostic interface fc command **220**  
 show diagnostic interface ib command **222**  
 show diagnostic post command **224**  
 show diagnostic power-supply command **226**  
 show fan command **228**  
 show fc srp-global command **249**  
 show fc srp initiator command **230**  
 show fc srp initiator-wwpn-view command **233**  
 show fc srp it command **235**  
 show fc srp itl command **237**  
 show fc srp itl-statistics command **240**  
 show fc srp lu command **242**  
 show fc srp statistics command **245**  
 show fc srp target command **247**  
 show host command **250**  
 show ib-agent channel-adapter command **330**  
 show ib-agent summary command **332**  
 show ib-agent switch command **334**  
 show ib dm ioc command **252**  
 show ib dm iou command **255**  
 show ib pm config command **257**  
 show ib pm connection counter command **259**  
 show ib pm connection monitor command **262**  
 show ib pm port counter command **265**  
 show ib pm port counter config command **264**  
 show ib pm port monitor command **267**  
 show ib pm threshold command **270**  
 show ib sm configuration command **272**  
 show ib sm db-sync command **275**  
 show ib sm multicast command **281**  
 show ib sm neighbor command **284**

show ib sm node command **286**  
 show ib sm partition command **289**  
 show ib sm port command **291**  
 show ib sm route-around command **299**  
 show ib sm service command **301**  
 show ib sm sl-vl-mapping **304**  
 show ib sm sl-vl-mapping-config **306**  
 show ib sm sm-info command **312**  
 show ib sm subscription command **313**  
 show ib sm switch command **316**  
 show ib sm switch-element-route command **319**  
 show ib sm switch-route command **321**  
 show ib sm vl-arbitration **323**  
 show ib sm vl-arbitration-config **327**  
 show interface ethernet command **344**  
 show interface fc command **351**  
 show interface gateway command **357**  
 show interface ib command **362**  
 show interface mgmt-ethernet command **372**  
 show interface mgmt-ib command **374**  
 show interface mgmt-serial command **375**  
 show inventory command **376**  
 show ip command **378**  
 show ip http command **379**  
 show ip http server command **381**  
 show ip http server secure command **381**  
 show location command **383**  
 show logging command **384**  
 show ntp command **386**  
 show power-supply command **387**  
 show redundancy-group command **389**  
 show running-status command **391**  
 show sensor command **393**  
 show snmp command **395**  
 show system command **397**  
 show system-mode command **398**  
 show system-services command **399**  
 show terminal command **401**  
 show trace command **402**  
 show trunk command **403**  
 show user command **404**  
 show version command **406**  
 show vsan **408**  
 shutdown command **410**  
 shutdown-temp **393**  
 single-collision-frames **348**  
 slot-id **359**  
 SL to VL mapping **340**  
 sl-vl-map **334**  
 SM GUID, viewing **272**  
 SMPs **368**  
 SNMP receivers for link traps **395**  
 snmp-server command **412**  
 source-wwpn command **415**  
 speed command  
     Ethernet interface configuration submode **416**  
     Fibre Channel interface configuration submode **417**  
     InfiniBand interface configuration submode **418**  
 sqe-test-errors **348**  
 src-lid **319**  
 srp-bytes-read **359**  
 srp-bytes-written **359**  
 srp-cmds-completed **359**  
 srp-cmds-outstanding **359**  
 srp-connections **359**  
 srp-errors **359**  
 srp-initiated-ios **359**  
 start command **420**  
 state **293**  
     show ib sm db sync command **276**  
     show interface ib command **365, 367**  
 state of port, logical **337**  
 stop command **421**  
 subnet manager GUID, viewing **272**  
 subnet-prefix **319**  
 subnet-timeout **296**  
     show ib-agent switch command **339**  
     show interface ib command **369**

switch-hoq-life-time **273**

switch-info **334**

switch-life-time **273**

switchport trunk **145**

switchport trunk mode **146**

system-image-guid **287**

system-mode command **422**

---

## T

TACACS client **180**

tacacs-server command **424**

target-wwpn command **426**

telnet command **427**

temperature **393**

terminal **401**

terminal command **428**

terminal length command **391**

time zone, setting **53**

to-file **391**

trace **402**

trace command **432**

trap-buffer **330**

trunk group **403**

trunk-group command **434**

trunk interface configuration submode **8**

type command **435**

---

## U

user EXEC mode

  commands **2**

  entering **6**

username **437**

username command **437**

---

## V

validate command **442**

vendor-id

  show ib-agent channel-adapter command **330**

  show ib sm mode command **287**

version number mismatches **345**

VL-arb-high-cap **294**

VL-arbitration-high-cap **338**

vl-arbitration-high-cap **368**

VL-arbitration-low-cap **338**

vl-arbitration-low-cap **368**

VL-arb-low-cap **294**

VL-cap **294**

  show ib-agent switch command **338**

vl-cap **368**

VL-high-limit **294**

  show ib-agent switch command **338**

vl-high-limit **368**

VL-stall-count **295**

  show ib-agent switch command **338**

vl-stall-count **368**

voltage **387**

vsan database **440**

---

## W

wait-report-response **273**

who command **443**

write command **444**