



INDEX

A

act-count [6-97](#)
action command [2-3](#)
addr-option command [2-5](#)
admin-connection-type [6-157](#)
admin-duplex [6-149](#)
admin-speed [6-157, 6-168](#)
admin-status [6-157, 6-163, 6-168](#)
alarm-temp [6-199](#)
alignment-errors [6-152](#)
arp ethernet command [5-2](#)
authentication command [2-6](#)
auto-negotiate [6-149, 6-157](#)
auto-negotiate command [2-8](#)
auto-negotiate supported [6-168](#)
auto-negotiate-supported [6-157](#)

B

bad checksums [6-150](#)
base-version [6-111, 6-134](#)
bcast-addr format [6-149, 6-164](#)
boot-config command [2-10](#)
bridge-group command [5-3](#)
broadcast command [2-11](#)
broadcast-forwarding [6-195](#)

C

capability mask [6-116](#)
capability-mask [6-140, 6-170, 6-171](#)
cap-mask [6-116](#)

card command [2-12](#)
carrier-sense-errors [6-154](#)
cdp advertise-v2 command [2-13](#)
cdp holdtime command [2-15](#)
cdp run command [2-16](#)
cdp timer command [2-18](#)
certificates [6-187](#)
chassis-GUID [6-130](#)
class-version [6-111, 6-134](#)
clear cdp counters command [2-19](#)
clear cdp table command [2-20](#)
clock set command [2-21, 6-192](#)
cold-sync-limit [6-100](#)
cold-sync-period [6-100](#)
cold-sync-timeout [6-100](#)
command
 show version [6-212](#)
commands
 action [2-3](#)
 addr-option [2-5](#)
 arp ethernet [5-2](#)
 authentication [2-6](#)
 auto-negotiate [2-8](#)
 boot-config [2-10](#)
 bridge-group [5-3](#)
 broadcast [2-11](#)
 card [2-12](#)
 cdp advertise-v2 [2-13](#)
 cdp holdtime [2-15](#)
 cdp run [2-16](#)
 cdp timer [2-18](#)
 clear cdp counters [2-19](#)
 clear cdp table [2-20](#)

clock set **2-21**
 configure system **2-6**
 configure terminal **2-24**
 copy **2-26**
 delete **2-29**
 dir **2-31**
 disable **2-33**
 distribution-type **5-5**
 enable **2-34**
 exec **2-35**
 exit **2-36**
 fc srp-global gateway-portmask-policy restricted **3-18**
 fc srp-global itl **3-19**
 fc srp-global lun-policy restricted **3-23**
 fc srp initiator **3-2**
 fc srp initiator-wwpn **3-5**
 fc srp it **3-7**
 fc srp itl **3-9**
 fc srp lu **3-13**
 fc srp target **3-17**
 ftp-server enable **2-37**
 gateway **2-38**
 half-duplex **5-7**
 help **2-39**
 history **2-40**
 hostname **2-41**
 ib-agent **4-14**
 ib pm **4-4**
 ib sm **4-8, 4-12**
 ib sm db-sync **4-2**
 install **2-42**
 ip (internal gateway ports, ethernet ports) **5-8**
 ip http **2-44**
 link-trap **2-46**
 location **2-47**
 logging **2-48**
 login **2-49**
 logout **2-50**
 more **2-51, 2-53**
 name **2-54**
 ntp **2-55**
 ping **2-56, 2-57**
 radius-server **2-58**
 redundancy-group **5-11**
 reload **2-60**
 save-log **2-62**
 show arp ethernet **6-4**
 show authentication **6-6**
 show backplane **6-8**
 show boot-config **6-10**
 show bridge-forwarding **6-12**
 show bridge-group **6-14**
 show bridge-subnets **6-16**
 show card **6-17**
 show card-inventory **6-22**
 show cdp **6-25, 6-27**
 show cdp neighbors **6-28**
 show clock **6-29**
 show config **6-30**
 show diagnostic **6-32**
 show diagnostic card **6-33**
 show diagnostic chassis **6-35**
 show diagnostic fan **6-36**
 show diagnostic fru-error **6-38**
 show diagnostic interface ethernet **6-40**
 show diagnostic interface fc **6-42**
 show diagnostic interface ib **6-44**
 show diagnostic post **6-46**
 show diagnostic power-supply **6-48**
 show diagnostic rack-locator **6-50**
 show fan **6-52**
 show fc srp-global **6-73**
 show fc srp initiator **6-54**
 show fc srp initiator-wwpn-view **6-57**
 show fc srp it **6-59**
 show fc srp itl **6-61**
 show fc srp itl-statistics **6-64**
 show fc srp lu **6-66**

show fc srp statistics **6-69**
 show fc srp target **6-71**
 show host **6-74**
 show ib-agent channel-adapter **6-134**
 show ib-agent summary **6-136**
 show ib-agent switch **6-138**
 show ib dm ioc **6-76**
 show ib dm iou **6-79**
 show ib pm port counter **6-81, 6-83, 6-86, 6-89, 6-91**
 show ib pm port counter config **6-88**
 show ib pm threshold **6-94**
 show ib sm configuration **6-96**
 show ib sm db-sync **6-99**
 show ib sm multicast **6-106**
 show ib sm neighbor **6-108**
 show ib sm node **6-110**
 show ib sm partition **6-113**
 show ib sm port **6-115**
 show ib sm service **6-122, 6-125**
 show ib sm sm-info **6-105**
 show ib sm switch **6-127**
 show ib sm switch-element-route **6-130**
 show ib sm switch-route **6-132**
 show interface ethernet **6-148**
 show interface fc **6-156**
 show interface gateway **6-162**
 show interface ib **6-167**
 show interface mgmt-ethernet **6-177**
 show interface mgmt-ib **6-179**
 show interface mgmt-serial **6-180**
 show inventory **6-181**
 show ip **6-183**
 show ip http **6-185**
 show ip http server secure **6-187**
 show location **6-189**
 show logging **6-190**
 show ntp **6-192**
 show power-supply **6-193**
 show redundancy-group **6-195**
 show running-status **6-197**
 show sensor **6-199**
 show snmp **6-201**
 show system **6-203**
 show system mode **6-204**
 show system-services **6-205**
 show terminal **6-207**
 show trace **6-208**
 show trunk **6-209**
 show user **6-210**
 shutdown **2-63**
 snmp-server **2-66**
 speed (Fibre Channel) **2-69**
 system-mode **2-71**
 telnet **2-73**
 terminal **2-74**
 trace **2-76**
 trunk-group **5-12**
 type **2-78**
 username **2-80**
 who **2-83**
 write **2-84**
 configure system command **2-6**
 configure terminal command **2-24**
 connection-type **6-160, 6-163**
 copy command **2-26, 6-197**

D

data-pattern command **219**
 data-size command **220**
 default-port **6-128**
 default-pri-mcast-port **6-128**
 default-ttl **6-150**
 deferred-transmissions **6-153**
 def-mcast-NP-port **6-144**
 def-mcast-pri-port **6-144**
 def-non-pri-mcast-port **6-128**
 delete command **2-29**

device vendor ID **6-139**
 diag-code **6-116, 6-140, 6-171**
 diagnostic command **217**
 diagnostic test **215**
 ending **224**
 dir command **2-31**
 disable command **2-33**
 distribution-type command **5-5**
 documentation
 additional publications **xiii**
 conventions **xii**
 organization **xi**
 dongle-type **6-169**
 duplex type **6-149**

E

egress **6-144**
 enable command **2-34**
 errors **6-150**
 ethernet **6-197**
 exceeded time-to-live values **6-150**
 excessive-collisions **6-153**
 exec command **2-35**
 exit command **2-36**

F

fc **6-197**
 fc-initiator-IO **6-159**
 fcp-bytes-read **6-165**
 fcp-bytes-written **6-165**
 fcp-cmds-completed **6-159, 6-165**
 fcp-cmds-outstanding **6-159, 6-165**
 FCP commands **6-159**
 fcp-errors **6-159, 6-165**
 fcp-initiated-ios **6-165**
 fcs-errors **6-152**

fc srp-global gateway-portmask-policy restricted command **3-18**
 fc srp-global itl command **3-19**
 fc srp-global lun-policy restricted command **3-23**
 fc srp initiator command **3-2**
 fc srp initiator-wwpn command **3-5**
 fc srp it command **3-7**
 fc srp itl **3-10**
 fc srp itl command **3-9**
 fc srp lu command **3-13**
 fc srp target command **3-17**
 filter-raw-pkt-in **6-143, 6-173**
 filter-raw-pkt-in-cap **6-144**
 filter-raw-pkt-out **6-143, 6-173**
 filter-raw-pkt-out-cap **6-144**
 format errors **6-150**
 forw-datagrams **6-150**
 frag-creates **6-151**
 frag-fails **6-151**
 frag-OKs **6-151**
 frame-too-long **6-154**
 FRU **6-193**
 fru number **6-193**
 ftp-server enable command **2-37**

G

gateway **6-163**
 gateway command **2-38**
 generic value **6-126**
 GID **6-122, 6-123**
 GID prefix **6-170**
 gid-prefix **6-116, 6-140**
 Global Configuration mode **1-5**
 group-p_key **6-195**
 GUID **6-170**
 guid-cap **6-119, 6-143, 6-173**

H

half-duplex command [5-7](#)
HCA [6-136](#)
 help command [2-39](#)
 history command [2-40](#)
HOQ-life [6-118, 6-142](#)
hoq-life [6-173](#)
host-hoq-life-time [6-97](#)
hostname command [2-41](#)
HTTP server [6-185, 6-187](#)

I

ib [6-197](#)
ib-agent command [4-14](#)
ib pm command [4-4](#)
ib sm command [4-8, 4-12](#)
ib sm db-sync command [4-2](#)
IEEE standard [6-139](#)
if-index [6-115, 6-151, 6-164](#)
in-addr-errors [6-150](#)
inbound-enf-cap [6-144](#)
in-broadcast-pkts [6-151, 6-158, 6-174](#)
in-delivers [6-150](#)
in-discards [6-150, 6-151, 6-158, 6-174](#)
in-enf-cap [6-128](#)
in-errors [6-151, 6-158, 6-174](#)
in-filter-raw-pkt-cap [6-128](#)
in-filter-raw-pkt-enforce [6-118](#)
ingress [6-144](#)
in-hdr-errors [6-150](#)
in-ib-port [6-144](#)
in-multicast-pkts [6-151, 6-158, 6-174](#)
in-octets [6-151, 6-158, 6-174](#)
in-part-enforce [6-118](#)
input-port [6-131](#)
in-receives [6-150](#)
install command [2-42](#)

internal-mac-receive-errors [6-154](#)
internal-mac-transmit-errors [6-153](#)
in-ucast-pkts [6-151, 6-158, 6-174](#)
in-unknown-protos [6-150, 6-152, 6-158, 6-174](#)
inventory [6-181](#)
ioc-guid [6-159, 6-163](#)
IP broadcast address format [6-149](#)
ip command, internal gateway ports and ethernet ports [5-8](#)
IP datagram [6-150](#)
ip http command [2-44](#)
ip http server command [6-187](#)
IP option processing errors [6-150](#)
iterations command [221](#)

L

late-collisions [6-153](#)
lease [6-123](#)
LED test [226](#)
lft-cap [6-144](#)
lft-top [6-144](#)
LID [6-125, 6-138, 6-170](#)
lid [6-116, 6-134](#)
LID-mask-control [6-97](#)
lid-per-port [6-128](#)
LID range [6-126](#)
lids-per-port [6-144](#)
life-time-value [6-128, 6-144](#)
linear-fdb-cap [6-127](#)
linear-fdb-top [6-128](#)
linear forwarding table [6-144](#)
linear-frd-info [6-138](#)
linear unicast forwarding table [6-127](#)
link-down-def [6-141, 6-172](#)
link-down-def-state [6-117](#)
link-events [6-159, 6-164](#)
link-speed-active [6-117](#)
link-speed-enabled [6-117](#)

link-speed-supported **6-141, 6-171**
 link-state **6-108**
 link-trap **6-149, 6-158, 6-169**
 link-trap command **2-46**
 link-width active **6-141**
 link-width-active **6-108, 6-116, 6-171**
 link-width-enabled **6-116, 6-141, 6-171**
 link-width-supported **6-116, 6-141, 6-171**
 lmc **6-117, 6-172**
 load-balancing **6-195**
 local-node-guid **6-108**
 local-node-type **6-108**
 local-overrun-error **6-119**
 local-phy-error **6-119**
 local-phys-err **6-143, 6-174**
 local-port-id **6-108**
 local-port-num **6-134, 6-140**
 local-portnum **6-111**
 location command **2-47**
 logging **6-190**
 logging command **2-48**
 login command **2-49**
 logout command **2-50**
 ls-active **6-142, 6-172**
 ls-active-enabled **6-142, 6-172**

M

MAC address **6-149**
 mad-retries **6-97**
 MAD version **6-111**
 management key **6-116, 6-170**
 mask **6-164**
 master-poll-interval **6-97**
 master-poll-retries **6-97**
 master-SML-id **6-140**
 master-sm-lid **6-116, 6-170**
 master-SMSL **6-142**
 master-sm-SL **6-117**

master-sm-sl **6-172**
 max-active-sms **6-97**
 max-backup-sms **6-99**
 mcast-fdb-cap **6-127**
 mcast-info **6-138**
 member-join-state **6-107**
 mft-cap **6-144**
 MGID **6-106**
 mkey **6-116, 6-170**
 mkey-lease-period **6-116, 6-140, 6-171**
 mkey-prot-bits **6-117**
 mkey-protect-bits **6-141, 6-172**
 mkey-violations **6-143, 6-173**
 more command **2-51, 2-53, 6-197**
 mtu **6-149, 6-160, 6-163, 6-168**
 MTU-cap **6-142**
 mtu-cap **6-118, 6-173**
 multicast **6-195**
 Multicast Forwarding Table **6-144**
 multicast forwarding table **6-127**
 multicast group **6-174**
 multiple-collision-frames **6-153**

N

name **2-54**
 name command **2-54**
 neighbor-MTU **6-142**
 neighbor-mtu **6-117, 6-172**
 new-member-force-reelection **6-195**
 new-session-delay **6-100**
 node-guid **6-110, 6-113, 6-115, 6-125, 6-127, 6-144**
 node-info **6-138**
 node membership **6-114**
 node-timeout **6-97**
 no ip http server command **6-185, 6-187**
 ntp command **2-55, 6-192**
 num-members **6-195**
 num-ports **6-111, 6-135**

O

octets **6-151, 6-158, 6-174**
 oper-code **6-199**
 oper-connection-type **6-158**
 oper-duplex **6-149**
 oper-speed **6-149, 6-157, 6-168**
 oper-status **6-97, 6-149, 6-157, 6-163, 6-168, 6-193, 6-199**
 oper-VL **6-118**
 op-VLs **6-142**
 op-vls **6-173**
 our-errors **6-152**
 outbound-enf-cap **6-144**
 out-broadcast-pkts **6-152, 6-159, 6-175**
 out-discards **6-150, 6-152, 6-159, 6-175**
 out-enf-cap **6-128**
 out-errors **6-159, 6-175**
 out-filter-raw-pkt-cap **6-128**
 out-filter-raw-pkt-enforce **6-118**
 out-ib-port **6-144**
 out-multicast-pkts **6-152, 6-159, 6-175**
 out-no-routes **6-151**
 out-octets **6-152, 6-159, 6-174**
 out-part-enforce **6-118**
 output-port **6-131**
 out-requests **6-150**
 out-ucast-pkts **6-152, 6-159, 6-174**
 overrun-err **6-143, 6-174**

P

p_key **6-113, 6-123**
 partition
 show sm **6-113**
 partition-cap **6-111, 6-134**
 partition-enf-cap **6-128, 6-144**
 partition key **6-113, 6-123**
 partitions, creating and changing **4-8, 4-12**
 partitions node supports **6-139**

payload size **220**
 pca number **6-193**
 pca serial-number **6-193**
 physical-access **6-160, 6-163**
 PhyState **6-170**
 phy-state **6-117**
 ping command **2-56, 2-57**
 pkey-enf-in **6-142, 6-173**
 pkey-enf-out **6-143, 6-173**
 pkey-info **6-138**
 pkey-violations **6-143, 6-173**
 polling **6-185**
 poll-interval **6-100**
 port-GID **6-106**
 port-guid **6-111, 6-134**
 port-info **6-138**
 port-phys **6-141, 6-172**
 port-state-change **6-128, 6-144**
 power supplies **6-193**
 priority **6-151**
 product serial-number **6-193**
 prompt **1-5**
 customizing **1-4**
 protocol-ids **6-160, 6-163**
 proxy-join-status **6-107**

Q

qkey-violation **6-119**
 qkey-violations **6-143, 6-173**

R

RADIUS server **6-6**
 radius-server command **2-58**
 random-fdb-cap **6-127**
 random forwarding table **6-144**
 random unicast forwarding table **6-127**

reasm max-size **6-150, 6-164**
 redundancy-group command **5-11**
 redundancy groups **6-195**
 reload command **2-60**
 remote-node-guid **6-108**
 remote-node-type **6-108**
 remote-port-id **6-108**
 resp-time **6-119**
 resp-timeout **6-174**
 resp-time-value **6-143**
 resync-interval **6-100**
 revision **6-134**
 rft-cap **6-144**
 rlb-id **6-195**

S

sa-mad-queue-death **6-97**
 save-log command **2-62**
 secure-cert-common-name **6-187**
 secure-port **6-187**
 secure-server **6-187**
 sensor **6-199**
 serial-number **6-193**
 service-data **6-123**
 service-id **6-123**
 service-key **6-123**
 service-name **6-123, 6-159**
 session-timeout **6-99**
 show arp ethernet command **6-4**
 show authentication command **6-6**
 show backplane command **6-8**
 show boot-config command **6-10**
 show bridge-forwarding command **6-12**
 show bridge-group command **6-14**
 show bridge-subnets command **6-16**
 show card command **6-17**
 show card-inventory command **6-22**
 show cdp command **6-25**

show cdp entry command **6-27**
 show cdp neighbors command **6-28**
 show clock command **6-29**
 show config **6-30**
 show config command **6-30**
 show diagnostic card command **6-33**
 show diagnostic chassis command **6-35**
 show diagnostic command **6-32**
 show diagnostic fan command **6-36**
 show diagnostic fru-error command **6-38**
 show diagnostic interface ethernet command **6-40**
 show diagnostic interface fc command **6-42**
 show diagnostic interface ib command **6-44**
 show diagnostic post command **6-46**
 show diagnostic power-supply command **6-48**
 show diagnostic rack-locator command **6-50**
 show fan command **6-52**
 show fc srp-global command **6-73**
 show fc srp initiator command **6-54**
 show fc srp initiator-wwpn-view command **6-57**
 show fc srp it command **6-59**
 show fc srp itl command **6-61**
 show fc srp itl-statistics command **6-64**
 show fc srp lu command **6-66**
 show fc srp statistics command **6-69**
 show fc srp target command **6-71**
 show host command **6-74**
 show ib-agent channel-adapter command **6-134**
 show ib-agent summary command **6-136**
 show ib-agent switch command **6-138**
 show ib dm ioc command **6-76**
 show ib dm iou command **6-79**
 show ib pm port counter command **6-81, 6-83, 6-86, 6-89, 6-91**
 show ib pm port counter config command **6-88**
 show ib pm threshold command **6-94**
 show ib sm configuration command **6-96**
 show ib sm db-sync command **6-99**
 show ib sm multicast command **6-106**
 show ib sm neighbor command **6-108**

show ib sm node command **6-110**
 show ib sm partition command **6-113**
 show ib sm port command **6-115**
 show ib sm service command **6-122, 6-125**
 show ib sm sm-info command **6-105**
 show ib sm switch command **6-127**
 show ib sm switch-element-route command **6-130**
 show ib sm switch-route command **6-132**
 show interface ethernet command **6-148**
 show interface fc command **6-156**
 show interface gateway command **6-162**
 show interface ib command **6-167**
 show interface mgmt-ethernet command **6-177**
 show interface mgmt-ib command **6-179**
 show interface mgmt-serial command **6-180**
 show inventory command **6-181**
 show ip command **6-183**
 show ip http command **6-185**
 show ip http server secure command **6-187**
 show location command **6-189**
 show logging command **6-190**
 show ntp command **6-192**
 show power-supply command **6-193**
 show redundancy-group command **6-195**
 show running-status command **6-197**
 show sensor command **6-199**
 show snmp command **6-201**
 show systemcommand **6-203**
 show system-mode command **6-204**
 show system-services command **6-205**
 show terminal command **6-207**
 show trace command **6-208**
 show trunk command **6-209**
 show user command **6-210**
 show version command **6-212**
 shutdown command **2-63**
 shutdown-temp **6-199**
 single-collision-frames **6-153**
 slot-id **6-164**
 SL to VL mapping **6-144**
 sl-vl-map **6-138, 6-143**
 SM GUID, viewing **6-96**
 SMPs **6-173**
 SNMP receivers for link traps **6-201**
 snmp-server command **2-66**
 source-wwpn command **222**
 speed command, Fibre Channel **2-69**
 sqe-test-errors **6-153**
 src-lid **6-130**
 srp-bytes-read **6-164**
 srp-bytes-written **6-164**
 srp-cmds-completed **6-164**
 srp-cmds-outstanding **6-164**
 srp-connections **6-165**
 srp-errors **6-164**
 srp-initiated-ios **6-164**
 start command **223**
 state **6-100, 6-117, 6-170, 6-172**
 state of port
 logical **6-141**
 stop command **224**
 subnet manager GUID, viewing **6-96**
 subnet mask **6-164**
 subnet-prefix **6-130**
 subnet-timeout **6-119, 6-143, 6-173**
 switch-hoq-life-time **6-97**
 switch-info **6-138**
 switch-life-time **6-97**
 system-image-guid **6-111**
 system-mode command **2-71**

T

TACACS client **6-6**
 target-wwpn command **225**
 telnet command **2-73**
 temperature **6-199**
 terminal **6-207**

terminal command **2-74**
terminal length command **6-197**
test command **226**
to-file **6-197**
trace **6-208**
trace command **2-76**
trap-buffer **6-135**
trap-num-device-id **6-126**
trunk group **6-209**
trunk-group command **5-12**
type command **2-78**

U

username command **2-80**

V

validate command **227**
vendor-id **6-111, 6-134**
version number mismatches **6-150**
VL-arb-high-cap **6-118**
VL-arbitration-high-cap **6-142**
vl-arbitration-high-cap **6-172**
VL-arbitration-low-cap **6-142**
vl-arbitration-low-cap **6-173**
VL-arb-low-cap **6-118**
VL-cap **6-117, 6-142**
vl-cap **6-172**
VL-high-limit **6-117, 6-142**
vl-high-limit **6-172**
VL-stall-count **6-118, 6-142**
vl-stall-count **6-173**
voltage **6-193**

W

wait-report-response **6-97**