



A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-546](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-98](#)
 MAC, displaying [2-342](#)
access map configuration mode [2-171](#)
access mode [2-498](#)
access ports [2-498](#)
ACEs [2-54](#), [2-232](#)
ACLs
 deny [2-52](#)
 displaying [2-266](#)
 for non-IP protocols [2-151](#)
 IP [2-98](#)
 matching [2-171](#)
 on Layer 2 interfaces [2-98](#)
 permit [2-230](#)
action command [2-6](#)
address aliasing [2-221](#)
aggregate-port learner [2-226](#)
allowed VLANs [2-512](#)
apply command [2-546](#)
archive download-sw command [2-8](#)
archive tar command [2-11](#)

archive upload-sw command [2-14](#)
audience [xv](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-77](#)
autonegotiation of duplex mode [2-84](#)
auto qos voip command [2-16](#)

B

BackboneFast, for STP [2-434](#)
backup interfaces
 configuring [2-493](#)
 displaying [2-313](#)
boot (boot loader) command [A-2](#)
boot bootlpr command [2-20](#)
boot config-file command [2-21](#)
boot enable-break command [2-22](#)
boot helper command [2-23](#)
boot helper-config file command [2-24](#)
booting
 Cisco IOS image [2-27](#)
 displaying environment variables [2-273](#)
 interrupting [2-22](#)
 manually [2-25](#)
boot loader
 accessing [A-1](#)

booting

- Cisco IOS image [A-2](#)
- helper image [2-23](#)

directories

- creating [A-15](#)
- displaying a list of [A-7](#)
- removing [A-19](#)

displaying

- available commands [A-12](#)
- memory heap utilization [A-14](#)
- version [A-26](#)

environment variables

- described [A-20](#)
- displaying settings [A-20](#)
- location of [A-21](#)
- setting [A-20](#)
- unsetting [A-24](#)

files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4, A-16, A-23](#)
- renaming [A-17](#)

file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

loading helper images [A-13](#)

resetting the system [A-18](#)

boot manual command [2-25](#)

boot private-config-file command [2-26](#)

boot system command [2-27](#)

BPDU filtering, for spanning tree [2-435, 2-470](#)

BPDU guard, for spanning tree [2-437, 2-470](#)

broadcast storm control [2-488](#)

C

cat (boot loader) command [A-4](#)

caution, description [xvi](#)

channel-group command [2-28](#)

channel-protocol command [2-31](#)

Cisco SoftPhone

- auto-QoS configuration [2-16](#)
- trusting packets sent from [2-213](#)

class command [2-32](#)

class-map command [2-34](#)

class maps

- creating [2-34](#)
- defining the match criteria [2-173](#)
- displaying [2-277](#)

class of service

- See CoS

clear dot1x command [2-36](#)

clear eap sessions command [2-37](#)

clear lacp command [2-38](#)

clear mac address-table command [2-39, 2-41](#)

clear pagp command [2-42](#)

clear port-security command [2-43](#)

clear spanning-tree counters command [2-45](#)

clear spanning-tree detected-protocols command [2-46](#)

clear vmps statistics command [2-47](#)

clear vtp counters command [2-48](#)

clusters

- SNMP trap [2-425](#)

command modes defined [1-1](#)

configuration, initial

- See getting started guide and hardware installation guide

configuration files

- password recovery disable considerations [A-1](#)
- specifying the name [2-21, 2-26](#)

configuring multiple interfaces [2-95](#)

config-vlan mode
 commands [2-533](#)
 description [1-4](#)
 entering [2-532](#)
 summary [1-2](#)

conventions

 command [xv](#)
 for examples [xvi](#)
 publication [xv](#)
 text [xv](#)

copy (boot loader) command [A-5](#)

CoS

 assigning default value to incoming packets [2-183](#)
 overriding the incoming value [2-183](#)

CoS-to-DSCP map [2-187](#)

CPU ASIC statistics, displaying [2-278](#)

crashinfo files [2-90](#)

D

debug auto qos command [B-2](#)

debug backup command [B-4](#)

debug dot1x command [B-5](#)

debug dtp command [B-7](#)

debug eap command [B-8](#)

debug etherchannel command [B-10](#)

debug interface command [B-12](#)

debug ip igmp filter command [B-14](#)

debug ip igmp max-groups command [B-15](#)

debug ip igmp snooping command [B-16](#)

debug lacp command [B-17](#)

debug mac-notification command [B-18](#)

debug matm command [B-19](#)

debug matm move update command [B-20](#)

debug monitor command [B-21](#)

debug mvrdbg command [B-22](#)

debug nvram command [B-23](#)

debug pagp command [B-24](#)

debug platform acl command [B-25](#)

debug platform backup interface command [B-26](#)

debug platform cpu-queues command [B-27](#)

debug platform dot1x command [B-29](#)

debug platform etherchannel command [B-30](#)

debug platform forw-tcam command [B-31](#)

debug platform ip dhcp command [B-32](#)

debug platform ip igmp snooping command [B-33](#)

debug platform led command [B-35](#)

debug platform matm command [B-36](#)

debug platform messaging application command [B-38](#)

debug platform phy command [B-39](#)

debug platform pm command [B-41](#)

debug platform port-asic command [B-43](#)

debug platform port-security command [B-44](#)

debug platform qos-acl-tcam command [B-45](#)

debug platform remote-commands command [B-46](#)

debug platform resource-manager command [B-47](#)

debug platform snmp command [B-48](#)

debug platform span command [B-49](#)

debug platform supervisor-asic command [B-50](#)

debug platform sw-bridge command [B-51](#)

debug platform tcam command [B-52](#)

debug platform udd command [B-54](#)

debug platform vlan command [B-55](#)

debug pm command [B-56](#)

debug port-security command [B-58](#)

debug qos-manager command [B-59](#)

debug spanning-tree backbonefast command [B-62](#)

debug spanning-tree bpdu command [B-63](#)

debug spanning-tree bpdu-opt command [B-64](#)

debug spanning-tree command [B-60](#)

debug spanning-tree mstp command [B-65](#)

debug spanning-tree switch command [B-67](#)

debug spanning-tree uplinkfast command [B-69](#)

debug sw-vlan command [B-70](#)

debug sw-vlan ifs command [B-72](#)

debug sw-vlan notification command [B-74](#)

debug sw-vlan vtp command [B-76](#)

debug udd command [B-78](#)

- debug vqpc command [B-80](#)
- define interface-range command [2-49](#)
- delete (boot loader) command [A-6](#)
- delete command [2-51](#)
- deny command [2-52](#)
- detect mechanism, causes [2-86](#)
- device manager requirements [xvi](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-105](#)
 - enabling
 - on a VLAN [2-112](#)
 - option 82 [2-103, 2-105](#)
 - trust on an interface [2-110](#)
 - error recovery timer [2-88](#)
 - rate limiting [2-109](#)
- DHCP snooping binding database
 - bindings
 - displaying [2-325](#)
 - displaying
 - binding entries [2-325](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-51](#)
- documentation, related [xvi](#)
- document conventions [xv](#)
- domain name, VTP [2-555, 2-559](#)
- dot1x auth-fail max-attempts [2-57](#)
- dot1x auth-fail vlan [2-59](#)
- dot1x command [2-55](#)
- dot1x control-direction command [2-61](#)
- dot1x critical global configuration command [2-63](#)
- dot1x critical interface configuration command [2-65](#)
- dot1x default command [2-67](#)
- dot1x guest-vlan command [2-68](#)
- dot1x host-mode command [2-70](#)
- dot1x initialize command [2-71](#)
- dot1x mac-auth-bypass command [2-72](#)
- dot1x max-reauth-req command [2-74](#)
- dot1x max-req command [2-75](#)
- dot1x pae command [2-76](#)
- dot1x port-control command [2-77](#)
- dot1x re-authenticate command [2-79](#)
- dot1x reauthentication command [2-80](#)
- dot1x timeout command [2-81](#)
- dropping packets, with ACL matches [2-6](#)
- DSCP-to-CoS map [2-187](#)
- DSCP-to-DSCP-mutation map [2-187](#)
- DTP [2-499](#)
- DTP flap
 - error detection for [2-86](#)
 - error recovery timer [2-88](#)
- DTP negotiation [2-500](#)
- dual-purpose uplink ports
 - selecting the type [2-177](#)
- duplex command [2-84](#)
- dynamic-access ports
 - configuring [2-491](#)
 - restrictions [2-492](#)
- dynamic auto VLAN membership mode [2-498](#)
- dynamic desirable VLAN membership mode [2-498](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-75](#)
 - response time before retransmitting [2-81](#)
- encapsulation methods [2-512](#)
- environment variables, displaying [2-273](#)
- errdisable detect cause command [2-86](#)
- errdisable recovery command [2-88](#)
- error conditions, displaying [2-304](#)
- error disable detection [2-86](#)
- error-disabled interfaces, displaying [2-313](#)

EtherChannel

- assigning Ethernet interface to channel group [2-28](#)
- creating port-channel logical interface [2-93](#)
- debug EtherChannel/PAGP, display [B-10](#)
- debug platform-specific events, display [B-30](#)
- displaying [2-308](#)
- interface information, displaying [2-313](#)

LACP

- clearing channel-group information [2-38](#)
- debug messages, display [B-17](#)
- displaying [2-336](#)
- modes [2-28](#)
- port priority for hot-standby ports [2-139](#)
- restricting a protocol [2-31](#)
- system priority [2-141](#)

load-distribution methods [2-240](#)

PAGP

- aggregate-port learner [2-226](#)
- clearing channel-group information [2-42](#)
- debug messages, display [B-24](#)
- displaying [2-385](#)
- error detection for [2-86](#)
- error recovery timer [2-88](#)
- learn method [2-226](#)
- modes [2-28](#)
- physical-port learner [2-226](#)
- priority of interface for transmitted traffic [2-228](#)

Ethernet controller, internal register display [2-280](#)

Ethernet statistics, collecting [2-253](#)

- examples, conventions for [xvi](#)
- exception crashinfo command [2-90](#)
- exit command [2-546](#)
- extended-range VLANs
 - and allowed VLAN list [2-512](#)
 - and pruning-eligible list [2-512](#)
 - configuring [2-532](#)
- extended system ID for STP [2-443](#)

F

- file name, VTP [2-555](#)
- files, deleting [2-51](#)
- flash_init (boot loader) command [A-9](#)
- Flex Links
 - configuring [2-493](#)
 - displaying [2-313](#)
- flowcontrol command [2-91](#)
- format (boot loader) command [A-10](#)
- forwarding packets, with ACL matches [2-6](#)
- forwarding results, display [C-6](#)
- frame forwarding information, displaying [C-6](#)
- fsck (boot loader) command [A-11](#)

G

- global configuration mode [1-2, 1-3](#)

H

- hardware ACL statistics [2-266](#)
- help (boot loader) command [A-12](#)
- hierarchical policy maps [2-238](#)
- host connection, port configuration [2-497](#)

I

IEEE 802.1x

- and switchport modes [2-499](#)
- violation error recovery [2-88](#)
- See also port-based authentication

IEEE 802.1X Port Based Authentication

- enabling guest VLAN supplicant [2-58](#)

IGMP filters

- applying [2-115](#)
- debug messages, display [B-14](#)

IGMP groups, setting maximum [2-116](#)

IGMP maximum groups, debugging [B-15](#)

IGMP profiles

creating [2-118](#)

displaying [2-327](#)

IGMP snooping

adding ports as a static member of a group [2-135](#)

displaying [2-328, 2-332, 2-334](#)

enabling [2-120](#)

enabling the configurable-leave timer [2-122](#)

enabling the Immediate-Leave feature [2-131](#)

flooding query count [2-128](#)

interface topology change notification behavior [2-130](#)

multicast table [2-330](#)

querier [2-124](#)

query solicitation [2-128](#)

report suppression [2-126](#)

switch topology change notification behavior [2-128](#)

images

See software images

Immediate-Leave feature, MVR [2-223](#)

immediate-leave processing [2-131](#)

initial configuration

See getting started guide and hardware installation guide

interface configuration mode [1-2, 1-4](#)

interface port-channel command [2-93](#)

interface range command [2-95](#)

interface-range macros [2-49](#)

interfaces

assigning Ethernet interface to channel group [2-28](#)

configuring [2-84](#)

configuring multiple [2-95](#)

creating port-channel logical [2-93](#)

debug messages, display [B-12](#)

disabling [2-423](#)

displaying the MAC address table [2-353](#)

restarting [2-423](#)

interface speed, configuring [2-480](#)

interface vlan command [2-97](#)

internal registers, displaying [2-280, 2-288](#)

Internet Group Management Protocol

See IGMP

invalid GBIC

error detection for [2-86](#)

error recovery timer [2-88](#)

ip access-group command [2-98](#)

ip address command [2-100](#)

IP addresses, setting [2-100](#)

IP address matching [2-171](#)

IP DHCP snooping

See DHCP snooping

ip dhcp snooping command [2-102](#)

ip dhcp snooping information option allow-untrusted command [2-105](#)

ip dhcp snooping information option command [2-103](#)

ip dhcp snooping information option format remote-id command [2-107](#)

ip dhcp snooping limit rate command [2-109](#)

ip dhcp snooping trust command [2-110](#)

ip dhcp snooping verify command [2-111](#)

ip dhcp snooping vlan command [2-112](#)

ip dhcp snooping vlan information option format-type circuit-id string command [2-113](#)

ip igmp filter command [2-115](#)

ip igmp max-groups command [2-116](#)

ip igmp profile command [2-118](#)

ip igmp snooping command [2-120](#)

ip igmp snooping last-member-query-interval command [2-122](#)

ip igmp snooping querier command [2-124](#)

ip igmp snooping report-suppression command [2-126](#)

ip igmp snooping tcn command [2-128](#)

ip igmp snooping tcn flood command [2-130](#)

ip igmp snooping vlan immediate-leave command [2-131](#)

ip igmp snooping vlan mrouter command [2-133](#)

ip igmp snooping vlan static command [2-135](#)

IP multicast addresses [2-220](#)

IP phones

auto-QoS configuration [2-16](#)

trusting packets sent from [2-213](#)

IP-precedence-to-DSCP map [2-187](#)

IP source guard

displaying

dynamic binding entries only [2-325](#)

ip ssh command [2-137](#)

J

jumbo frames

See MTU

L

LACP

See EtherChannel

lacp port-priority command [2-139](#)

lacp system-priority command [2-141](#)

Layer 2 traceroute

IP addresses [2-523](#)

MAC addresses [2-520](#)

line configuration mode [1-2, 1-5](#)

Link Aggregation Control Protocol

See EtherChannel

link flap

error detection for [2-86](#)

error recovery timer [2-88](#)

link state group command [2-143](#)

link state track command [2-145](#)

load_helper (boot loader) command [A-13](#)

load-distribution methods for EtherChannel [2-240](#)

logging event command [2-146](#)

logging file command [2-147](#)

logical interface [2-93](#)

loopback error

detection for [2-86](#)

recovery timer [2-88](#)

loop guard, for spanning tree [2-445, 2-449](#)

M

mac access-group command [2-149](#)

MAC access-groups, displaying [2-342](#)

MAC access list configuration mode [2-151](#)

mac access-list extended command [2-151](#)

MAC access lists [2-52](#)

MAC addresses

displaying

aging time [2-348](#)

all [2-346](#)

dynamic [2-351](#)

MAC address-table move updates [2-355](#)

notification settings [2-357](#)

number of addresses in a VLAN [2-349](#)

per interface [2-353](#)

per VLAN [2-361](#)

static [2-359](#)

static and dynamic entries [2-344](#)

dynamic

aging time [2-153](#)

deleting [2-39](#)

displaying [2-351](#)

enabling MAC address notification [2-156](#)

enabling MAC address-table move update [2-154](#)

matching [2-171](#)

static

adding and removing [2-158](#)

displaying [2-359](#)

dropping on an interface [2-159](#)

tables [2-346](#)

MAC address notification, debugging [B-18](#)

mac address-table aging-time [2-149](#)

mac address-table aging-time command [2-153](#)

mac address-table move update command [2-154](#)

mac address-table notification command [2-156](#)

mac address-table static command [2-158](#)

mac address-table static drop command [2-159](#)

macro apply command [2-161](#)

- macro description command [2-164](#)
- macro global command [2-165](#)
- macro global description command [2-168](#)
- macro name command [2-169](#)
- macros
 - adding a description [2-164](#)
 - adding a global description [2-168](#)
 - applying [2-165](#)
 - creating [2-169](#)
 - displaying [2-387](#)
 - interface range [2-49, 2-95](#)
 - specifying parameter values [2-165](#)
 - tracing [2-165](#)
- manual
 - audience [xv](#)
 - purpose of [xv](#)
- maps
 - QoS
 - defining [2-187](#)
 - displaying [2-371](#)
 - VLAN
 - creating [2-543](#)
 - defining [2-171](#)
 - displaying [2-415](#)
- match (access-map configuration) command [2-171](#)
- match (class-map configuration) command [2-173](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-175](#)
- media-type command [2-177](#)
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- mls qos aggregate-policer command [2-181](#)
- mls qos command [2-179](#)
- mls qos cos command [2-183](#)
- mls qos dscp-mutation command [2-185](#)
- mls qos map command [2-187](#)
- mls qos queue-set output buffers command [2-191](#)
- mls qos queue-set output threshold command [2-193](#)
- mls qos rewrite ip dscp command [2-195](#)
- mls qos srr-queue input bandwidth command [2-197](#)
- mls qos srr-queue input buffers command [2-199](#)
- mls qos-srr-queue input cos-map command [2-201](#)
- mls qos srr-queue input dscp-map command [2-203](#)
- mls qos srr-queue input priority-queue command [2-205](#)
- mls qos srr-queue input threshold command [2-207](#)
- mls qos-srr-queue output cos-map command [2-209](#)
- mls qos srr-queue output dscp-map command [2-211](#)
- mls qos trust command [2-213](#)
- mls qos vlan-based command [2-215](#)
- mode, MVR [2-220](#)
- Mode button, and password recovery [2-254](#)
- modes, commands [1-1](#)
- monitor session command [2-216](#)
- more (boot loader) command [A-16](#)
- MSTP
 - displaying [2-397](#)
 - interoperability [2-46](#)
 - link type [2-447](#)
 - MST region
 - aborting changes [2-453](#)
 - applying changes [2-453](#)
 - configuration name [2-453](#)
 - configuration revision number [2-453](#)
 - current or pending display [2-453](#)
 - displaying [2-397](#)
 - MST configuration mode [2-453](#)
 - VLANs-to-instance mapping [2-453](#)
 - path cost [2-455](#)
 - protocol mode [2-451](#)
 - restart protocol migration process [2-46](#)
 - root port
 - loop guard [2-445](#)
 - preventing from becoming designated [2-445](#)
 - restricting which can be root [2-445](#)
 - root guard [2-445](#)

root switch

- affects of extended system ID [2-443](#)
- hello-time [2-458, 2-466](#)
- interval between BPDU messages [2-459](#)
- interval between hello BPDU messages [2-458, 2-466](#)
- max-age [2-459](#)
- maximum hop count before discarding BPDU [2-460](#)
- port priority for selection of [2-462](#)
- primary or secondary [2-466](#)
- switch priority [2-465](#)

state changes

- blocking to forwarding state [2-472](#)
- enabling BPDU filtering [2-435, 2-470](#)
- enabling BPDU guard [2-437, 2-470](#)
- enabling Port Fast [2-470, 2-472](#)
- forward-delay time [2-457](#)
- length of listening and learning states [2-457](#)
- rapid transition to forwarding [2-447](#)
- shutting down Port Fast-enabled ports [2-470](#)

state information display [2-396](#)

MTU

- configuring size [2-517](#)
- displaying global setting [2-404](#)

multicast group address, MVR [2-223](#)

multicast groups, MVR [2-221](#)

multicast router learning method [2-133](#)

multicast router ports, configuring [2-133](#)

multicast storm control [2-488](#)

multicast VLAN, MVR [2-220](#)

multicast VLAN registration

- See MVR

multiple hosts on authorized port [2-70](#)

Multiple Spanning Tree Protocol

- See MSTP

MVR

- and address aliasing [2-221](#)
- configuring [2-220](#)
- configuring interfaces [2-223](#)
- debug messages, display [B-22](#)

displaying [2-379](#)

displaying interface information [2-381](#)

members, displaying [2-383](#)

mvr (global configuration) command [2-220](#)

mvr (interface configuration) command [2-223](#)

mvr vlan group command [2-224](#)

N

native VLANs [2-512](#)

nonegotiate

- DTP messaging [2-500](#)

nonegotiate, speed [2-480](#)

non-IP protocols

- denying [2-52](#)
- forwarding [2-230](#)

non-IP traffic access lists [2-151](#)

non-IP traffic forwarding

- denying [2-52](#)
- permitting [2-230](#)

normal-range VLANs [2-532, 2-537](#)

note, description [xvi](#)

no vlan command [2-532, 2-541](#)

P

PAgP

- See EtherChannel

pagp learn-method command [2-226](#)

pagp port-priority command [2-228](#)

password, VTP [2-555, 2-559](#)

password-recovery mechanism, enabling and disabling [2-254](#)

permit (MAC access-list configuration) command [2-230](#)

per-VLAN spanning-tree plus

- See STP

physical-port learner [2-226](#)

PID, displaying [2-323](#)

PIM-DVMRP, as multicast router learning method [2-133](#)

- police aggregate command [2-235](#)
- police command [2-233](#)
- policed-DSCP map [2-187](#)
- policy-map command [2-237](#)
- policy maps
 - applying to an interface [2-256, 2-261](#)
 - creating [2-237](#)
 - displaying [2-390](#)
 - hierarchical [2-238](#)
 - policers
 - displaying [2-364](#)
 - for a single class [2-233](#)
 - for multiple classes [2-181, 2-235](#)
 - policed-DSCP map [2-187](#)
 - traffic classification
 - defining the class [2-32](#)
 - defining trust states [2-525](#)
 - setting DSCP or IP precedence values [2-259](#)
- Port Aggregation Protocol
 - See EtherChannel
- port-based authentication
 - AAA method list [2-3](#)
 - debug messages, display [B-5](#)
 - enabling IEEE 802.1x
 - globally [2-55](#)
 - per interface [2-77](#)
 - guest VLAN [2-68](#)
 - host modes [2-70](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-71](#)
 - MAC authentication bypass [2-72](#)
 - manual control of authorization state [2-77](#)
 - multiple hosts on authorized port [2-70](#)
 - PAE as authenticator [2-76](#)
 - periodic re-authentication
 - enabling [2-80](#)
 - time between attempts [2-81](#)
 - quiet period between failed authentication exchanges [2-81](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-79](#)
 - resetting configurable IEEE 802.1x parameters [2-67](#)
 - switch-to-authentication server retransmission time [2-81](#)
 - switch-to-client frame-retransmission number [2-74 to 2-75](#)
 - switch-to-client retransmission time [2-81](#)
- port-channel load-balance command [2-240](#)
- Port Fast, for spanning tree [2-472](#)
- port ranges, defining [2-49](#)
- ports, debugging [B-56](#)
- ports, protected [2-511](#)
- port security
 - aging [2-507](#)
 - debug messages, display [B-58](#)
 - enabling [2-502](#)
 - violation error recovery [2-88](#)
- port trust states for QoS [2-213](#)
- port types, MVR [2-223](#)
- priority-queue command [2-242](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-323](#)
- protected ports, displaying [2-318](#)
- pruning
 - VLANs [2-512](#)
 - VTP
 - displaying interface information [2-313](#)
 - enabling [2-555, 2-559](#)
- pruning-eligible VLAN list [2-514](#)
- PVST+
 - See STP

Q

QoS

- auto-QoS
 - configuring [2-16](#)
 - debug messages, display [B-2](#)
 - displaying [2-270](#)

- class maps
 - creating [2-34](#)
 - defining the match criteria [2-173](#)
 - displaying [2-277](#)
- defining the CoS value for an incoming packet [2-183](#)
- displaying configuration information [2-270, 2-363](#)
- DSCP transparency [2-195](#)
- DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-185](#)
 - defining DSCP-to-DSCP-mutation map [2-187](#)
- egress queues
 - allocating buffers [2-191](#)
 - defining the CoS output queue threshold map [2-209](#)
 - defining the DSCP output queue threshold map [2-211](#)
 - displaying buffer allocations [2-367](#)
 - displaying CoS output queue threshold map [2-371](#)
 - displaying DSCP output queue threshold map [2-371](#)
 - displaying queueing strategy [2-367](#)
 - displaying queue-set settings [2-374](#)
 - enabling bandwidth shaping and scheduling [2-484](#)
 - enabling bandwidth sharing and scheduling [2-486](#)
 - limiting the maximum output on a port [2-482](#)
 - mapping a port to a queue-set [2-244](#)
 - mapping CoS values to a queue and threshold [2-209](#)
 - mapping DSCP values to a queue and threshold [2-211](#)
 - setting maximum and reserved memory allocations [2-193](#)
 - setting WTD thresholds [2-193](#)
- enabling [2-179](#)
- ingress queues
 - allocating buffers [2-199](#)
 - assigning SRR scheduling weights [2-197](#)
 - defining the CoS input queue threshold map [2-201](#)
 - defining the DSCP input queue threshold map [2-203](#)
 - displaying buffer allocations [2-367](#)
 - displaying CoS input queue threshold map [2-371](#)
 - displaying DSCP input queue threshold map [2-371](#)
 - displaying queueing strategy [2-367](#)
 - displaying settings for [2-365](#)
 - enabling the priority queue [2-205](#)
 - mapping CoS values to a queue and threshold [2-201](#)
 - mapping DSCP values to a queue and threshold [2-203](#)
 - setting WTD thresholds [2-207](#)
- maps
 - defining [2-187, 2-201, 2-203, 2-209, 2-211](#)
 - displaying [2-371](#)
- policy maps
 - applying an aggregate policer [2-235](#)
 - applying to an interface [2-256, 2-261](#)
 - creating [2-237](#)
 - defining policers [2-181, 2-233](#)
 - displaying policers [2-364](#)
 - displaying policy maps [2-390](#)
 - hierarchical [2-238](#)
 - policed-DSCP map [2-187](#)
 - setting DSCP or IP precedence values [2-259](#)
 - traffic classifications [2-32](#)
 - trust states [2-525](#)
- port trust states [2-213](#)
- queues, enabling the expedite [2-242](#)
- statistics
 - in-profile and out-of-profile packets [2-367](#)
 - packets enqueued or dropped [2-367](#)
 - sent and received CoS values [2-367](#)
 - sent and received DSCP values [2-367](#)
- trusted boundary for IP phones [2-213](#)
- VLAN-based [2-215](#)
- quality of service
 - See QoS
- querytime, MVR [2-220](#)
- queue-set command [2-244](#)

R

- radius-server dead-criteria command [2-245](#)
- radius-server host command [2-247](#)
- rapid per-VLAN spanning-tree plus
 - See STP

rapid PVST+

See STP

re-authenticating IEEE 802.1x-enabled ports [2-79](#)

re-authentication

periodic [2-80](#)

time between attempts [2-81](#)

receiver ports, MVR [2-223](#)

receiving flow-control packets [2-91](#)

recovery mechanism

causes [2-88](#)

display [2-275](#), [2-302](#), [2-306](#)

timer interval [2-88](#)

remote-span command [2-249](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-17](#)

requirements

device manager [xvi](#)

reset (boot loader) command [A-18](#)

reset command [2-546](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)

rmon collection stats command [2-253](#)

root guard, for spanning tree [2-445](#)

RSPAN

configuring [2-216](#)

displaying [2-377](#)

filter RSPAN traffic [2-216](#)

remote-span command [2-249](#)

sessions

add interfaces to [2-216](#)

displaying [2-377](#)

start new [2-216](#)

S

secure ports, limitations [2-504](#)

sending flow-control packets [2-91](#)

service password-recovery command [2-254](#)

service-policy command [2-256](#)

set (boot loader) command [A-20](#)

set command [2-259](#)

setup command [2-261](#)

setup express command [2-264](#)

show access-lists command [2-266](#)

show archive status command [2-269](#)

show auto qos command [2-270](#)

show boot command [2-273](#)

show cable-diagnostics tdr command [2-275](#)

show changes command [2-546](#)

show class-map command [2-277](#)

show controllers cpu-interface command [2-278](#)

show controllers ethernet-controller command [2-280](#)

show controllers team command [2-288](#)

show controller utilization command [2-290](#)

show current command [2-546](#)

show dot1x command [2-292](#)

show dtp [2-296](#)

show eap command [2-298](#)

show env command [2-301](#)

show errdisable detect command [2-302](#)

show errdisable flap-values command [2-304](#)

show errdisable recovery command [2-306](#)

show etherchannel command [2-308](#)

show flowcontrol command [2-311](#)

show interfaces command [2-313](#)

show interfaces counters command [2-321](#)

show inventory command [2-323](#)

show ip dhcp snooping binding command [2-325](#)

show ip dhcp snooping command [2-324](#)

show ip igmp profile command [2-327](#)

show ip igmp snooping command [2-328](#)

show ip igmp snooping groups command [2-330](#)

- show ip igmp snooping mrouter command [2-332](#)
- show ip igmp snooping querier command [2-334](#)
- show lacp command [2-336](#)
- show link state group command [2-340](#)
- show mac access-group command [2-342](#)
- show mac address-table address command [2-346](#)
- show mac address-table aging time command [2-348](#)
- show mac address-table command [2-344](#)
- show mac address-table count command [2-349](#)
- show mac address-table dynamic command [2-351](#)
- show mac address-table interface command [2-353](#)
- show mac address-table move update command [2-355](#)
- show mac address-table notification command [2-41, 2-357, B-20](#)
- show mac address-table static command [2-359](#)
- show mac address-table vlan command [2-361](#)
- show mls qos aggregate-policer command [2-364](#)
- show mls qos command [2-363](#)
- show mls qos input-queue command [2-365](#)
- show mls qos interface command [2-367](#)
- show mls qos maps command [2-371](#)
- show mls qos queue-set command [2-374](#)
- show mls qos vlan command [2-376](#)
- show monitor command [2-377](#)
- show mvr command [2-379](#)
- show mvr interface command [2-381](#)
- show mvr members command [2-383](#)
- show pagp command [2-385](#)
- show parser macro command [2-387](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform igmp snooping command [C-8](#)
- show platform layer4op command [C-10](#)
- show platform mac-address-table command [C-11](#)
- show platform messaging command [C-12](#)
- show platform monitor command [C-13](#)
- show platform mvr table command [C-14](#)
- show platform pm command [C-15](#)
- show platform port-asic command [C-16](#)
- show platform port-security command [C-21](#)
- show platform qos command [C-22](#)
- show platform resource-manager command [C-23](#)
- show platform snmp counters command [C-25](#)
- show platform spanning-tree command [C-26](#)
- show platform stp-instance command [C-27](#)
- show platform team command [C-28](#)
- show platform vlan command [C-30](#)
- show policy-map command [2-390](#)
- show port security command [2-392](#)
- show proposed command [2-546](#)
- show setup express command [2-395](#)
- show spanning-tree command [2-396](#)
- show storm-control command [2-402](#)
- show system mtu command [2-404](#)
- show trust command [2-525](#)
- show udd command [2-405](#)
- show version command [2-408](#)
- show vlan access-map command [2-415](#)
- show vlan command [2-410](#)
- show vlan command, fields [2-412](#)
- show vlan filter command [2-416](#)
- show vmps command [2-417](#)
- show vtp command [2-420](#)
- shutdown command [2-423](#)
- shutdown vlan command [2-424](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-428](#)
- SNMP informs, enabling the sending of [2-425](#)
- snmp-server enable traps command [2-425](#)
- snmp-server host command [2-428](#)
- snmp trap mac-notification command [2-432](#)

SNMP traps

- enabling MAC address notification trap [2-432](#)
- enabling the MAC address notification feature [2-156](#)
- enabling the sending of [2-425](#)

SoftPhone

- See Cisco SoftPhone

software images

- deleting [2-51](#)
- downloading [2-8](#)
- upgrading [2-8](#)
- uploading [2-14](#)

software version, displaying [2-408](#)source ports, MVR [2-223](#)

SPAN

- configuring [2-216](#)
- debug messages, display [B-21](#)
- displaying [2-377](#)
- filter SPAN traffic [2-216](#)
- sessions
 - add interfaces to [2-216](#)
 - displaying [2-377](#)
 - start new [2-216](#)

spanning [2-474](#)

- spanning-tree backbonefast command [2-434](#)
- spanning-tree bpdupfilter command [2-435](#)
- spanning-tree bpduguard command [2-437](#)
- spanning-tree cost command [2-439](#)
- spanning-tree etherchannel command [2-441](#)
- spanning-tree extend system-id command [2-443](#)
- spanning-tree guard command [2-445](#)
- spanning-tree link-type command [2-447](#)
- spanning-tree loopguard default command [2-449](#)
- spanning-tree mode command [2-451](#)
- spanning-tree mst configuration command [2-453](#)
- spanning-tree mst cost command [2-455](#)
- spanning-tree mst forward-time command [2-457](#)
- spanning-tree mst hello-time command [2-458](#)
- spanning-tree mst max-age command [2-459](#)
- spanning-tree mst max-hops command [2-460](#)

spanning-tree mst port-priority command [2-462](#)spanning-tree mst pre-standard command [2-464](#)spanning-tree mst priority command [2-465](#)spanning-tree mst root command [2-466](#)spanning-tree portfast (global configuration) command [2-470](#)spanning-tree portfast (interface configuration) command [2-472](#)spanning-tree port-priority command [2-468](#)

Spanning Tree Protocol

See STP

spanning-tree transmit hold-count command [2-474](#)spanning-tree uplinkfast command [2-475](#)spanning-tree vlan command [2-477](#)speed command [2-480](#)srr-queue bandwidth limit command [2-482](#)srr-queue bandwidth shape command [2-484](#)srr-queue bandwidth share command [2-486](#)SSH, configuring version [2-137](#)static-access ports, configuring [2-491](#)statistics, Ethernet group [2-253](#)sticky learning, enabling [2-502](#)storm-control command [2-488](#)

STP

BackboneFast [2-434](#)counters, clearing [2-45](#)

debug messages, display

BackboneFast events [B-62](#)MSTP [B-65](#)optimized BPDUs handling [B-64](#)spanning-tree activity [B-60](#)switch shim [B-67](#)transmitted and received BPDUs [B-63](#)UplinkFast [B-69](#)detection of indirect link failures [2-434](#)EtherChannel misconfiguration [2-441](#)extended system ID [2-443](#)path cost [2-439](#)protocol modes [2-451](#)

root port
 accelerating choice of new [2-475](#)
 loop guard [2-445](#)
 preventing from becoming designated [2-445](#)
 restricting which can be root [2-445](#)
 root guard [2-445](#)
 UplinkFast [2-475](#)
 root switch
 affects of extended system ID [2-443, 2-478](#)
 hello-time [2-477](#)
 interval between BPDU messages [2-477](#)
 interval between hello BPDU messages [2-477](#)
 max-age [2-477](#)
 port priority for selection of [2-468](#)
 primary or secondary [2-477](#)
 switch priority [2-477](#)
 state changes
 blocking to forwarding state [2-472](#)
 enabling BPDU filtering [2-435, 2-470](#)
 enabling BPDU guard [2-437, 2-470](#)
 enabling Port Fast [2-470, 2-472](#)
 enabling timer to recover from error state [2-88](#)
 forward-delay time [2-477](#)
 length of listening and learning states [2-477](#)
 shutting down Port Fast-enabled ports [2-470](#)
 state information display [2-396](#)
 VLAN options [2-465, 2-477](#)
 Switched Port Analyzer
 See SPAN
 switchport access command [2-491](#)
 switchport backup interface command [2-493](#)
 switchport block command [2-496](#)
 switchport host command [2-497](#)
 switchport mode command [2-498](#)
 switchport nonegotiate command [2-500](#)
 switchport port-security aging command [2-507](#)
 switchport port-security command [2-502](#)
 switchport priority extend command [2-509](#)
 switchport protected command [2-511](#)

switchports, displaying [2-313](#)
 switchport trunk command [2-512](#)
 switchport voice vlan command [2-515](#)
 system message logging, save message to flash [2-147](#)
 system mtu command [2-517](#)

T

tar files, creating, listing, and extracting [2-11](#)
 TDR, running [2-519](#)
 test cable-diagnostics tdr command [2-519](#)
 traceroute mac command [2-520](#)
 traceroute mac ip command [2-523](#)
 trunking, VLAN mode [2-498](#)
 trunk mode [2-498](#)
 trunk ports [2-498](#)
 trunks, to non-DTP device [2-499](#)
 trusted boundary for QoS [2-213](#)
 trusted port states for QoS [2-213](#)
 type (boot loader) command [A-23](#)

U

UDLD
 aggressive mode [2-527, 2-529](#)
 debug messages, display [B-78](#)
 enable globally [2-527](#)
 enable per interface [2-529](#)
 error recovery timer [2-88](#)
 message timer [2-527](#)
 normal mode [2-527, 2-529](#)
 reset a shutdown interface [2-531](#)
 status [2-405](#)
 uddl command [2-527](#)
 uddl port command [2-529](#)
 uddl reset command [2-531](#)
 unicast storm control [2-488](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-496](#)unknown unicast traffic, preventing [2-496](#)unset (boot loader) command [A-24](#)

upgrading

software images [2-8](#)monitoring status of [2-269](#)

upgrading information

See release notes

UplinkFast, for STP [2-475](#)user EXEC mode [1-2, 1-3](#)**V**version (boot loader) command [A-26](#)

VLAN

enabling guest VLAN supplicant [2-58](#)vlan (global configuration) command [2-532](#)vlan (VLAN configuration) command [2-537](#)vlan access-map command [2-543](#)VLAN access map configuration mode [2-543](#)

VLAN access maps

actions [2-6](#)displaying [2-415](#)VLAN-based QoS [2-215](#)

VLAN configuration

rules [2-535, 2-539](#)saving [2-532, 2-541](#)

VLAN configuration mode

commands

VLAN [2-537](#)VTP [2-559](#)description [1-5](#)entering [2-545](#)summary [1-2](#)vlan database command [2-545](#)vlan filter command [2-548](#)VLAN filters, displaying [2-416](#)VLAN ID range [2-532, 2-537](#)

VLAN maps

applying [2-548](#)creating [2-543](#)defining [2-171](#)displaying [2-415](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-532](#)configuring [2-532, 2-537](#)

debug messages, display

ISL [B-74](#)VLAN IOS file system error tests [B-72](#)VLAN manager activity [B-70](#)VTP [B-76](#)displaying configurations [2-410](#)extended-range [2-532](#)

MAC addresses

displaying [2-361](#)number of [2-349](#)media types [2-534, 2-539](#)normal-range [2-532, 2-537](#)restarting [2-424](#)saving the configuration [2-532](#)shutting down [2-424](#)SNMP traps for VTP [2-426, 2-429](#)suspending [2-424](#)variables [2-537](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [2-553](#)displaying [2-417](#)error recovery timer [2-88](#)reconfirming dynamic VLAN assignments [2-550](#)vmpls reconfirm (global configuration) command [2-551](#)vmpls reconfirm (privileged EXEC) command [2-550](#)vmpls retry command [2-552](#)

vmmps server command [2-553](#)

voice VLAN

 configuring [2-515](#)

 setting port priority [2-509](#)

VQP

 and dynamic-access ports [2-492](#)

 clearing client statistics [2-47](#)

 displaying information [2-417](#)

 per-server retry count [2-552](#)

 reconfirmation interval [2-551](#)

 reconfirming dynamic VLAN assignments [2-550](#)

VTP

 changing characteristics [2-555](#)

 clearing pruning counters [2-48](#)

 configuring

 domain name [2-555, 2-559](#)

 file name [2-555](#)

 mode [2-555, 2-559](#)

 password [2-555, 2-559](#)

 counters display fields [2-421](#)

 displaying information [2-420](#)

 enabling

 pruning [2-555, 2-559](#)

 Version 2 [2-555, 2-559](#)

 mode [2-555, 2-559](#)

 pruning [2-555, 2-559](#)

 saving the configuration [2-532, 2-541](#)

 statistics [2-420](#)

 status [2-420](#)

 status display fields [2-422](#)

vtp (global configuration) command [2-555](#)

vtp (VLAN configuration) command [2-559](#)

