



INDEX

A

- aaa accounting dot1x command [2-1](#)
- aaa authentication dot1x command [2-3](#)
- aaa authorization network command [2-5](#)
- AAA methods [2-3](#)
- abort command [2-675](#)
- access control entries
 - See ACEs
- access control lists
 - See ACLs
- access groups
 - IP [2-117](#)
 - MAC, displaying [2-451](#)
- access list, IPv6 [2-169](#)
- access map configuration mode [2-228](#)
- access mode [2-620](#)
- access ports [2-620](#)
- ACEs [2-62, 2-295](#)
- ACLs
 - deny [2-60](#)
 - displaying [2-337](#)
 - for non-IP protocols [2-207](#)
 - IP [2-117](#)
 - matching [2-228](#)
 - on Layer 2 interfaces [2-117](#)
 - permit [2-293](#)
- action command [2-6](#)
- address aliasing [2-278](#)
- aggregate-port learner [2-283](#)
- allowed VLANs [2-640](#)
- apply command [2-675](#)
- archive download-sw command [2-8](#)

- archive tar command [2-11](#)
- archive upload-sw command [2-14](#)
- authentication failed VLAN
 - See dot1x auth-fail vlan
- auth-fail max-attempts
 - See dot1x auth-fail max-attempts
- auth-fail vlan
 - See dot1x auth-fail vlan
- authorization state of controlled port [2-86](#)
- autonegotiation of duplex mode [2-97](#)
- auto qos voip command [2-16](#)

B

- BackboneFast, for STP [2-553](#)
- backup interfaces
 - configuring [2-614](#)
 - displaying [2-389](#)
- boot (boot loader) command [A-2](#)
- boot config-file command [2-20](#)
- boot enable-break command [2-21](#)
- boot helper command [2-22](#)
- boot helper-config file command [2-23](#)
- booting
 - Cisco IOS image [2-26](#)
 - displaying environment variables [2-344](#)
 - interrupting [2-21](#)
 - manually [2-24](#)

boot loader

accessing [A-1](#)

booting

Cisco IOS image [A-2](#)helper image [2-22](#)

directories

creating [A-15](#)displaying a list of [A-7](#)removing [A-19](#)

displaying

available commands [A-12](#)memory heap utilization [A-13](#)version [A-26](#)

environment variables

described [A-20](#)displaying settings [A-20](#)location of [A-21](#)setting [A-20](#)unsetting [A-24](#)

files

copying [A-5](#)deleting [A-6](#)displaying a list of [A-7](#)displaying the contents of [A-4, A-16, A-23](#)renaming [A-17](#)

file system

formatting [A-10](#)initializing flash [A-9](#)running a consistency check [A-11](#)resetting the system [A-18](#)boot manual command [2-24](#)boot private-config-file command [2-25](#)boot system command [2-26](#)BPDU filtering, for spanning tree [2-554, 2-587](#)BPDU guard, for spanning tree [2-556, 2-587](#)break key detection [2-325](#)broadcast storm control [2-605](#)**C**cat (boot loader) command [A-4](#)CDP, enabling protocol tunneling for [2-187](#)channel-group command [2-27](#)channel-protocol command [2-30](#)

Cisco SoftPhone

auto-QoS configuration [2-16](#)trusting packets sent from [2-270](#)class command [2-31](#)class-map command [2-33](#)

class maps

creating [2-33](#)defining the match criteria [2-230](#)displaying [2-348](#)

class of service

See CoS

clear dot1x command [2-35](#)clear eap sessions command [2-36](#)clear errdisable interface [2-37](#)clear ipc command [2-38](#)clear ip dhcp snooping database command [2-40](#)clear l2protocol-tunnel counters command [2-39](#)clear lacp command [2-42](#)clear mac address-table command [2-43, 2-44](#)clear pagp command [2-45](#)clear port-security command [2-46](#)clear spanning-tree counters command [2-48](#)clear spanning-tree detected-protocols command [2-49](#)clear vmpls statistics command [2-50](#)clear vtp counters command [2-51](#)

clusters

SNMP trap [2-543](#)command modes defined [1-1](#)

configuration files

password recovery disable considerations [A-1](#)specifying the name [2-20, 2-25](#)configuring multiple interfaces [2-113](#)

config-vlan mode

commands [2-661](#)

description [1-4](#)

entering [2-660](#)

summary [1-2](#)

copy (boot loader) command [A-5](#)

CoS

assigning default value to incoming packets [2-240](#)

assigning to Layer 2 protocol packets [2-190](#)

overriding the incoming value [2-240](#)

CoS-to-DSCP map [2-244](#)

CPU ASIC statistics, displaying [2-349](#)

crashinfo files [2-106](#)

D

debug auto qos command [B-2](#)

debug backup command [B-4](#)

debug dot1x command [B-5](#)

debug dtp command [B-6](#)

debug eap command [B-7](#)

debug etherchannel command [B-8](#)

debug interface command [B-11](#)

debug ip dhcp snooping command [B-9](#)

debug ip igmp filter command [B-12](#)

debug ip igmp max-groups command [B-13](#)

debug ip igmp snooping command [B-14](#)

debug ip verify source packet command [B-10](#)

debug lacp command [B-15](#)

debug mac-notification command [B-16](#)

debug matm command [B-17](#)

debug matm move update command [B-18](#)

debug monitor command [B-19](#)

debug mvrdbg command [B-20](#)

debug nvram command [B-21](#)

debug pagp command [B-22](#)

debug platform acl command [B-23](#)

debug platform backup interface command [B-24](#)

debug platform cli-redirection main command [B-25](#)

debug platform cpu-queues command [B-26](#)

debug platform dot1x command [B-28](#)

debug platform etherchannel command [B-29](#)

debug platform fallback-bridging command [B-30](#)

debug platform forw-tcam command [B-31](#)

debug platform ip arp inspection command [B-32](#)

debug platform ipc command [B-40](#)

debug platform ip dhcp command [B-33](#)

debug platform ip igmp snooping command [B-34](#)

debug platform ip multicast command [B-36](#)

debug platform ip unicast command [B-38](#)

debug platform led command [B-41](#)

debug platform matm command [B-42](#)

debug platform messaging application command [B-43](#)

debug platform phy command [B-44](#)

debug platform pm command [B-46](#)

debug platform port-asic command [B-48](#)

debug platform port-security command [B-49](#)

debug platform qos-acl-tcam command [B-50](#)

debug platform remote-commands command [B-51](#)

debug platform resource-manager command [B-52](#)

debug platform snmp command [B-53](#)

debug platform span command [B-54](#)

debug platform supervisor-asic command [B-55](#)

debug platform sw-bridge command [B-56](#)

debug platform tcam command [B-57](#)

debug platform udd command [B-60](#)

debug platform vlan command [B-61](#)

debug pm command [B-62](#)

debug port-security command [B-64](#)

debug qos-manager command [B-65](#)

debug spanning-tree backbonefast command [B-68](#)

debug spanning-tree bpd command [B-69](#)

debug spanning-tree bpd-opt command [B-70](#)

debug spanning-tree command [B-66](#)

debug spanning-tree mstp command [B-71](#)

debug spanning-tree switch command [B-73](#)

debug spanning-tree uplinkfast command [B-75](#)

debug sw-vlan command [B-76](#)

- debug sw-vlan ifs command [B-78](#)
- debug sw-vlan notification command [B-79](#)
- debug sw-vlan vtp command [B-80](#)
- debug udd command [B-82](#)
- debug vqpc command [B-84](#)
- define interface-range command [2-52](#)
- delete (boot loader) command [A-6](#)
- delete command [2-54](#)
- deny (IPv6) command [2-55](#)
- deny command [2-60](#)
- detect mechanism, causes [2-98](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-132](#)
 - enabling
 - on a VLAN [2-138](#)
 - option 82 [2-130, 2-132](#)
 - trust on an interface [2-136](#)
 - error recovery timer [2-103](#)
 - rate limiting [2-135](#)
- DHCP snooping binding database
 - binding file, configuring [2-128](#)
 - bindings
 - adding [2-126](#)
 - deleting [2-126](#)
 - displaying [2-403](#)
 - clearing database agent statistics [2-40](#)
 - database agent, configuring [2-128](#)
 - displaying
 - binding entries [2-403](#)
 - database agent status [2-405, 2-407](#)
 - renewing [2-319](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-54](#)
- domain name, VTP [2-685, 2-689](#)
- dot1x auth-fail max-attempts [2-65](#)
- dot1x auth-fail vlan [2-67](#)
- dot1x command [2-63](#)
- dot1x control-direction command [2-69](#)
- dot1x critical global configuration command [2-71](#)
- dot1x critical interface configuration command [2-73](#)
- dot1x default command [2-75](#)
- dot1x fallback command [2-76](#)
- dot1x guest-vlan command [2-77](#)
- dot1x host-mode command [2-79](#)
- dot1x initialize command [2-80](#)
- dot1x mac-auth-bypass command [2-81](#)
- dot1x max-reauth-req command [2-83](#)
- dot1x max-req command [2-84](#)
- dot1x pae command [2-85](#)
- dot1x port-control command [2-86](#)
- dot1x re-authenticate command [2-88](#)
- dot1x reauthentication command [2-89](#)
- dot1x test eapol-capable command [2-90](#)
- dot1x test timeout command [2-91](#)
- dot1x timeout command [2-92](#)
- dot1x violation-mode command [2-95](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-187](#)
- DSCP-to-CoS map [2-244](#)
- DSCP-to-DSCP-mutation map [2-244](#)
- DTP [2-621](#)
- DTP flap
 - error detection for [2-98](#)
 - error recovery timer [2-103](#)
- DTP negotiation [2-625](#)
- dual IPv4 and IPv6 templates [2-287](#)
- dual-purpose uplink ports
 - selecting the type [2-234](#)
- duplex command [2-96](#)
- dynamic-access ports
 - configuring [2-610](#)
 - restrictions [2-610](#)
- dynamic ARP inspection
 - error detection for [2-98](#)
- dynamic auto VLAN membership mode [2-620](#)
- dynamic desirable VLAN membership mode [2-620](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [2-84](#)

response time before retransmitting [2-92](#)

encapsulation methods [2-640](#)

environment variables, displaying [2-344](#)

errdisable detect cause command [2-98](#)

errdisable detect cause small-frame comand [2-100](#)

errdisable recovery cause small-frame [2-102](#)

errdisable recovery command [2-103](#)

error conditions, displaying [2-376](#)

error disable detection [2-98](#)

error-disabled interfaces, displaying [2-389](#)

EtherChannel

assigning Ethernet interface to channel group [2-27](#)

creating port-channel logical interface [2-111](#)

debug EtherChannel/PAgP, display [B-8](#)

debug platform-specific events, display [B-29](#)

displaying [2-380](#)

enabling Layer 2 protocol tunneling for

LACP [2-188](#)

PAgP [2-188](#)

UDLD [2-188](#)

interface information, displaying [2-389](#)

LACP

clearing channel-group information [2-42](#)

debug messages, display [B-15](#)

displaying [2-440](#)

modes [2-27](#)

port priority for hot-standby ports [2-191](#)

restricting a protocol [2-30](#)

system priority [2-193](#)

load-distribution methods [2-303](#)

PAgP

aggregate-port learner [2-283](#)

clearing channel-group information [2-45](#)

debug messages, display [B-22](#)

displaying [2-497](#)

error detection for [2-98](#)

error recovery timer [2-103](#)

learn method [2-283](#)

modes [2-27](#)

physical-port learner [2-283](#)

priority of interface for transmitted traffic [2-285](#)

Ethernet controller, internal register display [2-351](#)

Ethernet statistics, collecting [2-321](#)

exception crashinfo command [2-106](#)

exit command [2-675](#)

extended-range VLANs

and allowed VLAN list [2-640](#)

and pruning-eligible list [2-640](#)

configuring [2-660](#)

extended system ID for STP [2-562](#)

F

fallback profile command [2-107](#)

fallback profiles

displaying [2-383](#)

file name, VTP [2-685](#)

files, deleting [2-54](#)

flash_init (boot loader) command [A-9](#)

Flex Links

configuring [2-614](#)

configuring preferred VLAN [2-616](#)

displaying [2-389](#)

flowcontrol command [2-109](#)

format (boot loader) command [A-10](#)

forwarding packets, with ACL matches [2-6](#)

forwarding results, display [C-6](#)

frame forwarding information, displaying [C-6](#)

fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-337](#)

help (boot loader) command [A-12](#)

hierarchical policy maps [2-301](#)

host connection, port configuration [2-619](#)

host ports, private VLANs [2-623](#)

I

IEEE 802.1Q trunk ports and native VLANs [2-677](#)

IEEE 802.1Q tunnel ports

 configuring [2-620](#)

 displaying [2-363](#)

 limitations [2-621](#)

IEEE 802.1x

 and switchport modes [2-621](#)

 violation error recovery [2-103](#)

 See also port-based authentication

IEEE 802.1X Port Based Authentication

 enabling guest VLAN supplicant [2-65, 2-76, 2-108](#)

IGMP filters

 applying [2-141](#)

 debug messages, display [B-12](#)

IGMP groups, setting maximum [2-143](#)

IGMP maximum groups, debugging [B-13](#)

IGMP profiles

 creating [2-145](#)

 displaying [2-410](#)

IGMP snooping

 adding ports as a static member of a group [2-161](#)

 displaying [2-411, 2-416, 2-418](#)

 enabling [2-147](#)

 enabling the configurable-leave timer [2-149](#)

 enabling the Immediate-Leave feature [2-158](#)

 flooding query count [2-155](#)

 interface topology change notification behavior [2-157](#)

 multicast table [2-414](#)

 querier [2-151](#)

 query solicitation [2-155](#)

 report suppression [2-153](#)

 switch topology change notification behavior [2-155](#)

images

 See software images

Immediate-Leave feature, MVR [2-280](#)

Immediate-Leave processing, IPv6 [2-183](#)

immediate-leave processing [2-158](#)

interface configuration mode [1-2, 1-4](#)

interface port-channel command [2-111](#)

interface range command [2-113](#)

interface-range macros [2-52](#)

interfaces

 assigning Ethernet interface to channel group [2-27](#)

 configuring [2-96](#)

 configuring multiple [2-113](#)

 creating port-channel logical [2-111](#)

 debug messages, display [B-11](#)

 disabling [2-539](#)

 displaying the MAC address table [2-463](#)

 restarting [2-539](#)

interface speed, configuring [2-597](#)

interface vlan command [2-115](#)

internal registers, displaying [2-351, 2-359](#)

Internet Group Management Protocol

 See IGMP

invalid GBIC

 error detection for [2-98](#)

 error recovery timer [2-103](#)

ip access-group command [2-117](#)

ip address command [2-120](#)

IP addresses, setting [2-120](#)

IP address matching [2-228](#)

ip admission command [2-122](#)

ip admission name proxy http command [2-123](#)

IP DHCP snooping

See DHCP snooping

- ip dhcp snooping binding command [2-126](#)
- ip dhcp snooping command [2-125](#)
- ip dhcp snooping database command [2-128](#)
- ip dhcp snooping information option allow-untrusted command [2-132](#)
- ip dhcp snooping information option command [2-130](#)
- ip dhcp snooping information option format remote-id command [2-134](#)
- ip dhcp snooping limit rate command [2-135](#)
- ip dhcp snooping trust command [2-136](#)
- ip dhcp snooping verify command [2-137](#)
- ip dhcp snooping vlan command [2-138](#)
- ip dhcp snooping vlan information option format-type circuit-id string command [2-139](#)
- ip igmp filter command [2-141](#)
- ip igmp max-groups command [2-143](#)
- ip igmp profile command [2-145](#)
- ip igmp snooping command [2-147](#)
- ip igmp snooping last-member-query-interval command [2-149](#)
- ip igmp snooping querier command [2-151](#)
- ip igmp snooping report-suppression command [2-153](#)
- ip igmp snooping tcn command [2-155](#)
- ip igmp snooping tcn flood command [2-157](#)
- ip igmp snooping vlan immediate-leave command [2-158](#)
- ip igmp snooping vlan mrouter command [2-159](#)
- ip igmp snooping vlan static command [2-161](#)
- IP multicast addresses [2-277](#)
- IP phones
 - auto-QoS configuration [2-16](#)
 - trusting packets sent from [2-270](#)
- IP-precedence-to-DSCP map [2-244](#)
- ip snap forwarding command [2-163](#)
- ip source binding command [2-164](#)

IP source guard

- disabling [2-168](#)
- displaying
 - binding entries [2-420](#)
 - configuration [2-422](#)
 - dynamic binding entries only [2-403](#)
- enabling [2-168](#)
- static IP source bindings [2-164](#)

ip ssh command [2-166](#)

IPv6 access list, deny conditions [2-55](#)

ipv6 access-list command [2-169](#)

ipv6 mld snooping command [2-171](#)

ipv6 mld snooping last-listener-query count command [2-173](#)

ipv6 mld snooping last-listener-query-interval command [2-175](#)

ipv6 mld snooping listener-message-suppression command [2-177](#)

ipv6 mld snooping robustness-variable command [2-179](#)

ipv6 mld snooping tcn command [2-181](#)

ipv6 mld snooping vlan command [2-183](#)

IPv6 SDM template [2-322](#)

ipv6 traffic-filter command [2-185](#)

ip verify source command [2-168](#)

J

jumbo frames

See MTU

L

l2protocol-tunnel command [2-187](#)

l2protocol-tunnel cos command [2-190](#)

LACP

See EtherChannel

lacp port-priority command [2-191](#)

lacp system-priority command [2-193](#)

Layer 2 mode, enabling [2-608](#)

Layer 2 protocol ports, displaying [2-438](#)
 Layer 2 protocol-tunnel
 error detection for [2-98](#)
 error recovery timer [2-103](#)
 Layer 2 protocol tunnel counters [2-39](#)
 Layer 2 protocol tunneling error recovery [2-188](#)
 Layer 2 traceroute
 IP addresses [2-651](#)
 MAC addresses [2-648](#)
 Layer 3 mode, enabling [2-608](#)
 line configuration mode [1-2, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-98](#)
 error recovery timer [2-103](#)
 link state group command [2-199](#)
 link state track command [2-201](#)
 load-distribution methods for EtherChannel [2-303](#)
 location (global configuration) command [2-195](#)
 location (interface configuration) command [2-197](#)
 logging event command [2-202](#)
 logging file command [2-203](#)
 logical interface [2-111](#)
 loopback error
 detection for [2-98](#)
 recovery timer [2-103](#)
 loop guard, for spanning tree [2-563, 2-567](#)

M

mac access-group command [2-205](#)
 MAC access-groups, displaying [2-451](#)
 MAC access list configuration mode [2-207](#)
 mac access-list extended command [2-207](#)
 MAC access lists [2-60](#)

MAC addresses
 disabling MAC address learning per VLAN [2-210](#)
 displaying
 aging time [2-457](#)
 all [2-455](#)
 dynamic [2-461](#)
 MAC address-table move updates [2-466](#)
 notification settings [2-465, 2-468](#)
 number of addresses in a VLAN [2-459](#)
 per interface [2-463](#)
 per VLAN [2-472](#)
 static [2-470](#)
 static and dynamic entries [2-453](#)
 dynamic
 aging time [2-209](#)
 deleting [2-43](#)
 displaying [2-461](#)
 enabling MAC address notification [2-214](#)
 enabling MAC address-table move update [2-212](#)
 matching [2-228](#)
 static
 adding and removing [2-216](#)
 displaying [2-470](#)
 dropping on an interface [2-217](#)
 tables [2-455](#)
 mac address notification, debugging [B-16](#)
 mac address-table aging-time [2-205, 2-228](#)
 mac address-table aging-time command [2-209](#)
 mac address-table learning command [2-210](#)
 mac address-table move update command [2-212](#)
 mac address-table notification command [2-214](#)
 mac address-table static command [2-216](#)
 mac address-table static drop command [2-217](#)
 macro apply command [2-219](#)
 macro description command [2-222](#)
 macro global command [2-223](#)
 macro global description command [2-225](#)
 macro name command [2-226](#)

macros

- adding a description [2-222](#)
- adding a global description [2-225](#)
- applying [2-223](#)
- creating [2-226](#)
- displaying [2-499](#)
- interface range [2-52, 2-113](#)
- specifying parameter values [2-223](#)
- tracing [2-223](#)

maps

QoS

- defining [2-244](#)
- displaying [2-482](#)

VLAN

- creating [2-672](#)
- defining [2-228](#)
- displaying [2-531](#)

match (access-map configuration) command [2-228](#)

match (class-map configuration) command [2-230](#)

maximum transmission unit

See MTU

mdix auto command [2-232](#)

MDL snooping

- displaying [2-432](#)

media-type command [2-234](#)

memory (boot loader) command [A-13](#)

mkdir (boot loader) command [A-15](#)

MLD snooping

- configuring [2-177, 2-179](#)
- configuring queries [2-173, 2-175](#)
- configuring topology change notification [2-181](#)
- displaying [2-430, 2-434, 2-436](#)
- enabling [2-171](#)

MLD snooping on a VLAN

- enabling [2-183](#)

mls qos aggregate-policer command [2-238](#)

mls qos command [2-236](#)

mls qos cos command [2-240](#)

mls qos dscp-mutation command [2-242](#)

mls qos map command [2-244](#)

mls qos queue-set output buffers command [2-248](#)

mls qos queue-set output threshold command [2-250](#)

mls qos rewrite ip dscp command [2-252](#)

mls qos srr-queue input bandwidth command [2-254](#)

mls qos srr-queue input buffers command [2-256](#)

mls qos-srr-queue input cos-map command [2-258](#)

mls qos srr-queue input dscp-map command [2-260](#)

mls qos srr-queue input priority-queue command [2-262](#)

mls qos srr-queue input threshold command [2-264](#)

mls qos-srr-queue output cos-map command [2-266](#)

mls qos srr-queue output dscp-map command [2-268](#)

mls qos trust command [2-270](#)

mls qos vlan-based command [2-272](#)

mode, MVR [2-277](#)

Mode button, and password recovery [2-325](#)

modes, commands [1-1](#)

monitor session command [2-273](#)

more (boot loader) command [A-16](#)

MSTP

displaying [2-512](#)

interoperability [2-49](#)

link type [2-565](#)

MST region

aborting changes [2-571](#)

applying changes [2-571](#)

configuration name [2-571](#)

configuration revision number [2-571](#)

current or pending display [2-571](#)

displaying [2-512](#)

MST configuration mode [2-571](#)

VLANs-to-instance mapping [2-571](#)

path cost [2-573](#)

protocol mode [2-569](#)

restart protocol migration process [2-49](#)

- root port
 - loop guard [2-563](#)
 - preventing from becoming designated [2-563](#)
 - restricting which can be root [2-563](#)
 - root guard [2-563](#)
 - root switch
 - affects of extended system ID [2-562](#)
 - hello-time [2-576, 2-583](#)
 - interval between BPDU messages [2-577](#)
 - interval between hello BPDU messages [2-576, 2-583](#)
 - max-age [2-577](#)
 - maximum hop count before discarding BPDU [2-578](#)
 - port priority for selection of [2-579](#)
 - primary or secondary [2-583](#)
 - switch priority [2-582](#)
 - state changes
 - blocking to forwarding state [2-589](#)
 - enabling BPDU filtering [2-554, 2-587](#)
 - enabling BPDU guard [2-556, 2-587](#)
 - enabling Port Fast [2-587, 2-589](#)
 - forward-delay time [2-575](#)
 - length of listening and learning states [2-575](#)
 - rapid transition to forwarding [2-565](#)
 - shutting down Port Fast-enabled ports [2-587](#)
 - state information display [2-511](#)
 - MTU
 - configuring size [2-645](#)
 - displaying global setting [2-519](#)
 - Multicast Listener Discovery
 - See MLD
 - multicast group address, MVR [2-280](#)
 - multicast groups, MVR [2-278](#)
 - Multicast Listener Discovery
 - See MLD
 - multicast router learning method [2-159](#)
 - multicast router ports, IPv6 [2-183](#)
 - multicast router ports, configuring [2-159](#)
 - multicast storm control [2-605](#)
 - multicast VLAN, MVR [2-277](#)
 - multicast VLAN registration
 - See MVR
 - multiple hosts on authorized port [2-79](#)
 - Multiple Spanning Tree Protocol
 - See MSTP
 - MVR
 - and address aliasing [2-278](#)
 - configuring [2-277](#)
 - configuring interfaces [2-280](#)
 - debug messages, display [B-20](#)
 - displaying [2-491](#)
 - displaying interface information [2-493](#)
 - members, displaying [2-495](#)
 - mvr (global configuration) command [2-277](#)
 - mvr (interface configuration) command [2-280](#)
 - mvr vlan group command [2-281](#)
-
- ## N
- native VLANs [2-640](#)
 - native VLAN tagging [2-677](#)
 - nonegotiate
 - DTP messaging [2-625](#)
 - nonegotiate, speed [2-597](#)
 - non-IP protocols
 - denying [2-60](#)
 - forwarding [2-293](#)
 - non-IP traffic access lists [2-207](#)
 - non-IP traffic forwarding
 - denying [2-60](#)
 - permitting [2-293](#)
 - normal-range VLANs [2-660, 2-666](#)
 - no vlan command [2-660, 2-670](#)

O

online diagnostics

displaying

- configured boot-up coverage level [2-363](#)
- current scheduled tasks [2-363](#)
- event logs [2-363](#)
- supported test suites [2-363](#)
- test ID [2-363](#)
- test results [2-363](#)
- test statistics [2-363](#)

P

PAgP

See EtherChannel

- pagp learn-method command [2-283](#)
- pagp port-priority command [2-285](#)
- password, VTP [2-685, 2-689](#)
- password-recovery mechanism, enabling and disabling [2-325](#)
- permit (IPv6) command [2-287](#)
- permit (MAC access-list configuration) command [2-293](#)
- per-VLAN spanning-tree plus
 - See STP
- physical-port learner [2-283](#)
- PID, displaying [2-401](#)
- PIM-DVMRP, as multicast router learning method [2-159](#)
- police aggregate command [2-298](#)
- police command [2-296](#)
- policed-DSCP map [2-244](#)
- policy-map command [2-300](#)

policy maps

- applying to an interface [2-327, 2-332](#)
- creating [2-300](#)
- displaying [2-502](#)
- hierarchical [2-301](#)
- policers
 - displaying [2-475](#)
 - for a single class [2-296](#)
 - for multiple classes [2-238, 2-298](#)
 - policed-DSCP map [2-244](#)

traffic classification

- defining the class [2-31](#)
- defining trust states [2-653](#)
- setting DSCP or IP precedence values [2-330](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

- AAA method list [2-3](#)
- configuring violation modes [2-95](#)
- debug messages, display [B-5](#)
- enabling IEEE 802.1x
 - globally [2-63](#)
 - per interface [2-86](#)
- guest VLAN [2-77](#)
- host modes [2-79](#)
- IEEE 802.1x AAA accounting methods [2-1](#)
- initialize an interface [2-80, 2-91](#)
- MAC authentication bypass [2-81](#)
- manual control of authorization state [2-86](#)
- multiple hosts on authorized port [2-79](#)
- PAE as authenticator [2-85](#)
- periodic re-authentication
 - enabling [2-89](#)
 - time between attempts [2-92](#)
- quiet period between failed authentication exchanges [2-92](#)
- re-authenticating IEEE 802.1x-enabled ports [2-88](#)
- resetting configurable IEEE 802.1x parameters [2-75](#)

- switch-to-authentication server retransmission time [2-92](#)
- switch-to-client frame-retransmission number [2-83 to 2-84](#)
- switch-to-client retransmission time [2-92](#)
- test for IEEE 802.1x readiness [2-90](#)
- port-channel load-balance command [2-303](#)
- Port Fast, for spanning tree [2-589](#)
- port ranges, defining [2-52](#)
- ports, debugging [B-62](#)
- ports, protected [2-638](#)
- port security
 - aging [2-632](#)
 - debug messages, display [B-64](#)
 - enabling [2-627](#)
 - violation error recovery [2-103](#)
- port trust states for QoS [2-270](#)
- port types, MVR [2-280](#)
- priority-queue command [2-305](#)
- private-vlan command [2-307](#)
- private-vlan mapping command [2-310](#)
- private VLANs
 - association [2-636](#)
 - configuring [2-307](#)
 - configuring ports [2-623](#)
 - displaying [2-525](#)
 - host ports [2-623](#)
 - mapping
 - configuring [2-636](#)
 - displaying [2-389](#)
 - promiscuous ports [2-623](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-401](#)
- promiscuous ports, private VLANs [2-623](#)
- protected ports, displaying [2-395](#)

- pruning
 - VLANs [2-640](#)
 - VTP
 - displaying interface information [2-389](#)
 - enabling [2-685, 2-689](#)
- pruning-eligible VLAN list [2-642](#)
- PVST+
 - See STP

Q

- QoS
 - auto-QoS
 - configuring [2-16](#)
 - debug messages, display [B-2](#)
 - displaying [2-341](#)
 - class maps
 - creating [2-33](#)
 - defining the match criteria [2-230](#)
 - displaying [2-348](#)
 - defining the CoS value for an incoming packet [2-240](#)
 - displaying configuration information [2-341, 2-474](#)
 - DSCP transparency [2-252](#)
 - DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-242](#)
 - defining DSCP-to-DSCP-mutation map [2-244](#)
 - egress queues
 - allocating buffers [2-248](#)
 - defining the CoS output queue threshold map [2-266](#)
 - defining the DSCP output queue threshold map [2-268](#)
 - displaying buffer allocations [2-478](#)
 - displaying CoS output queue threshold map [2-482](#)
 - displaying DSCP output queue threshold map [2-482](#)
 - displaying queueing strategy [2-478](#)
 - displaying queue-set settings [2-485](#)

- enabling bandwidth shaping and scheduling [2-601](#)
- enabling bandwidth sharing and scheduling [2-603](#)
- limiting the maximum output on a port [2-599](#)
- mapping a port to a queue-set [2-312](#)
- mapping CoS values to a queue and threshold [2-266](#)
- mapping DSCP values to a queue and threshold [2-268](#)
- setting maximum and reserved memory allocations [2-250](#)
- setting WTD thresholds [2-250](#)
- enabling [2-236](#)
- ingress queues
 - allocating buffers [2-256](#)
 - assigning SRR scheduling weights [2-254](#)
 - defining the CoS input queue threshold map [2-258](#)
 - defining the DSCP input queue threshold map [2-260](#)
 - displaying buffer allocations [2-478](#)
 - displaying CoS input queue threshold map [2-482](#)
 - displaying DSCP input queue threshold map [2-482](#)
 - displaying queueing strategy [2-478](#)
 - displaying settings for [2-476](#)
 - enabling the priority queue [2-262](#)
 - mapping CoS values to a queue and threshold [2-258](#)
 - mapping DSCP values to a queue and threshold [2-260](#)
 - setting WTD thresholds [2-264](#)
- maps
 - defining [2-244, 2-258, 2-260, 2-266, 2-268](#)
 - displaying [2-482](#)
- policy maps
 - applying an aggregate policer [2-298](#)
 - applying to an interface [2-327, 2-332](#)
 - creating [2-300](#)
 - defining policers [2-238, 2-296](#)
 - displaying policers [2-475](#)
 - displaying policy maps [2-502](#)
 - hierarchical [2-301](#)
 - policed-DSCP map [2-244](#)
 - setting DSCP or IP precedence values [2-330](#)
 - traffic classifications [2-31](#)
 - trust states [2-653](#)
- port trust states [2-270](#)
- queues, enabling the expedite [2-305](#)
- statistics
 - in-profile and out-of-profile packets [2-478](#)
 - packets enqueued or dropped [2-478](#)
 - sent and received CoS values [2-478](#)
 - sent and received DSCP values [2-478](#)
- trusted boundary for IP phones [2-270](#)
- VLAN-based [2-272](#)
- quality of service
 - See QoS
- querytime, MVR [2-277](#)
- queue-set command [2-312](#)

R

- radius-server dead-criteria command [2-313](#)
- radius-server host command [2-315](#)
- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- re-authenticating IEEE 802.1x-enabled ports [2-88](#)
- re-authentication
 - periodic [2-89](#)
 - time between attempts [2-92](#)
- receiver ports, MVR [2-280](#)

receiving flow-control packets [2-109](#)

recovery mechanism

causes [2-103](#)

display [2-37, 2-346, 2-374, 2-378](#)

timer interval [2-104](#)

remote-span command [2-317](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-17](#)

renew ip dhcp snooping database command [2-319](#)

reset (boot loader) command [A-18](#)

reset command [2-675](#)

resource templates, displaying [2-507](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)

rmon collection stats command [2-321](#)

root guard, for spanning tree [2-563](#)

routed ports

IP addresses on [2-121](#)

number supported [2-121](#)

RSPAN

configuring [2-273](#)

displaying [2-488](#)

filter RSPAN traffic [2-273](#)

remote-span command [2-317](#)

sessions

add interfaces to [2-273](#)

displaying [2-488](#)

start new [2-273](#)

S

sdm prefer command [2-322](#)

SDM templates

allowed resources [2-323](#)

displaying [2-507](#)

dual IPv4 and IPv6 [2-322](#)

secure ports, limitations [2-629](#)

sending flow-control packets [2-109](#)

service password-recovery command [2-325](#)

service-policy command [2-327](#)

set (boot loader) command [A-20](#)

set command [2-330](#)

setup command [2-332](#)

setup express command [2-335](#)

show access-lists command [2-337](#)

show archive status command [2-340](#)

show auto qos command [2-341](#)

show boot command [2-344](#)

show cable-diagnostics tdr command [2-346](#)

show changes command [2-675](#)

show class-map command [2-348](#)

show controllers cpu-interface command [2-349](#)

show controllers ethernet-controller command [2-351](#)

show controllers team command [2-359](#)

show controller utilization command [2-361](#)

show current command [2-675](#)

show dot1q-tunnel command [2-363](#)

show dot1x command [2-364](#)

show dtp [2-368](#)

show eap command [2-370](#)

show env command [2-373](#)

show errdisable detect command [2-374](#)

show errdisable flap-values command [2-376](#)

show errdisable recovery command [2-378](#)

show etherchannel command [2-380](#)

show fallback profile command [2-383](#)

show flowcontrol command [2-385](#)

show idprom command [2-387](#)

show interfaces command [2-389](#)

show interfaces counters command [2-398](#)

show inventory command [2-401](#)

show ipc command [2-424](#)

show ip dhcp snooping binding command [2-403](#)

show ip dhcp snooping command [2-402](#)

show ip dhcp snooping database command [2-405, 2-407](#)

show ip igmp profile command [2-410](#)

- show ip igmp snooping address command [2-432](#)
- show ip igmp snooping command [2-411, 2-430](#)
- show ip igmp snooping groups command [2-414](#)
- show ip igmp snooping mrouter command [2-416, 2-434](#)
- show ip igmp snooping querier command [2-418, 2-436](#)
- show ip source binding command [2-420](#)
- show ipv6 access-list command [2-428](#)
- show ip verify source command [2-422](#)
- show l2protocol-tunnel command [2-438](#)
- show lacp command [2-440](#)
- show link state group command [2-447, 2-449](#)
- show location [2-444](#)
- show mac access-group command [2-451](#)
- show mac address-table address command [2-455](#)
- show mac address-table aging time command [2-457](#)
- show mac address-table command [2-453](#)
- show mac address-table count command [2-459](#)
- show mac address-table dynamic command [2-461](#)
- show mac address-table interface command [2-463](#)
- show mac address-table learning command [2-465](#)
- show mac address-table move update command [2-466](#)
- show mac address-table notification command [2-44, 2-468, B-18](#)
- show mac address-table static command [2-470](#)
- show mac address-table vlan command [2-472](#)
- show mls qos aggregate-policer command [2-475](#)
- show mls qos command [2-474](#)
- show mls qos input-queue command [2-476](#)
- show mls qos interface command [2-478](#)
- show mls qos maps command [2-482](#)
- show mls qos queue-set command [2-485](#)
- show mls qos vlan command [2-487](#)
- show monitor command [2-488](#)
- show mvr command [2-491](#)
- show mvr interface command [2-493](#)
- show mvr members command [2-495](#)
- show pagp command [2-497](#)
- show parser macro command [2-499](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform igmp snooping command [C-8](#)
- show platform ipc trace command [C-15](#)
- show platform ip multicast command [C-10](#)
- show platform ip unicast command [C-11](#)
- show platform ipv6 unicast command [C-16](#)
- show platform layer4op command [C-18](#)
- show platform mac-address-table command [C-19](#)
- show platform messaging command [C-20](#)
- show platform monitor command [C-21](#)
- show platform mvr table command [C-22](#)
- show platform pm command [C-23](#)
- show platform port-asic command [C-24](#)
- show platform port-security command [C-29](#)
- show platform qos command [C-30](#)
- show platform resource-manager command [C-31](#)
- show platform snmp counters command [C-33](#)
- show platform spanning-tree command [C-34](#)
- show platform stp-instance command [C-35](#)
- show platform team command [C-36](#)
- show platform vlan command [C-39](#)
- show policy-map command [2-502](#)
- show port security command [2-504](#)
- show proposed command [2-675](#)
- show sdm prefer command [2-507](#)
- show setup express command [2-510](#)
- show spanning-tree command [2-511](#)
- show storm-control command [2-517](#)
- show system mtu command [2-519](#)
- show trust command [2-653](#)
- show uddl command [2-520](#)
- show version command [2-523](#)
- show vlan access-map command [2-531](#)
- show vlan command [2-525](#)
- show vlan command, fields [2-527](#)
- show vlan filter command [2-532](#)

- show vmps command [2-533](#)
- show vtp command [2-535](#)
- shutdown command [2-539](#)
- shutdown threshold, Layer 2 protocol tunneling [2-187](#)
- shutdown vlan command [2-540](#)
- small violation-rate command [2-541](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-547](#)
- SNMP informs, enabling the sending of [2-543](#)
- snmp-server enable traps command [2-543](#)
- snmp-server host command [2-547](#)
- snmp trap mac-notification command [2-551](#)
- SNMP traps
 - enabling MAC address notification trap [2-551](#)
 - enabling the MAC address notification feature [2-214](#)
 - enabling the sending of [2-543](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-54](#)
 - downloading [2-8](#)
 - upgrading [2-8](#)
 - uploading [2-14](#)
- software version, displaying [2-523](#)
- source ports, MVR [2-280](#)
- SPAN
 - configuring [2-273](#)
 - debug messages, display [B-19](#)
 - displaying [2-488](#)
 - filter SPAN traffic [2-273](#)
 - sessions
 - add interfaces to [2-273](#)
 - displaying [2-488](#)
 - start new [2-273](#)
- spanning [2-591](#)
- spanning-tree backbonefast command [2-553](#)
- spanning-tree bpdupfilter command [2-554](#)
- spanning-tree bpduguard command [2-556](#)
- spanning-tree cost command [2-558](#)
- spanning-tree etherchannel command [2-560](#)
- spanning-tree extend system-id command [2-562](#)
- spanning-tree guard command [2-563](#)
- spanning-tree link-type command [2-565](#)
- spanning-tree loopguard default command [2-567](#)
- spanning-tree mode command [2-569](#)
- spanning-tree mst configuration command [2-571](#)
- spanning-tree mst cost command [2-573](#)
- spanning-tree mst forward-time command [2-575](#)
- spanning-tree mst hello-time command [2-576](#)
- spanning-tree mst max-age command [2-577](#)
- spanning-tree mst max-hops command [2-578](#)
- spanning-tree mst port-priority command [2-579](#)
- spanning-tree mst pre-standard command [2-581](#)
- spanning-tree mst priority command [2-582](#)
- spanning-tree mst root command [2-583](#)
- spanning-tree portfast (global configuration) command [2-587](#)
- spanning-tree portfast (interface configuration) command [2-589](#)
- spanning-tree port-priority command [2-585](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-591](#)
- spanning-tree uplinkfast command [2-592](#)
- spanning-tree vlan command [2-594](#)
- speed command [2-597](#)
- srr-queue bandwidth limit command [2-599](#)
- srr-queue bandwidth shape command [2-601](#)
- srr-queue bandwidth share command [2-603](#)
- SSH, configuring version [2-166](#)
- static-access ports, configuring [2-610](#)
- statistics, Ethernet group [2-321](#)
- sticky learning, enabling [2-627](#)
- storm-control command [2-605](#)

STP

- BackboneFast [2-553](#)
- counters, clearing [2-48](#)
- debug messages, display
 - BackboneFast events [B-68](#)
 - MSTP [B-71](#)
 - optimized BPDUs handling [B-70](#)
 - spanning-tree activity [B-66](#)
 - switch shim [B-73](#)
 - transmitted and received BPDUs [B-69](#)
 - UplinkFast [B-75](#)
- detection of indirect link failures [2-553](#)
- enabling protocol tunneling for [2-187](#)
- EtherChannel misconfiguration [2-560](#)
- extended system ID [2-562](#)
- path cost [2-558](#)
- protocol modes [2-569](#)
- root port
 - accelerating choice of new [2-592](#)
 - loop guard [2-563](#)
 - preventing from becoming designated [2-563](#)
 - restricting which can be root [2-563](#)
 - root guard [2-563](#)
 - UplinkFast [2-592](#)
- root switch
 - affects of extended system ID [2-562, 2-595](#)
 - hello-time [2-594](#)
 - interval between BDPUs messages [2-594](#)
 - interval between hello BPDU messages [2-594](#)
 - max-age [2-594](#)
 - port priority for selection of [2-585](#)
 - primary or secondary [2-594](#)
 - switch priority [2-594](#)

state changes

- blocking to forwarding state [2-589](#)
- enabling BPDU filtering [2-554, 2-587](#)
- enabling BPDU guard [2-556, 2-587](#)
- enabling Port Fast [2-587, 2-589](#)
- enabling timer to recover from error state [2-103](#)
- forward-delay time [2-594](#)
- length of listening and learning states [2-594](#)
- shutting down Port Fast-enabled ports [2-587](#)
- state information display [2-511](#)
- VLAN options [2-582, 2-594](#)

SVIs, creating [2-115](#)

SVI status calculation [2-612](#)

Switched Port Analyzer

See SPAN

switching characteristics

- modifying [2-608](#)
- returning to interfaces [2-608](#)

switchport access command [2-610](#)

switchport autostate exclude command [2-612](#)

switchport backup interface command [2-614](#)

switchport block command [2-618](#)

switchport command [2-608](#)

switchport host command [2-619](#)

switchport mode command [2-620](#)

switchport mode private-vlan command [2-623](#)

switchport nonegotiate command [2-625](#)

switchport port-security aging command [2-632](#)

switchport port-security command [2-627](#)

switchport priority extend command [2-634](#)

switchport private-vlan command [2-636](#)

switchport protected command [2-638](#)

switchports, displaying [2-389](#)

switchport trunk command [2-640](#)

switchport voice vlan command [2-643](#)

system message logging, save message to flash [2-203](#)

system mtu command [2-645](#)

system resource templates [2-322](#)

T

tar files, creating, listing, and extracting [2-11](#)

TDR, running [2-647](#)

templates, system resources [2-322](#)

test cable-diagnostics tdr command [2-647](#)

traceroute mac command [2-648](#)

traceroute mac ip command [2-651](#)

trunking, VLAN mode [2-620](#)

trunk mode [2-620](#)

trunk ports [2-620](#)

trunks, to non-DTP device [2-621](#)

trusted boundary for QoS [2-270](#)

trusted port states for QoS [2-270](#)

tunnel ports, Layer 2 protocol, displaying [2-438](#)

type (boot loader) command [A-23](#)

U
UDLD

aggressive mode [2-655, 2-657](#)

debug messages, display [B-82](#)

enable globally [2-655](#)

enable per interface [2-657](#)

error recovery timer [2-103](#)

message timer [2-655](#)

normal mode [2-655, 2-657](#)

reset a shutdown interface [2-659](#)

status [2-520](#)

udld command [2-655](#)

udld port command [2-657](#)

udld reset command [2-659](#)

unicast storm control [2-605](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-618](#)

unknown unicast traffic, preventing [2-618](#)

unset (boot loader) command [A-24](#)

upgrading

software images [2-8](#)

monitoring status of [2-340](#)

UplinkFast, for STP [2-592](#)

user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-26](#)

VLAN

enabling guest VLAN supplicant [2-65, 2-76](#)

vlan (global configuration) command [2-660](#)

vlan (VLAN configuration) command [2-666](#)

vlan access-map command [2-672](#)

VLAN access map configuration mode [2-672](#)

VLAN access maps

actions [2-6](#)

displaying [2-531](#)

VLAN-based QoS [2-272](#)

VLAN configuration

rules [2-663, 2-668](#)

saving [2-660, 2-670](#)

VLAN configuration mode

commands

VLAN [2-666](#)

VTP [2-689](#)

description [1-5](#)

entering [2-674](#)

summary [1-2](#)

vlan database command [2-674](#)

vlan dot1q tag native command [2-677](#)

vlan filter command [2-678](#)

VLAN filters, displaying [2-532](#)

VLAN ID range [2-660, 2-666](#)

VLAN maps

applying [2-678](#)

creating [2-672](#)

defining [2-228](#)

displaying [2-531](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-660](#)configuring [2-660, 2-666](#)

debug messages, display

ISL [B-79](#)VLAN IOS file system error tests [B-78](#)VLAN manager activity [B-76](#)VTP [B-80](#)displaying configurations [2-525](#)enabling guest VLAN supplicant [2-108](#)extended-range [2-660](#)

MAC addresses

displaying [2-472](#)number of [2-459](#)media types [2-663, 2-668](#)normal-range [2-660, 2-666](#)private [2-623](#)configuring [2-307](#)displaying [2-525](#)

See also private VLANs

restarting [2-540](#)saving the configuration [2-660](#)shutting down [2-540](#)SNMP traps for VTP [2-545, 2-548](#)suspending [2-540](#)variables [2-666](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [2-683](#)displaying [2-533](#)error recovery timer [2-104](#)reconfirming dynamic VLAN assignments [2-680](#)vmmps reconfirm (global configuration) command [2-681](#)vmmps reconfirm (privileged EXEC) command [2-680](#)vmmps retry command [2-682](#)vmmps server command [2-683](#)

voice VLAN

configuring [2-643](#)setting port priority [2-634](#)

VQP

and dynamic-access ports [2-610](#)clearing client statistics [2-50](#)displaying information [2-533](#)per-server retry count [2-682](#)reconfirmation interval [2-681](#)reconfirming dynamic VLAN assignments [2-680](#)

VTP

changing characteristics [2-685](#)clearing pruning counters [2-51](#)

configuring

domain name [2-685, 2-689](#)file name [2-685](#)mode [2-685, 2-689](#)password [2-685, 2-689](#)counters display fields [2-536](#)displaying information [2-535](#)

enabling

pruning [2-685, 2-689](#)tunneling for [2-187](#)Version 2 [2-685, 2-689](#)mode [2-685, 2-689](#)pruning [2-685, 2-689](#)saving the configuration [2-660, 2-670](#)statistics [2-535](#)status [2-535](#)status display fields [2-537](#)vtp (global configuration) command [2-685](#)vtp (VLAN configuration) command [2-689](#)

XXENPAK module serial EEPROM information [2-387](#)

