



INDEX

A

- aaa accounting dot1x command [2-1](#)
- aaa authentication dot1x command [2-3](#)
- aaa authorization network command [2-5, 2-16, 2-20, 2-22, 2-24, 2-26, 2-96, 2-401, B-5, B-28](#)
- AAA methods [2-3](#)
- abort command [2-741](#)
- access control entries
 - See ACEs
- access control lists
 - See ACLs
- access groups
 - IP [2-153](#)
 - MAC, displaying [2-511](#)
- access list, IPv6 [2-209](#)
- access map configuration mode [2-268](#)
- access mode [2-686](#)
- access ports [2-686](#)
- ACEs [2-87, 2-344](#)
- ACLs
 - deny [2-85](#)
 - displaying [2-388](#)
 - for non-IP protocols [2-247](#)
 - IP [2-153](#)
 - matching [2-268](#)
 - on Layer 2 interfaces [2-153](#)
 - permit [2-342](#)
- action command [2-6](#)
- address aliasing [2-319](#)
- aggregate-port learner [2-332](#)
- allowed VLANs [2-706](#)
- apply command [2-741](#)
- archive download-sw command [2-8](#)
- archive tar command [2-11](#)
- archive upload-sw command [2-14](#)
- audience [xix](#)
- authentication control-direction command [2-16](#)
- authentication event command [2-18](#)
- authentication failed VLAN
 - See dot1x auth-fail vlan
- authentication fallback command [2-20](#)
- authentication host-mode command [2-22](#)
- authentication open command [2-24](#)
- authentication order command [2-26](#)
- authentication periodic command [2-28](#)
- authentication port-control command [2-30](#)
- authentication priority command [2-32](#)
- authentication timer command [2-34](#)
- authentication violation command [2-36](#)
- auth-fail max-attempts
 - See dot1x auth-fail max-attempts
- auth-fail vlan
 - See dot1x auth-fail vlan
- auth open command [2-24](#)
- auth order command [2-26](#)
- authorization state of controlled port [2-112](#)
- auth timer command [2-34](#)
- autonegotiation of duplex mode [2-123](#)
- auto qos voip command [2-38](#)

B

BackboneFast, for STP [2-619](#)

backup interfaces

- configuring [2-680](#)
- displaying [2-447](#)

boot (boot loader) command [A-2](#)

boot config-file command [2-42](#)

boot enable-break command [2-43](#)

boot helper command [2-44](#)

boot helper-config file command [2-45](#)

booting

- Cisco IOS image [2-48](#)
- displaying environment variables [2-397](#)
- interrupting [2-43](#)
- manually [2-46](#)

boot loader

- accessing [A-1](#)
- booting
 - Cisco IOS image [A-2](#)
 - helper image [2-44](#)
- directories
 - creating [A-15](#)
 - displaying a list of [A-7](#)
 - removing [A-19](#)
- displaying
 - available commands [A-12](#)
 - memory heap utilization [A-13](#)
 - version [A-26](#)
- environment variables
 - described [A-20](#)
 - displaying settings [A-20](#)
 - location of [A-21](#)
 - setting [A-20](#)
 - unsetting [A-24](#)

boot loader (continued)

- files
 - copying [A-5](#)
 - deleting [A-6](#)
 - displaying a list of [A-7](#)
 - displaying the contents of [A-4, A-16, A-23](#)
 - renaming [A-17](#)
- file system
 - formatting [A-10](#)
 - initializing flash [A-9](#)
 - running a consistency check [A-11](#)
 - resetting the system [A-18](#)
- boot manual command [2-46](#)
- boot private-config-file command [2-47](#)
- boot system command [2-48](#)
- BPDU filtering, for spanning tree [2-620, 2-653](#)
- BPDU guard, for spanning tree [2-622, 2-653](#)
- break key detection [2-375](#)
- broadcast storm control [2-671](#)

C

cat (boot loader) command [A-4](#)

caution, description [xx](#)

CDP, enabling protocol tunneling for [2-227](#)

channel-group command [2-49](#)

channel-protocol command [2-52](#)

Cisco SoftPhone

- auto-QoS configuration [2-38](#)
- trusting packets sent from [2-310](#)

CISP

- See Client Information Signalling Protocol

cisp

- debug platform cisp command [B-28](#)

cisp enable command [2-53](#)

class command [2-54](#)

class-map command [2-56](#)

- class maps
 - creating [2-56](#)
 - defining the match criteria [2-270](#)
 - displaying [2-402](#)
- class of service
 - See CoS
- clear dot1x command [2-58](#)
- clear eap sessions command [2-59](#)
- clear energywise neighbors command [2-60](#)
- clear errdisable interface [2-61](#)
- clear ipc command [2-62](#)
- clear ip dhcp snooping database command [2-64](#)
- clear l2protocol-tunnel counters command [2-63](#)
- clear lacp command [2-66](#)
- clear mac address-table command [2-67, 2-68](#)
- clear nmsp statistics command [2-69](#)
- clear pagp command [2-70](#)
- clear port-security command [2-71](#)
- clear spanning-tree counters command [2-73](#)
- clear spanning-tree detected-protocols command [2-74](#)
- clear vmpls statistics command [2-75](#)
- clear vtp counters command [2-76](#)
- Client Information Signalling Protocol [2-53, 2-96, 2-401, B-5, B-28](#)
- clusters
 - SNMP trap [2-609](#)
- command modes defined [1-1](#)
- configuration, initial
 - See getting started guide and hardware installation guide
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-42, 2-47](#)
- configuring multiple interfaces [2-149](#)
- config-vlan mode
 - commands [2-727](#)
 - description [1-4](#)
 - entering [2-726](#)
 - summary [1-2](#)

- conventions
 - command [xix](#)
 - for examples [xx](#)
 - publication [xix](#)
 - text [xix](#)
- copy (boot loader) command [A-5](#)
- CoS
 - assigning default value to incoming packets [2-280](#)
 - assigning to Layer 2 protocol packets [2-230](#)
 - overriding the incoming value [2-280](#)
- CoS-to-DSCP map [2-284](#)
- CPU ASIC statistics, displaying [2-403](#)
- crashinfo files [2-142](#)

D

- debug auto qos command [B-2](#)
- debug backup command [B-4](#)
- debug cisp command [B-5](#)
- debug dot1x command [B-6](#)
- debug dtp command [B-7](#)
- debug eap command [B-8](#)
- debug etherchannel command [B-9](#)
- debug interface command [B-12](#)
- debug ip dhcp snooping command [B-10](#)
- debug ip igmp filter command [B-13](#)
- debug ip igmp max-groups command [B-14](#)
- debug ip igmp snooping command [B-15](#)
- debug ip verify source packet command [B-11](#)
- debug lacp command [B-16](#)
- debug lldp packets command [B-17](#)
- debug mac-notification command [B-18](#)
- debug matm command [B-19](#)
- debug matm move update command [B-20](#)
- debug monitor command [B-21](#)
- debug mvrdbg command [B-22](#)
- debug nmsp command [B-23](#)
- debug nvram command [B-24](#)
- debug pagp command [B-25](#)

- debug platform acl command [B-26](#)
- debug platform backup interface command [B-27](#)
- debug platform cisp command [B-28](#)
- debug platform cli-redirection main command [B-29](#)
- debug platform cpu-queues command [B-30](#)
- debug platform dot1x command [B-32](#)
- debug platform etherchannel command [B-33](#)
- debug platform fallback-bridging command [B-34](#)
- debug platform forw-tcam command [B-35](#)
- debug platform ip arp inspection command [B-36](#)
- debug platform ipc command [B-44](#)
- debug platform ip dhcp command [B-37](#)
- debug platform ip igmp snooping command [B-38](#)
- debug platform ip multicast command [B-40](#)
- debug platform ip unicast command [B-42](#)
- debug platform led command [B-45](#)
- debug platform matm command [B-46](#)
- debug platform messaging application command [B-47](#)
- debug platform phy command [B-48](#)
- debug platform pm command [B-50](#)
- debug platform port-asic command [B-52](#)
- debug platform port-security command [B-53](#)
- debug platform qos-acl-tcam command [B-54](#)
- debug platform remote-commands command [B-55](#)
- debug platform resource-manager command [B-56](#)
- debug platform snmp command [B-57](#)
- debug platform span command [B-58](#)
- debug platform supervisor-asic command [B-59](#)
- debug platform sw-bridge command [B-60](#)
- debug platform tcam command [B-61](#)
- debug platform udd command [B-64](#)
- debug platform vlan command [B-65](#)
- debug pm command [B-66](#)
- debug port-security command [B-68](#)
- debug qos-manager command [B-69](#)
- debug spanning-tree backbonefast command [B-72](#)
- debug spanning-tree bpdu command [B-73](#)
- debug spanning-tree bpdu-opt command [B-74](#)
- debug spanning-tree command [B-70](#)
- debug spanning-tree mstp command [B-75](#)
- debug spanning-tree switch command [B-77](#)
- debug spanning-tree uplinkfast command [B-79](#)
- debug sw-vlan command [B-80](#)
- debug sw-vlan ifs command [B-82](#)
- debug sw-vlan notification command [B-83](#)
- debug sw-vlan vtp command [B-84](#)
- debug udd command [B-86](#)
- debug vqpc command [B-88](#)
- define interface-range command [2-77](#)
- delete (boot loader) command [A-6](#)
- delete command [2-79](#)
- deny (IPv6) command [2-80](#)
- deny command [2-85](#)
- detect mechanism, causes [2-134](#)
- device manager requirements [xx](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-168](#)
 - enabling
 - on a VLAN [2-174](#)
 - option 82 [2-166, 2-168](#)
 - trust on an interface [2-172](#)
 - error recovery timer [2-139](#)
 - rate limiting [2-171](#)
- DHCP snooping binding database
 - binding file, configuring [2-164](#)
 - bindings
 - adding [2-162](#)
 - deleting [2-162](#)
 - displaying [2-462](#)
 - clearing database agent statistics [2-64](#)
 - database agent, configuring [2-164](#)
 - displaying
 - binding entries [2-462](#)
 - database agent status [2-464, 2-466](#)
 - renewing [2-368](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-79](#)
- documentation, related [xx](#)

- document conventions [xix](#)
- domain name, VTP [2-751, 2-755](#)
- dot1x auth-fail max-attempts [2-90](#)
- dot1x auth-fail vlan [2-92](#)
- dot1x command [2-88](#)
- dot1x control-direction command [2-94](#)
- dot1x credentials (global configuration) command [2-96](#)
- dot1x critical global configuration command [2-97](#)
- dot1x critical interface configuration command [2-99](#)
- dot1x default command [2-101](#)
- dot1x fallback command [2-102](#)
- dot1x guest-vlan command [2-103](#)
- dot1x host-mode command [2-105](#)
- dot1x initialize command [2-106](#)
- dot1x mac-auth-bypass command [2-107](#)
- dot1x max-reauth-req command [2-109](#)
- dot1x max-req command [2-110](#)
- dot1x pae command [2-111](#)
- dot1x port-control command [2-112](#)
- dot1x re-authenticate command [2-114](#)
- dot1x reauthentication command [2-115](#)
- dot1x test eapol-capable command [2-116](#)
- dot1x test timeout command [2-117](#)
- dot1x timeout command [2-118](#)
- dot1x violation-mode command [2-121](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-227](#)
- DSCP-to-CoS map [2-284](#)
- DSCP-to-DSCP-mutation map [2-284](#)
- DTP [2-687](#)
- DTP flap
 - error detection for [2-134](#)
 - error recovery timer [2-139](#)
- DTP negotiation [2-691](#)
- dual IPv4 and IPv6 templates [2-336](#)
- dual-purpose uplink ports
 - selecting the type [2-274](#)
- duplex command [2-122](#)

- dynamic-access ports
 - configuring [2-676](#)
 - restrictions [2-676](#)
- dynamic ARP inspection
 - error detection for [2-134](#)
- dynamic auto VLAN membership mode [2-686](#)
- dynamic desirable VLAN membership mode [2-686](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-110](#)
 - response time before retransmitting [2-118](#)
- encapsulation methods [2-706](#)
- energywise (global configuration) command [2-124, 2-126](#)
- energywise domain command [2-128](#)
- energywise query command [2-130](#)
- environment variables, displaying [2-397](#)
- errdisable detect cause command [2-134](#)
- errdisable detect cause small-frame command [2-136](#)
- errdisable recovery cause small-frame [2-138](#)
- errdisable recovery command [2-139](#)
- error conditions, displaying [2-434](#)
- error disable detection [2-134](#)
- error-disabled interfaces, displaying [2-447](#)
- EtherChannel
 - assigning Ethernet interface to channel group [2-49](#)
 - creating port-channel logical interface [2-147](#)
 - debug EtherChannel/PAgP, display [B-9](#)
 - debug platform-specific events, display [B-33](#)
 - displaying [2-438](#)
 - enabling Layer 2 protocol tunneling for
 - LACP [2-228](#)
 - PAgP [2-228](#)
 - UDLD [2-228](#)

EtherChannel (continued)

interface information, displaying [2-447](#)

LACP

clearing channel-group information [2-66](#)debug messages, display [B-16](#)displaying [2-500](#)modes [2-49](#)port priority for hot-standby ports [2-231](#)restricting a protocol [2-52](#)system priority [2-233](#)load-distribution methods [2-352](#)

PAgP

aggregate-port learner [2-332](#)clearing channel-group information [2-70](#)debug messages, display [B-25](#)displaying [2-562](#)error detection for [2-134](#)error recovery timer [2-139](#)learn method [2-332](#)modes [2-49](#)physical-port learner [2-332](#)priority of interface for transmitted traffic [2-334](#)Ethernet controller, internal register display [2-405](#)Ethernet statistics, collecting [2-371](#)examples, conventions for [xx](#)exception crashinfo command [2-142](#)exit command [2-741](#)

extended-range VLANs

and allowed VLAN list [2-706](#)and pruning-eligible list [2-706](#)configuring [2-726](#)extended system ID for STP [2-628](#)

Ffallback profile command [2-143](#)

fallback profiles

displaying [2-441](#)file name, VTP [2-751](#)files, deleting [2-79](#)flash_init (boot loader) command [A-9](#)flexible authentication ordering [2-26](#)

Flex Links

configuring [2-680](#)configuring preferred VLAN [2-682](#)displaying [2-447](#)flowcontrol command [2-145](#)format (boot loader) command [A-10](#)forwarding packets, with ACL matches [2-6](#)forwarding results, display [C-6](#)frame forwarding information, displaying [C-6](#)fsck (boot loader) command [A-11](#)

Gglobal configuration mode [1-2, 1-3](#)

Hhardware ACL statistics [2-388](#)help (boot loader) command [A-12](#)hierarchical policy maps [2-350](#)host connection, port configuration [2-685](#)host ports, private VLANs [2-689](#)

IIEEE 802.1Q trunk ports and native VLANs [2-743](#)

IEEE 802.1Q tunnel ports

configuring [2-686](#)displaying [2-417](#)limitations [2-687](#)

IEEE 802.1x

and switchport modes [2-687](#)violation error recovery [2-139](#)

See also port-based authentication

- IEEE 802.1X Port Based Authentication
 - enabling guest VLAN supplicant [2-91, 2-102, 2-144](#)
- IGMP filters
 - applying [2-177](#)
 - debug messages, display [B-13](#)
- IGMP groups, setting maximum [2-179](#)
- IGMP maximum groups, debugging [B-14](#)
- IGMP profiles
 - creating [2-181](#)
 - displaying [2-469](#)
- IGMP snooping
 - adding ports as a static member of a group [2-197](#)
 - displaying [2-470, 2-475, 2-477](#)
 - enabling [2-183](#)
 - enabling the configurable-leave timer [2-185](#)
 - enabling the Immediate-Leave feature [2-194](#)
 - flooding query count [2-191](#)
 - interface topology change notification behavior [2-193](#)
 - multicast table [2-473](#)
 - querier [2-187](#)
 - query solicitation [2-191](#)
 - report suppression [2-189](#)
 - switch topology change notification behavior [2-191](#)
- images
 - See software images
- Immediate-Leave feature, MVR [2-321](#)
- Immediate-Leave processing
 - IPv6 [2-223](#)
- immediate-leave processing [2-194](#)
- initial configuration
 - See getting started guide and hardware installation guide
- interface configuration mode [1-2, 1-4](#)
- interface port-channel command [2-147](#)
- interface range command [2-149](#)
- interface-range macros [2-77](#)
- interfaces
 - assigning Ethernet interface to channel group [2-49](#)
 - configuring [2-122](#)
- interfaces (continued)
 - configuring multiple [2-149](#)
 - creating port-channel logical [2-147](#)
 - debug messages, display [B-12](#)
 - disabling [2-605](#)
 - displaying the MAC address table [2-523](#)
 - restarting [2-605](#)
- interface speed, configuring [2-663](#)
- interface vlan command [2-151](#)
- internal registers, displaying [2-405, 2-413](#)
- Internet Group Management Protocol
 - See IGMP
- invalid GBIC
 - error detection for [2-134](#)
 - error recovery timer [2-139](#)
- ip access-group command [2-153](#)
- ip address command [2-156](#)
- IP addresses, setting [2-156](#)
- IP address matching [2-268](#)
- ip admission command [2-158](#)
- ip admission name proxy http command [2-159](#)
- IP DHCP snooping
 - See DHCP snooping
- ip dhcp snooping binding command [2-162](#)
- ip dhcp snooping command [2-161](#)
- ip dhcp snooping database command [2-164](#)
- ip dhcp snooping information option allow-untrusted command [2-168](#)
- ip dhcp snooping information option command [2-166](#)
- ip dhcp snooping information option format remote-id command [2-170](#)
- ip dhcp snooping limit rate command [2-171](#)
- ip dhcp snooping trust command [2-172](#)
- ip dhcp snooping verify command [2-173](#)
- ip dhcp snooping vlan command [2-174](#)
- ip dhcp snooping vlan information option format-type circuit-id string command [2-175](#)
- ip igmp filter command [2-177](#)
- ip igmp max-groups command [2-179, 2-204, 2-206](#)
- ip igmp profile command [2-181](#)

ip igmp snooping command [2-183](#)
 ip igmp snooping last-member-query-interval command [2-185](#)
 ip igmp snooping querier command [2-187](#)
 ip igmp snooping report-suppression command [2-189](#)
 ip igmp snooping tcn command [2-191](#)
 ip igmp snooping tcn flood command [2-193](#)
 ip igmp snooping vlan immediate-leave command [2-194](#)
 ip igmp snooping vlan mrouter command [2-195](#)
 ip igmp snooping vlan static command [2-197](#)
 IP multicast addresses [2-318](#)
 IP phones
 auto-QoS configuration [2-38](#)
 trusting packets sent from [2-310](#)
 IP-precedence-to-DSCP map [2-284](#)
 ip snap forwarding command [2-199](#)
 ip source binding command [2-200](#)
 IP source guard
 disabling [2-208](#)
 displaying
 binding entries [2-479](#)
 configuration [2-481](#)
 dynamic binding entries only [2-462](#)
 enabling [2-208](#)
 static IP source bindings [2-200](#)
 ip ssh command [2-202](#)
 IPv6 access list
 deny conditions [2-80](#)
 ipv6 access-list command [2-209](#)
 ipv6 mld snooping command [2-211](#)
 ipv6 mld snooping last-listener-query count command [2-213](#)
 ipv6 mld snooping last-listener-query-interval command [2-215](#)
 ipv6 mld snooping listener-message-suppression command [2-217](#)
 ipv6 mld snooping robustness-variable command [2-219](#)
 ipv6 mld snooping tcn command [2-221](#)
 ipv6 mld snooping vlan command [2-223](#)
 IPv6 SDM template [2-372](#)

ipv6 traffic-filter command [2-225](#)
 ip verify source command [2-208](#)

J

jumbo frames
 See MTU

L

l2protocol-tunnel command [2-227](#)
 l2protocol-tunnel cos command [2-230](#)
 LACP
 See EtherChannel
 lacp port-priority command [2-231](#)
 lacp system-priority command [2-233](#)
 Layer 2 mode, enabling [2-674](#)
 Layer 2 protocol ports, displaying [2-497](#)
 Layer 2 protocol-tunnel
 error detection for [2-134](#)
 error recovery timer [2-139](#)
 Layer 2 protocol tunnel counters [2-63](#)
 Layer 2 protocol tunneling error recovery [2-228](#)
 Layer 2 traceroute
 IP addresses [2-717](#)
 MAC addresses [2-714](#)
 Layer 3 mode, enabling [2-674](#)
 line configuration mode [1-2, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-134](#)
 error recovery timer [2-139](#)
 link state group command [2-239](#)
 link state track command [2-241](#)
 load-distribution methods for EtherChannel [2-352](#)
 location (global configuration) command [2-235](#)
 location (interface configuration) command [2-237](#)

- logging event command [2-242](#)
- logging file command [2-243](#)
- logical interface [2-147](#)
- loopback error
 - detection for [2-134](#)
 - recovery timer [2-139](#)
- loop guard, for spanning tree [2-629, 2-633](#)

M

- mac access-group command [2-245](#)
- MAC access-groups, displaying [2-511](#)
- MAC access list configuration mode [2-247](#)
- mac access-list extended command [2-247](#)
- MAC access lists [2-85](#)
- MAC addresses
 - disabling MAC address learning per VLAN [2-250](#)
 - displaying
 - aging time [2-517](#)
 - all [2-515](#)
 - dynamic [2-521](#)
 - MAC address-table move updates [2-526](#)
 - notification settings [2-525, 2-528](#)
 - number of addresses in a VLAN [2-519](#)
 - per interface [2-523](#)
 - per VLAN [2-532](#)
 - static [2-530](#)
 - static and dynamic entries [2-513](#)
 - dynamic
 - aging time [2-249](#)
 - deleting [2-67](#)
 - displaying [2-521](#)
 - enabling MAC address notification [2-254](#)
 - enabling MAC address-table move update [2-252](#)
 - matching [2-268](#)
 - static
 - adding and removing [2-256](#)
 - displaying [2-530](#)
 - dropping on an interface [2-257](#)

- MAC addresses (continued)
 - tables [2-515](#)
- mac address notification, debugging [B-18](#)
- mac address-table aging-time [2-245, 2-268](#)
- mac address-table aging-time command [2-249](#)
- mac address-table learning command [2-250](#)
- mac address-table move update command [2-252](#)
- mac address-table notification command [2-254](#)
- mac address-table static command [2-256](#)
- mac address-table static drop command [2-257](#)
- macro apply command [2-259](#)
- macro description command [2-262](#)
- macro global command [2-263](#)
- macro global description command [2-265](#)
- macro name command [2-266](#)
- macros
 - adding a description [2-262](#)
 - adding a global description [2-265](#)
 - applying [2-263](#)
 - creating [2-266](#)
 - displaying [2-564](#)
 - interface range [2-77, 2-149](#)
 - specifying parameter values [2-263](#)
 - tracing [2-263](#)
- manual
 - audience [xix](#)
 - purpose of [xix](#)
- maps
 - QoS
 - defining [2-284](#)
 - displaying [2-542](#)
 - VLAN
 - creating [2-738](#)
 - defining [2-268](#)
 - displaying [2-596](#)
- match (access-map configuration) command [2-268](#)
- match (class-map configuration) command [2-270](#)
- maximum transmission unit
 - See MTU

- mdix auto command [2-272](#)
- MDL snooping
 - displaying [2-491](#)
- media-type command [2-274](#)
- memory (boot loader) command [A-13](#)
- mkdir (boot loader) command [A-15](#)
- MLD snooping
 - configuring [2-217, 2-219](#)
 - configuring queries [2-213, 2-215](#)
 - configuring topology change notification [2-221](#)
 - displaying [2-489, 2-493, 2-495](#)
 - enabling [2-211](#)
- MLD snooping on a VLAN
 - enabling [2-223](#)
- mls qos aggregate-policer command [2-278](#)
- mls qos command [2-276](#)
- mls qos cos command [2-280](#)
- mls qos dscp-mutation command [2-282](#)
- mls qos map command [2-284](#)
- mls qos queue-set output buffers command [2-288](#)
- mls qos queue-set output threshold command [2-290](#)
- mls qos rewrite ip dscp command [2-292](#)
- mls qos srr-queue input bandwidth command [2-294](#)
- mls qos srr-queue input buffers command [2-296](#)
- mls qos srr-queue input cos-map command [2-298](#)
- mls qos srr-queue input dscp-map command [2-300](#)
- mls qos srr-queue input priority-queue command [2-302](#)
- mls qos srr-queue input threshold command [2-304](#)
- mls qos srr-queue output cos-map command [2-306](#)
- mls qos srr-queue output dscp-map command [2-308](#)
- mls qos trust command [2-310](#)
- mls qos vlan-based command [2-312](#)
- mode, MVR [2-318](#)
- Mode button, and password recovery [2-375](#)
- modes, commands [1-1](#)
- monitor session command [2-313](#)
- more (boot loader) command [A-16](#)
- MSTP
 - displaying [2-577](#)
 - interoperability [2-74](#)
 - link type [2-631](#)
 - MST region
 - aborting changes [2-637](#)
 - applying changes [2-637](#)
 - configuration name [2-637](#)
 - configuration revision number [2-637](#)
 - current or pending display [2-637](#)
 - displaying [2-577](#)
 - MST configuration mode [2-637](#)
 - VLANs-to-instance mapping [2-637](#)
 - path cost [2-639](#)
 - protocol mode [2-635](#)
 - restart protocol migration process [2-74](#)
 - root port
 - loop guard [2-629](#)
 - preventing from becoming designated [2-629](#)
 - restricting which can be root [2-629](#)
 - root guard [2-629](#)
 - root switch
 - affects of extended system ID [2-628](#)
 - hello-time [2-642, 2-649](#)
 - interval between BDPU messages [2-643](#)
 - interval between hello BPDU messages [2-642, 2-649](#)
 - max-age [2-643](#)
 - maximum hop count before discarding BPDU [2-644](#)
 - port priority for selection of [2-645](#)
 - primary or secondary [2-649](#)
 - switch priority [2-648](#)
 - state changes
 - blocking to forwarding state [2-655](#)
 - enabling BPDU filtering [2-620, 2-653](#)
 - enabling BPDU guard [2-622, 2-653](#)
 - enabling Port Fast [2-653, 2-655](#)
 - forward-delay time [2-641](#)

MSTP (continued)

- length of listening and learning states [2-641](#)
- rapid transition to forwarding [2-631](#)
- shutting down Port Fast-enabled ports [2-653](#)

state information display [2-576](#)

MTU

- configuring size [2-711](#)
- displaying global setting [2-584](#)

multicast group address, MVR [2-321](#)

multicast groups, MVR [2-319](#)

Multicast Listener Discovery

See MLD

multicast router learning method [2-195](#)

multicast router ports

IPv6 [2-223](#)

multicast router ports, configuring [2-195](#)

multicast storm control [2-671](#)

multicast VLAN, MVR [2-318](#)

multicast VLAN registration

See MVR

multiple hosts on authorized port [2-105](#)

Multiple Spanning Tree Protocol

See MSTP

MVR

- and address aliasing [2-319](#)
- configuring [2-318](#)
- configuring interfaces [2-321](#)
- debug messages, display [B-22](#)
- displaying [2-551](#)
- displaying interface information [2-553](#)
- members, displaying [2-555](#)

mvr (global configuration) command [2-318](#)

mvr (interface configuration) command [2-321](#)

mvr vlan group command [2-322](#)

network-policy (global configuration) command [2-325](#)

network-policy command [2-324](#)

network-policy profile (network-policy configuration) command [2-327](#)

nmosp attachment suppress command [2-331](#)

nmosp command [2-329](#)

nonegotiate

DTP messaging [2-691](#)

nonegotiate, speed [2-663](#)

non-IP protocols

denying [2-85](#)

forwarding [2-342](#)

non-IP traffic access lists [2-247](#)

non-IP traffic forwarding

denying [2-85](#)

permitting [2-342](#)

normal-range VLANs [2-726, 2-732](#)

note, description [xx](#)

no vlan command [2-726, 2-736](#)

O**online diagnostics**

displaying

configured boot-up coverage level [2-417](#)

current scheduled tasks [2-417](#)

event logs [2-417](#)

supported test suites [2-417](#)

test ID [2-417](#)

test results [2-417](#)

test statistics [2-417](#)

P**PAGP**

See EtherChannel

pagp learn-method command [2-332](#)

pagp port-priority command [2-334](#)

password, VTP [2-751, 2-755](#)

N

native VLANs [2-706](#)

native VLAN tagging [2-743](#)

- password-recovery mechanism, enabling and disabling [2-375](#)
- permit (IPv6) command [2-336](#)
- permit (MAC access-list configuration) command [2-342](#)
- per-VLAN spanning-tree plus
 - See STP
- physical-port learner [2-332](#)
- PID, displaying [2-460](#)
- PIM-DVMRP, as multicast router learning method [2-195](#)
- police aggregate command [2-347](#)
- police command [2-345](#)
- policed-DSCP map [2-284](#)
- policy-map command [2-349](#)
- policy maps
 - applying to an interface [2-378, 2-383](#)
 - creating [2-349](#)
 - displaying [2-567](#)
 - hierarchical [2-350](#)
 - policers
 - displaying [2-535](#)
 - for a single class [2-345](#)
 - for multiple classes [2-278, 2-347](#)
 - policed-DSCP map [2-284](#)
 - traffic classification
 - defining the class [2-54](#)
 - defining trust states [2-719](#)
 - setting DSCP or IP precedence values [2-381](#)
- Port Aggregation Protocol
 - See EtherChannel
- port-based authentication
 - AAA method list [2-3](#)
 - configuring violation modes [2-121](#)
 - debug messages, display [B-6](#)
 - enabling IEEE 802.1x
 - globally [2-88](#)
 - per interface [2-112](#)
 - guest VLAN [2-103](#)
 - host modes [2-105](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - port-based authentication (continued)
 - initialize an interface [2-106, 2-117](#)
 - MAC authentication bypass [2-107](#)
 - manual control of authorization state [2-112](#)
 - multiple hosts on authorized port [2-105](#)
 - PAE as authenticator [2-111](#)
 - periodic re-authentication
 - enabling [2-115](#)
 - time between attempts [2-118](#)
 - quiet period between failed authentication exchanges [2-118](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-114](#)
 - resetting configurable IEEE 802.1x parameters [2-101](#)
 - switch-to-authentication server retransmission time [2-118](#)
 - switch-to-client frame-retransmission number [2-109 to 2-110](#)
 - switch-to-client retransmission time [2-118](#)
 - test for IEEE 802.1x readiness [2-116](#)
- port-channel load-balance command [2-352](#)
- Port Fast, for spanning tree [2-655](#)
- port ranges, defining [2-77](#)
- ports, debugging [B-66](#)
- ports, protected [2-704](#)
- port security
 - aging [2-698](#)
 - debug messages, display [B-68](#)
 - enabling [2-693](#)
 - violation error recovery [2-139](#)
- port trust states for QoS [2-310](#)
- port types, MVR [2-321](#)
- priority-queue command [2-354](#)
- private-vlan command [2-356](#)
- private-vlan mapping command [2-359](#)
- private VLANs
 - association [2-702](#)
 - configuring [2-356](#)
 - configuring ports [2-689](#)
 - displaying [2-590](#)
 - host ports [2-689](#)

private VLANs (continued)

mapping

configuring [2-702](#)displaying [2-447](#)promiscuous ports [2-689](#)privileged EXEC mode [1-2, 1-3](#)product identification information, displaying [2-460](#)promiscuous ports, private VLANs [2-689](#)protected ports, displaying [2-454](#)

pruning

VLANs [2-706](#)

VTP

displaying interface information [2-447](#)enabling [2-751, 2-755](#)pruning-eligible VLAN list [2-708](#)

PVST+

See STP

Q

QoS

auto-QoS

configuring [2-38](#)debug messages, display [B-2](#)displaying [2-393](#)

class maps

creating [2-56](#)defining the match criteria [2-270](#)displaying [2-402](#)defining the CoS value for an incoming packet [2-280](#)displaying configuration information [2-393, 2-534](#)DSCP transparency [2-292](#)

DSCP trusted ports

applying DSCP-to-DSCP-mutation map to [2-282](#)defining DSCP-to-DSCP-mutation map [2-284](#)

egress queues

allocating buffers [2-288](#)defining the CoS output queue threshold map [2-306](#)

QoS (continued)

defining the DSCP output queue threshold map [2-308](#)displaying buffer allocations [2-538](#)displaying CoS output queue threshold map [2-542](#)displaying DSCP output queue threshold map [2-542](#)displaying queueing strategy [2-538](#)displaying queue-set settings [2-545](#)enabling bandwidth shaping and scheduling [2-667](#)enabling bandwidth sharing and scheduling [2-669](#)limiting the maximum output on a port [2-665](#)mapping a port to a queue-set [2-361](#)mapping CoS values to a queue and threshold [2-306](#)mapping DSCP values to a queue and threshold [2-308](#)setting maximum and reserved memory allocations [2-290](#)setting WTD thresholds [2-290](#)enabling [2-276](#)

ingress queues

allocating buffers [2-296](#)assigning SRR scheduling weights [2-294](#)defining the CoS input queue threshold map [2-298](#)defining the DSCP input queue threshold map [2-300](#)displaying buffer allocations [2-538](#)displaying CoS input queue threshold map [2-542](#)displaying DSCP input queue threshold map [2-542](#)displaying queueing strategy [2-538](#)displaying settings for [2-536](#)enabling the priority queue [2-302](#)mapping CoS values to a queue and threshold [2-298](#)mapping DSCP values to a queue and threshold [2-300](#)setting WTD thresholds [2-304](#)

QoS (continued)

maps

defining [2-284, 2-298, 2-300, 2-306, 2-308](#)displaying [2-542](#)

policy maps

applying an aggregate policer [2-347](#)applying to an interface [2-378, 2-383](#)creating [2-349](#)defining policers [2-278, 2-345](#)displaying policers [2-535](#)displaying policy maps [2-567](#)hierarchical [2-350](#)policed-DSCP map [2-284](#)setting DSCP or IP precedence values [2-381](#)traffic classifications [2-54](#)trust states [2-719](#)port trust states [2-310](#)queues, enabling the expedite [2-354](#)

statistics

in-profile and out-of-profile packets [2-538](#)packets enqueued or dropped [2-538](#)sent and received CoS values [2-538](#)sent and received DSCP values [2-538](#)trusted boundary for IP phones [2-310](#)VLAN-based [2-312](#)

quality of service

See QoS

querytime, MVR [2-318](#)queue-set command [2-361](#)**R**radius-server dead-criteria command [2-362](#)radius-server host command [2-364](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

re-authenticating IEEE 802.1x-enabled ports [2-114](#)

re-authentication

periodic [2-115](#)time between attempts [2-118](#)receiver ports, MVR [2-321](#)receiving flow-control packets [2-145](#)

recovery mechanism

causes [2-139](#)display [2-61, 2-399, 2-432, 2-436](#)timer interval [2-140](#)remote-span command [2-366](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-17](#)renew ip dhcp snooping database command [2-368](#)

requirements

device manager [xx](#)reset (boot loader) command [A-18](#)reset command [2-741](#)resource templates, displaying [2-572](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)rmon collection stats command [2-371](#)root guard, for spanning tree [2-629](#)

routed ports

IP addresses on [2-157](#)number supported [2-157](#)

RSPAN

configuring [2-313](#)displaying [2-548](#)filter RSPAN traffic [2-313](#)remote-span command [2-366](#)

sessions

add interfaces to [2-313](#)displaying [2-548](#)start new [2-313](#)

S

- sdm prefer command [2-372](#)
- SDM templates
 - allowed resources [2-373](#)
 - displaying [2-572](#)
 - dual IPv4 and IPv6 [2-372](#)
- secure ports, limitations [2-695](#)
- sending flow-control packets [2-145](#)
- service password-recovery command [2-375](#)
- service-policy command [2-378](#)
- set (boot loader) command [A-20](#)
- set command [2-381](#)
- setup command [2-383](#)
- setup express command [2-386](#)
- show access-lists command [2-388](#)
- show archive status command [2-391](#)
- show authentication command [2-392](#)
- show auto qos command [2-393](#)
- show boot command [2-397](#)
- show cable-diagnostics tdr command [2-399](#)
- show changes command [2-741](#)
- show cisp command [2-401](#)
- show class-map command [2-402](#)
- show controllers cpu-interface command [2-403](#)
- show controllers ethernet-controller command [2-405](#)
- show controllers tcam command [2-413](#)
- show controller utilization command [2-415](#)
- show current command [2-741](#)
- show dot1q-tunnel command [2-417](#)
- show dot1x command [2-418](#)
- show dtp [2-422](#)
- show eap command [2-424](#)
- show energywise command [2-427](#)
- show env command [2-431](#)
- show errdisable detect command [2-432](#)
- show errdisable flap-values command [2-434](#)
- show errdisable recovery command [2-436](#)
- show etherchannel command [2-438](#)
- show fallback profile command [2-441](#)
- show flowcontrol command [2-443](#)
- show idprom command [2-445](#)
- show interfaces command [2-447](#)
- show interfaces counters command [2-457](#)
- show inventory command [2-460](#)
- show ipc command [2-483](#)
- show ip dhcp snooping binding command [2-462](#)
- show ip dhcp snooping command [2-461](#)
- show ip dhcp snooping database command [2-464, 2-466](#)
- show ip igmp profile command [2-469](#)
- show ip igmp snooping address command [2-491](#)
- show ip igmp snooping command [2-470, 2-489](#)
- show ip igmp snooping groups command [2-473](#)
- show ip igmp snooping mrouter command [2-475, 2-493](#)
- show ip igmp snooping querier command [2-477, 2-495](#)
- show ip source binding command [2-479](#)
- show ipv6 access-list command [2-487](#)
- show ip verify source command [2-481](#)
- show l2protocol-tunnel command [2-497](#)
- show lacp command [2-500](#)
- show link state group command [2-507, 2-509](#)
- show location [2-504](#)
- show mac access-group command [2-511](#)
- show mac address-table address command [2-515](#)
- show mac address-table aging time command [2-517](#)
- show mac address-table command [2-513](#)
- show mac address-table count command [2-519](#)
- show mac address-table dynamic command [2-521](#)
- show mac address-table interface command [2-523](#)
- show mac address-table learning command [2-525](#)
- show mac address-table move update command [2-526](#)
- show mac address-table notification command [2-68, 2-528, B-20](#)
- show mac address-table static command [2-530](#)
- show mac address-table vlan command [2-532](#)
- show mls qos aggregate-policer command [2-535](#)
- show mls qos command [2-534](#)
- show mls qos input-queue command [2-536](#)

- show mls qos interface command [2-538](#)
- show mls qos maps command [2-542](#)
- show mls qos queue-set command [2-545](#)
- show mls qos vlan command [2-547](#)
- show monitor command [2-548](#)
- show mvr command [2-551](#)
- show mvr interface command [2-553](#)
- show mvr members command [2-555](#)
- show network-policy profile command [2-557](#)
- show nmsp command [2-559](#)
- show pagp command [2-562](#)
- show parser macro command [2-564](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform igmp snooping command [C-8](#)
- show platform ipc trace command [C-15](#)
- show platform ip multicast command [C-10](#)
- show platform ip unicast command [C-11](#)
- show platform ipv6 unicast command [C-16](#)
- show platform layer4op command [C-18](#)
- show platform mac-address-table command [C-19](#)
- show platform messaging command [C-20](#)
- show platform monitor command [C-21](#)
- show platform mvr table command [C-22](#)
- show platform pm command [C-23](#)
- show platform port-asic command [C-24](#)
- show platform port-security command [C-29](#)
- show platform qos command [C-30](#)
- show platform resource-manager command [C-31](#)
- show platform snmp counters command [C-33](#)
- show platform spanning-tree command [C-34](#)
- show platform stp-instance command [C-35](#)
- show platform team command [C-36](#)
- show platform vlan command [C-39](#)
- show policy-map command [2-567](#)
- show port security command [2-569](#)
- show proposed command [2-741](#)
- show sdm prefer command [2-572](#)
- show setup express command [2-575](#)
- show spanning-tree command [2-576](#)
- show storm-control command [2-582](#)
- show system mtu command [2-584](#)
- show trust command [2-719](#)
- show udd command [2-585](#)
- show version command [2-588](#)
- show vlan access-map command [2-596](#)
- show vlan command [2-590](#)
- show vlan command, fields [2-592](#)
- show vlan filter command [2-597](#)
- show vmps command [2-598](#)
- show vtp command [2-600](#)
- shutdown command [2-605](#)
- shutdown threshold, Layer 2 protocol tunneling [2-227](#)
- shutdown vlan command [2-606](#)
- small violation-rate command [2-607](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-613](#)
- SNMP informs, enabling the sending of [2-609](#)
- snmp-server enable traps command [2-609](#)
- snmp-server host command [2-613](#)
- snmp trap mac-notification command [2-617](#)
- SNMP traps
 - enabling MAC address notification trap [2-617](#)
 - enabling the MAC address notification feature [2-254](#)
 - enabling the sending of [2-609](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-79](#)
 - downloading [2-8](#)
 - upgrading [2-8](#)
 - uploading [2-14](#)
- software version, displaying [2-588](#)
- source ports, MVR [2-321](#)

SPAN

- configuring [2-313](#)
- debug messages, display [B-21](#)
- displaying [2-548](#)
- filter SPAN traffic [2-313](#)
- sessions
 - add interfaces to [2-313](#)
 - displaying [2-548](#)
 - start new [2-313](#)

spanning [2-657](#)

- spanning-tree backbonefast command [2-619](#)
- spanning-tree bpdudfilter command [2-620](#)
- spanning-tree bpduguard command [2-622](#)
- spanning-tree cost command [2-624](#)
- spanning-tree etherchannel command [2-626](#)
- spanning-tree extend system-id command [2-628](#)
- spanning-tree guard command [2-629](#)
- spanning-tree link-type command [2-631](#)
- spanning-tree loopguard default command [2-633](#)
- spanning-tree mode command [2-635](#)
- spanning-tree mst configuration command [2-637](#)
- spanning-tree mst cost command [2-639](#)
- spanning-tree mst forward-time command [2-641](#)
- spanning-tree mst hello-time command [2-642](#)
- spanning-tree mst max-age command [2-643](#)
- spanning-tree mst max-hops command [2-644](#)
- spanning-tree mst port-priority command [2-645](#)
- spanning-tree mst pre-standard command [2-647](#)
- spanning-tree mst priority command [2-648](#)
- spanning-tree mst root command [2-649](#)
- spanning-tree portfast (global configuration) command [2-653](#)
- spanning-tree portfast (interface configuration) command [2-655](#)
- spanning-tree port-priority command [2-651](#)

Spanning Tree Protocol

See STP

- spanning-tree transmit hold-count command [2-657](#)
- spanning-tree uplinkfast command [2-658](#)

- spanning-tree vlan command [2-660](#)
- speed command [2-663](#)
- srr-queue bandwidth limit command [2-665](#)
- srr-queue bandwidth shape command [2-667](#)
- srr-queue bandwidth share command [2-669](#)
- SSH, configuring version [2-202](#)
- static-access ports, configuring [2-676](#)
- statistics, Ethernet group [2-371](#)
- sticky learning, enabling [2-693](#)
- storm-control command [2-671](#)

STP

- BackboneFast [2-619](#)
- counters, clearing [2-73](#)
- debug messages, display
 - BackboneFast events [B-72](#)
 - MSTP [B-75](#)
 - optimized BPDUs handling [B-74](#)
 - spanning-tree activity [B-70](#)
 - switch shim [B-77](#)
 - transmitted and received BPDUs [B-73](#)
 - UplinkFast [B-79](#)
- detection of indirect link failures [2-619](#)
- enabling protocol tunneling for [2-227](#)
- EtherChannel misconfiguration [2-626](#)
- extended system ID [2-628](#)
- path cost [2-624](#)
- protocol modes [2-635](#)
- root port
 - accelerating choice of new [2-658](#)
 - loop guard [2-629](#)
 - preventing from becoming designated [2-629](#)
 - restricting which can be root [2-629](#)
 - root guard [2-629](#)
 - UplinkFast [2-658](#)

STP (continued)

root switch

- affects of extended system ID [2-628, 2-661](#)
- hello-time [2-660](#)
- interval between BPDU messages [2-660](#)
- interval between hello BPDU messages [2-660](#)
- max-age [2-660](#)
- port priority for selection of [2-651](#)
- primary or secondary [2-660](#)
- switch priority [2-660](#)

state changes

- blocking to forwarding state [2-655](#)
- enabling BPDU filtering [2-620, 2-653](#)
- enabling BPDU guard [2-622, 2-653](#)
- enabling Port Fast [2-653, 2-655](#)
- enabling timer to recover from error state [2-139](#)
- forward-delay time [2-660](#)
- length of listening and learning states [2-660](#)
- shutting down Port Fast-enabled ports [2-653](#)

state information display [2-576](#)VLAN options [2-648, 2-660](#)SVIs, creating [2-151](#)SVI status calculation [2-678](#)

Switched Port Analyzer

See SPAN

switching characteristics

- modifying [2-674](#)
- returning to interfaces [2-674](#)

switchport access command [2-676](#)switchport autostate exclude command [2-678](#)switchport backup interface command [2-680](#)switchport block command [2-684](#)switchport command [2-674](#)switchport host command [2-685](#)switchport mode command [2-686](#)switchport mode private-vlan command [2-689](#)switchport nonegotiate command [2-691](#)switchport port-security aging command [2-698](#)switchport port-security command [2-693](#)switchport priority extend command [2-700](#)switchport private-vlan command [2-702](#)switchport protected command [2-704](#)switchports, displaying [2-447](#)switchport trunk command [2-706](#)switchport voice vlan command [2-709](#)system message logging, save message to flash [2-243](#)system mtu command [2-711](#)system resource templates [2-372](#)

T
tar files, creating, listing, and extracting [2-11](#)TDR, running [2-713](#)templates, system resources [2-372](#)test cable-diagnostics tdr command [2-713](#)traceroute mac command [2-714](#)traceroute mac ip command [2-717](#)trunking, VLAN mode [2-686](#)trunk mode [2-686](#)trunk ports [2-686](#)trunks, to non-DTP device [2-687](#)trusted boundary for QoS [2-310](#)trusted port states for QoS [2-310](#)tunnel ports, Layer 2 protocol, displaying [2-497](#)type (boot loader) command [A-23](#)

U

UDLD

aggressive mode [2-721, 2-723](#)debug messages, display [B-86](#)enable globally [2-721](#)enable per interface [2-723](#)error recovery timer [2-139](#)message timer [2-721](#)normal mode [2-721, 2-723](#)

UDLD (continued)

- reset a shutdown interface [2-725](#)

- status [2-585](#)

- udld command [2-721](#)

- udld port command [2-723](#)

- udld reset command [2-725](#)

- unicast storm control [2-671](#)

UniDirectional Link Detection

- See UDLD

- unknown multicast traffic, preventing [2-684](#)

- unknown unicast traffic, preventing [2-684](#)

- unset (boot loader) command [A-24](#)

upgrading

- software images [2-8](#)

- monitoring status of [2-391](#)

upgrading information

- See release notes

- UplinkFast, for STP [2-658](#)

- user EXEC mode [1-2, 1-3](#)

V

- version (boot loader) command [A-26](#)

VLAN

- enabling guest VLAN supplicant [2-91, 2-102](#)

- vlan (global configuration) command [2-726](#)

- vlan (VLAN configuration) command [2-732](#)

- vlan access-map command [2-738](#)

- VLAN access map configuration mode [2-738](#)

VLAN access maps

- actions [2-6](#)

- displaying [2-596](#)

- VLAN-based QoS [2-312](#)

VLAN configuration

- rules [2-729, 2-734](#)

- saving [2-726, 2-736](#)

VLAN configuration mode

- commands

- VLAN [2-732](#)

- VTP [2-755](#)

- description [1-5](#)

- entering [2-740](#)

- summary [1-2](#)

- vlan database command [2-740](#)

- vlan dot1q tag native command [2-743](#)

- vlan filter command [2-744](#)

- VLAN filters, displaying [2-597](#)

- VLAN ID range [2-726, 2-732](#)

VLAN maps

- applying [2-744](#)

- creating [2-738](#)

- defining [2-268](#)

- displaying [2-596](#)

VLAN Query Protocol

- See VQP

VLANs

- adding [2-726](#)

- configuring [2-726, 2-732](#)

- debug messages, display

- ISL [B-83](#)

- VLAN IOS file system error tests [B-82](#)

- VLAN manager activity [B-80](#)

- VTP [B-84](#)

- displaying configurations [2-590](#)

- enabling guest VLAN supplicant [2-144](#)

- extended-range [2-726](#)

MAC addresses

- displaying [2-532](#)

- number of [2-519](#)

- media types [2-729, 2-734](#)

- normal-range [2-726, 2-732](#)

- private [2-689](#)

- configuring [2-356](#)

- displaying [2-590](#)

- See also private VLANs

VLANs (continued)

- restarting [2-606](#)
- saving the configuration [2-726](#)
- shutting down [2-606](#)
- SNMP traps for VTP [2-611, 2-614](#)
- suspending [2-606](#)
- variables [2-732](#)

VLAN Trunking Protocol

See VTP

VMPS

- configuring servers [2-749](#)
- displaying [2-598](#)
- error recovery timer [2-140](#)
- reconfirming dynamic VLAN assignments [2-746](#)

vmps reconfirm (global configuration) command [2-747](#)

vmps reconfirm (privileged EXEC) command [2-746](#)

vmps retry command [2-748](#)

vmps server command [2-749](#)

voice VLAN

- configuring [2-709](#)
- setting port priority [2-700](#)

VQP

- and dynamic-access ports [2-676](#)
- clearing client statistics [2-75](#)
- displaying information [2-598](#)
- per-server retry count [2-748](#)
- reconfirmation interval [2-747](#)
- reconfirming dynamic VLAN assignments [2-746](#)

VTP

- changing characteristics [2-751](#)
- clearing pruning counters [2-76](#)
- configuring
 - domain name [2-751, 2-755](#)
 - file name [2-751](#)
 - mode [2-751, 2-755](#)
 - password [2-751, 2-755](#)
- counters display fields [2-601](#)
- displaying information [2-600](#)

VTP (continued)

- enabling
 - pruning [2-751, 2-755](#)
 - tunneling for [2-227](#)
 - Version 2 [2-751, 2-755](#)
- mode [2-751, 2-755](#)
- pruning [2-751, 2-755](#)
- saving the configuration [2-726, 2-736](#)
- statistics [2-600](#)
- status [2-600](#)
- status display fields [2-602](#)
- vtp (global configuration) command [2-751](#)
- vtp (VLAN configuration) command [2-755](#)

X

XENPAK module serial EEPROM information [2-445](#)