



A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-547](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-100](#)
 MAC, displaying [2-340](#)
access map configuration mode [2-173](#)
access mode [2-498](#)
access ports [2-498](#)
ACEs [2-54](#), [2-234](#)
ACLs
 deny [2-52](#)
 displaying [2-264](#)
 for non-IP protocols [2-153](#)
 IP [2-100](#)
 matching [2-173](#)
 on Layer 2 interfaces [2-100](#)
 permit [2-232](#)
action command [2-6](#)
address aliasing [2-223](#)
aggregate-port learner [2-228](#)
allowed VLANs [2-513](#)
apply command [2-547](#)
archive download-sw command [2-8](#)
archive tar command [2-11](#)

archive upload-sw command [2-14](#)
audience [xv](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-78](#)
autonegotiation of duplex mode [2-86](#)
auto qos voip command [2-16](#)

B

BackboneFast, for STP [2-434](#)
backup interfaces
 configuring [2-493](#)
 displaying [2-310](#)
boot (boot loader) command [A-2](#)
boot bootlpr command [2-20](#)
boot config-file command [2-21](#)
boot enable-break command [2-22](#)
boot helper command [2-23](#)
boot helper-config file command [2-24](#)
booting
 Cisco IOS image [2-27](#)
 displaying environment variables [2-273](#)
 interrupting [2-22](#)
 manually [2-25](#)
boot loader
 accessing [A-1](#)
 booting
 Cisco IOS image [A-2](#)

boot loader (continued)

- helper image [2-23](#)

directories

- creating [A-15](#)
- displaying a list of [A-7](#)
- removing [A-19](#)

displaying

- available commands [A-12](#)
- memory heap utilization [A-14](#)
- version [A-26](#)

environment variables

- described [A-20](#)
- displaying settings [A-20](#)
- location of [A-21](#)
- setting [A-20](#)
- unsetting [A-24](#)

files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4, A-16, A-23](#)
- renaming [A-17](#)

file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

loading helper images [A-13](#)resetting the system [A-18](#)boot manual command [2-25](#)boot private-config-file command [2-26](#)boot system command [2-27](#)BPDU filtering, for spanning tree [2-435, 2-470](#)BPDU guard, for spanning tree [2-437, 2-470](#)break key detection [2-254, A-1](#)broadcast storm control [2-488](#)**C**cat (boot loader) command [A-4](#)caution, description [xvi](#)channel-group command [2-28](#)channel-protocol command [2-31](#)

Cisco SoftPhone

- auto-QoS configuration [2-16](#)
- trusting packets sent from [2-213](#)

class command [2-32](#)class-map command [2-34](#)

class maps

- creating [2-34](#)
- defining the match criteria [2-175](#)
- displaying [2-275](#)

class of service

- See CoS

clear dot1x command [2-36](#)clear eap command [2-37](#)clear lacp command [2-38](#)clear mac address-table command [2-39, 2-41](#)clear pagp command [2-42](#)clear port-security command [2-43](#)clear spanning-tree counters command [2-45](#)clear spanning-tree detected-protocols command [2-46](#)clear vmps statistics command [2-47](#)clear vtp counters command [2-48](#)

clusters

- SNMP trap [2-425](#)

command modes defined [1-1](#)

configuration, initial

- See getting started guide and hardware installation guide

configuration files

- password recovery disable considerations [A-1](#)
- specifying the name [2-21, 2-26](#)

configuring multiple interfaces [2-96](#)

config-vlan mode

- commands [2-533](#)
- description [1-4](#)

config-vlan mode (continued)

entering [2-532](#)

summary [1-2](#)

conventions

command [xv](#)

for examples [xvi](#)

publication [xv](#)

text [xv](#)

copy (boot loader) command [A-5](#)

CoS

assigning default value to incoming packets [2-183](#)

overriding the incoming value [2-183](#)

CoS-to-DSCP map [2-187](#)

CPU ASIC statistics, displaying [2-276](#)

crashinfo files [2-91](#)

D

debug auto qos command [B-2](#)

debug backup command [B-4](#)

debug dot1x command [B-5](#)

debug dtp command [B-7](#)

debug eap command [B-8](#)

debug etherchannel command [B-10](#)

debug interface command [B-12](#)

debug ip igmp filter command [B-14](#)

debug ip igmp max-groups command [B-15](#)

debug ip igmp snooping command [B-16](#)

debug lacp command [B-17](#)

debug mac-notification command [B-18](#)

debug matm command [B-19](#)

debug matm move update command [B-20](#)

debug monitor command [B-21](#)

debug mvrdbg command [B-22](#)

debug nvram command [B-23](#)

debug pagp command [B-24](#)

debug platform acl command [B-25](#)

debug platform backup interface command [B-26](#)

debug platform cpu-queues command [B-27](#)

debug platform dot1x command [B-29](#)

debug platform etherchannel command [B-30](#)

debug platform forw-tcam command [B-31](#)

debug platform ip dhcp command [B-32](#)

debug platform ip igmp snooping command [B-33](#)

debug platform led command [B-35](#)

debug platform matm command [B-36](#)

debug platform messaging application command [B-38](#)

debug platform phy command [B-39](#)

debug platform pm command [B-41](#)

debug platform port-asic command [B-43](#)

debug platform port-security command [B-44](#)

debug platform qos-acl-tcam command [B-45](#)

debug platform remote-commands command [B-46](#)

debug platform resource-manager command [B-47](#)

debug platform snmp command [B-48](#)

debug platform span command [B-49](#)

debug platform supervisor-asic command [B-50](#)

debug platform sw-bridge command [B-51](#)

debug platform tcam command [B-52](#)

debug platform udd command [B-54](#)

debug platform vlan command [B-55](#)

debug pm command [B-56](#)

debug port-security command [B-58](#)

debug qos-manager command [B-59](#)

debug spanning-tree backbonefast command [B-62](#)

debug spanning-tree bpdu command [B-63](#)

debug spanning-tree bpdu-opt command [B-64](#)

debug spanning-tree command [B-60](#)

debug spanning-tree mstp command [B-65](#)

debug spanning-tree switch command [B-67](#)

debug spanning-tree uplinkfast command [B-69](#)

debug sw-vlan command [B-70](#)

debug sw-vlan ifs command [B-72](#)

debug sw-vlan notification command [B-74](#)

debug sw-vlan vtp command [B-76](#)

debug udd command [B-78](#)

debug vqpc command [B-80](#)

define interface-range command [2-49](#)

- delete (boot loader) command [A-6](#)
 - delete command [2-51](#)
 - deny command [2-52](#)
 - detect mechanism, causes [2-87](#)
 - device manager requirements [xvi](#)
 - DHCP snooping
 - accepting untrusted packets from edge switch [2-107](#)
 - enabling
 - on a VLAN [2-115](#)
 - option 82 [2-105, 2-107](#)
 - trust on an interface [2-113](#)
 - error recovery timer [2-89](#)
 - rate limiting [2-111](#)
 - DHCP snooping binding database
 - bindings
 - displaying [2-322](#)
 - displaying
 - binding entries [2-322](#)
 - dir (boot loader) command [A-7](#)
 - directories, deleting [2-51](#)
 - documentation, related [xvi](#)
 - document conventions [xv](#)
 - domain name, VTP [2-557, 2-561](#)
 - dot1x auth-fail max-attempts [2-57](#)
 - dot1x auth-fail vlan [2-59](#)
 - dot1x command [2-55](#)
 - dot1x control-direction command [2-61](#)
 - dot1x critical global configuration command [2-63](#)
 - dot1x critical interface configuration command [2-65](#)
 - dot1x default command [2-67](#)
 - dot1x guest-vlan command [2-68](#)
 - dot1x host-mode command [2-70](#)
 - dot1x initialize command [2-71](#)
 - dot1x mac-auth-bypass command [2-72](#)
 - dot1x max-reauth-req command [2-74](#)
 - dot1x max-req command [2-76](#)
 - dot1x pae command [2-77](#)
 - dot1x port-control command [2-78](#)
 - dot1x re-authenticate command [2-80](#)
 - dot1x reauthentication command [2-81](#)
 - dot1x timeout command [2-82](#)
 - dropping packets, with ACL matches [2-6](#)
 - DSCP-to-CoS map [2-187](#)
 - DSCP-to-DSCP-mutation map [2-187](#)
 - DTP [2-499](#)
 - DTP flap
 - error detection for [2-87](#)
 - error recovery timer [2-89](#)
 - DTP negotiation [2-500](#)
 - duplex command [2-85](#)
 - dynamic-access ports
 - configuring [2-491](#)
 - restrictions [2-492](#)
 - dynamic auto VLAN membership mode [2-498](#)
 - dynamic desirable VLAN membership mode [2-498](#)
 - Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
 - Dynamic Trunking Protocol
 - See DTP
-
- ## E
- EAP-request/identity frame
 - maximum number to send [2-76](#)
 - response time before retransmitting [2-82](#)
 - encapsulation methods [2-513](#)
 - environment variables, displaying [2-273](#)
 - errdisable detect cause command [2-87](#)
 - errdisable recovery command [2-89](#)
 - error conditions, displaying [2-301](#)
 - error disable detection [2-87](#)
 - error-disabled interfaces, displaying [2-310](#)
 - EtherChannel
 - assigning Ethernet interface to channel group [2-28](#)
 - creating port-channel logical interface [2-94](#)
 - debug EtherChannel/PAGP, display [B-10](#)
 - debug platform-specific events, display [B-30](#)
 - displaying [2-305](#)

EtherChannel (continued)

interface information, displaying [2-310](#)

LACP

clearing channel-group information [2-38](#)debug messages, display [B-17](#)displaying [2-334](#)modes [2-28](#)port priority for hot-standby ports [2-142](#)restricting a protocol [2-31](#)system priority [2-144](#)load-distribution methods [2-242](#)

PAgP

aggregate-port learner [2-228](#)clearing channel-group information [2-42](#)debug messages, display [B-24](#)displaying [2-385](#)error detection for [2-87](#)error recovery timer [2-89](#)learn method [2-228](#)modes [2-28](#)physical-port learner [2-228](#)priority of interface for transmitted traffic [2-230](#)Ethernet controller, internal register display [2-278](#)Ethernet statistics, collecting [2-253](#)examples, conventions for [xvi](#)exception crashinfo command [2-91](#)exit command [2-547](#)

extended-range VLANs

and allowed VLAN list [2-513](#)and pruning-eligible list [2-513](#)configuring [2-532](#)extended system ID for STP [2-443](#)

Ffile name, VTP [2-557](#)files, deleting [2-51](#)flash_init (boot loader) command [A-9](#)

Flex Links

configuring [2-493](#)displaying [2-310](#)flowcontrol command [2-92](#)format (boot loader) command [A-10](#)forwarding packets, with ACL matches [2-6](#)forwarding results, display [C-6](#)frame forwarding information, displaying [C-6](#)fsck (boot loader) command [A-11](#)

Gglobal configuration mode [1-2, 1-3](#)

Hhardware ACL statistics [2-264](#)help (boot loader) command [A-12](#)hierarchical policy maps [2-240](#)host connection, port configuration [2-497](#)

I

IEEE 802.1x

and switchport modes [2-499](#)violation error recovery [2-89](#)

See also port-based authentication

IEEE 802.1X Port Based Authentication

enabling guest VLAN supplicant [2-58](#)

IGMP filters

applying [2-118](#)debug messages, display [B-14](#)IGMP groups, setting maximum [2-119](#)IGMP maximum groups, debugging [B-15](#)

IGMP profiles

creating [2-121](#)displaying [2-324](#)

IGMP snooping

adding ports as a static member of a group [2-138](#)

IGMP snooping (continued)

- displaying [2-325, 2-330, 2-332](#)
- enabling [2-123](#)
- enabling the configurable-leave timer [2-125](#)
- enabling the Immediate-Leave feature [2-134](#)
- flooding query count [2-131](#)
- interface topology change notification behavior [2-133](#)
- multicast table [2-328](#)
- querier [2-127](#)
- query solicitation [2-131](#)
- report suppression [2-129](#)
- switch topology change notification behavior [2-131](#)

images

See software images

Immediate-Leave feature, MVR [2-225](#)immediate-leave processing [2-134](#)

initial configuration

See getting started guide and hardware installation guide

interface configuration mode [1-2, 1-4](#)interface port-channel command [2-94](#)interface range command [2-96](#)interface-range macros [2-49](#)

interfaces

- assigning Ethernet interface to channel group [2-28](#)
- configuring [2-85](#)
- configuring multiple [2-96](#)
- creating port-channel logical [2-94](#)
- debug messages, display [B-12](#)
- disabling [2-423](#)
- displaying the MAC address table [2-352](#)
- restarting [2-423](#)

interface speed, configuring [2-480](#)interface vlan command [2-98](#)internal registers, displaying [2-278, 2-285](#)

Internet Group Management Protocol

See IGMP

invalid GBIC

- error detection for [2-87](#)
- error recovery timer [2-89](#)

ip access-group command [2-100](#)ip address command [2-102](#)IP addresses, setting [2-102](#)IP address matching [2-173](#)

IP DHCP snooping

See DHCP snooping

ip dhcp snooping command [2-104](#)ip dhcp snooping information option allow-untrusted command [2-107](#)ip dhcp snooping information option command [2-105](#)ip dhcp snooping information option format remote-id command [2-109](#)ip dhcp snooping limit rate command [2-111](#)ip dhcp snooping trust command [2-113](#)ip dhcp snooping verify command [2-114](#)ip dhcp snooping vlan command [2-115](#)ip dhcp snooping vlan information option format-type circuit-id string command [2-116](#)ip igmp filter command [2-118](#)ip igmp max-groups command [2-119](#)ip igmp profile command [2-121](#)ip igmp snooping command [2-123](#)ip igmp snooping last-member-query-interval command [2-125](#)ip igmp snooping querier command [2-127](#)ip igmp snooping report-suppression command [2-129](#)ip igmp snooping tcn command [2-131](#)ip igmp snooping tcn flood command [2-133](#)ip igmp snooping vlan immediate-leave command [2-134](#)ip igmp snooping vlan mrouter command [2-136](#)ip igmp snooping vlan static command [2-138](#)IP multicast addresses [2-222](#)

IP phones

auto-QoS configuration [2-16](#)

trusting packets sent from [2-213](#)

IP-precedence-to-DSCP map [2-187](#)

IP source guard

displaying

dynamic binding entries only [2-322](#)

ip ssh command [2-140](#)

J

jumbo frames

See MTU

L

LACP

See EtherChannel

lacp port-priority command [2-142](#)

lacp system-priority command [2-144](#)

Layer 2 traceroute

IP addresses [2-523](#)

MAC addresses [2-520](#)

line configuration mode [1-2, 1-5](#)

Link Aggregation Control Protocol

See EtherChannel

link flap

error detection for [2-87](#)

error recovery timer [2-89](#)

link state group command [2-146](#)

link state track command [2-148](#)

load_helper (boot loader) command [A-13](#)

load-distribution methods for EtherChannel [2-242](#)

logging file command [2-149](#)

logical interface [2-94](#)

loopback error

detection for [2-87](#)

recovery timer [2-89](#)

loop guard, for spanning tree [2-445, 2-449](#)

M

mac access-group command [2-151](#)

MAC access-groups, displaying [2-340](#)

MAC access list configuration mode [2-153](#)

mac access-list extended command [2-153](#)

MAC access lists [2-52](#)

MAC addresses

displaying

aging time [2-346](#)

all [2-344](#)

dynamic [2-350](#)

MAC address-table move updates [2-354](#)

notification settings [2-356](#)

number of addresses in a VLAN [2-348](#)

per interface [2-352](#)

per VLAN [2-360](#)

static [2-358](#)

static and dynamic entries [2-342](#)

dynamic

aging time [2-155](#)

deleting [2-39](#)

displaying [2-350](#)

enabling MAC address notification [2-158](#)

enabling MAC address-table move update [2-156](#)

matching [2-173](#)

static

adding and removing [2-160](#)

displaying [2-358](#)

dropping on an interface [2-161](#)

tables [2-344](#)

MAC address notification, debugging [B-18](#)

mac address-table aging-time [2-151](#)

mac address-table aging-time command [2-155](#)

mac address-table move update command [2-156](#)

mac address-table notification command [2-158](#)

mac address-table static command [2-160](#)

mac address-table static drop command [2-161](#)

macro apply command [2-163](#)

macro description command [2-166](#)

macro global command [2-167](#)

macro global description command [2-170](#)

macro name command [2-171](#)

macros

adding a description [2-166](#)

adding a global description [2-170](#)

applying [2-167](#)

- macros (continued)
 - creating [2-171](#)
 - displaying [2-387](#)
 - interface range [2-49, 2-96](#)
 - specifying parameter values [2-167](#)
 - tracing [2-167](#)
- manual
 - audience [xv](#)
 - purpose of [xv](#)
- maps
 - QoS
 - defining [2-187](#)
 - displaying [2-370](#)
 - VLAN
 - creating [2-544](#)
 - defining [2-173](#)
 - displaying [2-414](#)
- match (access-map configuration) command [2-173](#)
- match (class-map configuration) command [2-175](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-177](#)
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- mls qos aggregate-policer command [2-181](#)
- mls qos command [2-179](#)
- mls qos cos command [2-183](#)
- mls qos dscp-mutation command [2-185](#)
- mls qos map command [2-187](#)
- mls qos queue-set output buffers command [2-191](#)
- mls qos queue-set output threshold command [2-193](#)
- mls qos rewrite ip dscp command [2-195](#)
- mls qos srr-queue input bandwidth command [2-197](#)
- mls qos srr-queue input buffers command [2-199](#)
- mls qos srr-queue input cos-map command [2-201](#)
- mls qos srr-queue input dscp-map command [2-203](#)
- mls qos srr-queue input priority-queue command [2-205](#)
- mls qos srr-queue input threshold command [2-207](#)
- mls qos srr-queue output cos-map command [2-209](#)
- mls qos srr-queue output dscp-map command [2-211](#)
- mls qos trust command [2-213](#)
- mls qos vlan-based command [2-215](#)
- mode, MVR [2-222](#)
- modes, commands [1-1](#)
- monitor session command [2-217](#)
- more (boot loader) command [A-16](#)
- MSTP
 - displaying [2-396](#)
 - interoperability [2-46](#)
 - link type [2-447](#)
- MST region
 - aborting changes [2-453](#)
 - applying changes [2-453](#)
 - configuration name [2-453](#)
 - configuration revision number [2-453](#)
 - current or pending display [2-453](#)
 - displaying [2-396](#)
 - MST configuration mode [2-453](#)
 - VLANs-to-instance mapping [2-453](#)
- path cost [2-455](#)
- protocol mode [2-451](#)
- restart protocol migration process [2-46](#)
- root port
 - loop guard [2-445](#)
 - preventing from becoming designated [2-445](#)
 - restricting which can be root [2-445](#)
 - root guard [2-445](#)
- root switch
 - affects of extended system ID [2-443](#)
 - hello-time [2-458, 2-466](#)
 - interval between BPDU messages [2-459](#)
 - interval between hello BPDU messages [2-458, 2-466](#)
 - max-age [2-459](#)
 - maximum hop count before discarding BPDU [2-460](#)
 - port priority for selection of [2-462](#)
 - primary or secondary [2-466](#)
 - switch priority [2-465](#)
- state changes

MSTP (continued)

- blocking to forwarding state [2-472](#)
- enabling BPDU filtering [2-435, 2-470](#)
- enabling BPDU guard [2-437, 2-470](#)
- enabling Port Fast [2-470, 2-472](#)
- forward-delay time [2-457](#)
- length of listening and learning states [2-457](#)
- rapid transition to forwarding [2-447](#)
- shutting down Port Fast-enabled ports [2-470](#)
- state information display [2-395](#)

MTU

- configuring size [2-518](#)
- displaying global setting [2-403](#)

multicast group address, MVR [2-225](#)

multicast groups, MVR [2-223](#)

multicast router learning method [2-136](#)

multicast router ports, configuring [2-136](#)

multicast storm control [2-488](#)

multicast VLAN, MVR [2-222](#)

multicast VLAN registration

See MVR

multiple hosts on authorized port [2-70](#)

Multiple Spanning Tree Protocol

See MSTP

MVR

- and address aliasing [2-223](#)
- configuring [2-222](#)
- configuring interfaces [2-225](#)
- debug messages, display [B-22](#)
- displaying [2-379](#)
- displaying interface information [2-381](#)
- members, displaying [2-383](#)

mvr (global configuration) command [2-222](#)

mvr (interface configuration) command [2-225](#)

mvr vlan group command [2-226](#)

N

native VLANs [2-513](#)

nonegotiate

DTP messaging [2-500](#)

nonegotiate, speed [2-480](#)

non-IP protocols

denying [2-52](#)

forwarding [2-232](#)

non-IP traffic access lists [2-153](#)

non-IP traffic forwarding

denying [2-52](#)

permitting [2-232](#)

normal-range VLANs [2-532, 2-538](#)

note, description [xvi](#)

no vlan command [2-532, 2-542](#)

P

PAgP

See EtherChannel

pagp learn-method command [2-228](#)

pagp port-priority command [2-230](#)

password, VTP [2-557, 2-561](#)

password-recovery mechanism, enabling and
disabling [2-254](#)

permit (MAC access-list configuration) command [2-232](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-228](#)

PID, displaying [2-320](#)

PIM-DVMRP, as multicast router learning method [2-136](#)

police aggregate command [2-237](#)

police command [2-235](#)

policed-DSCP map [2-187](#)

policy-map command [2-239](#)

policy maps

applying to an interface [2-256, 2-261](#)

creating [2-239](#)

- policy maps (continued)
 - displaying [2-390](#)
 - hierarchical [2-240](#)
 - policers
 - displaying [2-363](#)
 - for a single class [2-235](#)
 - for multiple classes [2-181, 2-237](#)
 - policed-DSCP map [2-187](#)
 - traffic classification
 - defining the class [2-32](#)
 - defining trust states [2-525](#)
 - setting DSCP or IP precedence values [2-259](#)
 - Port Aggregation Protocol
 - See EtherChannel
 - port-based authentication
 - AAA method list [2-3](#)
 - debug messages, display [B-5](#)
 - enabling IEEE 802.1x
 - globally [2-55](#)
 - per interface [2-78](#)
 - guest VLAN [2-68](#)
 - host modes [2-70](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-71](#)
 - MAC authentication bypass [2-72](#)
 - manual control of authorization state [2-78](#)
 - multiple hosts on authorized port [2-70](#)
 - PAE as authenticator [2-77](#)
 - periodic re-authentication
 - enabling [2-81](#)
 - time between attempts [2-82](#)
 - quiet period between failed authentication exchanges [2-82](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-80](#)
 - resetting configurable IEEE 802.1x parameters [2-67](#)
 - switch-to-authentication server retransmission time [2-82](#)
 - switch-to-client frame-retransmission number [2-74 to 2-76](#)
 - switch-to-client retransmission time [2-82](#)
 - port-channel load-balance command [2-242](#)
 - Port Fast, for spanning tree [2-472](#)
 - port ranges, defining [2-49](#)
 - ports, debugging [B-56](#)
 - ports, protected [2-511](#)
 - port security
 - aging [2-507](#)
 - debug messages, display [B-58](#)
 - enabling [2-502](#)
 - violation error recovery [2-89](#)
 - port trust states for QoS [2-213](#)
 - port types, MVR [2-225](#)
 - priority-queue command [2-244](#)
 - privileged EXEC mode [1-2, 1-3](#)
 - product identification information, displaying [2-320](#)
 - protected ports, displaying [2-315](#)
 - pruning
 - VLANs [2-513](#)
 - VTP
 - displaying interface information [2-310](#)
 - enabling [2-557, 2-561](#)
 - pruning-eligible VLAN list [2-515](#)
 - PVST+
 - See STP
-
- ## Q
- QoS
 - auto-QoS
 - configuring [2-16](#)
 - debug messages, display [B-2](#)
 - displaying [2-269](#)
 - class maps
 - creating [2-34](#)
 - defining the match criteria [2-175](#)
 - displaying [2-275](#)
 - defining the CoS value for an incoming packet [2-183](#)
 - displaying configuration information [2-269, 2-362](#)
 - DSCP transparency [2-195](#)

QoS (continued)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-185](#)
- defining DSCP-to-DSCP-mutation map [2-187](#)

egress queues

- allocating buffers [2-191](#)
- defining the CoS output queue threshold map [2-209](#)
- defining the DSCP output queue threshold map [2-211](#)
- displaying buffer allocations [2-366](#)
- displaying CoS output queue threshold map [2-370](#)
- displaying DSCP output queue threshold map [2-370](#)
- displaying queueing strategy [2-366](#)
- displaying queue-set settings [2-373](#)
- enabling bandwidth shaping and scheduling [2-484](#)
- enabling bandwidth sharing and scheduling [2-486](#)
- limiting the maximum output on a port [2-482](#)
- mapping a port to a queue-set [2-246](#)
- mapping CoS values to a queue and threshold [2-209](#)
- mapping DSCP values to a queue and threshold [2-211](#)
- setting maximum and reserved memory allocations [2-193](#)
- setting WTD thresholds [2-193](#)

enabling [2-179](#)

ingress queues

- allocating buffers [2-199](#)
- assigning SRR scheduling weights [2-197](#)
- defining the CoS input queue threshold map [2-201](#)
- defining the DSCP input queue threshold map [2-203](#)
- displaying buffer allocations [2-366](#)
- displaying CoS input queue threshold map [2-370](#)
- displaying DSCP input queue threshold map [2-370](#)
- displaying queueing strategy [2-366](#)
- displaying settings for [2-364](#)
- enabling the priority queue [2-205](#)
- mapping CoS values to a queue and threshold [2-201](#)
- mapping DSCP values to a queue and threshold [2-203](#)
- setting WTD thresholds [2-207](#)

maps

- defining [2-187, 2-201, 2-203, 2-209, 2-211](#)

displaying [2-370](#)

policy maps

- applying an aggregate policer [2-237](#)
- applying to an interface [2-256, 2-261](#)
- creating [2-239](#)
- defining policers [2-181, 2-235](#)
- displaying policers [2-363](#)
- displaying policy maps [2-390](#)
- hierarchical [2-240](#)
- policed-DSCP map [2-187](#)
- setting DSCP or IP precedence values [2-259](#)
- traffic classifications [2-32](#)
- trust states [2-525](#)

port trust states [2-213](#)queues, enabling the expedite [2-244](#)

statistics

- in-profile and out-of-profile packets [2-366](#)
- packets enqueued or dropped [2-366](#)
- sent and received CoS values [2-366](#)
- sent and received DSCP values [2-366](#)
- trusted boundary for IP phones [2-213](#)
- VLAN-based [2-215](#)

quality of service

See QoS

querytime, MVR [2-222](#)queue-set command [2-246](#)

Rradius-server dead-criteria command [2-247](#)radius-server host command [2-249](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

re-authenticating IEEE 802.1x-enabled ports [2-80](#)

re-authentication

- periodic [2-81](#)
- time between attempts [2-82](#)

receiver ports, MVR [2-225](#)
 receiving flow-control packets [2-92](#)
 recovery mechanism

- causes [2-89](#)
- display [2-299, 2-303](#)
- timer interval [2-89](#)

remote-span command [2-251](#)

Remote Switched Port Analyzer

- See RSPAN

rename (boot loader) command [A-17](#)

requirements

- device manager [xvi](#)

reset (boot loader) command [A-18](#)

reset command [2-547](#)

restricted VLAN

- See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)

rmon collection stats command [2-253](#)

root guard, for spanning tree [2-445](#)

RSPAN

- configuring [2-217](#)
- displaying [2-376](#)
- filter RSPAN traffic [2-217](#)
- remote-span command [2-251](#)
- sessions
 - add interfaces to [2-217](#)
 - displaying [2-376](#)
 - start new [2-217](#)

S

secure ports, limitations [2-504](#)

sending flow-control packets [2-92](#)

service password-recovery command [2-254](#)

service-policy command [2-256](#)

set (boot loader) command [A-20](#)

set command [2-259](#)

setup command [2-261](#)

show access-lists command [2-264](#)

show archive status command [2-267](#)

show auto qos command [2-269](#)

show boot command [2-273](#)

show changes command [2-547](#)

show class-map command [2-275](#)

show controllers cpu-interface command [2-276](#)

show controllers ethernet-controller command [2-278](#)

show controllers team command [2-285](#)

show controller utilization command [2-287](#)

show current command [2-547](#)

show dot1x command [2-289](#)

show dtp [2-293](#)

show eap command [2-295](#)

show env command [2-298](#)

show errdisable detect command [2-299](#)

show errdisable flap-values command [2-301](#)

show errdisable recovery command [2-303](#)

show etherchannel command [2-305](#)

show flowcontrol command [2-308](#)

show interfaces command [2-310](#)

show interfaces counters command [2-318](#)

show inventory command [2-320](#)

show ip dhcp snooping binding command [2-322](#)

show ip dhcp snooping command [2-321](#)

show ip igmp profile command [2-324](#)

show ip igmp snooping command [2-325](#)

show ip igmp snooping groups command [2-328](#)

show ip igmp snooping mrouter command [2-330](#)

show ip igmp snooping querier command [2-332](#)

show lacp command [2-334](#)

show link state group command [2-338](#)

show mac access-group command [2-340](#)

show mac address-table address command [2-344](#)

show mac address-table aging time command [2-346](#)

show mac address-table command [2-342](#)

show mac address-table count command [2-348](#)

show mac address-table dynamic command [2-350](#)

show mac address-table interface command [2-352](#)

show mac address-table move update command [2-354](#)

- show mac address-table notification command [2-41, 2-356, B-20](#)
- show mac address-table static command [2-358](#)
- show mac address-table vlan command [2-360](#)
- show mls qos aggregate-policer command [2-363](#)
- show mls qos command [2-362](#)
- show mls qos input-queue command [2-364](#)
- show mls qos interface command [2-366](#)
- show mls qos maps command [2-370](#)
- show mls qos queue-set command [2-373](#)
- show mls qos vlan command [2-375](#)
- show monitor command [2-376](#)
- show mvr command [2-379](#)
- show mvr interface command [2-381](#)
- show mvr members command [2-383](#)
- show pagp command [2-385](#)
- show parser macro command [2-387](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform igmp snooping command [C-8](#)
- show platform layer4op command [C-10](#)
- show platform mac-address-table command [C-11](#)
- show platform messaging command [C-12](#)
- show platform monitor command [C-13](#)
- show platform mvr table command [C-14](#)
- show platform pm command [C-15](#)
- show platform port-asic command [C-16](#)
- show platform port-security command [C-21](#)
- show platform qos command [C-22](#)
- show platform resource-manager command [C-23](#)
- show platform snmp counters command [C-25](#)
- show platform spanning-tree command [C-26](#)
- show platform stp-instance command [C-27](#)
- show platform team command [C-28](#)
- show platform vlan command [C-30](#)
- show policy-map command [2-390](#)
- show port security command [2-392](#)
- show proposed command [2-547](#)
- show spanning-tree command [2-395](#)
- show storm-control command [2-401](#)
- show system mtu command [2-403](#)
- show trust command [2-525](#)
- show udd command [2-404](#)
- show version command [2-407](#)
- show vlan access-map command [2-414](#)
- show vlan command [2-409](#)
- show vlan command, fields [2-411](#)
- show vlan filter command [2-415](#)
- show vmps command [2-416](#)
- show vtp command [2-419](#)
- shutdown command [2-423](#)
- shutdown vlan command [2-424](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-428](#)
- SNMP informs, enabling the sending of [2-425](#)
- snmp-server enable traps command [2-425](#)
- snmp-server host command [2-428](#)
- snmp trap mac-notification command [2-432](#)
- SNMP traps
 - enabling MAC address notification trap [2-432](#)
 - enabling the MAC address notification feature [2-158](#)
 - enabling the sending of [2-425](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-51](#)
 - downloading [2-8](#)
 - upgrading [2-8](#)
 - uploading [2-14](#)
- software version, displaying [2-407](#)
- source ports, MVR [2-225](#)
- SPAN
 - configuring [2-217](#)
 - debug messages, display [B-21](#)

SPAN (continued)

- displaying [2-376](#)
- filter SPAN traffic [2-217](#)
- sessions
 - add interfaces to [2-217](#)
 - displaying [2-376](#)
 - start new [2-217](#)
- spanning [2-474](#)
- spanning-tree backbonefast command [2-434](#)
- spanning-tree bpdupfilter command [2-435](#)
- spanning-tree bpduguard command [2-437](#)
- spanning-tree cost command [2-439](#)
- spanning-tree etherchannel command [2-441](#)
- spanning-tree extend system-id command [2-443](#)
- spanning-tree guard command [2-445](#)
- spanning-tree link-type command [2-447](#)
- spanning-tree loopguard default command [2-449](#)
- spanning-tree mode command [2-451](#)
- spanning-tree mst configuration command [2-453](#)
- spanning-tree mst cost command [2-455](#)
- spanning-tree mst forward-time command [2-457](#)
- spanning-tree mst hello-time command [2-458](#)
- spanning-tree mst max-age command [2-459](#)
- spanning-tree mst max-hops command [2-460](#)
- spanning-tree mst port-priority command [2-462](#)
- spanning-tree mst pre-standard command [2-464](#)
- spanning-tree mst priority command [2-465](#)
- spanning-tree mst root command [2-466](#)
- spanning-tree portfast (global configuration) command [2-470](#)
- spanning-tree portfast (interface configuration) command [2-472](#)
- spanning-tree port-priority command [2-468](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-474](#)
- spanning-tree uplinkfast command [2-475](#)
- spanning-tree vlan command [2-477](#)
- speed command [2-480](#)

- srr-queue bandwidth limit command [2-482](#)
- srr-queue bandwidth shape command [2-484](#)
- srr-queue bandwidth share command [2-486](#)
- SSH, configuring version [2-140](#)
- static-access ports, configuring [2-491](#)
- statistics, Ethernet group [2-253](#)
- sticky learning, enabling [2-502](#)
- storm-control command [2-488](#)

STP

- BackboneFast [2-434](#)
- counters, clearing [2-45](#)
- debug messages, display
 - BackboneFast events [B-62](#)
 - MSTP [B-65](#)
 - optimized BPDUs handling [B-64](#)
 - spanning-tree activity [B-60](#)
 - switch shim [B-67](#)
 - transmitted and received BPDUs [B-63](#)
 - UplinkFast [B-69](#)
- detection of indirect link failures [2-434](#)
- EtherChannel misconfiguration [2-441](#)
- extended system ID [2-443](#)
- path cost [2-439](#)
- protocol modes [2-451](#)
- root port
 - accelerating choice of new [2-475](#)
 - loop guard [2-445](#)
 - preventing from becoming designated [2-445](#)
 - restricting which can be root [2-445](#)
 - root guard [2-445](#)
 - UplinkFast [2-475](#)
- root switch
 - affects of extended system ID [2-443, 2-478](#)
 - hello-time [2-477](#)
 - interval between BPDU messages [2-477](#)
 - interval between hello BPDU messages [2-477](#)
 - max-age [2-477](#)
 - port priority for selection of [2-468](#)
 - primary or secondary [2-477](#)

STP (continued)

- switch priority [2-477](#)
 - state changes
 - blocking to forwarding state [2-472](#)
 - enabling BPDU filtering [2-435, 2-470](#)
 - enabling BPDU guard [2-437, 2-470](#)
 - enabling Port Fast [2-470, 2-472](#)
 - enabling timer to recover from error state [2-89](#)
 - forward-delay time [2-477](#)
 - length of listening and learning states [2-477](#)
 - shutting down Port Fast-enabled ports [2-470](#)
 - state information display [2-395](#)
 - VLAN options [2-465, 2-477](#)
- Switched Port Analyzer
- See SPAN
 - switchport access command [2-491](#)
 - switchport backup interface command [2-493](#)
 - switchport block command [2-496](#)
 - switchport host command [2-497](#)
 - switchport mode command [2-498](#)
 - switchport nonegotiate command [2-500](#)
 - switchport port-security aging command [2-507](#)
 - switchport port-security command [2-502](#)
 - switchport priority extend command [2-509](#)
 - switchport protected command [2-511](#)
 - switchports, displaying [2-310](#)
 - switchport trunk command [2-513](#)
 - switchport voice vlan command [2-516](#)
 - system message logging, save message to flash [2-149](#)
 - system mtu command [2-518](#)

T

- tar files, creating, listing, and extracting [2-11](#)
- traceroute mac command [2-520](#)
- traceroute mac ip command [2-523](#)
- trunking, VLAN mode [2-498](#)
- trunk mode [2-498](#)
- trunk ports [2-498](#)

- trunks, to non-DTP device [2-499](#)
- trusted boundary for QoS [2-213](#)
- trusted port states for QoS [2-213](#)
- type (boot loader) command [A-23](#)

U

UDLD

- aggressive mode [2-527, 2-529](#)
 - debug messages, display [B-78](#)
 - enable globally [2-527](#)
 - enable per interface [2-529](#)
 - error recovery timer [2-89](#)
 - message timer [2-527](#)
 - normal mode [2-527, 2-529](#)
 - reset a shutdown interface [2-531](#)
 - status [2-404](#)
 - udld command [2-527](#)
 - udld port command [2-529](#)
 - udld reset command [2-531](#)
 - unicast storm control [2-488](#)
- UniDirectional Link Detection
- See UDLD
 - unknown multicast traffic, preventing [2-496](#)
 - unknown unicast traffic, preventing [2-496](#)
 - unset (boot loader) command [A-24](#)
 - upgrading
 - software images [2-8](#)
 - monitoring status of [2-267](#)
 - upgrading information
 - See release notes
 - UplinkFast, for STP [2-475](#)
 - user EXEC mode [1-2](#)

V

version (boot loader) command [A-26](#)

VLAN

enabling guest VLAN supplicant [2-58](#)

vlan (global configuration) command [2-532](#)

vlan (VLAN configuration) command [2-538](#)

vlan access-map command [2-544](#)

VLAN access map configuration mode [2-544](#)

VLAN access maps

actions [2-6](#)

displaying [2-414](#)

VLAN-based QoS [2-215](#)

VLAN configuration

rules [2-535, 2-540](#)

saving [2-532, 2-542](#)

VLAN configuration mode

commands

VLAN [2-538](#)

VTP [2-561](#)

description [1-4](#)

entering [2-546](#)

summary [1-2](#)

vlan database command [2-546](#)

vlan filter command [2-550](#)

VLAN filters, displaying [2-415](#)

VLAN ID range [2-532, 2-538](#)

VLAN maps

applying [2-550](#)

creating [2-544](#)

defining [2-173](#)

displaying [2-414](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-532](#)

configuring [2-532, 2-538](#)

debug messages, display

ISL [B-74](#)

VLAN IOS file system error tests [B-72](#)

VLAN manager activity [B-70](#)

VTP [B-76](#)

displaying configurations [2-409](#)

extended-range [2-532](#)

MAC addresses

displaying [2-360](#)

number of [2-348](#)

media types [2-534, 2-540](#)

normal-range [2-532, 2-538](#)

restarting [2-424](#)

saving the configuration [2-532](#)

shutting down [2-424](#)

SNMP traps for VTP [2-426, 2-429](#)

suspending [2-424](#)

variables [2-538](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [2-555](#)

displaying [2-416](#)

error recovery timer [2-89](#)

reconfirming dynamic VLAN assignments [2-552](#)

vmpls reconfirm (global configuration) command [2-553](#)

vmpls reconfirm (privileged EXEC) command [2-552](#)

vmpls retry command [2-554](#)

vmpls server command [2-555](#)

voice VLAN

configuring [2-516](#)

setting port priority [2-509](#)

VQP

and dynamic-access ports [2-492](#)

clearing client statistics [2-47](#)

displaying information [2-416](#)

per-server retry count [2-554](#)

reconfirmation interval [2-553](#)

reconfirming dynamic VLAN assignments [2-552](#)

VTP

- changing characteristics [2-557](#)
- clearing pruning counters [2-48](#)
- configuring
 - domain name [2-557, 2-561](#)
 - file name [2-557](#)
 - mode [2-557, 2-561](#)
 - password [2-557, 2-561](#)
- counters display fields [2-420](#)
- displaying information [2-419](#)
- enabling
 - pruning [2-557, 2-561](#)
 - Version 2 [2-557, 2-561](#)
- mode [2-557, 2-561](#)
- pruning [2-557, 2-561](#)
- saving the configuration [2-532, 2-542](#)
- statistics [2-419](#)
- status [2-419](#)
- status display fields [2-421](#)
- vtp (global configuration) command [2-557](#)
- vtp (VLAN configuration) command [2-561](#)

