



## I N D E X

---

### A

- aaa accounting dot1x command [2-1](#)
- aaa authentication dot1x command [2-3](#)
- aaa authorization network command [2-5](#)
- AAA methods [2-3](#)
- abort command [2-659](#)
- access control entries
  - See ACEs
- access control lists
  - See ACLs
- access groups
  - IP [2-113](#)
  - MAC, displaying [2-444](#)
- access list, IPv6 [2-166](#)
- access map configuration mode [2-224](#)
- access mode [2-605](#)
- access ports [2-605](#)
- ACEs [2-58](#), [2-292](#)
- ACLs
  - deny [2-56](#)
  - displaying [2-331](#)
  - for non-IP protocols [2-204](#)
  - IP [2-113](#)
  - matching [2-224](#)
  - on Layer 2 interfaces [2-113](#)
  - permit [2-290](#)
- action command [2-6](#)
- address aliasing [2-273](#)
- aggregate-port learner [2-278](#)
- allowed VLANs [2-625](#)
- apply command [2-659](#)
- archive download-sw command [2-8](#)

- archive tar command [2-11](#)
- archive upload-sw command [2-14](#)
- audience [xvii](#)
- authentication failed VLAN
  - See dot1x auth-fail vlan
- auth-fail max-attempts
  - See dot1x auth-fail max-attempts
- auth-fail vlan
  - See dot1x auth-fail vlan
- authorization state of controlled port [2-82](#)
- autonegotiation of duplex mode [2-92](#)
- auto qos voip command [2-16](#)

---

### B

- BackboneFast, for STP [2-544](#)
- backup interfaces
  - displaying [2-382](#)
- boot (boot loader) command [A-2](#)
- boot bootlpr command [2-20](#)
- boot config-file command [2-21](#)
- boot enable-break command [2-22](#)
- boot helper command [2-23](#)
- boot helper-config file command [2-24](#)
- booting
  - Cisco IOS image [2-27](#)
  - displaying environment variables [2-339](#)
  - interrupting [2-22](#)
  - manually [2-25](#)
- boot loader
  - accessing [A-1](#)
  - booting
    - Cisco IOS image [A-2](#)

**boot loader (continued)**

- helper image [2-23](#)
- directories
  - creating [A-15](#)
  - displaying a list of [A-7](#)
  - removing [A-19](#)
- displaying
  - available commands [A-12](#)
  - memory heap utilization [A-13](#)
  - version [A-26](#)
- environment variables
  - described [A-20](#)
  - displaying settings [A-20](#)
  - location of [A-21](#)
  - setting [A-20](#)
  - unsetting [A-24](#)
- files
  - copying [A-5](#)
  - deleting [A-6](#)
  - displaying a list of [A-7](#)
  - displaying the contents of [A-4, A-16, A-23](#)
  - renaming [A-17](#)
- file system
  - formatting [A-10](#)
  - initializing flash [A-9](#)
  - running a consistency check [A-11](#)
- resetting the system [A-18](#)
- boot manual command [2-25](#)
- boot private-config-file command [2-26](#)
- boot system command [2-27](#)
- BPDU filtering, for spanning tree [2-545, 2-578](#)
- BPDU guard, for spanning tree [2-547, 2-578](#)
- break key detection [2-321, A-1](#)
- broadcast storm control [2-596](#)

**C**

- cat (boot loader) command [A-4](#)
- caution, description [xviii](#)

- CDP, enabling protocol tunneling for [2-184](#)
- channel-group command [2-28](#)
- channel-protocol command [2-31](#)
- Cisco SoftPhone
  - auto-QoS configuration [2-16](#)
  - trusting packets sent from [2-264](#)
- class command [2-32](#)
- class-map command [2-34](#)
- class maps
  - creating [2-34](#)
  - defining the match criteria [2-226](#)
  - displaying [2-341](#)
- class of service
  - See CoS
- clear dot1x command [2-36](#)
- clear eap sessions command [2-37](#)
- clear errdisable interface [2-38](#)
- clear ipc command [2-39](#)
- clear ip dhcp snooping database command [2-41](#)
- clear l2protocol-tunnel counters command [2-40](#)
- clear lacp command [2-43](#)
- clear mac address-table command [2-44, 2-45](#)
- clear pagp command [2-46](#)
- clear port-security command [2-47](#)
- clear spanning-tree counters command [2-49](#)
- clear spanning-tree detected-protocols command [2-50](#)
- clear vmpls statistics command [2-51](#)
- clear vtp counters command [2-52](#)
- clusters
  - SNMP trap [2-535](#)
- command modes defined [1-1](#)
- configuration, initial
  - See getting started guide and hardware installation guide
- configuration files
  - password recovery disable considerations [A-1](#)
  - specifying the name [2-21, 2-26](#)
- configuring multiple interfaces [2-109](#)

## config-vlan mode

- commands [2-645](#)
- description [1-4](#)
- entering [2-644](#)
- summary [1-2](#)

## conventions

- command [xvii](#)
- for examples [xviii](#)
- publication [xvii](#)
- text [xvii](#)

## copy (boot loader) command [A-5](#)

## CoS

- assigning default value to incoming packets [2-234](#)
- assigning to Layer 2 protocol packets [2-187](#)
- overriding the incoming value [2-234](#)

## CoS-to-DSCP map [2-238](#)

## CPU ASIC statistics, displaying [2-342](#)

## crashinfo files [2-102](#)

## D

### debug auto qos command [B-2](#)

### debug backup command [B-4](#)

### debug dot1x command [B-5](#)

### debug dtp command [B-6](#)

### debug eap command [B-7](#)

### debug etherchannel command [B-8](#)

### debug interface command [B-11](#)

### debug ip dhcp snooping command [B-9](#)

### debug ip igmp filter command [B-12](#)

### debug ip igmp max-groups command [B-13](#)

### debug ip igmp snooping command [B-14](#)

### debug ip verify source packet command [B-10](#)

### debug lacp command [B-15](#)

### debug mac-notification command [B-16](#)

### debug matm command [B-17](#)

### debug matm move update command [B-18](#)

### debug monitor command [B-19](#)

### debug mvrdbg command [B-20](#)

### debug nvram command [B-21](#)

### debug pagp command [B-22](#)

### debug platform acl command [B-23](#)

### debug platform backup interface command [B-24](#)

### debug platform cli-redirection main command [B-25](#)

### debug platform cpu-queues command [B-26](#)

### debug platform dot1x command [B-28](#)

### debug platform etherchannel command [B-29](#)

### debug platform fallback-bridging command [B-30](#)

### debug platform forw-tcam command [B-31](#)

### debug platform ip arp inspection command [B-32](#)

### debug platform ipc command [B-40](#)

### debug platform ip dhcp command [B-33](#)

### debug platform ip igmp snooping command [B-34](#)

### debug platform ip multicast command [B-36](#)

### debug platform ip unicast command [B-38](#)

### debug platform led command [B-41](#)

### debug platform matm command [B-42](#)

### debug platform messaging application command [B-43](#)

### debug platform phy command [B-44](#)

### debug platform pm command [B-46](#)

### debug platform port-asic command [B-48](#)

### debug platform port-security command [B-49](#)

### debug platform qos-acl-tcam command [B-50](#)

### debug platform remote-commands command [B-51](#)

### debug platform resource-manager command [B-52](#)

### debug platform snmp command [B-53](#)

### debug platform span command [B-54](#)

### debug platform supervisor-asic command [B-55](#)

### debug platform sw-bridge command [B-56](#)

### debug platform tcam command [B-57](#)

### debug platform udd command [B-60](#)

### debug platform vlan command [B-61](#)

### debug pm command [B-62](#)

### debug port-security command [B-64](#)

### debug qos-manager command [B-65](#)

### debug spanning-tree backbonefast command [B-68](#)

### debug spanning-tree bpdu command [B-69](#)

### debug spanning-tree bpdu-opt command [B-70](#)

- debug spanning-tree command [B-66](#)
- debug spanning-tree mstp command [B-71](#)
- debug spanning-tree switch command [B-73](#)
- debug spanning-tree uplinkfast command [B-75](#)
- debug sw-vlan command [B-76](#)
- debug sw-vlan ifs command [B-78](#)
- debug sw-vlan notification command [B-79](#)
- debug sw-vlan vtp command [B-80](#)
- debug uddl command [B-82](#)
- debug vqpc command [B-84](#)
- define interface-range command [2-53](#)
- delete (boot loader) command [A-6](#)
- delete command [2-55](#)
- deny command [2-56](#)
- detect mechanism, causes [2-93](#)
- device manager requirements [xviii](#)
- DHCP snooping
  - accepting untrusted packets from edge switch [2-128](#)
  - enabling
    - on a VLAN [2-135](#)
    - option 82 [2-126, 2-128](#)
    - trust on an interface [2-133](#)
  - error recovery timer [2-99](#)
  - rate limiting [2-132](#)
- DHCP snooping binding database
  - binding file, configuring [2-124](#)
  - bindings
    - adding [2-122](#)
    - deleting [2-122](#)
    - displaying [2-396](#)
  - clearing database agent statistics [2-41](#)
  - database agent, configuring [2-124](#)
  - displaying
    - binding entries [2-396](#)
    - database agent status [2-398, 2-400](#)
  - renewing [2-316](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-55](#)
- documentation, related [xviii](#)
- document conventions [xvii](#)
- domain name, VTP [2-670, 2-674](#)
- dot1x auth-fail max-attempts [2-61](#)
- dot1x auth-fail vlan [2-63](#)
- dot1x command [2-59](#)
- dot1x control-direction command [2-65](#)
- dot1x critical global configuration command [2-67](#)
- dot1x critical interface configuration command [2-69](#)
- dot1x default command [2-71](#)
- dot1x fallback command [2-72](#)
- dot1x guest-vlan command [2-73](#)
- dot1x host-mode command [2-75](#)
- dot1x initialize command [2-76](#)
- dot1x mac-auth-bypass command [2-77](#)
- dot1x max-reauth-req command [2-79](#)
- dot1x max-req command [2-80](#)
- dot1x pae command [2-81](#)
- dot1x port-control command [2-82](#)
- dot1x re-authenticate command [2-84](#)
- dot1x reauthentication command [2-85](#)
- dot1x test eapol-capable command [2-86](#)
- dot1x test timeout command [2-87](#)
- dot1x timeout command [2-88](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-184](#)
- DSCP-to-CoS map [2-238](#)
- DSCP-to-DSCP-mutation map [2-238](#)
- DTP [2-606](#)
- DTP flap
  - error detection for [2-93](#)
  - error recovery timer [2-99](#)
- DTP negotiation [2-610](#)
- dual IPv4 and IPv6 templates [2-284](#)
- duplex command [2-91](#)
- dynamic-access ports
  - configuring [2-601](#)
  - restrictions [2-601](#)
- dynamic ARP inspection
  - ARP ACLs

**dynamic ARP inspection (continued)**

- permit packets [2-282](#)

- error detection for [2-93](#)

dynamic auto VLAN membership mode [2-605](#)

dynamic desirable VLAN membership mode [2-605](#)

Dynamic Host Configuration Protocol (DHCP)

- See DHCP snooping

Dynamic Trunking Protocol

- See DTP

---

**E**

EAP-request/identity frame

- maximum number to send [2-80](#)

- response time before retransmitting [2-88](#)

encapsulation methods [2-625](#)

environment variables, displaying [2-339](#)

errdisable detect cause command [2-93](#)

errdisable detect cause small-frame comand [2-96](#)

errdisable recovery cause small-frame [2-98](#)

errdisable recovery command [2-99](#)

error conditions, displaying [2-368](#)

error disable detection [2-93](#)

error-disabled interfaces, displaying [2-382](#)

EtherChannel

- assigning Ethernet interface to channel group [2-28](#)

- creating port-channel logical interface [2-107](#)

- debug EtherChannel/PAgP, display [B-8](#)

- debug platform-specific events, display [B-29](#)

- displaying [2-372](#)

- enabling Layer 2 protocol tunneling for

- LACP [2-185](#)

- PAgP [2-185](#)

- UDLD [2-185](#)

- interface information, displaying [2-382](#)

LACP

- clearing channel-group information [2-43](#)

- debug messages, display [B-15](#)

- displaying [2-434](#)

**EtherChannel (continued)**

- modes [2-28](#)

- port priority for hot-standby ports [2-188](#)

- restricting a protocol [2-31](#)

- system priority [2-190](#)

load-distribution methods [2-300](#)

PAgP

- aggregate-port learner [2-278](#)

- clearing channel-group information [2-46](#)

- debug messages, display [B-22](#)

- displaying [2-489](#)

- error detection for [2-93](#)

- error recovery timer [2-99](#)

- learn method [2-278](#)

- modes [2-28](#)

- physical-port learner [2-278](#)

- priority of interface for transmitted traffic [2-280](#)

Ethernet controller, internal register display [2-344](#)

Ethernet statistics, collecting [2-317](#)

examples, conventions for [xviii](#)

exception crashinfo command [2-102](#)

exit command [2-659](#)

extended-range VLANs

- and allowed VLAN list [2-625](#)

- and pruning-eligible list [2-625](#)

- configuring [2-644](#)

extended system ID for STP [2-553](#)

---

**F**

fallback profile command [2-103](#)

fallback profiles

- displaying [2-375](#)

file name, VTP [2-670](#)

files, deleting [2-55](#)

flash\_init (boot loader) command [A-9](#)

Flex Links

- displaying [2-382](#)

flowcontrol command [2-105](#)

format (boot loader) command [A-10](#)  
 forwarding packets, with ACL matches [2-6](#)  
 forwarding results, display [C-6](#)  
 frame forwarding information, displaying [C-6](#)  
 fsck (boot loader) command [A-11](#)

---

## G

global configuration mode [1-2, 1-3](#)

---

## H

hardware ACL statistics [2-331](#)  
 help (boot loader) command [A-12](#)  
 hierarchical policy maps [2-298](#)  
 host connection, port configuration [2-604](#)  
 host ports, private VLANs [2-608](#)

---

## I

IEEE 802.1Q trunk ports and native VLANs [2-661](#)  
 IEEE 802.1Q tunnel ports  
     configuring [2-605](#)  
     displaying [2-355](#)  
     limitations [2-606](#)  
 IEEE 802.1x  
     and switchport modes [2-606](#)  
     violation error recovery [2-99](#)  
     See also port-based authentication  
 IEEE 802.1X Port Based Authentication  
     enabling guest VLAN supplicant [2-62, 2-72, 2-104](#)  
 IGMP filters  
     applying [2-138](#)  
     debug messages, display [B-12](#)  
 IGMP groups, setting maximum [2-140](#)  
 IGMP maximum groups, debugging [B-13](#)  
 IGMP profiles  
     creating [2-142](#)

## IGMP profiles (continued)

    displaying [2-403](#)  
 IGMP snooping  
     adding ports as a static member of a group [2-158](#)  
     displaying [2-404, 2-409, 2-411](#)  
     enabling [2-144](#)  
     enabling the configurable-leave timer [2-146](#)  
     enabling the Immediate-Leave feature [2-155](#)  
     flooding query count [2-152](#)  
     interface topology change notification behavior [2-154](#)  
     multicast table [2-407](#)  
     querier [2-148](#)  
     query solicitation [2-152](#)  
     report suppression [2-150](#)  
     switch topology change notification behavior [2-152](#)  
 images  
     See software images  
 Immediate-Leave feature, MVR [2-275](#)  
 Immediate-Leave processing  
     IPv6 [2-180](#)  
 immediate-leave processing [2-155](#)  
 initial configuration  
     See getting started guide and hardware installation guide  
 interface configuration mode [1-2, 1-4](#)  
 interface port-channel command [2-107](#)  
 interface range command [2-109](#)  
 interface-range macros [2-53](#)  
 interfaces  
     assigning Ethernet interface to channel group [2-28](#)  
     configuring [2-91](#)  
     configuring multiple [2-109](#)  
     creating port-channel logical [2-107](#)  
     debug messages, display [B-11](#)  
     disabling [2-531](#)  
     displaying the MAC address table [2-456](#)  
     restarting [2-531](#)  
 interface speed, configuring [2-588](#)  
 interface vlan command [2-111](#)

- internal registers, displaying [2-344, 2-351](#)
  - Internet Group Management Protocol
    - See IGMP
  - invalid GBIC
    - error detection for [2-93](#)
    - error recovery timer [2-99](#)
  - ip access-group command [2-113](#)
  - ip address command [2-116](#)
  - IP addresses, setting [2-116](#)
  - IP address matching [2-224](#)
  - ip admission command [2-118](#)
  - ip admission name proxy http command [2-119](#)
  - IP DHCP snooping
    - See DHCP snooping
  - ip dhcp snooping binding command [2-122](#)
  - ip dhcp snooping command [2-121](#)
  - ip dhcp snooping database command [2-124](#)
  - ip dhcp snooping information option allow-untrusted command [2-128](#)
  - ip dhcp snooping information option command [2-126](#)
  - ip dhcp snooping information option format remote-id command [2-130](#)
  - ip dhcp snooping limit rate command [2-132](#)
  - ip dhcp snooping trust command [2-133](#)
  - ip dhcp snooping verify command [2-134](#)
  - ip dhcp snooping vlan command [2-135](#)
  - ip dhcp snooping vlan information option format-type circuit-id string command [2-136](#)
  - ip igmp filter command [2-138](#)
  - ip igmp max-groups command [2-140](#)
  - ip igmp profile command [2-142](#)
  - ip igmp snooping command [2-144](#)
  - ip igmp snooping last-member-query-interval command [2-146](#)
  - ip igmp snooping querier command [2-148](#)
  - ip igmp snooping report-suppression command [2-150](#)
  - ip igmp snooping tcn command [2-152](#)
  - ip igmp snooping tcn flood command [2-154](#)
  - ip igmp snooping vlan immediate-leave command [2-155](#)
  - ip igmp snooping vlan mrouter command [2-156](#)
  - ip igmp snooping vlan static command [2-158](#)
  - IP multicast addresses [2-272](#)
  - IP phones
    - auto-QoS configuration [2-16](#)
    - trusting packets sent from [2-264](#)
  - IP-precedence-to-DSCP map [2-238](#)
  - ip snap forwarding command [2-160](#)
  - ip source binding command [2-161](#)
  - IP source guard
    - disabling [2-165](#)
    - displaying
      - binding entries [2-413](#)
      - configuration [2-415](#)
      - dynamic binding entries only [2-396](#)
    - enabling [2-165](#)
    - static IP source bindings [2-161](#)
  - ip ssh command [2-163](#)
  - ipv6 access-list command [2-166](#)
  - ipv6 mld snooping command [2-168](#)
  - ipv6 mld snooping last-listener-query count command [2-170](#)
  - ipv6 mld snooping last-listener-query-interval command [2-172](#)
  - ipv6 mld snooping listener-message-suppression command [2-174](#)
  - ipv6 mld snooping robustness-variable command [2-176](#)
  - ipv6 mld snooping tcn command [2-178](#)
  - ipv6 mld snooping vlan command [2-180](#)
  - IPv6 SDM template [2-318](#)
  - ipv6 traffic-filter command [2-182](#)
  - ip verify source command [2-165](#)
- 
- ## J
- jumbo frames
    - See MTU

## L

[l2protocol-tunnel command](#) [2-184](#)  
[l2protocol-tunnel cos command](#) [2-187](#)  
 LACP  
     See EtherChannel  
[lacp port-priority command](#) [2-188](#)  
[lacp system-priority command](#) [2-190](#)  
 Layer 2 mode, enabling [2-599](#)  
 Layer 2 protocol ports, displaying [2-431](#)  
 Layer 2 protocol-tunnel  
     error detection for [2-93](#)  
     error recovery timer [2-99](#)  
 Layer 2 protocol tunnel counters [2-40](#)  
 Layer 2 protocol tunneling error recovery [2-185](#)  
 Layer 2 traceroute  
     IP addresses [2-635](#)  
     MAC addresses [2-632](#)  
 Layer 3 mode, enabling [2-599](#)  
 line configuration mode [1-2, 1-5](#)  
 Link Aggregation Control Protocol  
     See EtherChannel  
 link flap  
     error detection for [2-93](#)  
     error recovery timer [2-99](#)  
 link state group command [2-196](#)  
 link state track command [2-198](#)  
 load-distribution methods for EtherChannel [2-300](#)  
 location (global configuration) command [2-192](#)  
 location (interface configuration) command [2-194](#)  
 logging event command [2-199](#)  
 logging file command [2-200](#)  
 logical interface [2-107](#)  
 loopback error  
     detection for [2-93](#)  
     recovery timer [2-99](#)  
 loop guard, for spanning tree [2-554, 2-558](#)

## M

[mac access-group command](#) [2-202](#)  
 MAC access-groups, displaying [2-444](#)  
 MAC access list configuration mode [2-204](#)  
[mac access-list extended command](#) [2-204](#)  
 MAC access lists [2-56](#)  
 MAC addresses  
     displaying  
         aging time [2-450](#)  
         all [2-448](#)  
         dynamic [2-454](#)  
         MAC address-table move updates [2-458](#)  
         notification settings [2-460](#)  
         number of addresses in a VLAN [2-452](#)  
         per interface [2-456](#)  
         per VLAN [2-464](#)  
         static [2-462](#)  
         static and dynamic entries [2-446](#)  
     dynamic  
         aging time [2-206](#)  
         deleting [2-44](#)  
         displaying [2-454](#)  
     enabling MAC address notification [2-209](#)  
     enabling MAC address-table move update [2-207](#)  
     matching [2-224](#)  
     static  
         adding and removing [2-211](#)  
         displaying [2-462](#)  
         dropping on an interface [2-212](#)  
     tables [2-448](#)  
[mac address notification, debugging](#) [B-16](#)  
[mac address-table aging-time](#) [2-202, 2-224](#)  
[mac address-table aging-time command](#) [2-206](#)  
[mac address-table move update command](#) [2-207](#)  
[mac address-table notification command](#) [2-209](#)  
[mac address-table static command](#) [2-211](#)  
[mac address-table static drop command](#) [2-212](#)  
[macro apply command](#) [2-214](#)

- macro description command [2-217](#)
- macro global command [2-218](#)
- macro global description command [2-221](#)
- macro name command [2-222](#)
- macros
  - adding a description [2-217](#)
  - adding a global description [2-221](#)
  - applying [2-218](#)
  - creating [2-222](#)
  - displaying [2-491](#)
  - interface range [2-53, 2-109](#)
  - specifying parameter values [2-218](#)
  - tracing [2-218](#)
- manual
  - audience [xvii](#)
  - purpose of [xvii](#)
- maps
  - QoS
    - defining [2-238](#)
    - displaying [2-474](#)
  - VLAN
    - creating [2-656](#)
    - defining [2-224](#)
    - displaying [2-522](#)
- match (access-map configuration) command [2-224](#)
- match (class-map configuration) command [2-226](#)
- maximum transmission unit
  - See MTU
- mdix auto command [2-228](#)
- MDL snooping
  - displaying [2-425](#)
- memory (boot loader) command [A-13](#)
- mkdir (boot loader) command [A-15](#)
- MLD snooping
  - configuring [2-174, 2-176](#)
  - configuring queries [2-170, 2-172](#)
  - configuring topology change notification [2-178](#)
  - displaying [2-423, 2-427, 2-429](#)
  - enabling [2-168](#)
  - MLD snooping on a VLAN
    - enabling [2-180](#)
  - mls qos aggregate-policer command [2-232](#)
  - mls qos command [2-230](#)
  - mls qos cos command [2-234](#)
  - mls qos dscp-mutation command [2-236](#)
  - mls qos map command [2-238](#)
  - mls qos queue-set output buffers command [2-242](#)
  - mls qos queue-set output threshold command [2-244](#)
  - mls qos rewrite ip dscp command [2-246](#)
  - mls qos srr-queue input bandwidth command [2-248](#)
  - mls qos srr-queue input buffers command [2-250](#)
  - mls qos-srr-queue input cos-map command [2-252](#)
  - mls qos srr-queue input dscp-map command [2-254](#)
  - mls qos srr-queue input priority-queue command [2-256](#)
  - mls qos srr-queue input threshold command [2-258](#)
  - mls qos-srr-queue output cos-map command [2-260](#)
  - mls qos srr-queue output dscp-map command [2-262](#)
  - mls qos trust command [2-264](#)
  - mls qos vlan-based command [2-266](#)
  - mode, MVR [2-272](#)
  - Mode button, and password recovery [2-321](#)
  - modes, commands [1-1](#)
  - monitor session command [2-267](#)
  - more (boot loader) command [A-16](#)
  - MSTP
    - displaying [2-503](#)
    - interoperability [2-50](#)
    - link type [2-556](#)
    - MST region
      - aborting changes [2-562](#)
      - applying changes [2-562](#)
      - configuration name [2-562](#)
      - configuration revision number [2-562](#)
      - current or pending display [2-562](#)
      - displaying [2-503](#)
      - MST configuration mode [2-562](#)
      - VLANs-to-instance mapping [2-562](#)
    - path cost [2-564](#)

**MSTP (continued)**

- protocol mode [2-560](#)
- restart protocol migration process [2-50](#)
- root port
  - loop guard [2-554](#)
  - preventing from becoming designated [2-554](#)
  - restricting which can be root [2-554](#)
  - root guard [2-554](#)
- root switch
  - affects of extended system ID [2-553](#)
  - hello-time [2-567, 2-574](#)
  - interval between BDPU messages [2-568](#)
  - interval between hello BPDU messages [2-567, 2-574](#)
  - max-age [2-568](#)
  - maximum hop count before discarding BPDU [2-569](#)
  - port priority for selection of [2-570](#)
  - primary or secondary [2-574](#)
  - switch priority [2-573](#)
- state changes
  - blocking to forwarding state [2-580](#)
  - enabling BPDU filtering [2-545, 2-578](#)
  - enabling BPDU guard [2-547, 2-578](#)
  - enabling Port Fast [2-578, 2-580](#)
  - forward-delay time [2-566](#)
  - length of listening and learning states [2-566](#)
  - rapid transition to forwarding [2-556](#)
  - shutting down Port Fast-enabled ports [2-578](#)
- state information display [2-502](#)

**MTU**

- configuring size [2-630](#)
- displaying global setting [2-510](#)

**Multicast Listener Discovery**

See MLD

- multicast group address, MVR [2-275](#)
- multicast groups, MVR [2-273](#)

**Multicast Listener Discovery**

See MLD

multicast router learning method [2-156](#)

multicast router ports

IPv6 [2-180](#)

multicast router ports, configuring [2-156](#)

multicast storm control [2-596](#)

multicast VLAN, MVR [2-272](#)

multicast VLAN registration

See MVR

multiple hosts on authorized port [2-75](#)

Multiple Spanning Tree Protocol

See MSTP

**MVR**

- and address aliasing [2-273](#)
- configuring [2-272](#)
- configuring interfaces [2-275](#)
- debug messages, display [B-20](#)
- displaying [2-483](#)
- displaying interface information [2-485](#)
- members, displaying [2-487](#)

mvr (global configuration) command [2-272](#)

mvr (interface configuration) command [2-275](#)

mvr vlan group command [2-276](#)

---

**N**

native VLANs [2-625](#)

native VLAN tagging [2-661](#)

nonegotiate

DTP messaging [2-610](#)

nonegotiate, speed [2-588](#)

non-IP protocols

denying [2-56](#)

forwarding [2-290](#)

non-IP traffic access lists [2-204](#)

non-IP traffic forwarding

denying [2-56](#)

permitting [2-290](#)

normal-range VLANs [2-644, 2-650](#)

note, description [xviii](#)

no vlan command [2-644, 2-654](#)

## O

online diagnostics

displaying

configured boot-up coverage level [2-355](#)

current scheduled tasks [2-355](#)

event logs [2-355](#)

supported test suites [2-355](#)

test ID [2-355](#)

test results [2-355](#)

test statistics [2-355](#)

## P

PAgP

See EtherChannel

pagp learn-method command [2-278](#)

pagp port-priority command [2-280](#)

password, VTP [2-670, 2-674](#)

password-recovery mechanism, enabling and disabling [2-321](#)

permit (ARP access-list configuration) command [2-282](#)

permit (IPv6) command [2-284](#)

permit (MAC access-list configuration) command [2-290](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-278](#)

PID, displaying [2-393](#)

PIM-DVMRP, as multicast router learning method [2-156](#)

police aggregate command [2-295](#)

police command [2-293](#)

policed-DSCP map [2-238](#)

policy-map command [2-297](#)

policy maps

applying to an interface [2-323, 2-328](#)

creating [2-297](#)

displaying [2-494](#)

## policy maps (continued)

hierarchical [2-298](#)

policers

displaying [2-467](#)

for a single class [2-293](#)

for multiple classes [2-232, 2-295](#)

policed-DSCP map [2-238](#)

traffic classification

defining the class [2-32](#)

defining trust states [2-637](#)

setting DSCP or IP precedence values [2-326](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list [2-3](#)

debug messages, display [B-5](#)

enabling IEEE 802.1x

globally [2-59](#)

per interface [2-82](#)

guest VLAN [2-73](#)

host modes [2-75](#)

IEEE 802.1x AAA accounting methods [2-1](#)

initialize an interface [2-76, 2-87](#)

MAC authentication bypass [2-77](#)

manual control of authorization state [2-82](#)

multiple hosts on authorized port [2-75](#)

PAE as authenticator [2-81](#)

periodic re-authentication

enabling [2-85](#)

time between attempts [2-88](#)

quiet period between failed authentication exchanges [2-88](#)

re-authenticating IEEE 802.1x-enabled ports [2-84](#)

resetting configurable IEEE 802.1x parameters [2-71](#)

switch-to-authentication server retransmission time [2-88](#)

switch-to-client frame-retransmission number [2-79 to 2-80](#)

switch-to-client retransmission time [2-88](#)

test for IEEE 802.1x readiness [2-86](#)

port-channel load-balance command [2-300](#)  
 Port Fast, for spanning tree [2-580](#)  
 port ranges, defining [2-53](#)  
 ports, debugging [B-62](#)  
 ports, protected [2-623](#)  
 port security  
     aging [2-617](#)  
     debug messages, display [B-64](#)  
     enabling [2-612](#)  
     violation error recovery [2-99](#)  
 port trust states for QoS [2-264](#)  
 port types, MVR [2-275](#)  
 priority-queue command [2-302](#)  
 private-vlan command [2-304](#)  
 private-vlan mapping command [2-307](#)  
 private VLANs  
     association [2-621](#)  
     configuring [2-304](#)  
     configuring ports [2-608](#)  
     displaying [2-516](#)  
     host ports [2-608](#)  
     mapping  
         configuring [2-621](#)  
         displaying [2-382](#)  
     promiscuous ports [2-608](#)  
 privileged EXEC mode [1-2, 1-3](#)  
 product identification information, displaying [2-393](#)  
 promiscuous ports, private VLANs [2-608](#)  
 protected ports, displaying [2-388](#)  
 pruning  
     VLANs [2-625](#)  
     VTP  
         displaying interface information [2-382](#)  
         enabling [2-670, 2-674](#)  
 pruning-eligible VLAN list [2-627](#)  
 PVST+  
     See STP

---

## Q

### QoS

auto-QoS  
     configuring [2-16](#)  
     debug messages, display [B-2](#)  
     displaying [2-335](#)  
 class maps  
     creating [2-34](#)  
     defining the match criteria [2-226](#)  
     displaying [2-341](#)  
 defining the CoS value for an incoming packet [2-234](#)  
 displaying configuration information [2-335, 2-466](#)  
 DSCP transparency [2-246](#)  
 DSCP trusted ports  
     applying DSCP-to-DSCP-mutation map to [2-236](#)  
     defining DSCP-to-DSCP-mutation map [2-238](#)  
 egress queues  
     allocating buffers [2-242](#)  
     defining the CoS output queue threshold map [2-260](#)  
     defining the DSCP output queue threshold map [2-262](#)  
     displaying buffer allocations [2-470](#)  
     displaying CoS output queue threshold map [2-474](#)  
     displaying DSCP output queue threshold map [2-474](#)  
     displaying queueing strategy [2-470](#)  
     displaying queue-set settings [2-477](#)  
     enabling bandwidth shaping and scheduling [2-592](#)  
     enabling bandwidth sharing and scheduling [2-594](#)  
     limiting the maximum output on a port [2-590](#)  
     mapping a port to a queue-set [2-309](#)  
     mapping CoS values to a queue and threshold [2-260](#)  
     mapping DSCP values to a queue and threshold [2-262](#)

**QoS (continued)**

- setting maximum and reserved memory allocations [2-244](#)
  - setting WTD thresholds [2-244](#)
- enabling [2-230](#)
- ingress queues
  - allocating buffers [2-250](#)
  - assigning SRR scheduling weights [2-248](#)
  - defining the CoS input queue threshold map [2-252](#)
  - defining the DSCP input queue threshold map [2-254](#)
  - displaying buffer allocations [2-470](#)
  - displaying CoS input queue threshold map [2-474](#)
  - displaying DSCP input queue threshold map [2-474](#)
  - displaying queueing strategy [2-470](#)
  - displaying settings for [2-468](#)
  - enabling the priority queue [2-256](#)
  - mapping CoS values to a queue and threshold [2-252](#)
  - mapping DSCP values to a queue and threshold [2-254](#)
  - setting WTD thresholds [2-258](#)
- maps
  - defining [2-238, 2-252, 2-254, 2-260, 2-262](#)
  - displaying [2-474](#)
- policy maps
  - applying an aggregate policer [2-295](#)
  - applying to an interface [2-323, 2-328](#)
  - creating [2-297](#)
  - defining policers [2-232, 2-293](#)
  - displaying policers [2-467](#)
  - displaying policy maps [2-494](#)
  - hierarchical [2-298](#)
  - policed-DSCP map [2-238](#)
  - setting DSCP or IP precedence values [2-326](#)
  - traffic classifications [2-32](#)
  - trust states [2-637](#)
- port trust states [2-264](#)

**QoS (continued)**

- queues, enabling the expedite [2-302](#)
  - statistics
    - in-profile and out-of-profile packets [2-470](#)
    - packets enqueued or dropped [2-470](#)
    - sent and received CoS values [2-470](#)
    - sent and received DSCP values [2-470](#)
  - trusted boundary for IP phones [2-264](#)
  - VLAN-based [2-266](#)
- quality of service
  - See QoS
- querytime, MVR [2-272](#)
- queue-set command [2-309](#)

---

**R**

- radius-server dead-criteria command [2-310](#)
- radius-server host command [2-312](#)
- rapid per-VLAN spanning-tree plus
  - See STP
- rapid PVST+
  - See STP
- re-authenticating IEEE 802.1x-enabled ports [2-84](#)
- re-authentication
  - periodic [2-85](#)
  - time between attempts [2-88](#)
- receiver ports, MVR [2-275](#)
- receiving flow-control packets [2-105](#)
- recovery mechanism
  - causes [2-99](#)
  - display [2-38, 2-366, 2-370](#)
  - timer interval [2-100](#)
- remote-span command [2-314](#)
- Remote Switched Port Analyzer
  - See RSPAN
- rename (boot loader) command [A-17](#)
- renew ip dhcp snooping database command [2-316](#)
- requirements
  - device manager [xviii](#)

reset (boot loader) command [A-18](#)  
 reset command [2-659](#)  
 resource templates, displaying [2-499](#)  
 restricted VLAN  
     See dot1x auth-fail vlan  
 rmdir (boot loader) command [A-19](#)  
 rmon collection stats command [2-317](#)  
 root guard, for spanning tree [2-554](#)  
 routed ports  
     IP addresses on [2-117](#)  
     number supported [2-117](#)  
 RSPAN  
     configuring [2-267](#)  
     displaying [2-480](#)  
     filter RSPAN traffic [2-267](#)  
     remote-span command [2-314](#)  
     sessions  
         add interfaces to [2-267](#)  
         displaying [2-480](#)  
         start new [2-267](#)

---

## S

sdm prefer command [2-318](#)  
 SDM templates  
     allowed resources [2-319](#)  
     displaying [2-499](#)  
     dual IPv4 and IPv6 [2-318](#)  
 secure ports, limitations [2-614](#)  
 sending flow-control packets [2-105](#)  
 service password-recovery command [2-321](#)  
 service-policy command [2-323](#)  
 set (boot loader) command [A-20](#)  
 set command [2-326](#)  
 setup command [2-328](#)  
 show access-lists command [2-331](#)  
 show archive status command [2-334](#)  
 show auto qos command [2-335](#)  
 show boot command [2-339](#)

show changes command [2-659](#)  
 show class-map command [2-341](#)  
 show controllers cpu-interface command [2-342](#)  
 show controllers ethernet-controller command [2-344](#)  
 show controllers tcam command [2-351](#)  
 show controller utilization command [2-353](#)  
 show current command [2-659](#)  
 show dot1q-tunnel command [2-355](#)  
 show dot1x command [2-356](#)  
 show dtp [2-360](#)  
 show eap command [2-362](#)  
 show env command [2-365](#)  
 show errdisable detect command [2-366](#)  
 show errdisable flap-values command [2-368](#)  
 show errdisable recovery command [2-370](#)  
 show etherchannel command [2-372](#)  
 show fallback profile command [2-375](#)  
 show flowcontrol command [2-377](#)  
 show idprom command [2-379](#)  
 show interfaces command [2-382](#)  
 show interfaces counters command [2-390](#)  
 show inventory command [2-393](#)  
 show ipc command [2-417](#)  
 show ip dhcp snooping binding command [2-396](#)  
 show ip dhcp snooping command [2-395](#)  
 show ip dhcp snooping database command [2-398, 2-400](#)  
 show ip igmp profile command [2-403](#)  
 show ip igmp snooping address command [2-425](#)  
 show ip igmp snooping command [2-404, 2-423](#)  
 show ip igmp snooping groups command [2-407](#)  
 show ip igmp snooping mrouter command [2-409, 2-427](#)  
 show ip igmp snooping querier command [2-411, 2-429](#)  
 show ip source binding command [2-413](#)  
 show ipv6 access-list command [2-421](#)  
 show ip verify source command [2-415](#)  
 show l2protocol-tunnel command [2-431](#)  
 show lacp command [2-434](#)  
 show link state group command [2-440, 2-442](#)  
 show location [2-438](#)

- show mac access-group command [2-444](#)
- show mac address-table address command [2-448](#)
- show mac address-table aging time command [2-450](#)
- show mac address-table command [2-446](#)
- show mac address-table count command [2-452](#)
- show mac address-table dynamic command [2-454](#)
- show mac address-table interface command [2-456](#)
- show mac address-table move update command [2-458](#)
- show mac address-table notification command [2-45, 2-460, B-18](#)
- show mac address-table static command [2-462](#)
- show mac address-table vlan command [2-464](#)
- show mls qos aggregate-policer command [2-467](#)
- show mls qos command [2-466](#)
- show mls qos input-queue command [2-468](#)
- show mls qos interface command [2-470](#)
- show mls qos maps command [2-474](#)
- show mls qos queue-set command [2-477](#)
- show mls qos vlan command [2-479](#)
- show monitor command [2-480](#)
- show mvr command [2-483](#)
- show mvr interface command [2-485](#)
- show mvr members command [2-487](#)
- show pagp command [2-489](#)
- show parser macro command [2-491](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform igmp snooping command [C-8](#)
- show platform ipc trace command [C-15](#)
- show platform ip multicast command [C-10](#)
- show platform ip unicast command [C-11](#)
- show platform ipv6 unicast command [C-16](#)
- show platform layer4op command [C-18](#)
- show platform mac-address-table command [C-19](#)
- show platform messaging command [C-20](#)
- show platform monitor command [C-21](#)
- show platform mvr table command [C-22](#)
- show platform pm command [C-23](#)
- show platform port-asic command [C-24](#)
- show platform port-security command [C-30](#)
- show platform qos command [C-31](#)
- show platform resource-manager command [C-32](#)
- show platform snmp counters command [C-34](#)
- show platform spanning-tree command [C-35](#)
- show platform stp-instance command [C-36](#)
- show platform tcam command [C-37](#)
- show platform vlan command [C-40](#)
- show policy-map command [2-494](#)
- show port security command [2-496](#)
- show proposed command [2-659](#)
- show sdm prefer command [2-499](#)
- show spanning-tree command [2-502](#)
- show storm-control command [2-508](#)
- show system mtu command [2-510](#)
- show trust command [2-637](#)
- show uddl command [2-511](#)
- show version command [2-514](#)
- show vlan access-map command [2-522](#)
- show vlan command [2-516](#)
- show vlan command, fields [2-518](#)
- show vlan filter command [2-523](#)
- show vmps command [2-524](#)
- show vtp command [2-527](#)
- shutdown command [2-531](#)
- shutdown threshold, Layer 2 protocol tunneling [2-184](#)
- shutdown vlan command [2-532](#)
- small violation-rate command [2-533](#)
- Smartports macros
  - See macros
- SNMP host, specifying [2-538](#)
- SNMP informs, enabling the sending of [2-535](#)
- snmp-server enable traps command [2-535](#)
- snmp-server host command [2-538](#)
- snmp trap mac-notification command [2-542](#)

## SNMP traps

- enabling MAC address notification trap [2-542](#)
- enabling the MAC address notification feature [2-209](#)
- enabling the sending of [2-535](#)

## SoftPhone

- See Cisco SoftPhone

## software images

- deleting [2-55](#)
- downloading [2-8](#)
- upgrading [2-8](#)
- uploading [2-14](#)

software version, displaying [2-514](#)source ports, MVR [2-275](#)

## SPAN

- configuring [2-267](#)
- debug messages, display [B-19](#)
- displaying [2-480](#)
- filter SPAN traffic [2-267](#)
- sessions
  - add interfaces to [2-267](#)
  - displaying [2-480](#)
  - start new [2-267](#)

spanning [2-582](#)spanning-tree backbonefast command [2-544](#)spanning-tree bpdupfilter command [2-545](#)spanning-tree bpduguard command [2-547](#)spanning-tree cost command [2-549](#)spanning-tree etherchannel command [2-551](#)spanning-tree extend system-id command [2-553](#)spanning-tree guard command [2-554](#)spanning-tree link-type command [2-556](#)spanning-tree loopguard default command [2-558](#)spanning-tree mode command [2-560](#)spanning-tree mst configuration command [2-562](#)spanning-tree mst cost command [2-564](#)spanning-tree mst forward-time command [2-566](#)spanning-tree mst hello-time command [2-567](#)spanning-tree mst max-age command [2-568](#)spanning-tree mst max-hops command [2-569](#)spanning-tree mst port-priority command [2-570](#)spanning-tree mst pre-standard command [2-572](#)spanning-tree mst priority command [2-573](#)spanning-tree mst root command [2-574](#)spanning-tree portfast (global configuration) command [2-578](#)spanning-tree portfast (interface configuration) command [2-580](#)spanning-tree port-priority command [2-576](#)

## Spanning Tree Protocol

## See STP

spanning-tree transmit hold-count command [2-582](#)spanning-tree uplinkfast command [2-583](#)spanning-tree vlan command [2-585](#)speed command [2-588](#)srr-queue bandwidth limit command [2-590](#)srr-queue bandwidth shape command [2-592](#)srr-queue bandwidth share command [2-594](#)SSH, configuring version [2-163](#)static-access ports, configuring [2-601](#)statistics, Ethernet group [2-317](#)sticky learning, enabling [2-612](#)storm-control command [2-596](#)

## STP

BackboneFast [2-544](#)counters, clearing [2-49](#)

## debug messages, display

BackboneFast events [B-68](#)MSTP [B-71](#)optimized BPDUs handling [B-70](#)spanning-tree activity [B-66](#)switch shim [B-73](#)transmitted and received BPDUs [B-69](#)UplinkFast [B-75](#)detection of indirect link failures [2-544](#)enabling protocol tunneling for [2-184](#)EtherChannel misconfiguration [2-551](#)extended system ID [2-553](#)path cost [2-549](#)

## STP (continued)

- protocol modes [2-560](#)
- root port
  - accelerating choice of new [2-583](#)
  - loop guard [2-554](#)
  - preventing from becoming designated [2-554](#)
  - restricting which can be root [2-554](#)
  - root guard [2-554](#)
  - UplinkFast [2-583](#)
- root switch
  - affects of extended system ID [2-553, 2-586](#)
  - hello-time [2-585](#)
  - interval between BPDU messages [2-585](#)
  - interval between hello BPDU messages [2-585](#)
  - max-age [2-585](#)
  - port priority for selection of [2-576](#)
  - primary or secondary [2-585](#)
  - switch priority [2-585](#)
- state changes
  - blocking to forwarding state [2-580](#)
  - enabling BPDU filtering [2-545, 2-578](#)
  - enabling BPDU guard [2-547, 2-578](#)
  - enabling Port Fast [2-578, 2-580](#)
  - enabling timer to recover from error state [2-99](#)
  - forward-delay time [2-585](#)
  - length of listening and learning states [2-585](#)
  - shutting down Port Fast-enabled ports [2-578](#)
- state information display [2-502](#)
- VLAN options [2-573, 2-585](#)
- SVIs, creating [2-111](#)
- Switched Port Analyzer
  - See SPAN
- switching characteristics
  - modifying [2-599](#)
  - returning to interfaces [2-599](#)
- switchport access command [2-601](#)
- switchport block command [2-603](#)
- switchport command [2-599](#)
- switchport host command [2-604](#)

- switchport mode command [2-605](#)
- switchport mode private-vlan command [2-608](#)
- switchport nonegotiate command [2-610](#)
- switchport port-security aging command [2-617](#)
- switchport port-security command [2-612](#)
- switchport priority extend command [2-619](#)
- switchport private-vlan command [2-621](#)
- switchport protected command [2-623](#)
- switchports, displaying [2-382](#)
- switchport trunk command [2-625](#)
- switchport voice vlan command [2-628](#)
- system message logging, save message to flash [2-200](#)
- system mtu command [2-630](#)
- system resource templates [2-318](#)

---

## T

- tar files, creating, listing, and extracting [2-11](#)
- templates, system resources [2-318](#)
- traceroute mac command [2-632](#)
- traceroute mac ip command [2-635](#)
- trunking, VLAN mode [2-605](#)
- trunk mode [2-605](#)
- trunk ports [2-605](#)
- trunks, to non-DTP device [2-606](#)
- trusted boundary for QoS [2-264](#)
- trusted port states for QoS [2-264](#)
- tunnel ports, Layer 2 protocol, displaying [2-431](#)
- type (boot loader) command [A-23](#)

---

## U

- UDLD
  - aggressive mode [2-639, 2-641](#)
  - debug messages, display [B-82](#)
  - enable globally [2-639](#)
  - enable per interface [2-641](#)
  - error recovery timer [2-99](#)

**UDLD (continued)**

- message timer [2-639](#)
- normal mode [2-639, 2-641](#)
- reset a shutdown interface [2-643](#)
- status [2-511](#)
- udld command [2-639](#)
- udld port command [2-641](#)
- udld reset command [2-643](#)
- unicast storm control [2-596](#)
- UniDirectional Link Detection
  - See UDLD
- unknown multicast traffic, preventing [2-603](#)
- unknown unicast traffic, preventing [2-603](#)
- unset (boot loader) command [A-24](#)
- upgrading
  - software images [2-8](#)
  - monitoring status of [2-334](#)
- upgrading information
  - See release notes
- UplinkFast, for STP [2-583](#)
- user EXEC mode [1-2, 1-3](#)

**V**

- version (boot loader) command [A-26](#)
- VLAN
  - enabling guest VLAN supplicant [2-62, 2-72](#)
- vlan (global configuration) command [2-644](#)
- vlan (VLAN configuration) command [2-650](#)
- vlan access-map command [2-656](#)
- VLAN access map configuration mode [2-656](#)
- VLAN access maps
  - actions [2-6](#)
  - displaying [2-522](#)
- VLAN-based QoS [2-266](#)
- VLAN configuration
  - rules [2-647, 2-652](#)
  - saving [2-644, 2-654](#)

**VLAN configuration mode**

- commands
  - VLAN [2-650](#)
  - VTP [2-674](#)
- description [1-5](#)
- entering [2-658](#)
- summary [1-2](#)
- vlan database command [2-658](#)
- vlan dot1q tag native command [2-661](#)
- vlan filter command [2-663](#)
- VLAN filters, displaying [2-523](#)
- VLAN ID range [2-644, 2-650](#)
- VLAN maps
  - applying [2-663](#)
  - creating [2-656](#)
  - defining [2-224](#)
  - displaying [2-522](#)
- VLAN Query Protocol
  - See VQP
- VLANs
  - adding [2-644](#)
  - configuring [2-644, 2-650](#)
  - debug messages, display
    - ISL [B-79](#)
    - VLAN IOS file system error tests [B-78](#)
    - VLAN manager activity [B-76](#)
    - VTP [B-80](#)
  - displaying configurations [2-516](#)
  - enabling guest VLAN supplicant [2-104](#)
  - extended-range [2-644](#)
  - MAC addresses
    - displaying [2-464](#)
    - number of [2-452](#)
  - media types [2-647, 2-652](#)
  - normal-range [2-644, 2-650](#)
  - private [2-608](#)
    - configuring [2-304](#)
    - displaying [2-516](#)
    - See also private VLANs

**VLANs (continued)**

- restarting [2-532](#)
- saving the configuration [2-644](#)
- shutting down [2-532](#)
- SNMP traps for VTP [2-536, 2-539](#)
- suspending [2-532](#)
- variables [2-650](#)

**VLAN Trunking Protocol**

See VTP

**VMPS**

- configuring servers [2-668](#)
- displaying [2-524](#)
- error recovery timer [2-100](#)
- reconfirming dynamic VLAN assignments [2-665](#)

vmmps reconfirm (global configuration) command [2-666](#)

vmmps reconfirm (privileged EXEC) command [2-665](#)

vmmps retry command [2-667](#)

vmmps server command [2-668](#)

**voice VLAN**

- configuring [2-628](#)
- setting port priority [2-619](#)

**VQP**

- and dynamic-access ports [2-601](#)
- clearing client statistics [2-51](#)
- displaying information [2-524](#)
- per-server retry count [2-667](#)
- reconfirmation interval [2-666](#)
- reconfirming dynamic VLAN assignments [2-665](#)

**VTP**

- changing characteristics [2-670](#)
- clearing pruning counters [2-52](#)
- configuring
  - domain name [2-670, 2-674](#)
  - file name [2-670](#)
  - mode [2-670, 2-674](#)
  - password [2-670, 2-674](#)
- counters display fields [2-528](#)
- displaying information [2-527](#)
- enabling

**VTP (continued)**

- pruning [2-670, 2-674](#)
- tunneling for [2-184](#)
- Version 2 [2-670, 2-674](#)
- mode [2-670, 2-674](#)
- pruning [2-670, 2-674](#)
- saving the configuration [2-644, 2-654](#)
- statistics [2-527](#)
- status [2-527](#)
- status display fields [2-529](#)
- vtp (global configuration) command [2-670](#)
- vtp (VLAN configuration) command [2-674](#)

---

**X**

XENPAK module serial EEPROM information [2-379](#)

