



INDEX

A

aaa accounting dot1x command [1](#)
aaa authentication dot1x command [3](#)
aaa authorization network command [5, 16, 20, 22, 24, 26, 96, 394, 5, 28](#)
AAA methods [3](#)
abort command [730](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [153](#)
 MAC, displaying [501](#)
access list, IPv6 [209](#)
access map configuration mode [268](#)
access mode [676](#)
access ports [676](#)
ACEs [87, 342](#)
ACLs
 deny [85](#)
 displaying [383](#)
 for non-IP protocols [247](#)
 IP [153](#)
 matching [268](#)
 on Layer 2 interfaces [153](#)
 permit [340](#)
action command [6](#)
address aliasing [317](#)
aggregate-port learner [330](#)
allowed VLANs [696](#)
apply command [730](#)

archive download-sw command [8](#)
archive tar command [11](#)
archive upload-sw command [14](#)
authentication control-direction command [16](#)
authentication event command [18](#)
authentication failed VLAN
 See dot1x auth-fail vlan
authentication fallback command [20](#)
authentication host-mode command [22](#)
authentication open command [24](#)
authentication order command [26](#)
authentication periodic command [28](#)
authentication port-control command [30](#)
authentication priority command [32](#)
authentication timer command [34](#)
authentication violation command [36](#)
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
auth open command [24](#)
auth order command [26](#)
authorization state of controlled port [112](#)
auth timer command [34](#)
autonegotiation of duplex mode [123](#)
auto qos voip command [38](#)

B

BackboneFast, for STP [609](#)
backup interfaces
 configuring [670](#)
 displaying [439](#)

- boot (boot loader) command [2](#)
 - boot config-file command [42](#)
 - boot enable-break command [43](#)
 - boot helper command [44](#)
 - boot helper-config file command [45](#)
 - booting
 - Cisco IOS image [48](#)
 - displaying environment variables [392](#)
 - interrupting [43](#)
 - manually [46](#)
 - boot loader
 - accessing [1](#)
 - booting
 - Cisco IOS image [2](#)
 - helper image [44](#)
 - directories
 - creating [15](#)
 - displaying a list of [7](#)
 - removing [19](#)
 - displaying
 - available commands [12](#)
 - memory heap utilization [13](#)
 - version [26](#)
 - environment variables
 - described [20](#)
 - displaying settings [20](#)
 - location of [21](#)
 - setting [20](#)
 - unsetting [24](#)
 - files
 - copying [5](#)
 - deleting [6](#)
 - displaying a list of [7](#)
 - displaying the contents of [4, 16, 23](#)
 - renaming [17](#)
 - boot loader (continued)
 - file system
 - formatting [10](#)
 - initializing flash [9](#)
 - running a consistency check [11](#)
 - resetting the system [18](#)
 - boot manual command [46](#)
 - boot private-config-file command [47](#)
 - boot system command [48](#)
 - BPDU filtering, for spanning tree [610, 643](#)
 - BPDU guard, for spanning tree [612, 643](#)
 - break key detection [373, 1](#)
 - broadcast storm control [661](#)
-
- ## C
- cat (boot loader) command [4](#)
 - CDP, enabling protocol tunneling for [227](#)
 - channel-group command [49](#)
 - channel-protocol command [52](#)
 - Cisco SoftPhone
 - auto-QoS configuration [38](#)
 - trusting packets sent from [308](#)
 - CISP
 - See Client Information Signalling Protocol
 - cisp
 - debug platform cisp command [28](#)
 - cisp enable command [53](#)
 - class command [54](#)
 - class-map command [56](#)
 - class maps
 - creating [56](#)
 - defining the match criteria [270](#)
 - displaying [395](#)
 - class of service
 - See CoS
 - clear dot1x command [58](#)
 - clear eap sessions command [59](#)
 - clear energywise neighbors command [60](#)

- clear errdisable interface [61](#)
- clear ipc command [62](#)
- clear ip dhcp snooping database command [64](#)
- clear l2protocol-tunnel counters command [63](#)
- clear lacp command [66](#)
- clear mac address-table command [67, 68](#)
- clear nmsp statistics command [69](#)
- clear pagp command [70](#)
- clear port-security command [71](#)
- clear spanning-tree counters command [73](#)
- clear spanning-tree detected-protocols command [74](#)
- clear vmps statistics command [75](#)
- clear vtp counters command [76](#)
- Client Information Signalling Protocol [53, 96, 394, 5, 28](#)
- clusters
 - SNMP trap [599](#)
- command modes defined [1](#)
- configuration files
 - password recovery disable considerations [1](#)
 - specifying the name [42, 47](#)
- configuring multiple interfaces [149](#)
- config-vlan mode
 - commands [716](#)
 - description [4](#)
 - entering [715](#)
 - summary [2](#)
- copy (boot loader) command [5](#)
- CoS
 - assigning default value to incoming packets [278](#)
 - assigning to Layer 2 protocol packets [230](#)
 - overriding the incoming value [278](#)
- CoS-to-DSCP map [282](#)
- CPU ASIC statistics, displaying [396](#)
- crashinfo files [142](#)

D

- debug auto qos command [2](#)
- debug backup command [4](#)
- debug cisp command [5](#)
- debug dot1x command [6](#)
- debug dtp command [7](#)
- debug eap command [8](#)
- debug etherchannel command [9](#)
- debug interface command [12](#)
- debug ip dhcp snooping command [10](#)
- debug ip igmp filter command [13](#)
- debug ip igmp max-groups command [14](#)
- debug ip igmp snooping command [15](#)
- debug ip verify source packet command [11](#)
- debug lacp command [16](#)
- debug lldp packets command [17](#)
- debug mac-notification command [18](#)
- debug matm command [19](#)
- debug matm move update command [20](#)
- debug monitor command [21](#)
- debug mvrdbg command [22](#)
- debug nmsp command [23](#)
- debug nvram command [24](#)
- debug pagp command [25](#)
- debug platform acl command [26](#)
- debug platform backup interface command [27](#)
- debug platform cisp command [28](#)
- debug platform cli-redirection main command [29](#)
- debug platform cpu-queues command [30](#)
- debug platform dot1x command [32](#)
- debug platform etherchannel command [33](#)
- debug platform fallback-bridging command [34](#)
- debug platform forw-tcam command [35](#)
- debug platform ip arp inspection command [36](#)
- debug platform ipc command [44](#)
- debug platform ip dhcp command [37](#)
- debug platform ip igmp snooping command [38](#)
- debug platform ip multicast command [40](#)
- debug platform ip unicast command [42](#)
- debug platform led command [45](#)
- debug platform matm command [46](#)
- debug platform messaging application command [47](#)

- debug platform phy command [48](#)
- debug platform pm command [50](#)
- debug platform port-asic command [52](#)
- debug platform port-security command [53](#)
- debug platform qos-acl-tcam command [54](#)
- debug platform remote-commands command [55](#)
- debug platform resource-manager command [56](#)
- debug platform snmp command [57](#)
- debug platform span command [58](#)
- debug platform supervisor-asic command [59](#)
- debug platform sw-bridge command [60](#)
- debug platform tcam command [61](#)
- debug platform udd command [64](#)
- debug platform vlan command [65](#)
- debug pm command [66](#)
- debug port-security command [68](#)
- debug qos-manager command [69](#)
- debug spanning-tree backbonefast command [72](#)
- debug spanning-tree bpdu command [73](#)
- debug spanning-tree bpdu-opt command [74](#)
- debug spanning-tree command [70](#)
- debug spanning-tree mstp command [75](#)
- debug spanning-tree switch command [77](#)
- debug spanning-tree uplinkfast command [79](#)
- debug sw-vlan command [80](#)
- debug sw-vlan ifs command [82](#)
- debug sw-vlan notification command [83](#)
- debug sw-vlan vtp command [84](#)
- debug udd command [86](#)
- debug vqpc command [88](#)
- define interface-range command [77](#)
- delete (boot loader) command [6](#)
- delete command [79](#)
- deny (IPv6) command [80](#)
- deny command [85](#)
- detect mechanism, causes [134](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [168](#)
 - enabling
 - on a VLAN [174](#)
 - option 82 [166, 168](#)
 - trust on an interface [172](#)
 - error recovery timer [139](#)
 - rate limiting [171](#)
- DHCP snooping binding database
 - binding file, configuring [164](#)
 - bindings
 - adding [162](#)
 - deleting [162](#)
 - displaying [452](#)
 - clearing database agent statistics [64](#)
 - database agent, configuring [164](#)
 - displaying
 - binding entries [452](#)
 - database agent status [454, 456](#)
 - renewing [366](#)
- dir (boot loader) command [7](#)
- directories, deleting [79](#)
- domain name, VTP [740, 744](#)
- dot1x auth-fail max-attempts [90](#)
- dot1x auth-fail vlan [92](#)
- dot1x command [88](#)
- dot1x control-direction command [94](#)
- dot1x credentials (global configuration) command [96](#)
- dot1x critical global configuration command [97](#)
- dot1x critical interface configuration command [99](#)
- dot1x default command [101](#)
- dot1x fallback command [102](#)
- dot1x guest-vlan command [103](#)
- dot1x host-mode command [105](#)
- dot1x initialize command [106](#)
- dot1x mac-auth-bypass command [107](#)
- dot1x max-reauth-req command [109](#)
- dot1x max-req command [110](#)
- dot1x pae command [111](#)

- dot1x port-control command [112](#)
- dot1x re-authenticate command [114](#)
- dot1x reauthentication command [115](#)
- dot1x test eapol-capable command [116](#)
- dot1x test timeout command [117](#)
- dot1x timeout command [118](#)
- dot1x violation-mode command [121](#)
- dropping packets, with ACL matches [6](#)
- drop threshold, Layer 2 protocol tunneling [227](#)
- DSCP-to-CoS map [282](#)
- DSCP-to-DSCP-mutation map [282](#)
- DTP [677](#)
- DTP flap
 - error detection for [134](#)
 - error recovery timer [139](#)
- DTP negotiation [681](#)
- dual IPv4 and IPv6 templates [334](#)
- duplex command [122](#)
- dynamic-access ports
 - configuring [666](#)
 - restrictions [666](#)
- dynamic ARP inspection
 - error detection for [134](#)
- dynamic auto VLAN membership mode [676](#)
- dynamic desirable VLAN membership mode [676](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [110](#)
 - response time before retransmitting [118](#)
- encapsulation methods [696](#)
- energywise (global configuration) command [124, 126](#)
- energywise domain command [128](#)
- energywise query command [130](#)
- environment variables, displaying [392](#)
- errdisable detect cause command [134](#)
- errdisable detect cause small-frame command [136](#)
- errdisable recovery cause small-frame [138](#)
- errdisable recovery command [139](#)
- error conditions, displaying [426](#)
- error disable detection [134](#)
- error-disabled interfaces, displaying [439](#)
- EtherChannel
 - assigning Ethernet interface to channel group [49](#)
 - creating port-channel logical interface [147](#)
 - debug EtherChannel/PAgP, display [9](#)
 - debug platform-specific events, display [33](#)
 - displaying [430](#)
 - enabling Layer 2 protocol tunneling for
 - LACP [228](#)
 - PAgP [228](#)
 - UDLD [228](#)
 - interface information, displaying [439](#)
- LACP
 - clearing channel-group information [66](#)
 - debug messages, display [16](#)
 - displaying [490](#)
 - modes [49](#)
 - port priority for hot-standby ports [231](#)
 - restricting a protocol [52](#)
 - system priority [233](#)
- load-distribution methods [350](#)
- PAgP
 - aggregate-port learner [330](#)
 - clearing channel-group information [70](#)
 - debug messages, display [25](#)
 - displaying [552](#)
 - error detection for [134](#)
 - error recovery timer [139](#)
 - learn method [330](#)
 - modes [49](#)
 - physical-port learner [330](#)
 - priority of interface for transmitted traffic [332](#)

Ethernet controller, internal register display [398](#)
 Ethernet statistics, collecting [369](#)
 exception crashinfo command [142](#)
 exit command [730](#)
 extended-range VLANs
 and allowed VLAN list [696](#)
 and pruning-eligible list [696](#)
 configuring [715](#)
 extended system ID for STP [618](#)

F

fallback profile command [143](#)
 fallback profiles
 displaying [433](#)
 file name, VTP [740](#)
 files, deleting [79](#)
 flash_init (boot loader) command [9](#)
 flexible authentication ordering [26](#)
 Flex Links
 configuring [670](#)
 configuring preferred VLAN [672](#)
 displaying [439](#)
 flowcontrol command [145](#)
 format (boot loader) command [10](#)
 forwarding packets, with ACL matches [6](#)
 forwarding results, display [6](#)
 frame forwarding information, displaying [6](#)
 fsck (boot loader) command [11](#)

G

global configuration mode [2, 3](#)

H

hardware ACL statistics [383](#)
 help (boot loader) command [12](#)

hierarchical policy maps [348](#)
 host connection, port configuration [675](#)
 host ports, private VLANs [679](#)

IEEE 802.1Q trunk ports and native VLANs [732](#)

IEEE 802.1Q tunnel ports

 configuring [676](#)
 displaying [409](#)
 limitations [677](#)

IEEE 802.1x

 and switchport modes [677](#)
 violation error recovery [139](#)

 See also port-based authentication

IEEE 802.1X Port Based Authentication

 enabling guest VLAN supplicant [91, 102, 144](#)

IGMP filters

 applying [177](#)
 debug messages, display [13](#)

IGMP groups, setting maximum [179](#)

IGMP maximum groups, debugging [14](#)

IGMP profiles

 creating [181](#)
 displaying [459](#)

IGMP snooping

 adding ports as a static member of a group [197](#)
 displaying [460, 465, 467](#)
 enabling [183](#)
 enabling the configurable-leave timer [185](#)
 enabling the Immediate-Leave feature [194](#)
 flooding query count [191](#)
 interface topology change notification behavior [193](#)
 multicast table [463](#)
 querier [187](#)
 query solicitation [191](#)
 report suppression [189](#)
 switch topology change notification behavior [191](#)

- images
 - See software images
- Immediate-Leave feature, MVR [319](#)
- Immediate-Leave processing
 - IPv6 [223](#)
- immediate-leave processing [194](#)
- interface configuration mode [2, 4](#)
- interface port-channel command [147](#)
- interface range command [149](#)
- interface-range macros [77](#)
- interfaces
 - assigning Ethernet interface to channel group [49](#)
 - configuring [122](#)
 - configuring multiple [149](#)
 - creating port-channel logical [147](#)
 - debug messages, display [12](#)
 - disabling [595](#)
 - displaying the MAC address table [513](#)
 - restarting [595](#)
- interface speed, configuring [653](#)
- interface vlan command [151](#)
- internal registers, displaying [398, 405](#)
- Internet Group Management Protocol
 - See IGMP
- invalid GBIC
 - error detection for [134](#)
 - error recovery timer [139](#)
- ip access-group command [153](#)
- ip address command [156](#)
- IP addresses, setting [156](#)
- IP address matching [268](#)
- ip admission command [158](#)
- ip admission name proxy http command [159](#)
- IP DHCP snooping
 - See DHCP snooping
- ip dhcp snooping binding command [162](#)
- ip dhcp snooping command [161](#)
- ip dhcp snooping database command [164](#)
- ip dhcp snooping information option allow-untrusted command [168](#)
- ip dhcp snooping information option command [166](#)
- ip dhcp snooping information option format remote-id command [170](#)
- ip dhcp snooping limit rate command [171](#)
- ip dhcp snooping trust command [172](#)
- ip dhcp snooping verify command [173](#)
- ip dhcp snooping vlan command [174](#)
- ip dhcp snooping vlan information option format-type circuit-id string command [175](#)
- ip igmp filter command [177](#)
- ip igmp max-groups command [179, 204, 206](#)
- ip igmp profile command [181](#)
- ip igmp snooping command [183](#)
- ip igmp snooping last-member-query-interval command [185](#)
- ip igmp snooping querier command [187](#)
- ip igmp snooping report-suppression command [189](#)
- ip igmp snooping tcn command [191](#)
- ip igmp snooping tcn flood command [193](#)
- ip igmp snooping vlan immediate-leave command [194](#)
- ip igmp snooping vlan mrouter command [195](#)
- ip igmp snooping vlan static command [197](#)
- IP multicast addresses [316](#)
- IP phones
 - auto-QoS configuration [38](#)
 - trusting packets sent from [308](#)
- IP-precedence-to-DSCP map [282](#)
- ip snap forwarding command [199](#)
- ip source binding command [200](#)
- IP source guard
 - disabling [208](#)
 - displaying
 - binding entries [469](#)
 - configuration [471](#)
 - dynamic binding entries only [452](#)
 - enabling [208](#)
 - static IP source bindings [200](#)
- ip ssh command [202](#)

IPv6 access list

- deny conditions [80](#)

- ipv6 access-list command [209](#)

- ipv6 mld snooping command [211](#)

- ipv6 mld snooping last-listener-query count command [213](#)

- ipv6 mld snooping last-listener-query-interval command [215](#)

- ipv6 mld snooping listener-message-suppression command [217](#)

- ipv6 mld snooping robustness-variable command [219](#)

- ipv6 mld snooping tcn command [221](#)

- ipv6 mld snooping vlan command [223](#)

- IPv6 SDM template [370](#)

- ipv6 traffic-filter command [225](#)

- ip verify source command [208](#)

J

jumbo frames

- See MTU

L

- l2protocol-tunnel command [227](#)

- l2protocol-tunnel cos command [230](#)

LACP

- See EtherChannel

- lacp port-priority command [231](#)

- lacp system-priority command [233](#)

- Layer 2 mode, enabling [664](#)

- Layer 2 protocol ports, displaying [487](#)

Layer 2 protocol-tunnel

- error detection for [134](#)

- error recovery timer [139](#)

- Layer 2 protocol tunnel counters [63](#)

- Layer 2 protocol tunneling error recovery [228](#)

Layer 2 traceroute

- IP addresses [706](#)

- MAC addresses [703](#)

- Layer 3 mode, enabling [664](#)

- line configuration mode [2, 5](#)

Link Aggregation Control Protocol

- See EtherChannel

link flap

- error detection for [134](#)

- error recovery timer [139](#)

- link state group command [239](#)

- link state track command [241](#)

- load-distribution methods for EtherChannel [350](#)

- location (global configuration) command [235](#)

- location (interface configuration) command [237](#)

- logging event command [242](#)

- logging file command [243](#)

- logical interface [147](#)

loopback error

- detection for [134](#)

- recovery timer [139](#)

- loop guard, for spanning tree [619, 623](#)

M

- mac access-group command [245](#)

- MAC access-groups, displaying [501](#)

- MAC access list configuration mode [247](#)

- mac access-list extended command [247](#)

- MAC access lists [85](#)

MAC addresses

- disabling MAC address learning per VLAN [250](#)

MAC addresses (continued)

- displaying
 - aging time [507](#)
 - all [505](#)
 - dynamic [511](#)
 - MAC address-table move updates [516](#)
 - notification settings [515, 518](#)
 - number of addresses in a VLAN [509](#)
 - per interface [513](#)
 - per VLAN [522](#)
 - static [520](#)
 - static and dynamic entries [503](#)
- dynamic
 - aging time [249](#)
 - deleting [67](#)
 - displaying [511](#)
- enabling MAC address notification [254](#)
- enabling MAC address-table move update [252](#)
- matching [268](#)
- static
 - adding and removing [256](#)
 - displaying [520](#)
 - dropping on an interface [257](#)
- tables [505](#)
- mac address notification, debugging [18](#)
- mac address-table aging-time [245, 268](#)
- mac address-table aging-time command [249](#)
- mac address-table learning command [250](#)
- mac address-table move update command [252](#)
- mac address-table notification command [254](#)
- mac address-table static command [256](#)
- mac address-table static drop command [257](#)
- macro apply command [259](#)
- macro description command [262](#)
- macro global command [263](#)
- macro global description command [265](#)
- macro name command [266](#)

macros

- adding a description [262](#)
- adding a global description [265](#)
- applying [263](#)
- creating [266](#)
- displaying [554](#)
- interface range [77, 149](#)
- specifying parameter values [263](#)
- tracing [263](#)

maps

QoS

- defining [282](#)
- displaying [532](#)

VLAN

- creating [727](#)
- defining [268](#)
- displaying [585](#)

match (access-map configuration) command [268](#)

match (class-map configuration) command [270](#)

maximum transmission unit

See MTU

mdix auto command [272](#)

MDL snooping

- displaying [481](#)

memory (boot loader) command [13](#)

mkdir (boot loader) command [15](#)

MLD snooping

- configuring [217, 219](#)
- configuring queries [213, 215](#)
- configuring topology change notification [221](#)
- displaying [479, 483, 485](#)
- enabling [211](#)

MLD snooping on a VLAN

- enabling [223](#)

mls qos aggregate-policer command [276](#)

mls qos command [274](#)

mls qos cos command [278](#)

mls qos dscp-mutation command [280](#)

mls qos map command [282](#)

mls qos queue-set output buffers command [286](#)
 mls qos queue-set output threshold command [288](#)
 mls qos rewrite ip dscp command [290](#)
 mls qos srr-queue input bandwidth command [292](#)
 mls qos srr-queue input buffers command [294](#)
 mls qos srr-queue input cos-map command [296](#)
 mls qos srr-queue input dscp-map command [298](#)
 mls qos srr-queue input priority-queue command [300](#)
 mls qos srr-queue input threshold command [302](#)
 mls qos srr-queue output cos-map command [304](#)
 mls qos srr-queue output dscp-map command [306](#)
 mls qos trust command [308](#)
 mls qos vlan-based command [310](#)
 mode, MVR [316](#)
 Mode button, and password recovery [373](#)
 modes, commands [1](#)
 monitor session command [311](#)
 more (boot loader) command [16](#)
 MSTP
 displaying [566](#)
 interoperability [74](#)
 link type [621](#)
 MST region
 aborting changes [627](#)
 applying changes [627](#)
 configuration name [627](#)
 configuration revision number [627](#)
 current or pending display [627](#)
 displaying [566](#)
 MST configuration mode [627](#)
 VLANs-to-instance mapping [627](#)
 path cost [629](#)
 protocol mode [625](#)
 restart protocol migration process [74](#)
 root port
 loop guard [619](#)
 preventing from becoming designated [619](#)
 restricting which can be root [619](#)
 root guard [619](#)

MSTP (continued)

root switch
 affects of extended system ID [618](#)
 hello-time [632, 639](#)
 interval between BPDU messages [633](#)
 interval between hello BPDU messages [632, 639](#)
 max-age [633](#)
 maximum hop count before discarding BPDU [634](#)
 port priority for selection of [635](#)
 primary or secondary [639](#)
 switch priority [638](#)
 state changes
 blocking to forwarding state [645](#)
 enabling BPDU filtering [610, 643](#)
 enabling BPDU guard [612, 643](#)
 enabling Port Fast [643, 645](#)
 forward-delay time [631](#)
 length of listening and learning states [631](#)
 rapid transition to forwarding [621](#)
 shutting down Port Fast-enabled ports [643](#)
 state information display [565](#)

MTU

 configuring size [701](#)
 displaying global setting [573](#)
 multicast group address, MVR [319](#)
 multicast groups, MVR [317](#)
 Multicast Listener Discovery
 See MLD
 multicast router learning method [195](#)
 multicast router ports
 IPv6 [223](#)
 multicast router ports, configuring [195](#)
 multicast storm control [661](#)
 multicast VLAN, MVR [316](#)
 multicast VLAN registration
 See MVR
 multiple hosts on authorized port [105](#)

Multiple Spanning Tree Protocol

See MSTP

MVR

- and address aliasing [317](#)
- configuring [316](#)
- configuring interfaces [319](#)
- debug messages, display [22](#)
- displaying [541](#)
- displaying interface information [543](#)
- members, displaying [545](#)

mvr (global configuration) command [316](#)

mvr (interface configuration) command [319](#)

mvr vlan group command [320](#)

N

native VLANs [696](#)

native VLAN tagging [732](#)

network-policy (global configuration) command [323](#)

network-policy command [322](#)

network-policy profile (network-policy configuration) command [325](#)

nmsp attachment suppress command [329](#)

nmsp command [327](#)

nonegotiate

DTP messaging [681](#)

nonegotiate, speed [653](#)

non-IP protocols

denying [85](#)

forwarding [340](#)

non-IP traffic access lists [247](#)

non-IP traffic forwarding

denying [85](#)

permitting [340](#)

normal-range VLANs [715, 721](#)

no vlan command [715, 725](#)

O

online diagnostics

displaying

configured boot-up coverage level [409](#)

current scheduled tasks [409](#)

event logs [409](#)

supported test suites [409](#)

test ID [409](#)

test results [409](#)

test statistics [409](#)

P

PAgP

See EtherChannel

pagp learn-method command [330](#)

pagp port-priority command [332](#)

password, VTP [740, 744](#)

password-recovery mechanism, enabling and disabling [373](#)

permit (IPv6) command [334](#)

permit (MAC access-list configuration) command [340](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [330](#)

PID, displaying [450](#)

PIM-DVMRP, as multicast router learning method [195](#)

police aggregate command [345](#)

police command [343](#)

policed-DSCP map [282](#)

policy-map command [347](#)

policy maps

applying to an interface [375, 380](#)

creating [347](#)

displaying [557](#)

hierarchical [348](#)

- policy maps (continued)
 - policers
 - displaying [525](#)
 - for a single class [343](#)
 - for multiple classes [276, 345](#)
 - policed-DSCP map [282](#)
 - traffic classification
 - defining the class [54](#)
 - defining trust states [708](#)
 - setting DSCP or IP precedence values [378](#)
- Port Aggregation Protocol
 - See EtherChannel
- port-based authentication
 - AAA method list [3](#)
 - configuring violation modes [121](#)
 - debug messages, display [6](#)
 - enabling IEEE 802.1x
 - globally [88](#)
 - per interface [112](#)
 - guest VLAN [103](#)
 - host modes [105](#)
 - IEEE 802.1x AAA accounting methods [1](#)
 - initialize an interface [106, 117](#)
 - MAC authentication bypass [107](#)
 - manual control of authorization state [112](#)
 - multiple hosts on authorized port [105](#)
 - PAE as authenticator [111](#)
 - periodic re-authentication
 - enabling [115](#)
 - time between attempts [118](#)
 - quiet period between failed authentication exchanges [118](#)
 - re-authenticating IEEE 802.1x-enabled ports [114](#)
 - resetting configurable IEEE 802.1x parameters [101](#)
 - switch-to-authentication server retransmission time [118](#)
 - switch-to-client frame-retransmission number [109 to 110](#)
 - switch-to-client retransmission time [118](#)
 - test for IEEE 802.1x readiness [116](#)
- port-channel load-balance command [350](#)
- Port Fast, for spanning tree [645](#)
- port ranges, defining [77](#)
- ports, debugging [66](#)
- ports, protected [694](#)
- port security
 - aging [688](#)
 - debug messages, display [68](#)
 - enabling [683](#)
 - violation error recovery [139](#)
- port trust states for QoS [308](#)
- port types, MVR [319](#)
- priority-queue command [352](#)
- private-vlan command [354](#)
- private-vlan mapping command [357](#)
- private VLANs
 - association [692](#)
 - configuring [354](#)
 - configuring ports [679](#)
 - displaying [579](#)
 - host ports [679](#)
 - mapping
 - configuring [692](#)
 - displaying [439](#)
 - promiscuous ports [679](#)
- privileged EXEC mode [2, 3](#)
- product identification information, displaying [450](#)
- promiscuous ports, private VLANs [679](#)
- protected ports, displaying [445](#)
- pruning
 - VLANs [696](#)
 - VTP
 - displaying interface information [439](#)
 - enabling [740, 744](#)
- pruning-eligible VLAN list [698](#)
- PVST+
 - See STP

Q

QoS

auto-QoS

- configuring [38](#)
- debug messages, display [2](#)
- displaying [388](#)

class maps

- creating [56](#)
- defining the match criteria [270](#)
- displaying [395](#)

defining the CoS value for an incoming packet [278](#)

displaying configuration information [388](#), [524](#)

DSCP transparency [290](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [280](#)
- defining DSCP-to-DSCP-mutation map [282](#)

egress queues

- allocating buffers [286](#)
- defining the CoS output queue threshold map [304](#)
- defining the DSCP output queue threshold map [306](#)
- displaying buffer allocations [528](#)
- displaying CoS output queue threshold map [532](#)
- displaying DSCP output queue threshold map [532](#)
- displaying queueing strategy [528](#)
- displaying queue-set settings [535](#)
- enabling bandwidth shaping and scheduling [657](#)
- enabling bandwidth sharing and scheduling [659](#)
- limiting the maximum output on a port [655](#)
- mapping a port to a queue-set [359](#)
- mapping CoS values to a queue and threshold [304](#)
- mapping DSCP values to a queue and threshold [306](#)
- setting maximum and reserved memory allocations [288](#)
- setting WTD thresholds [288](#)

enabling [274](#)

QoS (continued)

ingress queues

- allocating buffers [294](#)
- assigning SRR scheduling weights [292](#)
- defining the CoS input queue threshold map [296](#)
- defining the DSCP input queue threshold map [298](#)
- displaying buffer allocations [528](#)
- displaying CoS input queue threshold map [532](#)
- displaying DSCP input queue threshold map [532](#)
- displaying queueing strategy [528](#)
- displaying settings for [526](#)
- enabling the priority queue [300](#)
- mapping CoS values to a queue and threshold [296](#)
- mapping DSCP values to a queue and threshold [298](#)
- setting WTD thresholds [302](#)

maps

- defining [282](#), [296](#), [298](#), [304](#), [306](#)
- displaying [532](#)

policy maps

- applying an aggregate policer [345](#)
- applying to an interface [375](#), [380](#)
- creating [347](#)
- defining policers [276](#), [343](#)
- displaying policers [525](#)
- displaying policy maps [557](#)
- hierarchical [348](#)
- policed-DSCP map [282](#)
- setting DSCP or IP precedence values [378](#)
- traffic classifications [54](#)
- trust states [708](#)

port trust states [308](#)

queues, enabling the expedite [352](#)

statistics

- in-profile and out-of-profile packets [528](#)
- packets enqueued or dropped [528](#)
- sent and received CoS values [528](#)
- sent and received DSCP values [528](#)

QoS (continued)

trusted boundary for IP phones [308](#)

VLAN-based [310](#)

quality of service

See QoS

querytime, MVR [316](#)

queue-set command [359](#)

R

radius-server dead-criteria command [360](#)

radius-server host command [362](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

re-authenticating IEEE 802.1x-enabled ports [114](#)

re-authentication

periodic [115](#)

time between attempts [118](#)

receiver ports, MVR [319](#)

receiving flow-control packets [145](#)

recovery mechanism

causes [139](#)

display [61](#), [424](#), [428](#)

timer interval [140](#)

remote-span command [364](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [17](#)

renew ip dhcp snooping database command [366](#)

reset (boot loader) command [18](#)

reset command [730](#)

resource templates, displaying [562](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [19](#)

rmon collection stats command [369](#)

root guard, for spanning tree [619](#)

routed ports

IP addresses on [157](#)

number supported [157](#)

RSPAN

configuring [311](#)

displaying [538](#)

filter RSPAN traffic [311](#)

remote-span command [364](#)

sessions

add interfaces to [311](#)

displaying [538](#)

start new [311](#)

S

sdm prefer command [370](#)

SDM templates

allowed resources [371](#)

displaying [562](#)

dual IPv4 and IPv6 [370](#)

secure ports, limitations [685](#)

sending flow-control packets [145](#)

service password-recovery command [373](#)

service-policy command [375](#)

set (boot loader) command [20](#)

set command [378](#)

setup command [380](#)

show access-lists command [383](#)

show archive status command [386](#)

show authentication command [387](#)

show auto qos command [388](#)

show boot command [392](#)

show changes command [730](#)

show cisp command [394](#)

show class-map command [395](#)

show controllers cpu-interface command [396](#)

show controllers ethernet-controller command [398](#)

show controllers team command [405](#)

show controller utilization command [407](#)

- show current command 730
- show dot1q-tunnel command 409
- show dot1x command 410
- show dtp 414
- show eap command 416
- show energywise command 419
- show env command 423
- show errdisable detect command 424
- show errdisable flap-values command 426
- show errdisable recovery command 428
- show etherchannel command 430
- show fallback profile command 433
- show flowcontrol command 435
- show idprom command 437
- show interfaces command 439
- show interfaces counters command 447
- show inventory command 450
- show ipc command 473
- show ip dhcp snooping binding command 452
- show ip dhcp snooping command 451
- show ip dhcp snooping database command 454, 456
- show ip igmp profile command 459
- show ip igmp snooping address command 481
- show ip igmp snooping command 460, 479
- show ip igmp snooping groups command 463
- show ip igmp snooping mrouter command 465, 483
- show ip igmp snooping querier command 467, 485
- show ip source binding command 469
- show ipv6 access-list command 477
- show ip verify source command 471
- show l2protocol-tunnel command 487
- show lacp command 490
- show link state group command 497, 499
- show location 494
- show mac access-group command 501
- show mac address-table address command 505
- show mac address-table aging time command 507
- show mac address-table command 503
- show mac address-table count command 509
- show mac address-table dynamic command 511
- show mac address-table interface command 513
- show mac address-table learning command 515
- show mac address-table move update command 516
- show mac address-table notification command 68, 518, 20
- show mac address-table static command 520
- show mac address-table vlan command 522
- show mls qos aggregate-policer command 525
- show mls qos command 524
- show mls qos input-queue command 526
- show mls qos interface command 528
- show mls qos maps command 532
- show mls qos queue-set command 535
- show mls qos vlan command 537
- show monitor command 538
- show mvr command 541
- show mvr interface command 543
- show mvr members command 545
- show network-policy profile command 547
- show nmsp command 549
- show pagp command 552
- show parser macro command 554
- show platform acl command 2
- show platform backup interface command 3
- show platform configuration command 4
- show platform etherchannel command 5
- show platform forward command 6
- show platform igmp snooping command 8
- show platform ipc trace command 15
- show platform ip multicast command 10
- show platform ip unicast command 11
- show platform ipv6 unicast command 16
- show platform layer4op command 18
- show platform mac-address-table command 19
- show platform messaging command 20
- show platform monitor command 21
- show platform mvr table command 22
- show platform pm command 23
- show platform port-asic command 24

show platform port-security command [29](#)
 show platform qos command [30](#)
 show platform resource-manager command [31](#)
 show platform snmp counters command [33](#)
 show platform spanning-tree command [34](#)
 show platform stp-instance command [35](#)
 show platform team command [36](#)
 show platform vlan command [39](#)
 show policy-map command [557](#)
 show port security command [559](#)
 show proposed command [730](#)
 show sdm prefer command [562](#)
 show spanning-tree command [565](#)
 show storm-control command [571](#)
 show system mtu command [573](#)
 show trust command [708](#)
 show udd command [574](#)
 show version command [577](#)
 show vlan access-map command [585](#)
 show vlan command [579](#)
 show vlan command, fields [581](#)
 show vlan filter command [586](#)
 show vmps command [587](#)
 show vtp command [590](#)
 shutdown command [595](#)
 shutdown threshold, Layer 2 protocol tunneling [227](#)
 shutdown vlan command [596](#)
 small violation-rate command [597](#)
 Smartports macros
 See macros
 SNMP host, specifying [603](#)
 SNMP informs, enabling the sending of [599](#)
 snmp-server enable traps command [599](#)
 snmp-server host command [603](#)
 snmp trap mac-notification command [607](#)
 SNMP traps
 enabling MAC address notification trap [607](#)
 enabling the MAC address notification feature [254](#)
 enabling the sending of [599](#)

SoftPhone

See Cisco SoftPhone

software images

deleting [79](#)
 downloading [8](#)
 upgrading [8](#)
 uploading [14](#)

software version, displaying [577](#)

source ports, MVR [319](#)

SPAN

configuring [311](#)
 debug messages, display [21](#)
 displaying [538](#)
 filter SPAN traffic [311](#)
 sessions
 add interfaces to [311](#)
 displaying [538](#)
 start new [311](#)

spanning [647](#)

spanning-tree backbonefast command [609](#)

spanning-tree bpdupfilter command [610](#)

spanning-tree bpduguard command [612](#)

spanning-tree cost command [614](#)

spanning-tree etherchannel command [616](#)

spanning-tree extend system-id command [618](#)

spanning-tree guard command [619](#)

spanning-tree link-type command [621](#)

spanning-tree loopguard default command [623](#)

spanning-tree mode command [625](#)

spanning-tree mst configuration command [627](#)

spanning-tree mst cost command [629](#)

spanning-tree mst forward-time command [631](#)

spanning-tree mst hello-time command [632](#)

spanning-tree mst max-age command [633](#)

spanning-tree mst max-hops command [634](#)

spanning-tree mst port-priority command [635](#)

spanning-tree mst pre-standard command [637](#)

spanning-tree mst priority command [638](#)

spanning-tree mst root command [639](#)

- spanning-tree portfast (global configuration)
 - command [643](#)
- spanning-tree portfast (interface configuration)
 - command [645](#)
- spanning-tree port-priority command [641](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [647](#)
- spanning-tree uplinkfast command [648](#)
- spanning-tree vlan command [650](#)
- speed command [653](#)
- srr-queue bandwidth limit command [655](#)
- srr-queue bandwidth shape command [657](#)
- srr-queue bandwidth share command [659](#)
- SSH, configuring version [202](#)
- static-access ports, configuring [666](#)
- statistics, Ethernet group [369](#)
- sticky learning, enabling [683](#)
- storm-control command [661](#)
- STP
 - BackboneFast [609](#)
 - counters, clearing [73](#)
 - debug messages, display
 - BackboneFast events [72](#)
 - MSTP [75](#)
 - optimized BPDUs handling [74](#)
 - spanning-tree activity [70](#)
 - switch shim [77](#)
 - transmitted and received BPDUs [73](#)
 - UplinkFast [79](#)
 - detection of indirect link failures [609](#)
 - enabling protocol tunneling for [227](#)
 - EtherChannel misconfiguration [616](#)
 - extended system ID [618](#)
 - path cost [614](#)
 - protocol modes [625](#)

STP (continued)

- root port
 - accelerating choice of new [648](#)
 - loop guard [619](#)
 - preventing from becoming designated [619](#)
 - restricting which can be root [619](#)
 - root guard [619](#)
 - UplinkFast [648](#)
- root switch
 - affects of extended system ID [618, 651](#)
 - hello-time [650](#)
 - interval between BPDU messages [650](#)
 - interval between hello BPDU messages [650](#)
 - max-age [650](#)
 - port priority for selection of [641](#)
 - primary or secondary [650](#)
 - switch priority [650](#)
- state changes
 - blocking to forwarding state [645](#)
 - enabling BPDU filtering [610, 643](#)
 - enabling BPDU guard [612, 643](#)
 - enabling Port Fast [643, 645](#)
 - enabling timer to recover from error state [139](#)
 - forward-delay time [650](#)
 - length of listening and learning states [650](#)
 - shutting down Port Fast-enabled ports [643](#)
- state information display [565](#)
- VLAN options [638, 650](#)
- SVIs, creating [151](#)
- SVI status calculation [668](#)
- Switched Port Analyzer
 - See SPAN
- switching characteristics
 - modifying [664](#)
 - returning to interfaces [664](#)
- switchport access command [666](#)
- switchport autostate exclude command [668](#)
- switchport backup interface command [670](#)
- switchport block command [674](#)

switchport command [664](#)
 switchport host command [675](#)
 switchport mode command [676](#)
 switchport mode private-vlan command [679](#)
 switchport nonegotiate command [681](#)
 switchport port-security aging command [688](#)
 switchport port-security command [683](#)
 switchport priority extend command [690](#)
 switchport private-vlan command [692](#)
 switchport protected command [694](#)
 switchports, displaying [439](#)
 switchport trunk command [696](#)
 switchport voice vlan command [699](#)
 system message logging, save message to flash [243](#)
 system mtu command [701](#)
 system resource templates [370](#)

T

tar files, creating, listing, and extracting [11](#)
 templates, system resources [370](#)
 traceroute mac command [703](#)
 traceroute mac ip command [706](#)
 trunking, VLAN mode [676](#)
 trunk mode [676](#)
 trunk ports [676](#)
 trunks, to non-DTP device [677](#)
 trusted boundary for QoS [308](#)
 trusted port states for QoS [308](#)
 tunnel ports, Layer 2 protocol, displaying [487](#)
 type (boot loader) command [23](#)

U

UDLD

aggressive mode [710, 712](#)
 debug messages, display [86](#)
 enable globally [710](#)

UDLD (continued)

enable per interface [712](#)
 error recovery timer [139](#)
 message timer [710](#)
 normal mode [710, 712](#)
 reset a shutdown interface [714](#)
 status [574](#)

udld command [710](#)

udld port command [712](#)

udld reset command [714](#)

unicast storm control [661](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [674](#)

unknown unicast traffic, preventing [674](#)

unset (boot loader) command [24](#)

upgrading

software images [8](#)
 monitoring status of [386](#)

UplinkFast, for STP [648](#)

user EXEC mode [2, 3](#)

V

version (boot loader) command [26](#)

VLAN

enabling guest VLAN supplicant [91, 102](#)

vlan (global configuration) command [715](#)

vlan (VLAN configuration) command [721](#)

vlan access-map command [727](#)

VLAN access map configuration mode [727](#)

VLAN access maps

actions [6](#)
 displaying [585](#)

VLAN-based QoS [310](#)

VLAN configuration

rules [718, 723](#)
 saving [715, 725](#)

VLAN configuration mode

commands

VLAN [721](#)VTP [744](#)description [5](#)entering [729](#)summary [2](#)vlan database command [729](#)vlan dot1q tag native command [732](#)vlan filter command [733](#)VLAN filters, displaying [586](#)VLAN ID range [715, 721](#)

VLAN maps

applying [733](#)creating [727](#)defining [268](#)displaying [585](#)

VLAN Query Protocol

See VQP

VLANs

adding [715](#)configuring [715, 721](#)

debug messages, display

ISL [83](#)VLAN IOS file system error tests [82](#)VLAN manager activity [80](#)VTP [84](#)displaying configurations [579](#)enabling guest VLAN supplicant [144](#)extended-range [715](#)

MAC addresses

displaying [522](#)number of [509](#)media types [718, 723](#)normal-range [715, 721](#)private [679](#)configuring [354](#)displaying [579](#)

See also private VLANs

VLANs (continued)

restarting [596](#)saving the configuration [715](#)shutting down [596](#)SNMP traps for VTP [601, 604](#)suspending [596](#)variables [721](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [738](#)displaying [587](#)error recovery timer [140](#)reconfirming dynamic VLAN assignments [735](#)vmmps reconfirm (global configuration) command [736](#)vmmps reconfirm (privileged EXEC) command [735](#)vmmps retry command [737](#)vmmps server command [738](#)

voice VLAN

configuring [699](#)setting port priority [690](#)

VQP

and dynamic-access ports [666](#)clearing client statistics [75](#)displaying information [587](#)per-server retry count [737](#)reconfirmation interval [736](#)reconfirming dynamic VLAN assignments [735](#)

VTP

changing characteristics [740](#)clearing pruning counters [76](#)

configuring

domain name [740, 744](#)file name [740](#)mode [740, 744](#)password [740, 744](#)counters display fields [591](#)displaying information [590](#)

VTP (continued)

enabling

pruning [740, 744](#)tunneling for [227](#)Version 2 [740, 744](#)mode [740, 744](#)pruning [740, 744](#)saving the configuration [715, 725](#)statistics [590](#)status [590](#)status display fields [592](#)vtp (global configuration) command [740](#)vtp (VLAN configuration) command [744](#)

XXENPAK module serial EEPROM information [437](#)