



---

## A

aaa accounting dot1x command [2-1](#)  
aaa authentication dot1x command [2-3](#)  
aaa authorization network command [2-5](#)  
AAA methods [2-3](#)  
abort command [2-533](#)  
access control entries  
    See ACEs  
access control lists  
    See ACLs  
access groups  
    IP [2-97](#)  
    MAC, displaying [2-332](#)  
access map configuration mode [2-169](#)  
access mode [2-486](#)  
access ports [2-486](#)  
ACEs [2-53](#), [2-228](#)  
ACLs  
    deny [2-51](#)  
    displaying [2-258](#)  
    for non-IP protocols [2-149](#)  
    IP [2-97](#)  
    matching [2-169](#)  
    on Layer 2 interfaces [2-97](#)  
    permit [2-226](#)  
action command [2-6](#)  
address aliasing [2-217](#)  
aggregate-port learner [2-222](#)  
allowed VLANs [2-500](#)  
apply command [2-533](#)  
archive download-sw command [2-8](#)  
archive tar command [2-11](#)

archive upload-sw command [2-14](#)  
audience [xv](#)  
authentication failed VLAN  
    See dot1x auth-fail vlan  
auth-fail max-attempts  
    See dot1x auth-fail max-attempts  
auth-fail vlan  
    See dot1x auth-fail vlan  
authorization state of controlled port [2-76](#)  
autonegotiation of duplex mode [2-83](#)  
auto qos voip command [2-16](#)

---

## B

BackboneFast, for STP [2-424](#)  
backup interfaces  
    configuring [2-481](#)  
    displaying [2-303](#)  
boot (boot loader) command [A-2](#)  
boot bootlpr command [2-20](#)  
boot config-file command [2-21](#)  
boot enable-break command [2-22](#)  
boot helper command [2-23](#)  
boot helper-config file command [2-24](#)  
booting  
    Cisco IOS image [2-27](#)  
    displaying environment variables [2-266](#)  
    interrupting [2-22](#)  
    manually [2-25](#)  
boot loader  
    accessing [A-1](#)

## boot loader (continued)

## booting

Cisco IOS image [A-2](#)helper image [2-23](#)

## directories

creating [A-15](#)displaying a list of [A-7](#)removing [A-19](#)

## displaying

available commands [A-12](#)memory heap utilization [A-14](#)version [A-26](#)

## environment variables

described [A-20](#)displaying settings [A-20](#)location of [A-21](#)setting [A-20](#)unsetting [A-24](#)

## files

copying [A-5](#)deleting [A-6](#)displaying a list of [A-7](#)displaying the contents of [A-4, A-16, A-23](#)renaming [A-17](#)

## file system

formatting [A-10](#)initializing flash [A-9](#)running a consistency check [A-11](#)loading helper images [A-13](#)resetting the system [A-18](#)boot manual command [2-25](#)boot private-config-file command [2-26](#)boot system command [2-27](#)BPDU filtering, for spanning tree [2-425, 2-458](#)BPDU guard, for spanning tree [2-427, 2-458](#)break key detection [2-248, A-1](#)broadcast storm control [2-476](#)

## C

cat (boot loader) command [A-4](#)caution, description [xvi](#)channel-group command [2-28](#)channel-protocol command [2-31](#)

## Cisco SoftPhone

auto-QoS configuration [2-16](#)trusting packets sent from [2-209](#)class command [2-32](#)class-map command [2-34](#)

## class maps

creating [2-34](#)defining the match criteria [2-171](#)displaying [2-268](#)

## class of service

See CoS

clear dot1x command [2-36](#)clear eap sessions command [2-37](#)clear lacp command [2-38](#)clear mac address-table command [2-39, 2-40](#)clear pagp command [2-41](#)clear port-security command [2-42](#)clear spanning-tree counters command [2-44](#)clear spanning-tree detected-protocols command [2-45](#)clear vmps statistics command [2-46](#)clear vtp counters command [2-47](#)

## clusters

SNMP trap [2-415](#)command modes defined [1-1](#)

## configuration, initial

See getting started guide and hardware installation guide

## configuration files

password recovery disable considerations [A-1](#)specifying the name [2-21, 2-26](#)configuring multiple interfaces [2-94](#)

## config-vlan mode

commands [2-520](#)description [1-4](#)

## config-vlan mode (continued)

entering [2-519](#)

summary [1-2](#)

## conventions

command [xv](#)

for examples [xvi](#)

publication [xv](#)

text [xv](#)

copy (boot loader) command [A-5](#)

## CoS

assigning default value to incoming packets [2-179](#)

overriding the incoming value [2-179](#)

CoS-to-DSCP map [2-183](#)

CPU ASIC statistics, displaying [2-269](#)

crashinfo files [2-89](#)

## D

debug auto qos command [B-2](#)

debug backup command [B-4](#)

debug dot1x command [B-5](#)

debug dtp command [B-6](#)

debug eap command [B-7](#)

debug etherchannel command [B-8](#)

debug interface command [B-9](#)

debug ip igmp filter command [B-10](#)

debug ip igmp max-groups command [B-11](#)

debug ip igmp snooping command [B-12](#)

debug lacp command [B-13](#)

debug mac-notification command [B-14](#)

debug matm command [B-15](#)

debug matm move update command [B-16](#)

debug monitor command [B-17](#)

debug mvrdbg command [B-18](#)

debug nvram command [B-19](#)

debug pagp command [B-20](#)

debug platform acl command [B-21](#)

debug platform backup interface command [B-22](#)

debug platform cpu-queues command [B-23](#)

debug platform dot1x command [B-25](#)

debug platform etherchannel command [B-26](#)

debug platform forw-tcam command [B-27](#)

debug platform ip dhcp command [B-28](#)

debug platform ip igmp snooping command [B-29](#)

debug platform led command [B-31](#)

debug platform matm command [B-32](#)

debug platform messaging application command [B-33](#)

debug platform phy command [B-34](#)

debug platform pm command [B-36](#)

debug platform port-asic command [B-38](#)

debug platform port-security command [B-39](#)

debug platform qos-acl-tcam command [B-40](#)

debug platform remote-commands command [B-41](#)

debug platform resource-manager command [B-42](#)

debug platform snmp command [B-43](#)

debug platform span command [B-44](#)

debug platform supervisor-asic command [B-45](#)

debug platform sw-bridge command [B-46](#)

debug platform tcam command [B-47](#)

debug platform udd command [B-49](#)

debug platform vlan command [B-50](#)

debug pm command [B-51](#)

debug port-security command [B-53](#)

debug qos-manager command [B-54](#)

debug spanning-tree backbonefast command [B-57](#)

debug spanning-tree bpdu command [B-58](#)

debug spanning-tree bpdu-opt command [B-59](#)

debug spanning-tree command [B-55](#)

debug spanning-tree mstp command [B-60](#)

debug spanning-tree switch command [B-62](#)

debug spanning-tree uplinkfast command [B-64](#)

debug sw-vlan command [B-65](#)

debug sw-vlan ifs command [B-67](#)

debug sw-vlan notification command [B-68](#)

debug sw-vlan vtp command [B-70](#)

debug udd command [B-72](#)

debug vqpc command [B-74](#)

define interface-range command [2-48](#)

- delete (boot loader) command [A-6](#)
  - delete command [2-50](#)
  - deny command [2-51](#)
  - detect mechanism, causes [2-85](#)
  - device manager requirements [xvi](#)
  - DHCP snooping
    - accepting untrusted packets from edge switch [2-104](#)
    - enabling
      - on a VLAN [2-111](#)
      - option 82 [2-102, 2-104](#)
      - trust on an interface [2-109](#)
    - error recovery timer [2-87](#)
    - rate limiting [2-108](#)
  - DHCP snooping binding database
    - bindings
      - displaying [2-314](#)
    - displaying
      - binding entries [2-314](#)
  - dir (boot loader) command [A-7](#)
  - directories, deleting [2-50](#)
  - documentation, related [xvi](#)
  - document conventions [xv](#)
  - domain name, VTP [2-542, 2-546](#)
  - dot1x auth-fail max-attempts [2-56](#)
  - dot1x auth-fail vlan [2-58](#)
  - dot1x command [2-54](#)
  - dot1x control-direction command [2-60](#)
  - dot1x critical global configuration command [2-62](#)
  - dot1x critical interface configuration command [2-64](#)
  - dot1x default command [2-66](#)
  - dot1x guest-vlan command [2-67](#)
  - dot1x host-mode command [2-69](#)
  - dot1x initialize command [2-70](#)
  - dot1x mac-auth-bypass command [2-71](#)
  - dot1x max-reauth-req command [2-73](#)
  - dot1x max-req command [2-74](#)
  - dot1x pae command [2-75](#)
  - dot1x port-control command [2-76](#)
  - dot1x re-authenticate command [2-78](#)
  - dot1x reauthentication command [2-79](#)
  - dot1x timeout command [2-80](#)
  - dropping packets, with ACL matches [2-6](#)
  - DSCP-to-CoS map [2-183](#)
  - DSCP-to-DSCP-mutation map [2-183](#)
  - DTP [2-487](#)
  - DTP flap
    - error detection for [2-85](#)
    - error recovery timer [2-87](#)
  - DTP negotiation [2-488](#)
  - duplex command [2-83](#)
  - dynamic-access ports
    - configuring [2-479](#)
    - restrictions [2-479](#)
  - dynamic auto VLAN membership mode [2-486](#)
  - dynamic desirable VLAN membership mode [2-486](#)
  - Dynamic Host Configuration Protocol (DHCP)
    - See DHCP snooping
  - Dynamic Trunking Protocol
    - See DTP
- 
- ## E
- EAP-request/identity frame
    - maximum number to send [2-74](#)
    - response time before retransmitting [2-80](#)
  - encapsulation methods [2-500](#)
  - environment variables, displaying [2-266](#)
  - errdisable detect cause command [2-85](#)
  - errdisable recovery command [2-87](#)
  - error conditions, displaying [2-294](#)
  - error disable detection [2-85](#)
  - error-disabled interfaces, displaying [2-303](#)
  - EtherChannel
    - assigning Ethernet interface to channel group [2-28](#)
    - creating port-channel logical interface [2-92](#)
    - debug EtherChannel/PAGP, display [B-8](#)
    - debug platform-specific events, display [B-26](#)
    - displaying [2-298](#)

## EtherChannel (continued)

interface information, displaying [2-303](#)

### LACP

clearing channel-group information [2-38](#)

debug messages, display [B-13](#)

displaying [2-326](#)

modes [2-28](#)

port priority for hot-standby ports [2-137](#)

restricting a protocol [2-31](#)

system priority [2-139](#)

load-distribution methods [2-236](#)

### PAgP

aggregate-port learner [2-222](#)

clearing channel-group information [2-41](#)

debug messages, display [B-20](#)

displaying [2-376](#)

error detection for [2-85](#)

error recovery timer [2-87](#)

learn method [2-222](#)

modes [2-28](#)

physical-port learner [2-222](#)

priority of interface for transmitted traffic [2-224](#)

Ethernet controller, internal register display [2-271](#)

Ethernet statistics, collecting [2-247](#)

examples, conventions for [xvi](#)

exception crashinfo command [2-89](#)

exit command [2-533](#)

extended-range VLANs

and allowed VLAN list [2-500](#)

and pruning-eligible list [2-500](#)

configuring [2-519](#)

extended system ID for STP [2-433](#)

## F

file name, VTP [2-542](#)

files, deleting [2-50](#)

flash\_init (boot loader) command [A-9](#)

## Flex Links

configuring [2-481](#)

displaying [2-303](#)

flowcontrol command [2-90](#)

format (boot loader) command [A-10](#)

forwarding packets, with ACL matches [2-6](#)

forwarding results, display [C-6](#)

frame forwarding information, displaying [C-6](#)

fsck (boot loader) command [A-11](#)

## G

global configuration mode [1-2, 1-3](#)

## H

hardware ACL statistics [2-258](#)

help (boot loader) command [A-12](#)

hierarchical policy maps [2-234](#)

host connection, port configuration [2-485](#)

## I

### IEEE 802.1x

and switchport modes [2-487](#)

violation error recovery [2-87](#)

See also port-based authentication

### IEEE 802.1X Port Based Authentication

enabling guest VLAN supplicant [2-57](#)

### IGMP filters

applying [2-114](#)

debug messages, display [B-10](#)

IGMP groups, setting maximum [2-115](#)

IGMP maximum groups, debugging [B-11](#)

### IGMP profiles

creating [2-117](#)

displaying [2-316](#)

## IGMP snooping

- adding ports as a static member of a group [2-133](#)
- displaying [2-317, 2-322, 2-324](#)
- enabling [2-119](#)
- enabling the configurable-leave timer [2-121](#)
- enabling the Immediate-Leave feature [2-130](#)
- flooding query count [2-127](#)
- interface topology change notification behavior [2-129](#)
- multicast table [2-320](#)
- querier [2-123](#)
- query solicitation [2-127](#)
- report suppression [2-125](#)
- switch topology change notification behavior [2-127](#)

## images

See software images

Immediate-Leave feature, MVR [2-219](#)

immediate-leave processing [2-130](#)

## initial configuration

See getting started guide and hardware installation guide

interface configuration mode [1-2, 1-4](#)

interface port-channel command [2-92](#)

interface range command [2-94](#)

interface-range macros [2-48](#)

## interfaces

- assigning Ethernet interface to channel group [2-28](#)
- configuring [2-83](#)
- configuring multiple [2-94](#)
- creating port-channel logical [2-92](#)
- debug messages, display [B-9](#)
- disabling [2-413](#)
- displaying the MAC address table [2-344](#)
- restarting [2-413](#)

interface speed, configuring [2-468](#)

interface vlan command [2-96](#)

internal registers, displaying [2-271, 2-278](#)

## Internet Group Management Protocol

See IGMP

## invalid GBIC

- error detection for [2-85](#)
- error recovery timer [2-87](#)

ip access-group command [2-97](#)

ip address command [2-99](#)

IP addresses, setting [2-99](#)

IP address matching [2-169](#)

## IP DHCP snooping

See DHCP snooping

ip dhcp snooping command [2-101](#)

ip dhcp snooping information option allow-untrusted command [2-104](#)

ip dhcp snooping information option command [2-102](#)

ip dhcp snooping information option format remote-id command [2-106](#)

ip dhcp snooping limit rate command [2-108](#)

ip dhcp snooping trust command [2-109](#)

ip dhcp snooping verify command [2-110](#)

ip dhcp snooping vlan command [2-111](#)

ip dhcp snooping vlan information option format-type circuit-id string command [2-112](#)

ip igmp filter command [2-114](#)

ip igmp max-groups command [2-115](#)

ip igmp profile command [2-117](#)

ip igmp snooping command [2-119](#)

ip igmp snooping last-member-query-interval command [2-121](#)

ip igmp snooping querier command [2-123](#)

ip igmp snooping report-suppression command [2-125](#)

ip igmp snooping tcn command [2-127](#)

ip igmp snooping tcn flood command [2-129](#)

ip igmp snooping vlan immediate-leave command [2-130](#)

ip igmp snooping vlan mrouter command [2-131](#)

ip igmp snooping vlan static command [2-133](#)

IP multicast addresses [2-216](#)

## IP phones

auto-QoS configuration [2-16](#)

trusting packets sent from [2-209](#)

IP-precedence-to-DSCP map [2-183](#)

## IP source guard

### displaying

dynamic binding entries only [2-314](#)

ip ssh command [2-135](#)

## J

## jumbo frames

See MTU

## L

## LACP

See EtherChannel

lacp port-priority command [2-137](#)

lacp system-priority command [2-139](#)

## Layer 2 traceroute

IP addresses [2-510](#)

MAC addresses [2-507](#)

line configuration mode [1-2, 1-5](#)

## Link Aggregation Control Protocol

See EtherChannel

## link flap

error detection for [2-85](#)

error recovery timer [2-87](#)

link state group command [2-141](#)

link state track command [2-143](#)

load\_helper (boot loader) command [A-13](#)

load-distribution methods for EtherChannel [2-236](#)

logging event command [2-144](#)

logging file command [2-145](#)

logical interface [2-92](#)

## loopback error

detection for [2-85](#)

recovery timer [2-87](#)

loop guard, for spanning tree [2-434, 2-438](#)

## M

mac access-group command [2-147](#)

MAC access-groups, displaying [2-332](#)

MAC access list configuration mode [2-149](#)

mac access-list extended command [2-149](#)

MAC access lists [2-51](#)

## MAC addresses

### displaying

aging time [2-338](#)

all [2-336](#)

dynamic [2-342](#)

MAC address-table move updates [2-346](#)

notification settings [2-348](#)

number of addresses in a VLAN [2-340](#)

per interface [2-344](#)

per VLAN [2-352](#)

static [2-350](#)

static and dynamic entries [2-334](#)

### dynamic

aging time [2-151](#)

deleting [2-39](#)

displaying [2-342](#)

enabling MAC address notification [2-154](#)

enabling MAC address-table move update [2-152](#)

matching [2-169](#)

### static

adding and removing [2-156](#)

displaying [2-350](#)

dropping on an interface [2-157](#)

tables [2-336](#)

MAC address notification, debugging [B-14](#)

mac address-table aging-time [2-147, 2-169](#)

mac address-table aging-time command [2-151](#)

mac address-table move update command [2-152](#)

mac address-table notification command [2-154](#)

mac address-table static command [2-156](#)

mac address-table static drop command [2-157](#)

macro apply command [2-159](#)

- macro description command [2-162](#)
- macro global command [2-163](#)
- macro global description command [2-166](#)
- macro name command [2-167](#)
- macros
  - adding a description [2-162](#)
  - adding a global description [2-166](#)
  - applying [2-163](#)
  - creating [2-167](#)
  - displaying [2-178](#)
  - interface range [2-48, 2-94](#)
  - specifying parameter values [2-163](#)
  - tracing [2-163](#)
- manual
  - audience [xv](#)
  - purpose of [xv](#)
- maps
  - QoS
    - defining [2-183](#)
    - displaying [2-362](#)
  - VLAN
    - creating [2-530](#)
    - defining [2-169](#)
    - displaying [2-404](#)
- match (access-map configuration) command [2-169](#)
- match (class-map configuration) command [2-171](#)
- maximum transmission unit
  - See MTU
- mdix auto command [2-173](#)
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- mls qos aggregate-policer command [2-177](#)
- mls qos command [2-175](#)
- mls qos cos command [2-179](#)
- mls qos dscp-mutation command [2-181](#)
- mls qos map command [2-183](#)
- mls qos queue-set output buffers command [2-187](#)
- mls qos queue-set output threshold command [2-189](#)
- mls qos rewrite ip dscp command [2-191](#)
- mls qos srr-queue input bandwidth command [2-193](#)
- mls qos srr-queue input buffers command [2-195](#)
- mls qos srr-queue input cos-map command [2-197](#)
- mls qos srr-queue input dscp-map command [2-199](#)
- mls qos srr-queue input priority-queue command [2-201](#)
- mls qos srr-queue input threshold command [2-203](#)
- mls qos srr-queue output cos-map command [2-205](#)
- mls qos srr-queue output dscp-map command [2-207](#)
- mls qos trust command [2-209](#)
- mls qos vlan-based command [2-211](#)
- mode, MVR [2-216](#)
- modes, commands [1-1](#)
- monitor session command [2-212](#)
- more (boot loader) command [A-16](#)
- MSTP
  - displaying [2-387](#)
  - interoperability [2-45](#)
  - link type [2-436](#)
  - MST region
    - aborting changes [2-442](#)
    - applying changes [2-442](#)
    - configuration name [2-442](#)
    - configuration revision number [2-442](#)
    - current or pending display [2-442](#)
    - displaying [2-387](#)
    - MST configuration mode [2-442](#)
    - VLANs-to-instance mapping [2-442](#)
  - path cost [2-444](#)
  - protocol mode [2-440](#)
  - restart protocol migration process [2-45](#)
  - root port
    - loop guard [2-434](#)
    - preventing from becoming designated [2-434](#)
    - restricting which can be root [2-434](#)
    - root guard [2-434](#)
  - root switch
    - affects of extended system ID [2-433](#)
    - hello-time [2-447, 2-454](#)
    - interval between BDPU messages [2-448](#)

## MSTP (continued)

## root switch (continued)

- interval between hello BPDU messages [2-447, 2-454](#)
- max-age [2-448](#)
- maximum hop count before discarding BPDU [2-449](#)
- port priority for selection of [2-450](#)
- primary or secondary [2-454](#)
- switch priority [2-453](#)

## state changes

- blocking to forwarding state [2-460](#)
- enabling BPDU filtering [2-425, 2-458](#)
- enabling BPDU guard [2-427, 2-458](#)
- enabling Port Fast [2-458, 2-460](#)
- forward-delay time [2-446](#)
- length of listening and learning states [2-446](#)
- rapid transition to forwarding [2-436](#)
- shutting down Port Fast-enabled ports [2-458](#)

state information display [2-386](#)

## MTU

- configuring size [2-505](#)
- displaying global setting [2-394](#)

multicast group address, MVR [2-219](#)multicast groups, MVR [2-217](#)multicast router learning method [2-131](#)multicast router ports, configuring [2-131](#)multicast storm control [2-476](#)multicast VLAN, MVR [2-216](#)

## multicast VLAN registration

See MVR

multiple hosts on authorized port [2-69](#)

## Multiple Spanning Tree Protocol

See MSTP

## MVR

- and address aliasing [2-217](#)
- configuring [2-216](#)
- configuring interfaces [2-219](#)
- debug messages, display [B-18](#)
- displaying [2-370](#)
- displaying interface information [2-372](#)

## MVR (continued)

- members, displaying [2-374](#)
- mvr (global configuration) command [2-216](#)
- mvr (interface configuration) command [2-219](#)
- mvr vlan group command [2-220](#)

## N

native VLANs [2-500](#)

## nonegotiate

DTP messaging [2-488](#)nonegotiate, speed [2-468](#)

## non-IP protocols

denying [2-51](#)forwarding [2-226](#)non-IP traffic access lists [2-149](#)

## non-IP traffic forwarding

denying [2-51](#)permitting [2-226](#)normal-range VLANs [2-519, 2-524](#)note, description [xvi](#)no vlan command [2-519, 2-528](#)

## P

## PAGP

See EtherChannel

pagp learn-method command [2-222](#)pagp port-priority command [2-224](#)password, VTP [2-542, 2-546](#)password-recovery mechanism, enabling and disabling [2-248](#)permit (MAC access-list configuration) command [2-226](#)

## per-VLAN spanning-tree plus

See STP

physical-port learner [2-222](#)PID, displaying [2-311](#)PIM-DVMRP, as multicast router learning method [2-131](#)police aggregate command [2-231](#)

- police command [2-229](#)
  - policed-DSCP map [2-183](#)
  - policy-map command [2-233](#)
  - policy maps
    - applying to an interface [2-250, 2-255](#)
    - creating [2-233](#)
    - displaying [2-381](#)
    - hierarchical [2-234](#)
    - policers
      - displaying [2-355](#)
      - for a single class [2-229](#)
      - for multiple classes [2-177, 2-231](#)
      - policed-DSCP map [2-183](#)
    - traffic classification
      - defining the class [2-32](#)
      - defining trust states [2-512](#)
      - setting DSCP or IP precedence values [2-253](#)
  - Port Aggregation Protocol
    - See EtherChannel
  - port-based authentication
    - AAA method list [2-3](#)
    - debug messages, display [B-5](#)
    - enabling IEEE 802.1x
      - globally [2-54](#)
      - per interface [2-76](#)
    - guest VLAN [2-67](#)
    - host modes [2-69](#)
    - IEEE 802.1x AAA accounting methods [2-1](#)
    - initialize an interface [2-70](#)
    - MAC authentication bypass [2-71](#)
    - manual control of authorization state [2-76](#)
    - multiple hosts on authorized port [2-69](#)
    - PAE as authenticator [2-75](#)
    - periodic re-authentication
      - enabling [2-79](#)
      - time between attempts [2-80](#)
    - quiet period between failed authentication exchanges [2-80](#)
    - re-authenticating IEEE 802.1x-enabled ports [2-78](#)
    - port-based authentication (continued)
      - resetting configurable IEEE 802.1x parameters [2-66](#)
      - switch-to-authentication server retransmission time [2-80](#)
      - switch-to-client frame-retransmission number [2-73 to 2-74](#)
      - switch-to-client retransmission time [2-80](#)
    - port-channel load-balance command [2-236](#)
    - Port Fast, for spanning tree [2-460](#)
    - port ranges, defining [2-48](#)
    - ports, debugging [B-51](#)
    - ports, protected [2-499](#)
    - port security
      - aging [2-495](#)
      - debug messages, display [B-53](#)
      - enabling [2-490](#)
      - violation error recovery [2-87](#)
    - port trust states for QoS [2-209](#)
    - port types, MVR [2-219](#)
    - priority-queue command [2-238](#)
    - privileged EXEC mode [1-2, 1-3](#)
    - product identification information, displaying [2-311](#)
    - protected ports, displaying [2-307](#)
    - pruning
      - VLANs [2-500](#)
      - VTP
        - displaying interface information [2-303](#)
        - enabling [2-542, 2-546](#)
    - pruning-eligible VLAN list [2-502](#)
    - PVST+
      - See STP
- 
- ## Q
- QoS
    - auto-QoS
      - configuring [2-16](#)
      - debug messages, display [B-2](#)
      - displaying [2-262](#)

## QoS (continued)

## class maps

- creating [2-34](#)
- defining the match criteria [2-171](#)
- displaying [2-268](#)

defining the CoS value for an incoming packet [2-179](#)

displaying configuration information [2-262, 2-354](#)

DSCP transparency [2-191](#)

## DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-181](#)
- defining DSCP-to-DSCP-mutation map [2-183](#)

## egress queues

- allocating buffers [2-187](#)
- defining the CoS output queue threshold map [2-205](#)
- defining the DSCP output queue threshold map [2-207](#)
- displaying buffer allocations [2-358](#)
- displaying CoS output queue threshold map [2-362](#)
- displaying DSCP output queue threshold map [2-362](#)
- displaying queueing strategy [2-358](#)
- displaying queue-set settings [2-365](#)
- enabling bandwidth shaping and scheduling [2-472](#)
- enabling bandwidth sharing and scheduling [2-474](#)
- limiting the maximum output on a port [2-470](#)
- mapping a port to a queue-set [2-240](#)
- mapping CoS values to a queue and threshold [2-205](#)
- mapping DSCP values to a queue and threshold [2-207](#)
- setting maximum and reserved memory allocations [2-189](#)
- setting WTD thresholds [2-189](#)

enabling [2-175](#)

## ingress queues

- allocating buffers [2-195](#)
- assigning SRR scheduling weights [2-193](#)
- defining the CoS input queue threshold map [2-197](#)
- defining the DSCP input queue threshold map [2-199](#)
- displaying buffer allocations [2-358](#)
- displaying CoS input queue threshold map [2-362](#)
- displaying DSCP input queue threshold map [2-362](#)
- displaying queueing strategy [2-358](#)

## QoS (continued)

## ingress queues (continued)

- displaying settings for [2-356](#)
- enabling the priority queue [2-201](#)
- mapping CoS values to a queue and threshold [2-197](#)
- mapping DSCP values to a queue and threshold [2-199](#)
- setting WTD thresholds [2-203](#)

## maps

- defining [2-183, 2-197, 2-199, 2-205, 2-207](#)
- displaying [2-362](#)

## policy maps

- applying an aggregate policer [2-231](#)
- applying to an interface [2-250, 2-255](#)
- creating [2-233](#)
- defining policers [2-177, 2-229](#)
- displaying policers [2-355](#)
- displaying policy maps [2-381](#)
- hierarchical [2-234](#)
- policed-DSCP map [2-183](#)
- setting DSCP or IP precedence values [2-253](#)
- traffic classifications [2-32](#)
- trust states [2-512](#)

port trust states [2-209](#)

queues, enabling the expedite [2-238](#)

## statistics

- in-profile and out-of-profile packets [2-358](#)
- packets enqueued or dropped [2-358](#)
- sent and received CoS values [2-358](#)
- sent and received DSCP values [2-358](#)

trusted boundary for IP phones [2-209](#)

VLAN-based [2-211](#)

## quality of service

See QoS

querytime, MVR [2-216](#)

queue-set command [2-240](#)

## R

radius-server dead-criteria command [2-241](#)

radius-server host command [2-243](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

re-authenticating IEEE 802.1x-enabled ports [2-78](#)

re-authentication

periodic [2-79](#)

time between attempts [2-80](#)

receiver ports, MVR [2-219](#)

receiving flow-control packets [2-90](#)

recovery mechanism

causes [2-87](#)

display [2-292](#), [2-296](#)

timer interval [2-87](#)

remote-span command [2-245](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-17](#)

requirements

device manager [xvi](#)

reset (boot loader) command [A-18](#)

reset command [2-533](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)

rmon collection stats command [2-247](#)

root guard, for spanning tree [2-434](#)

RSPAN

configuring [2-212](#)

displaying [2-368](#)

filter RSPAN traffic [2-212](#)

remote-span command [2-245](#)

sessions

add interfaces to [2-212](#)

displaying [2-368](#)

start new [2-212](#)

## S

secure ports, limitations [2-492](#)

sending flow-control packets [2-90](#)

service password-recovery command [2-248](#)

service-policy command [2-250](#)

set (boot loader) command [A-20](#)

set command [2-253](#)

setup command [2-255](#)

show access-lists command [2-258](#)

show archive status command [2-261](#)

show auto qos command [2-262](#)

show boot command [2-266](#)

show changes command [2-533](#)

show class-map command [2-268](#)

show controllers cpu-interface command [2-269](#)

show controllers ethernet-controller command [2-271](#)

show controllers tcam command [2-278](#)

show controller utilization command [2-280](#)

show current command [2-533](#)

show dot1x command [2-282](#)

show dtp [2-286](#)

show eap command [2-288](#)

show env command [2-291](#)

show errdisable detect command [2-292](#)

show errdisable flap-values command [2-294](#)

show errdisable recovery command [2-296](#)

show etherchannel command [2-298](#)

show flowcontrol command [2-301](#)

show interfaces command [2-303](#)

show interfaces counters command [2-309](#)

show inventory command [2-311](#)

show ip dhcp snooping binding command [2-314](#)

show ip dhcp snooping command [2-313](#)

show ip igmp profile command [2-316](#)

show ip igmp snooping command [2-317](#)

show ip igmp snooping groups command [2-320](#)

show ip igmp snooping mrouter command [2-322](#)

show ip igmp snooping querier command [2-324](#)

- show lacp command [2-326](#)
- show link state group command [2-330](#)
- show mac access-group command [2-332](#)
- show mac address-table address command [2-336](#)
- show mac address-table aging time command [2-338](#)
- show mac address-table command [2-334](#)
- show mac address-table count command [2-340](#)
- show mac address-table dynamic command [2-342](#)
- show mac address-table interface command [2-344](#)
- show mac address-table move update command [2-346](#)
- show mac address-table notification command [2-40, 2-348, B-16](#)
- show mac address-table static command [2-350](#)
- show mac address-table vlan command [2-352](#)
- show mls qos aggregate-policer command [2-355](#)
- show mls qos command [2-354](#)
- show mls qos input-queue command [2-356](#)
- show mls qos interface command [2-358](#)
- show mls qos maps command [2-362](#)
- show mls qos queue-set command [2-365](#)
- show mls qos vlan command [2-367](#)
- show monitor command [2-368](#)
- show mvr command [2-370](#)
- show mvr interface command [2-372](#)
- show mvr members command [2-374](#)
- show pagp command [2-376](#)
- show parser macro command [2-378](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform igmp snooping command [C-8](#)
- show platform layer4op command [C-10](#)
- show platform mac-address-table command [C-11](#)
- show platform messaging command [C-12](#)
- show platform monitor command [C-13](#)
- show platform mvr table command [C-14](#)
- show platform pm command [C-15](#)
- show platform port-asic command [C-16](#)
- show platform port-security command [C-21](#)
- show platform qos command [C-22](#)
- show platform resource-manager command [C-23](#)
- show platform snmp counters command [C-25](#)
- show platform spanning-tree command [C-26](#)
- show platform stp-instance command [C-27](#)
- show platform tcam command [C-28](#)
- show platform vlan command [C-30](#)
- show policy-map command [2-381](#)
- show port security command [2-383](#)
- show proposed command [2-533](#)
- show spanning-tree command [2-386](#)
- show storm-control command [2-392](#)
- show system mtu command [2-394](#)
- show trust command [2-512](#)
- show udd command [2-395](#)
- show version command [2-398](#)
- show vlan access-map command [2-404](#)
- show vlan command [2-400](#)
- show vlan command, fields [2-402](#)
- show vlan filter command [2-405](#)
- show vmps command [2-406](#)
- show vtp command [2-409](#)
- shutdown command [2-413](#)
- shutdown vlan command [2-414](#)
- Smartports macros
  - See macros
- SNMP host, specifying [2-418](#)
- SNMP informs, enabling the sending of [2-415](#)
- snmp-server enable traps command [2-415](#)
- snmp-server host command [2-418](#)
- snmp trap mac-notification command [2-422](#)
- SNMP traps
  - enabling MAC address notification trap [2-422](#)
  - enabling the MAC address notification feature [2-154](#)
  - enabling the sending of [2-415](#)
- SoftPhone
  - See Cisco SoftPhone

- software images
  - deleting [2-50](#)
  - downloading [2-8](#)
  - upgrading [2-8](#)
  - uploading [2-14](#)
- software version, displaying [2-398](#)
- source ports, MVR [2-219](#)
- SPAN
  - configuring [2-212](#)
  - debug messages, display [B-17](#)
  - displaying [2-368](#)
  - filter SPAN traffic [2-212](#)
  - sessions
    - add interfaces to [2-212](#)
    - displaying [2-368](#)
    - start new [2-212](#)
- spanning [2-462](#)
- spanning-tree backbonefast command [2-424](#)
- spanning-tree bpdupfilter command [2-425](#)
- spanning-tree bpduguard command [2-427](#)
- spanning-tree cost command [2-429](#)
- spanning-tree etherchannel command [2-431](#)
- spanning-tree extend system-id command [2-433](#)
- spanning-tree guard command [2-434](#)
- spanning-tree link-type command [2-436](#)
- spanning-tree loopguard default command [2-438](#)
- spanning-tree mode command [2-440](#)
- spanning-tree mst configuration command [2-442](#)
- spanning-tree mst cost command [2-444](#)
- spanning-tree mst forward-time command [2-446](#)
- spanning-tree mst hello-time command [2-447](#)
- spanning-tree mst max-age command [2-448](#)
- spanning-tree mst max-hops command [2-449](#)
- spanning-tree mst port-priority command [2-450](#)
- spanning-tree mst pre-standard command [2-452](#)
- spanning-tree mst priority command [2-453](#)
- spanning-tree mst root command [2-454](#)
- spanning-tree portfast (global configuration)
  - command [2-458](#)
- spanning-tree portfast (interface configuration)
  - command [2-460](#)
- spanning-tree port-priority command [2-456](#)
- Spanning Tree Protocol
  - See STP
- spanning-tree transmit hold-count command [2-462](#)
- spanning-tree uplinkfast command [2-463](#)
- spanning-tree vlan command [2-465](#)
- speed command [2-468](#)
- srr-queue bandwidth limit command [2-470](#)
- srr-queue bandwidth shape command [2-472](#)
- srr-queue bandwidth share command [2-474](#)
- SSH, configuring version [2-135](#)
- static-access ports, configuring [2-479](#)
- statistics, Ethernet group [2-247](#)
- sticky learning, enabling [2-490](#)
- storm-control command [2-476](#)
- STP
  - BackboneFast [2-424](#)
  - counters, clearing [2-44](#)
  - debug messages, display
    - BackboneFast events [B-57](#)
    - MSTP [B-60](#)
    - optimized BPDUs handling [B-59](#)
    - spanning-tree activity [B-55](#)
    - switch shim [B-62](#)
    - transmitted and received BPDUs [B-58](#)
    - UplinkFast [B-64](#)
  - detection of indirect link failures [2-424](#)
  - EtherChannel misconfiguration [2-431](#)
  - extended system ID [2-433](#)
  - path cost [2-429](#)
  - protocol modes [2-440](#)
  - root port
    - accelerating choice of new [2-463](#)
    - loop guard [2-434](#)
    - preventing from becoming designated [2-434](#)

## STP (continued)

## root port (continued)

restricting which can be root 2-434

root guard 2-434

UplinkFast 2-463

## root switch

affects of extended system ID 2-433, 2-466

hello-time 2-465

interval between BPDU messages 2-465

interval between hello BPDU messages 2-465

max-age 2-465

port priority for selection of 2-465

primary or secondary 2-465

switch priority 2-465

## state changes

blocking to forwarding state 2-460

enabling BPDU filtering 2-425, 2-458

enabling BPDU guard 2-427, 2-458

enabling Port Fast 2-458, 2-460

enabling timer to recover from error state 2-87

forward-delay time 2-465

length of listening and learning states 2-465

shutting down Port Fast-enabled ports 2-458

## state information display 2-386

## VLAN options 2-453, 2-465

## Switched Port Analyzer

## See SPAN

switchport access command 2-479

switchport backup interface command 2-481

switchport block command 2-484

switchport host command 2-485

switchport mode command 2-486

switchport nonegotiate command 2-488

switchport port-security aging command 2-495

switchport port-security command 2-490

switchport priority extend command 2-497

switchport protected command 2-499

switchports, displaying 2-303

switchport trunk command 2-500

switchport voice vlan command 2-503

system message logging, save message to flash 2-145

system mtu command 2-505

## T

tar files, creating, listing, and extracting 2-11

traceroute mac command 2-507

traceroute mac ip command 2-510

trunking, VLAN mode 2-486

trunk mode 2-486

trunk ports 2-486

trunks, to non-DTP device 2-487

trusted boundary for QoS 2-209

trusted port states for QoS 2-209

type (boot loader) command A-23

## U

## UDLD

aggressive mode 2-514, 2-516

debug messages, display B-72

enable globally 2-514

enable per interface 2-516

error recovery timer 2-87

message timer 2-514

normal mode 2-514, 2-516

reset a shutdown interface 2-518

status 2-395

udld command 2-514

udld port command 2-516

udld reset command 2-518

unicast storm control 2-476

## UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing 2-484

unknown unicast traffic, preventing 2-484

unset (boot loader) command A-24

## upgrading

- software images [2-8](#)
- monitoring status of [2-261](#)

## upgrading information

- See release notes

UplinkFast, for STP [2-463](#)user EXEC mode [1-2, 1-3](#)

## V

version (boot loader) command [A-26](#)

## VLAN

- enabling guest VLAN supplicant [2-57](#)

vlan (global configuration) command [2-519](#)vlan (VLAN configuration) command [2-524](#)vlan access-map command [2-530](#)VLAN access map configuration mode [2-530](#)

## VLAN access maps

- actions [2-6](#)
- displaying [2-404](#)

VLAN-based QoS [2-211](#)

## VLAN configuration

- rules [2-522, 2-526](#)
- saving [2-519, 2-528](#)

## VLAN configuration mode

## commands

- VLAN [2-524](#)
- VTP [2-546](#)

description [1-5](#)

- entering [2-532](#)
- summary [1-2](#)

vlan database command [2-532](#)vlan filter command [2-535](#)VLAN filters, displaying [2-405](#)VLAN ID range [2-519, 2-524](#)

## VLAN maps

- applying [2-535](#)
- creating [2-530](#)

## VLAN maps

## VLAN maps

- defining [2-169](#)
- displaying [2-404](#)

## VLAN Query Protocol

- See VQP

## VLANs

- adding [2-519](#)
- configuring [2-519, 2-524](#)
- debug messages, display
  - ISL [B-68](#)
- VLAN IOS file system error tests [B-67](#)
- VLAN manager activity [B-65](#)
- VTP [B-70](#)

displaying configurations [2-400](#)extended-range [2-519](#)

## MAC addresses

- displaying [2-352](#)
- number of [2-340](#)

media types [2-521, 2-526](#)normal-range [2-519, 2-524](#)restarting [2-414](#)saving the configuration [2-519](#)shutting down [2-414](#)SNMP traps for VTP [2-416, 2-419](#)suspending [2-414](#)variables [2-524](#)

## VLAN Trunking Protocol

- See VTP

## VMPS

- configuring servers [2-540](#)
- displaying [2-406](#)
- error recovery timer [2-87](#)
- reconfirming dynamic VLAN assignments [2-537](#)
- vmmps reconfirm (global configuration) command [2-538](#)
- vmmps reconfirm (privileged EXEC) command [2-537](#)
- vmmps retry command [2-539](#)
- vmmps server command [2-540](#)

## voice VLAN

- configuring [2-503](#)
- setting port priority [2-497](#)

## VQP

- and dynamic-access ports [2-479](#)
- clearing client statistics [2-46](#)
- displaying information [2-406](#)
- per-server retry count [2-539](#)
- reconfirmation interval [2-538](#)
- reconfirming dynamic VLAN assignments [2-537](#)

## VTP

- changing characteristics [2-542](#)
  - clearing pruning counters [2-47](#)
  - configuring
    - domain name [2-542, 2-546](#)
    - file name [2-542](#)
    - mode [2-542, 2-546](#)
    - password [2-542, 2-546](#)
  - counters display fields [2-410](#)
  - displaying information [2-409](#)
  - enabling
    - pruning [2-542, 2-546](#)
    - Version 2 [2-542, 2-546](#)
  - mode [2-542, 2-546](#)
  - pruning [2-542, 2-546](#)
  - saving the configuration [2-519, 2-528](#)
  - statistics [2-409](#)
  - status [2-409](#)
  - status display fields [2-411](#)
- vtp (global configuration) command [2-542](#)
- vtp (VLAN configuration) command [2-546](#)

